




R1




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**

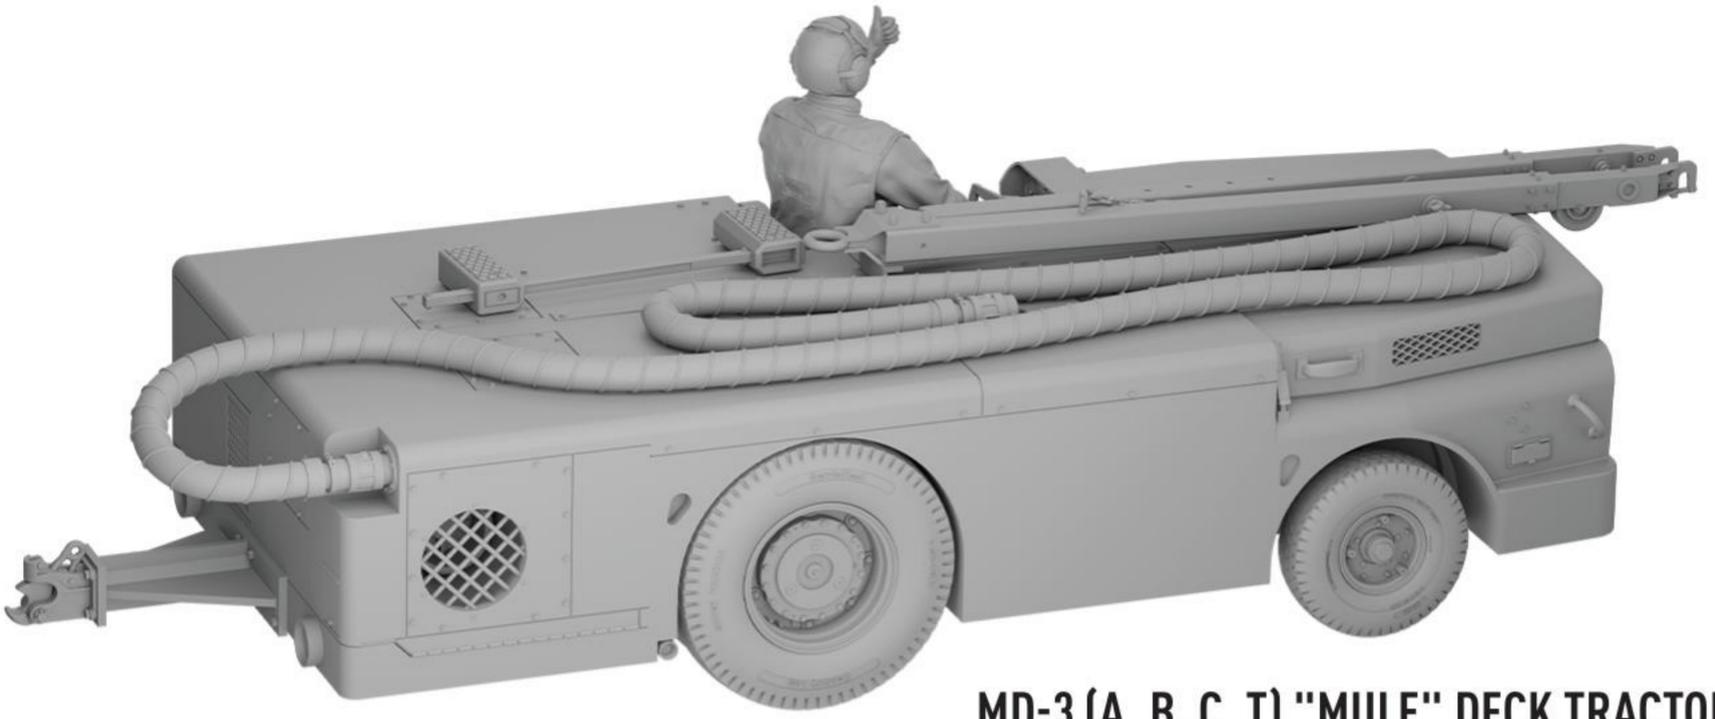

**MD-3 (A, B, C, T) "MULE" DECK TRACTOR
ARE NOT INCLUDED IN THE KIT**

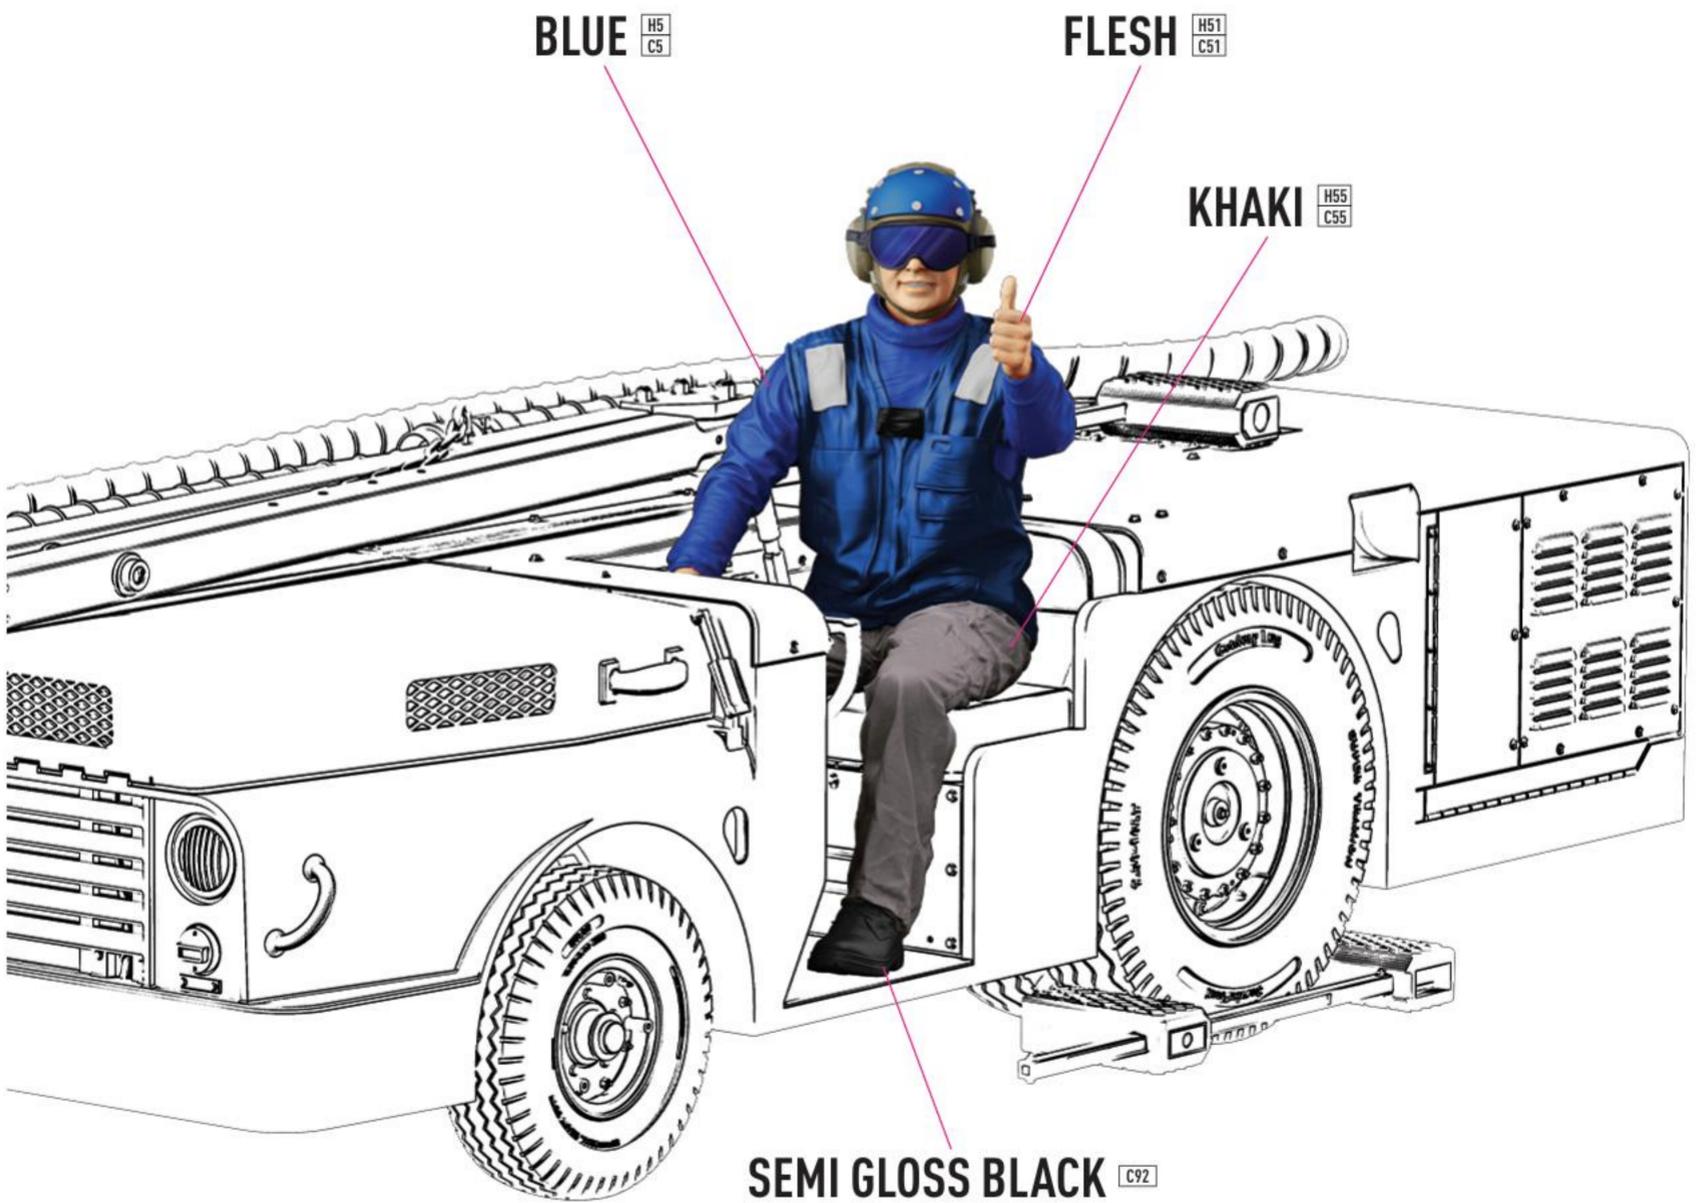

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
BLUE	H5	C5
FLESH	H22	C22

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
KHAKI	H55	C55
SEMI GLOSS BLACK		C92