

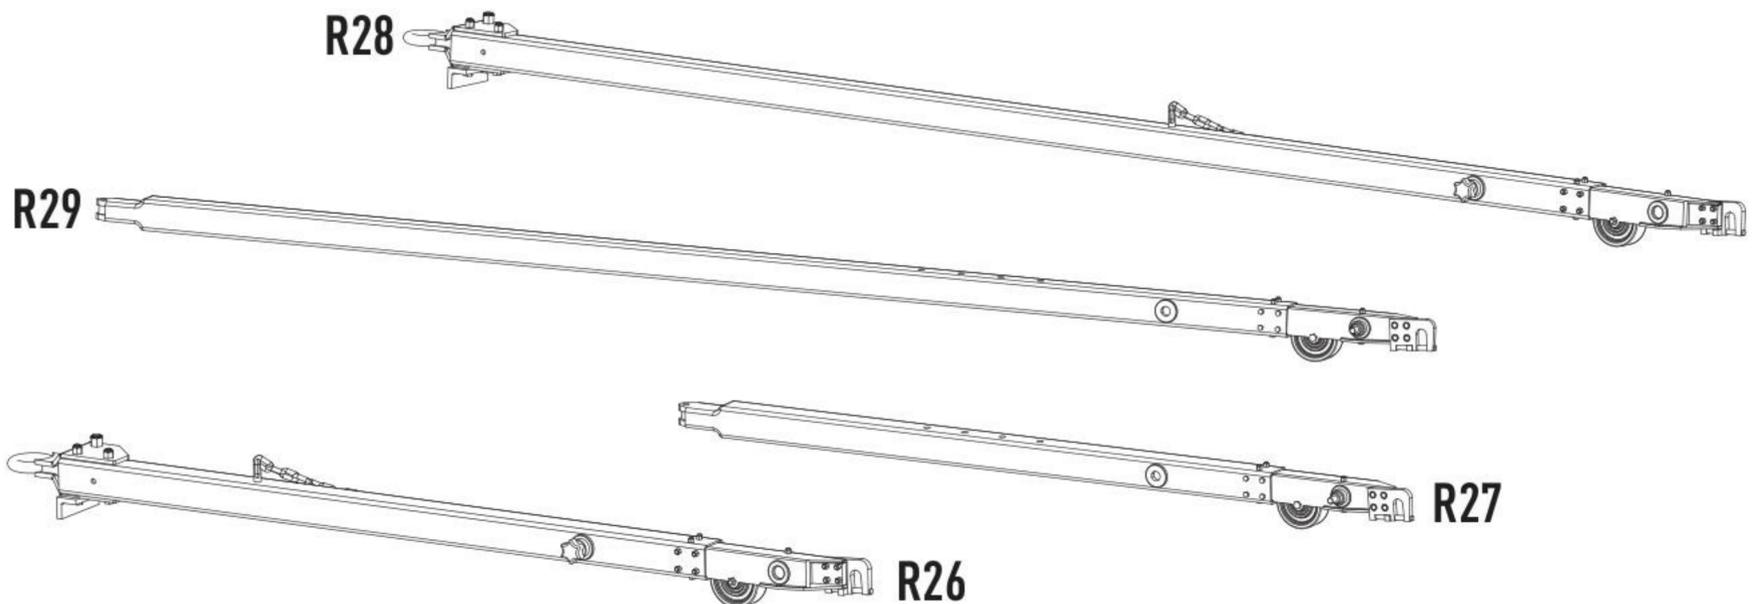
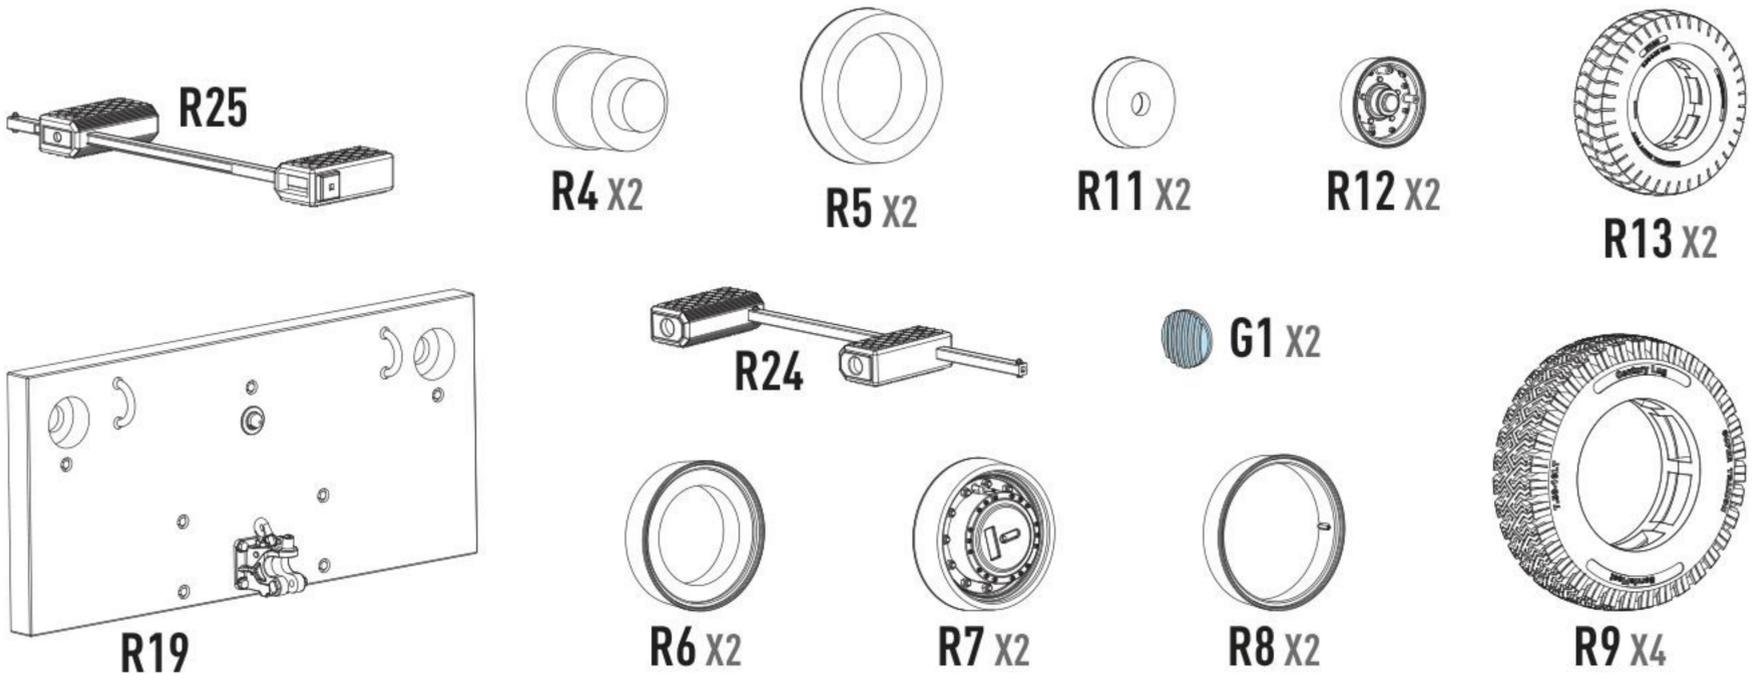
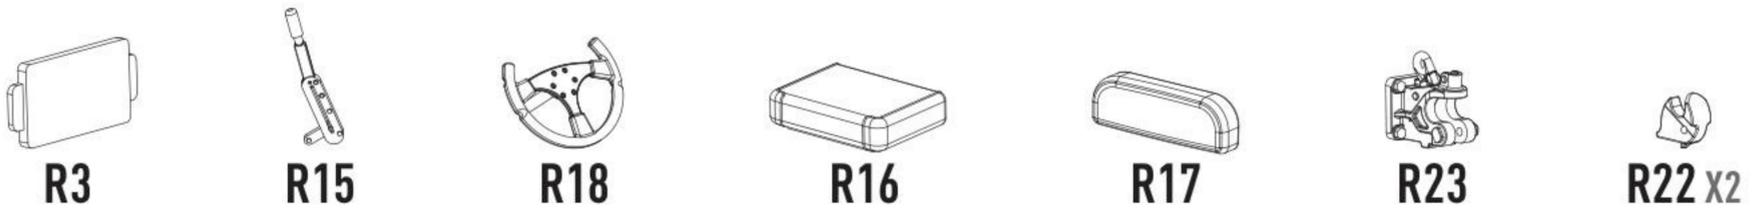


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

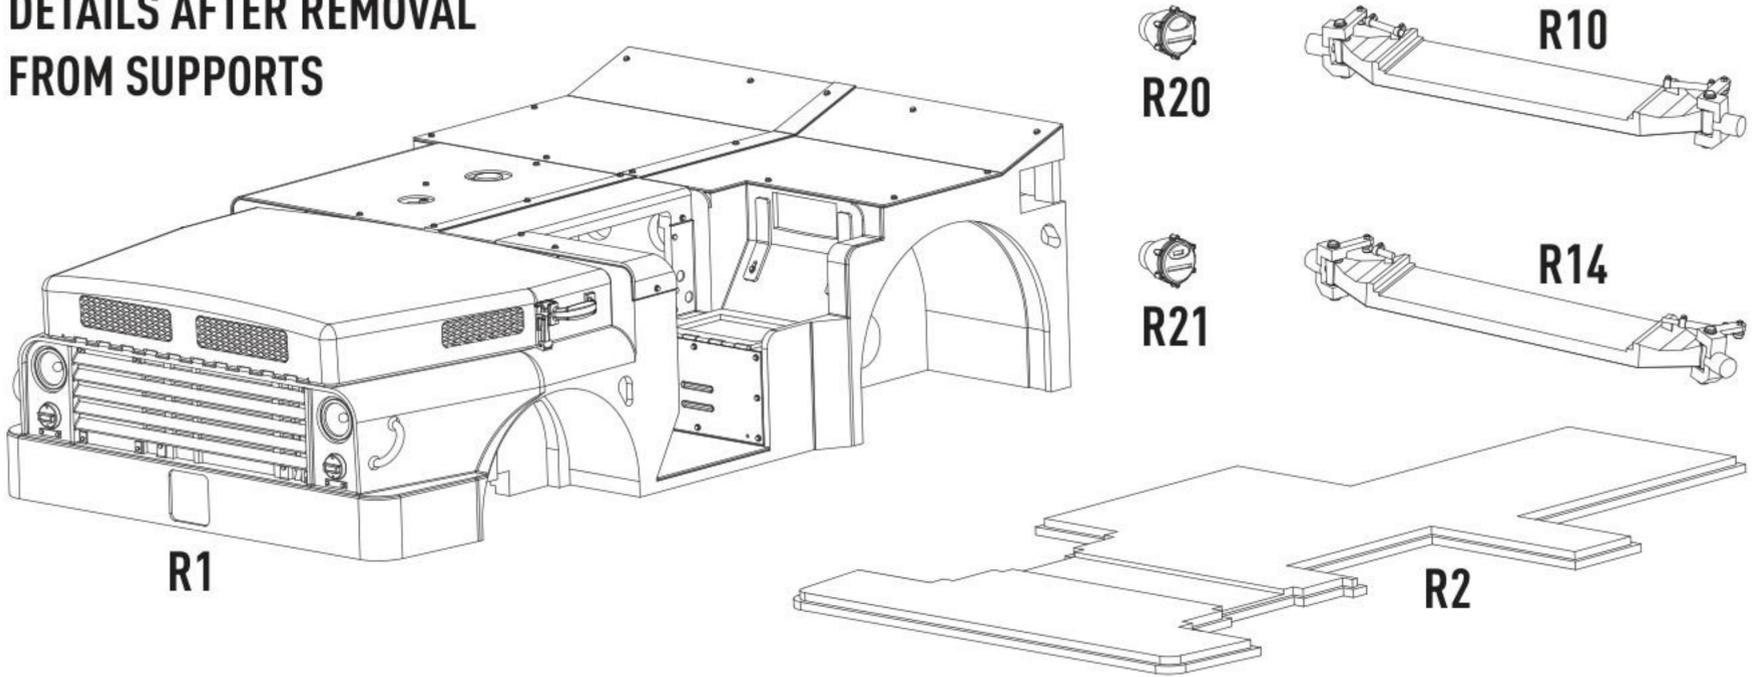


1

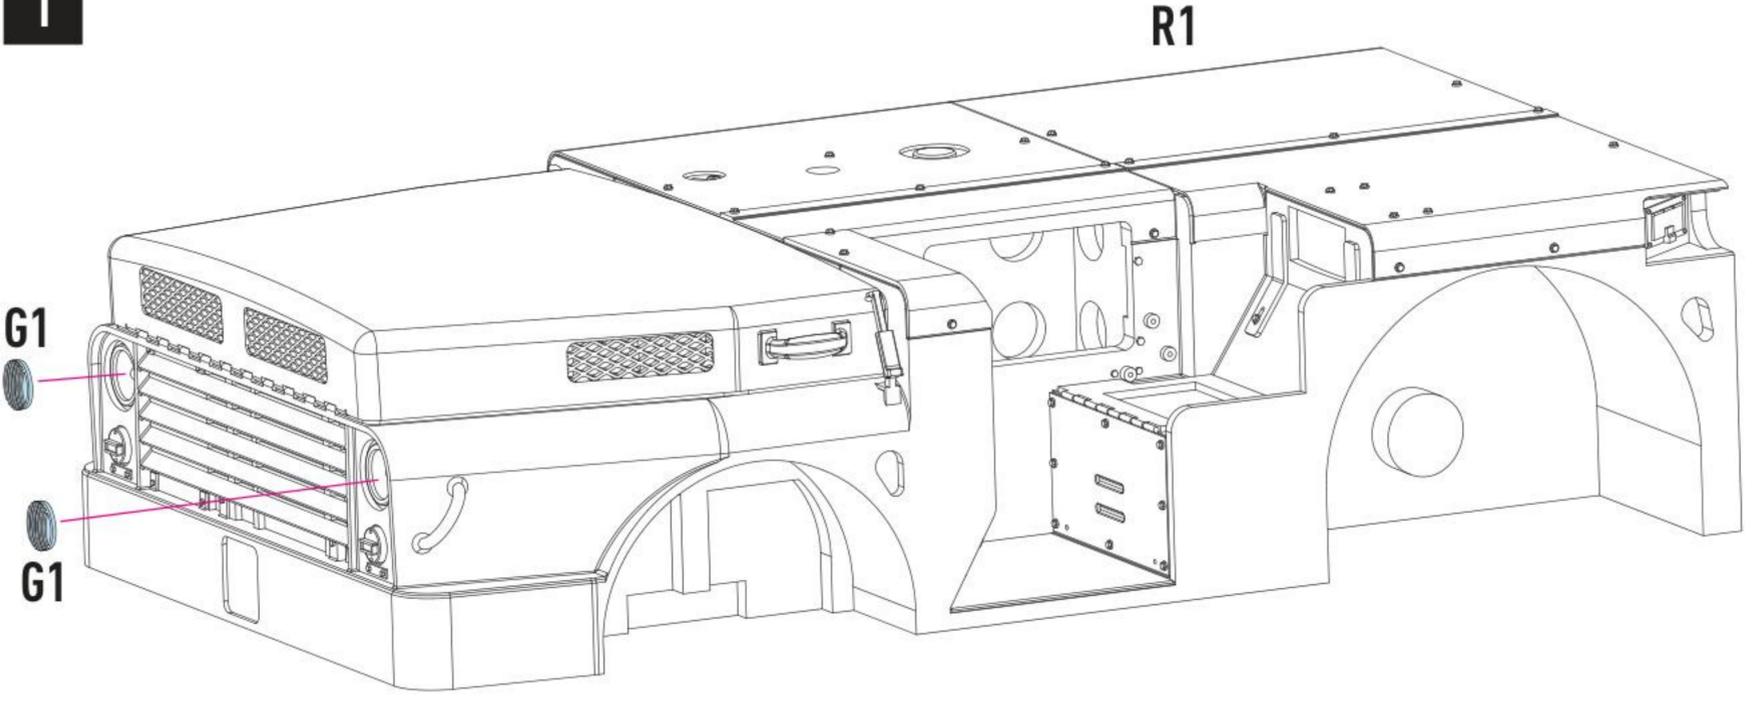


BEFORE ASSEMBLY, COVER TRANSPARENT PARTS WITH GLOSSY VARNISH

2

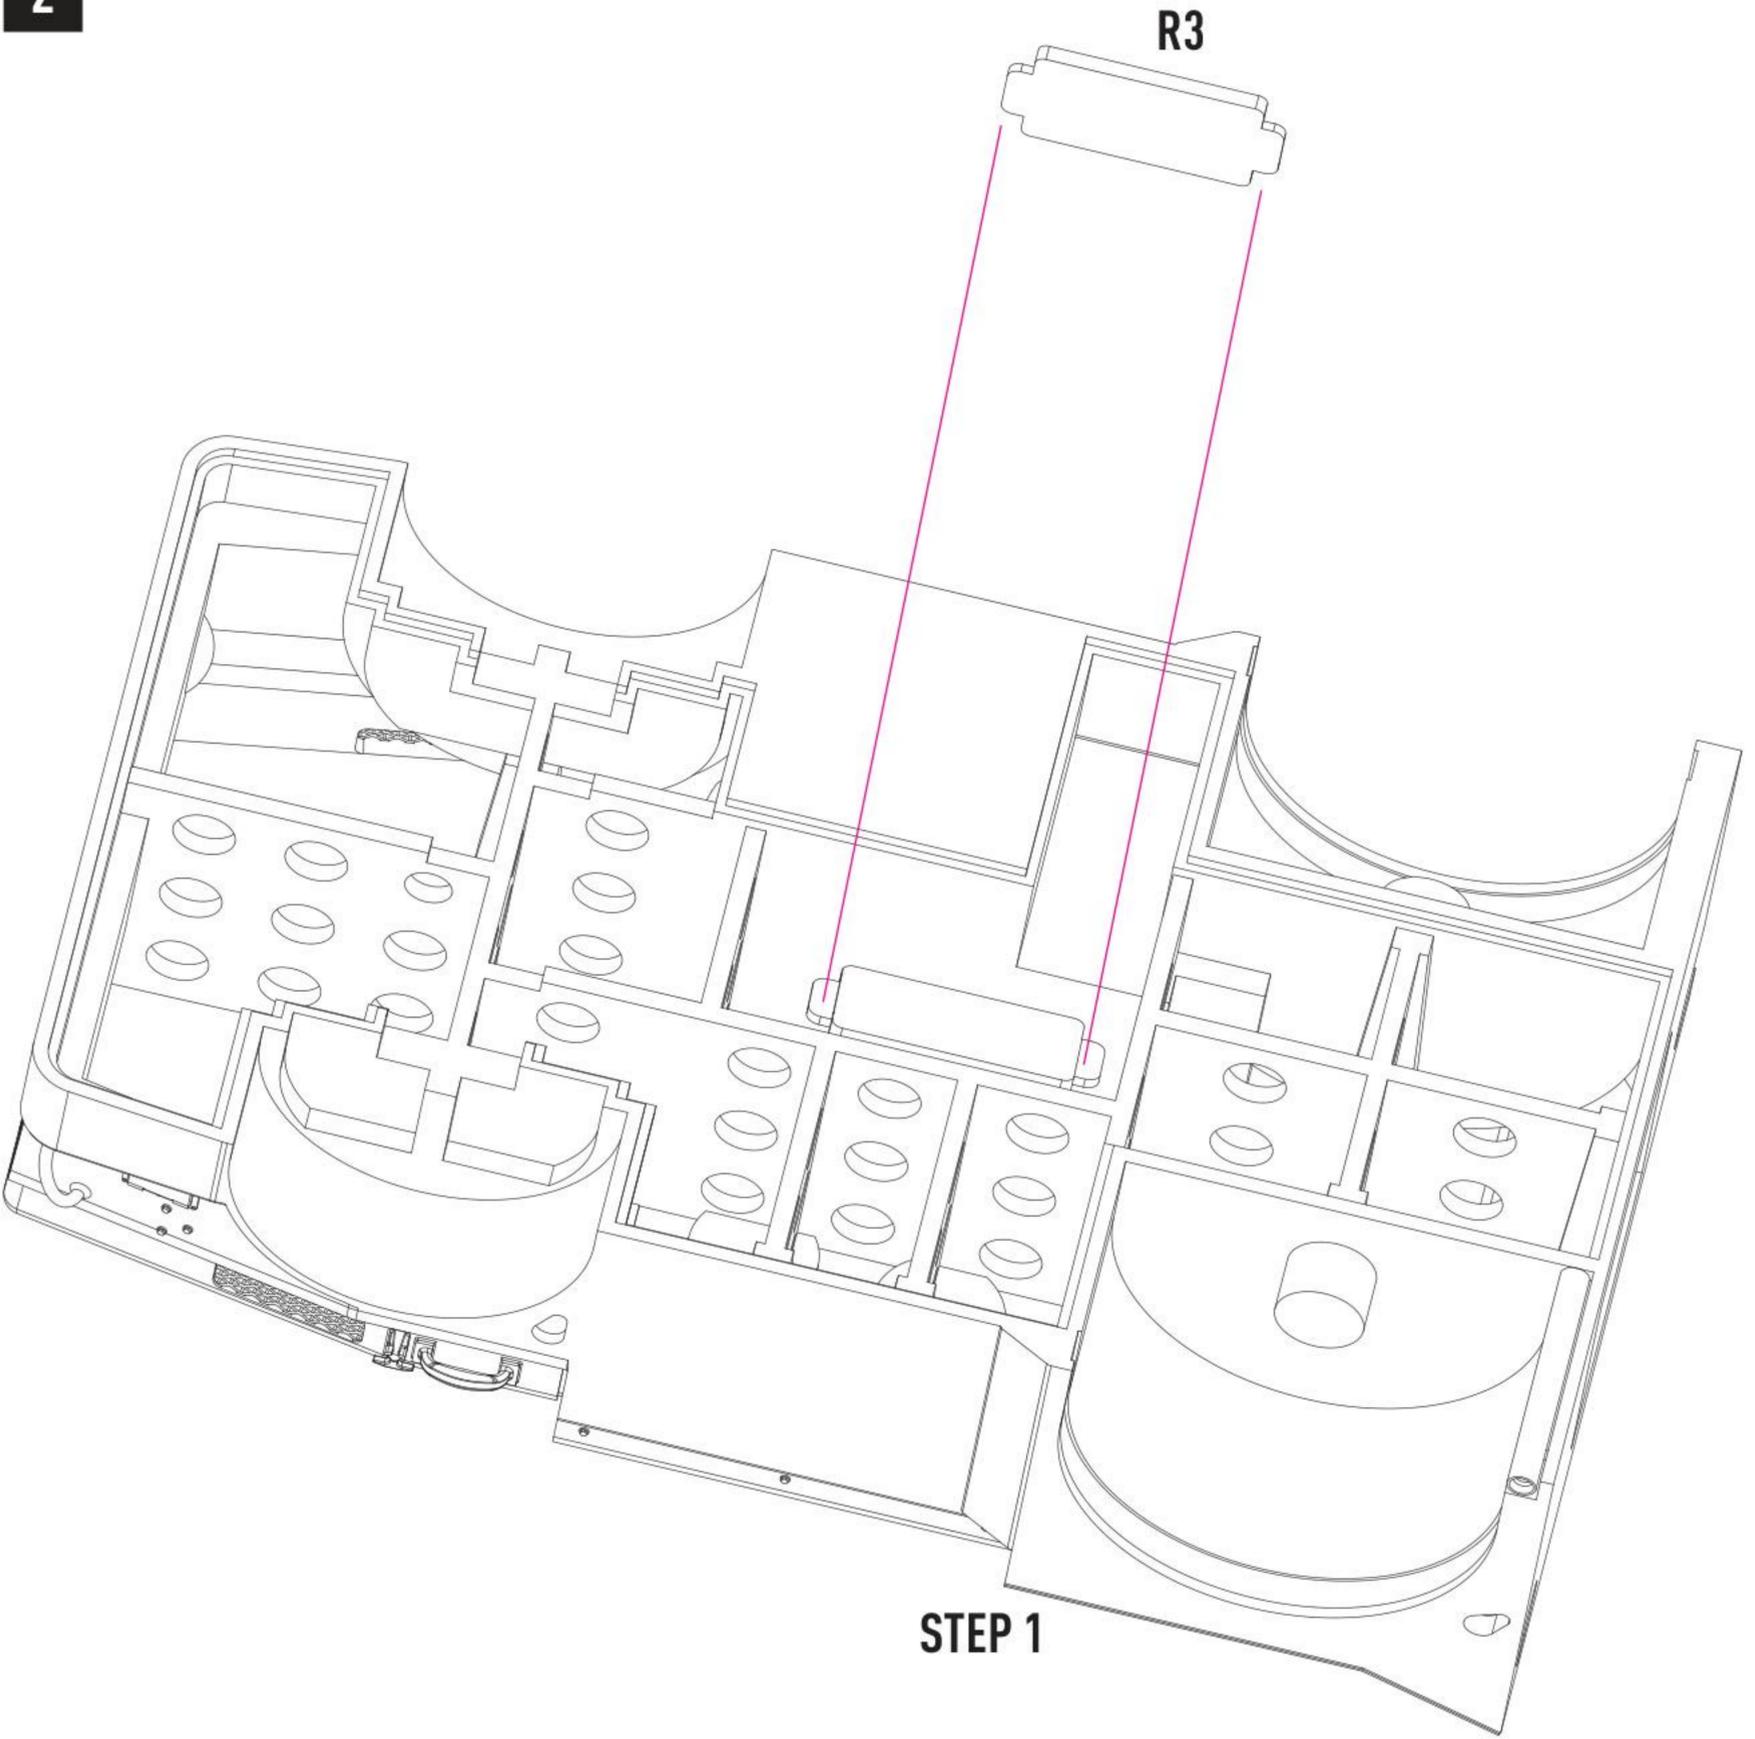


STEP 1


3

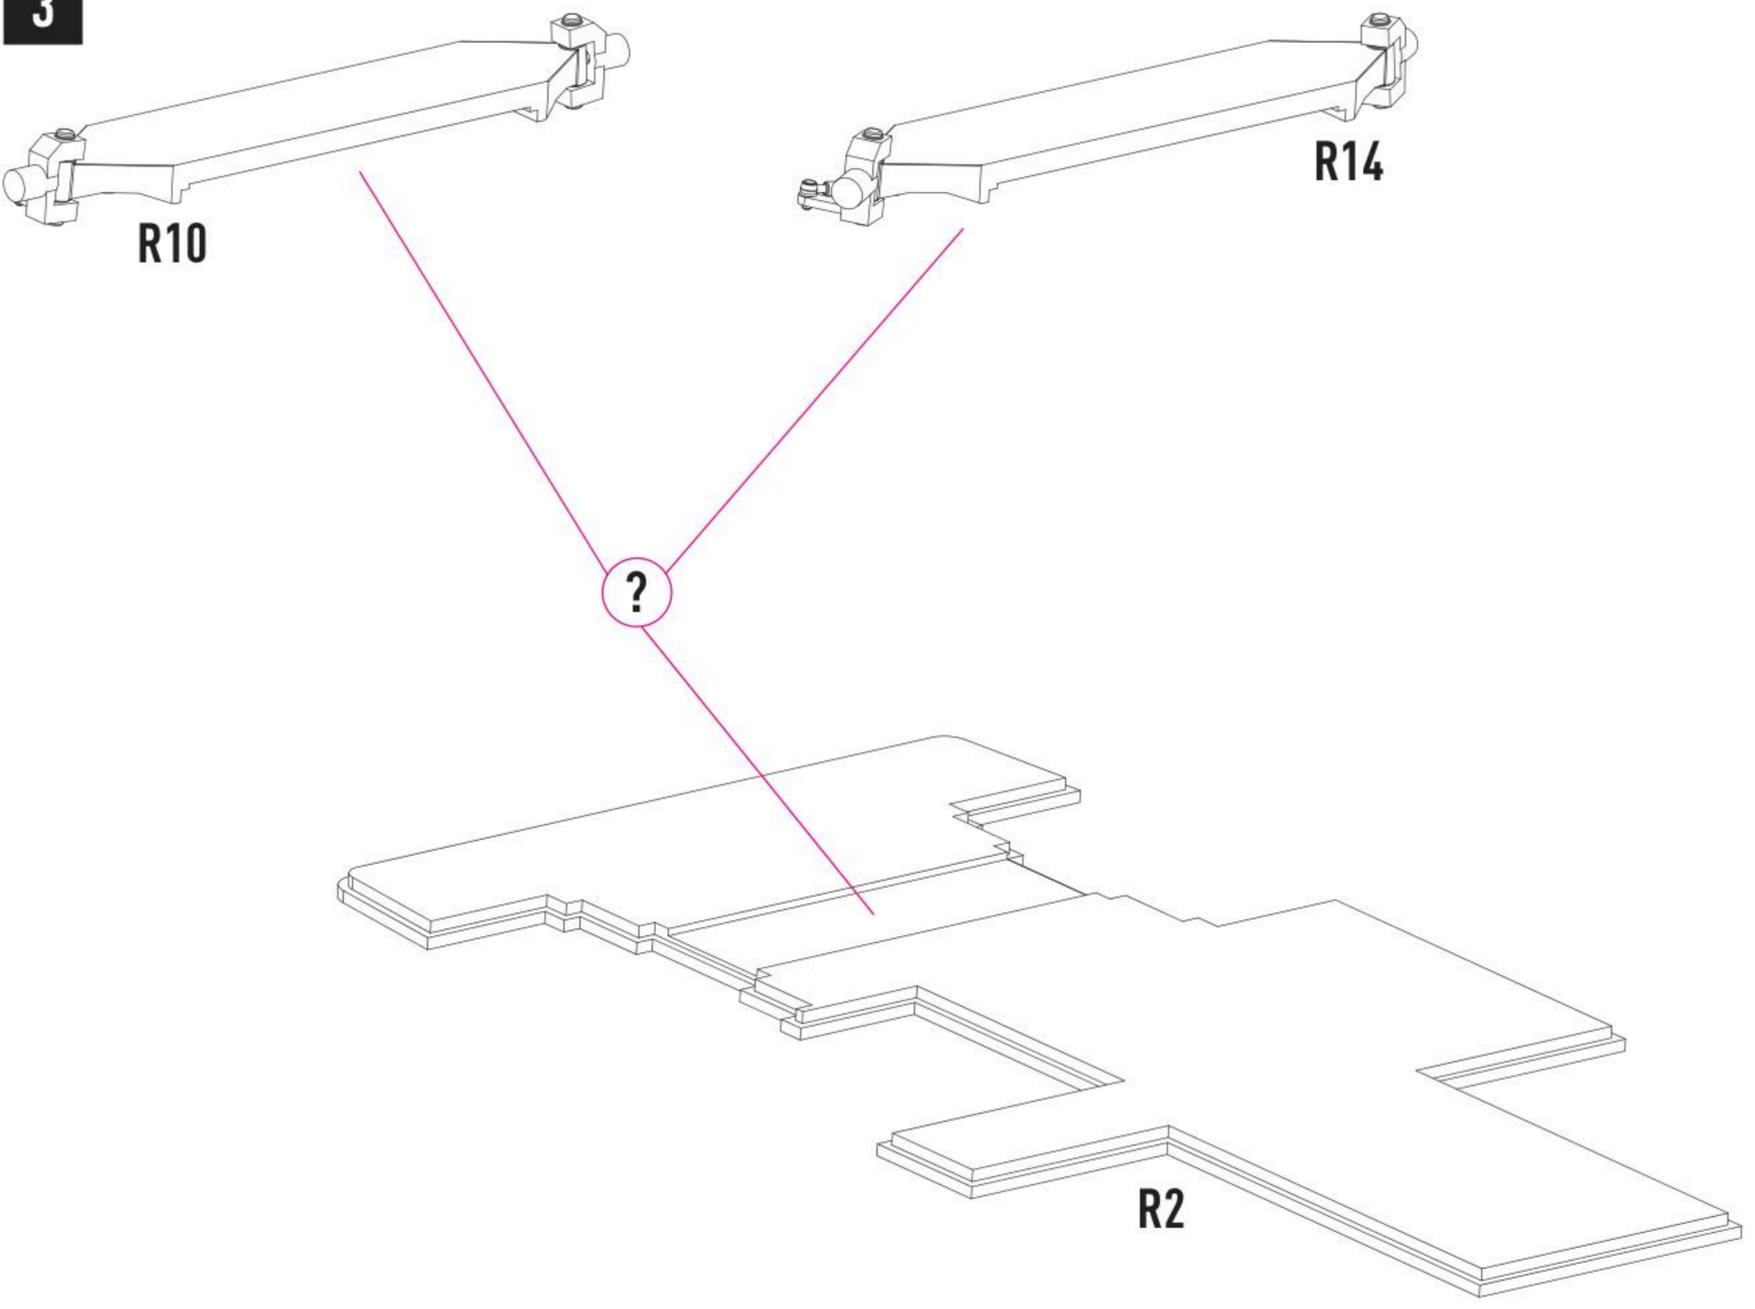


4

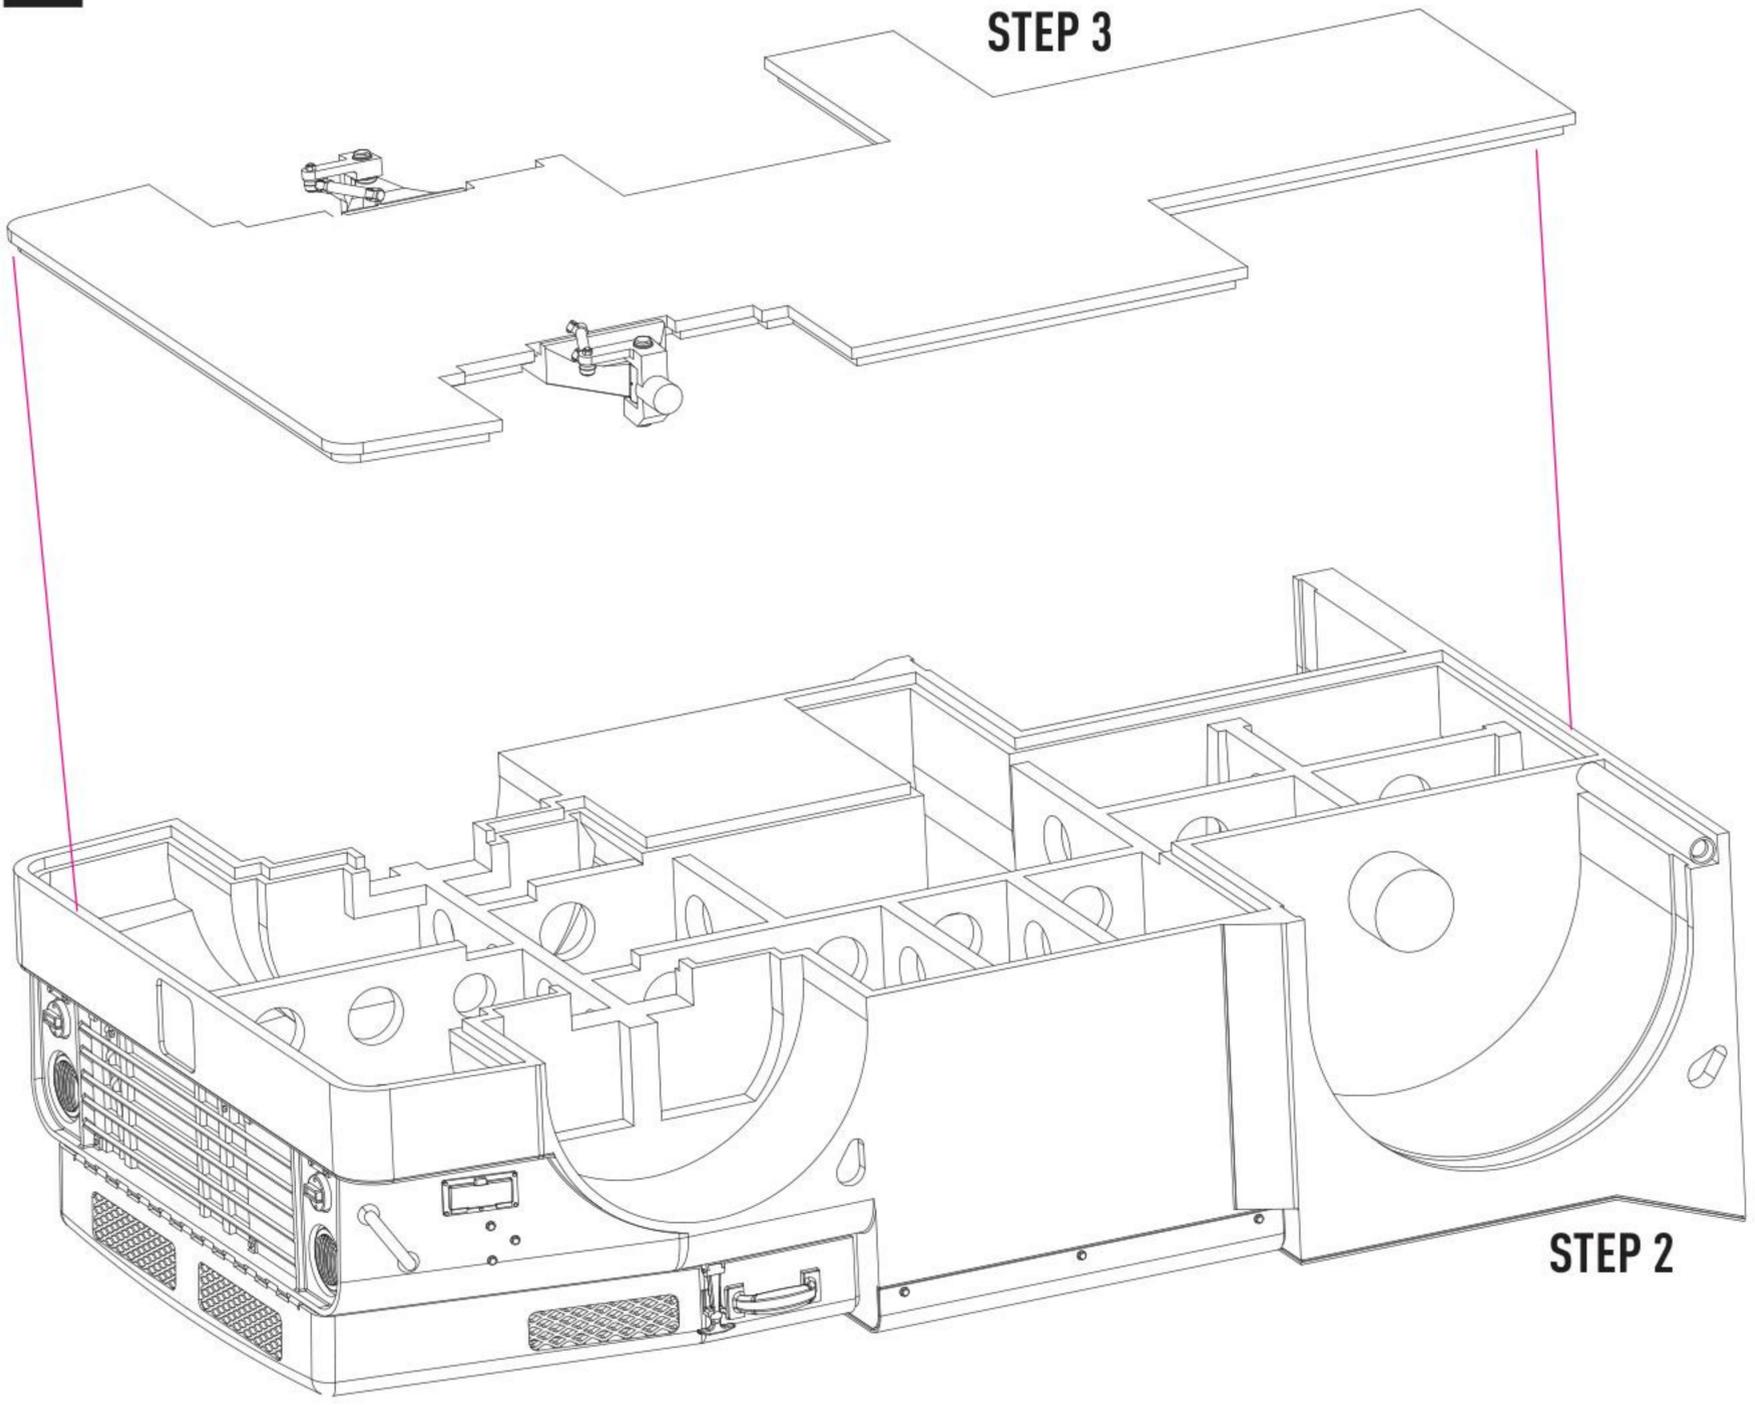


5

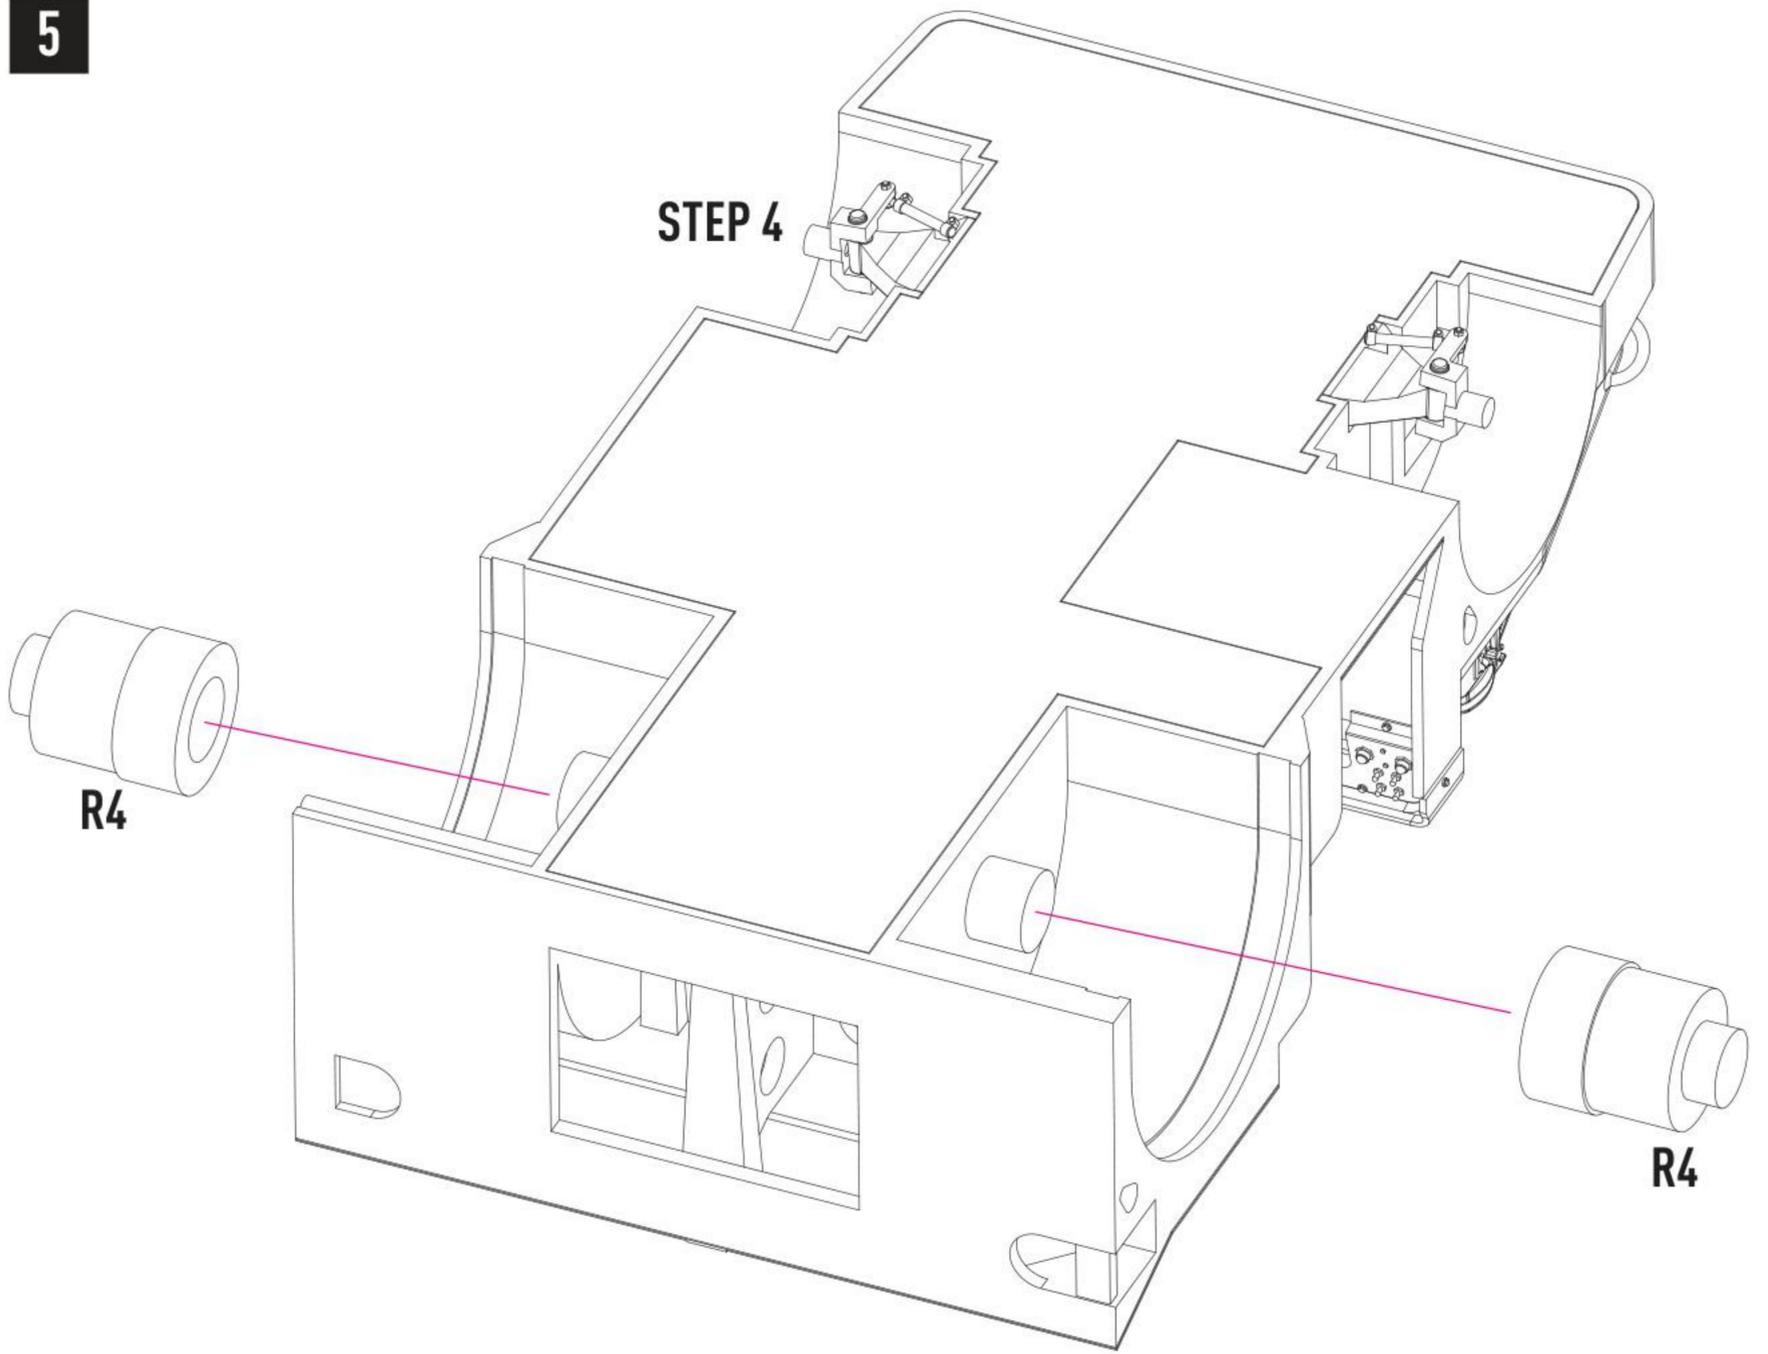


6 X2

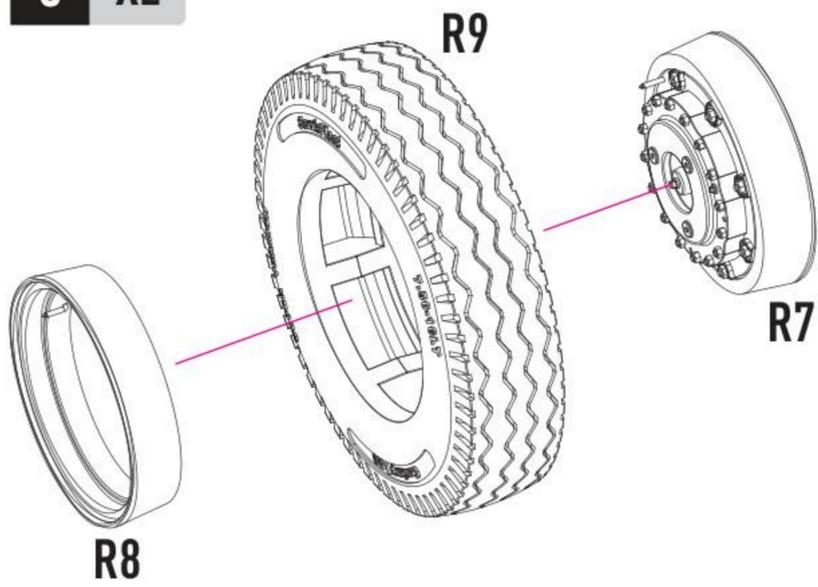

7 X2

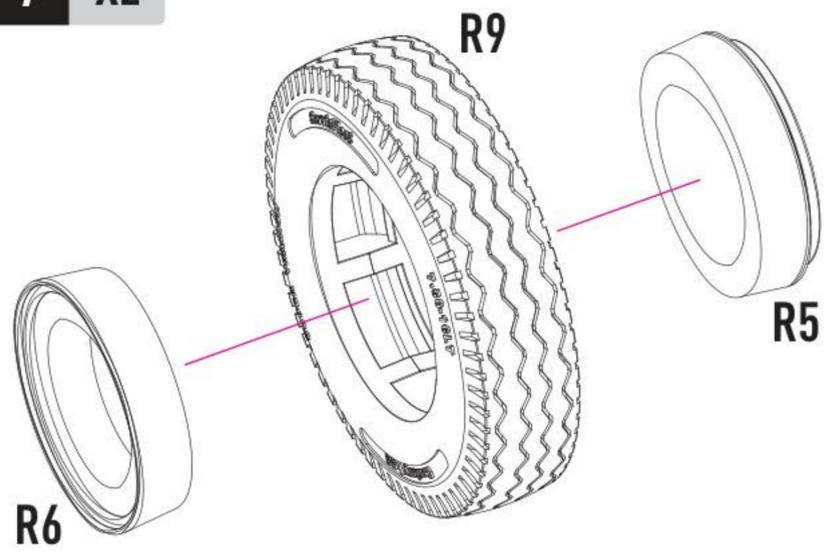


8 X2

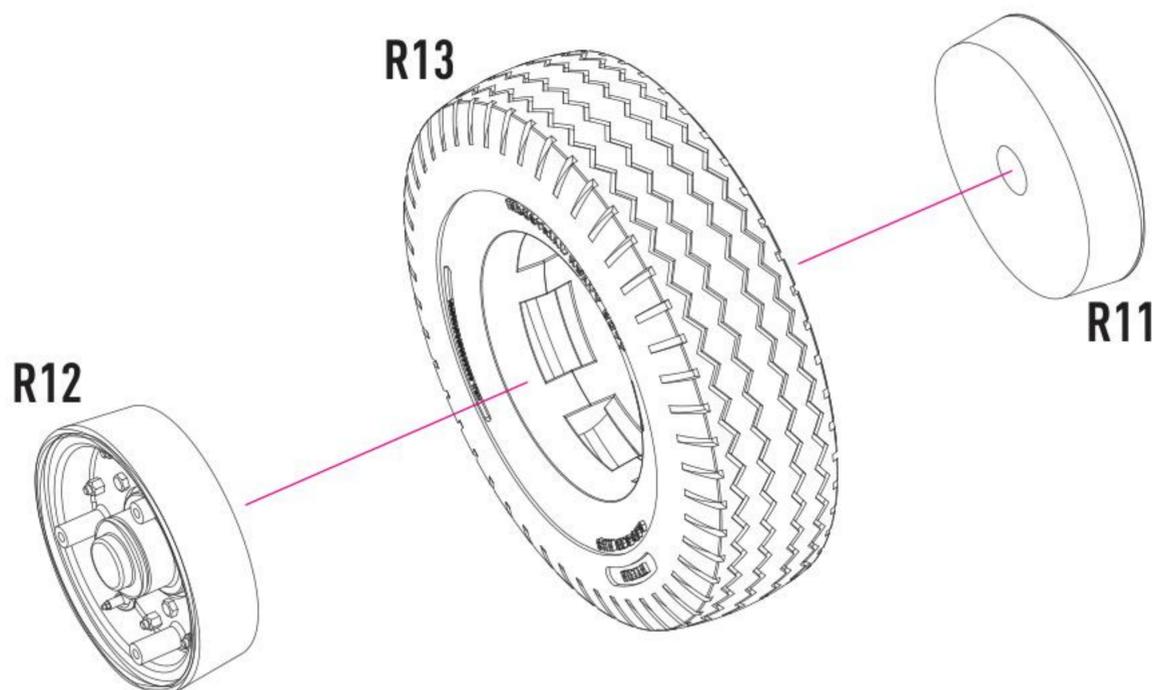




9

STEP 5

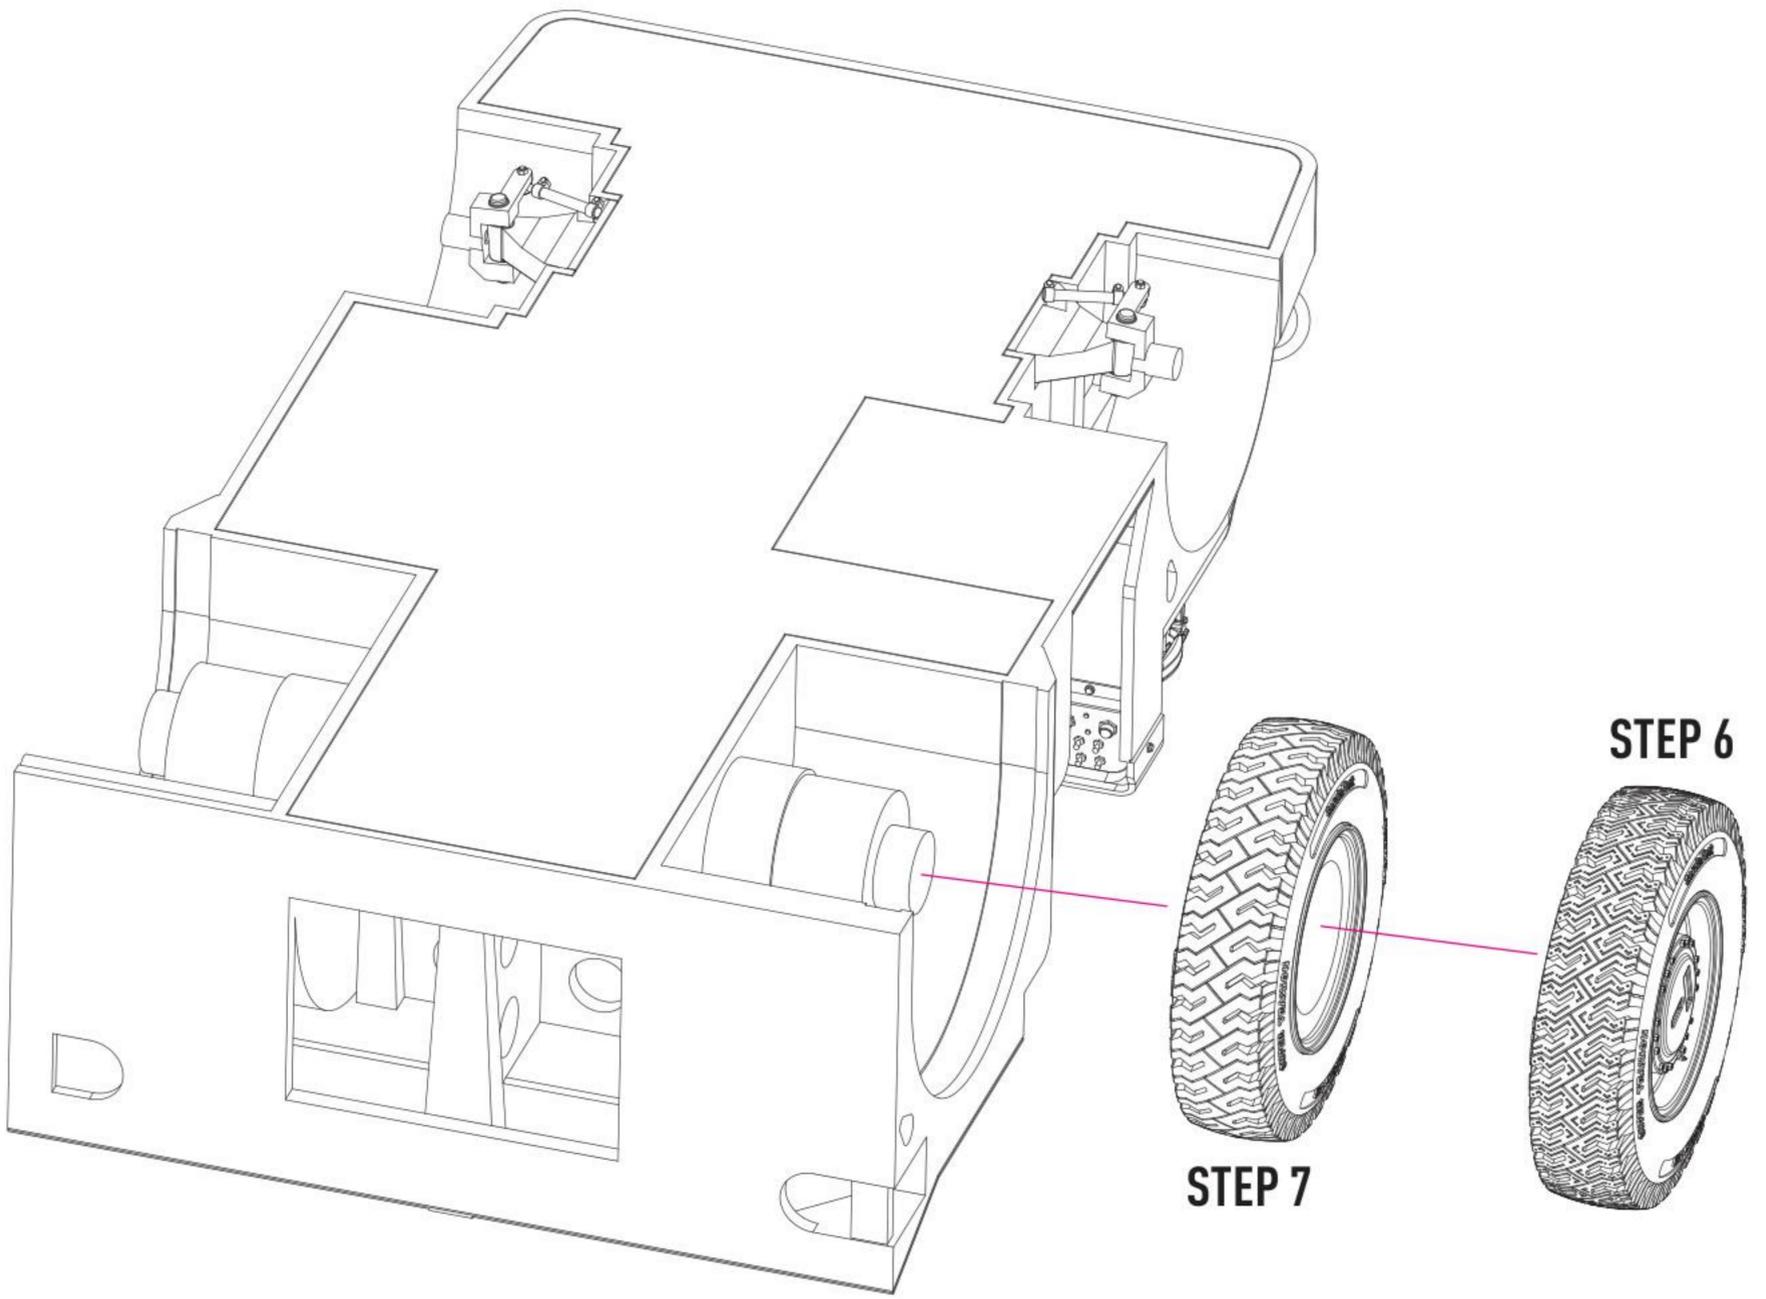


10

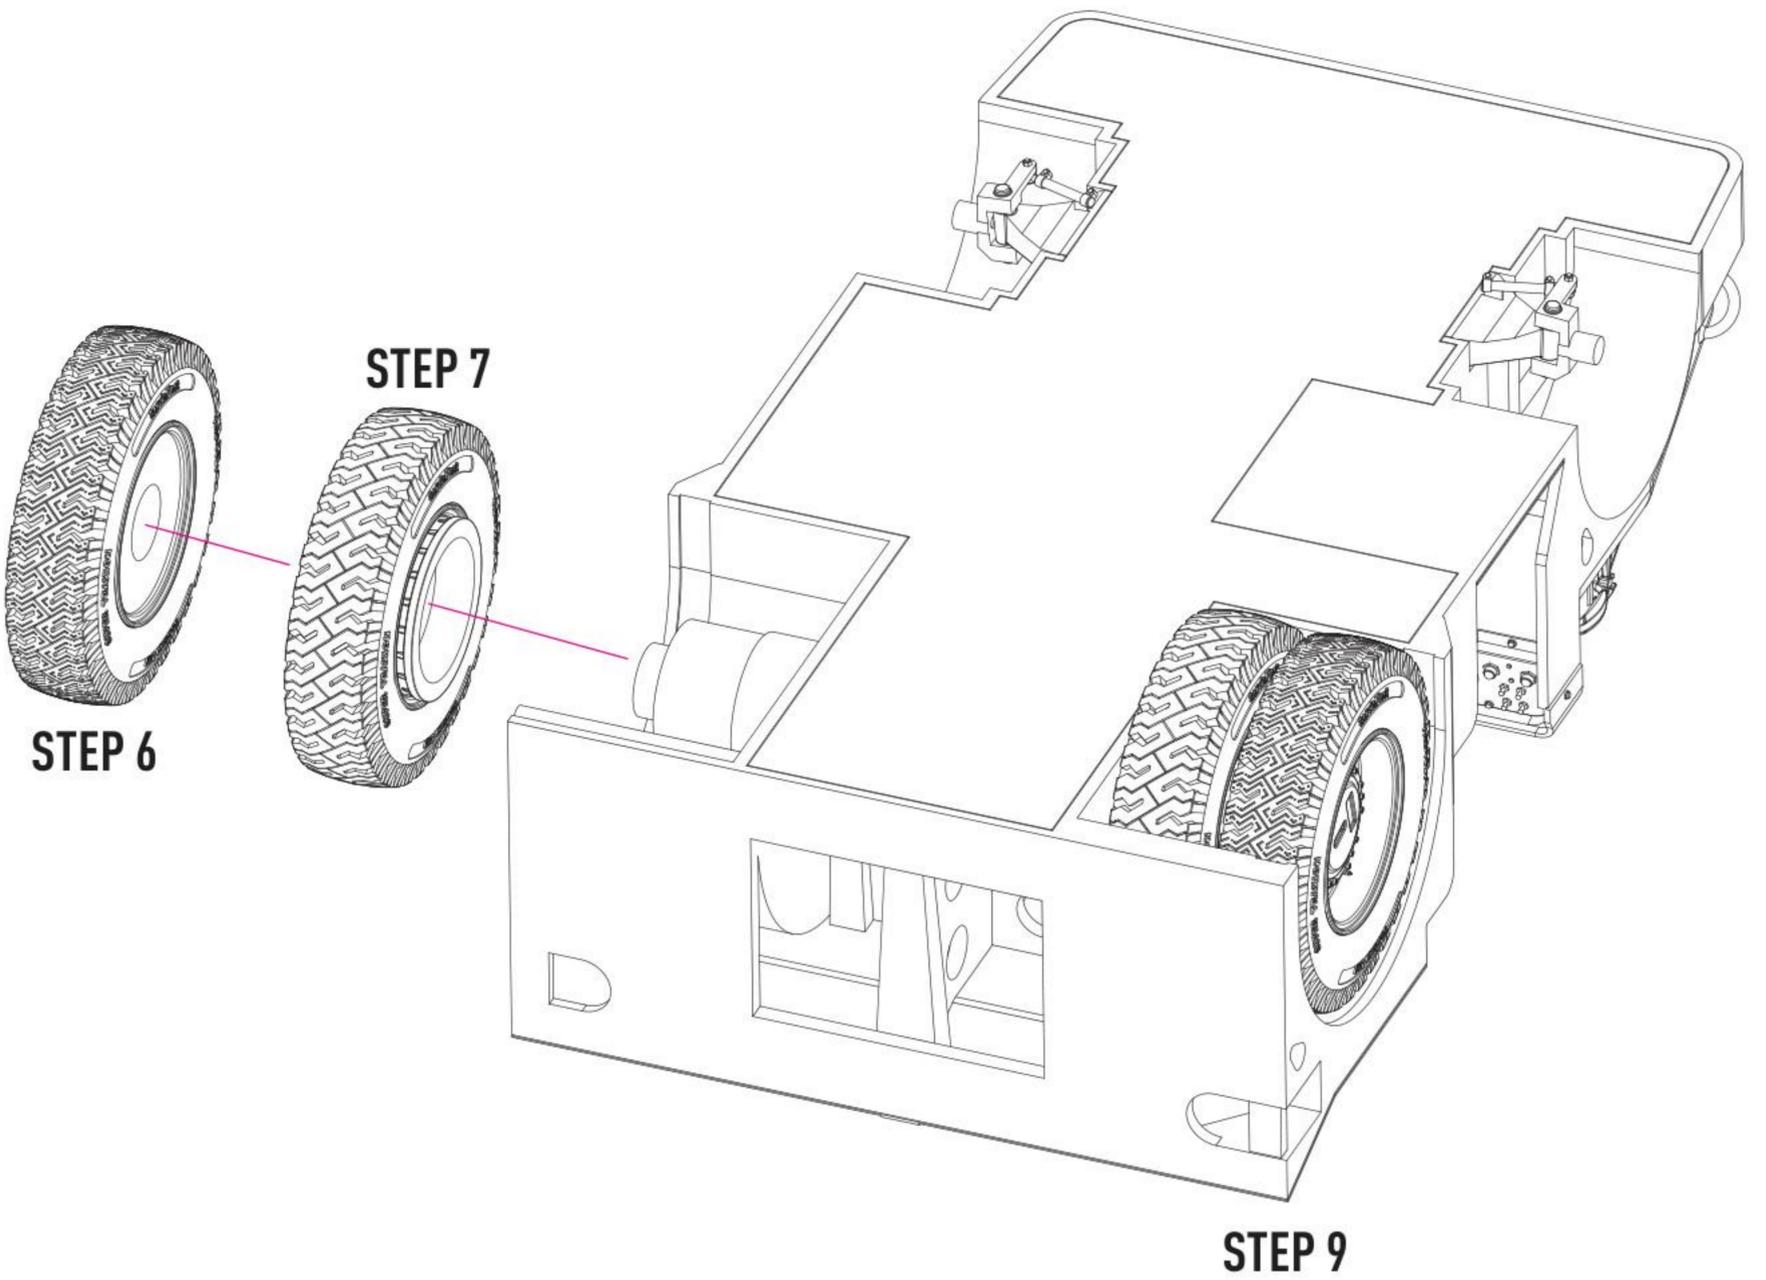


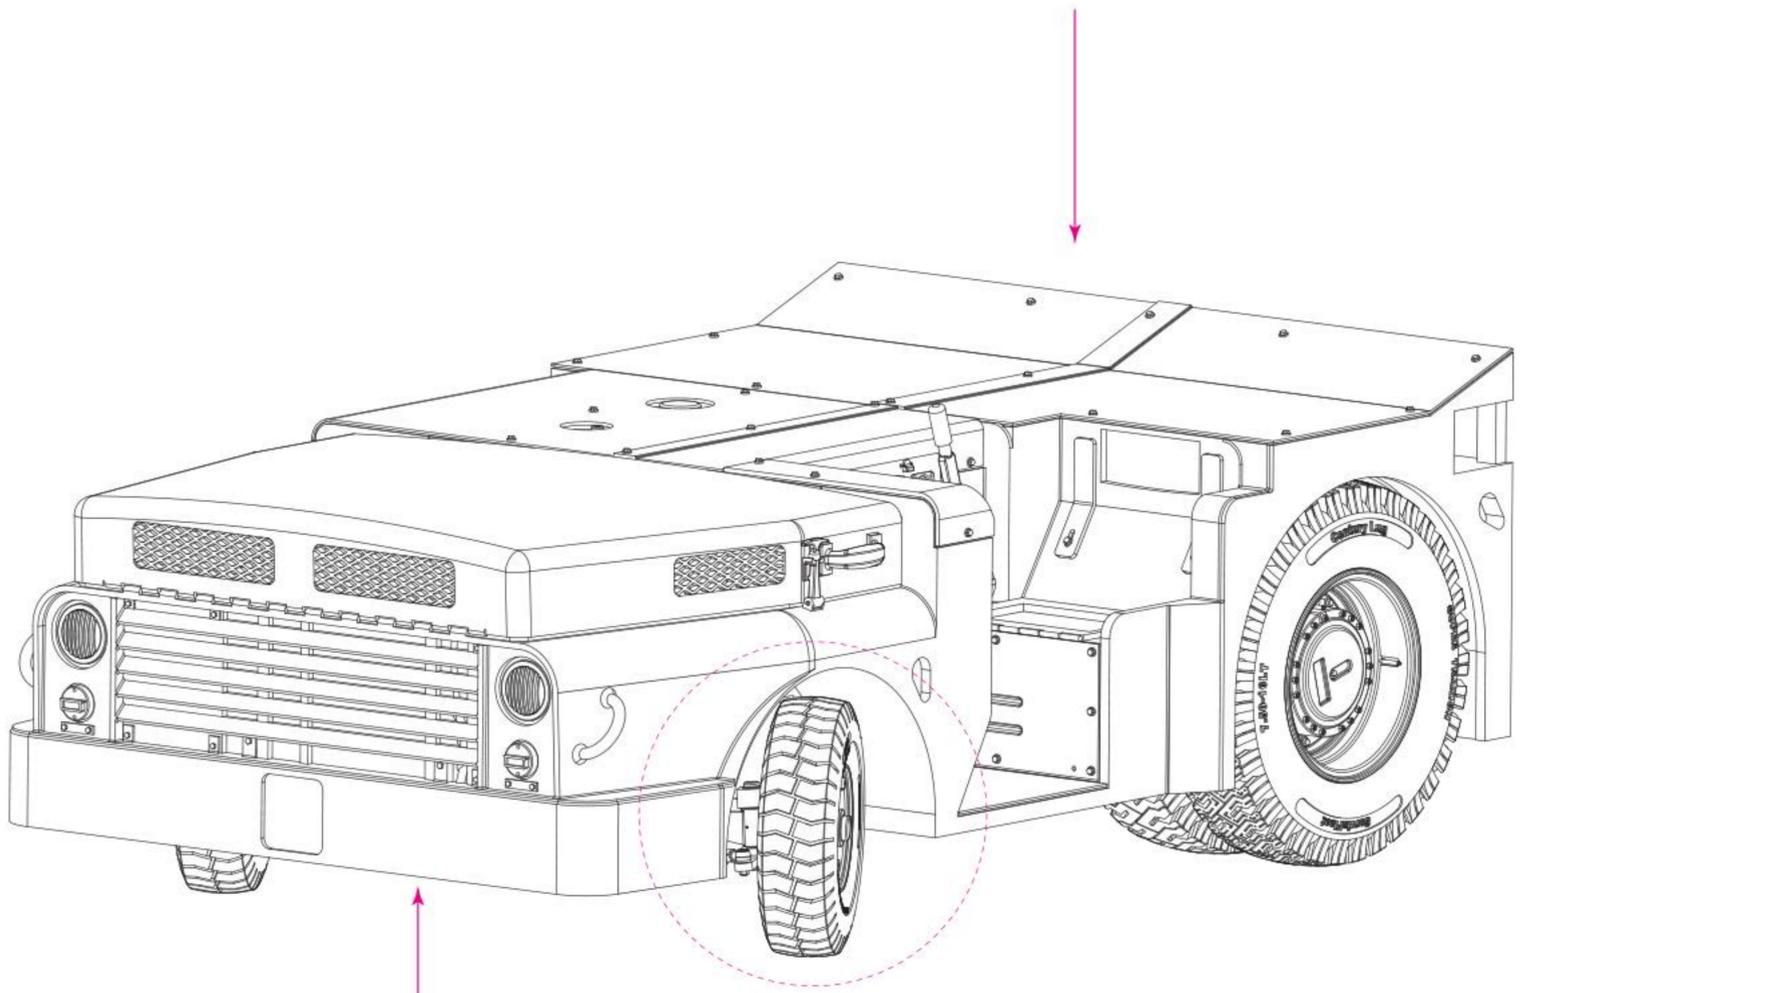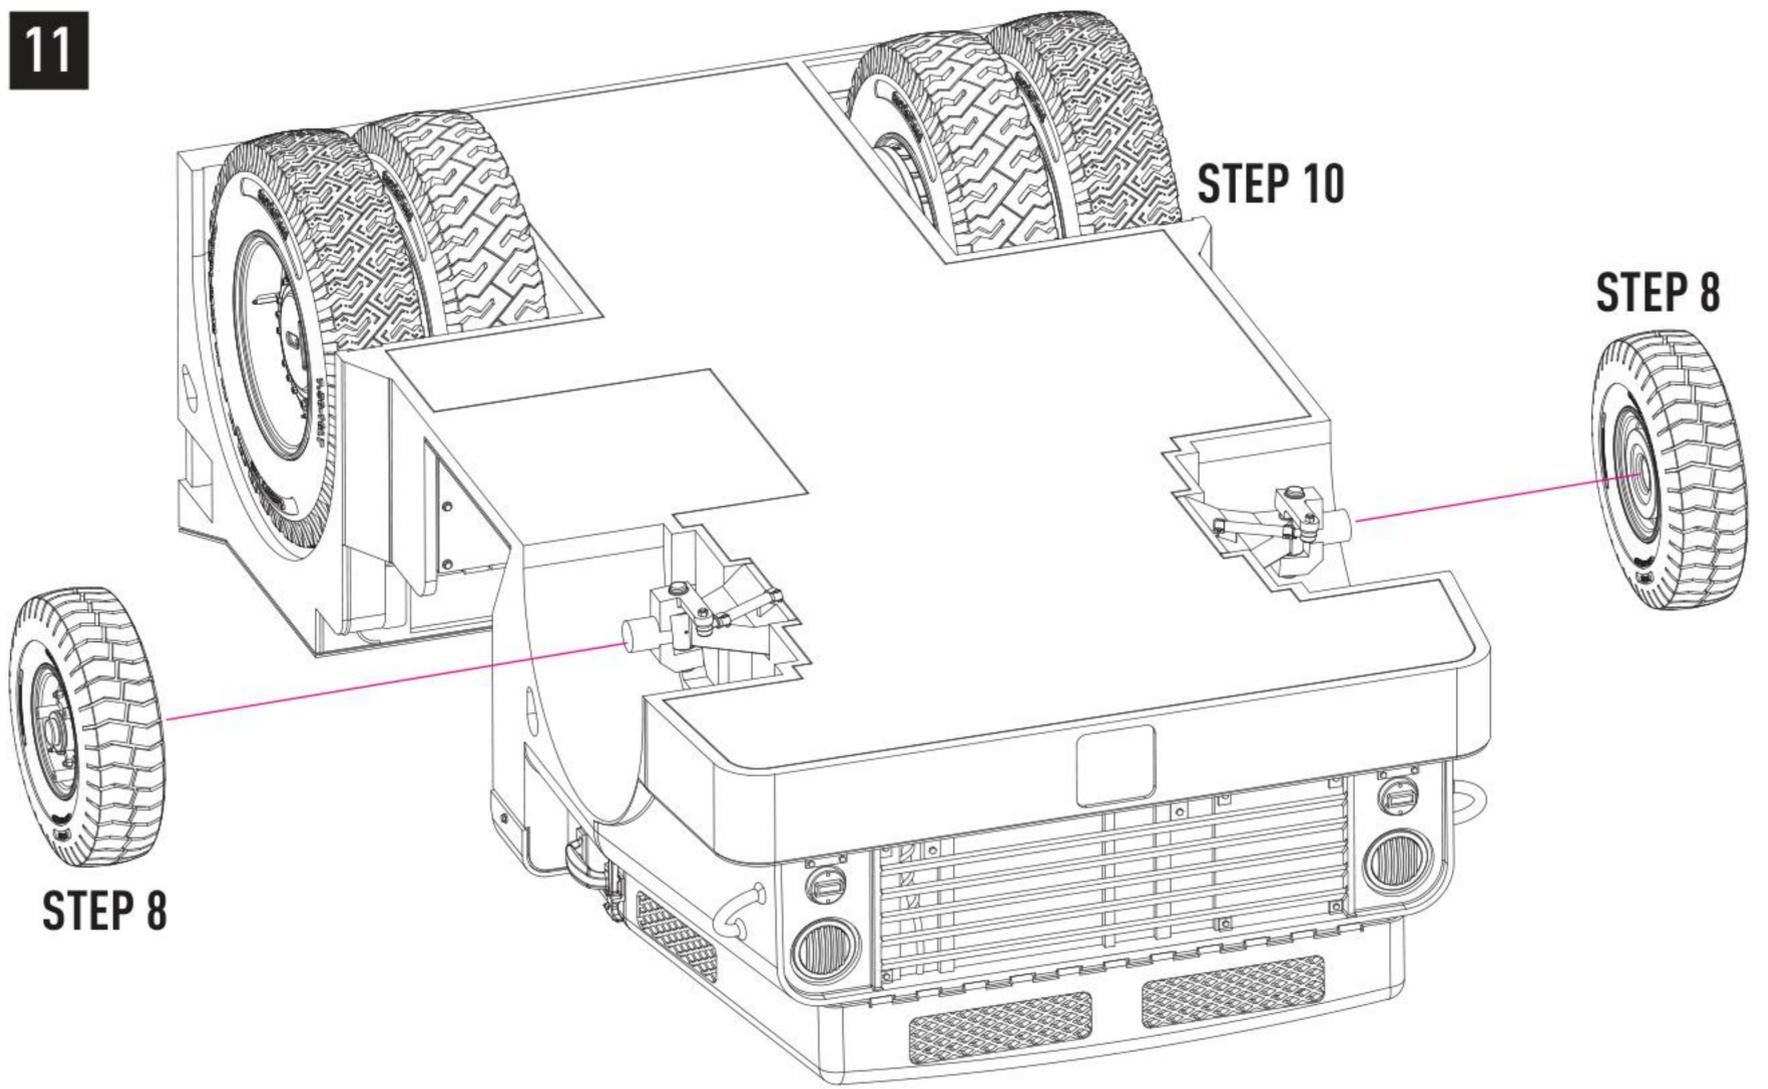


?

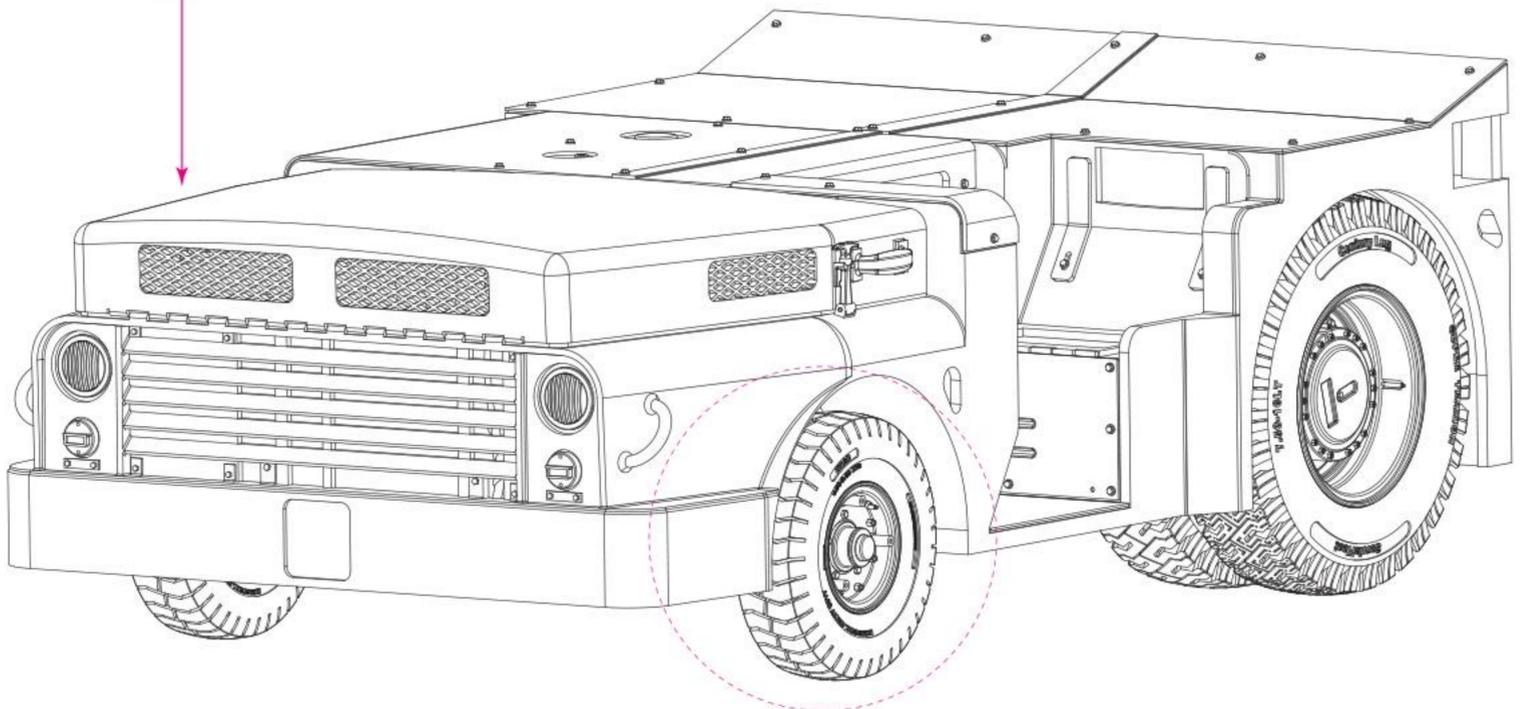


12

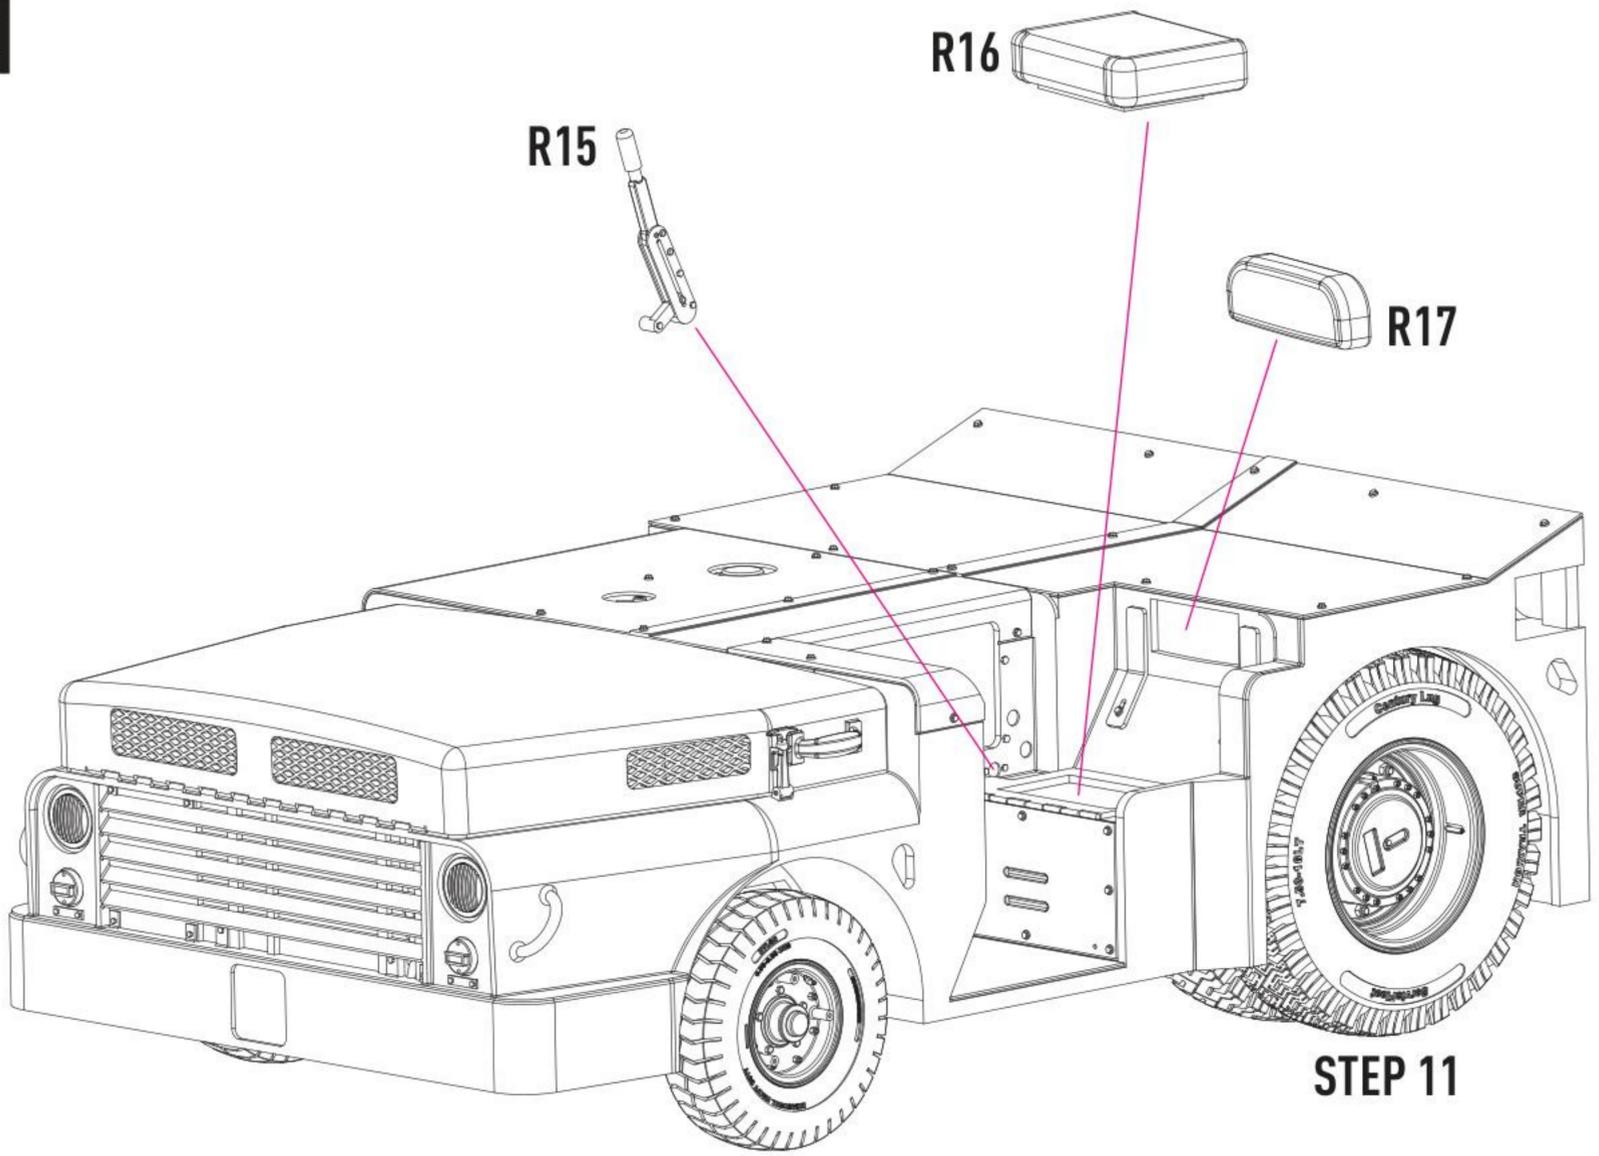


13

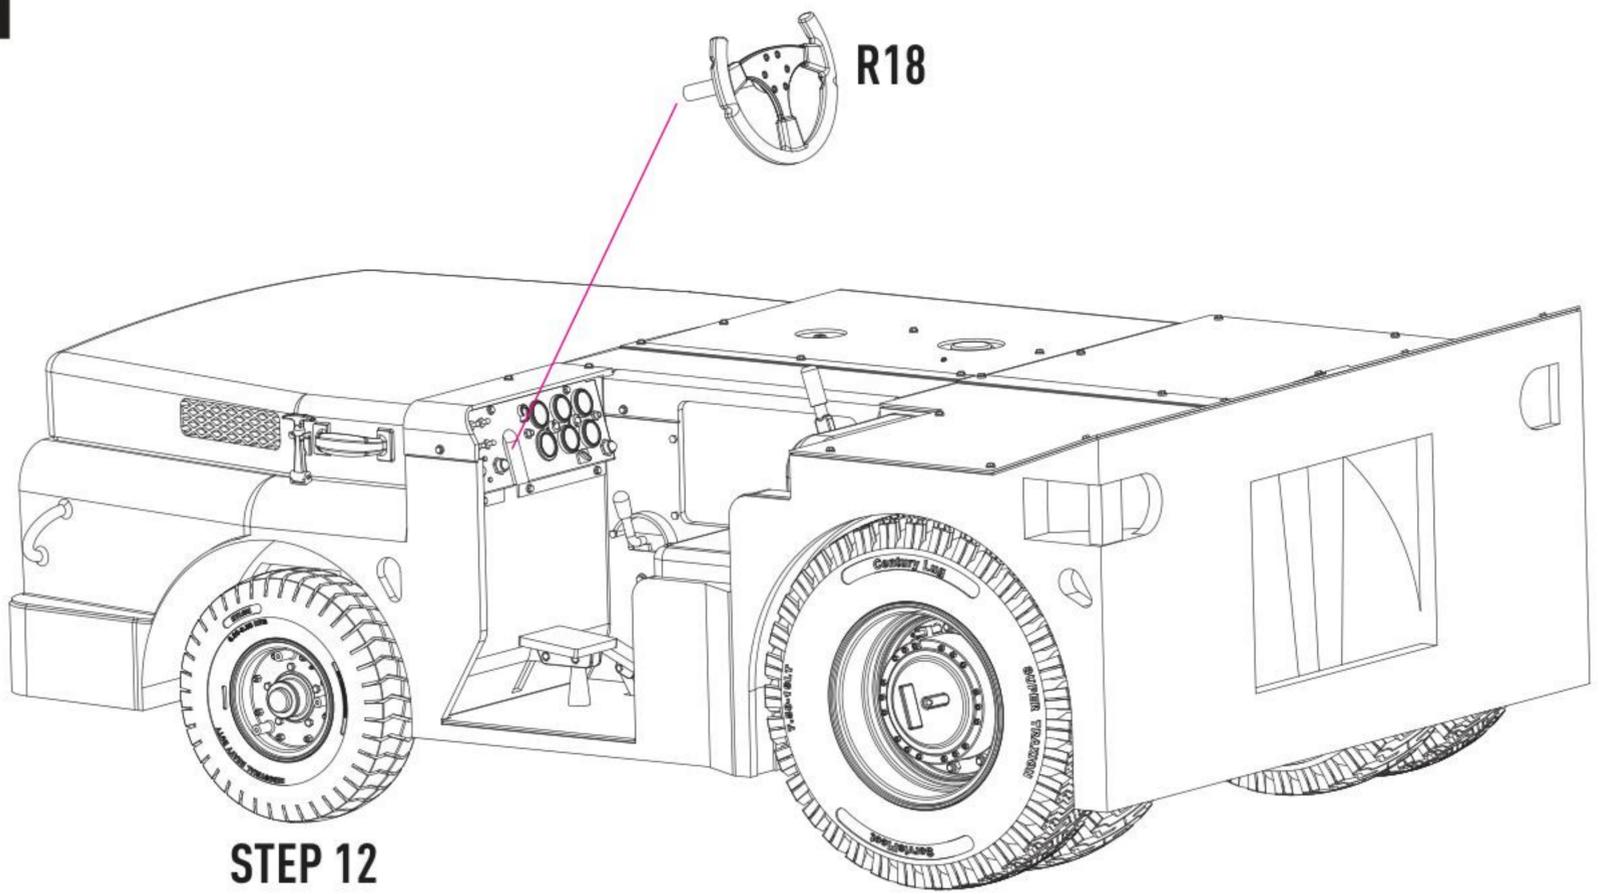


14

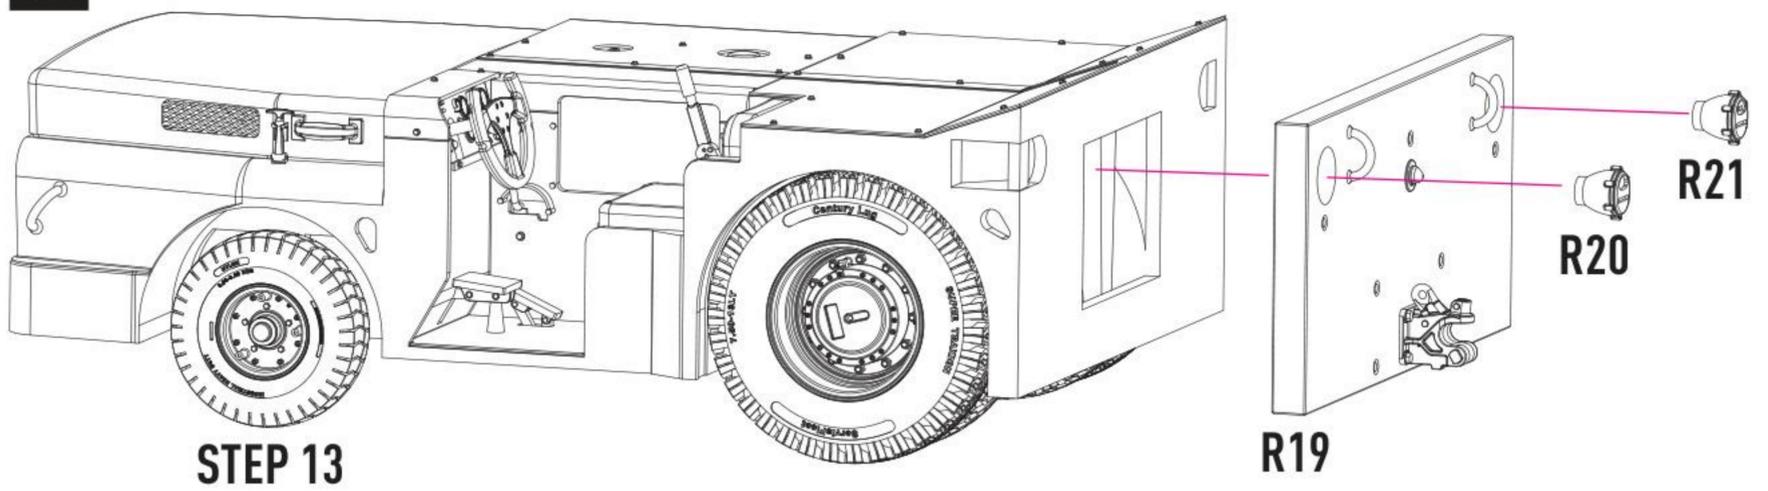


15

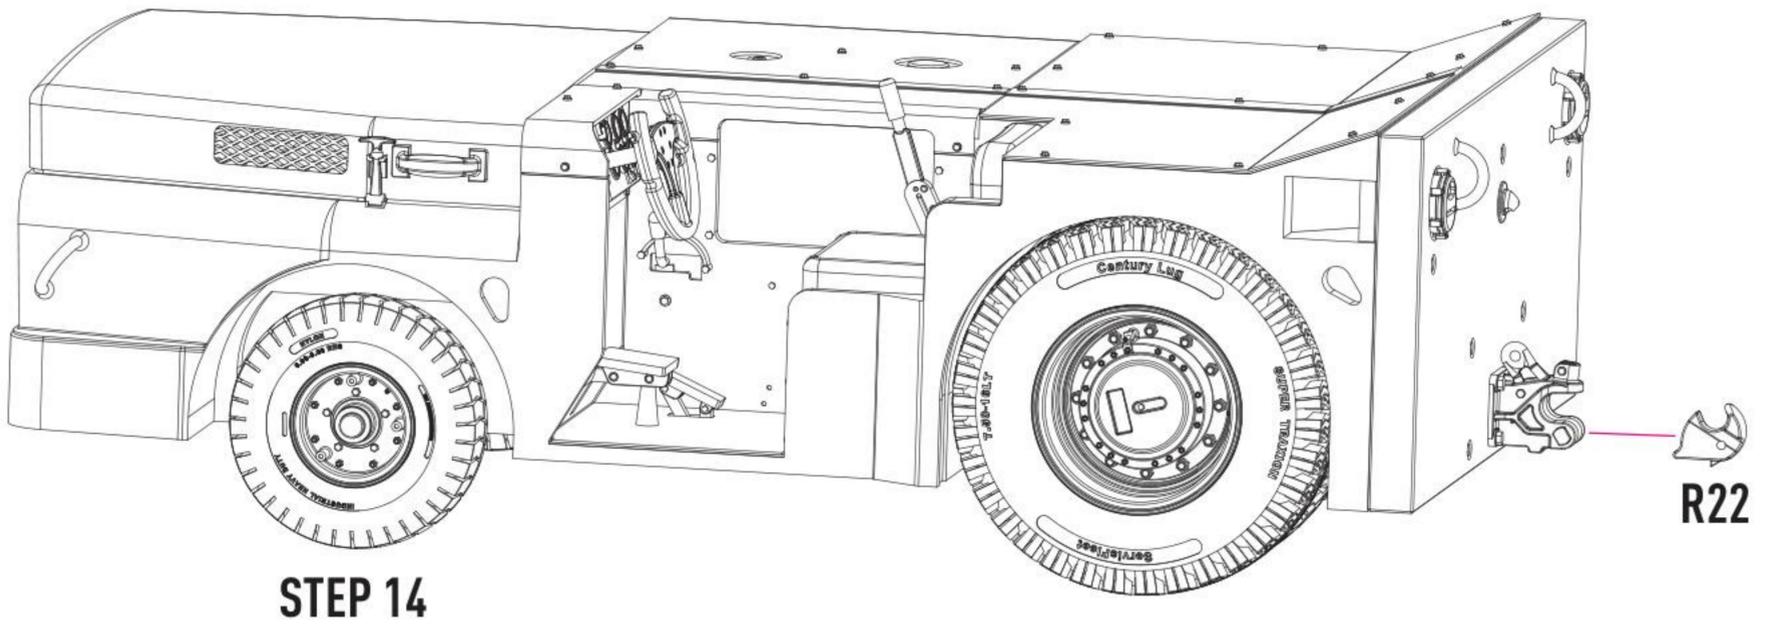


16

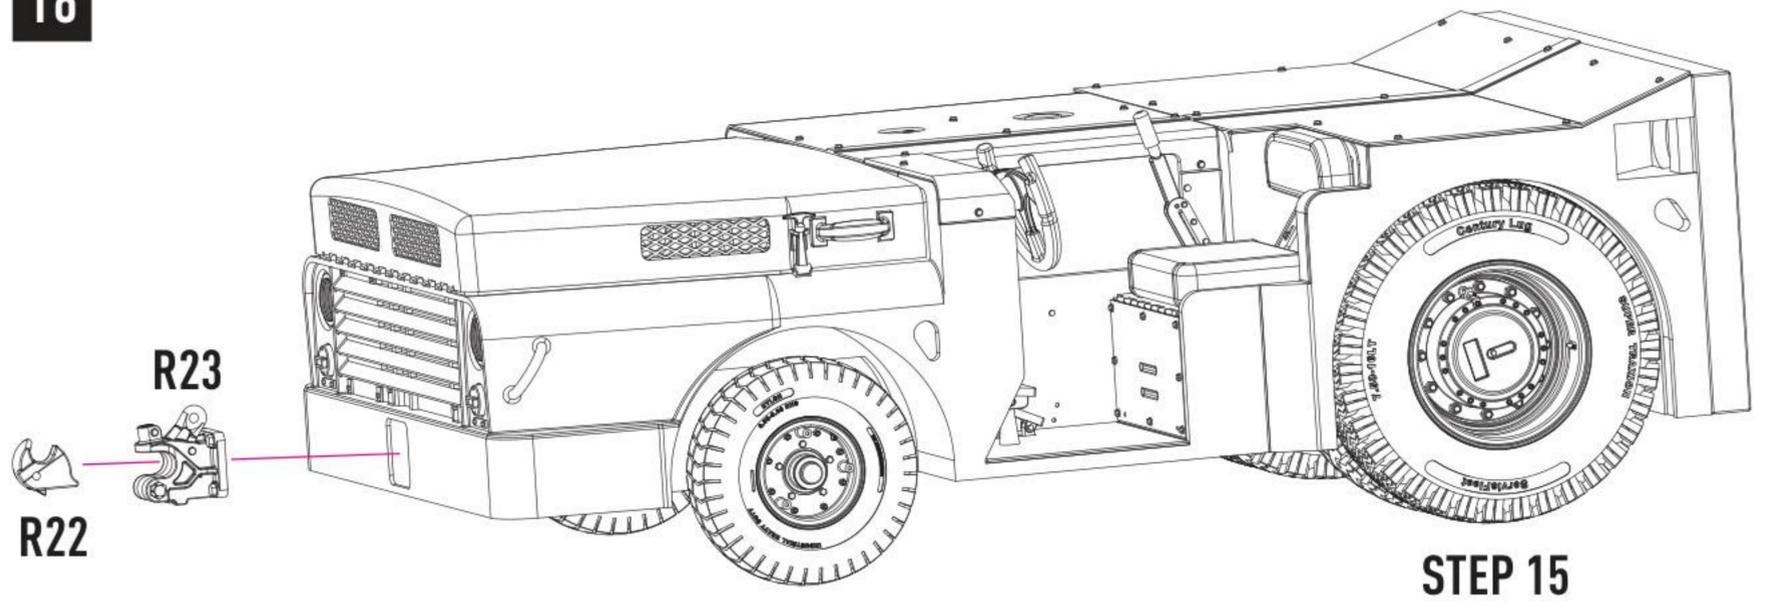


17

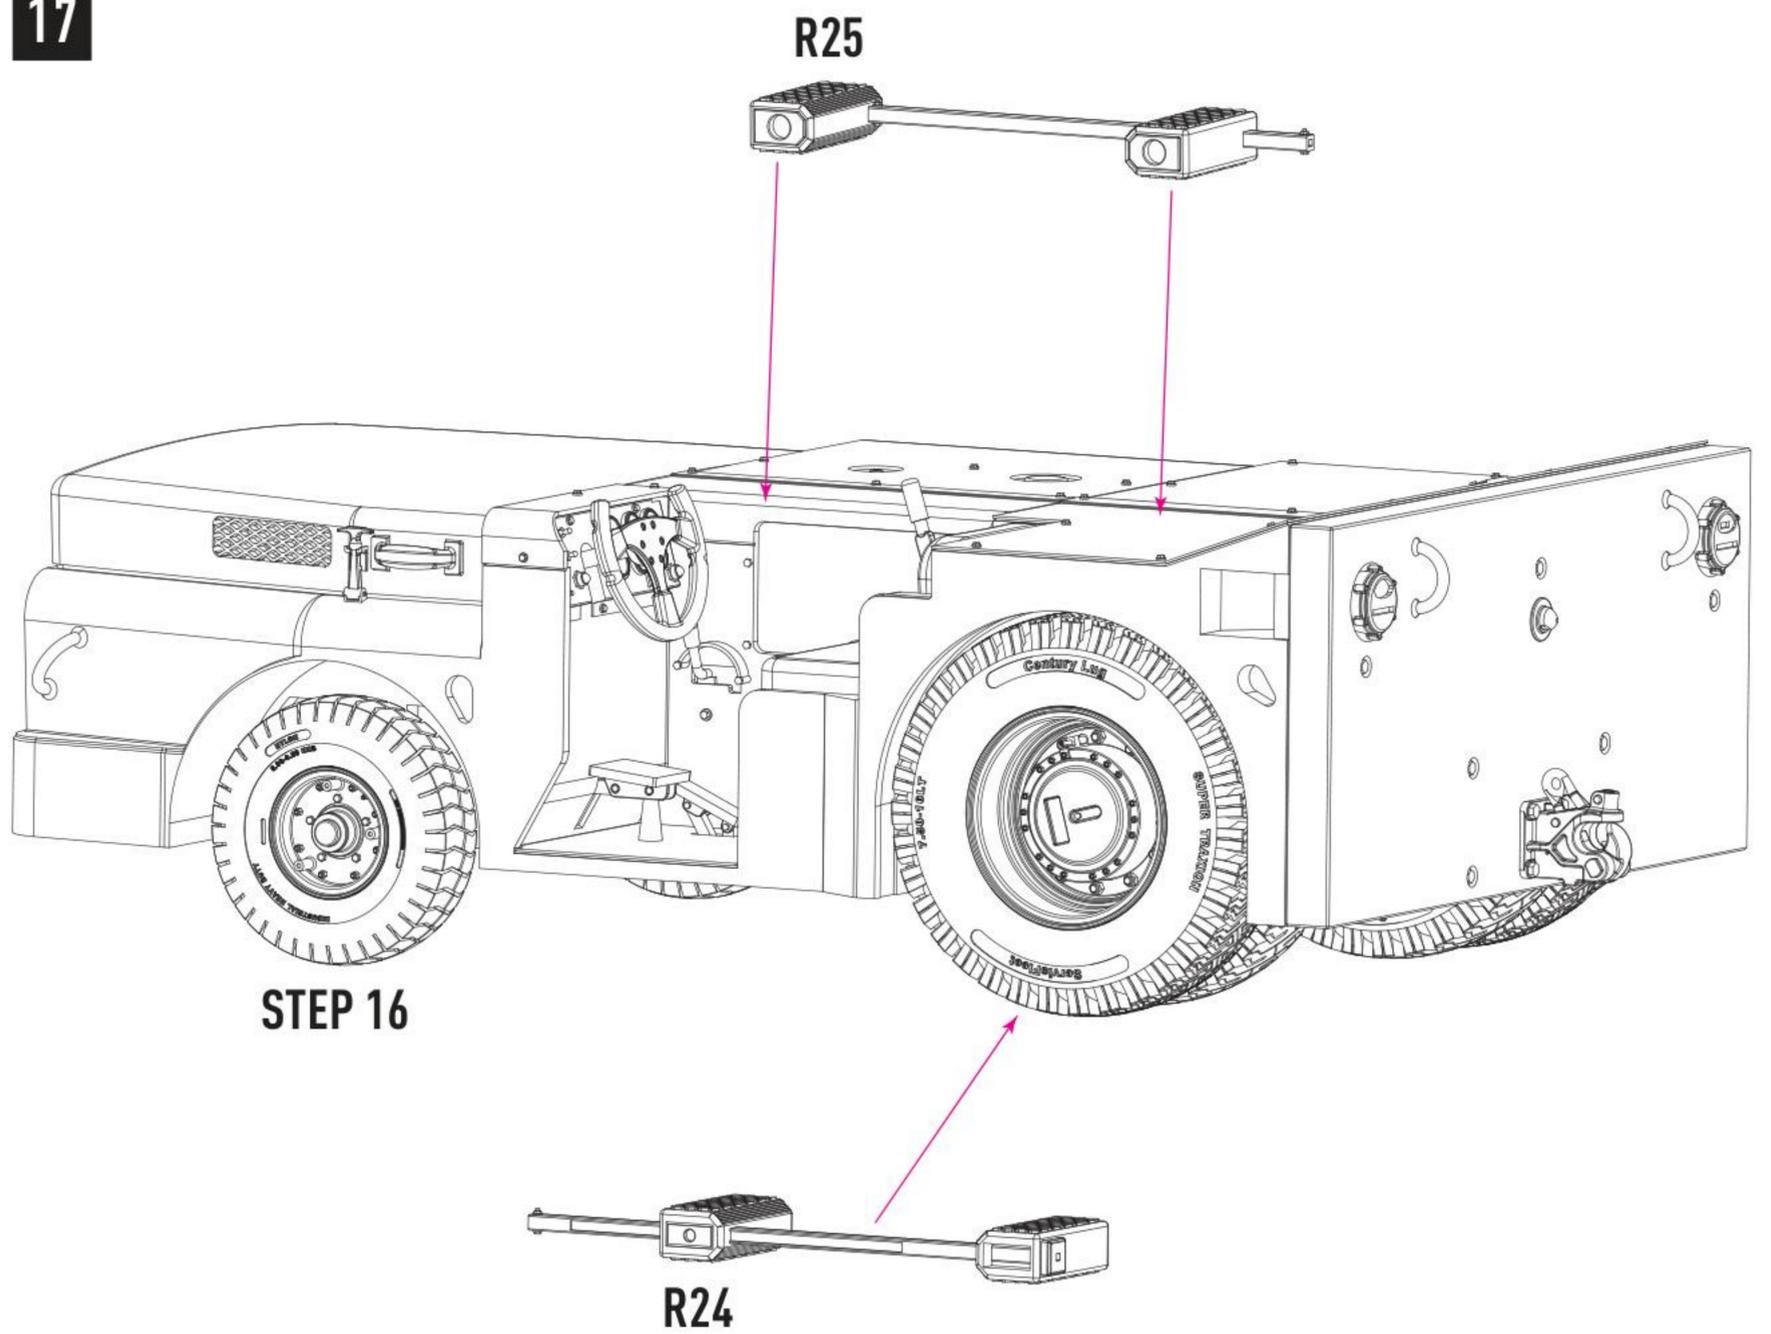


18

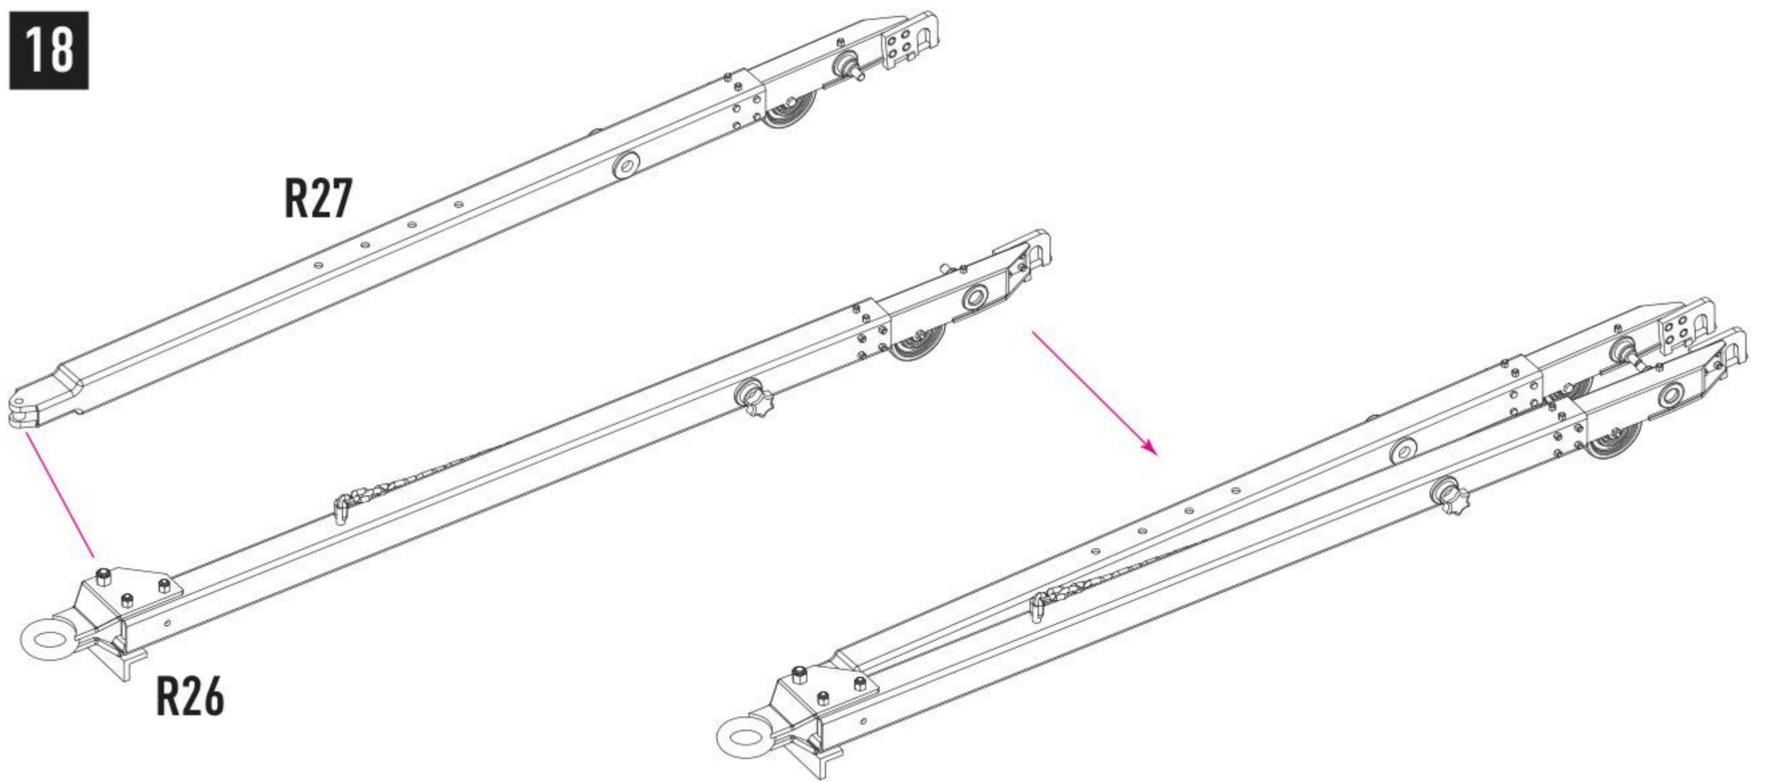


19

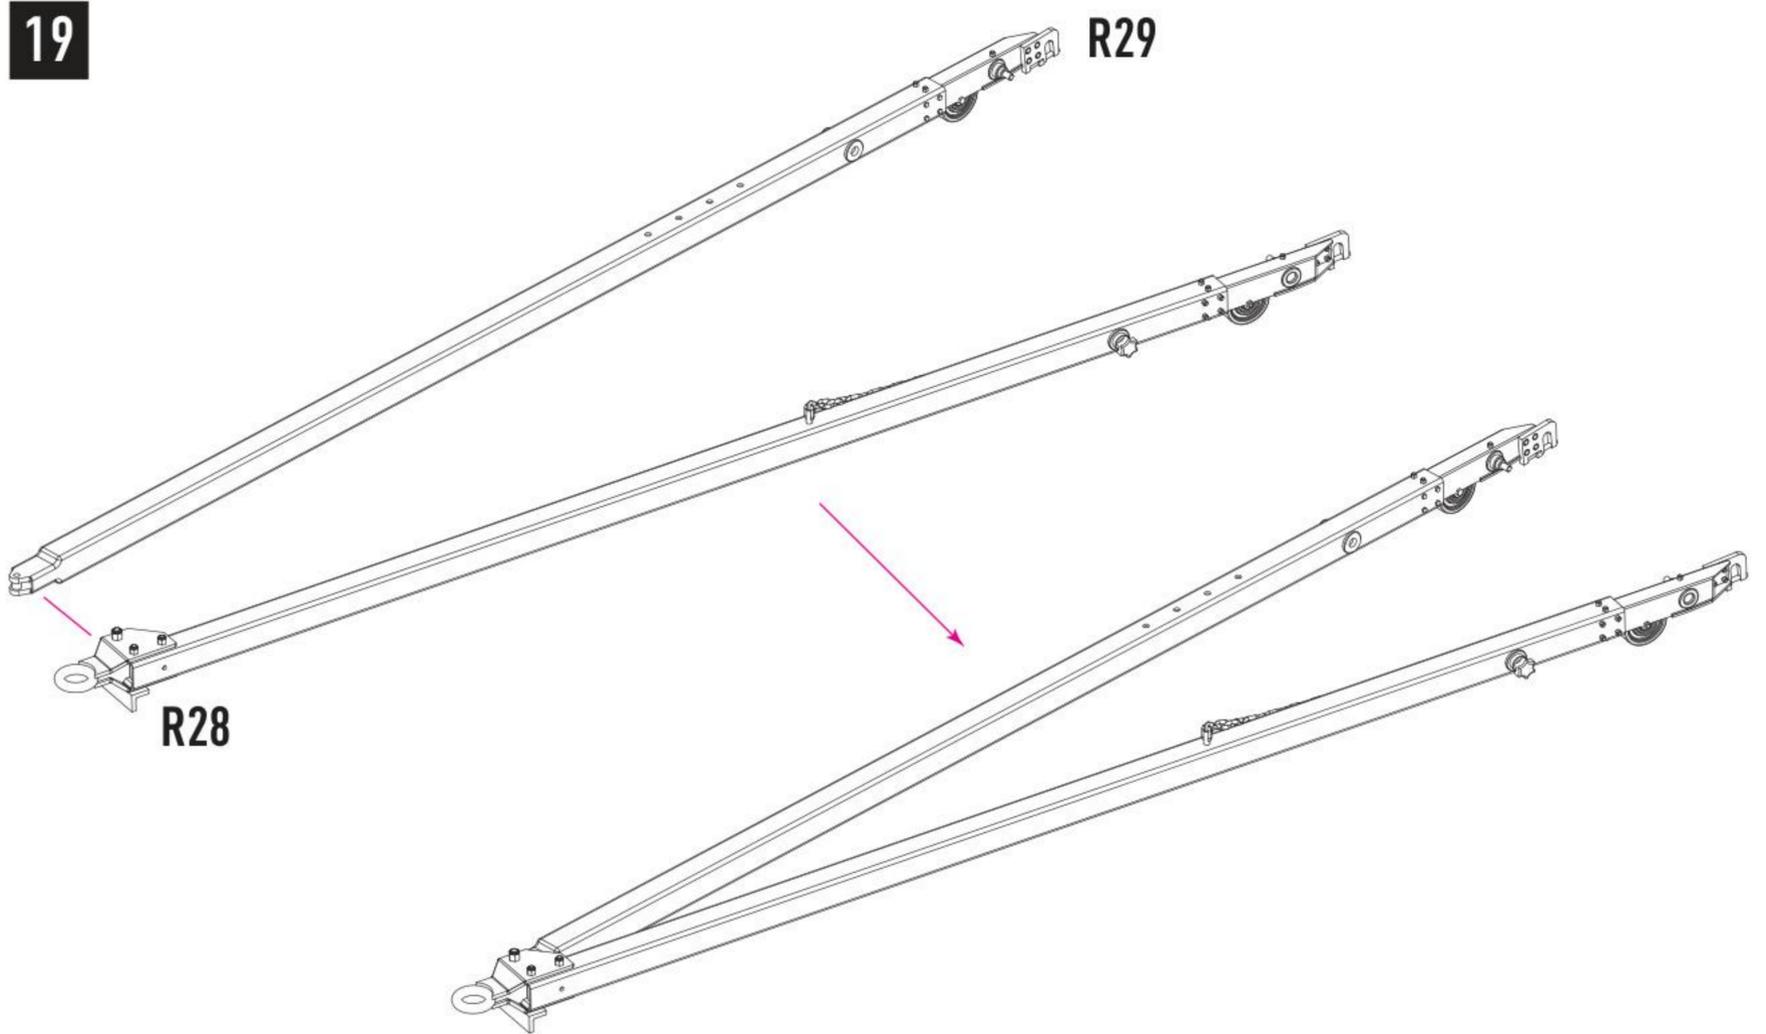


20


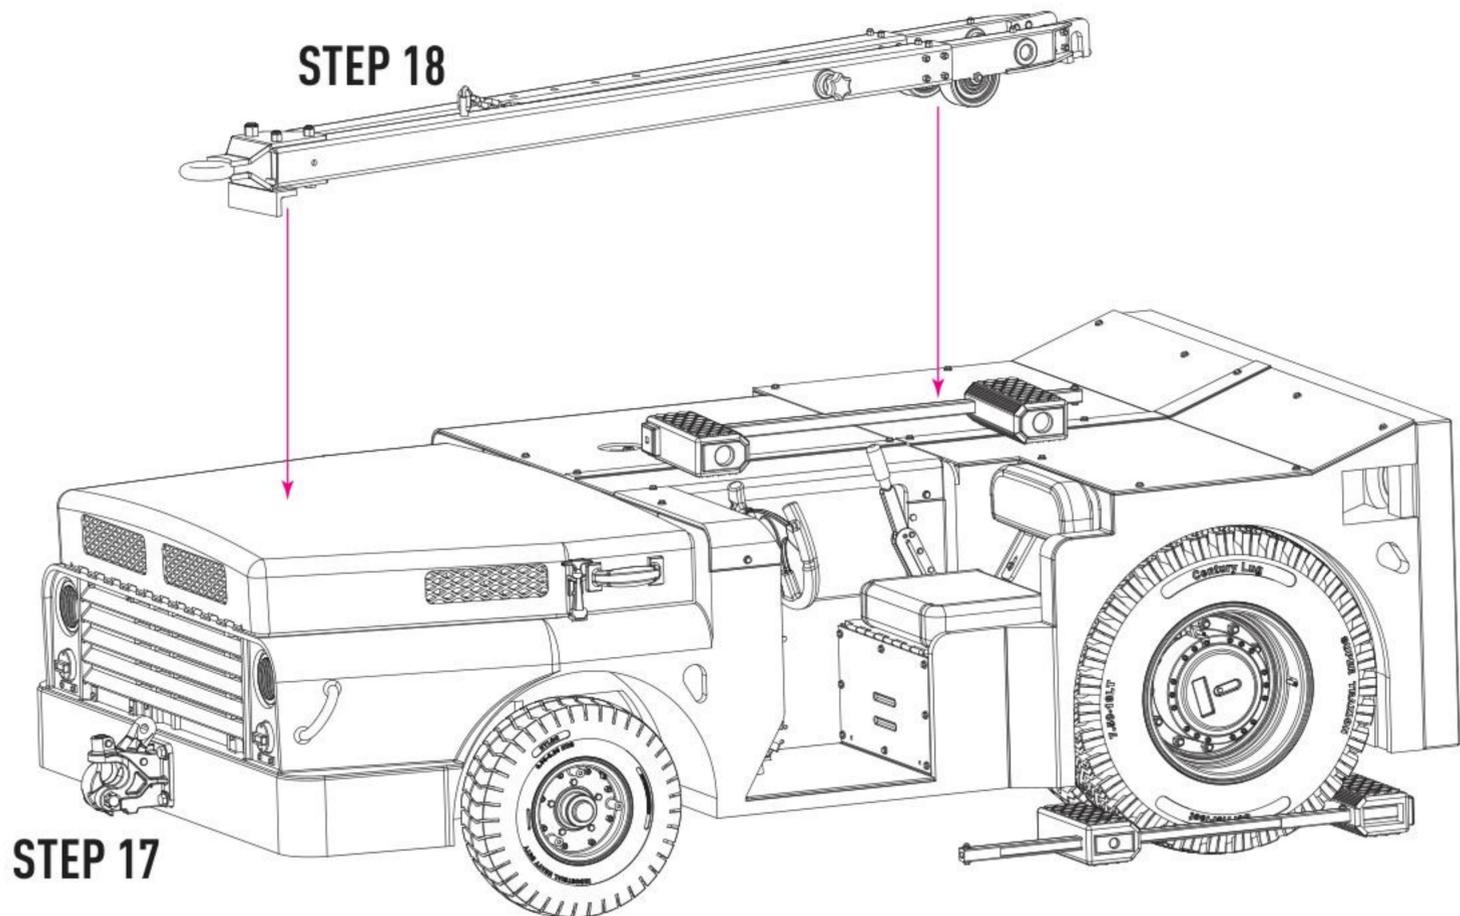


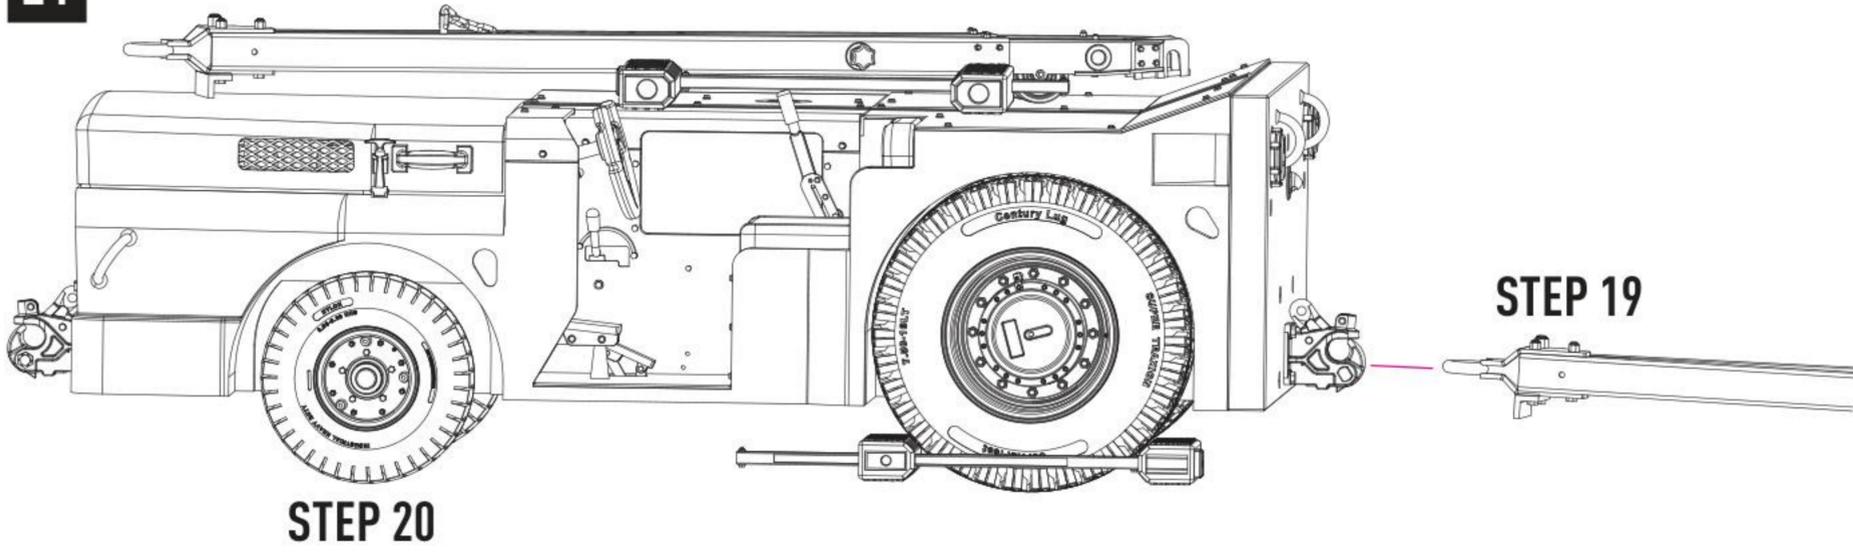



STEP 20

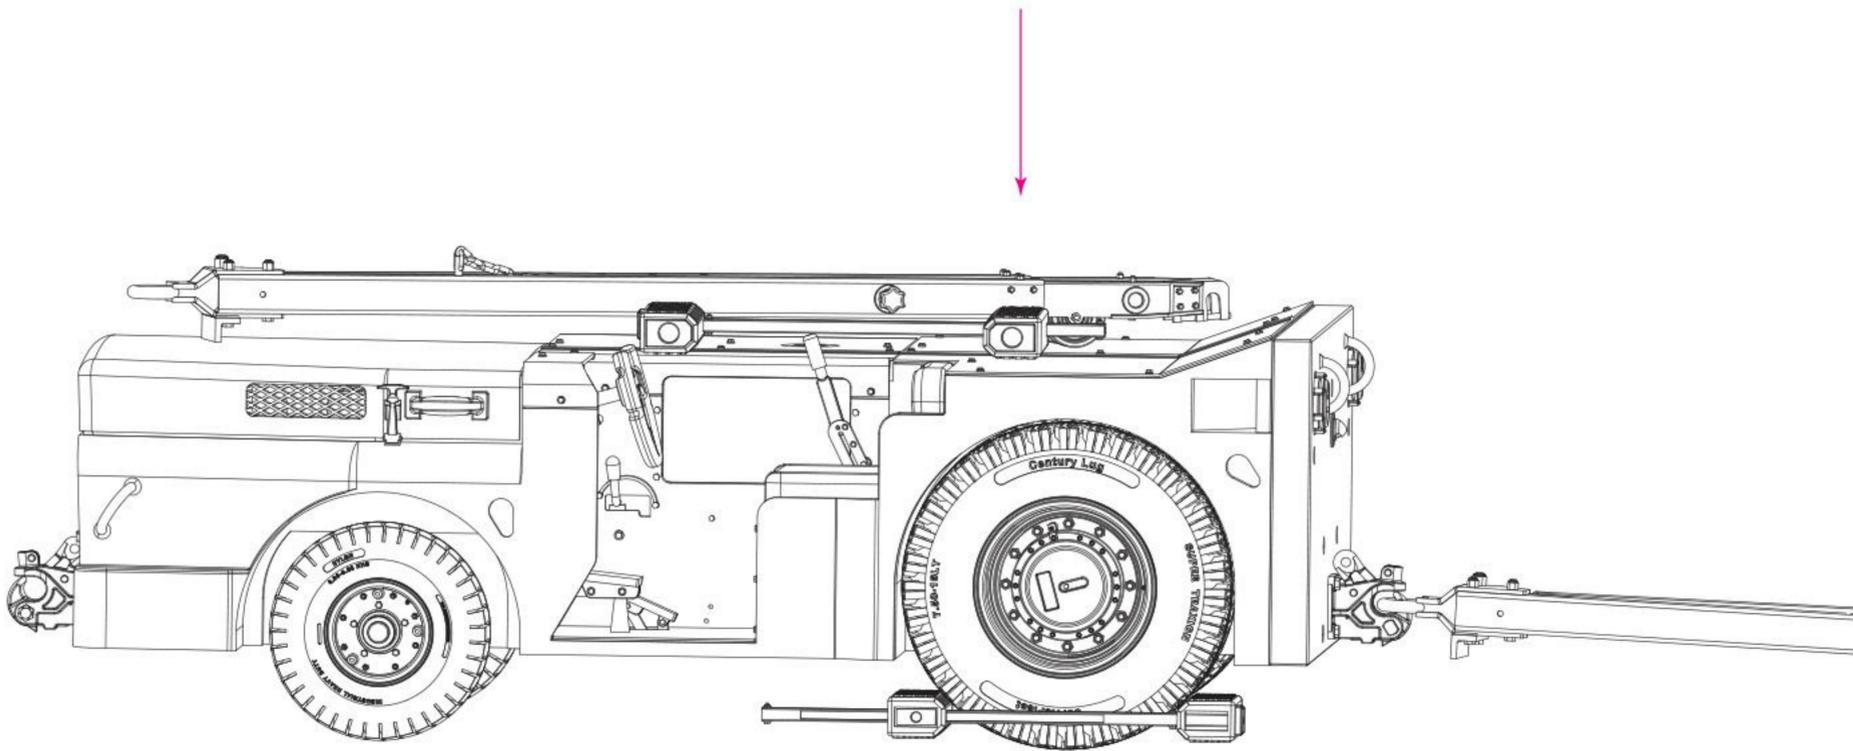

ALBAR UNIVERSAL AIRCRAFT TOWBAR

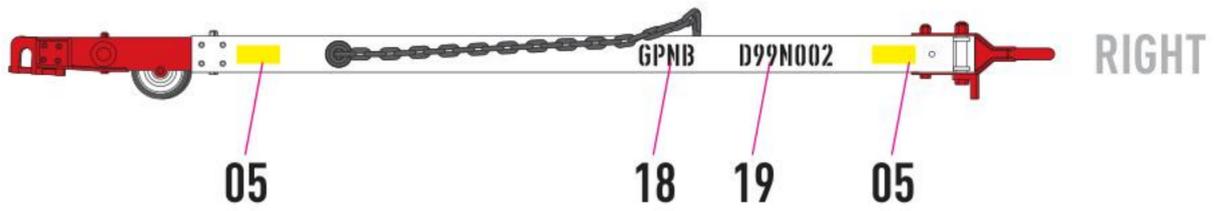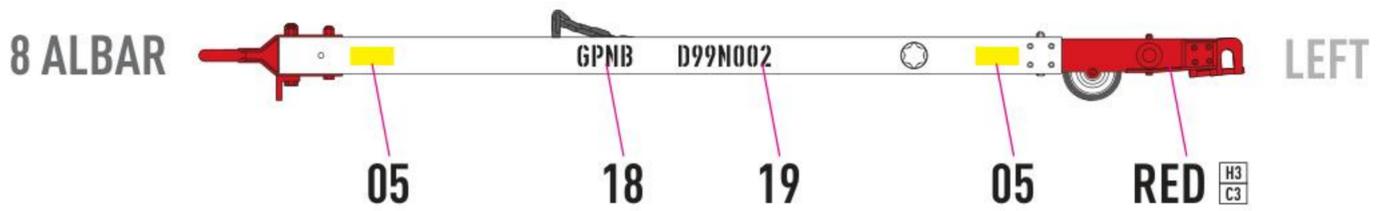

15 ALBAR




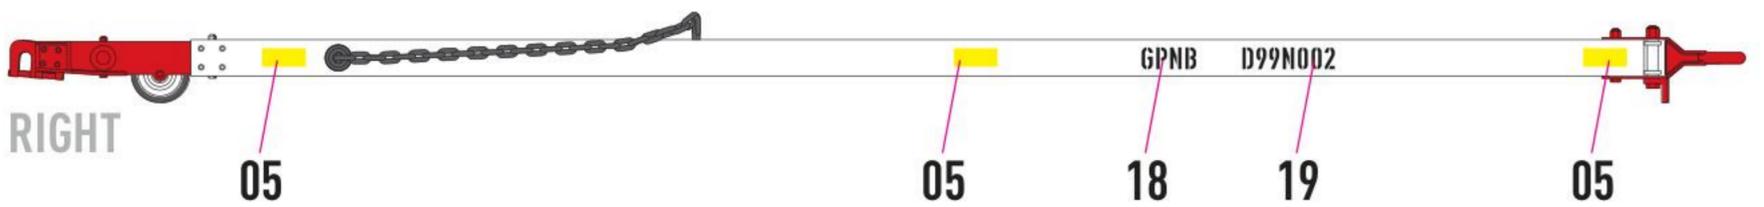
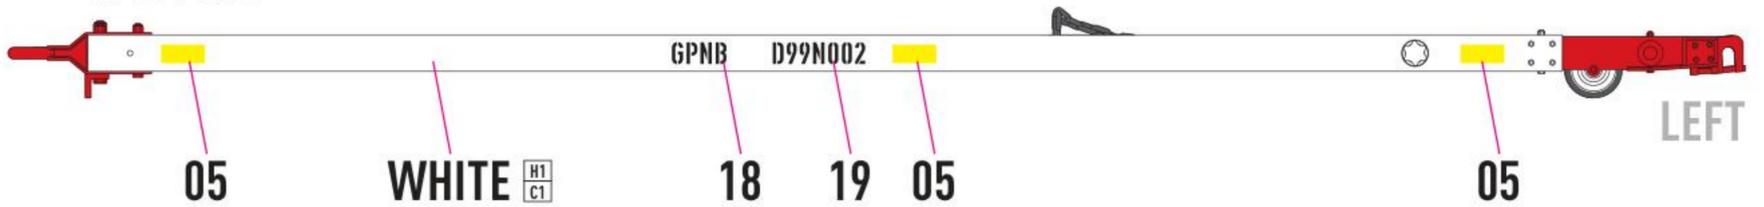


COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
WHITE	H1	C1
LIGHT GHOST GRAY	H308	C308

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
RED	H3	C3

DECAL INSTRUCTION

V1

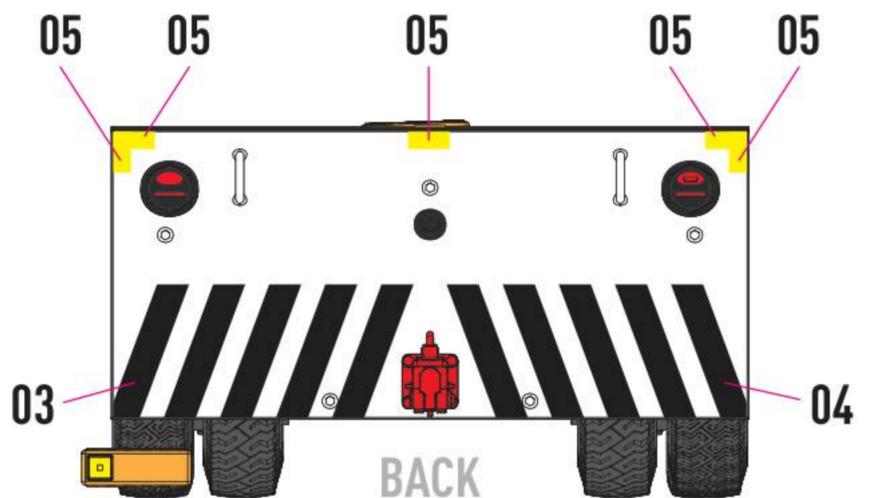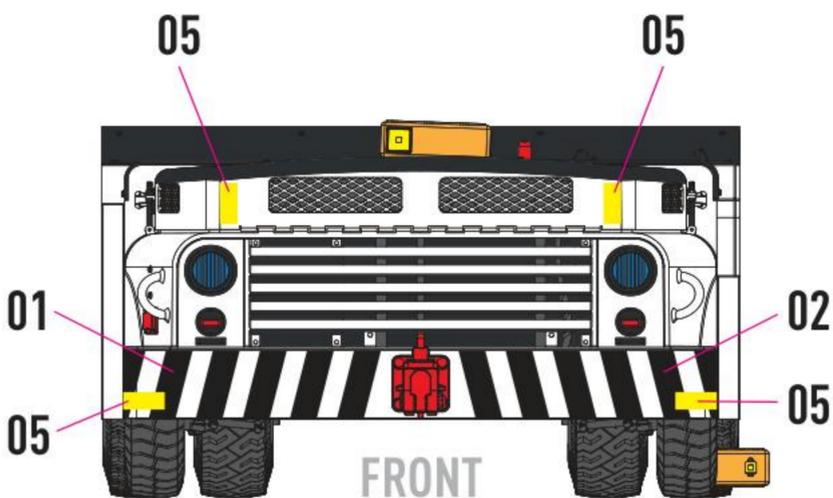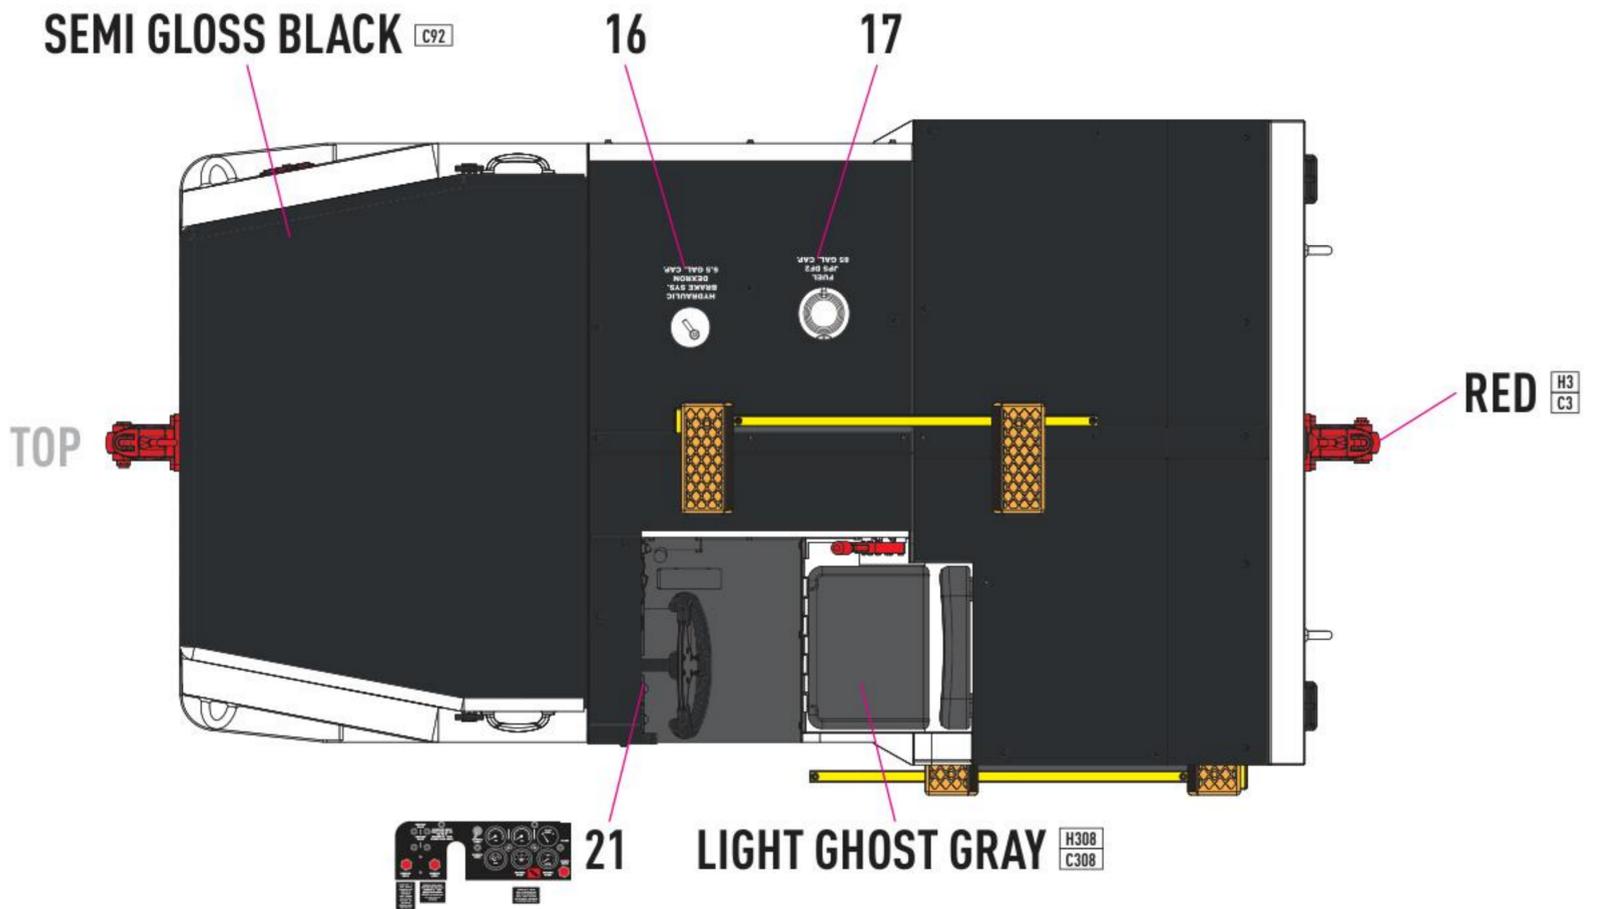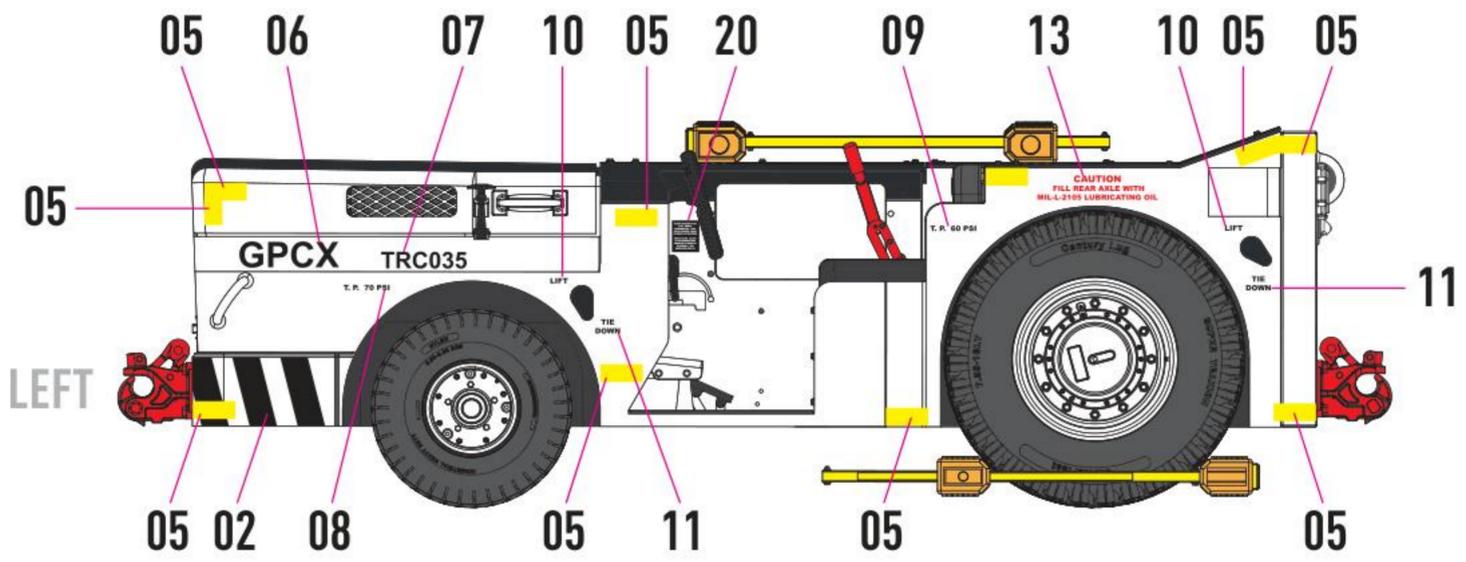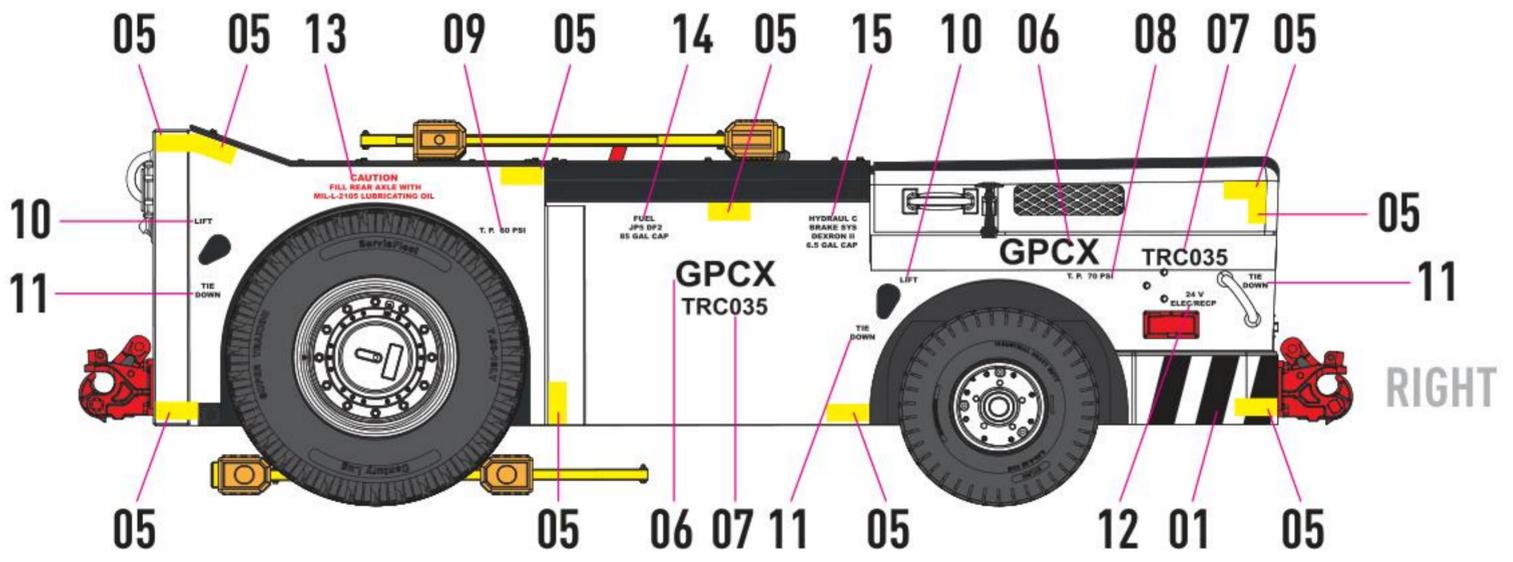

DECAL INSTRUCTION

USS JOHN C. STENNIS (CVN-74), SOUTH CHINA SEA (SEPT. 6, 2004)

V2

