


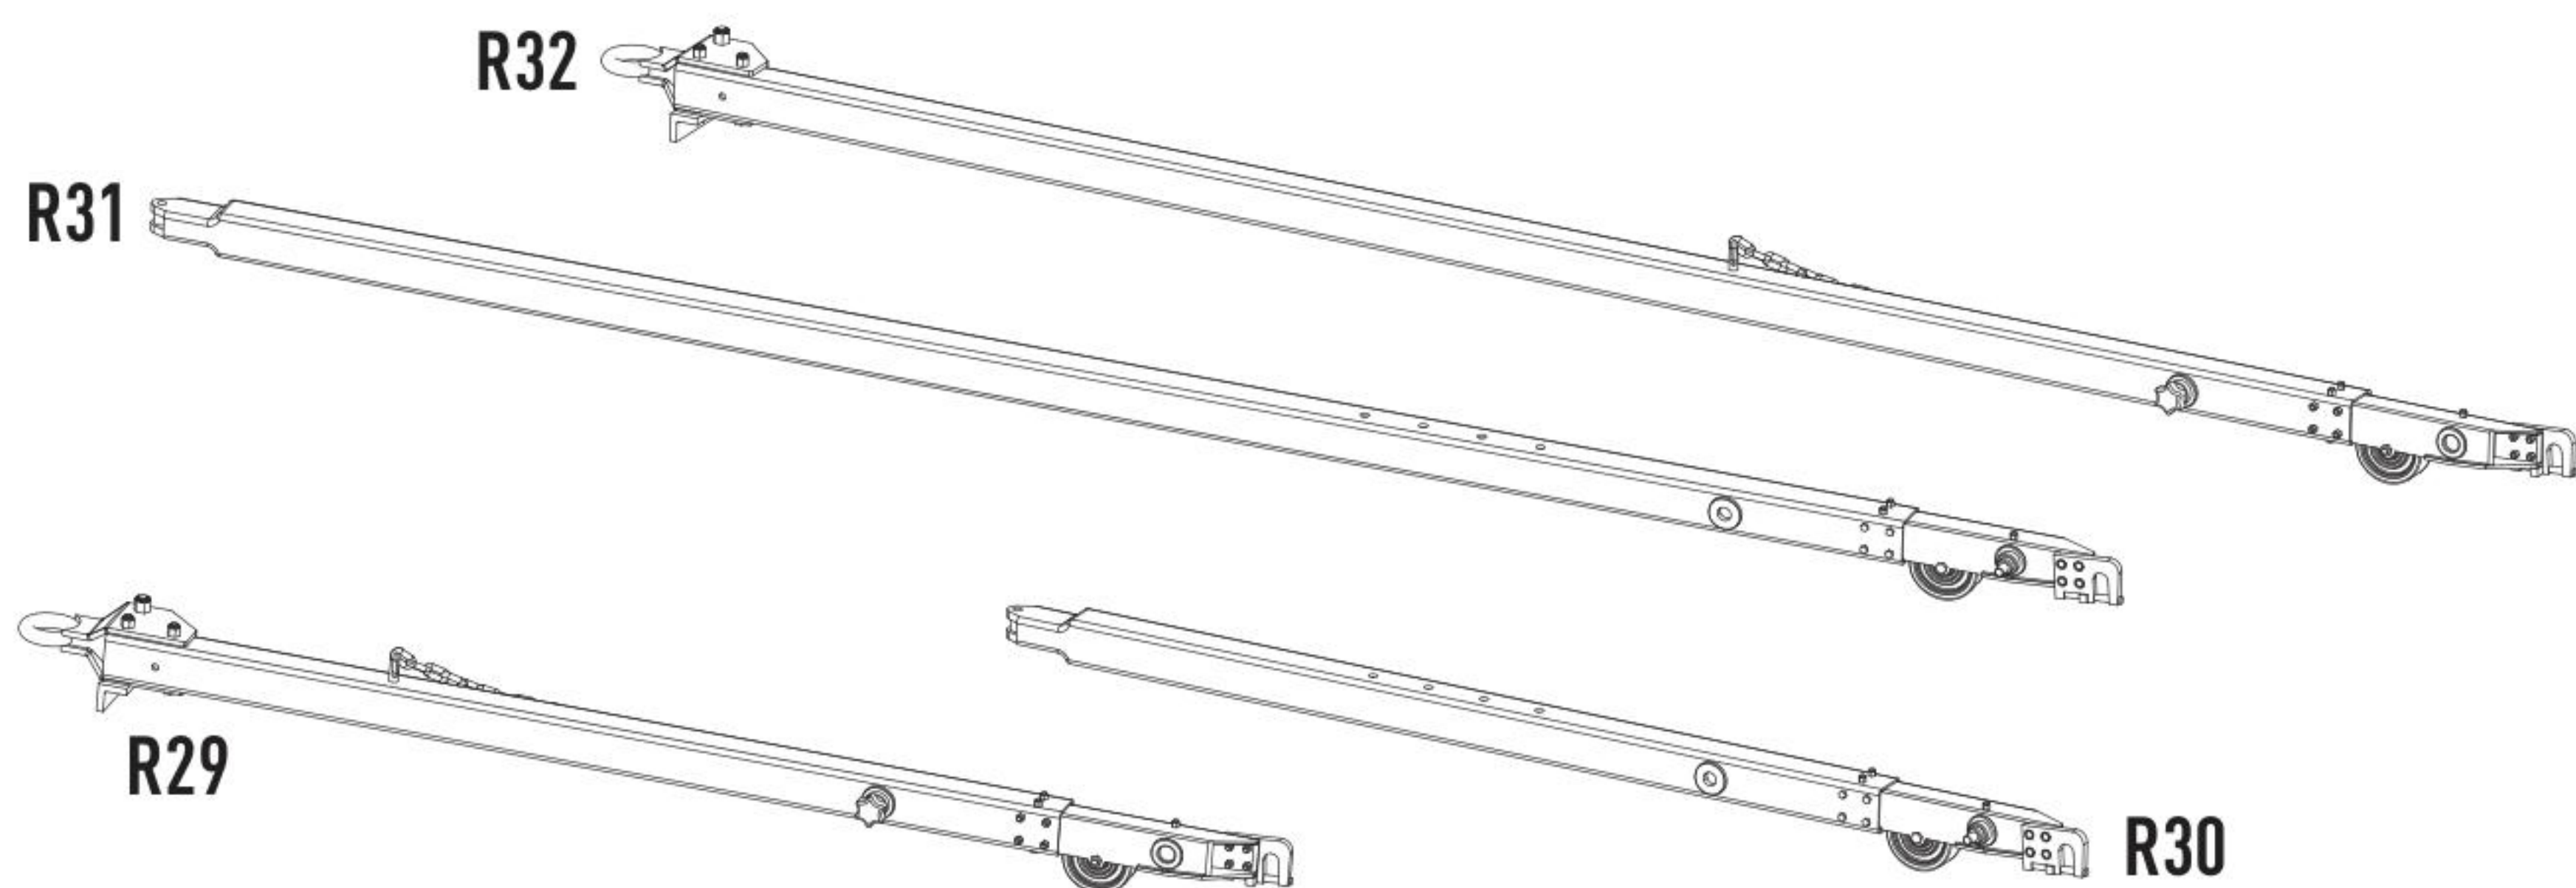


DETAILS AFTER REMOVAL
FROM SUPPORTS

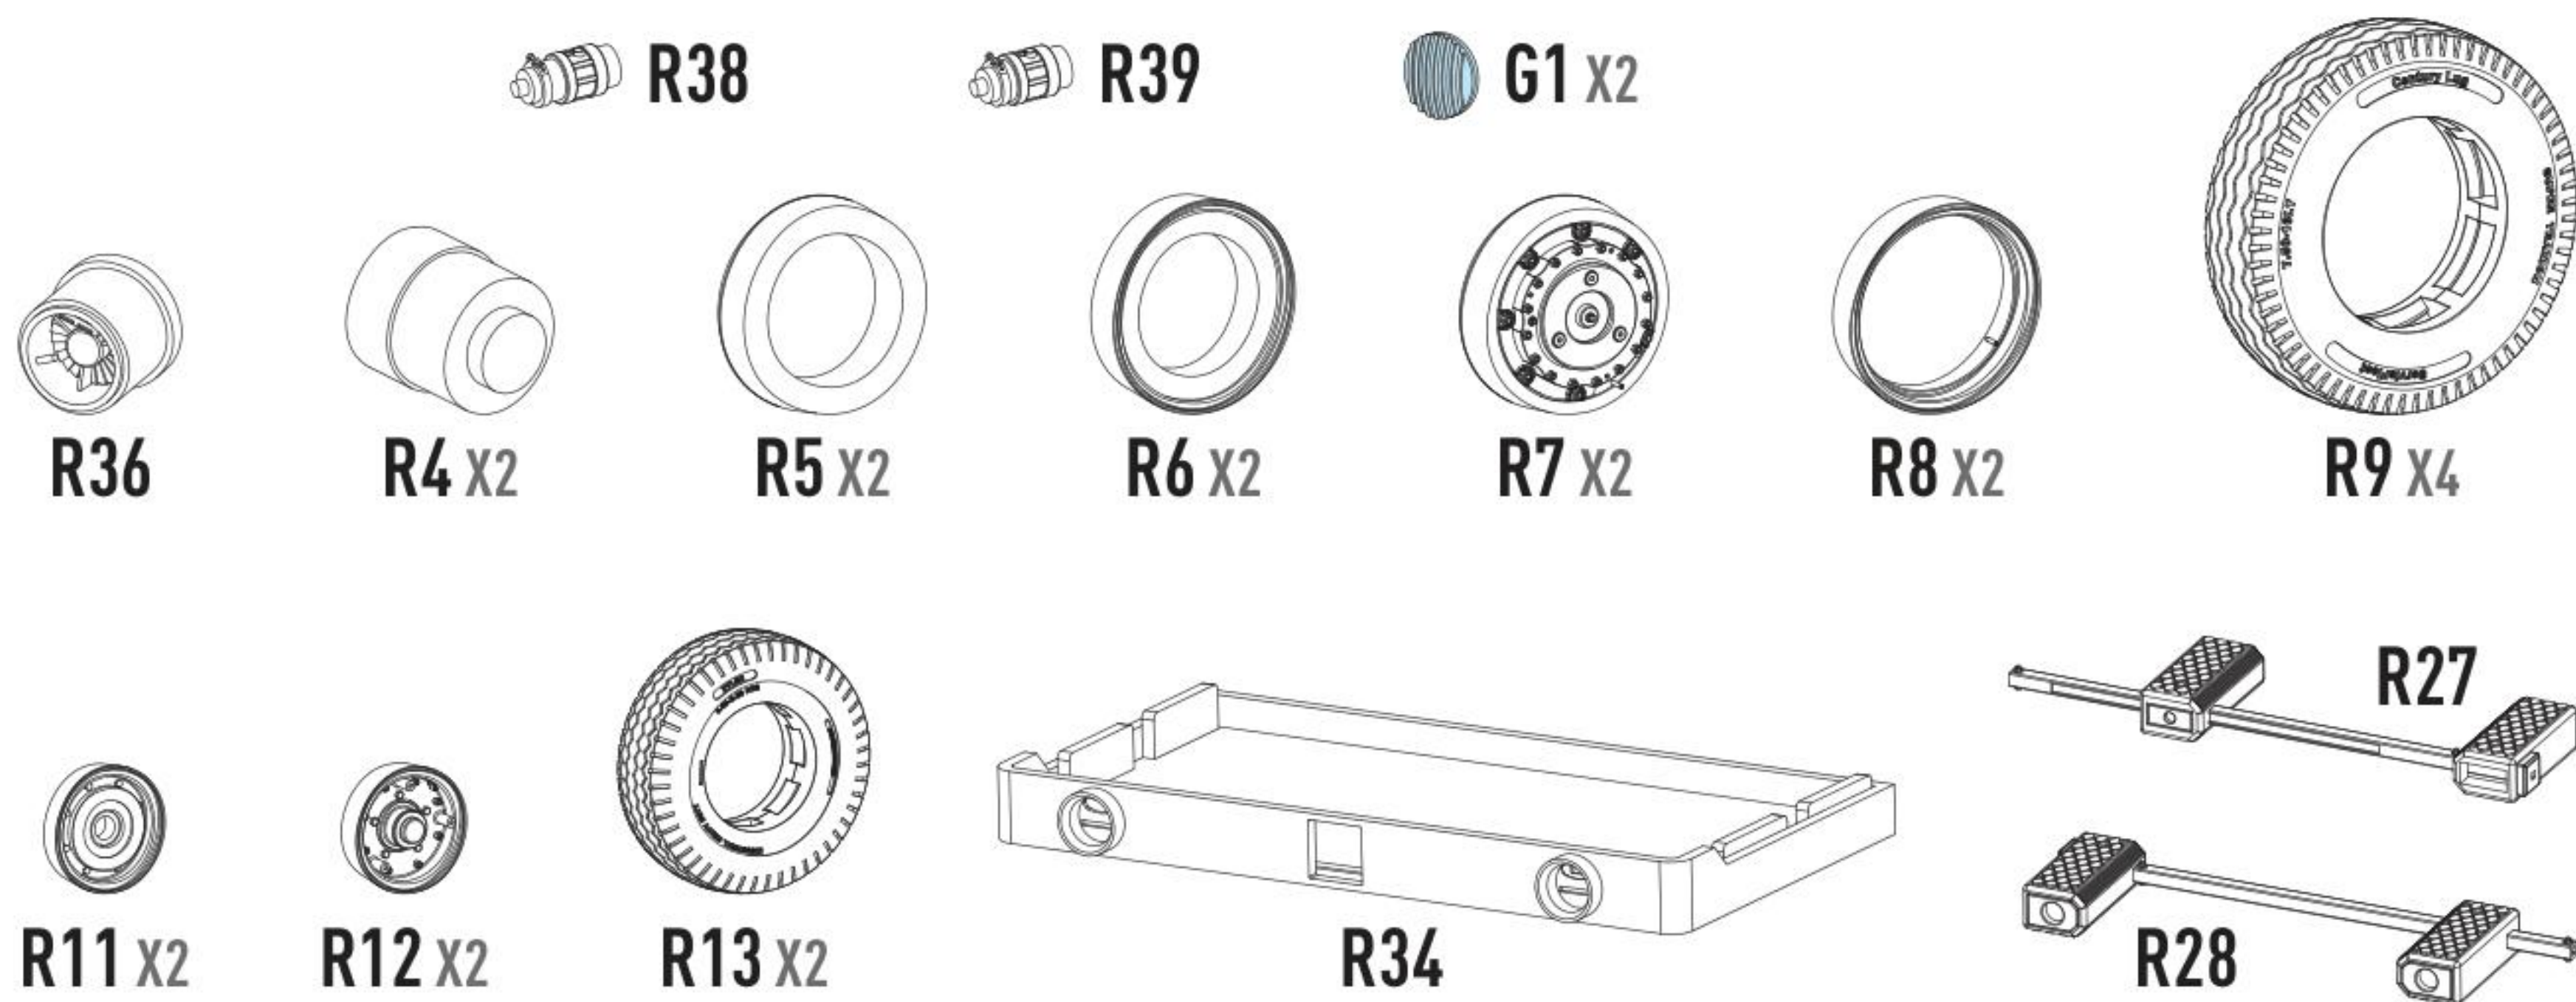


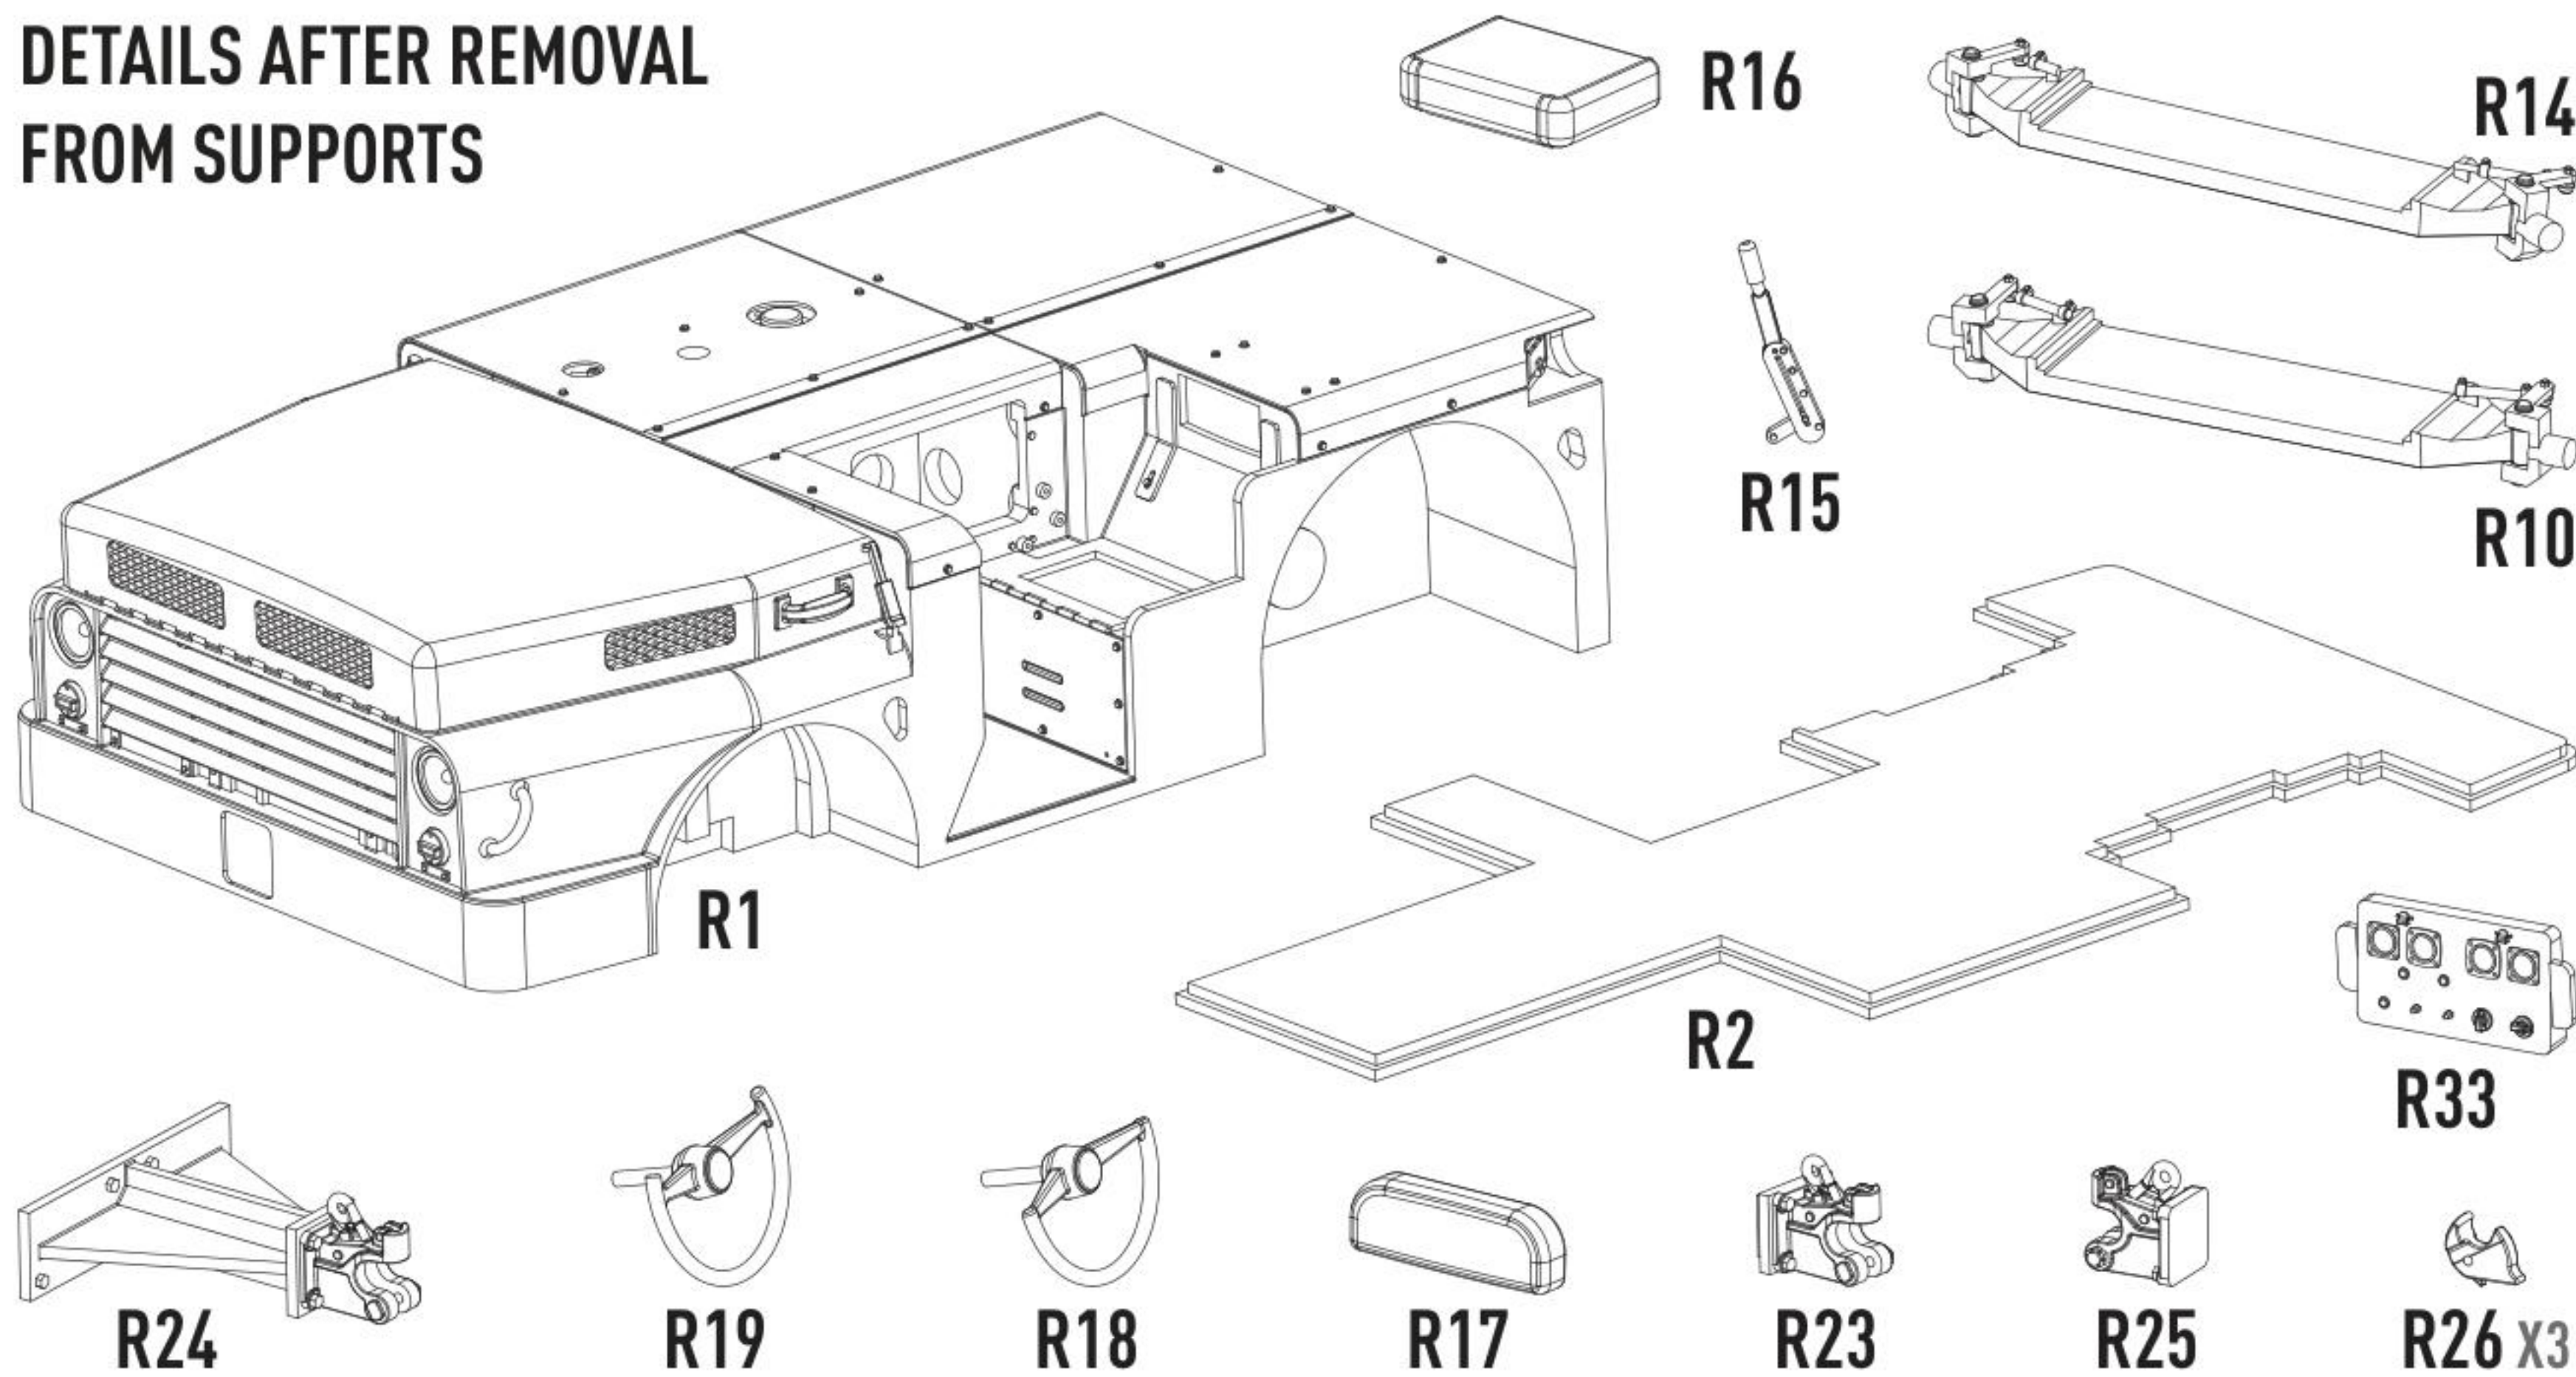

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

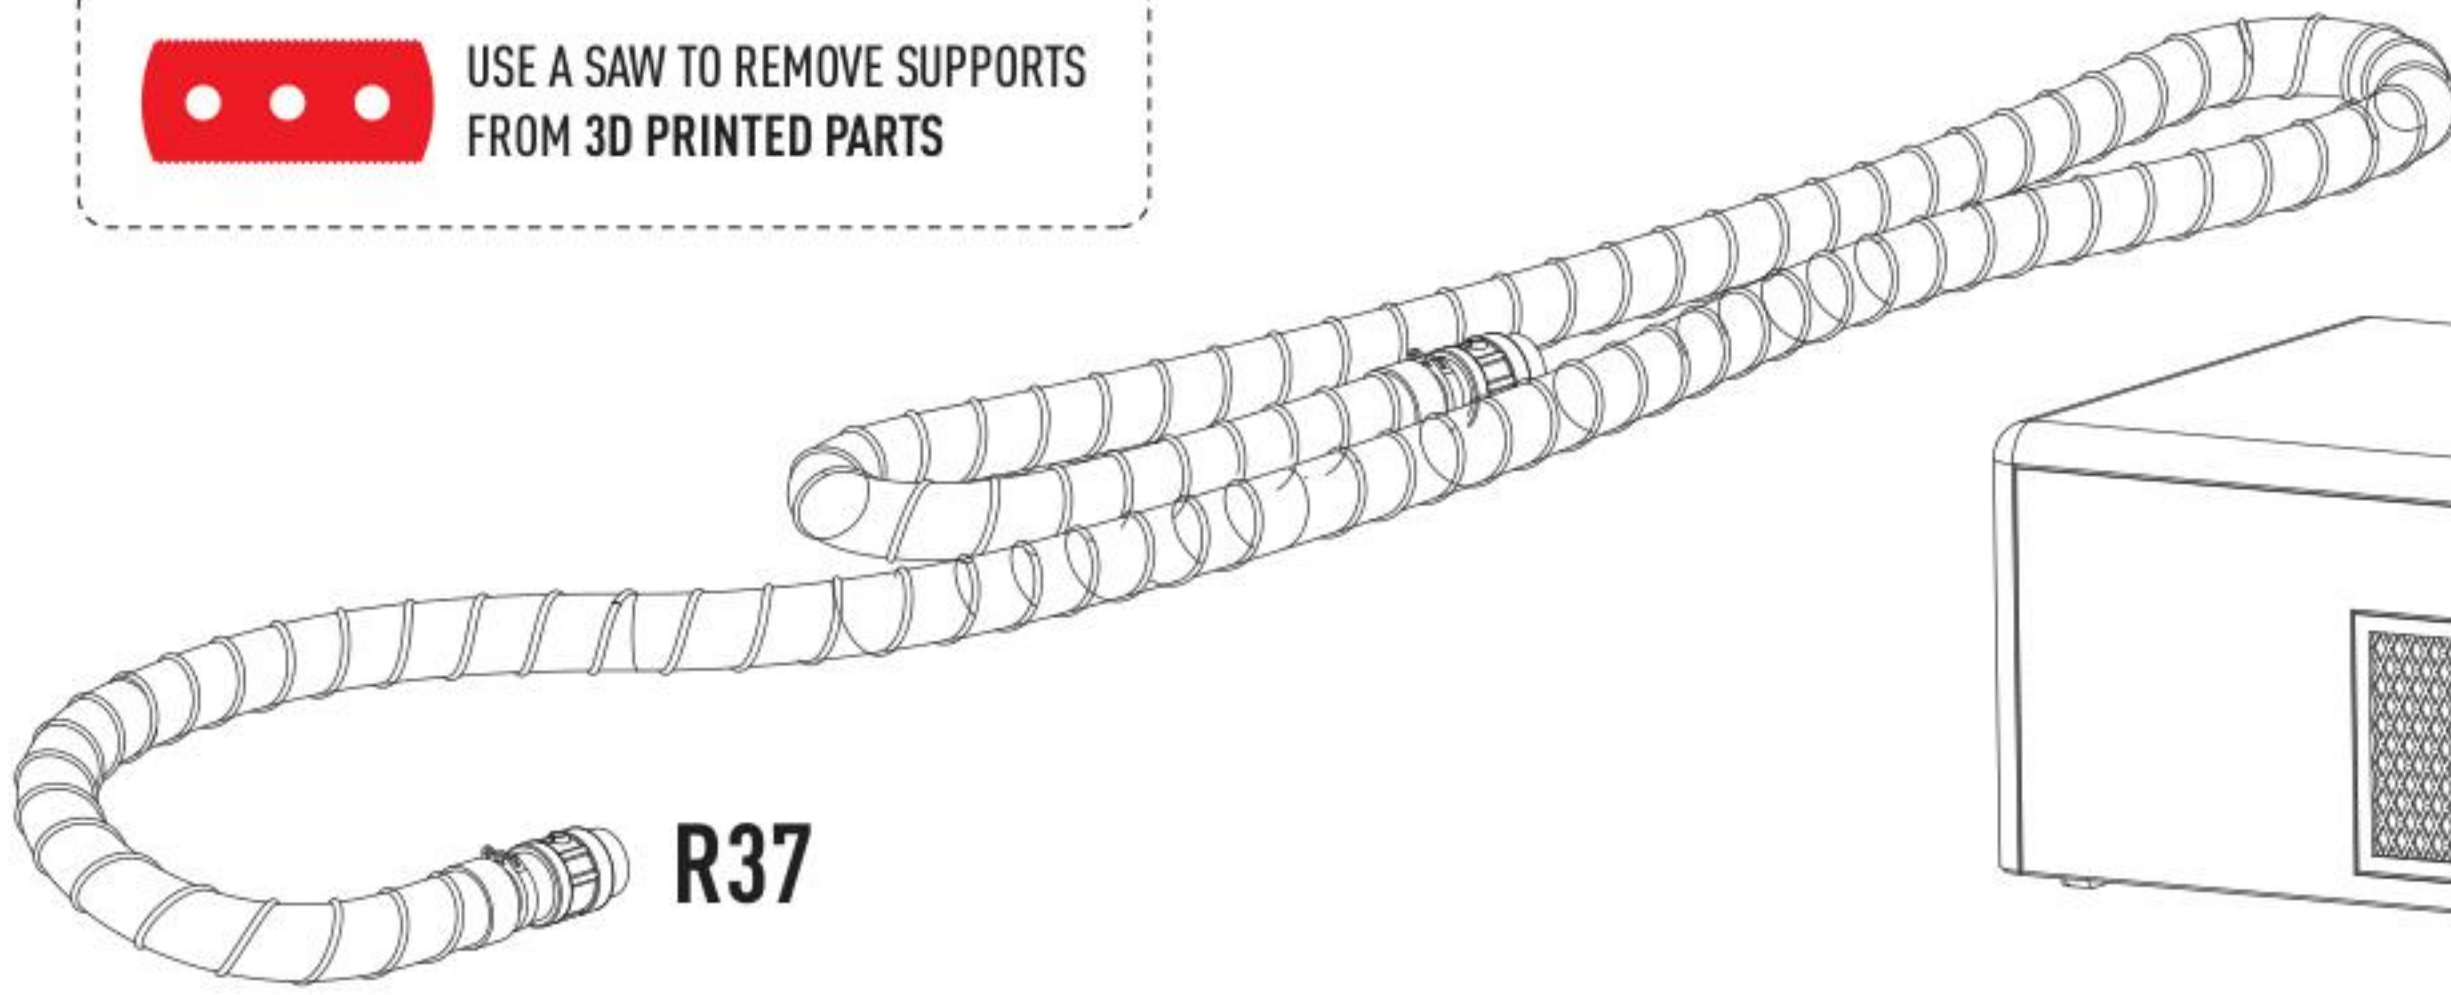


R37

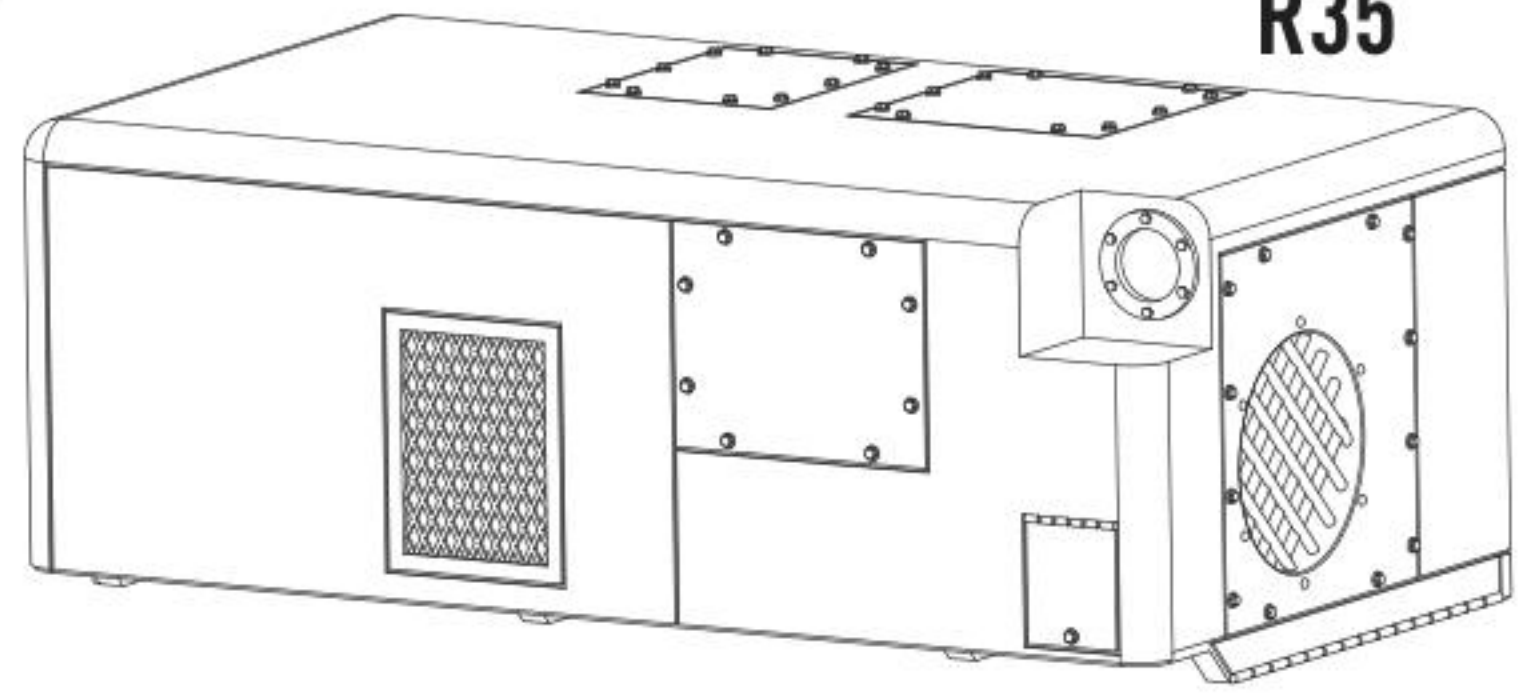

R35

1

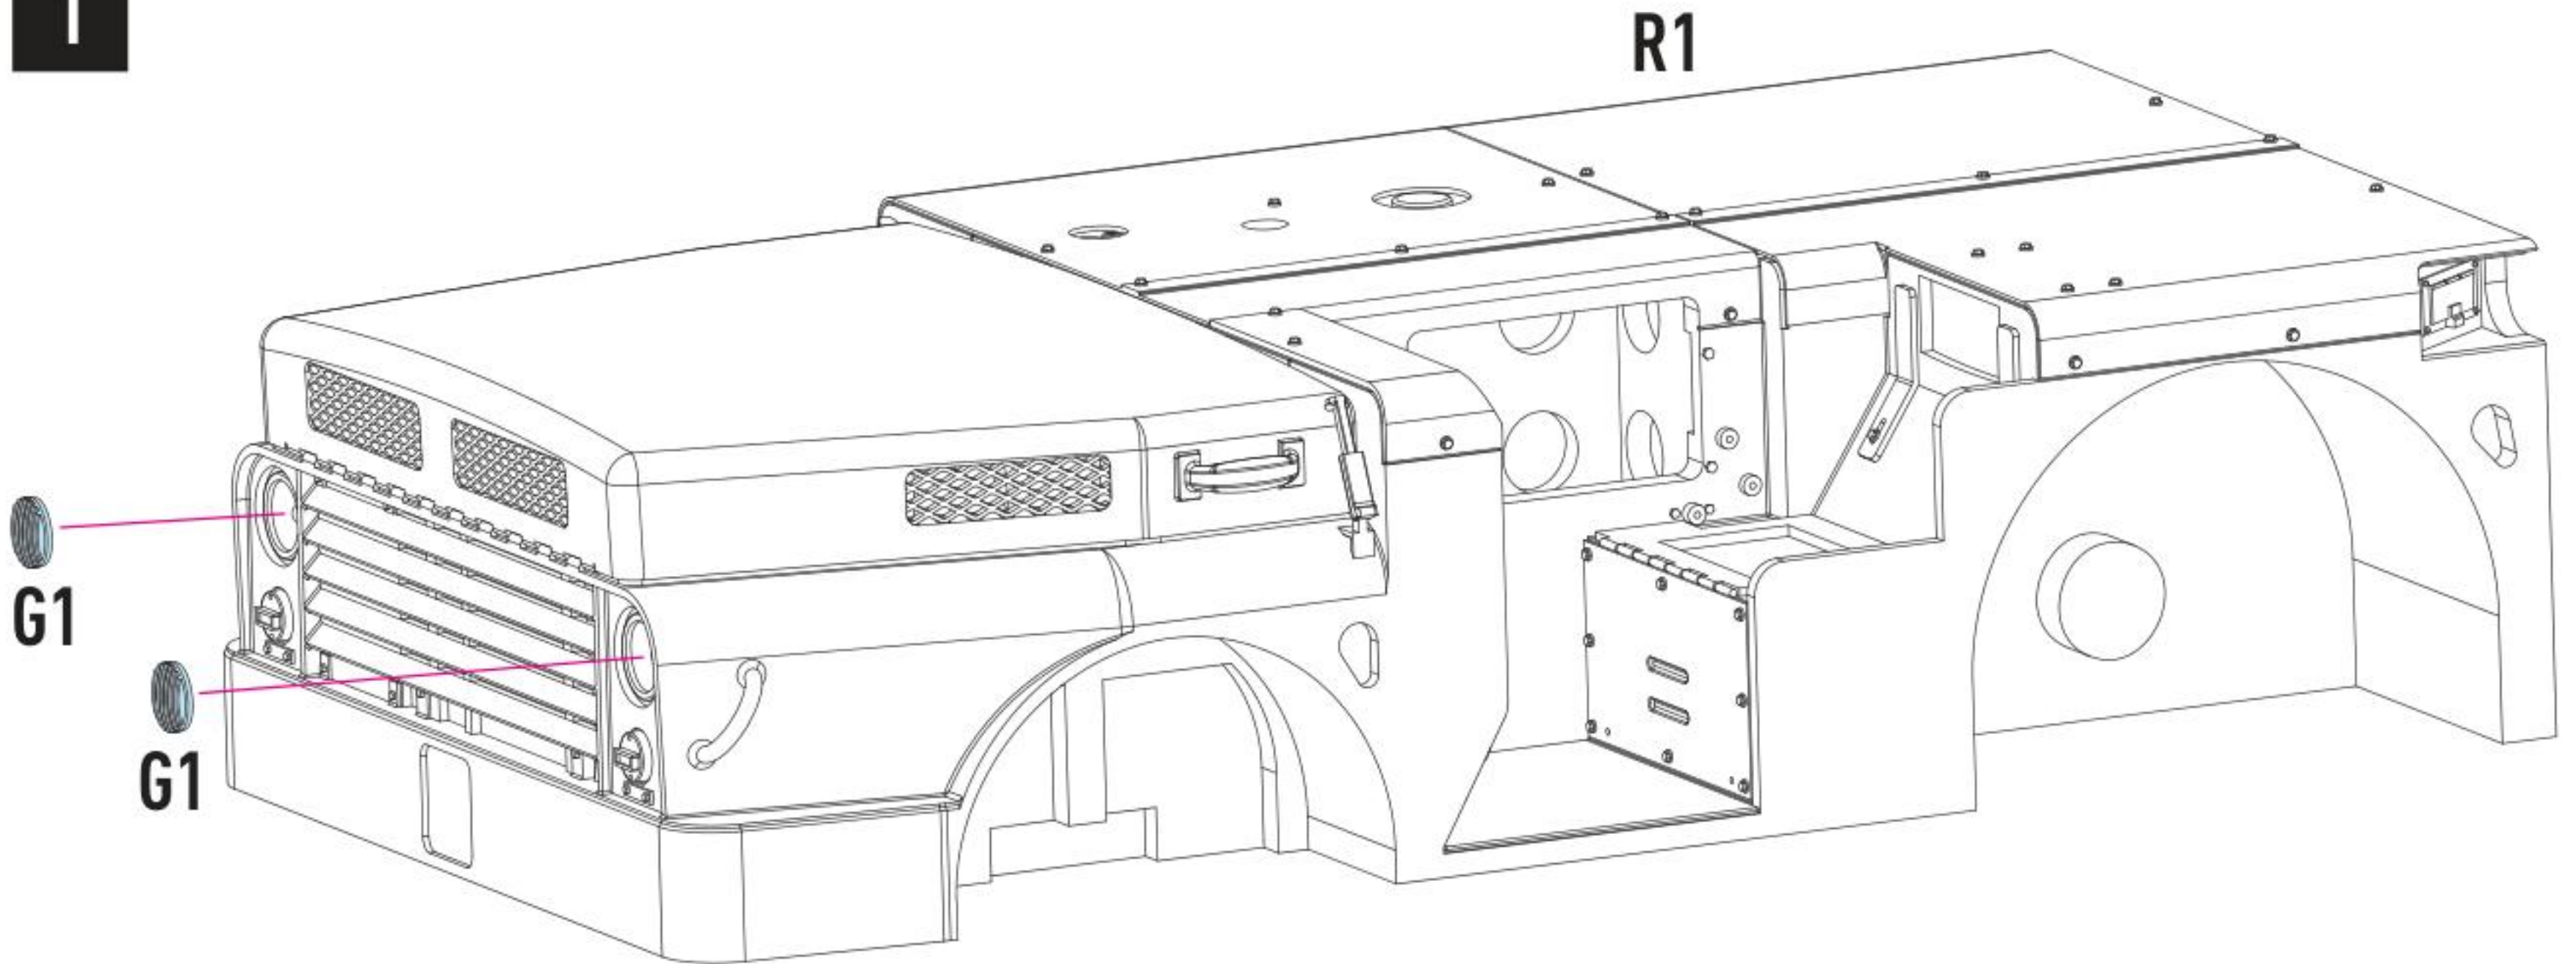


R1

G1

G1

BEFORE ASSEMBLY, COVER TRANSPARENT PARTS WITH GLOSSY VARNISH


2

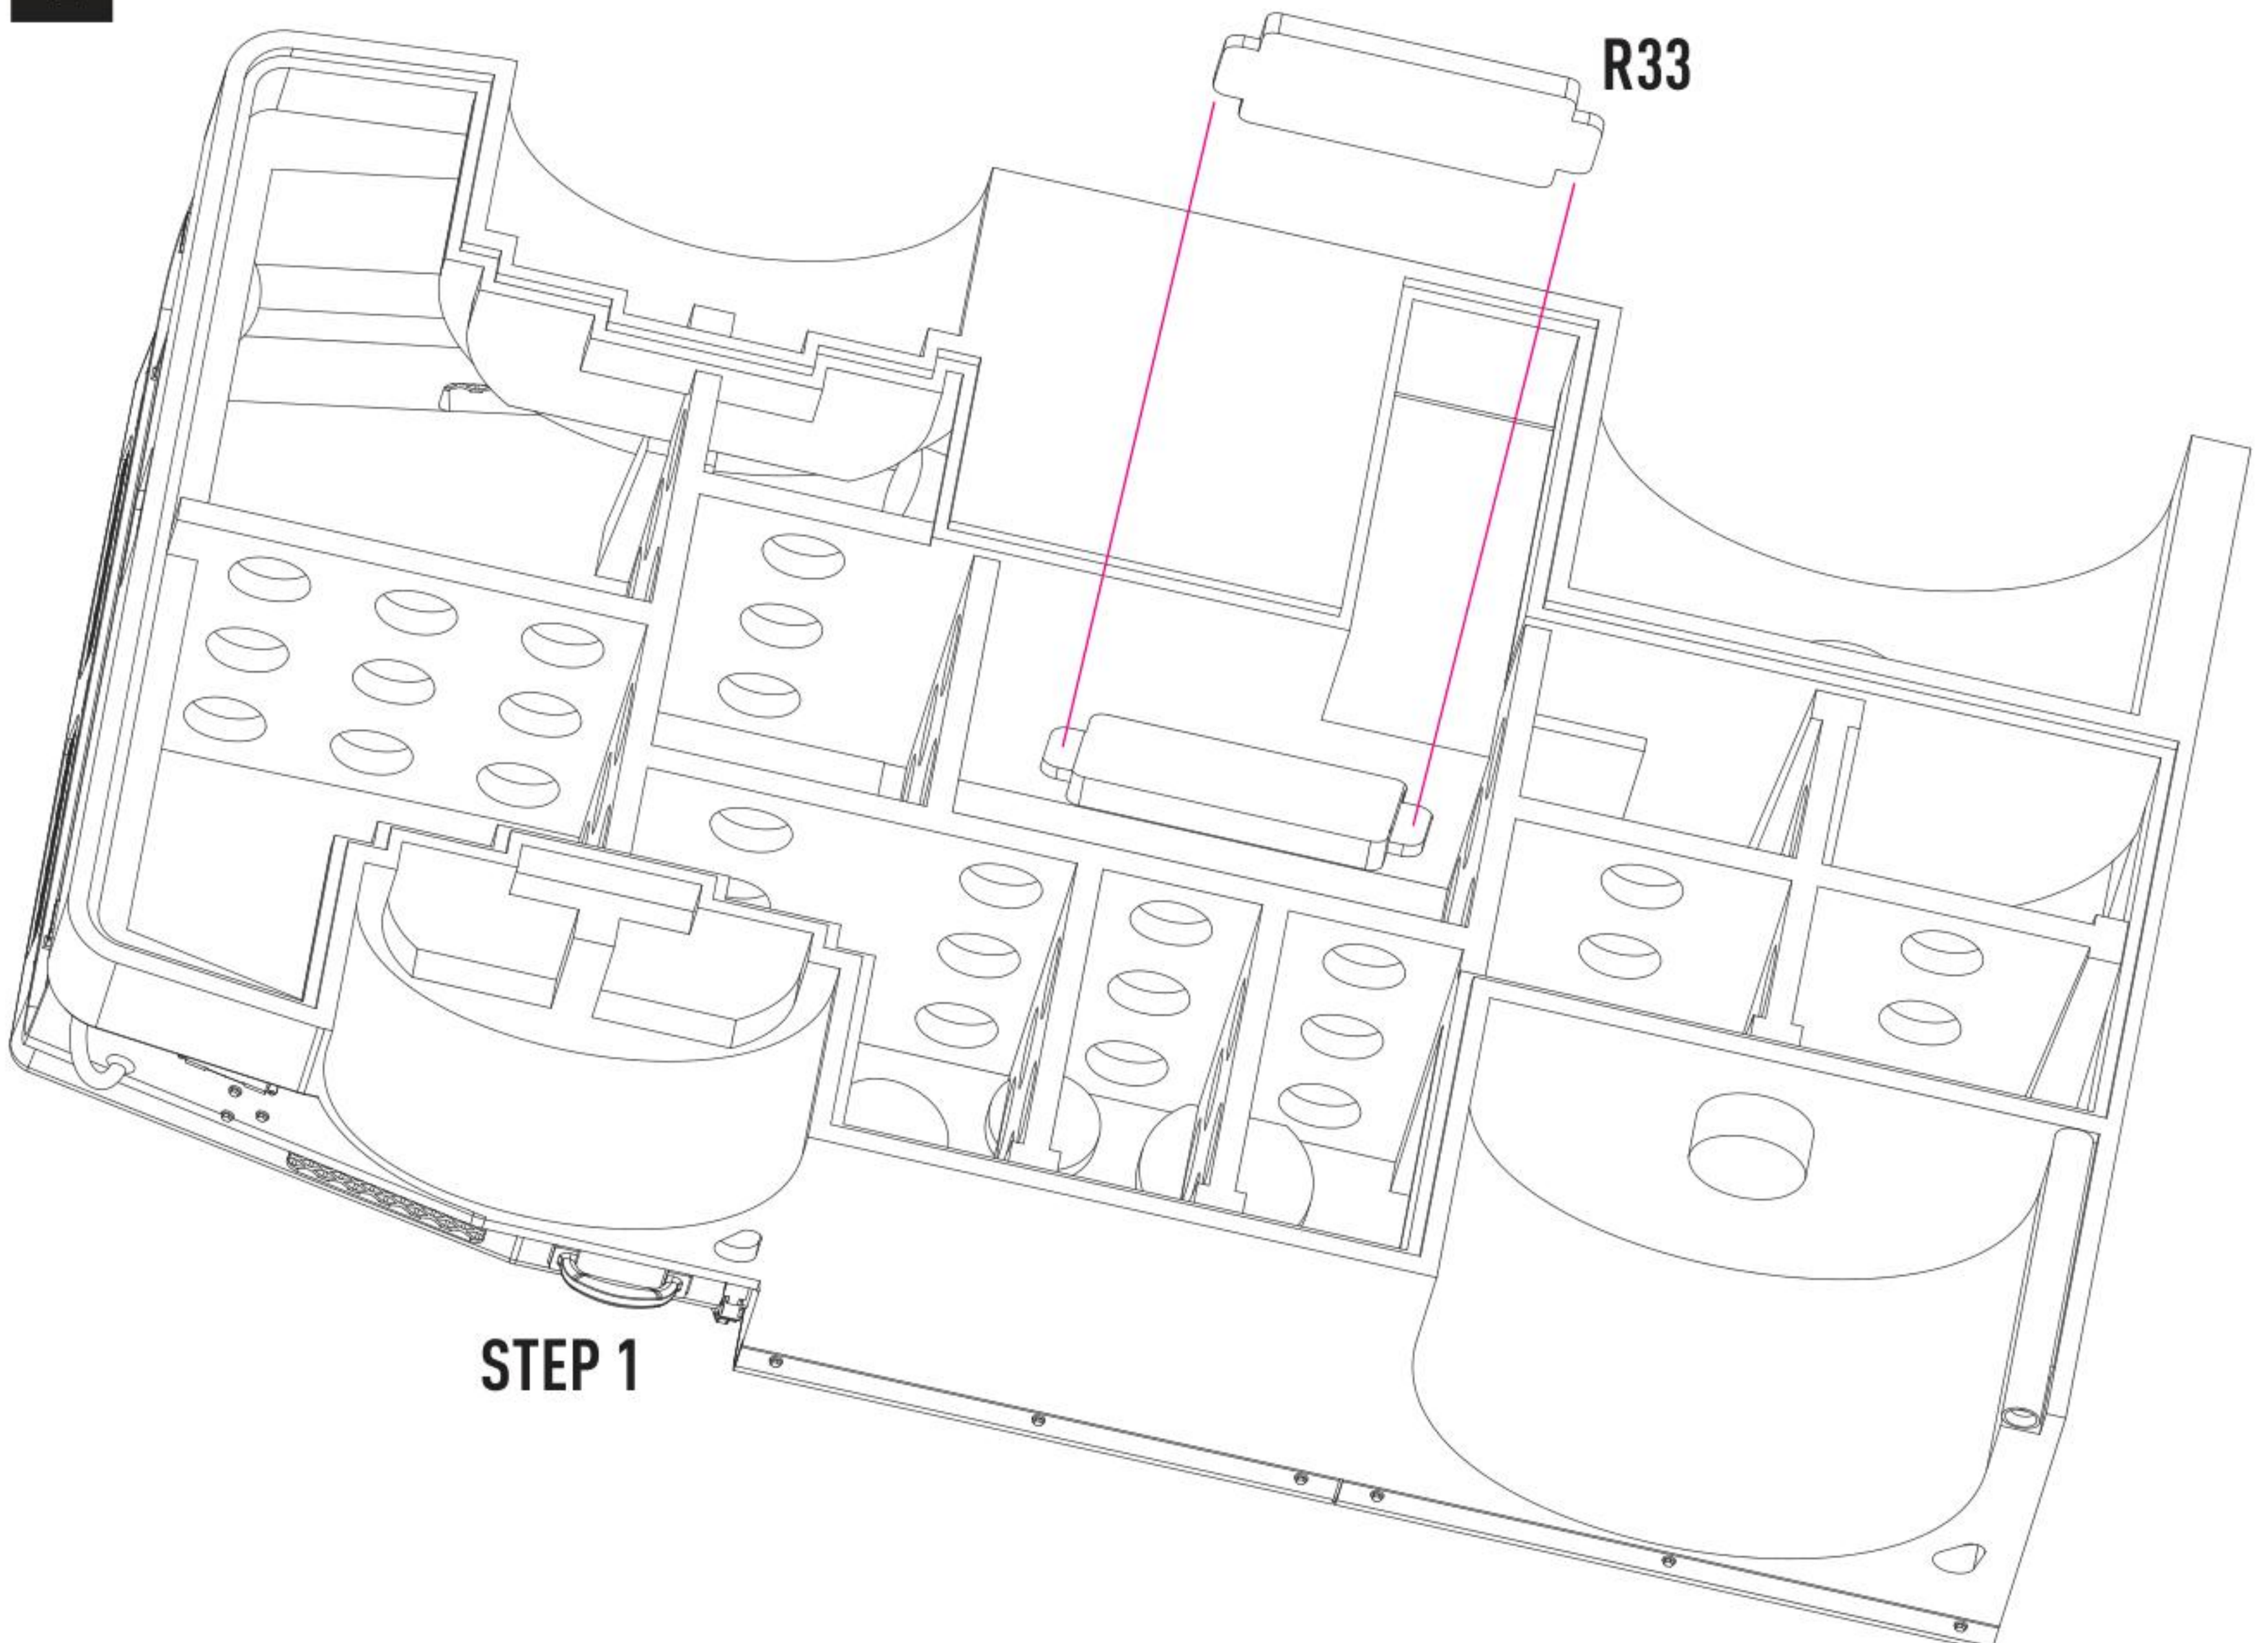


R33

STEP 1


3

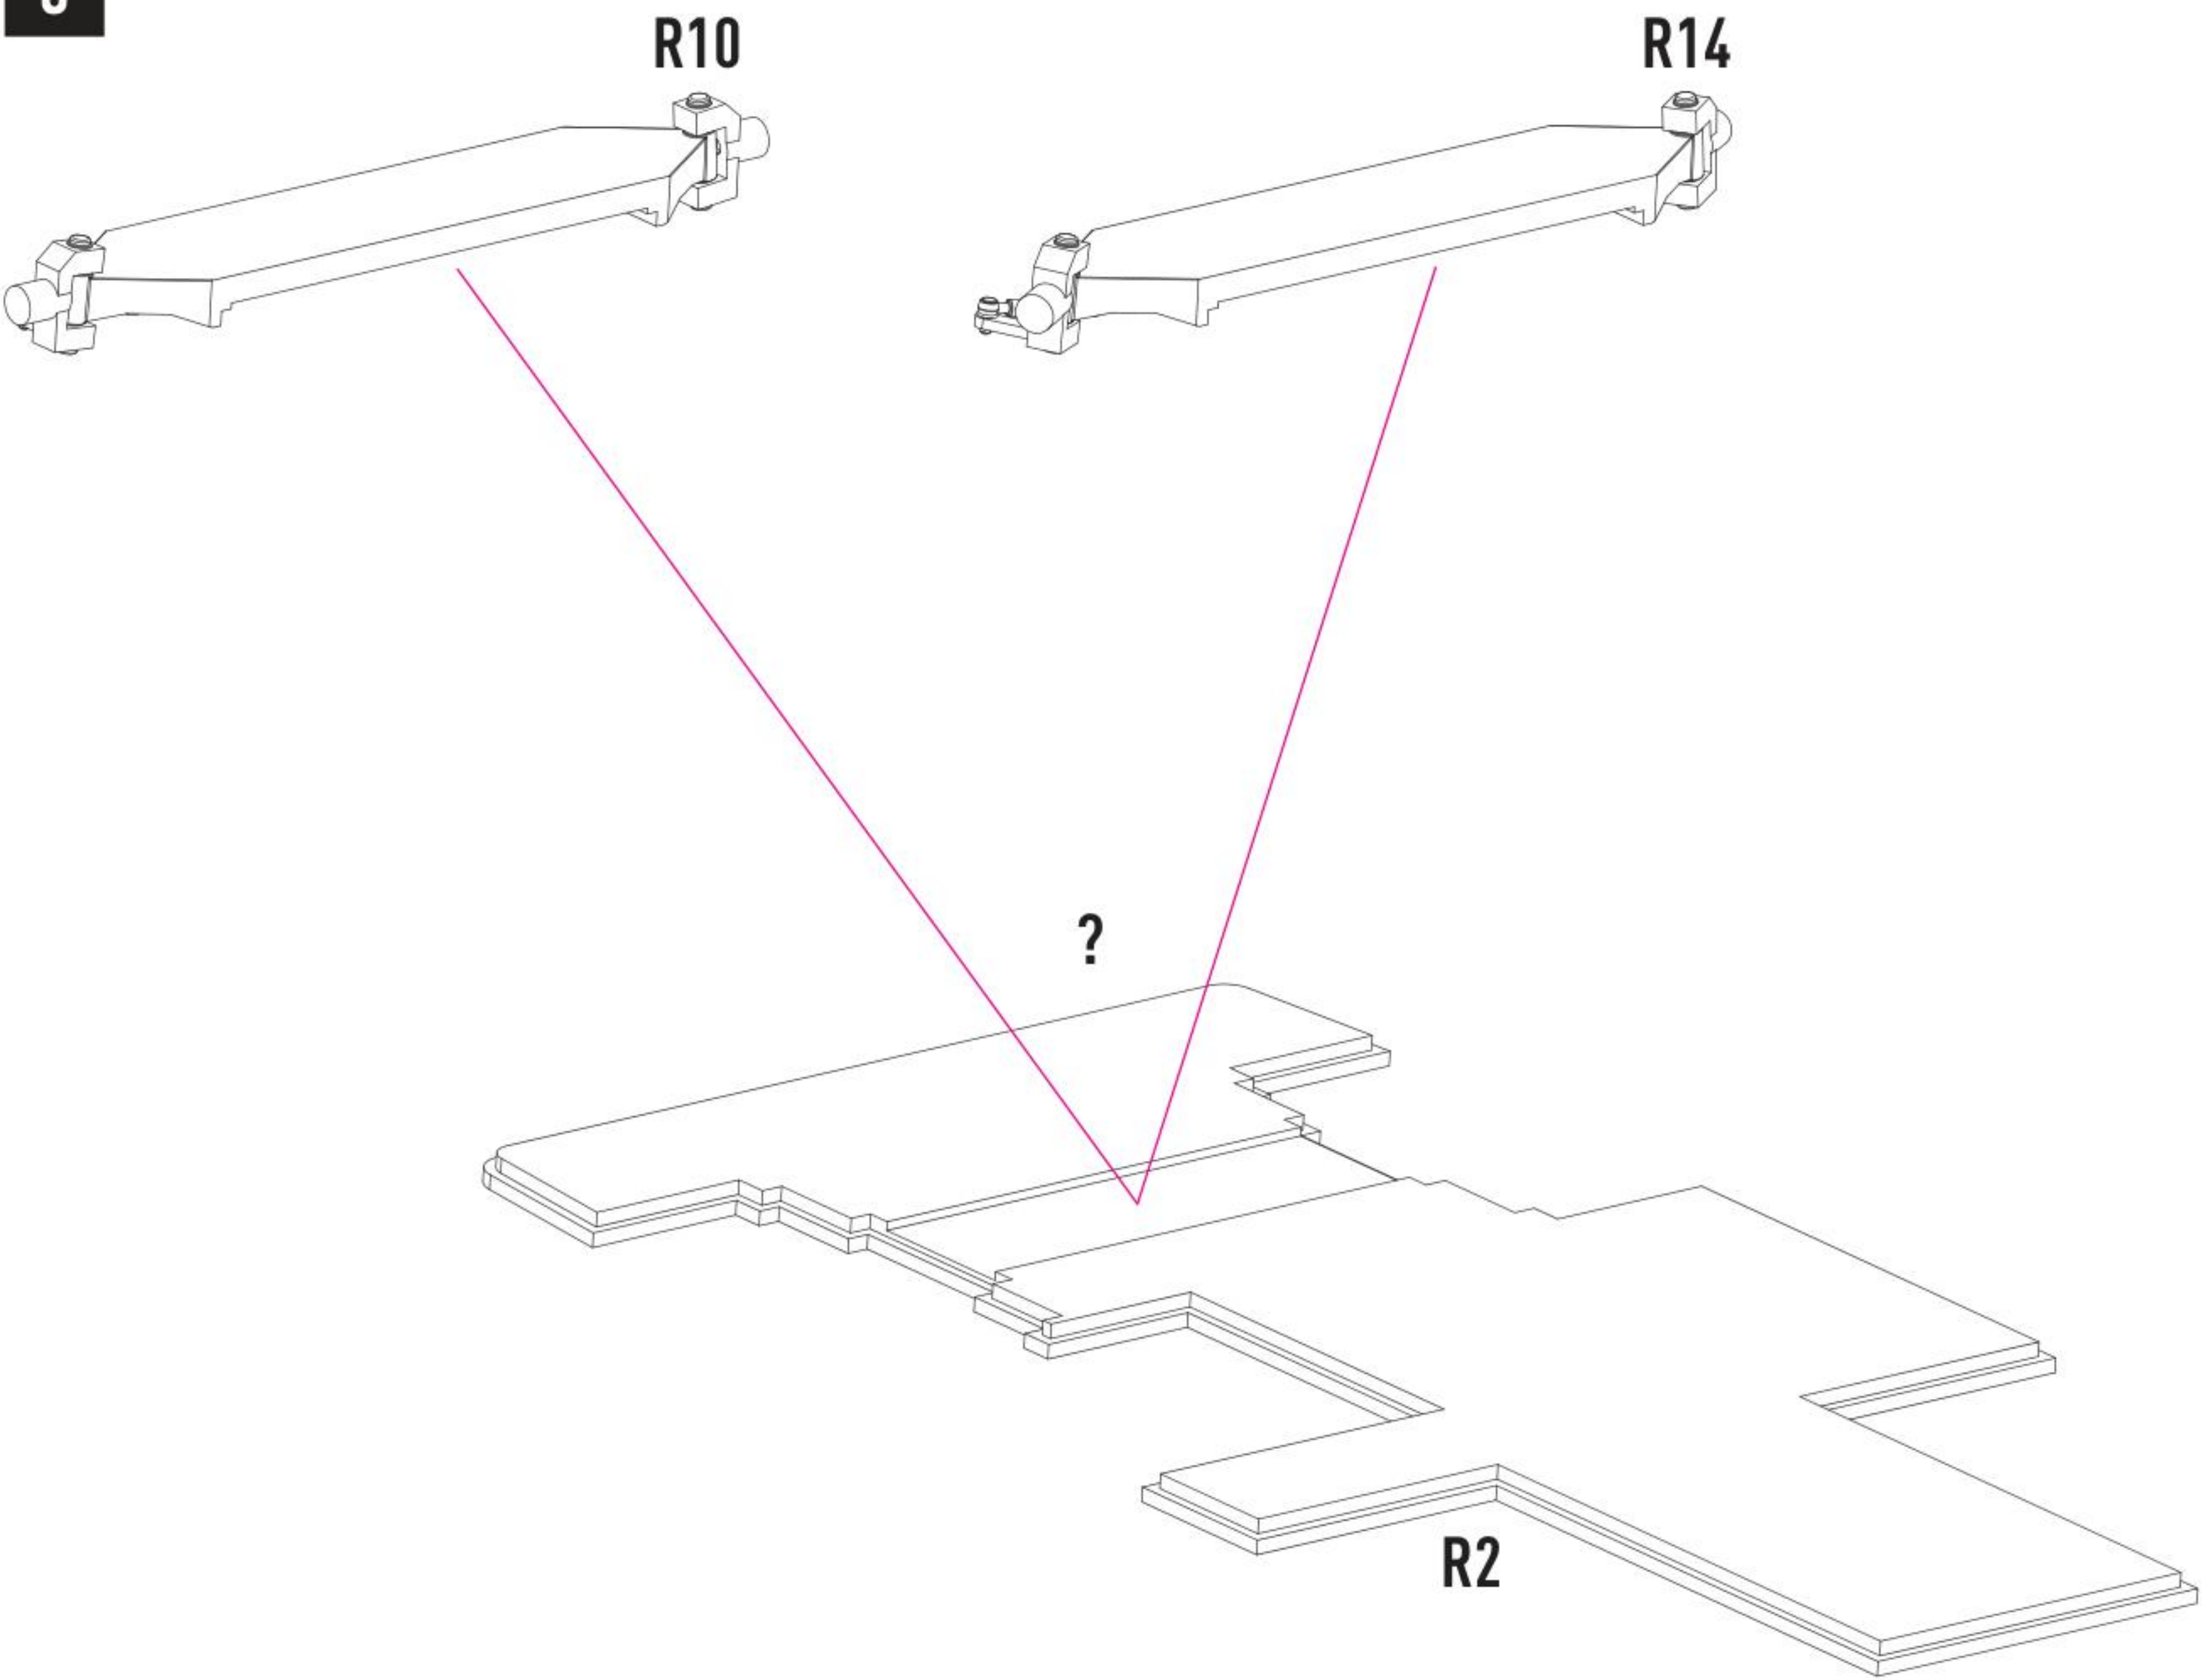


4

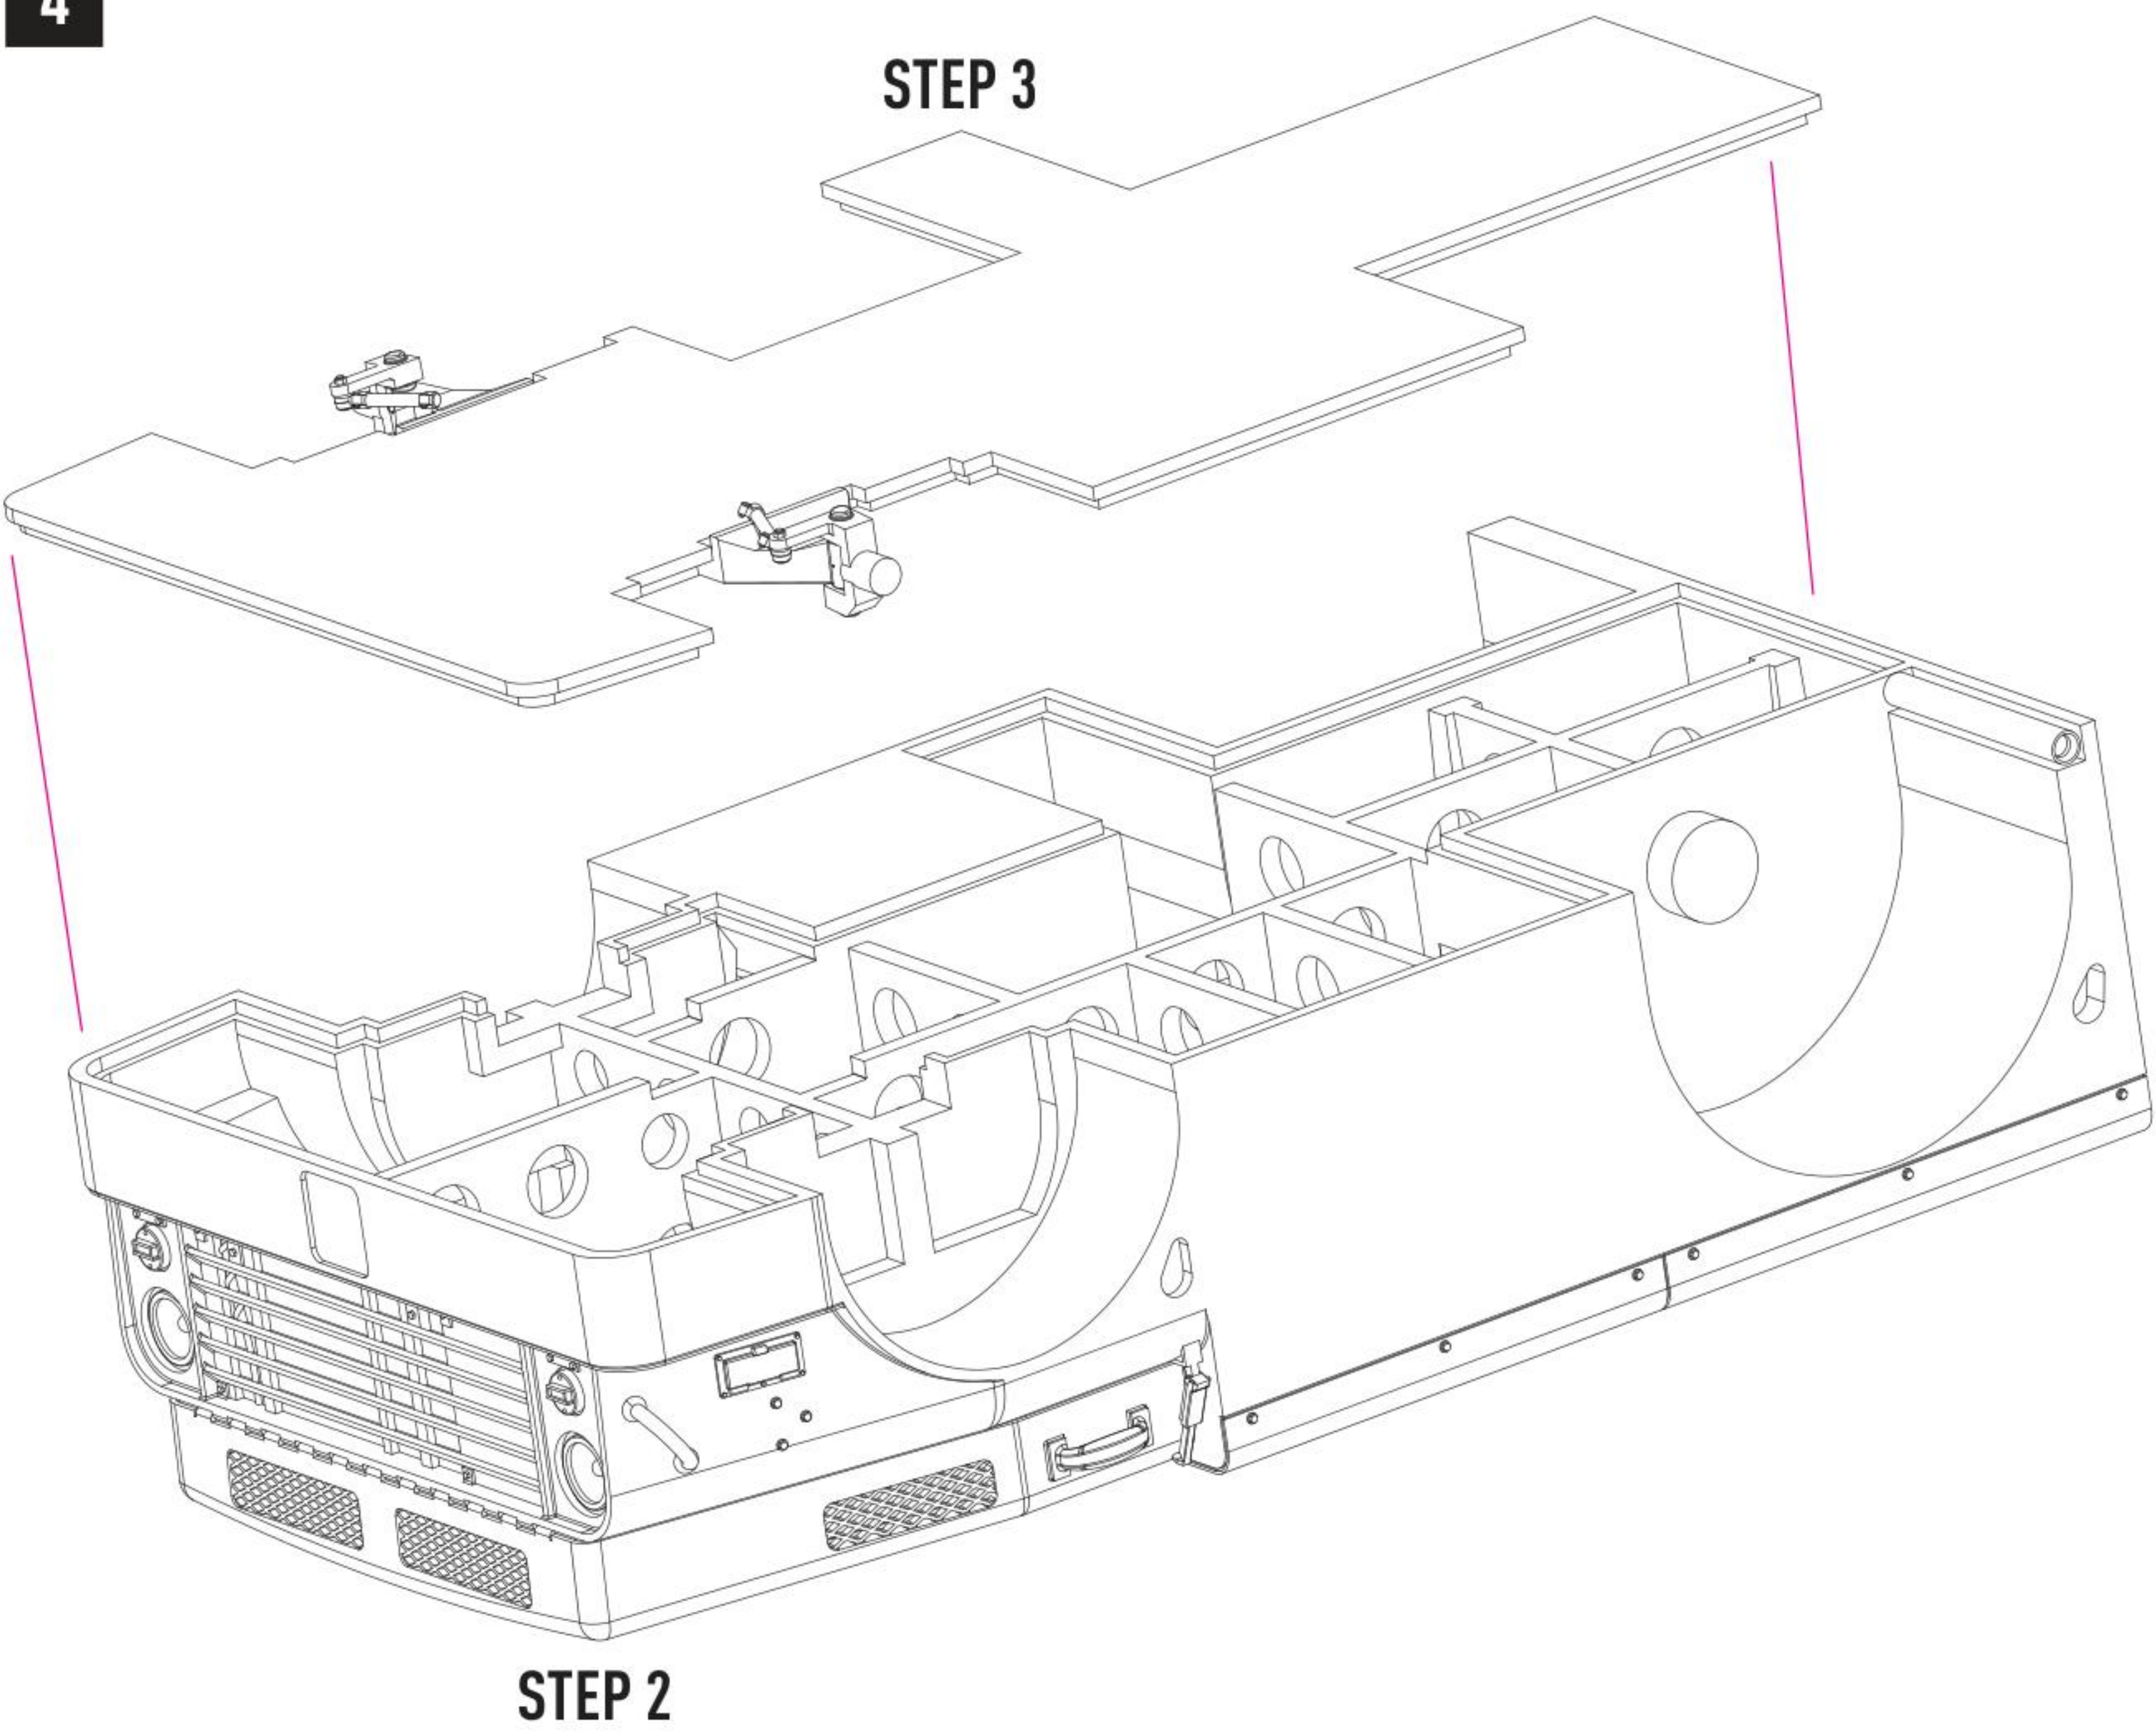


STEP 4

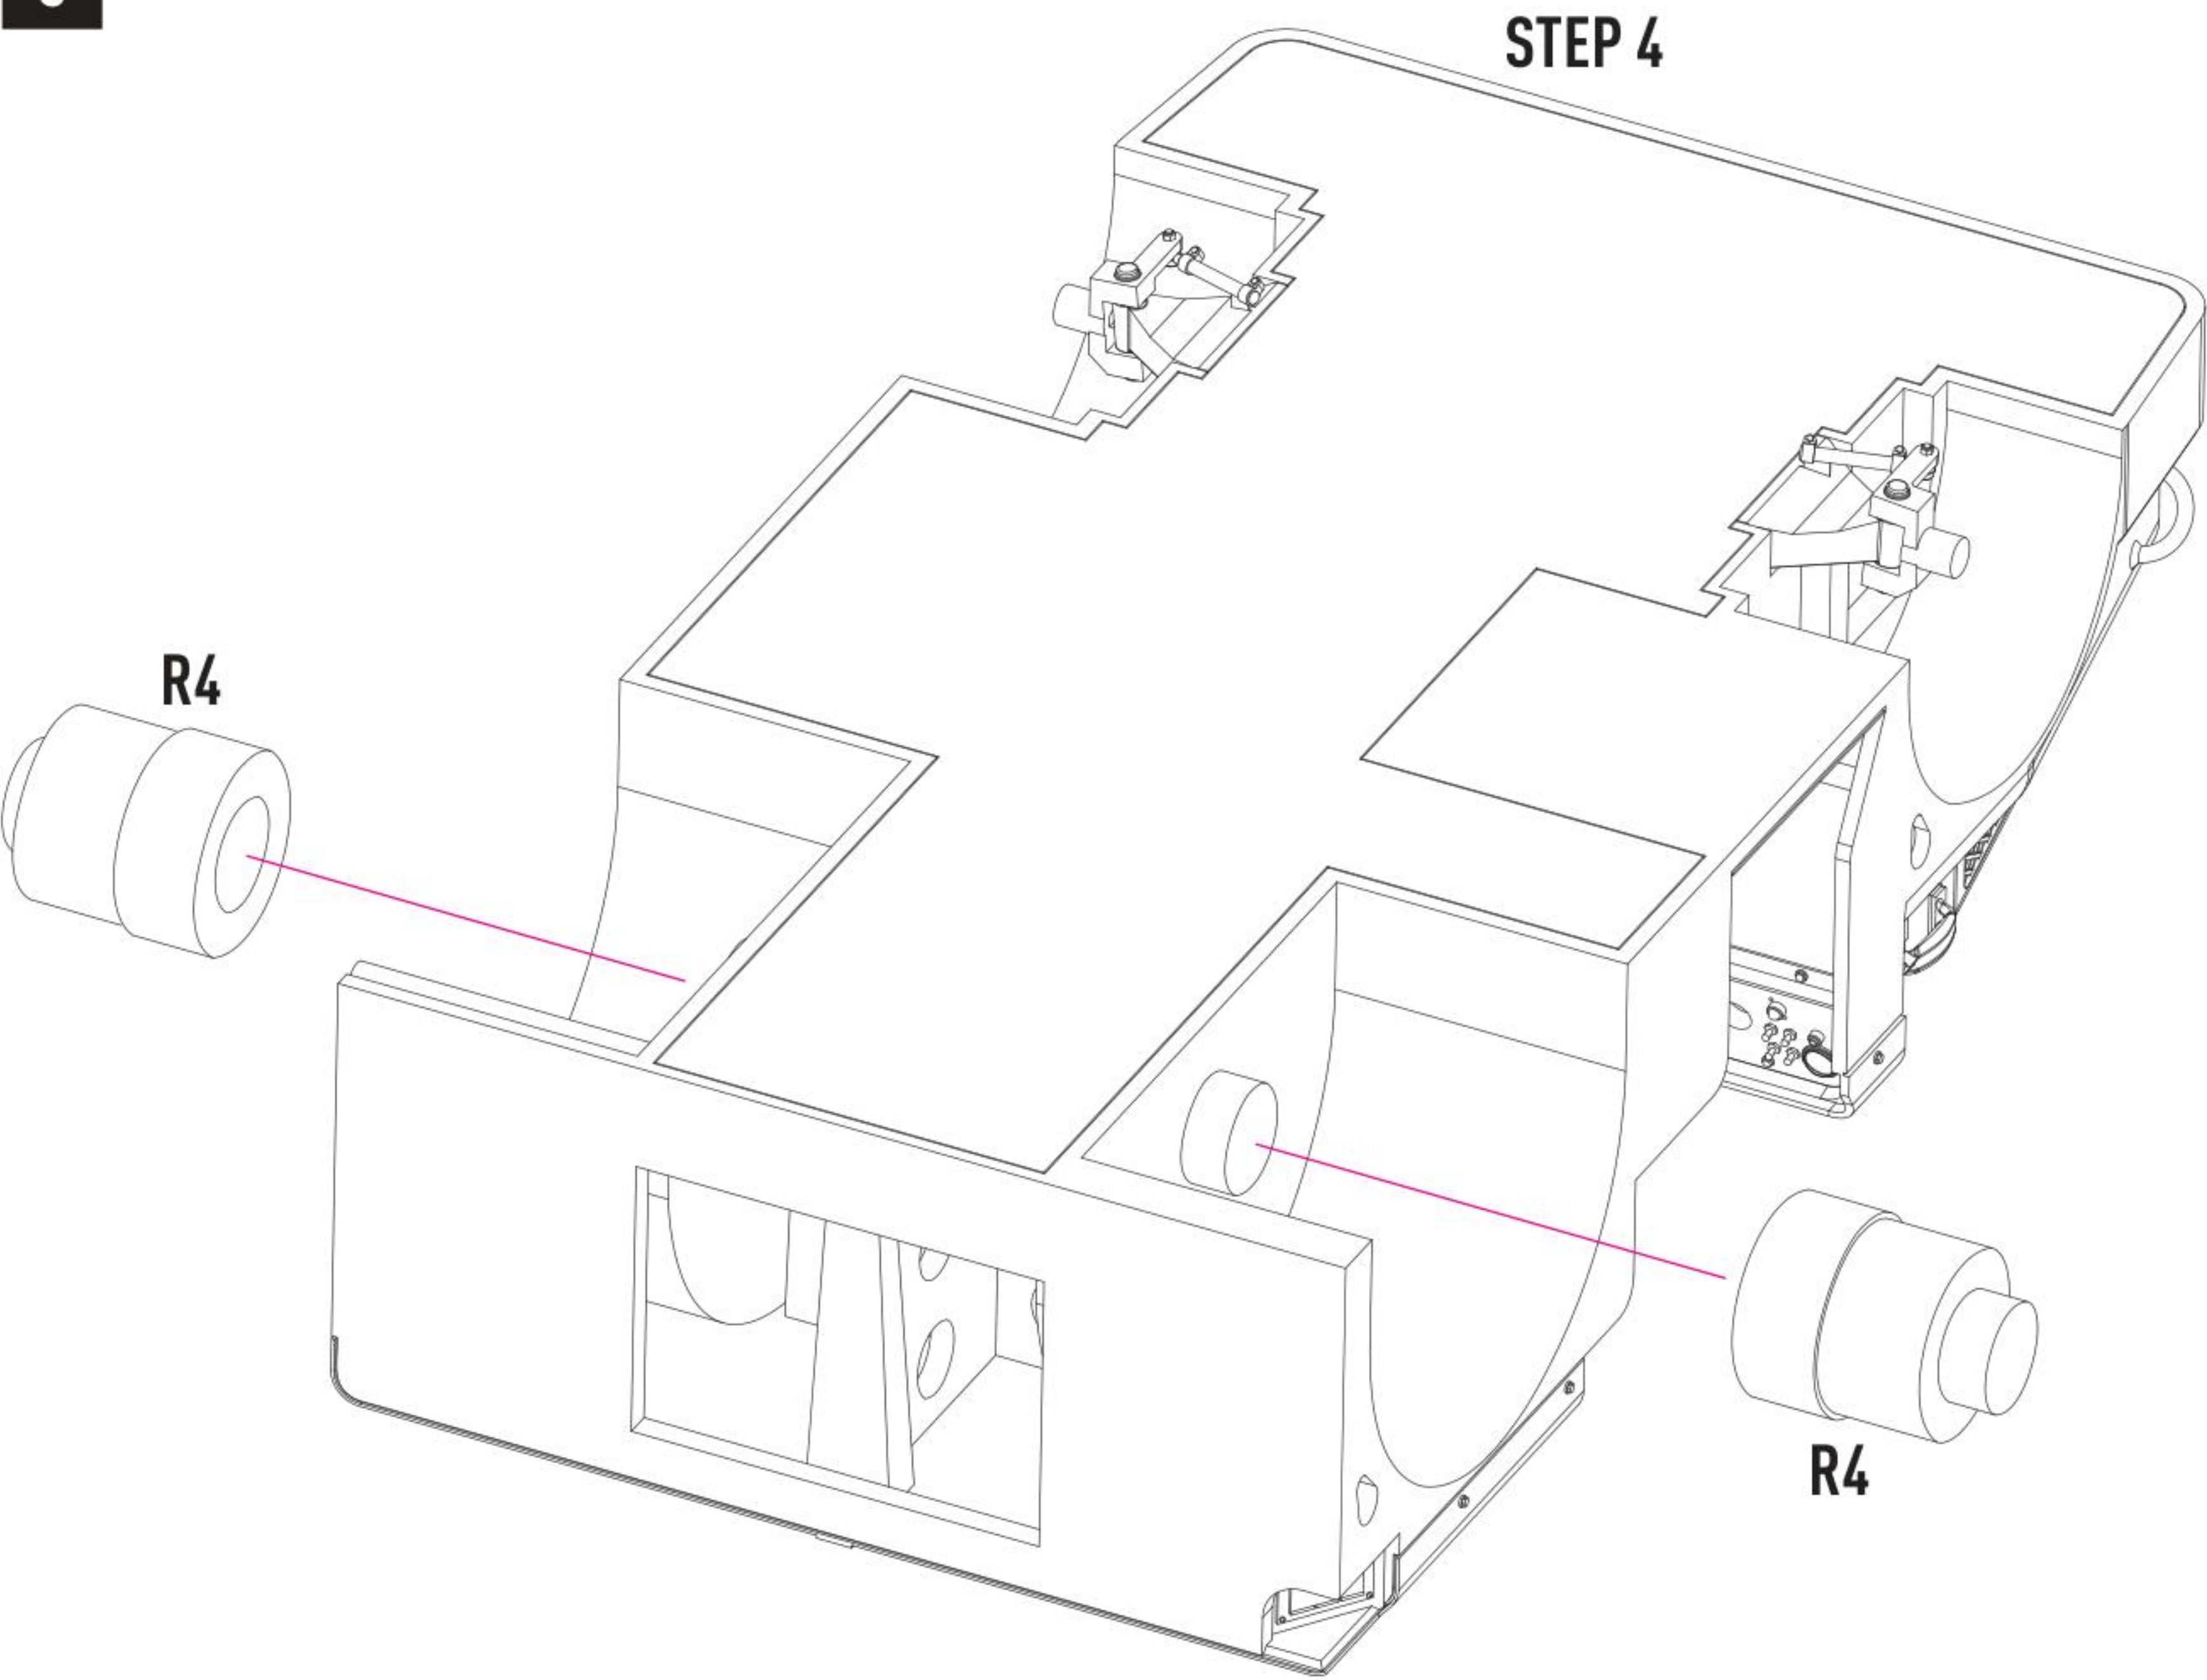


6 X2

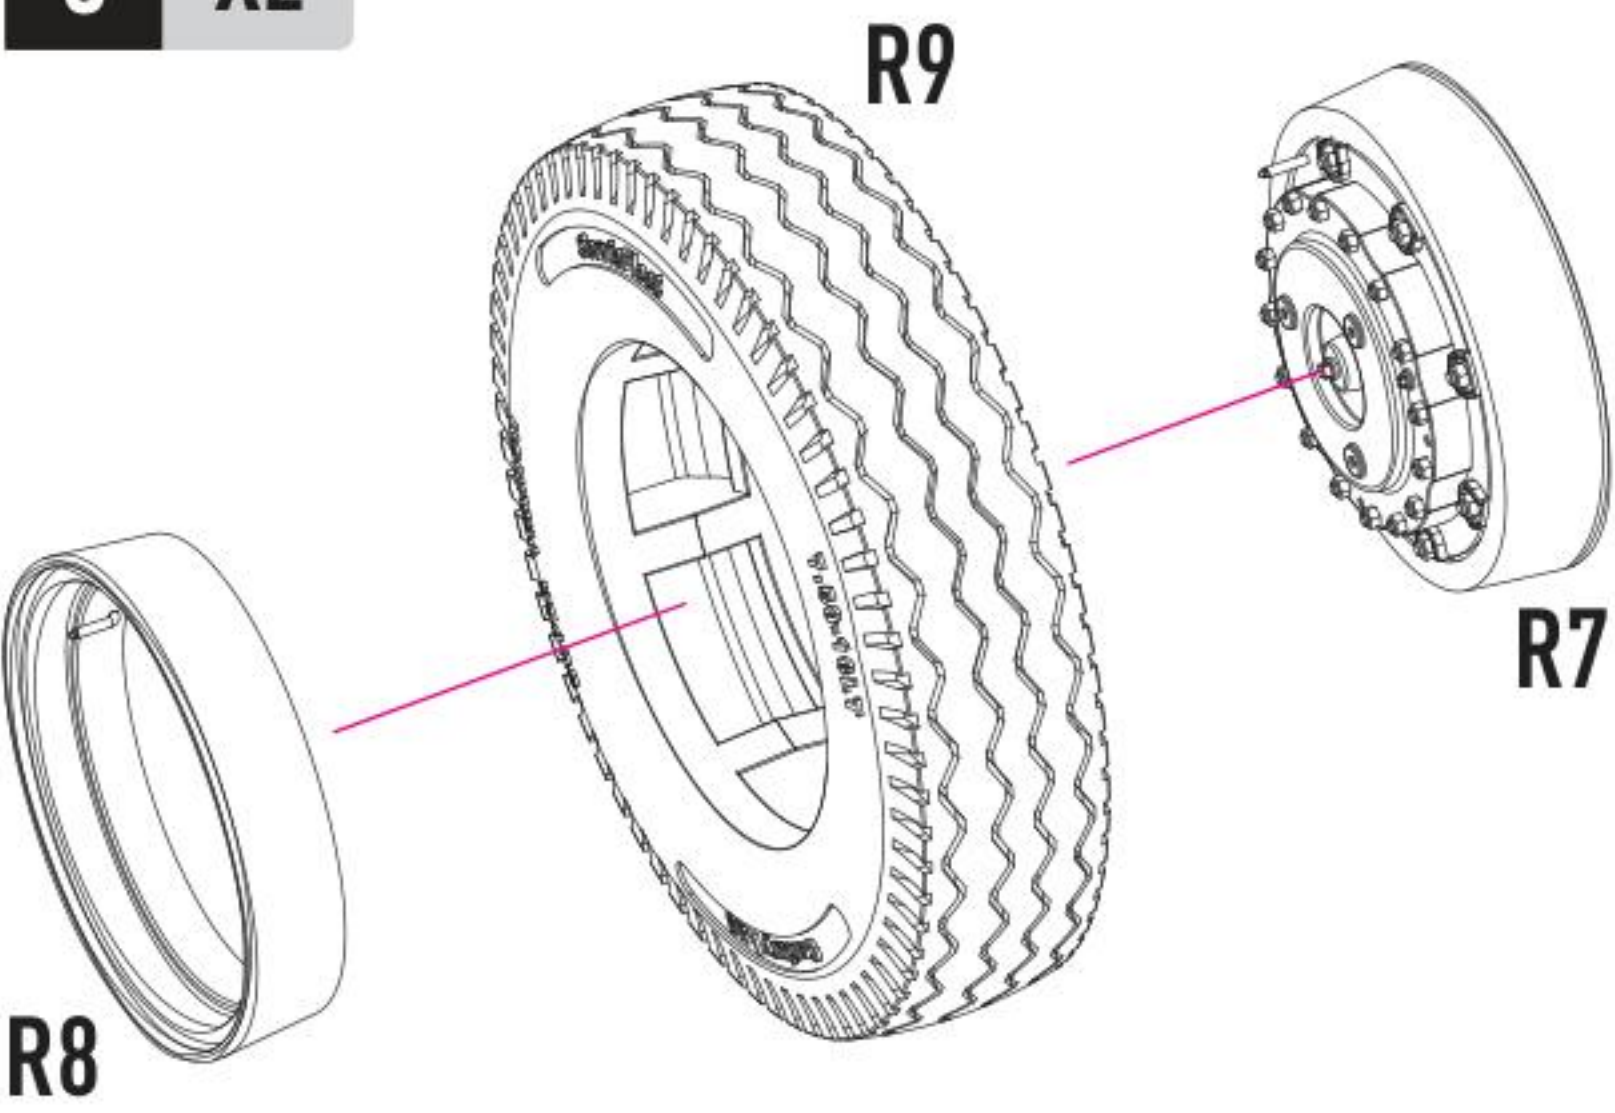


7 X2

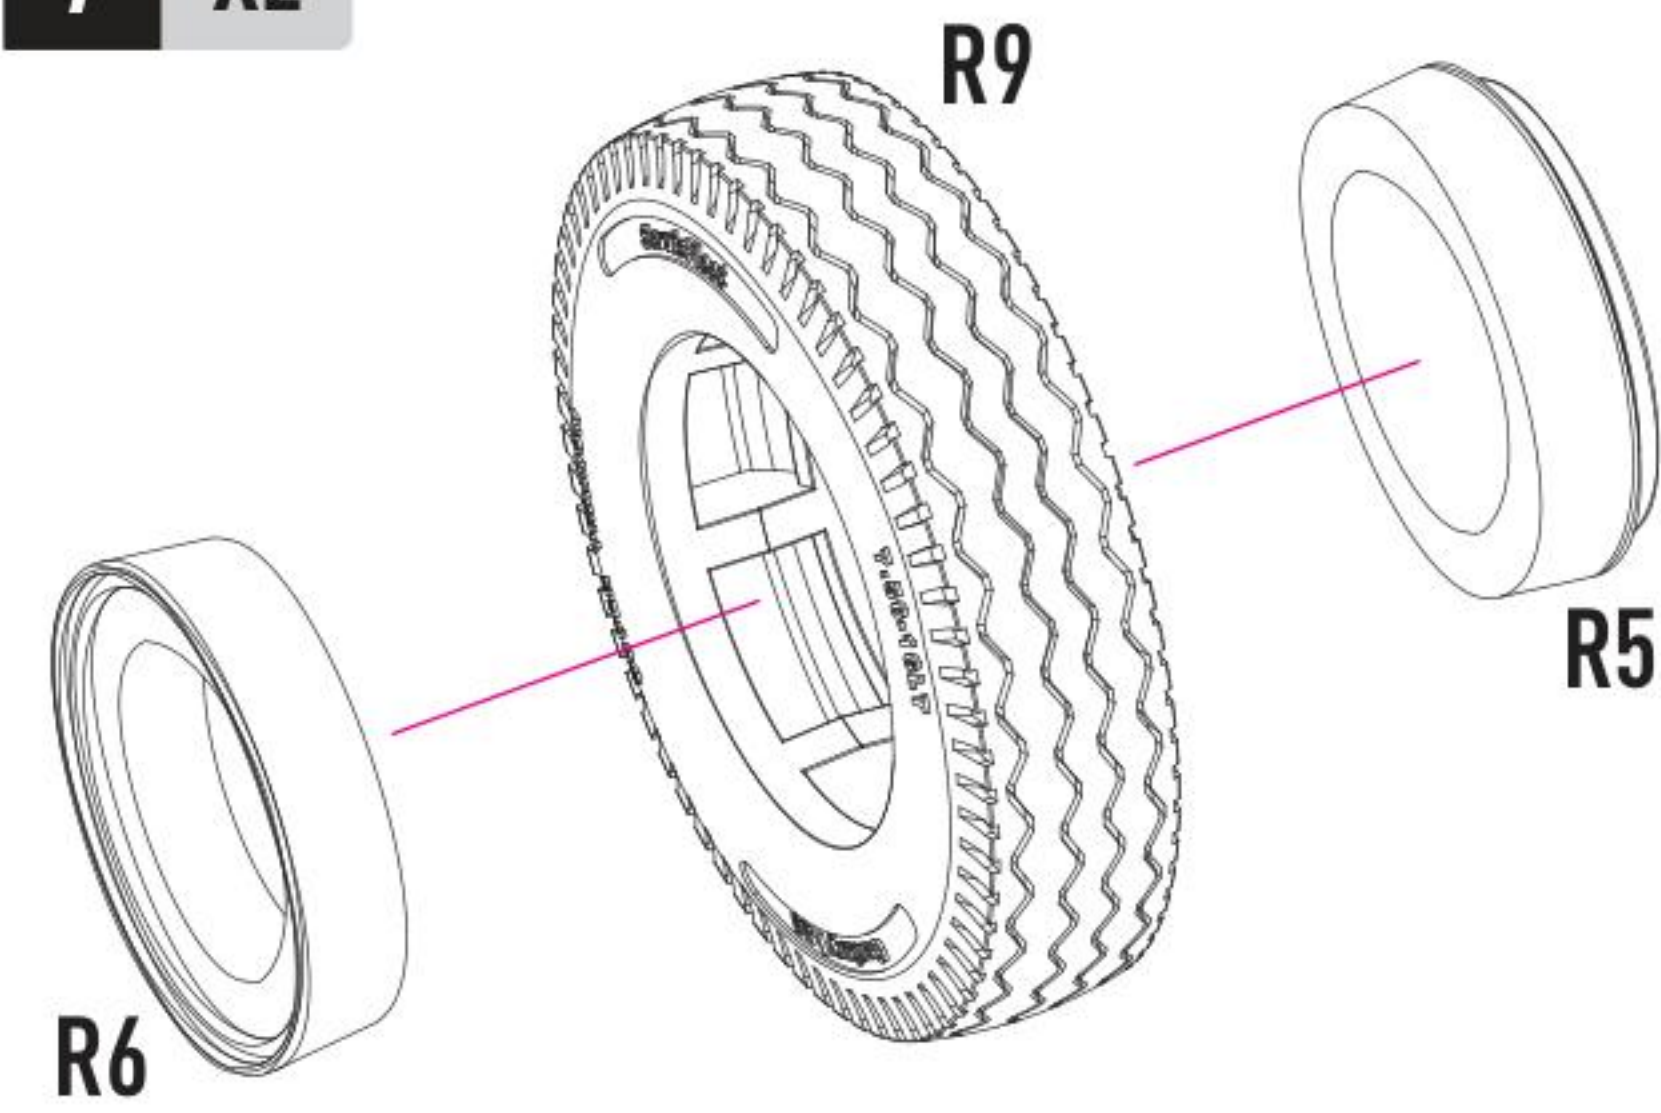


8 X2

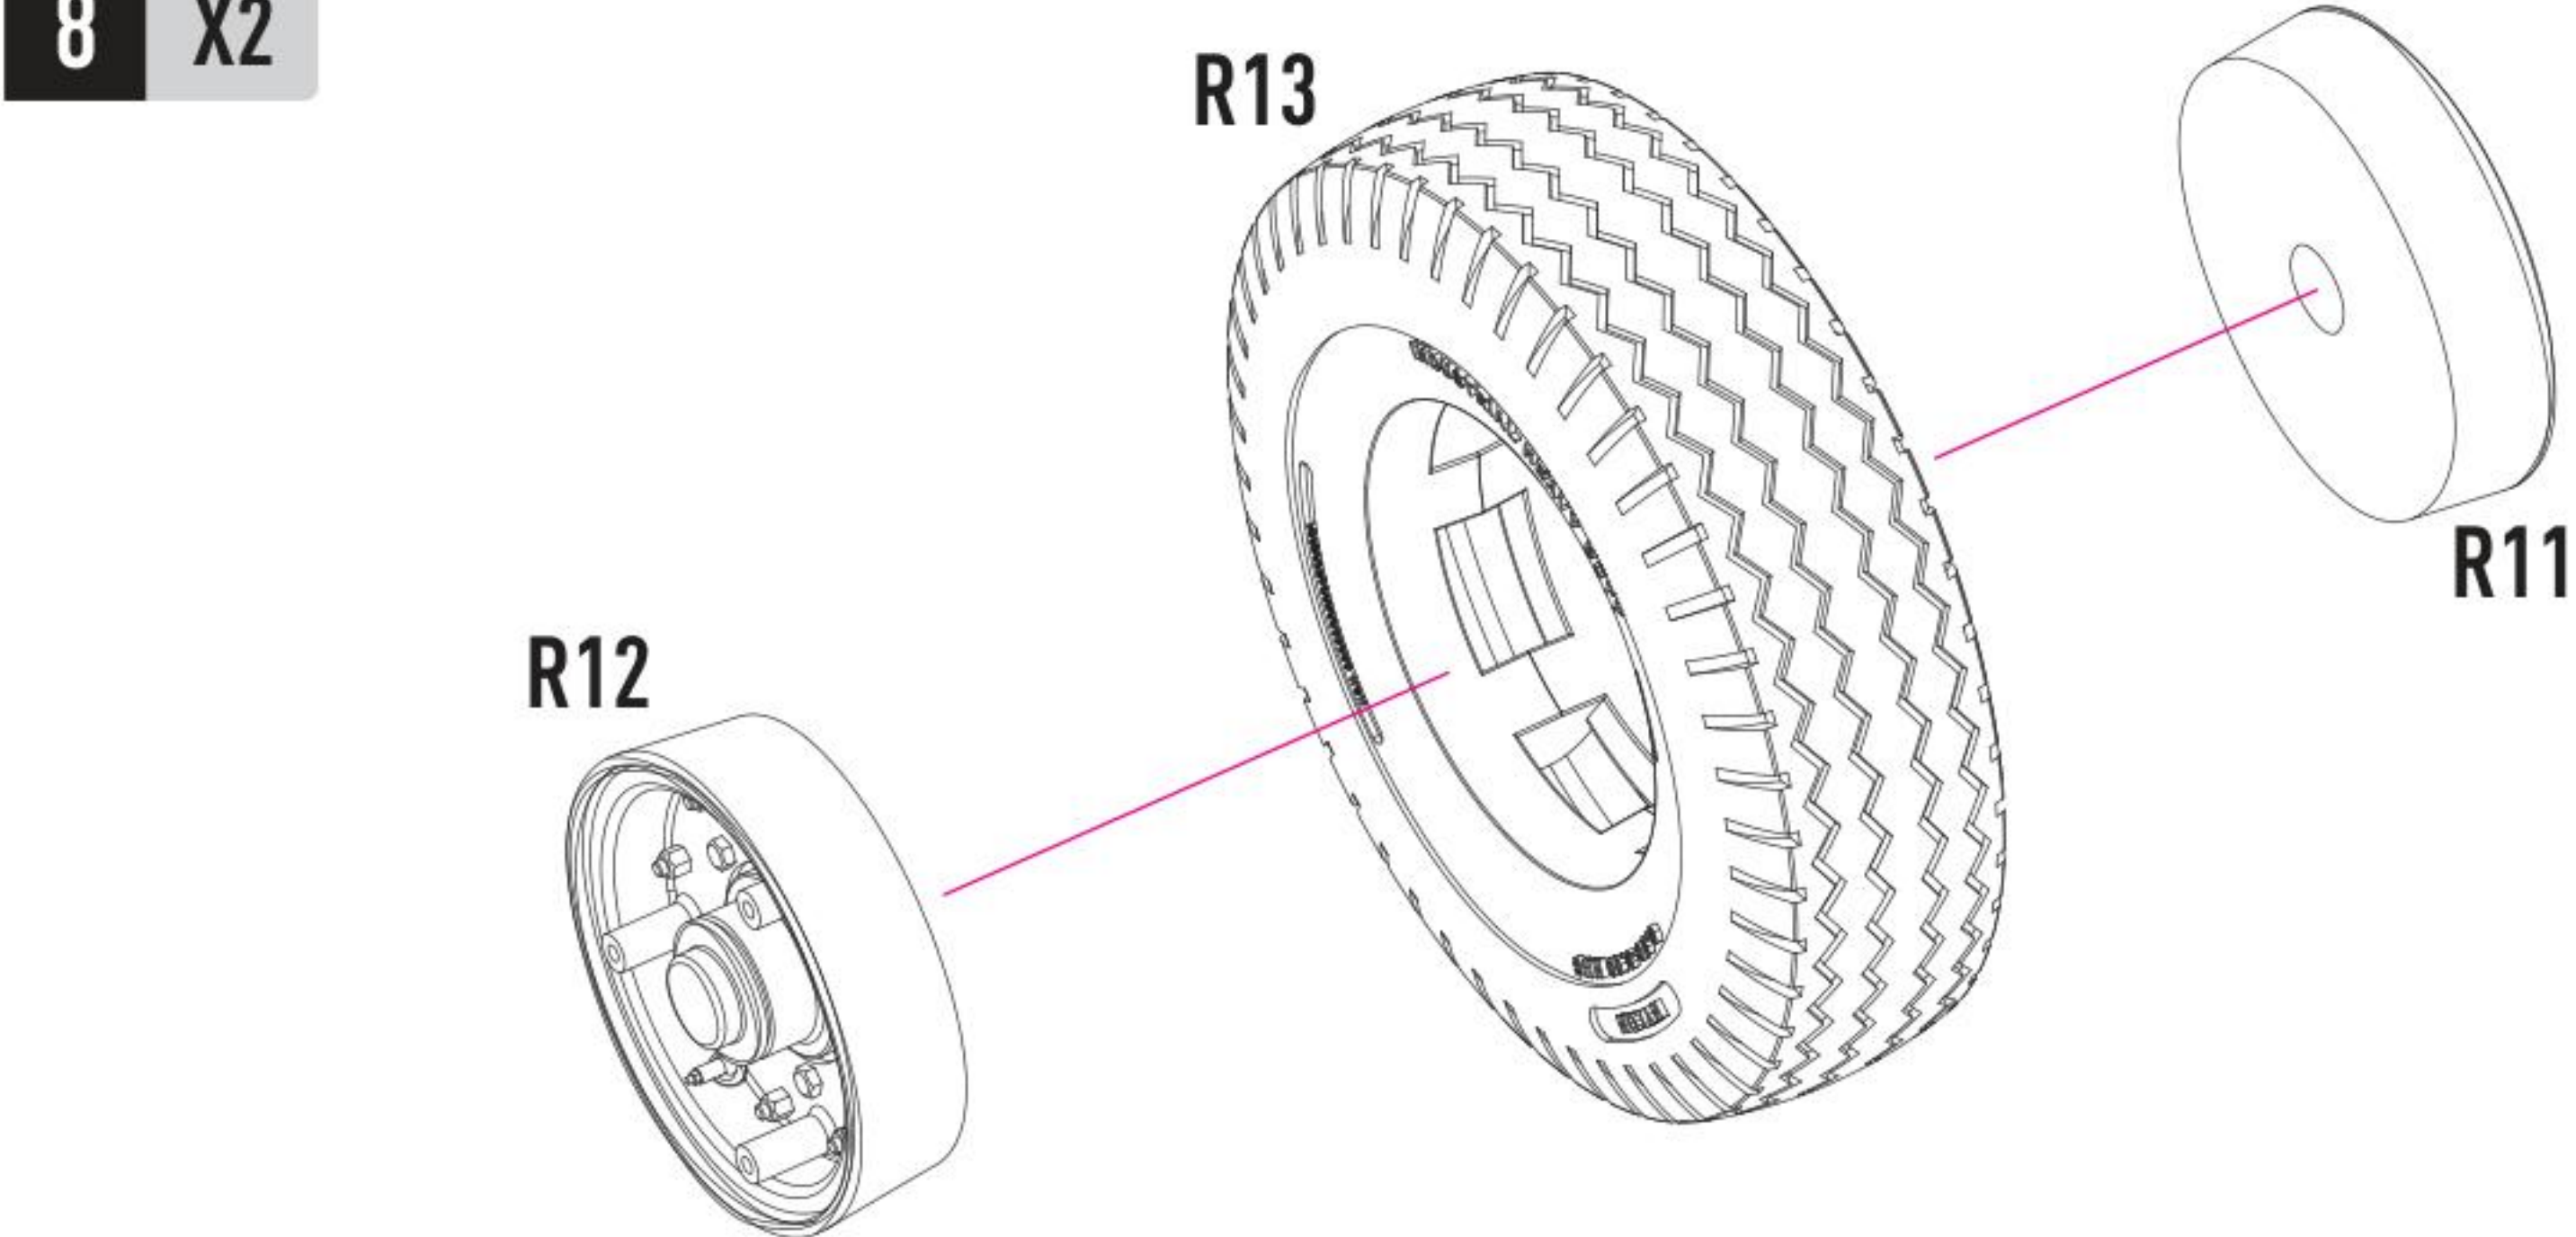




STEP 5

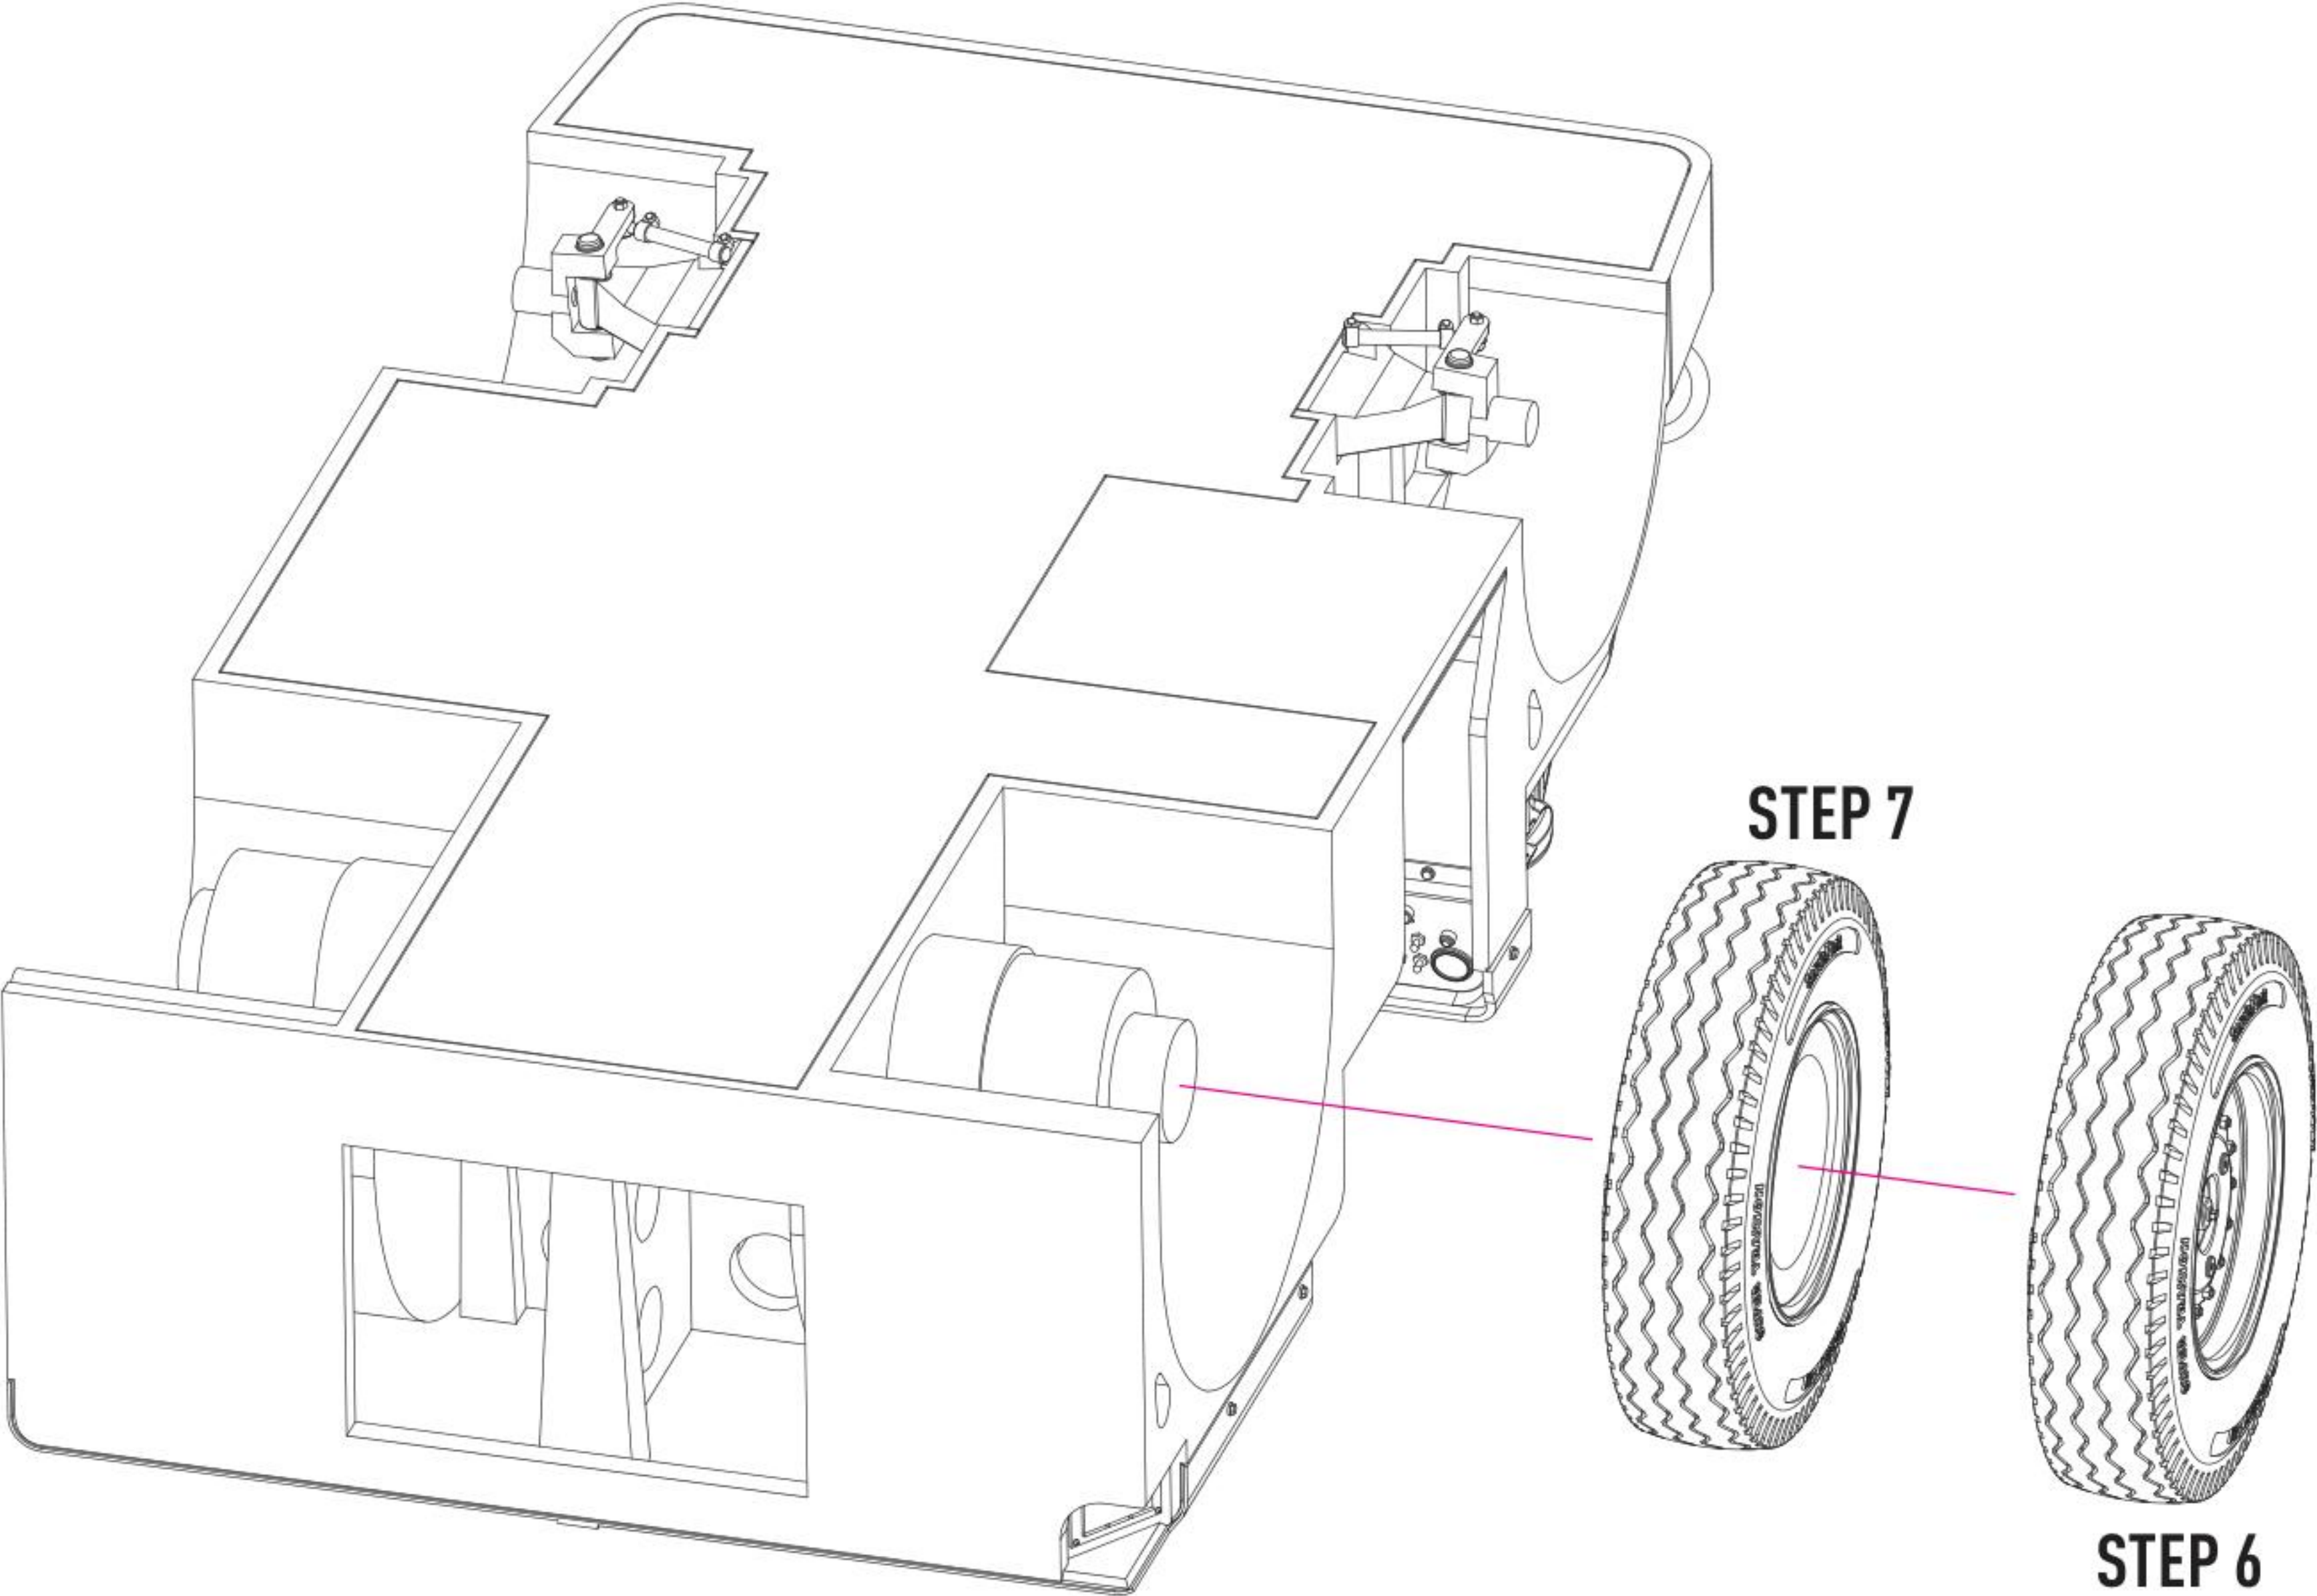


STEP 7

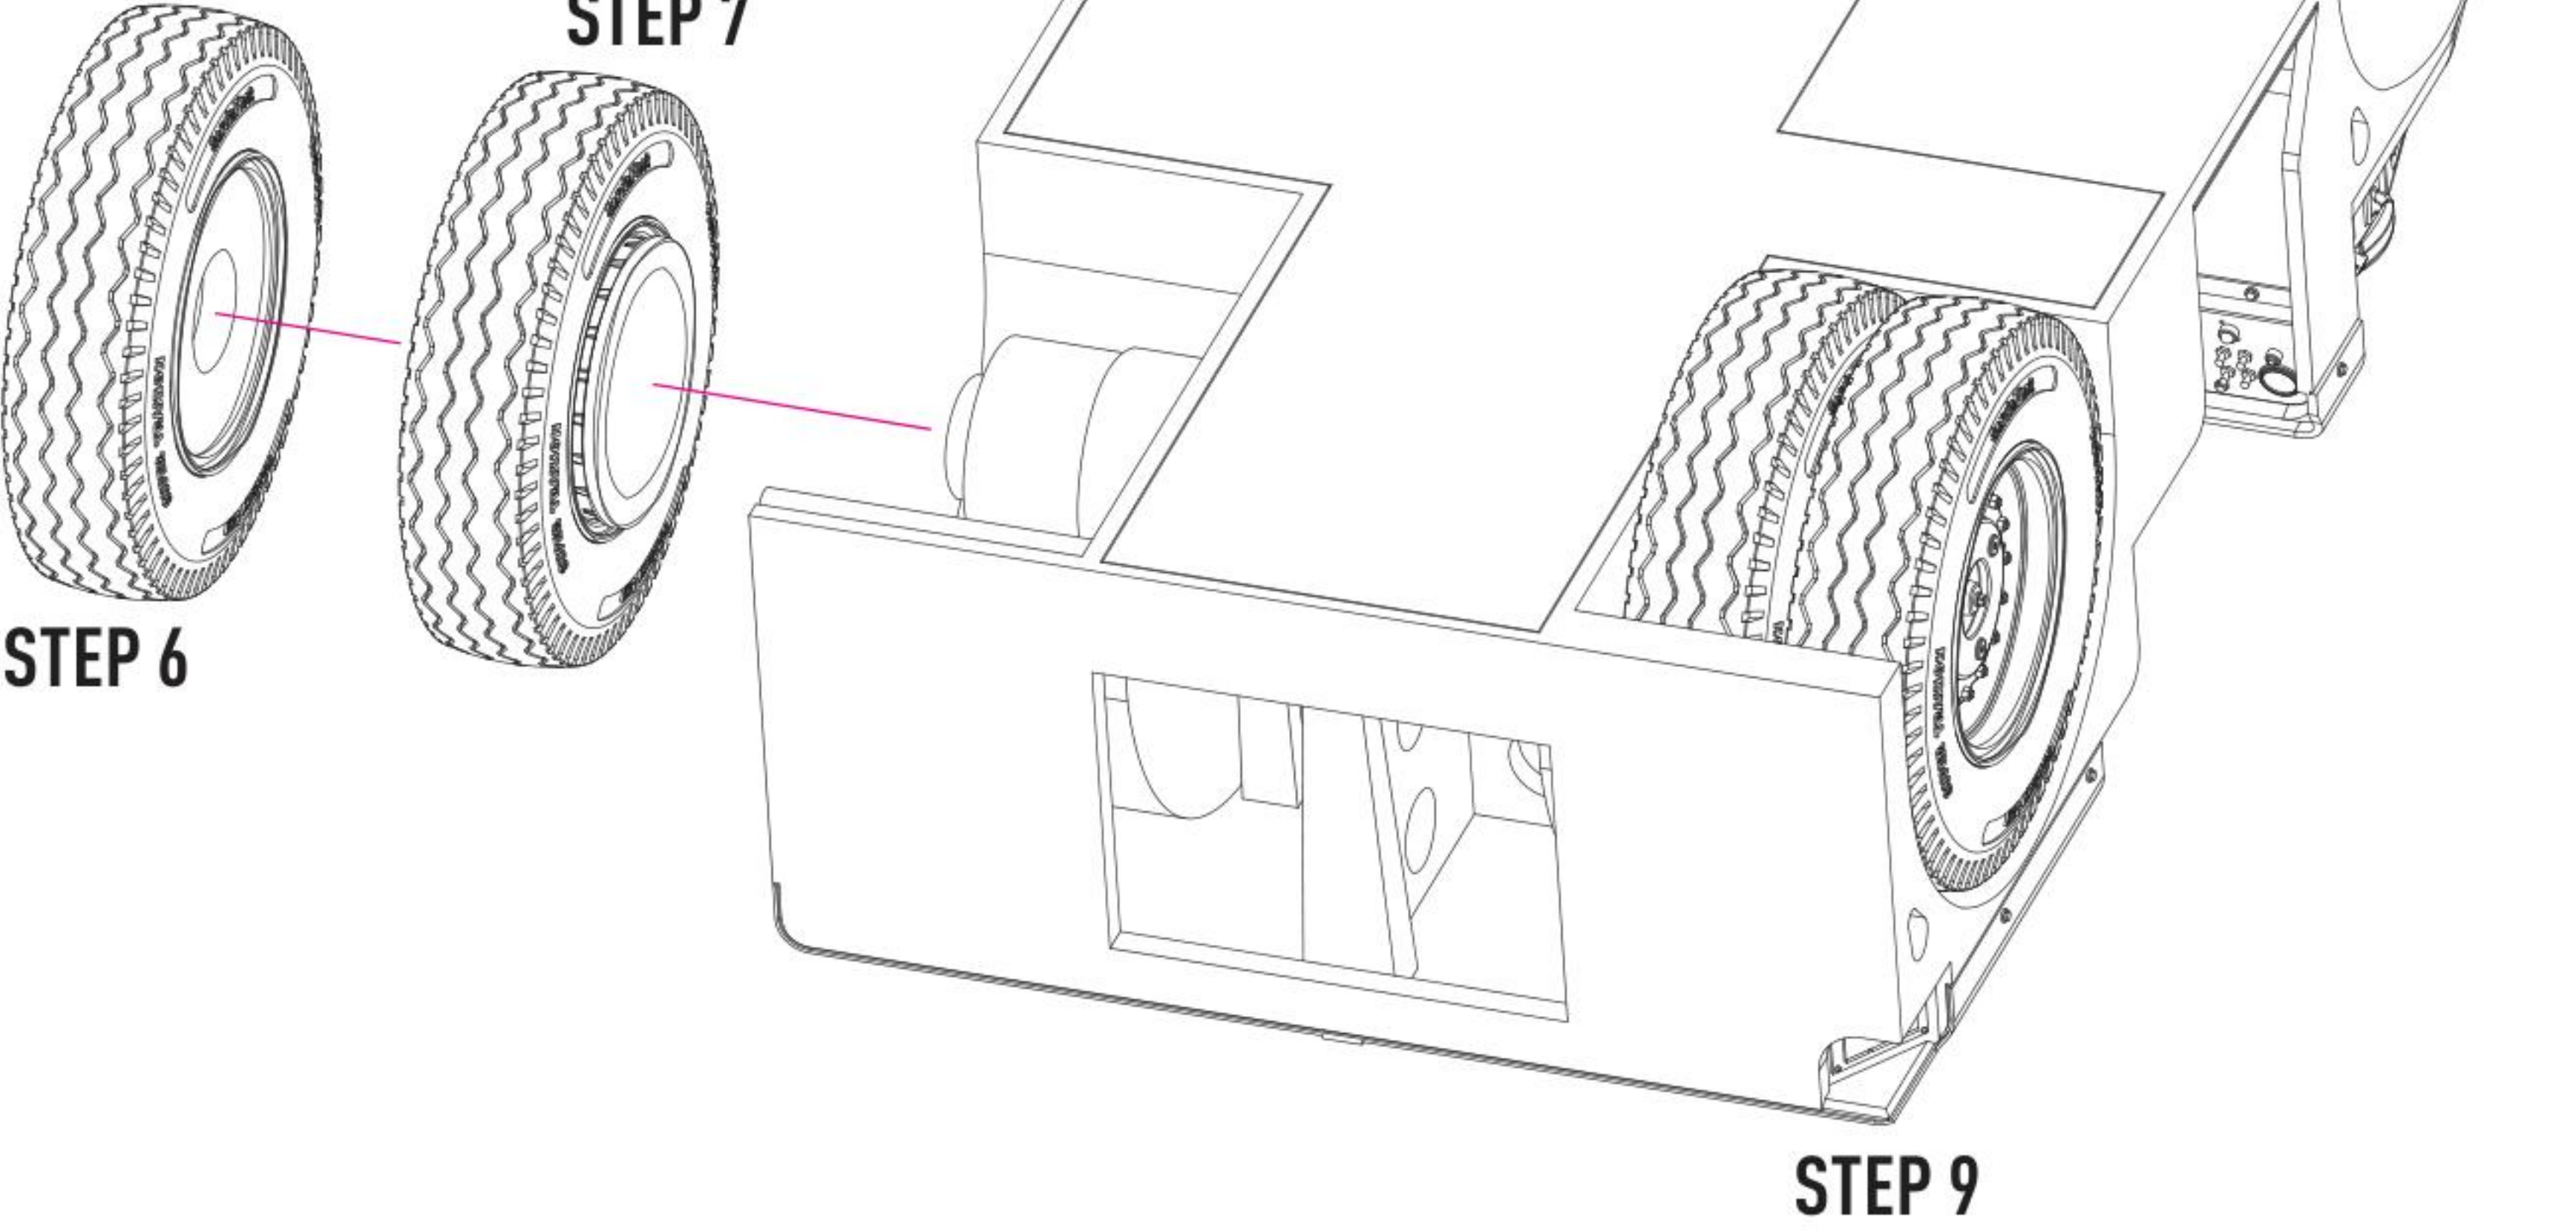


STEP 10

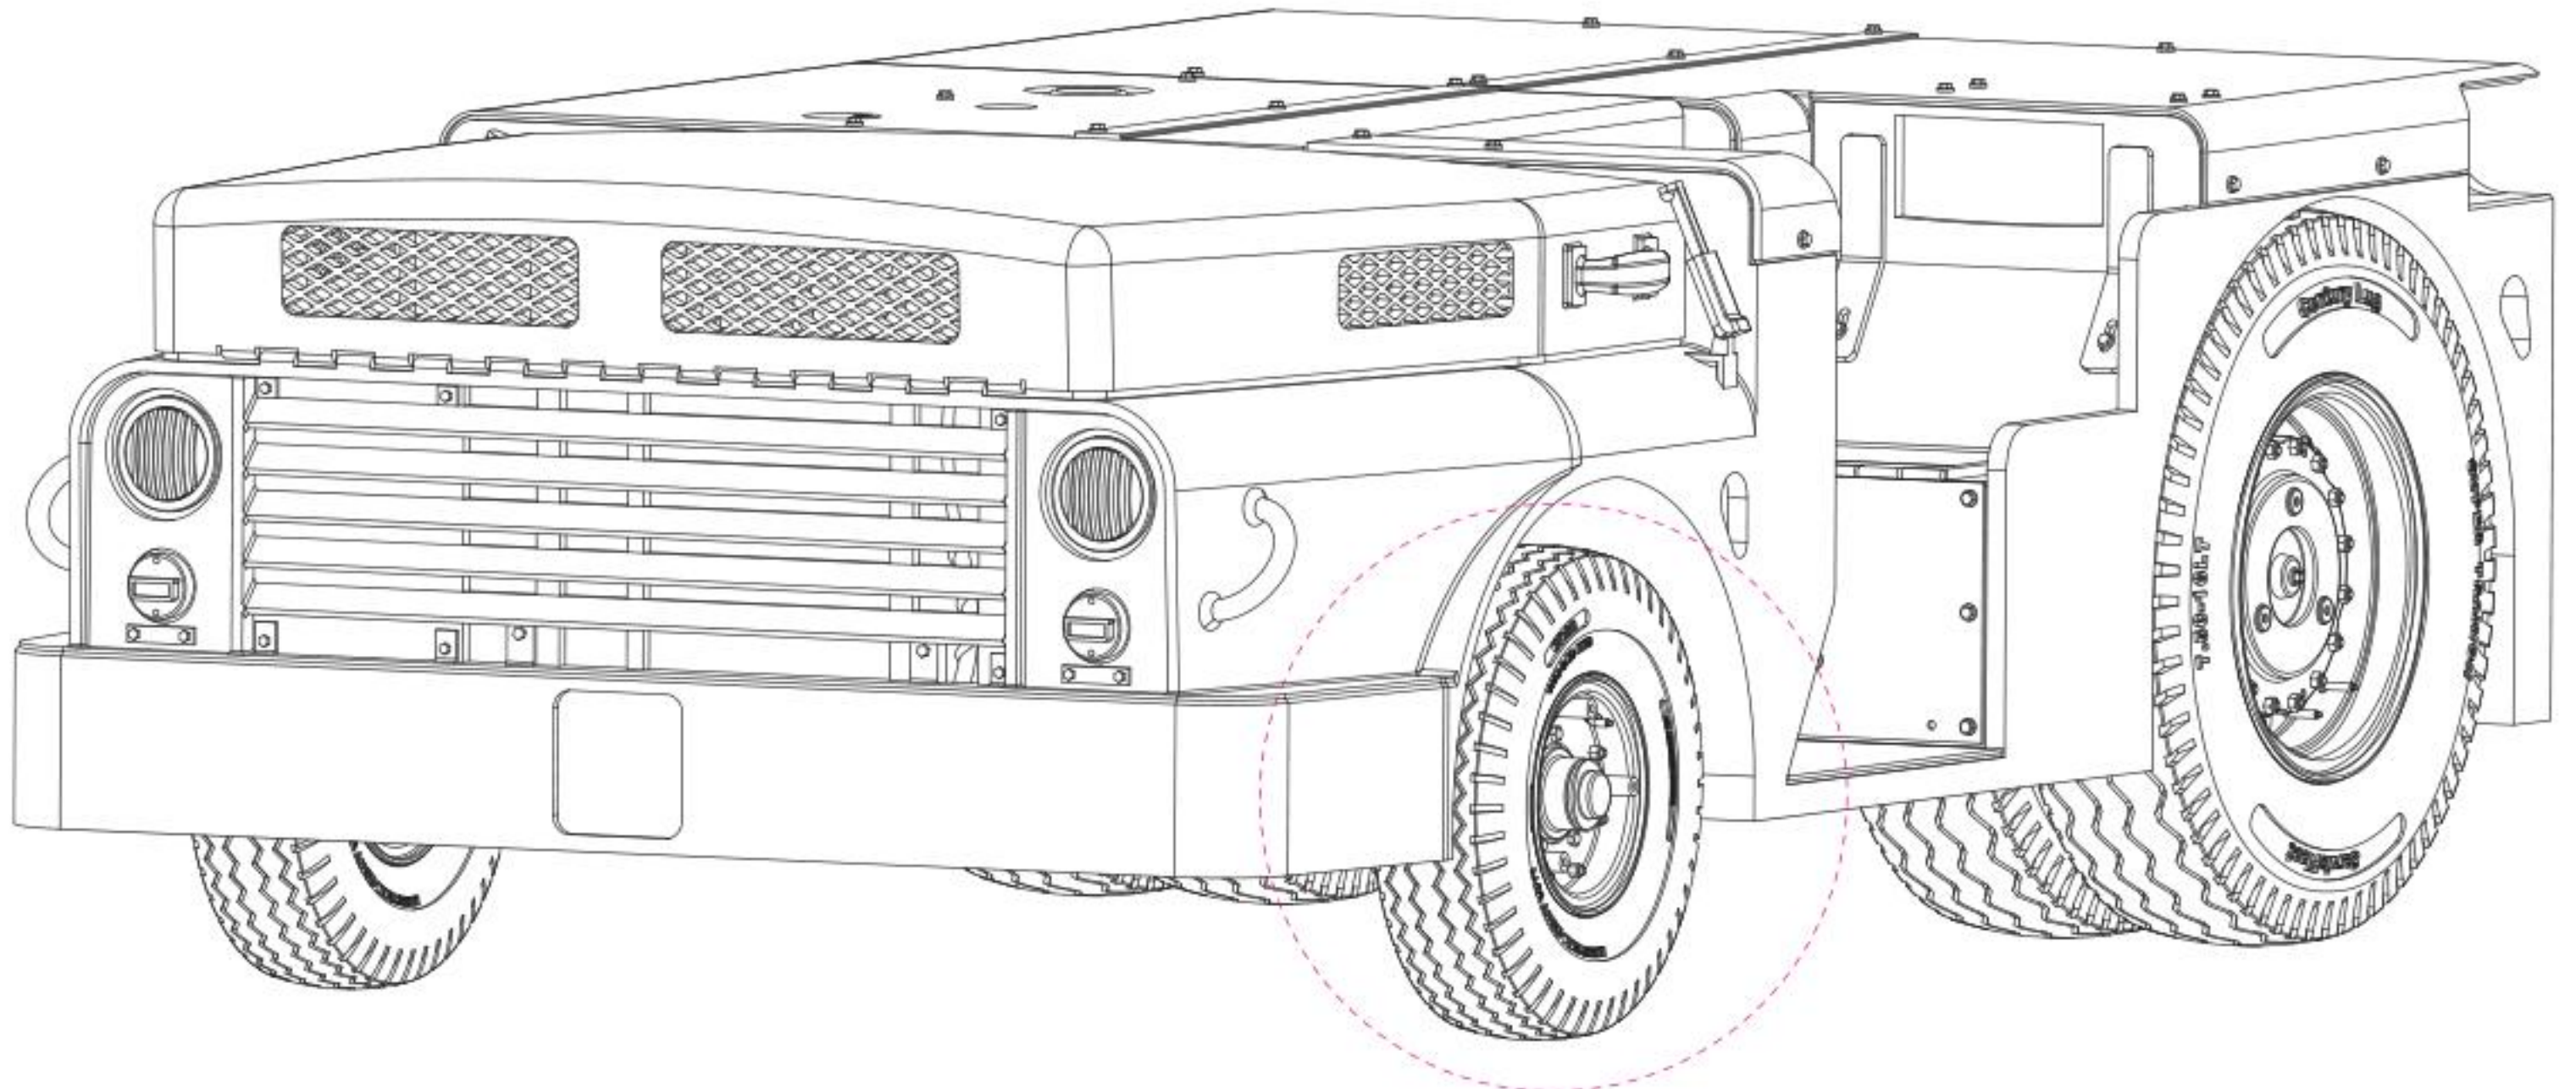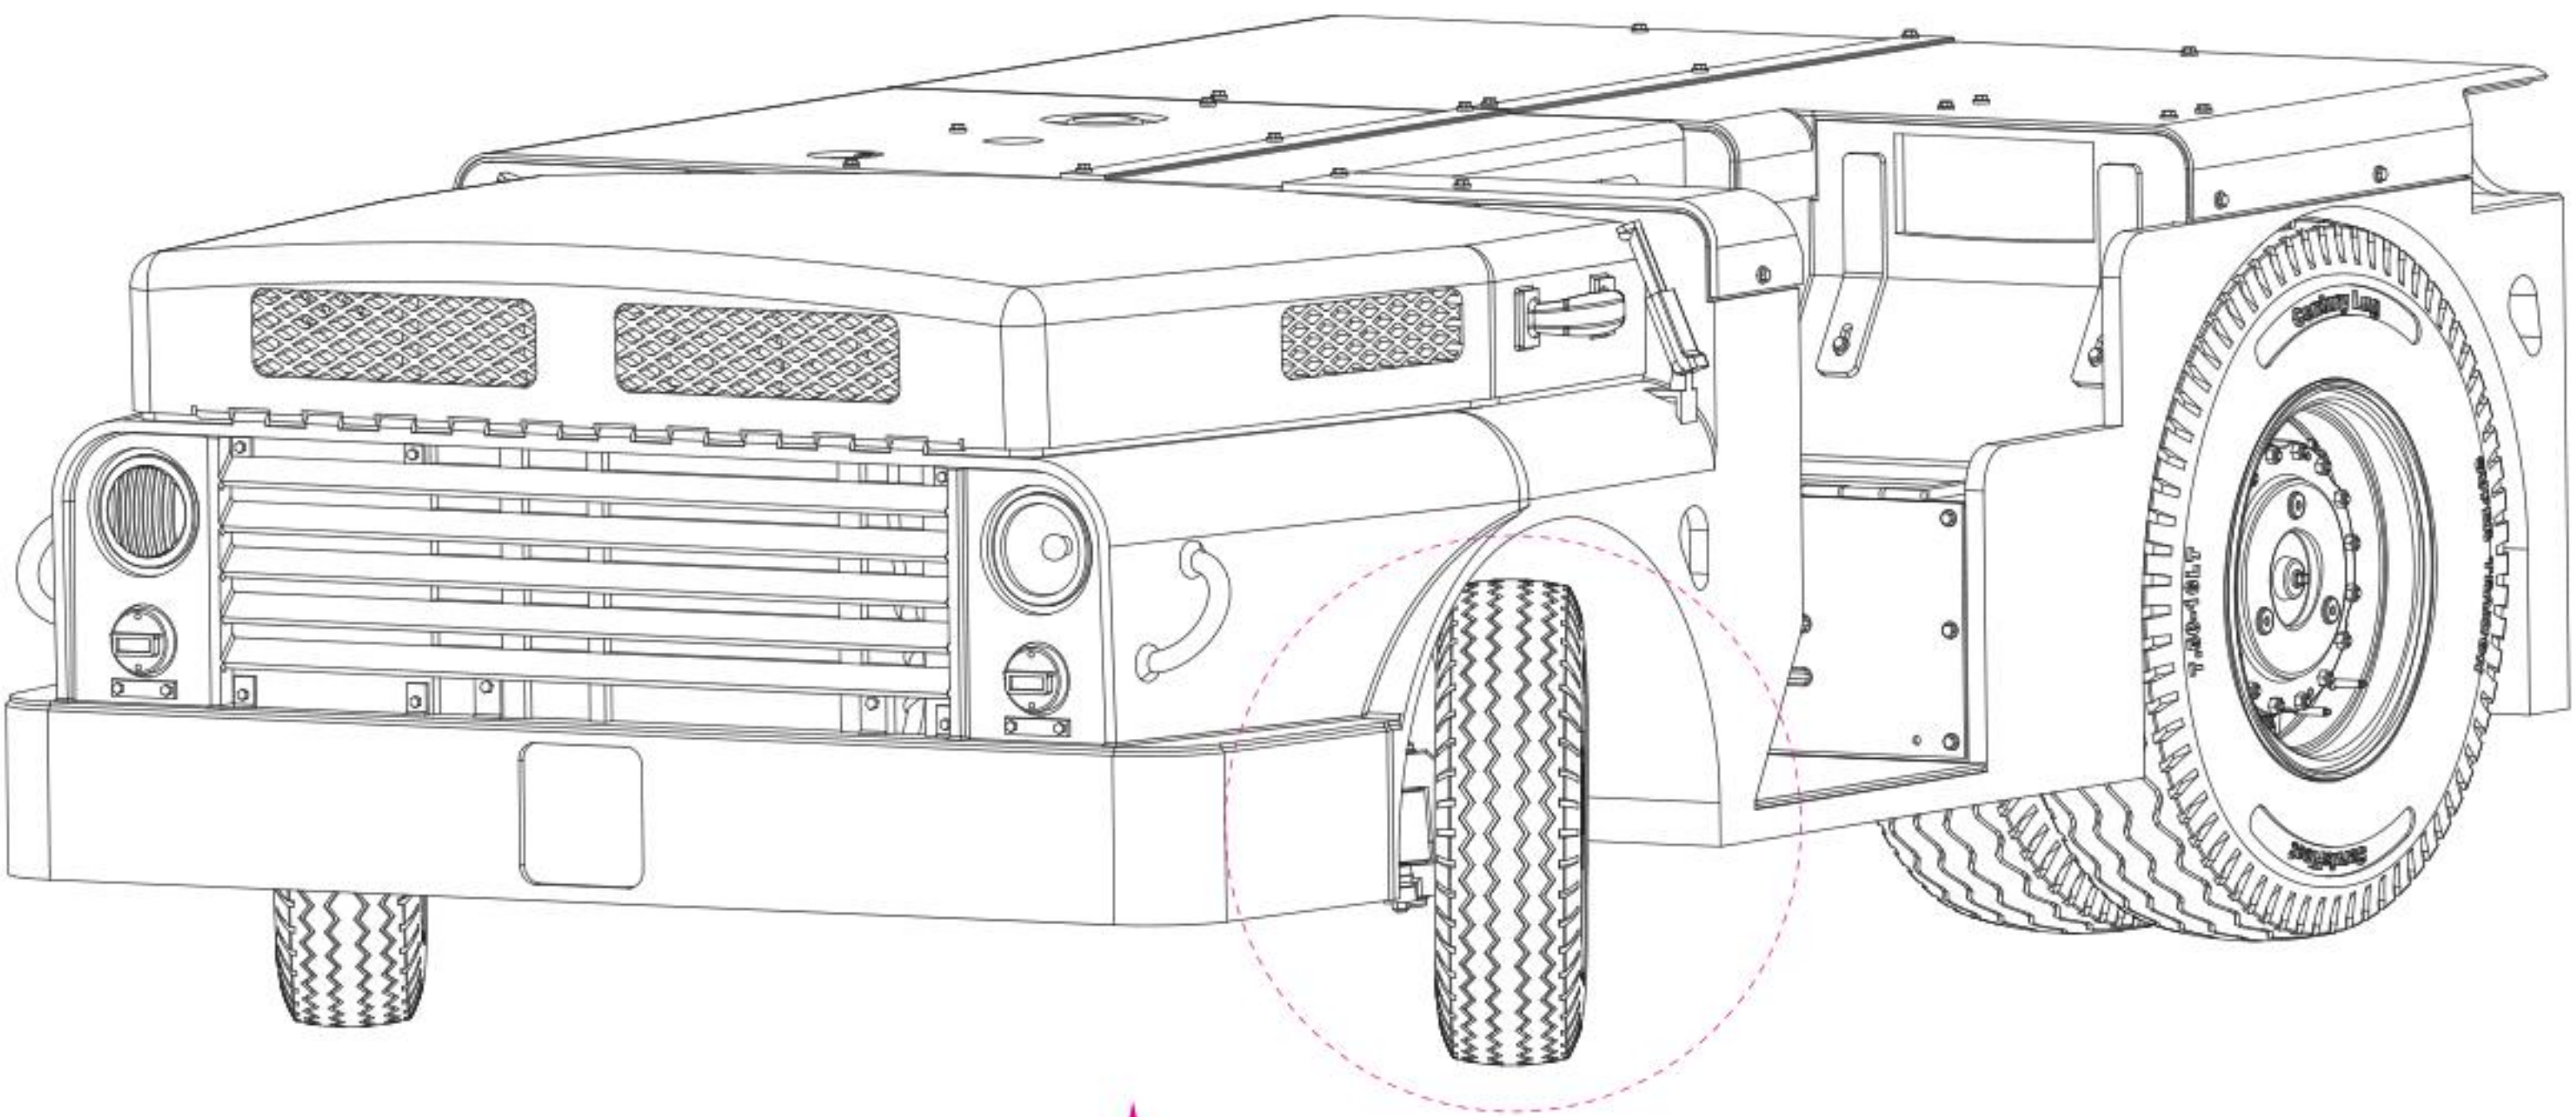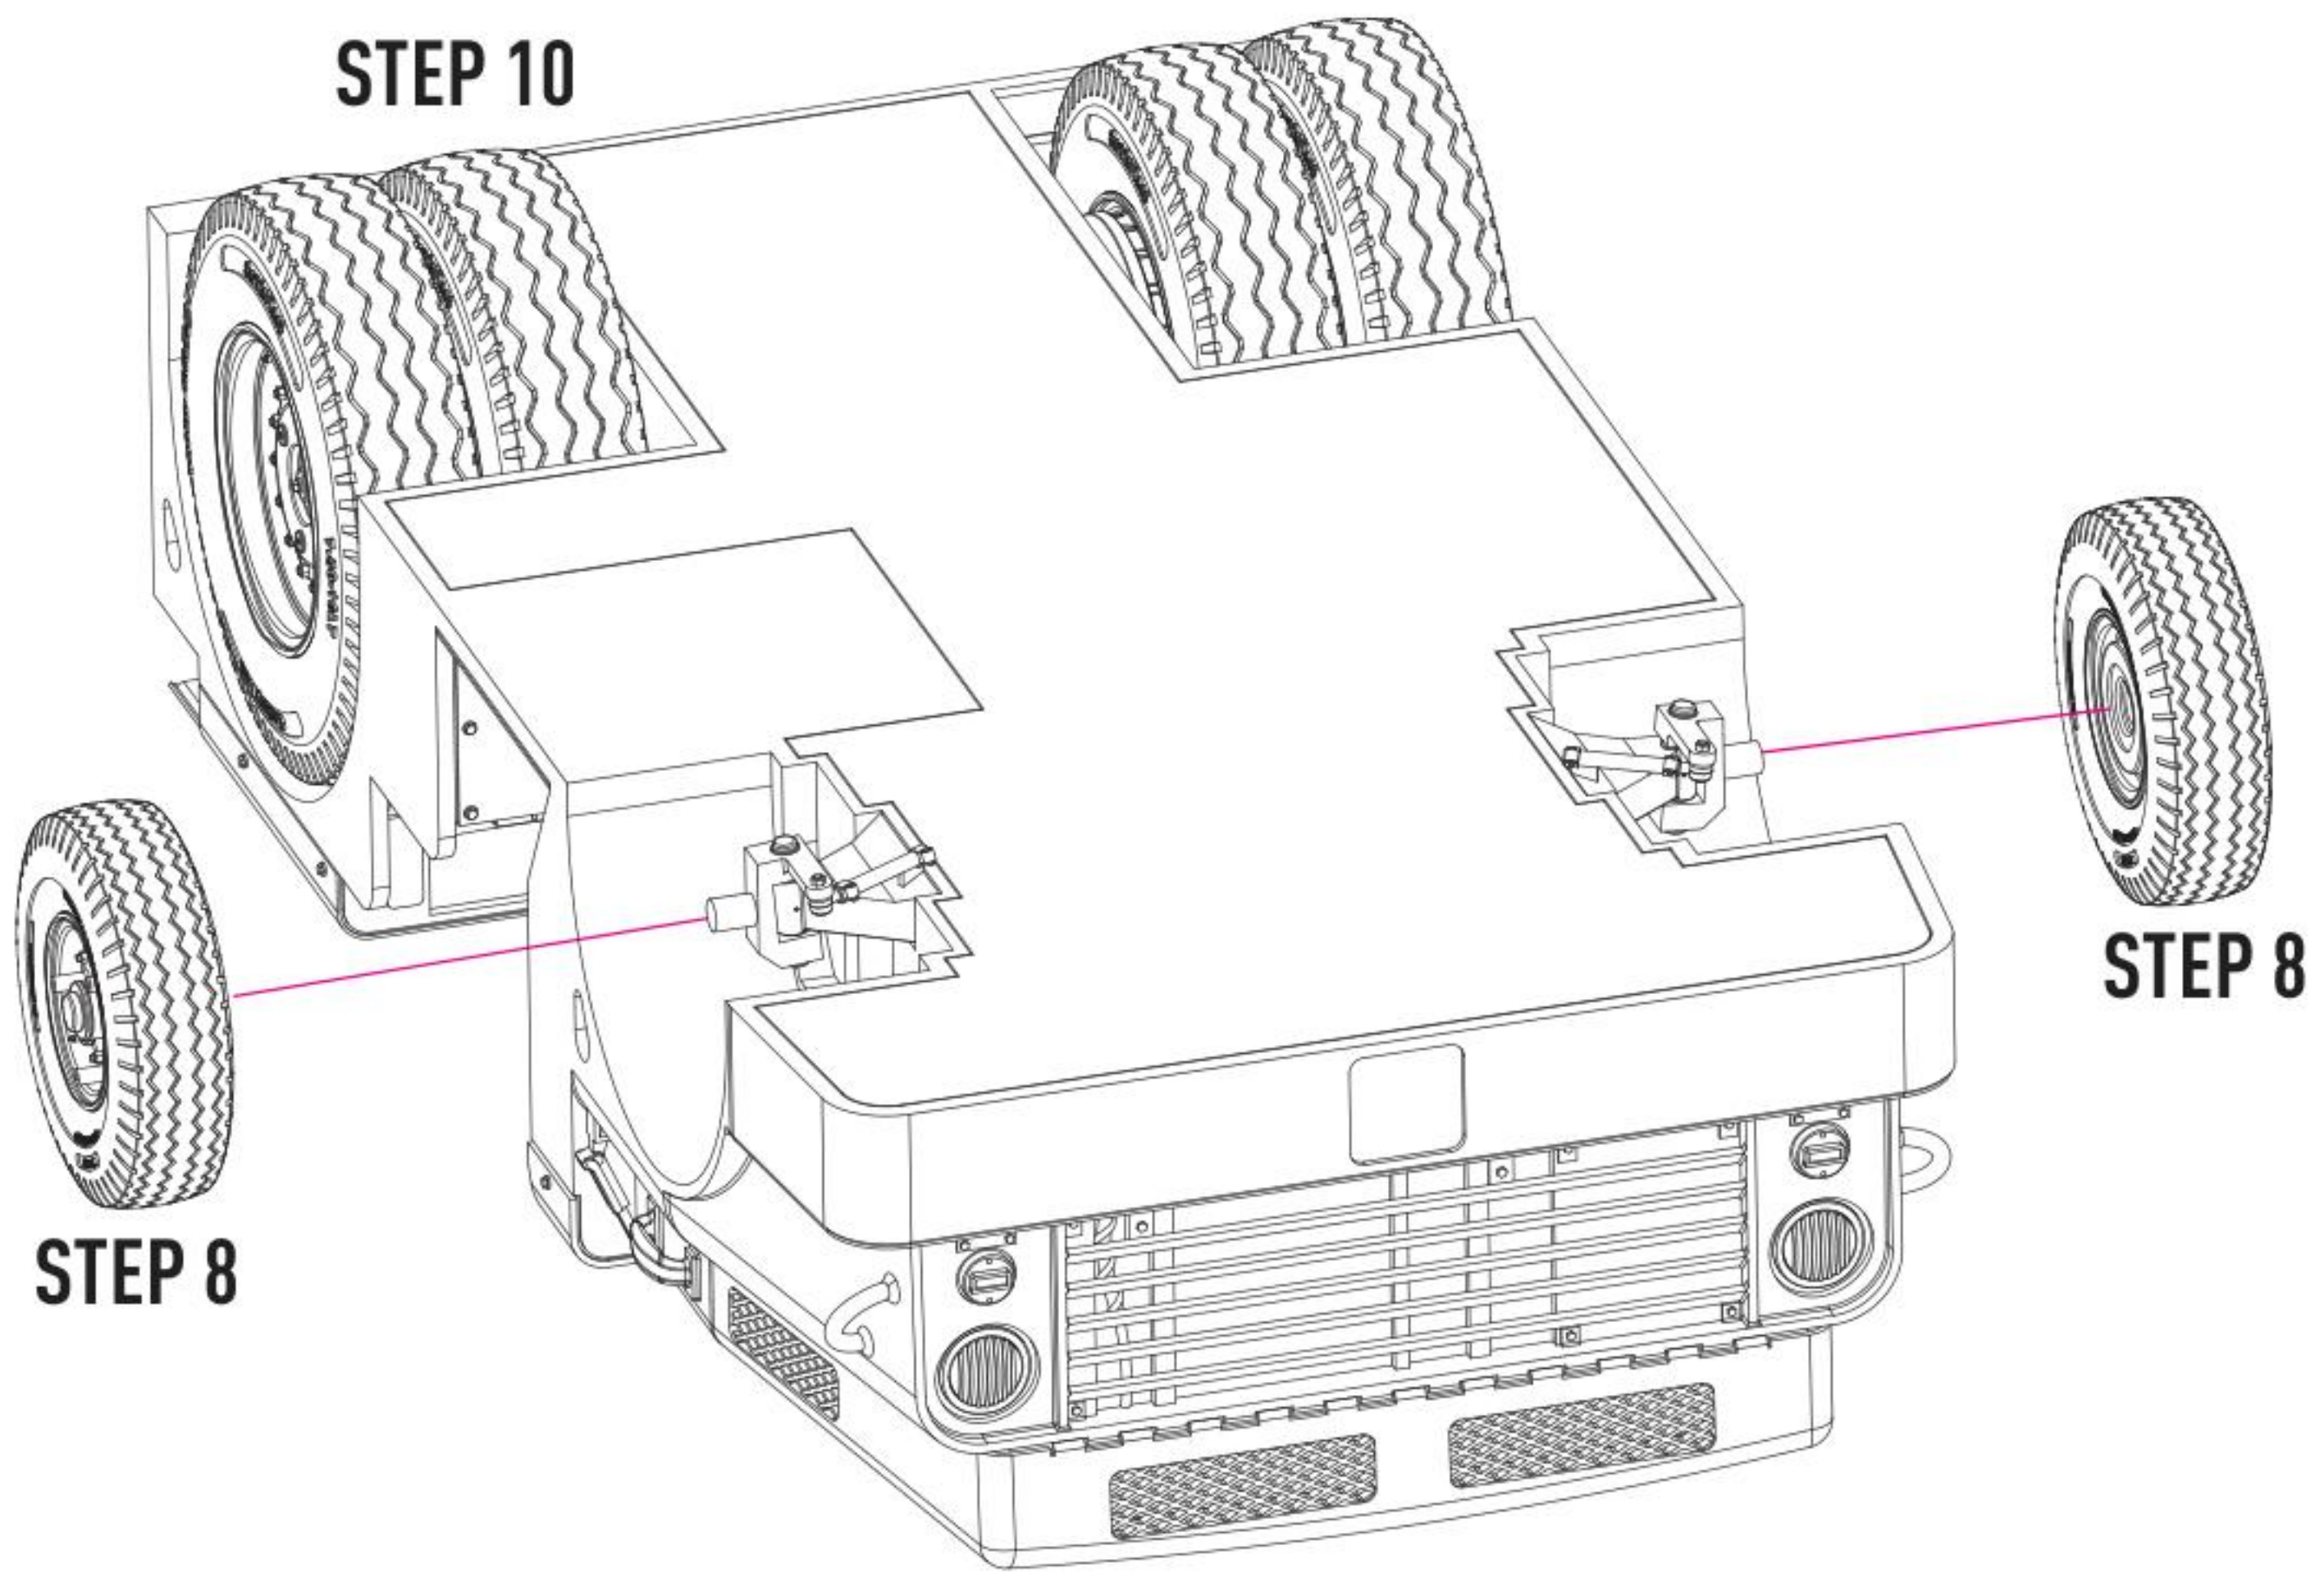


12

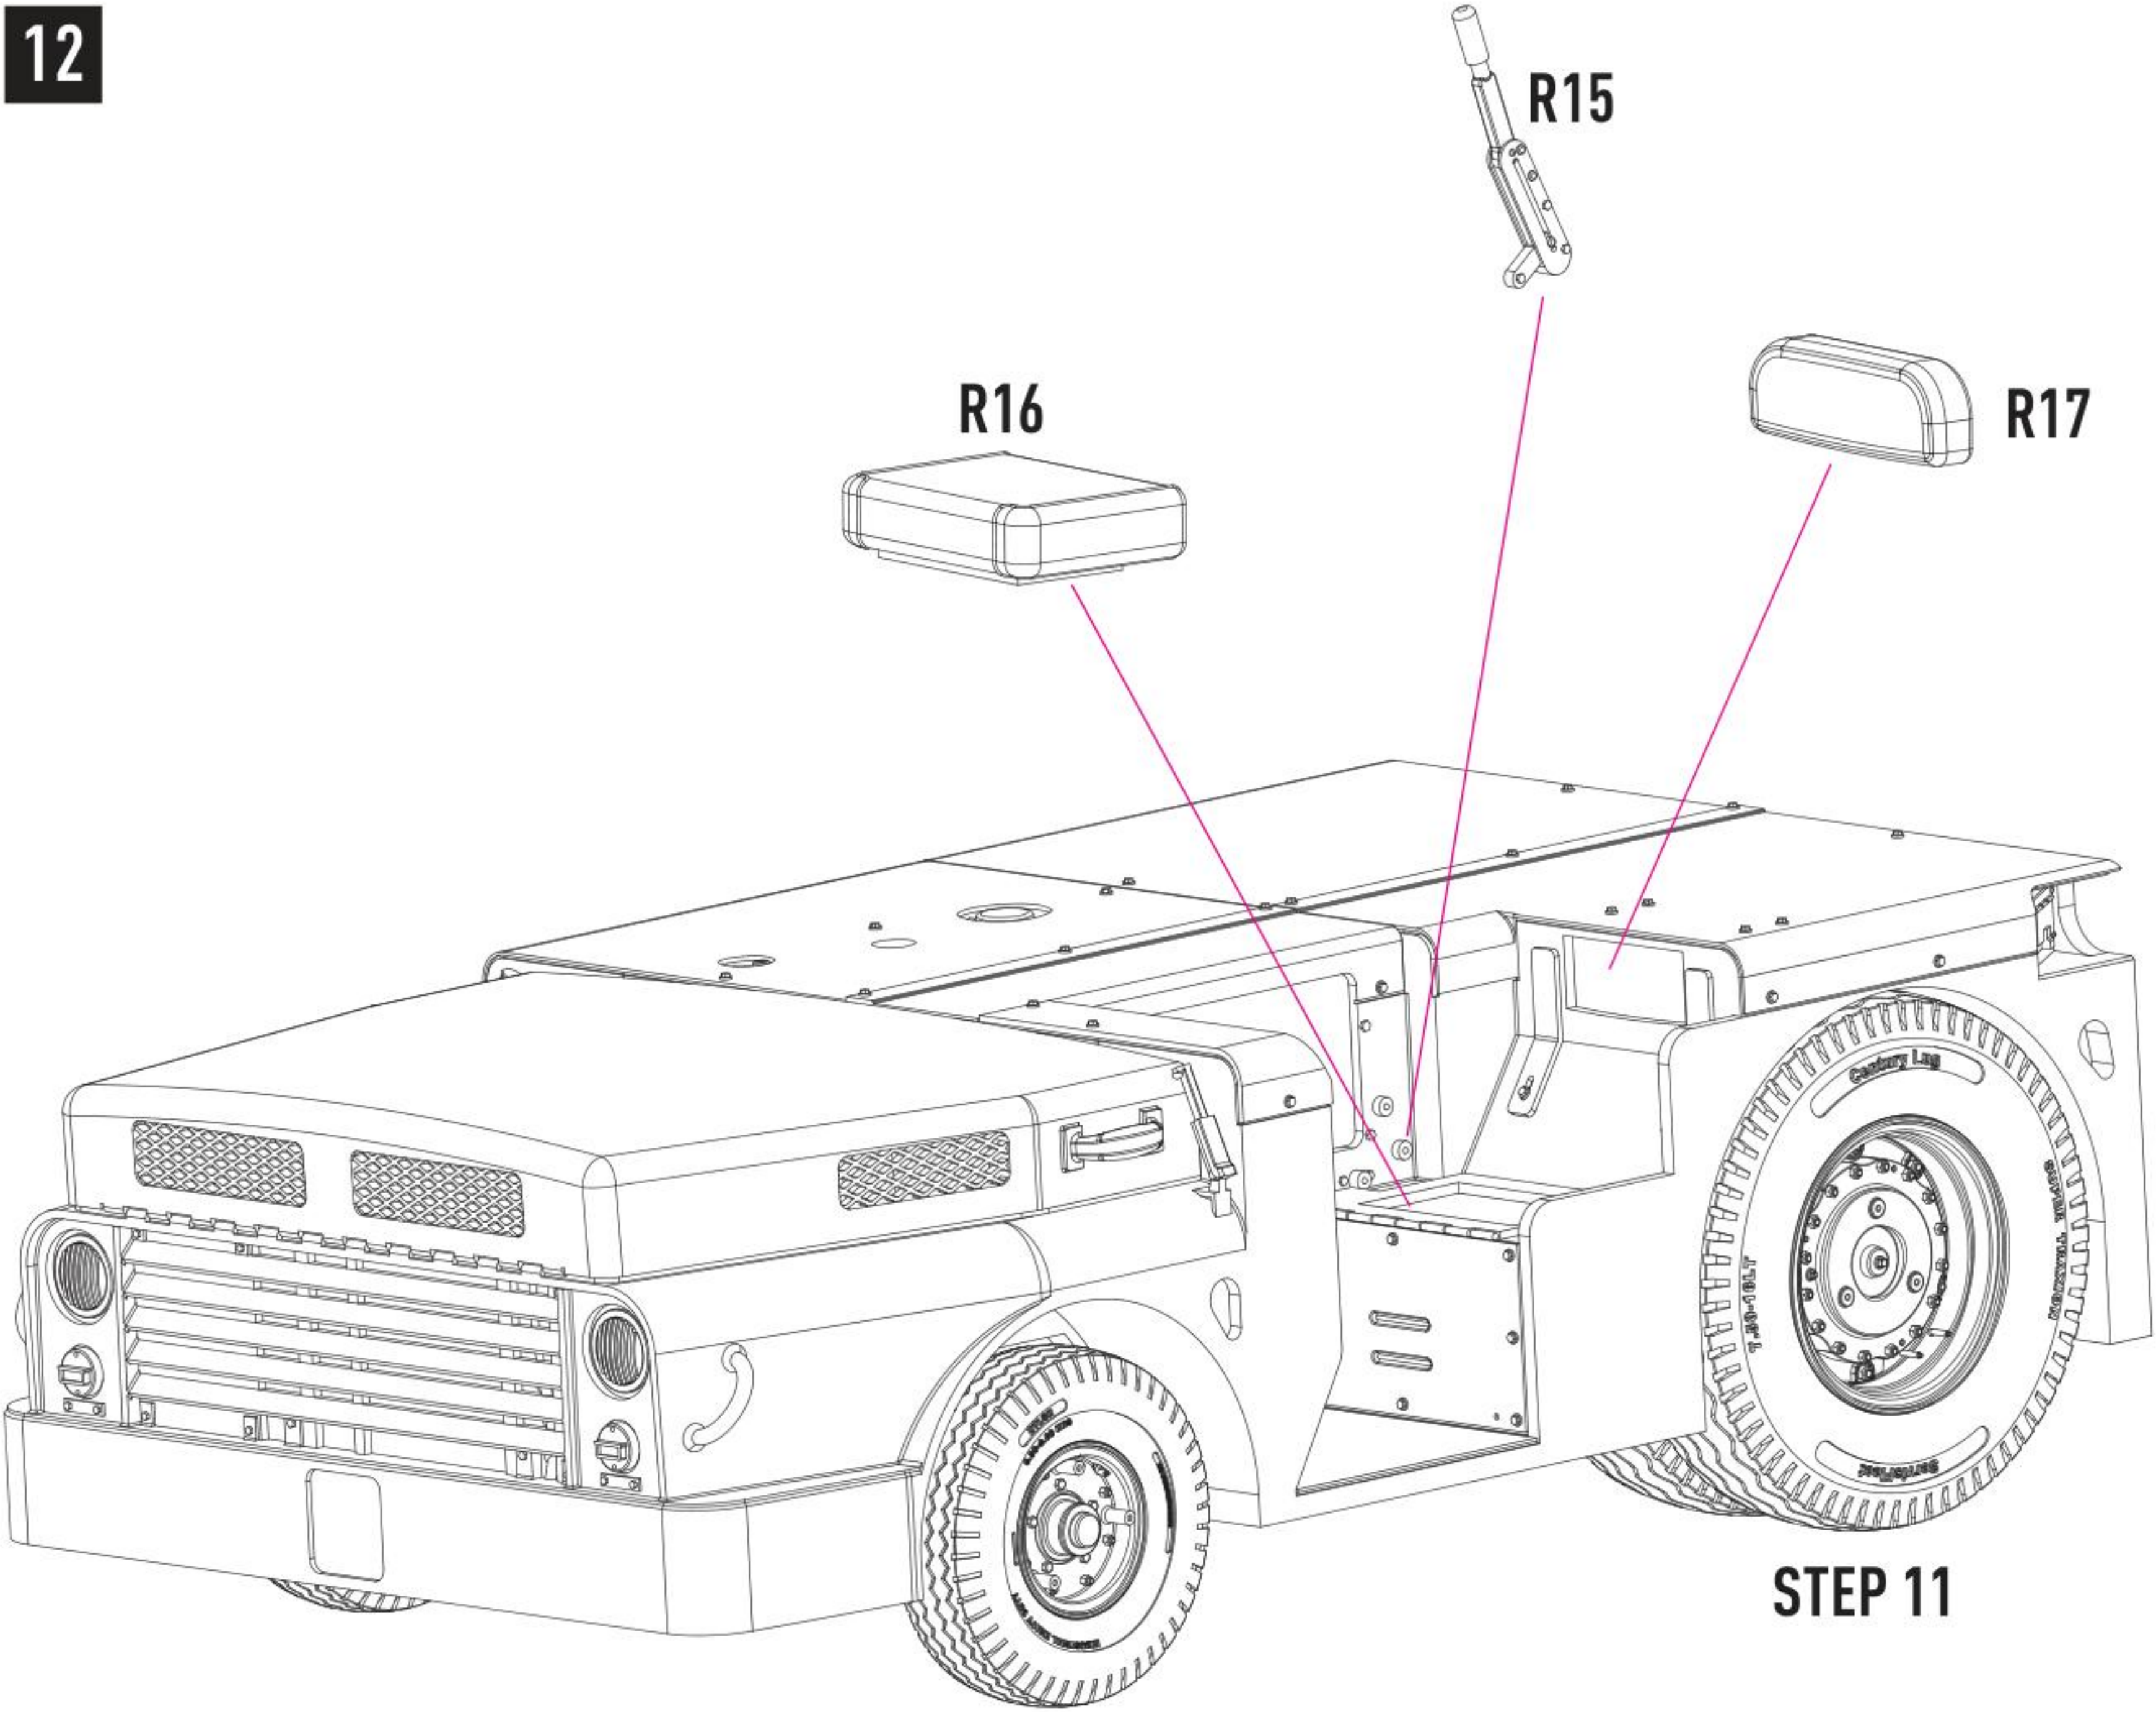


13

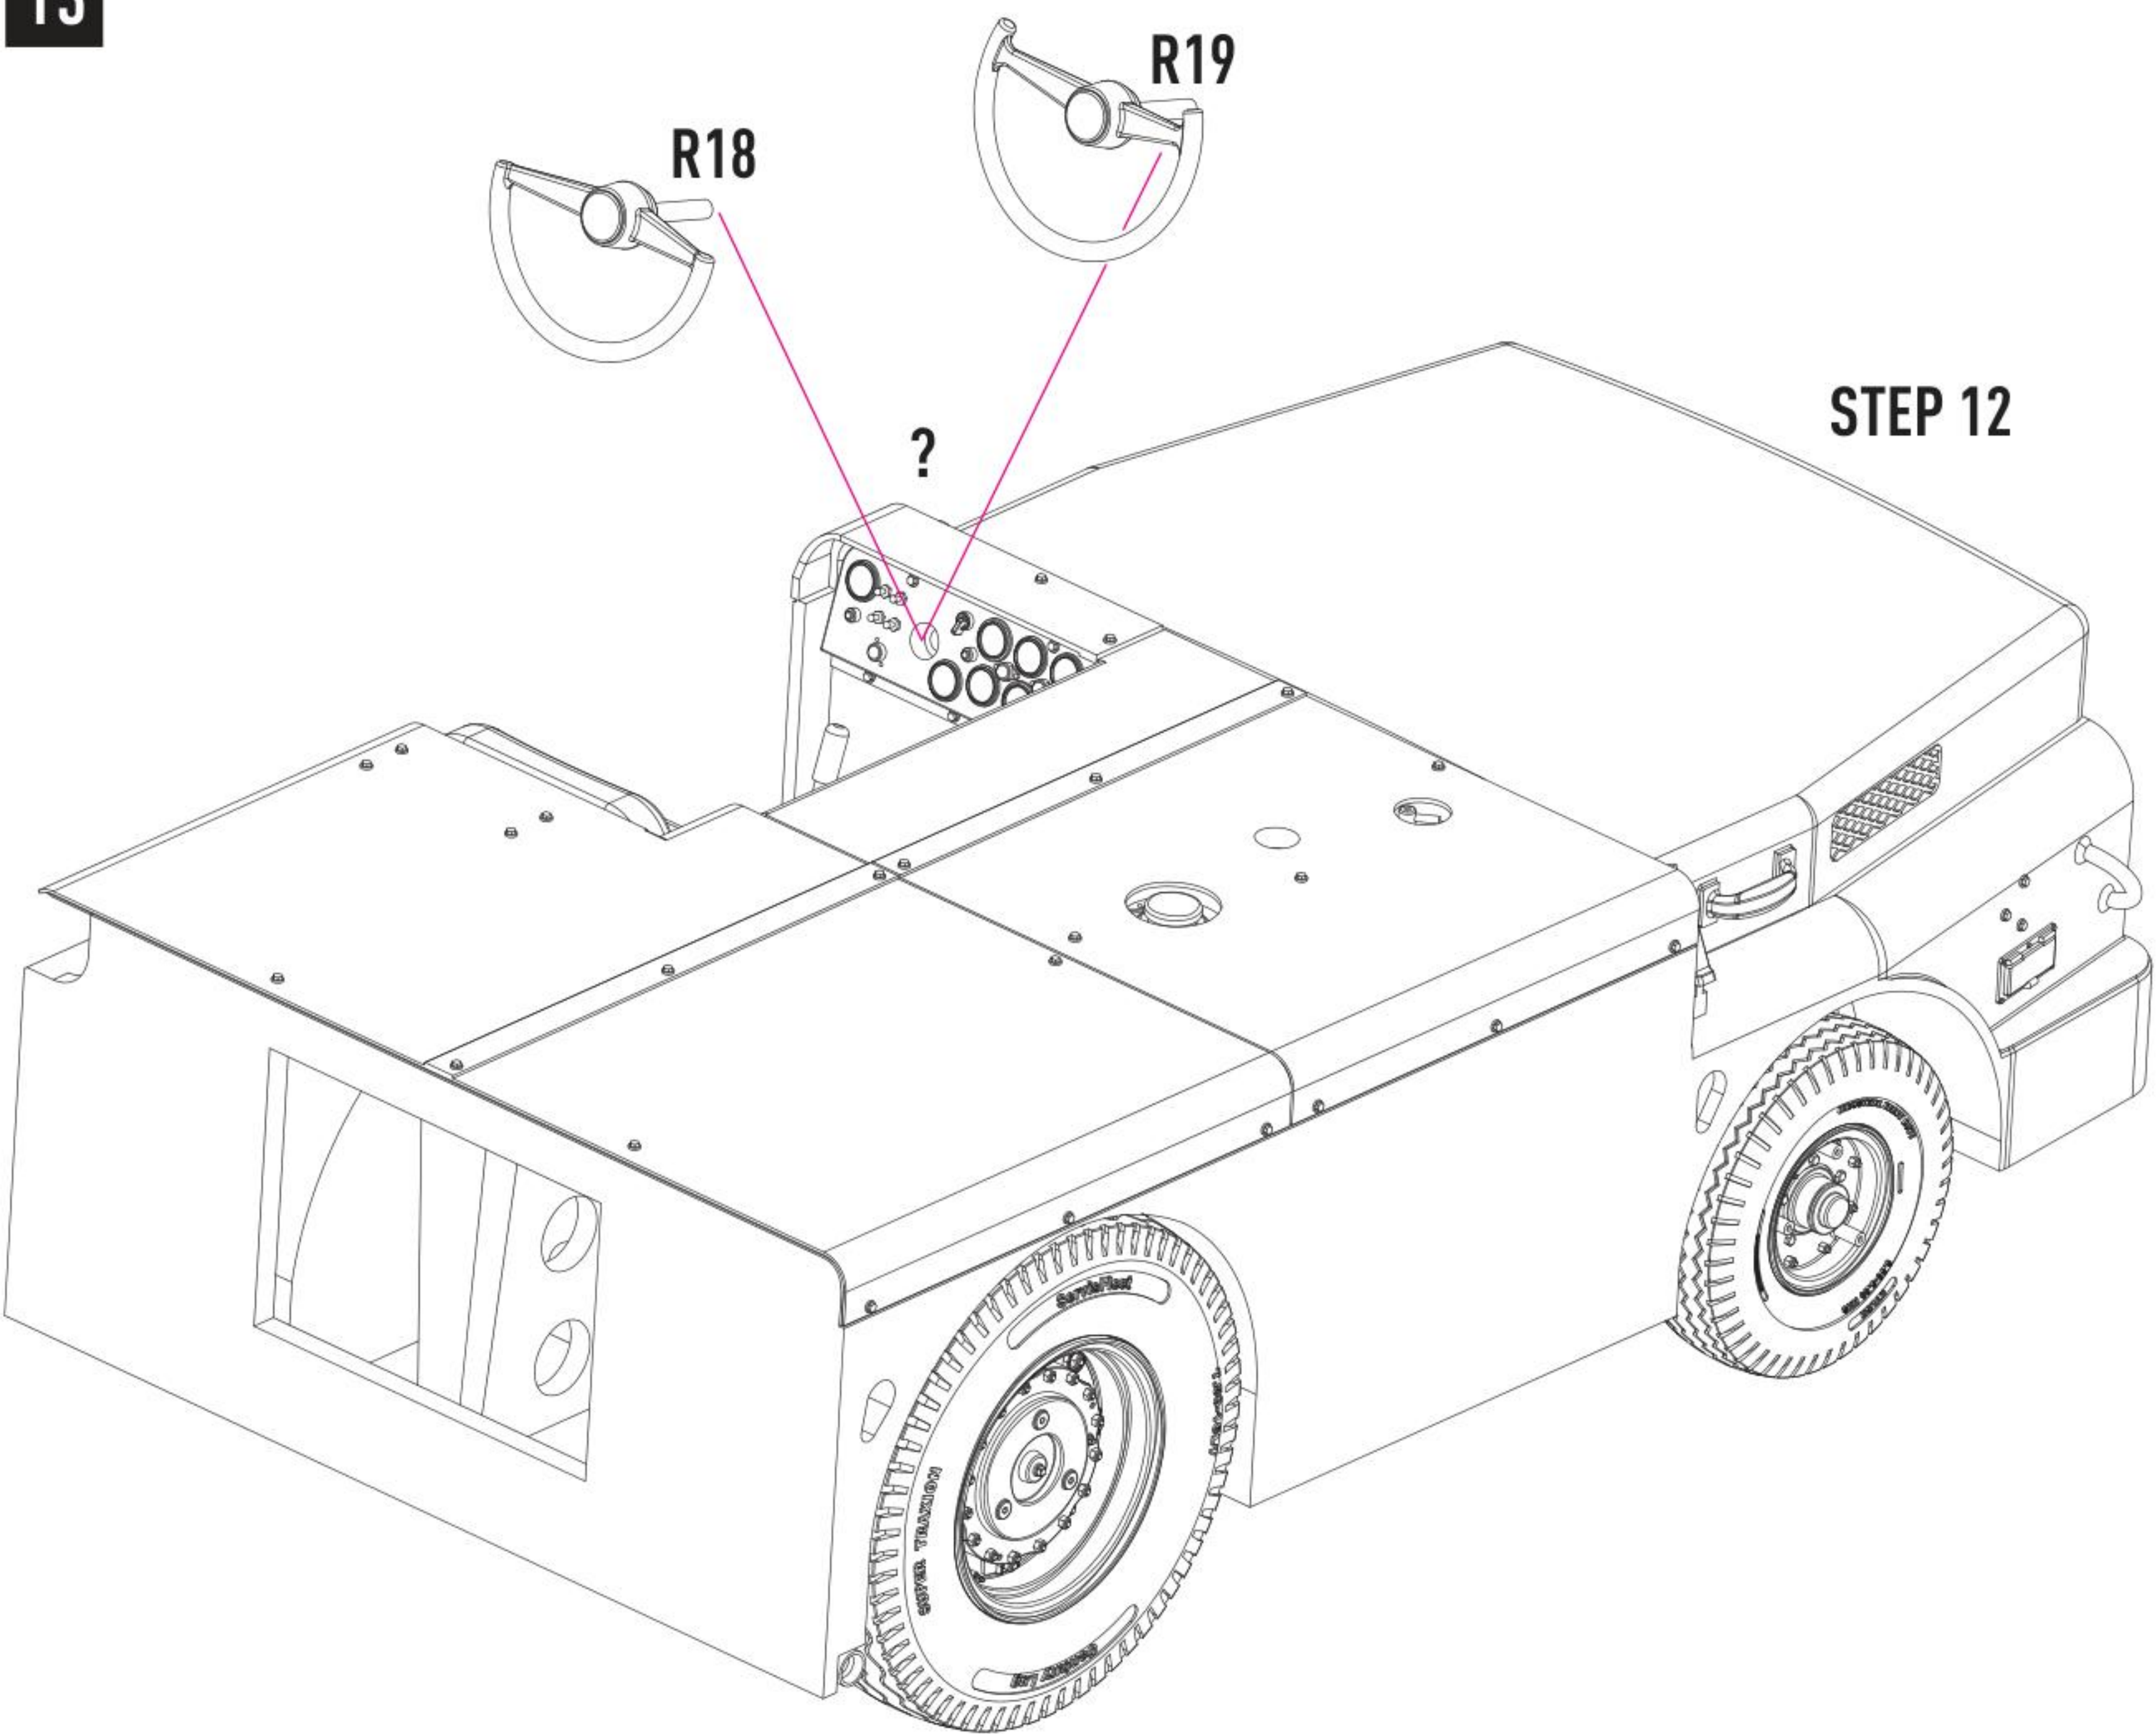


14

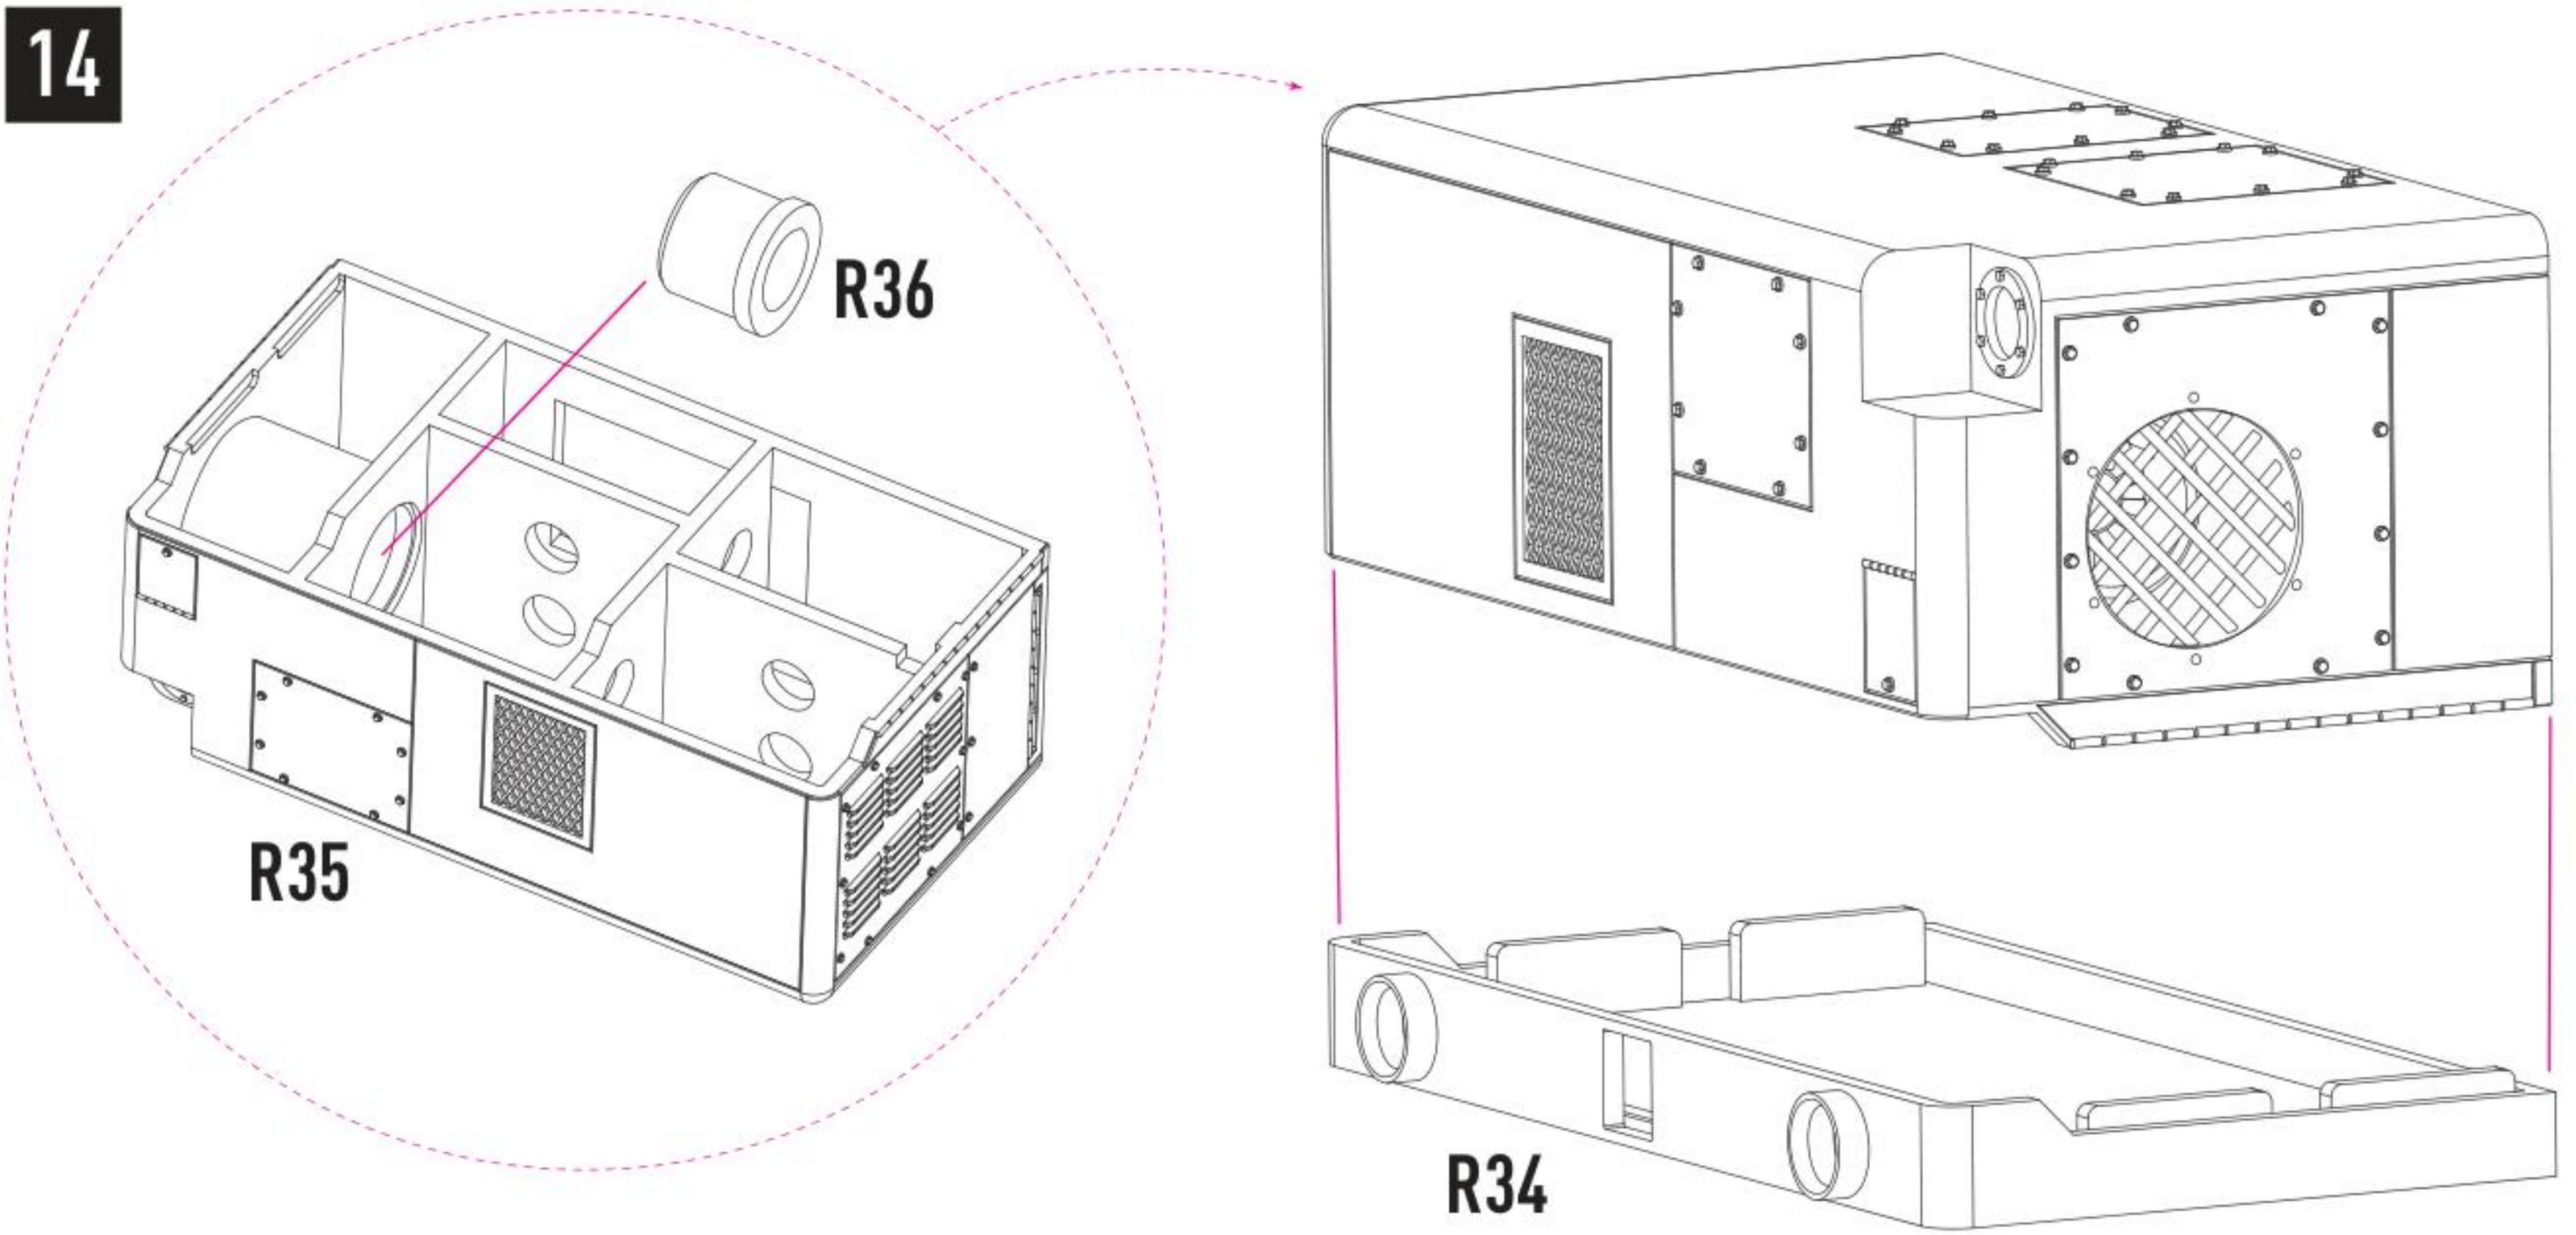


15

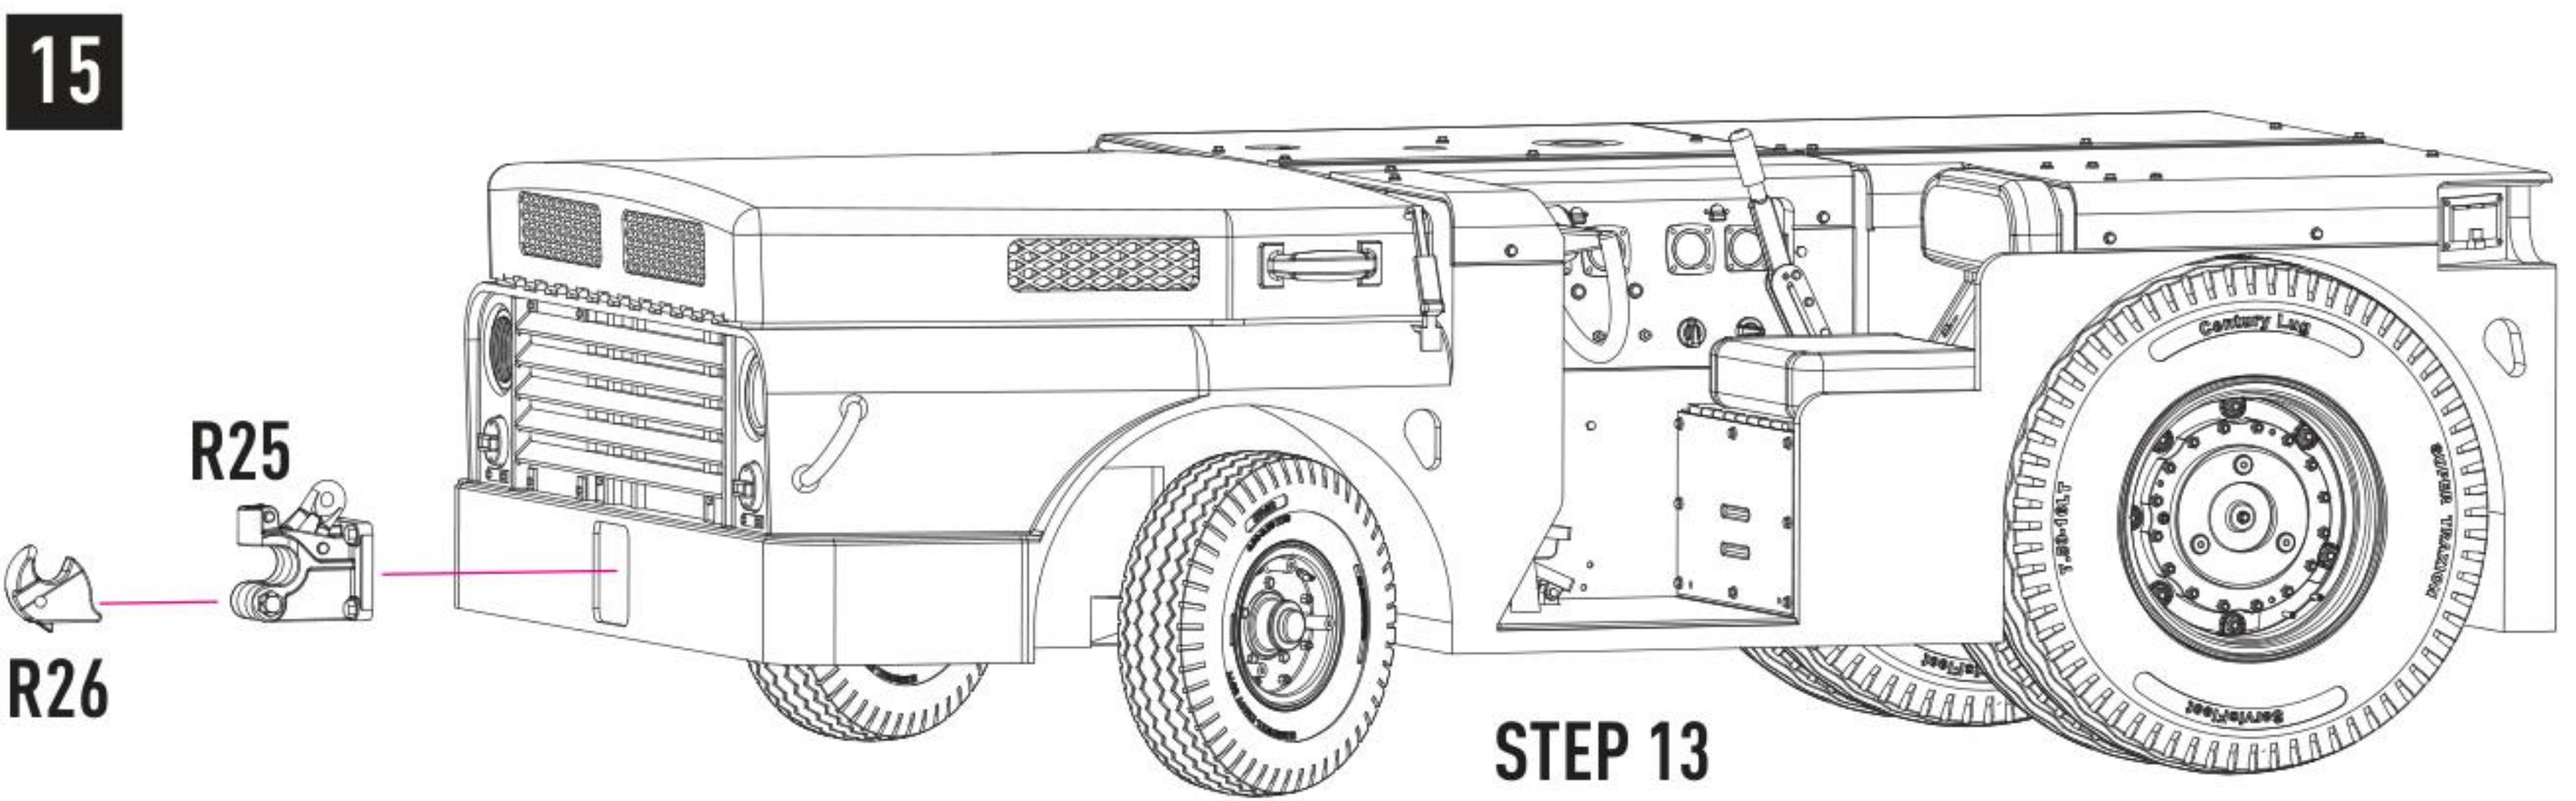



16

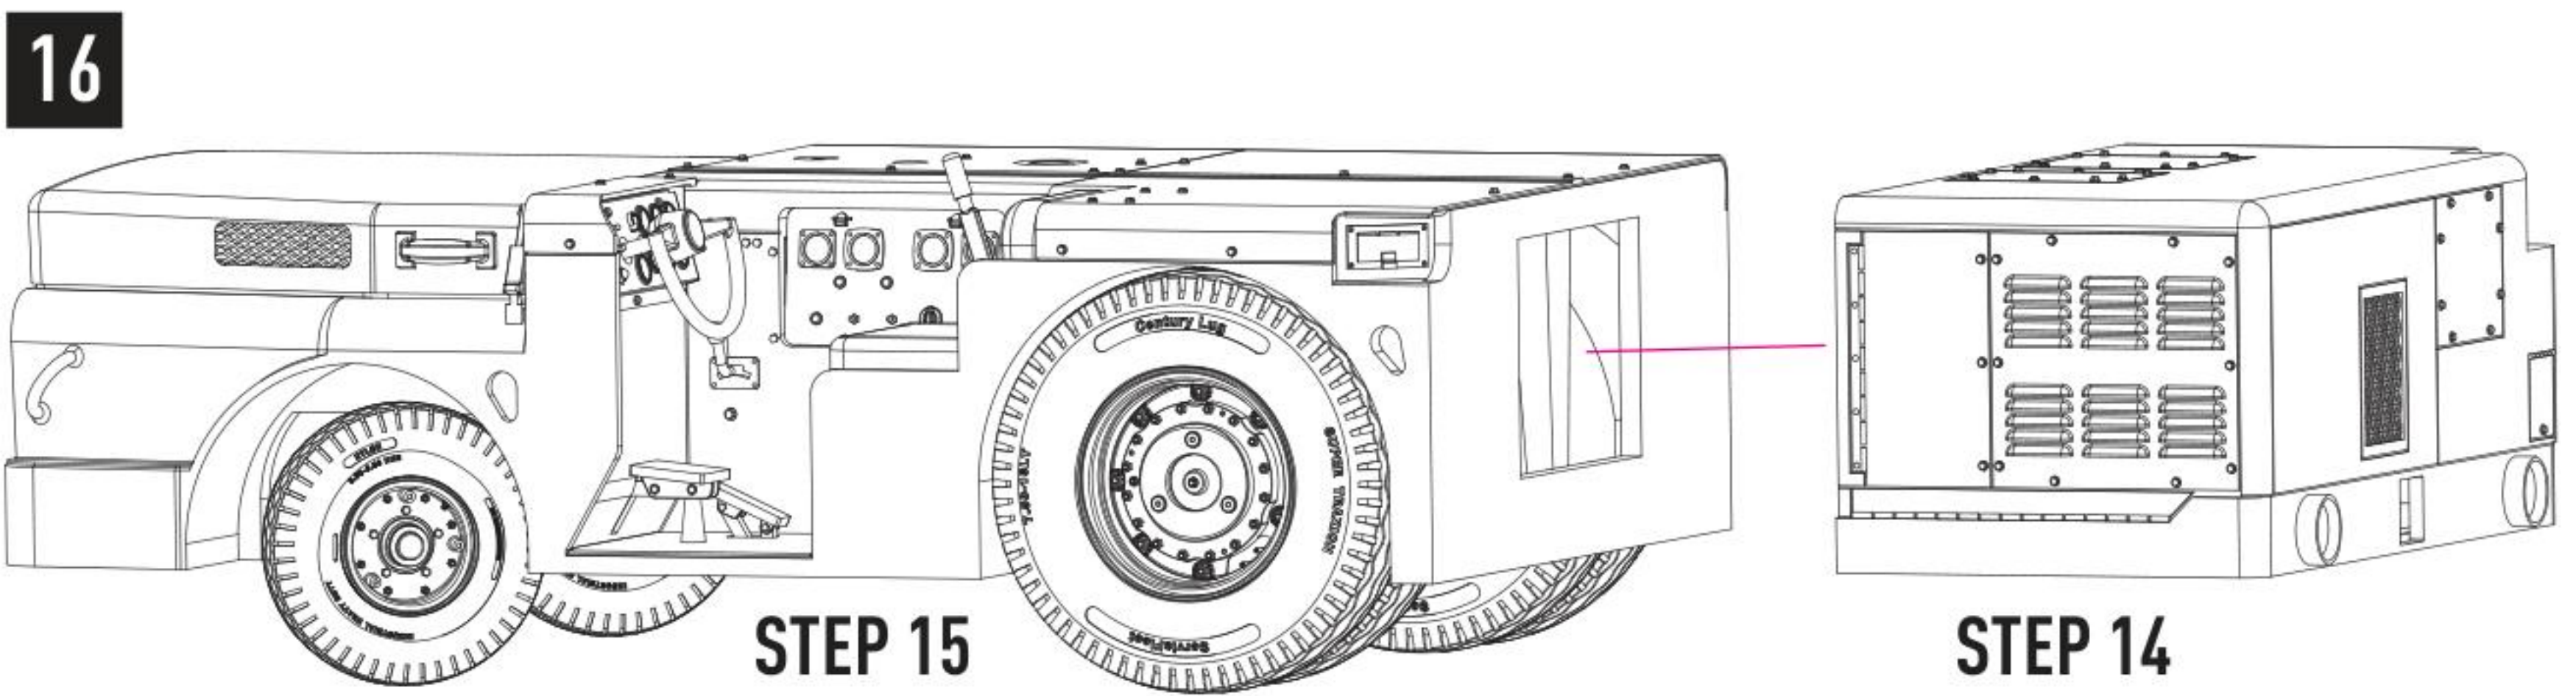


17

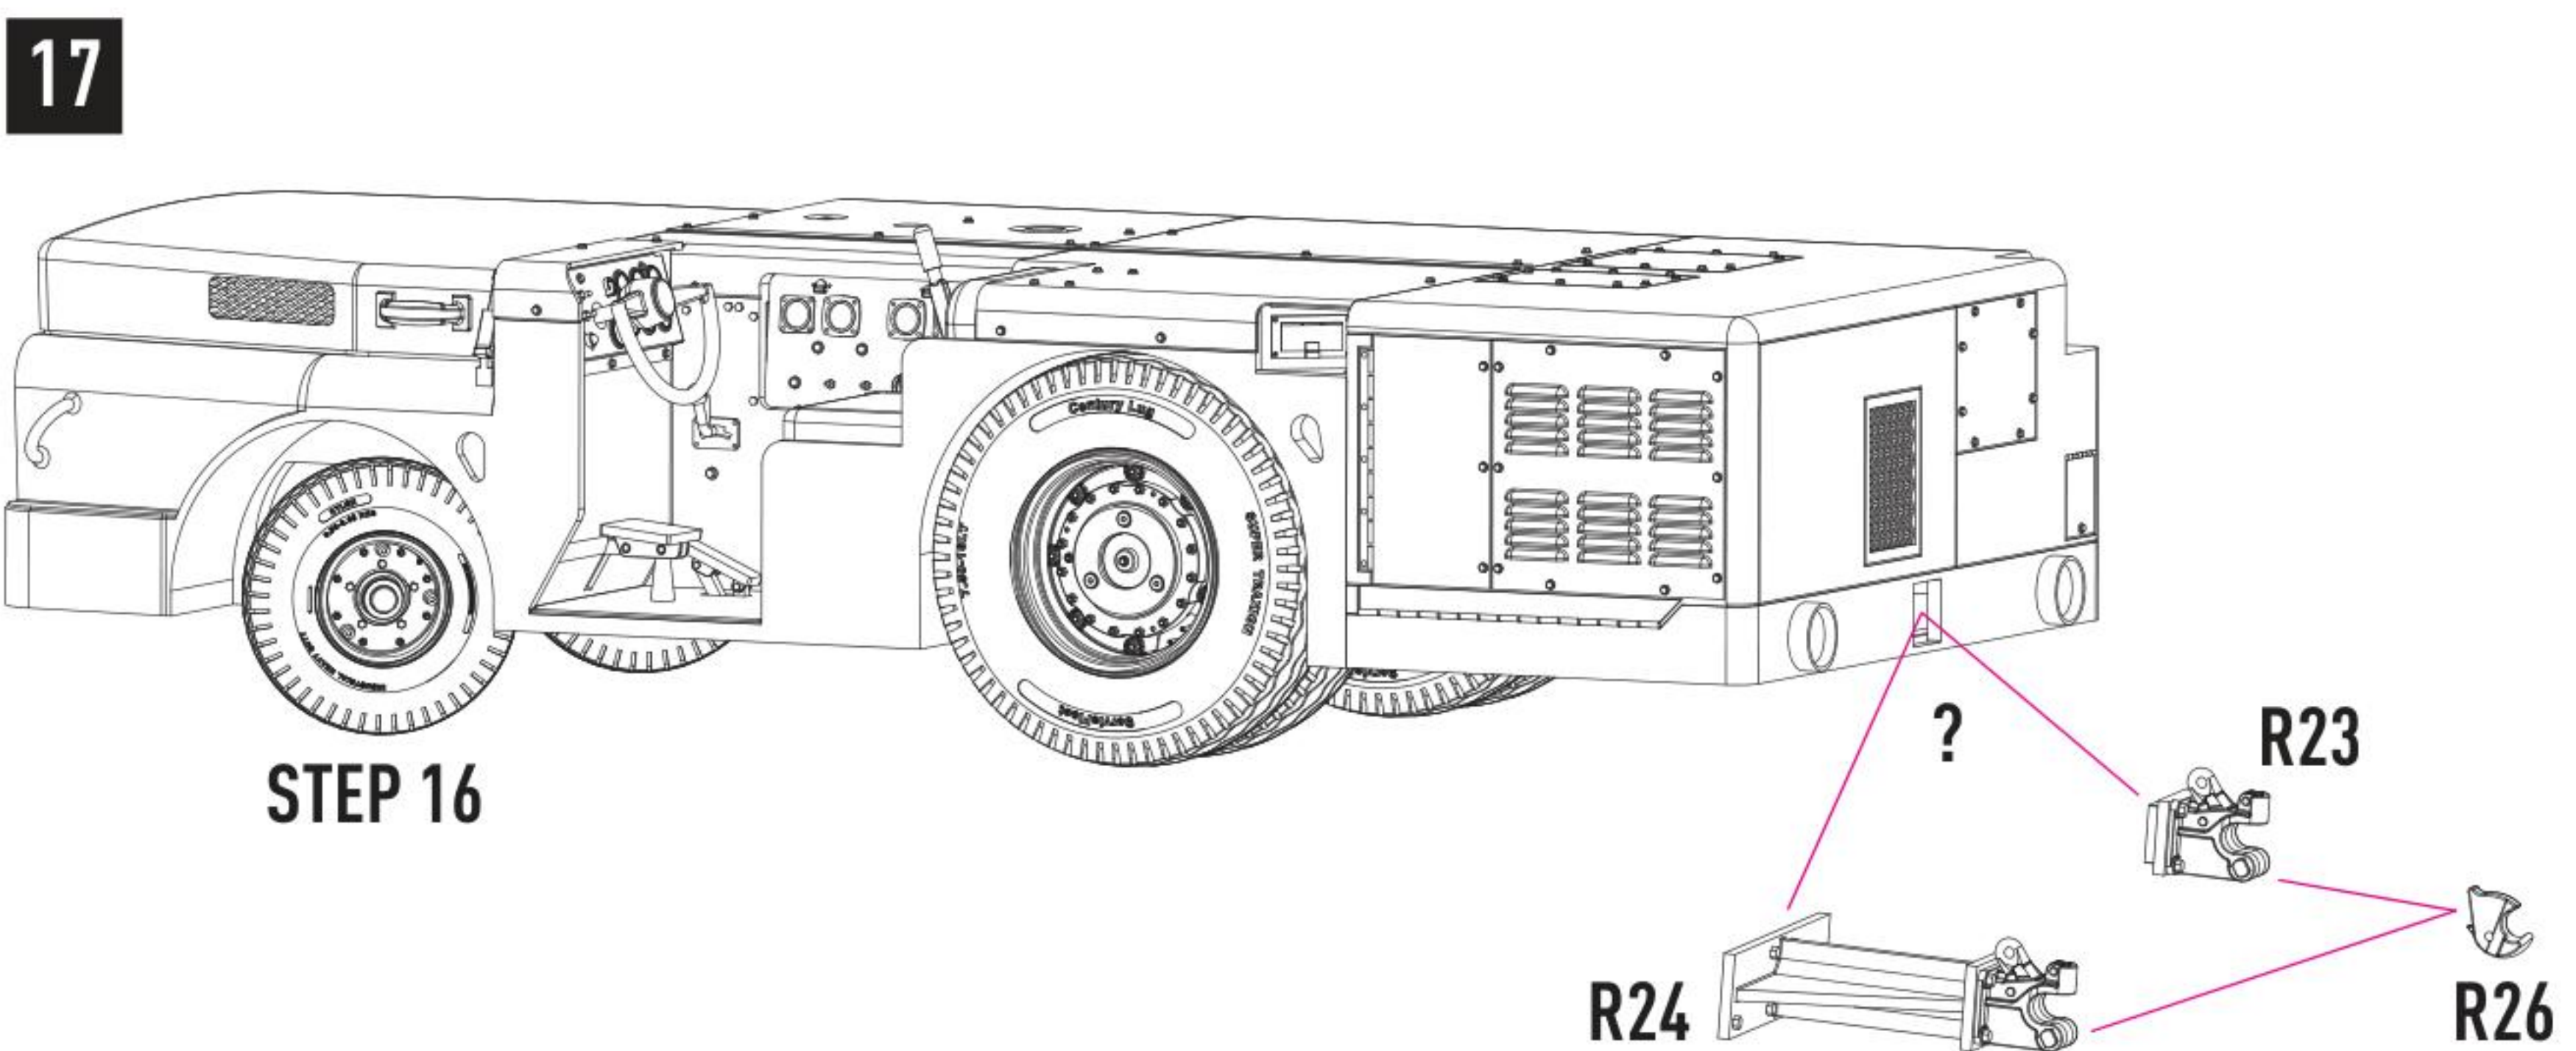


18

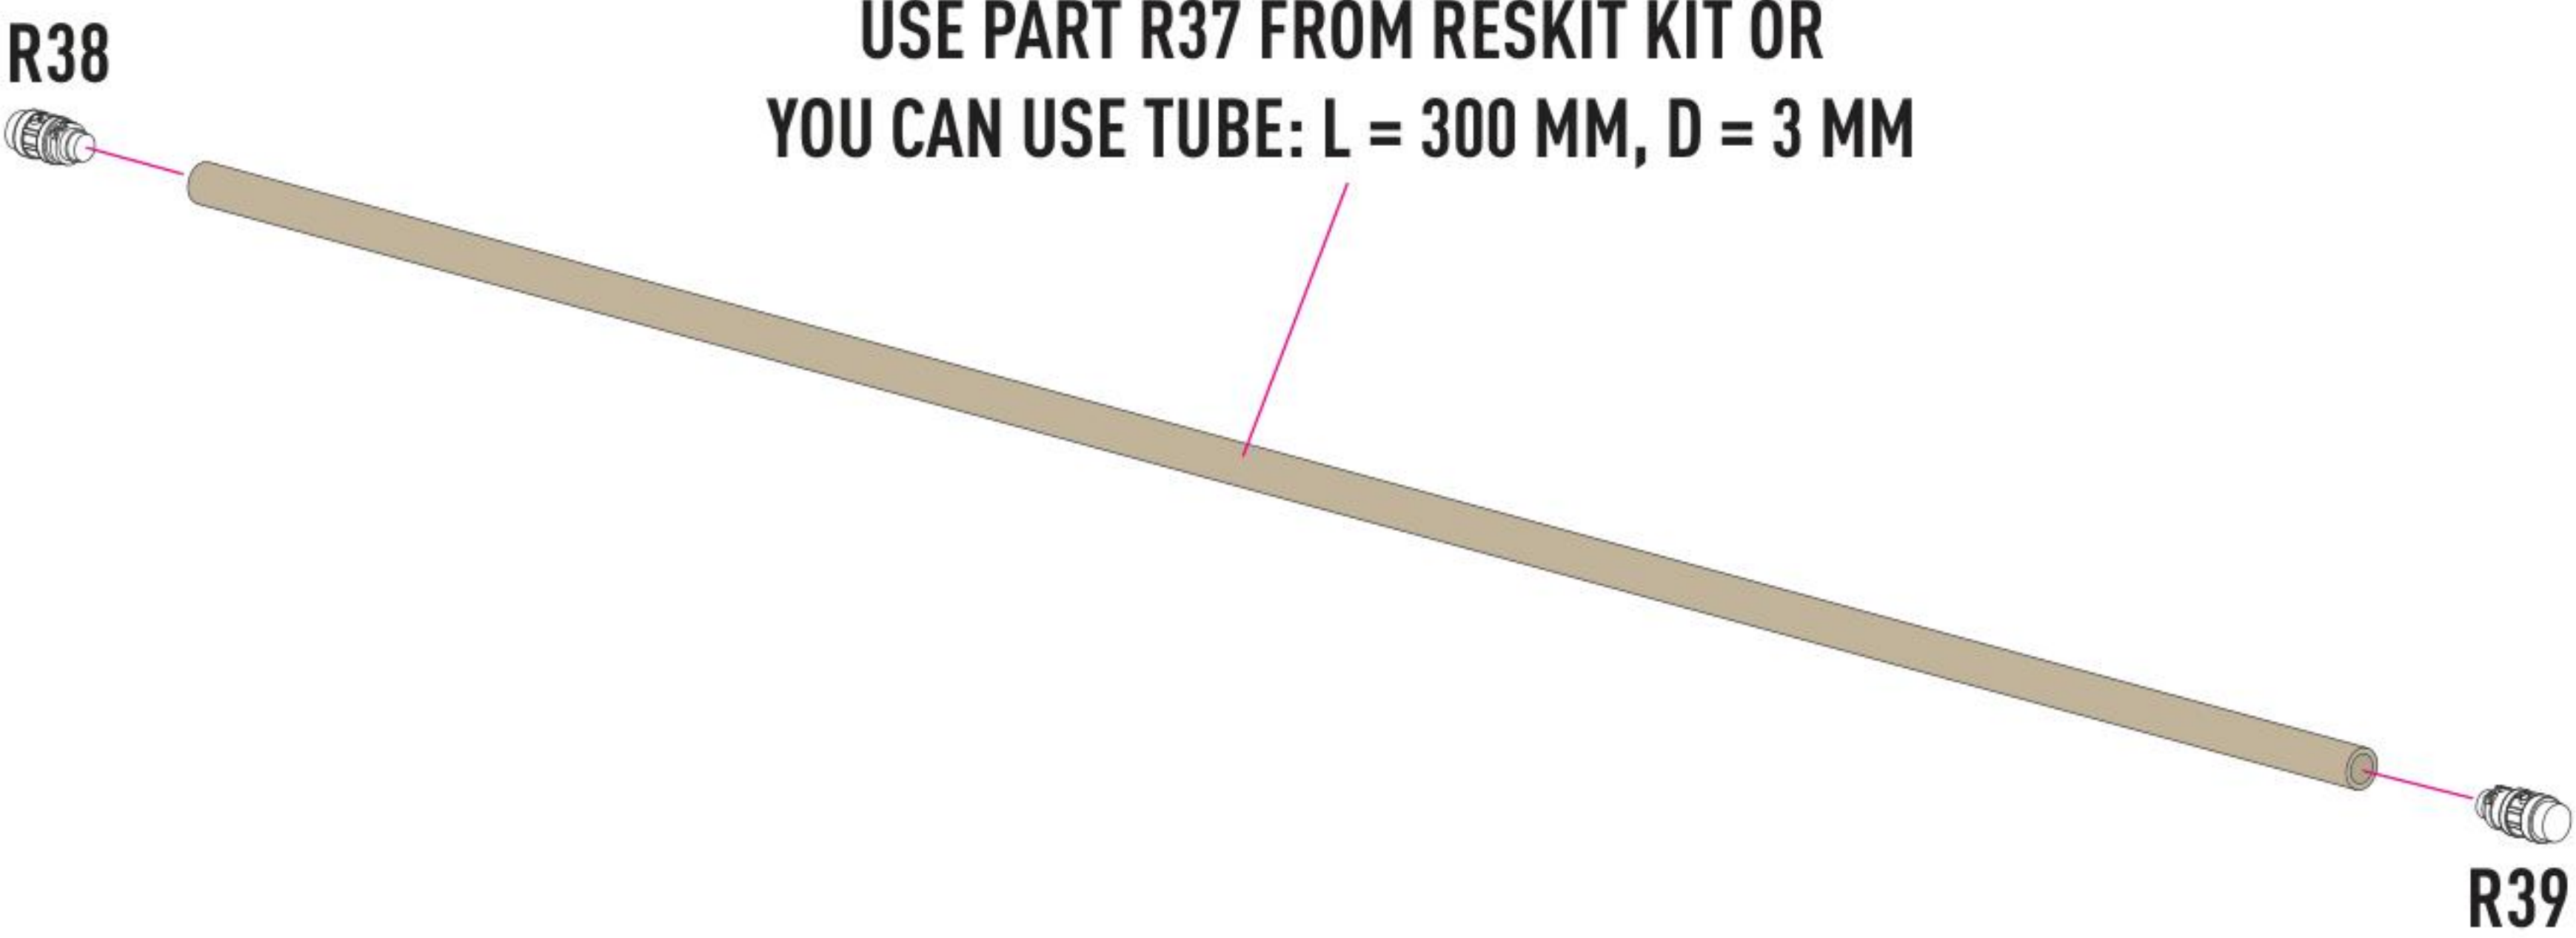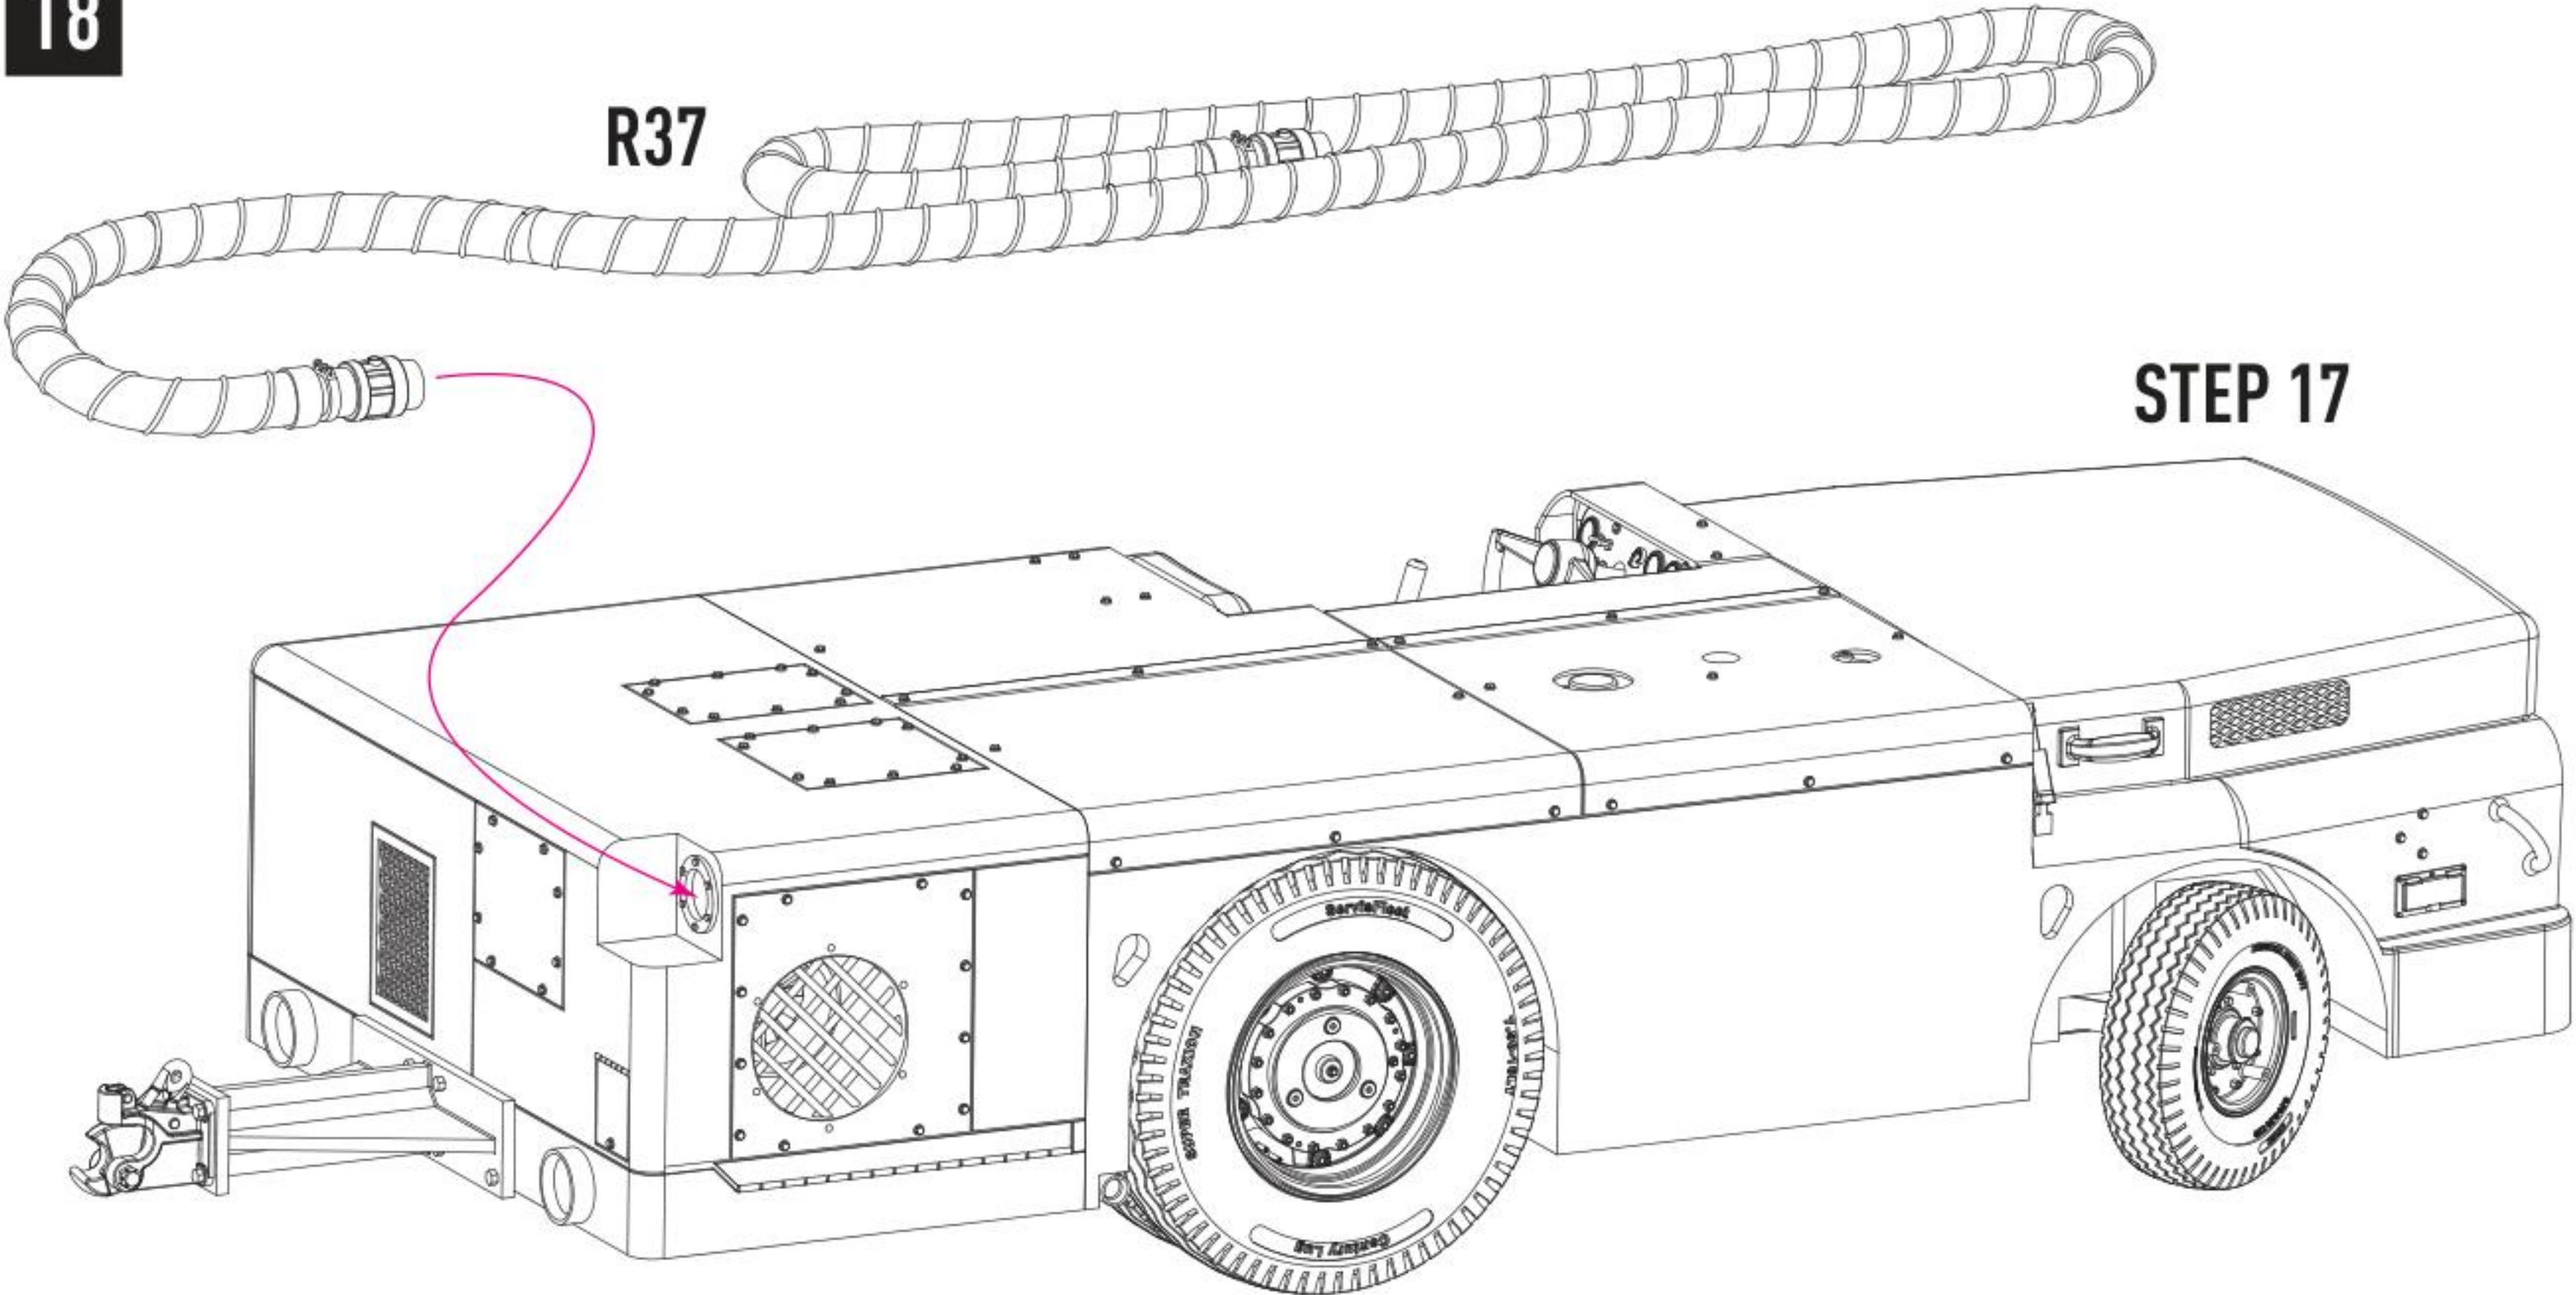


19

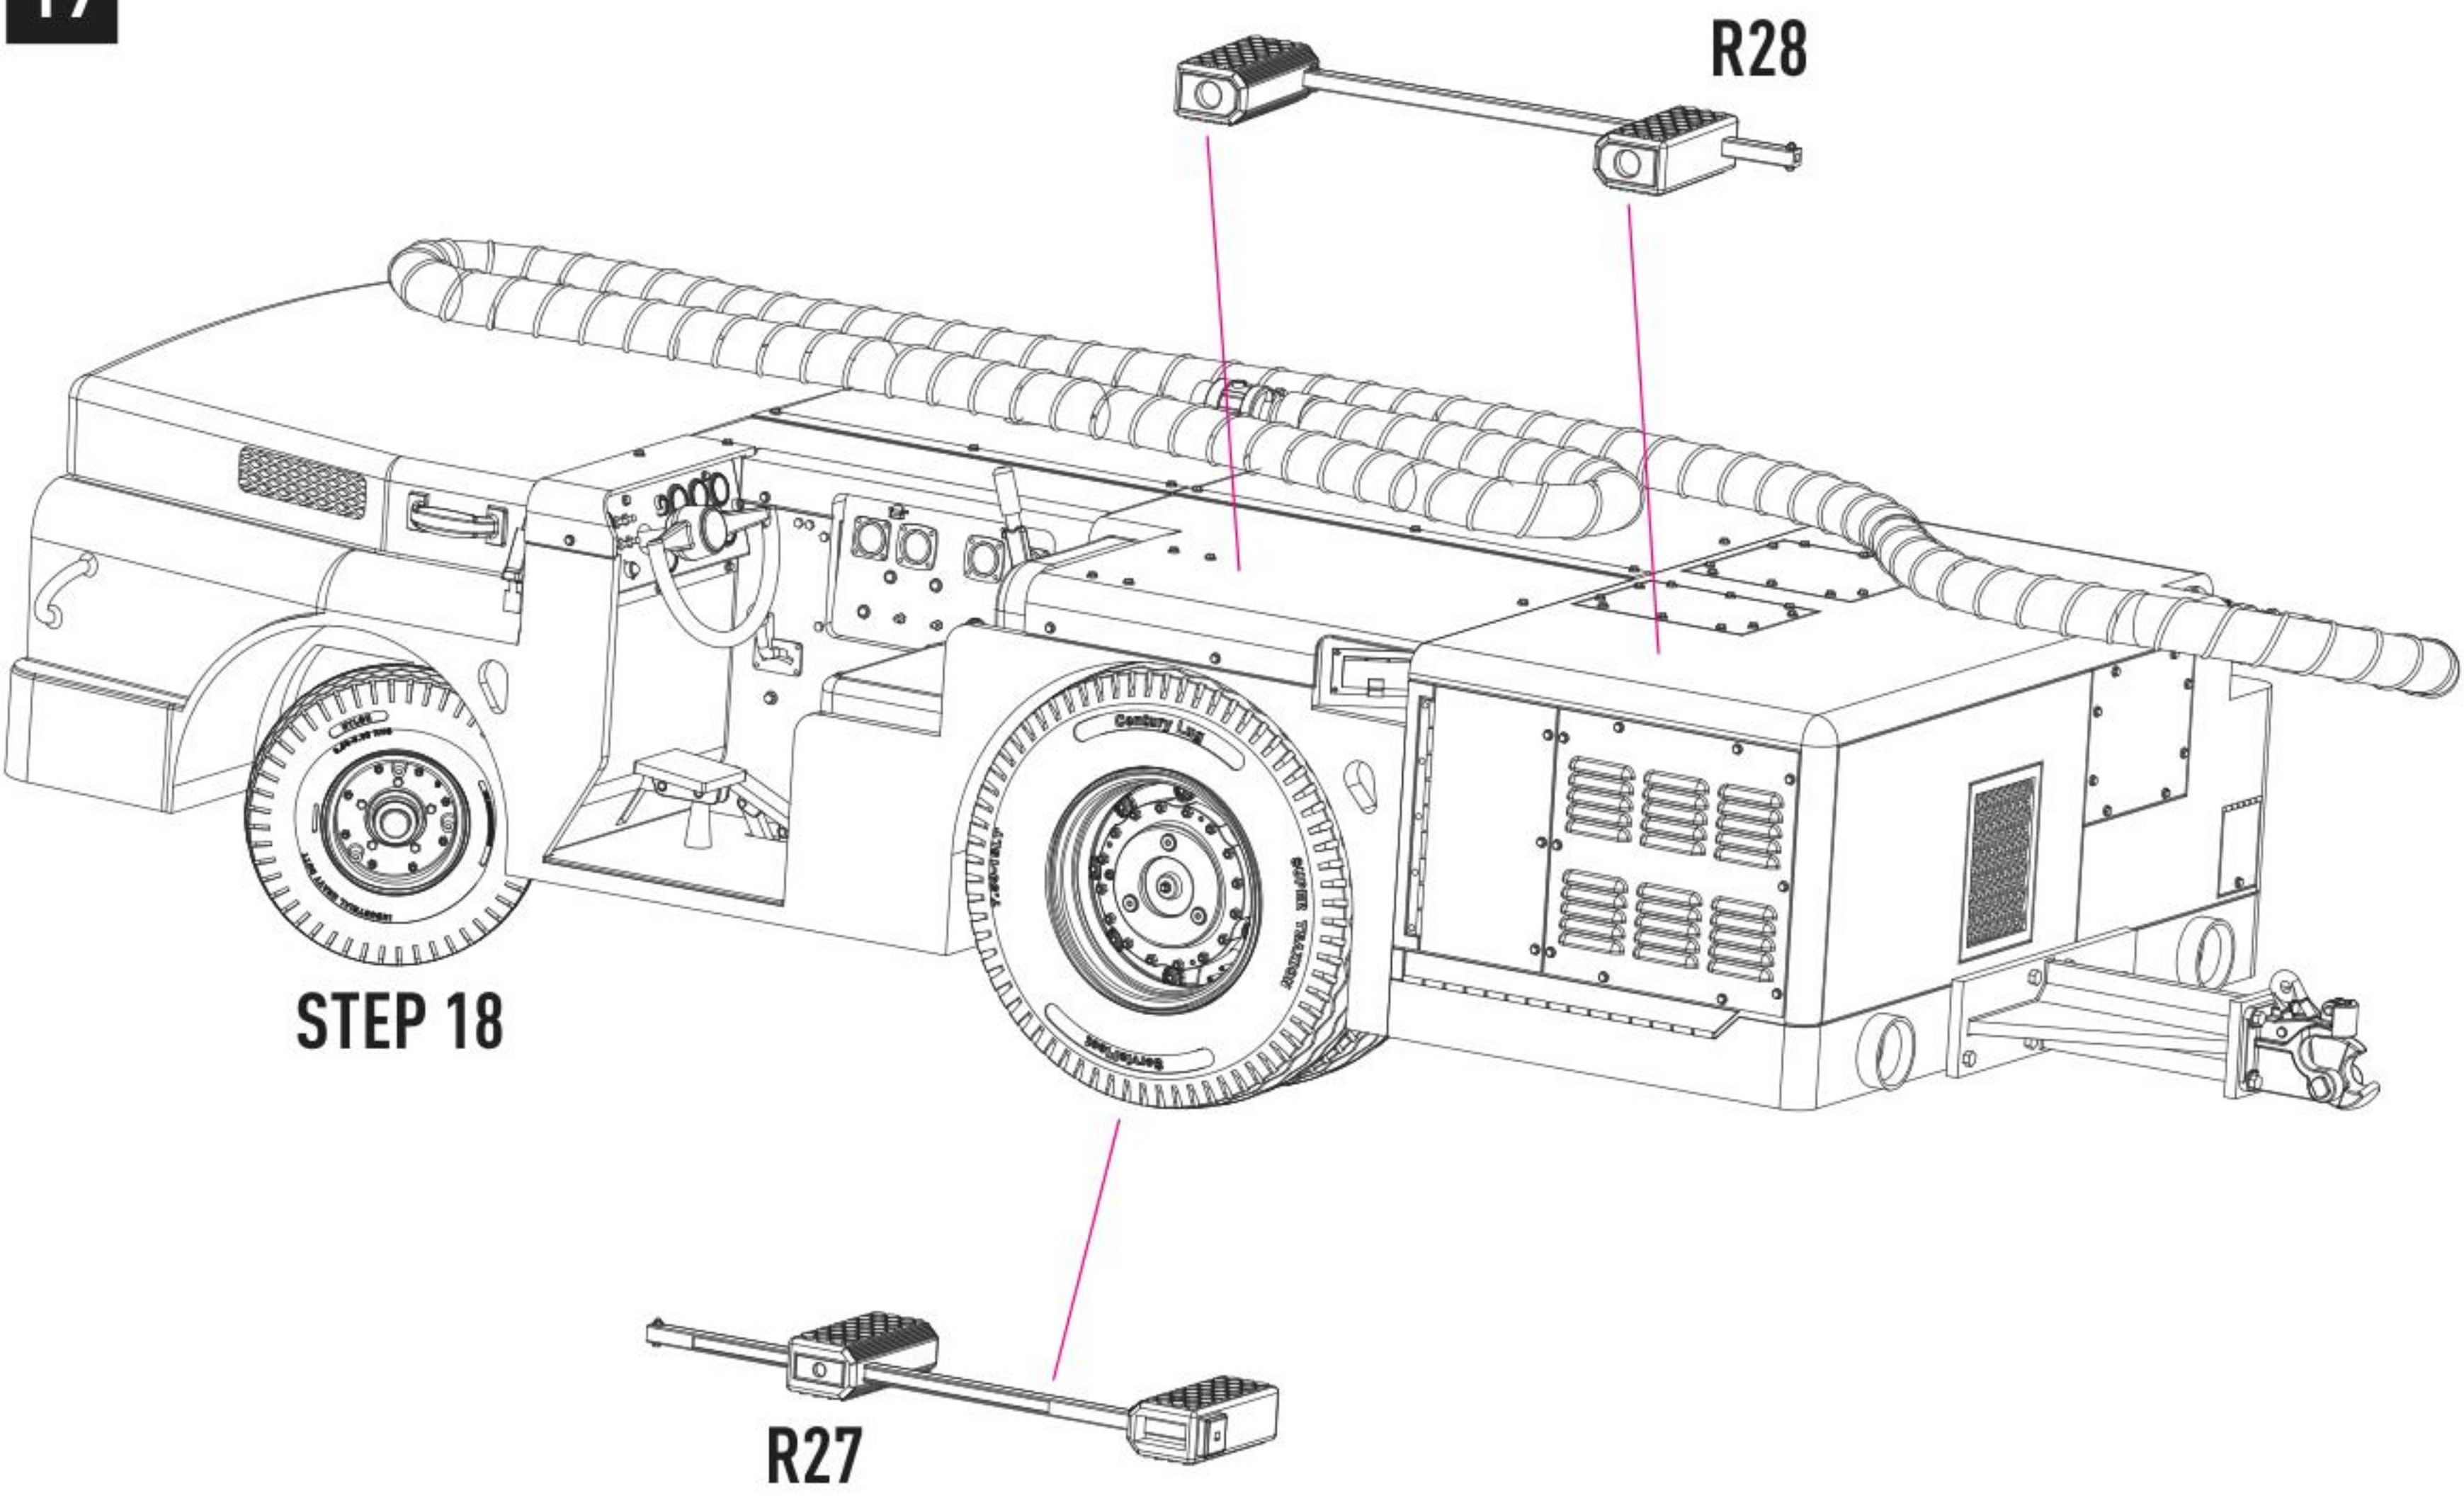


20

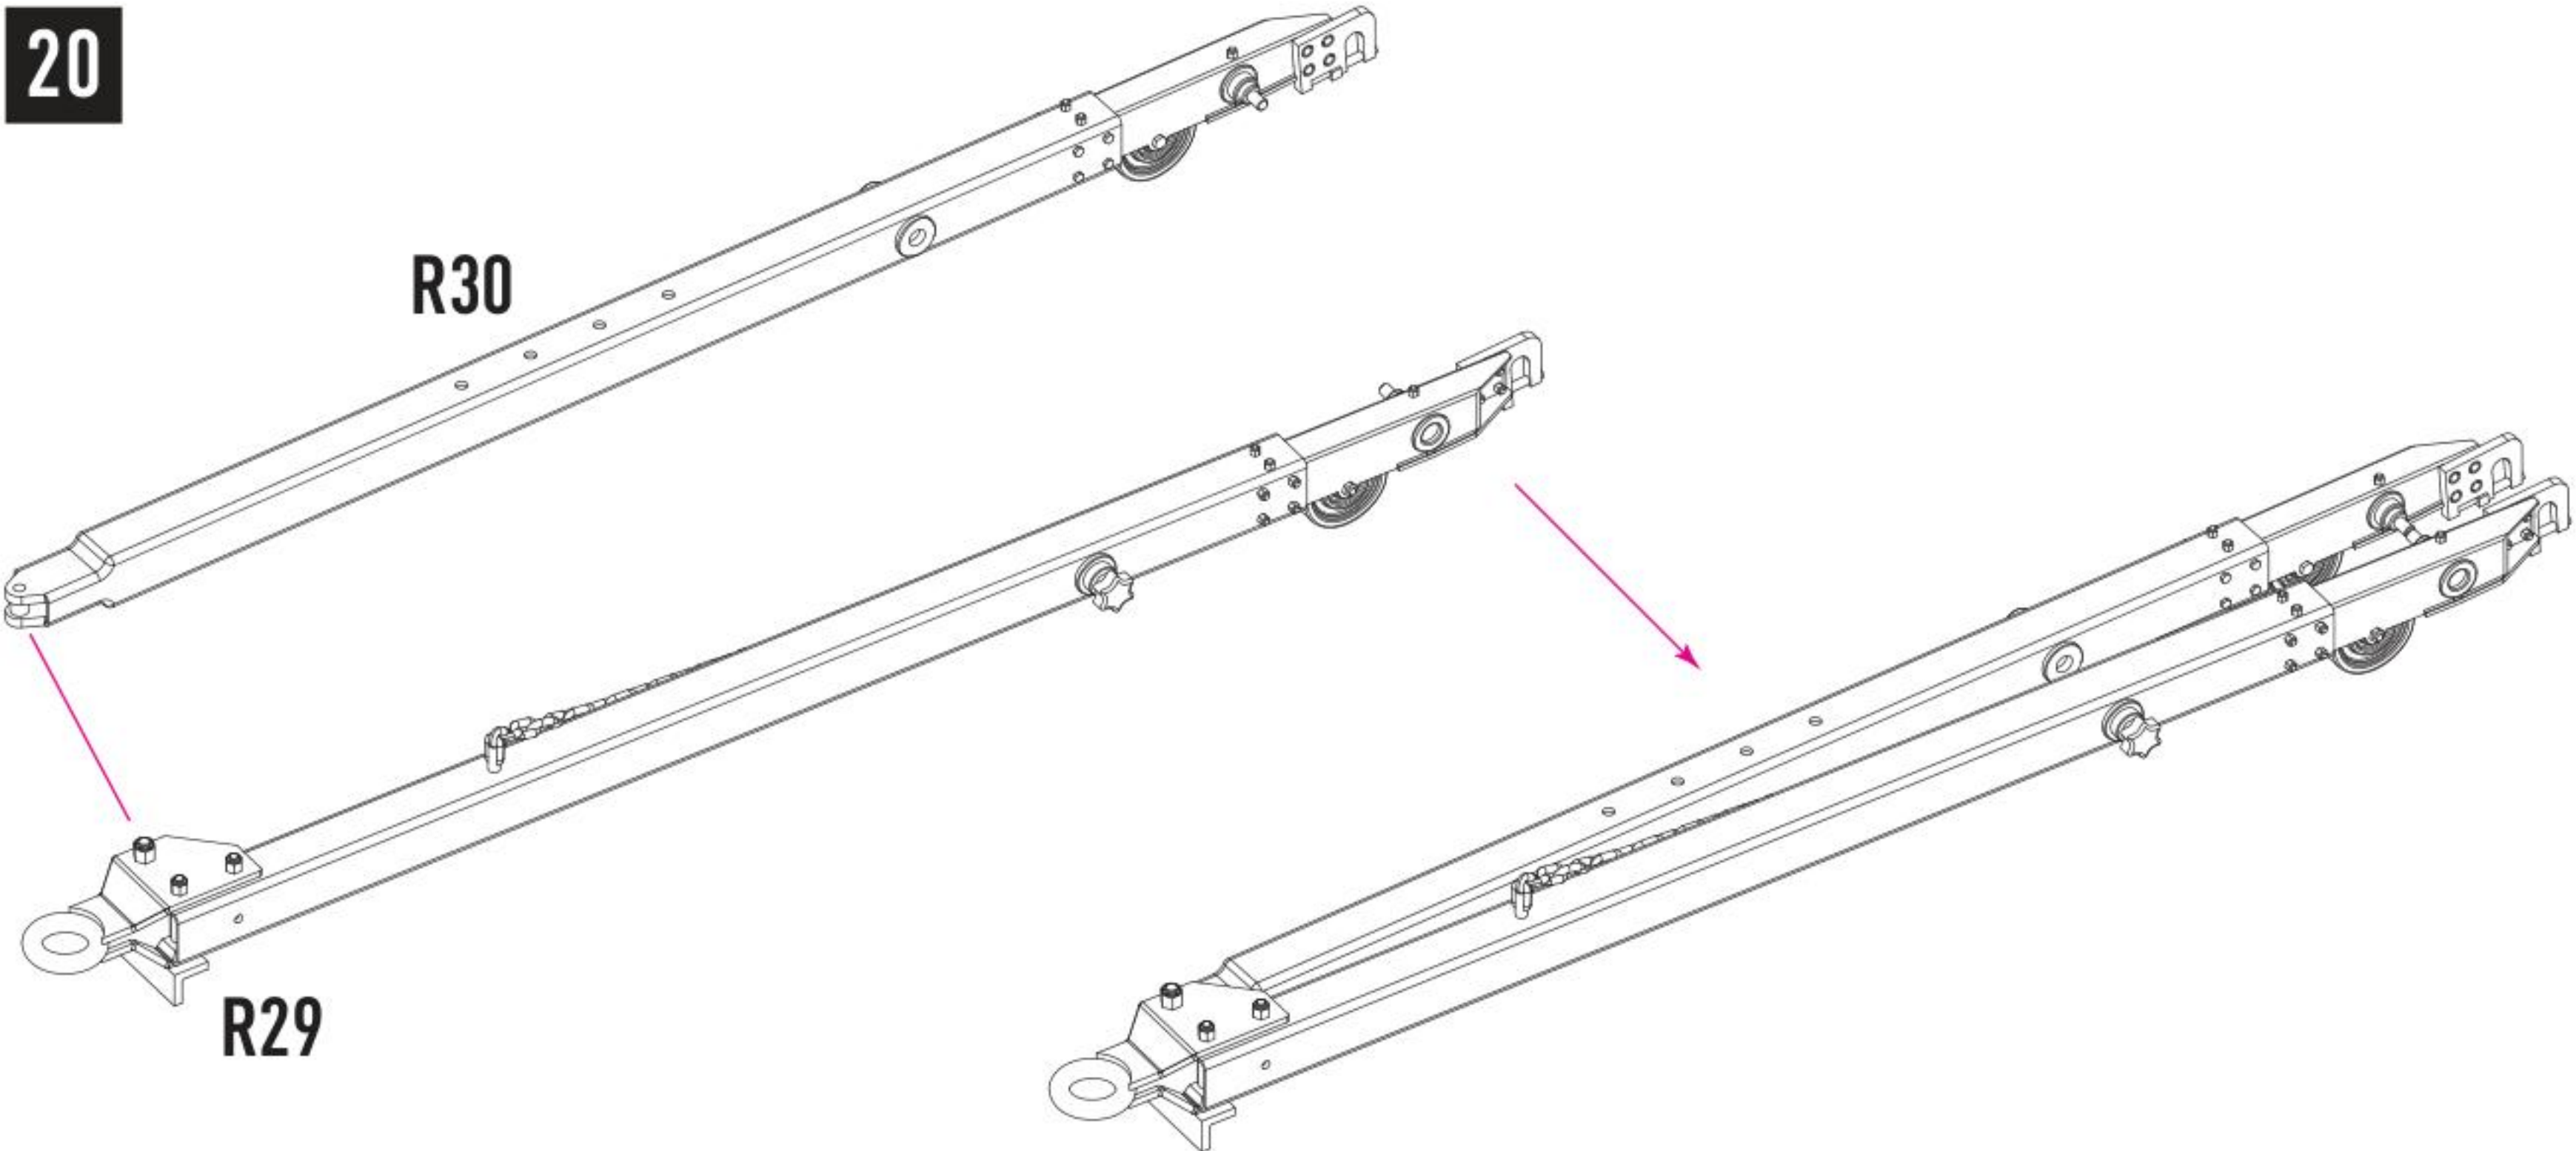


21

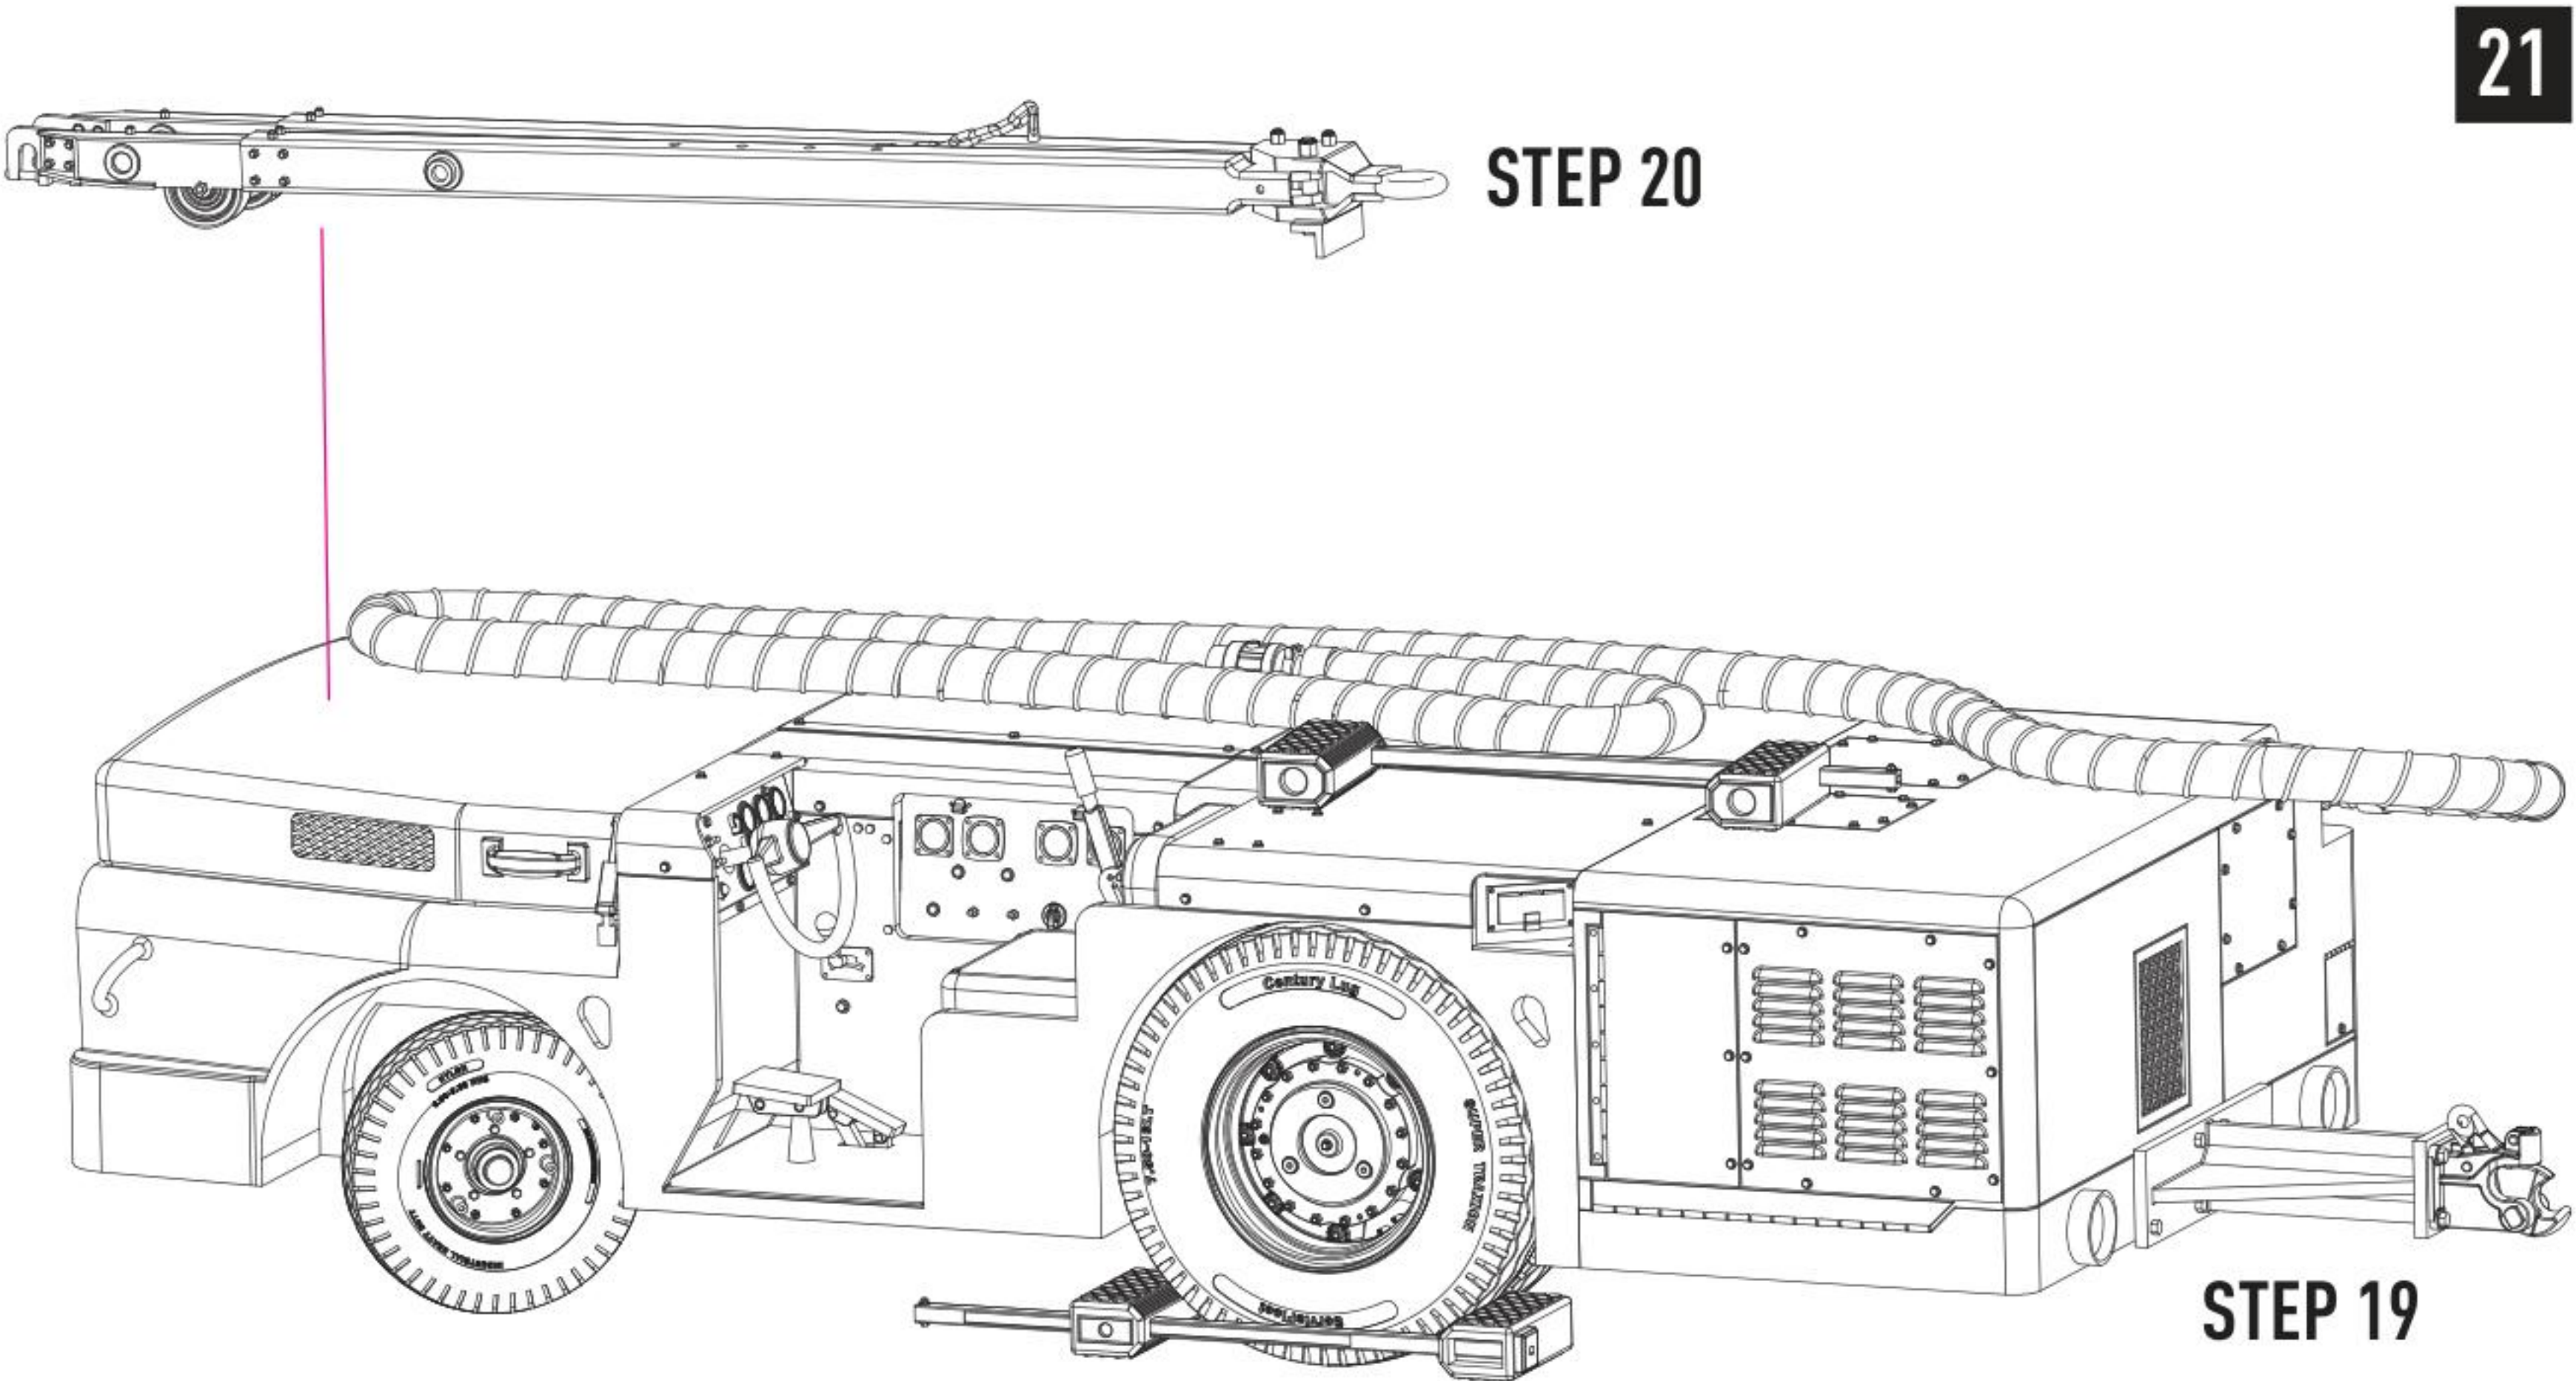


22

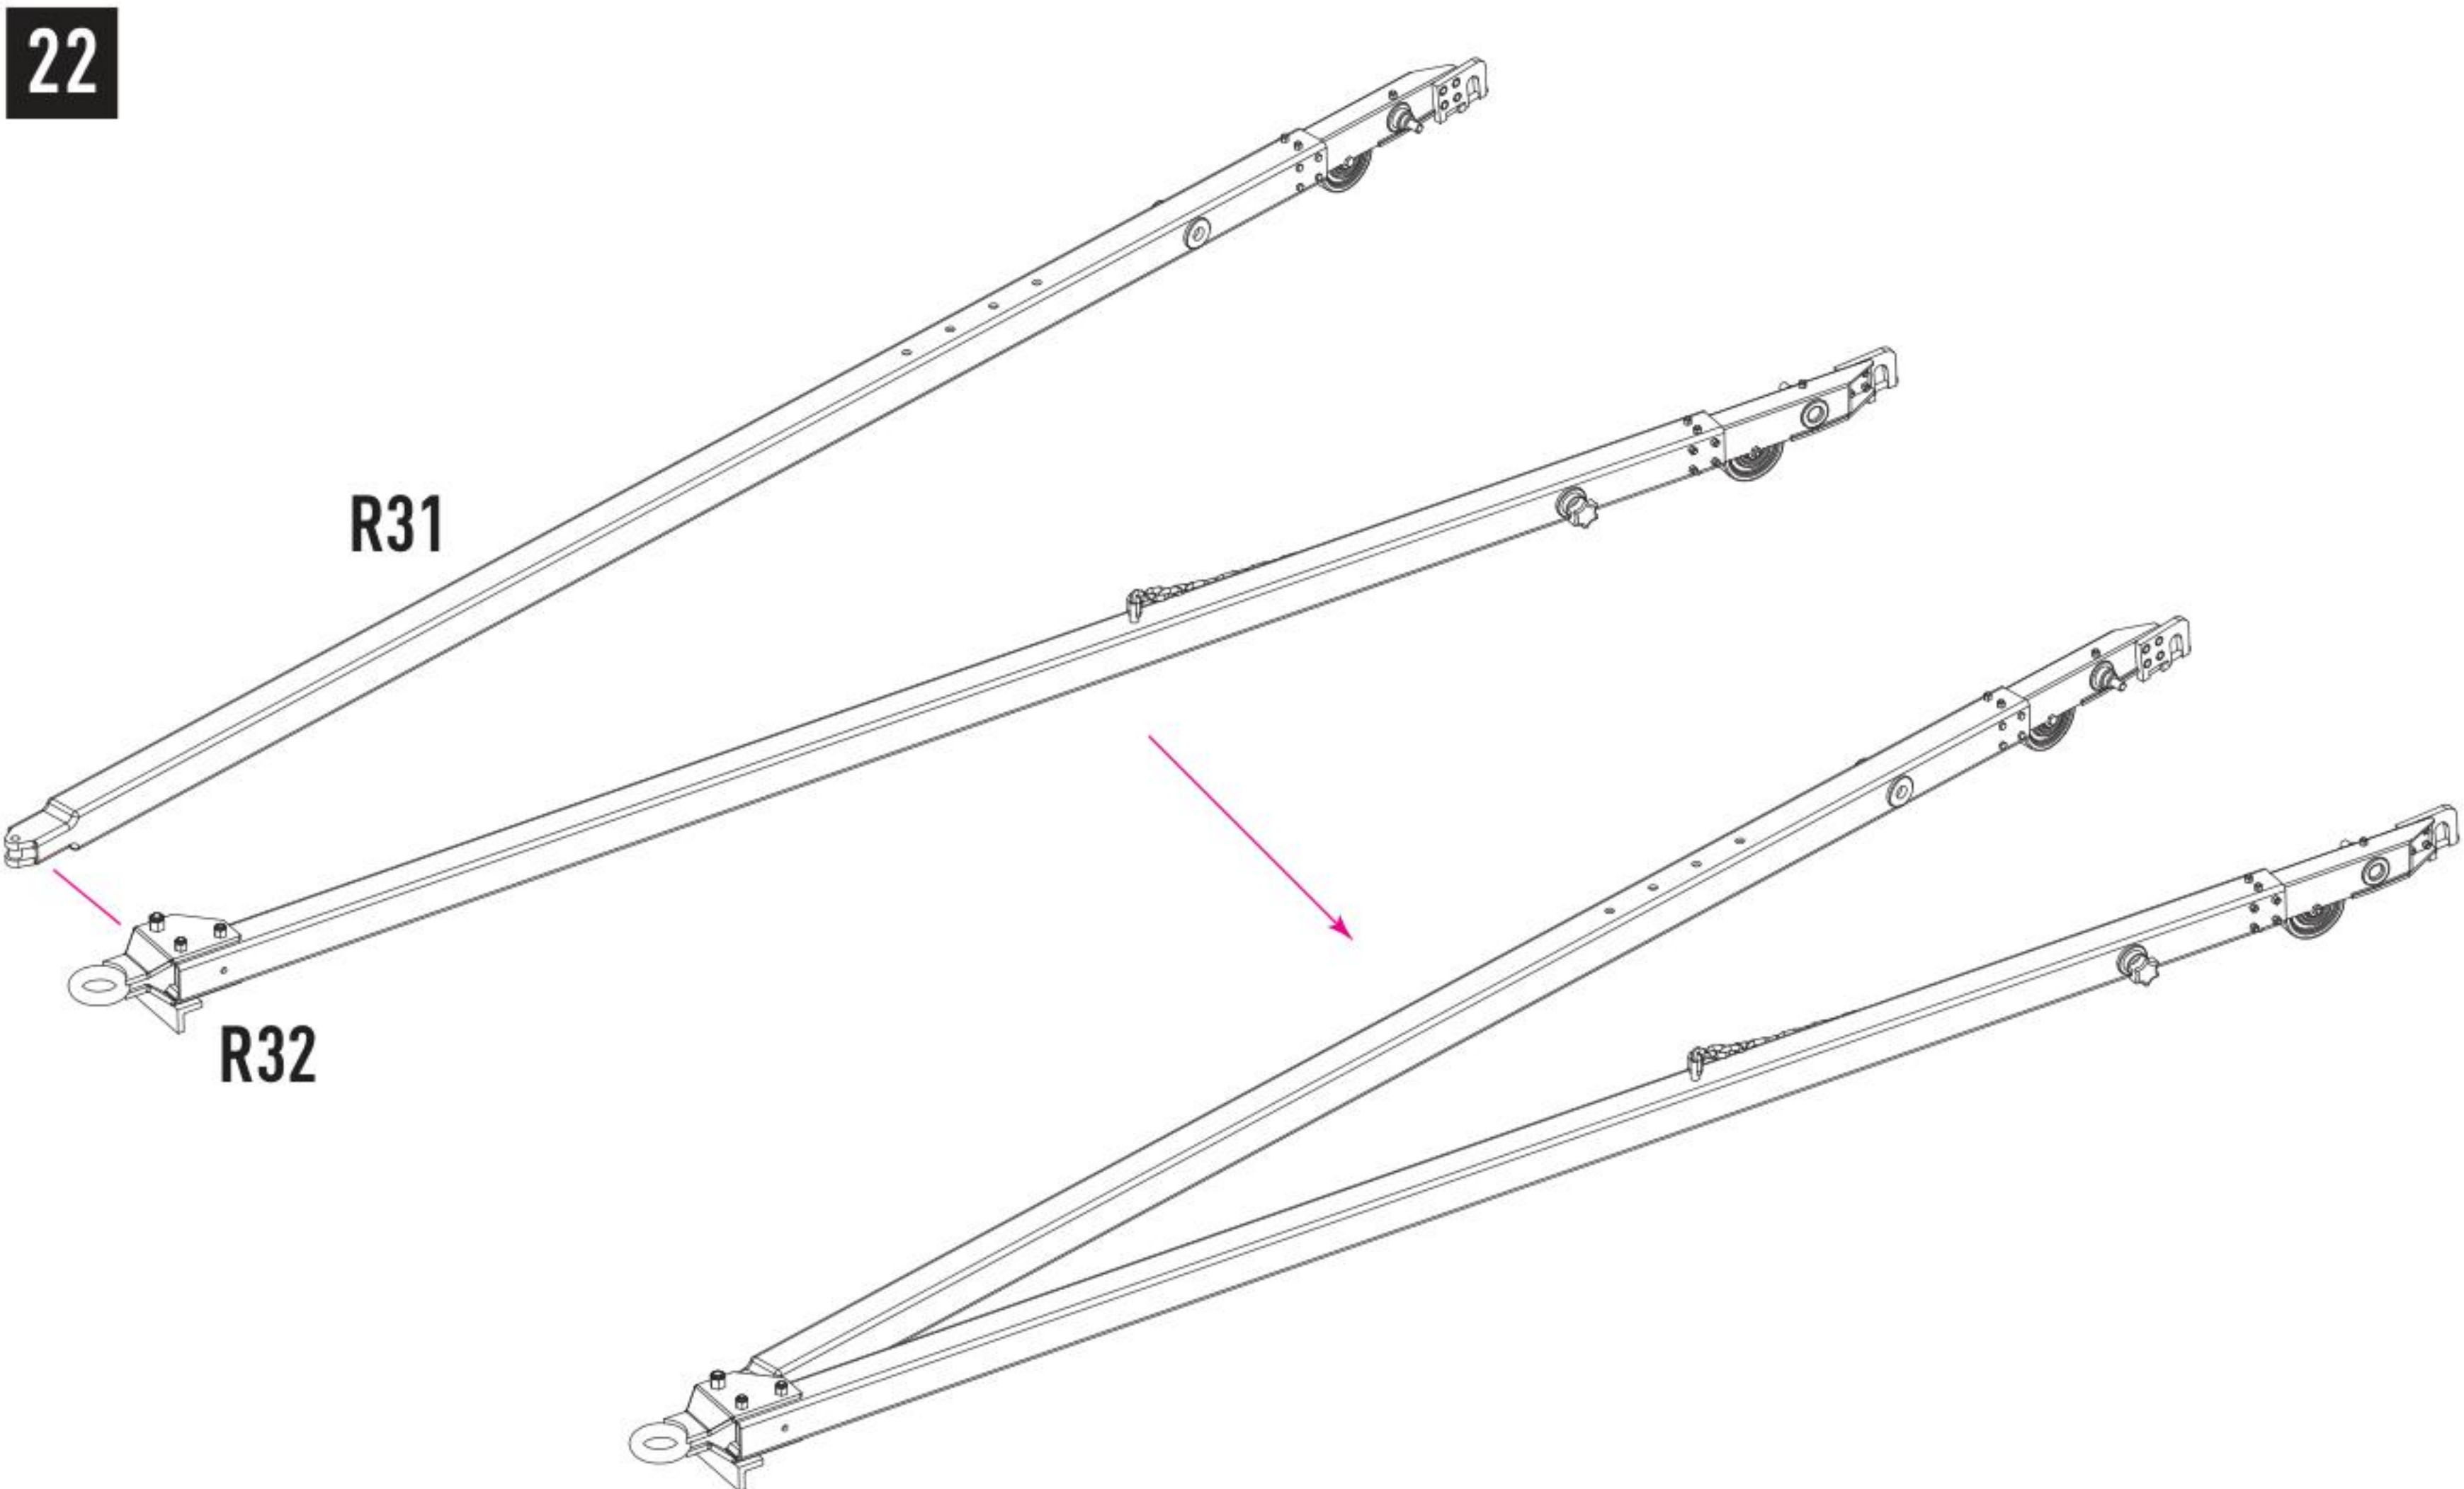



STEP 21

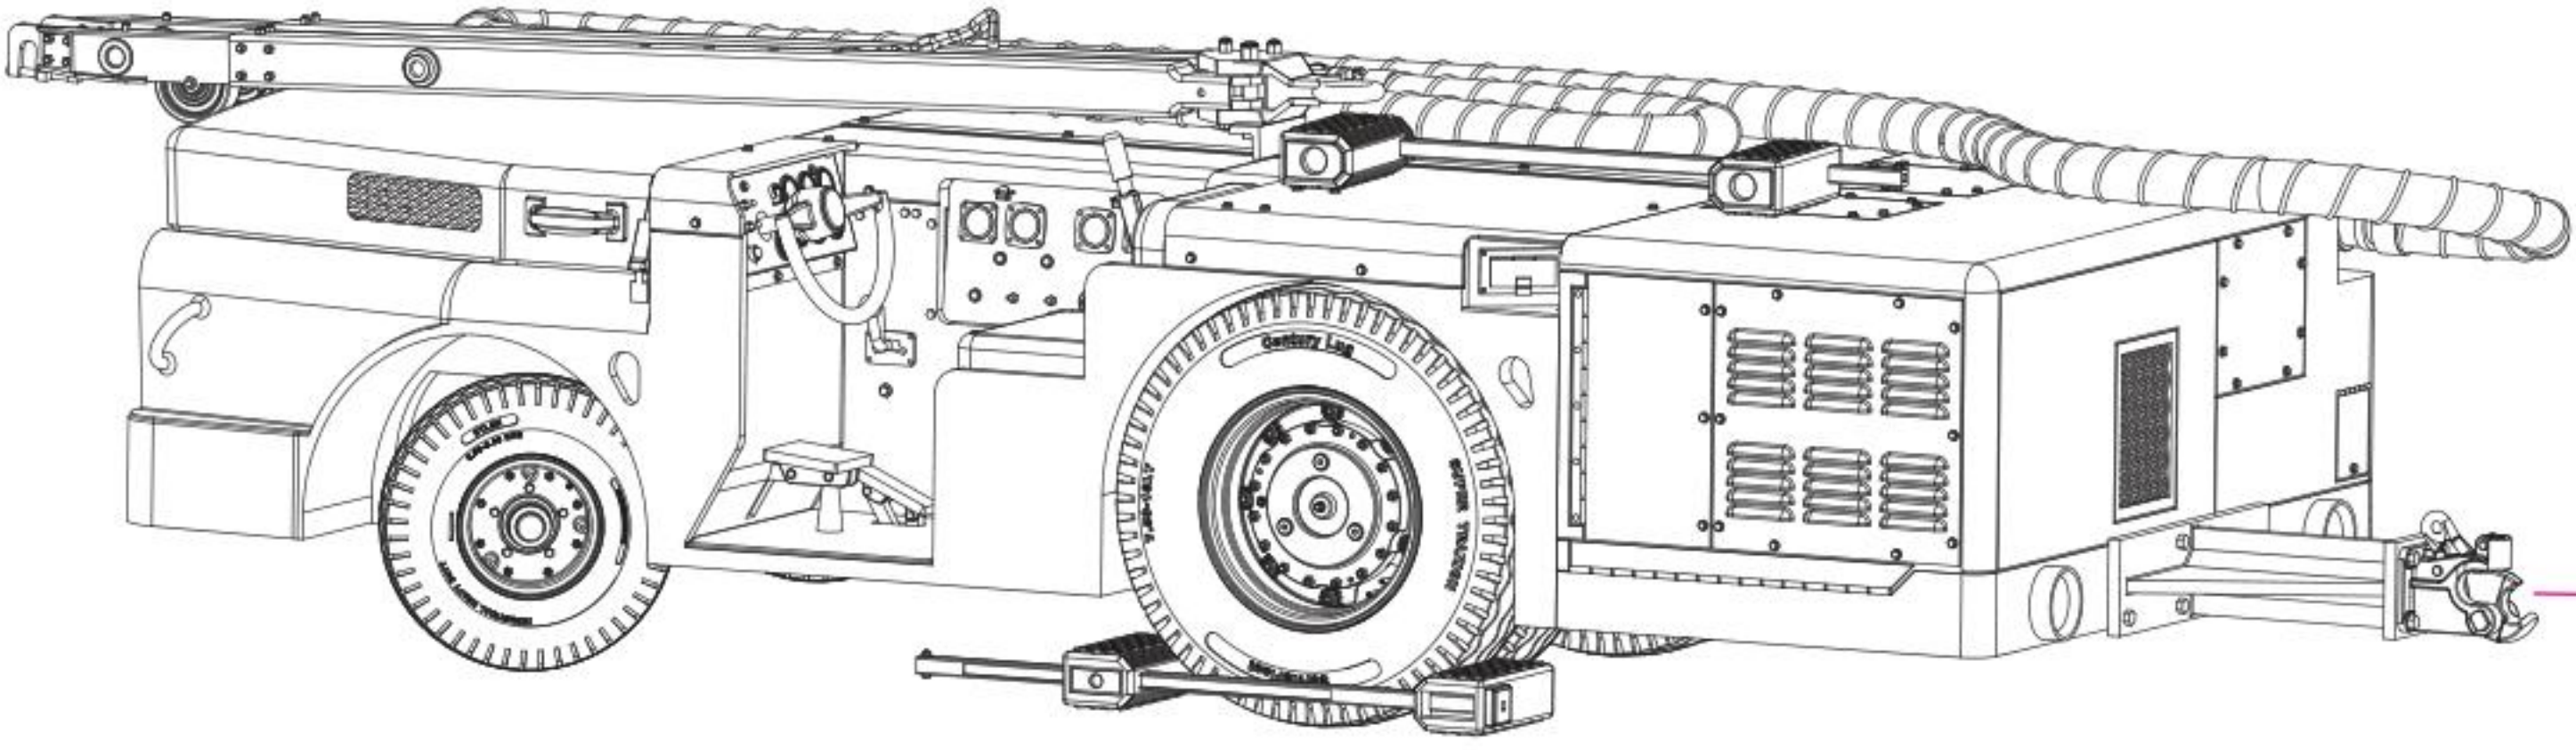


STEP 22

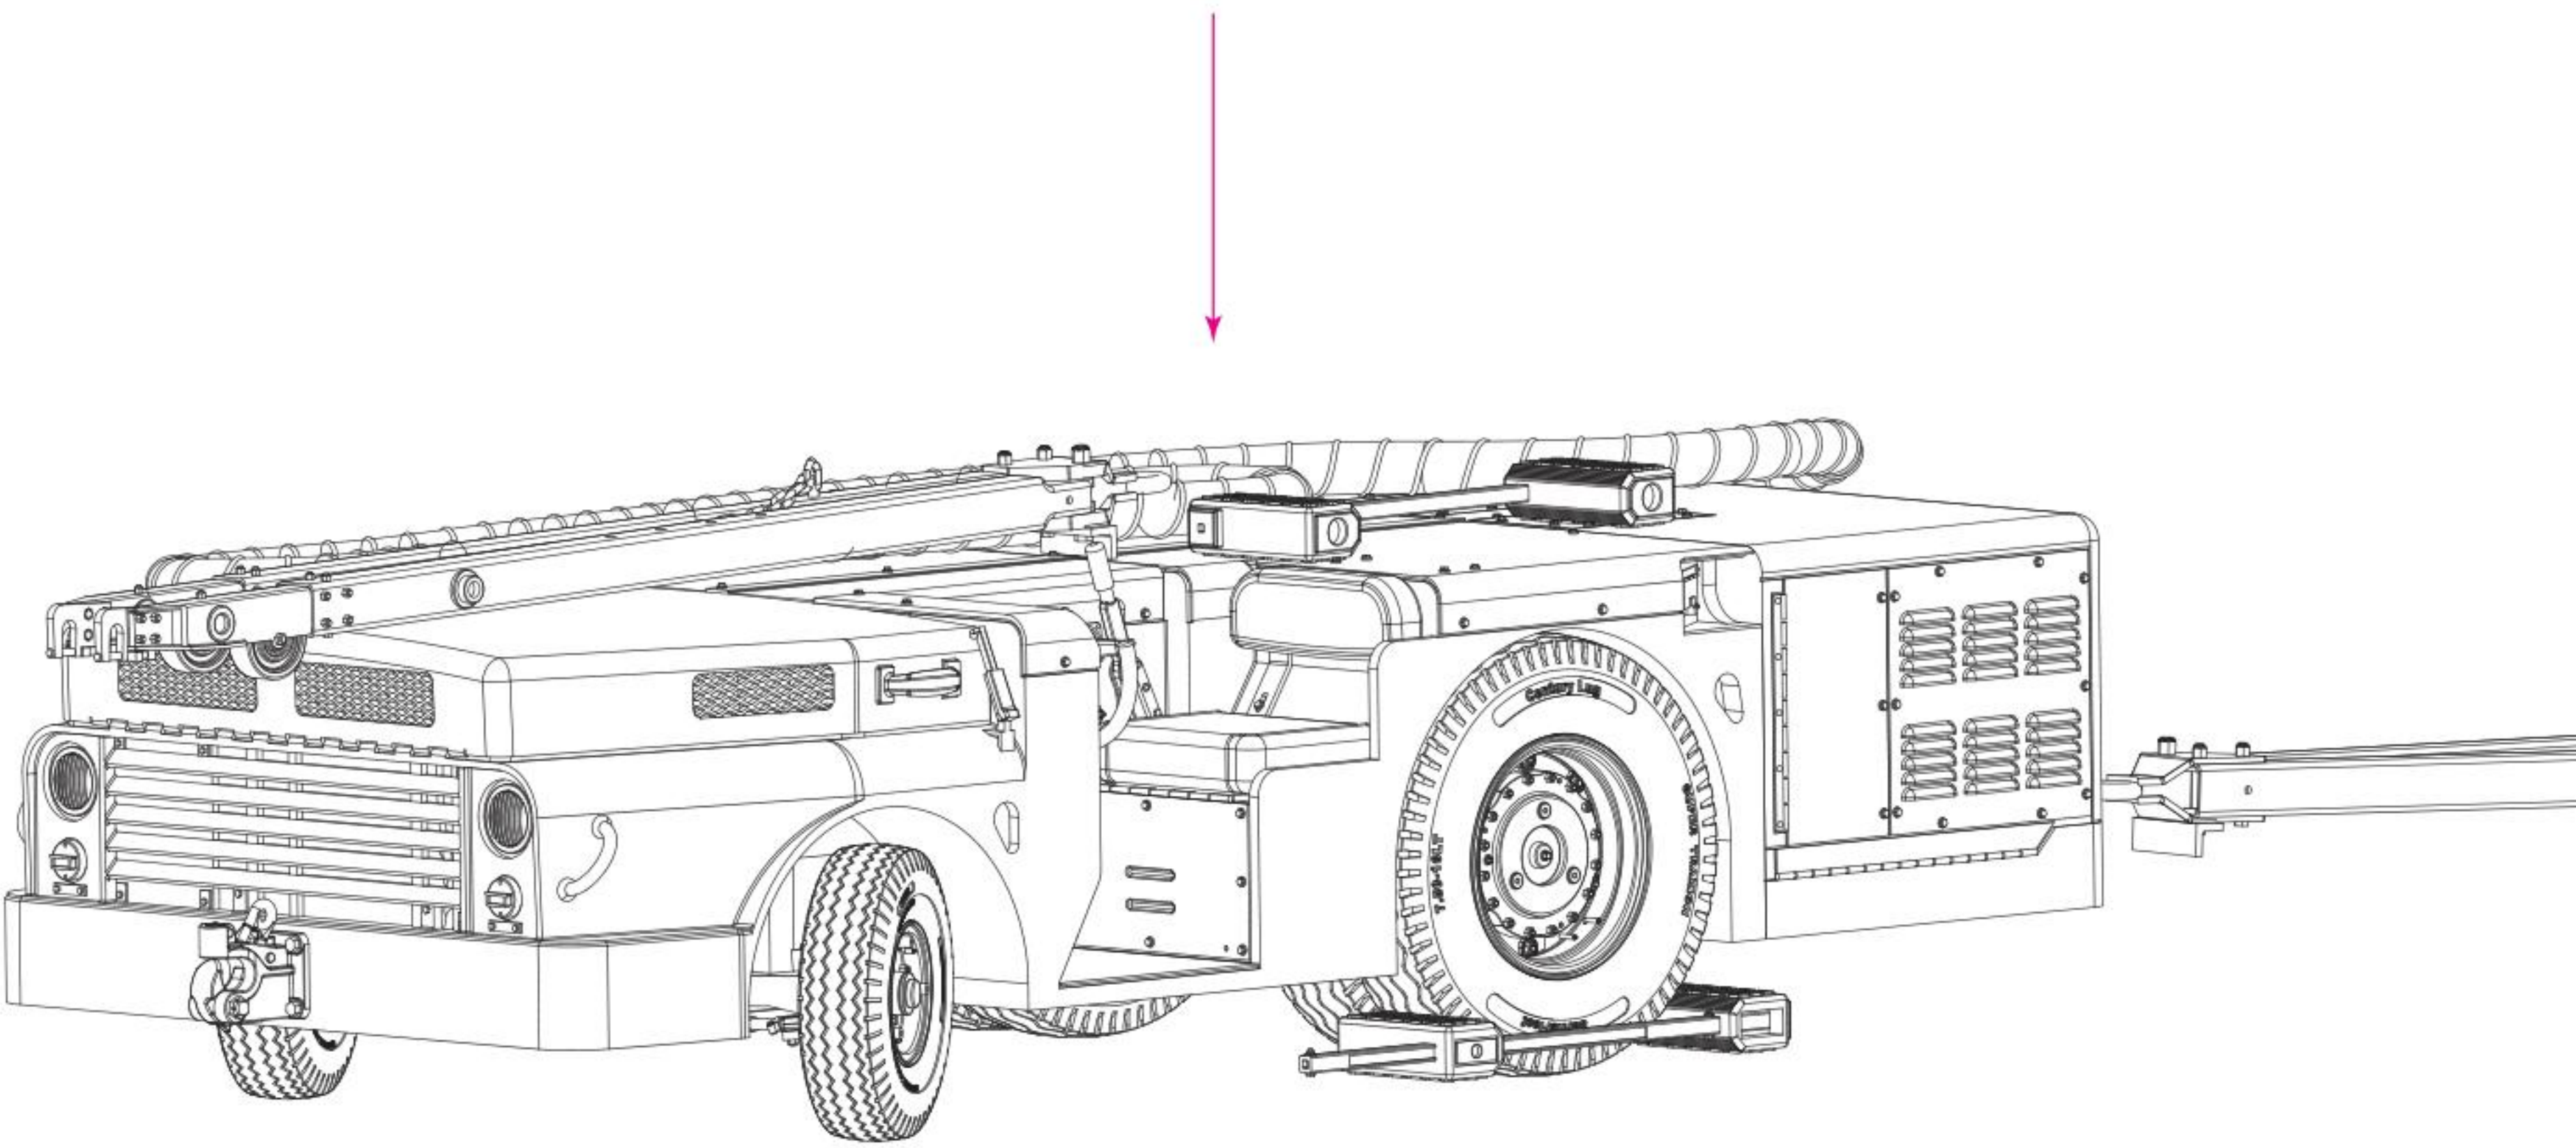


DECAL INSTRUCTION

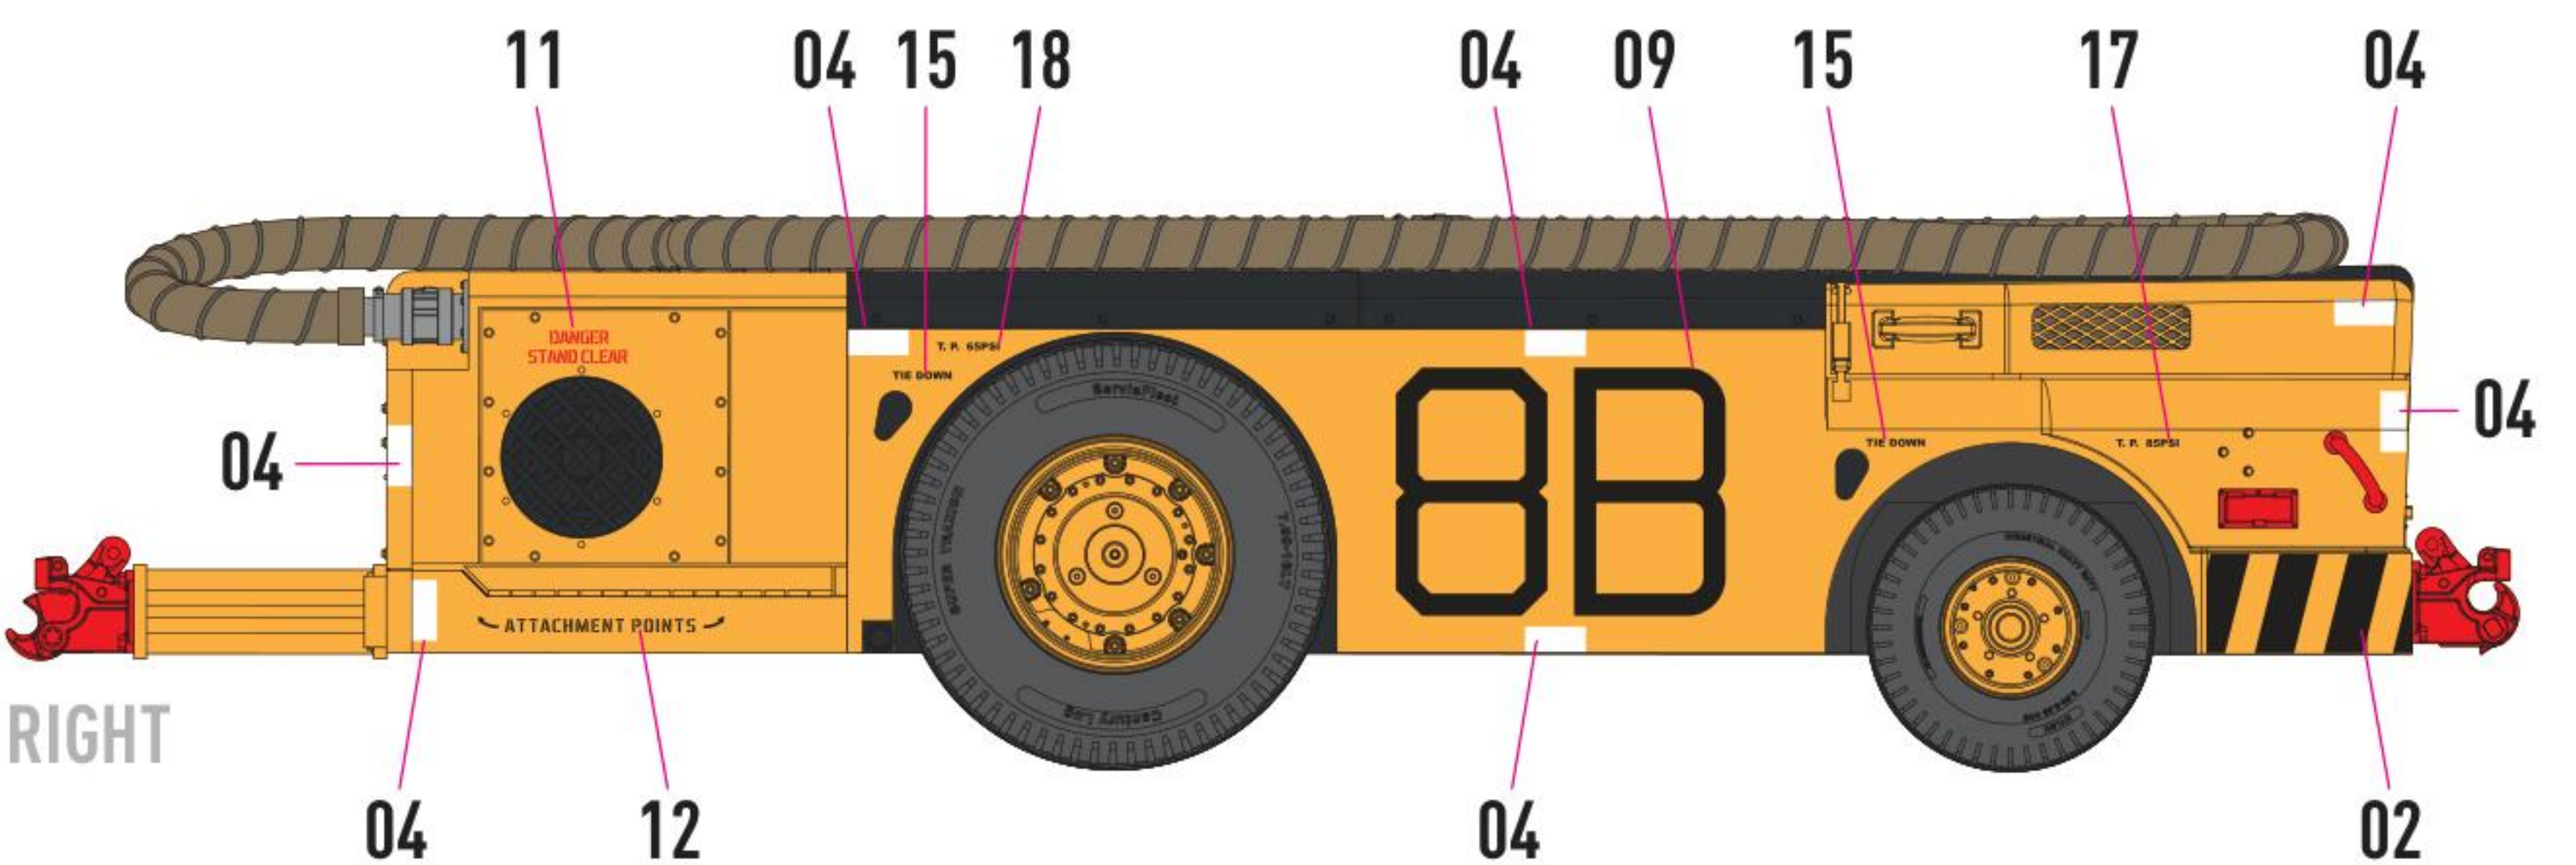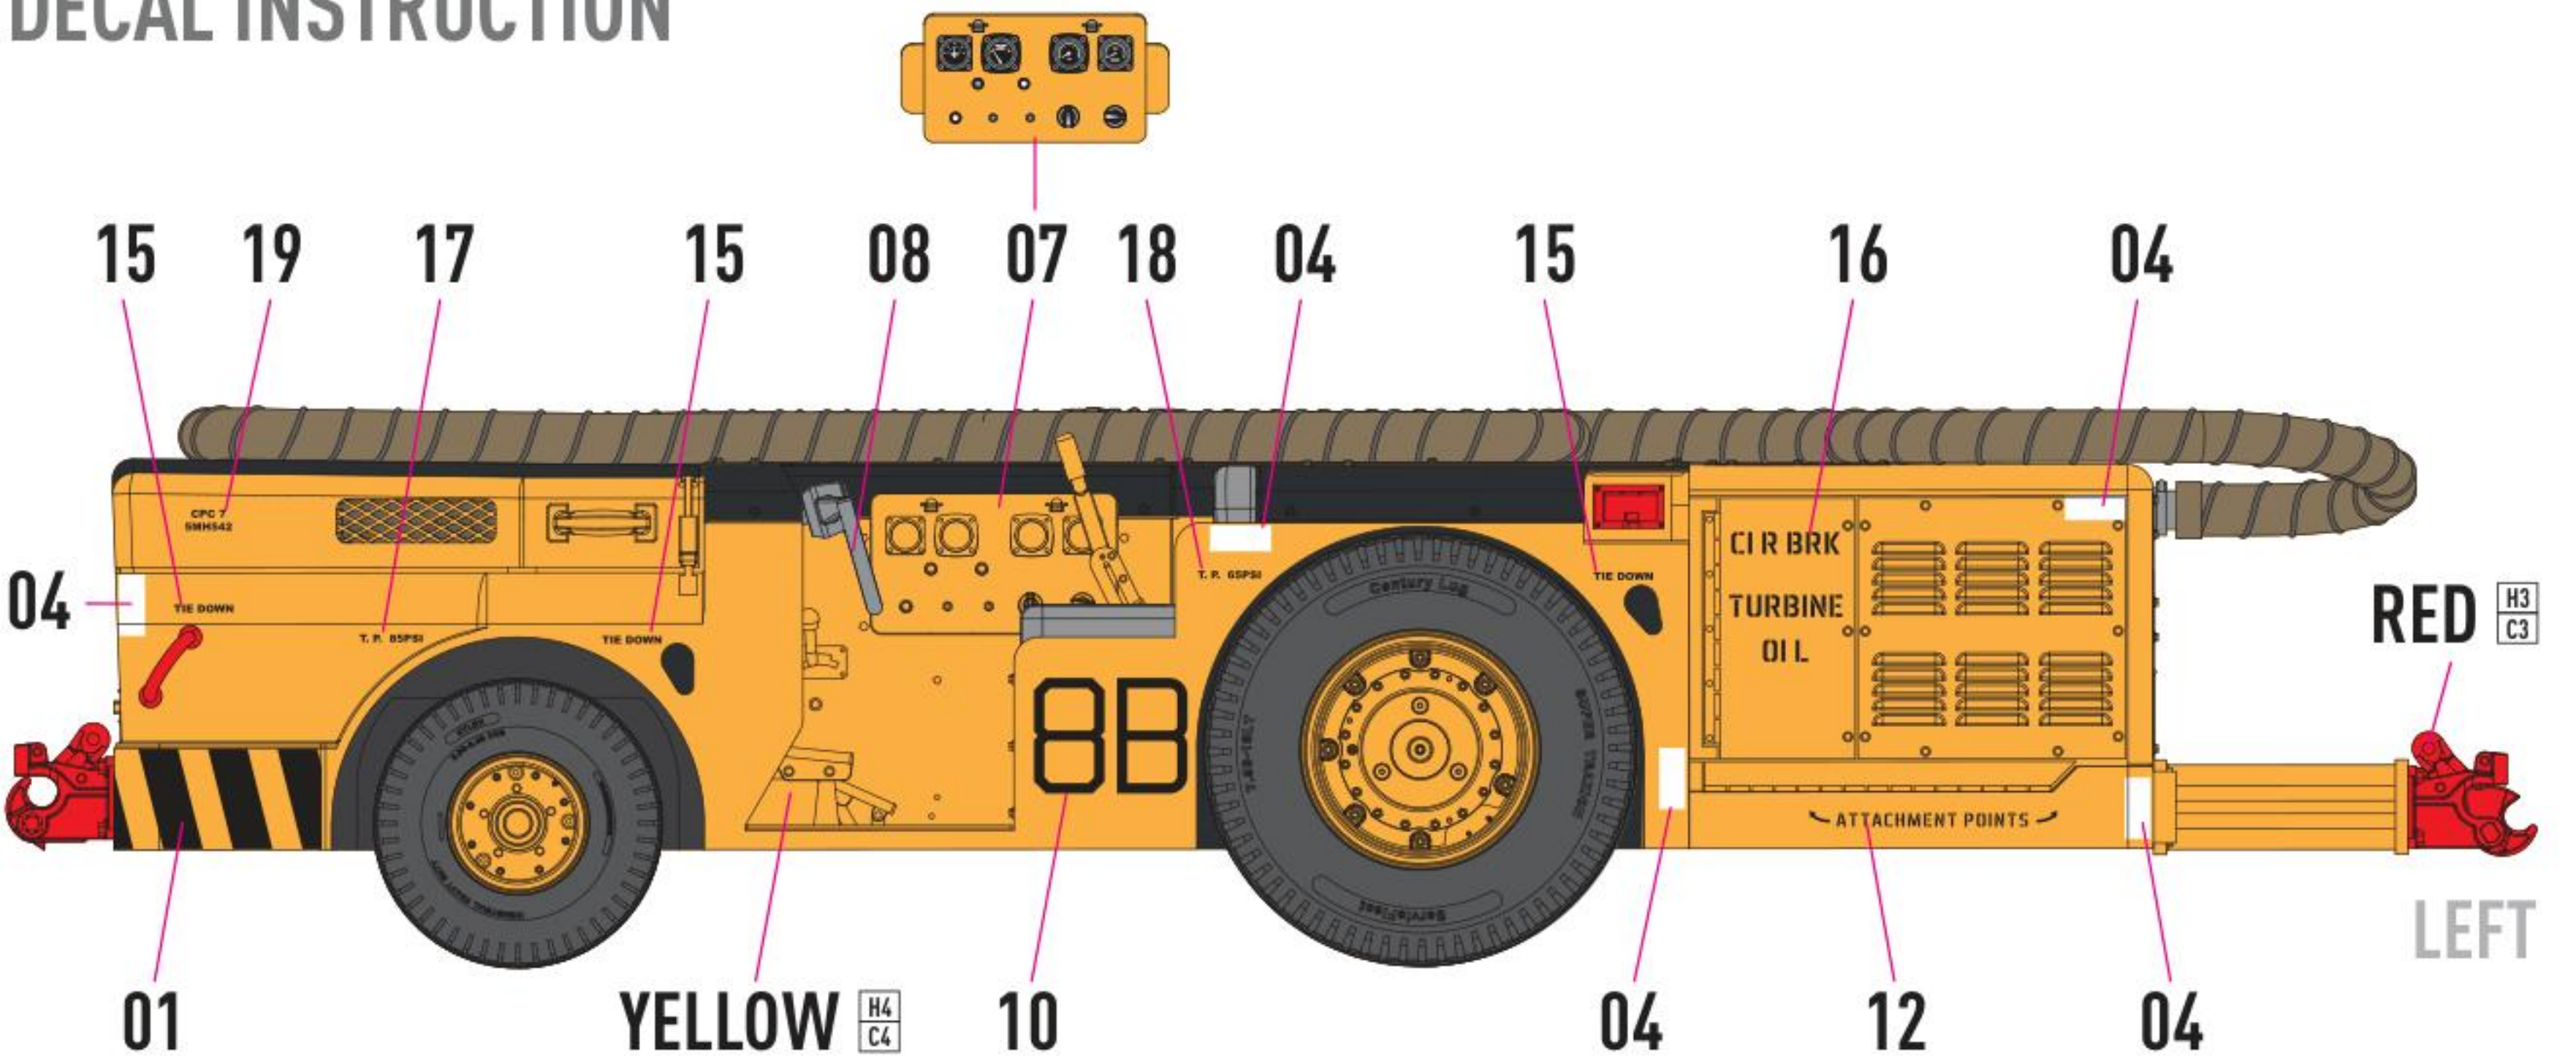

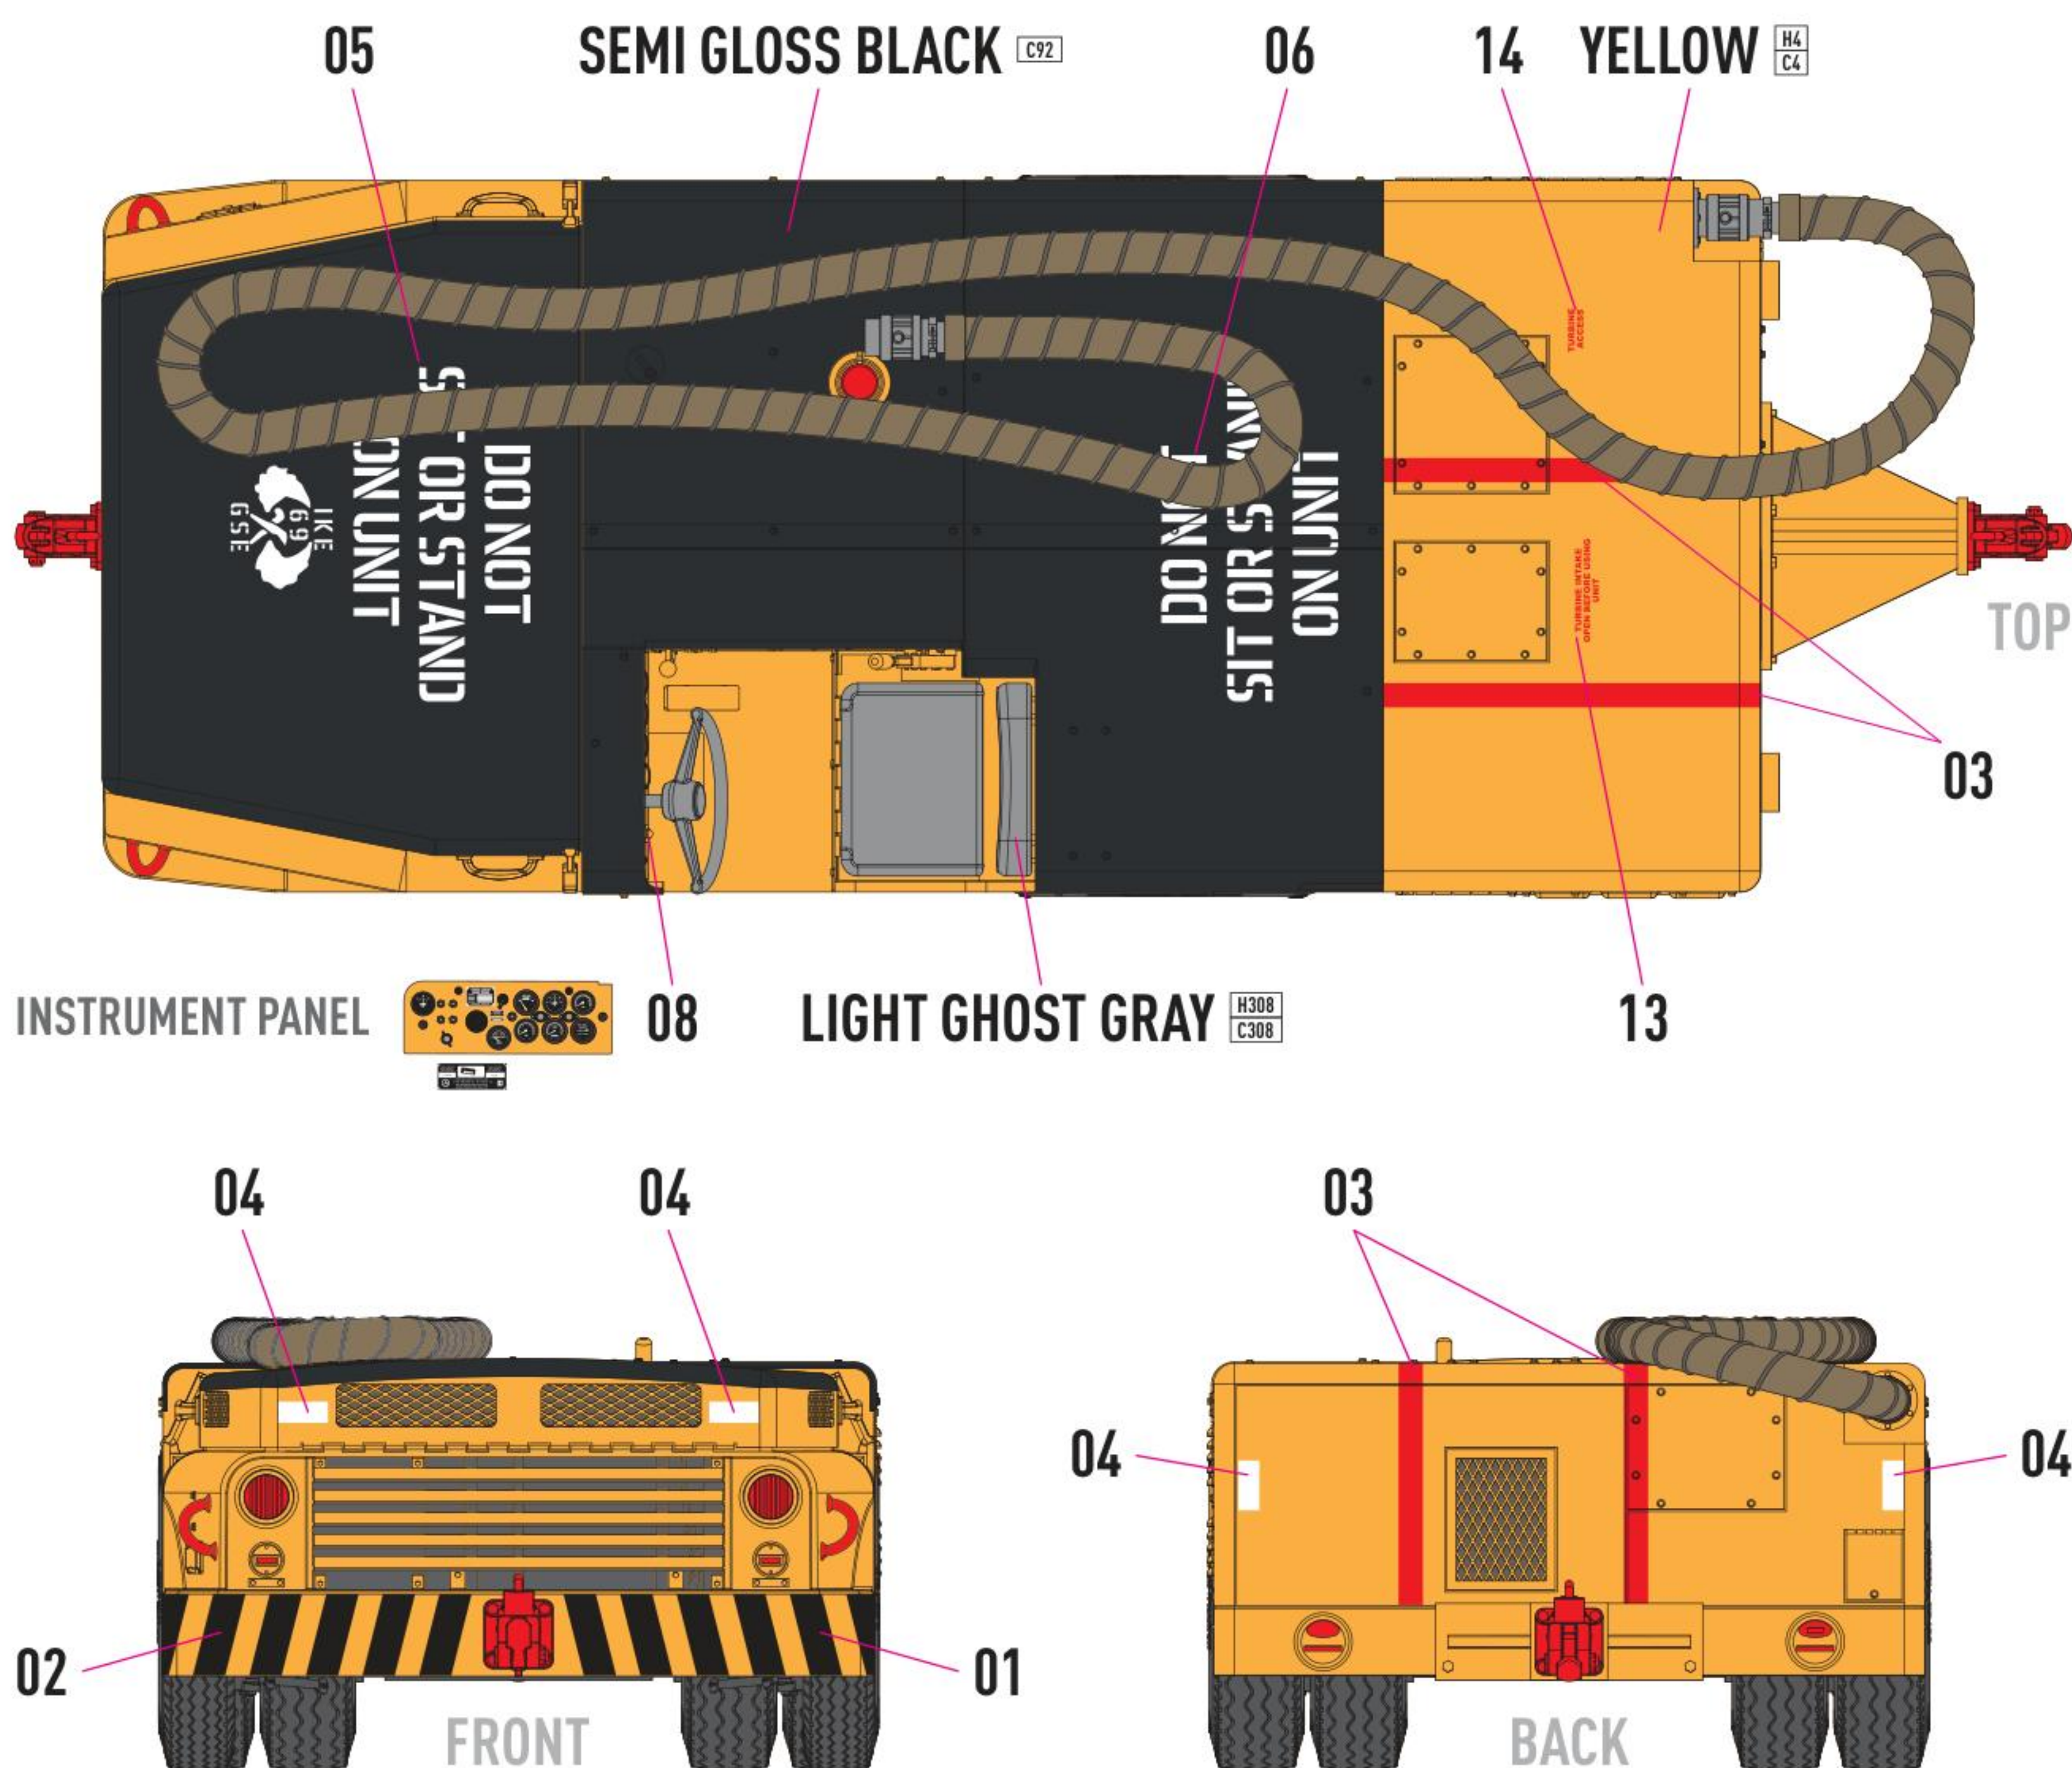

ALBAR UNIVERSAL AIRCRAFT TOWBAR

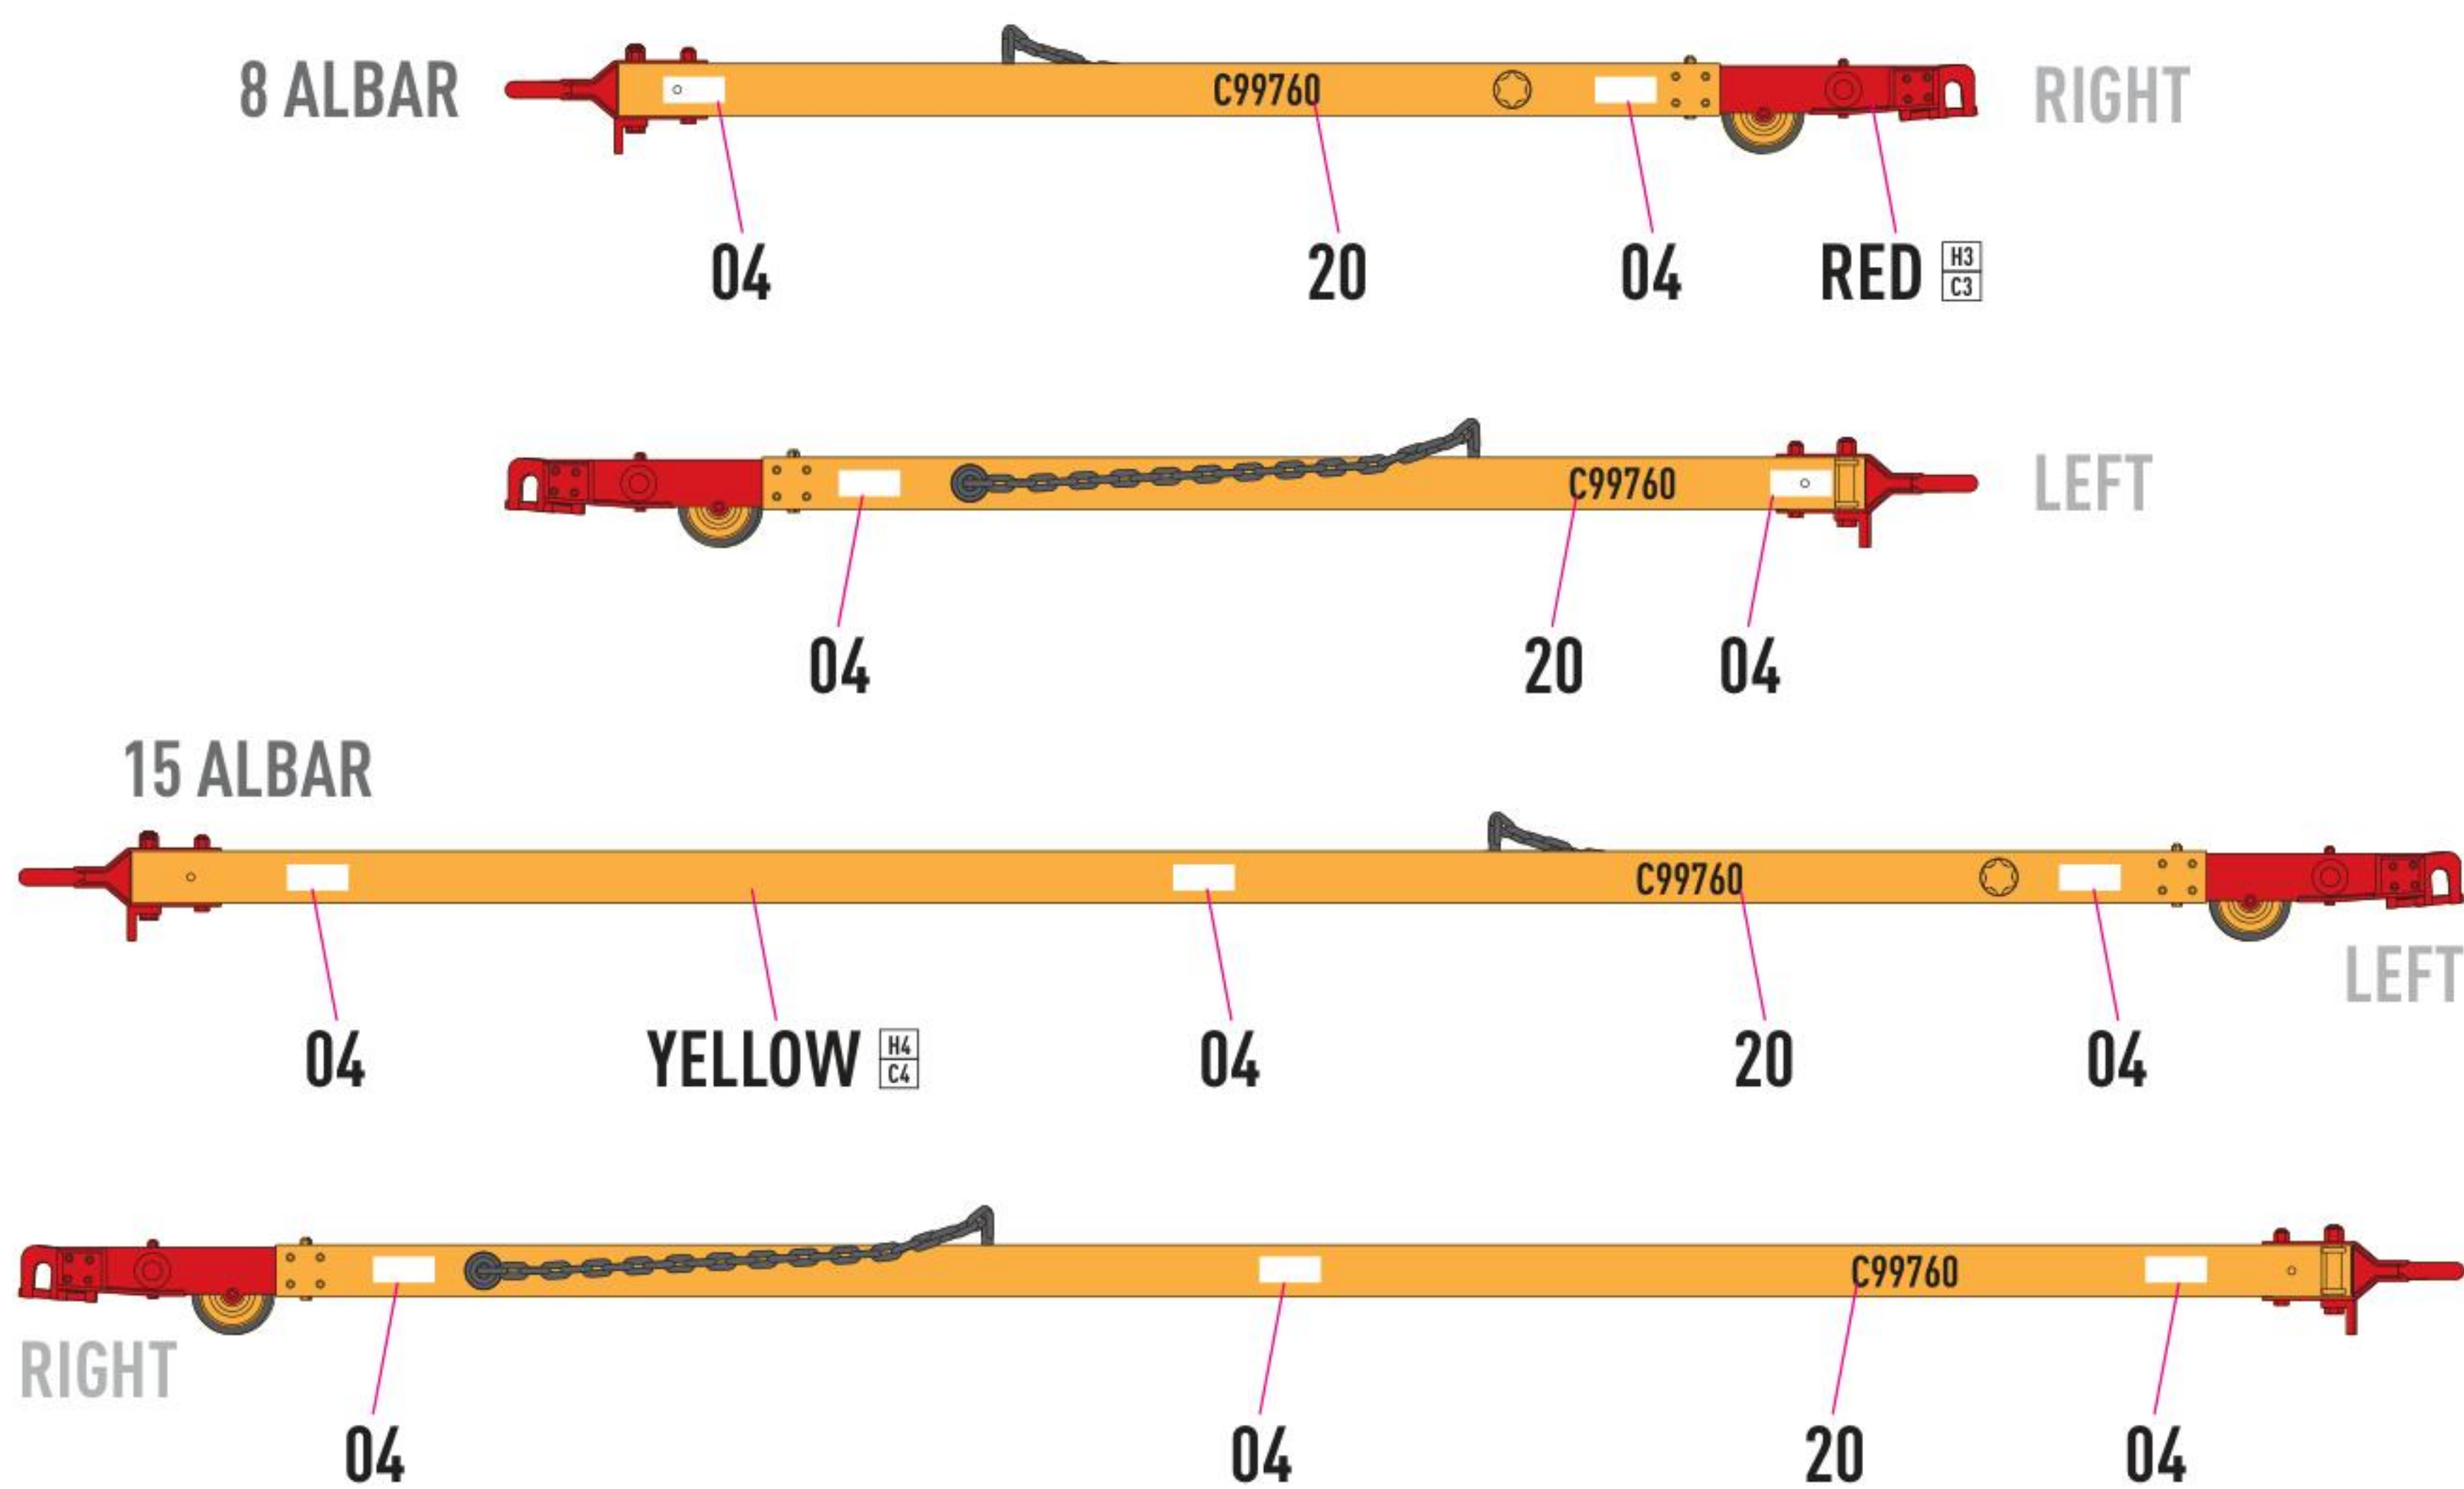

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
 YELLOW	H4	C4
 LIGHT GHOST GRAY	H308	C308

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
 SEMI GLOSS BLACK		C92
 RED	H3	C3