


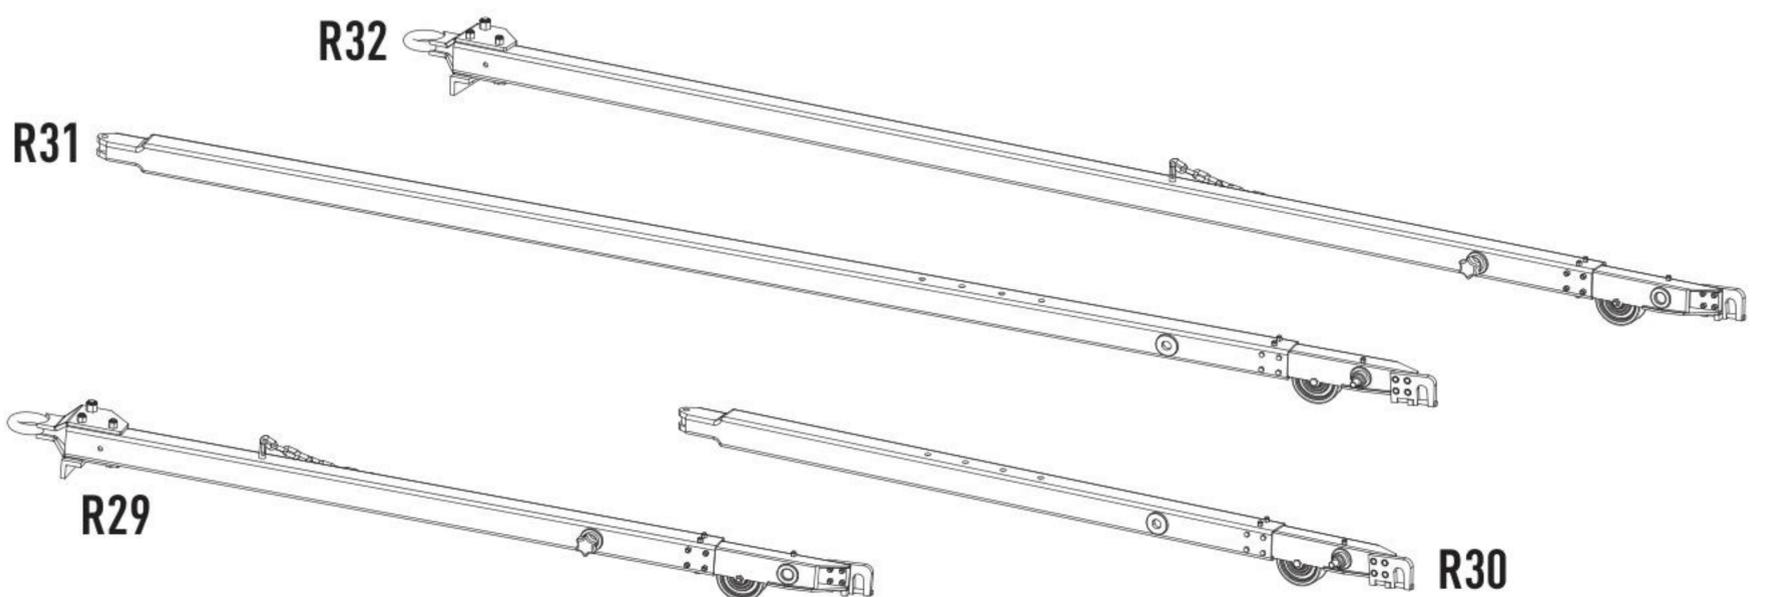
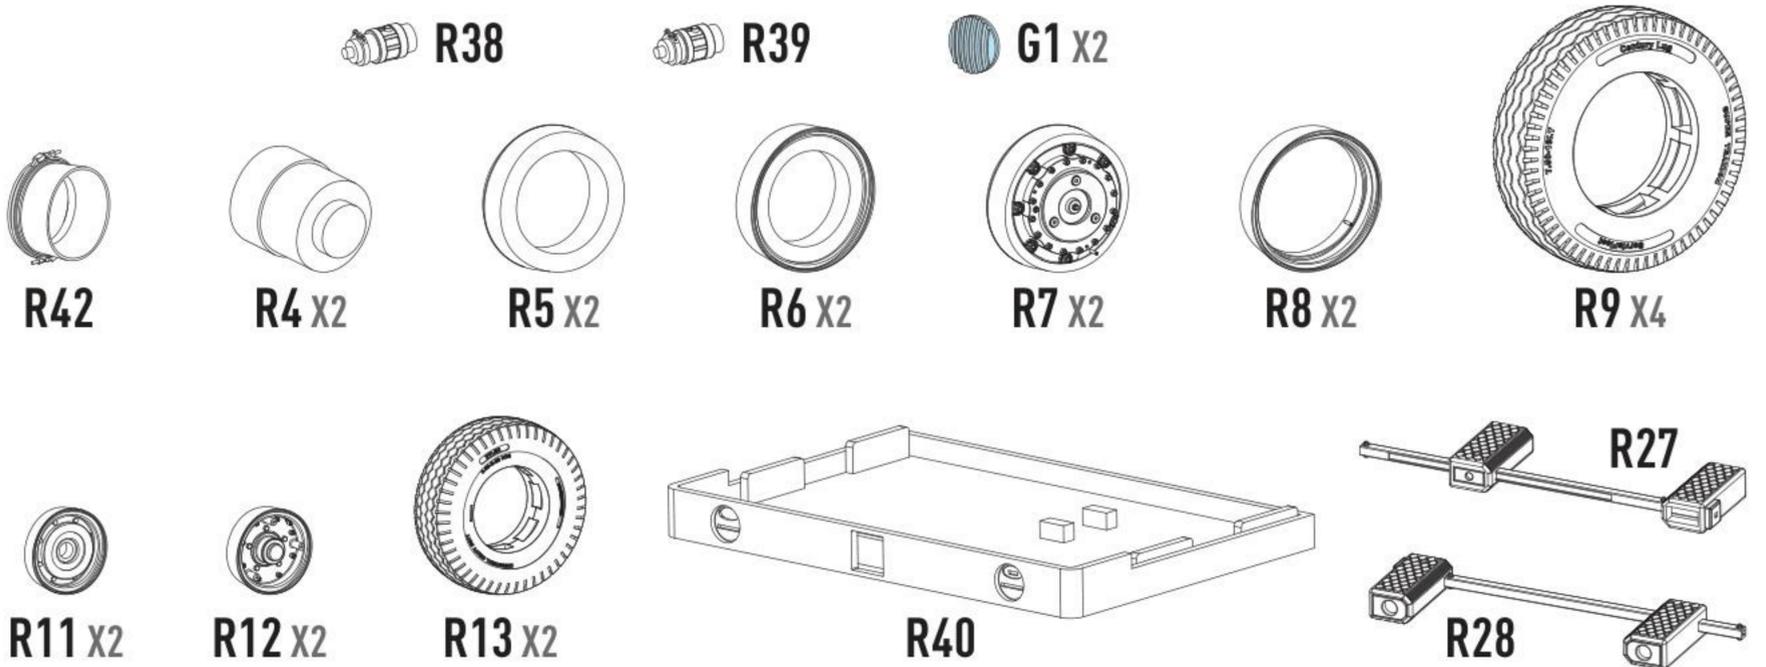


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

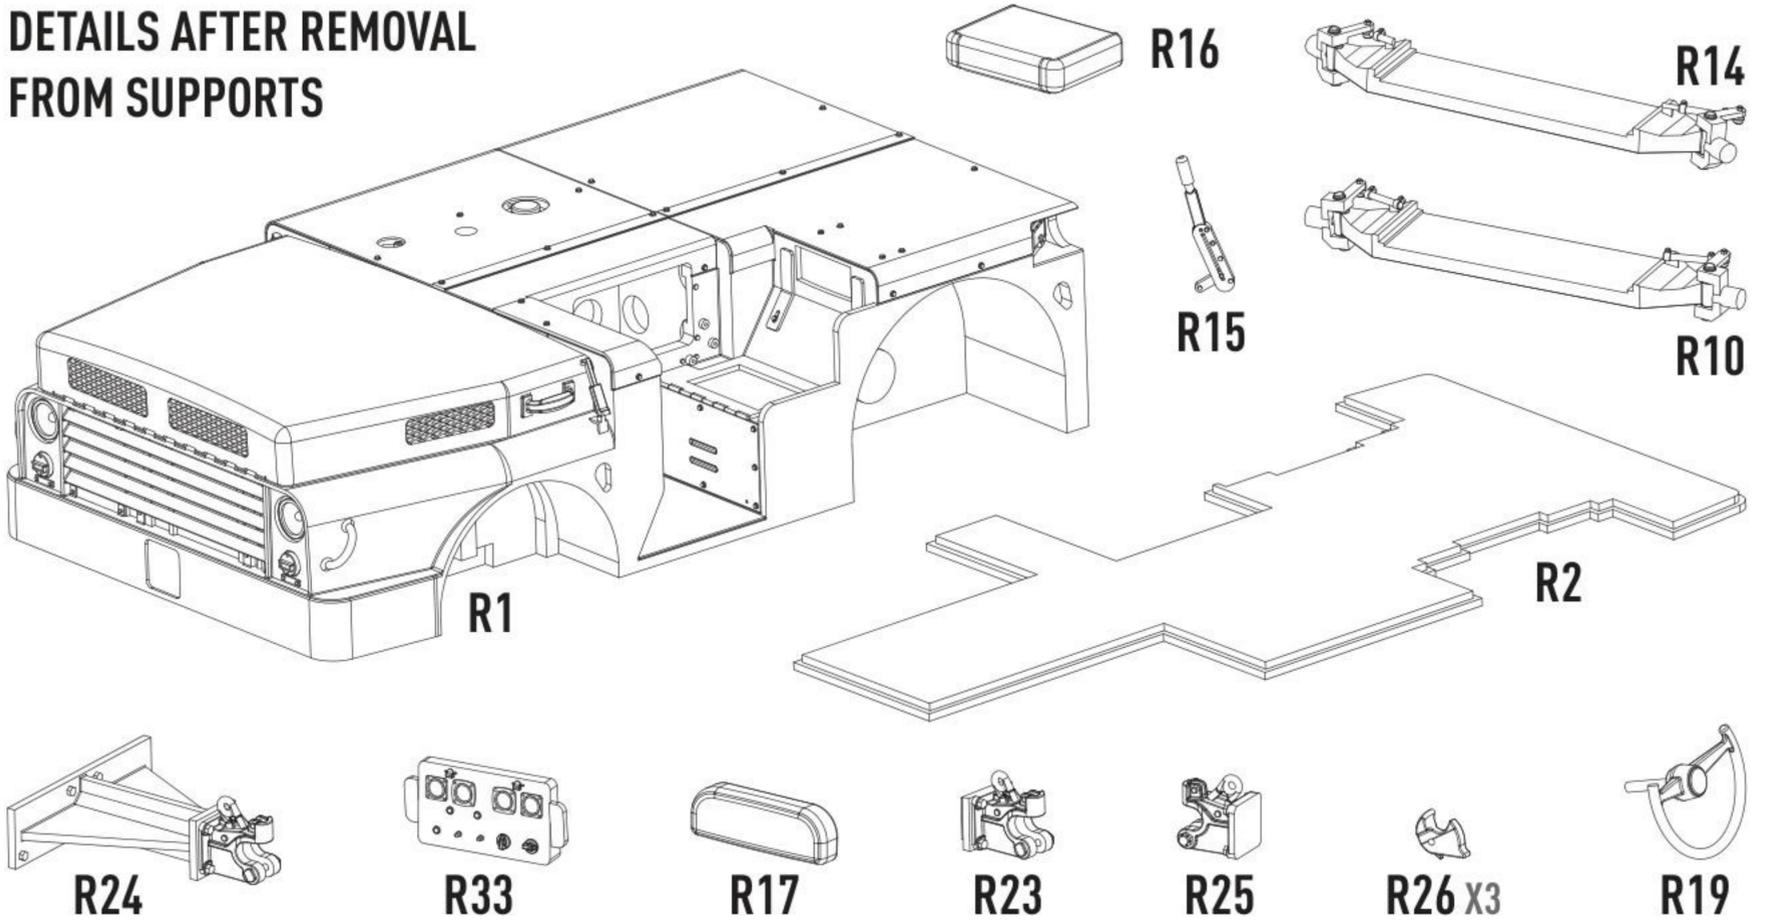


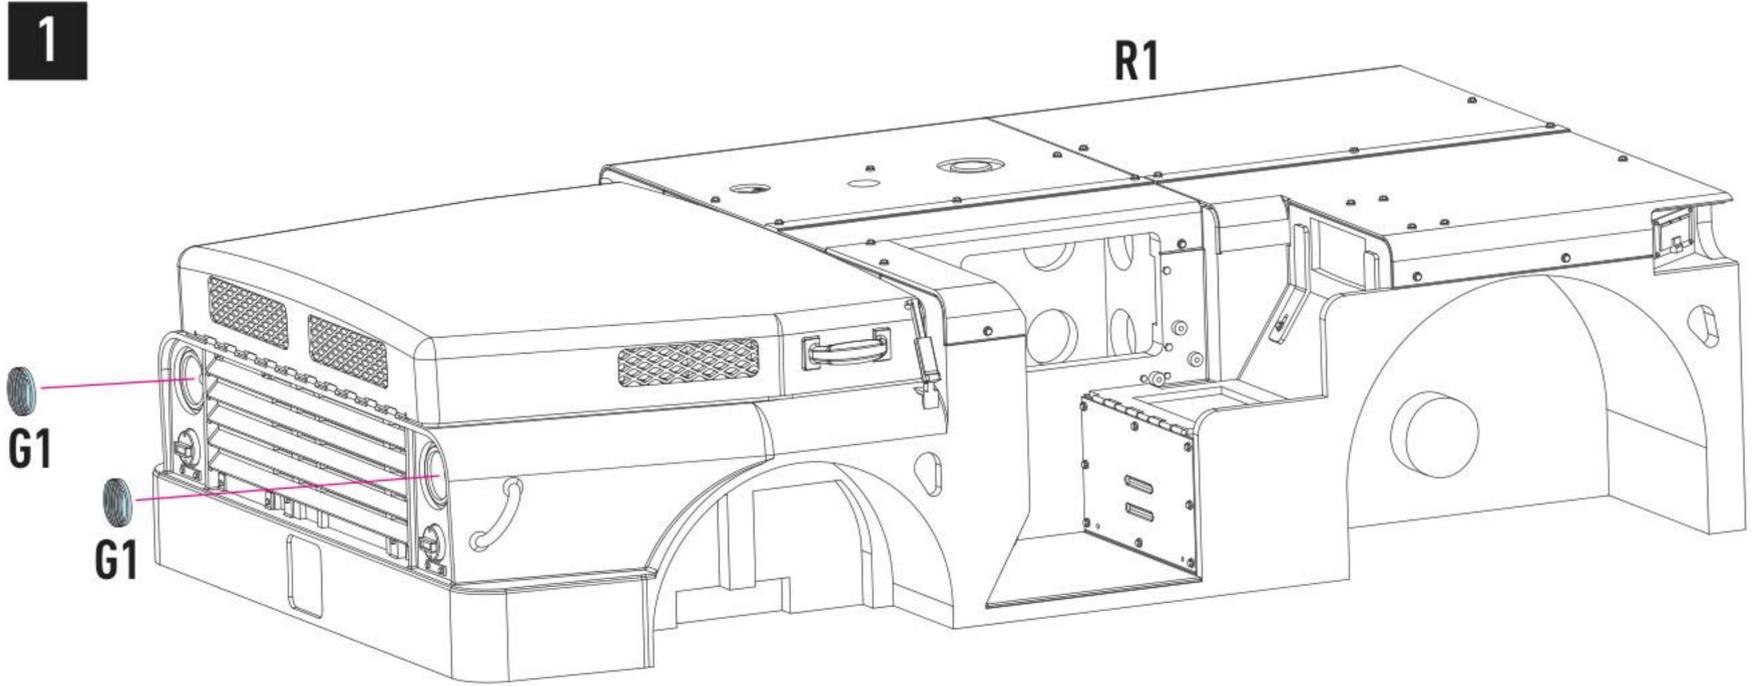


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

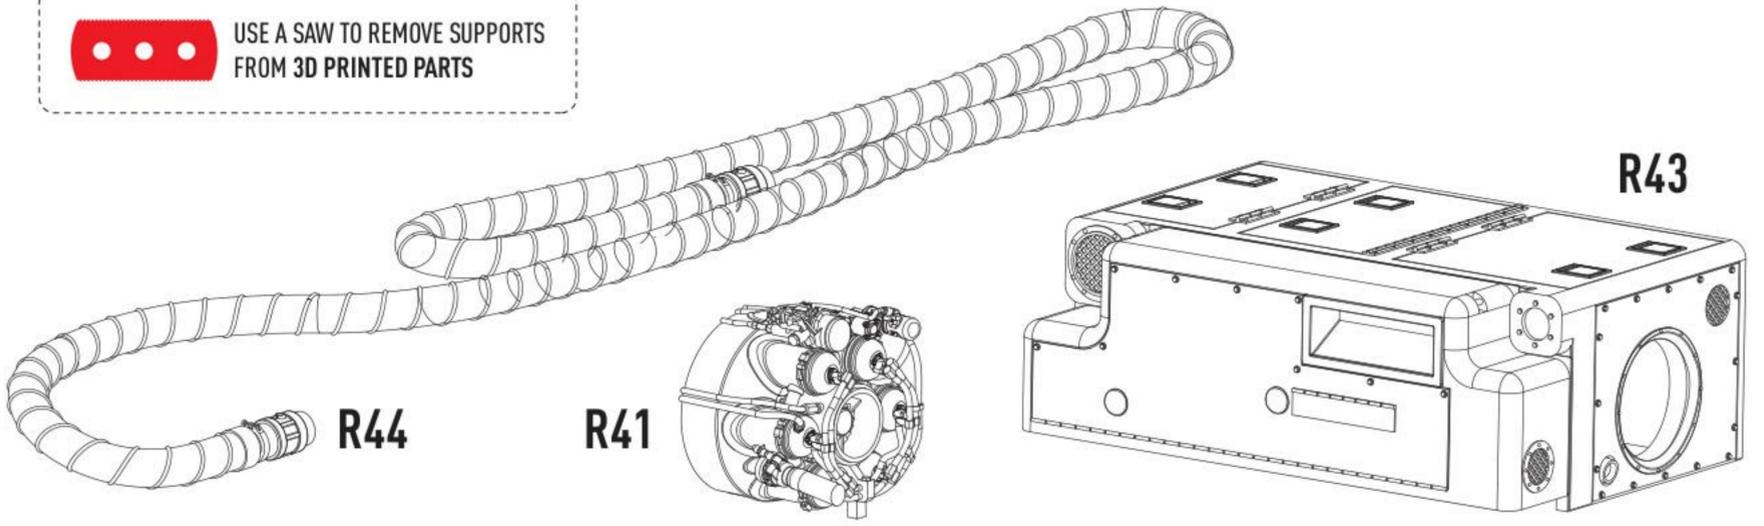


BEFORE ASSEMBLY, COVER TRANSPARENT PARTS WITH GLOSSY VARNISH

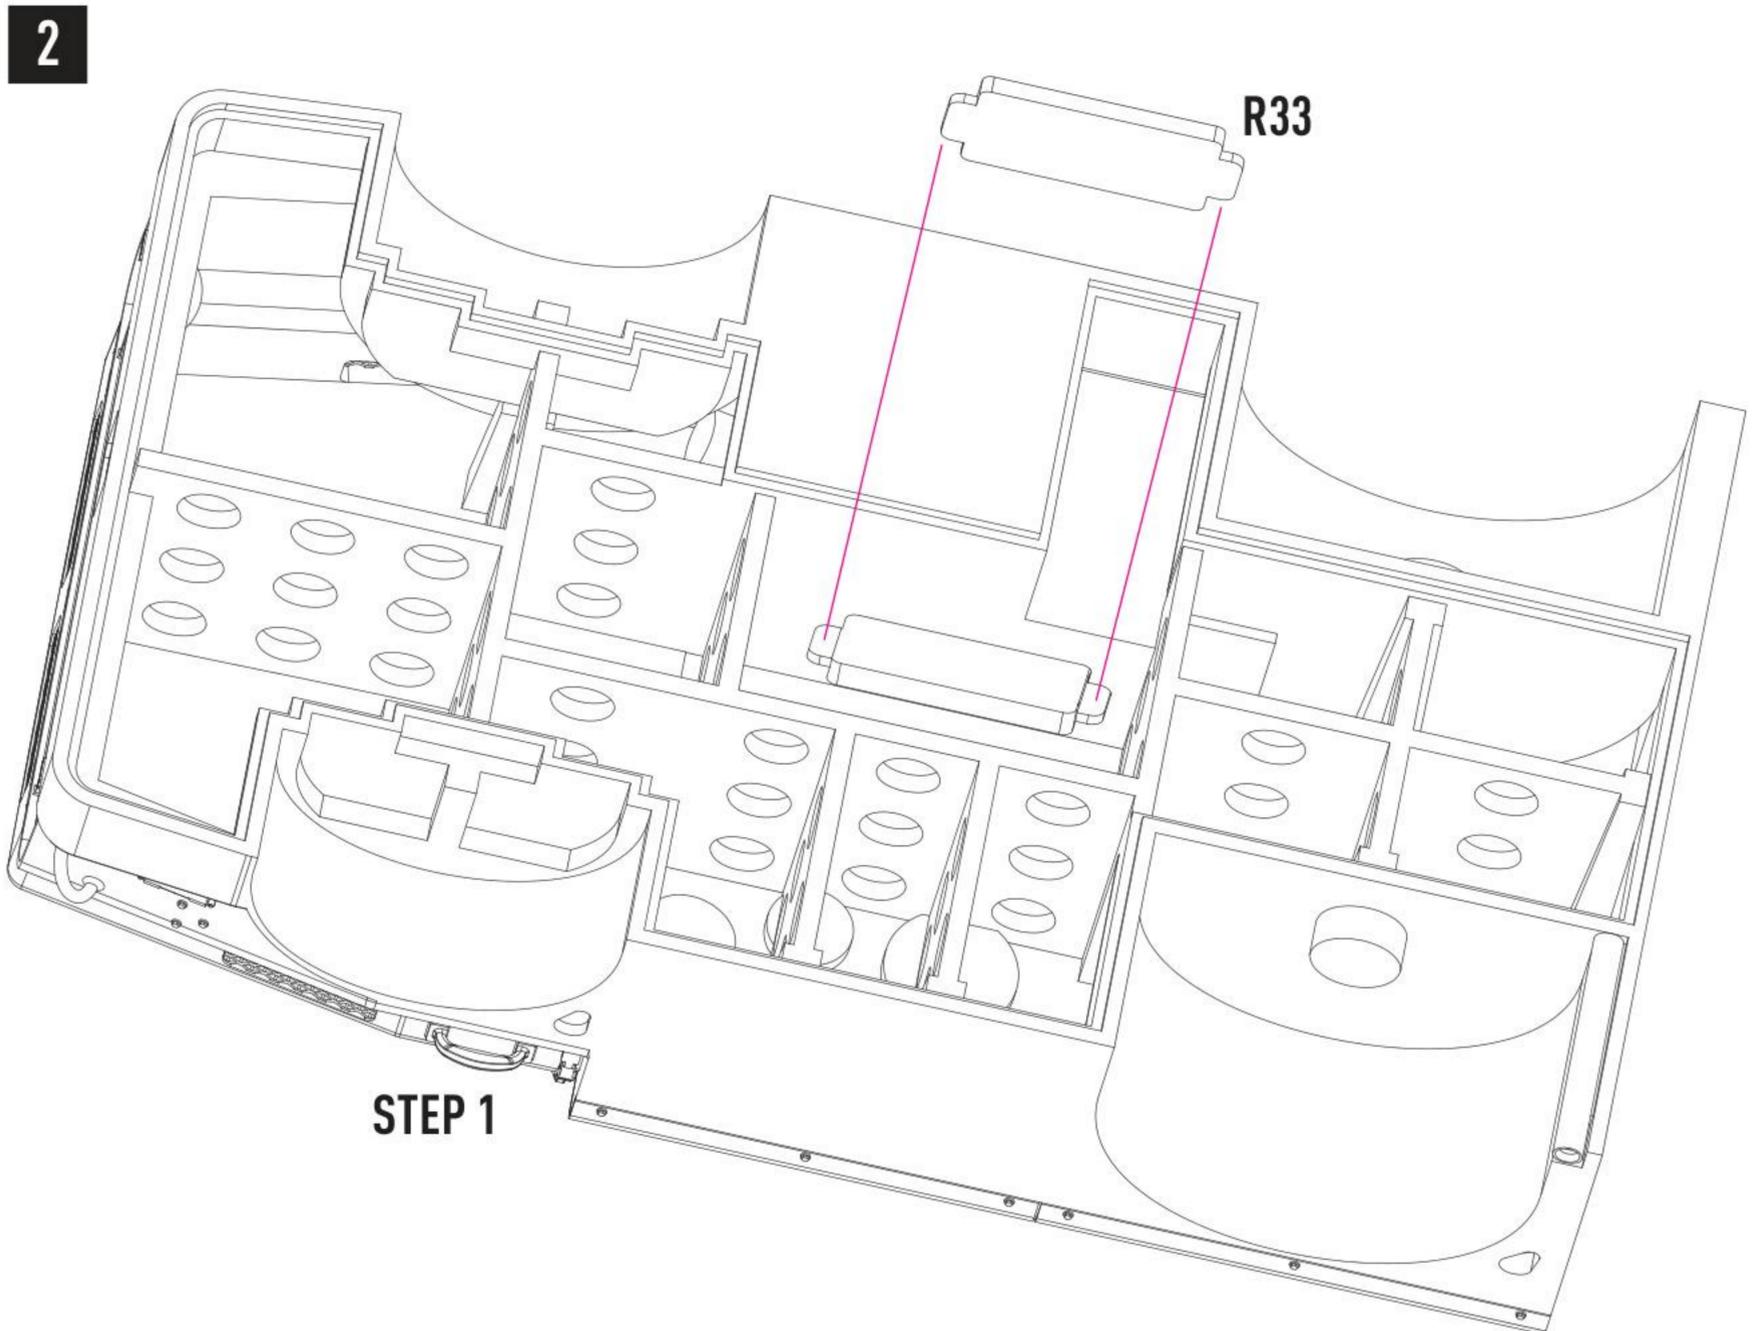

3

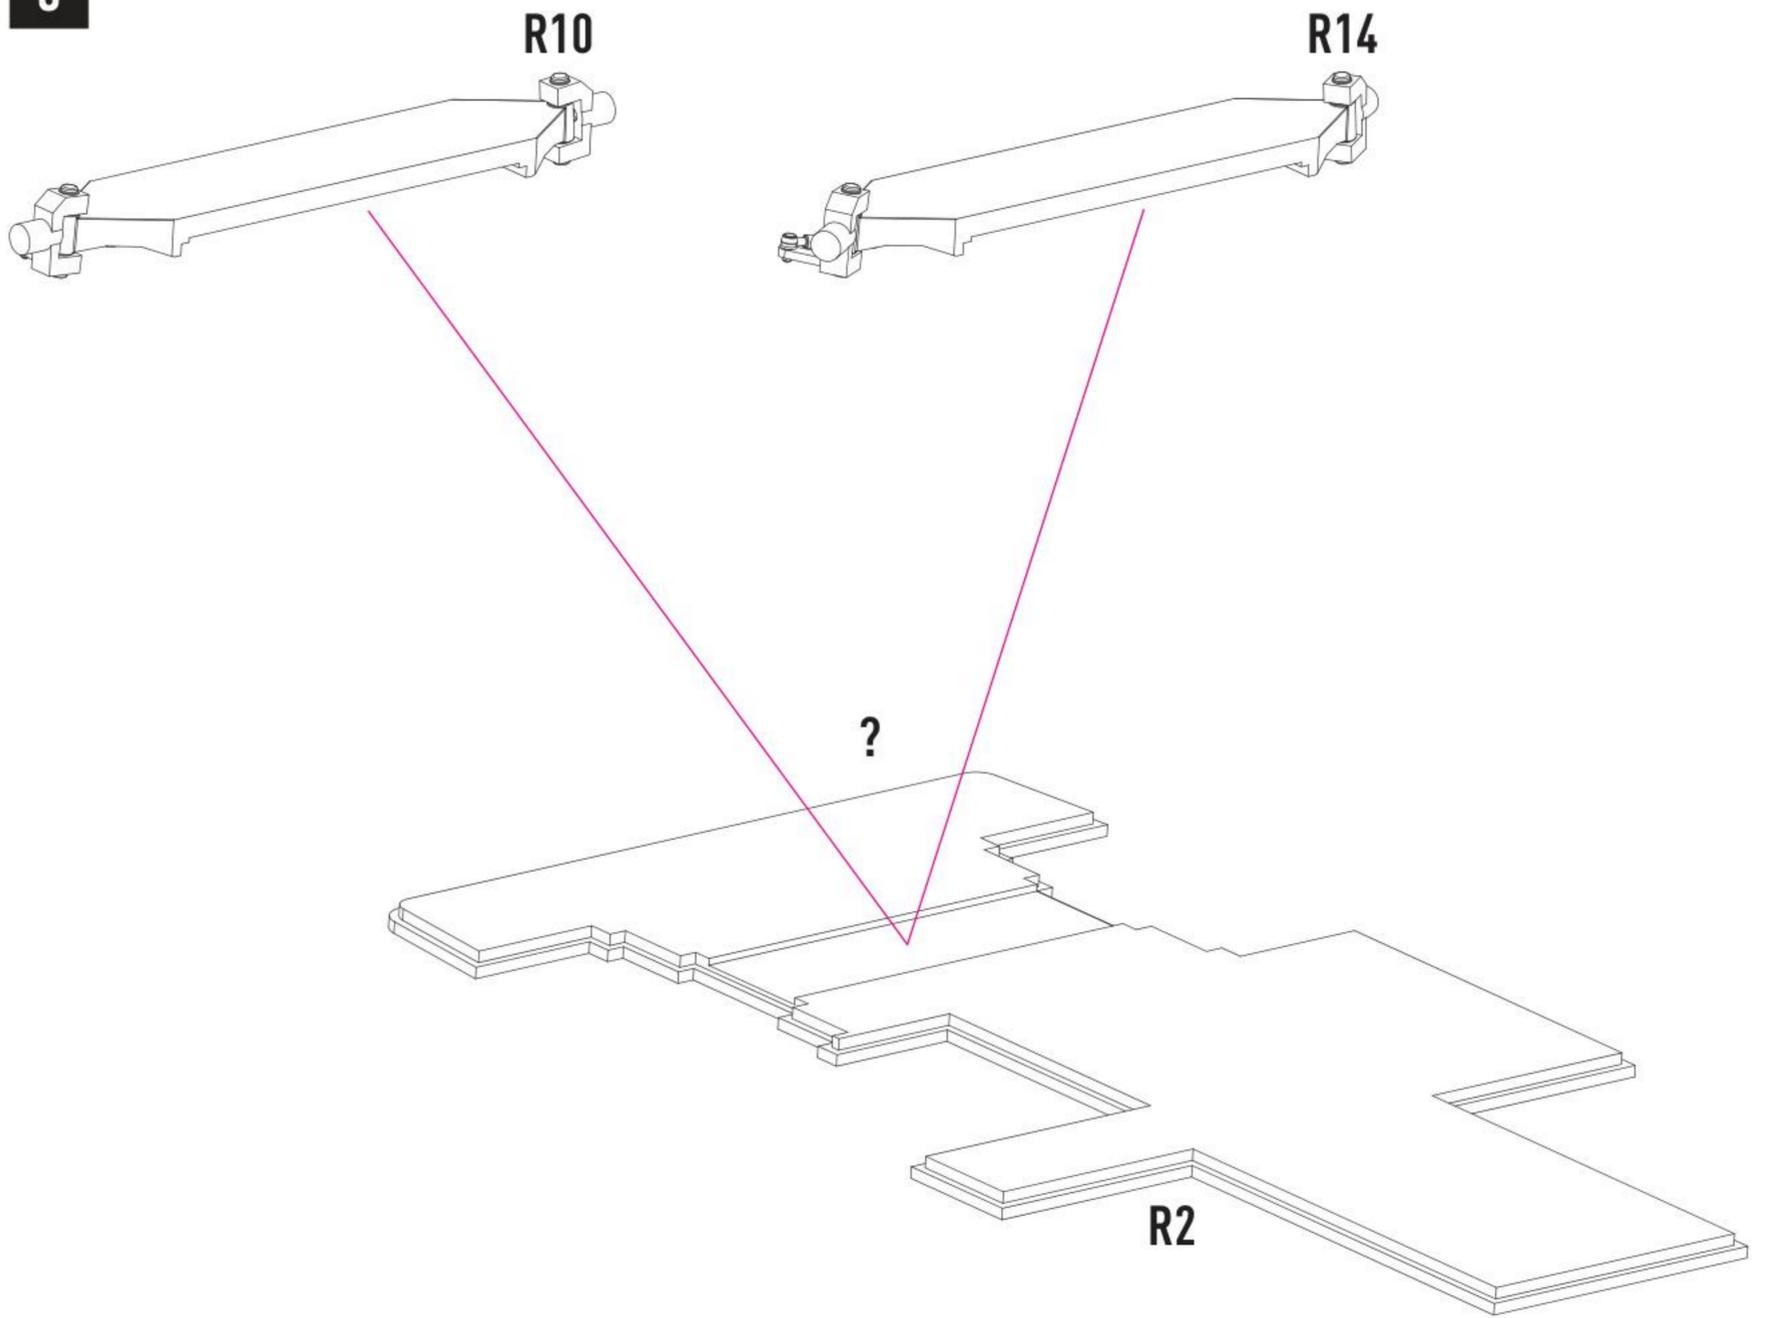


4

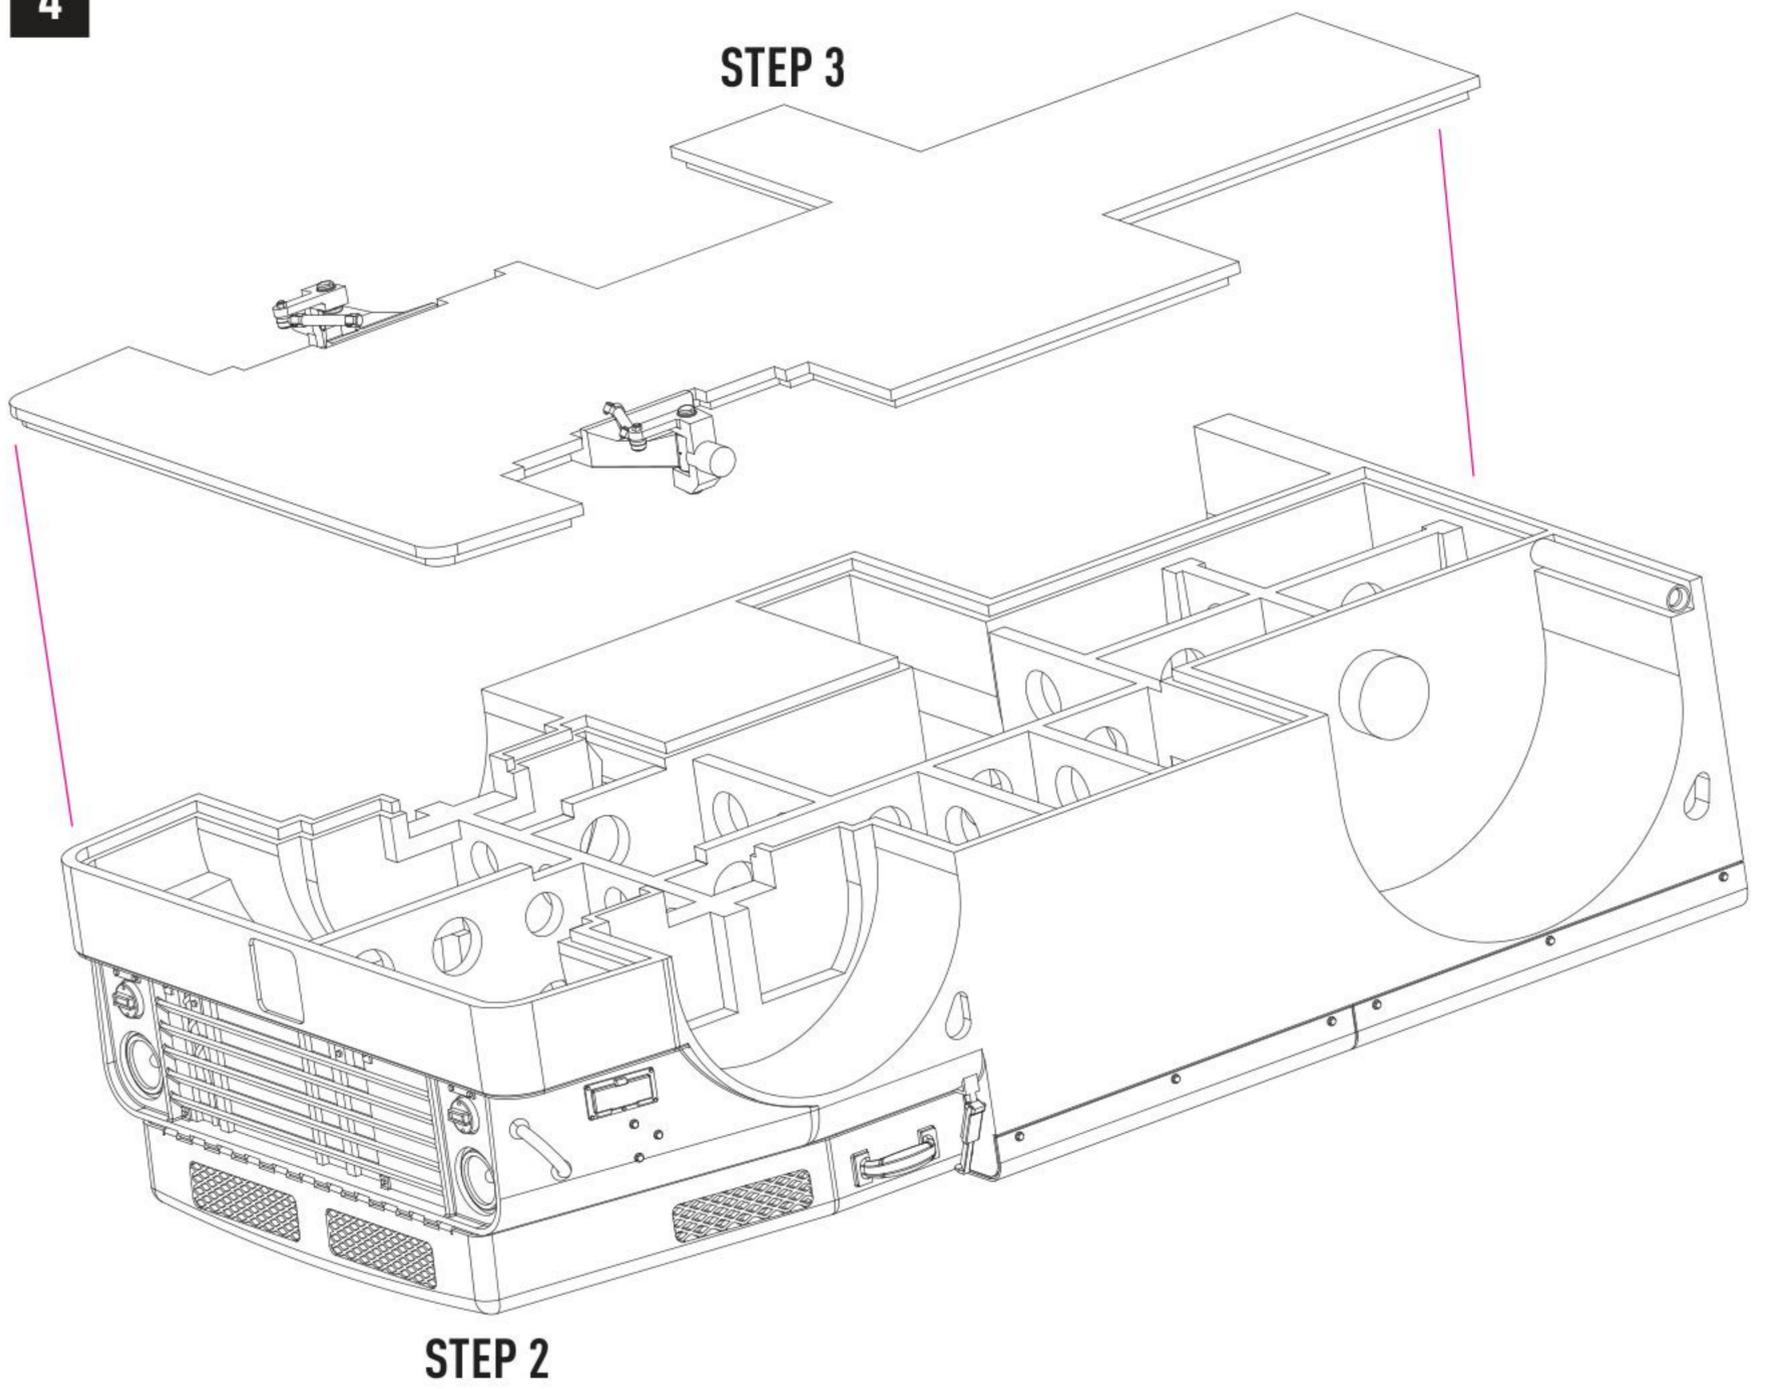


5


STEP 4

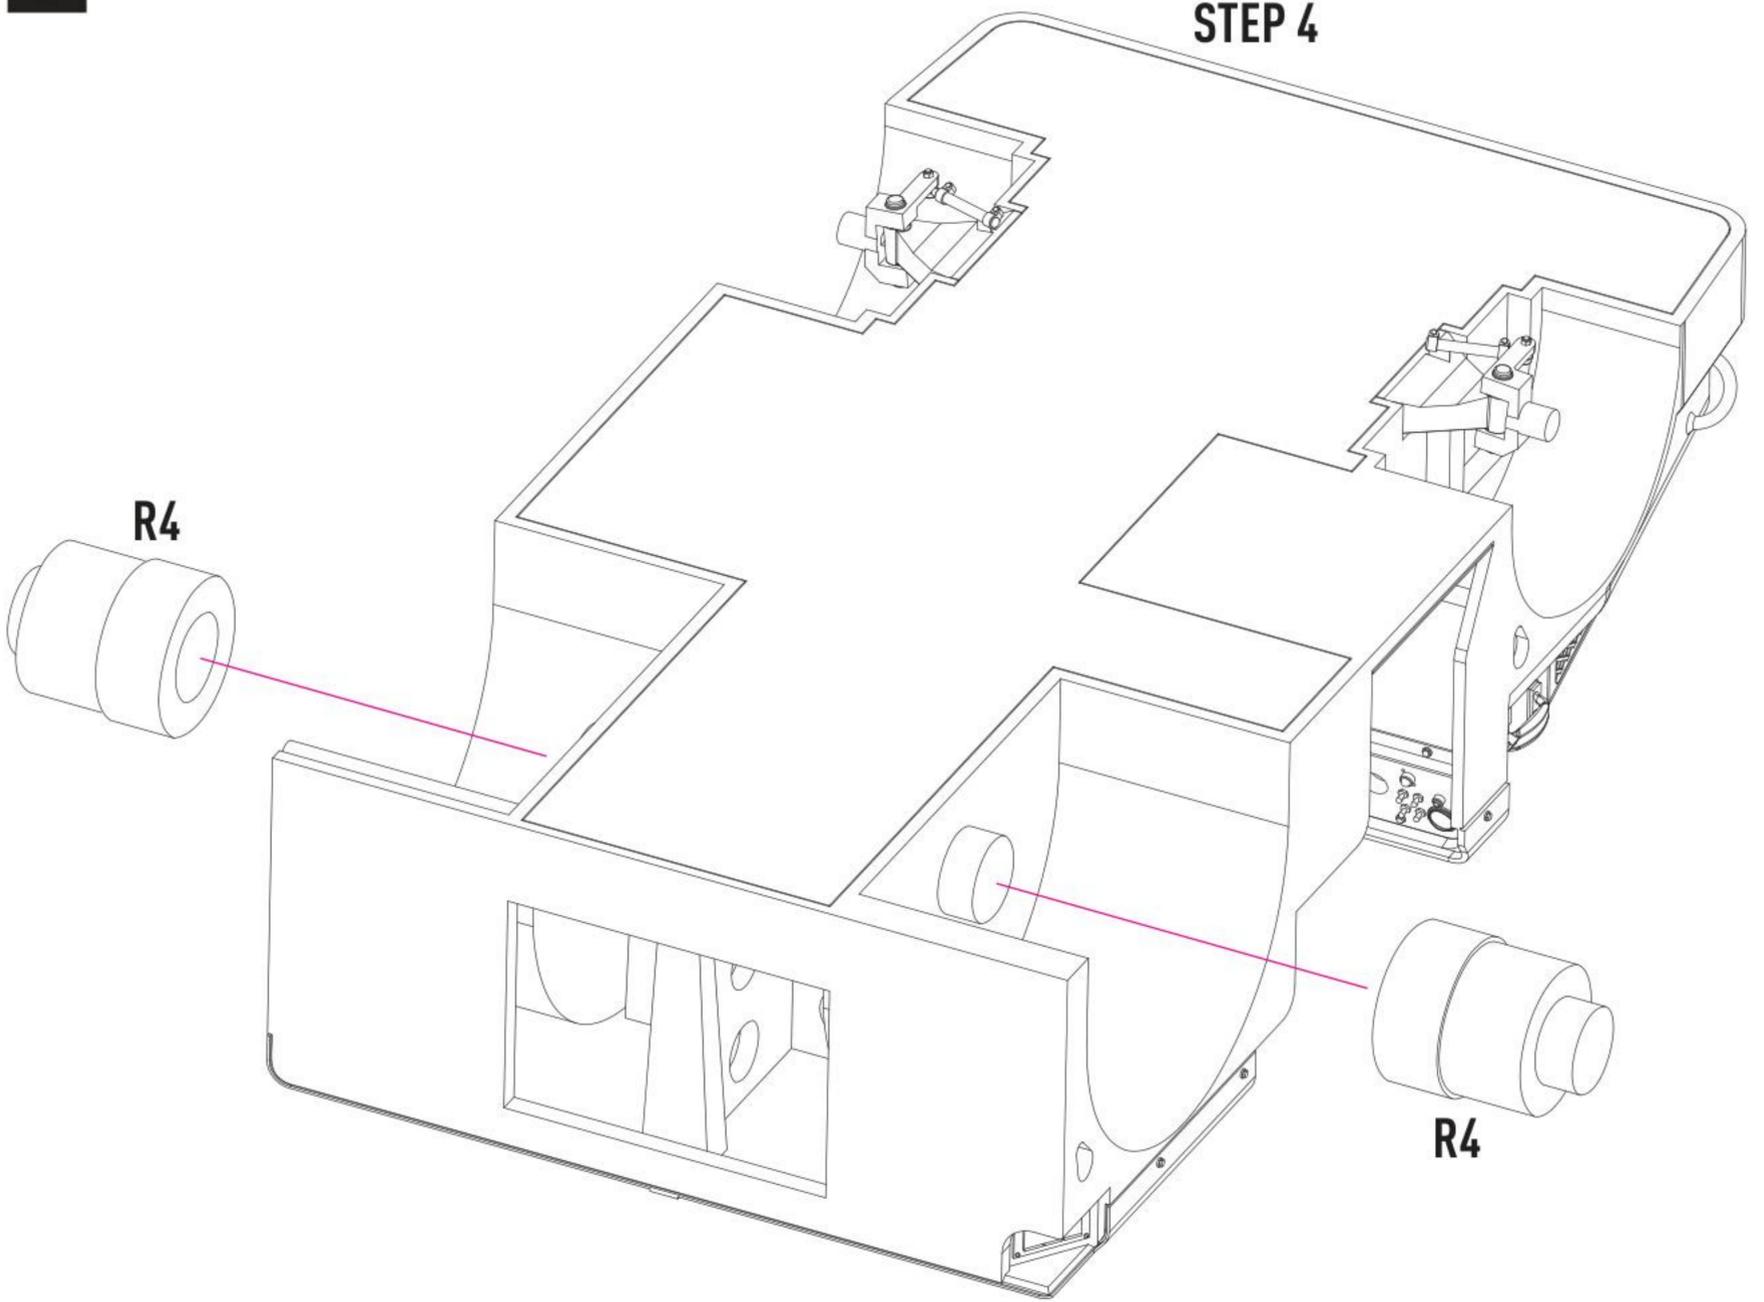


6 X2

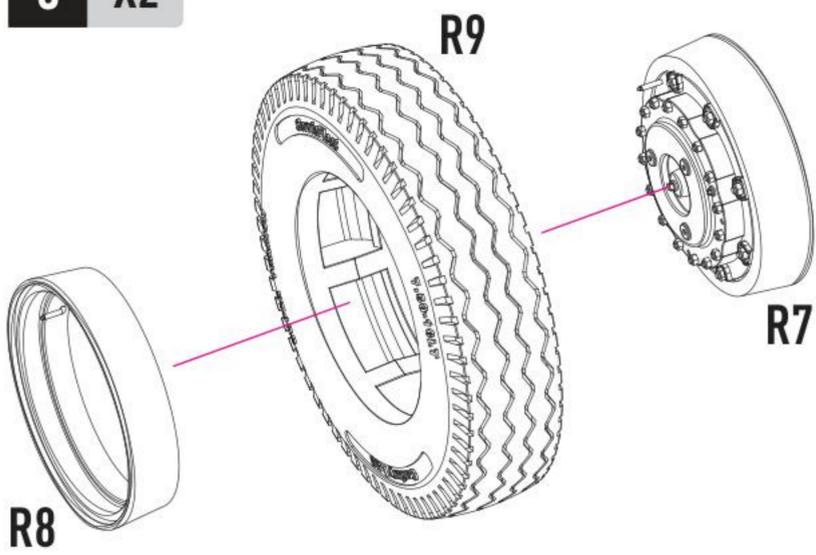


7 X2

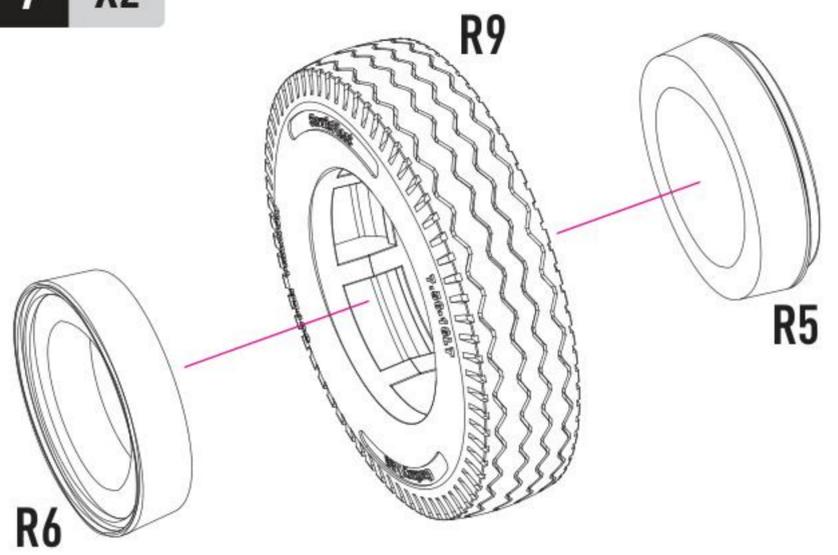


8 X2

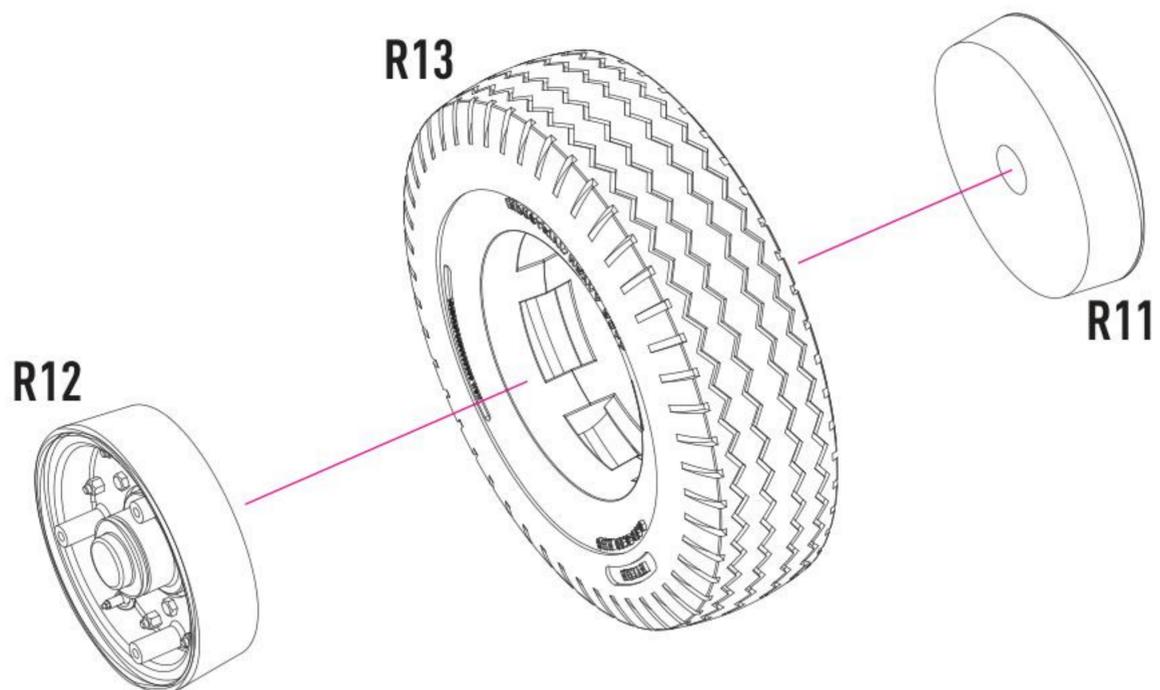



STEP 5

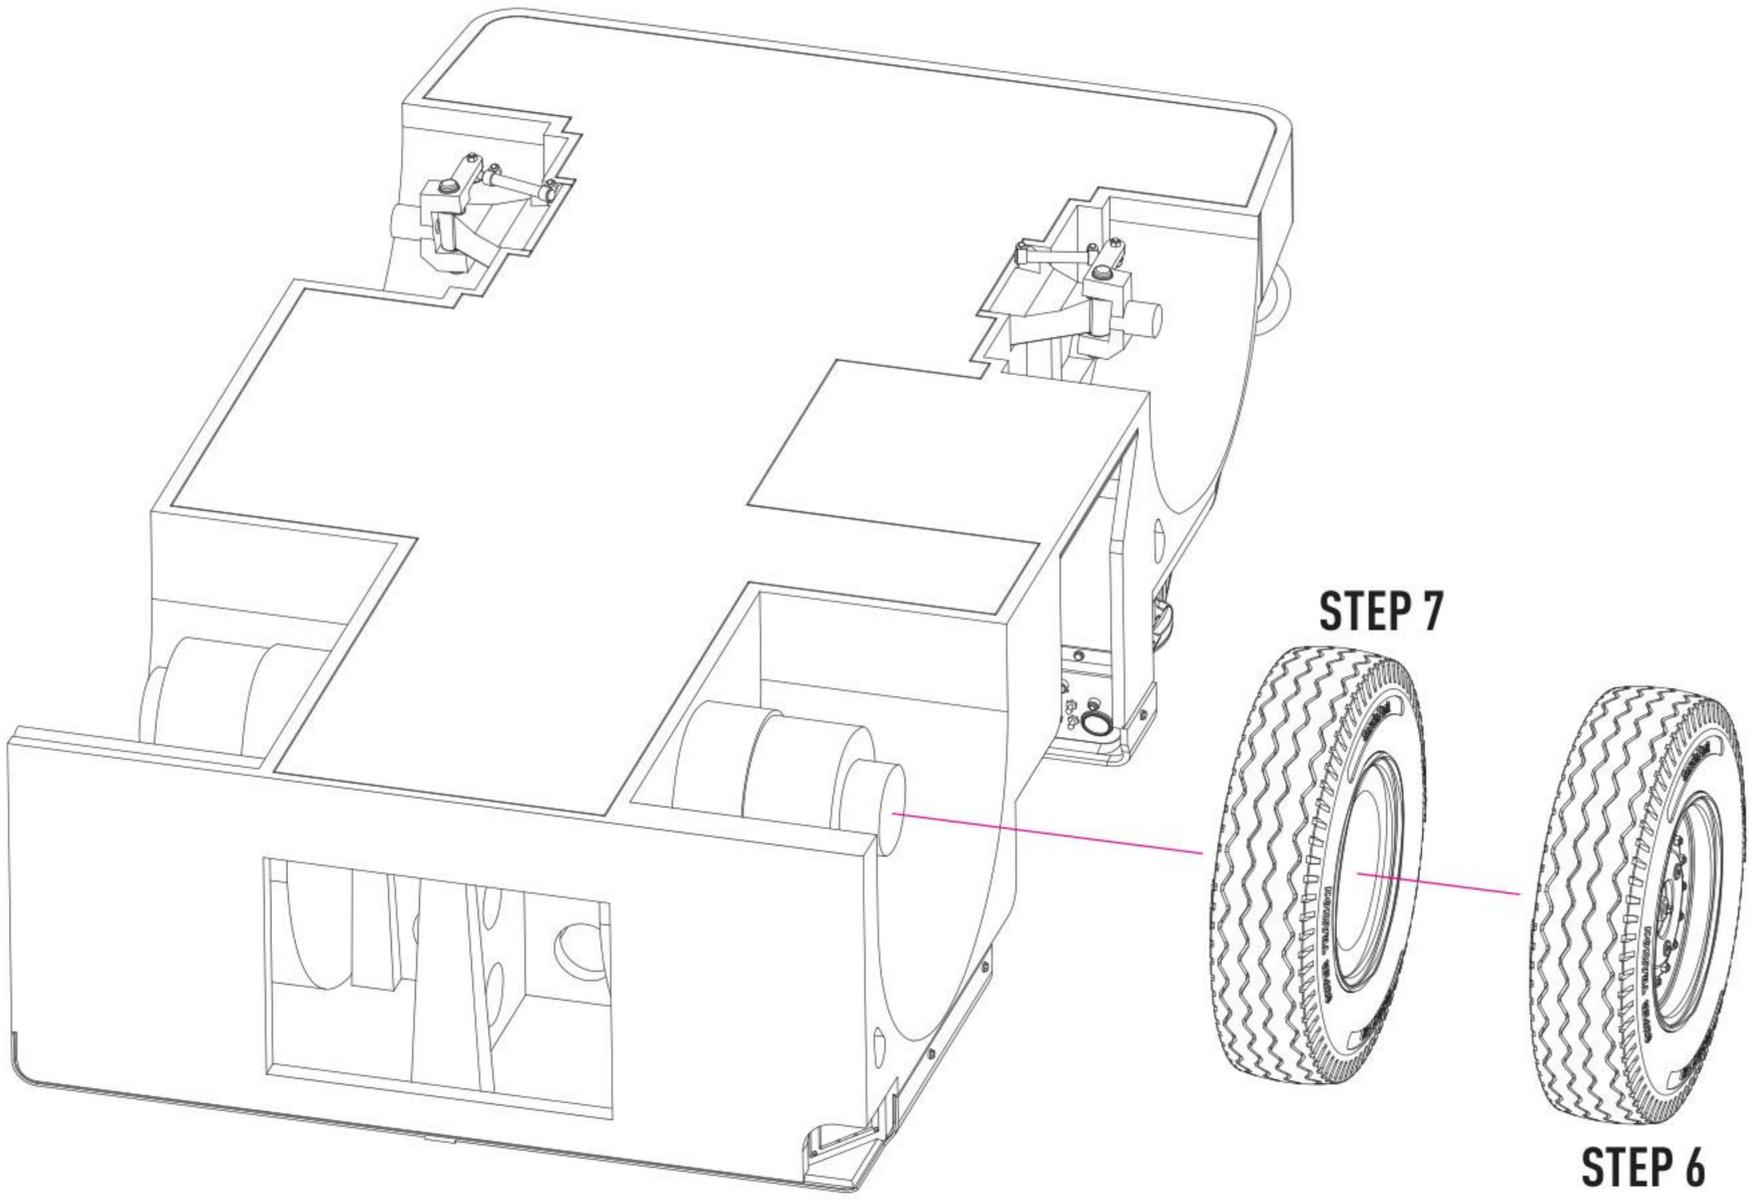


STEP 7

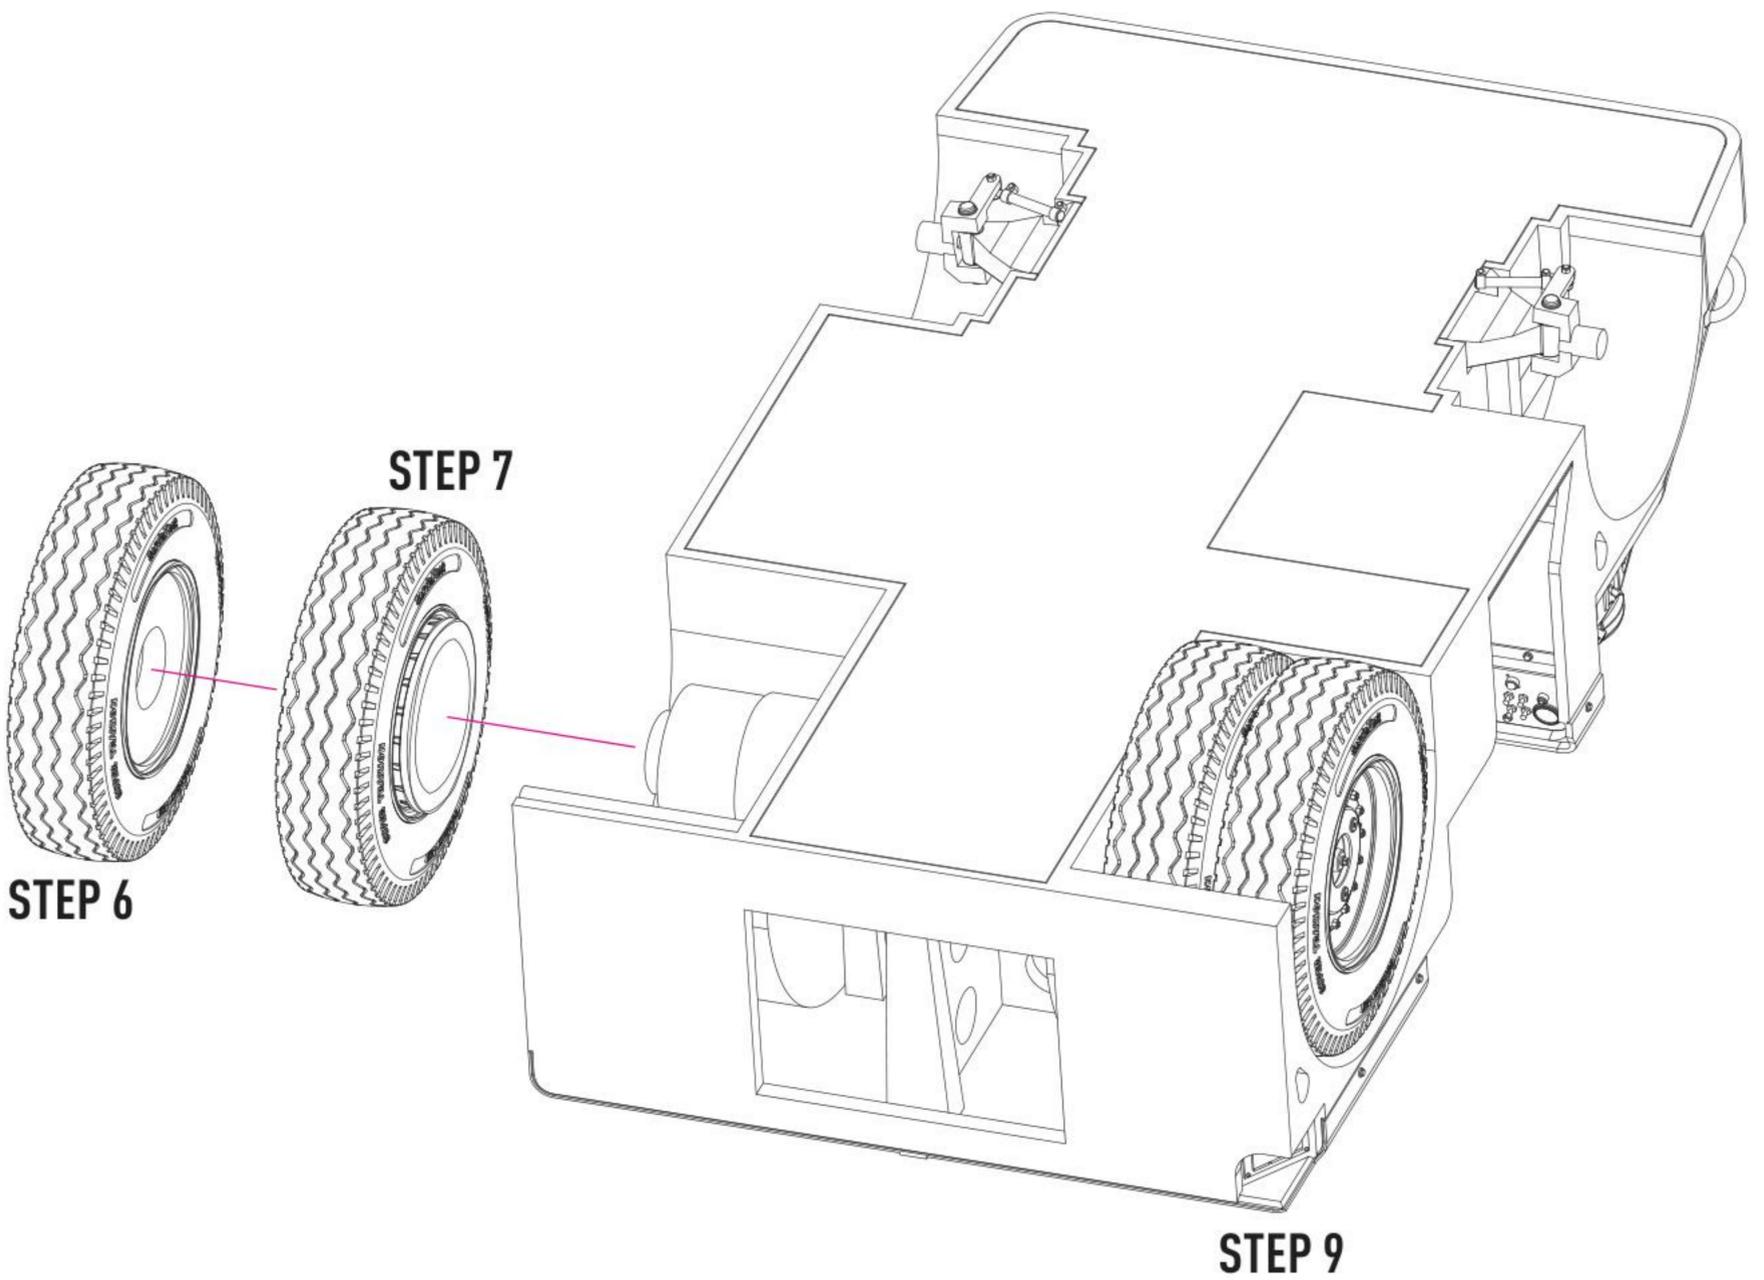


STEP 10

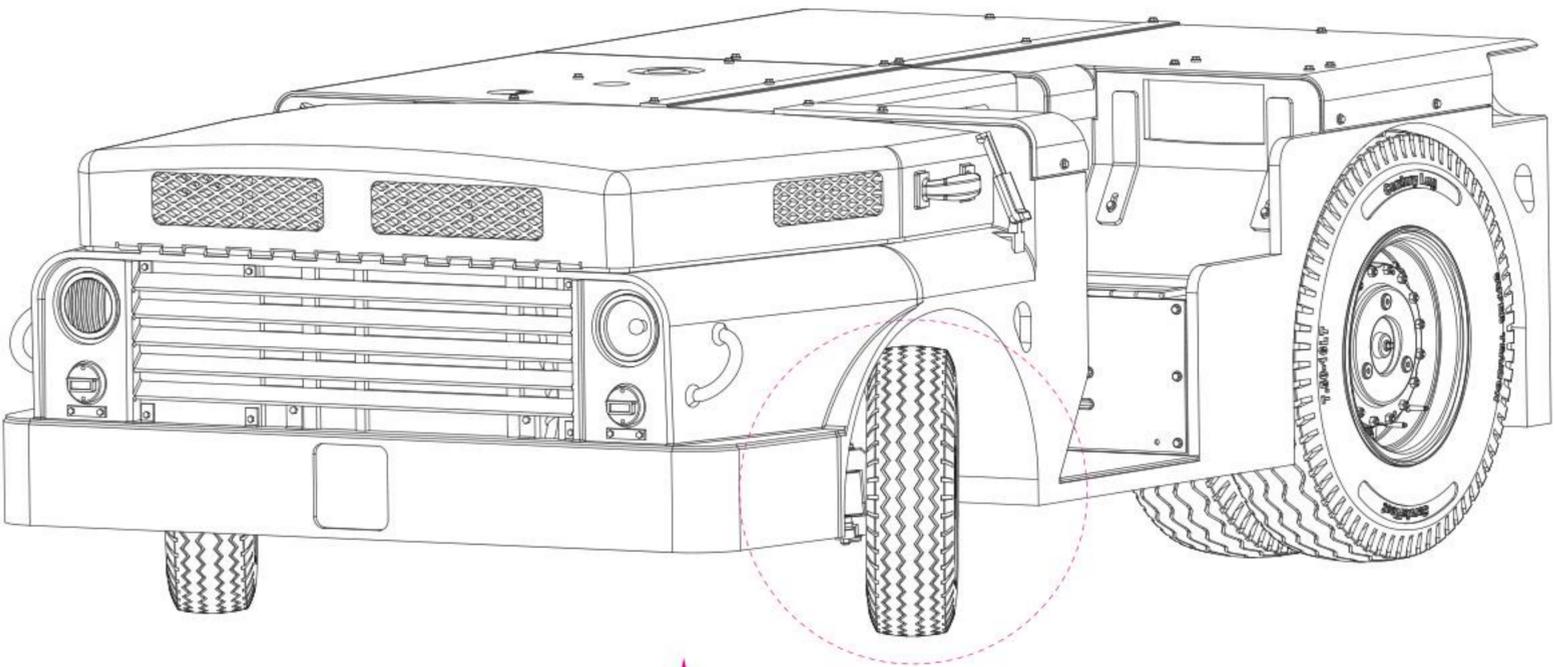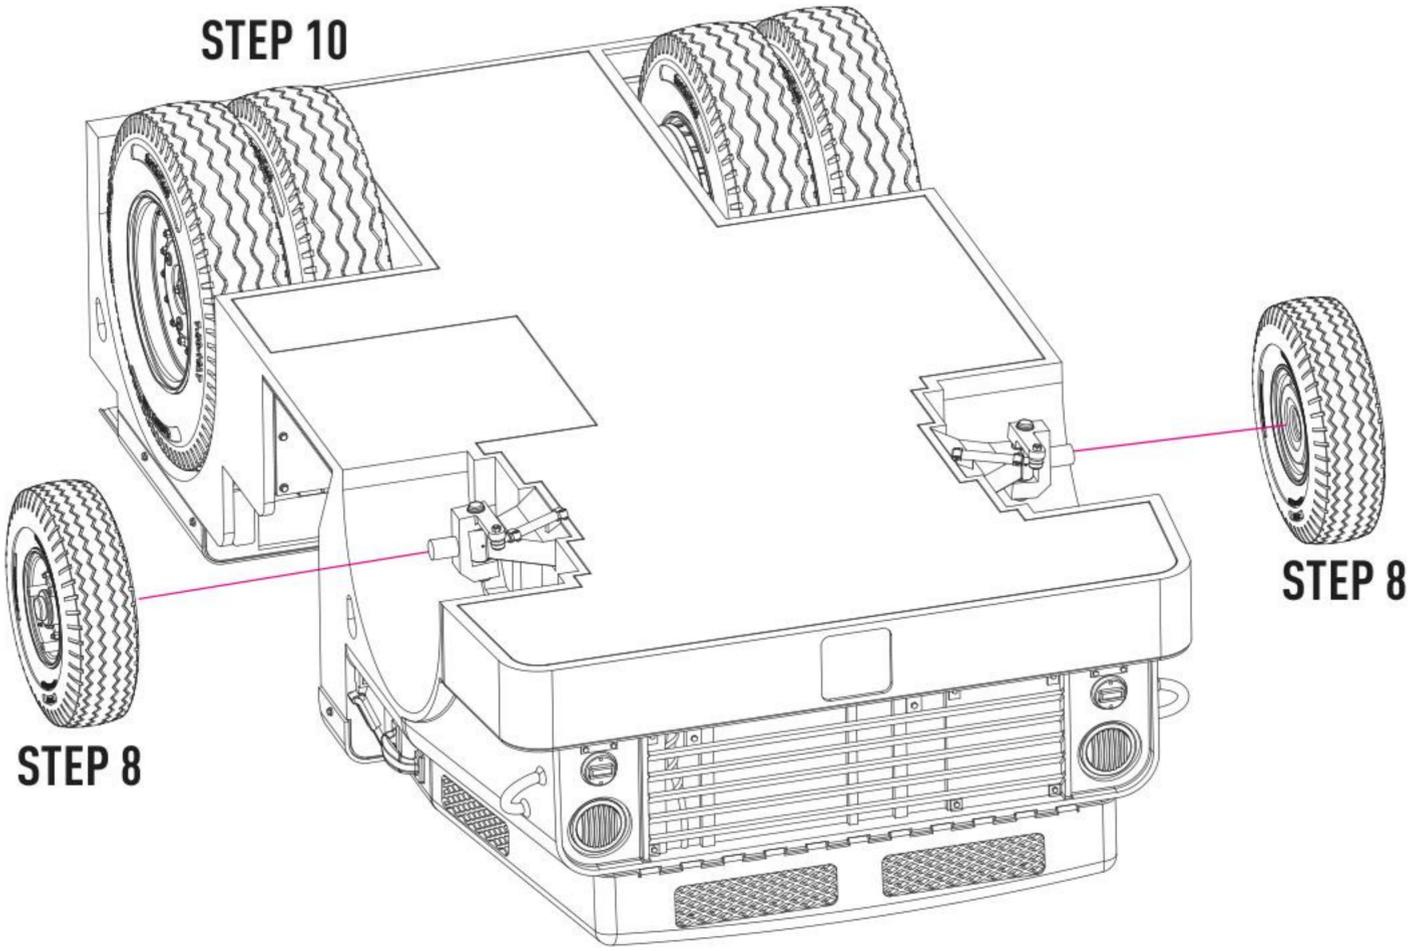


?

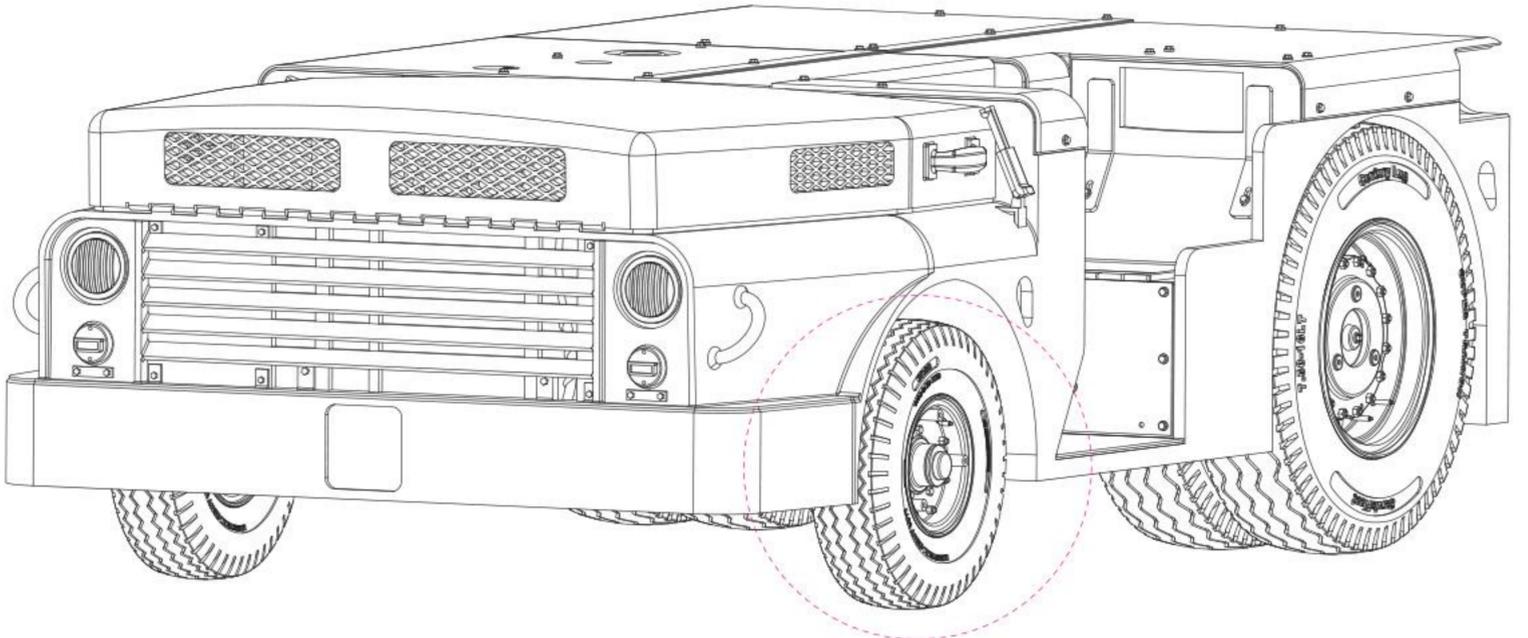


12

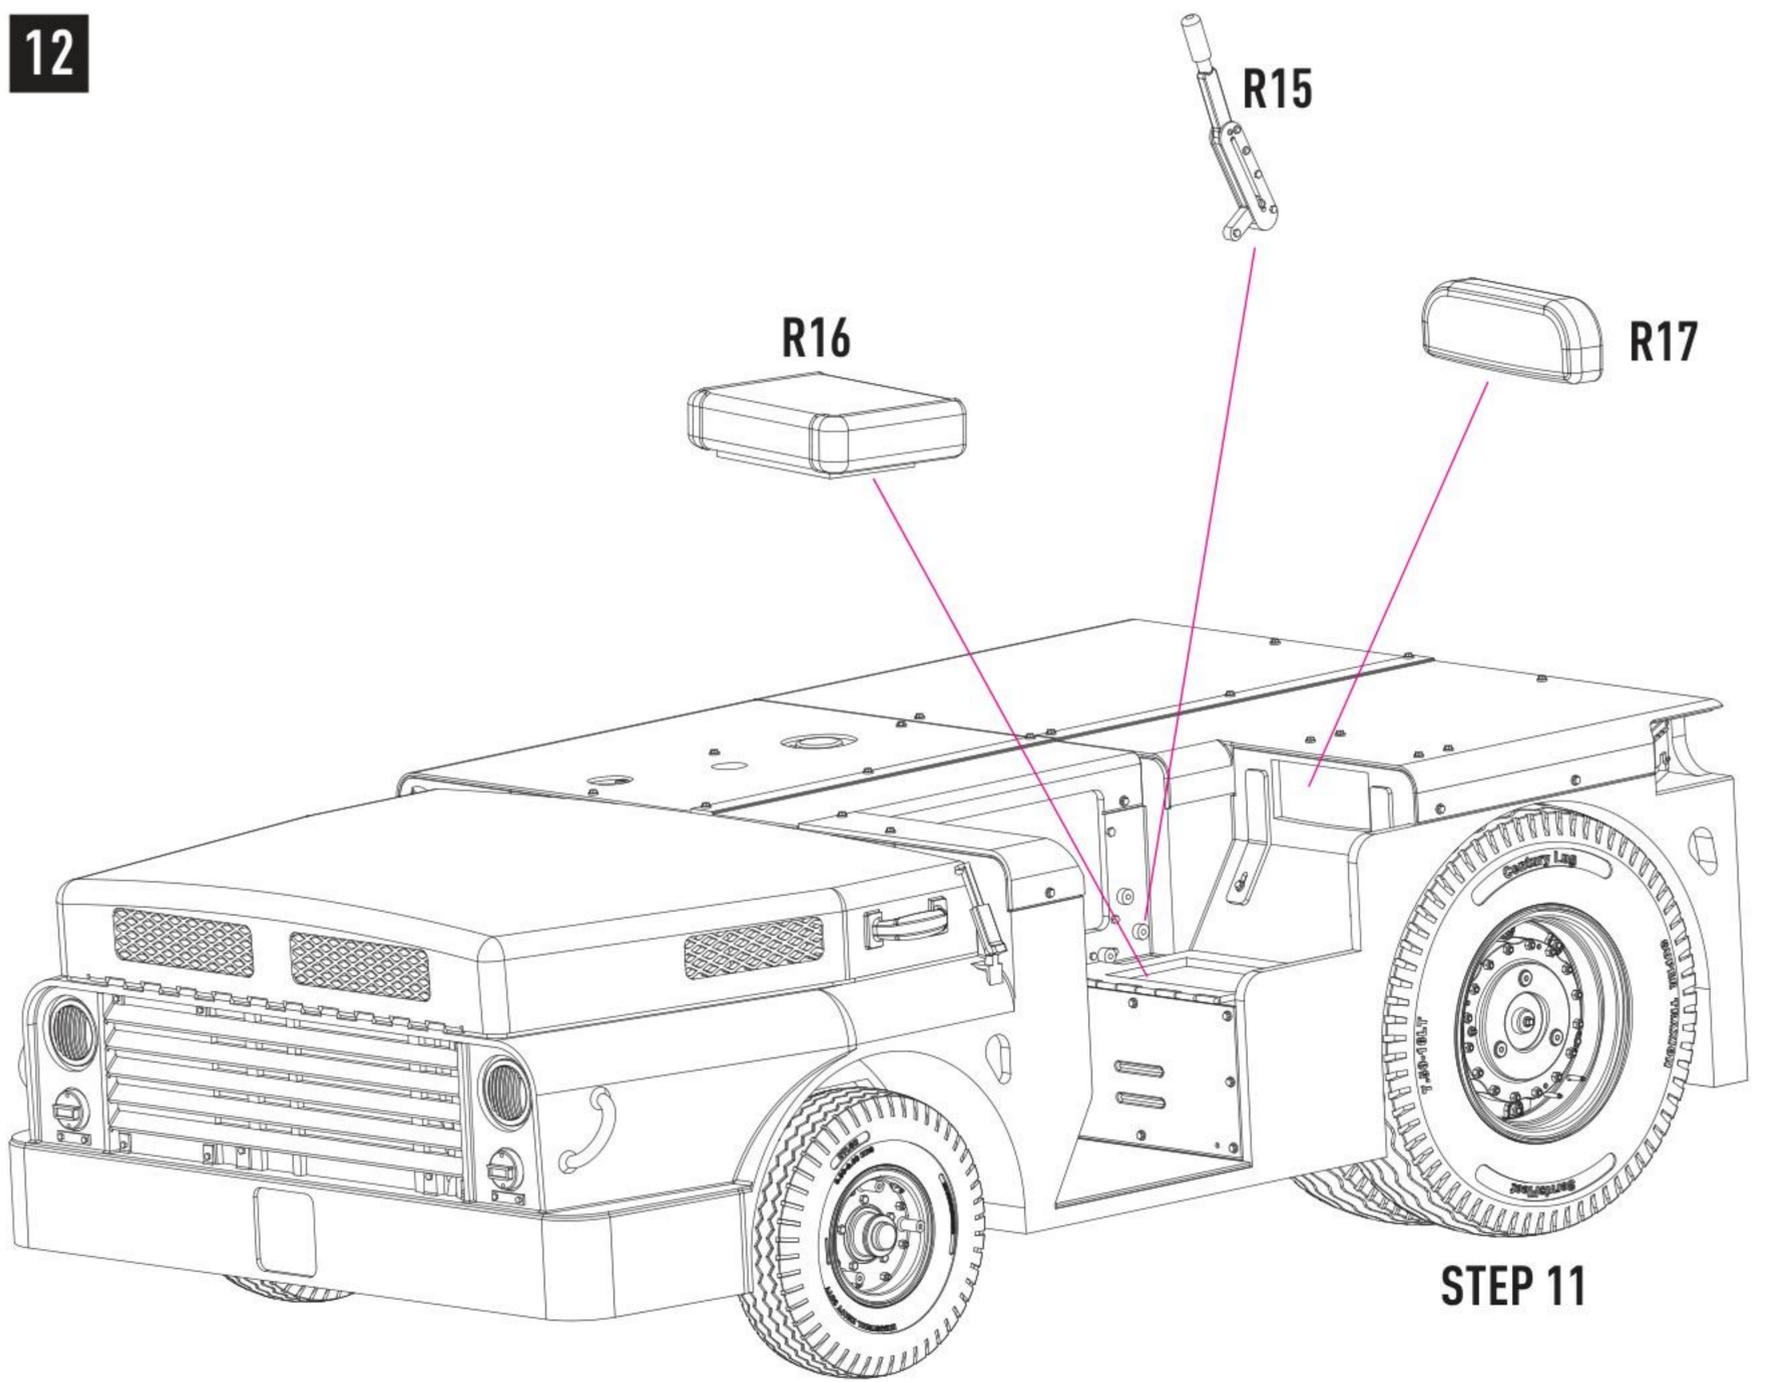


13

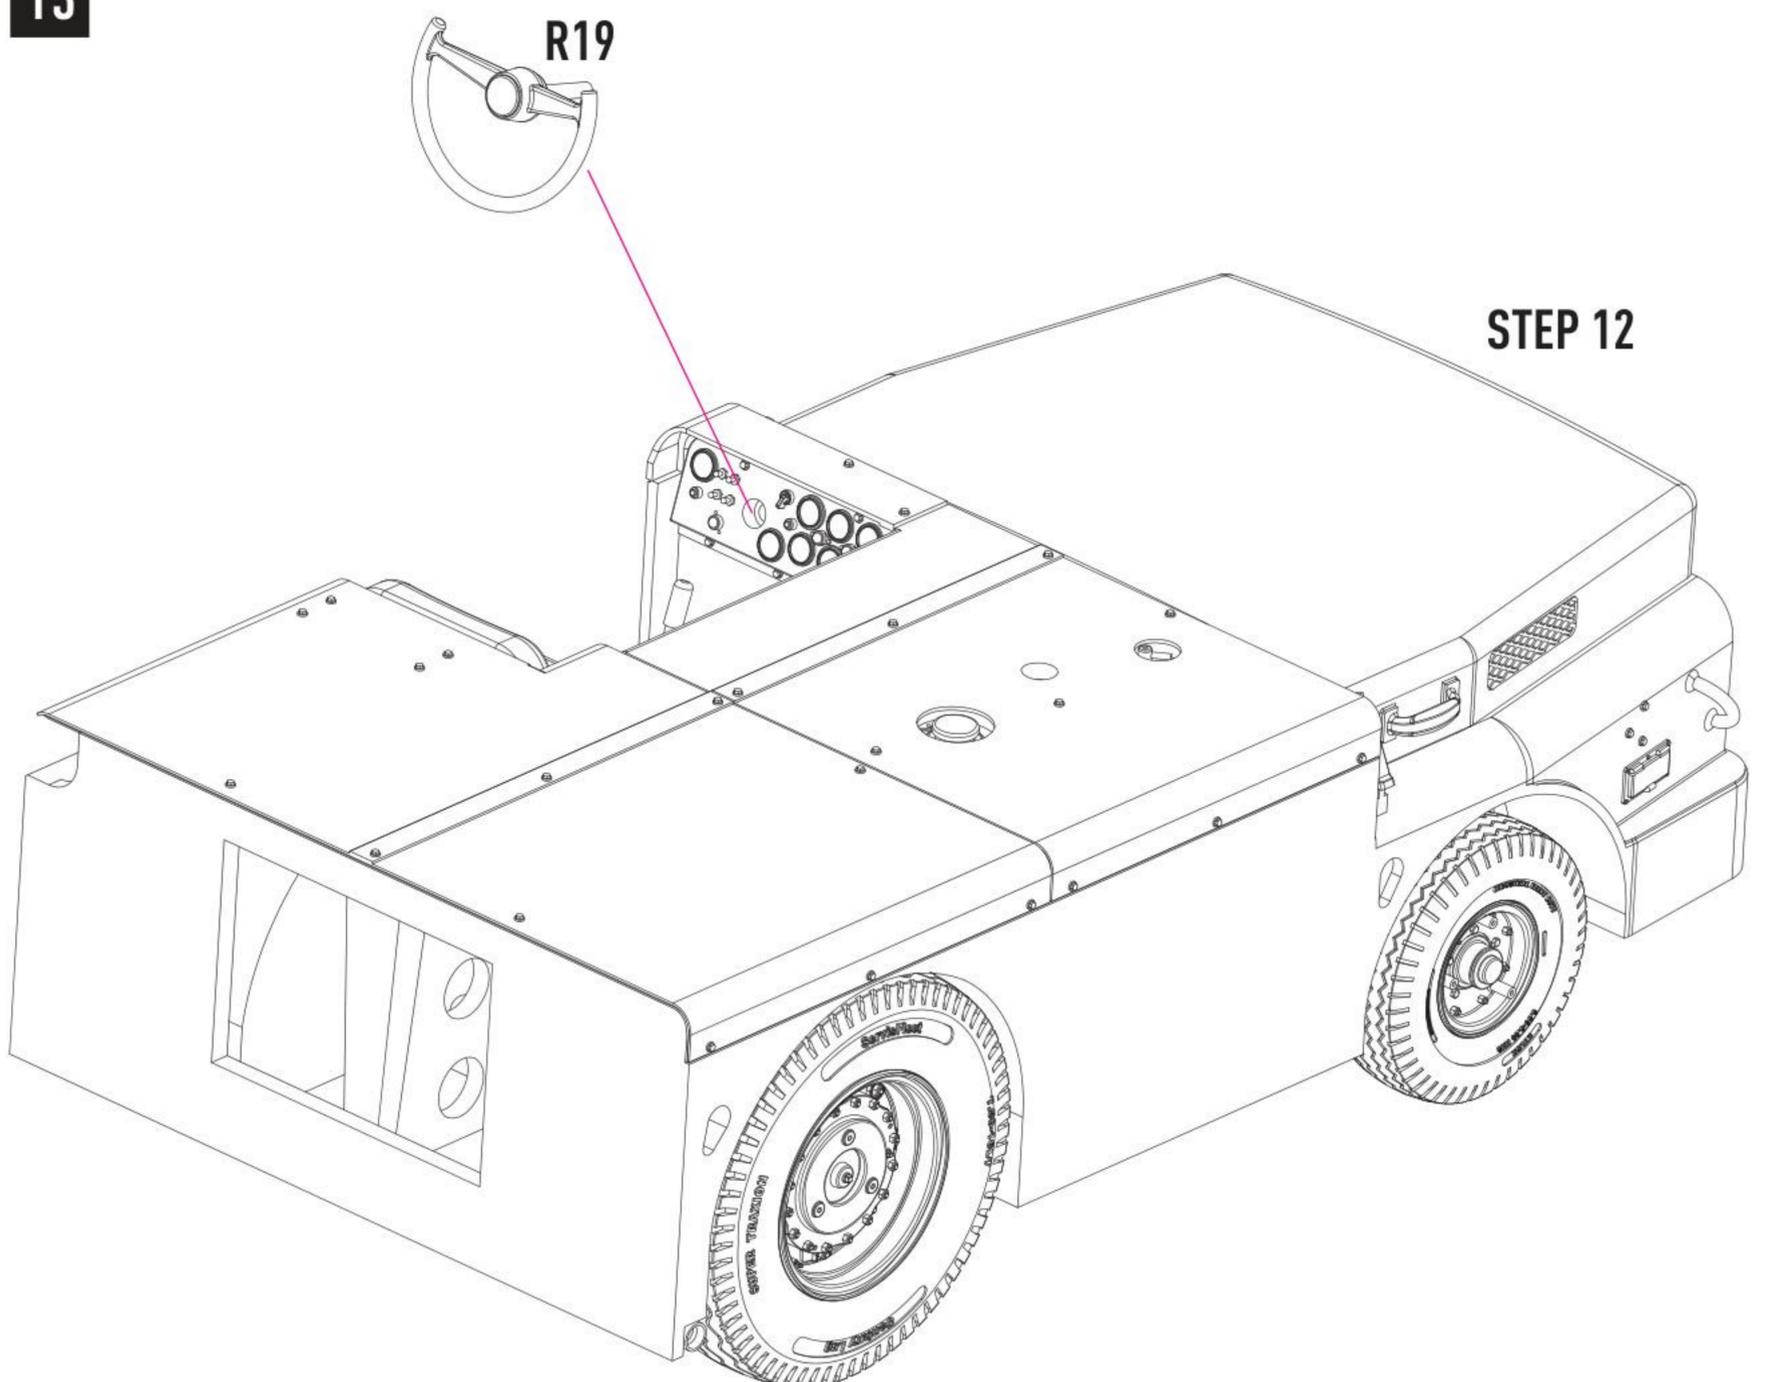


14

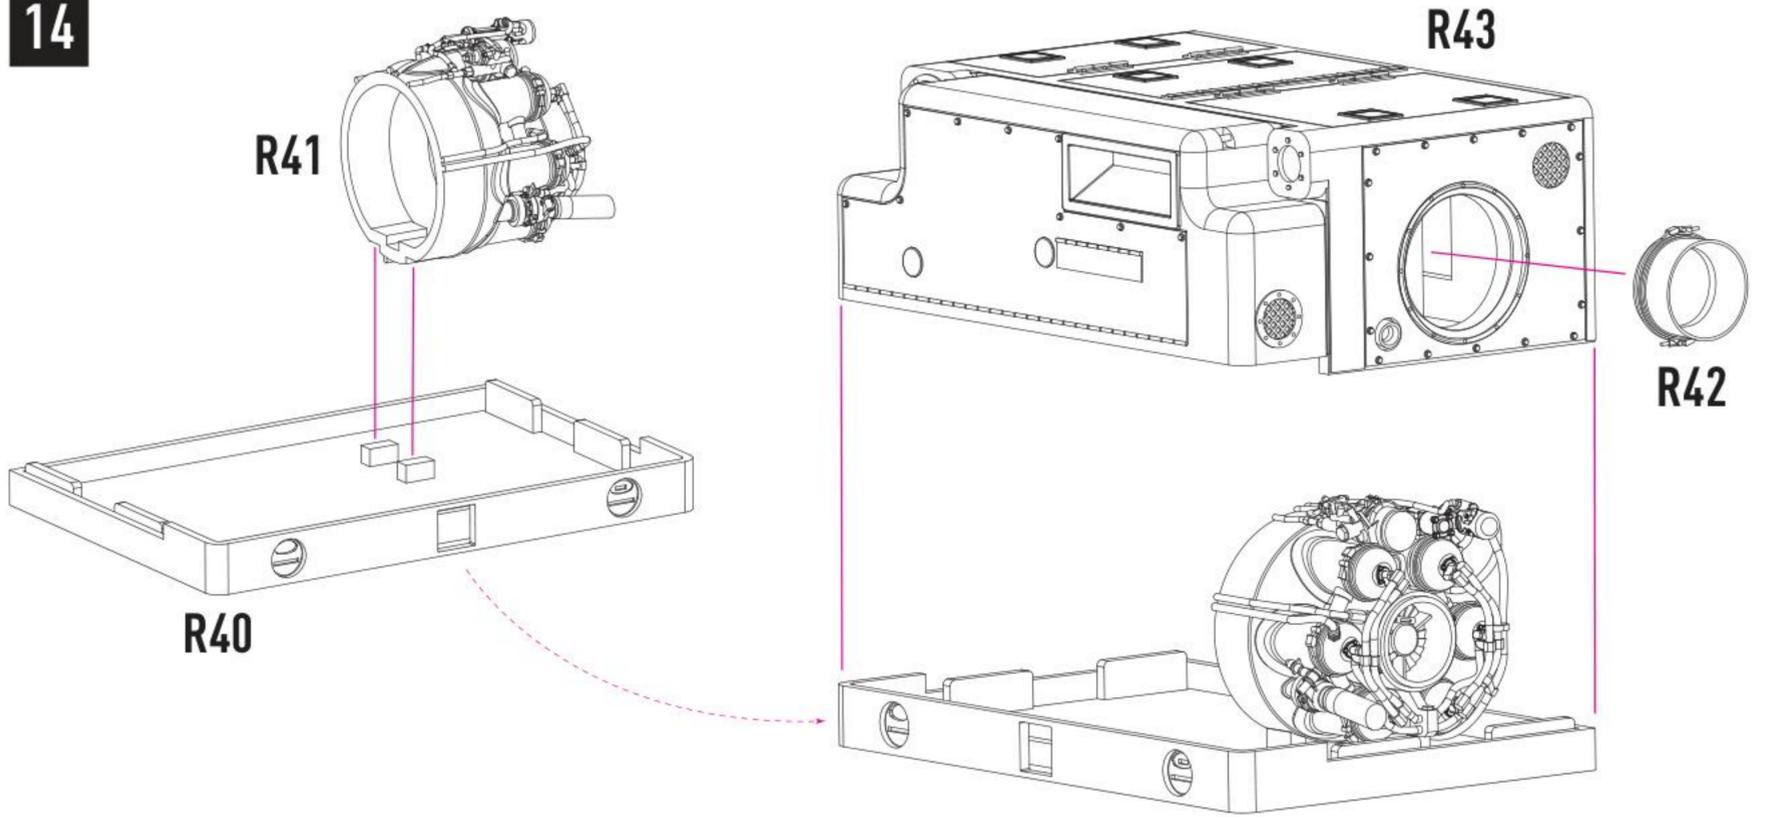


15

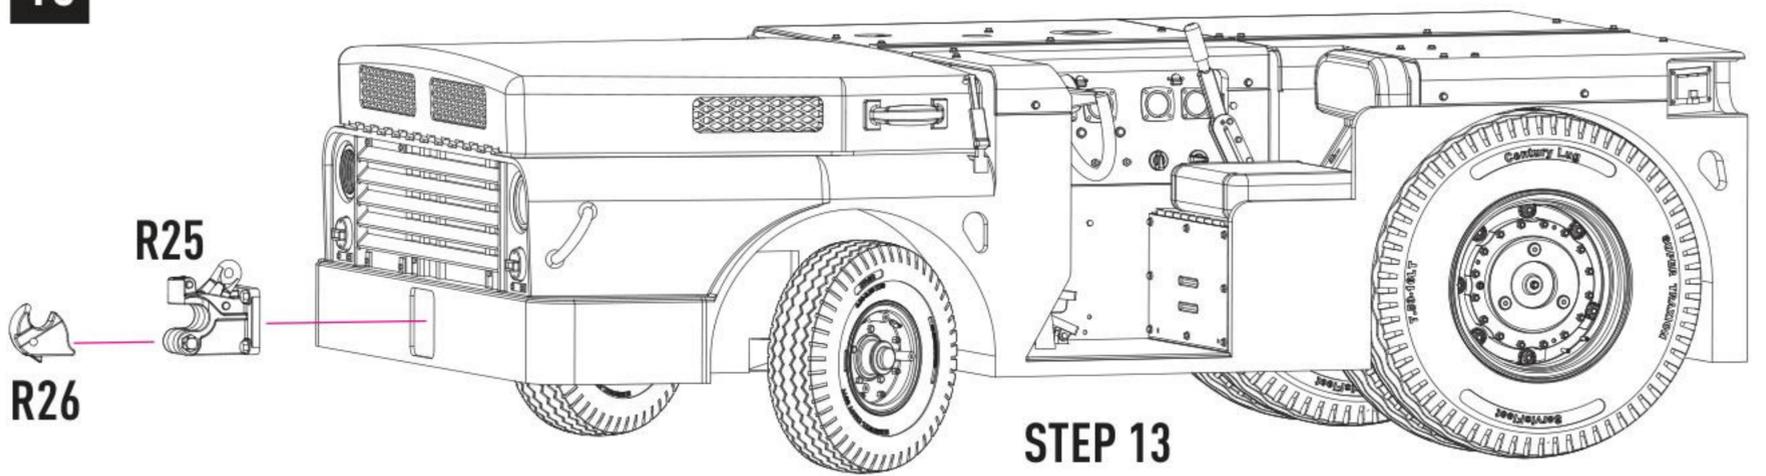



16

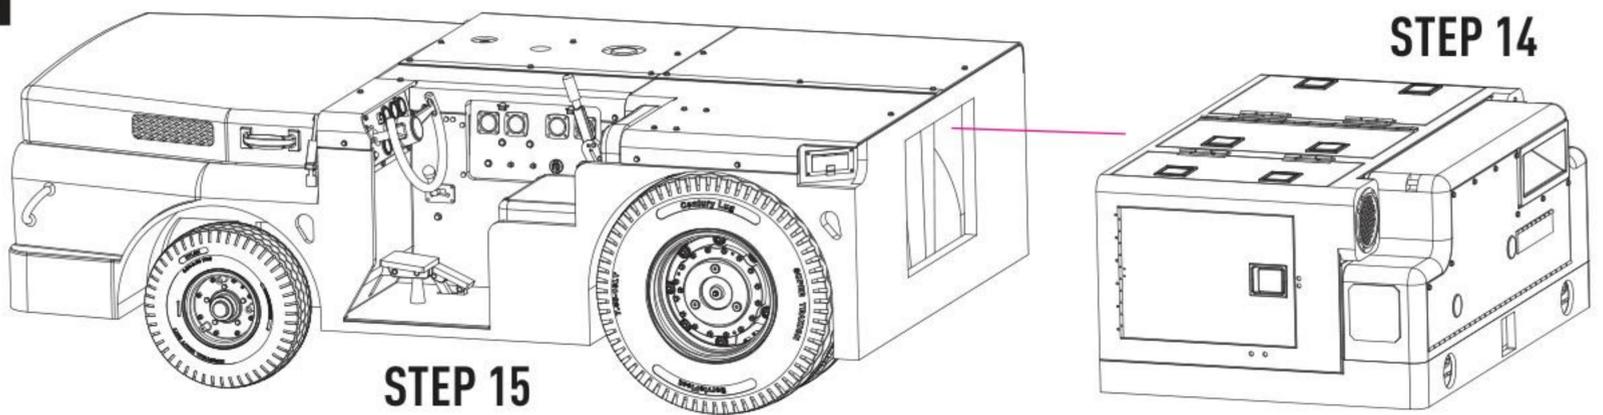


17

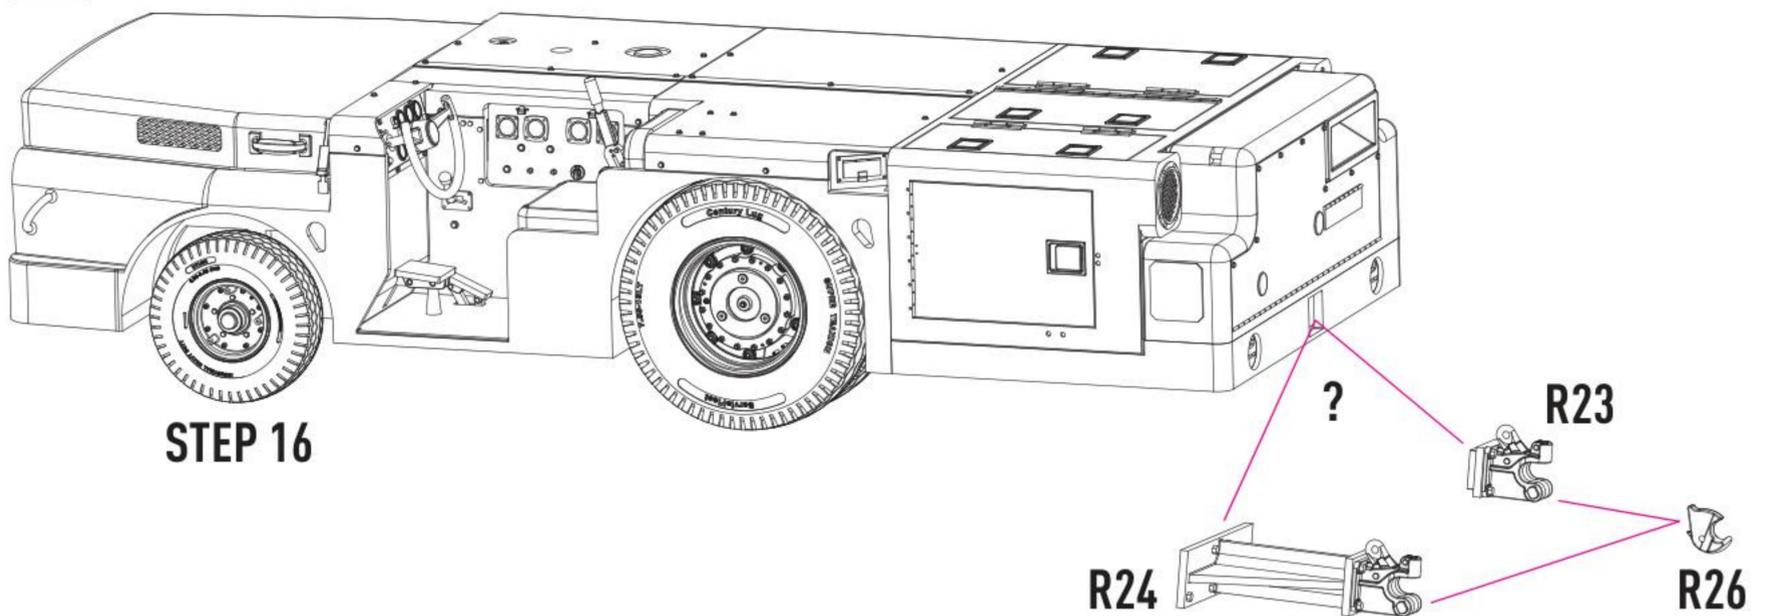


18

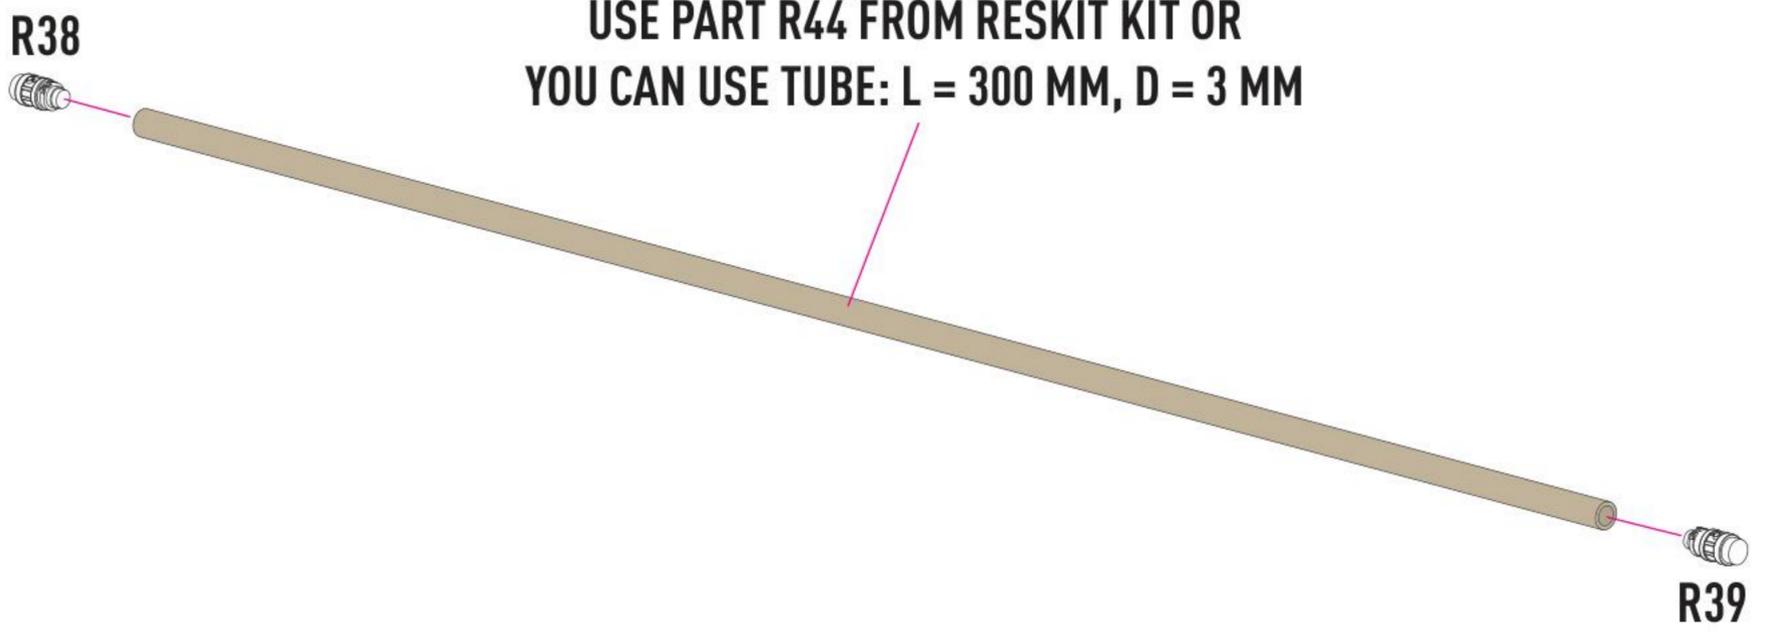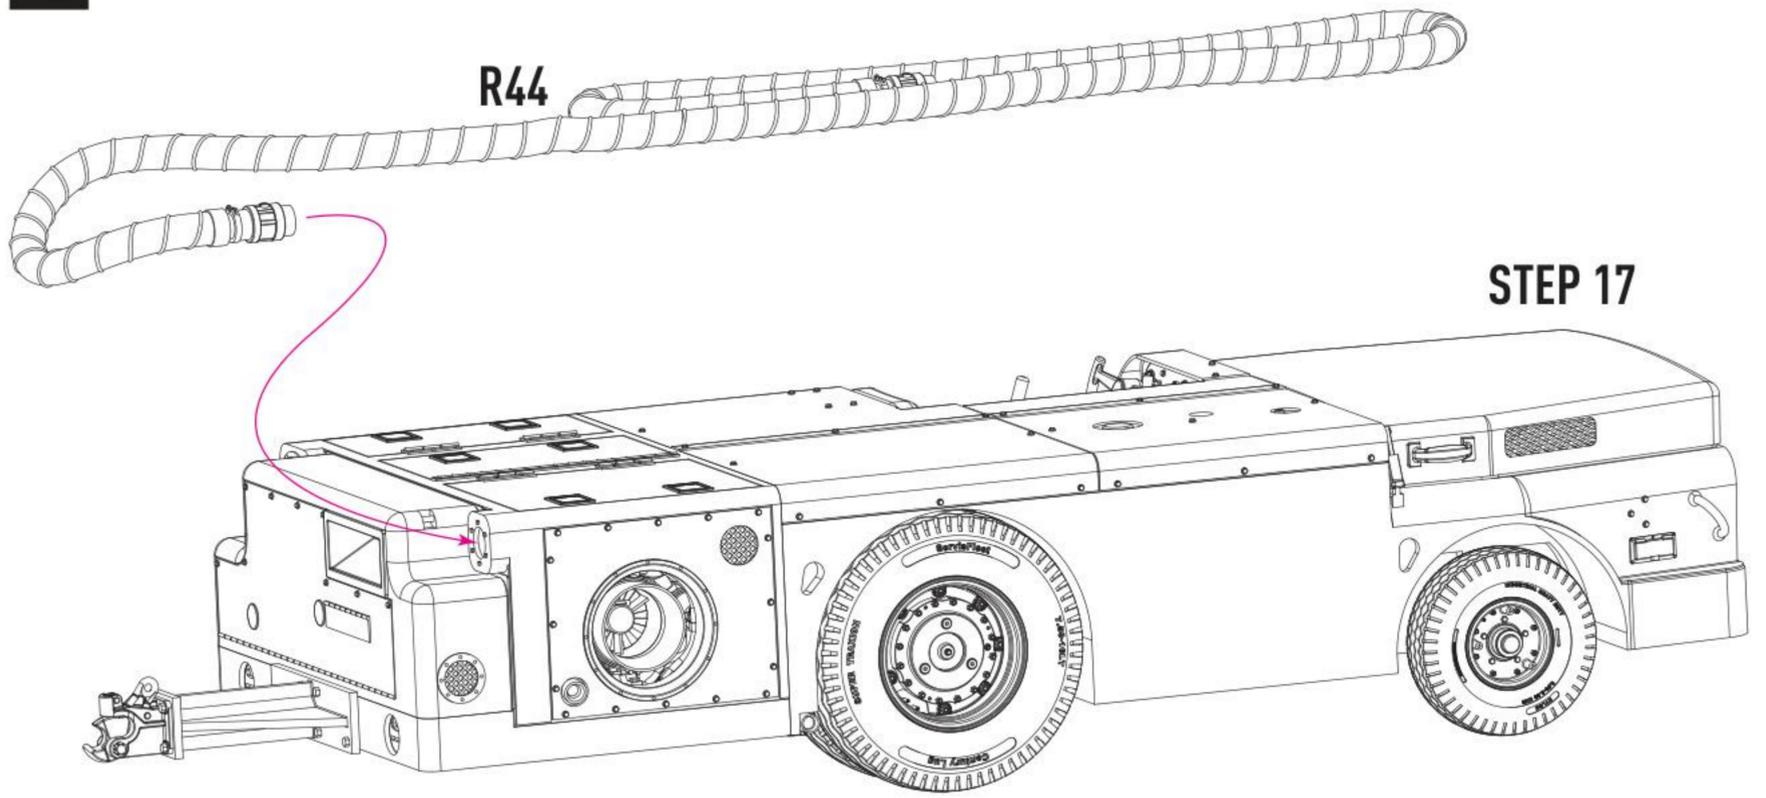


19

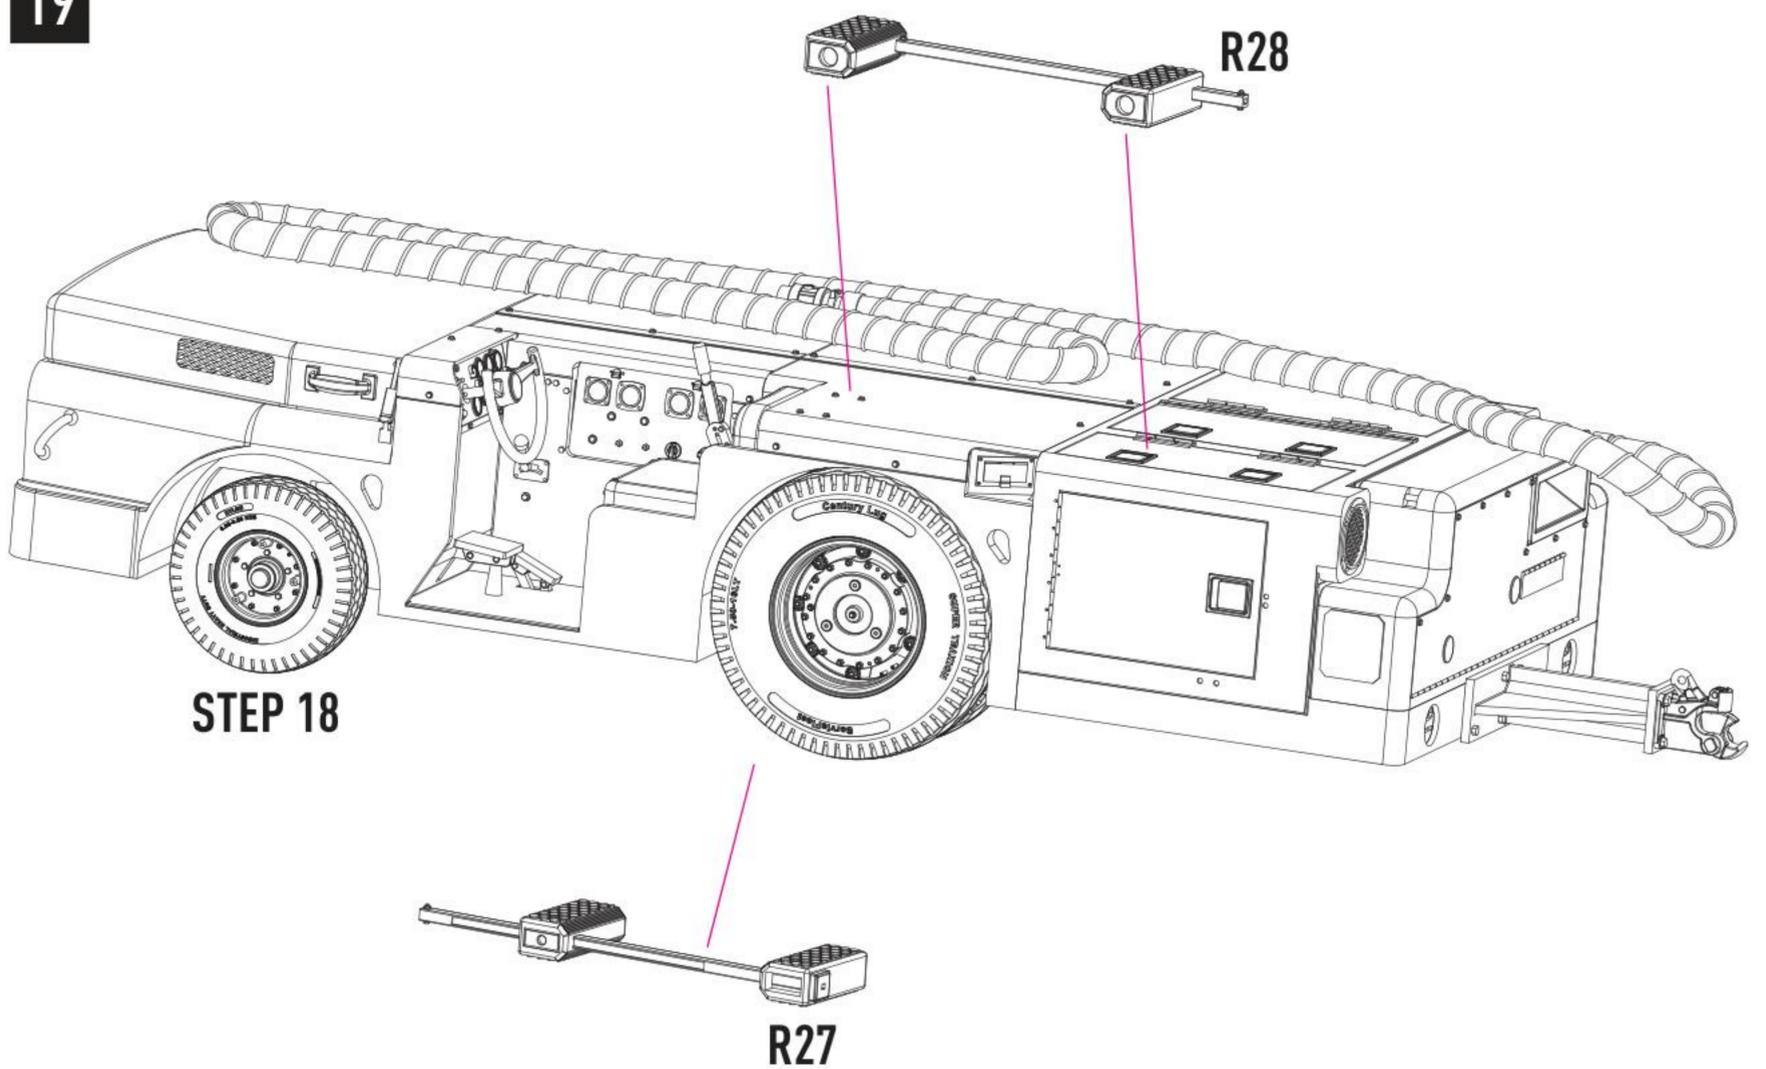


20

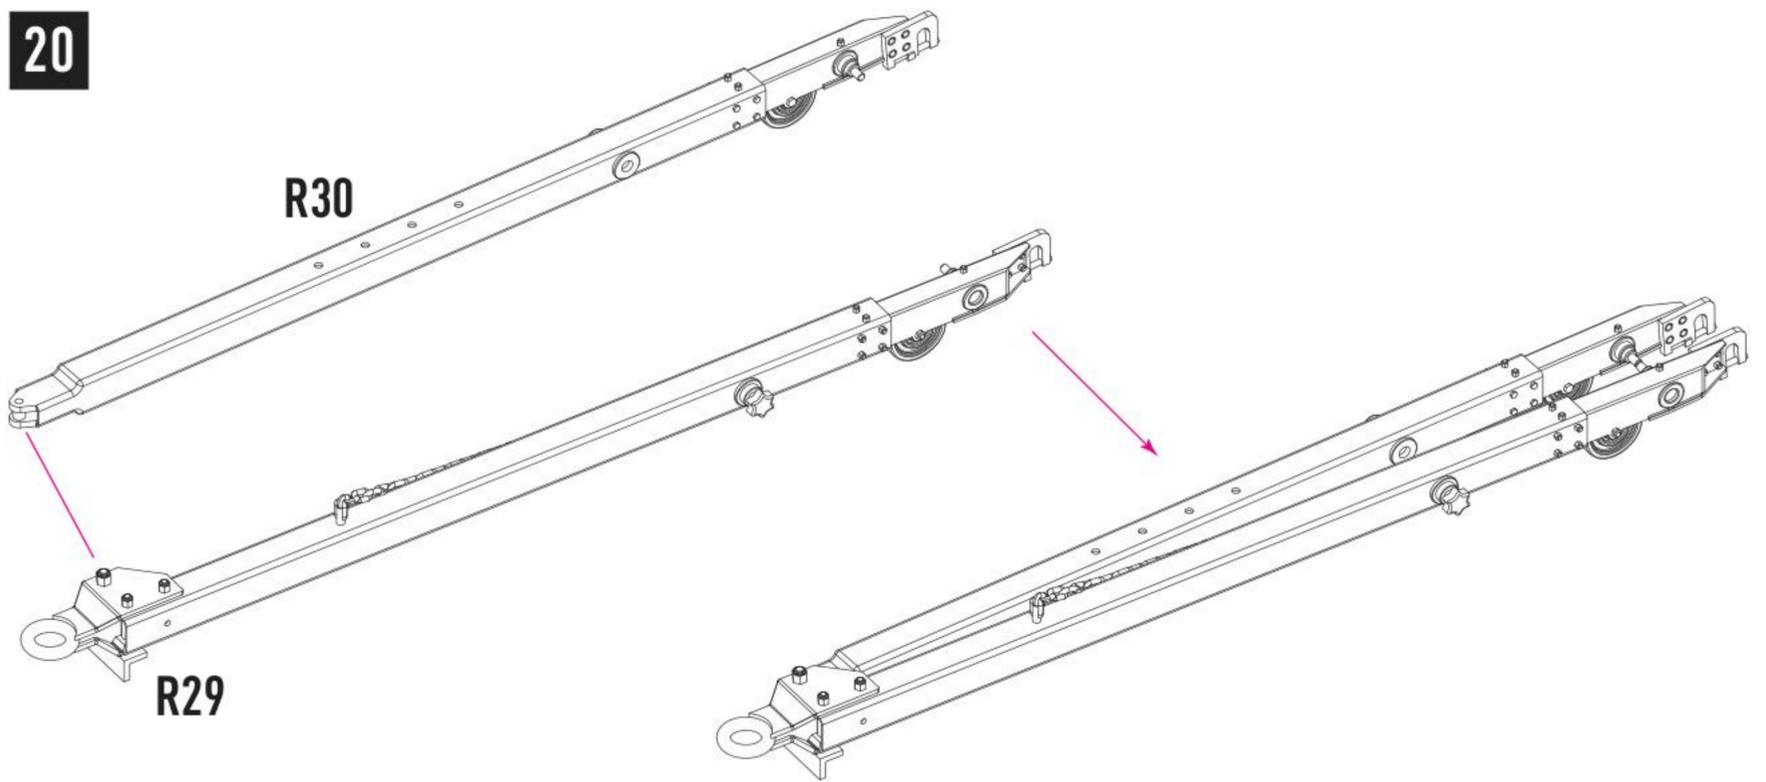


21

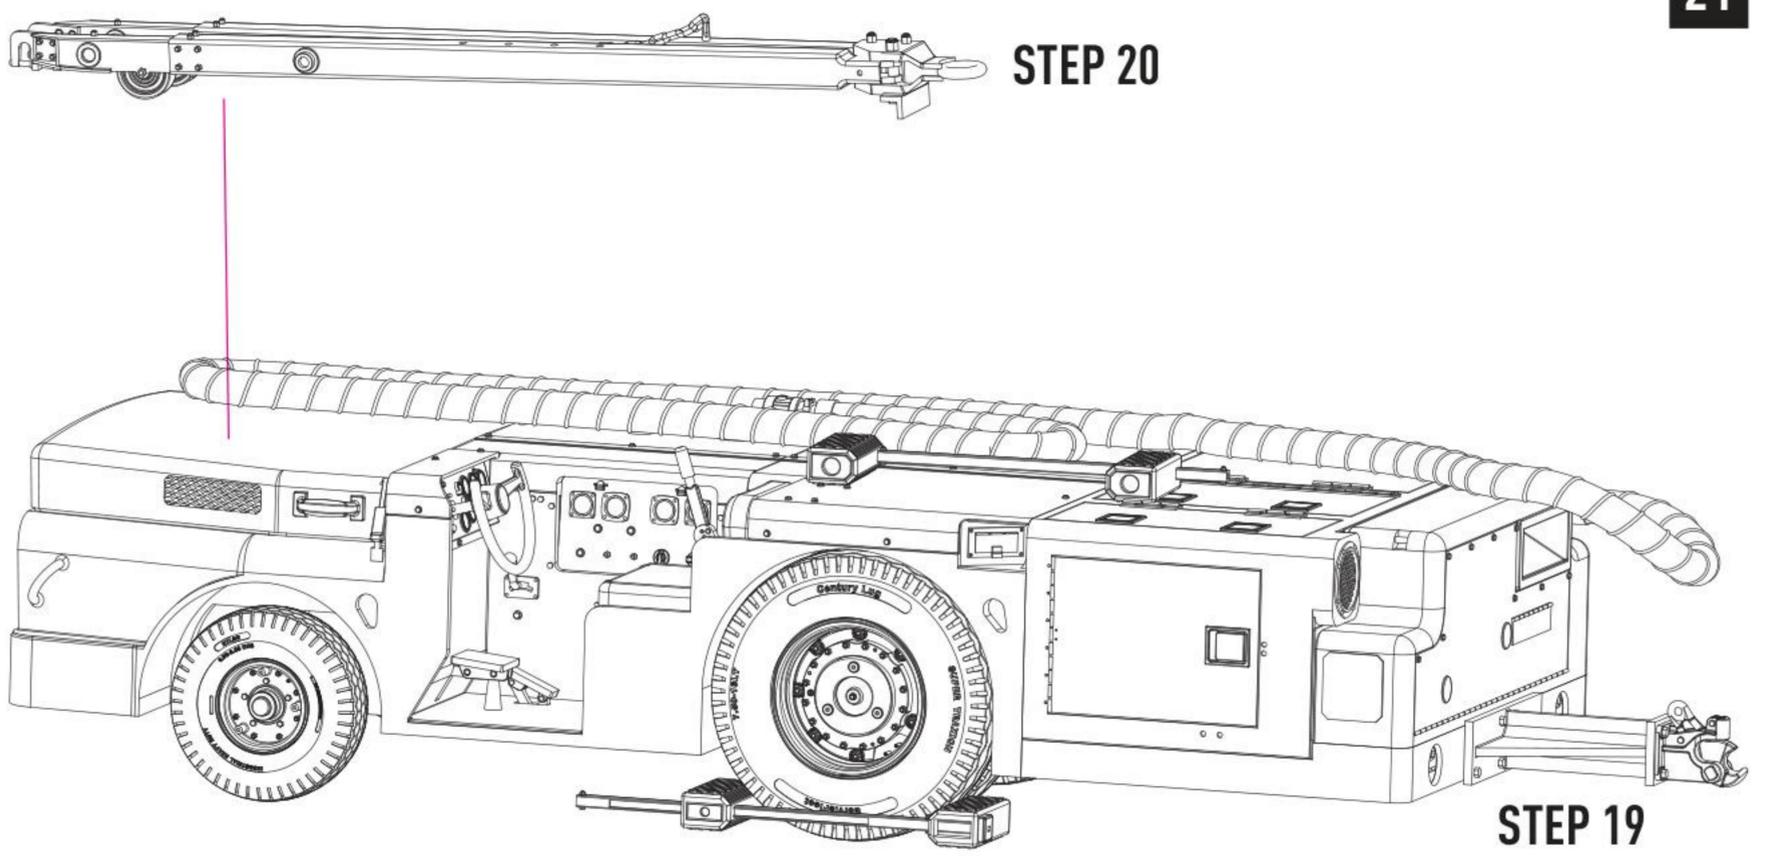


22

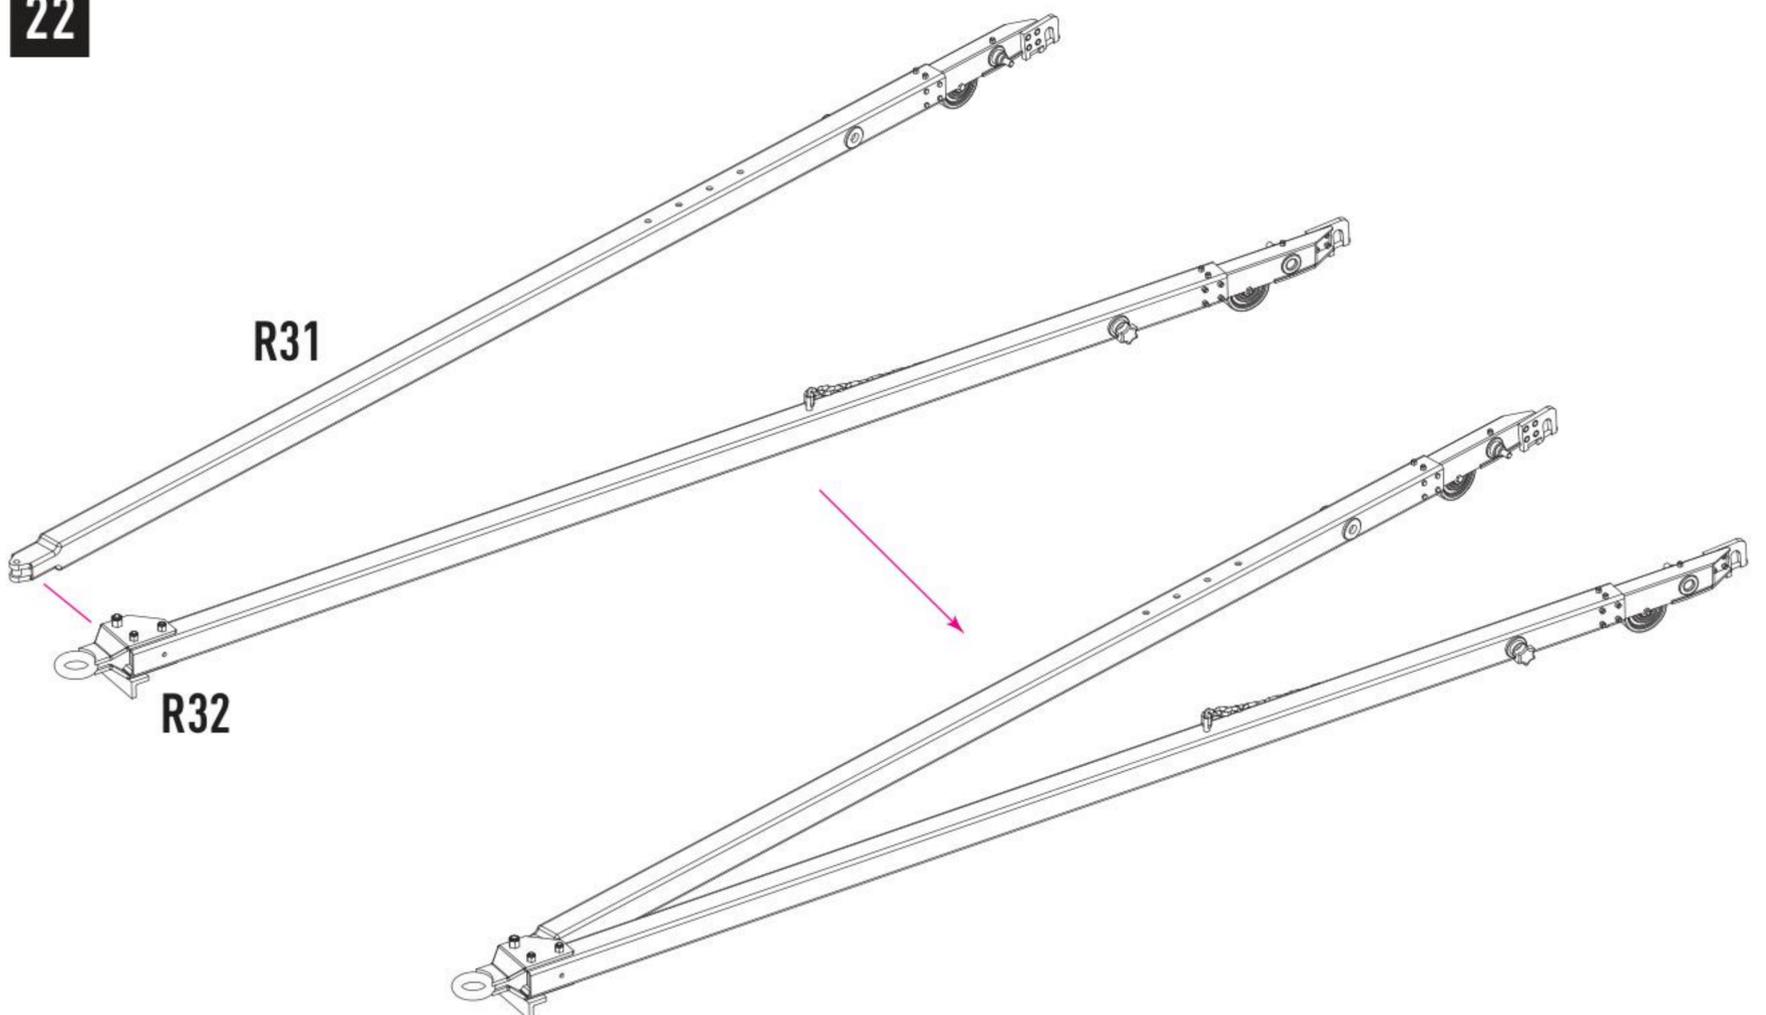


STEP 21



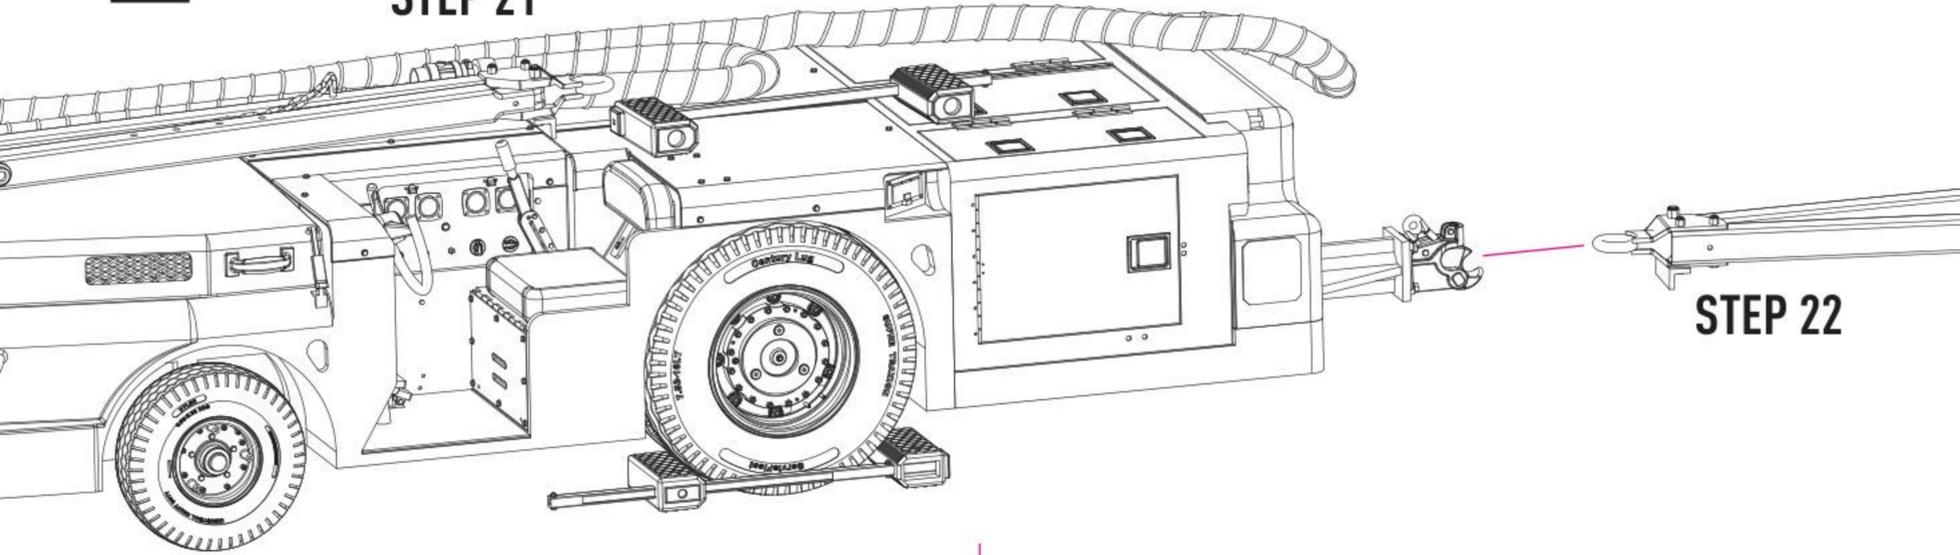


STEP 22




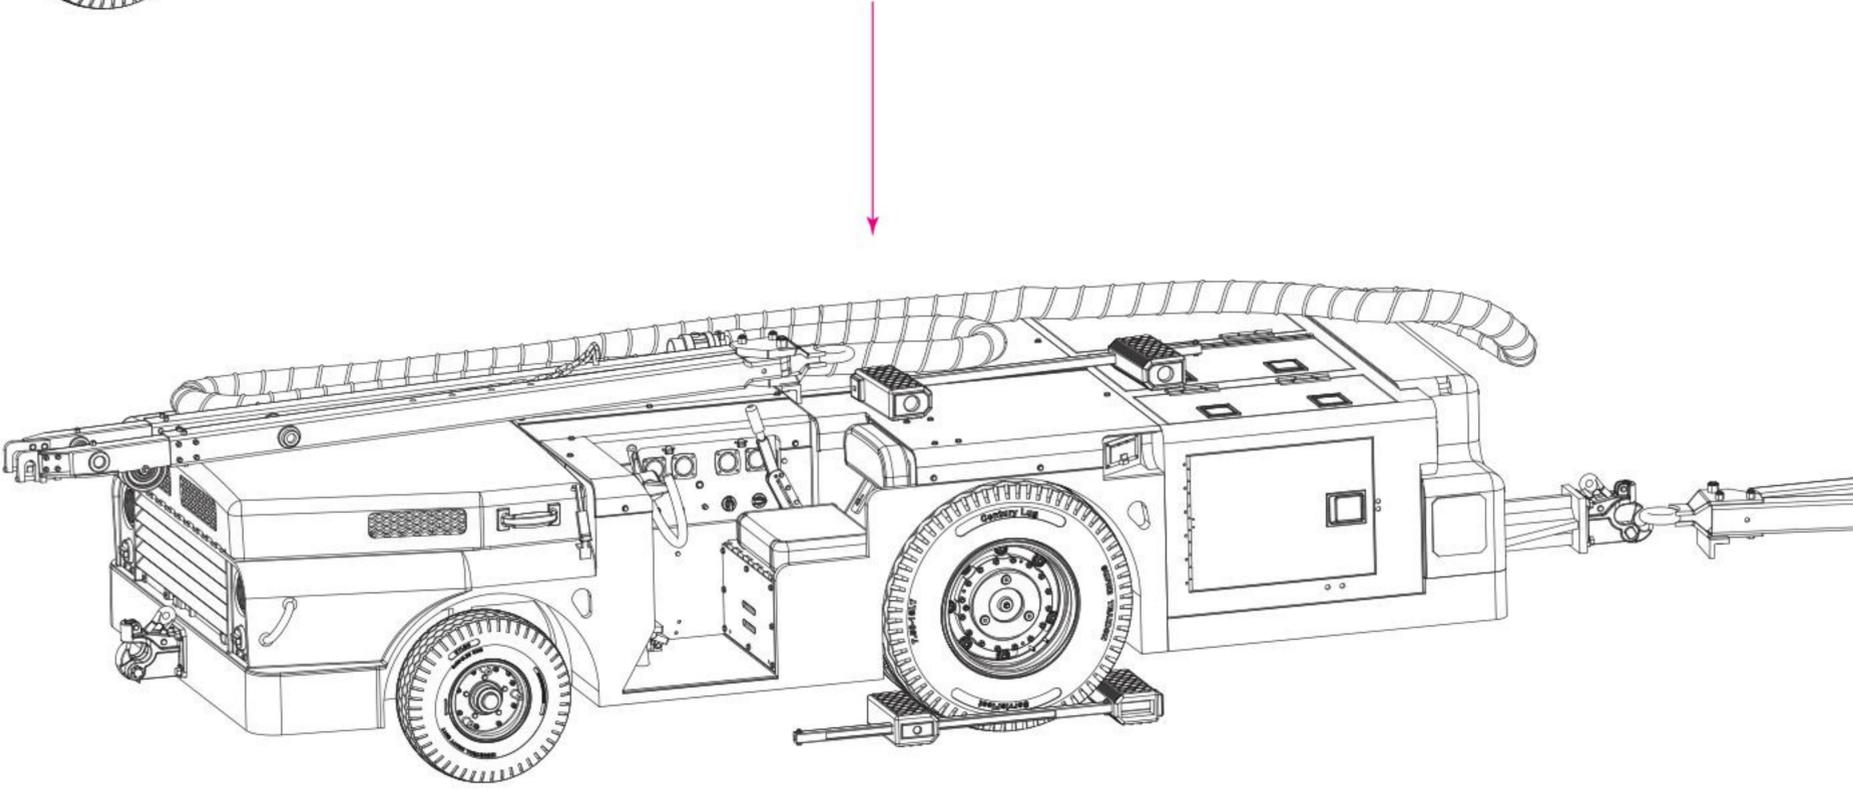


DECAL INSTRUCTION

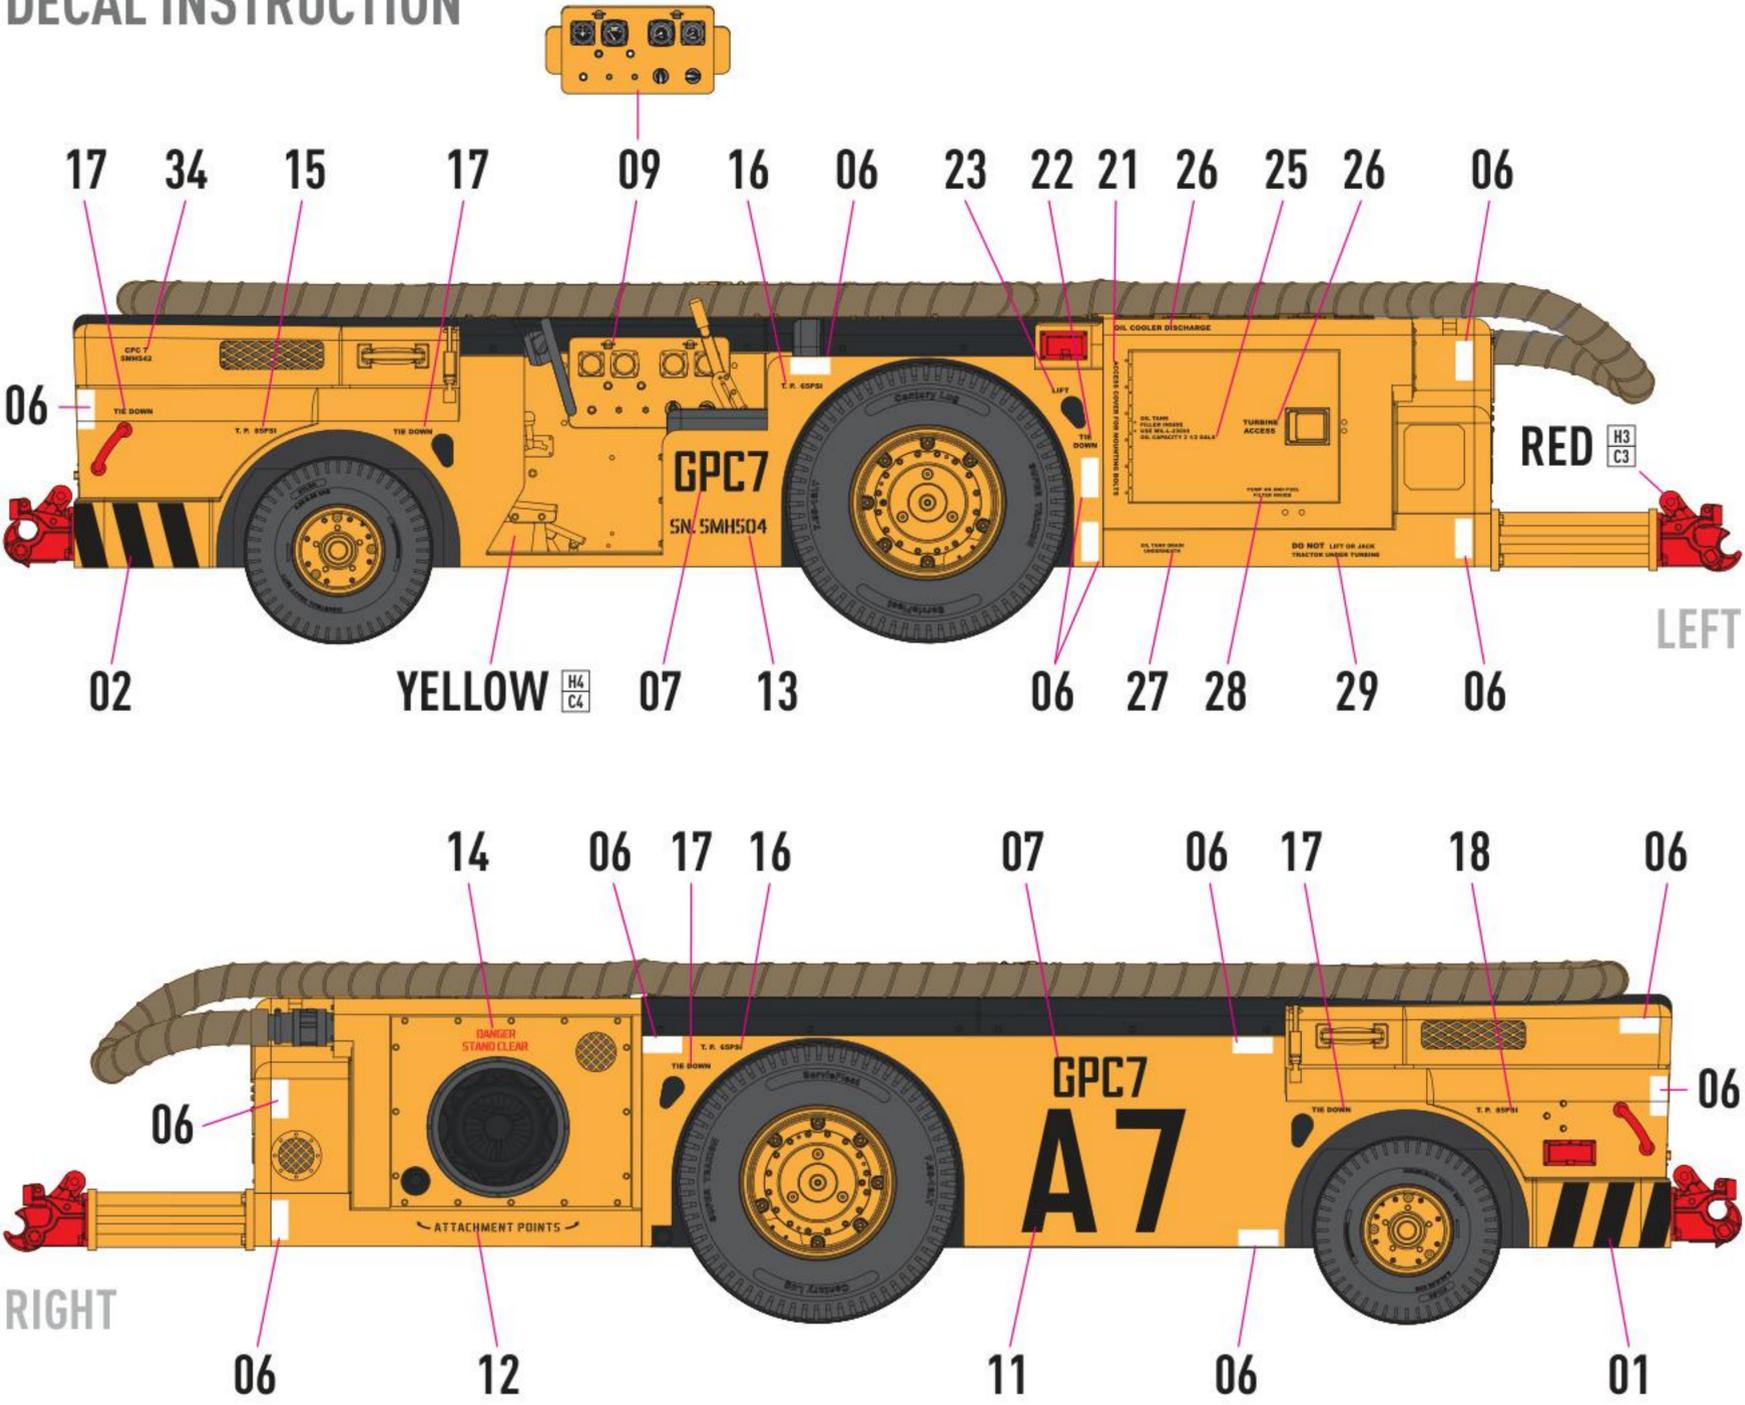

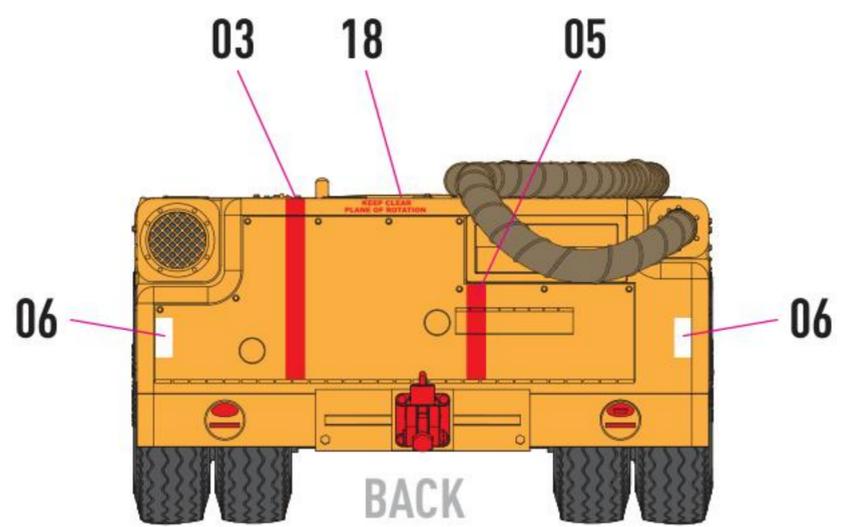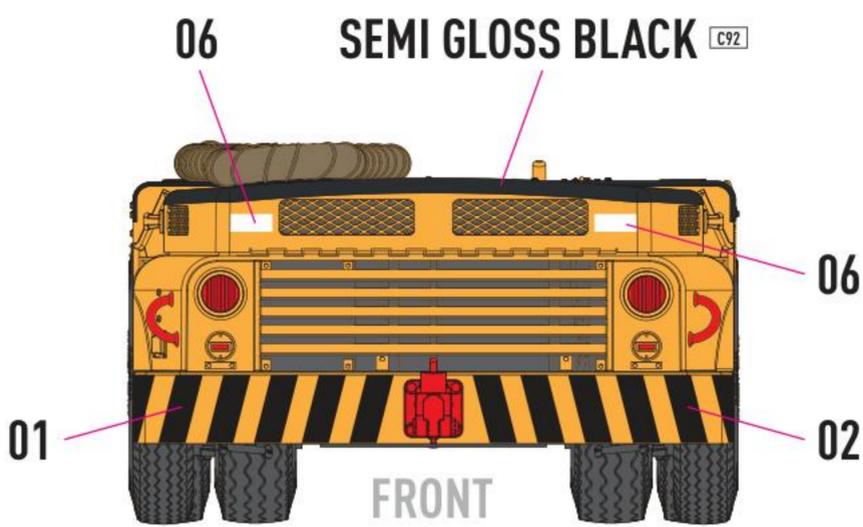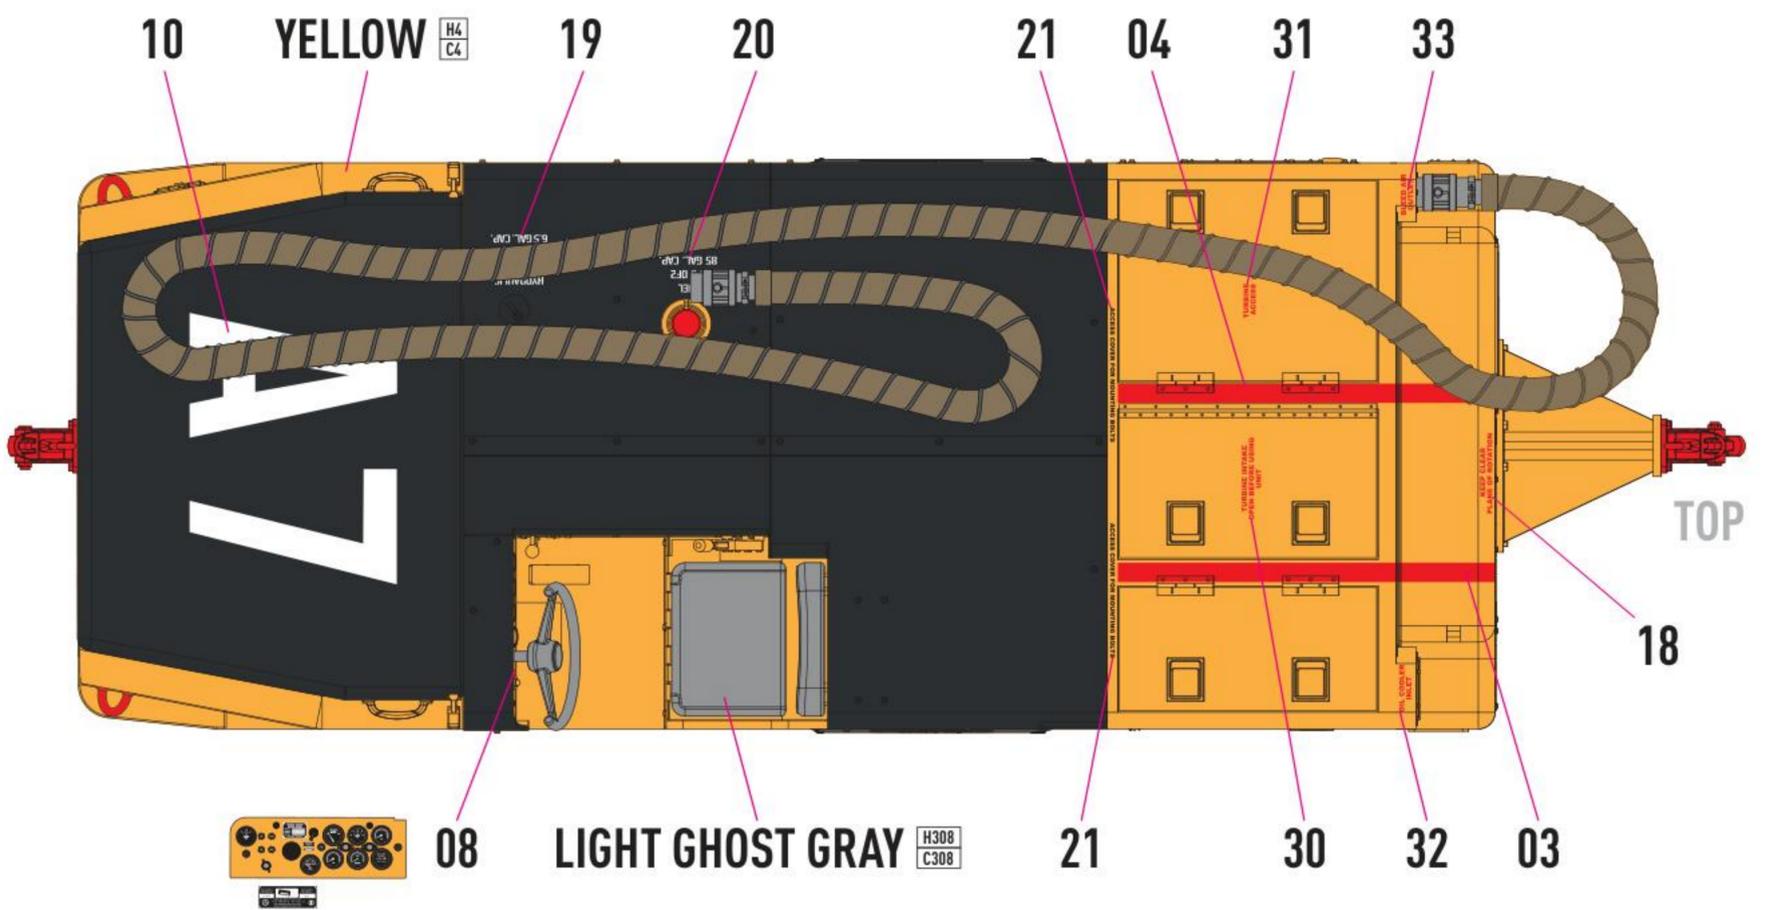

ALBAR UNIVERSAL AIRCRAFT TOWBAR

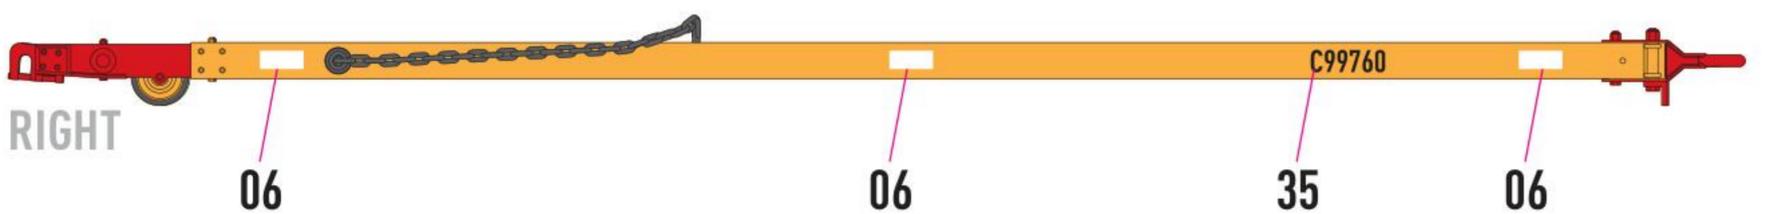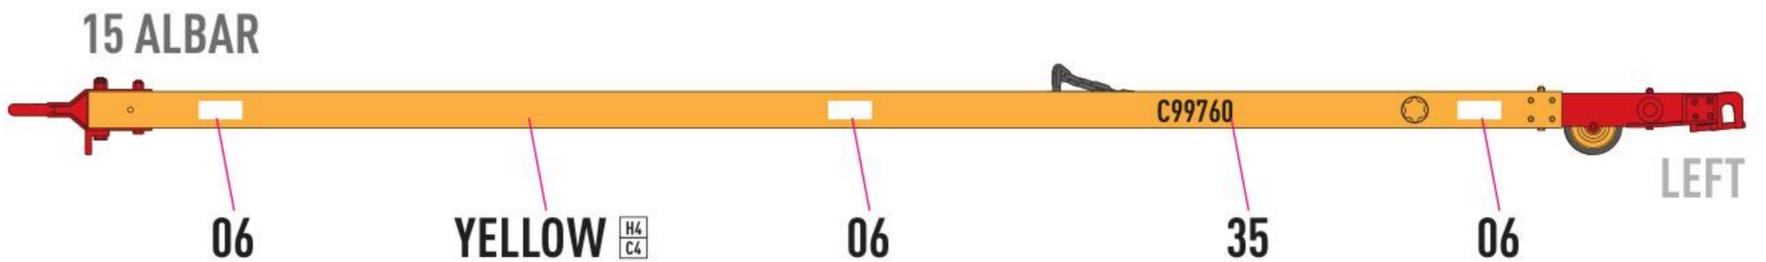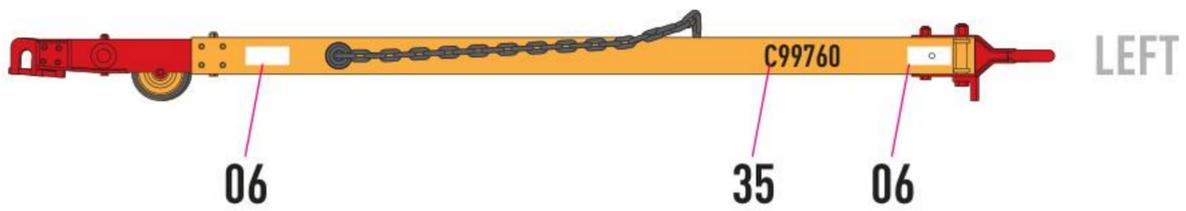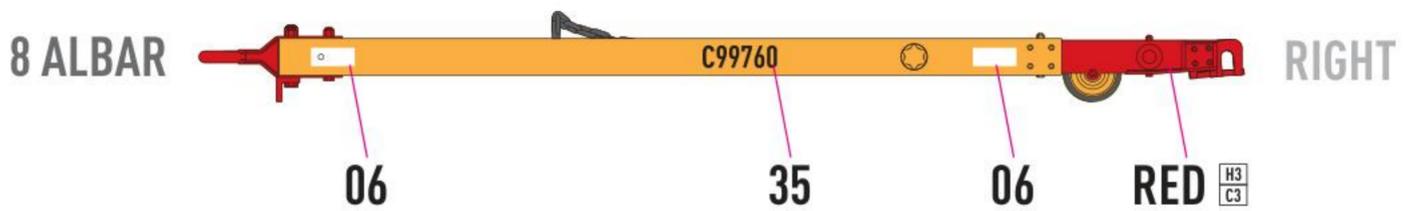

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
YELLOW	H4	C4
LIGHT GHOST GRAY	H308	C308

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
RED	H3	C3