


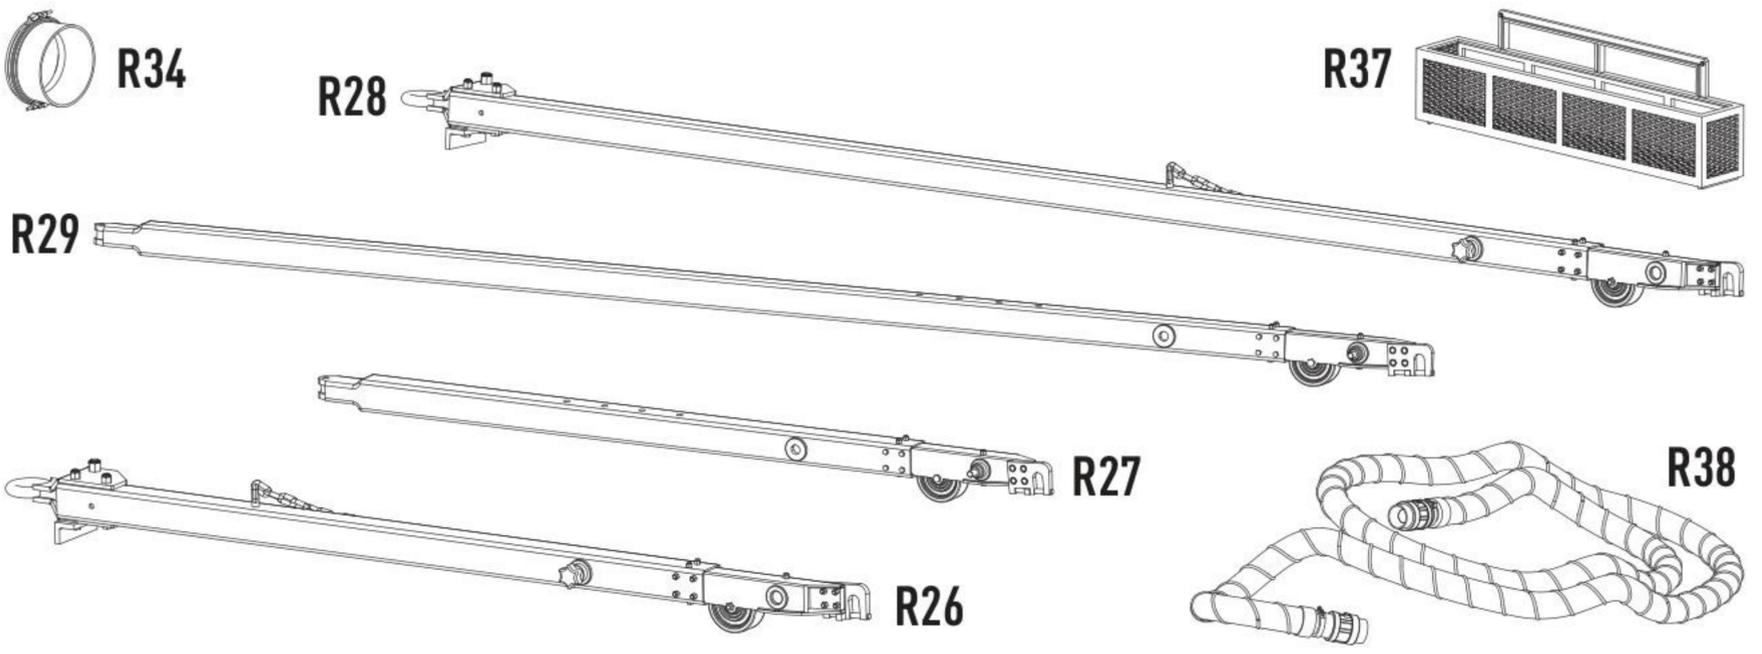
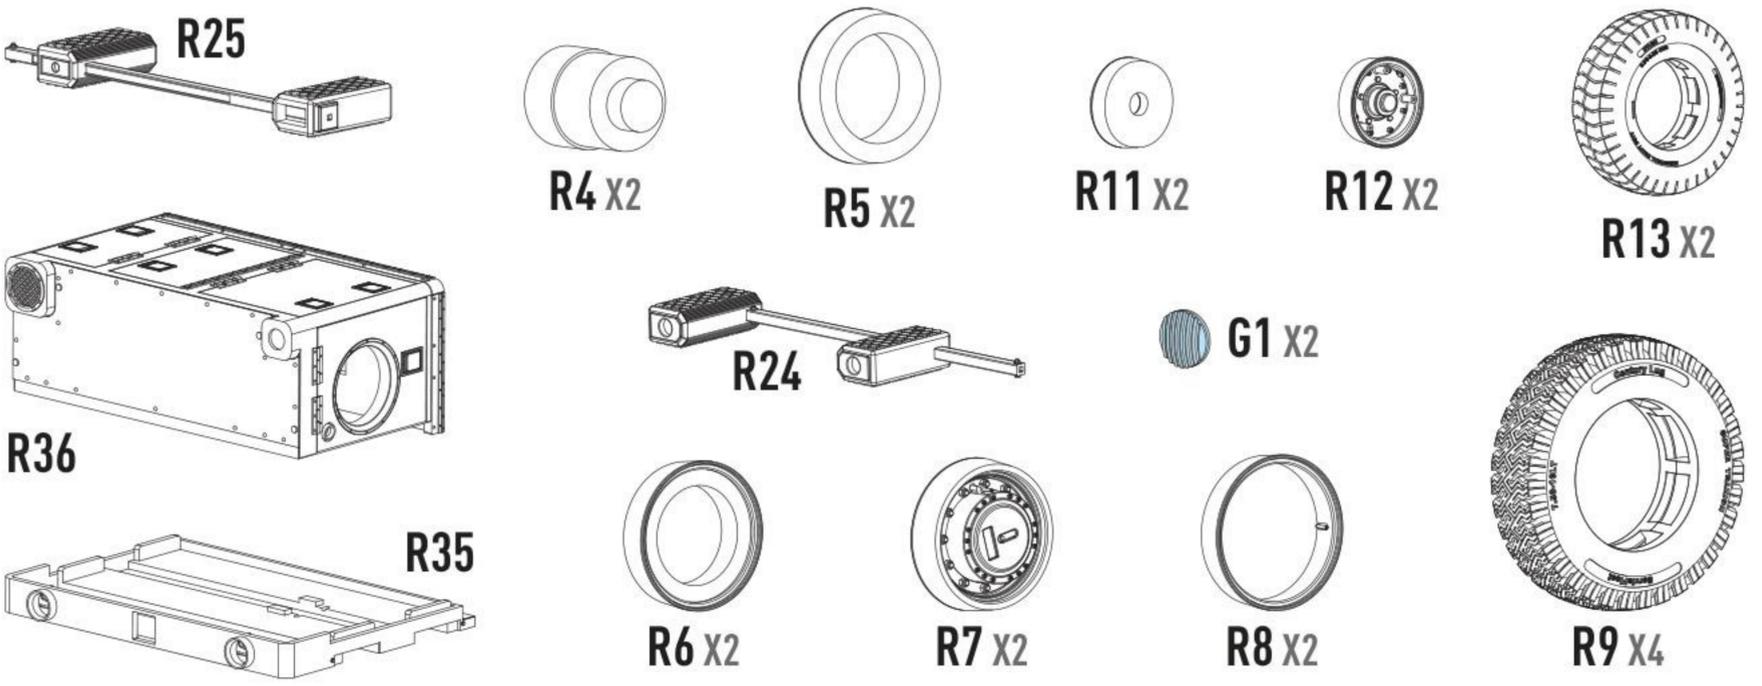
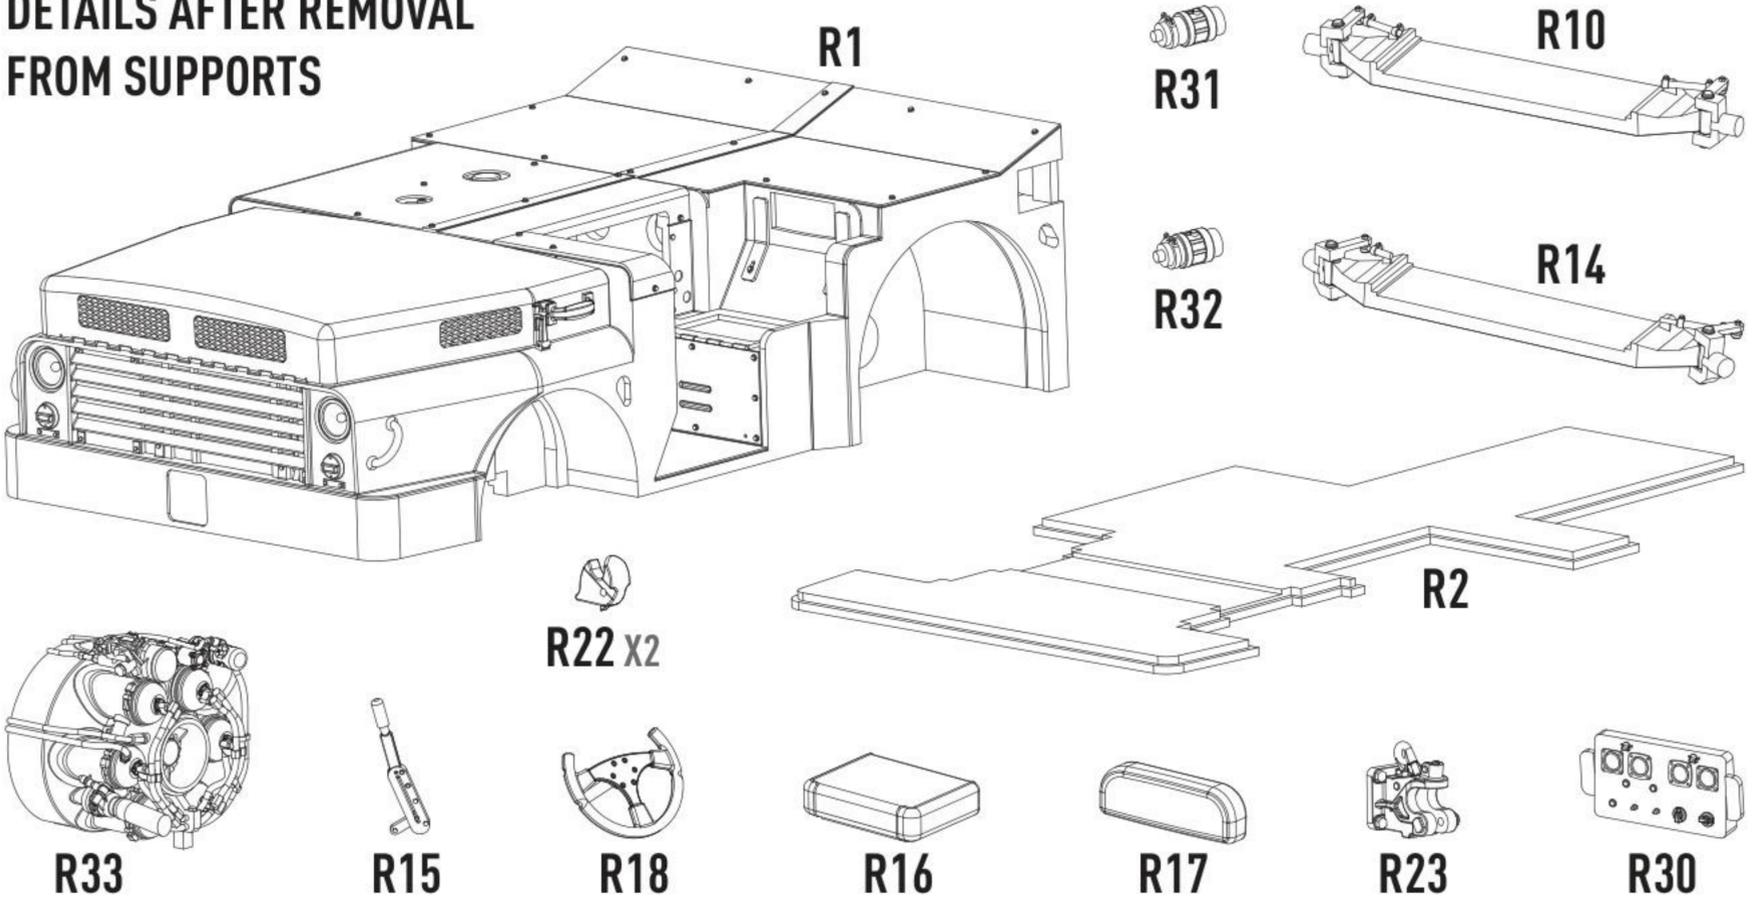


DETAILS AFTER REMOVAL
FROM SUPPORTS

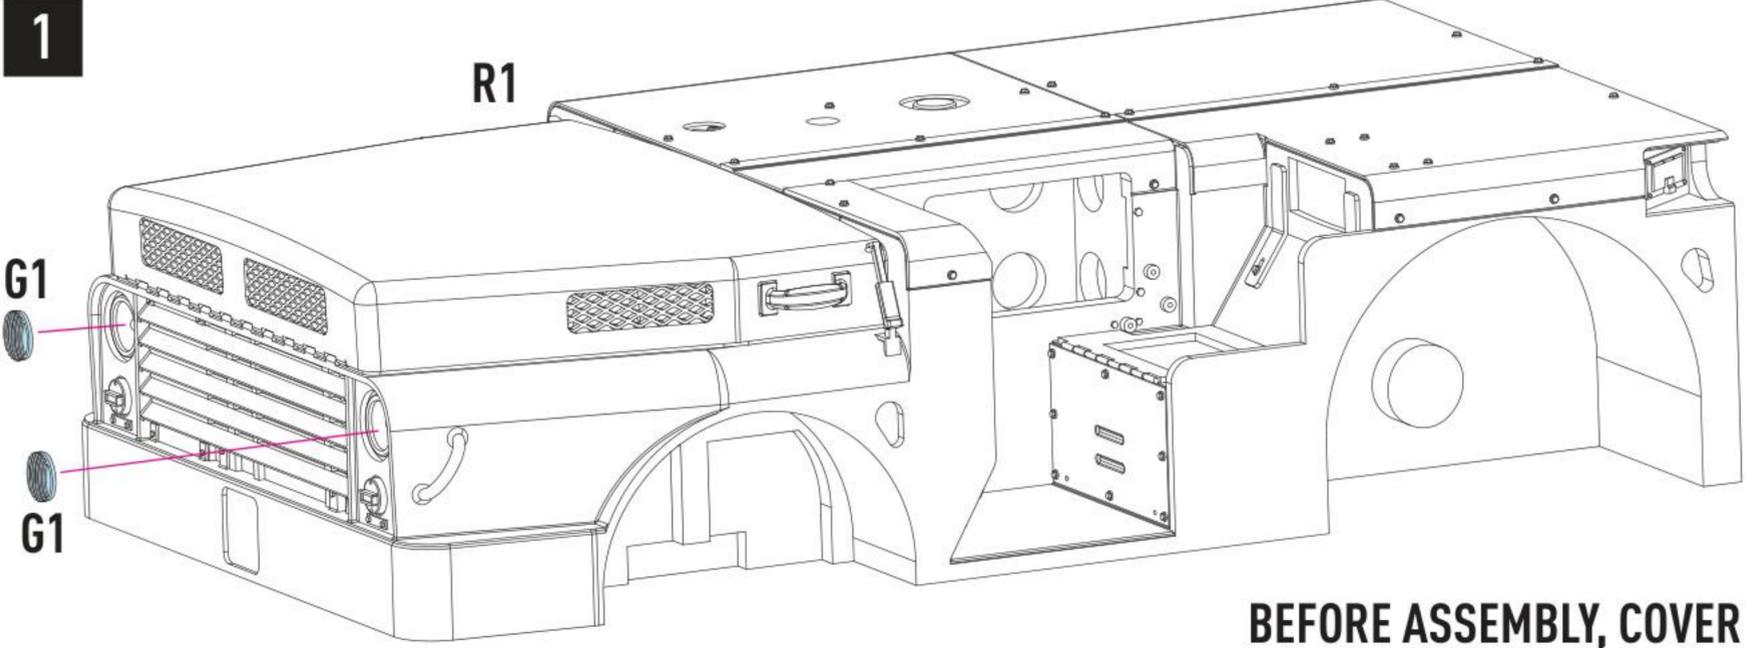


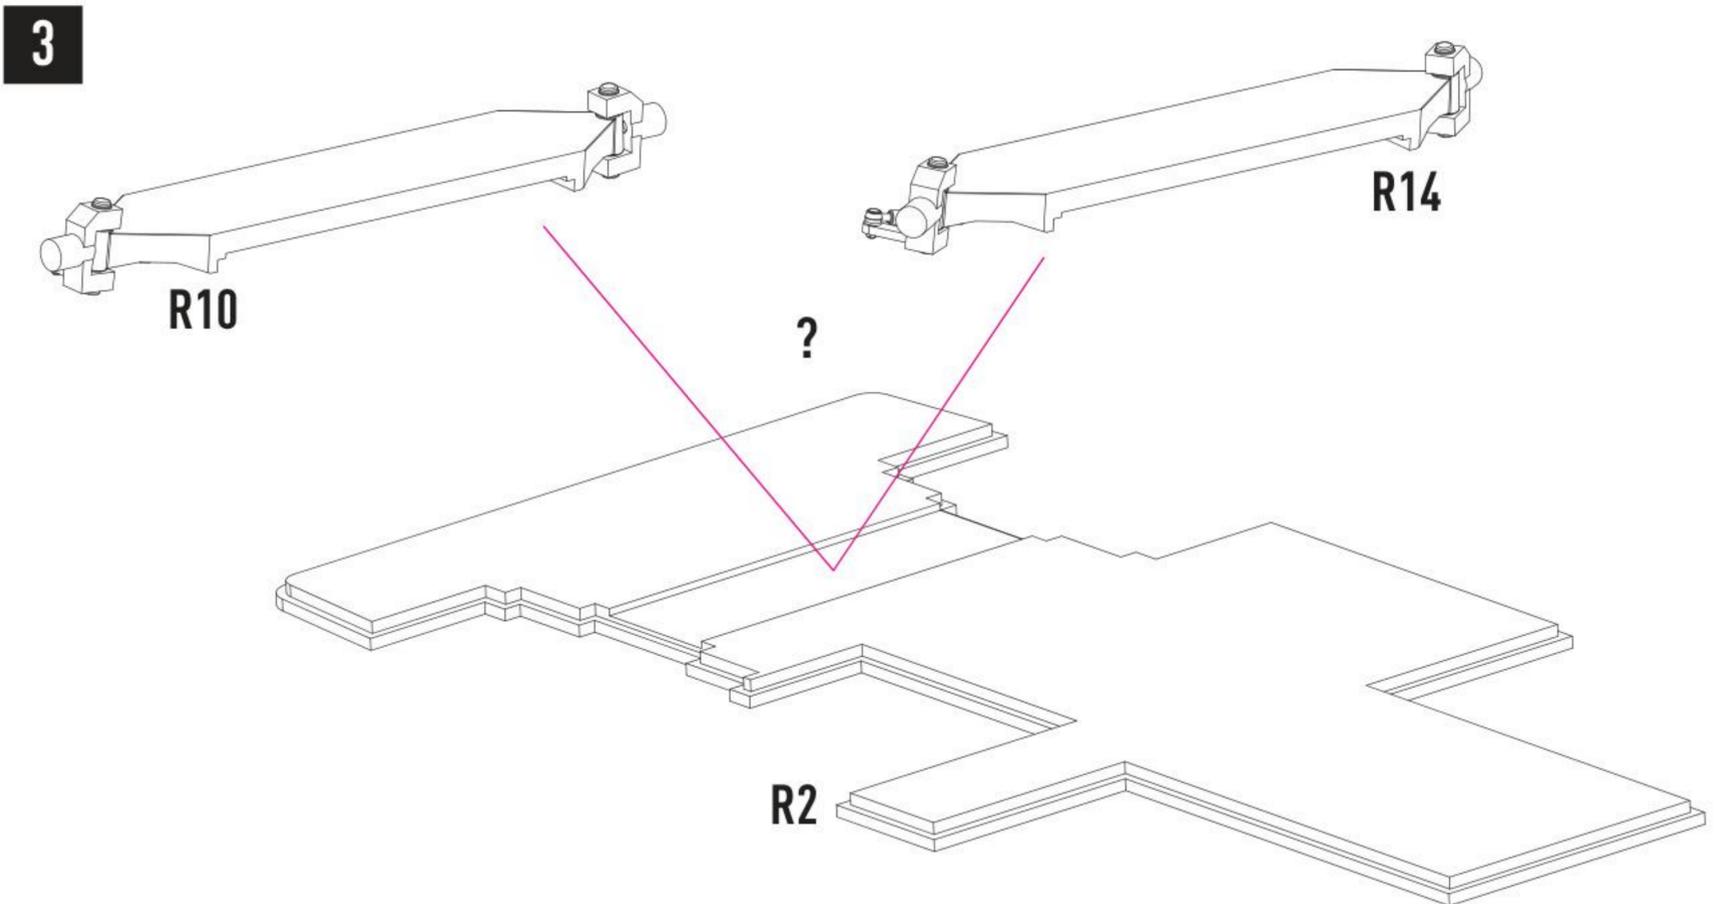


**BEFORE ASSEMBLY, COVER
TRANSPARENT PARTS WITH GLOSSY VARNISH**

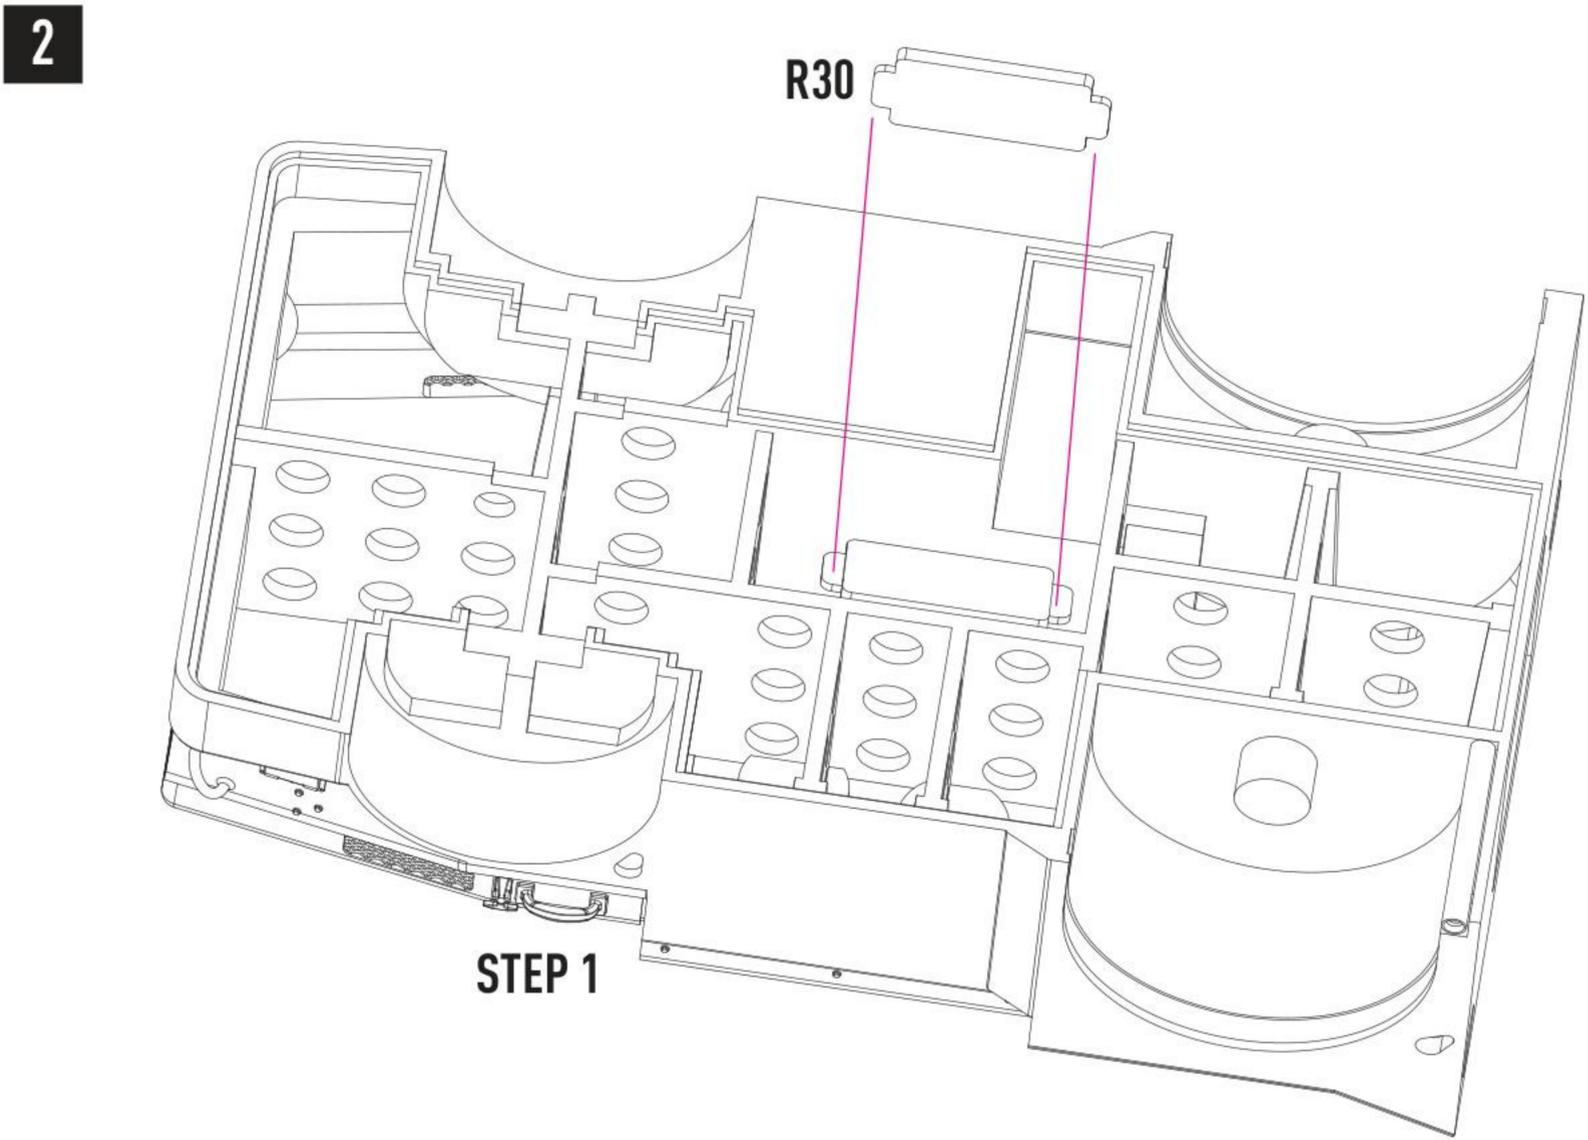


4

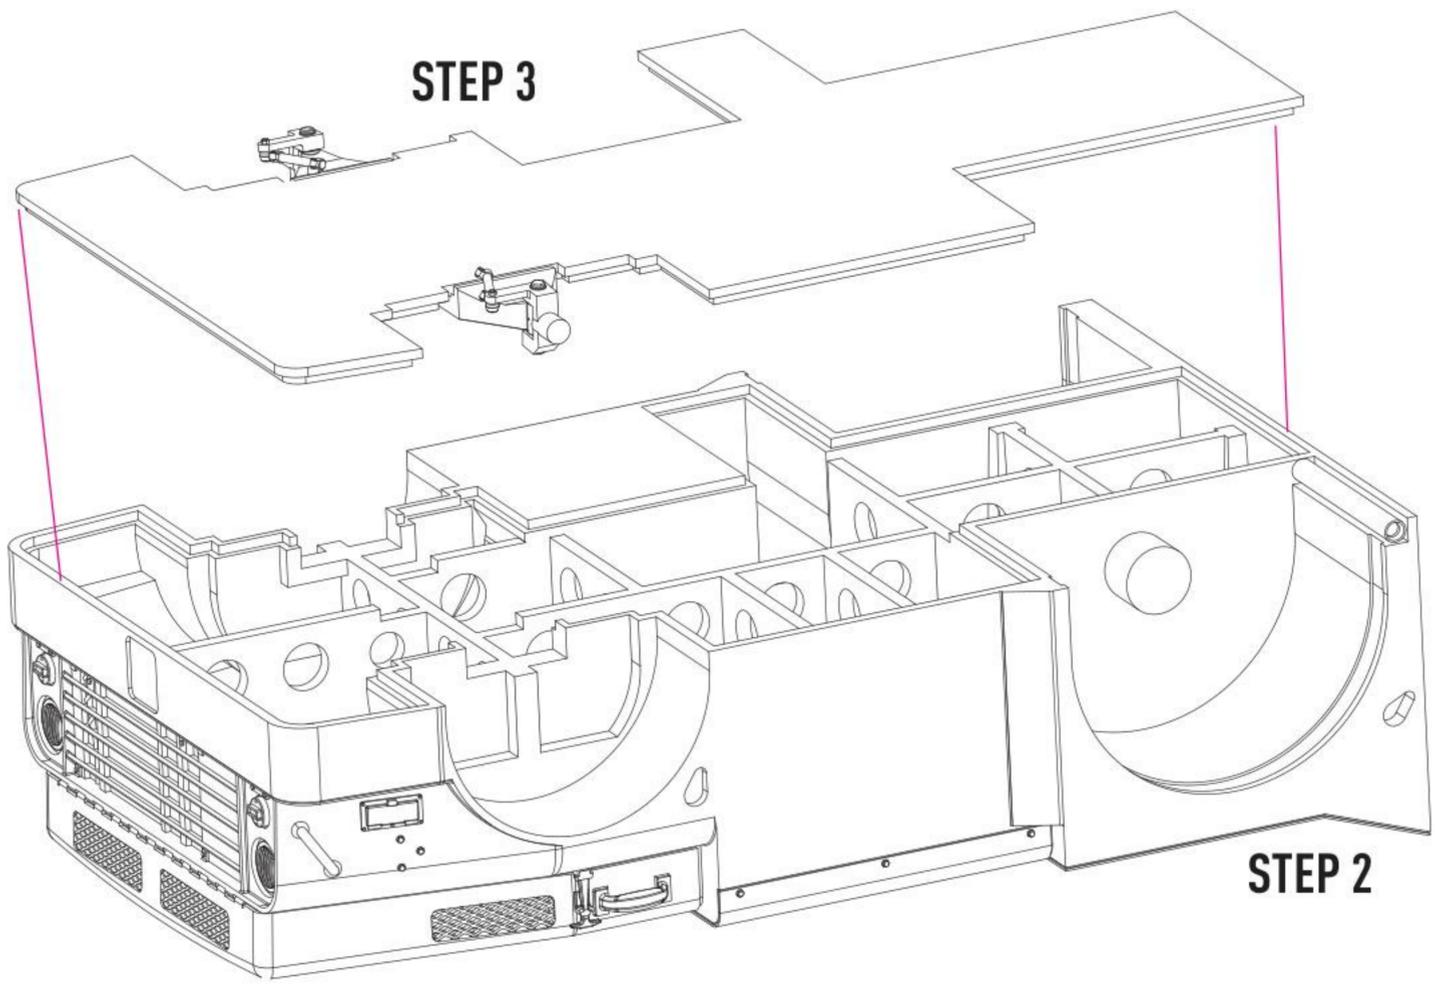


5

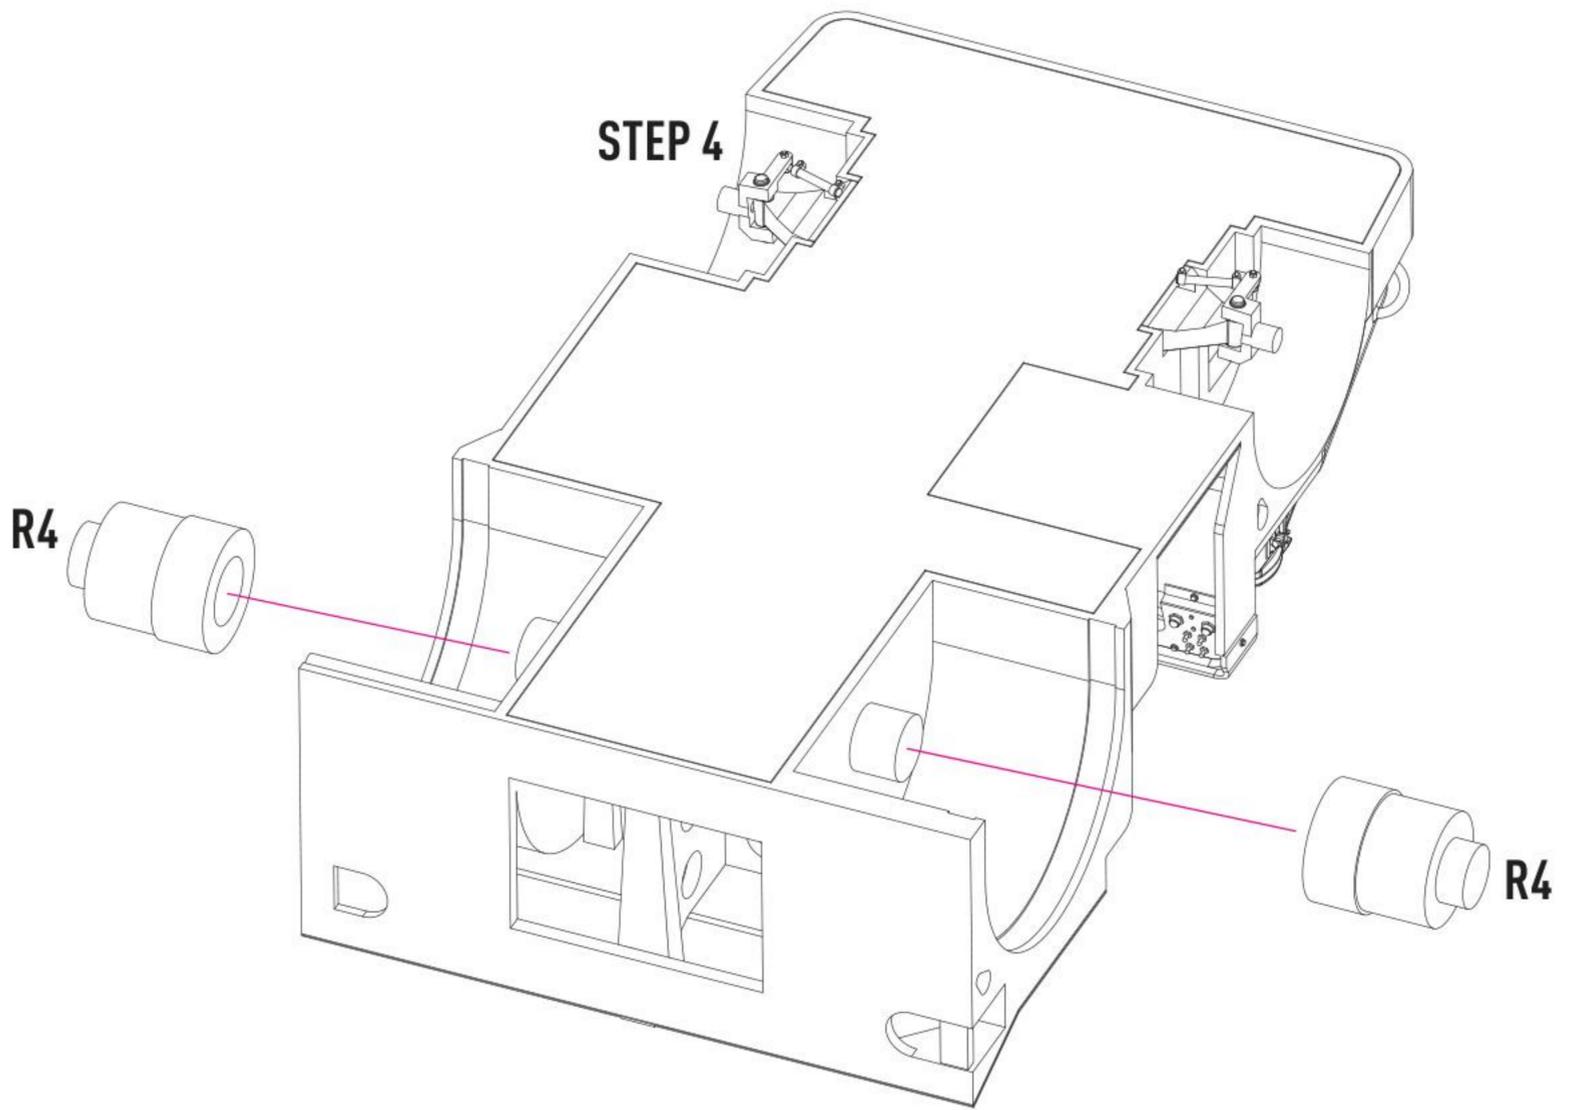


6 X2

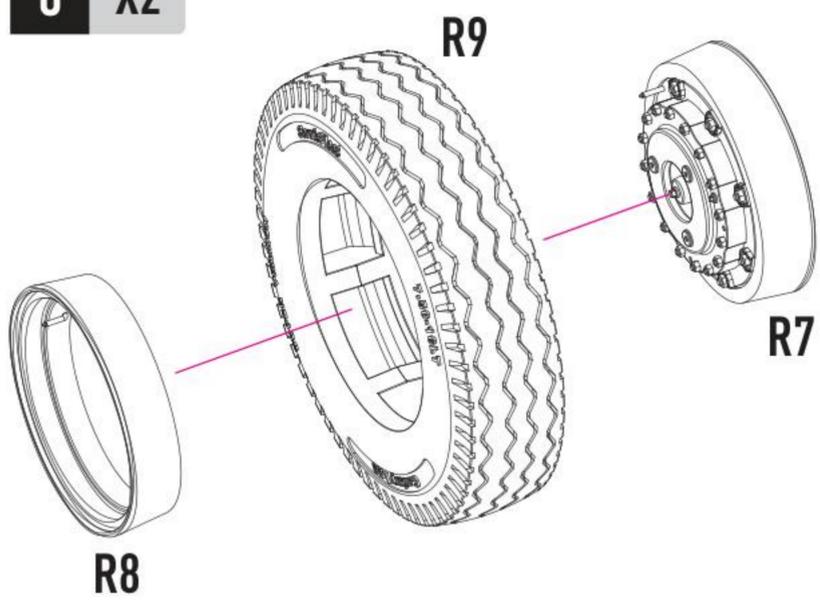


7 X2

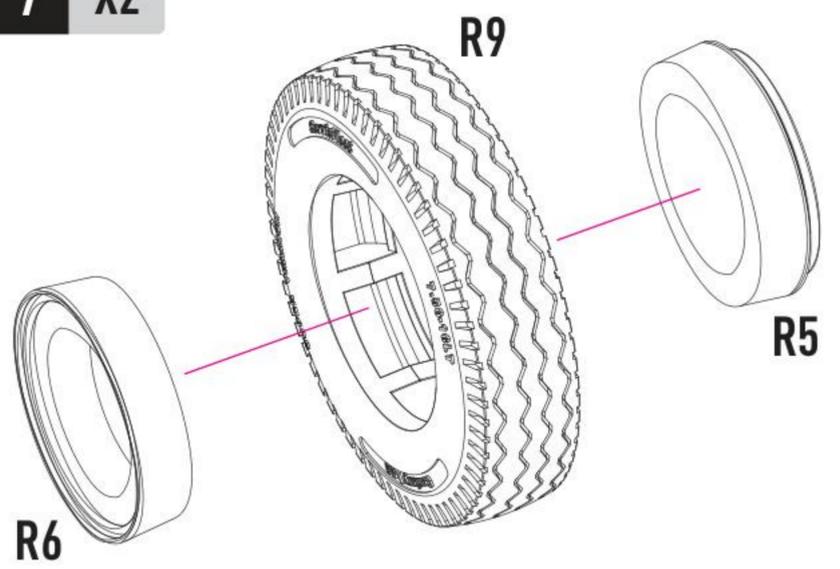


8 X2


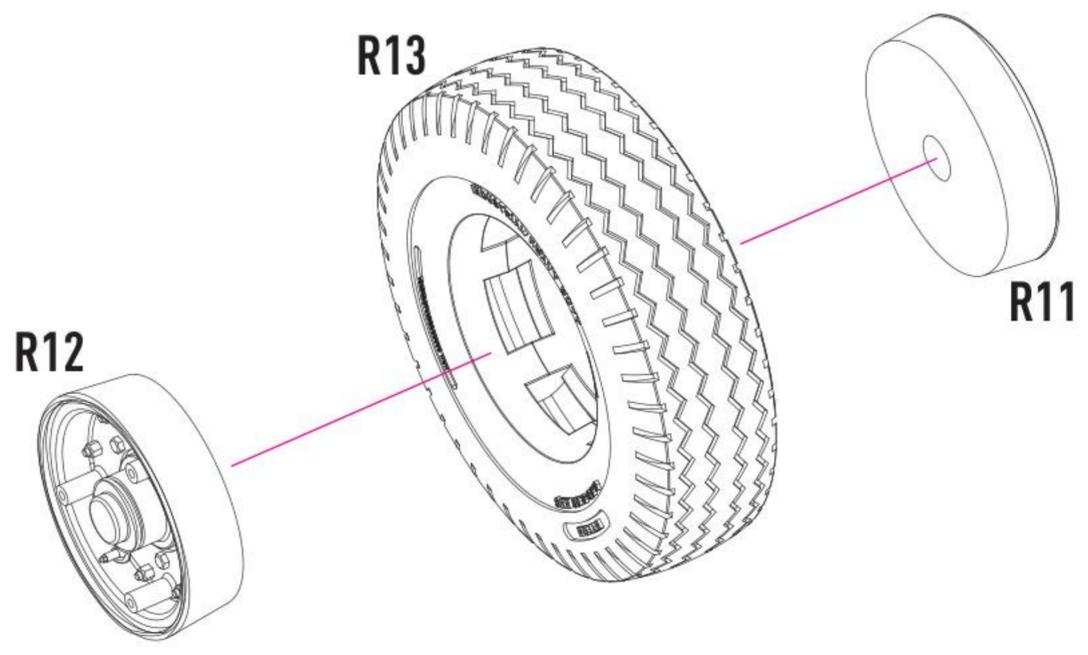


9

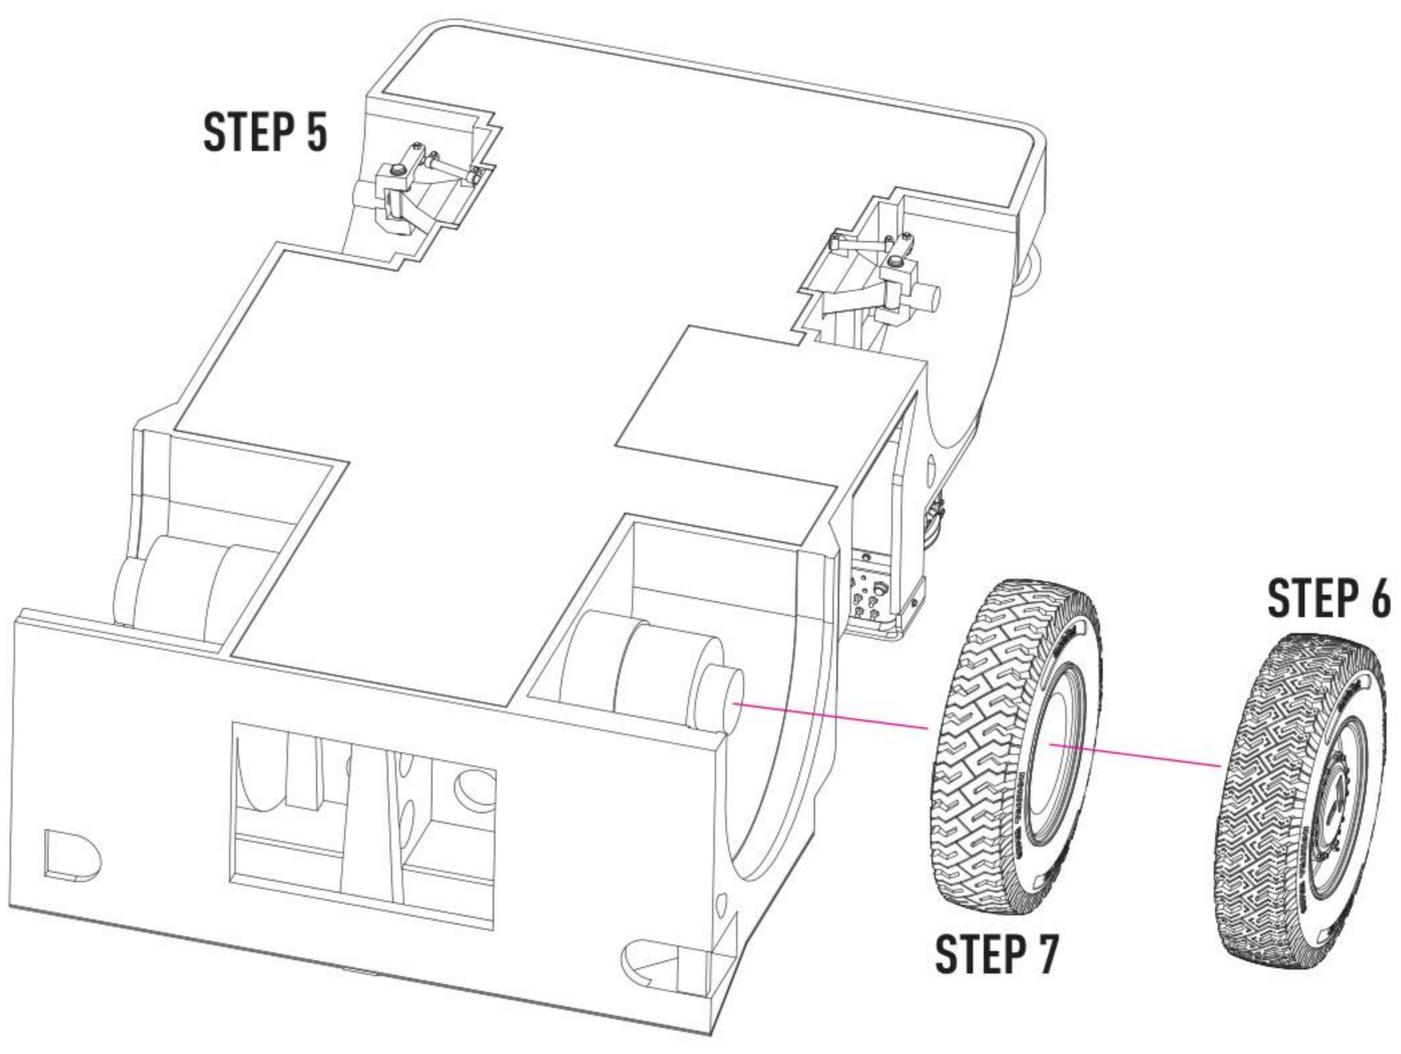


10

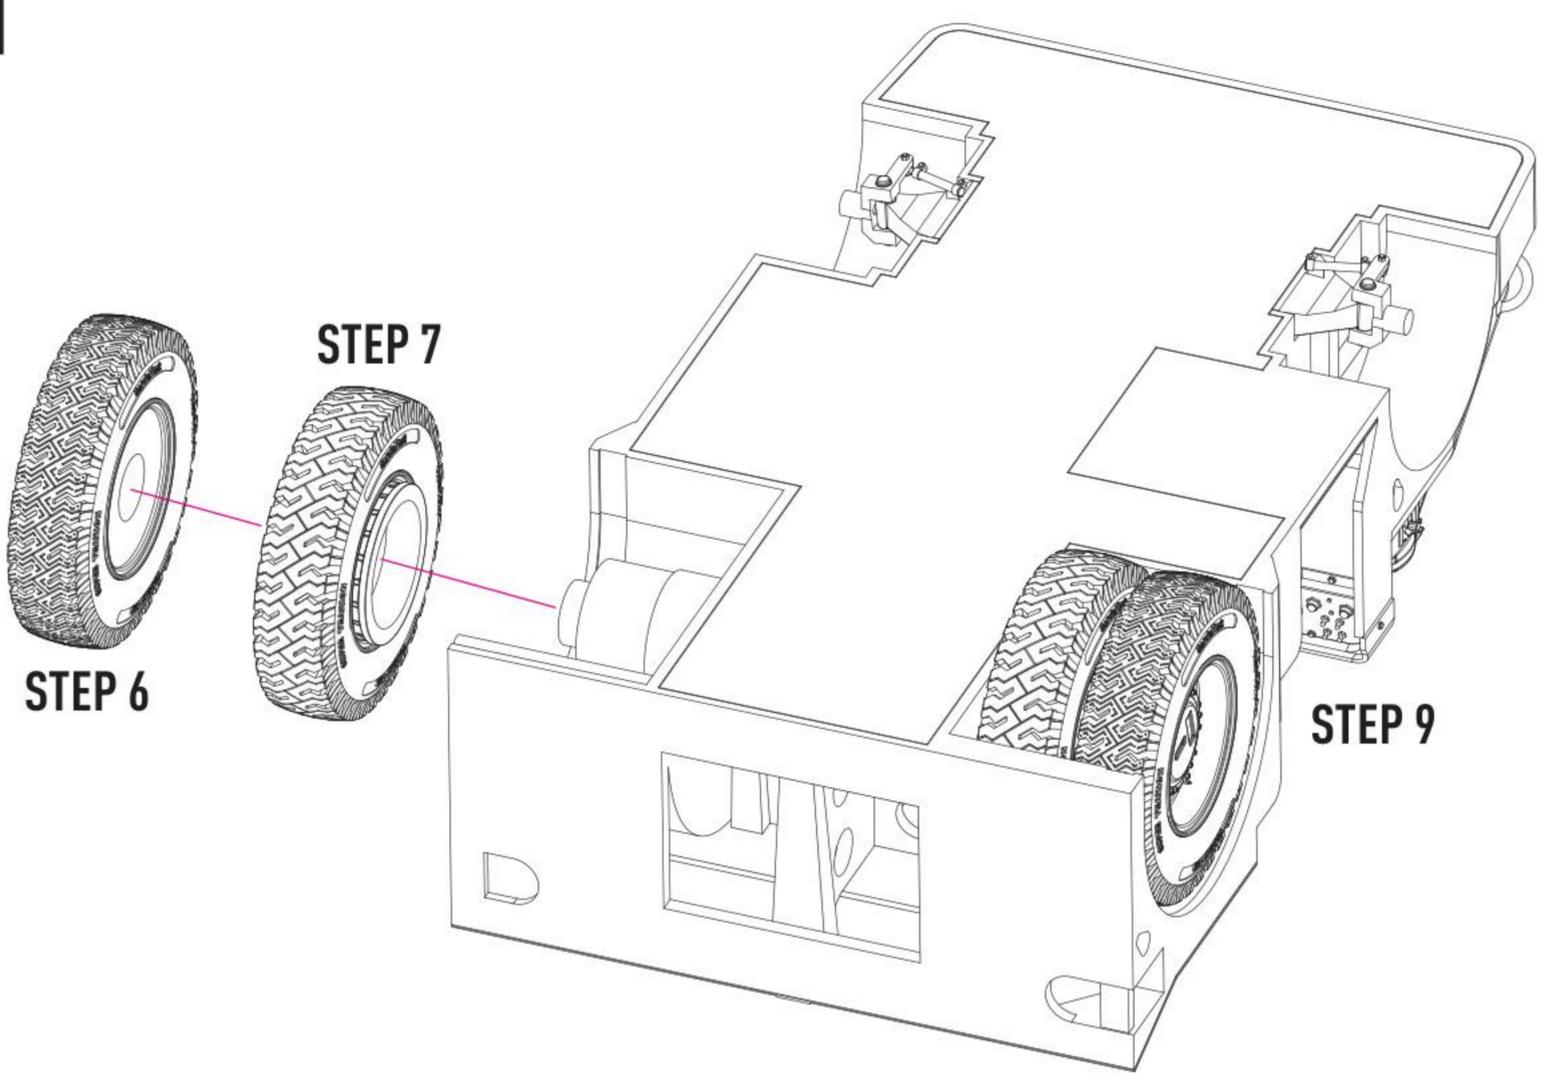


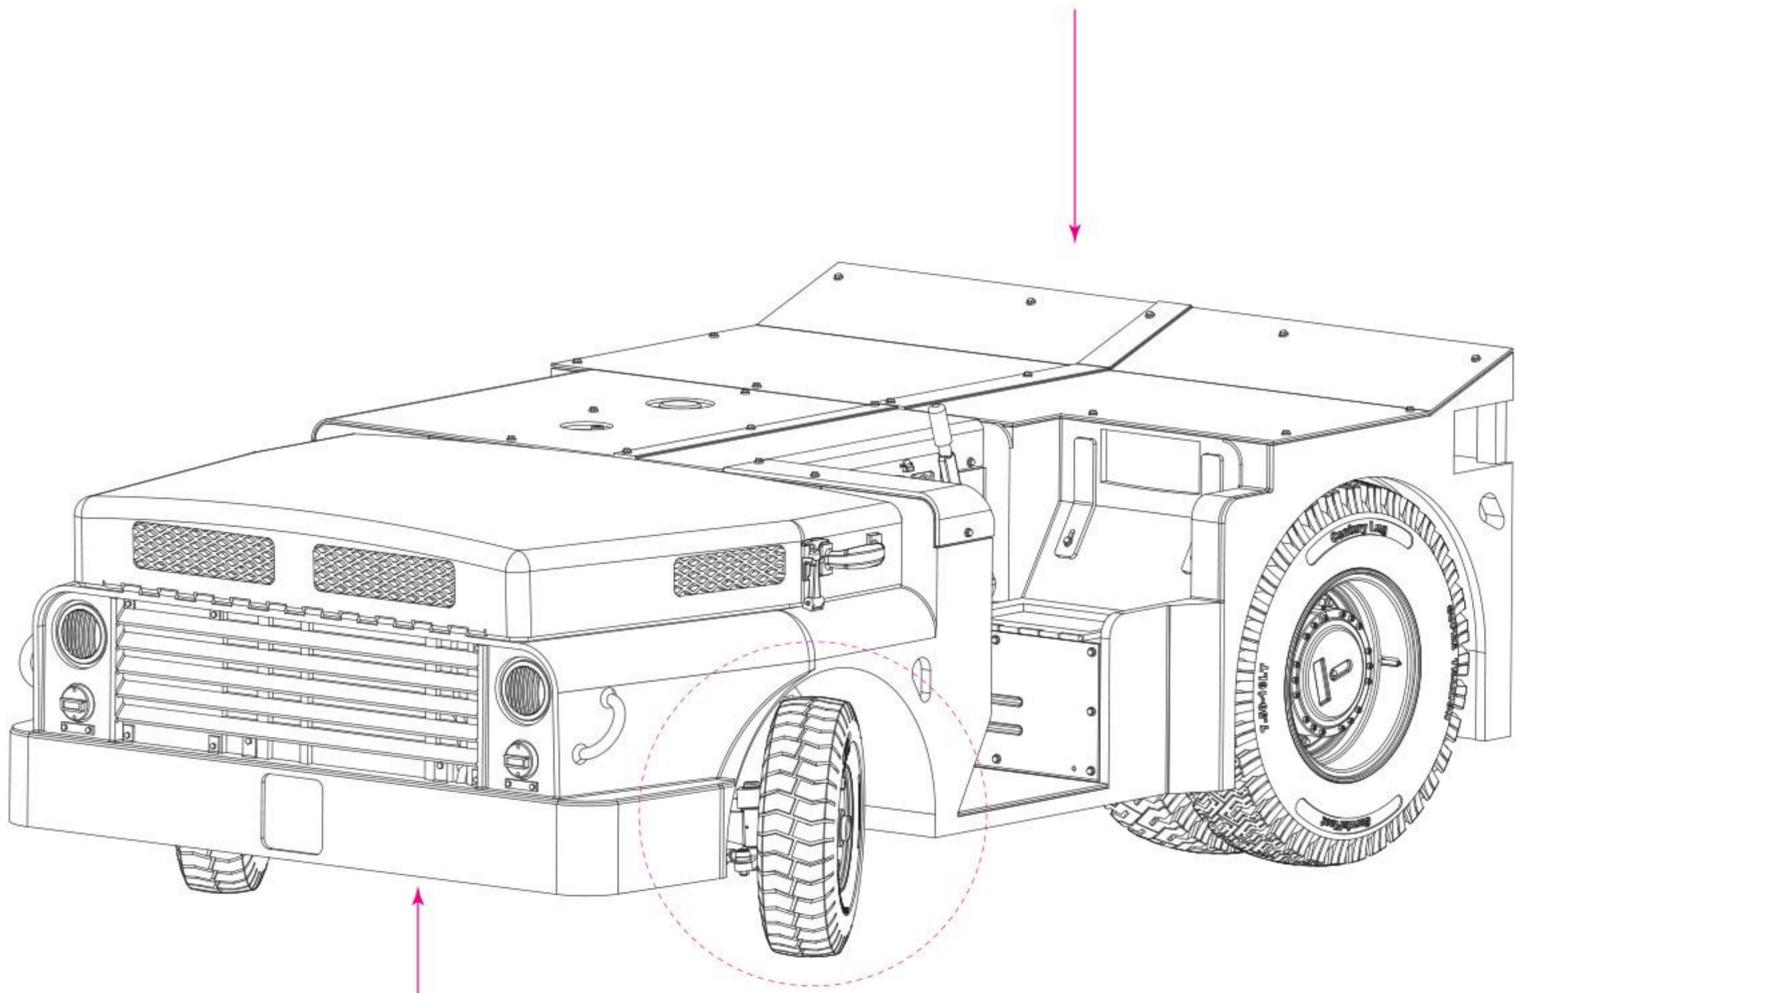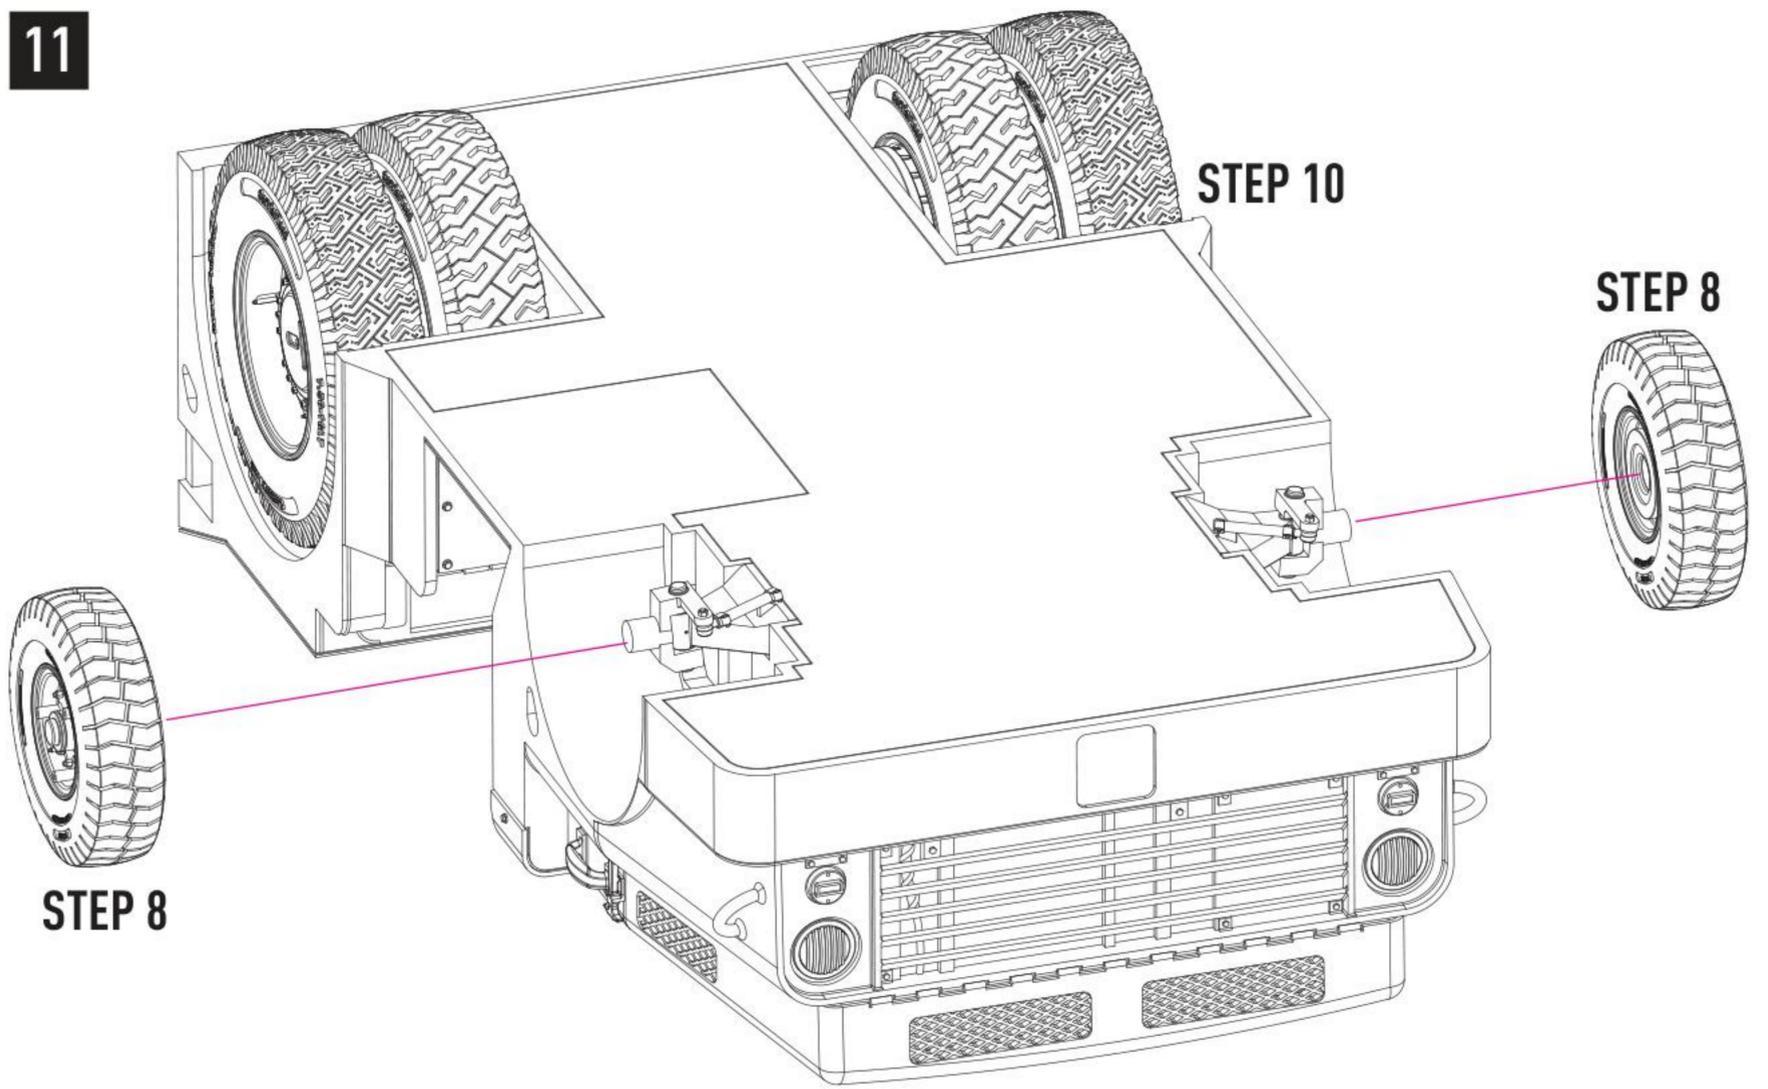


?

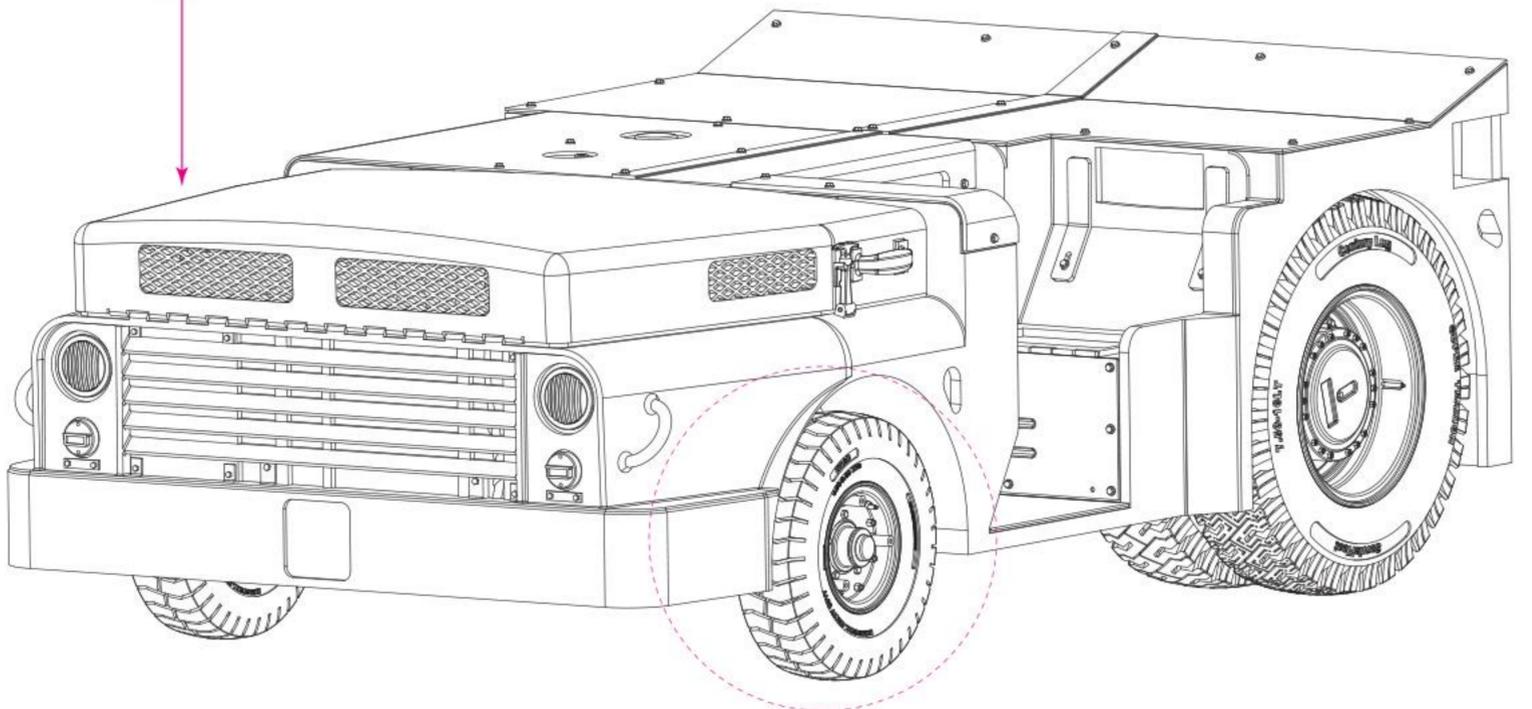


12

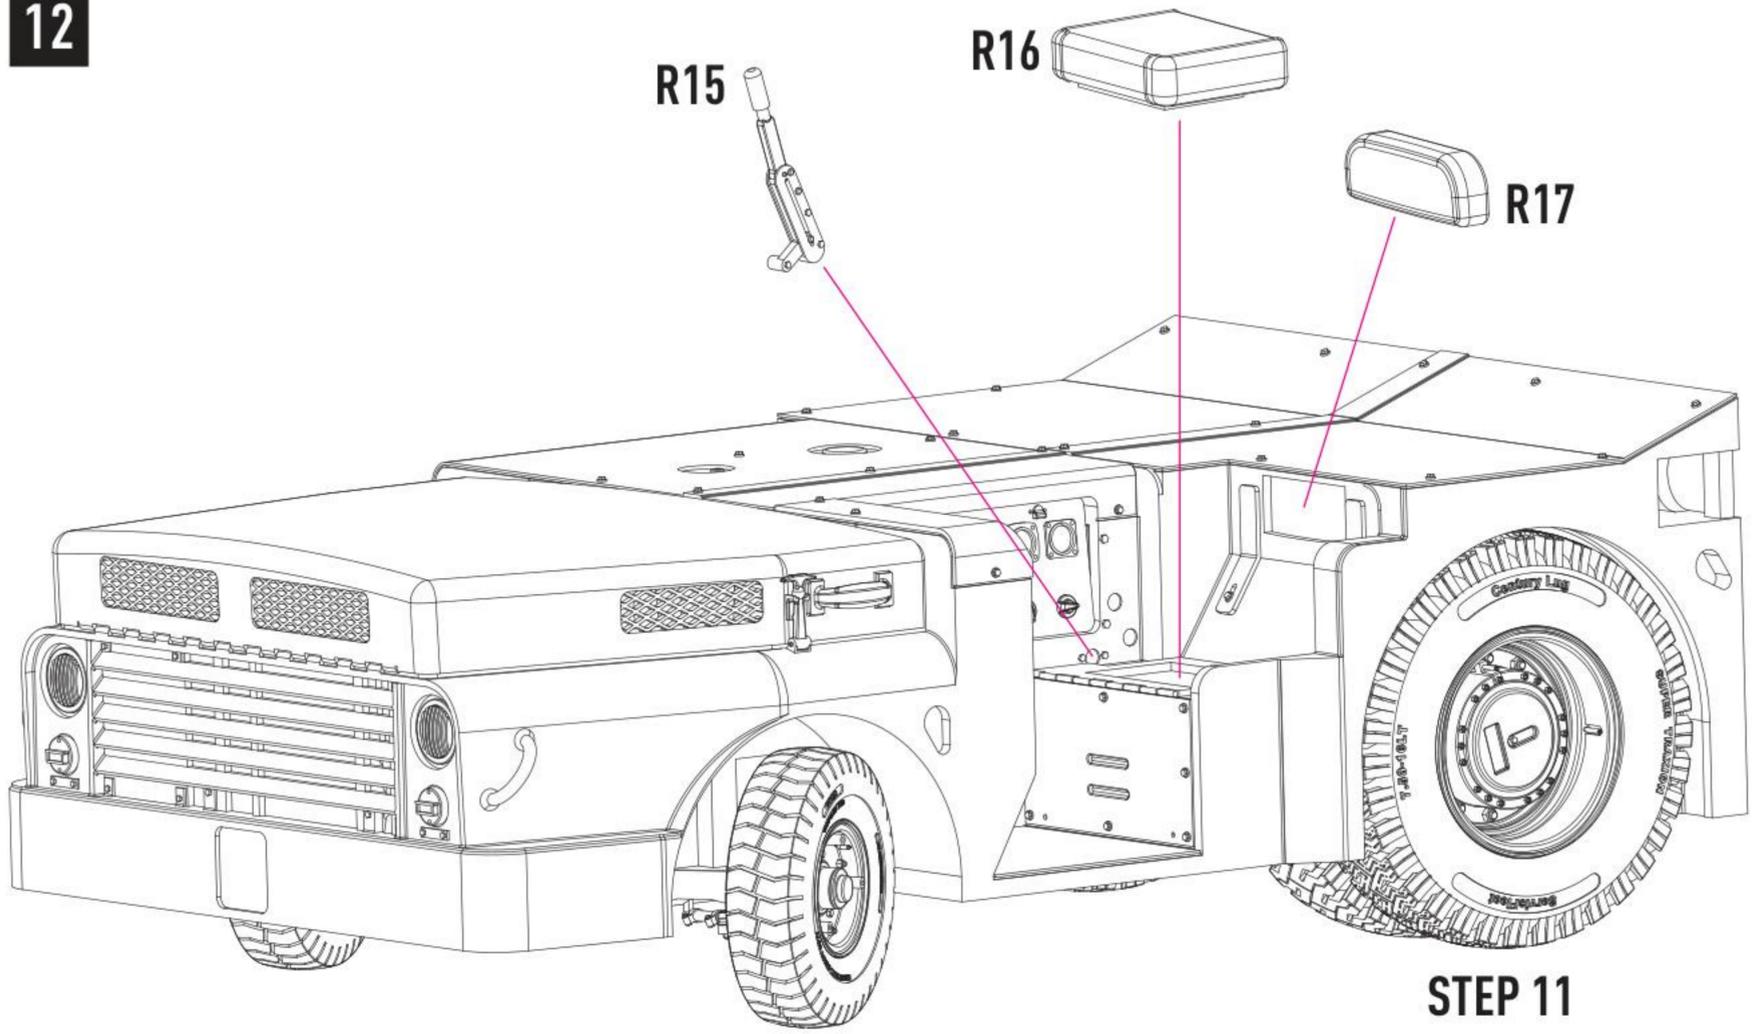


13

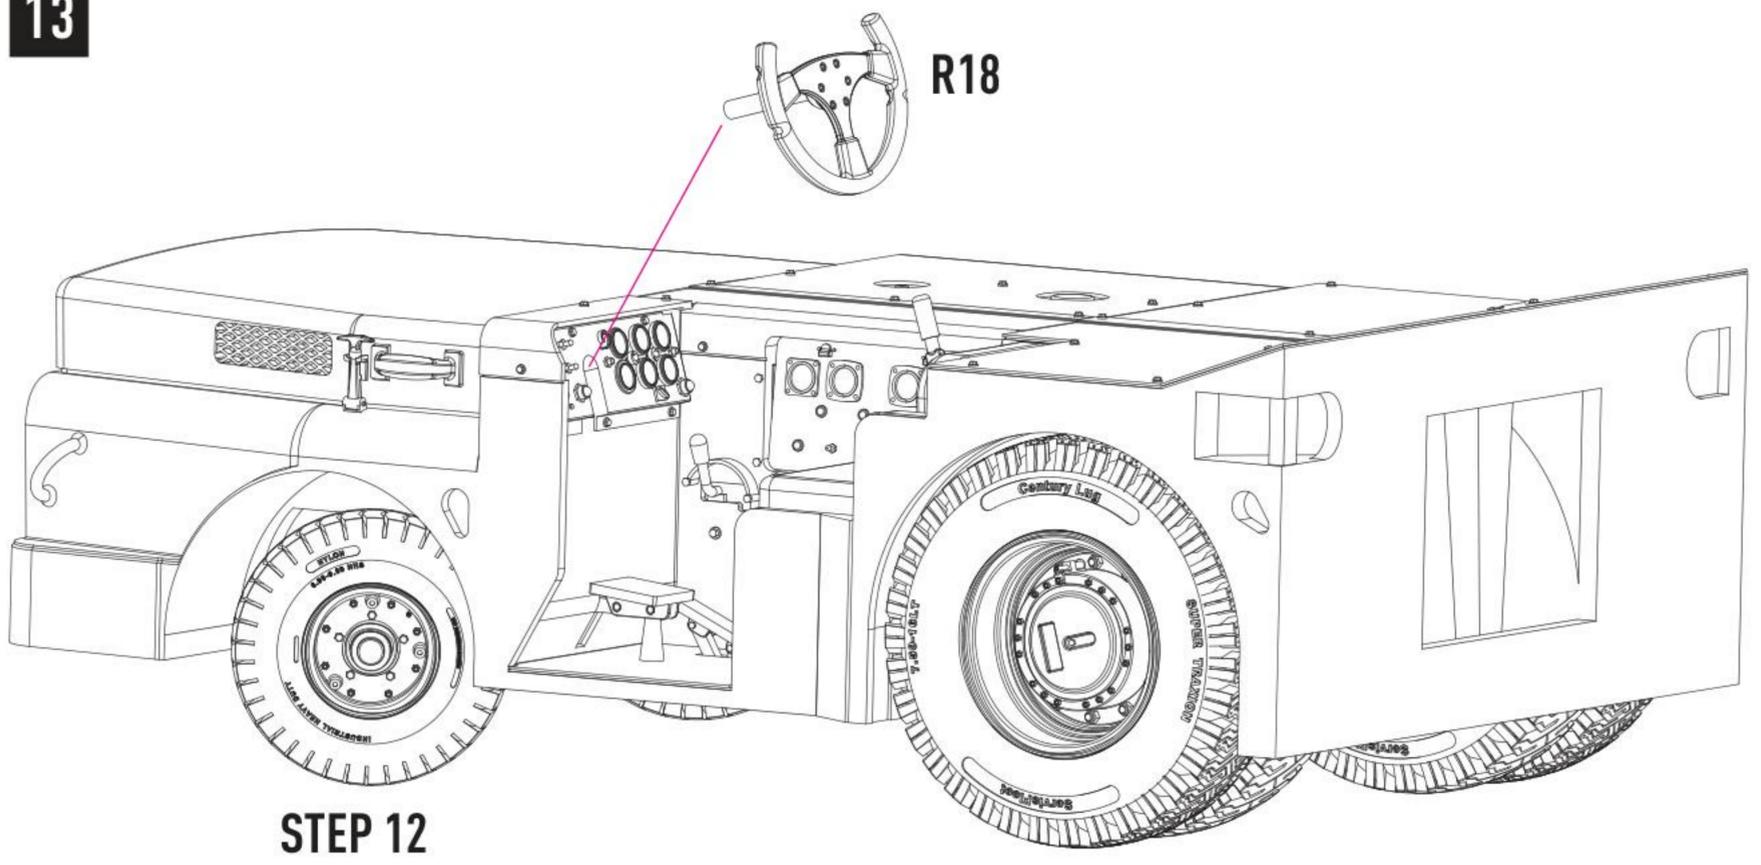


14

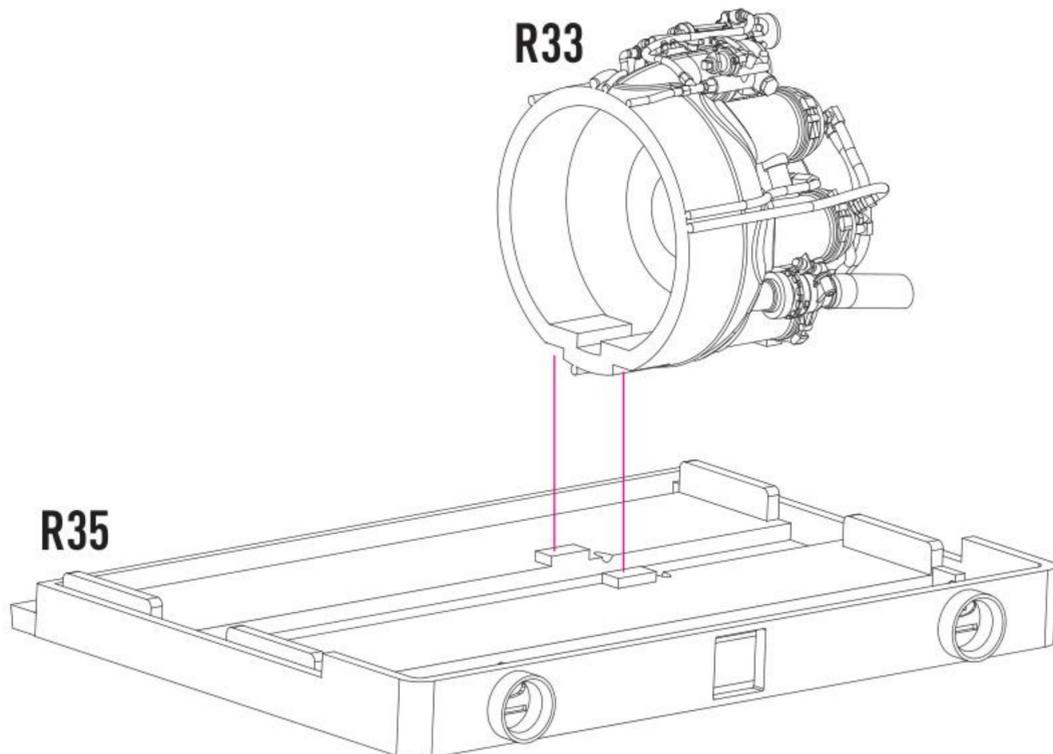


15

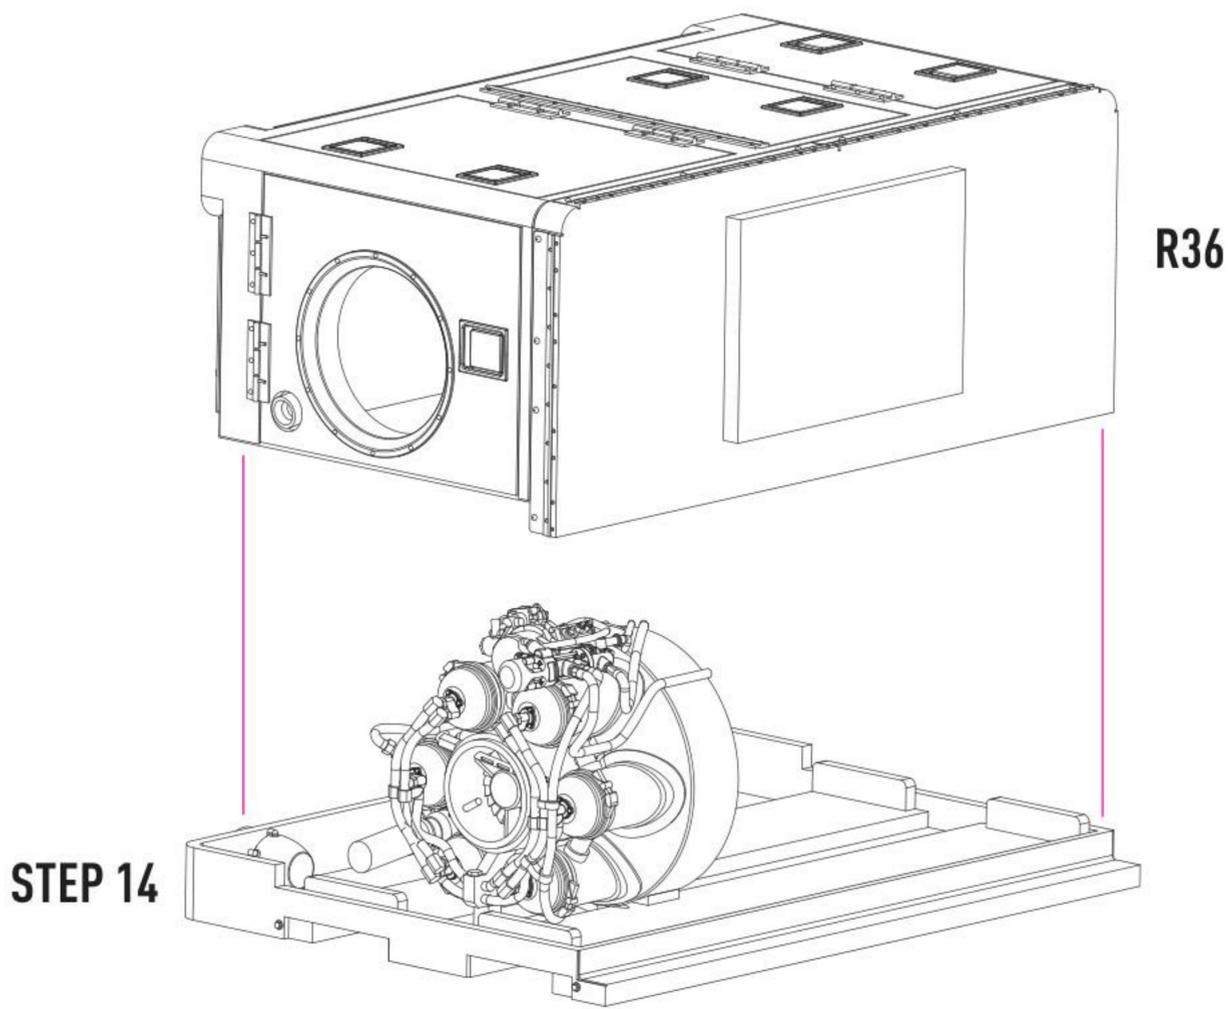


16

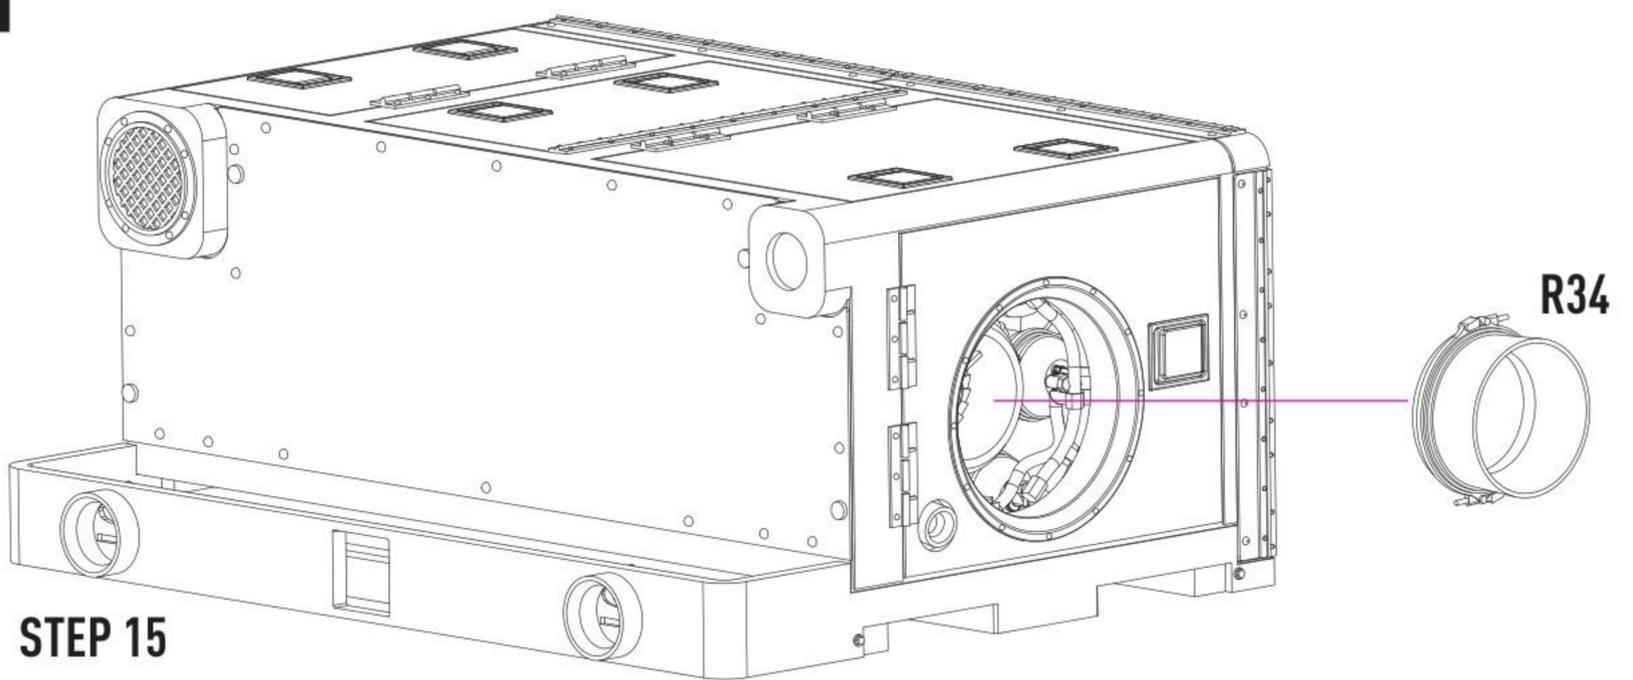


17

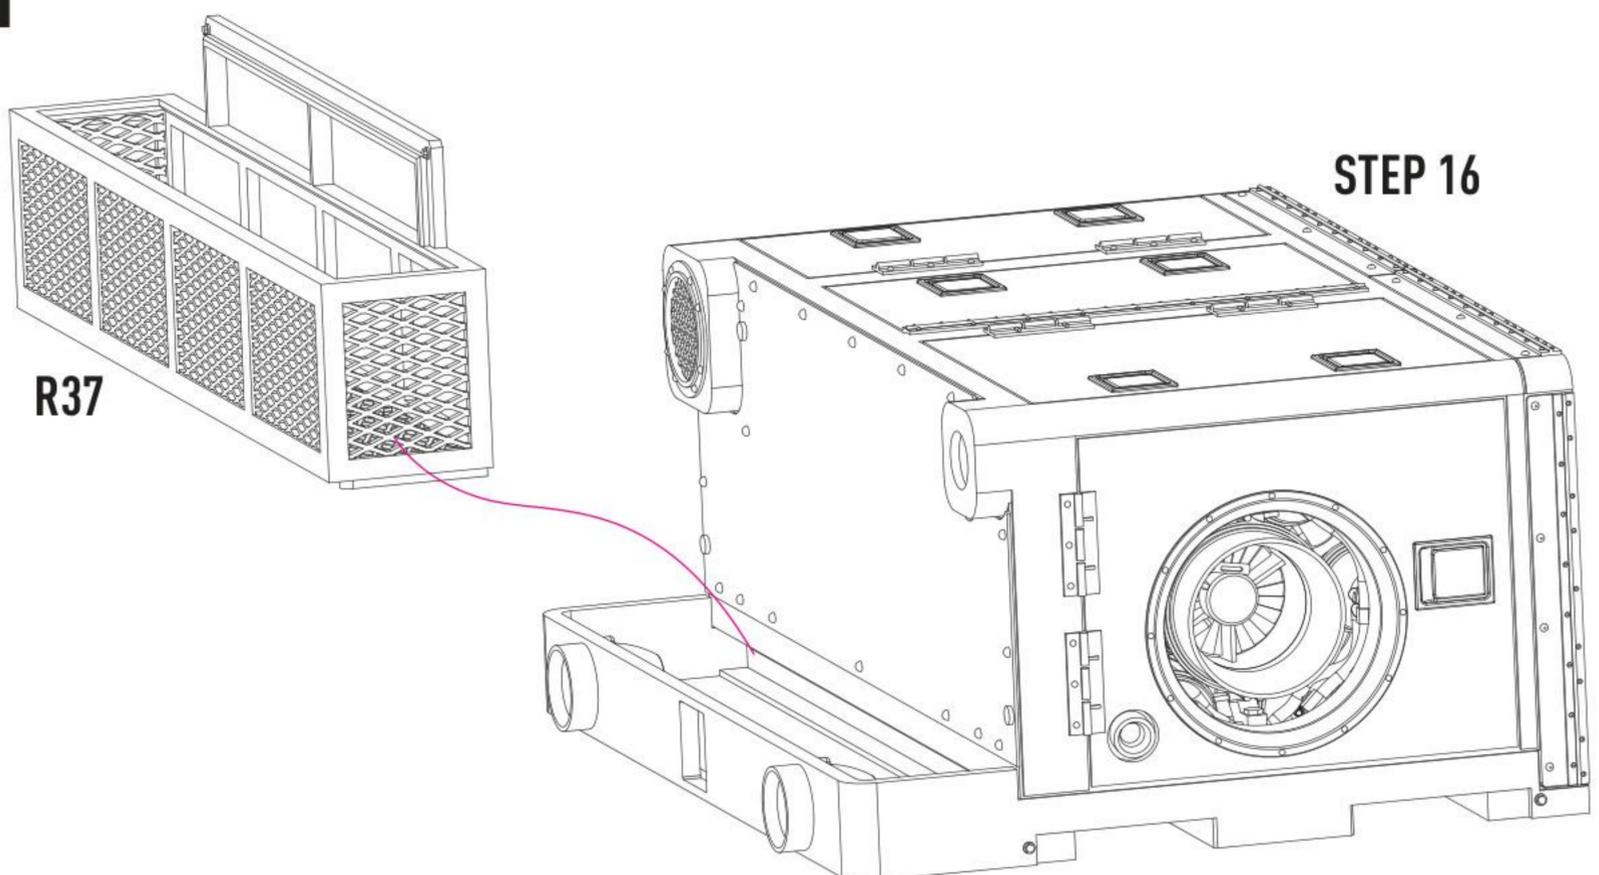


18

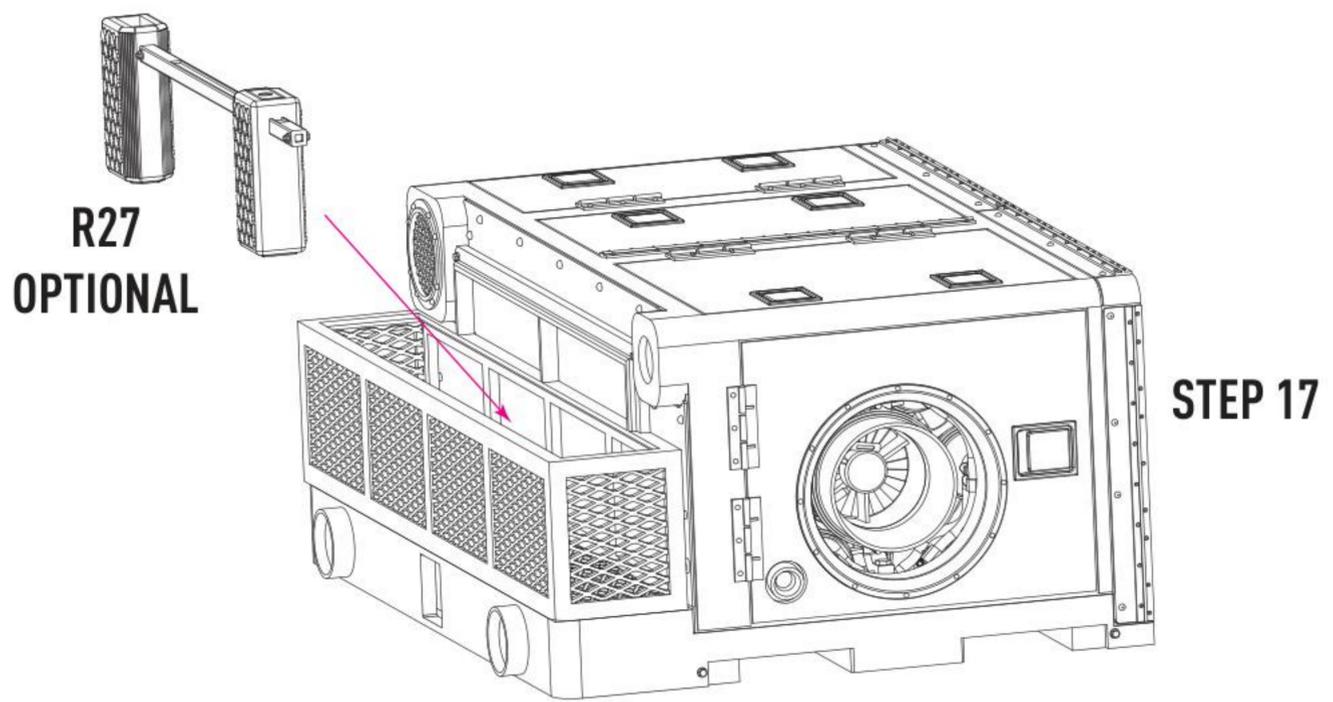


19

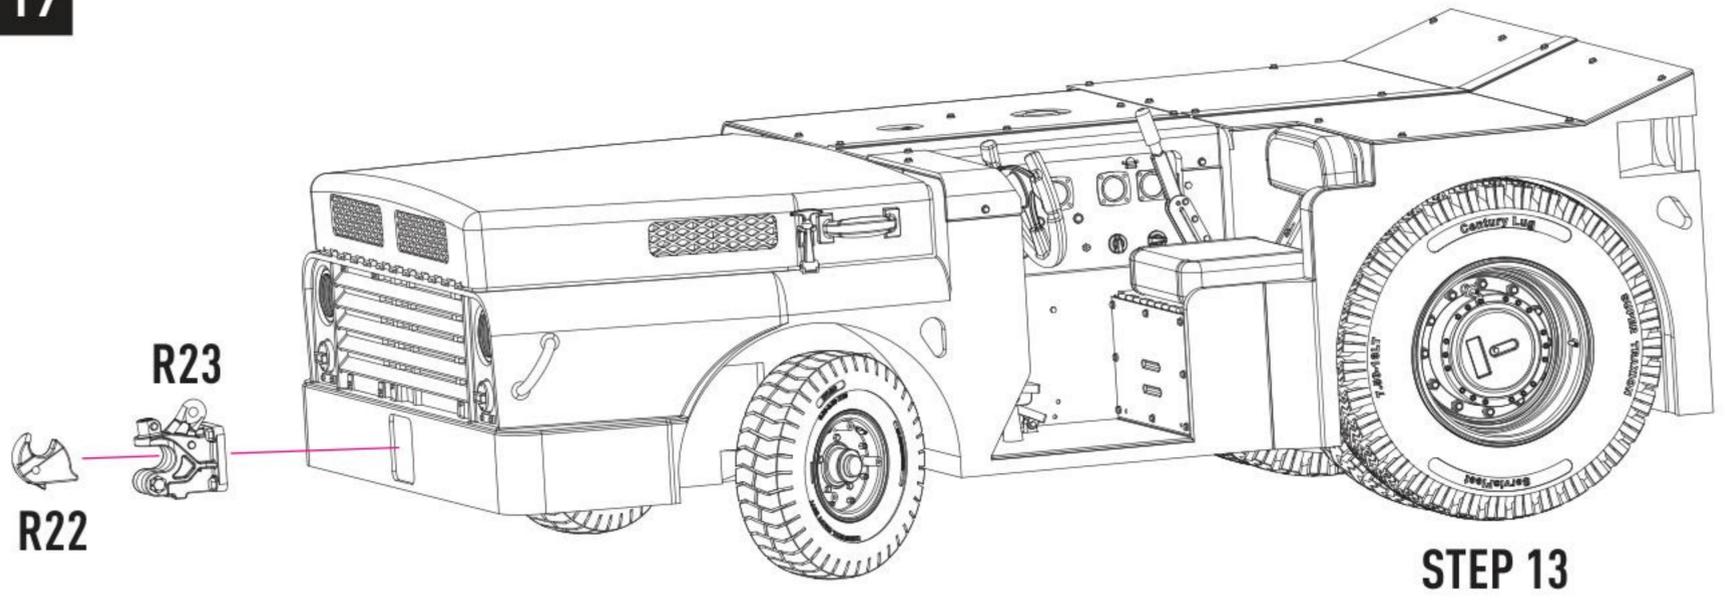


20

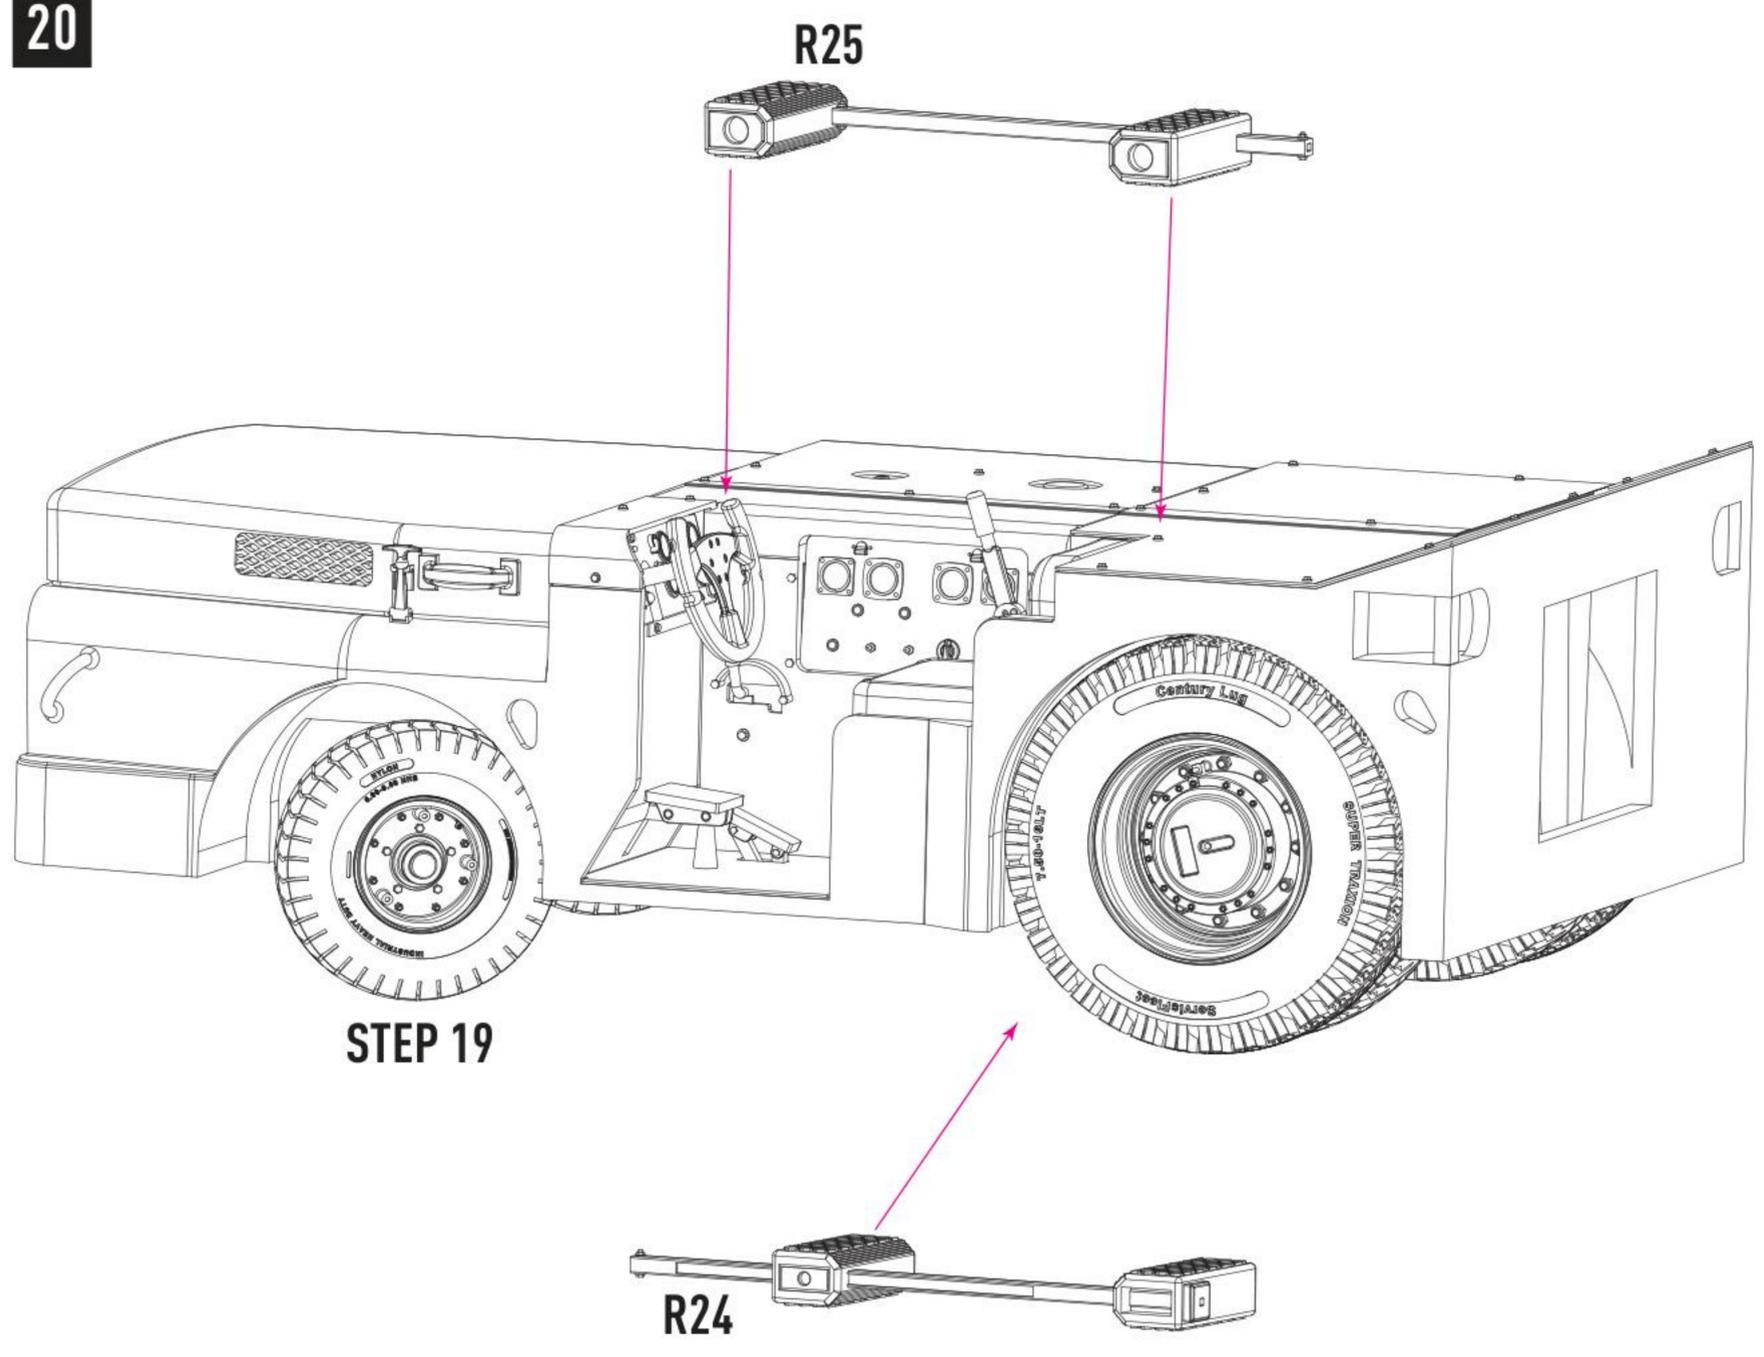


21

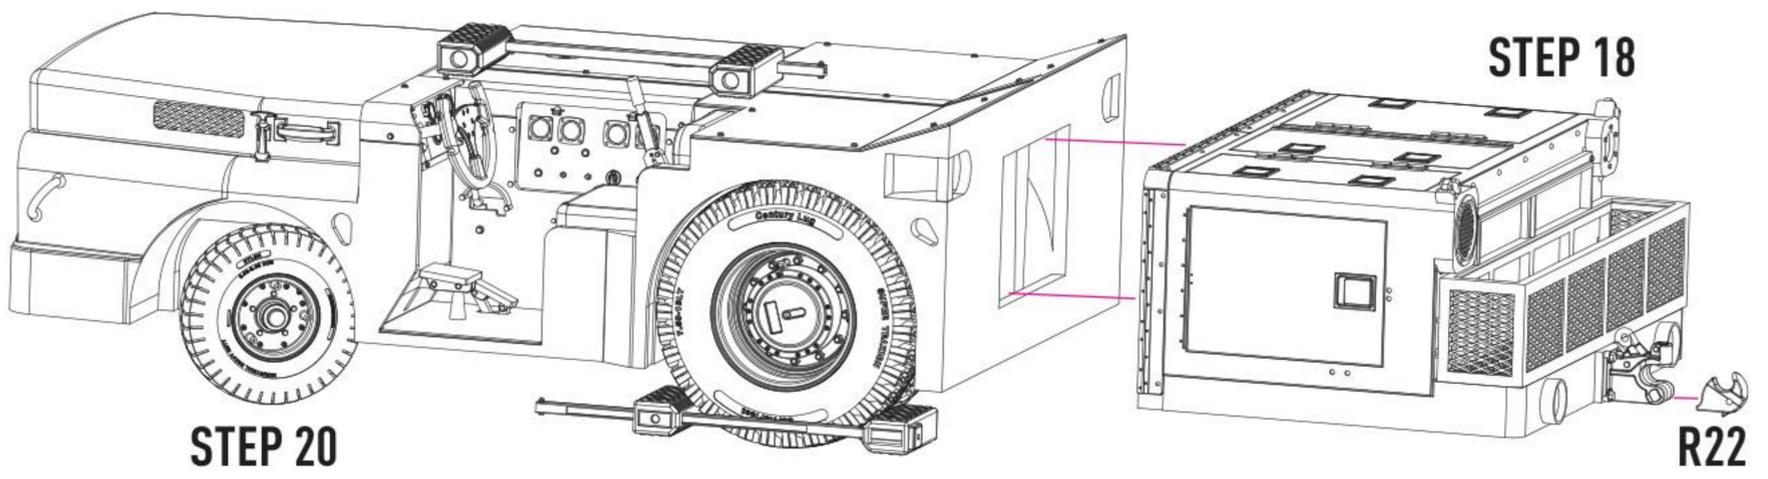


22

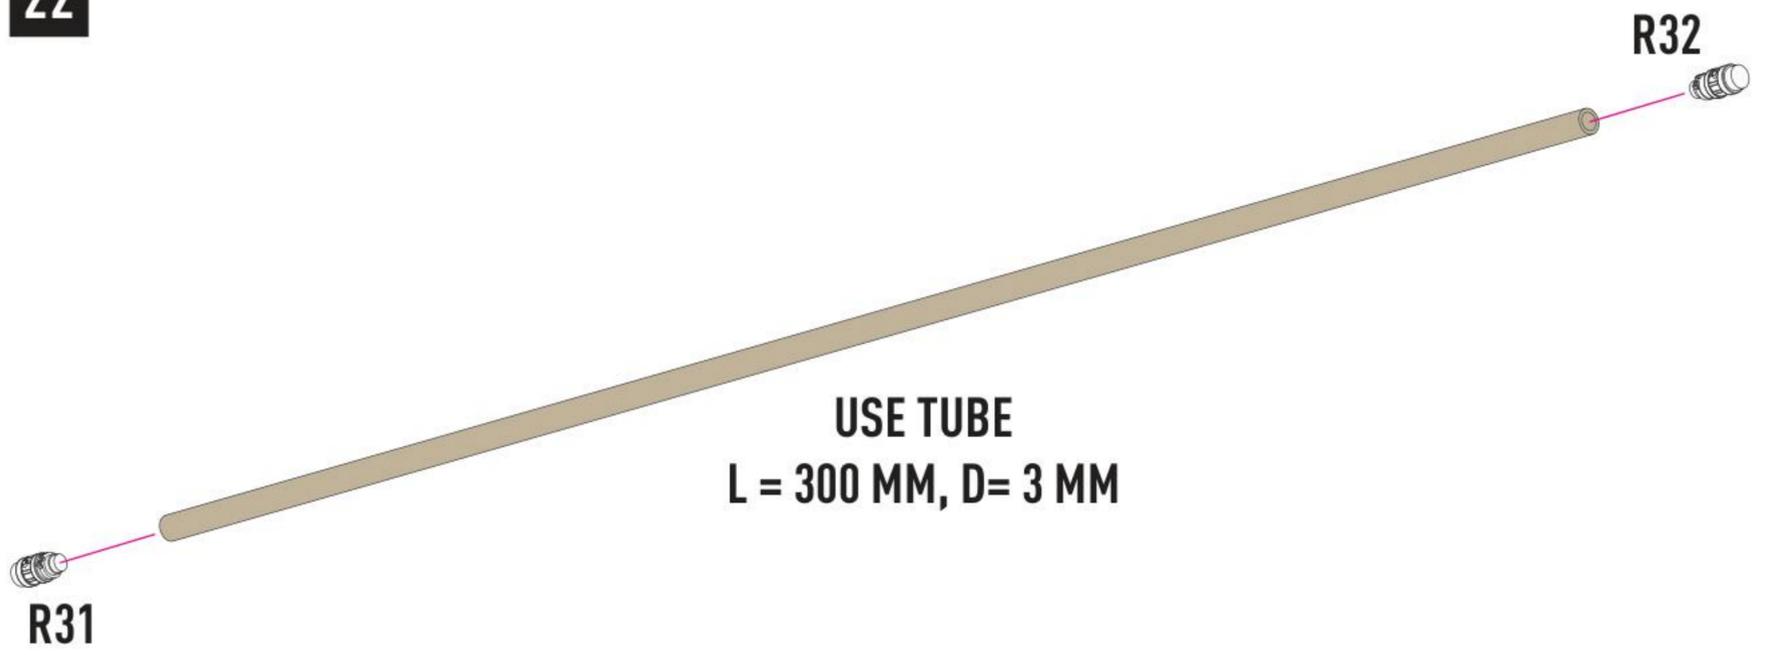


23

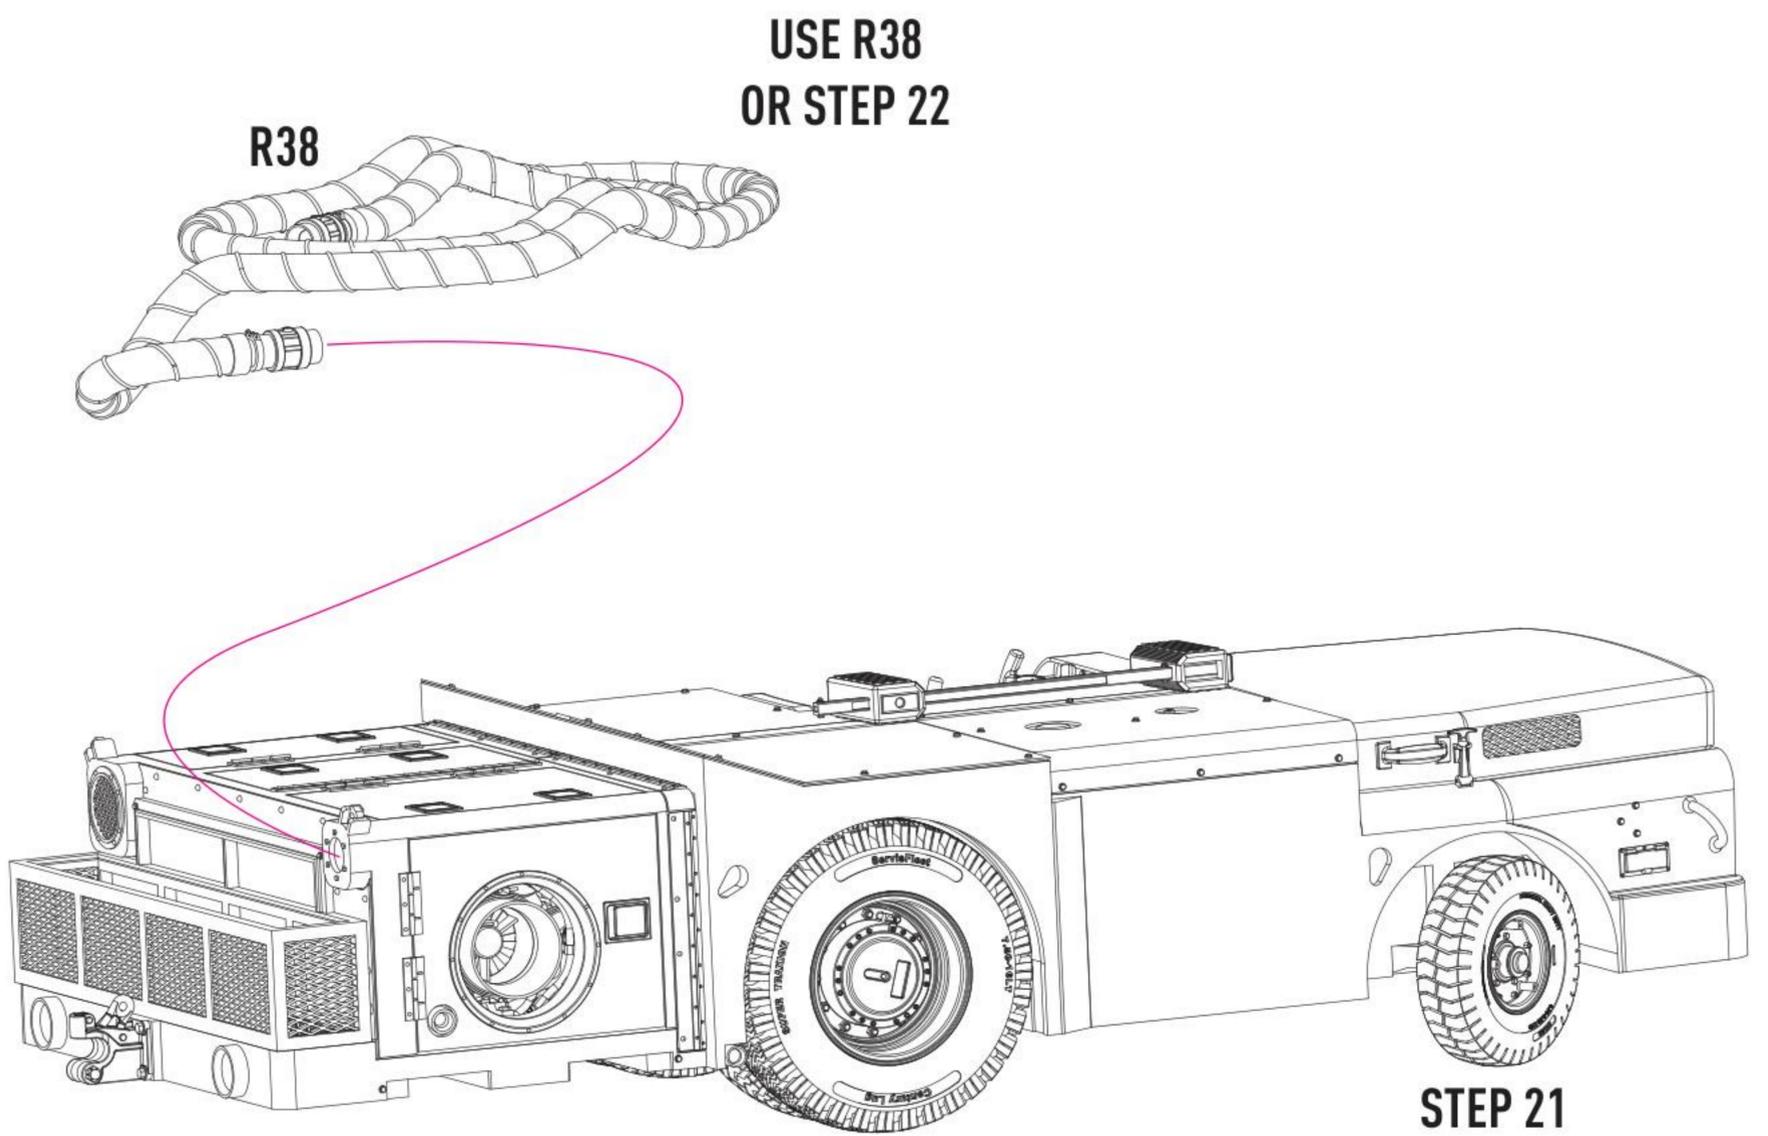


24

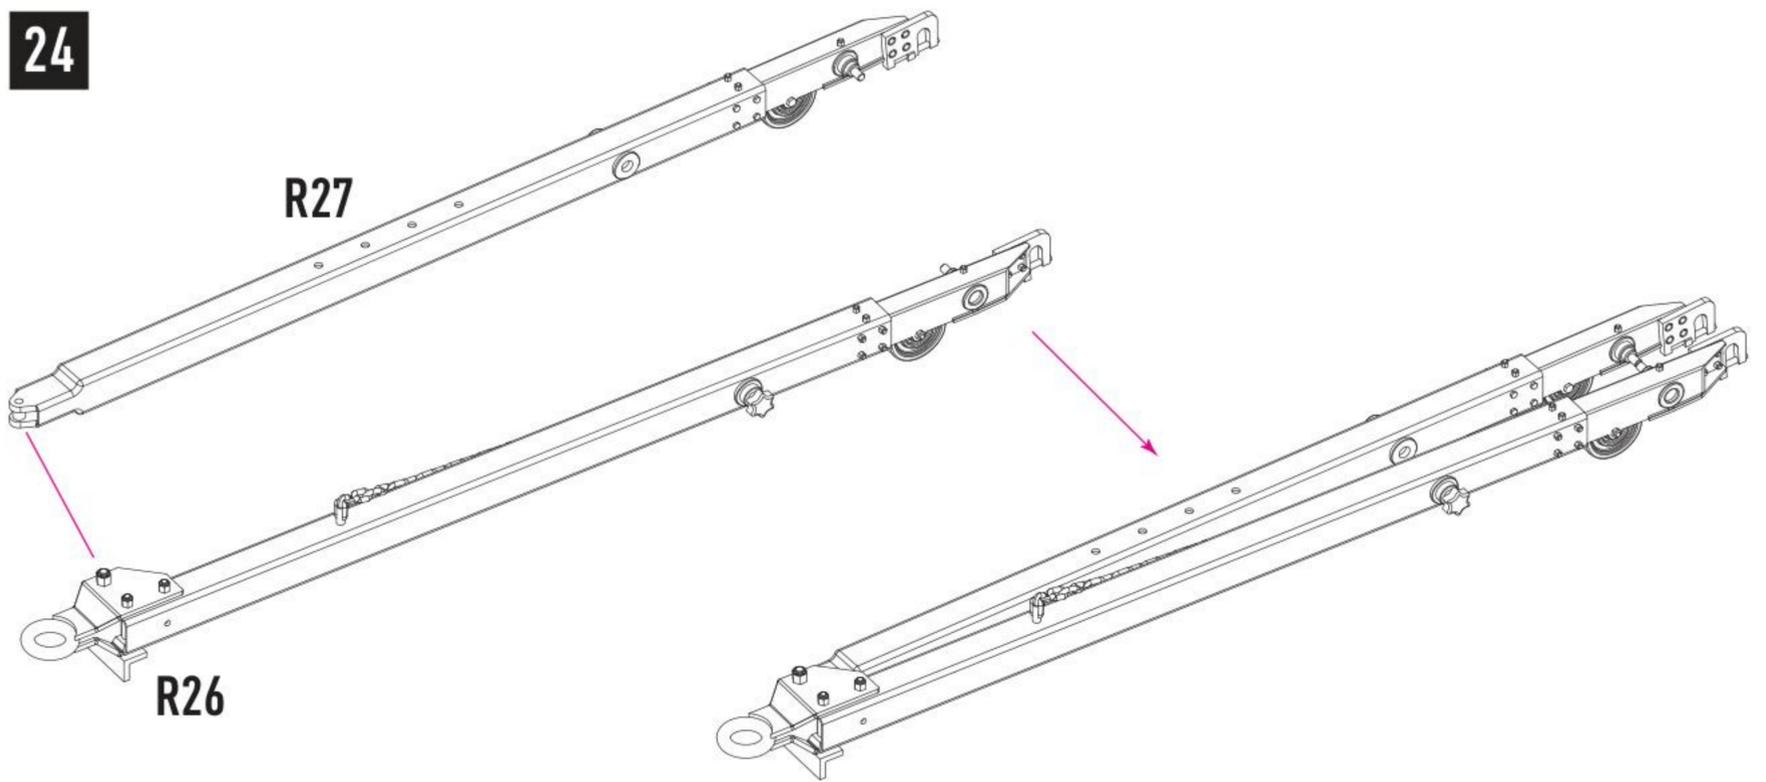


25

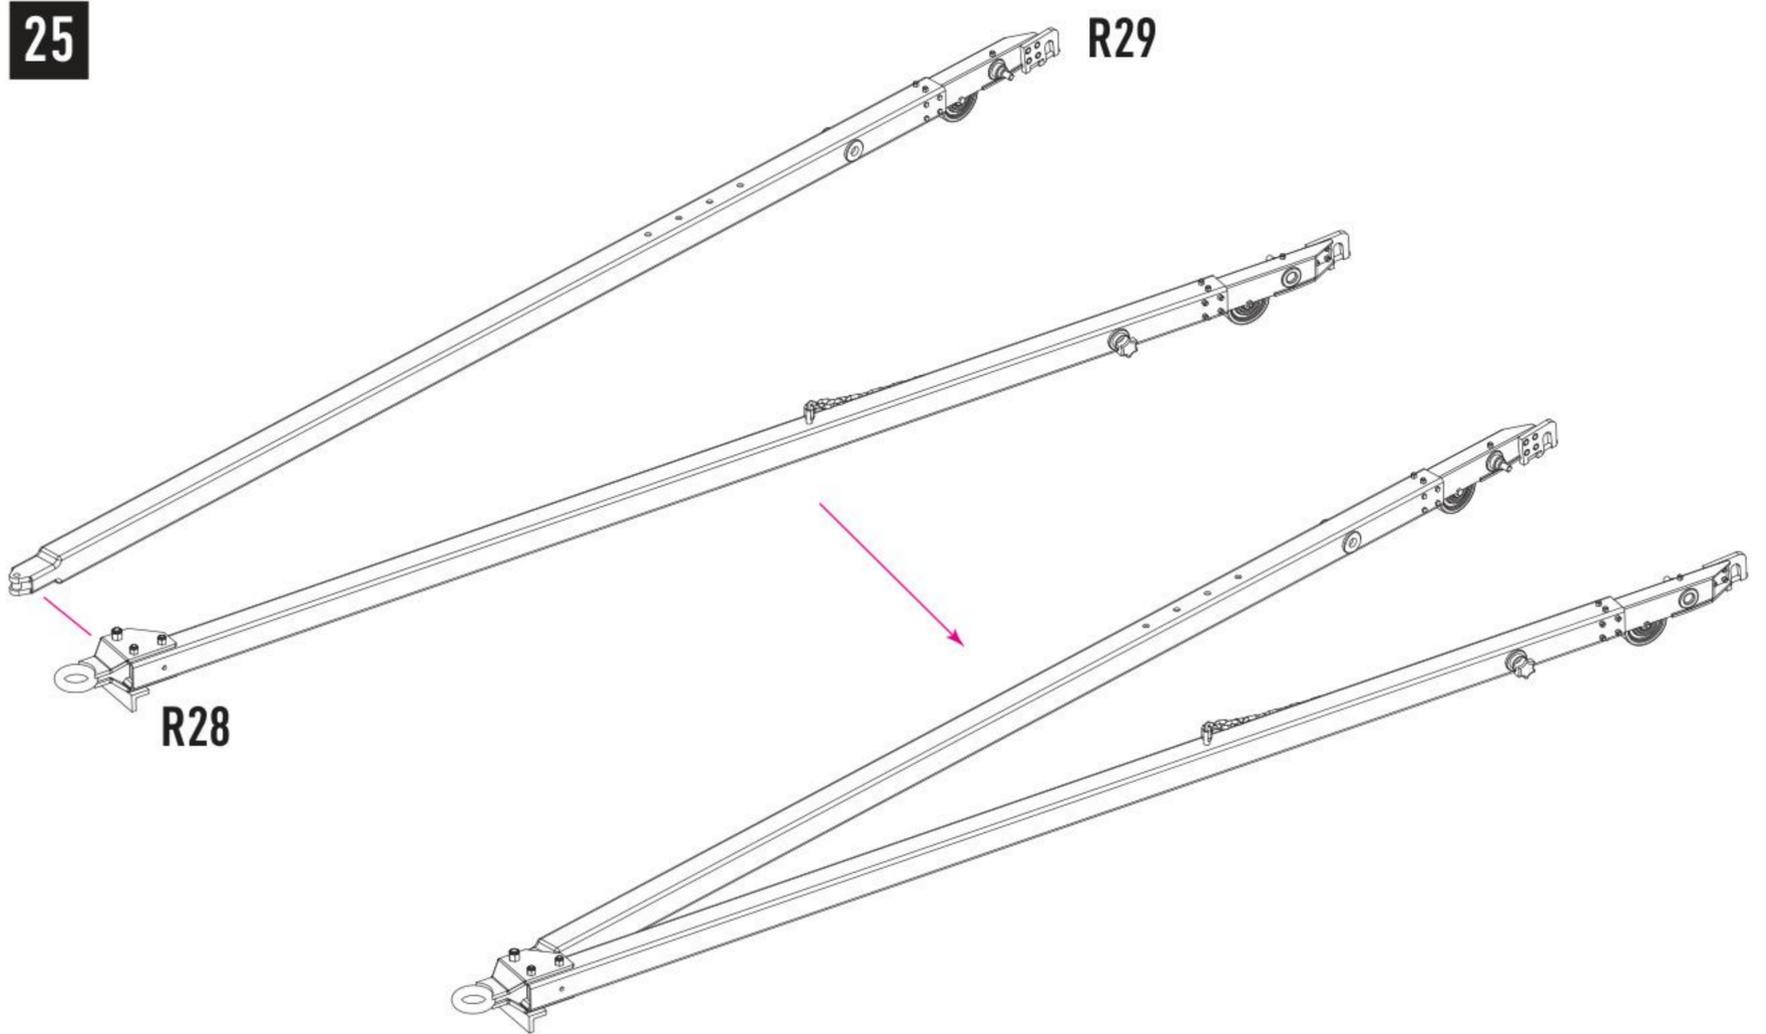


26

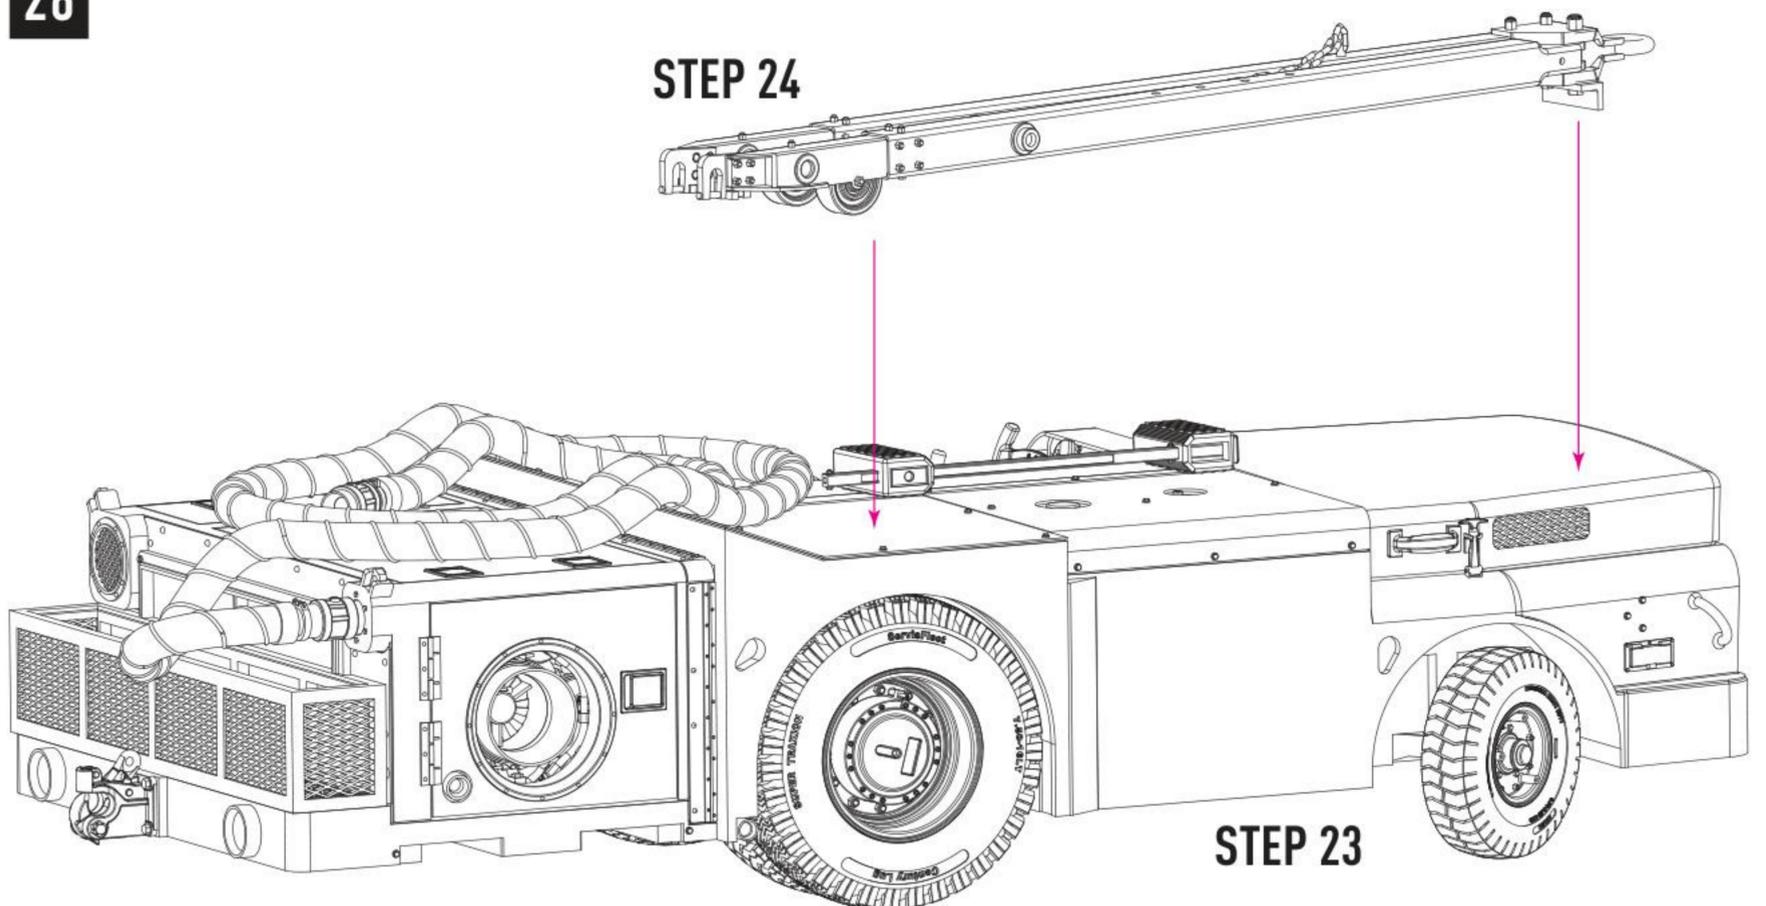




STEP 25

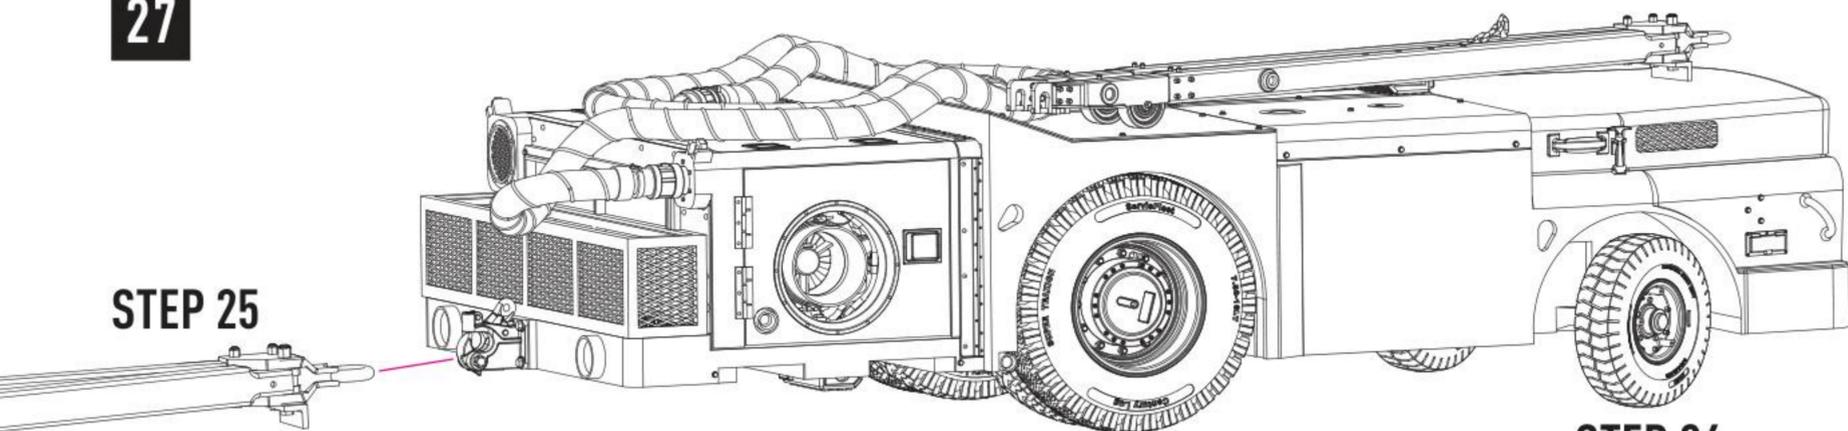

STEP 26

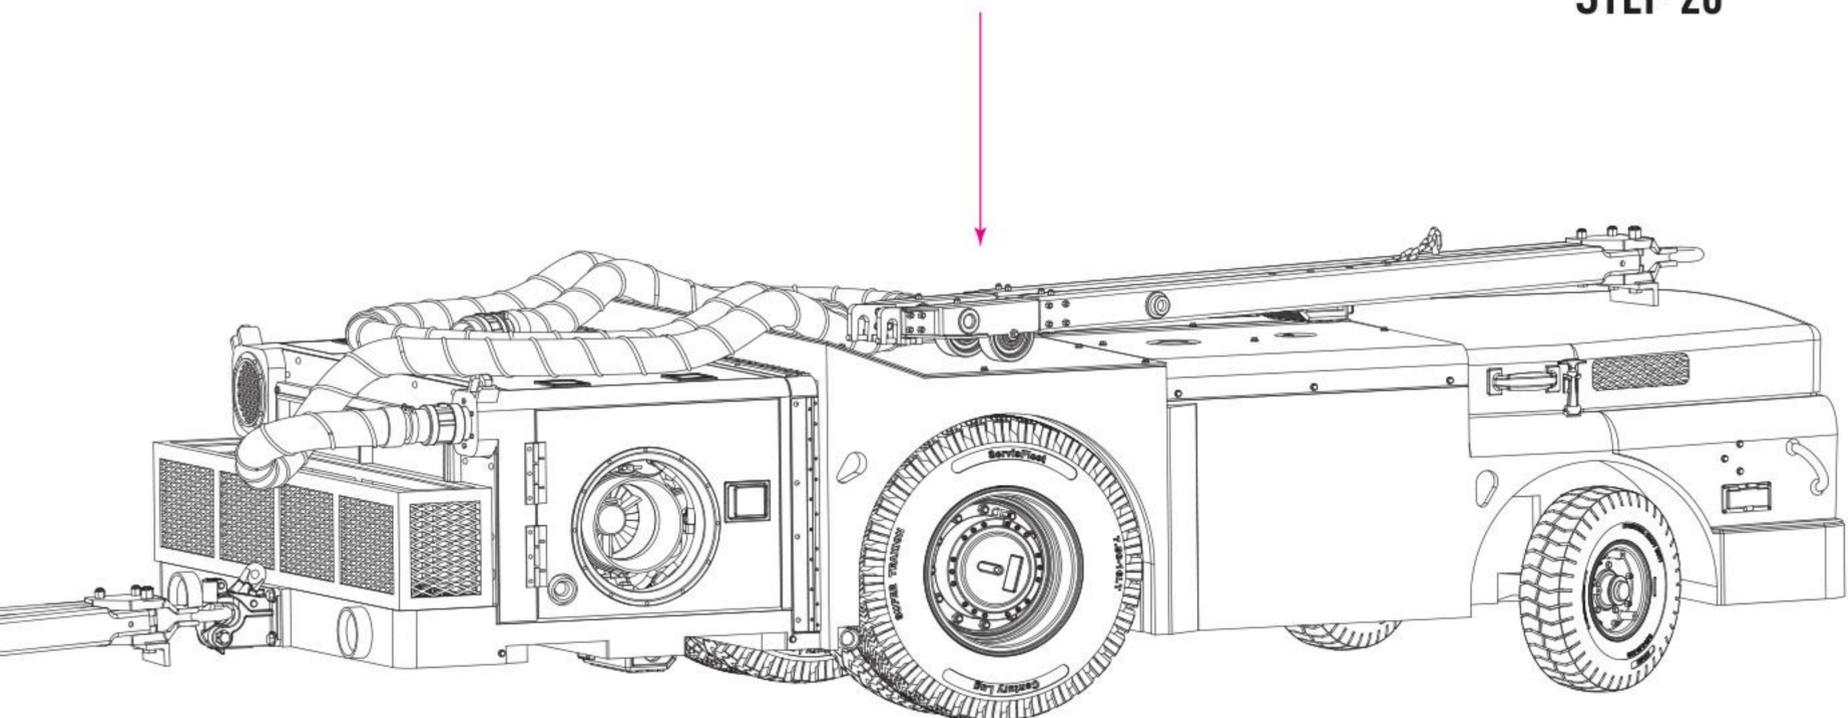

DECAL INSTRUCTION ALBAR UNIVERSAL AIRCRAFT TOWBAR

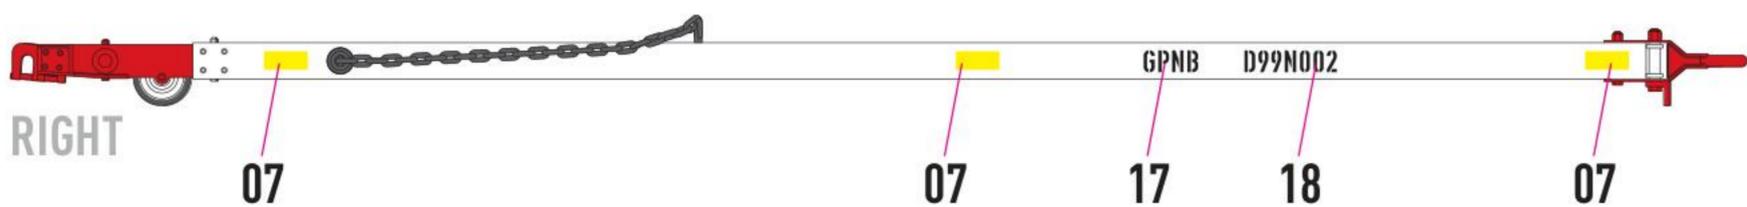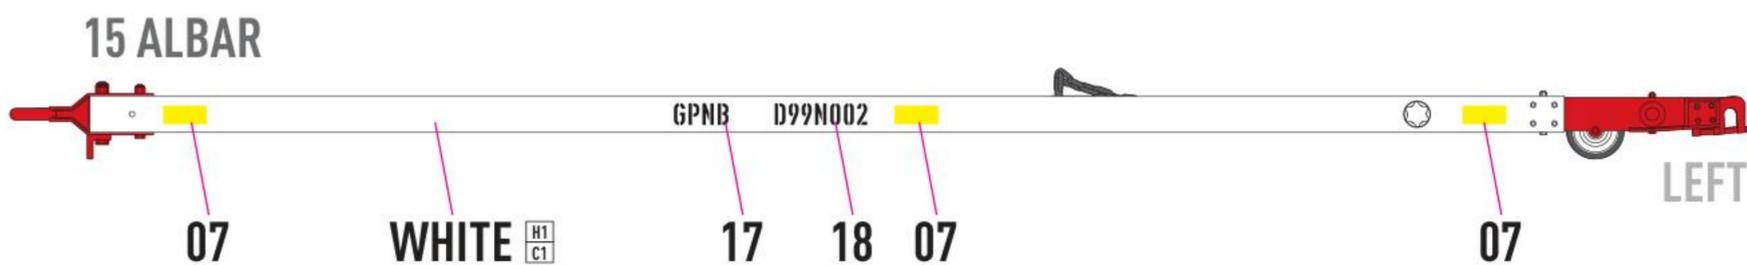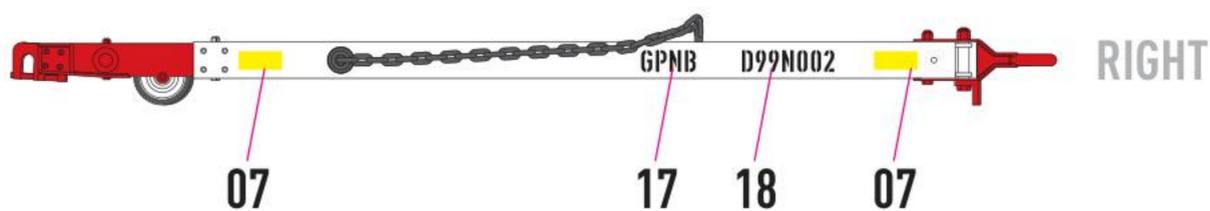

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
WHITE	H1	C1
LIGHT GHOST GRAY	H308	C308

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
RED	H3	C3

