


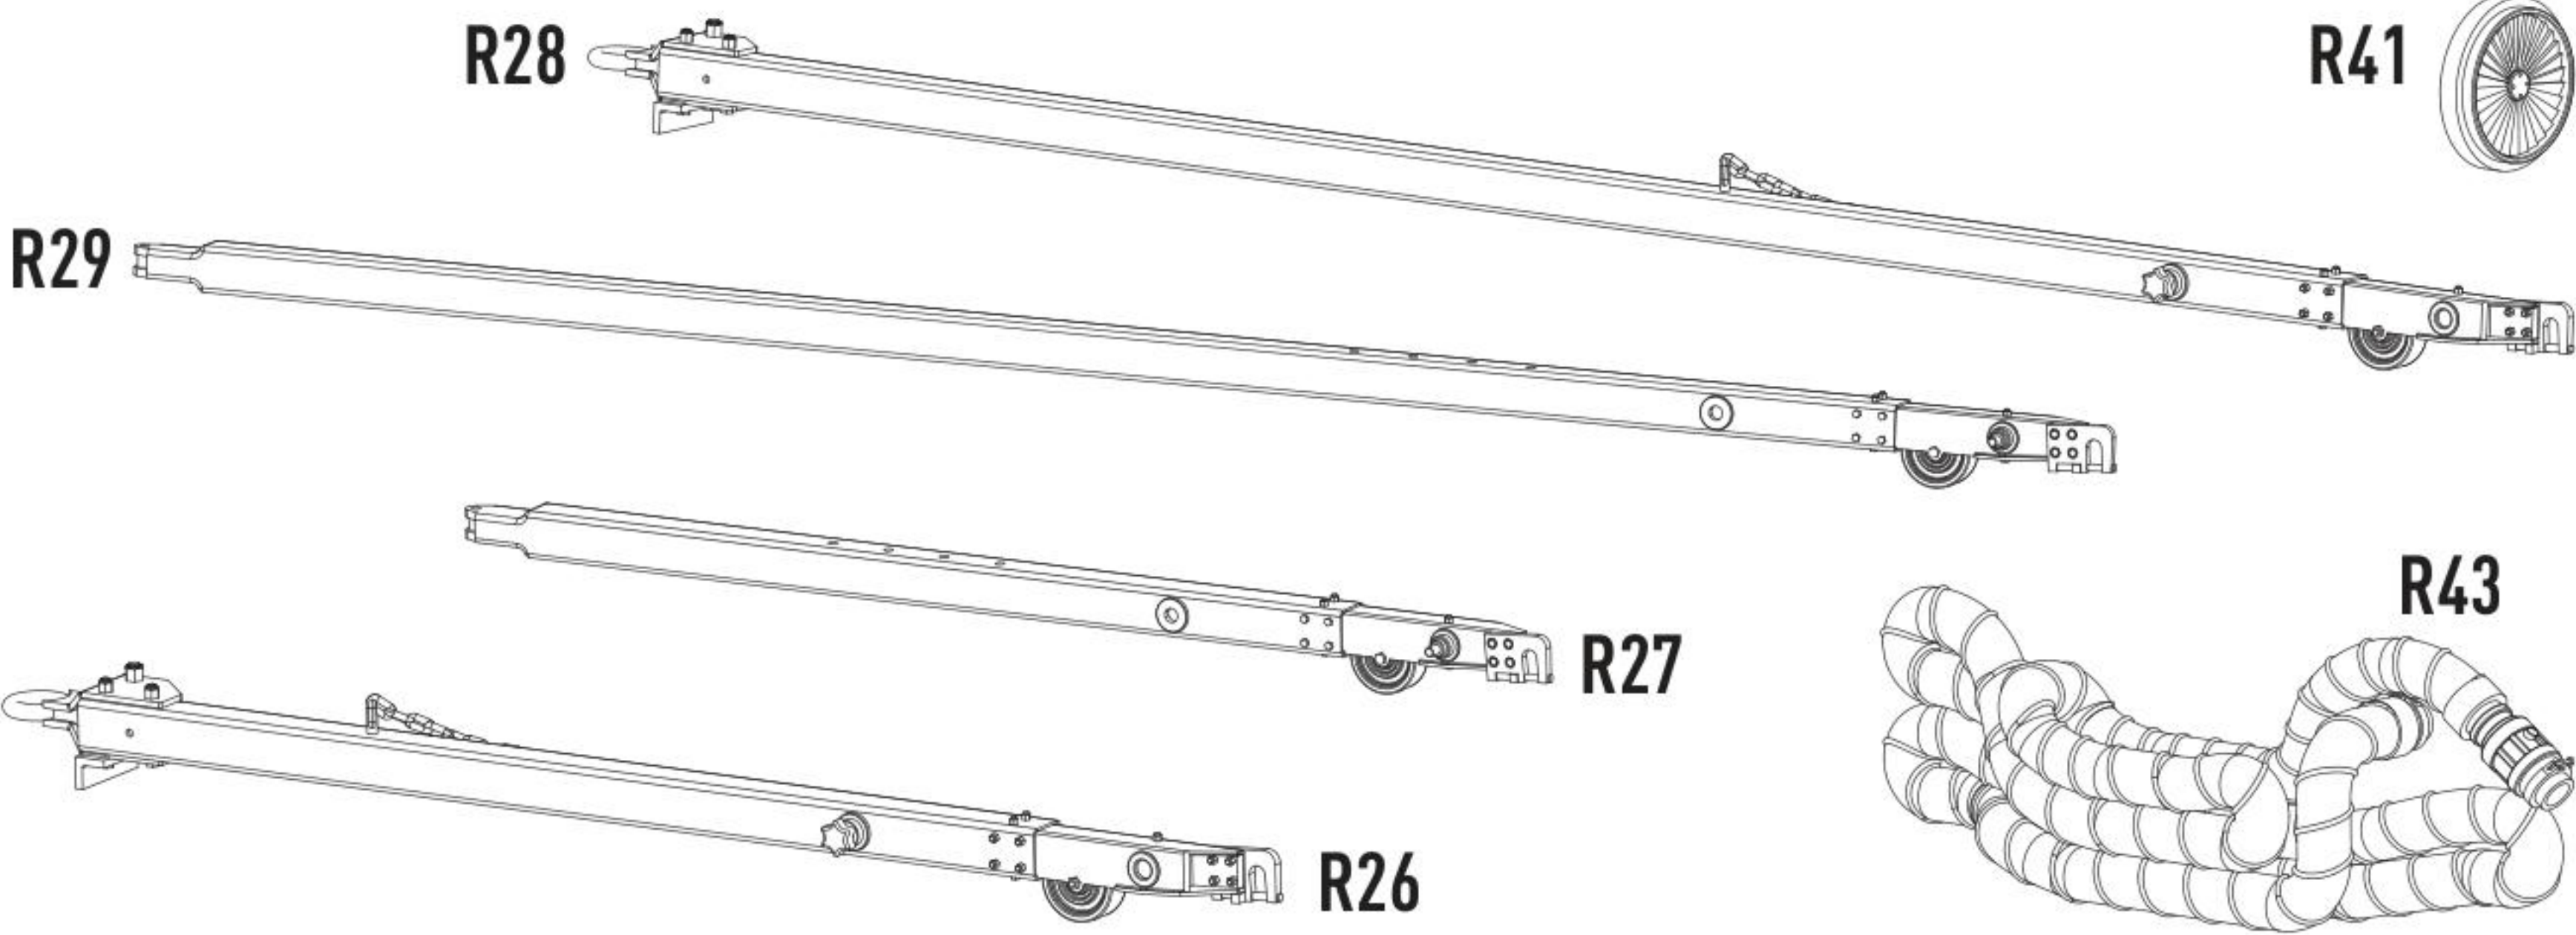
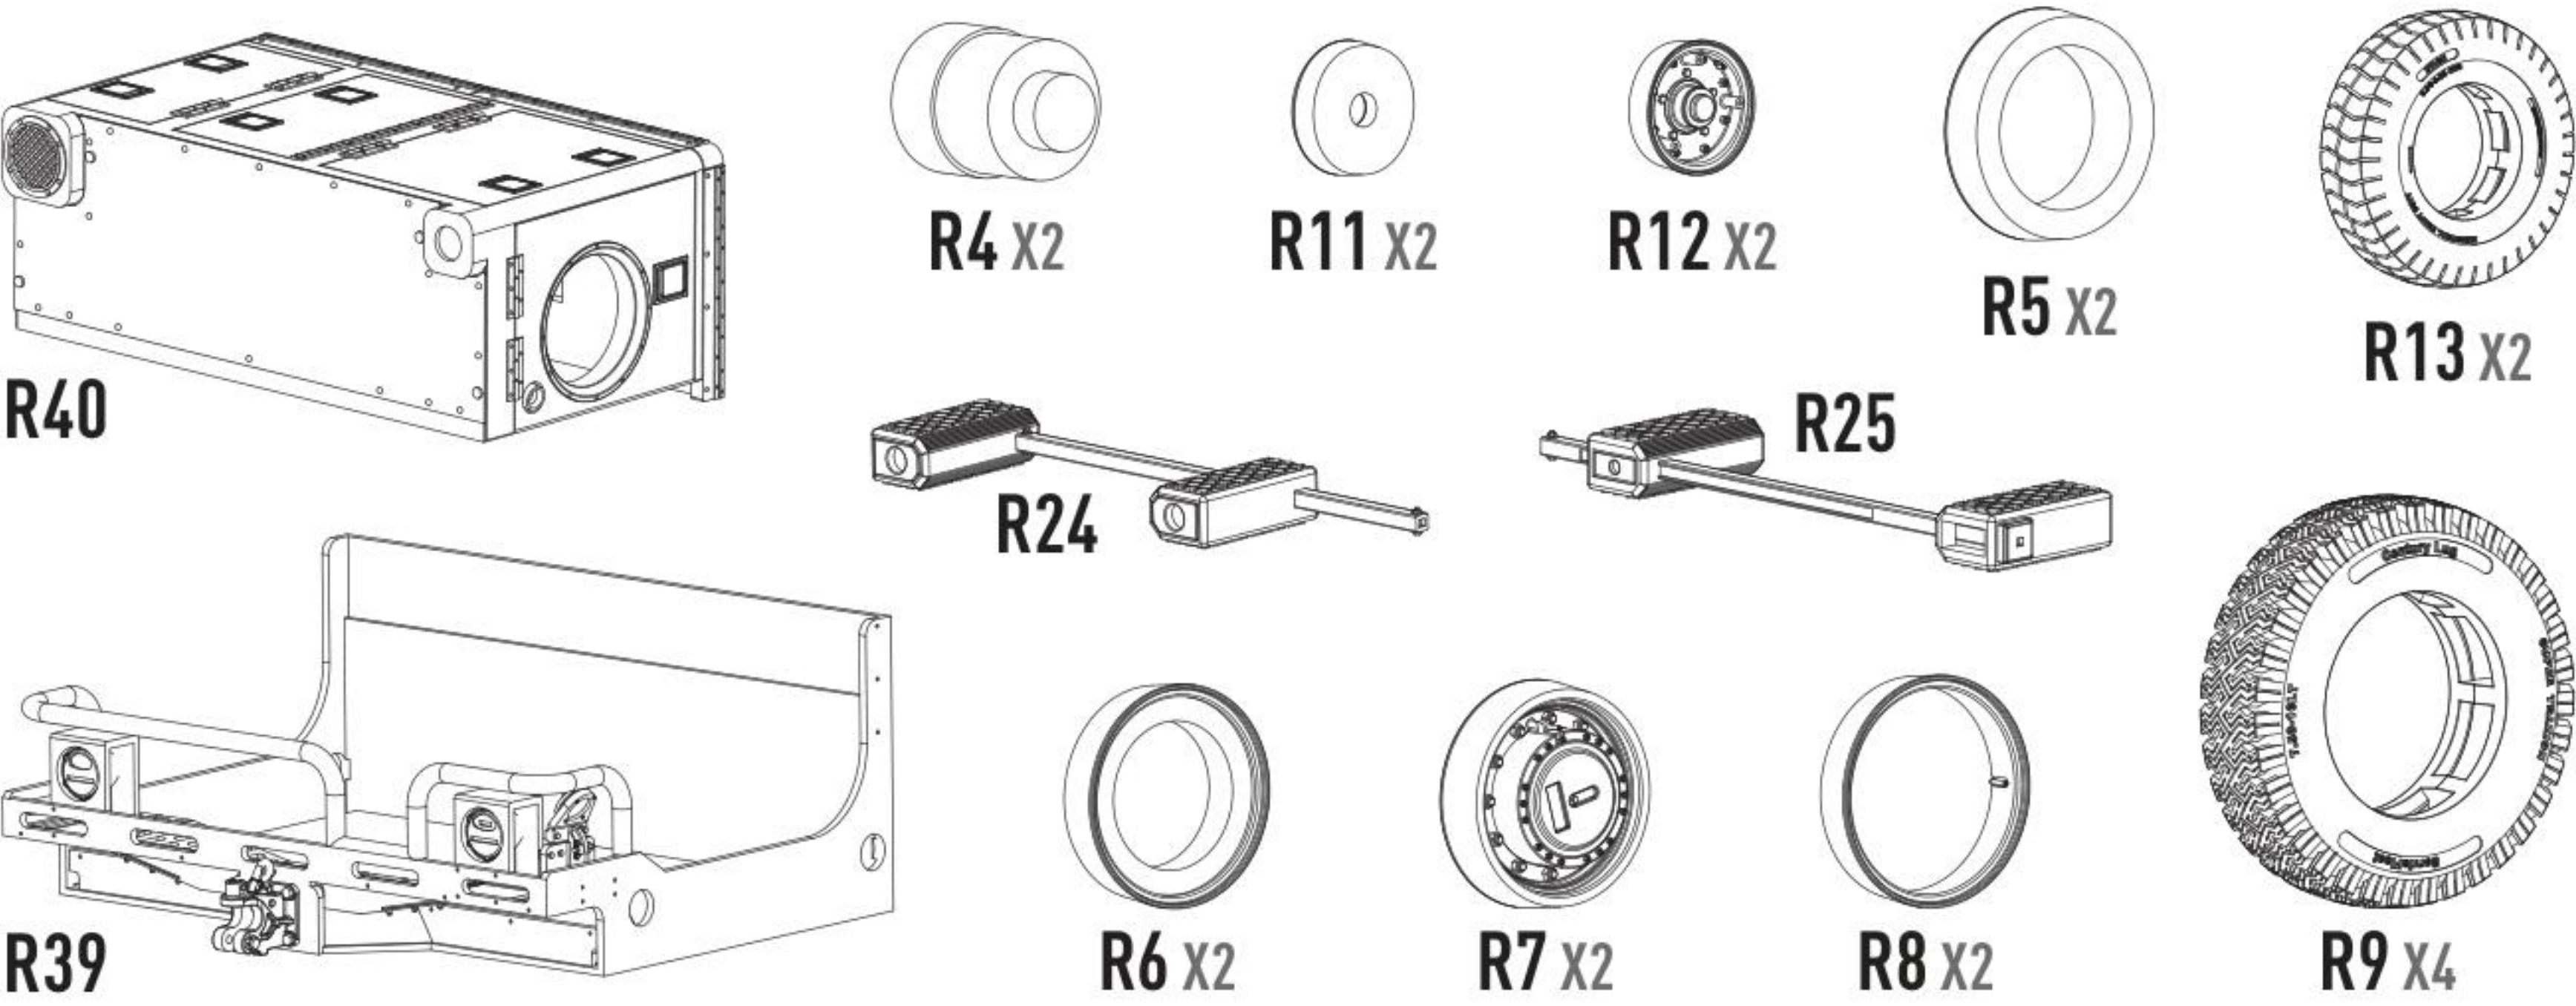
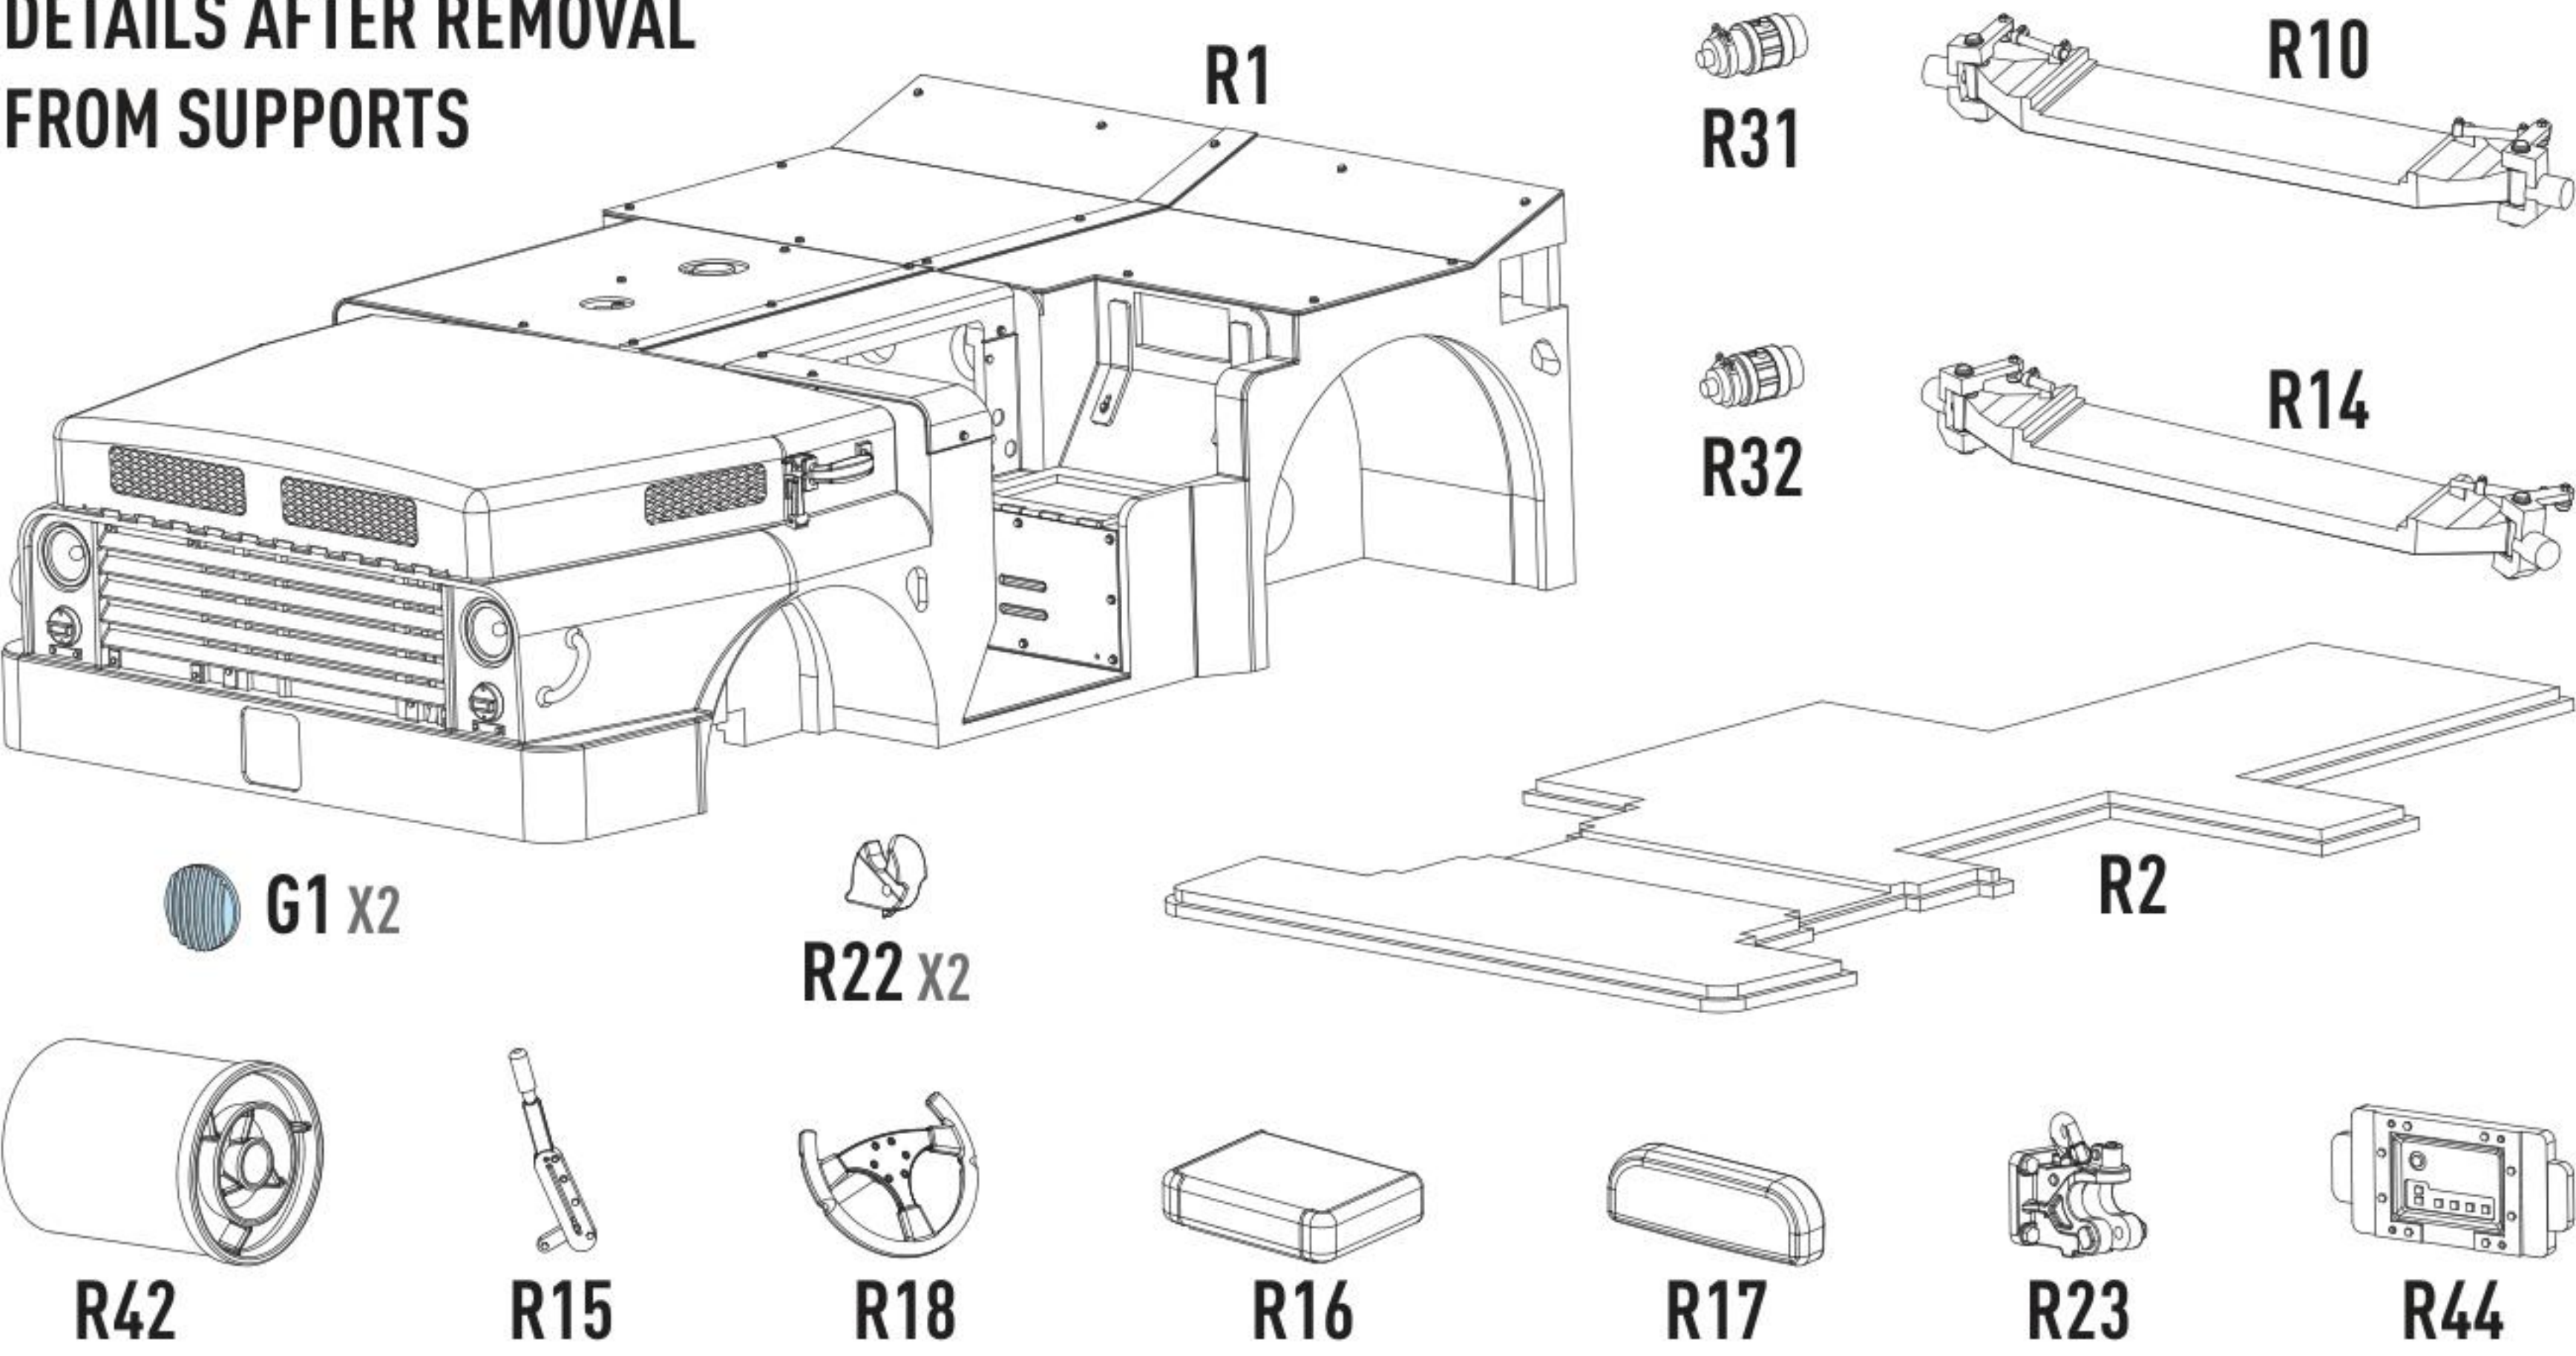
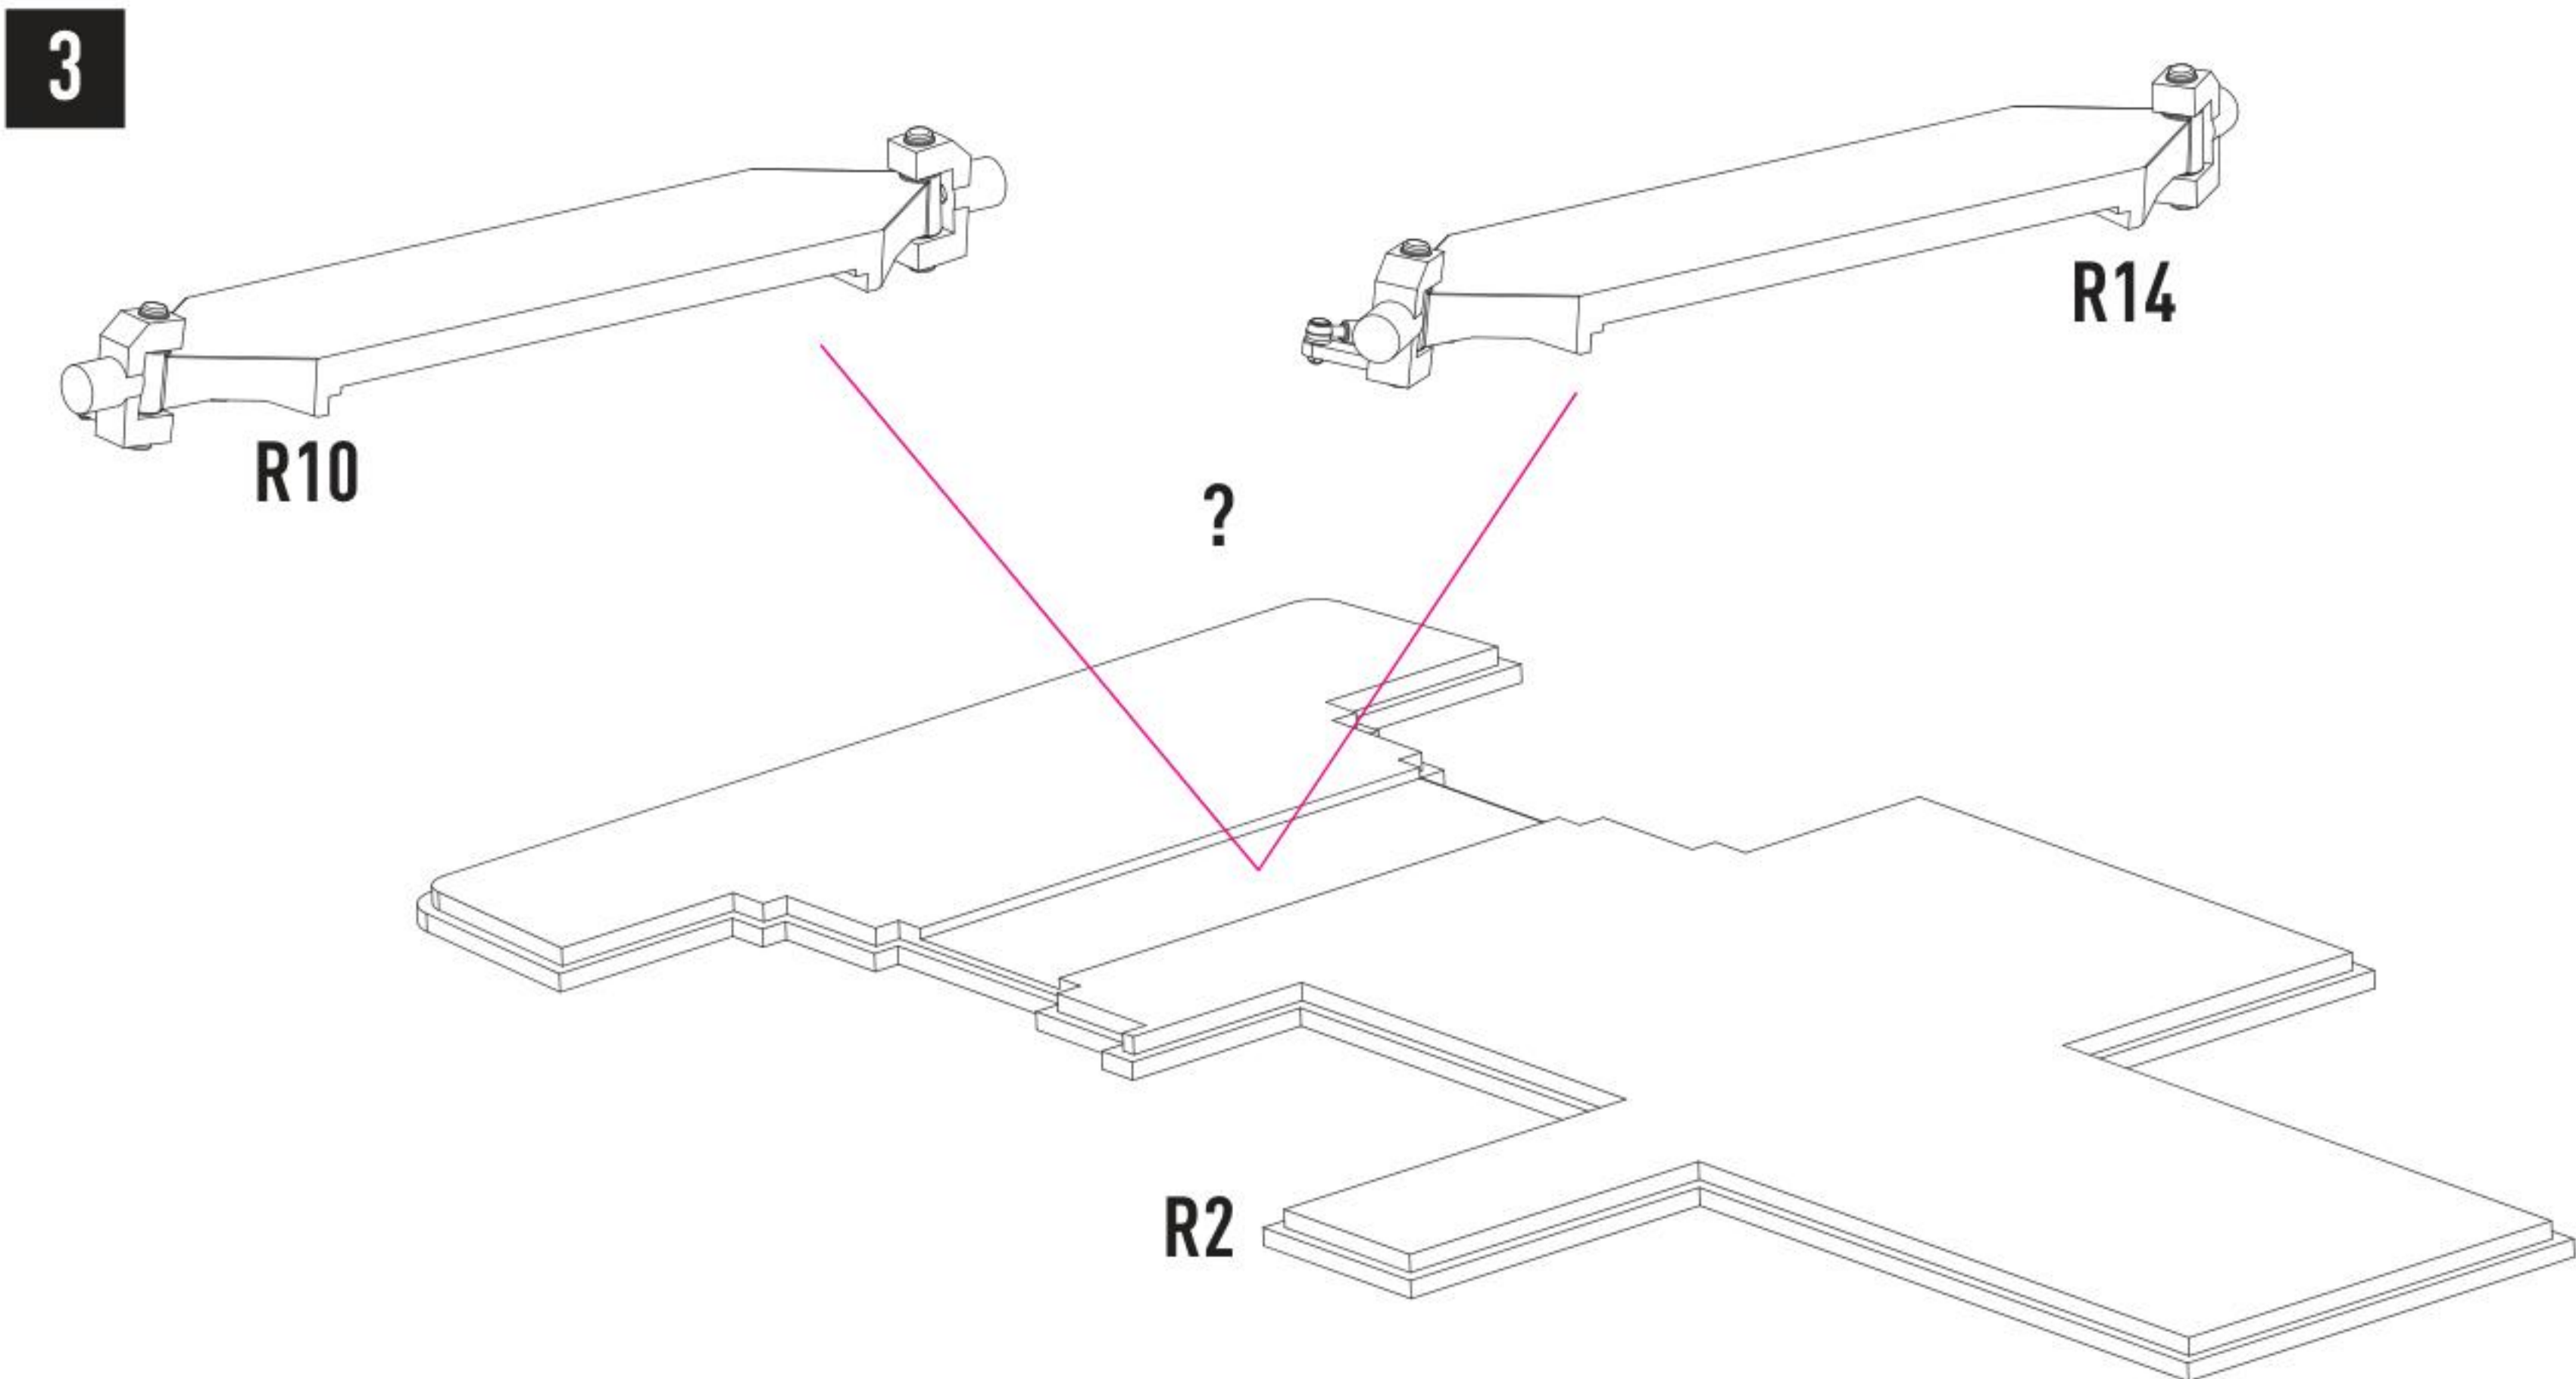


DETAILS AFTER REMOVAL  
FROM SUPPORTS

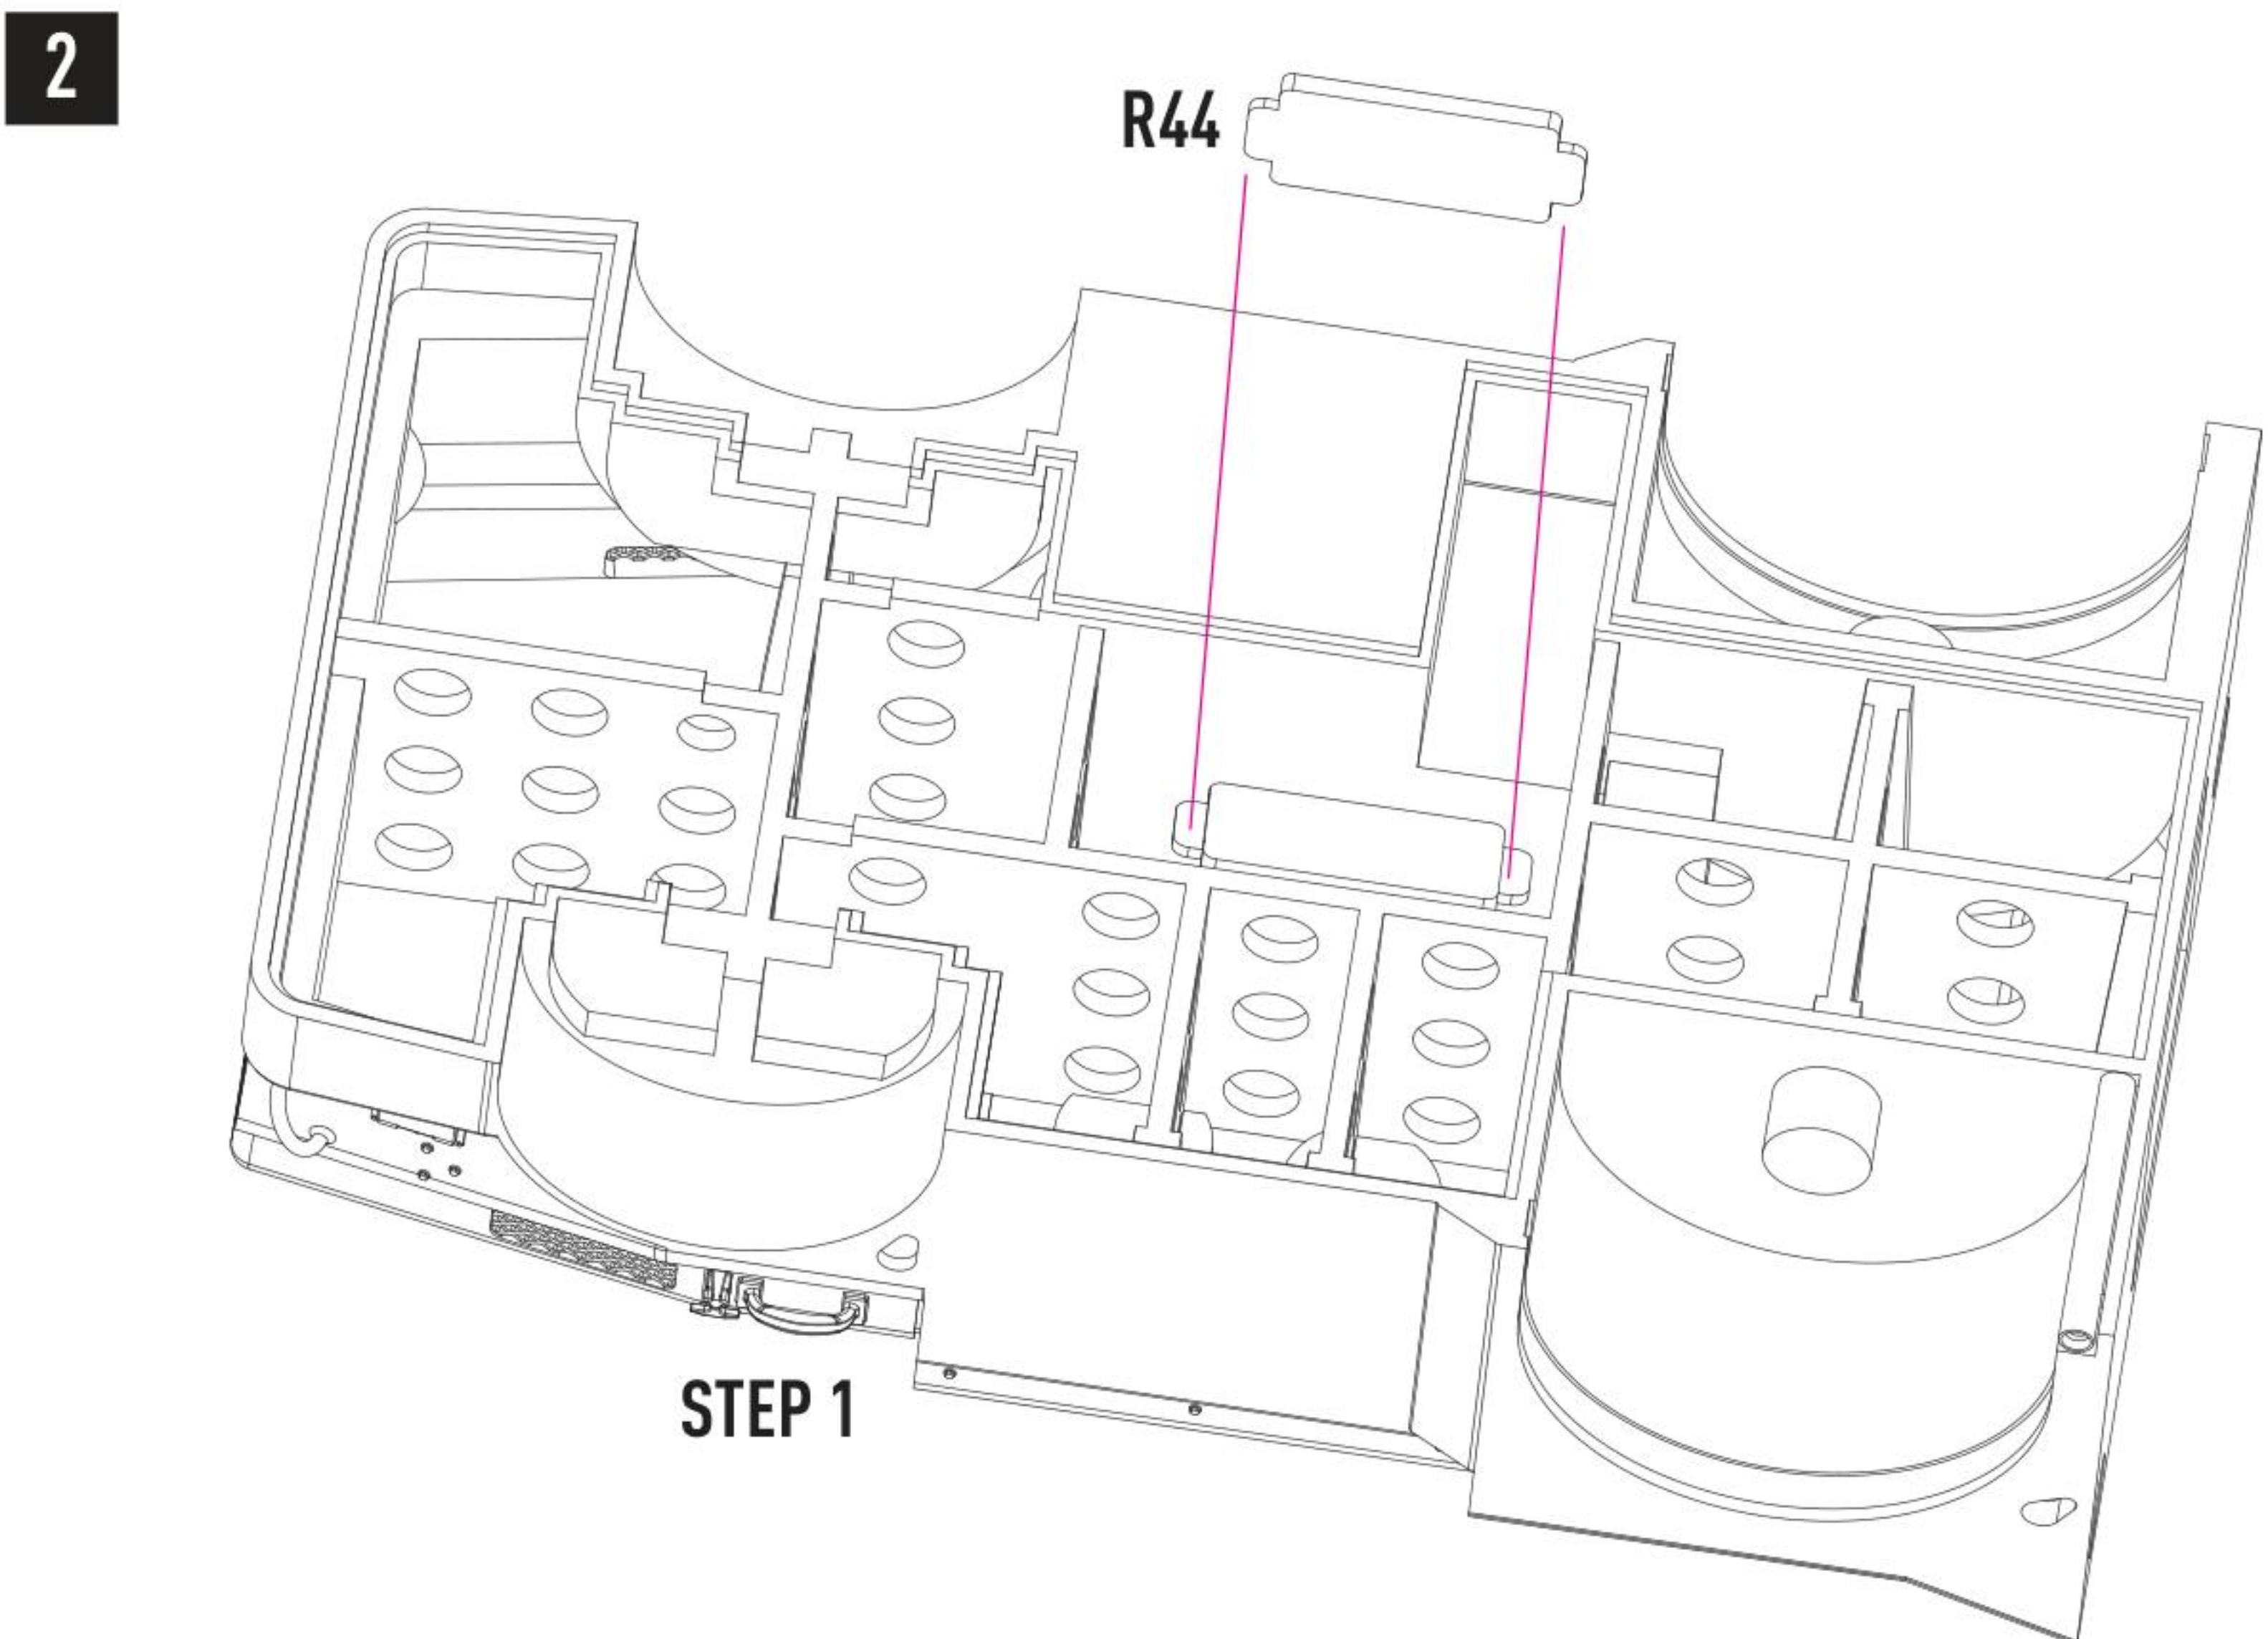


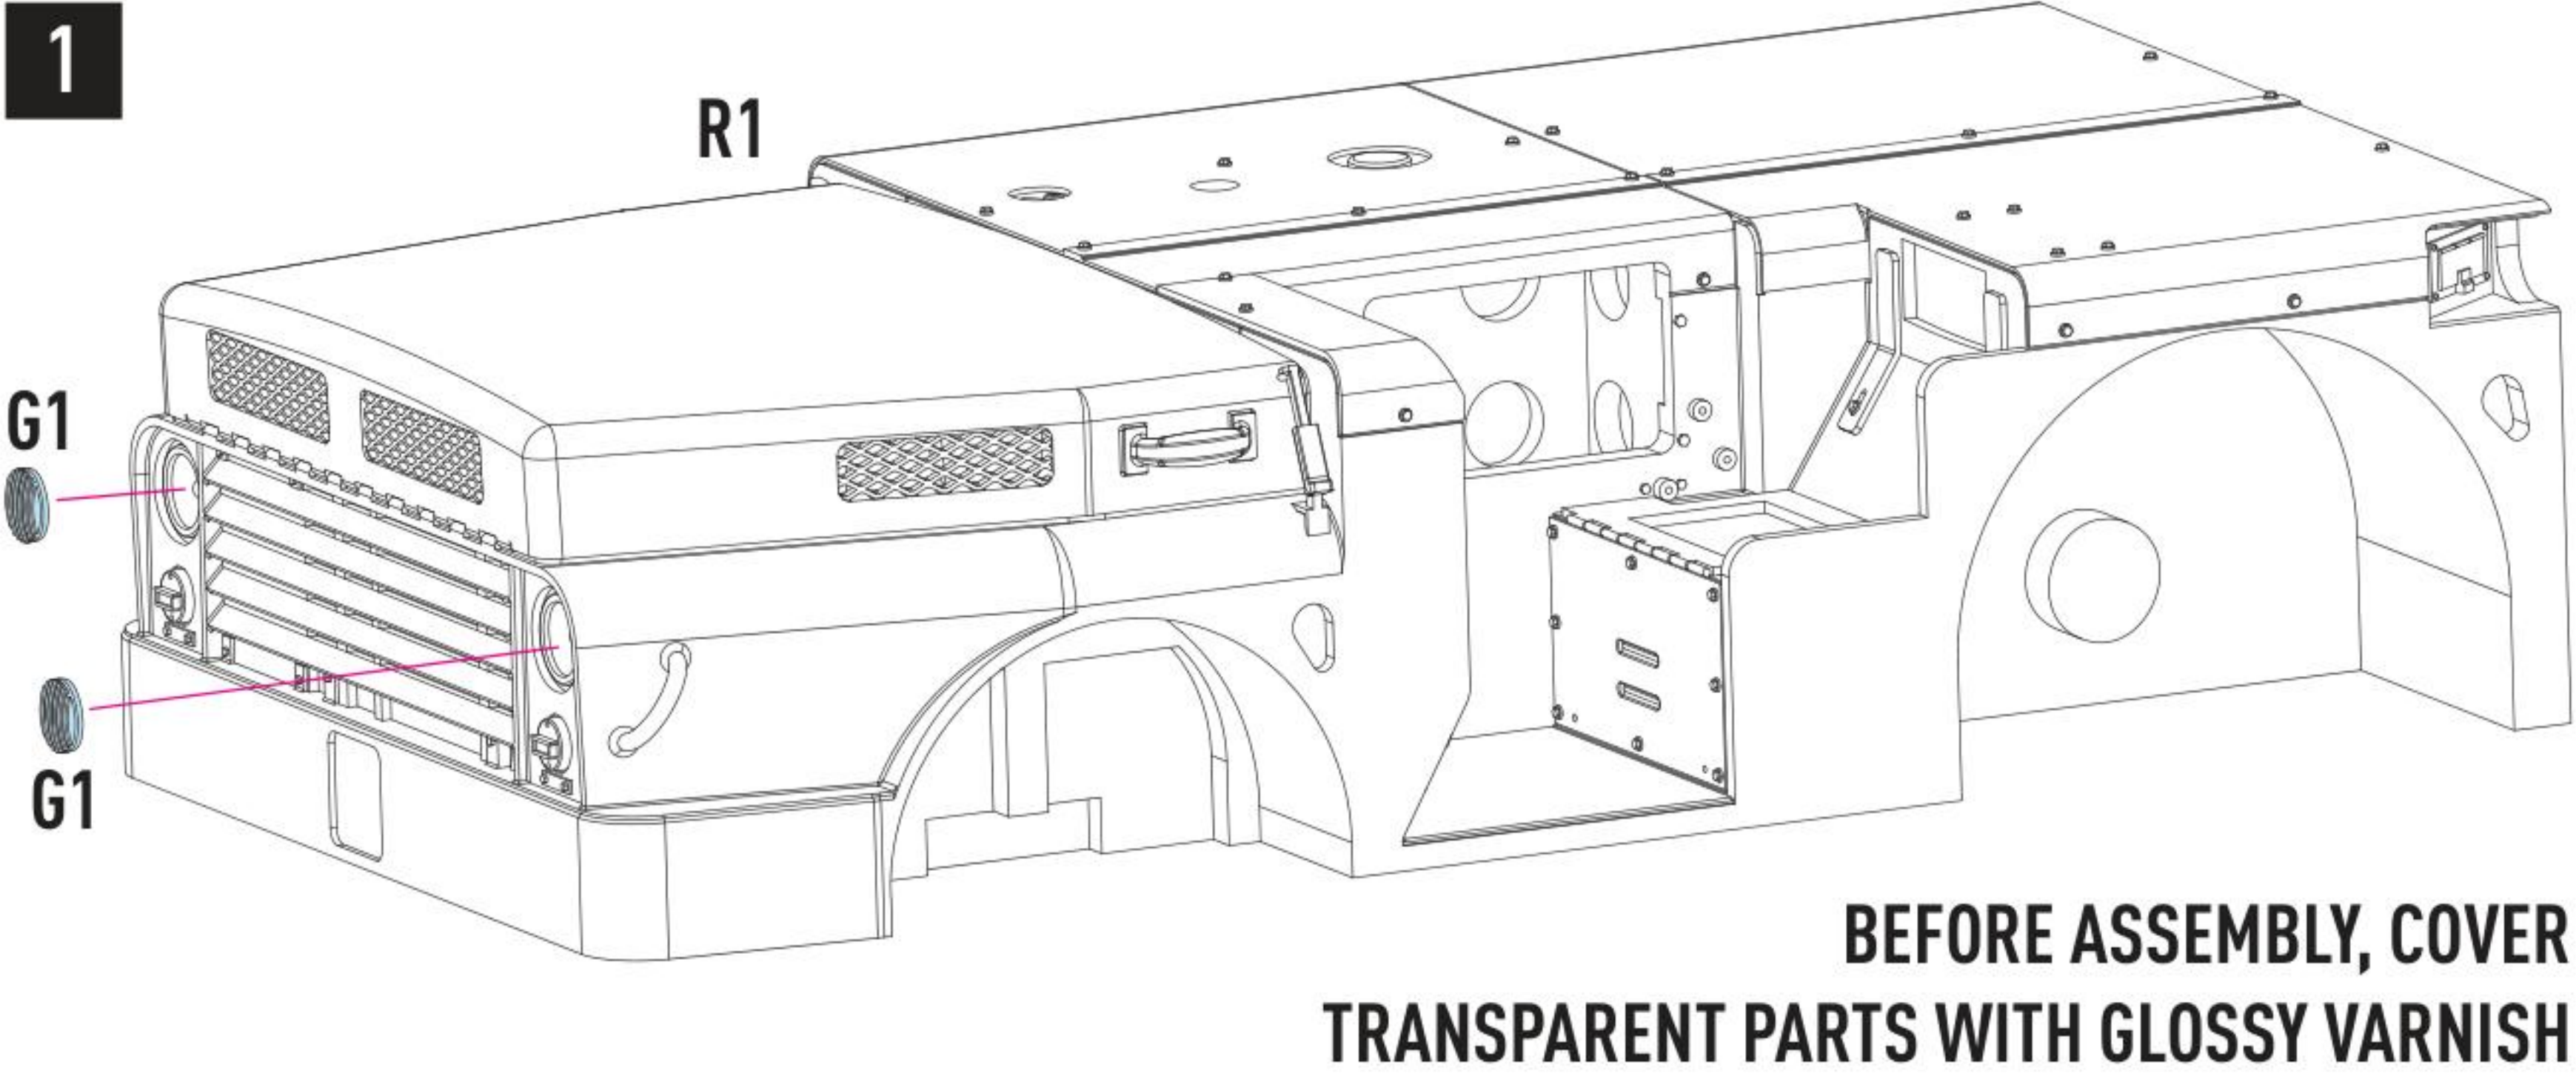


4

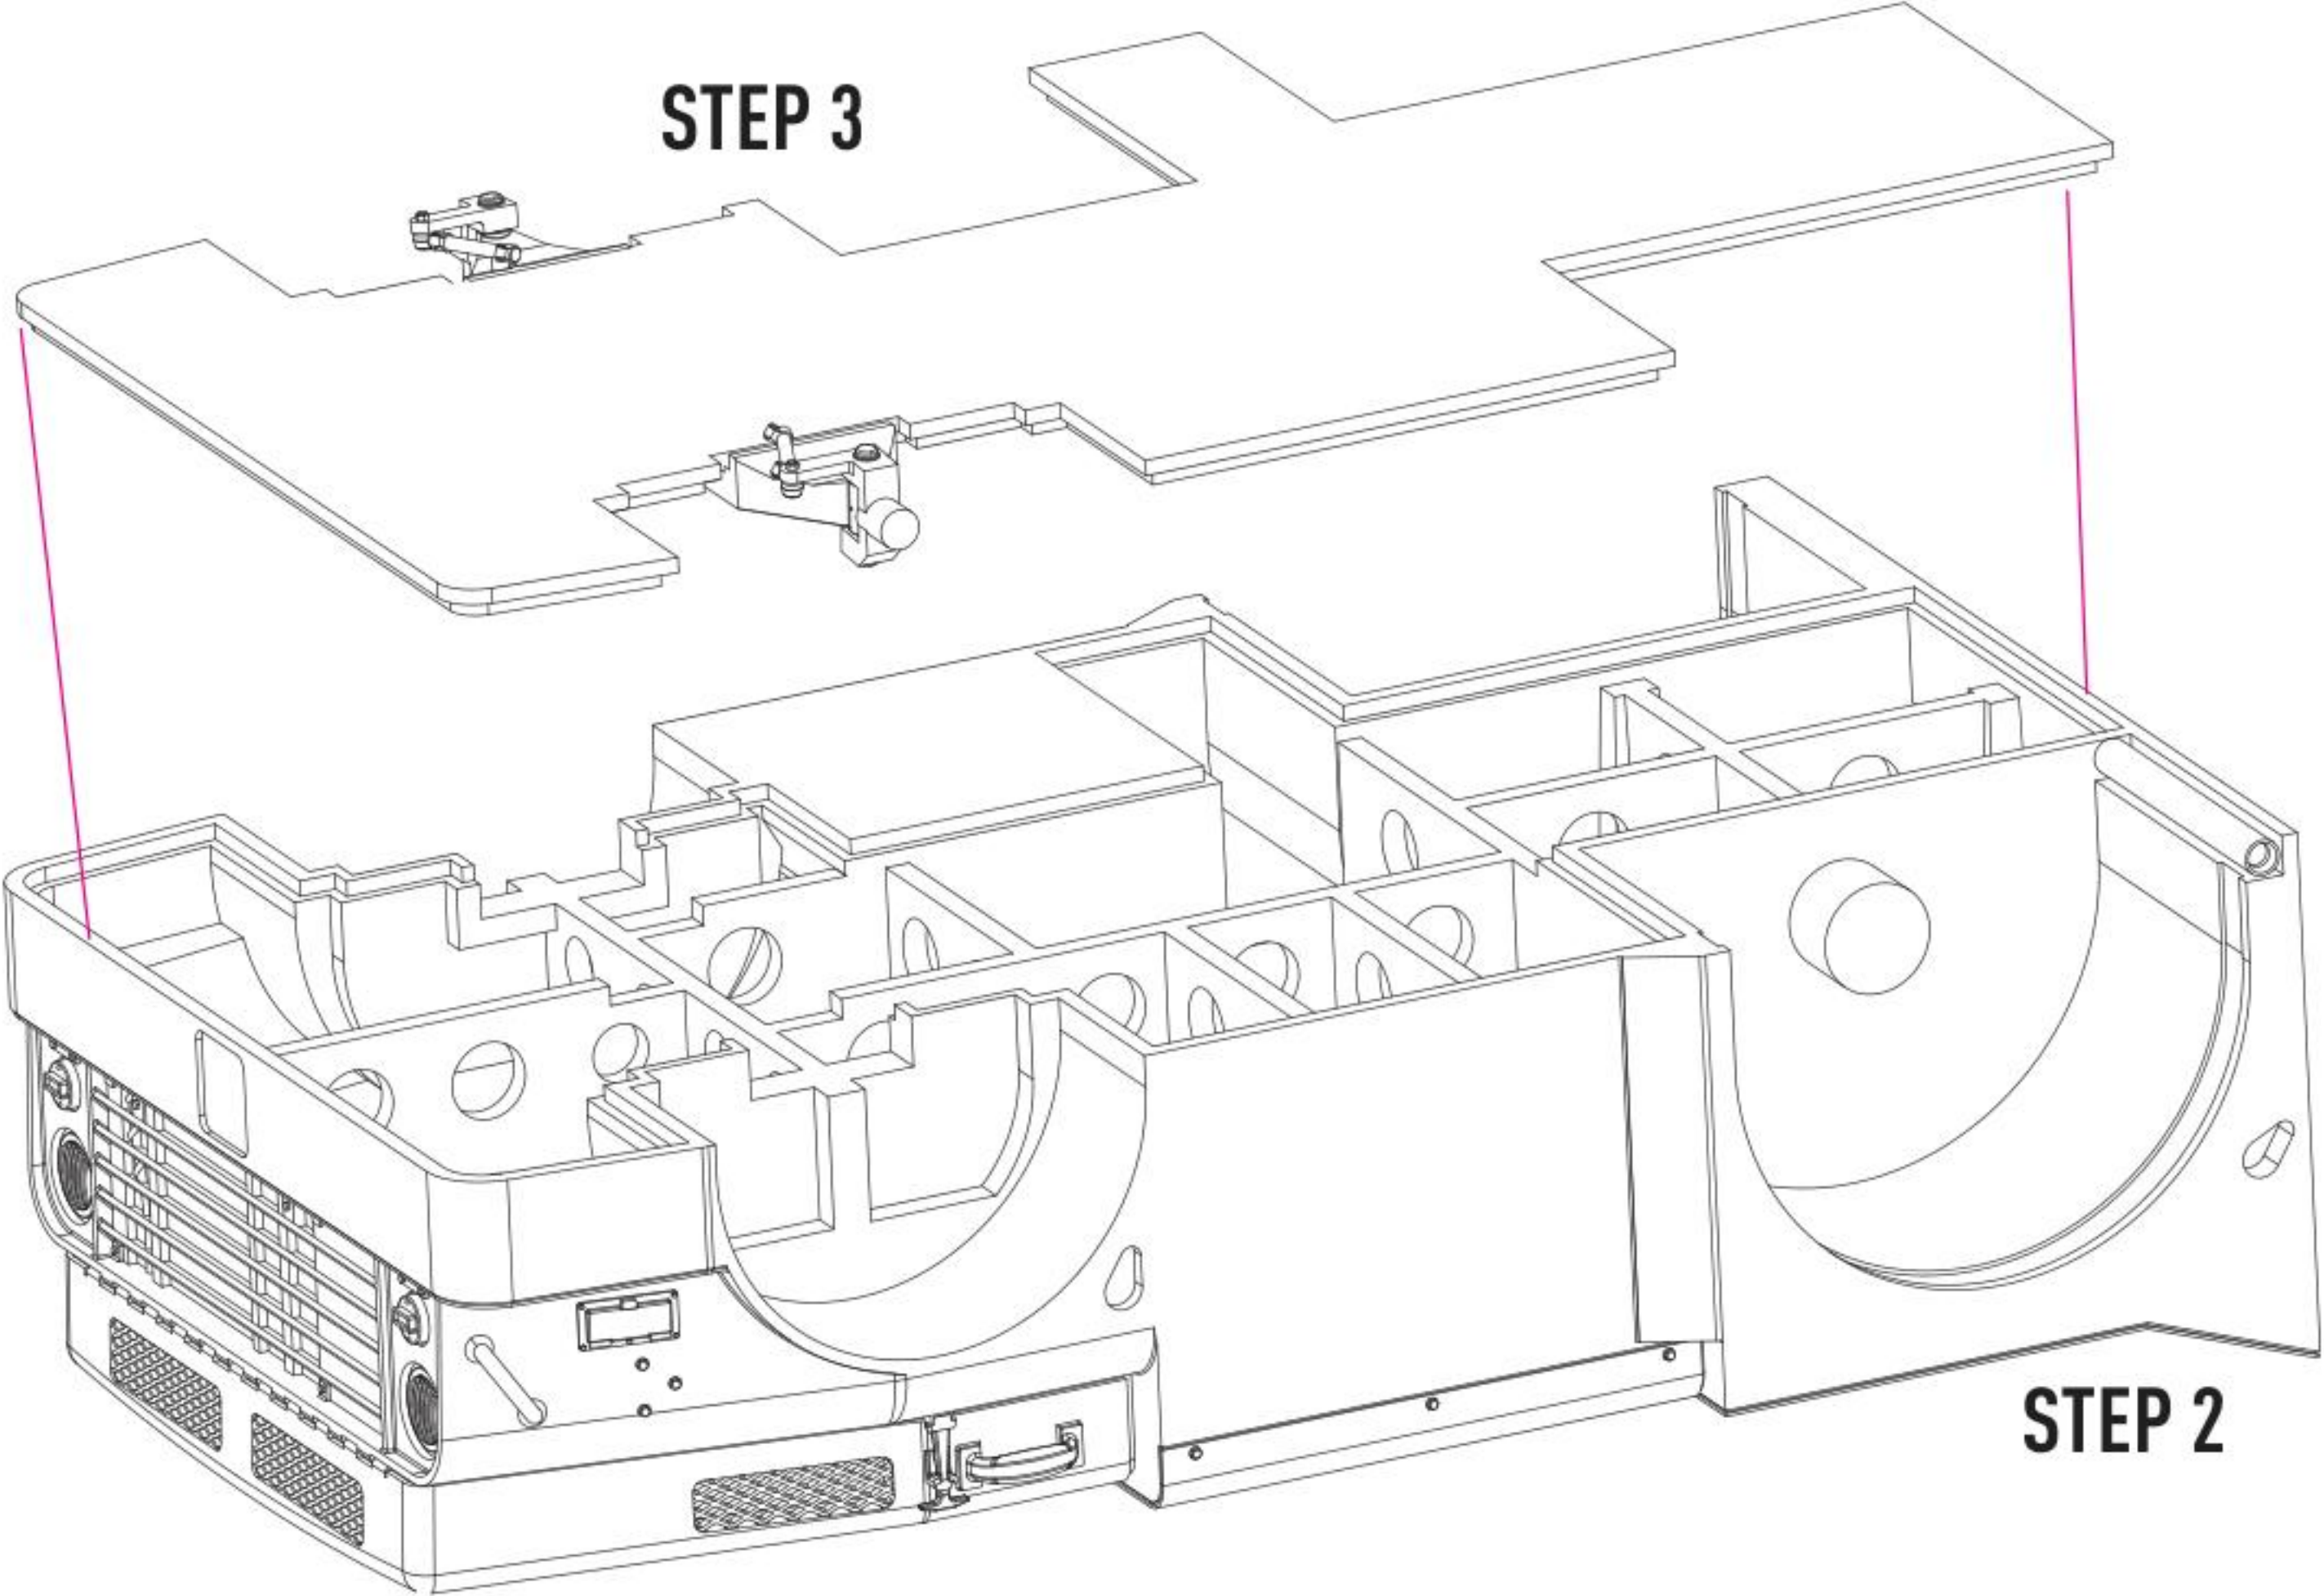


5



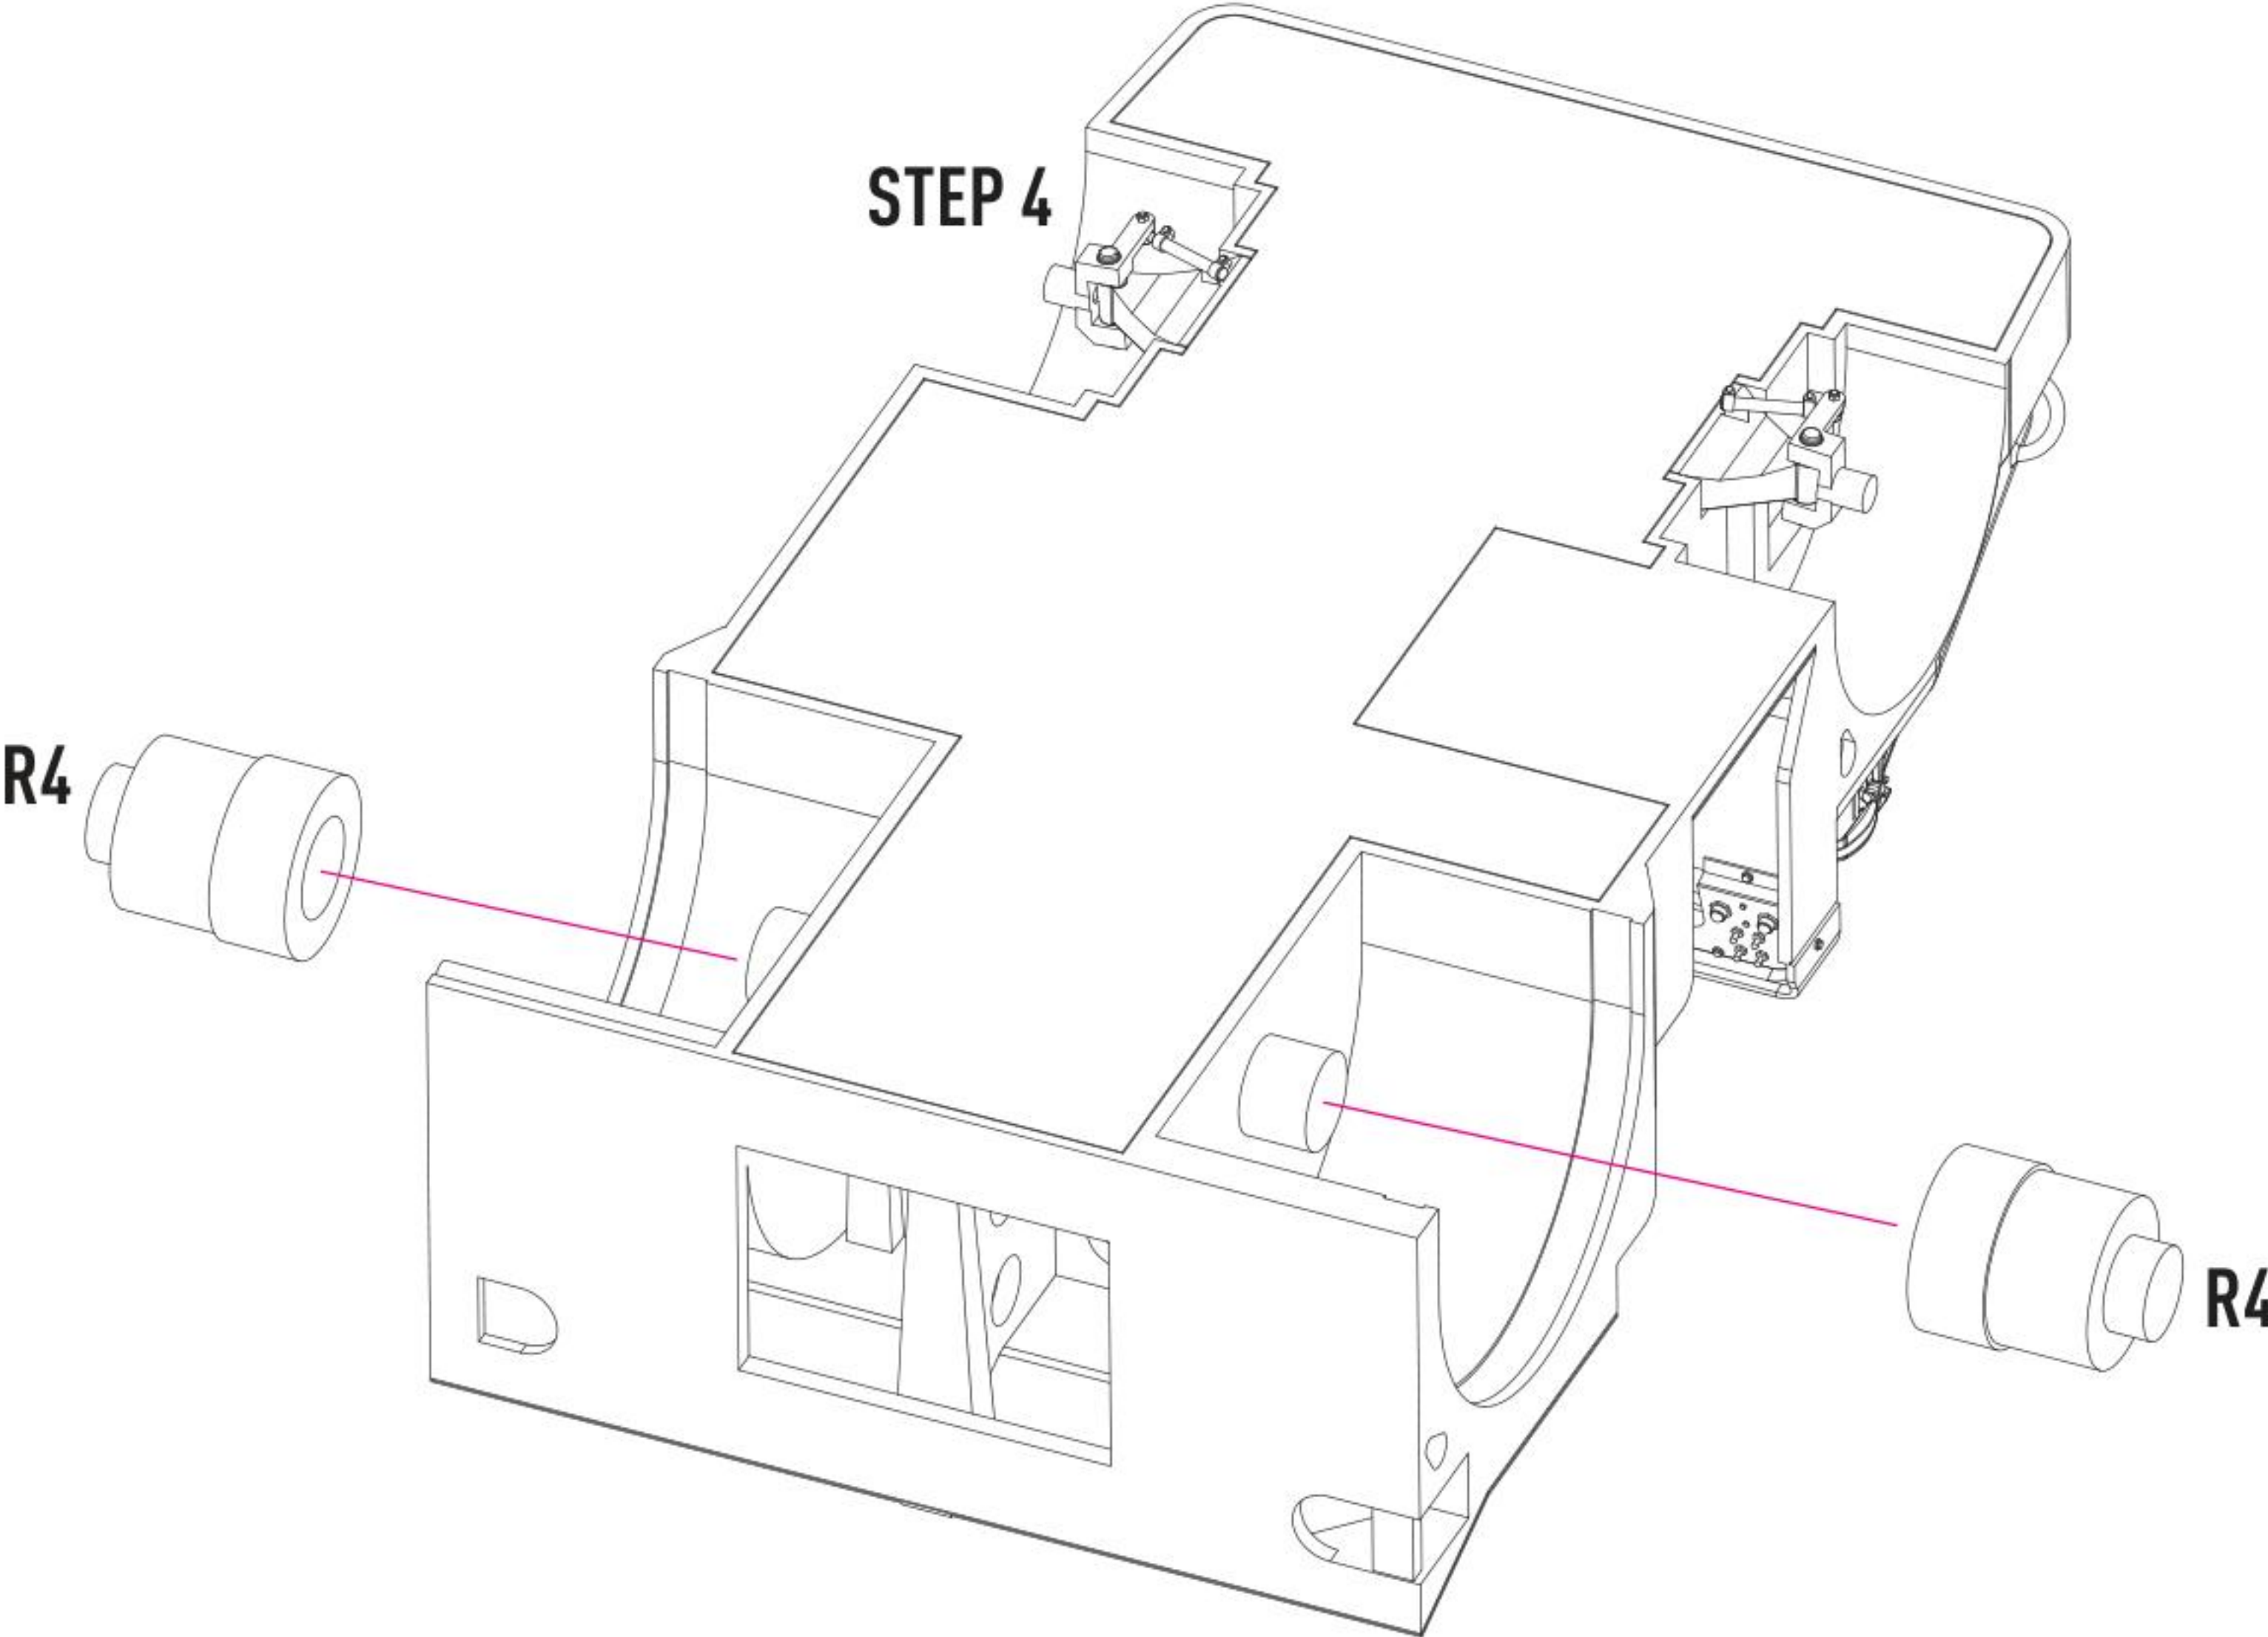




6 X2

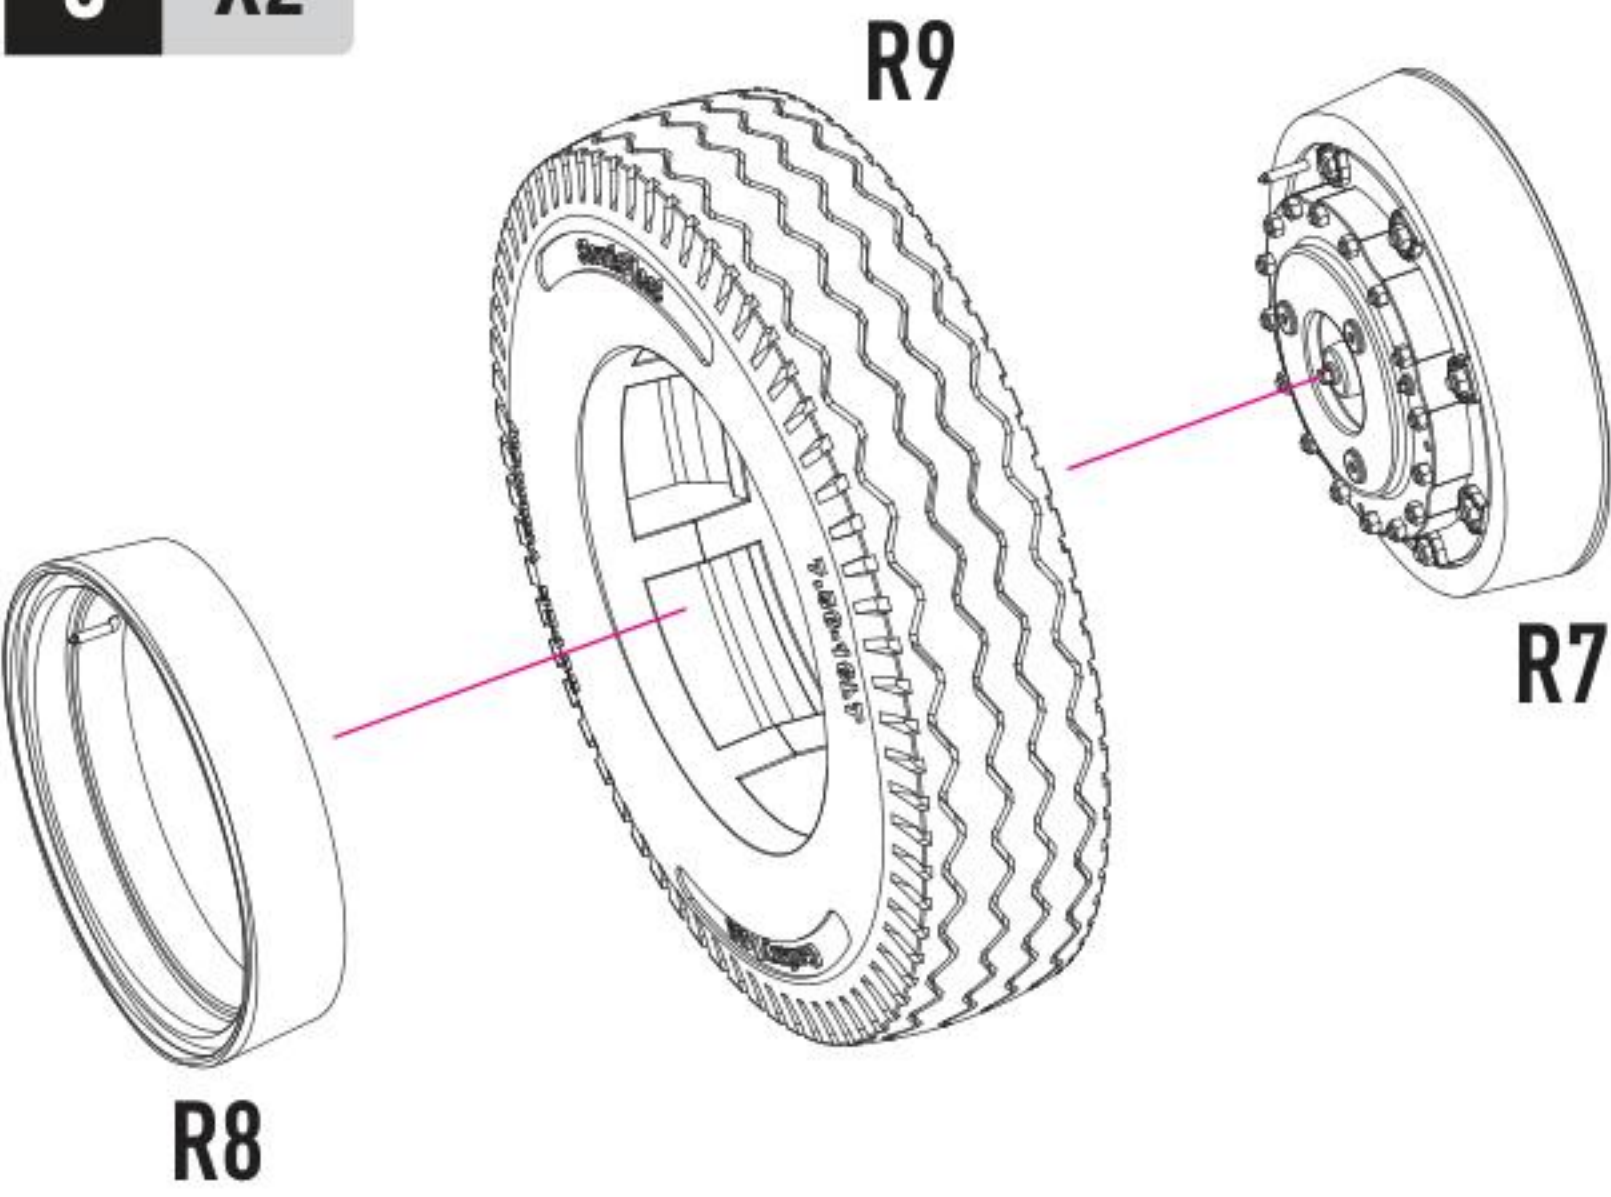


7 X2

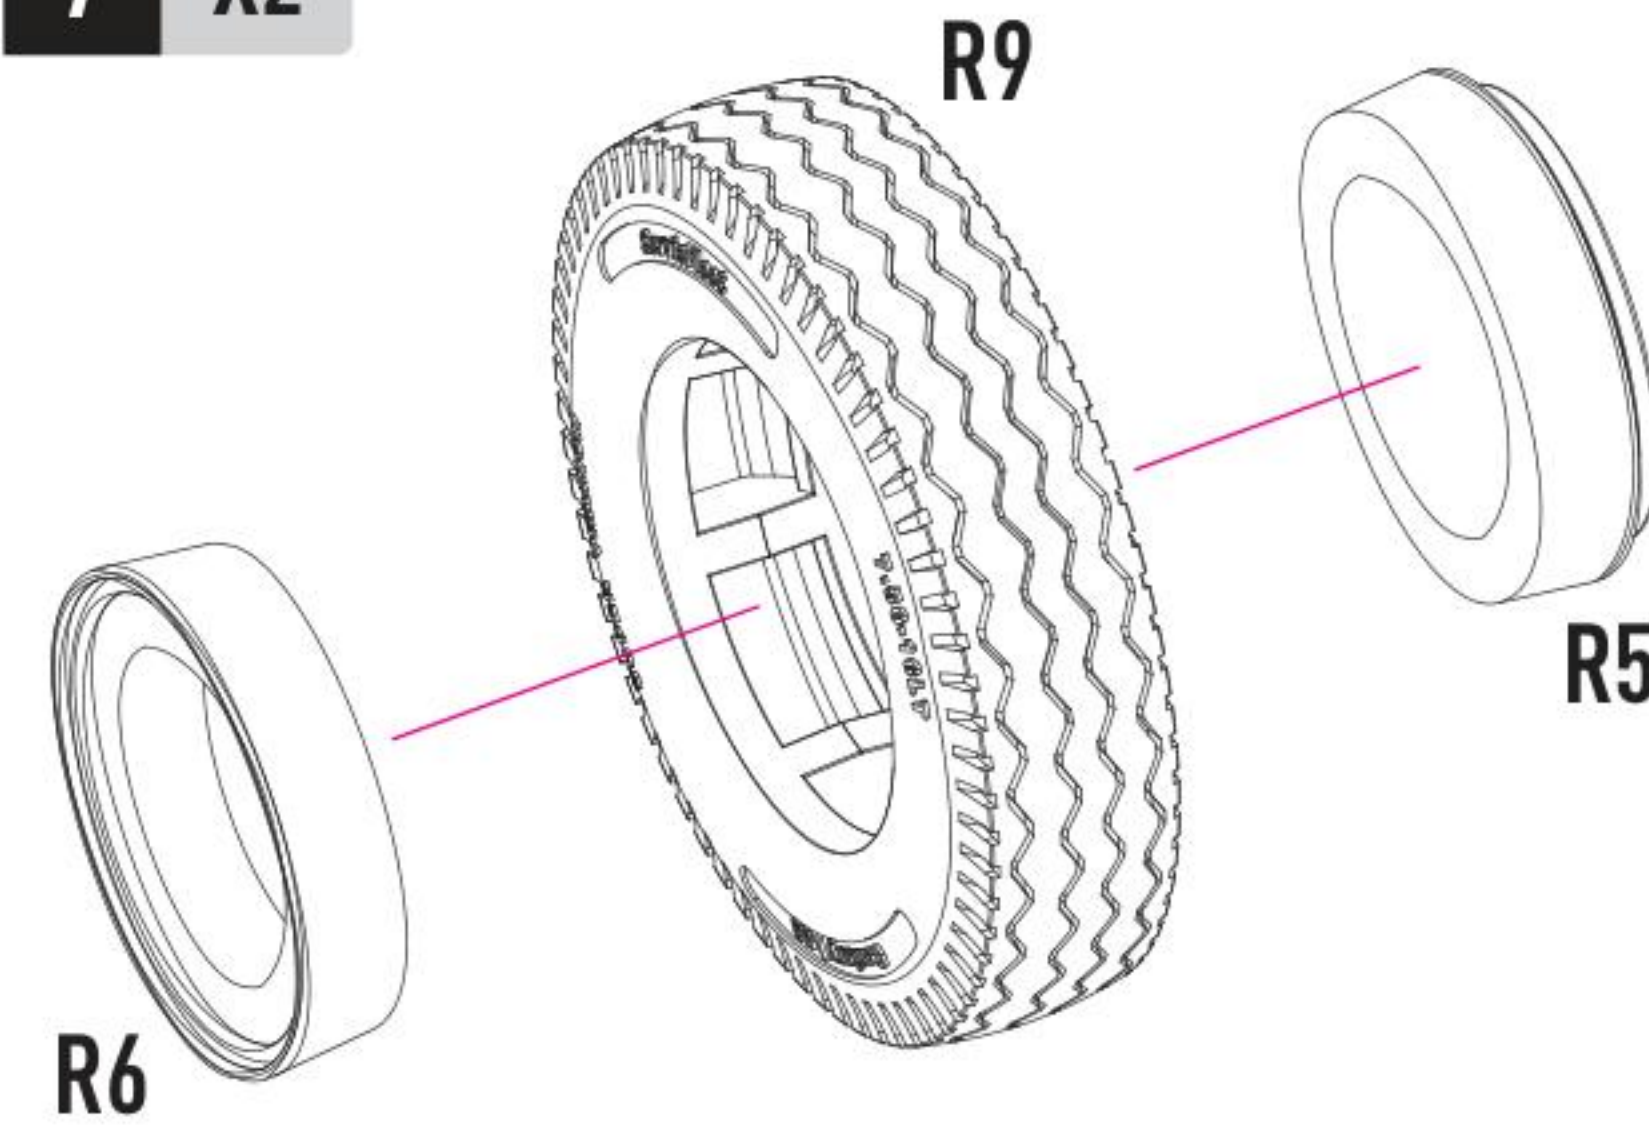

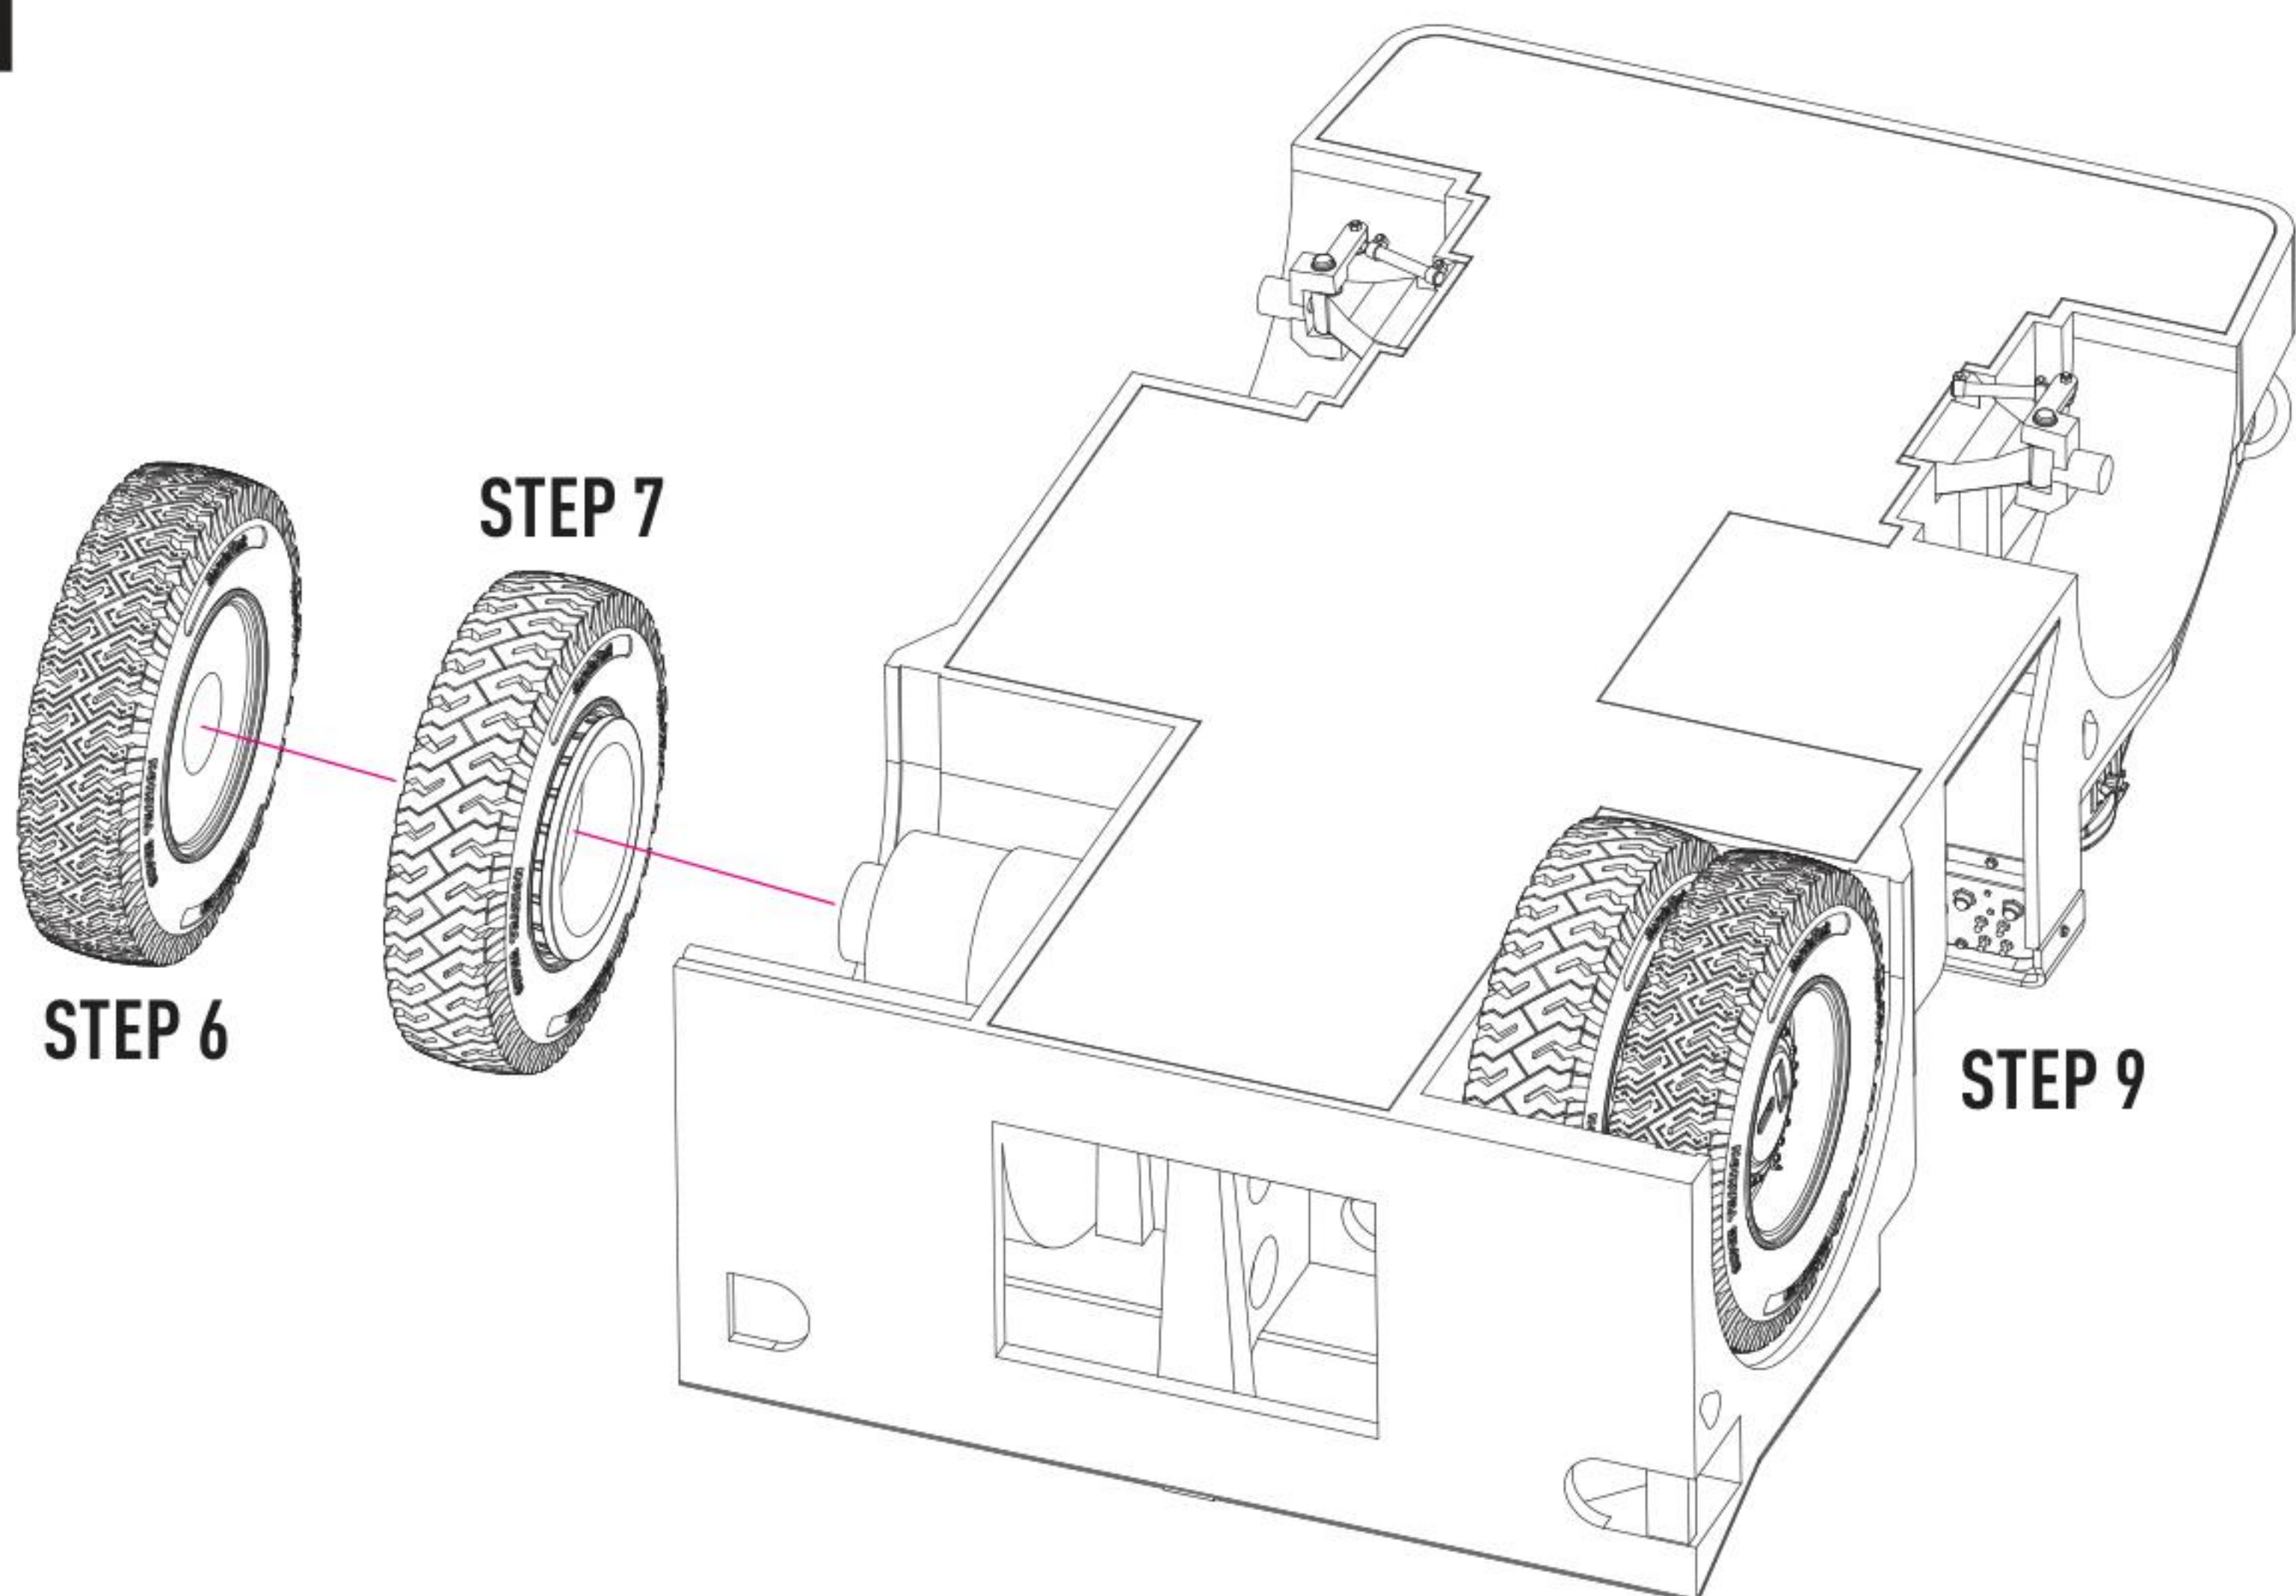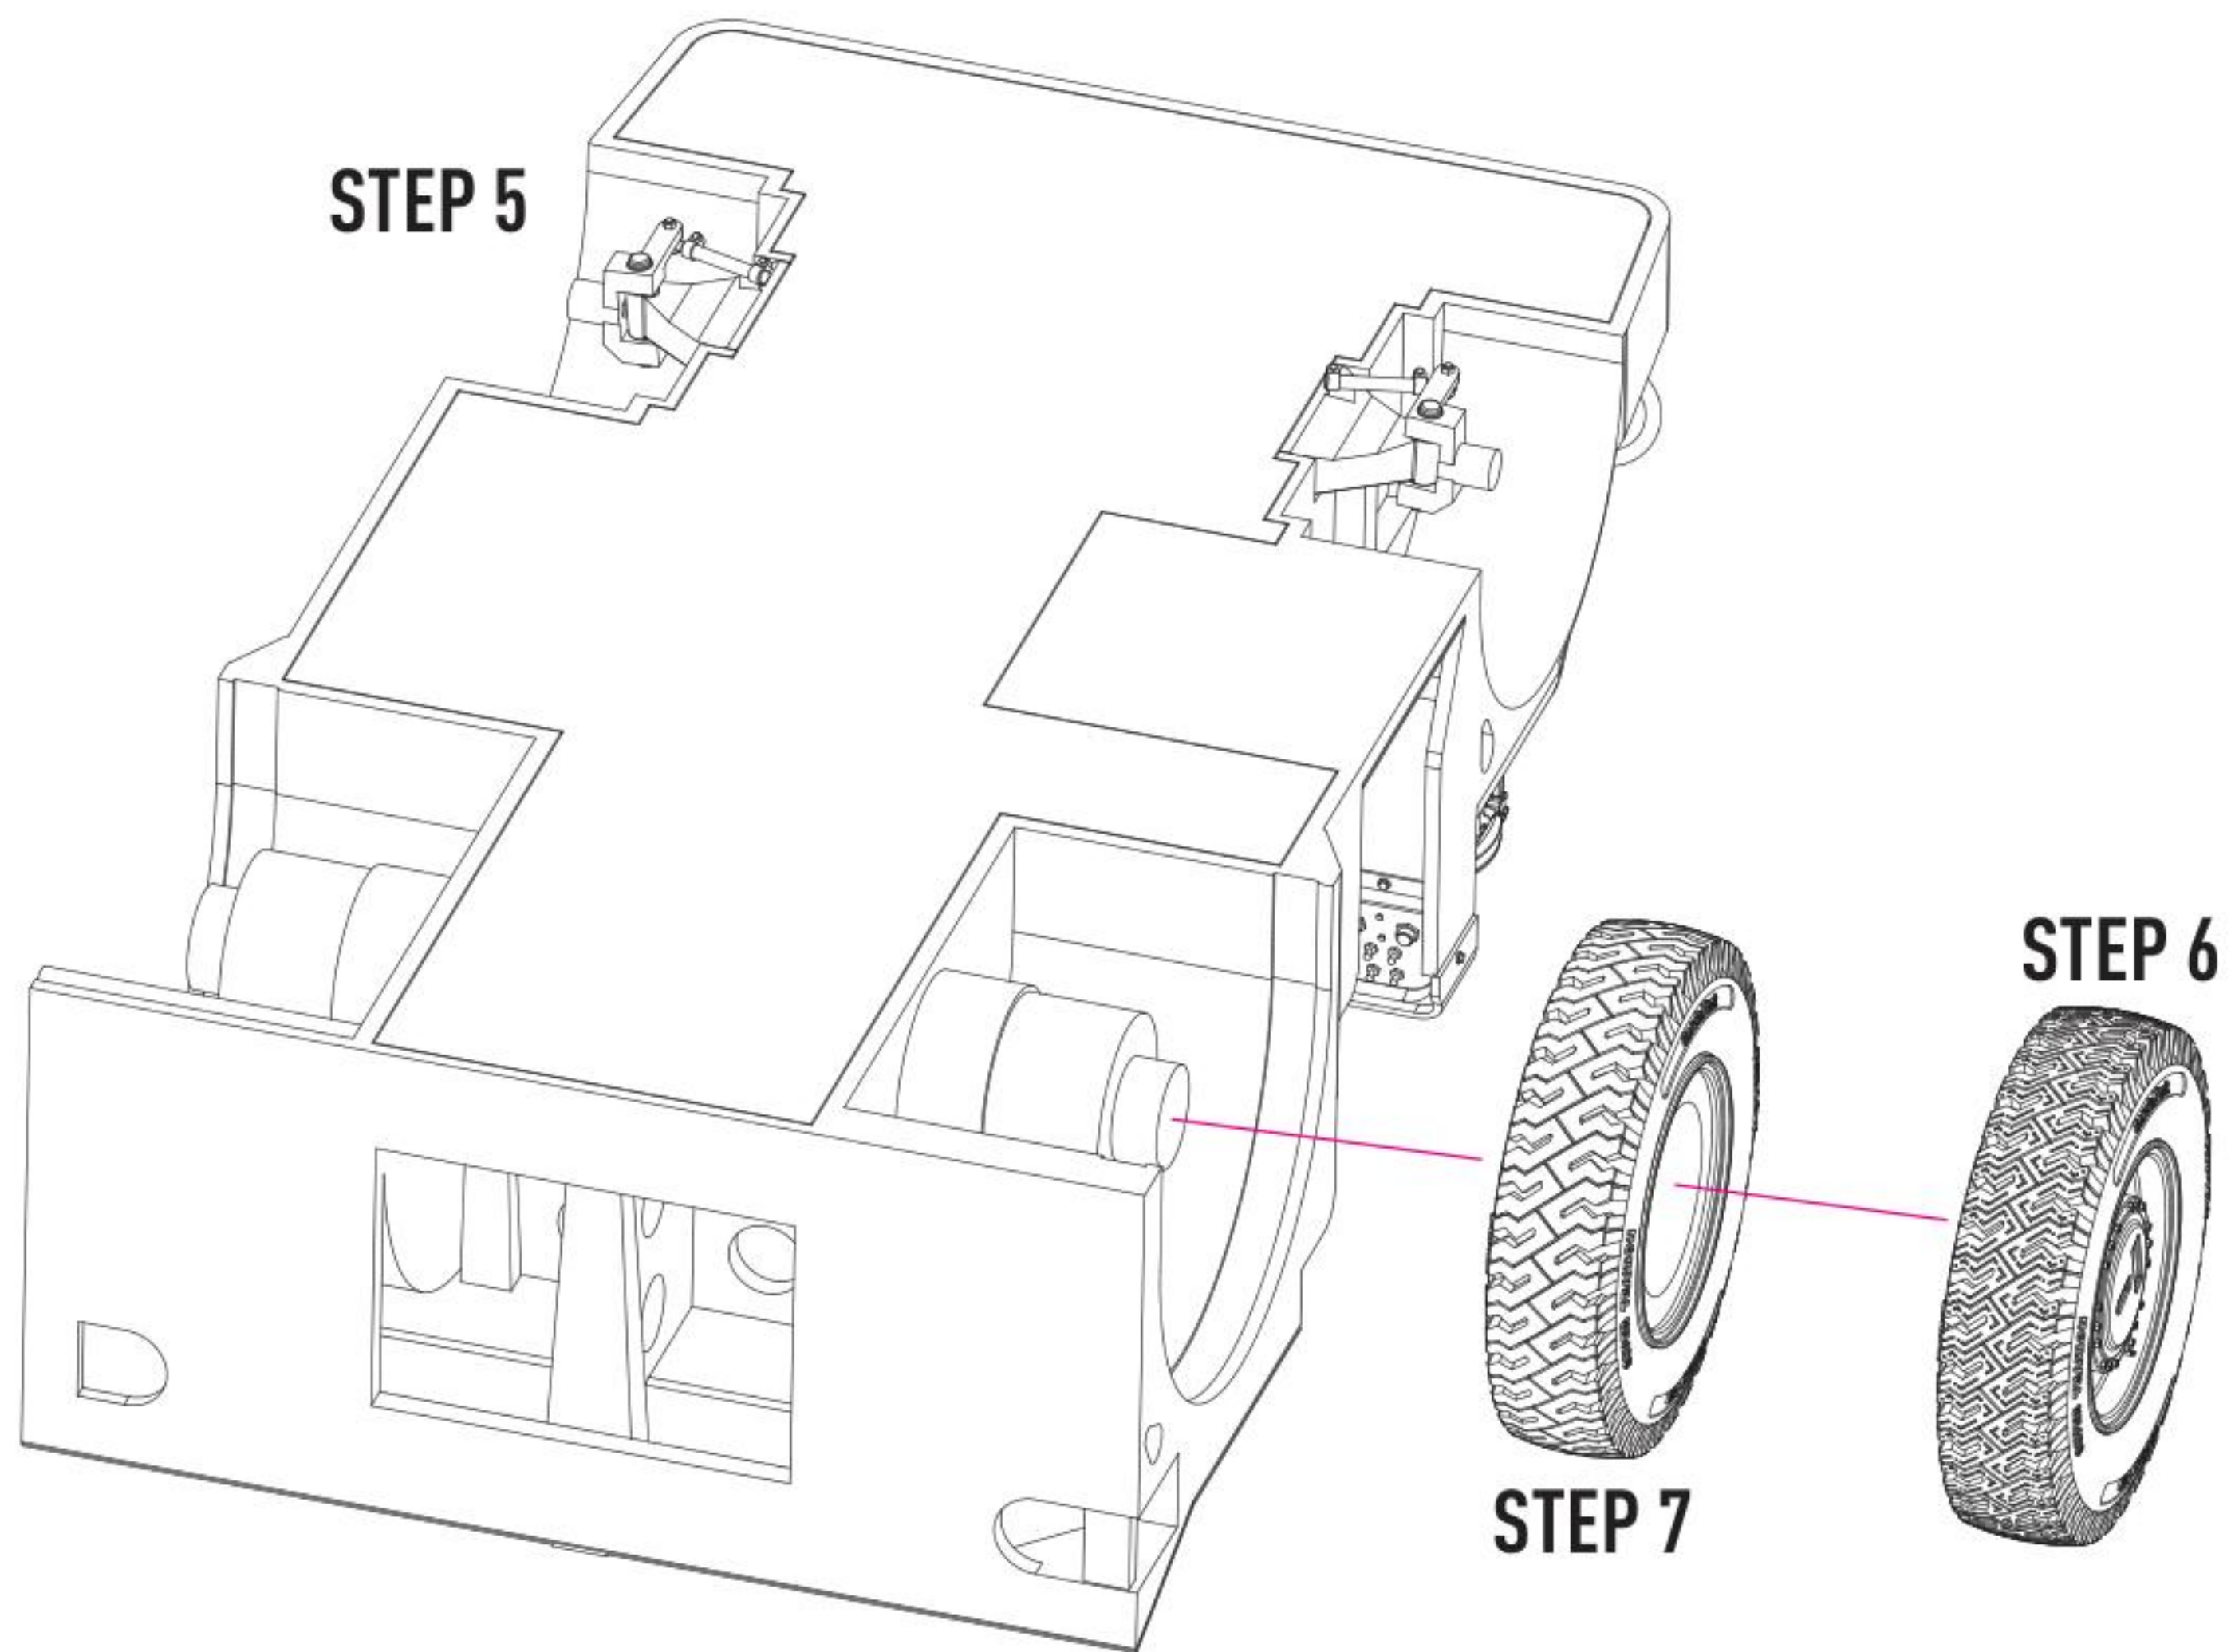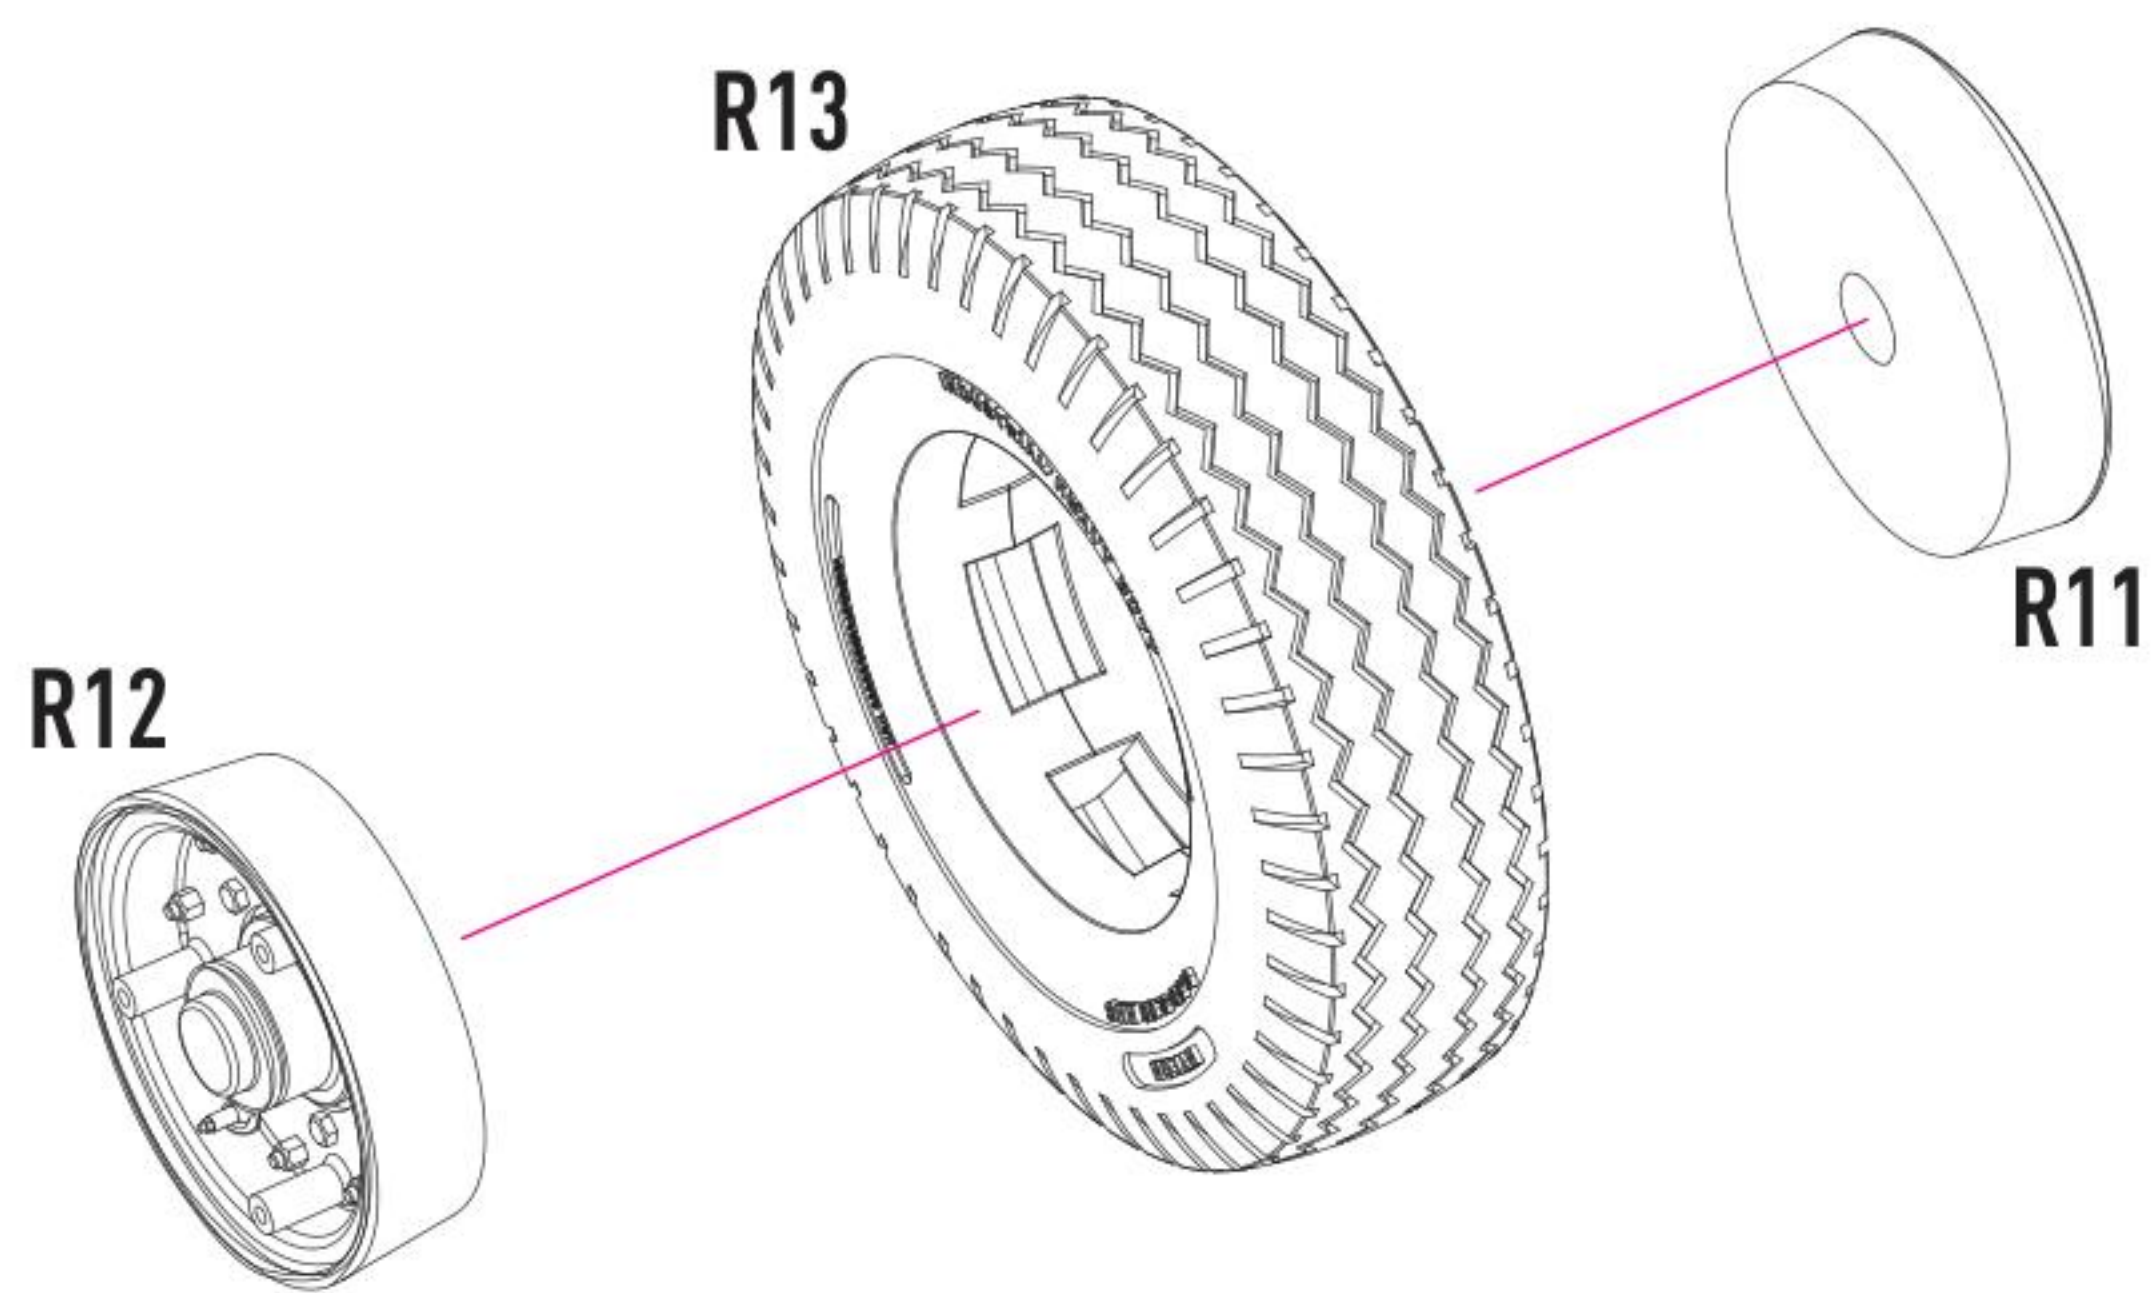


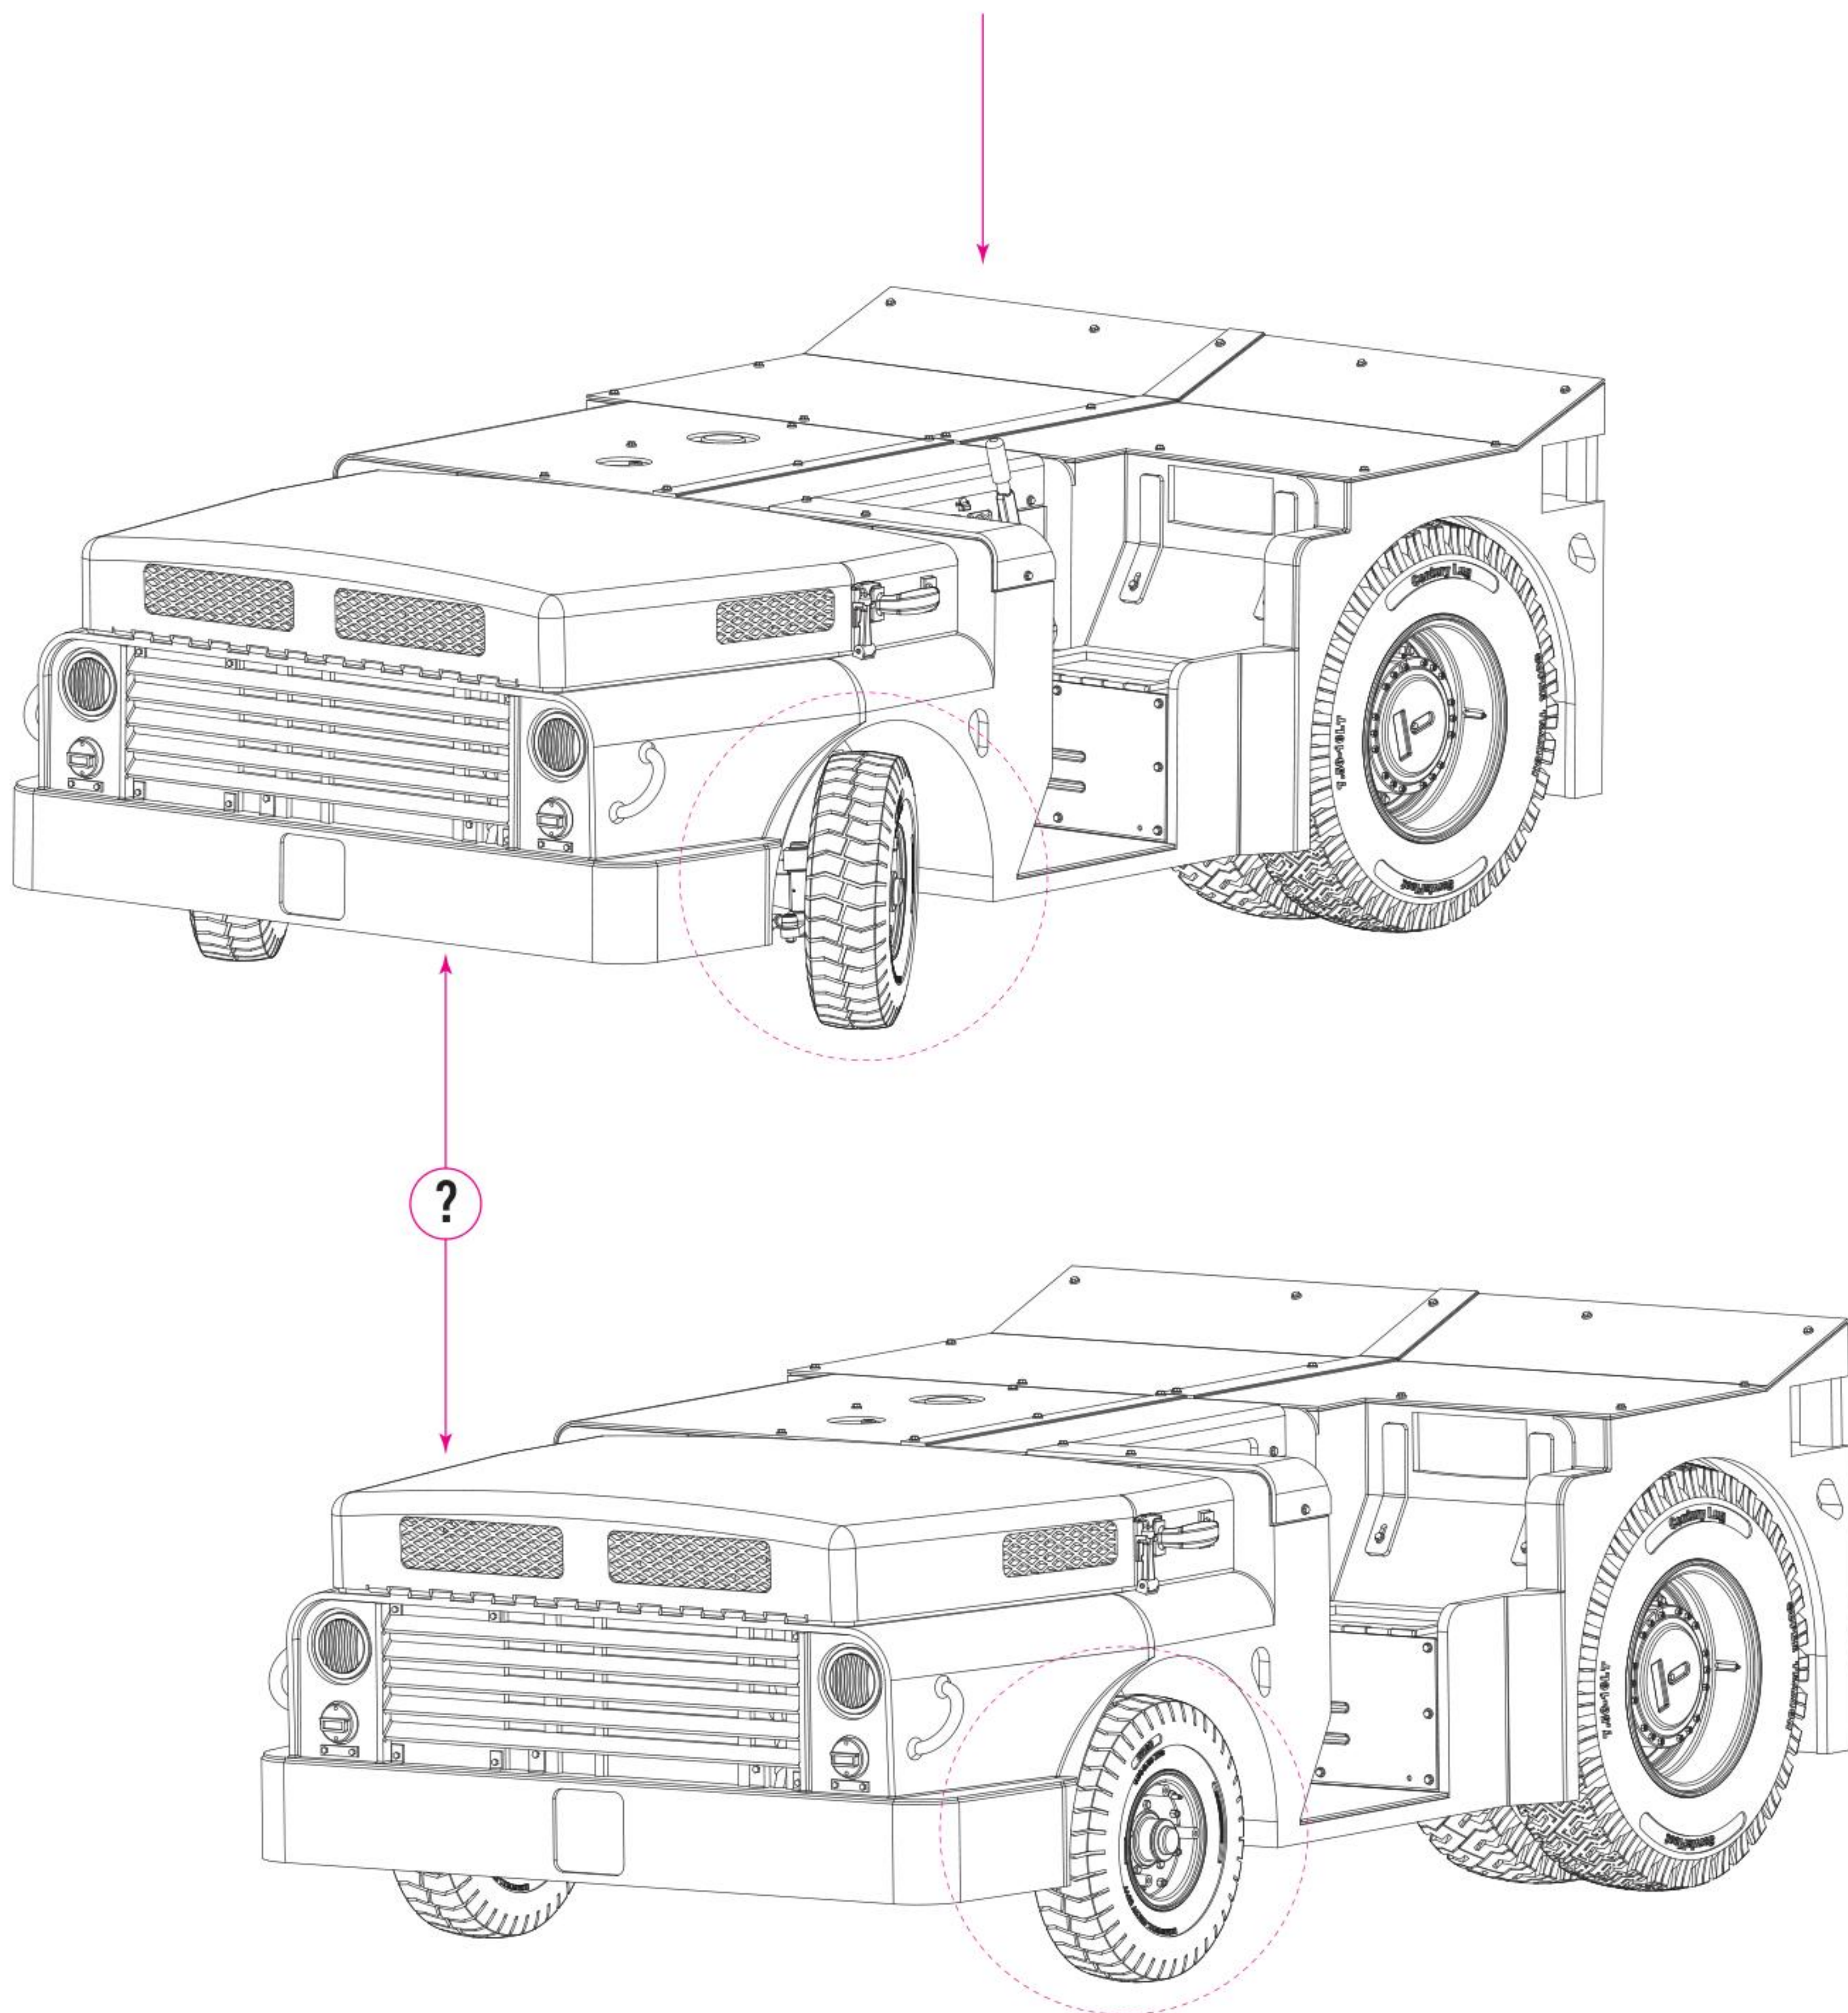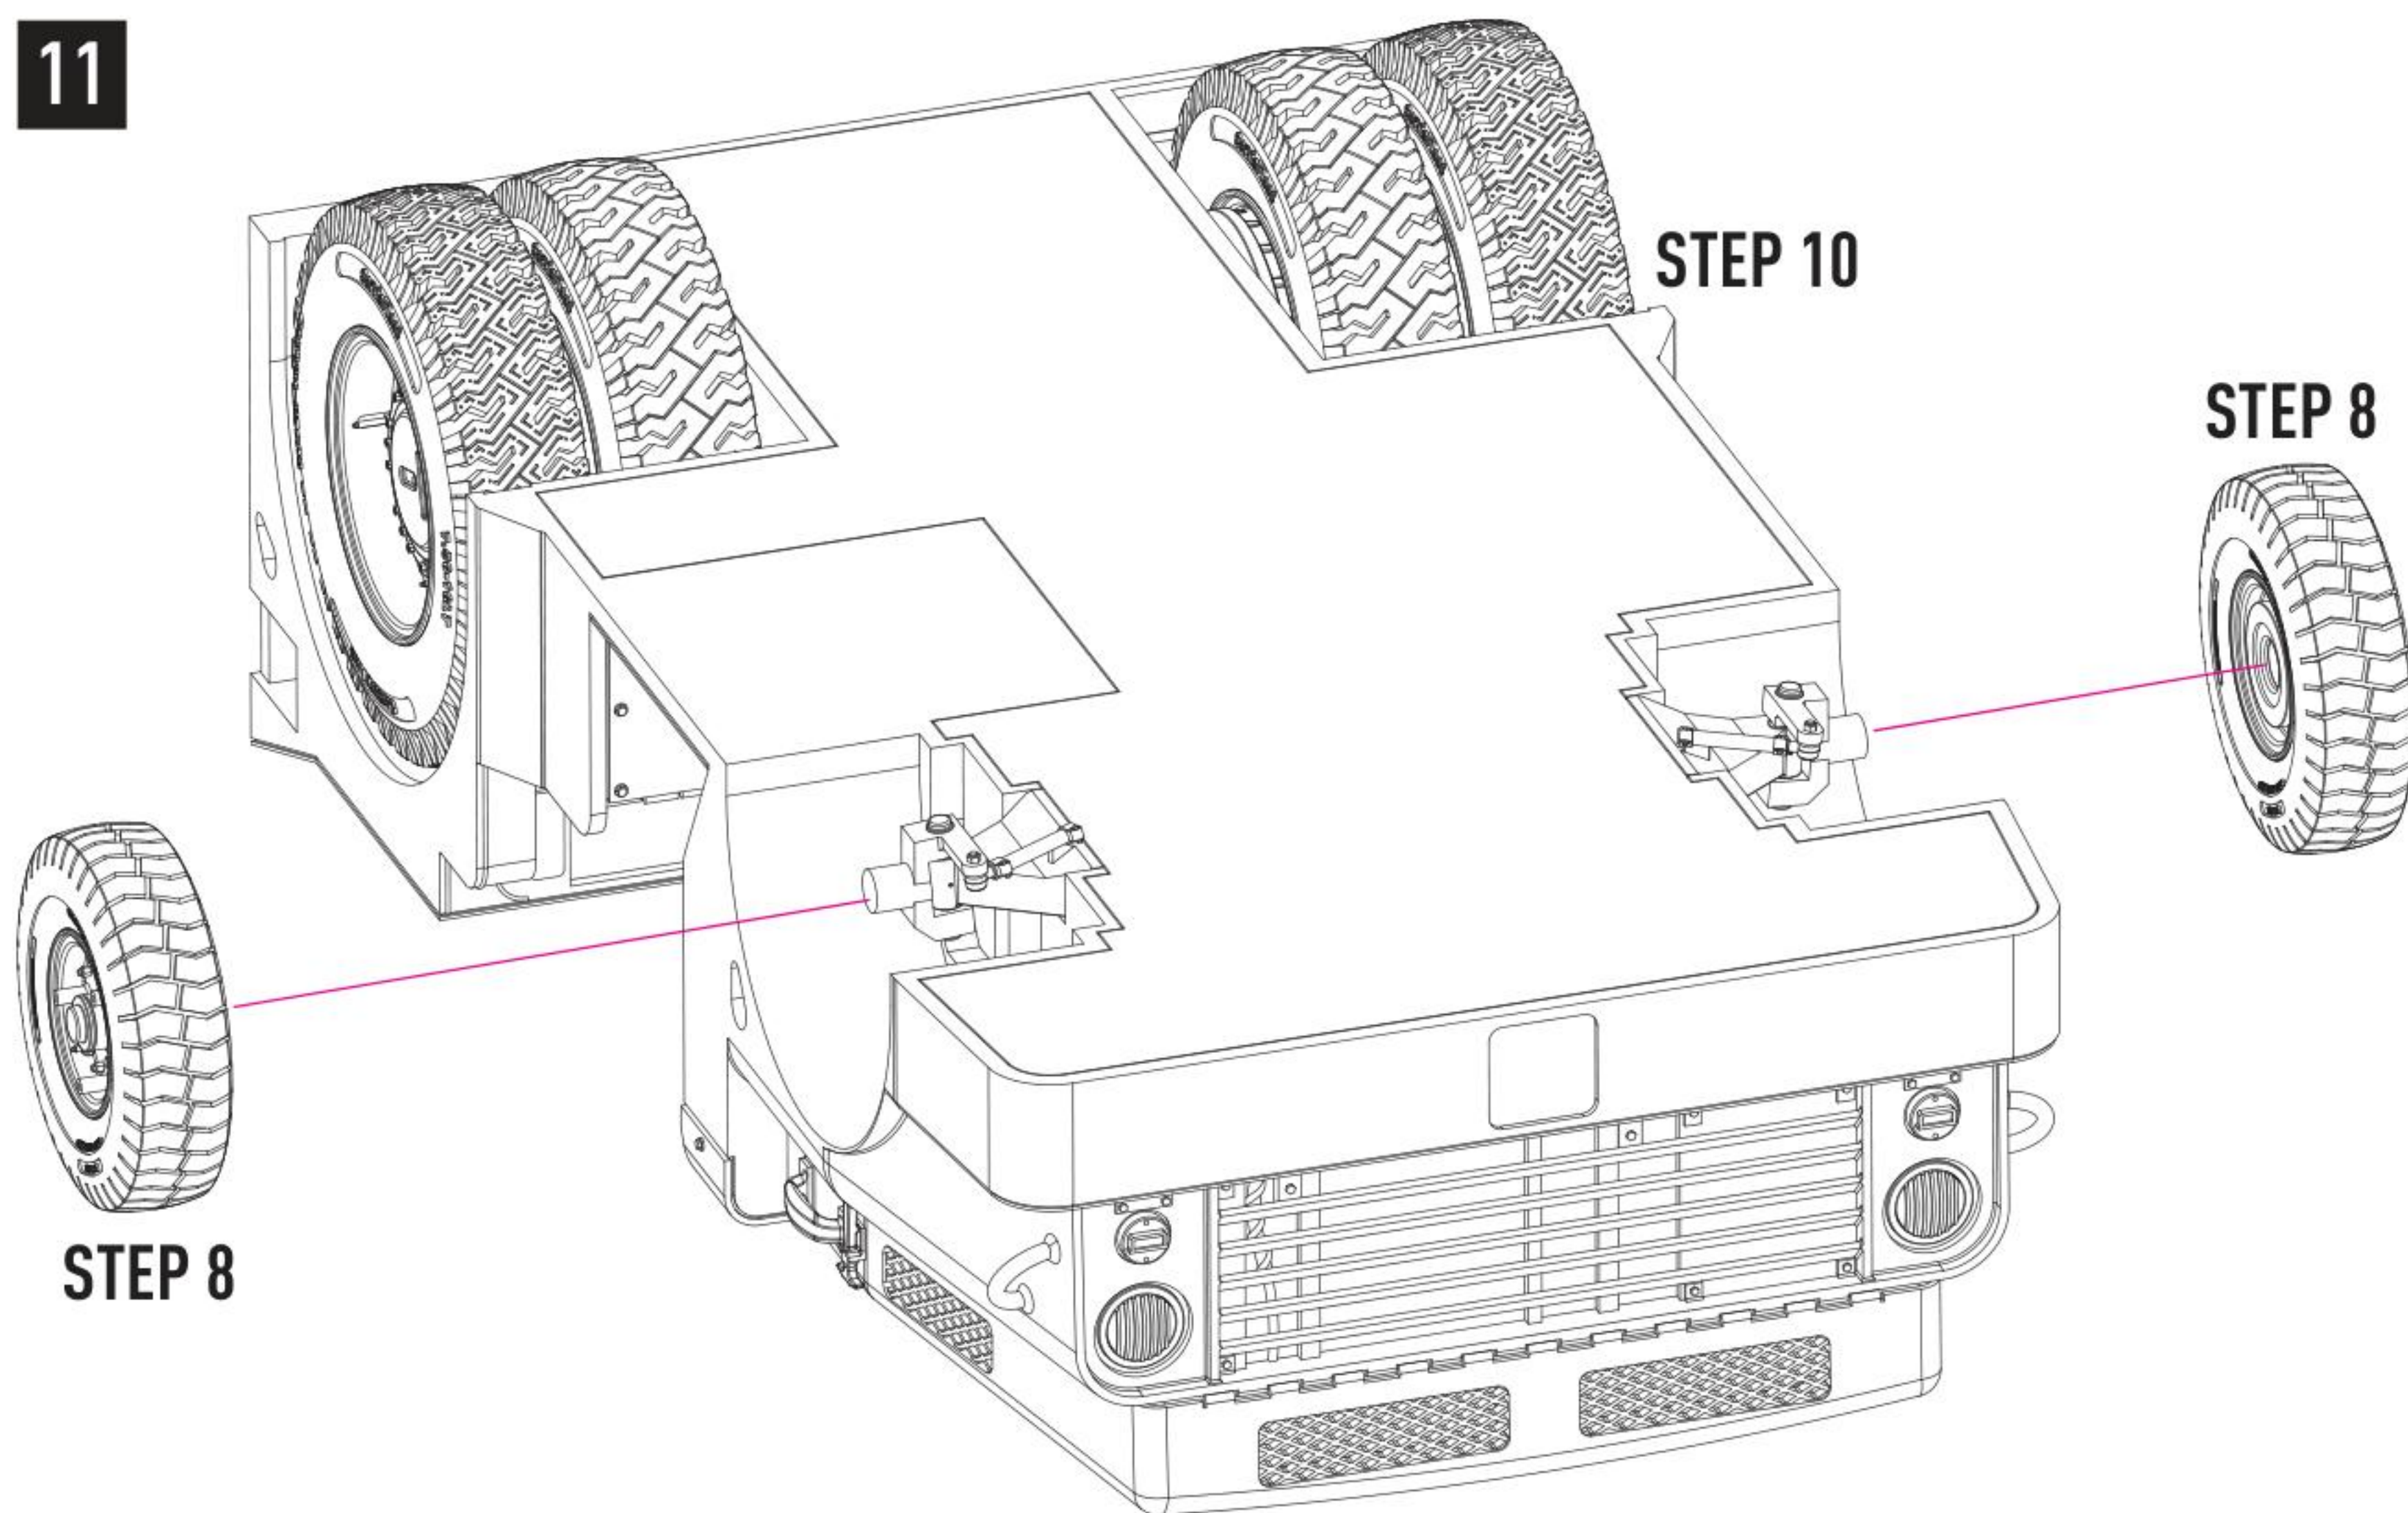


12

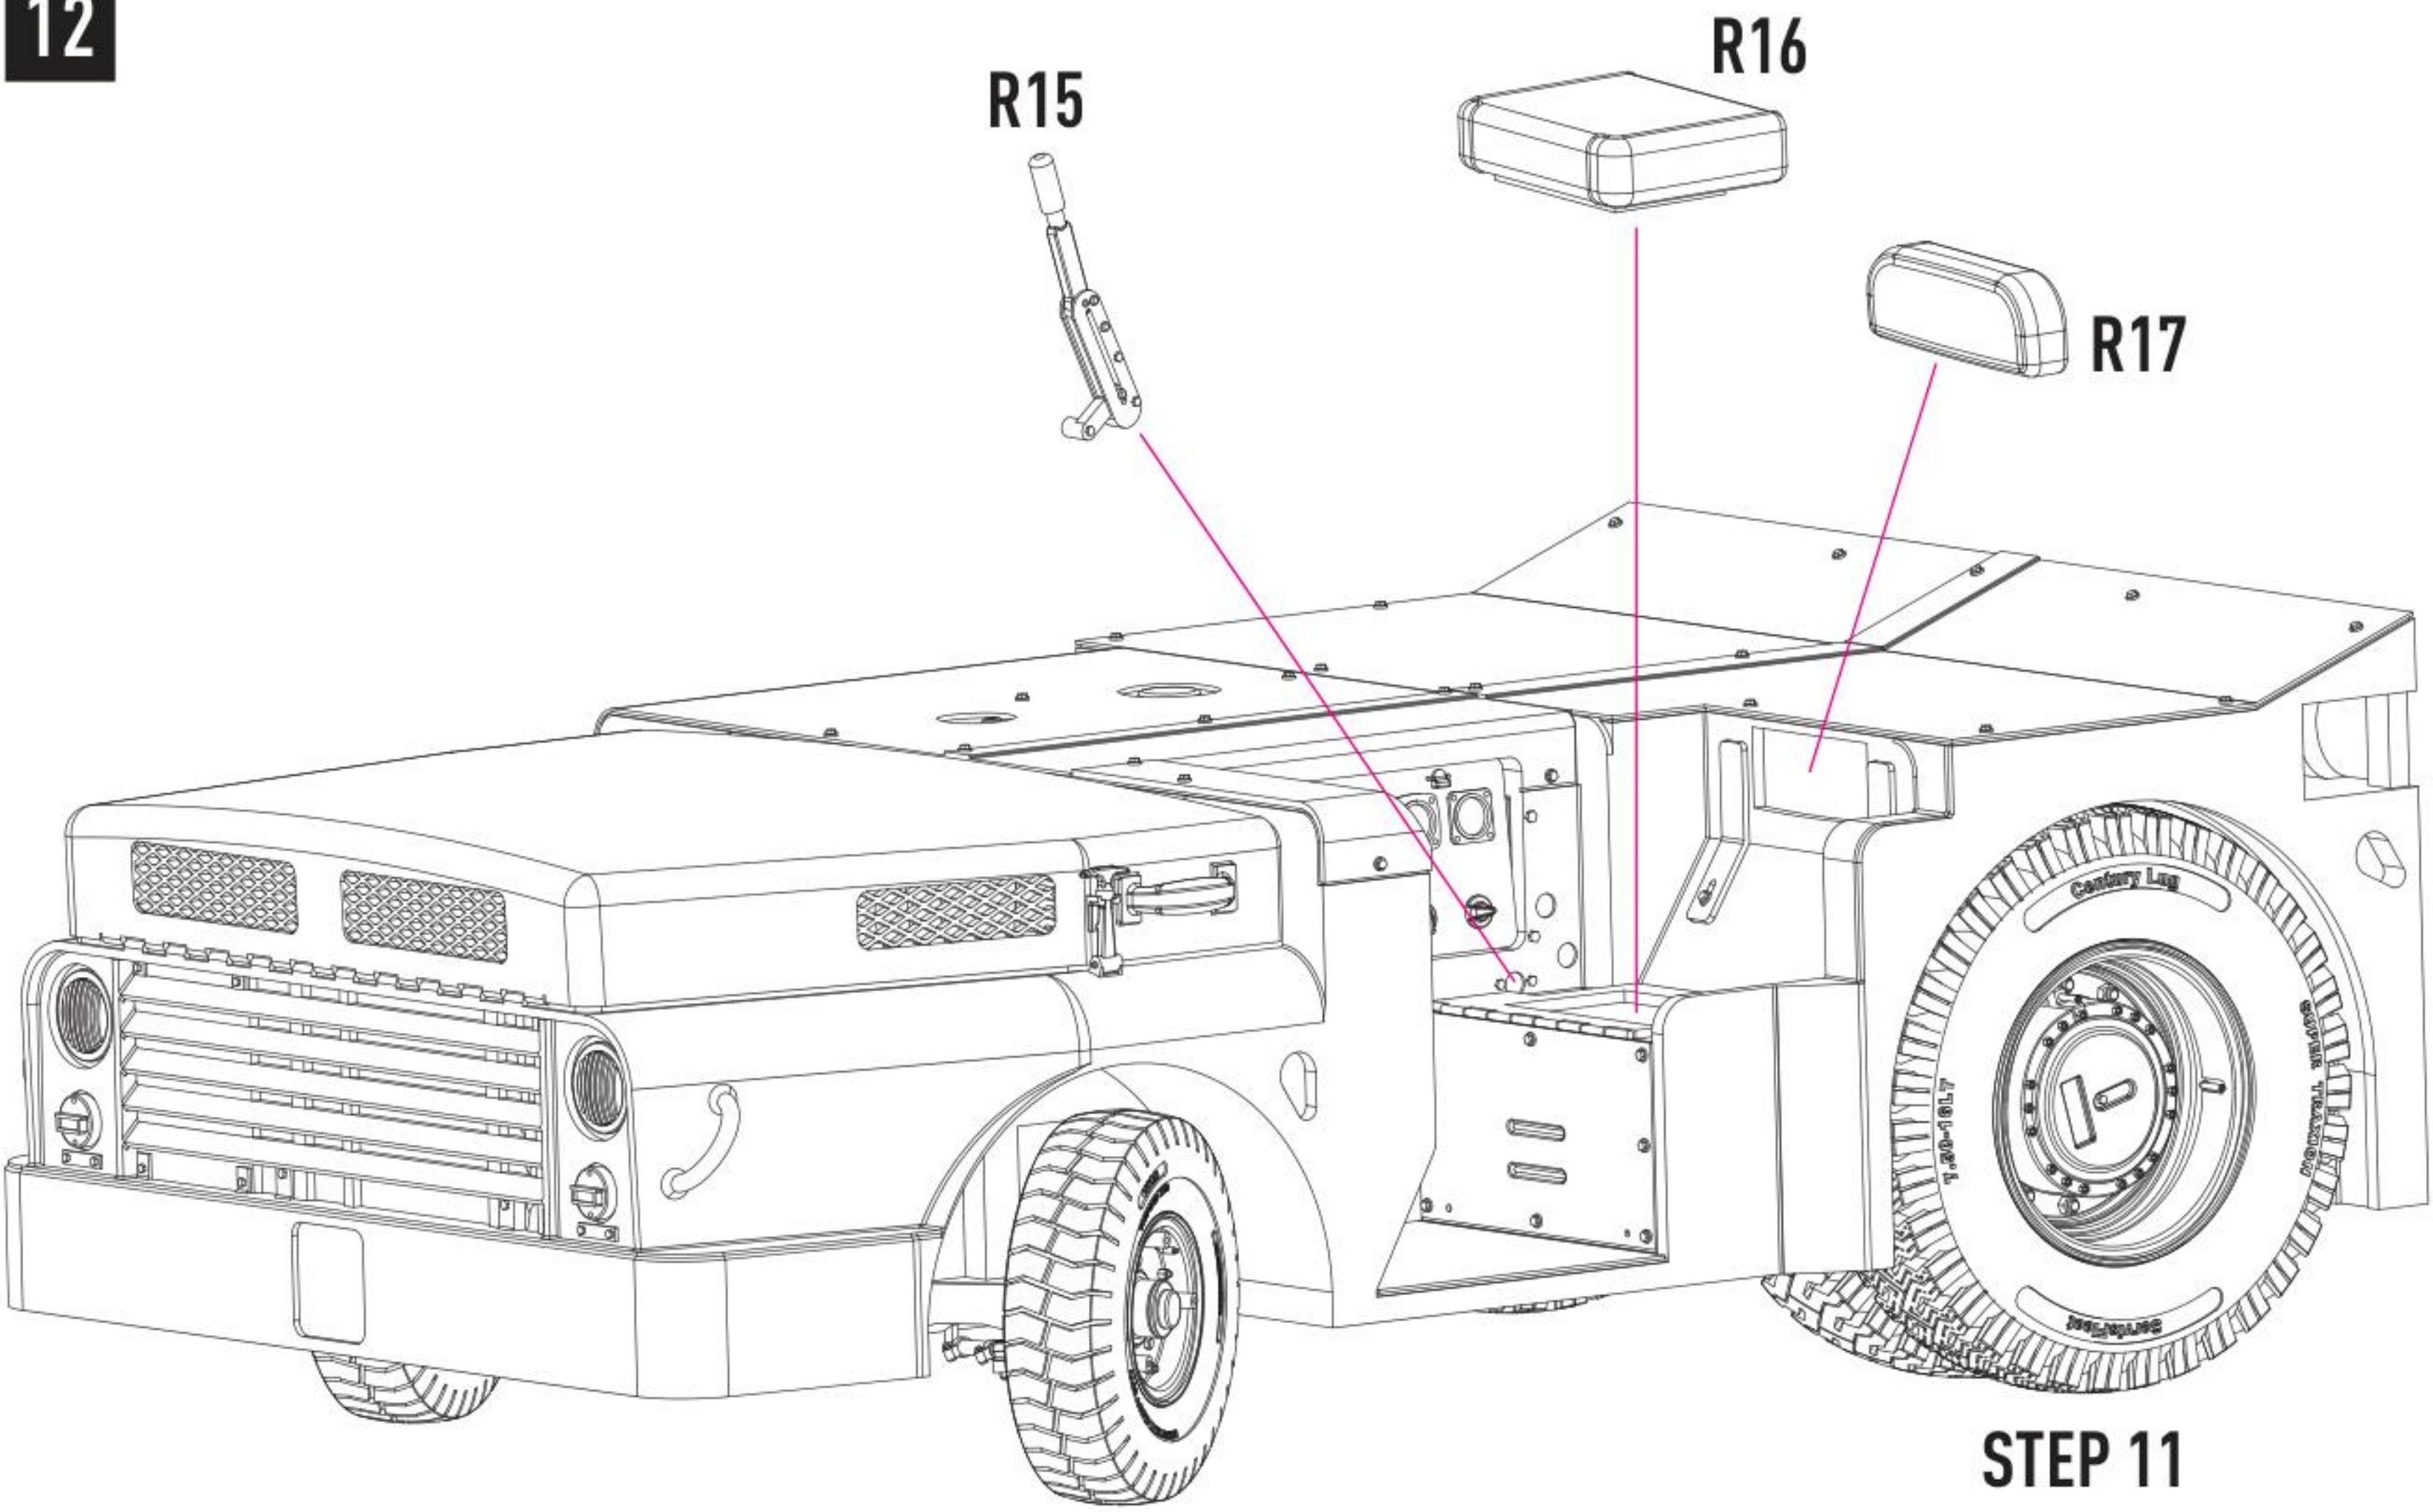

13

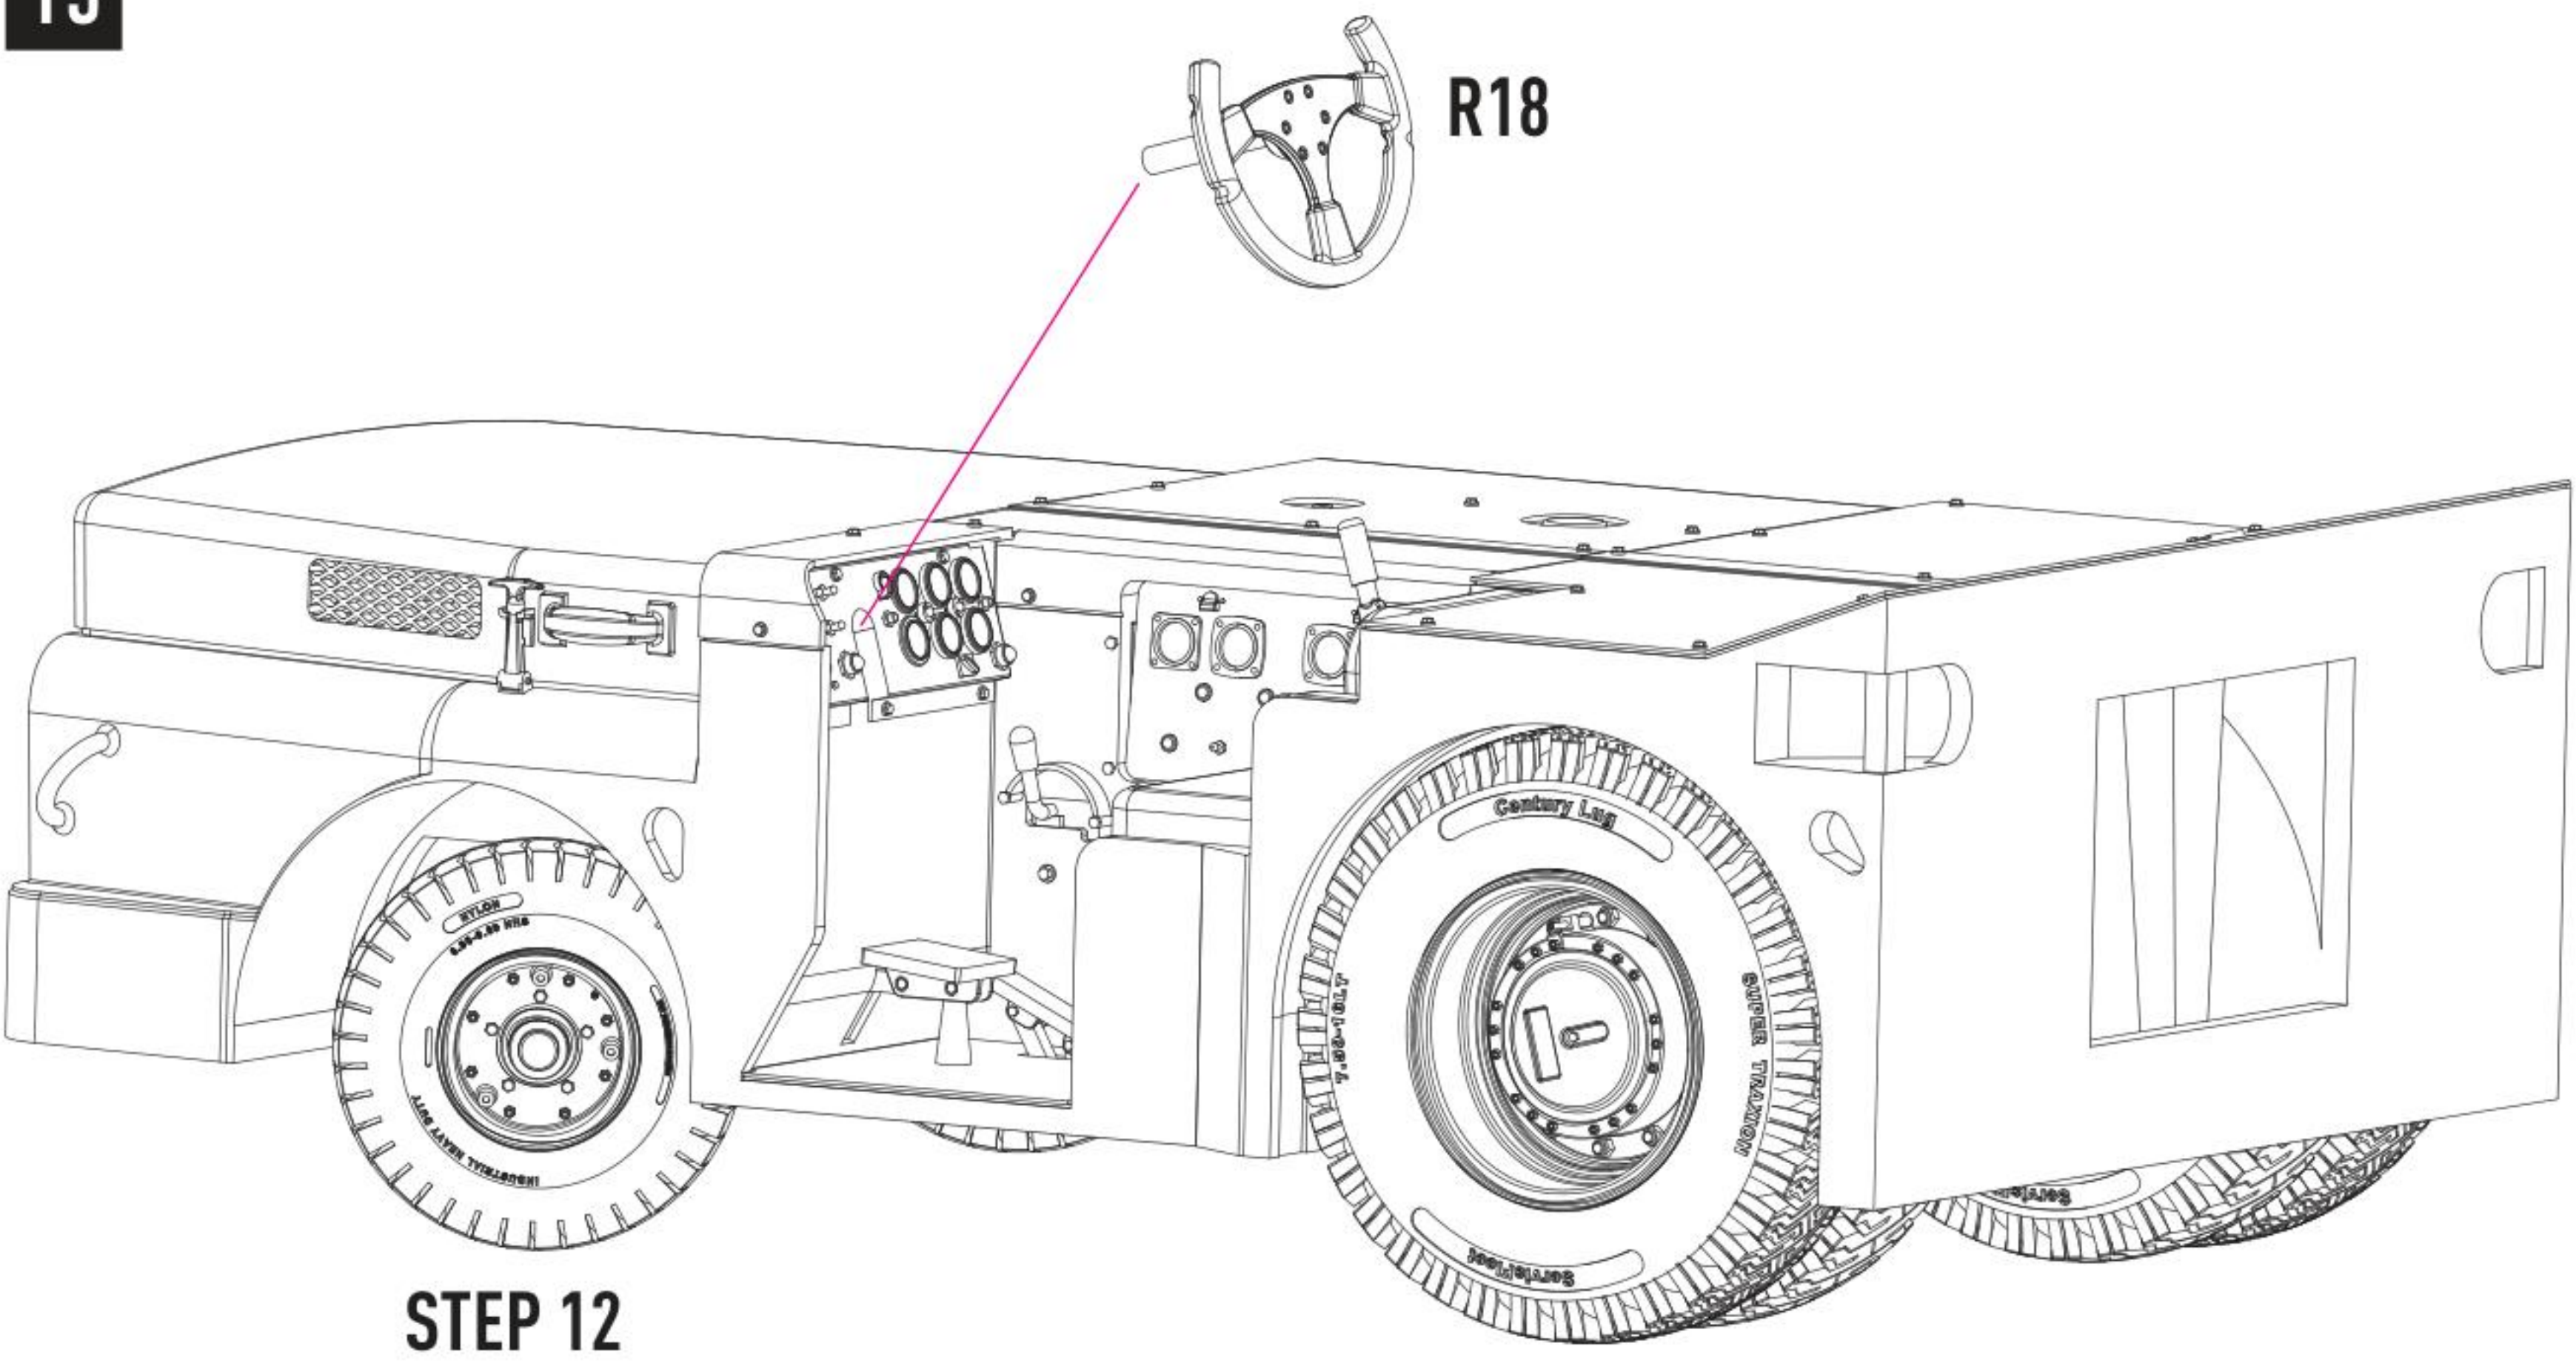


14

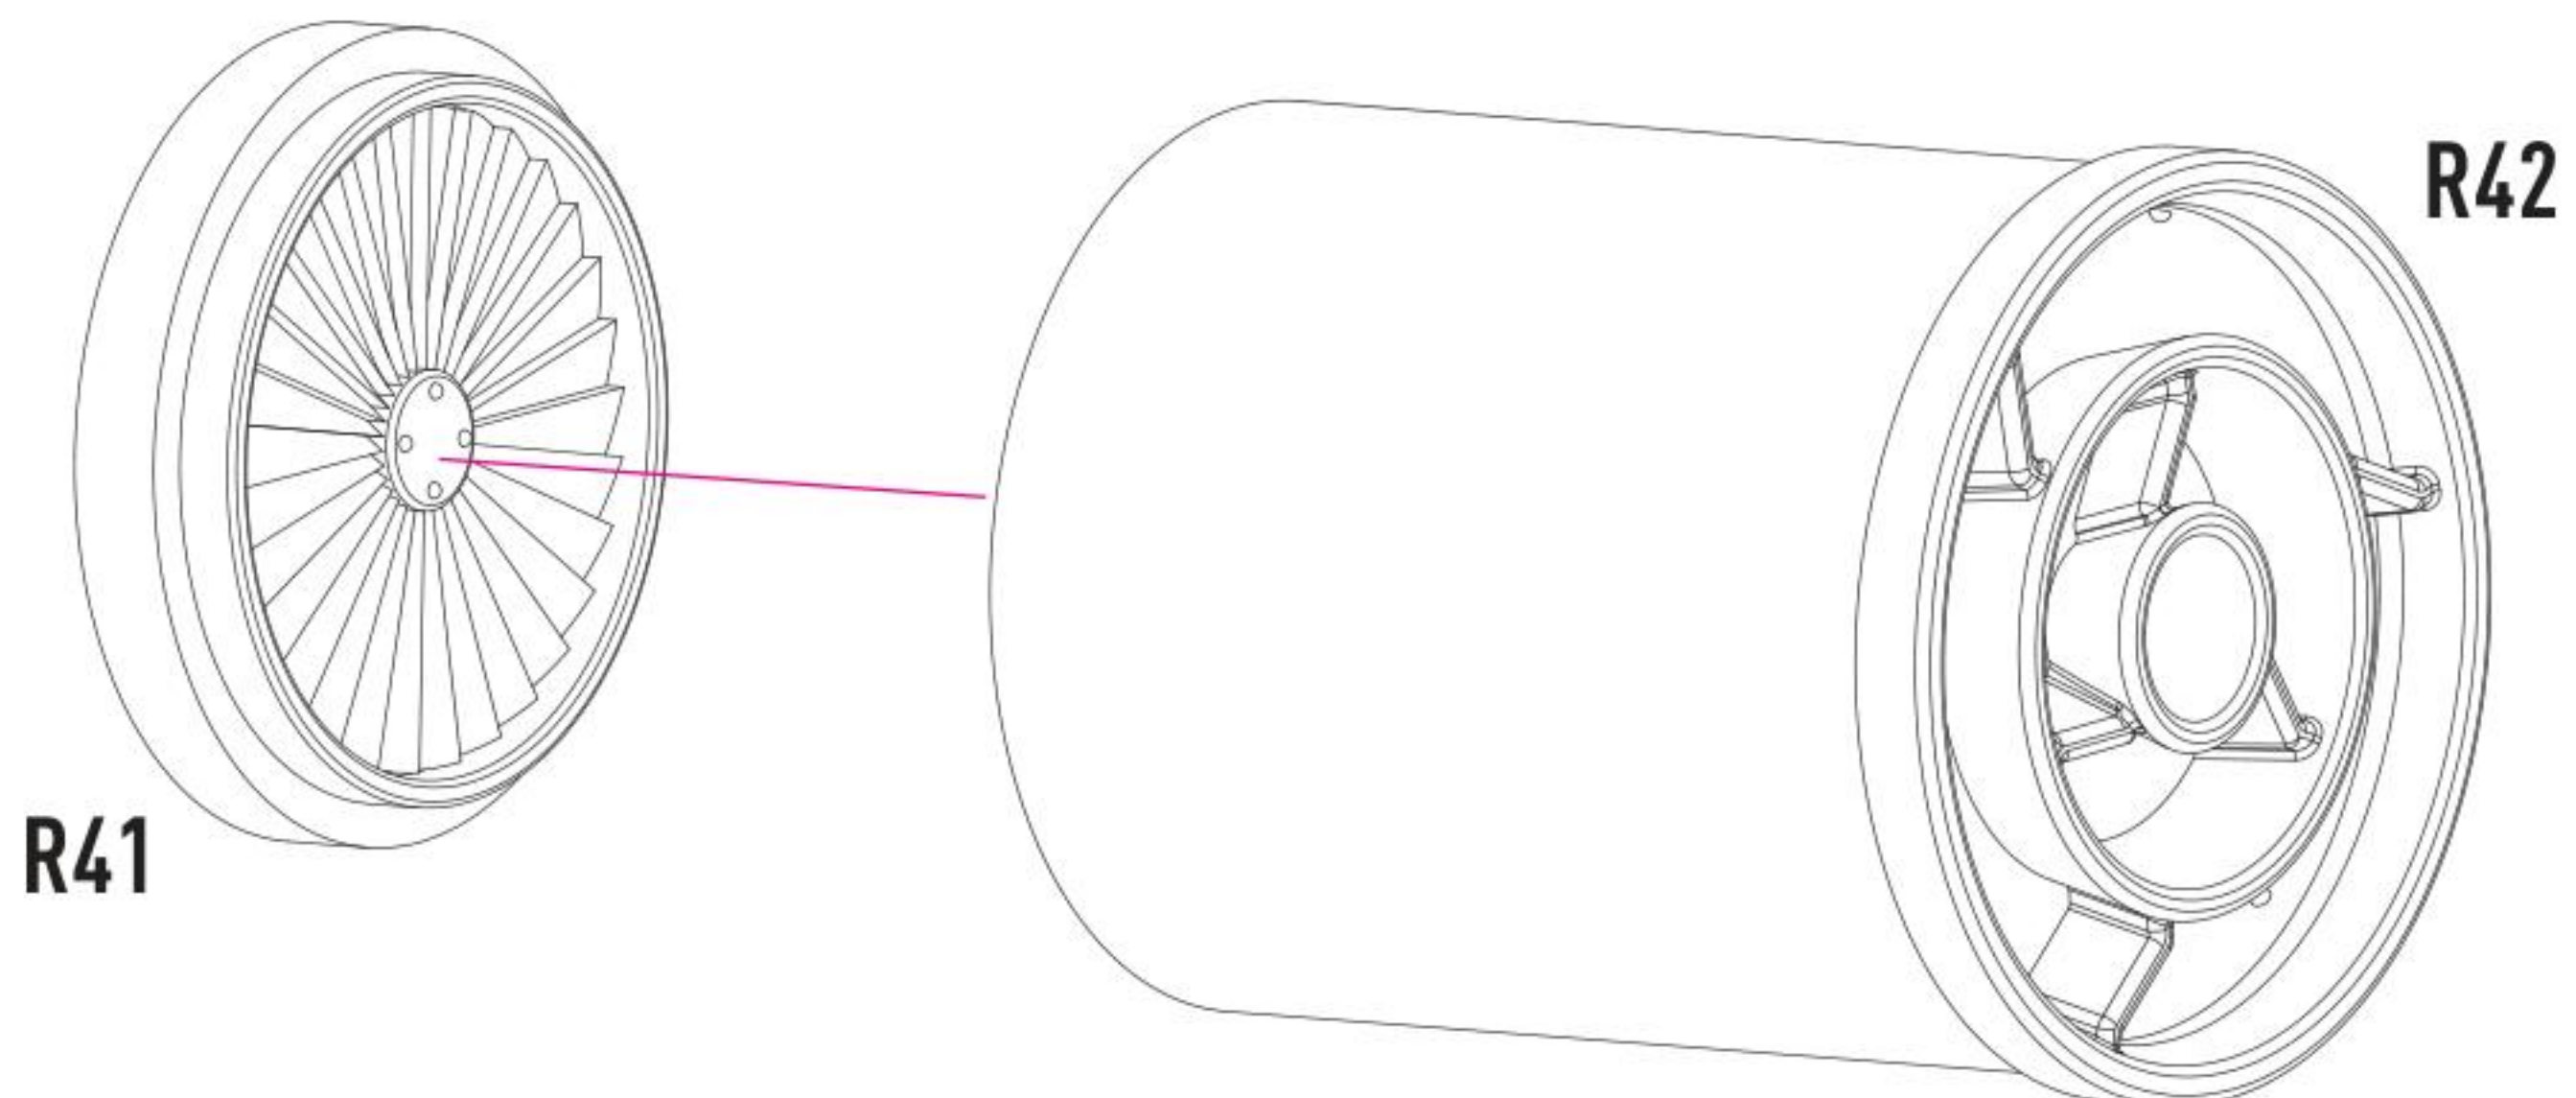

15


R40

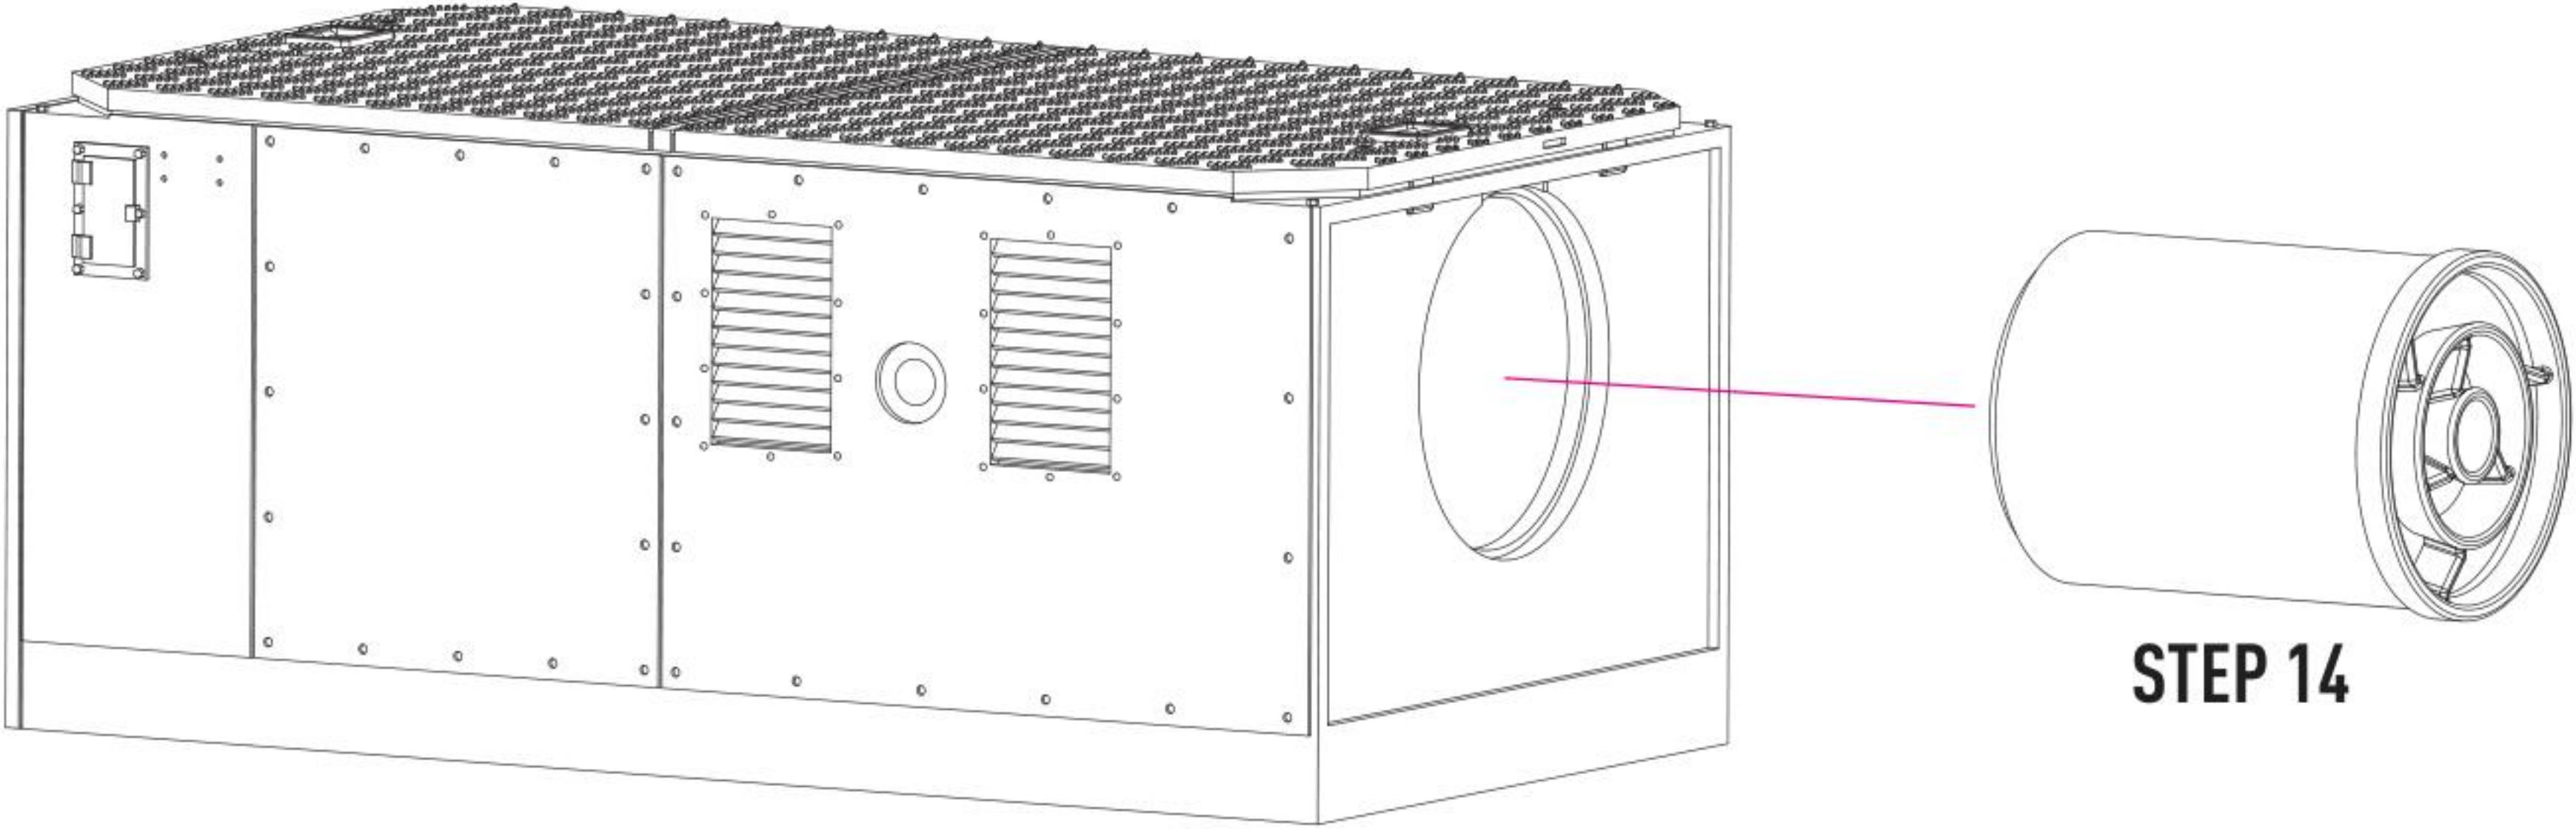

STEP 14

16


STEP 15

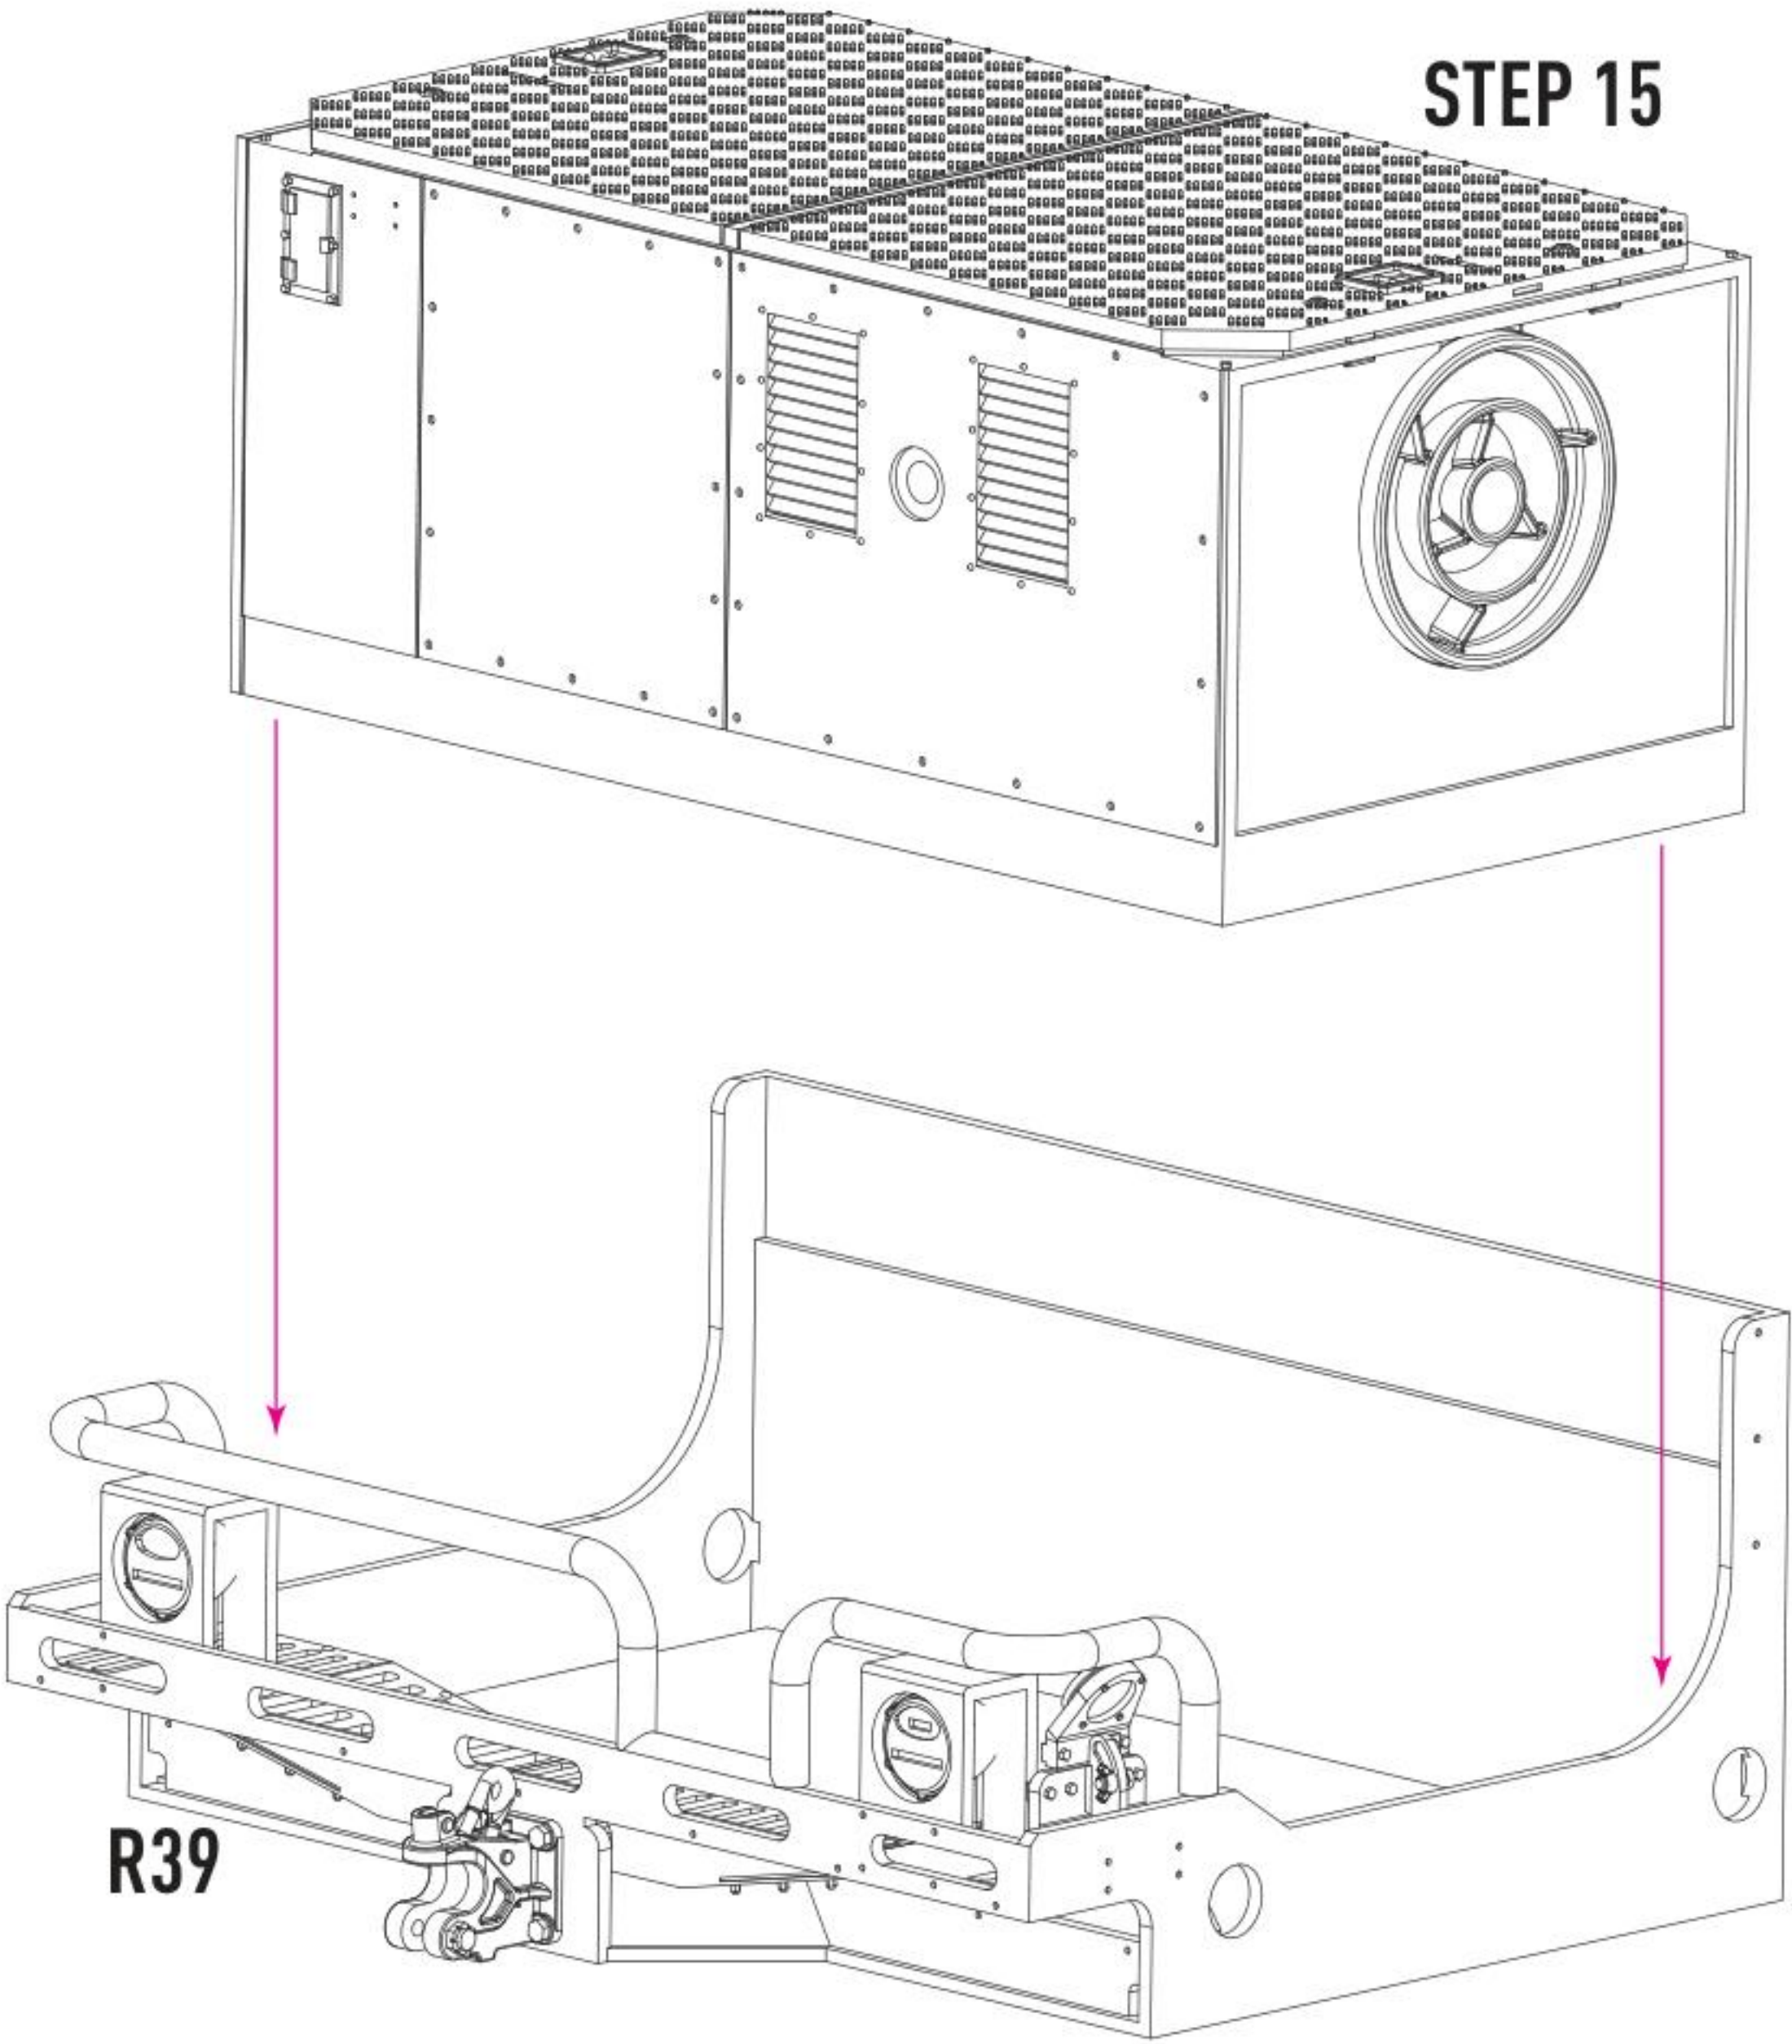

R39

17

R32

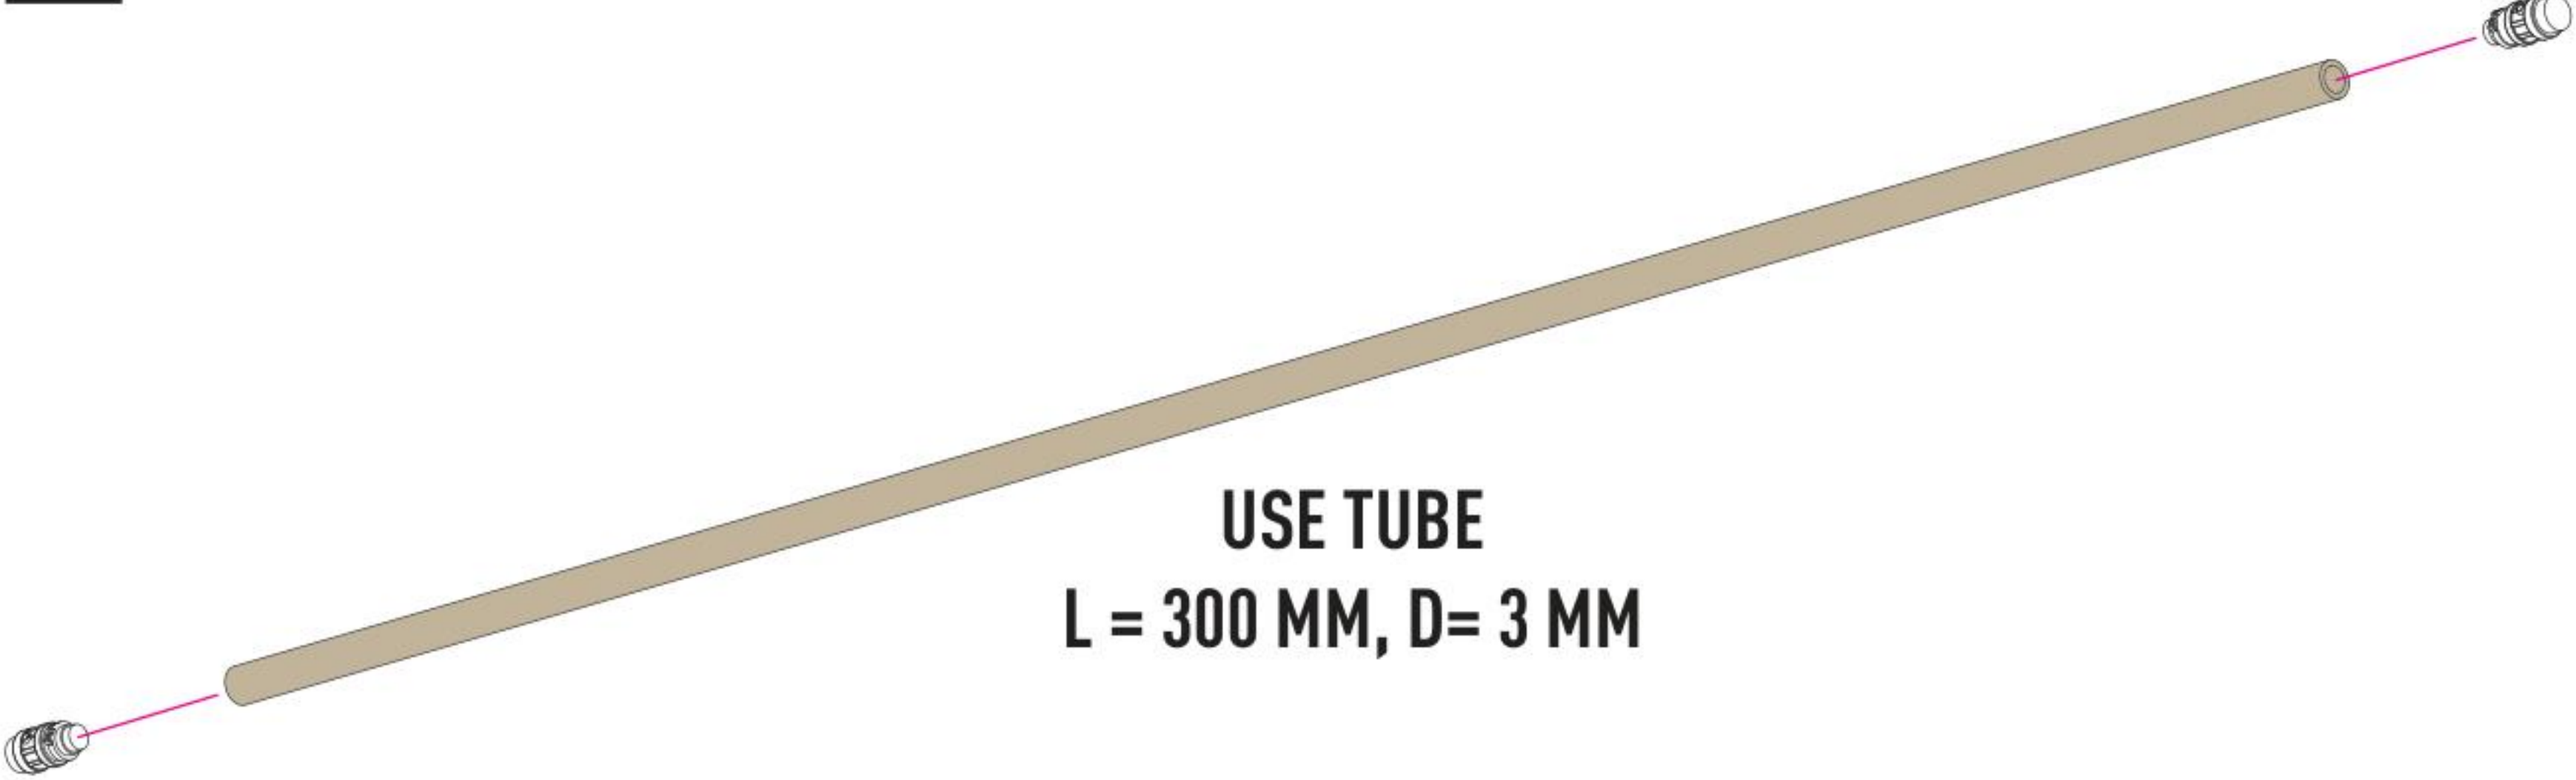


USE TUBE  
L = 300 MM, D= 3 MM


R31

18


USE R43  
OR STEP 17

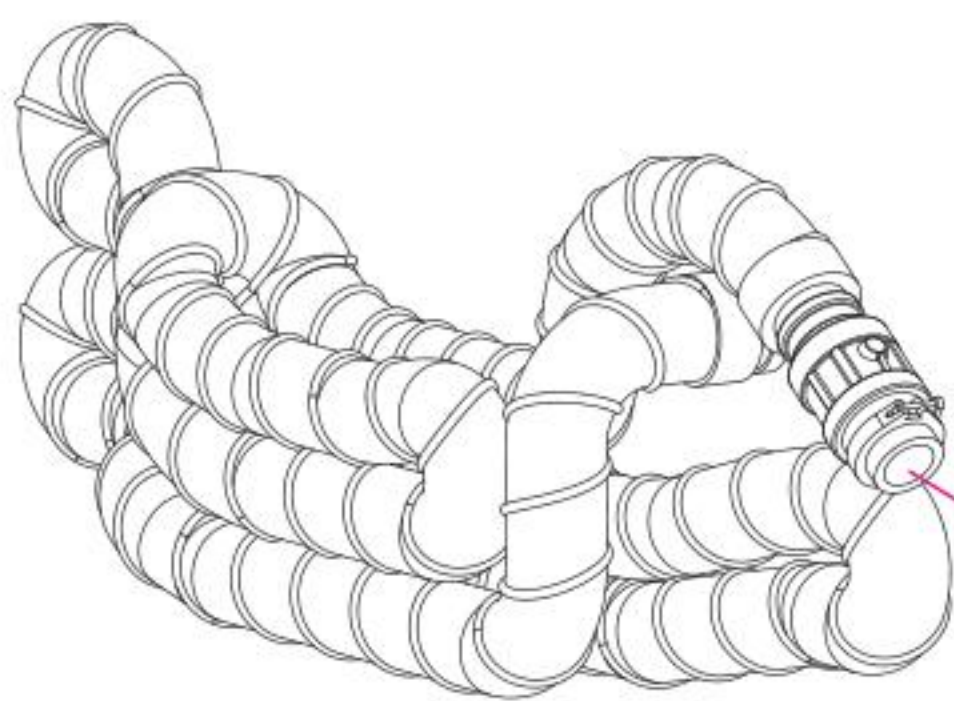

STEP 16

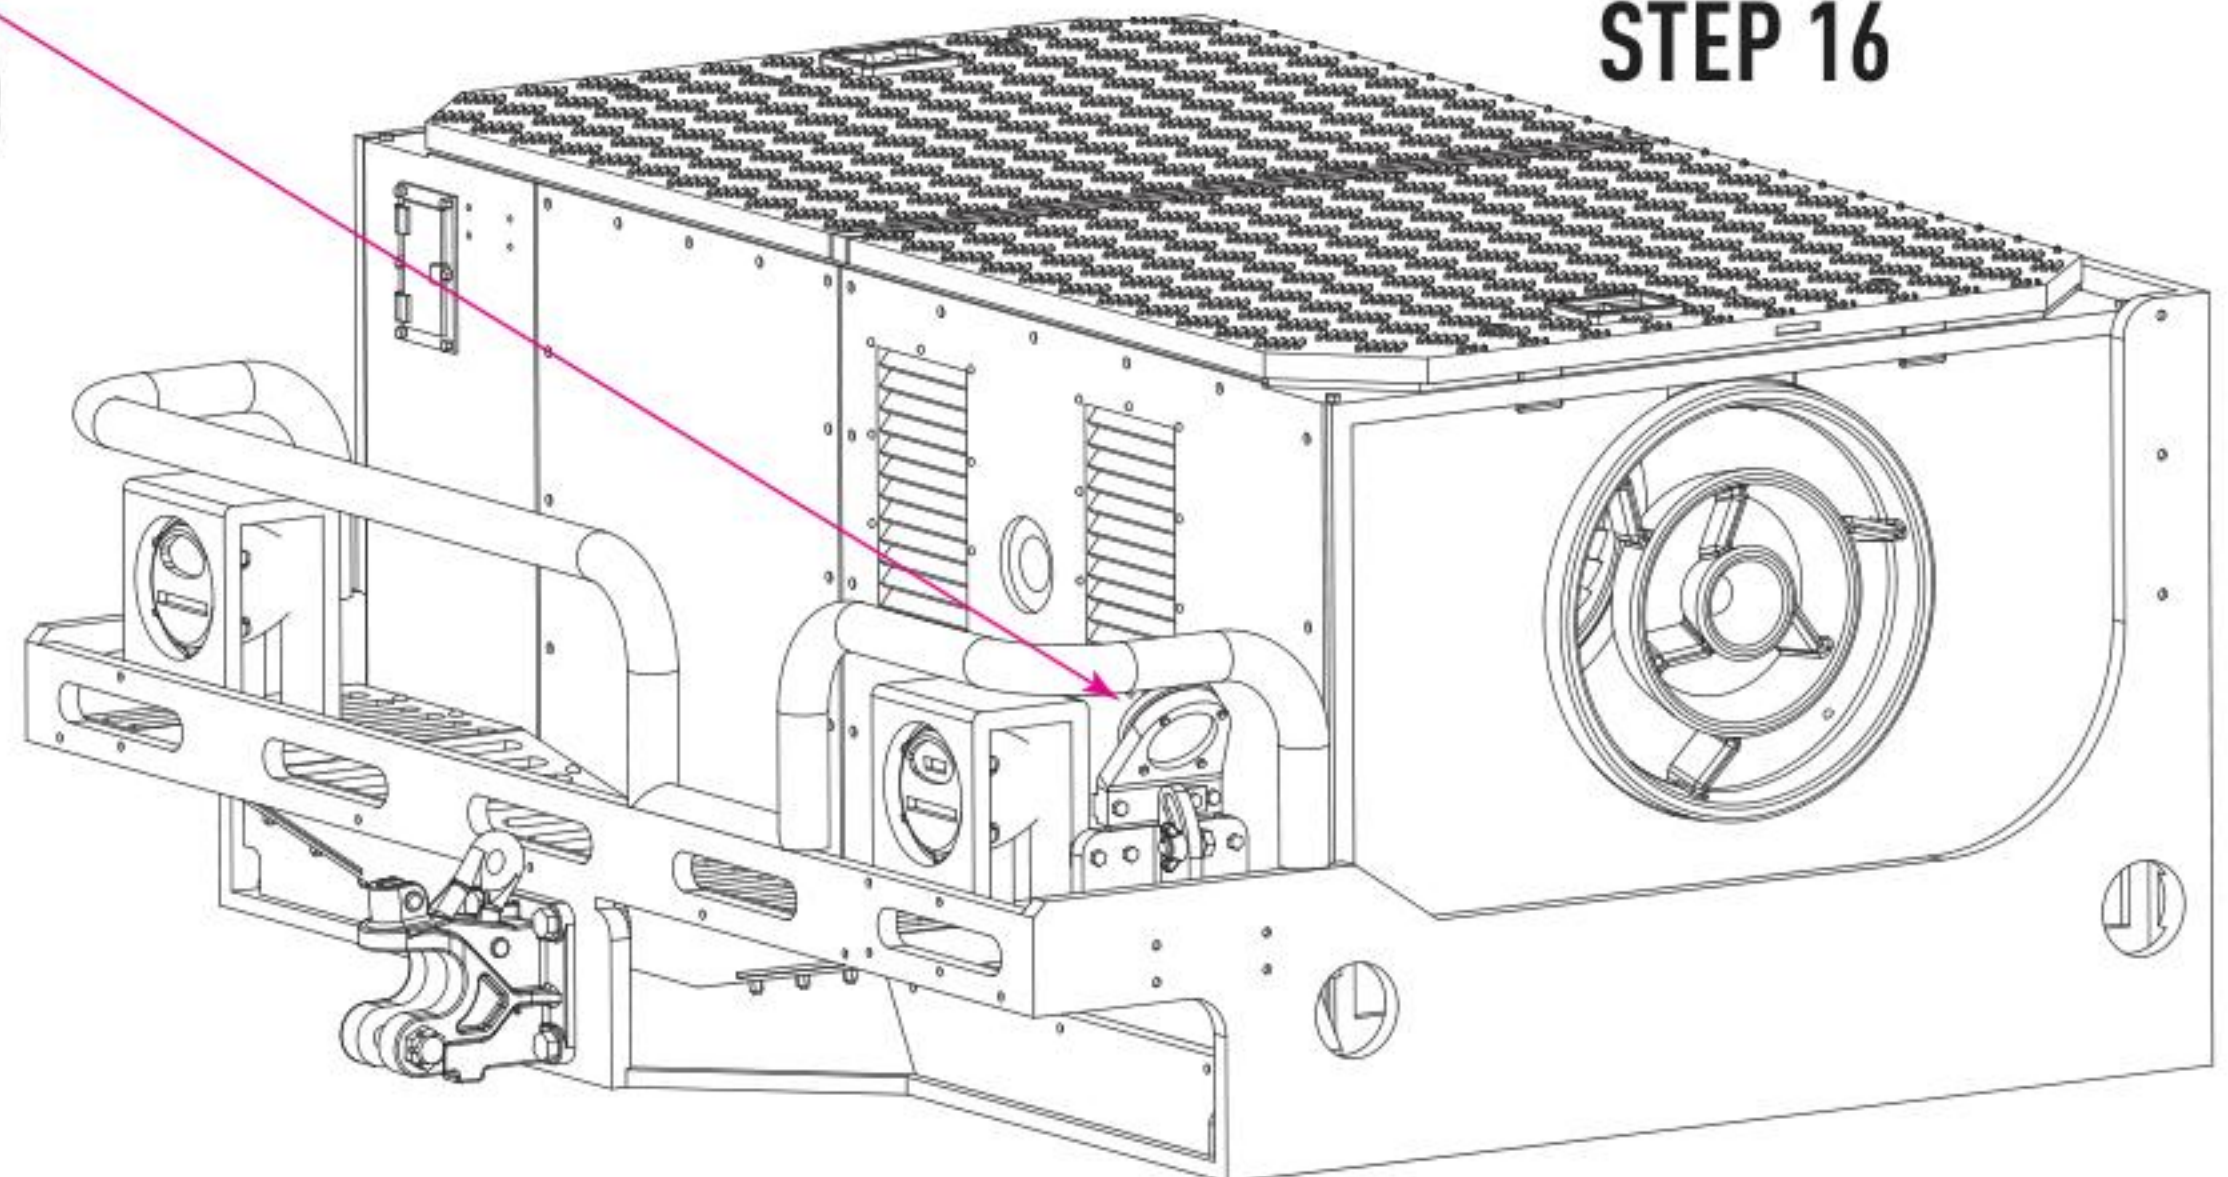


19

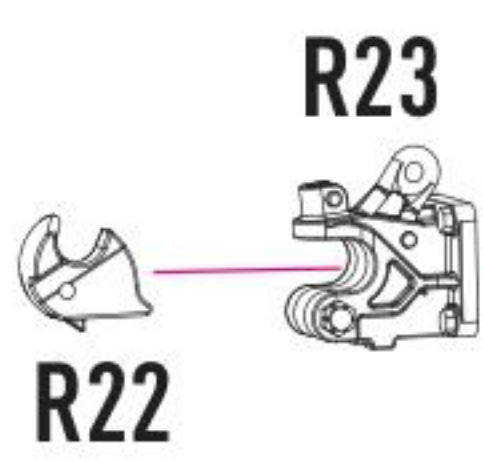

R23

R22

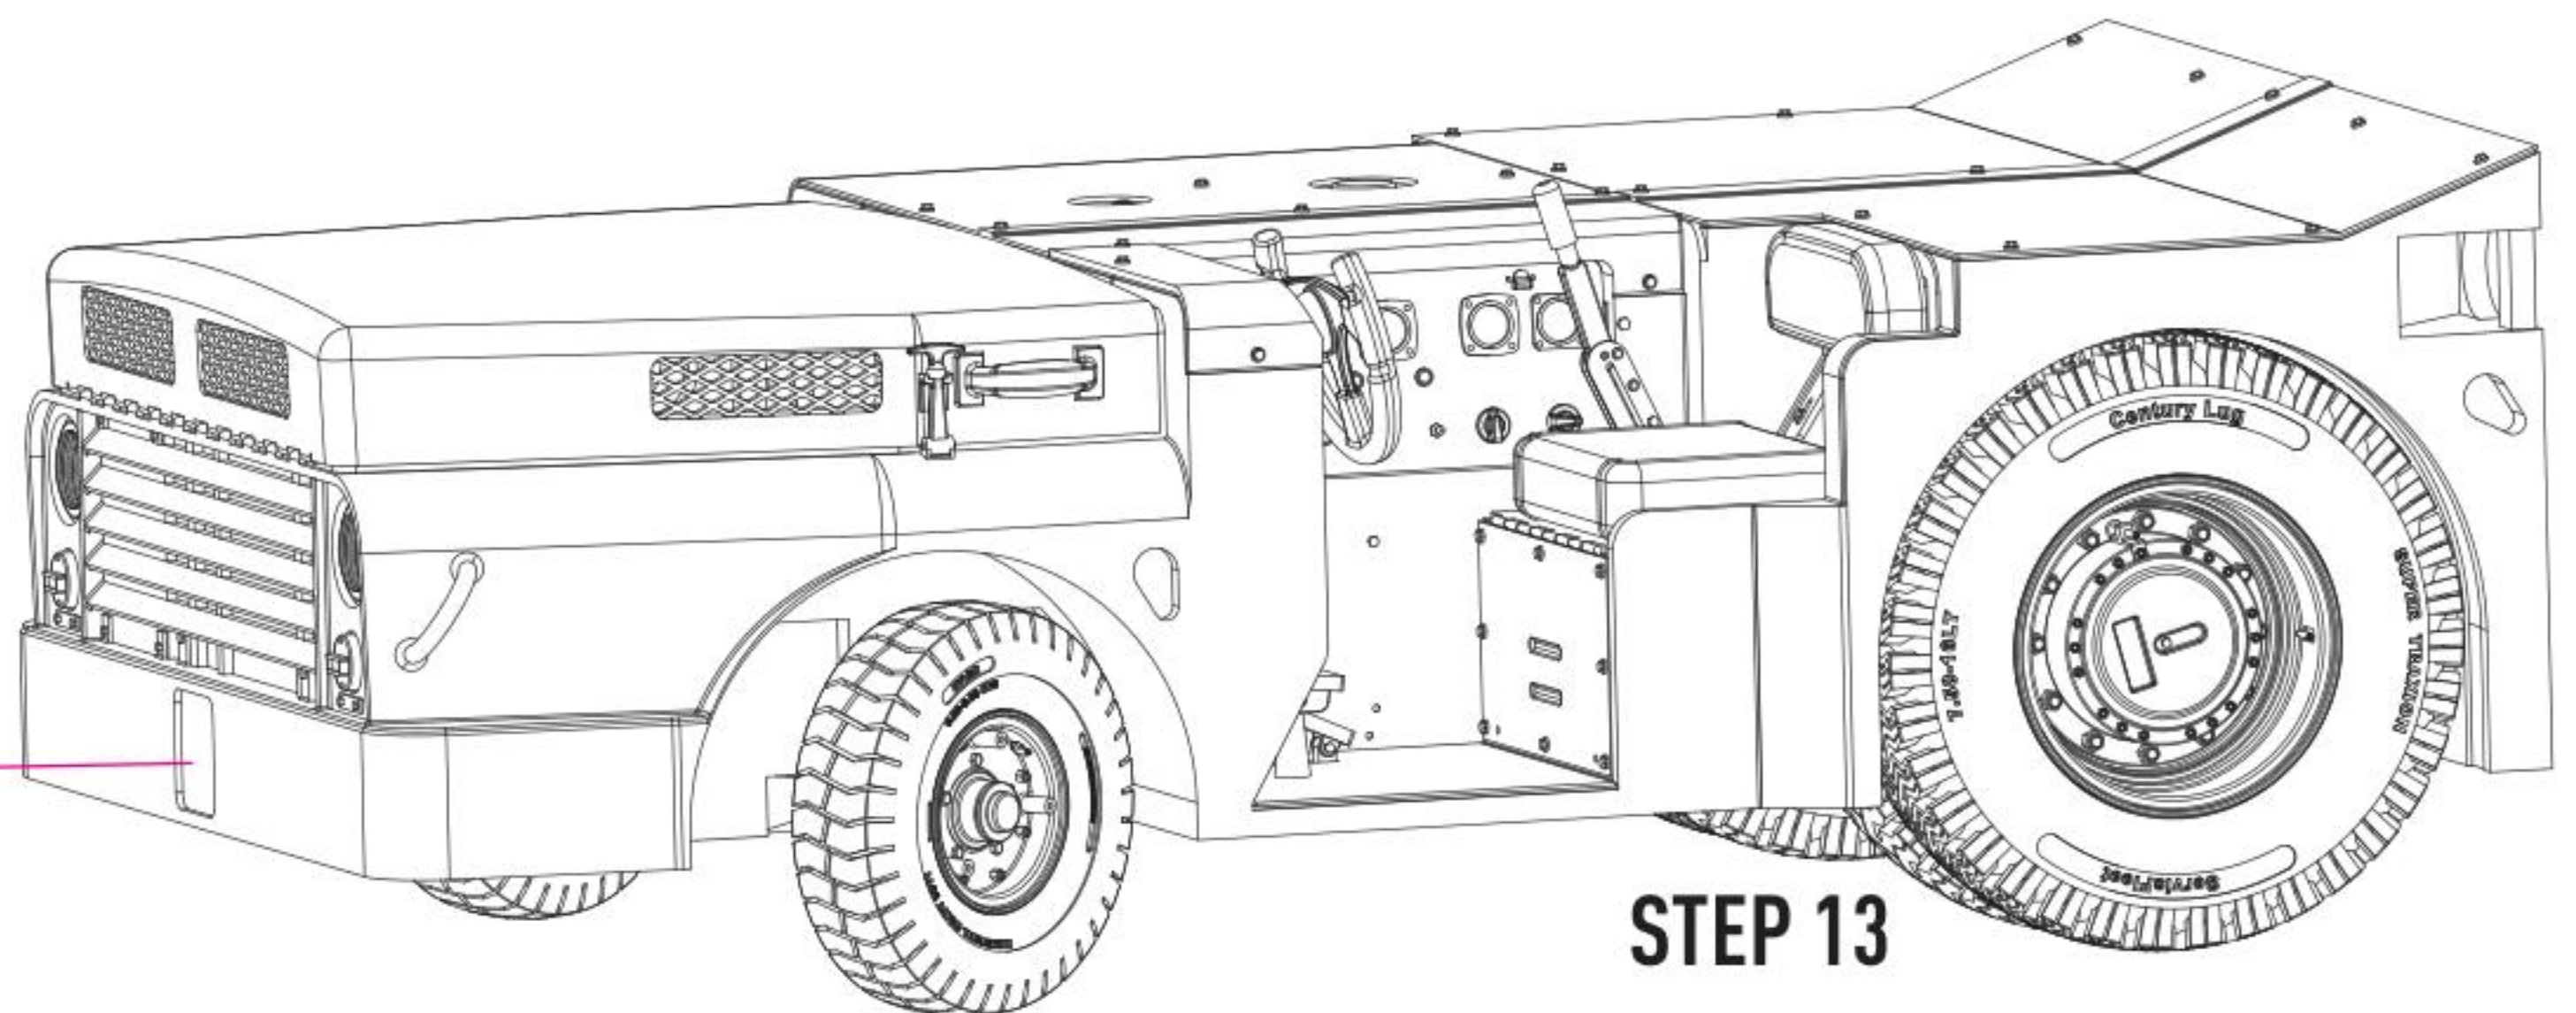


STEP 13

20



R25


STEP 19

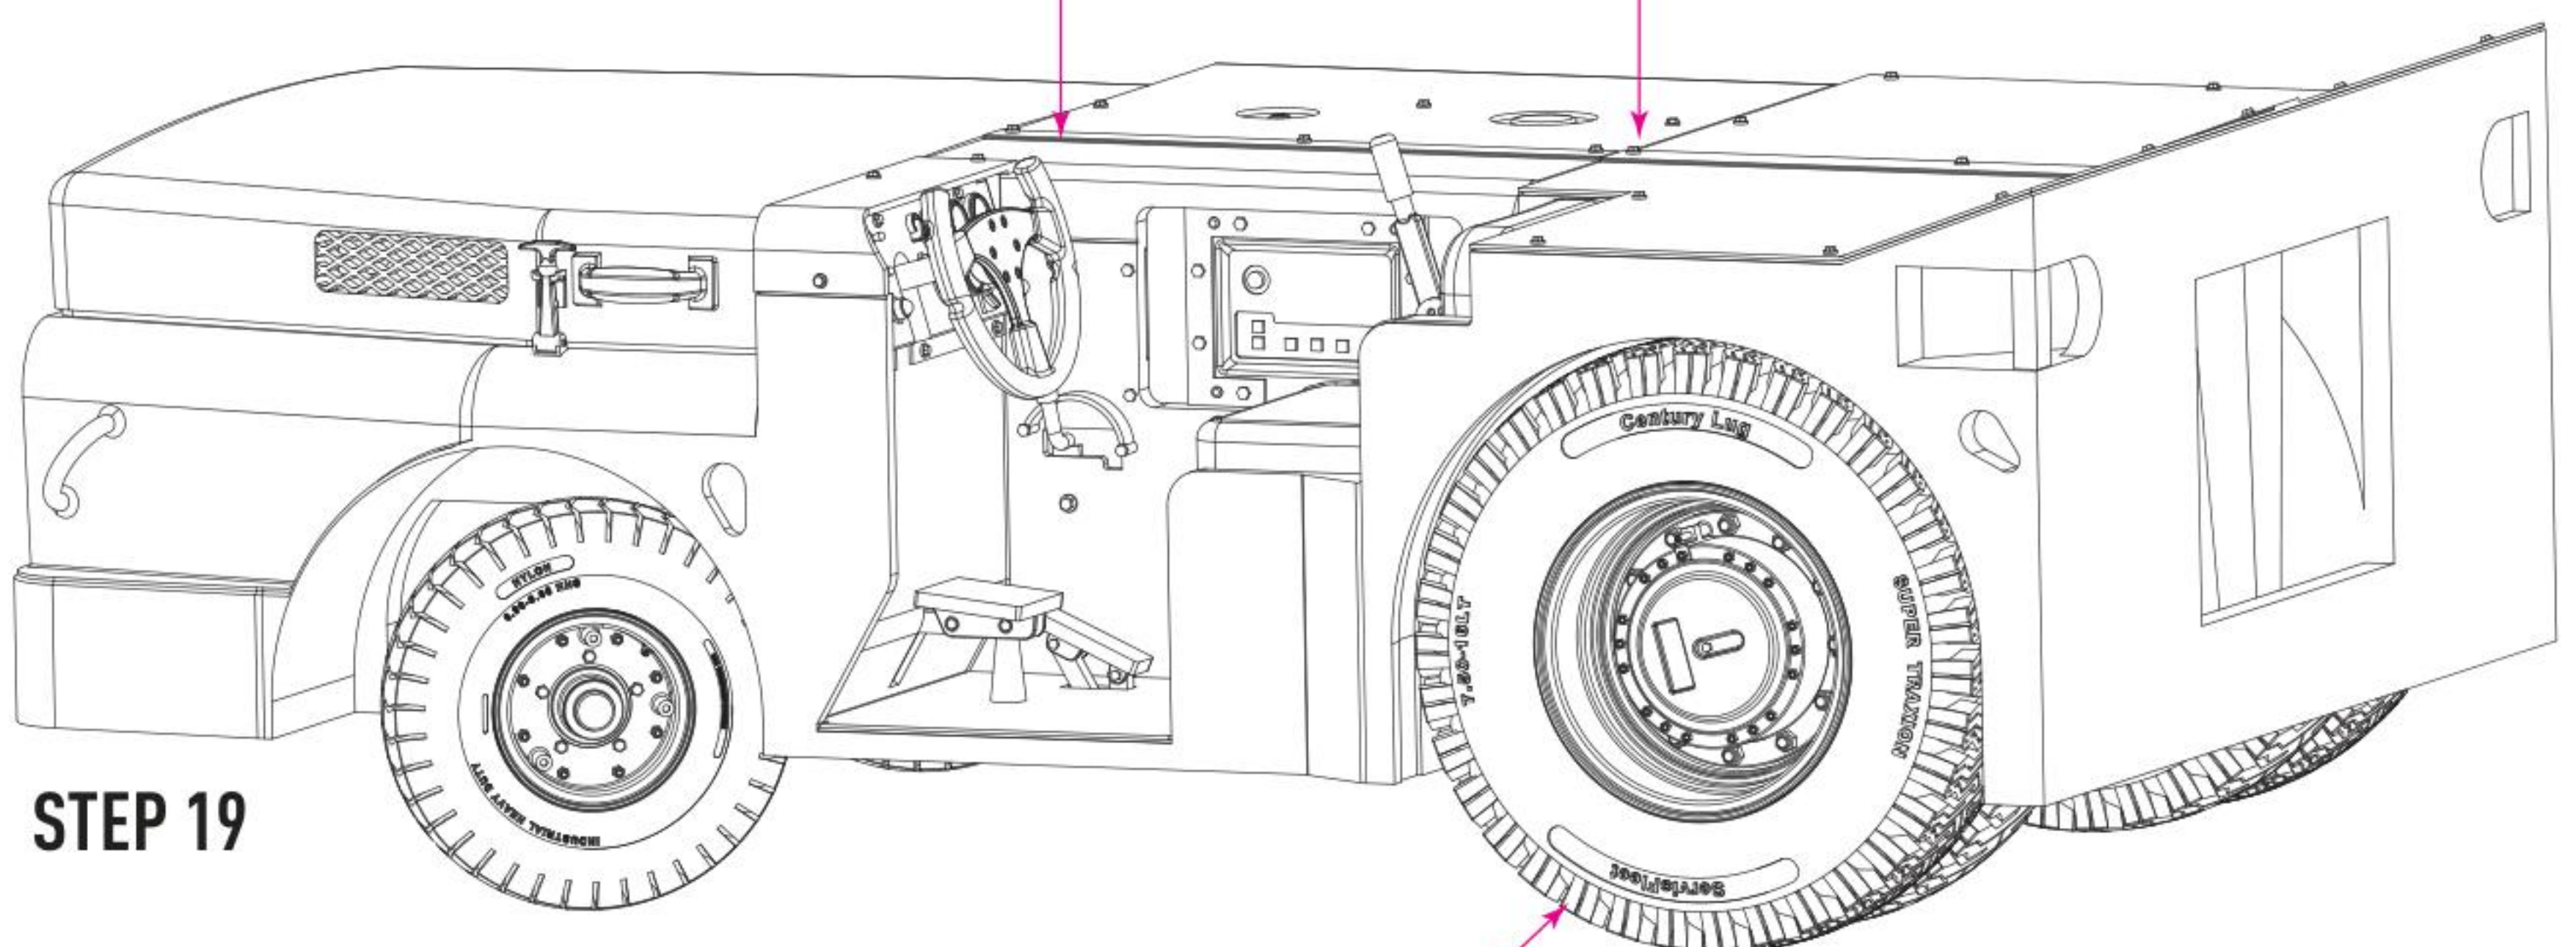


R24




21

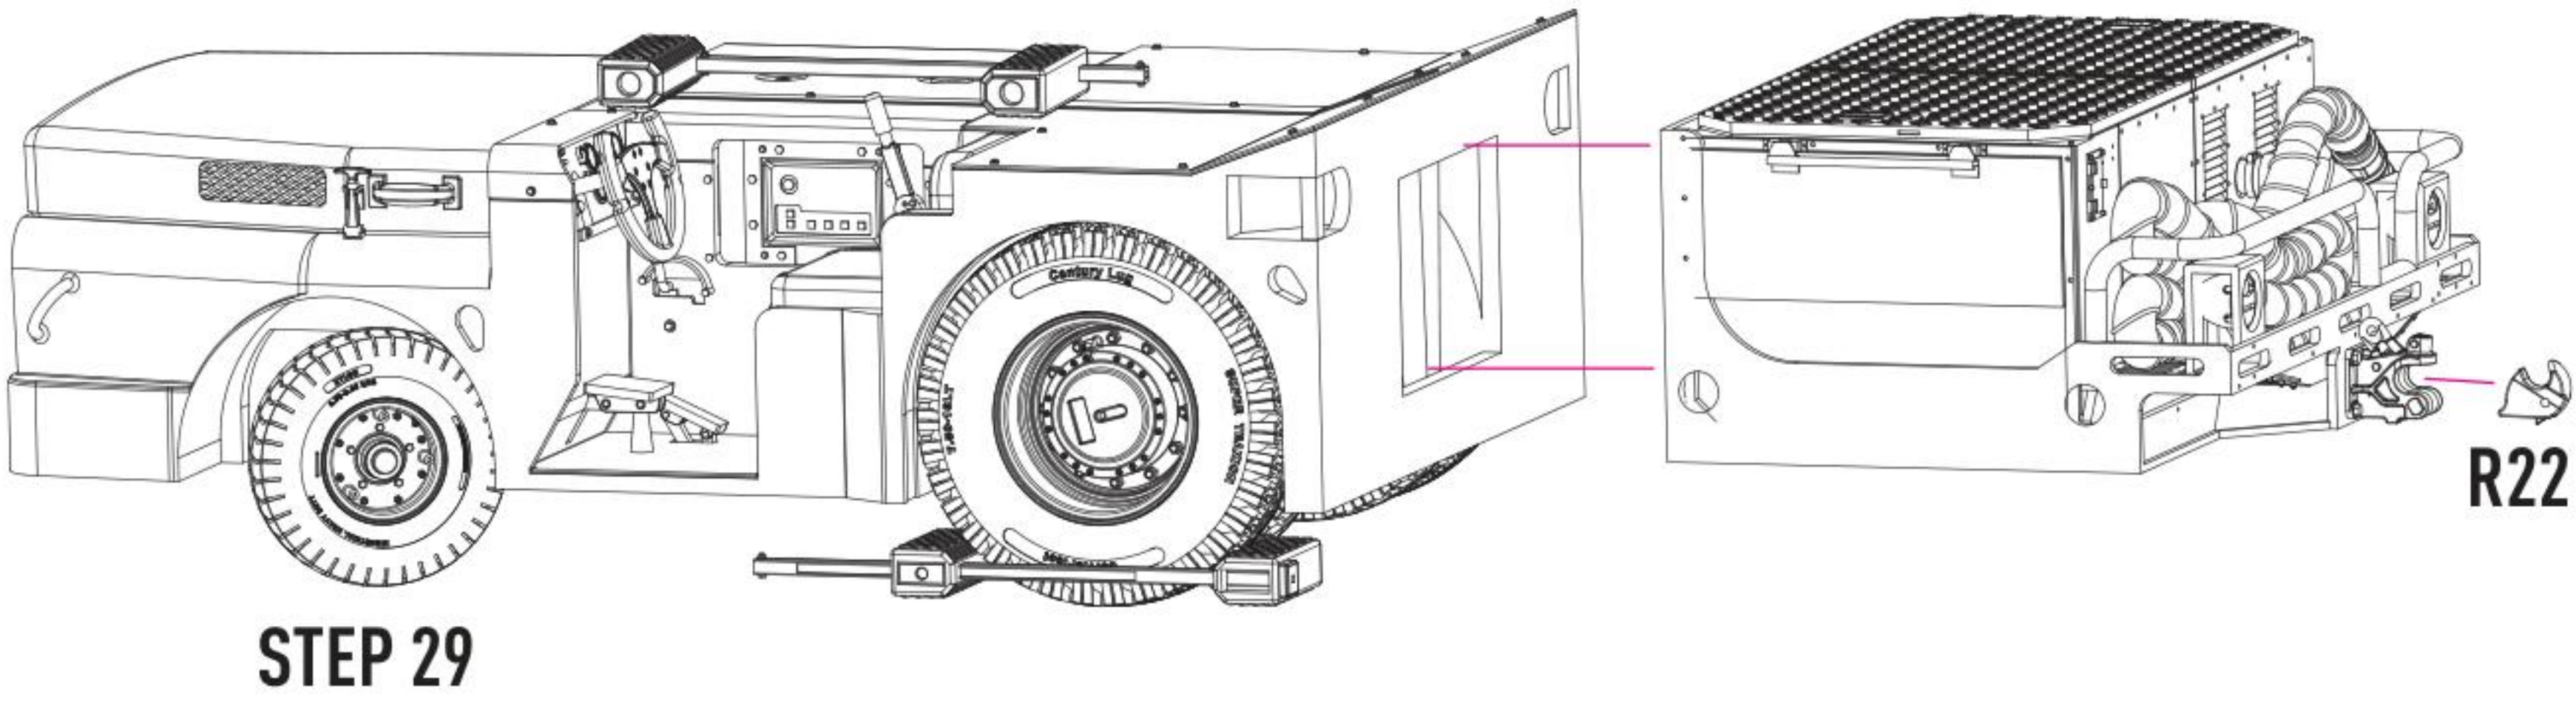

22

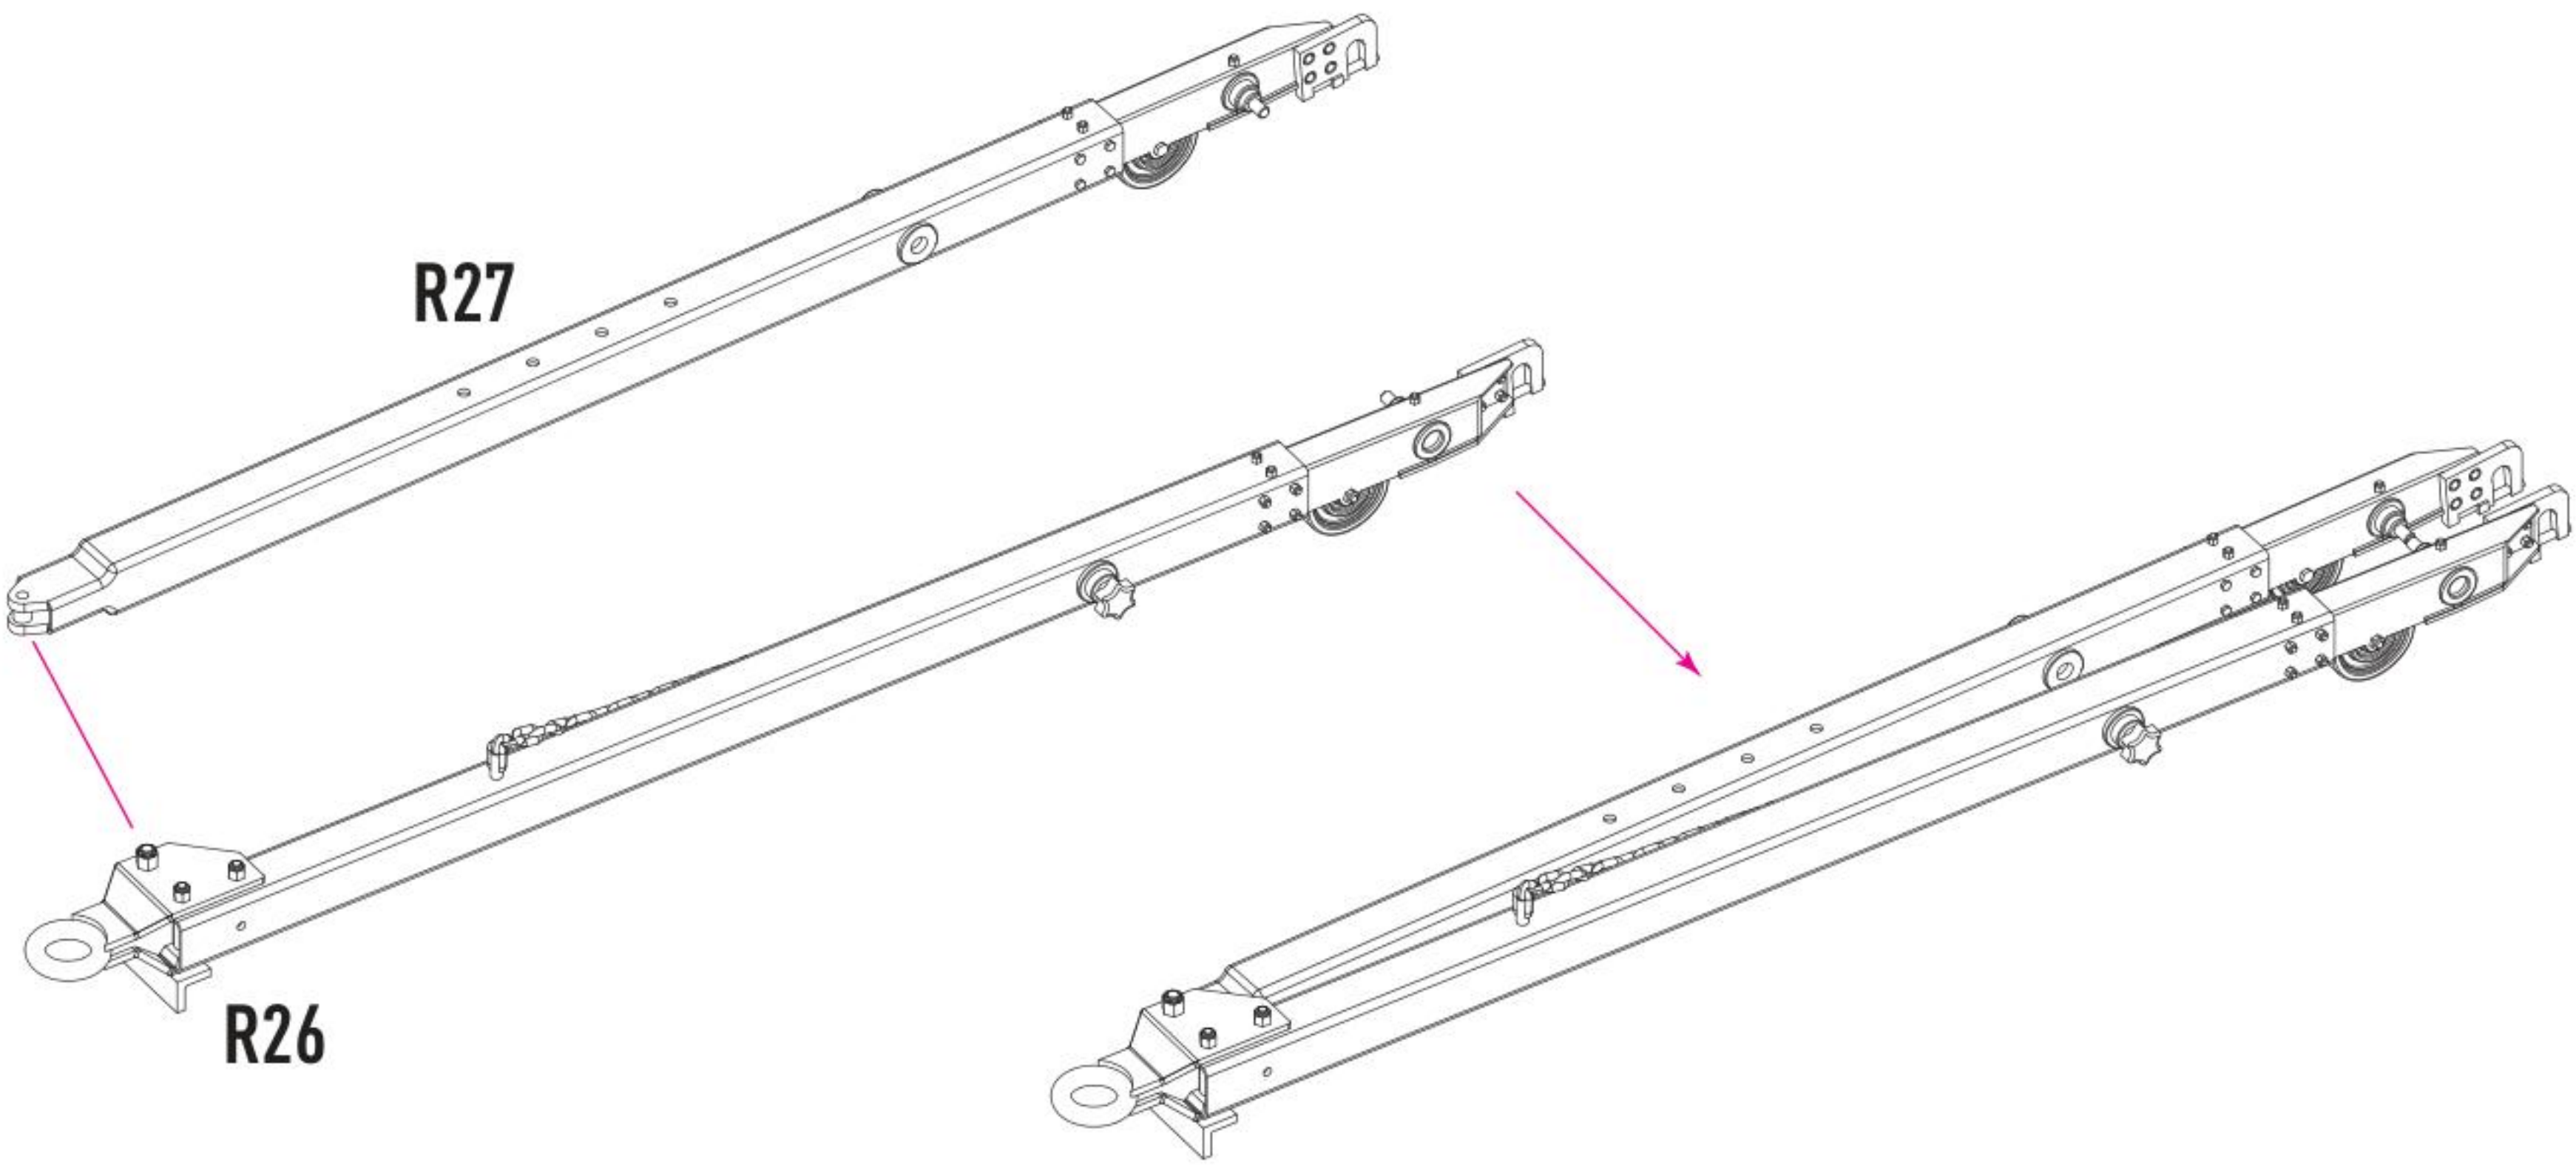


23

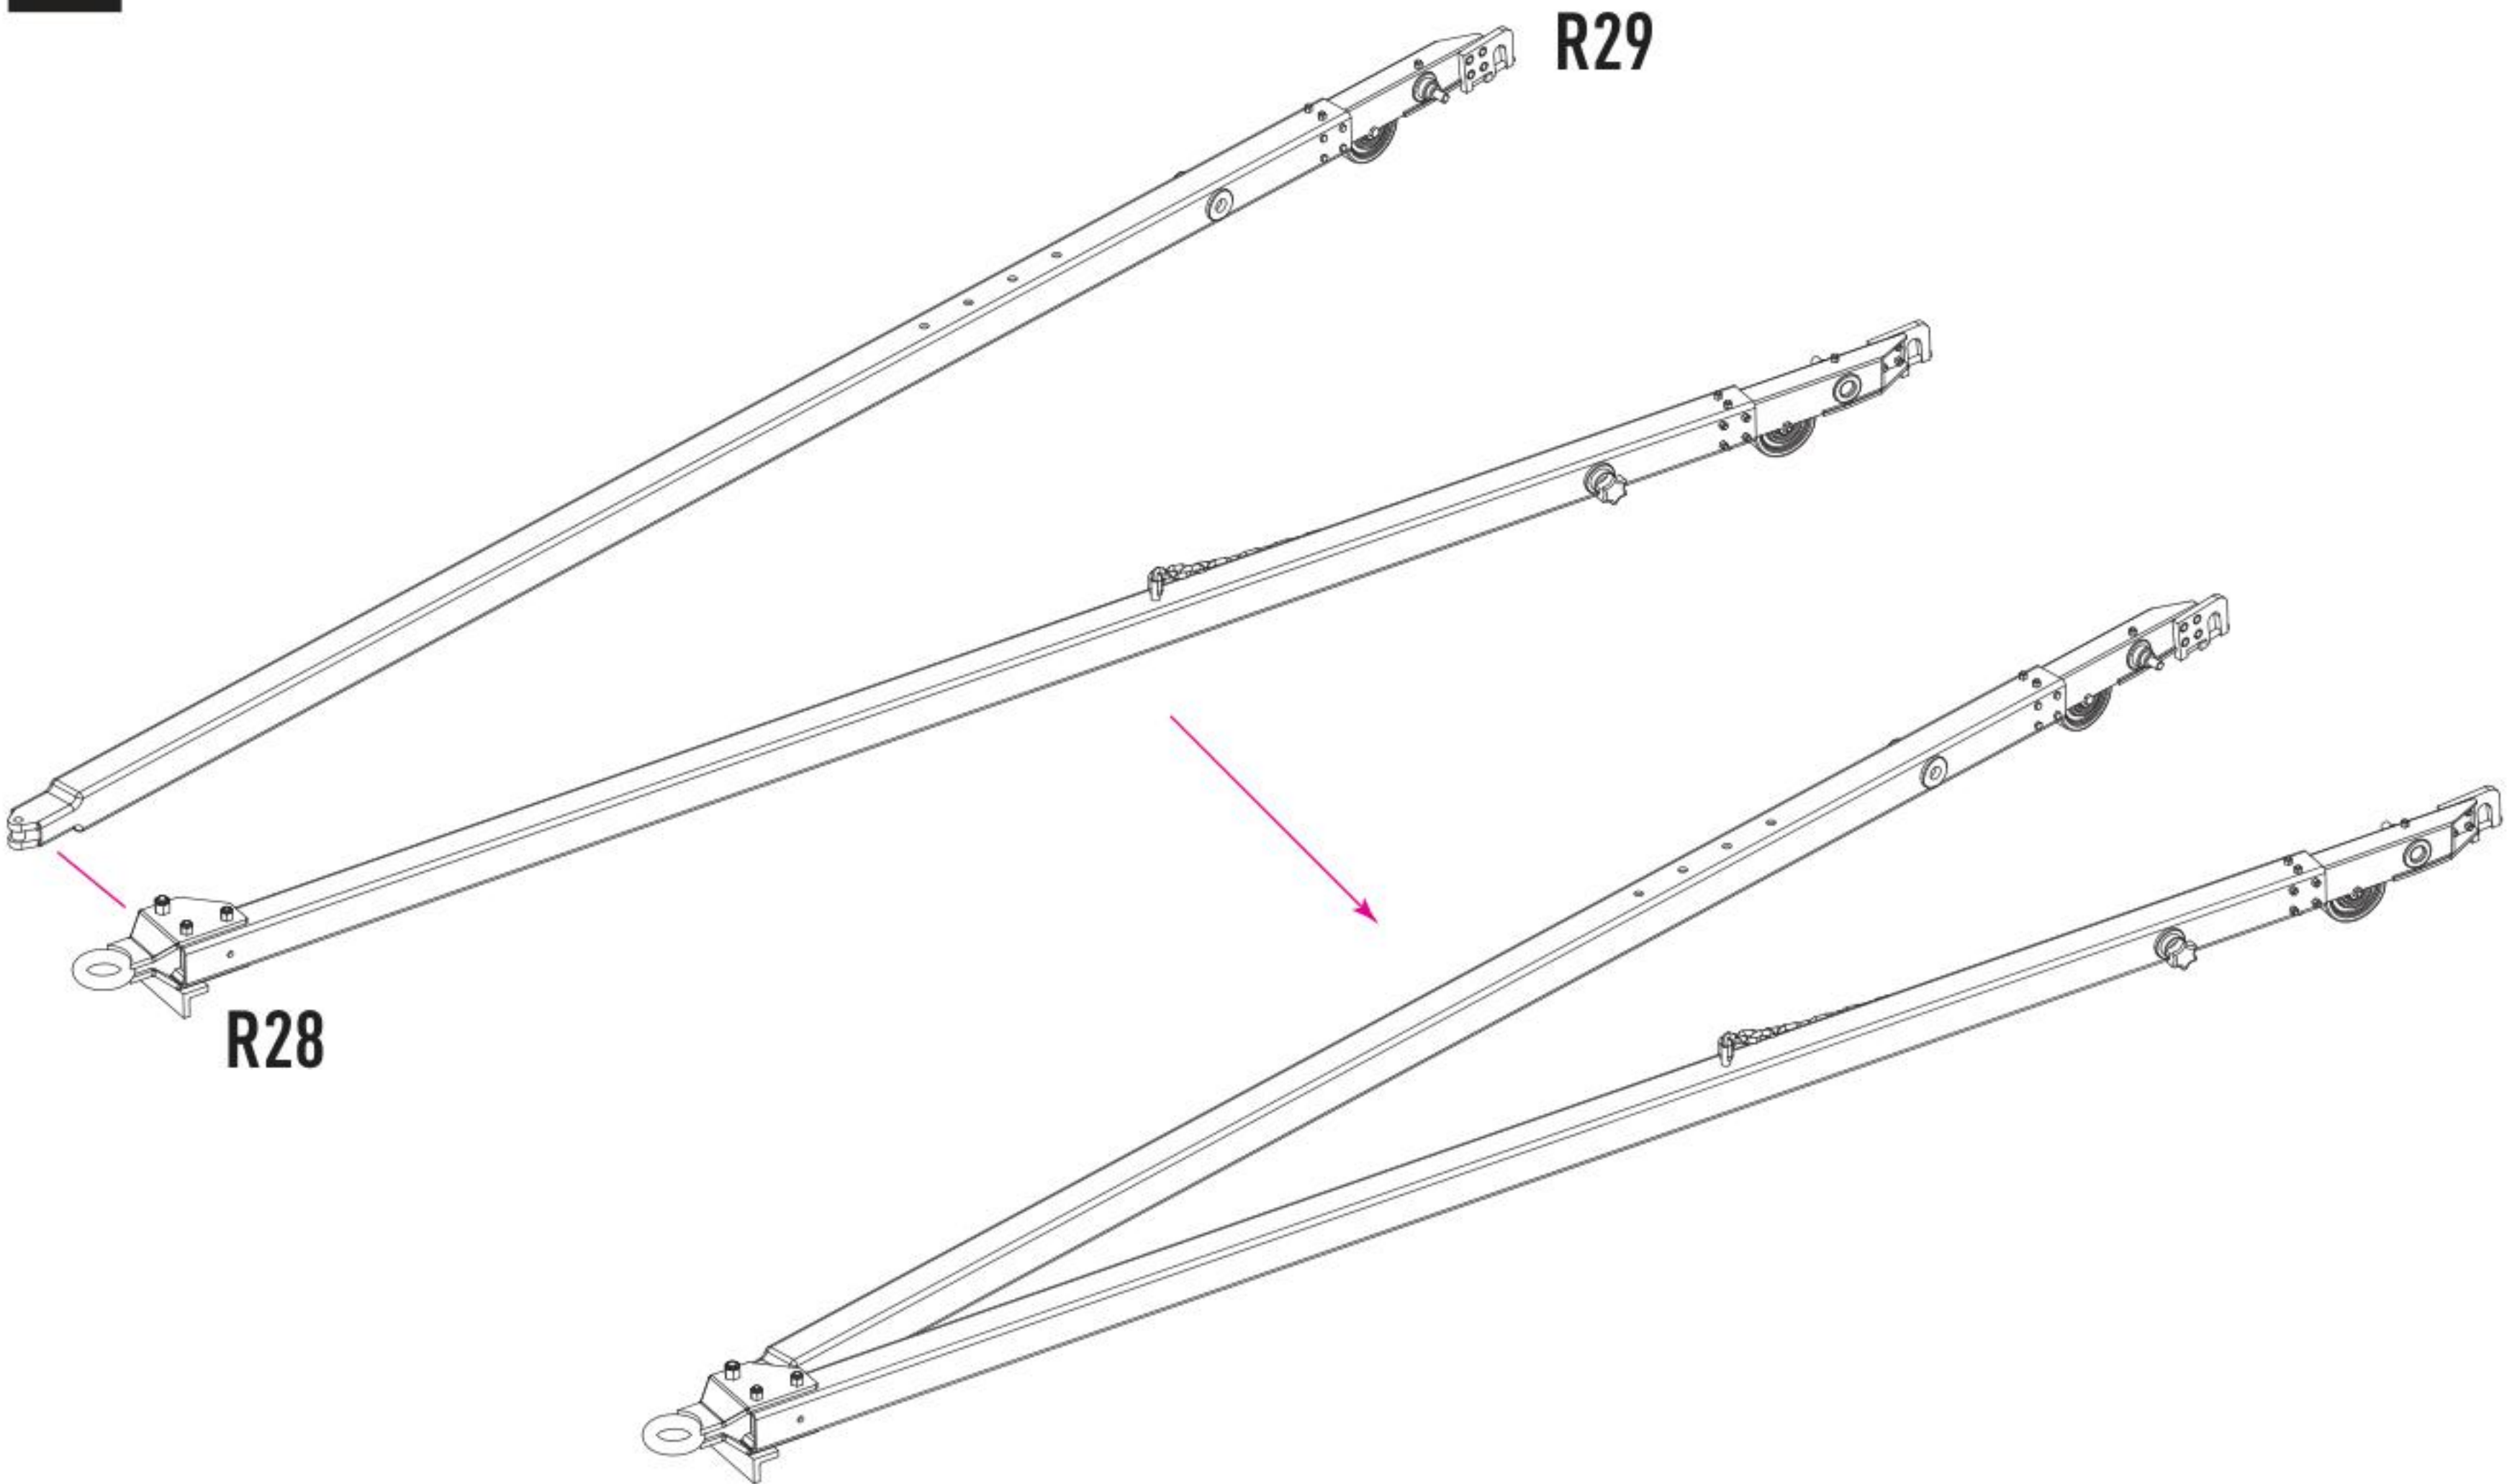

24


STEP 22

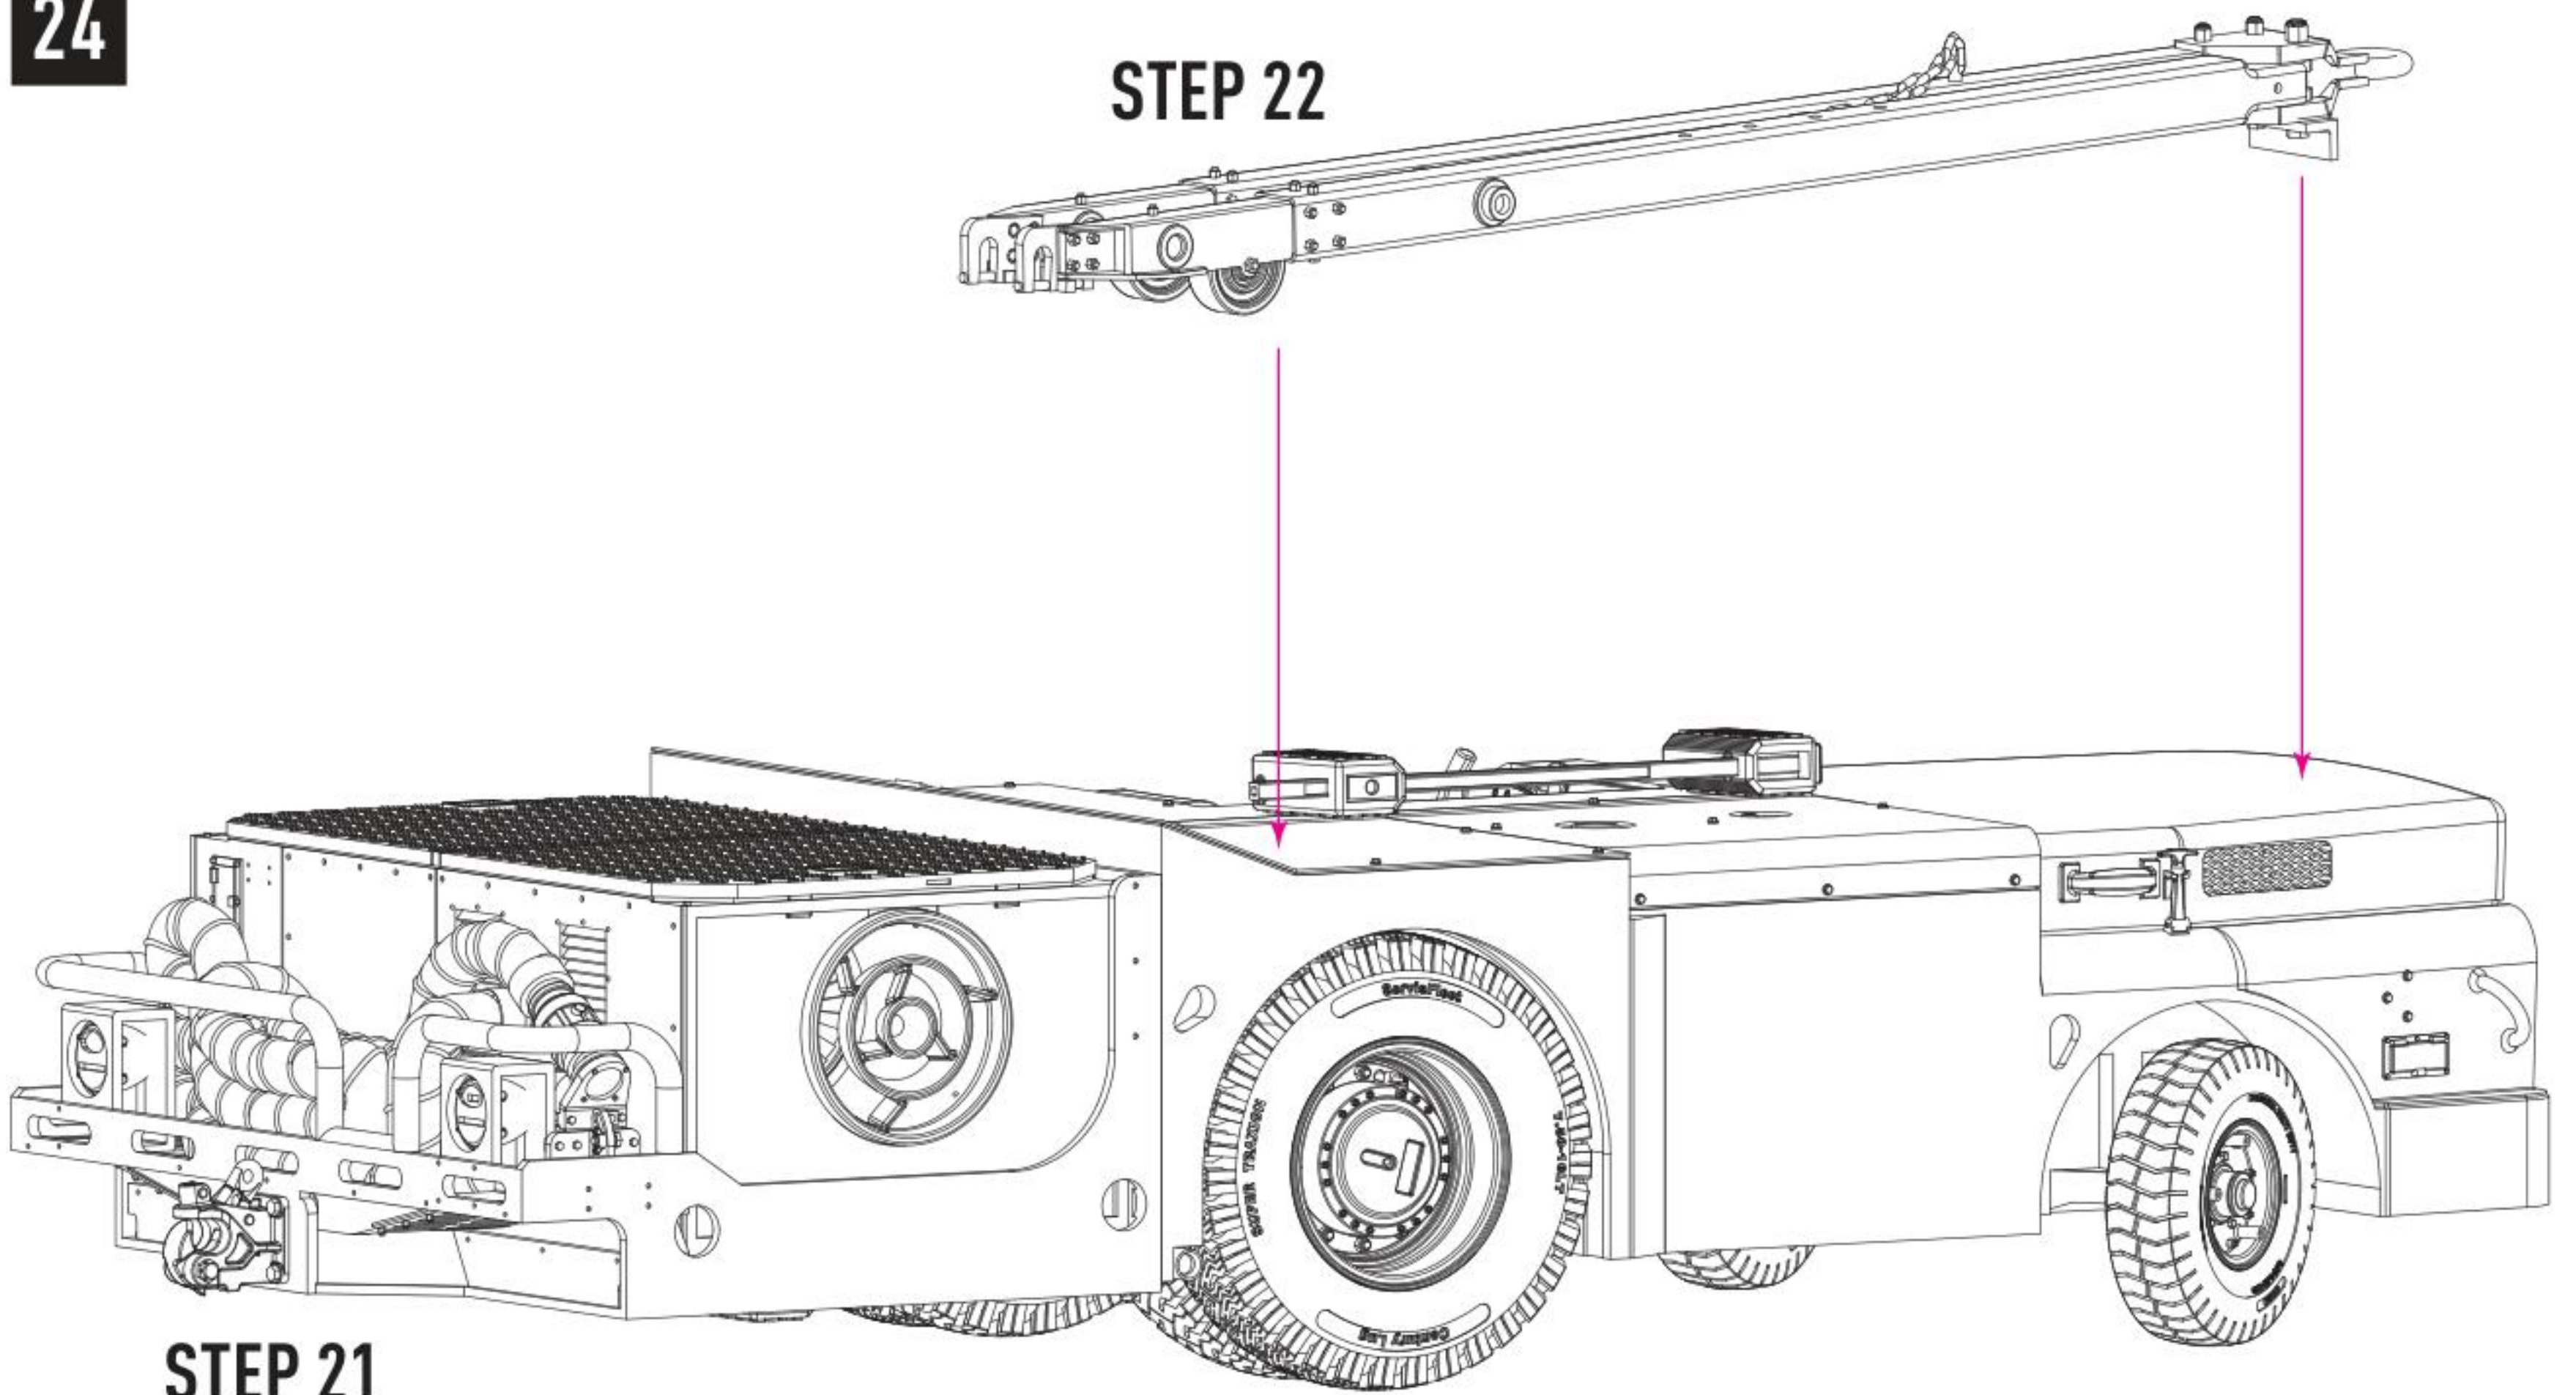


STEP 21


25

STEP 24



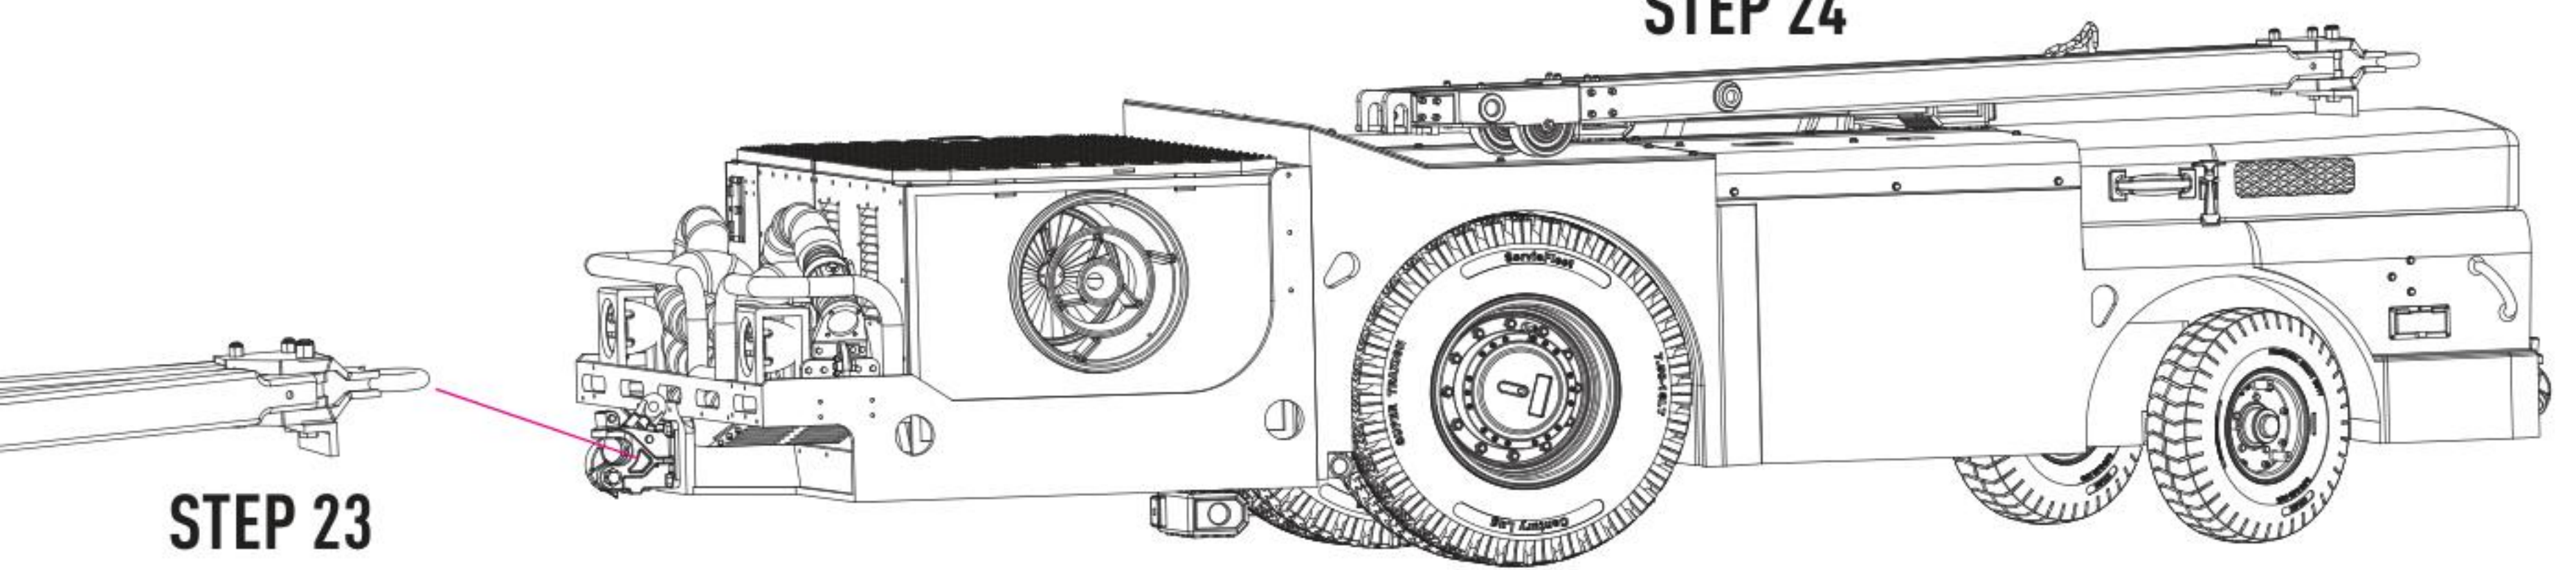


STEP 23

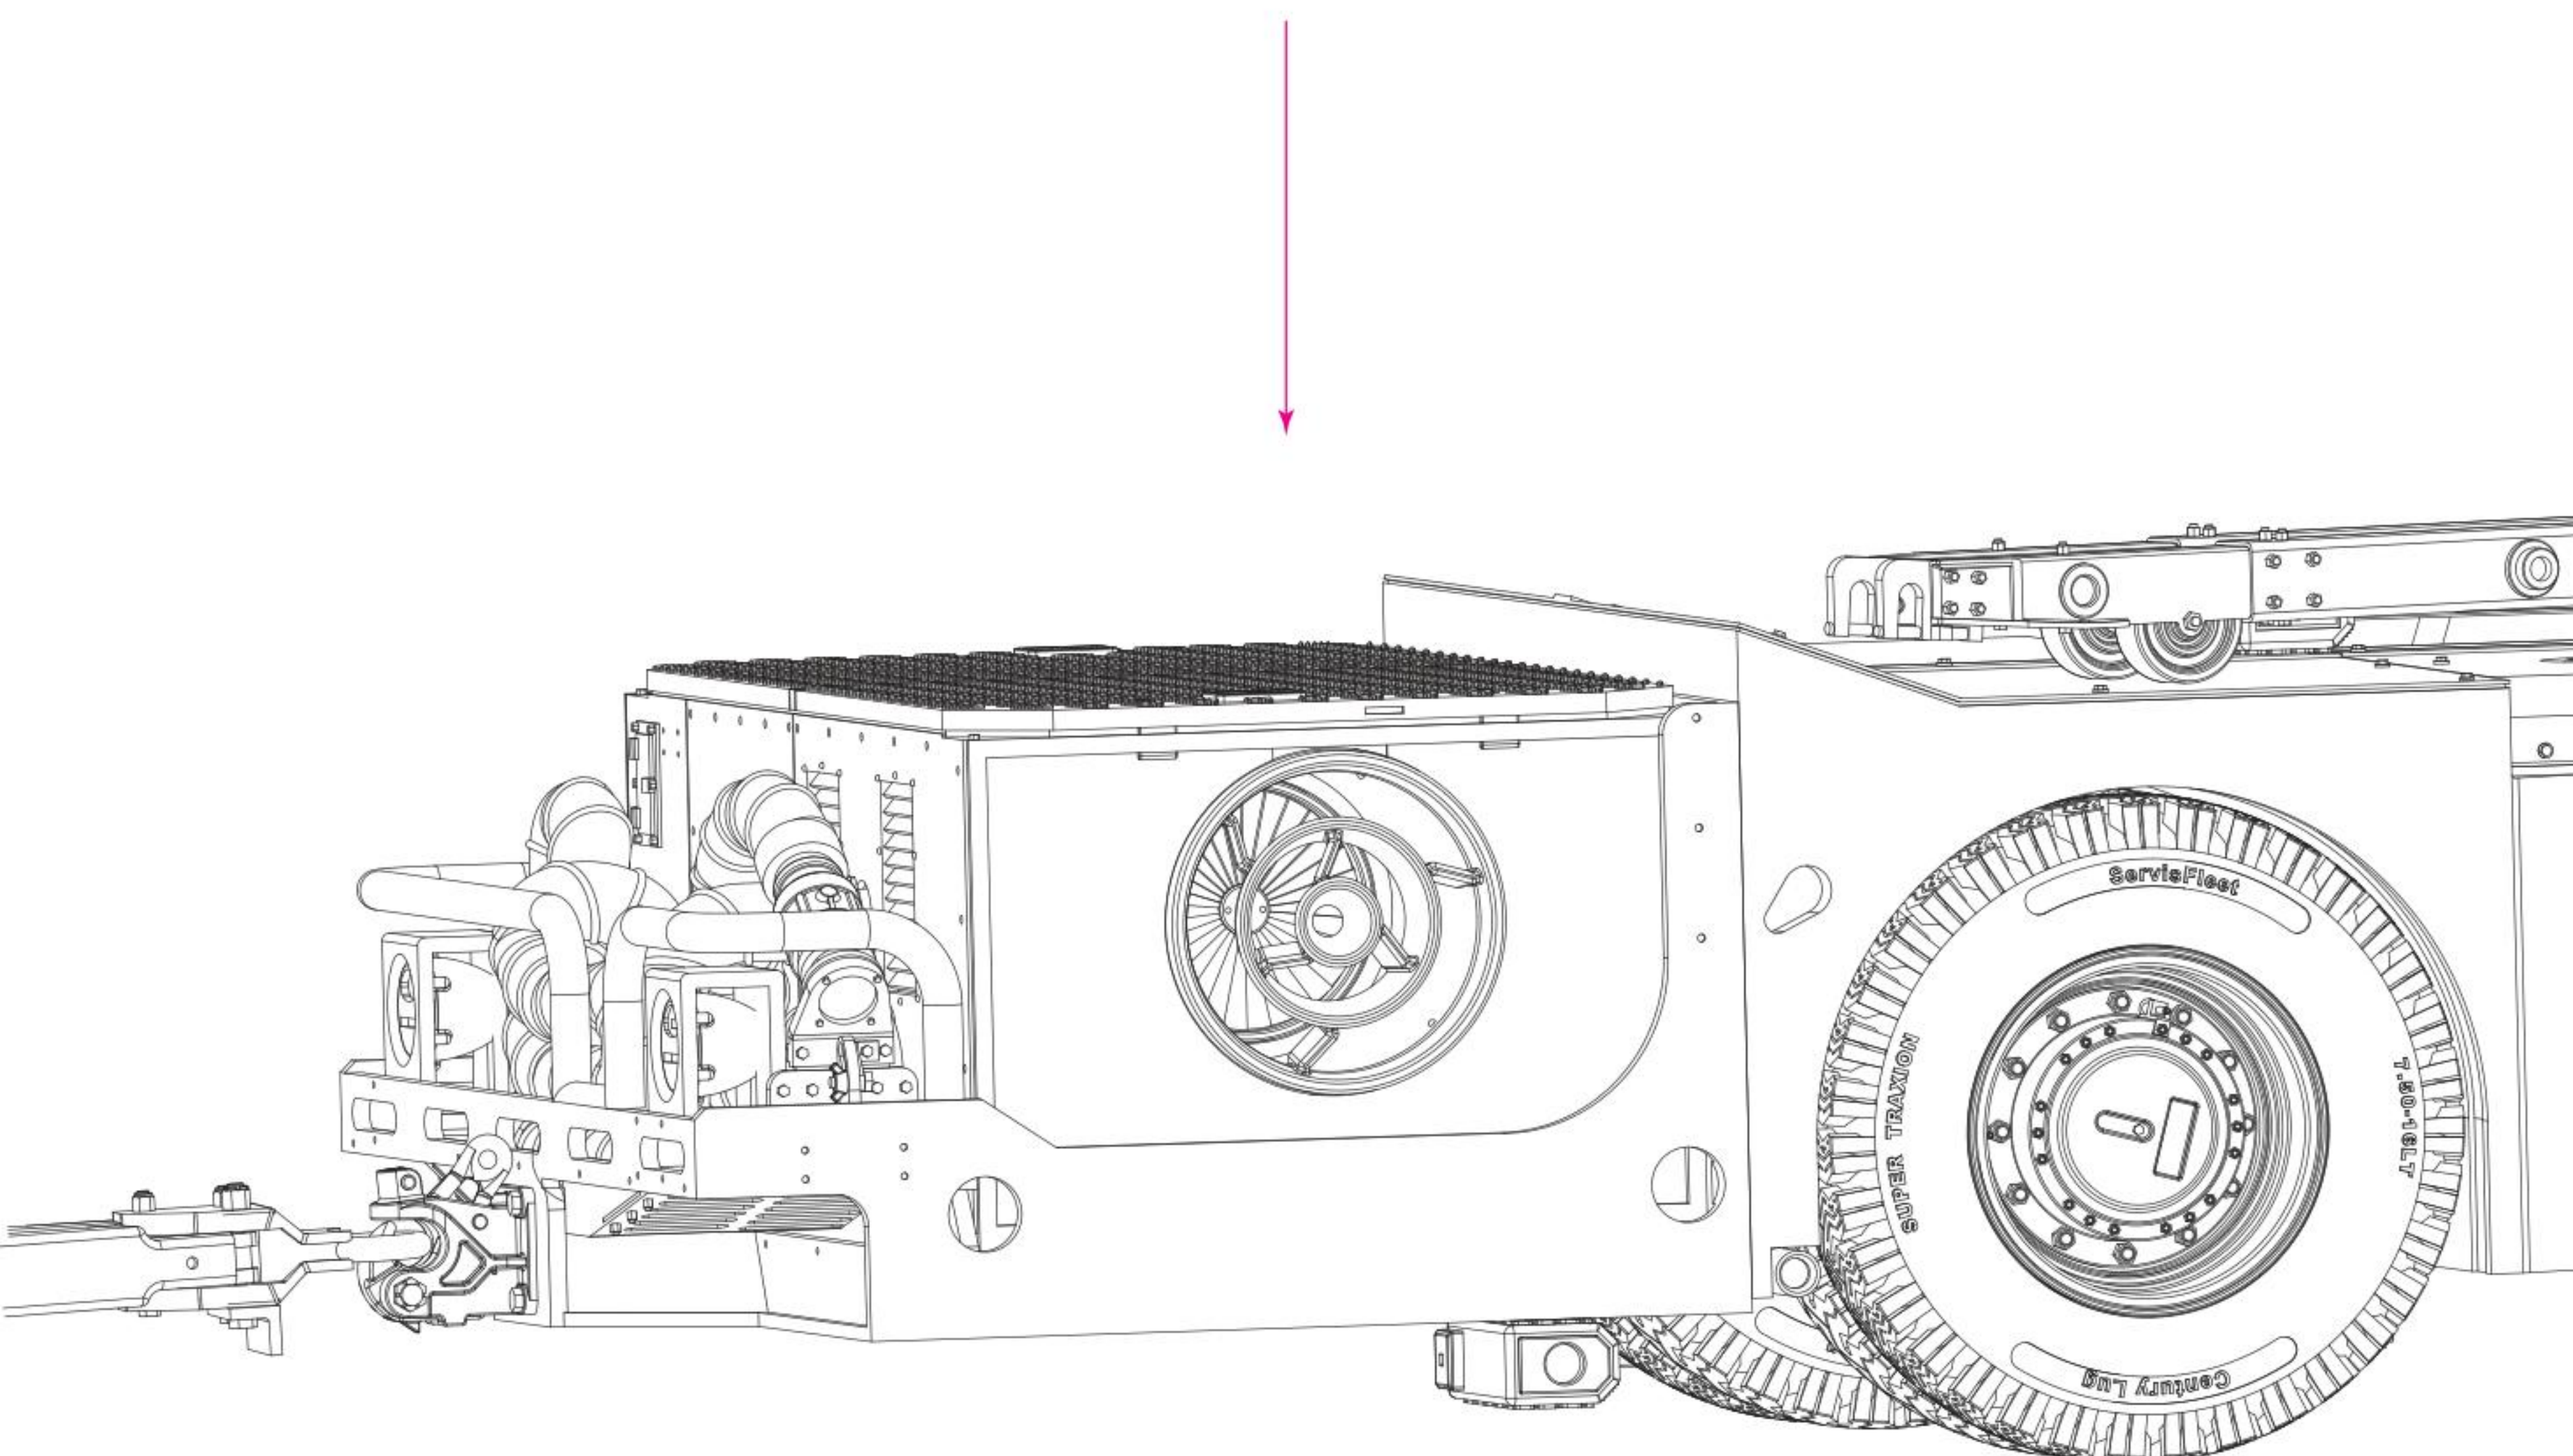

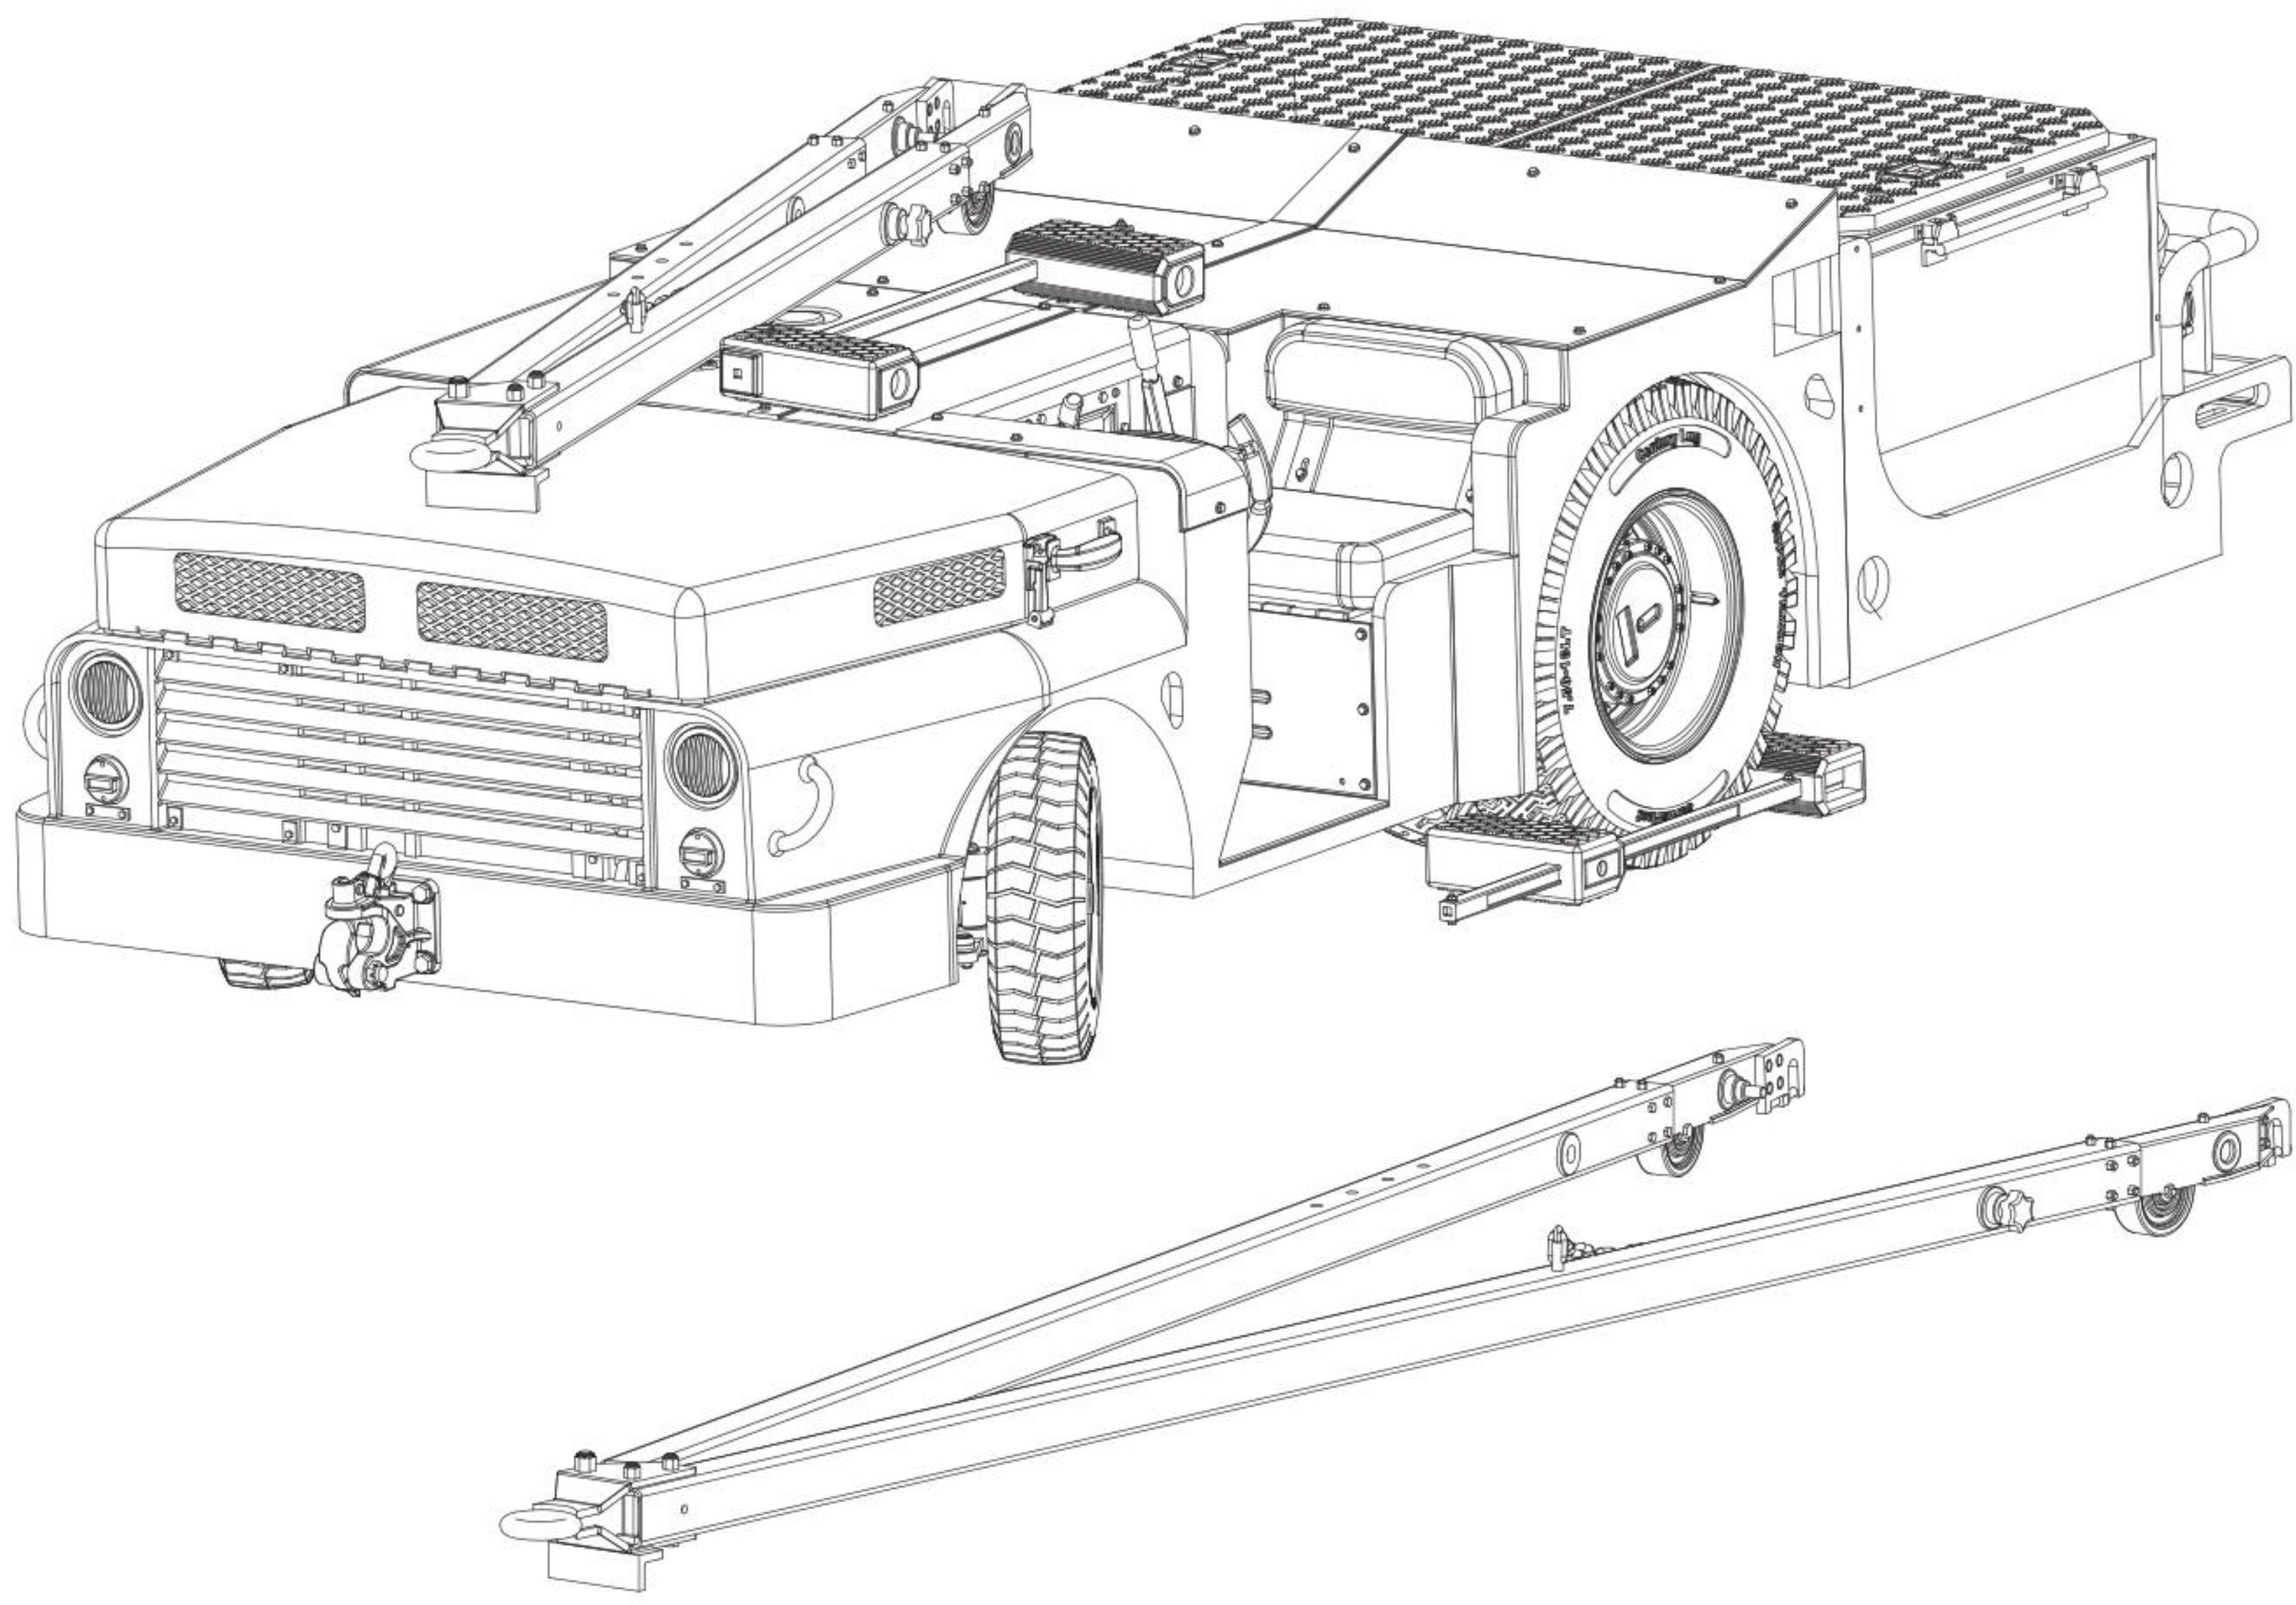

DECAL INSTRUCTION  
ALBAR UNIVERSAL AIRCRAFT TOWBAR

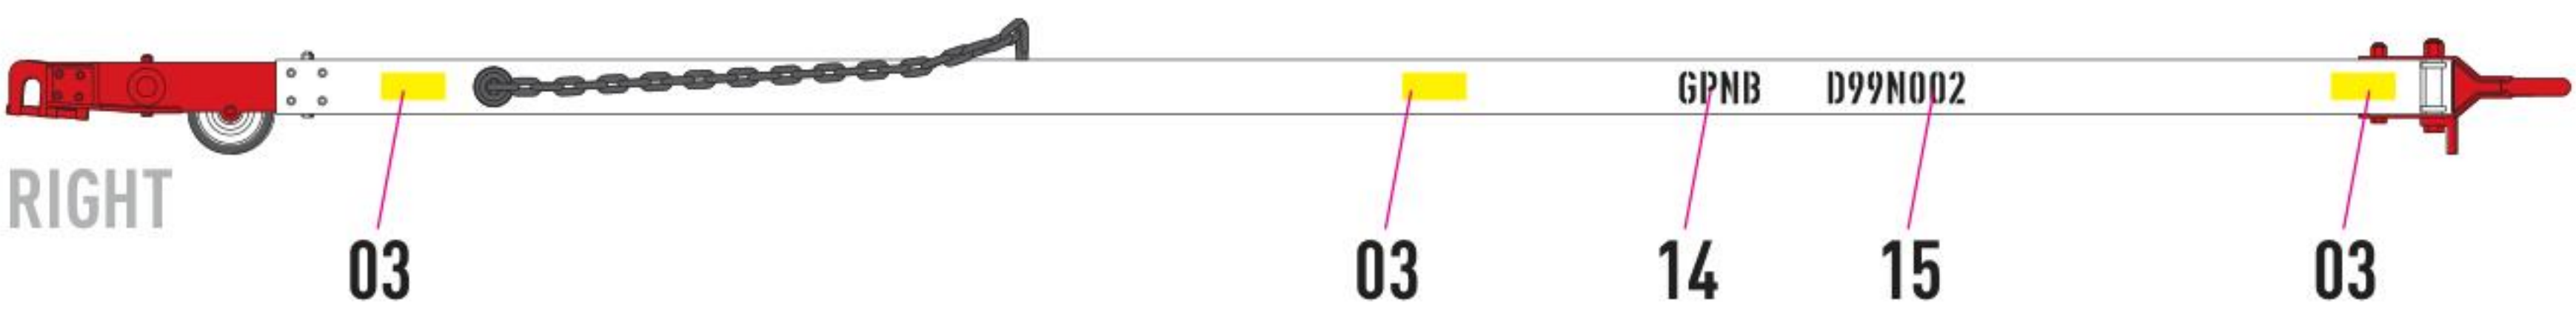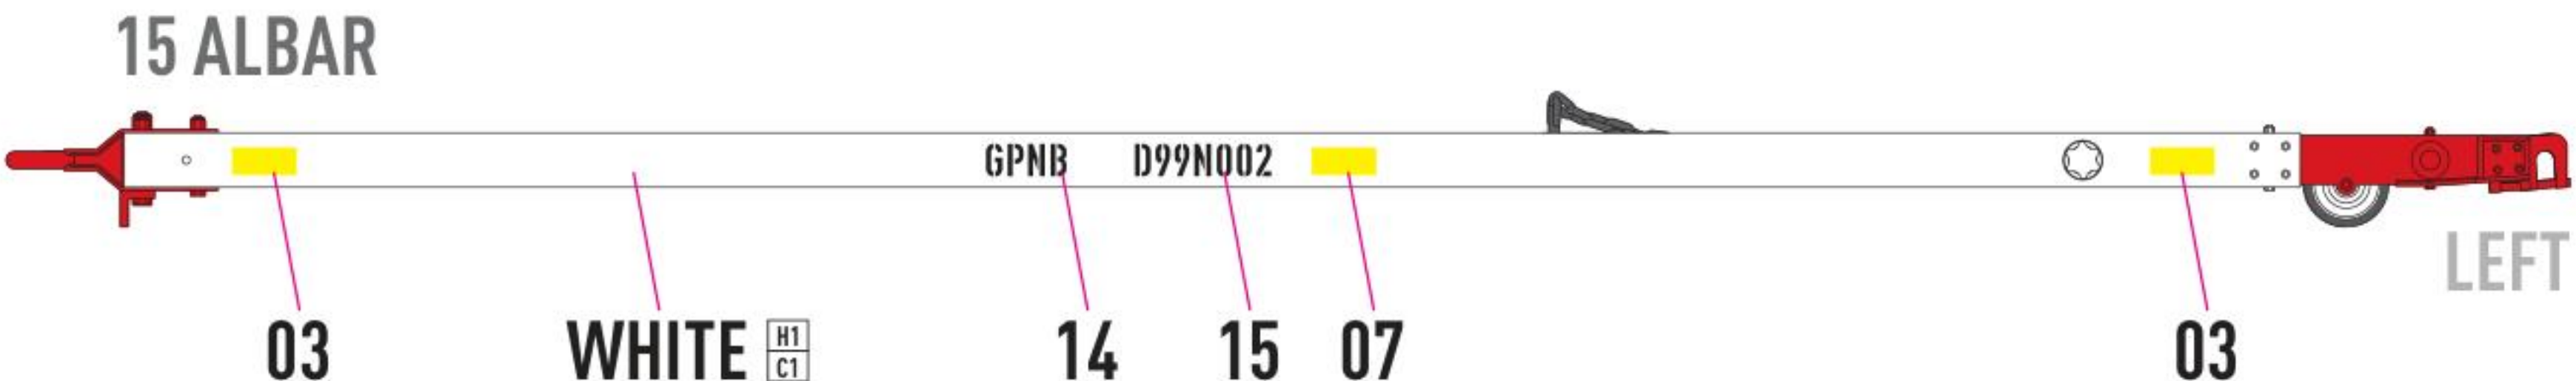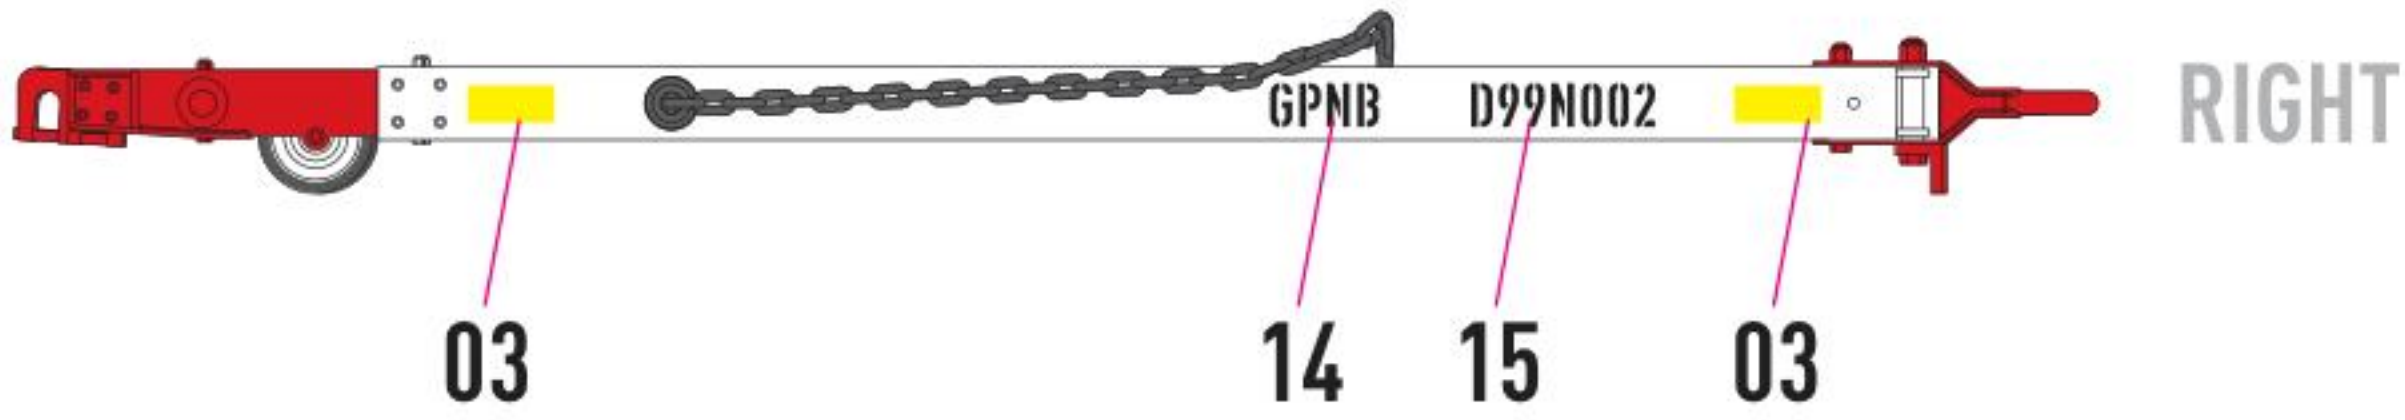

| COLORS           | GUNZE / AQEOUS | GUNZE / MR.COLOR |
|------------------|----------------|------------------|
| WHITE            | H1             | C1               |
| LIGHT GHOST GRAY | H308           | C308             |

| COLORS           | GUNZE / AQEOUS | GUNZE / MR.COLOR |
|------------------|----------------|------------------|
| SEMI GLOSS BLACK |                | C92              |
| RED              | H3             | C3               |

