


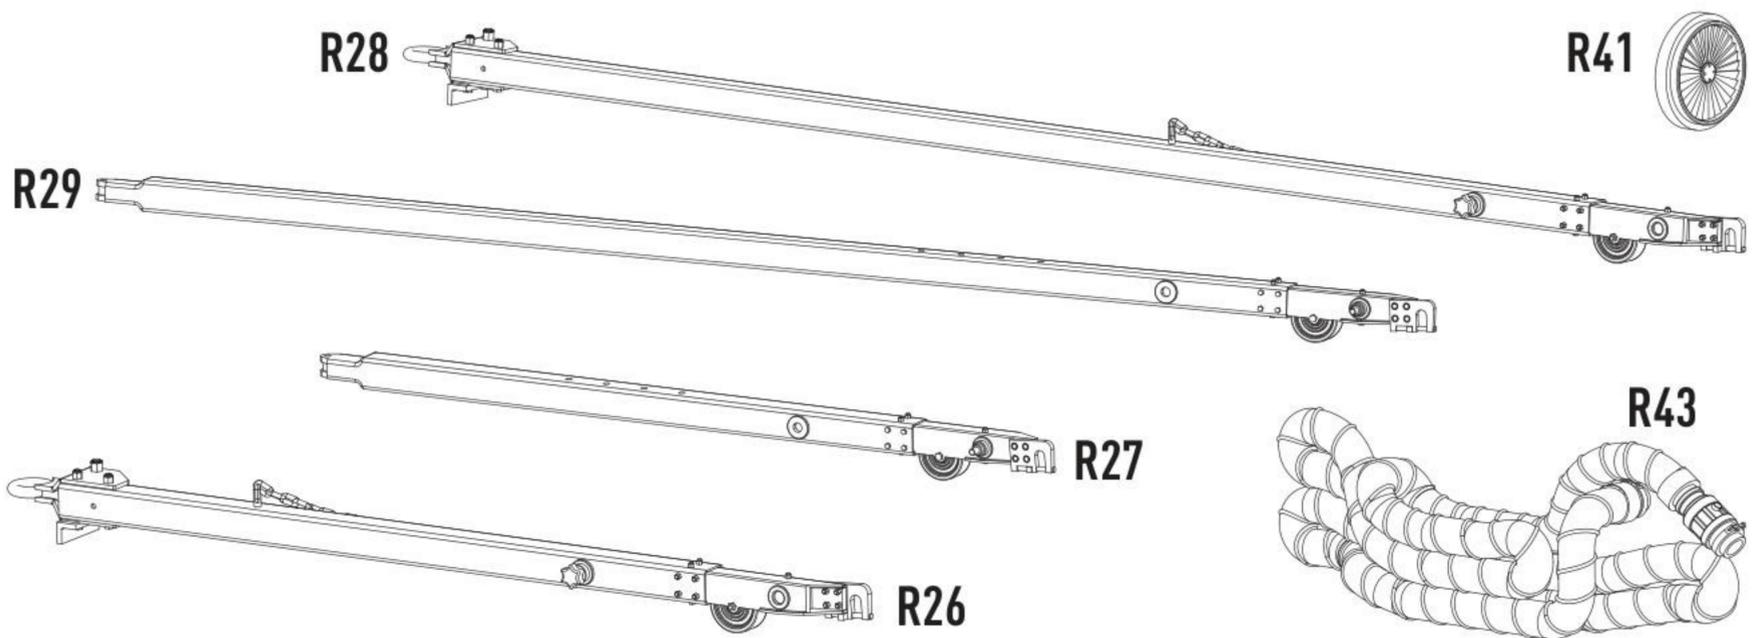
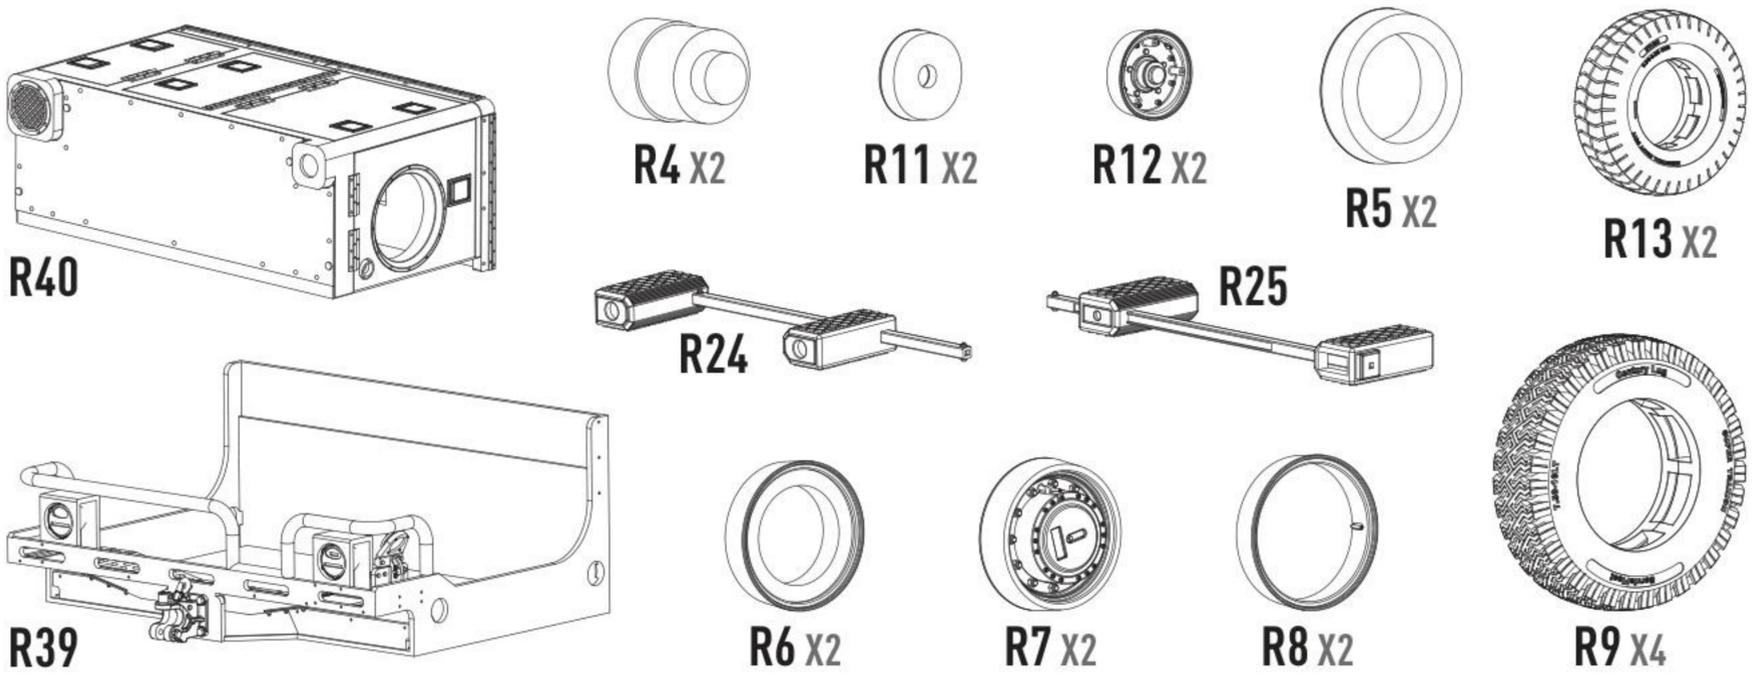
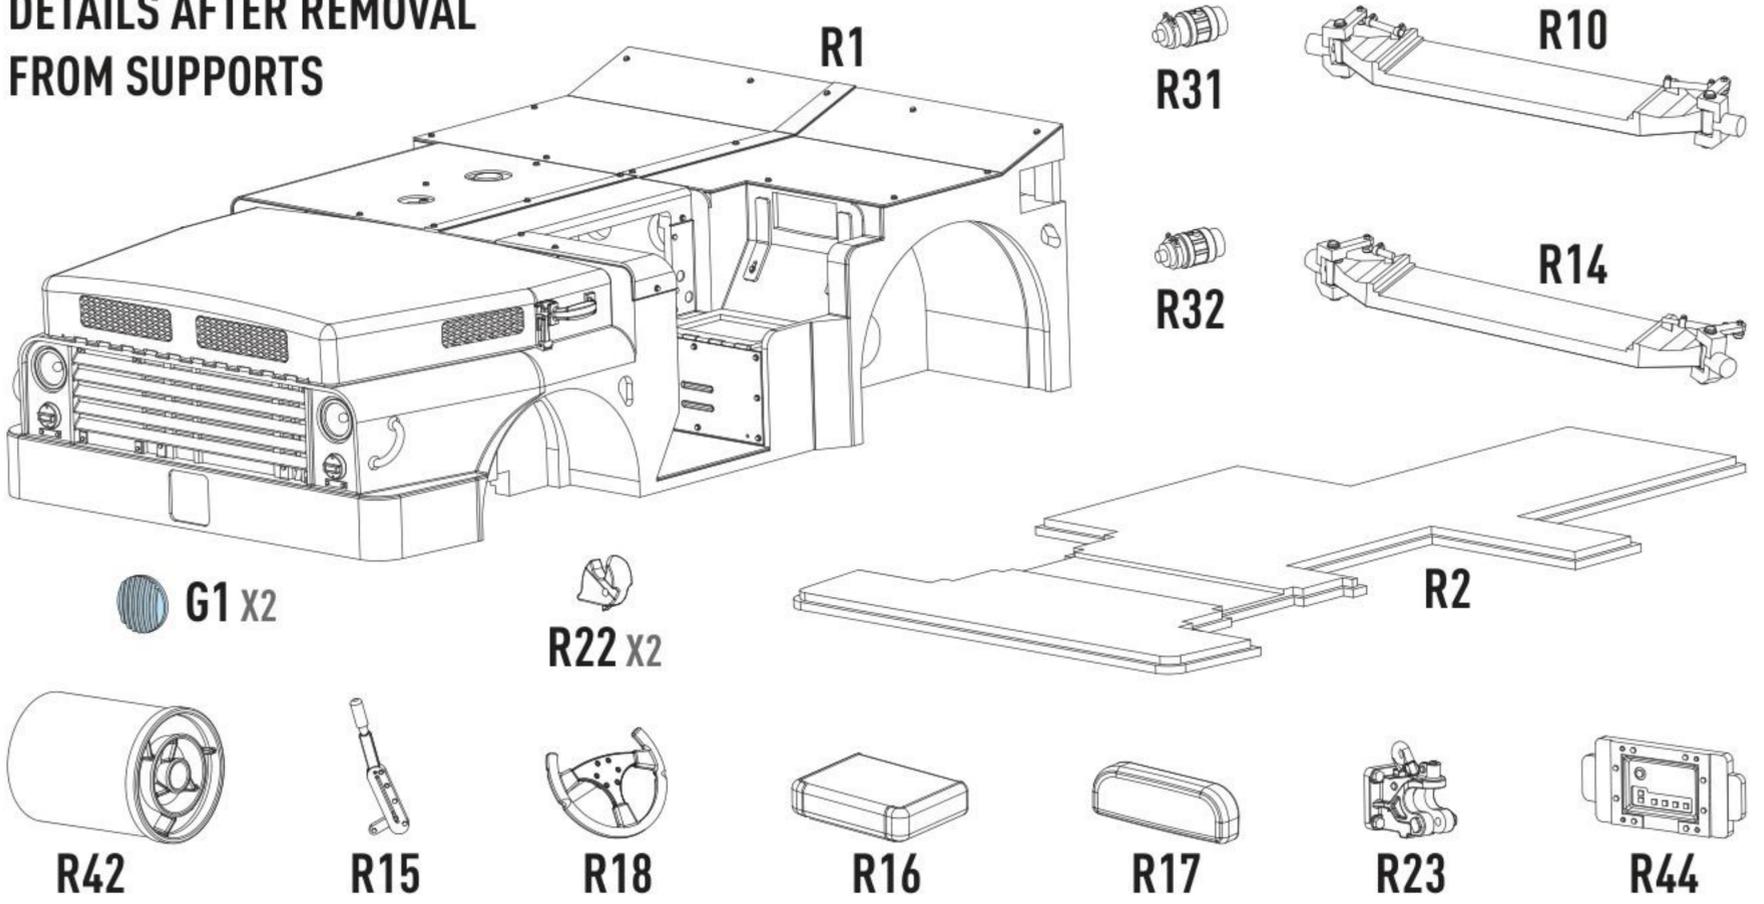


DETAILS AFTER REMOVAL  
FROM SUPPORTS

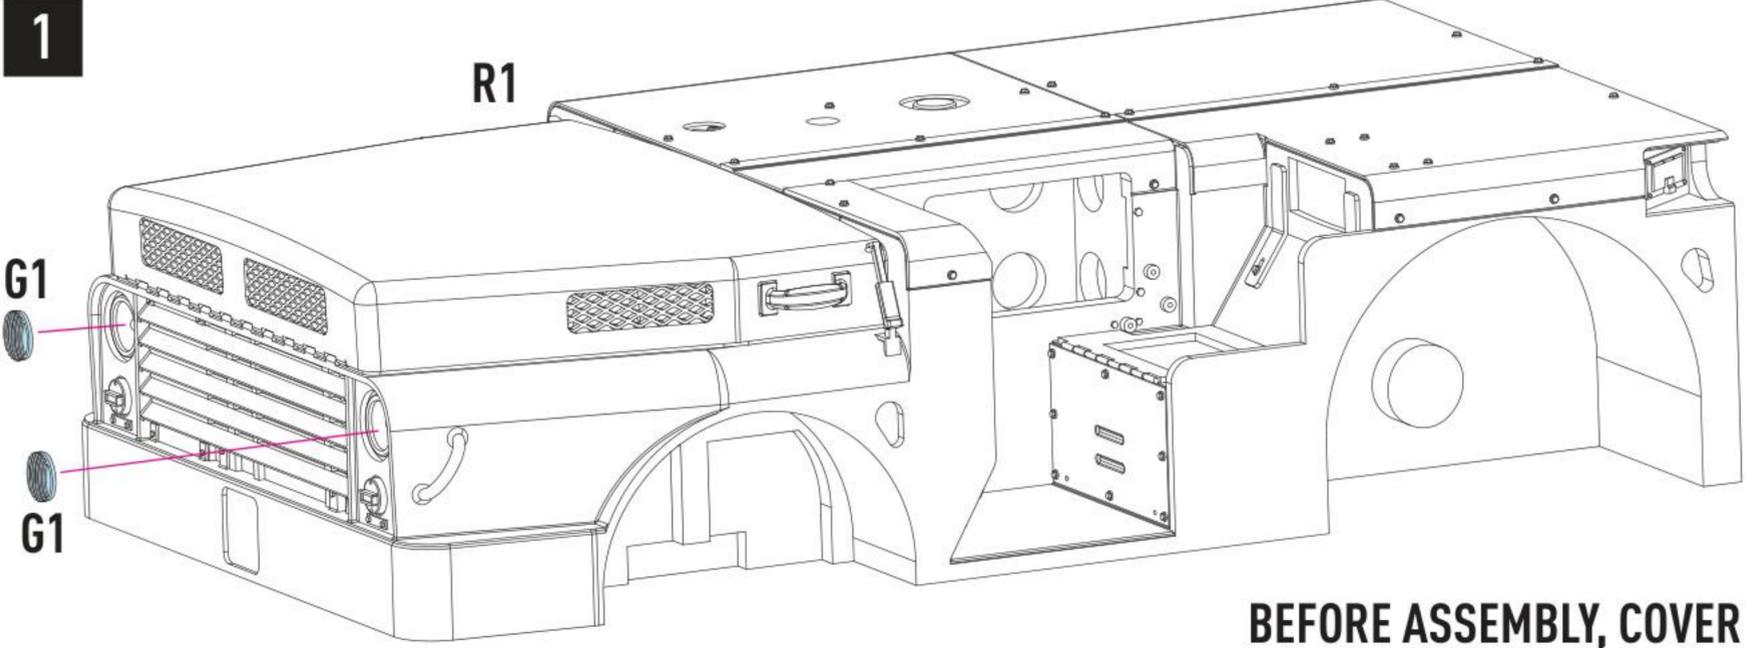


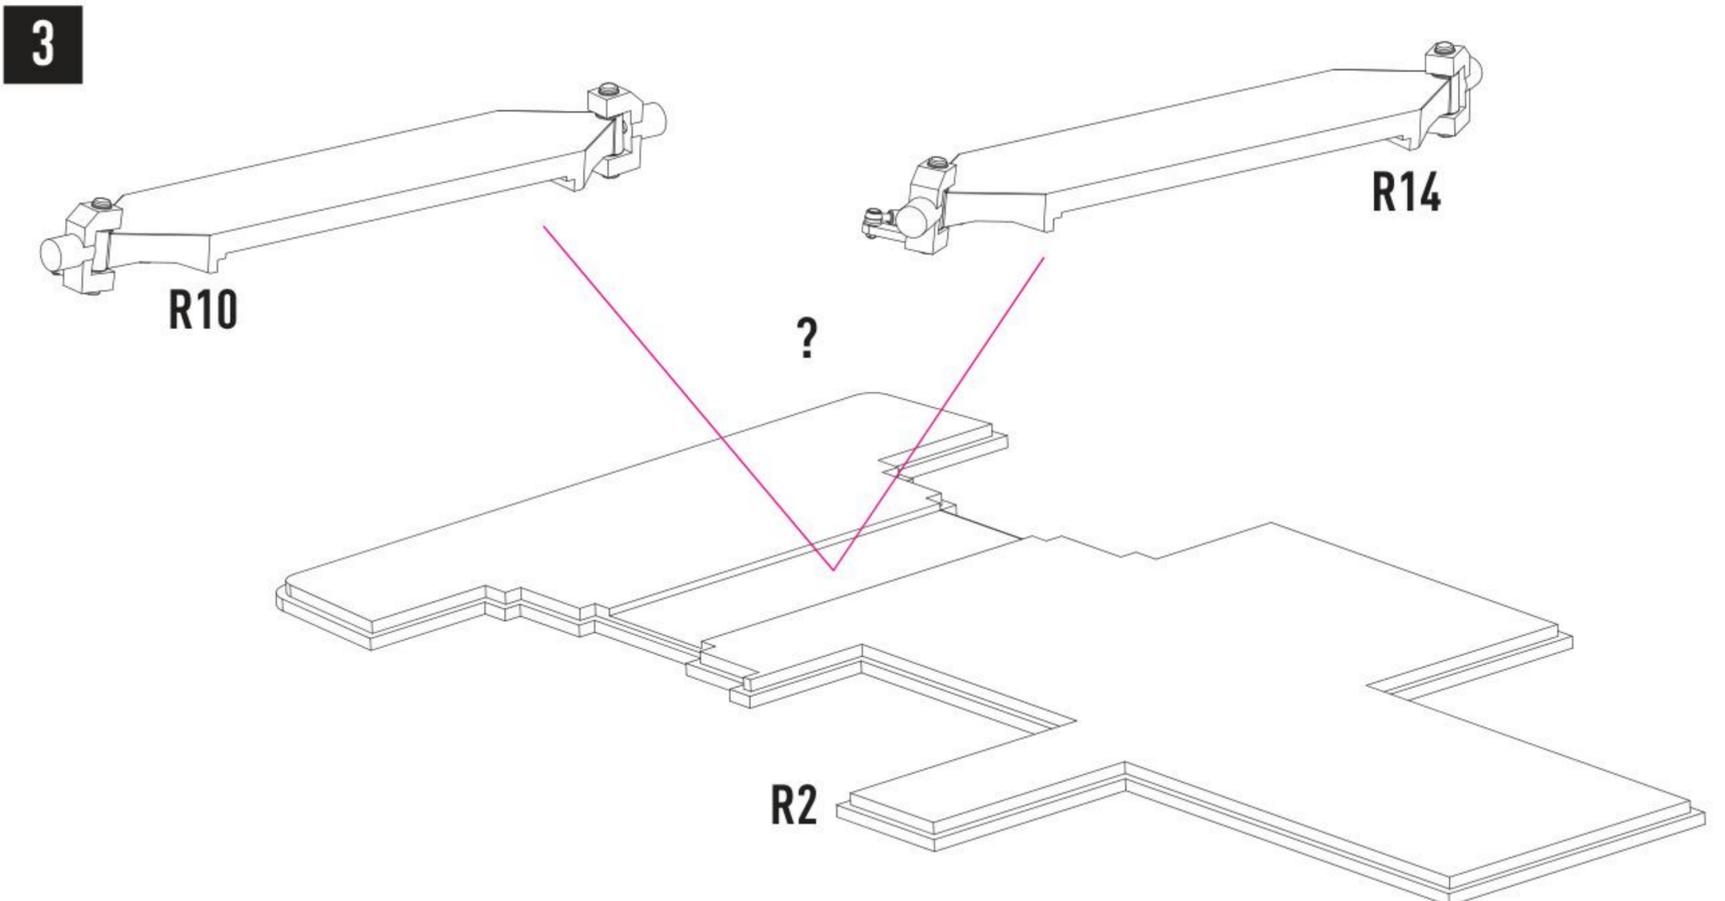


**BEFORE ASSEMBLY, COVER  
TRANSPARENT PARTS WITH GLOSSY VARNISH**

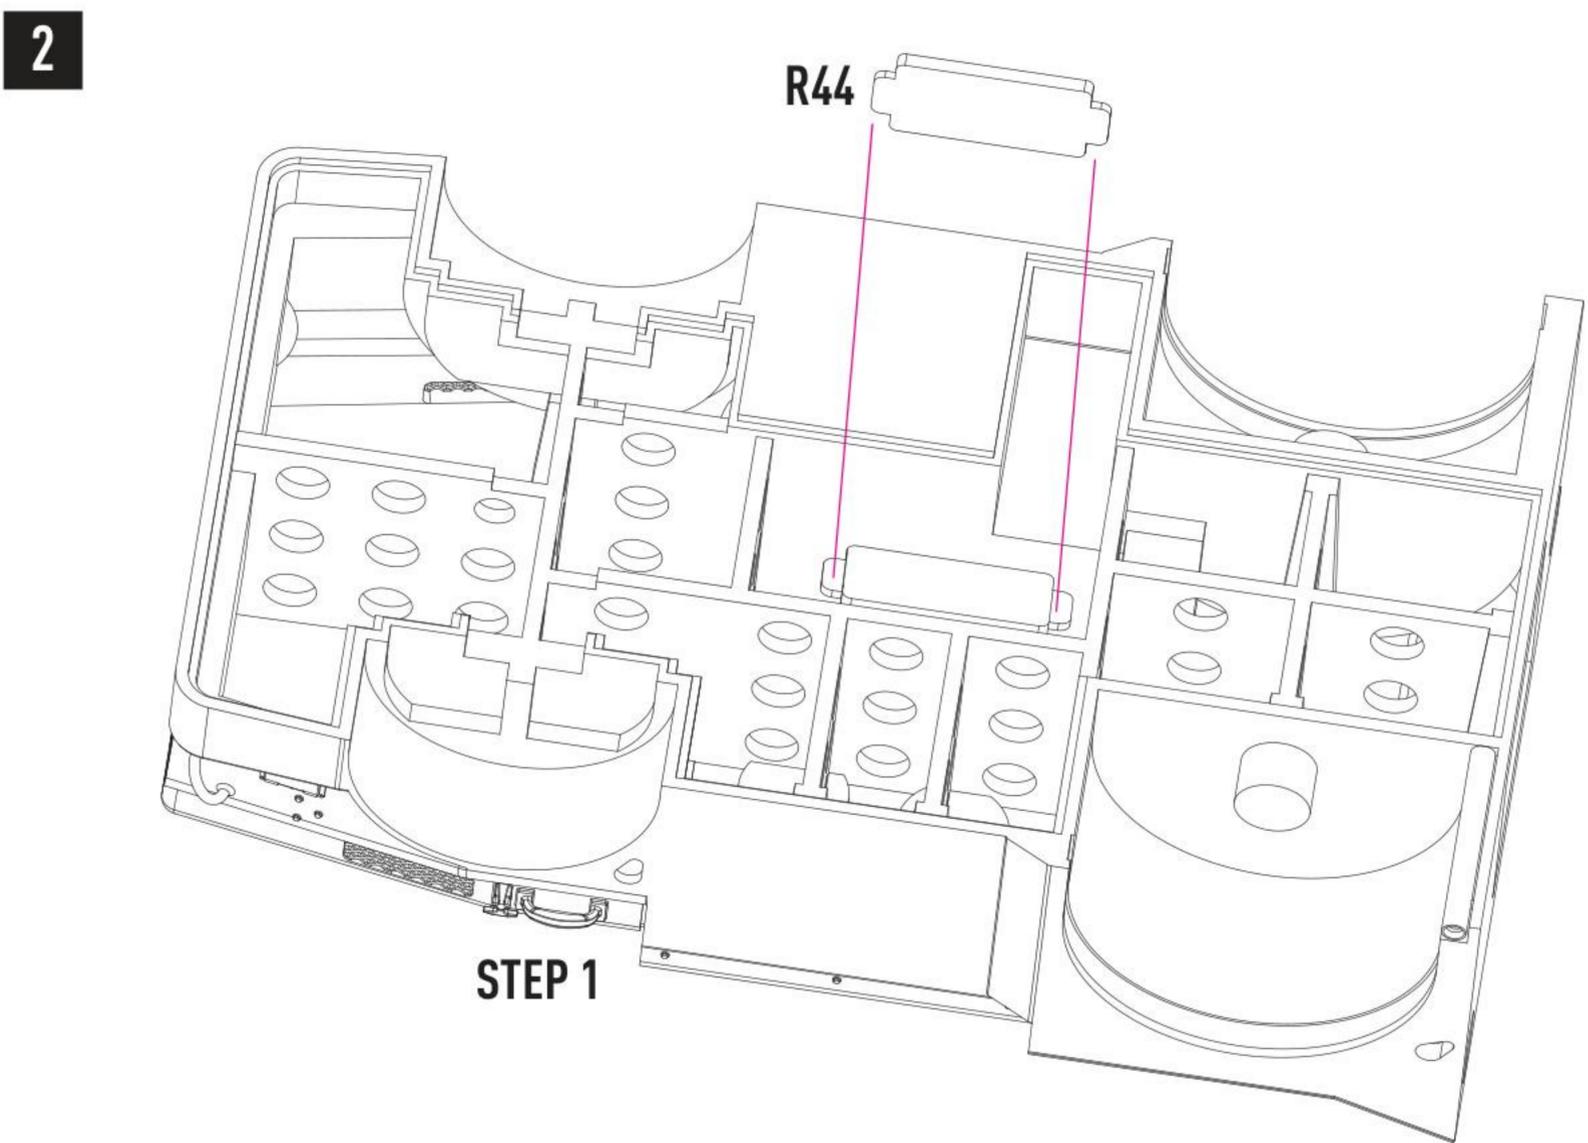


**4**

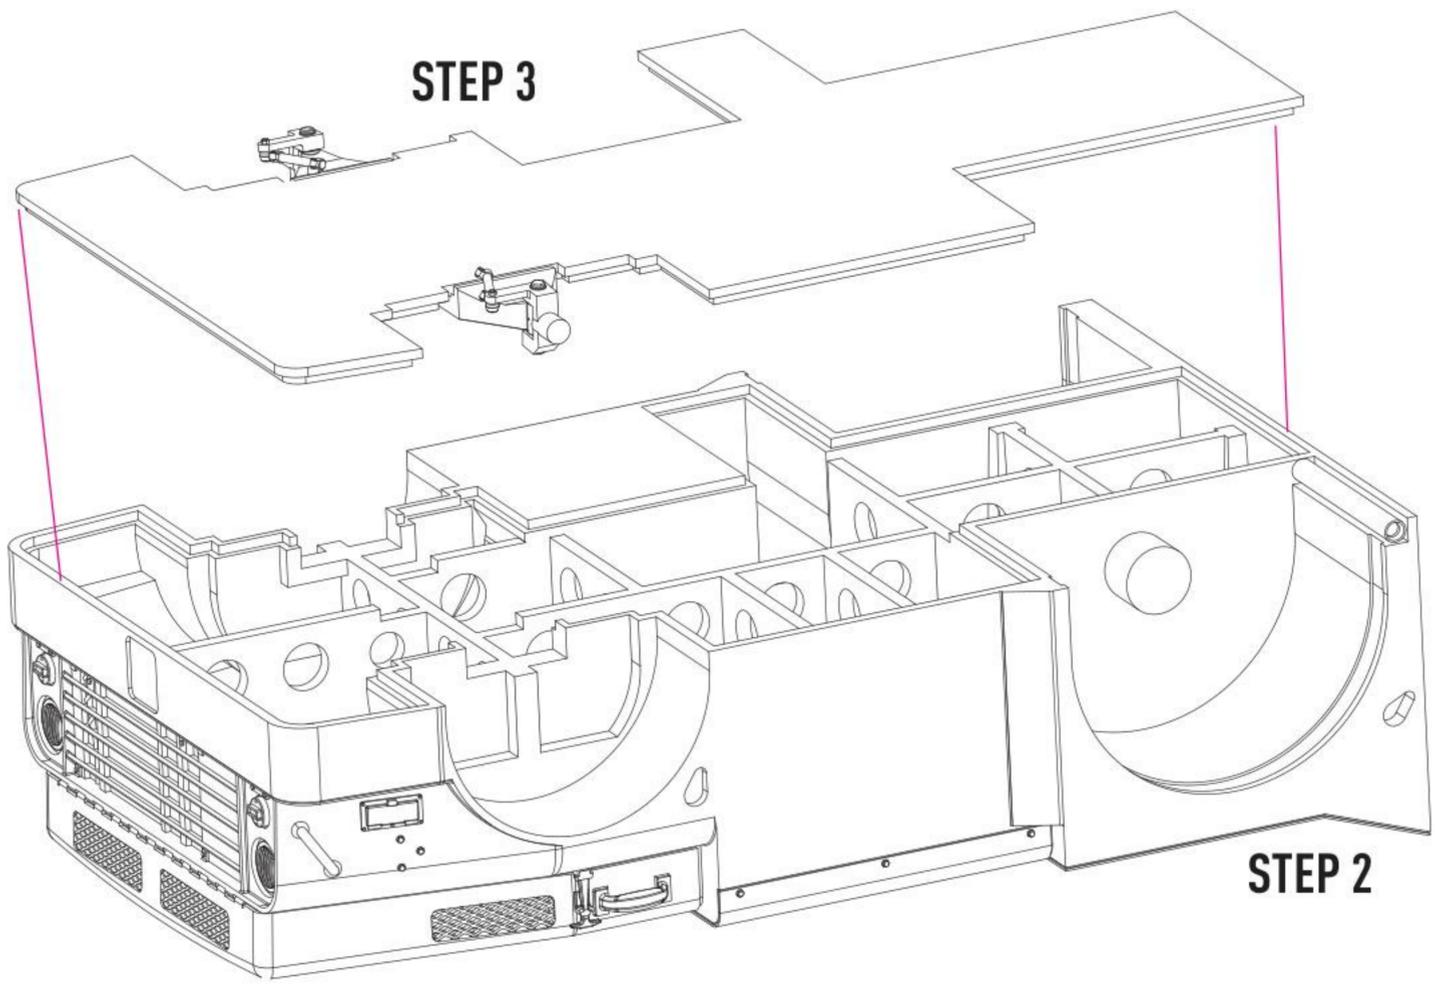


**5**

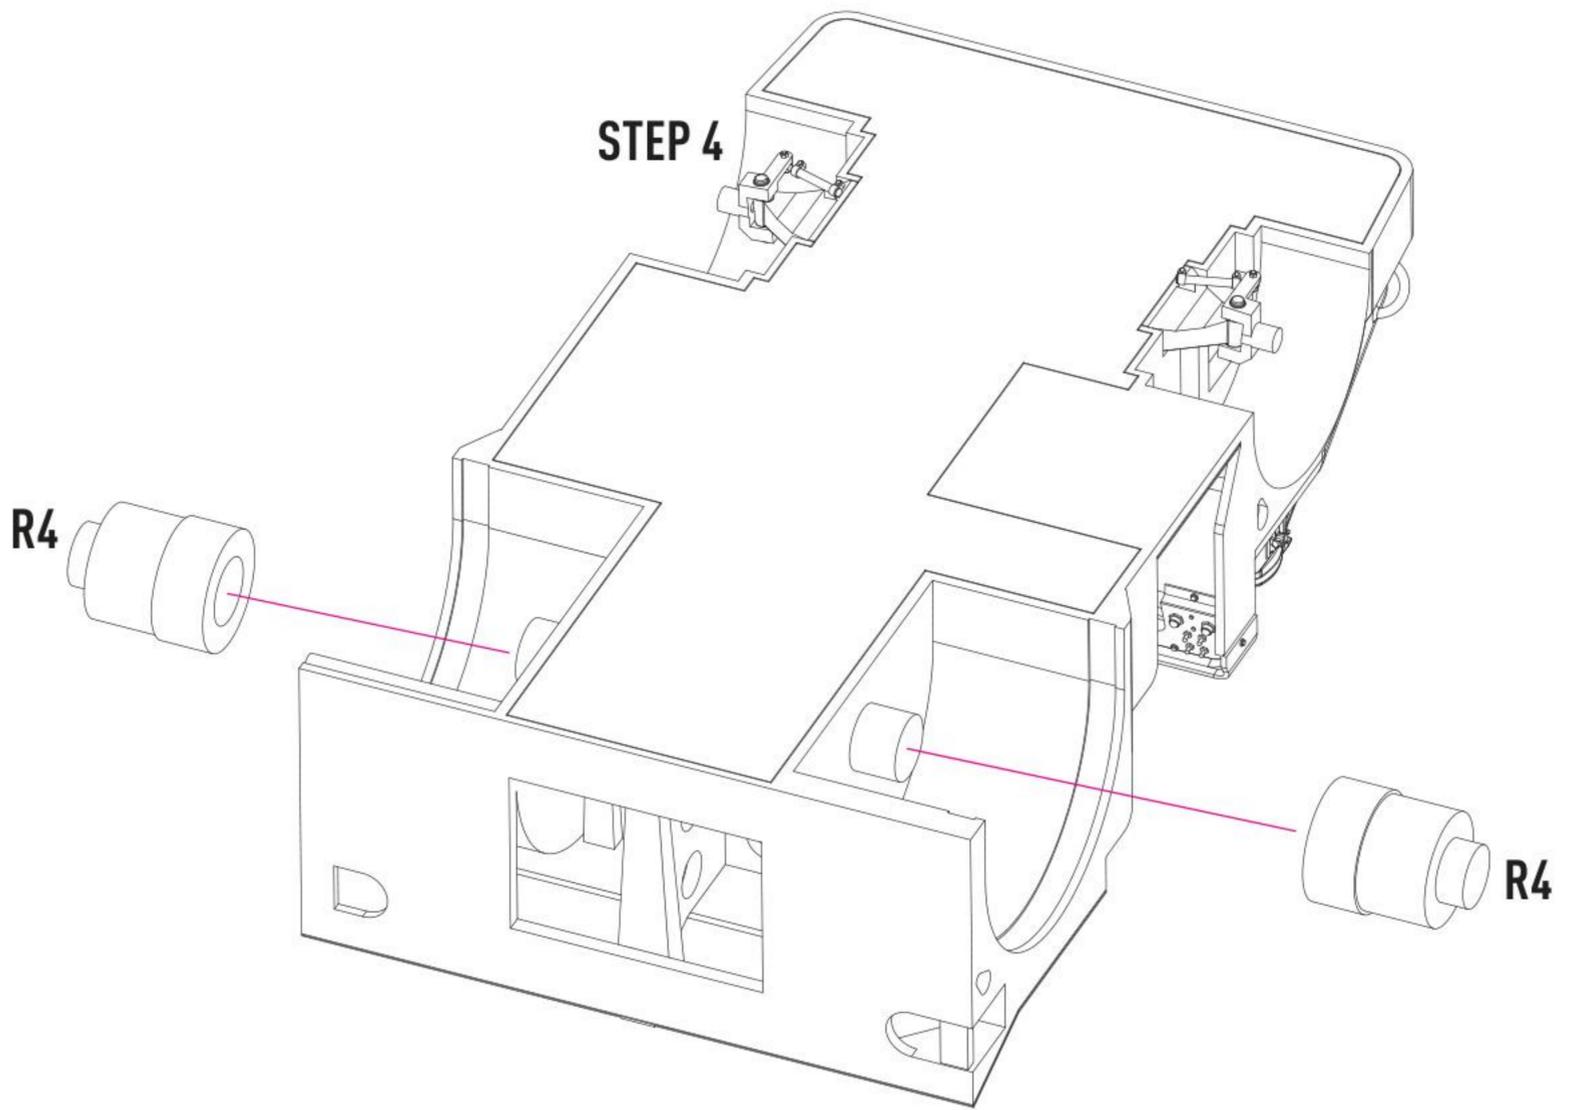


**6 X2**

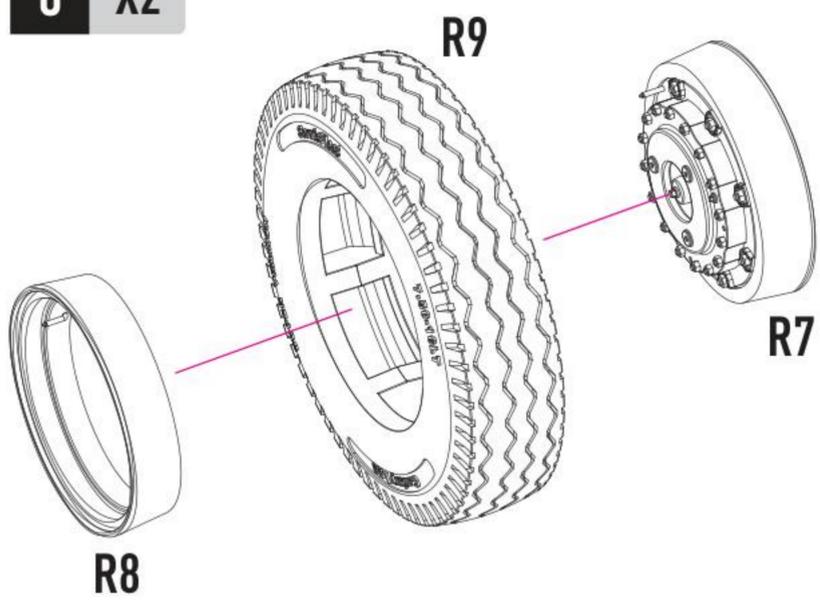


**7 X2**

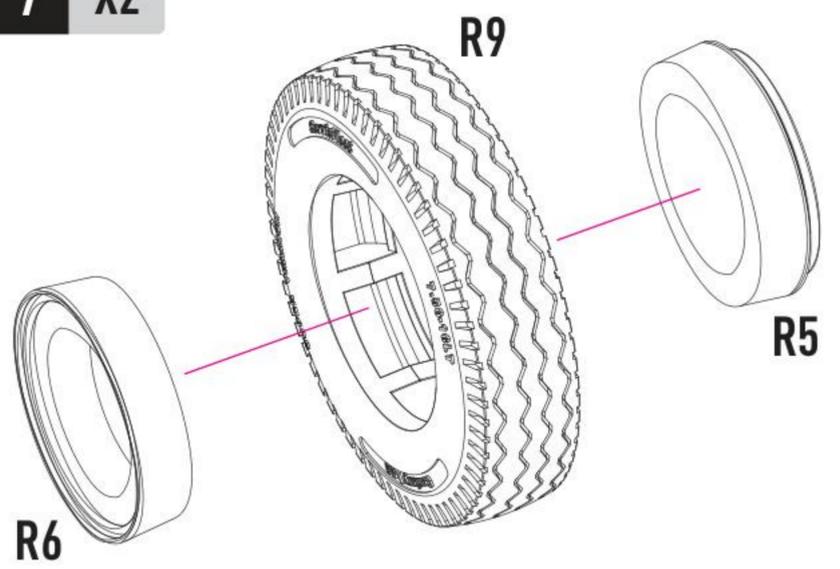


**8** X2


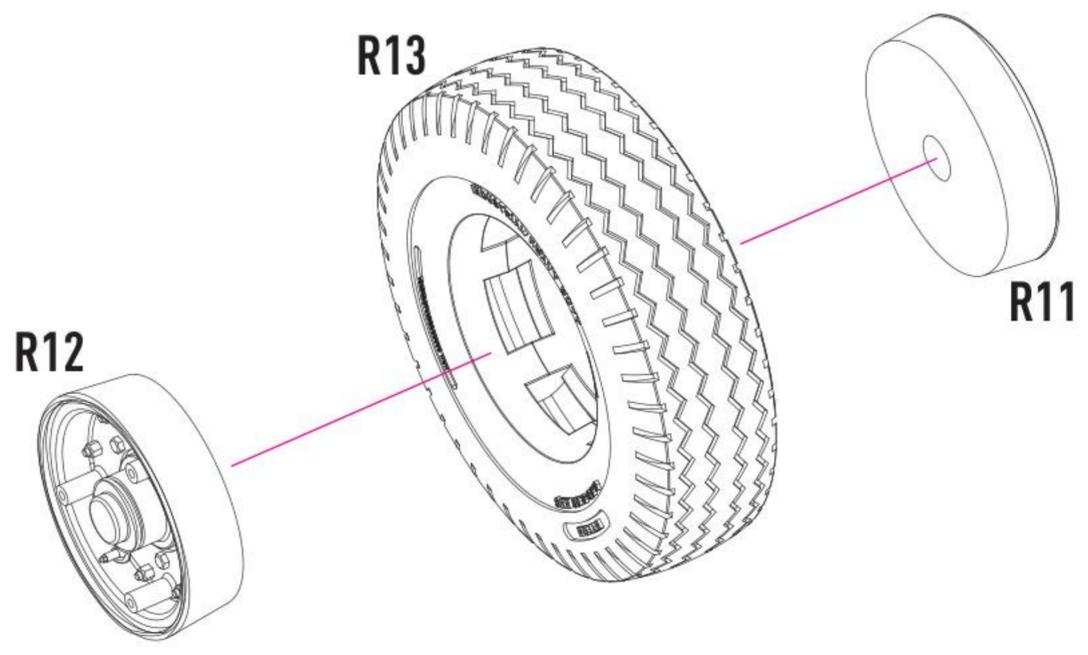


**9**

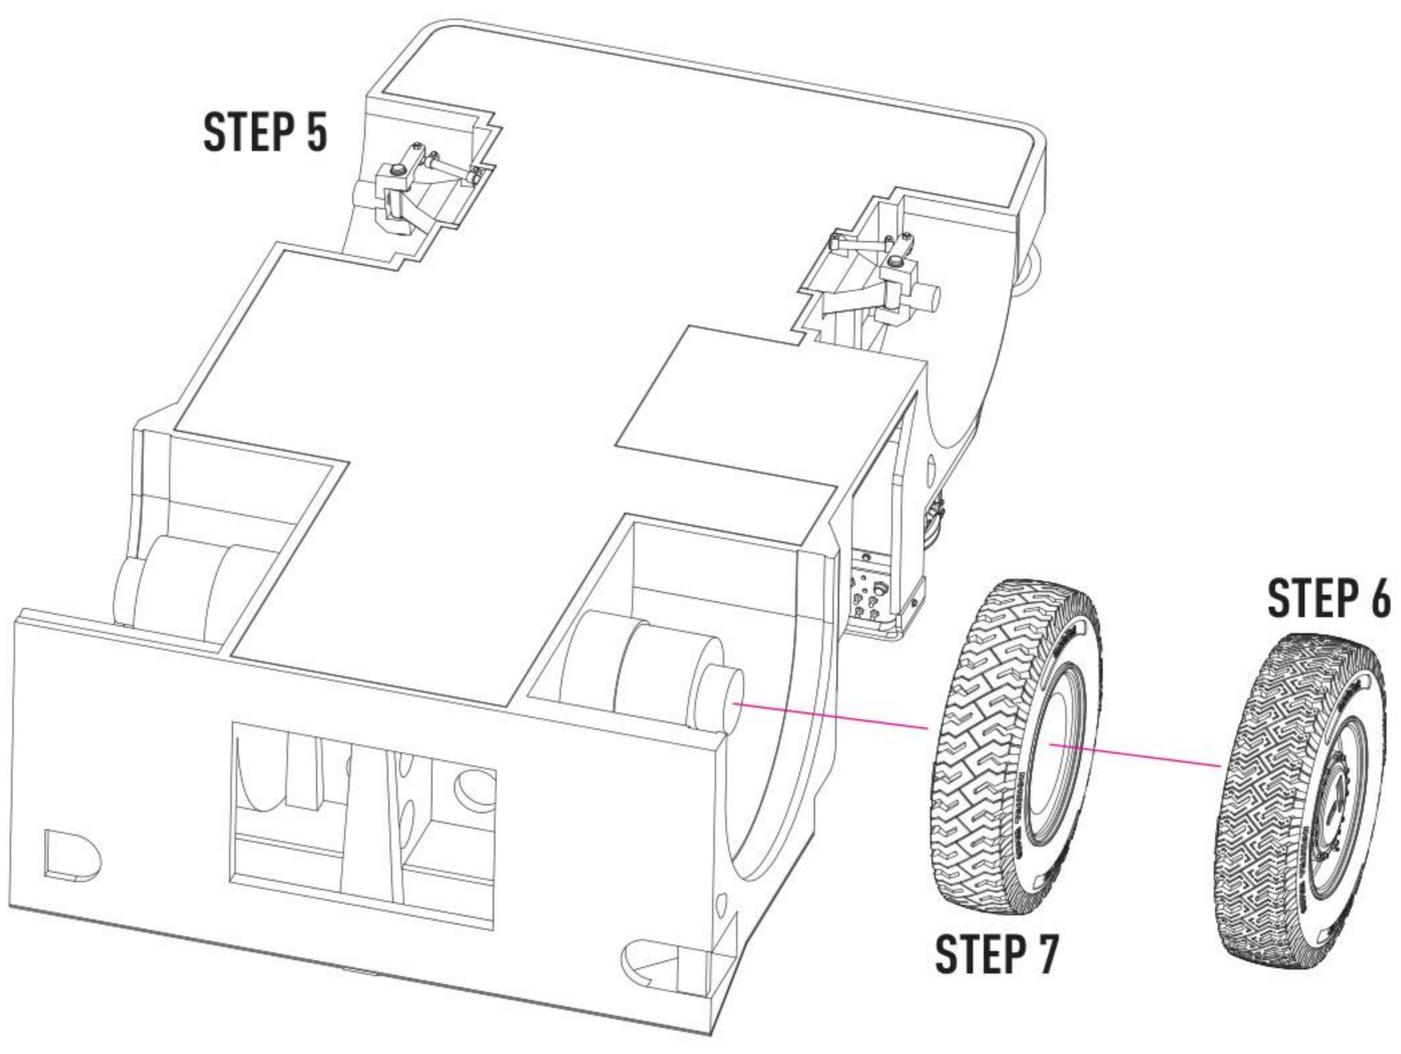


**10**

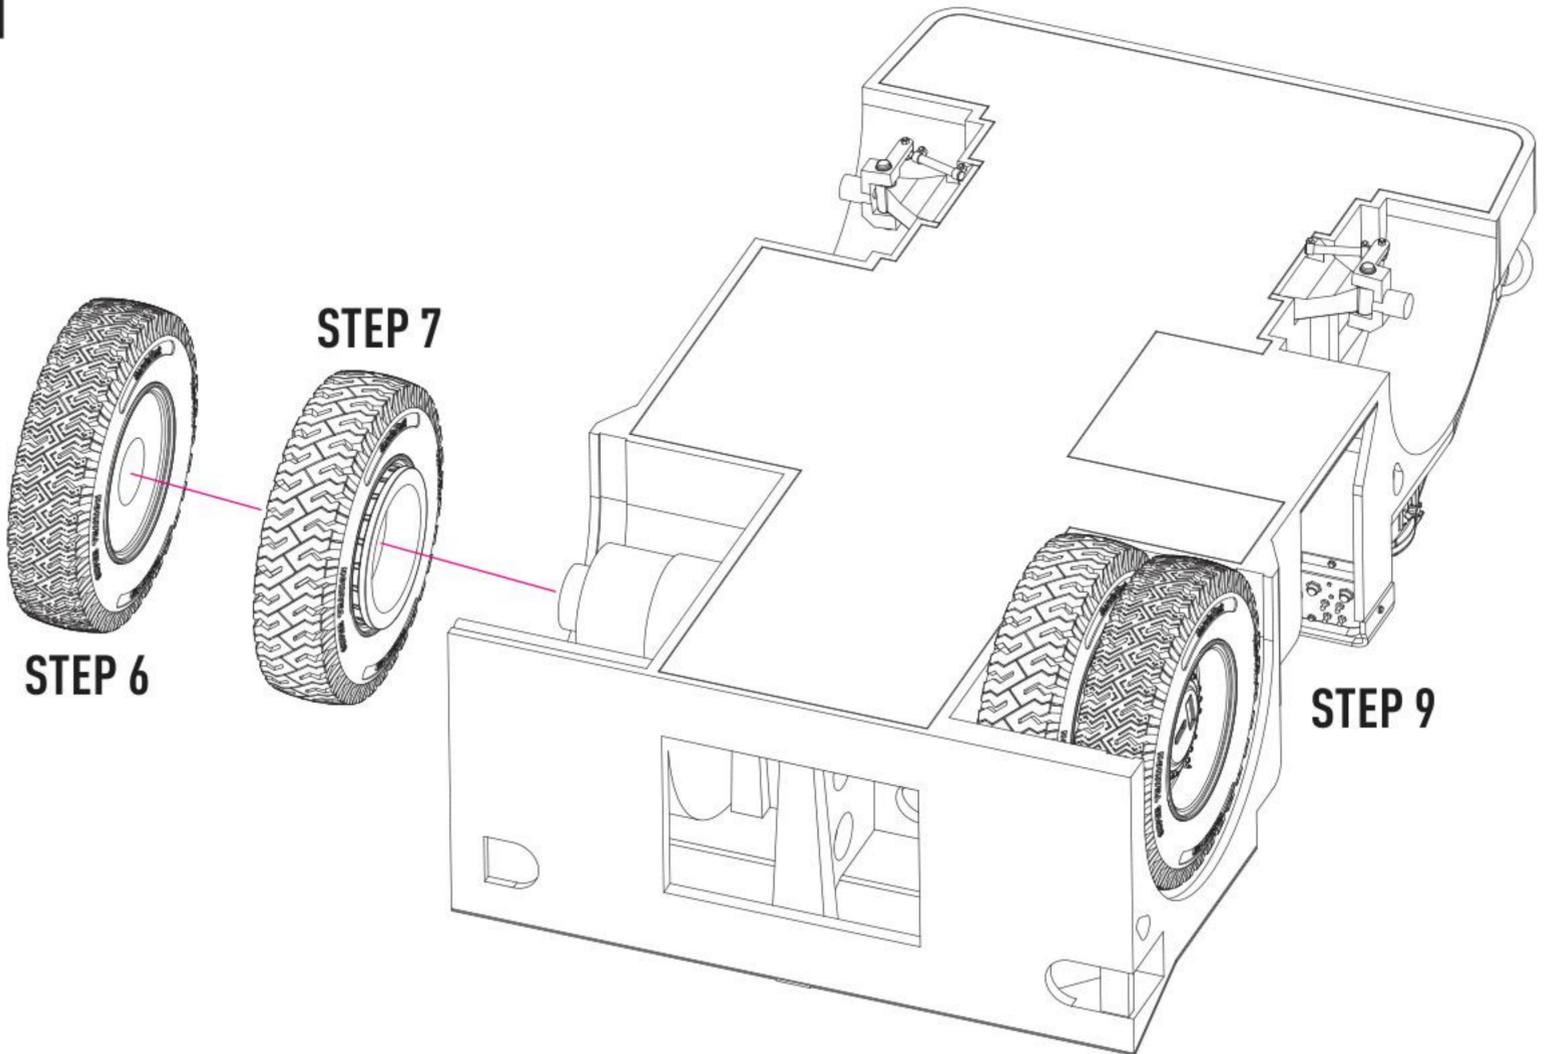


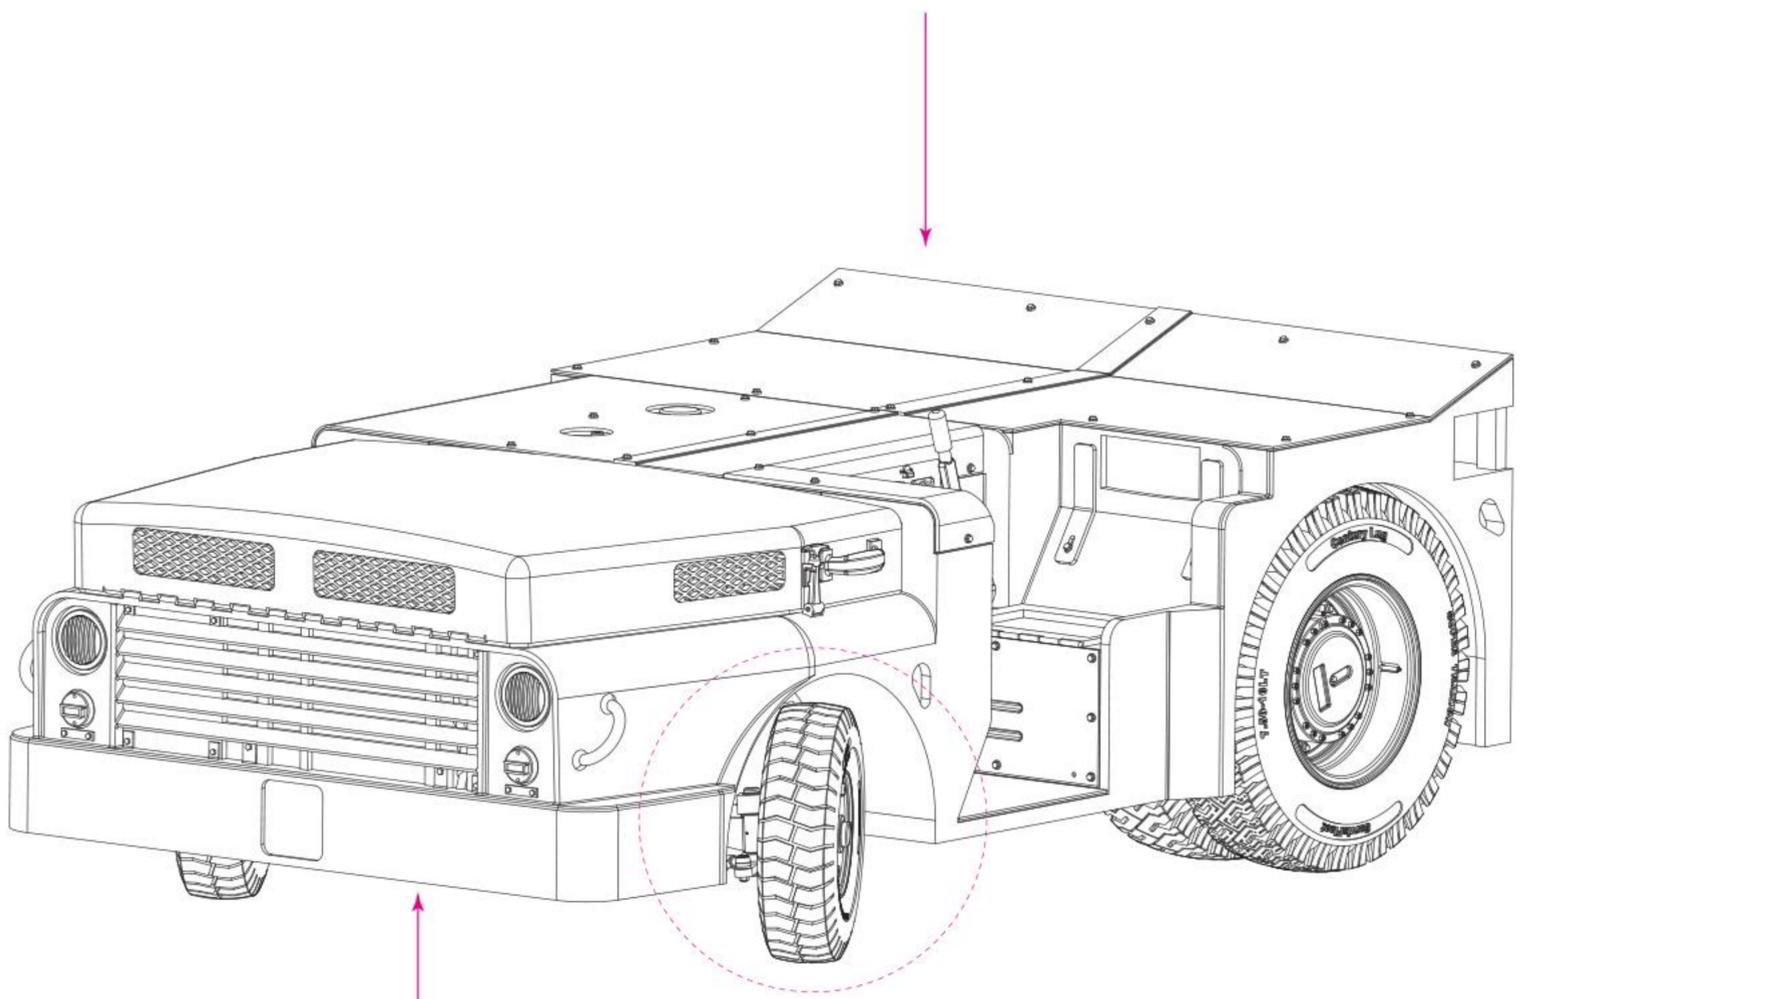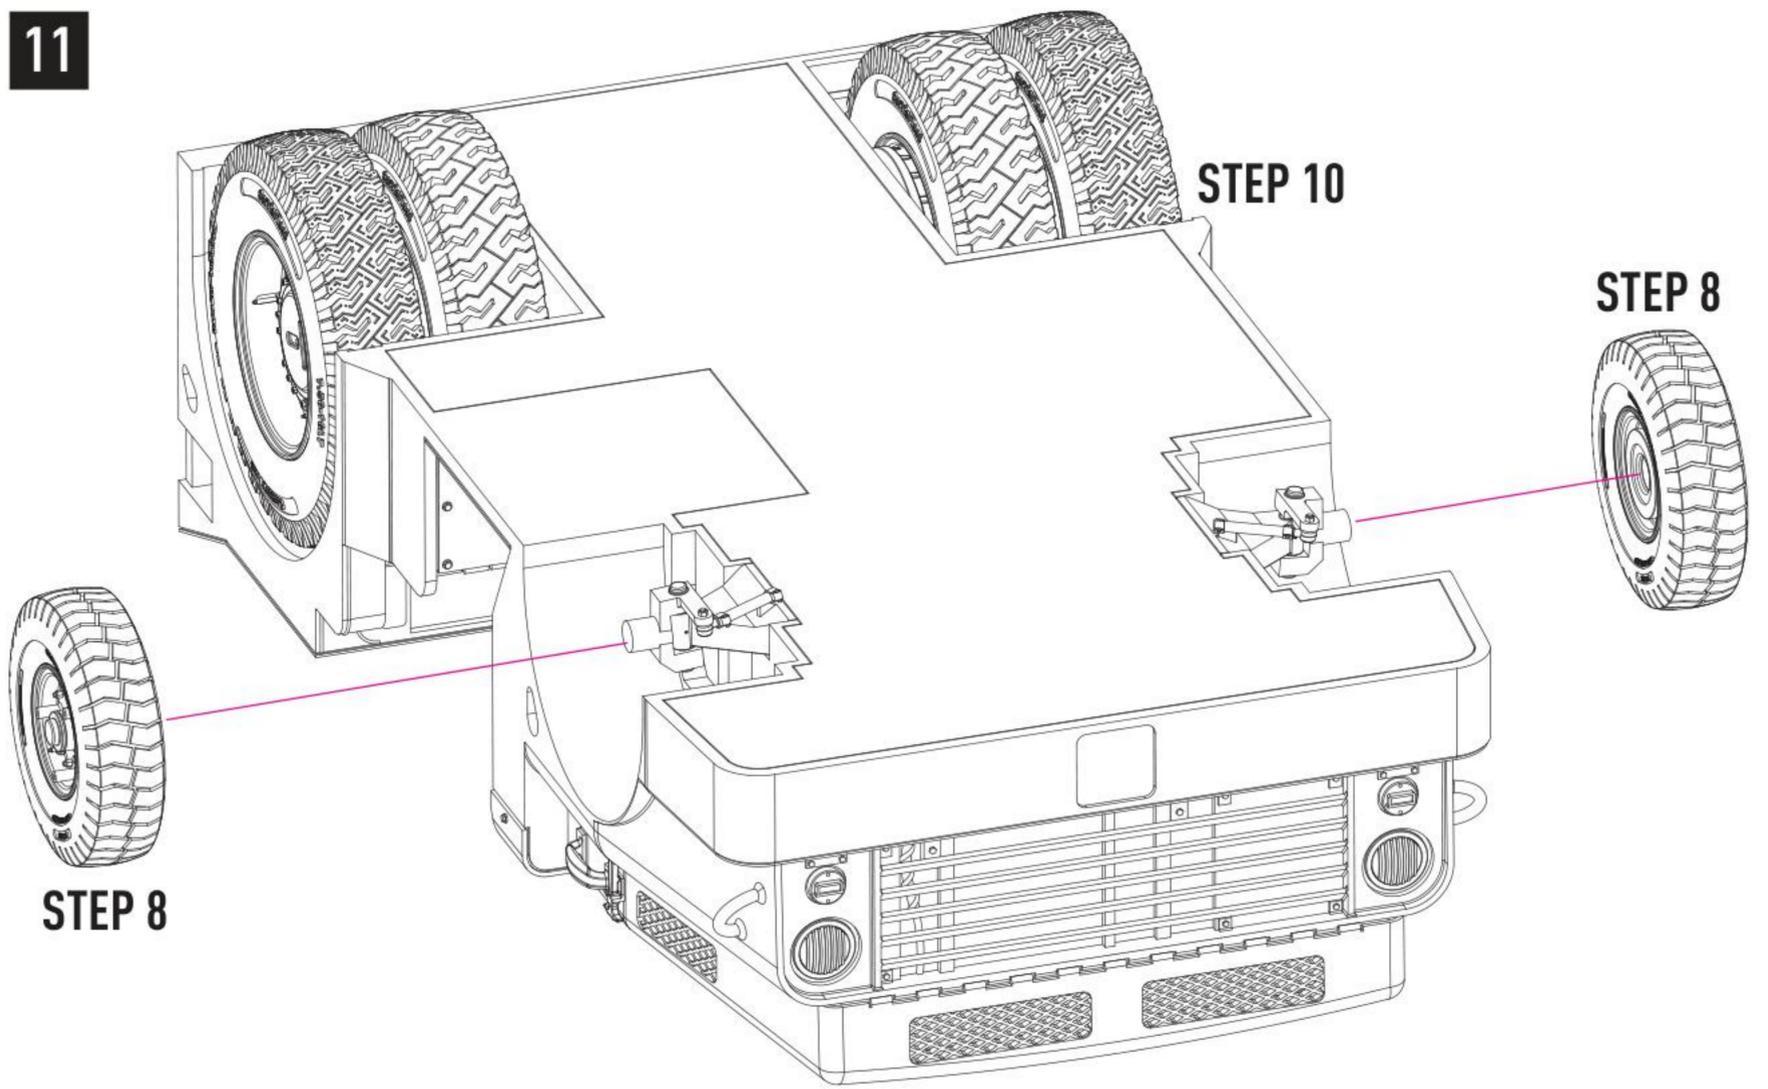


?

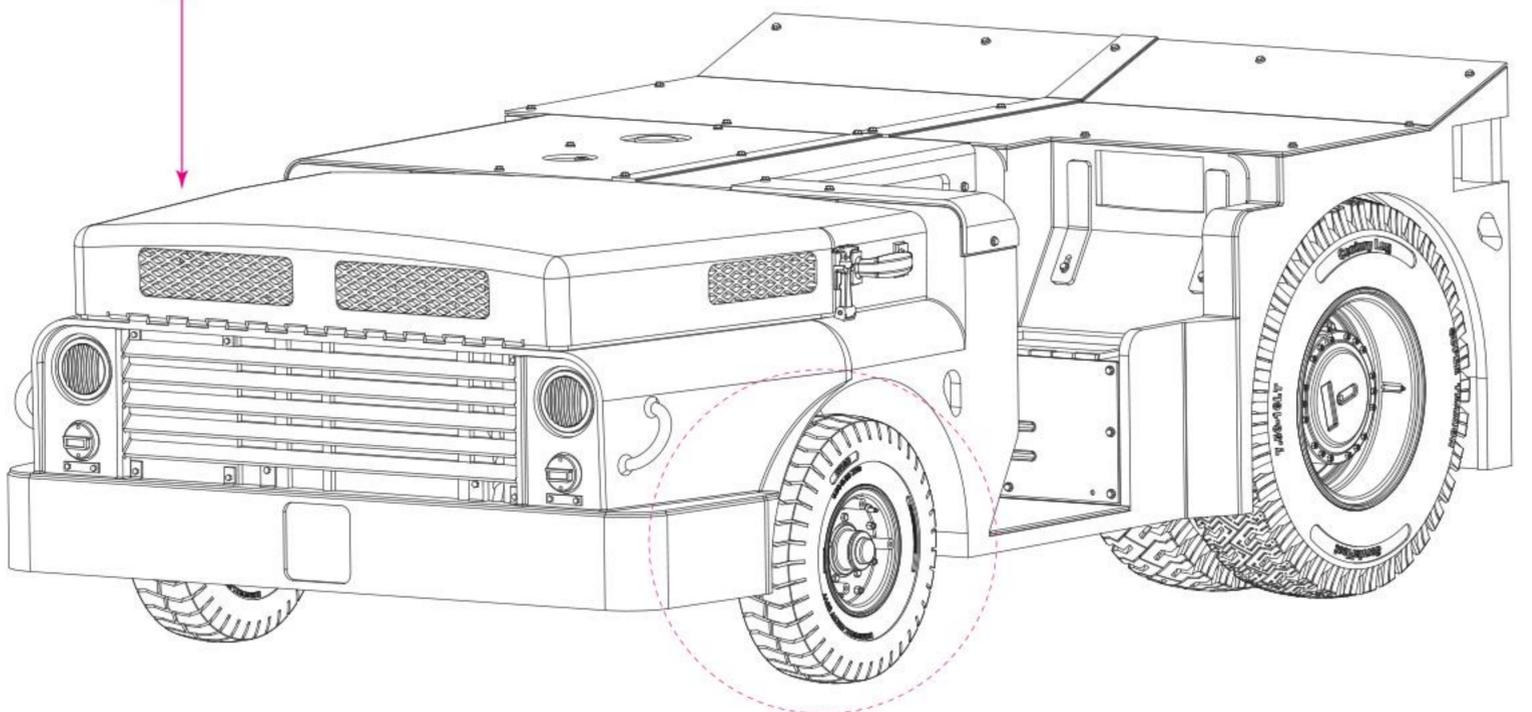


12

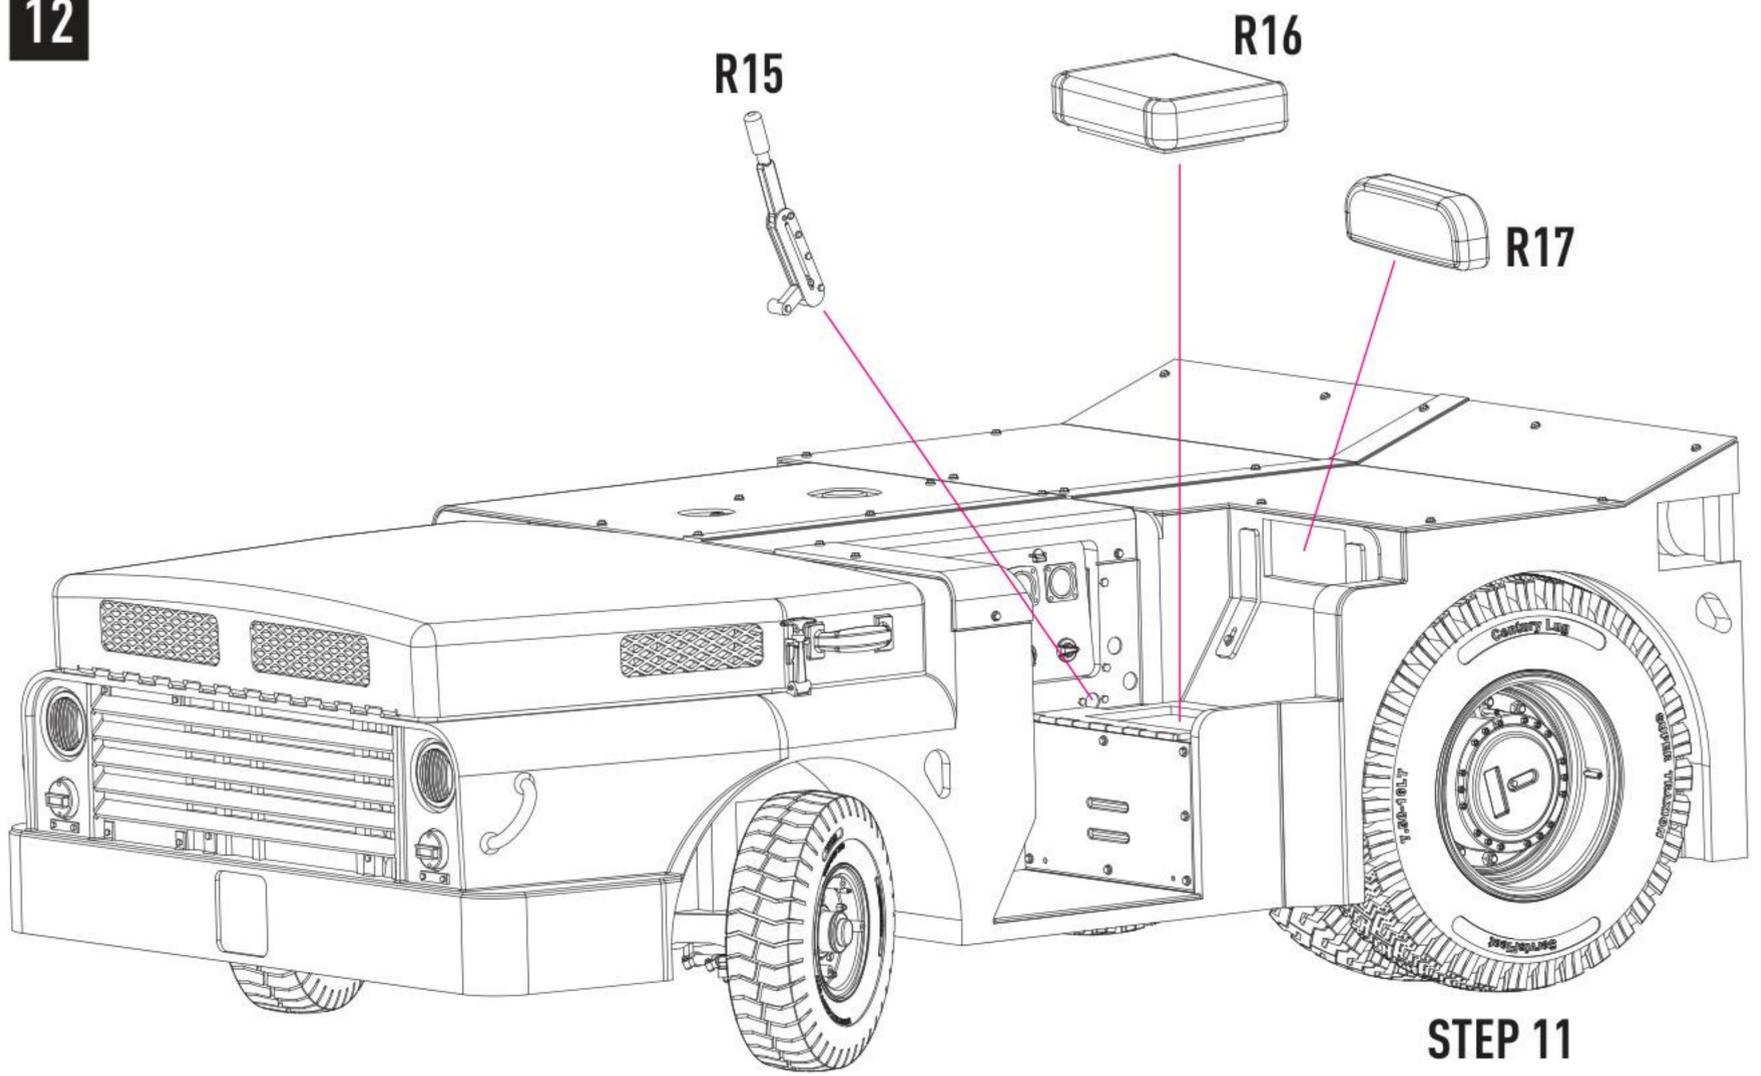

13

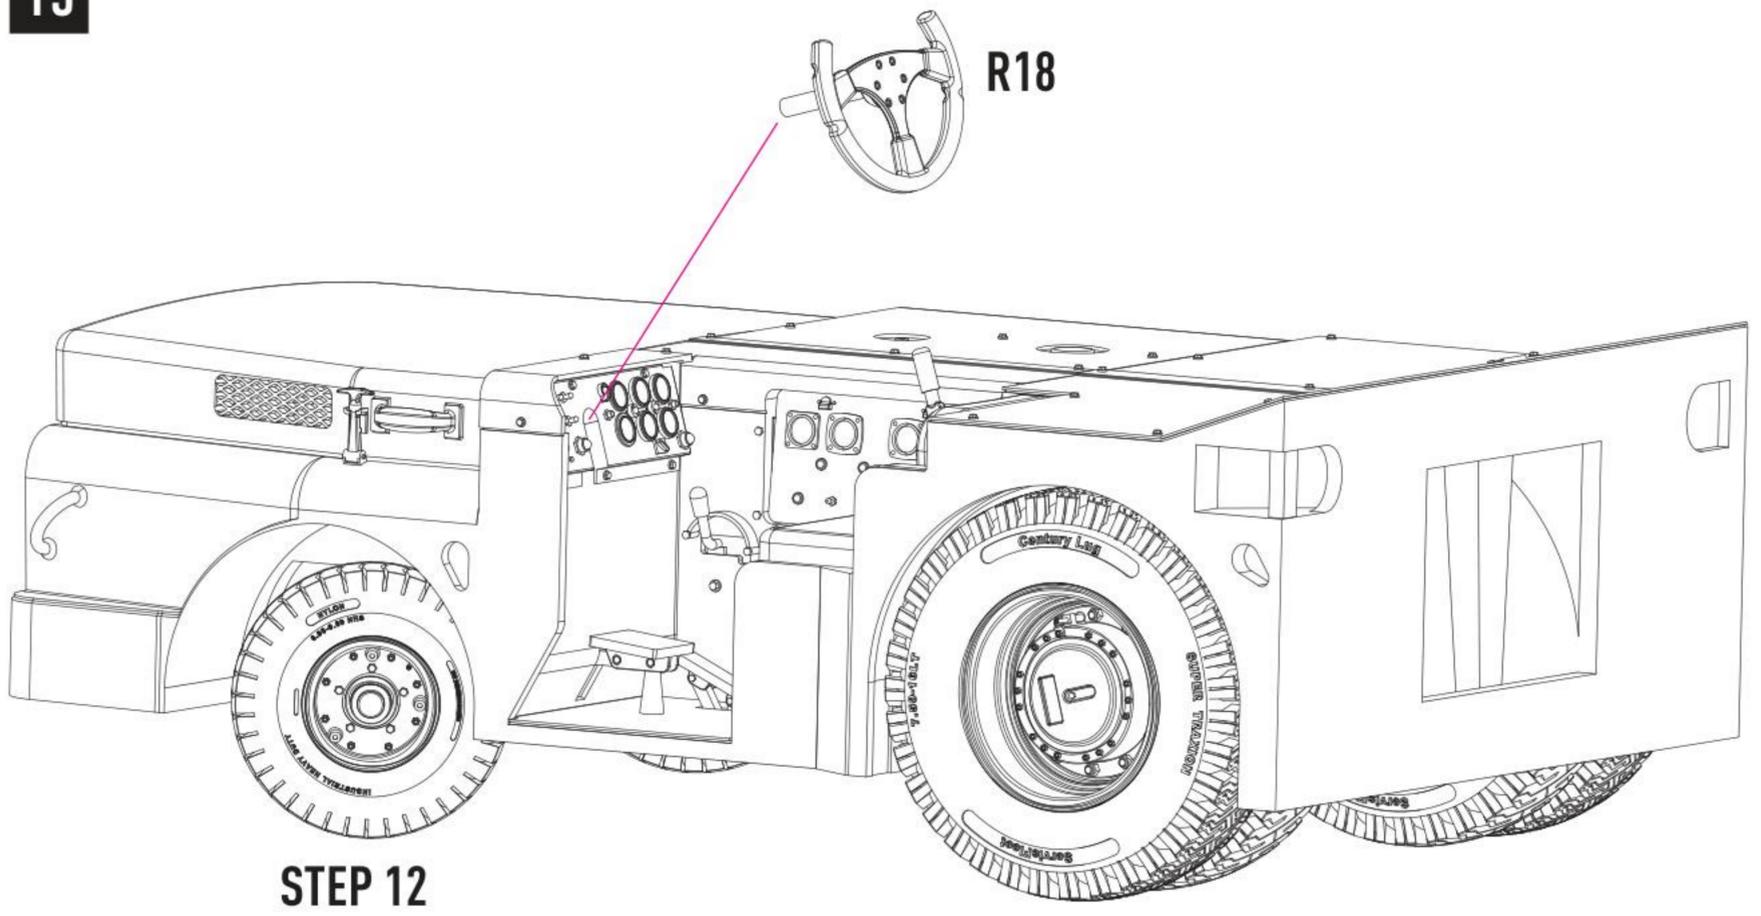


14

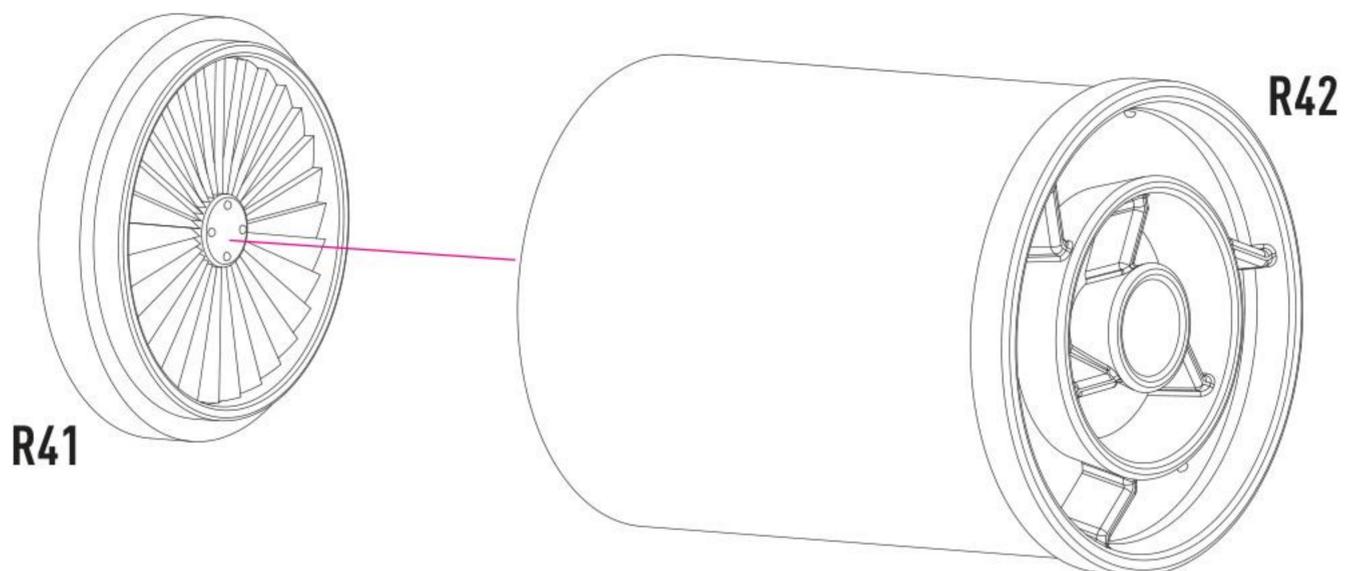


15

R40

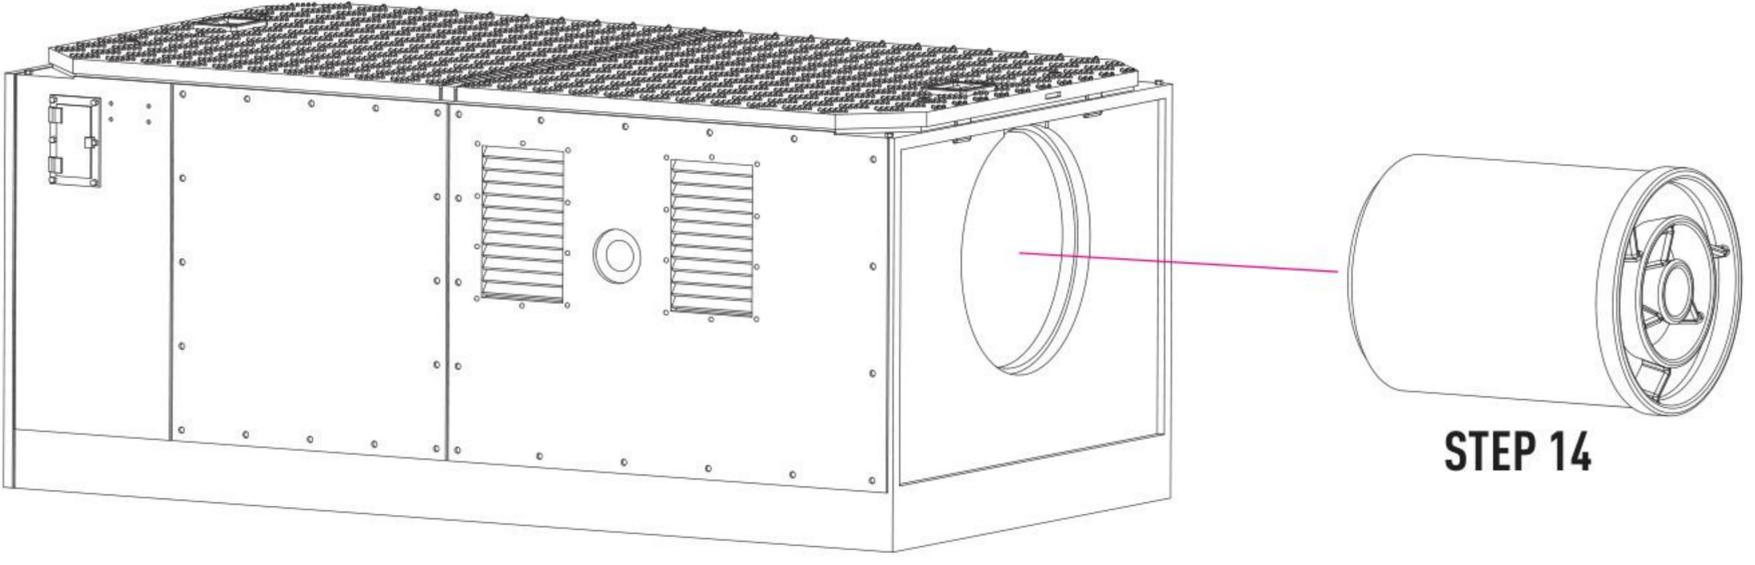


16

STEP 15

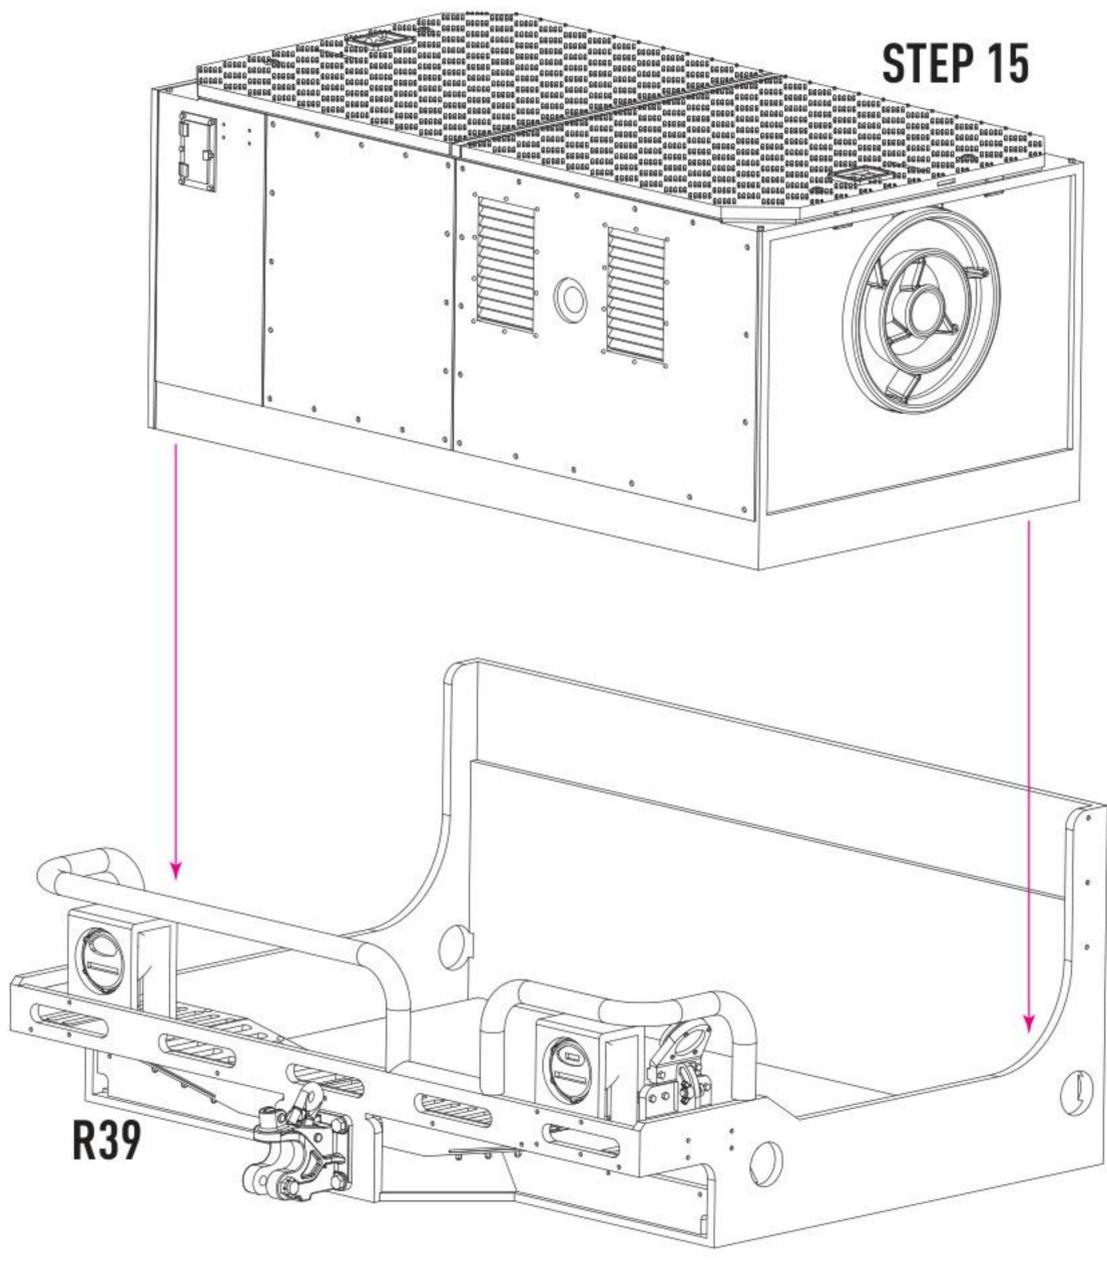


17


R32

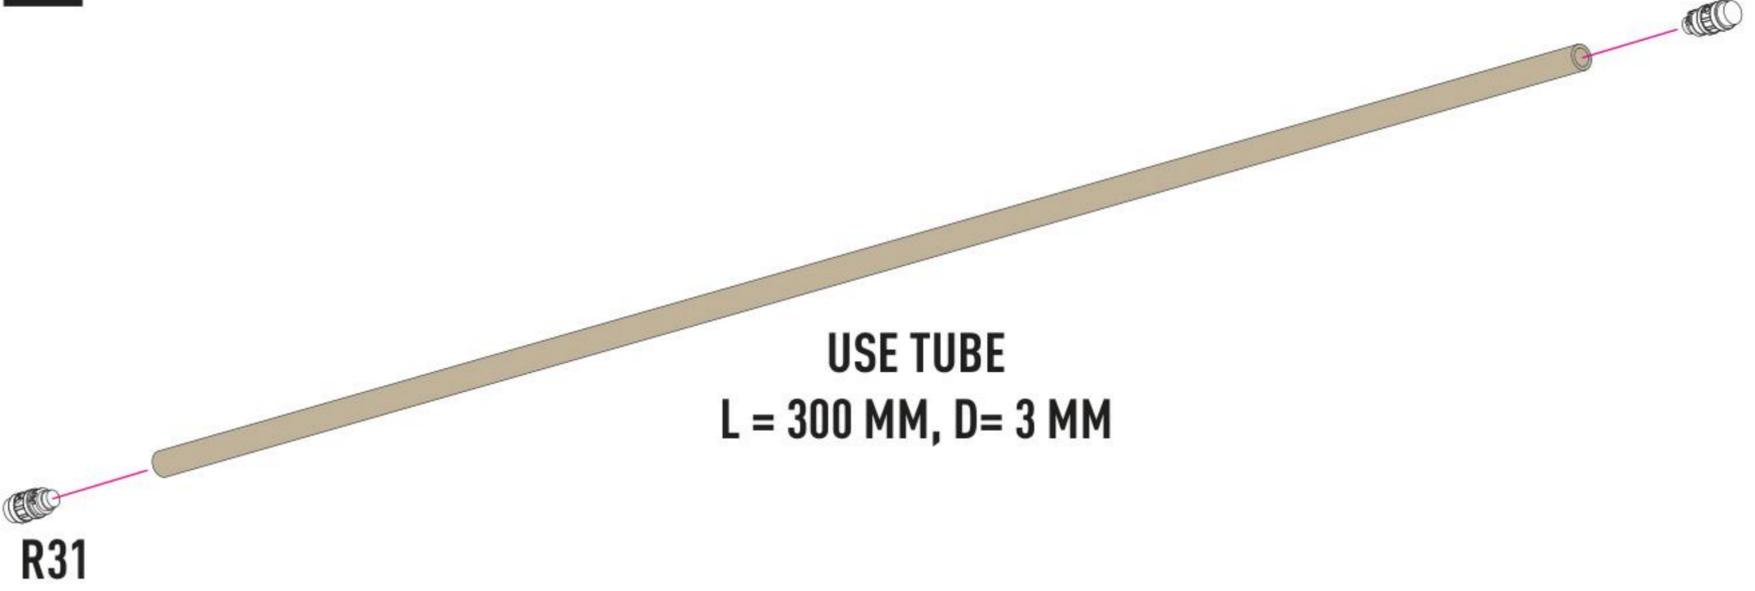



18

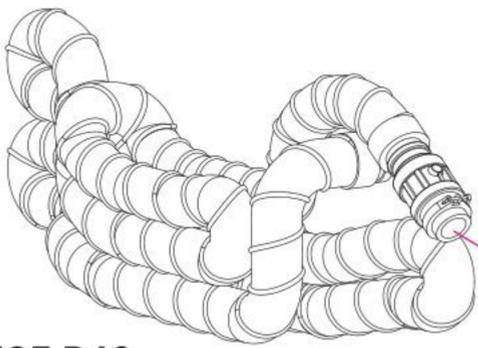


USE R43  
OR STEP 17

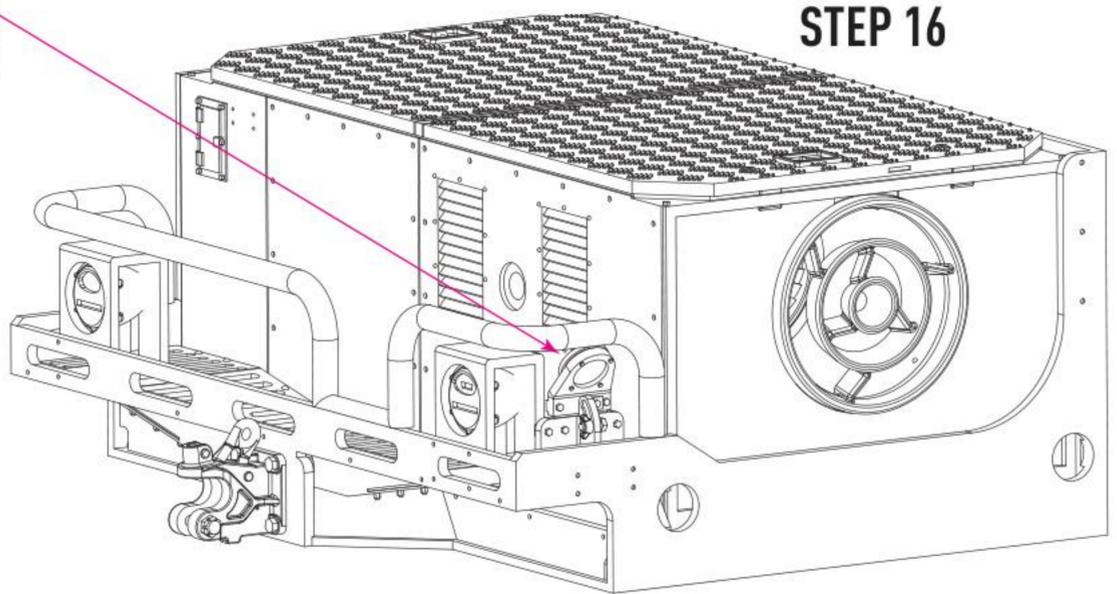


19

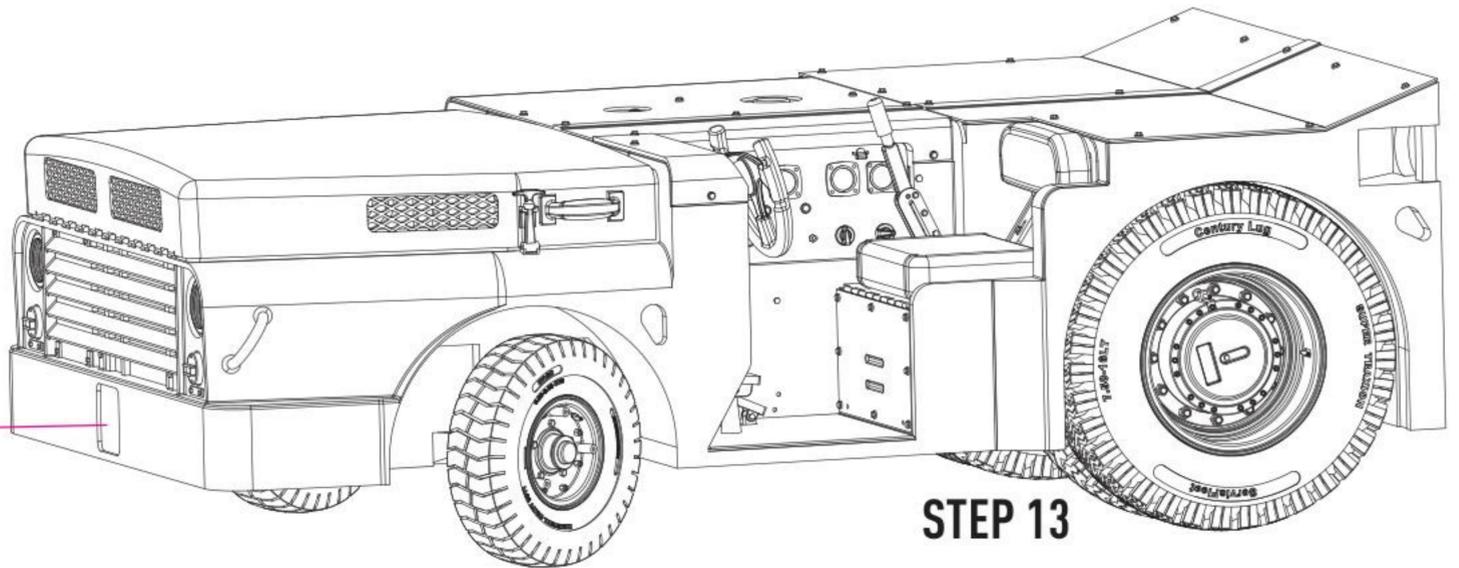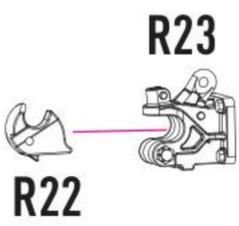


20

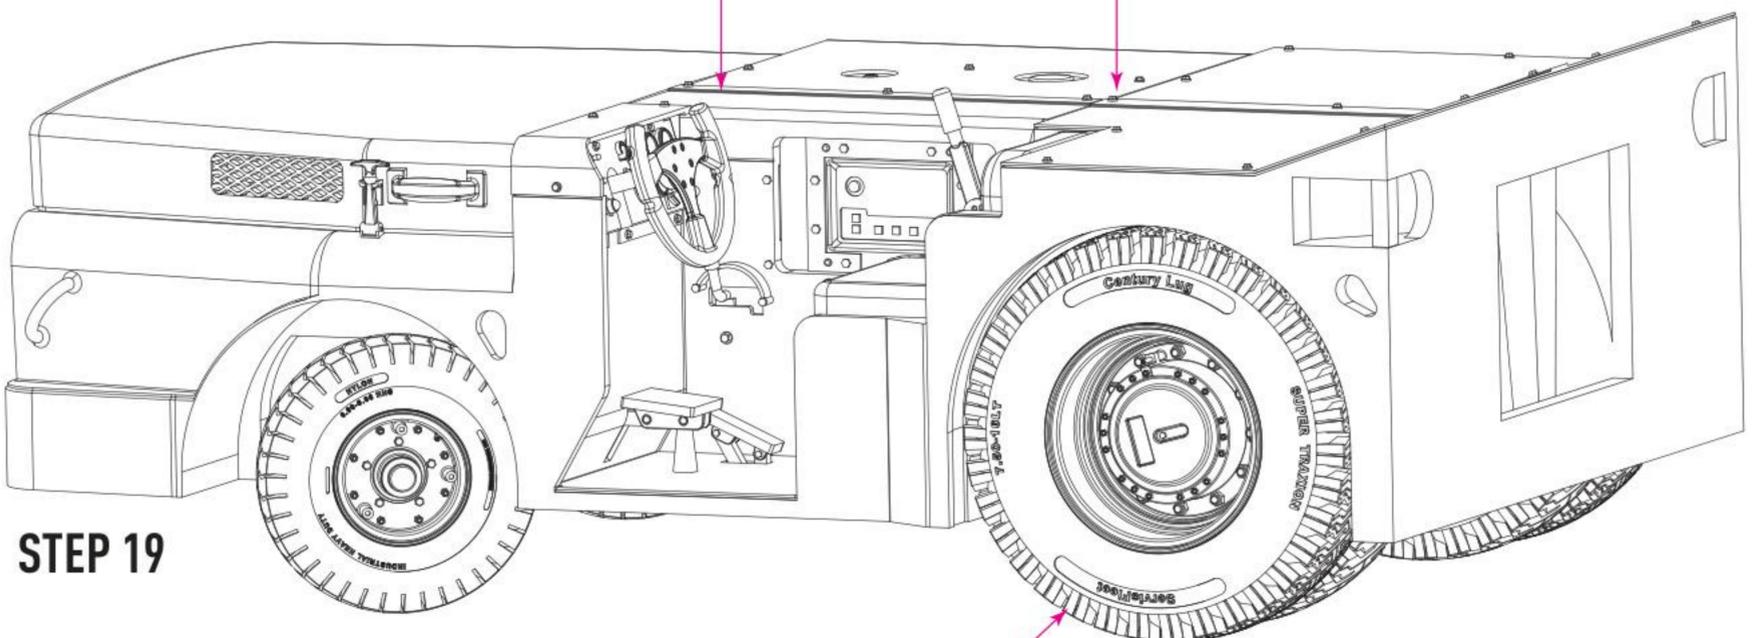


**21**

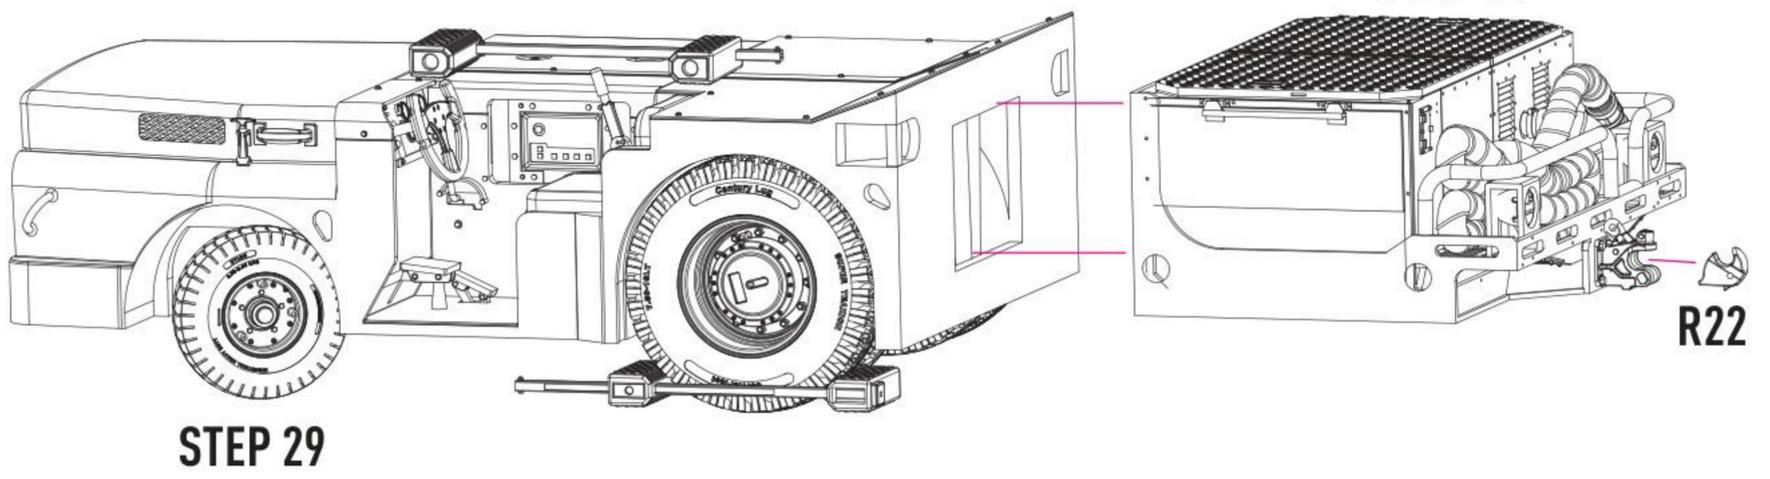

**22**

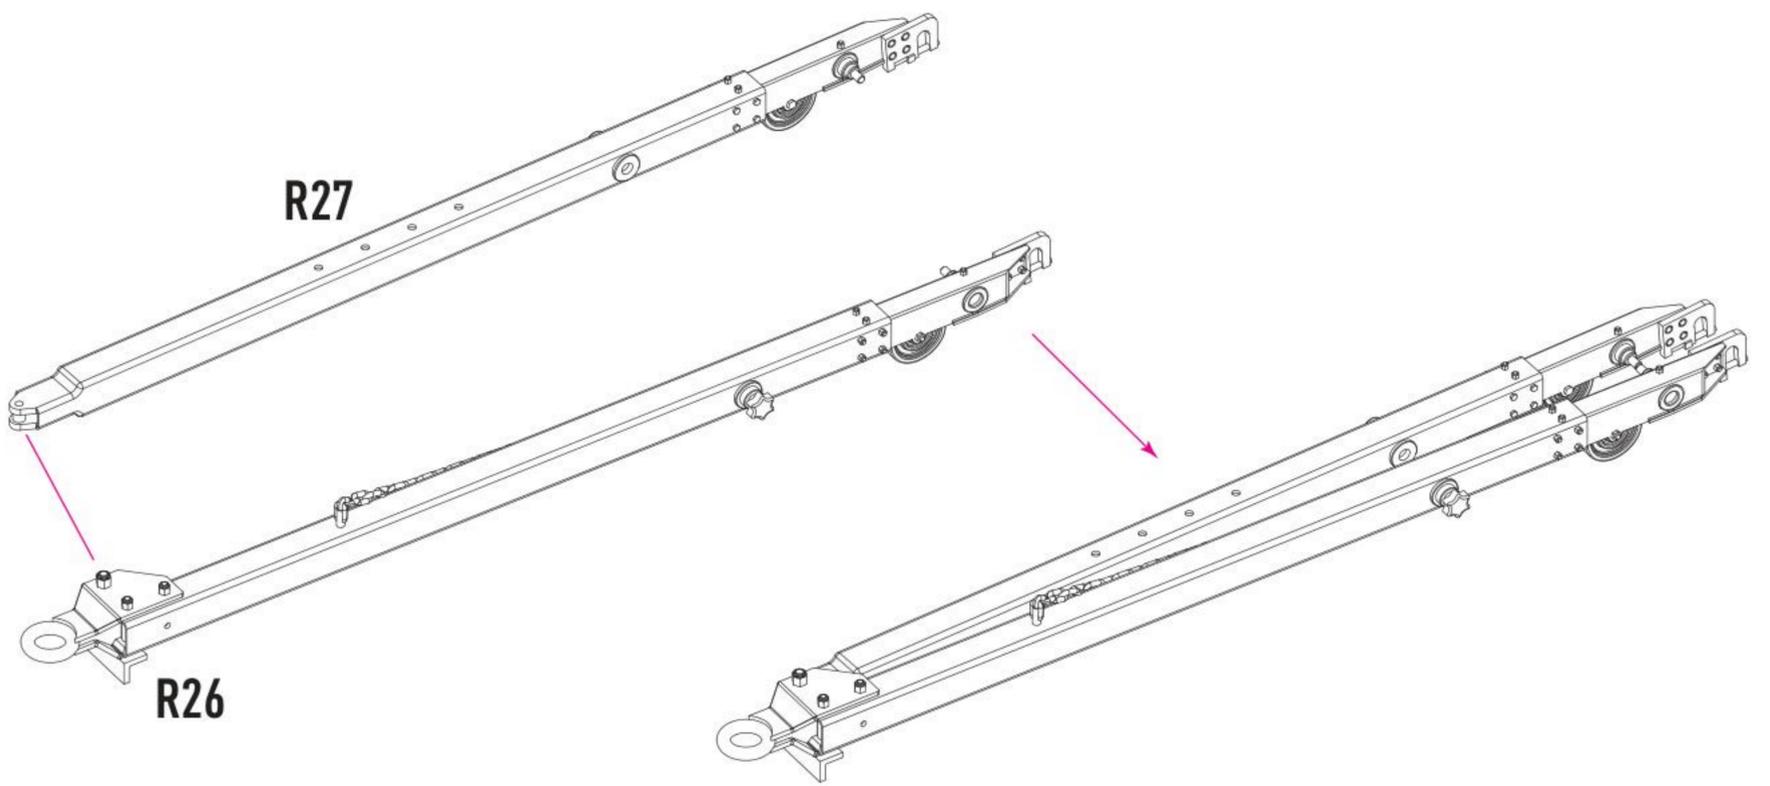


**23**

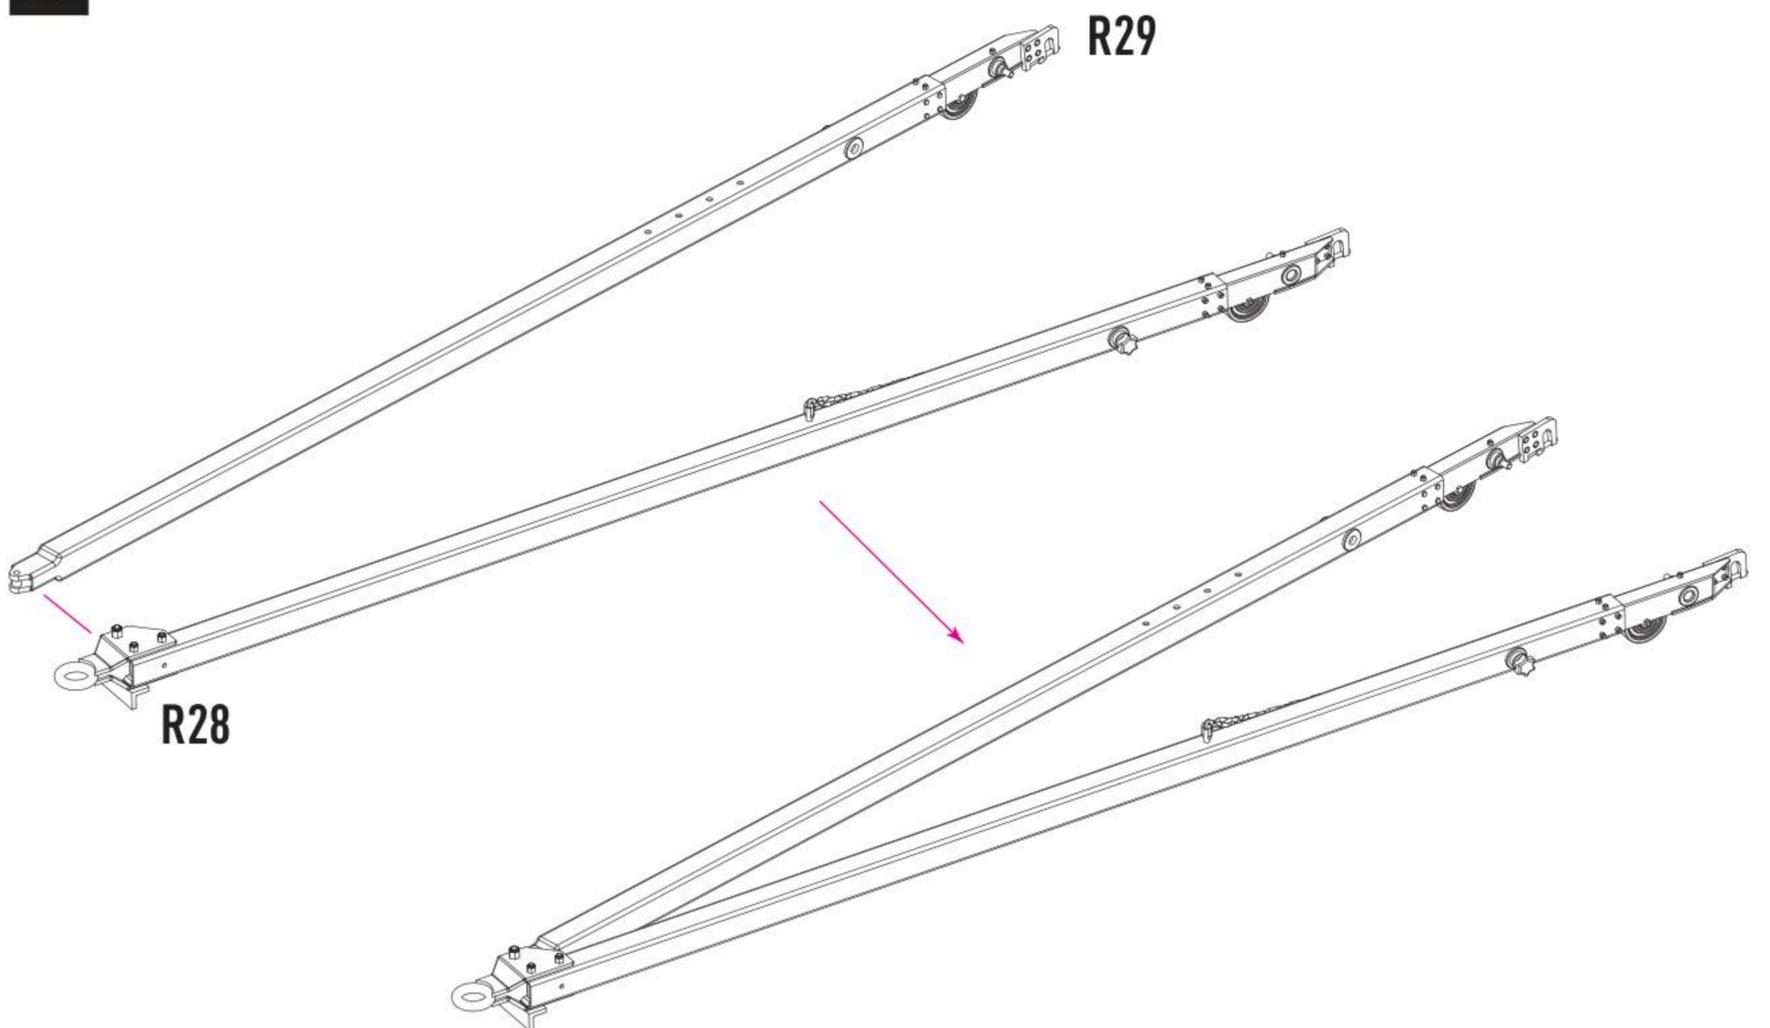

24


STEP 22

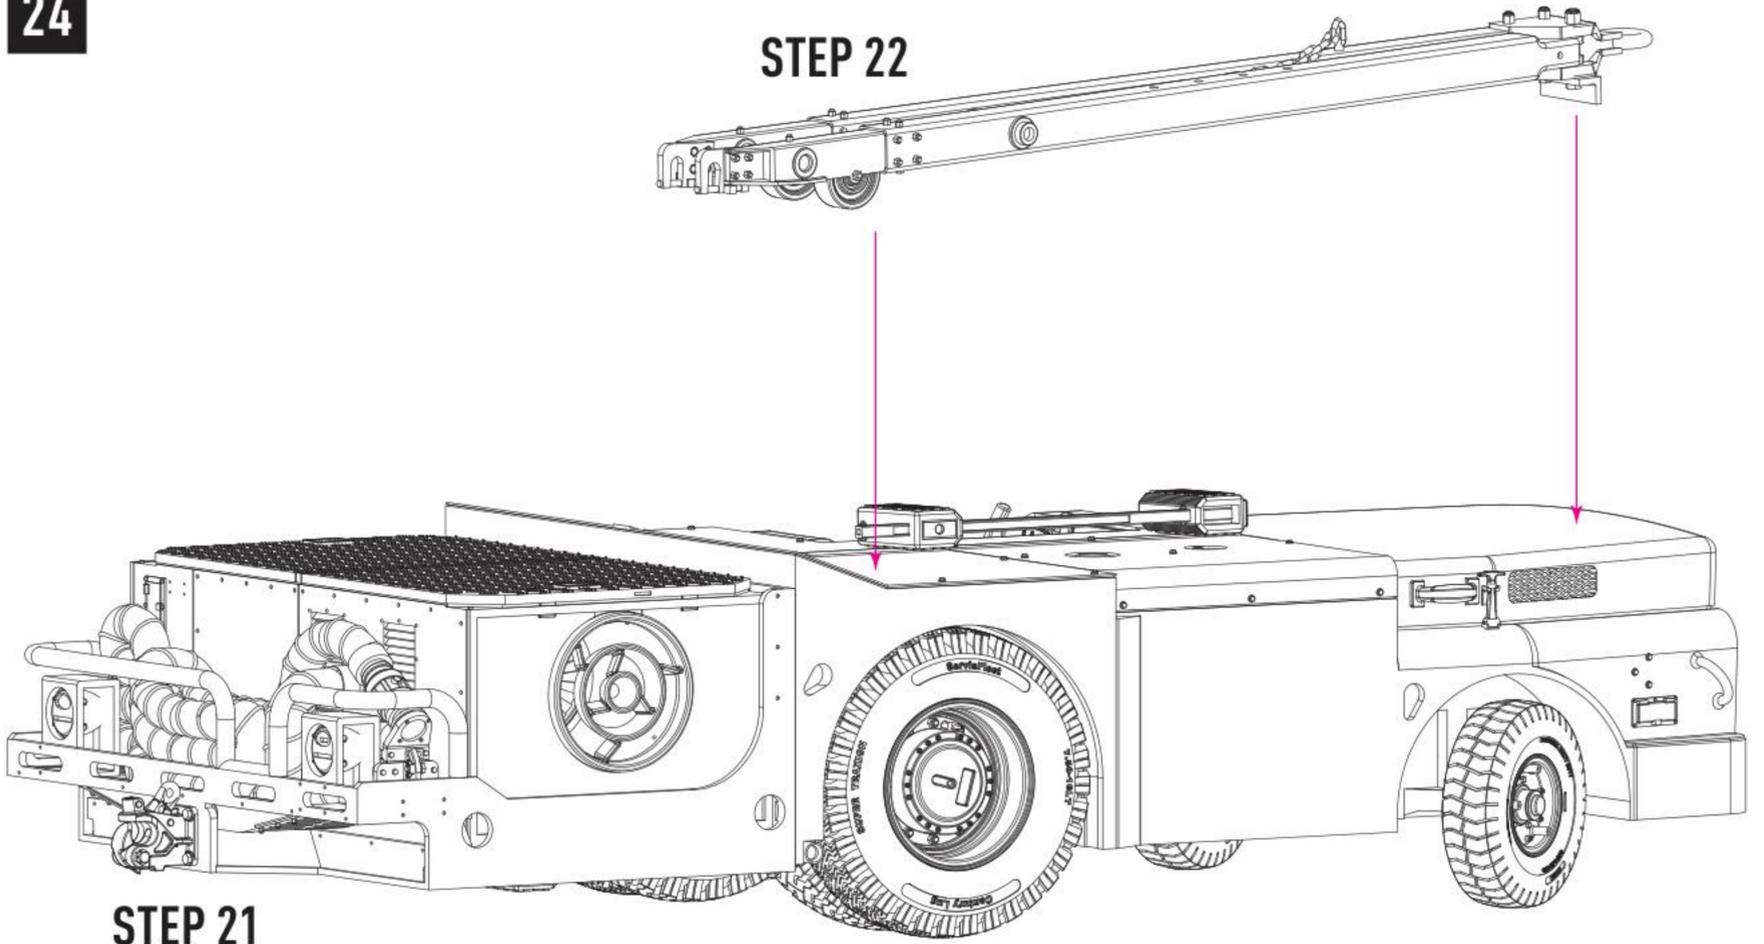


STEP 21


25

STEP 24




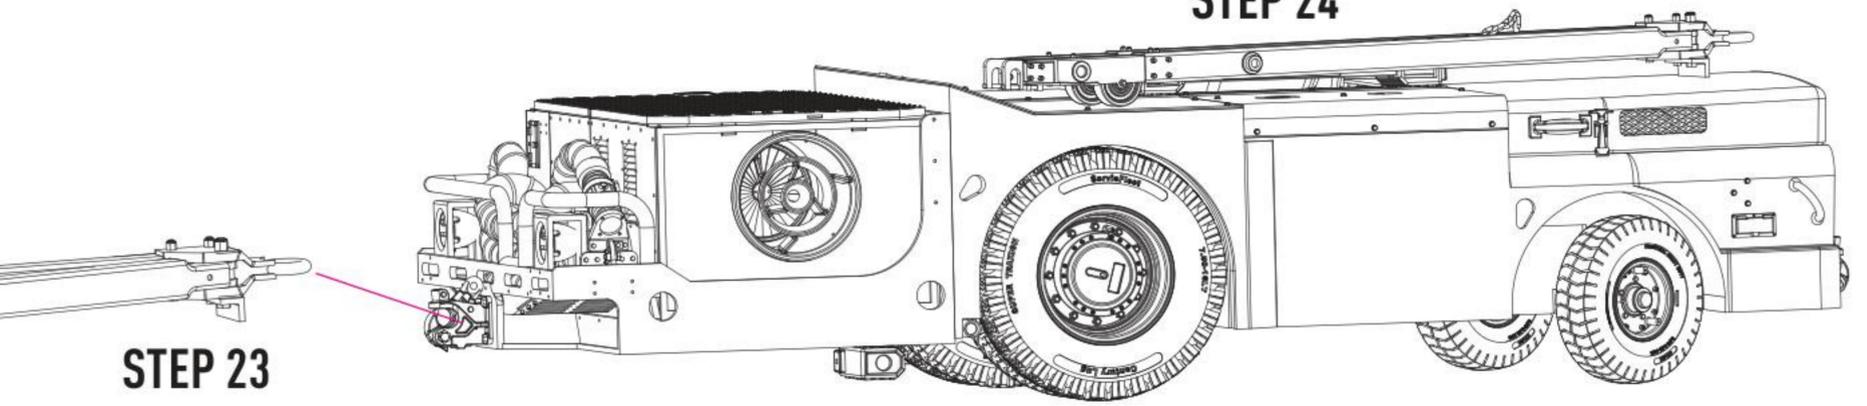


STEP 23

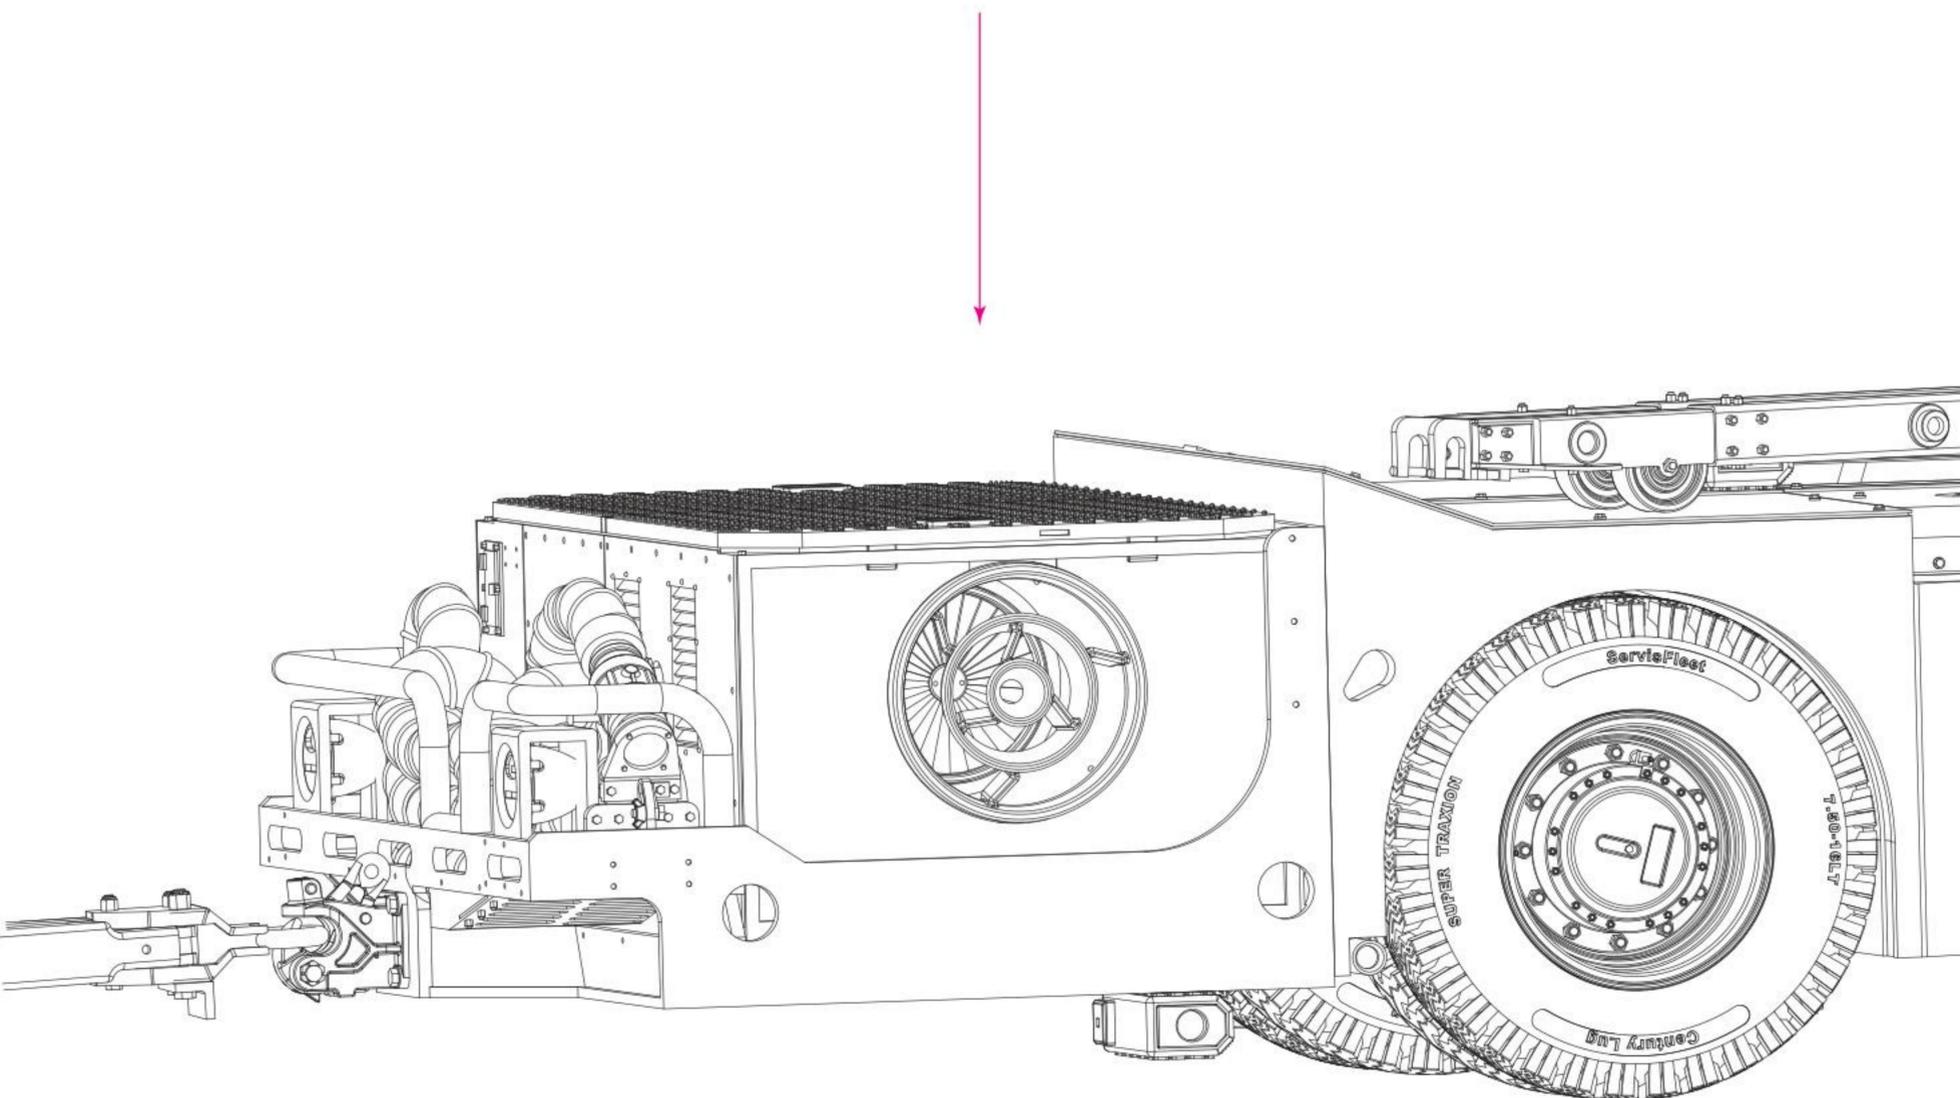

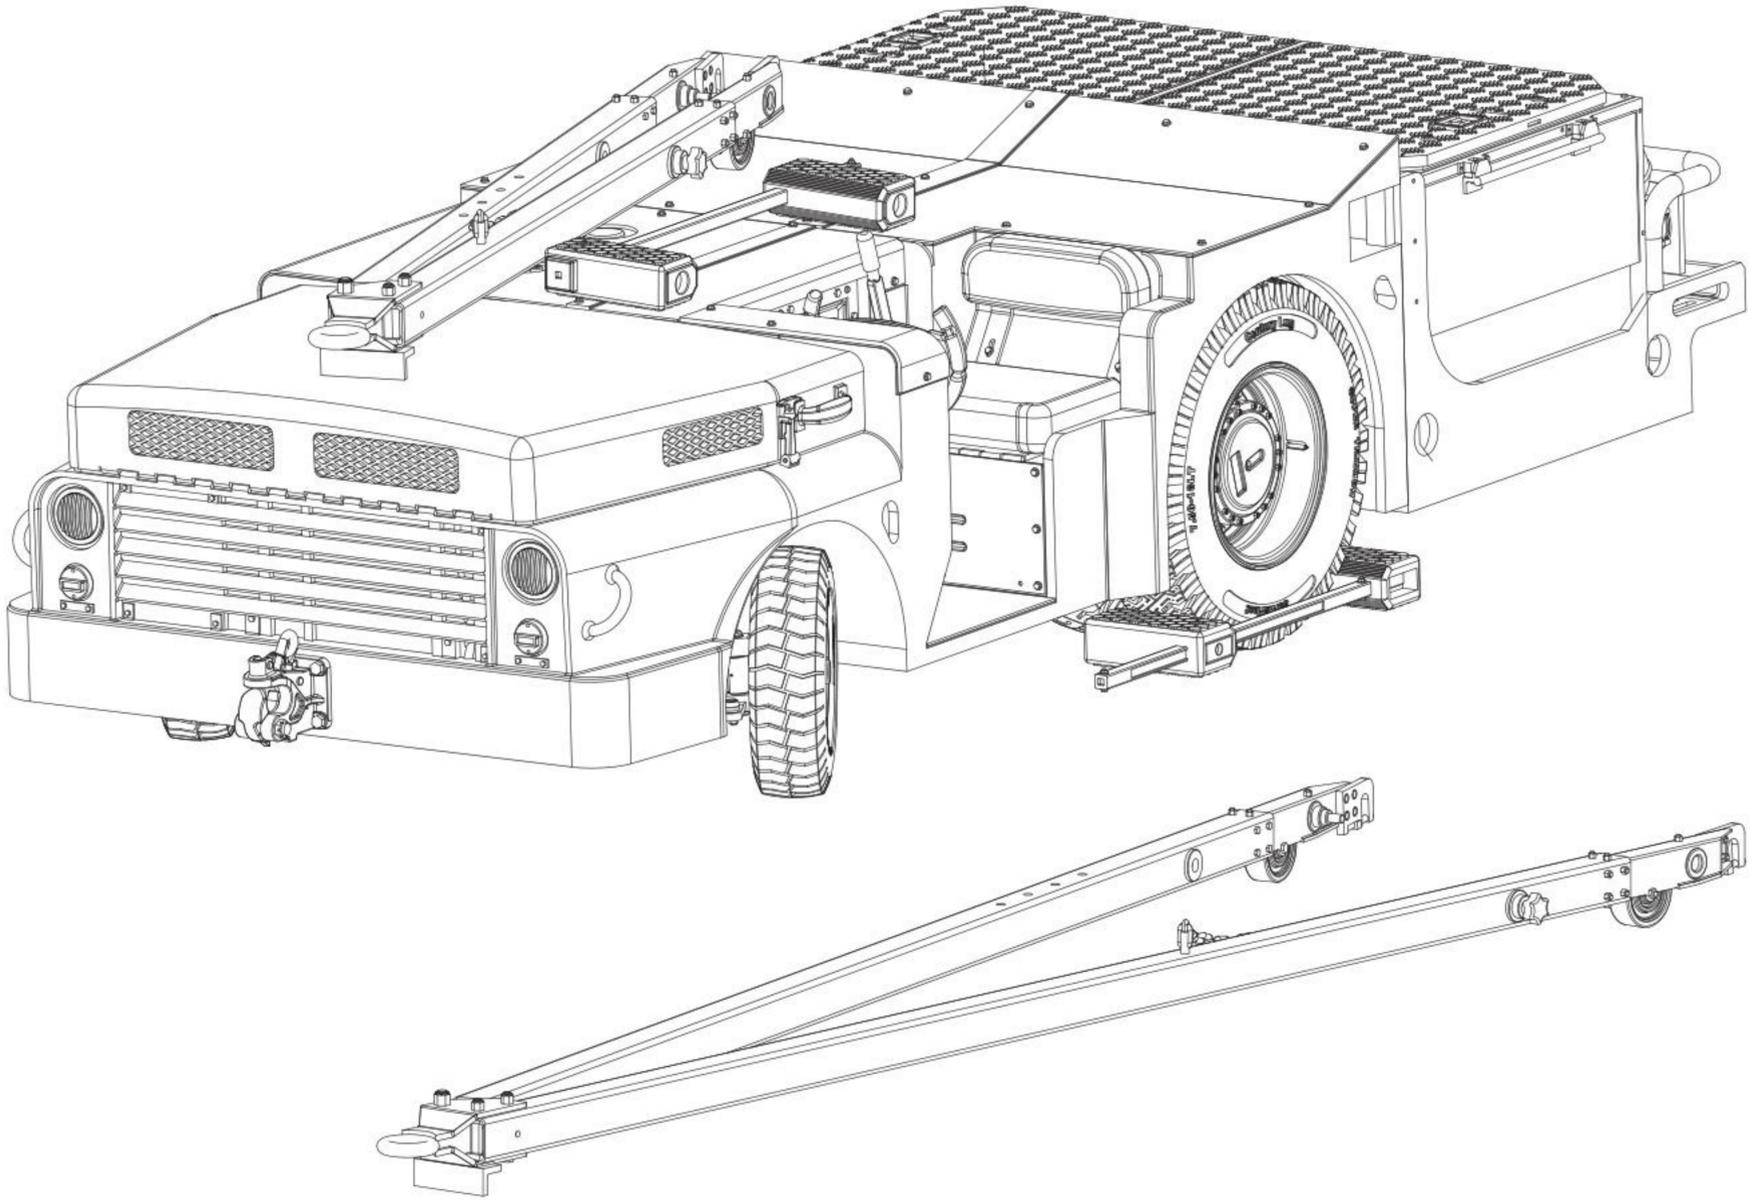

## DECAL INSTRUCTION ALBAR UNIVERSAL AIRCRAFT TOWBAR

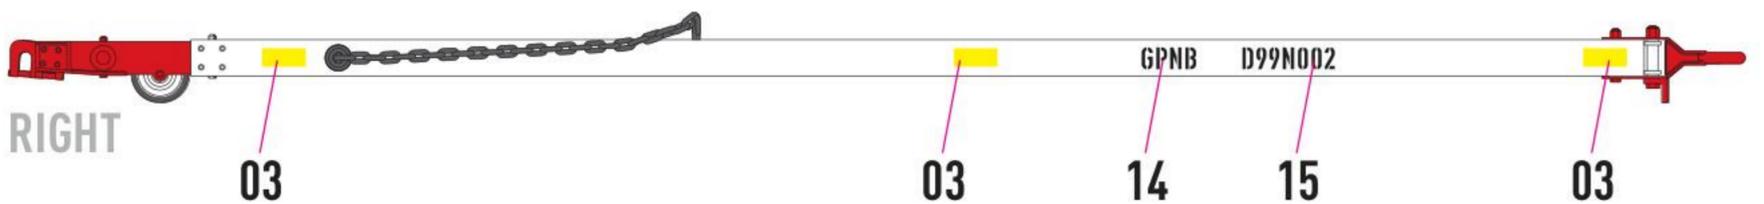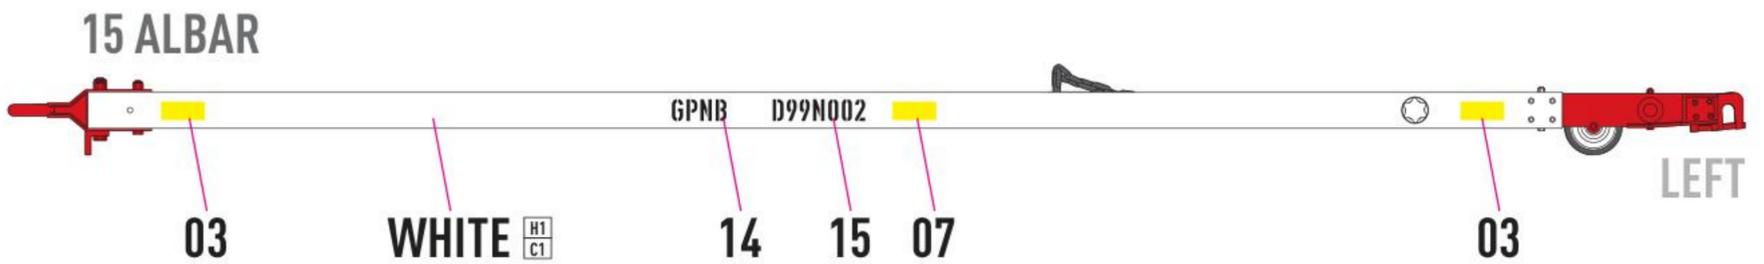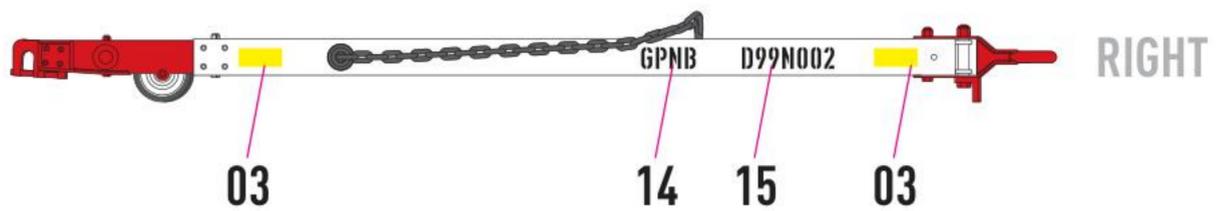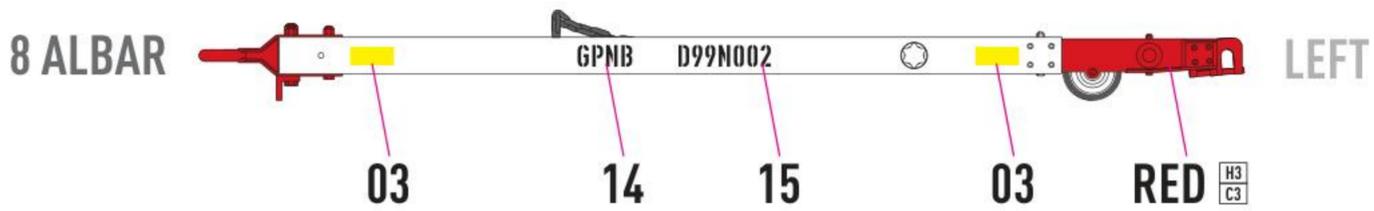

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
WHITE	H1	C1
LIGHT GHOST GRAY	H308	C308

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
RED	H3	C3

