

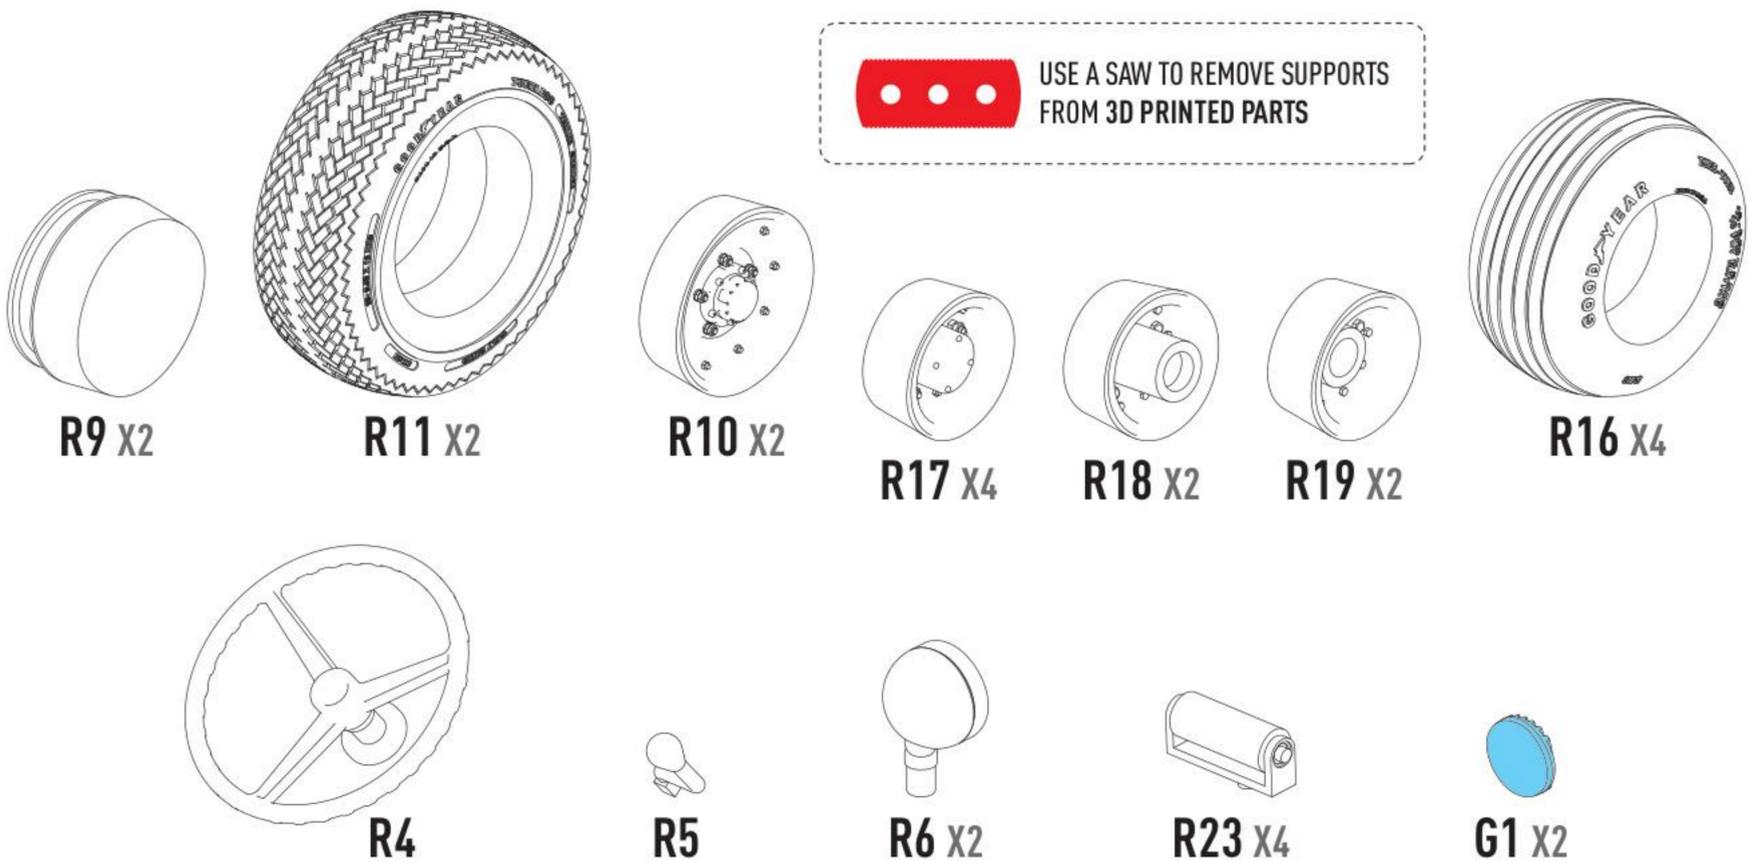
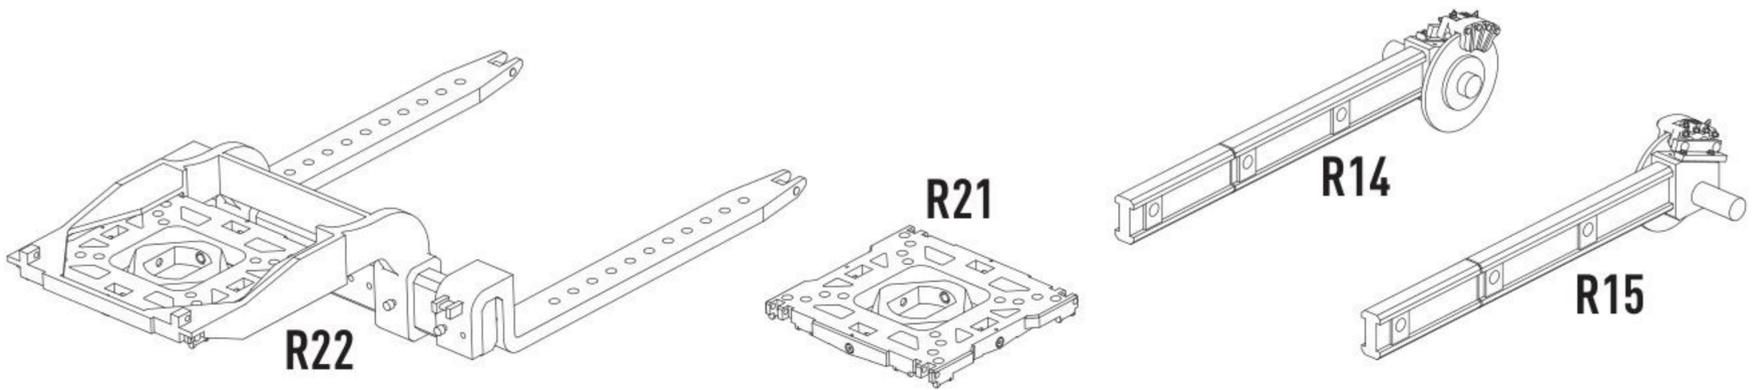


DETAILS AFTER REMOVAL FROM SUPPORTS

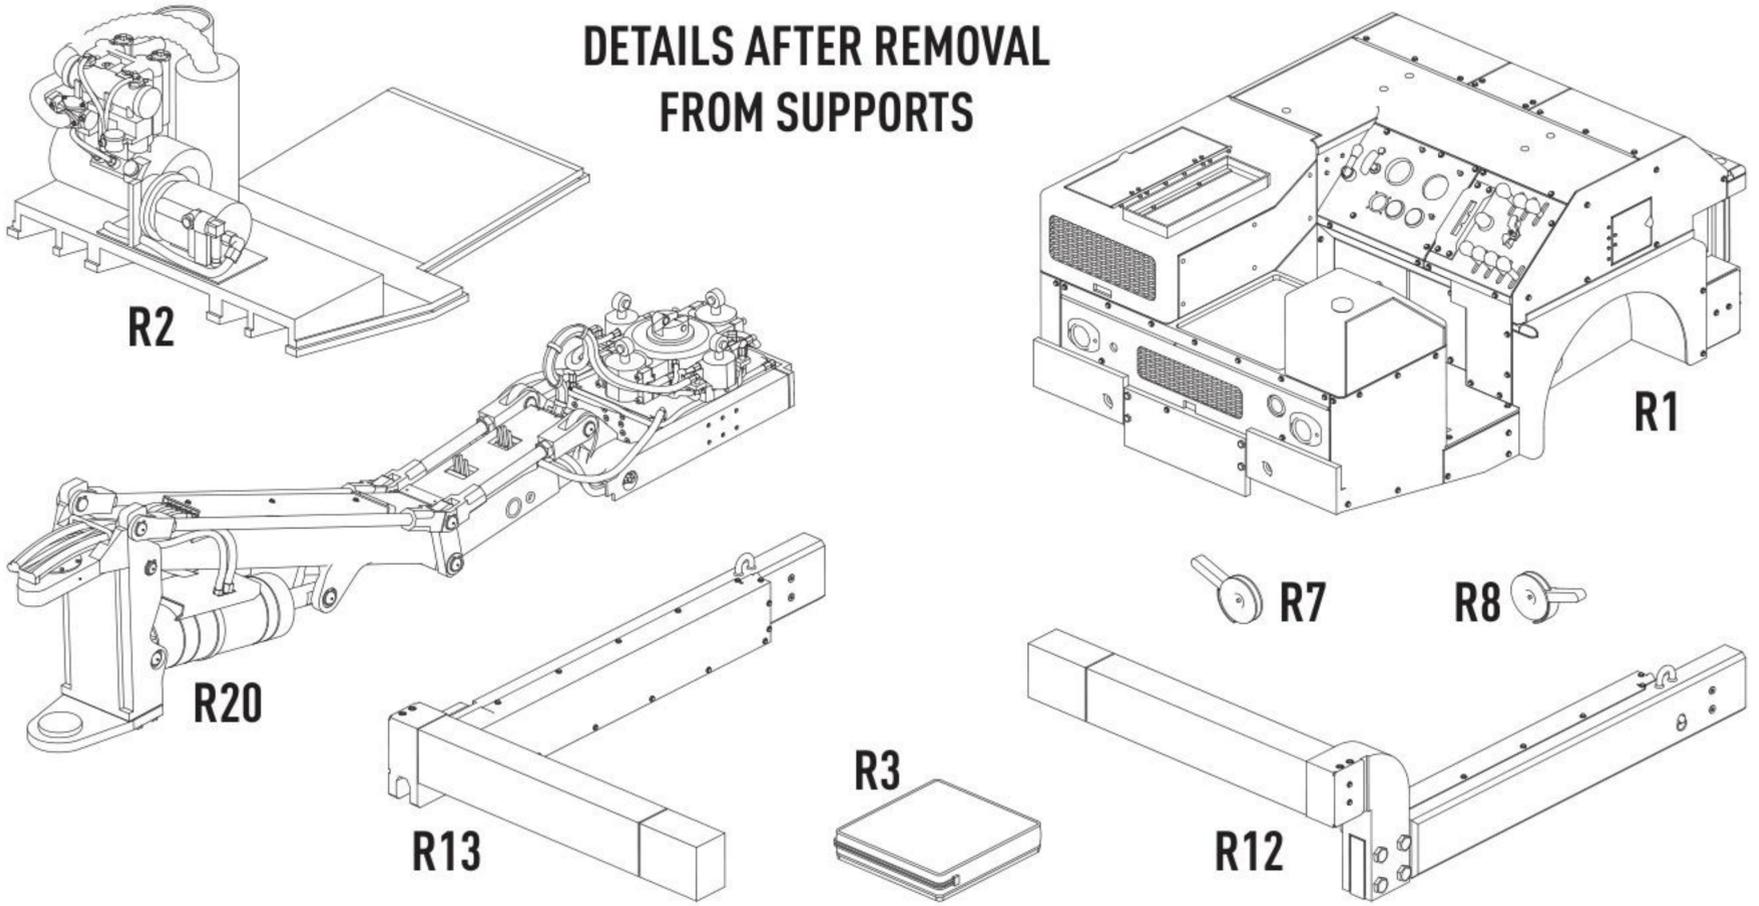


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


1

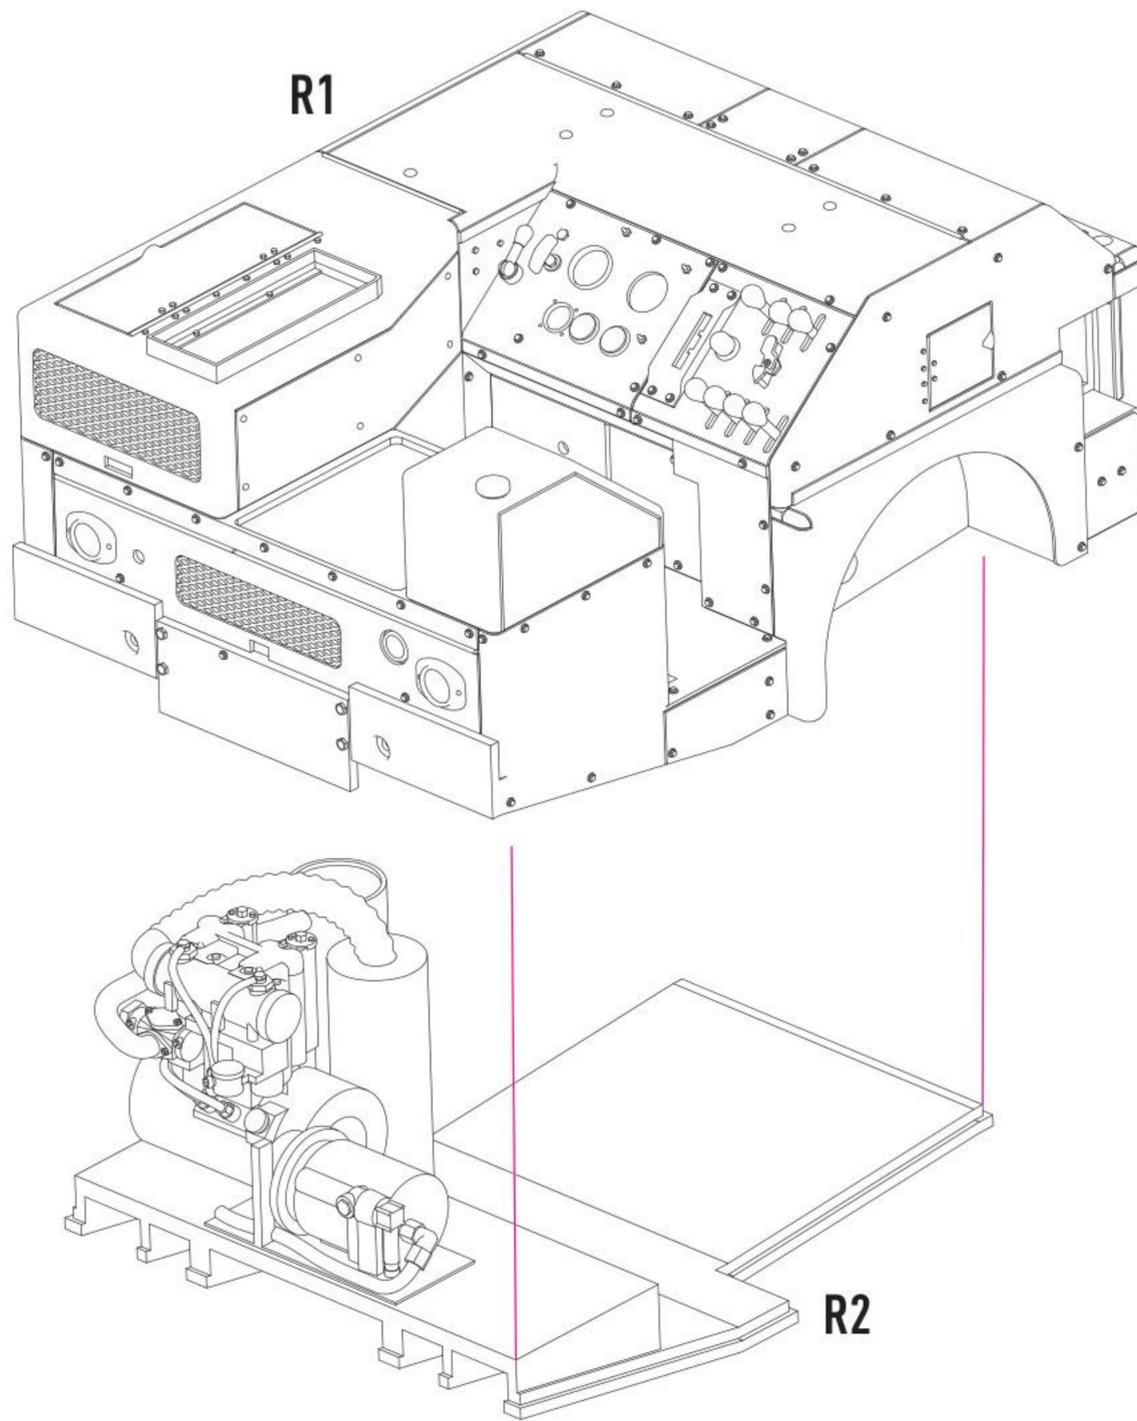


2

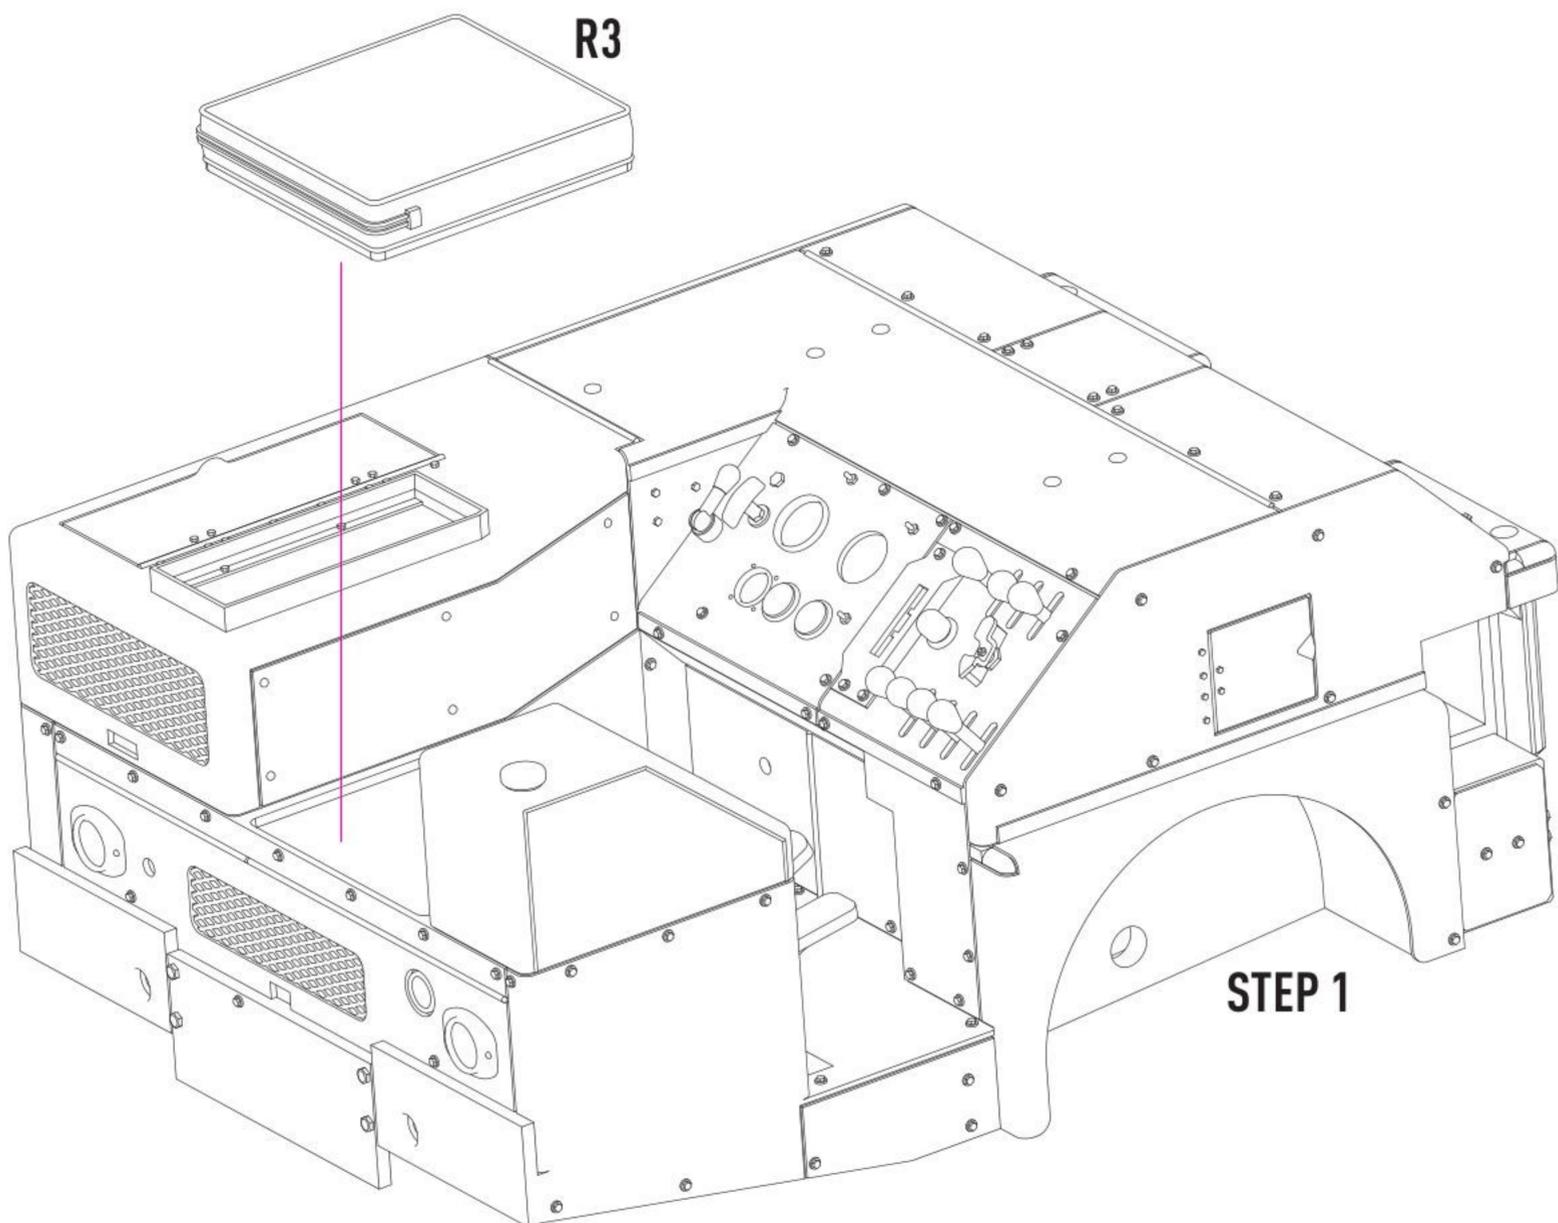


3 X2

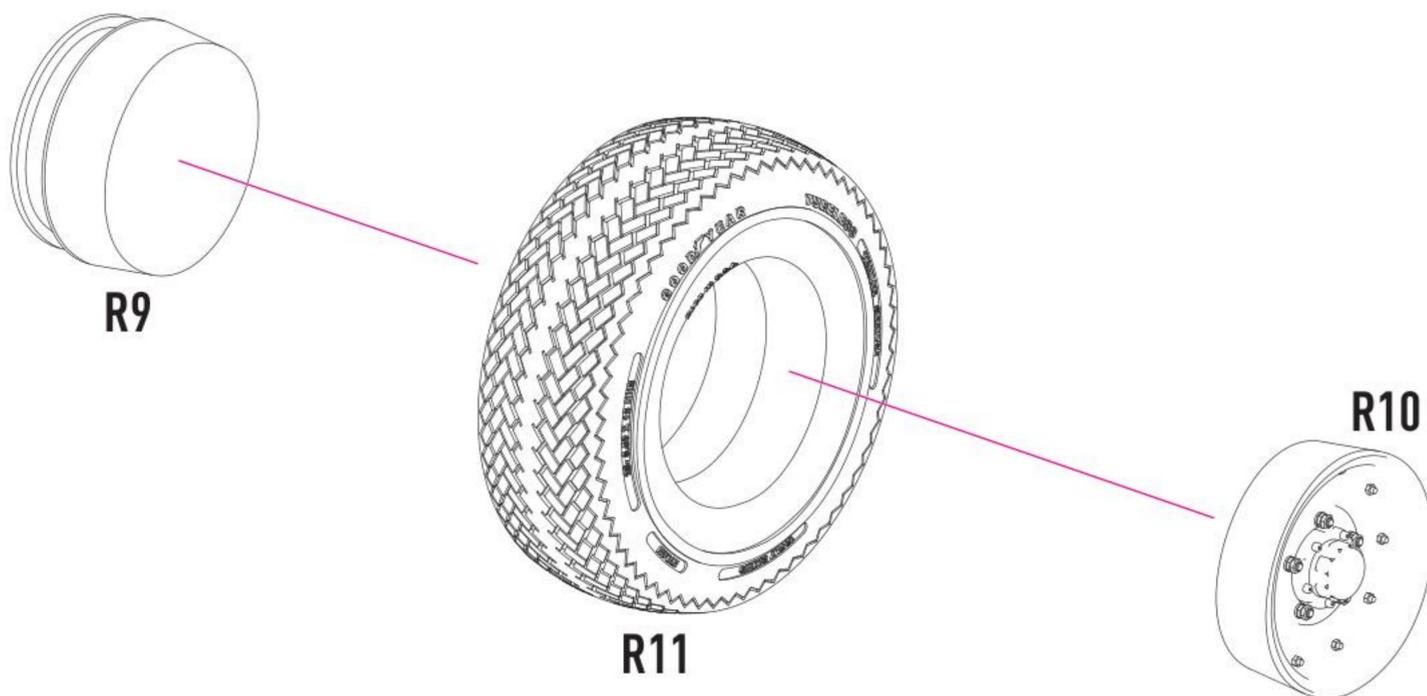


4

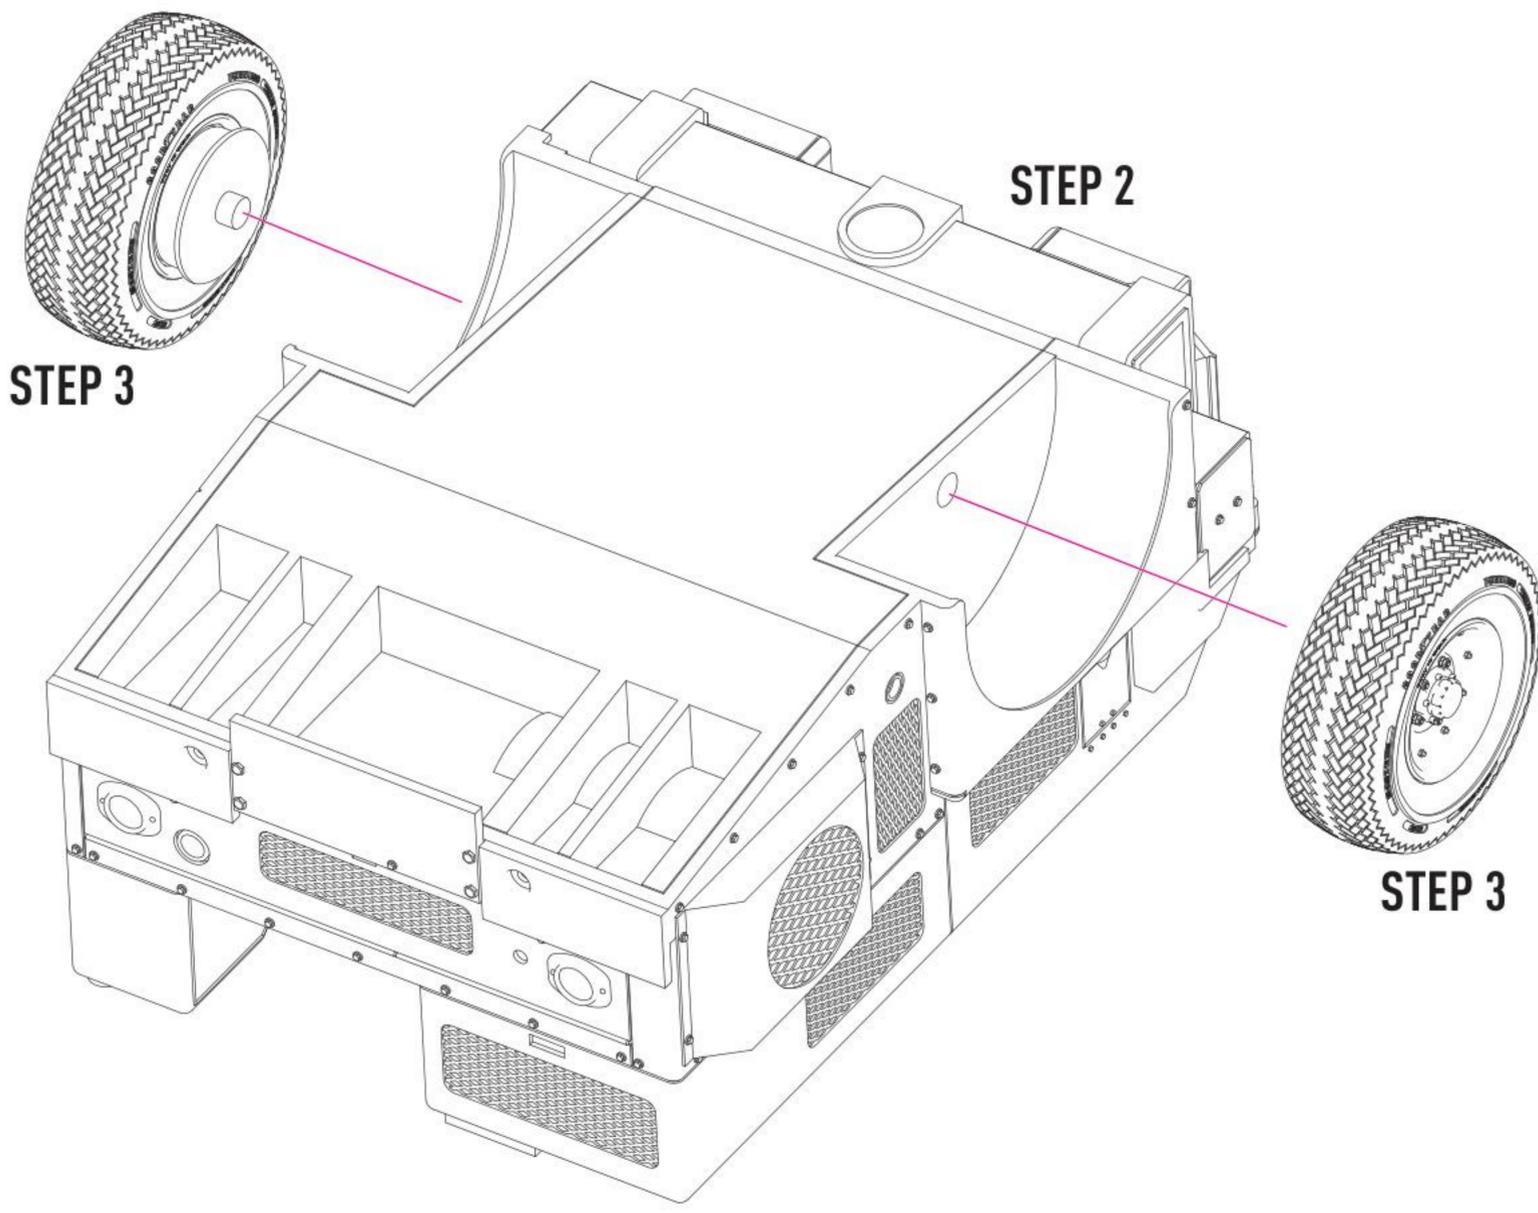


5 RIGHT

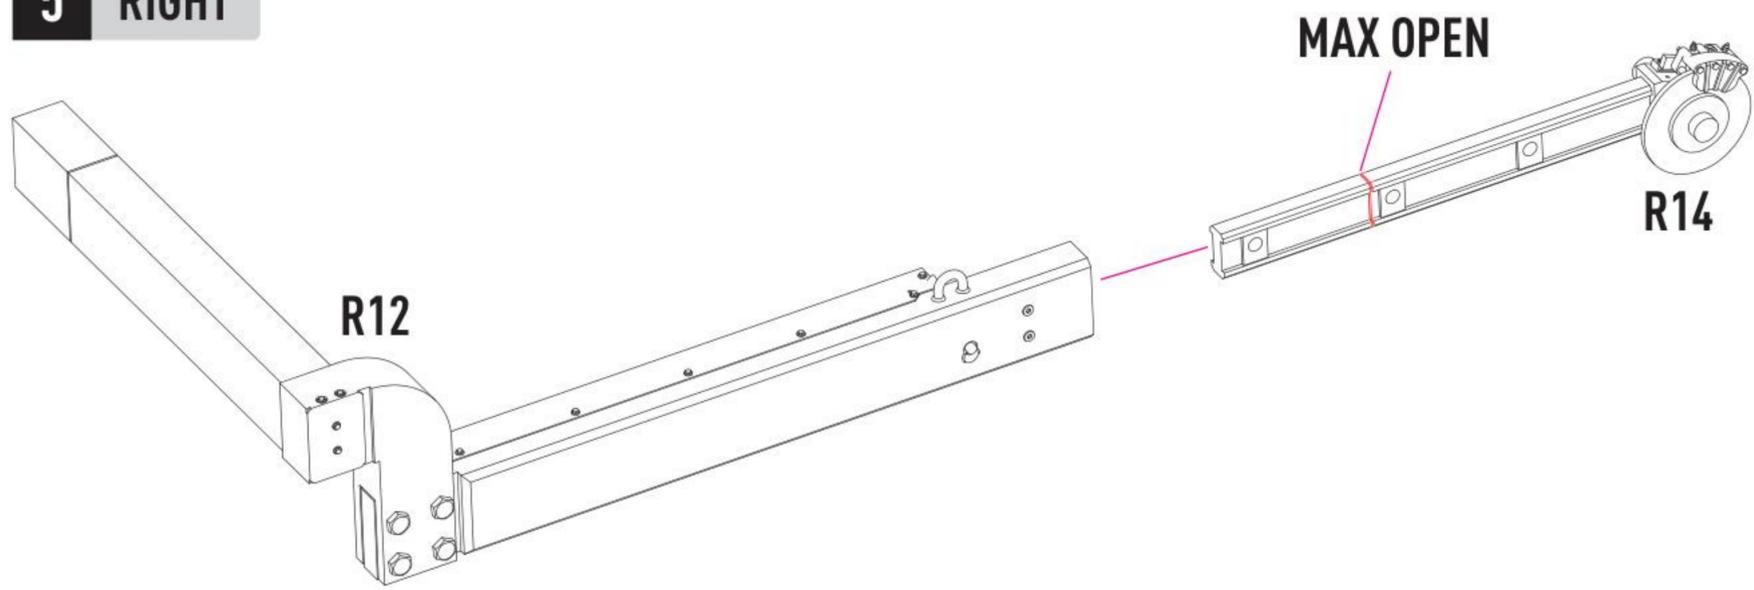

6 LEFT

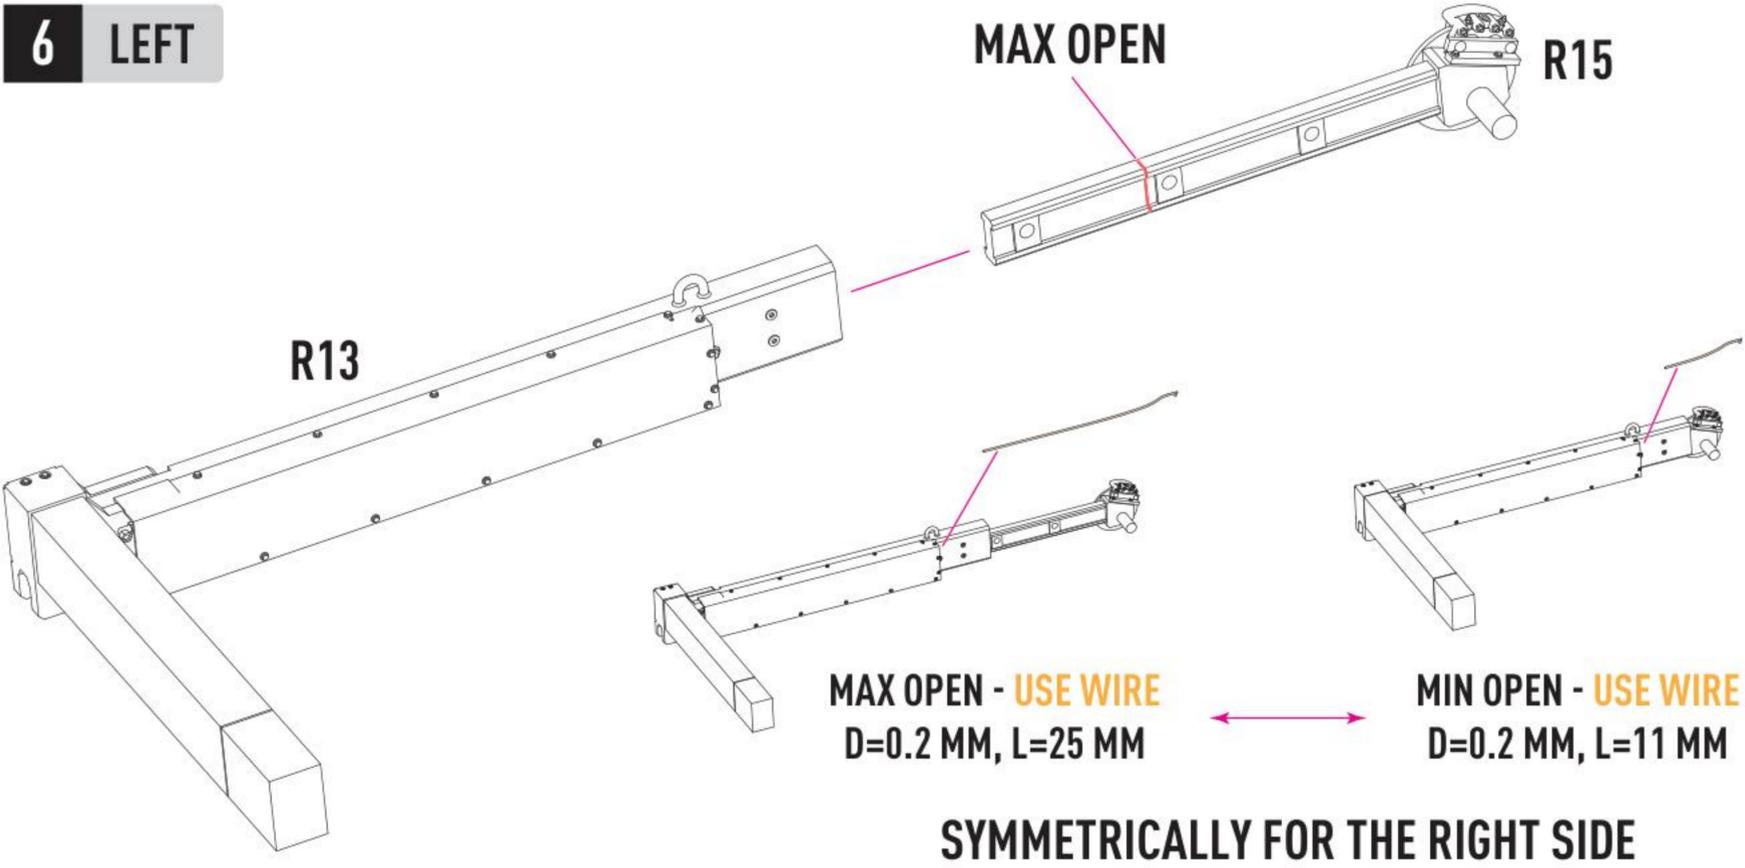


7

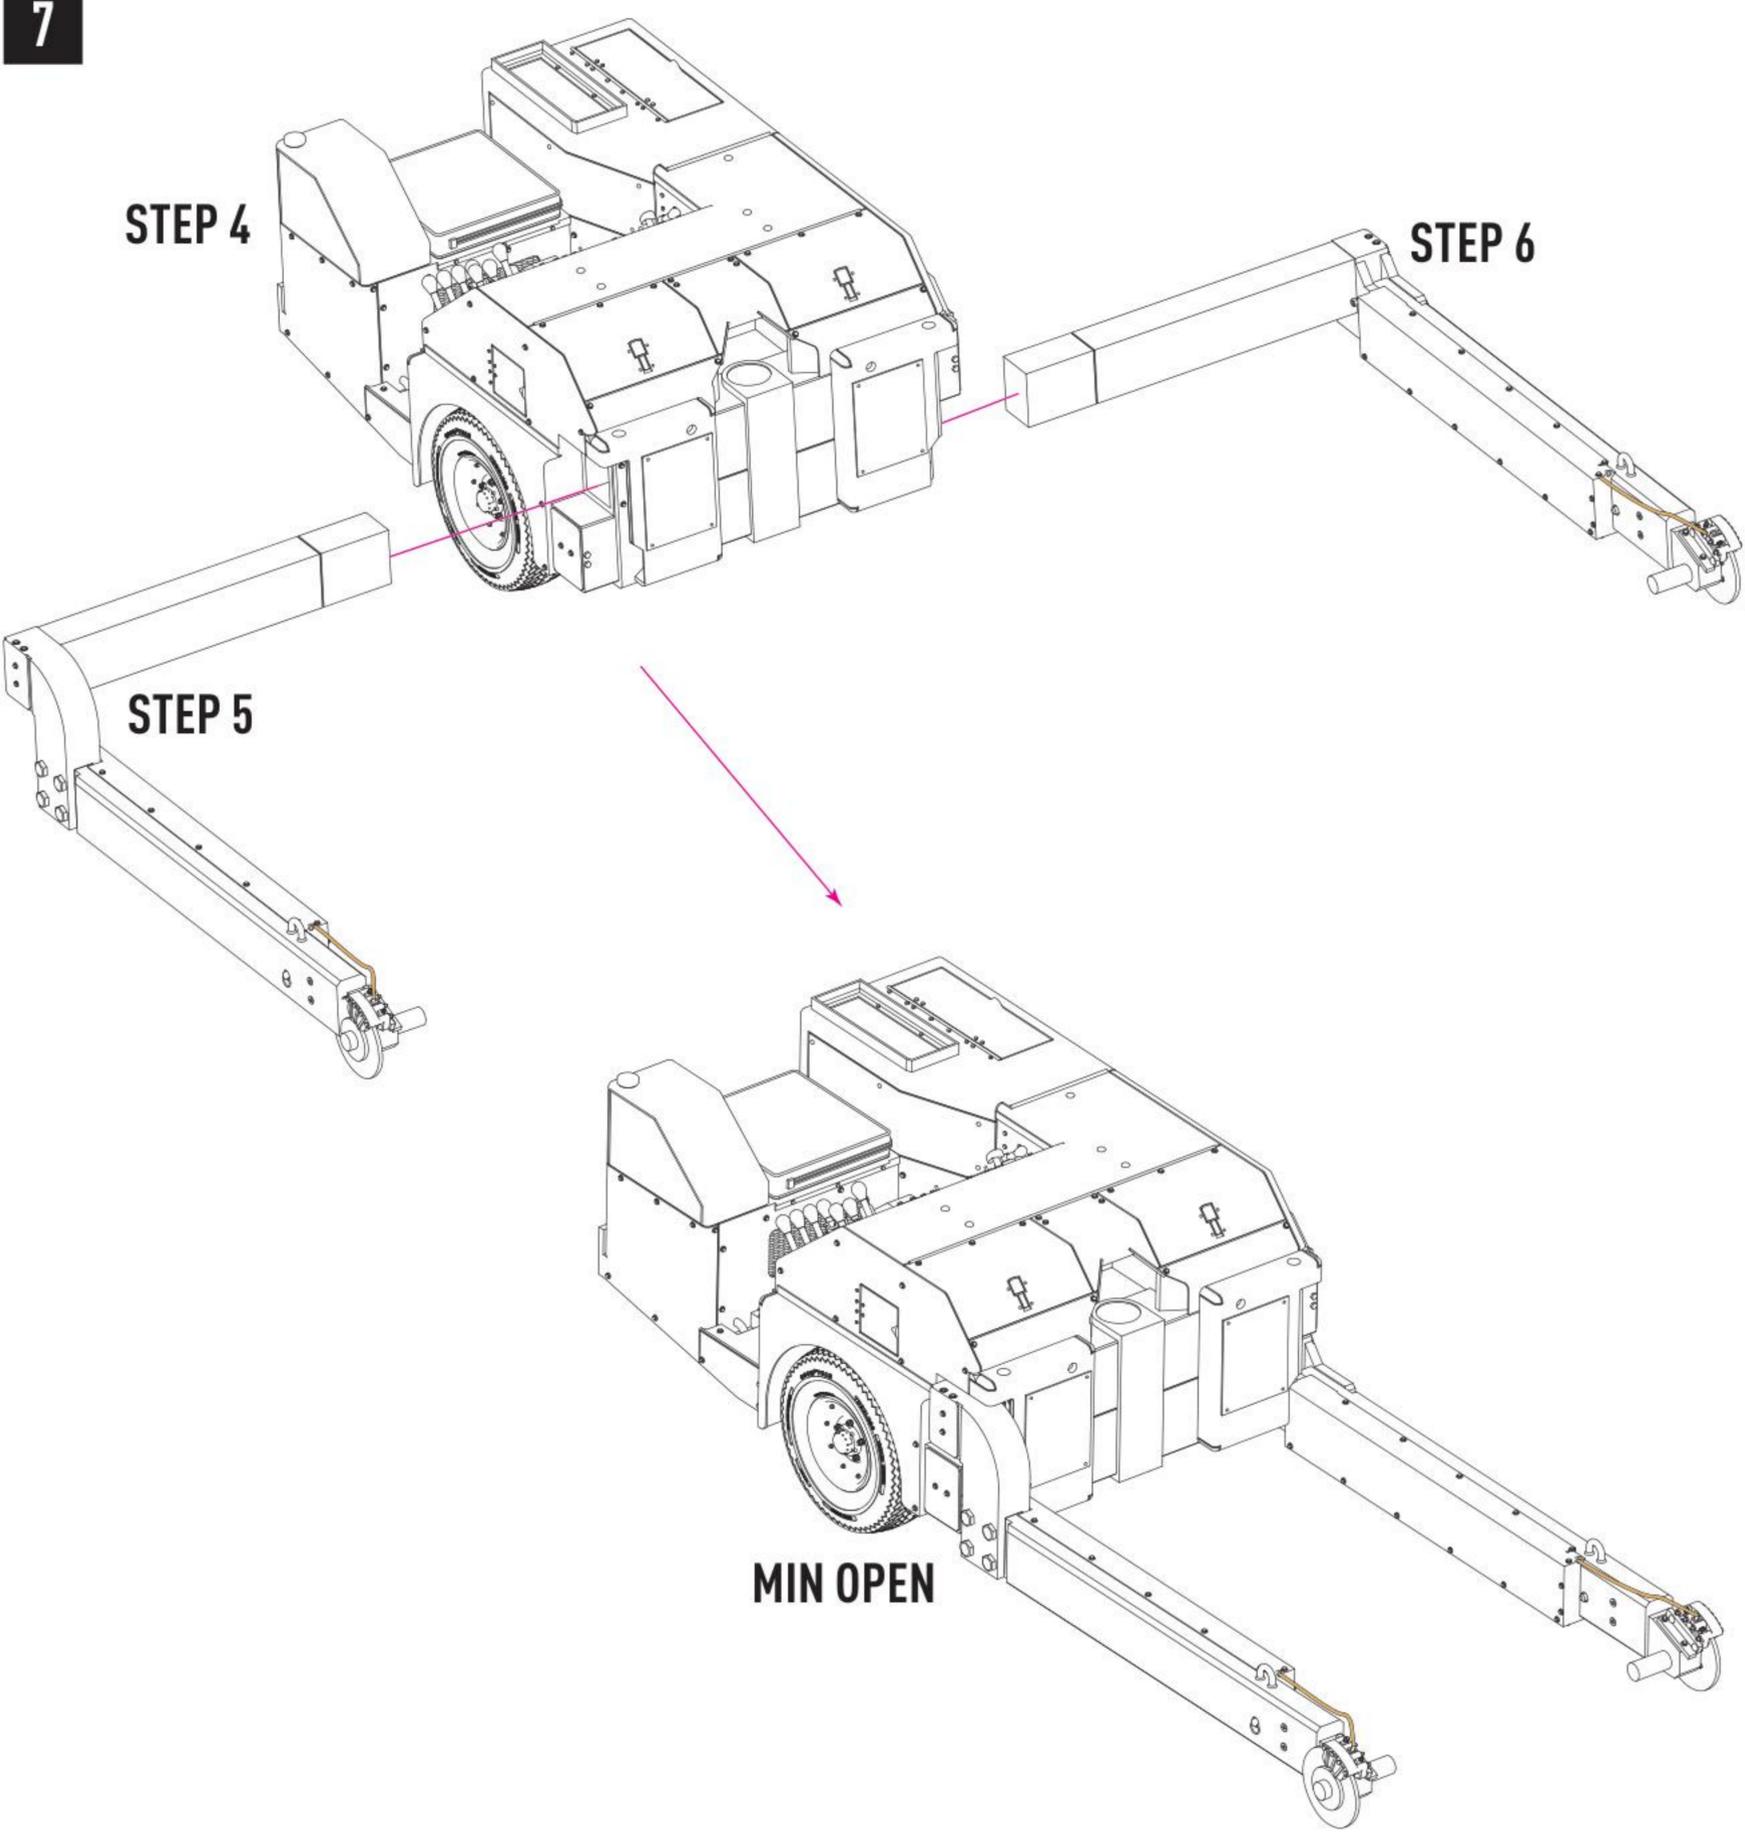


8

R8

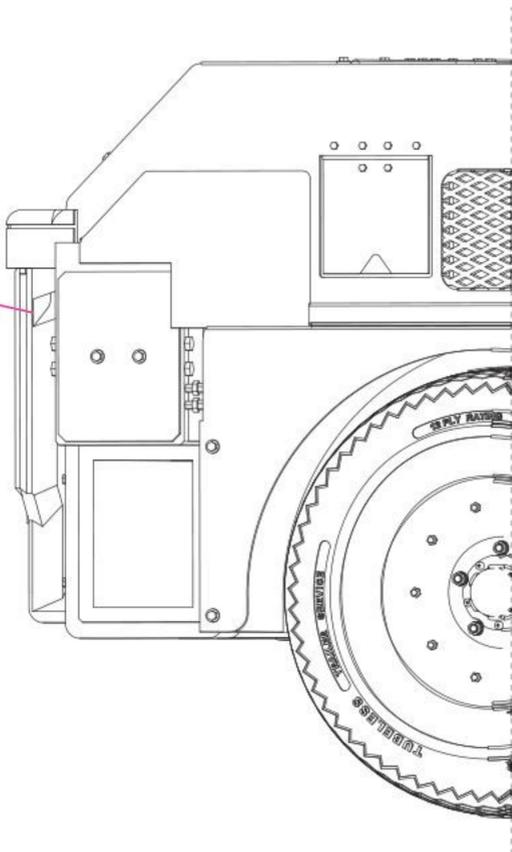

STEP 4

R7

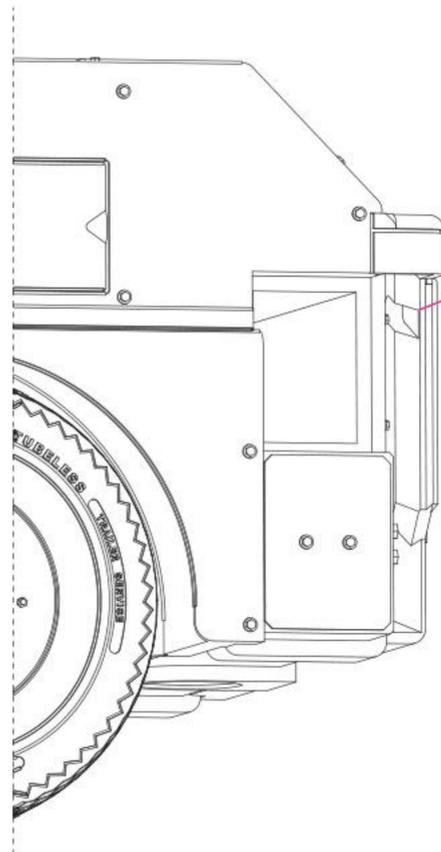

9


STEP 8

USE WIRE D=0.2 MM, L=17 MM


STEP 5

USE WIRE
D=0.2 MM, L=17 MM


STEP 6

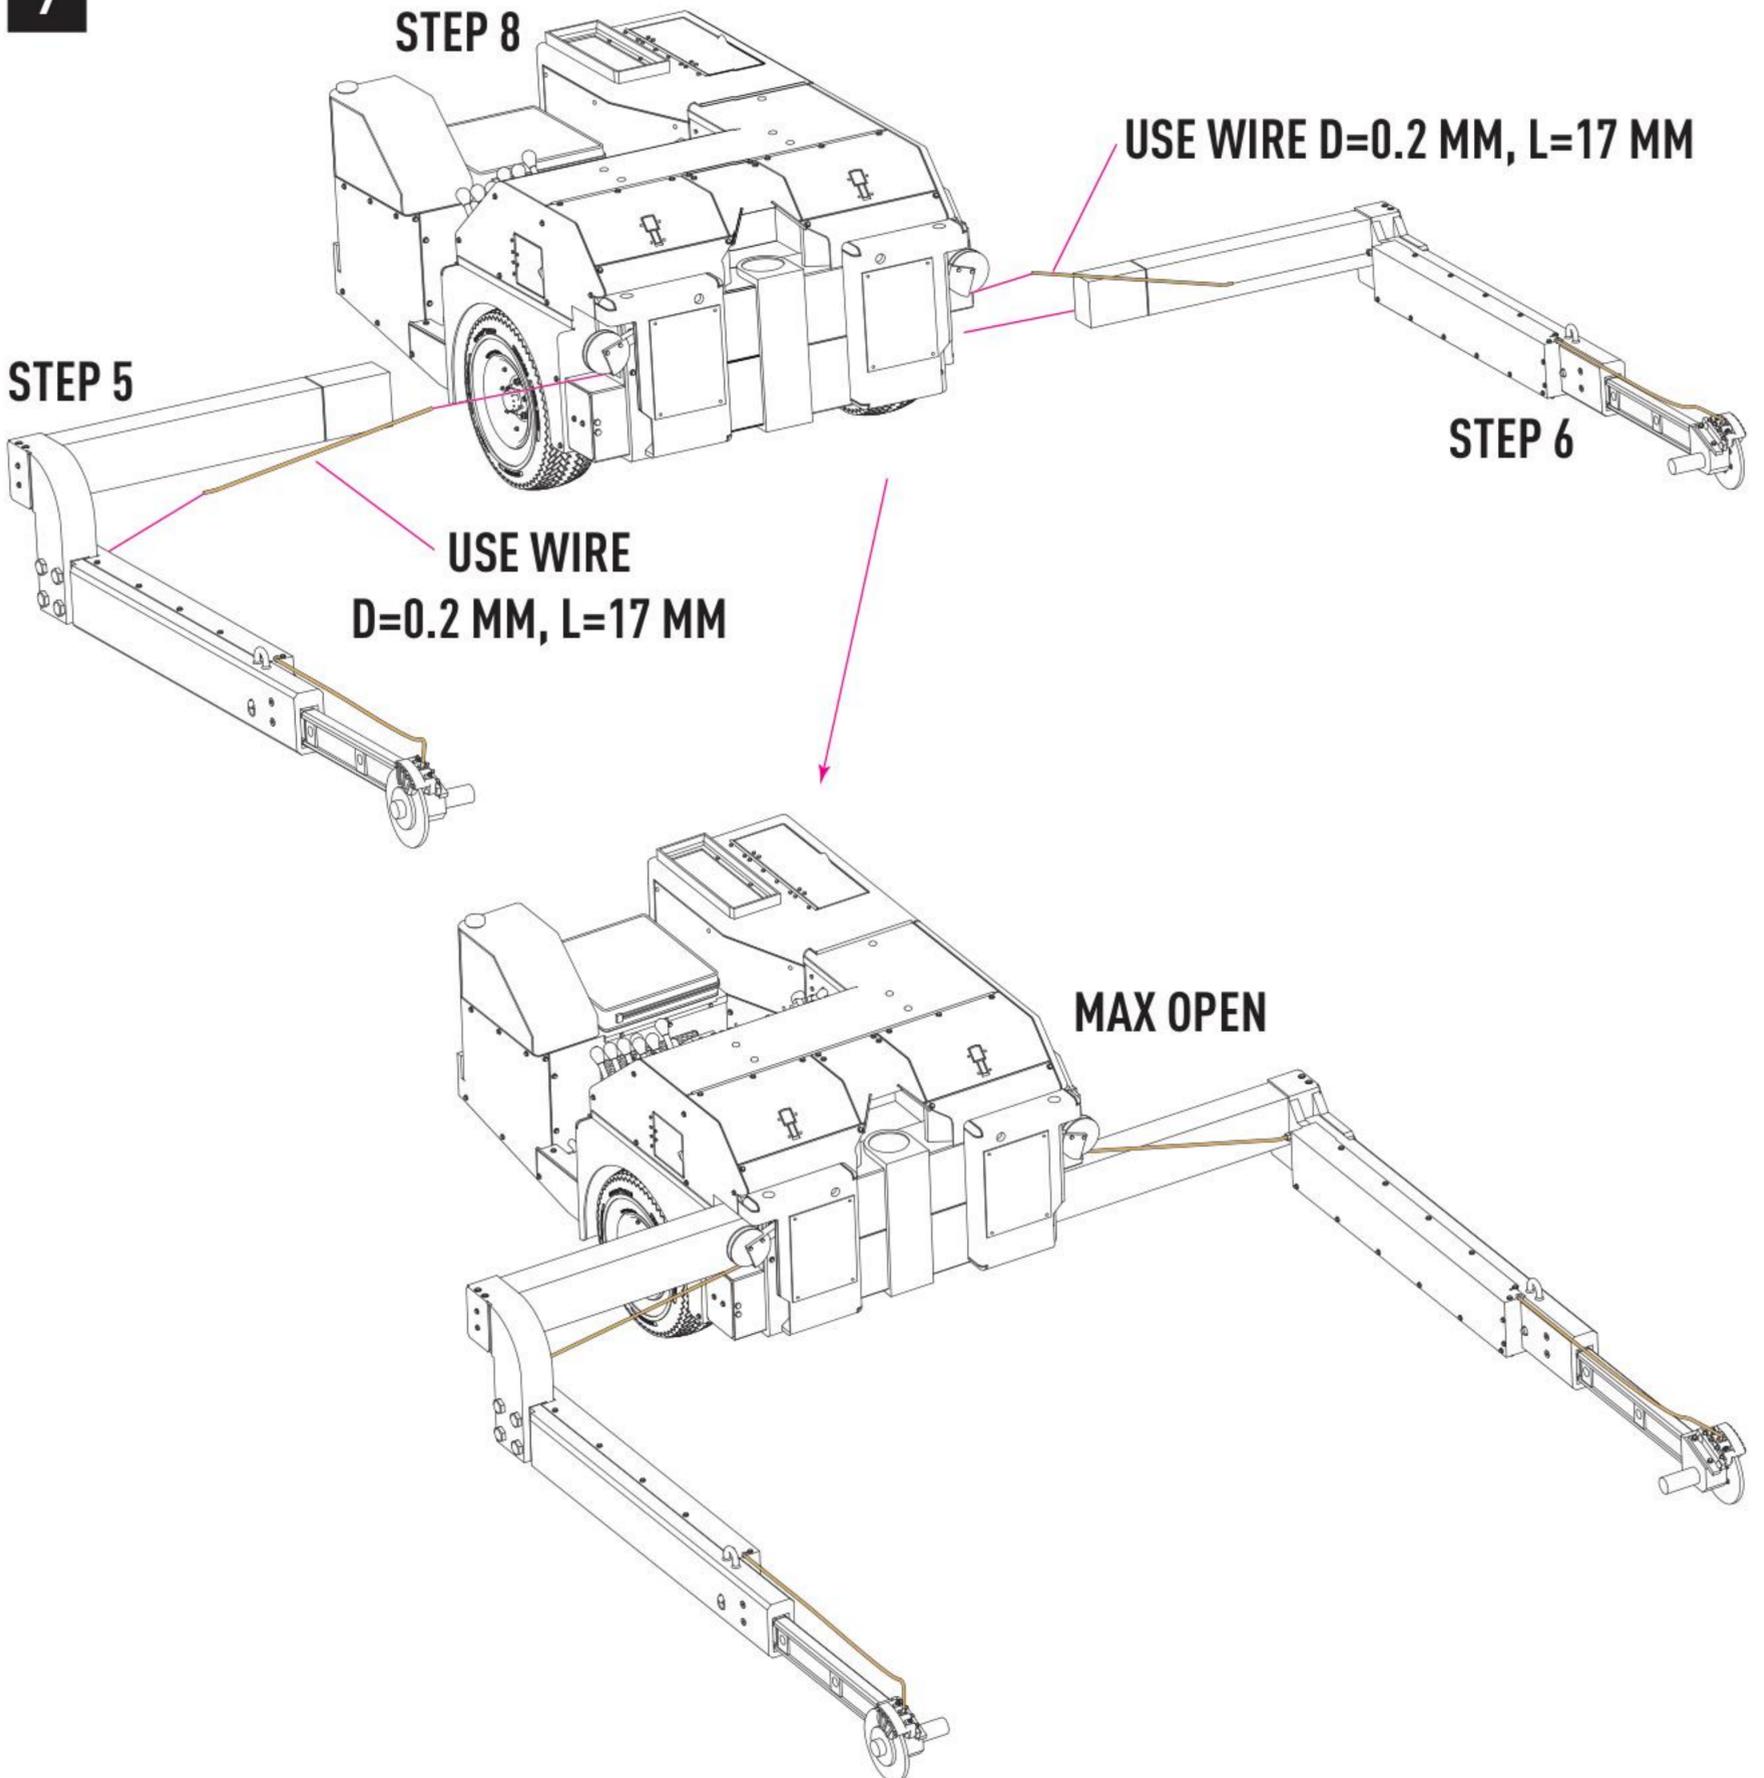


10 X2

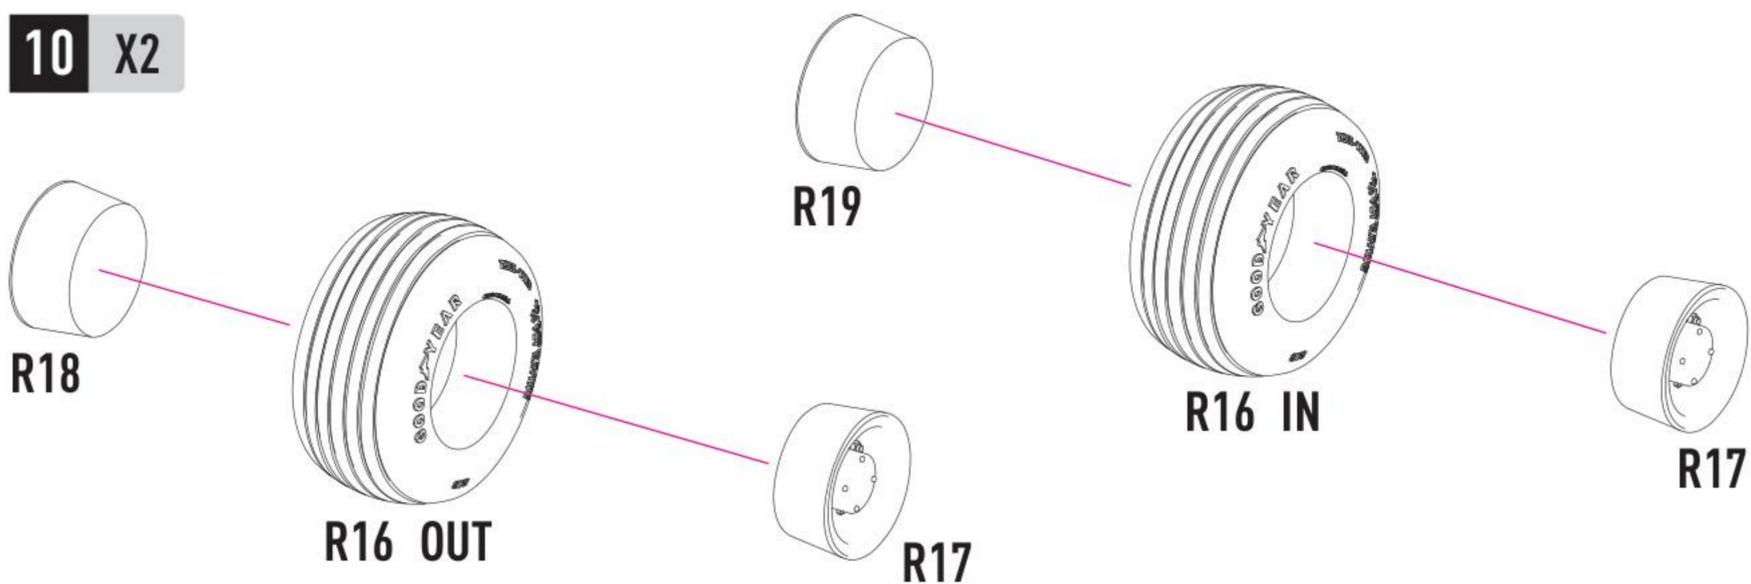


11

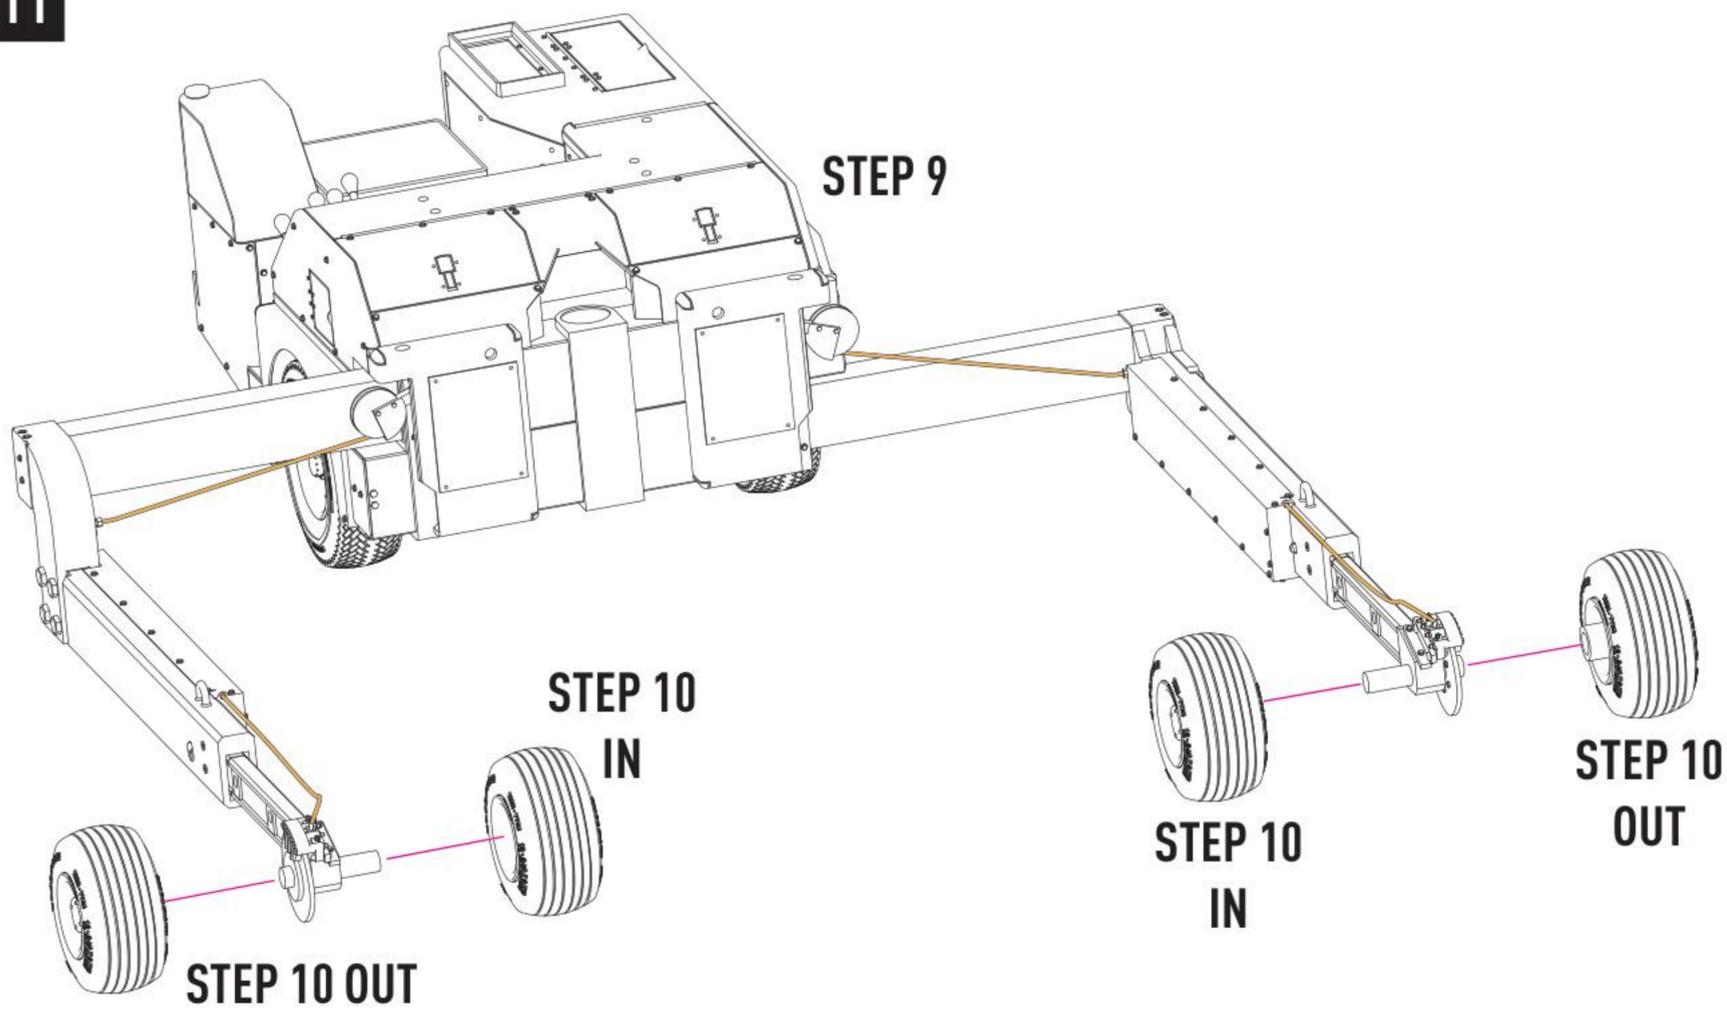


12

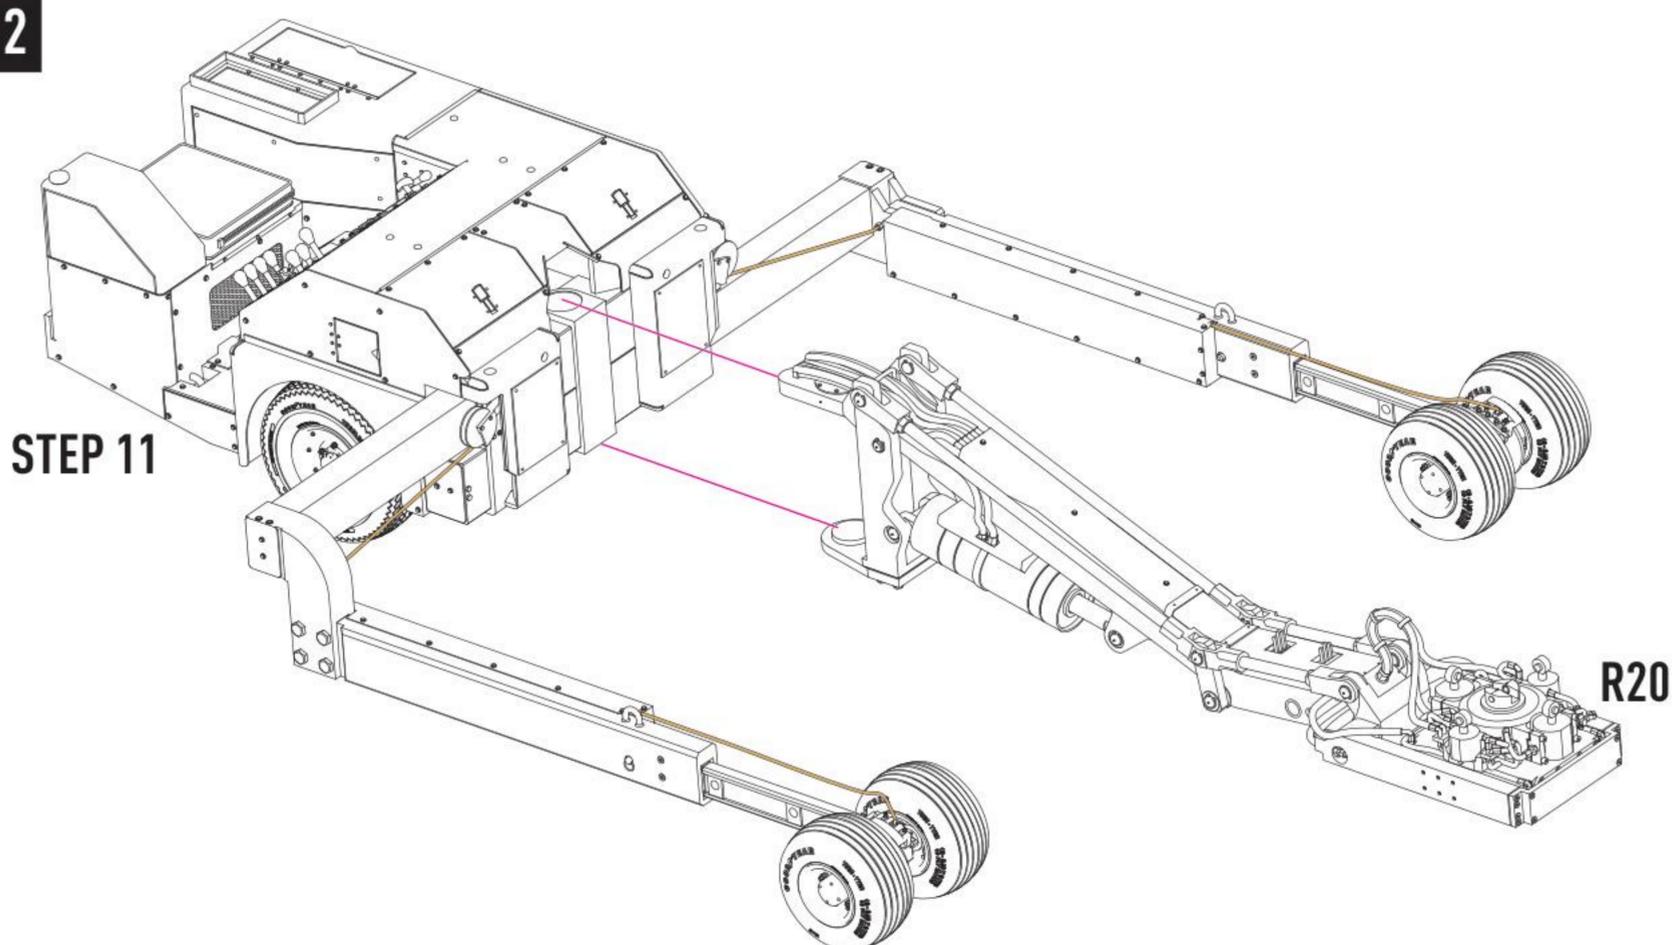





13

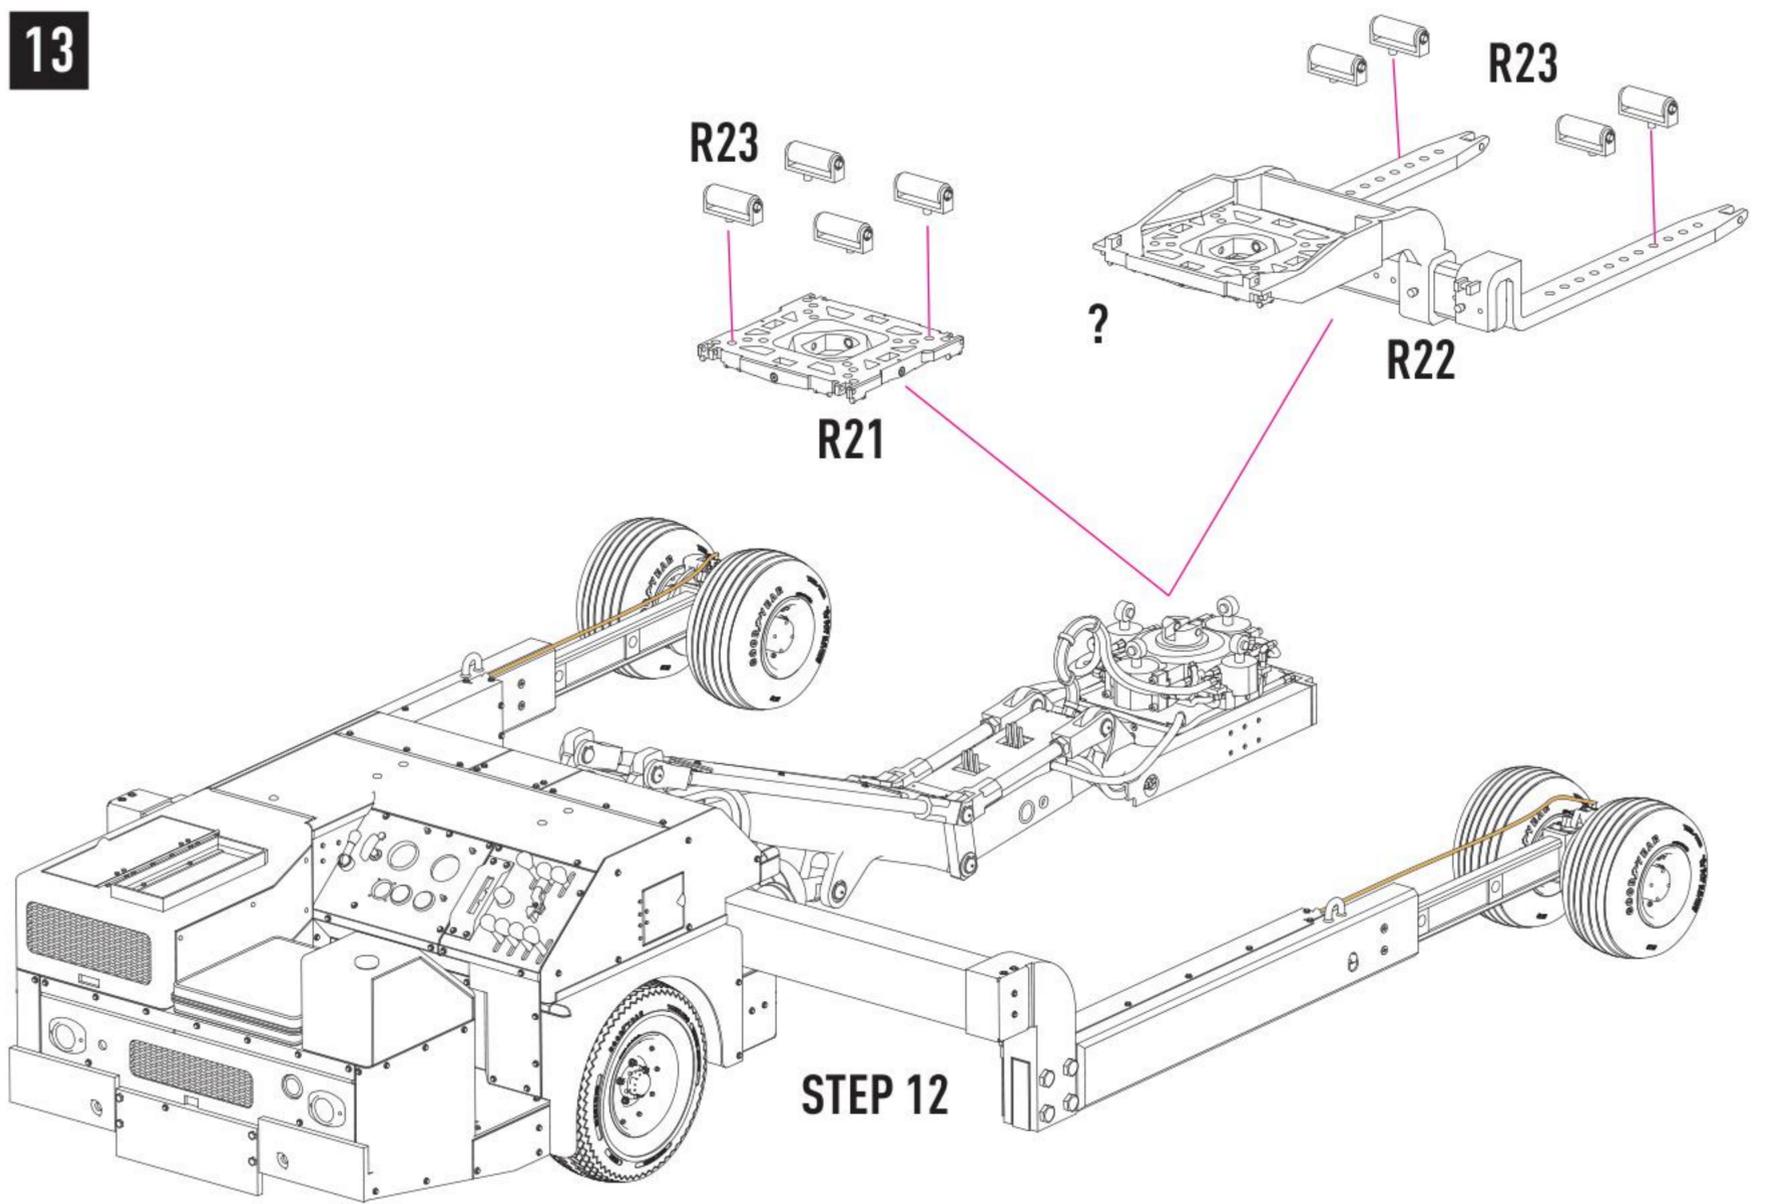


14

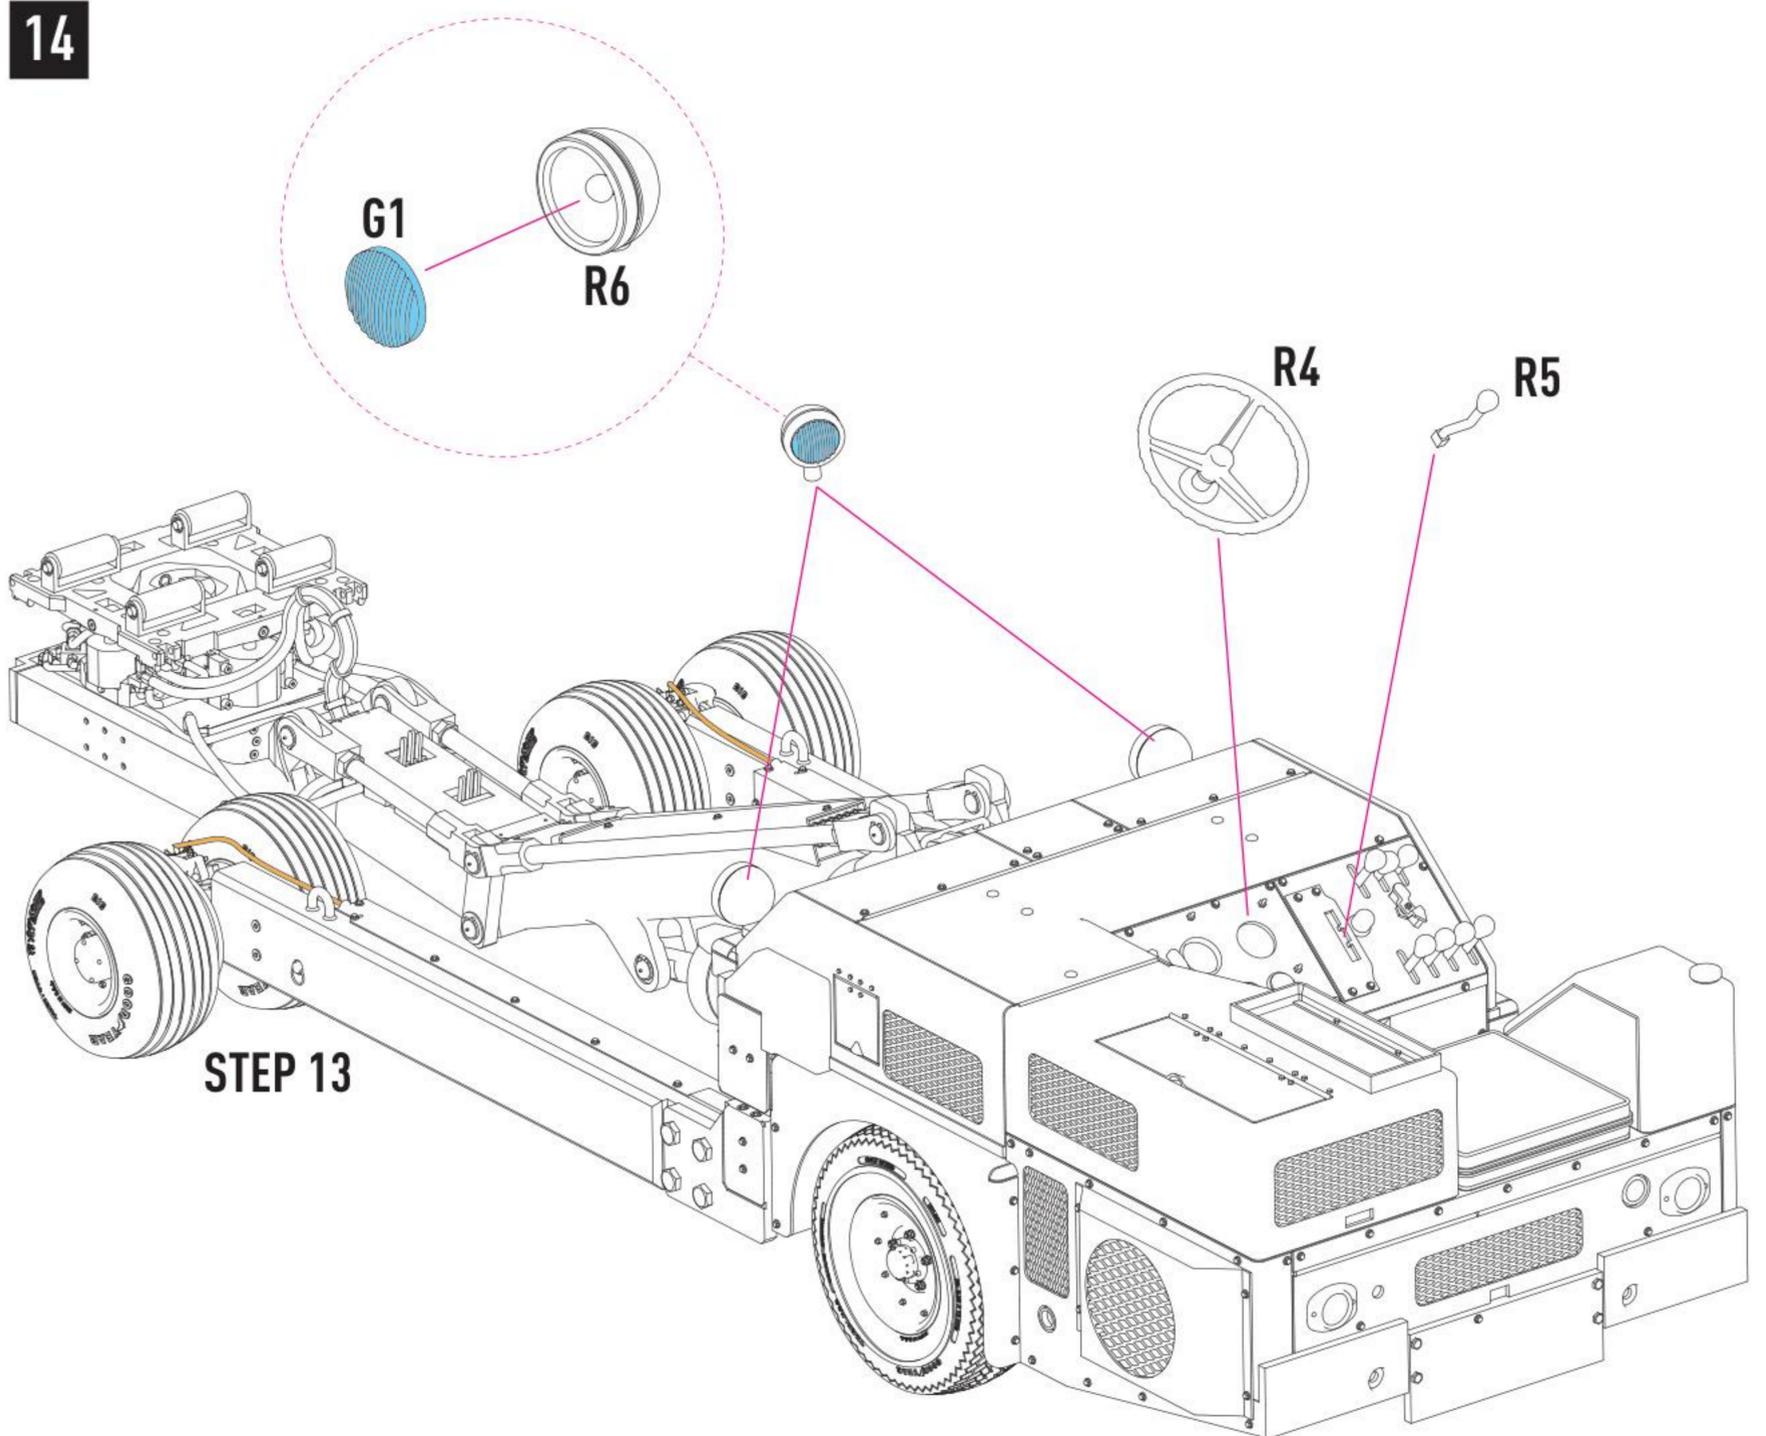

DECAL INSTRUCTION

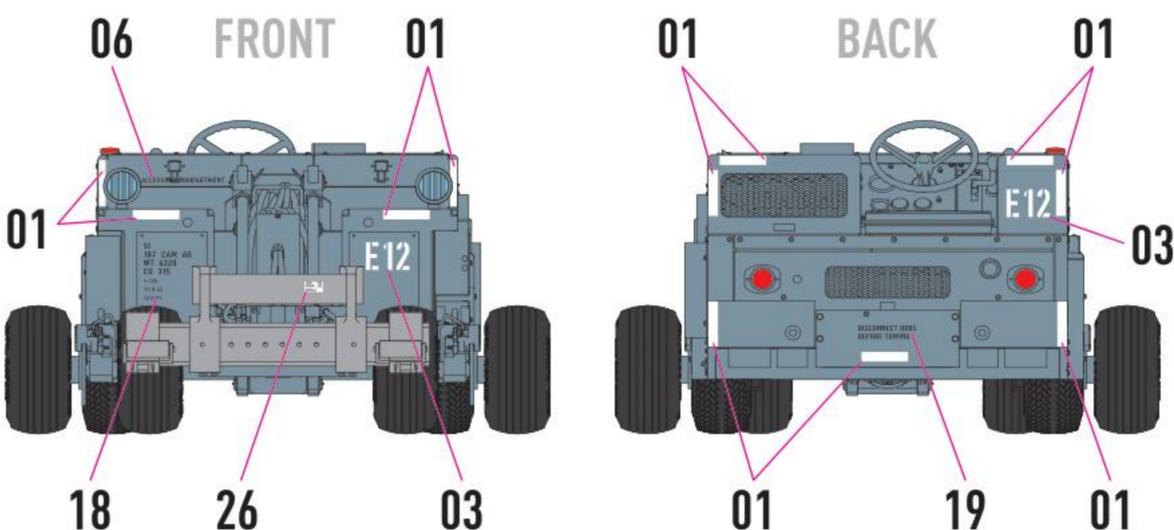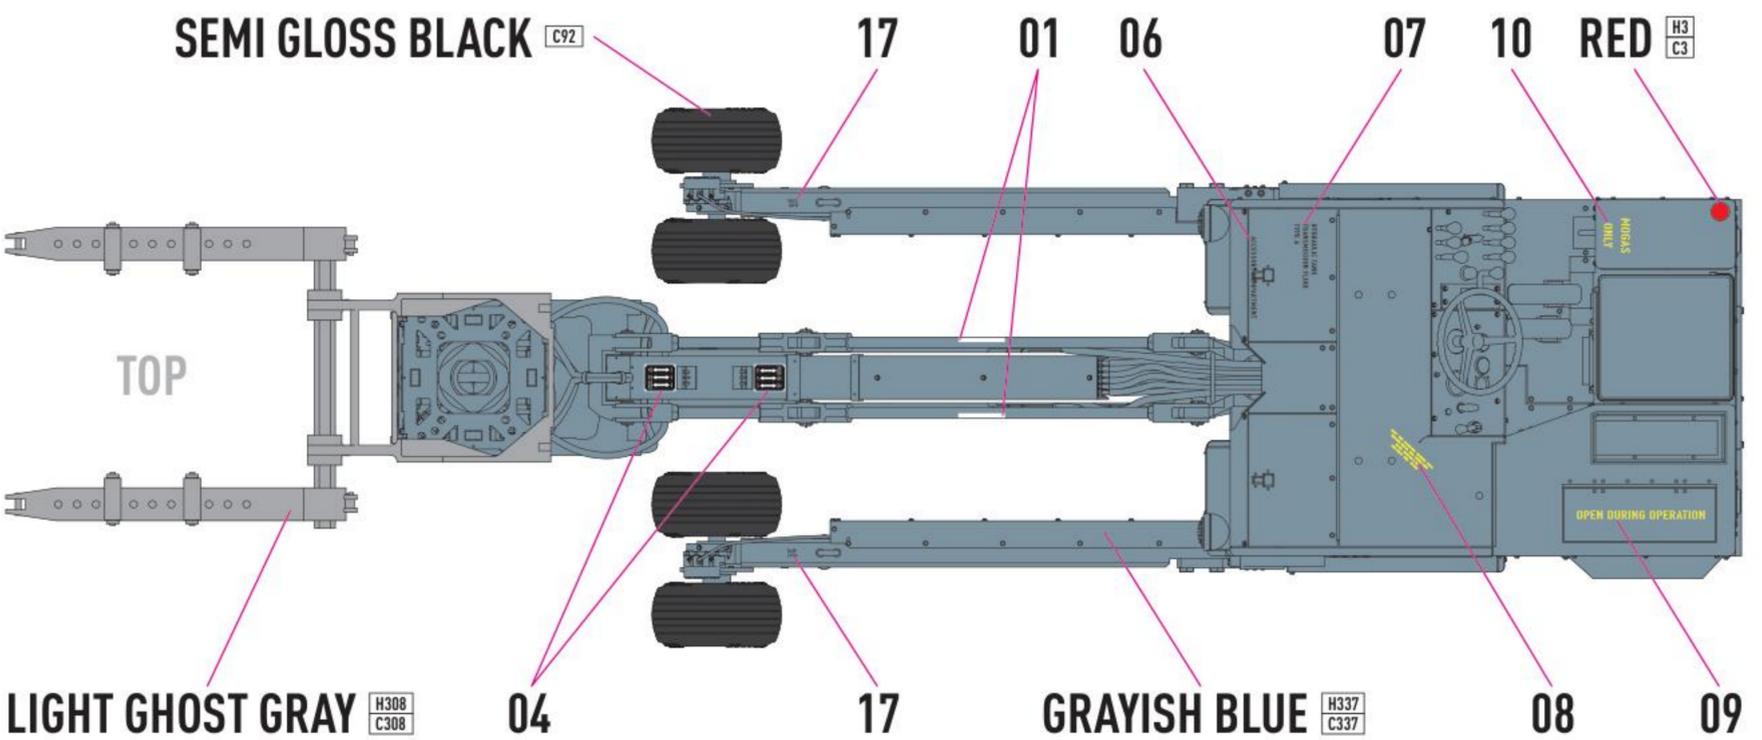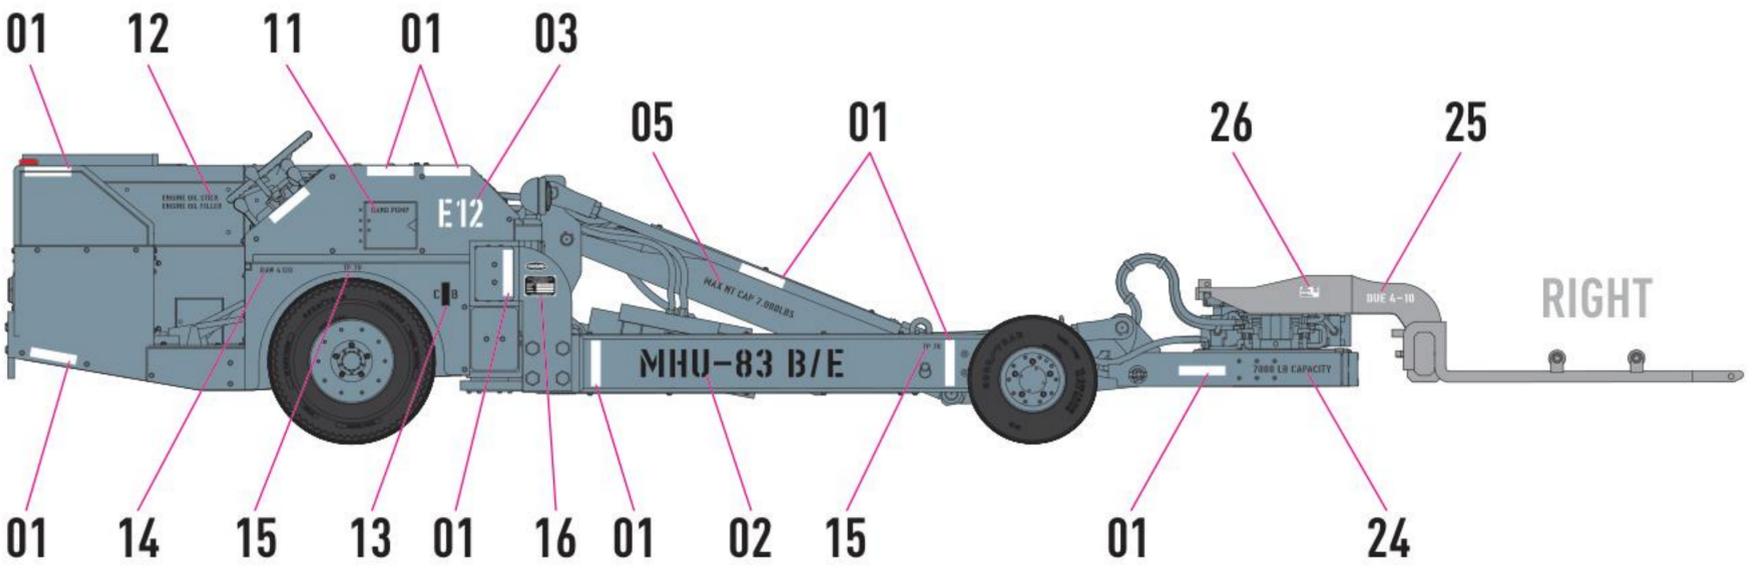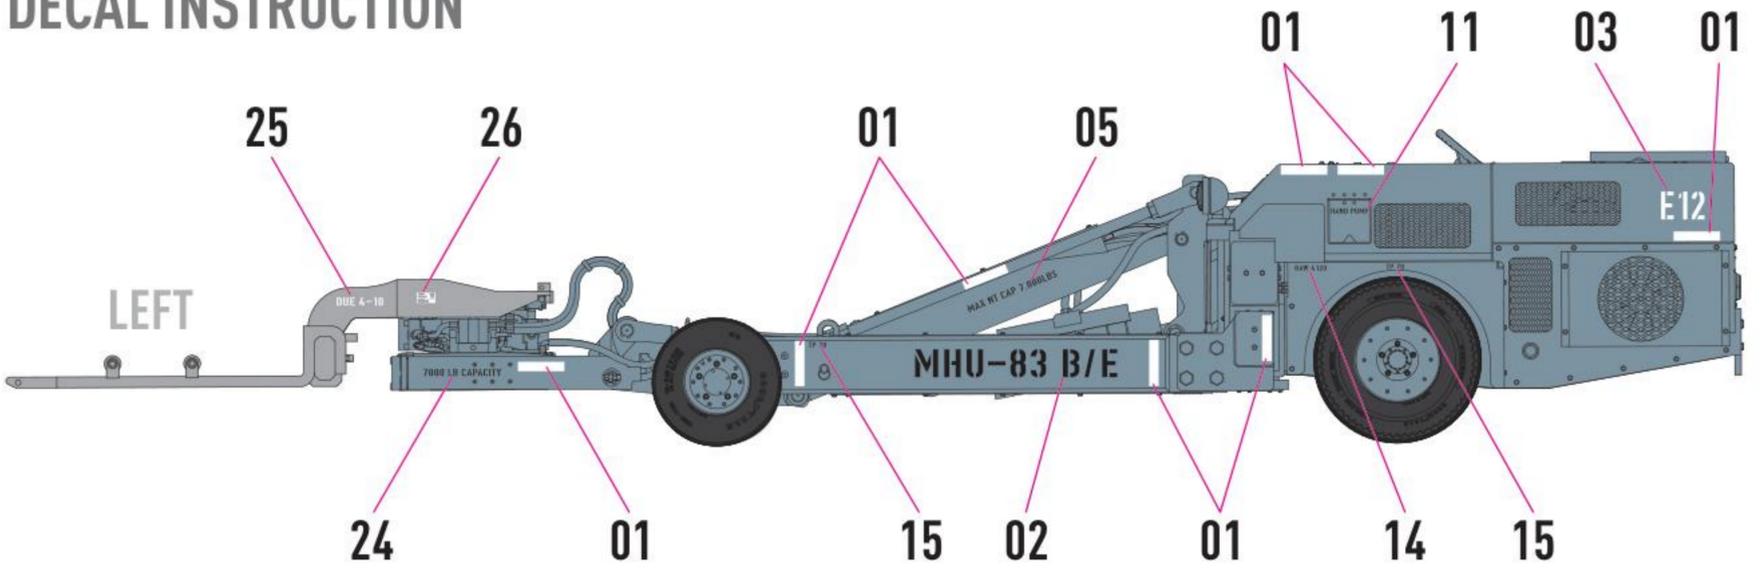

INSTRUMENT PANEL

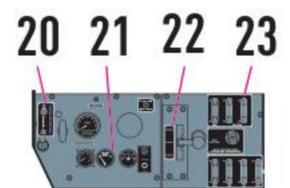

COLORS	GUNZE / AEOEUS	GUNZE / MR.COLOR
GRAYISH BLUE	H337	C337
RED	H3	C3
SEMI GLOSS BLACK		C92
LIGHT GHOST GRAY	H308	C308

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit_official](https://www.instagram.com/reskit_official)

[pinterest.com/reskit_official](https://www.pinterest.com/reskit_official)