


DETAILS AFTER REMOVAL FROM SUPPORTS

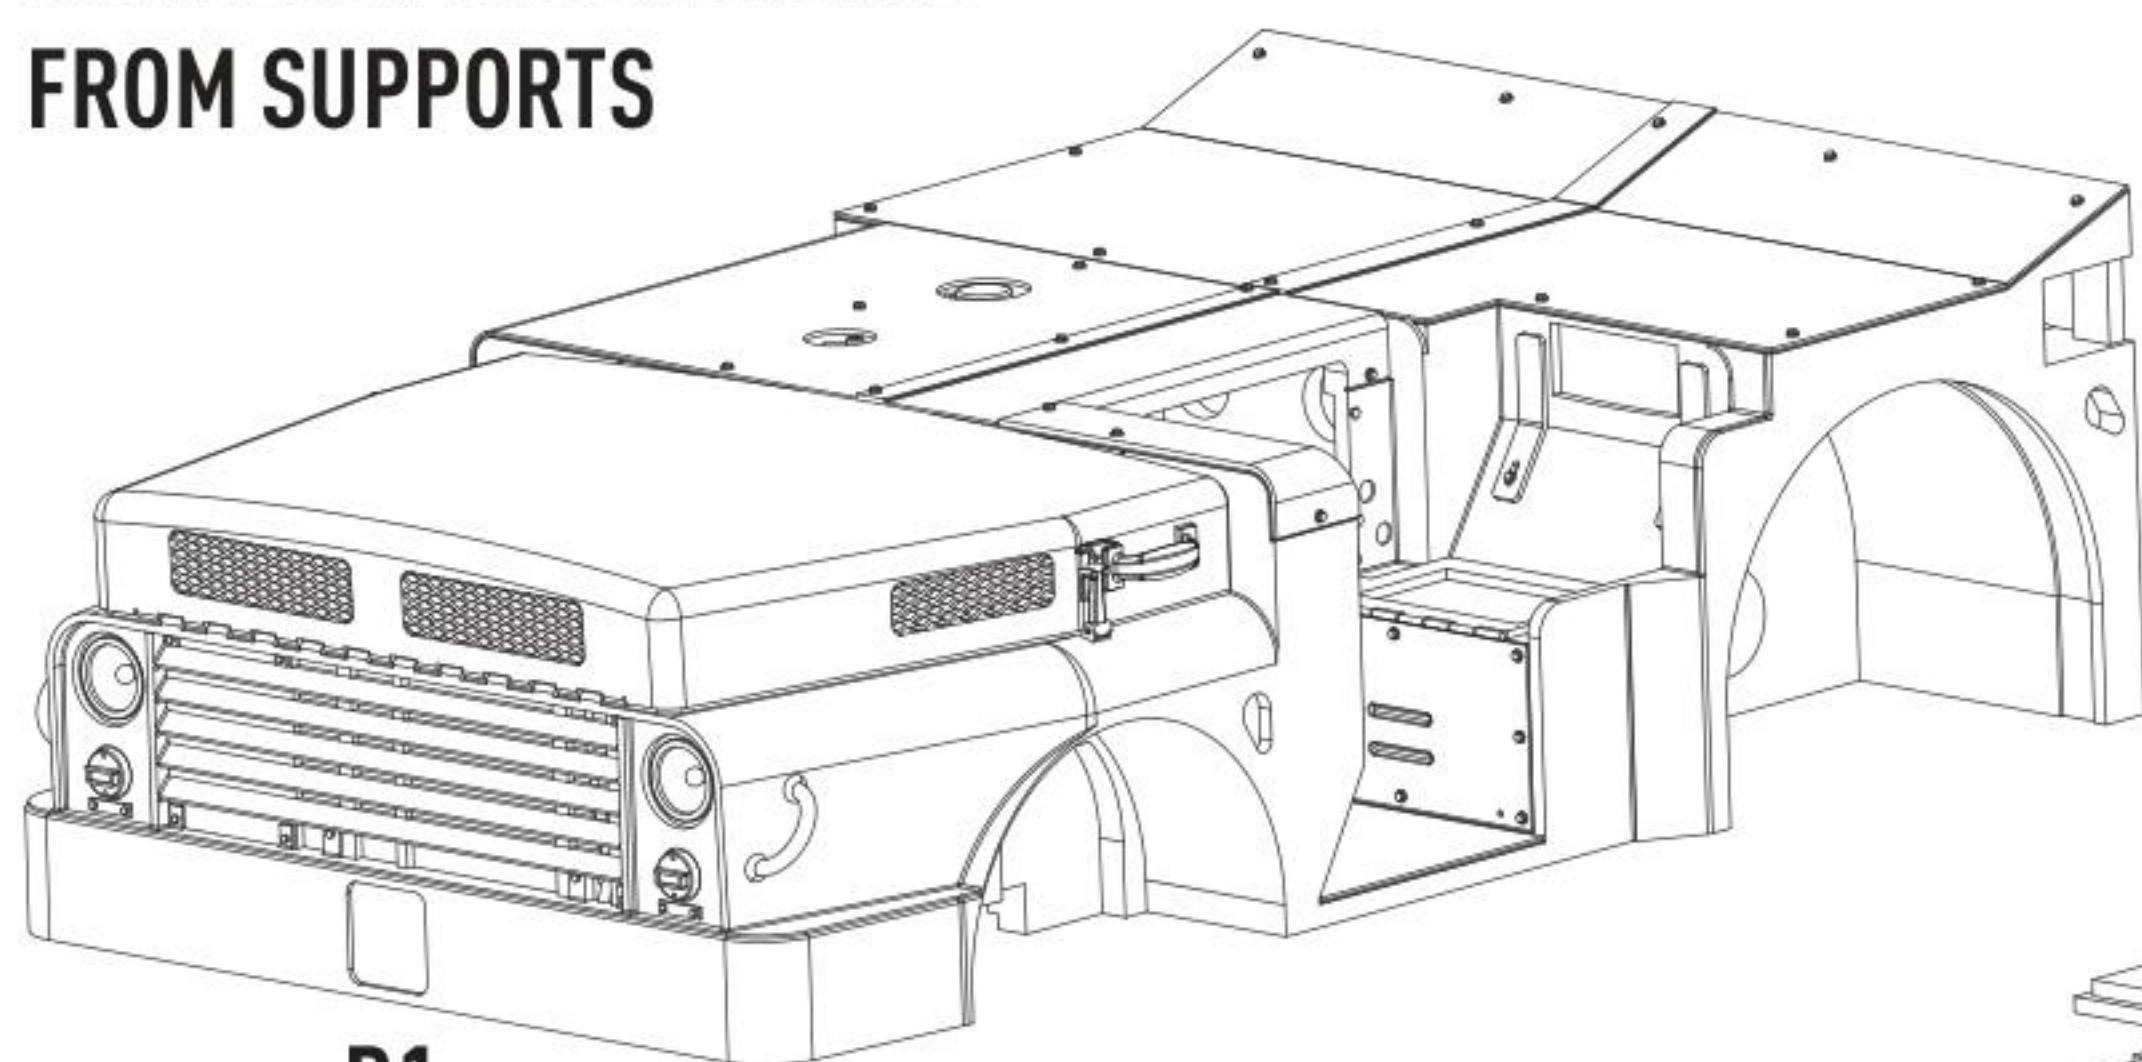

R1



R20




R10




R21



R14

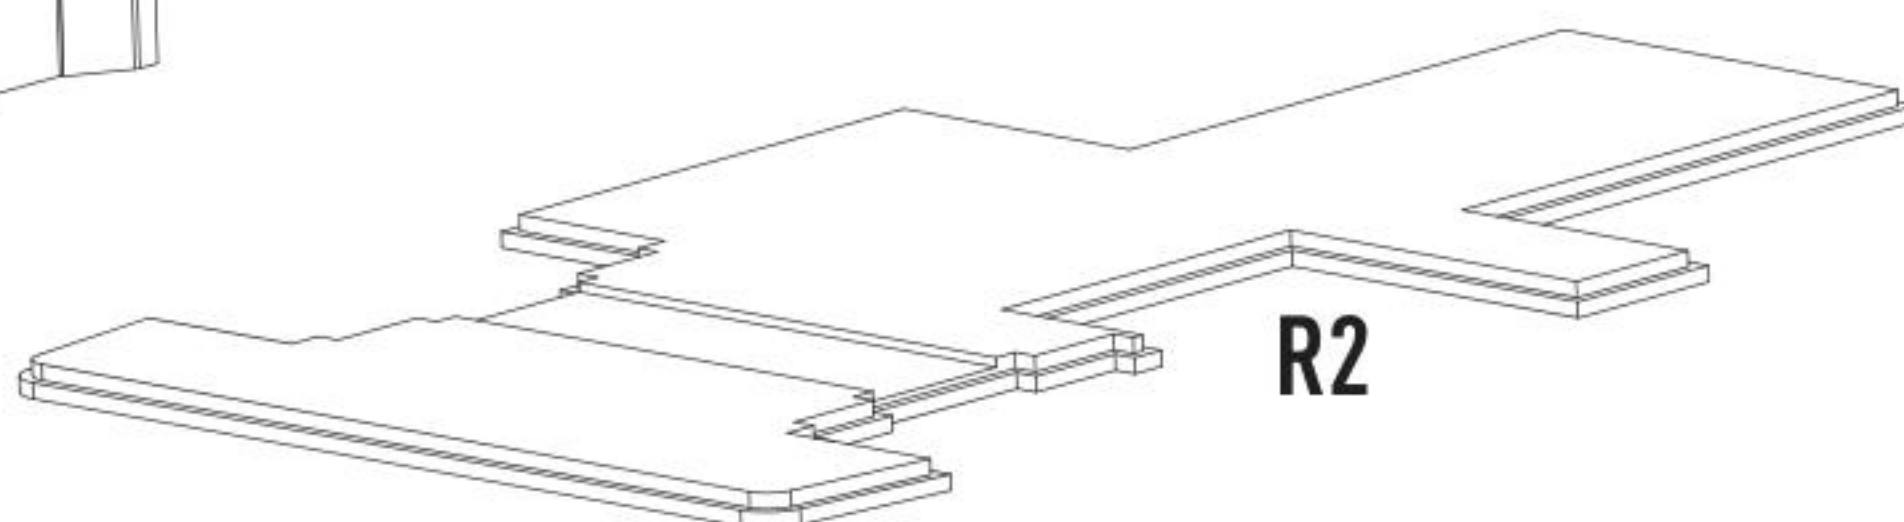

R2

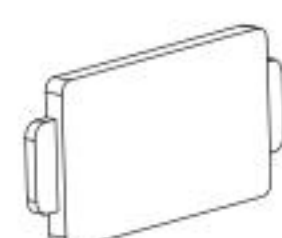


R3



R15



R18

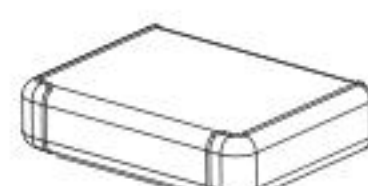

R16



R17



R23




R22 x2



R25



R4 x2

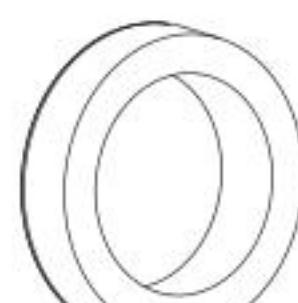


R5 x2




R11 x2



R12 x2

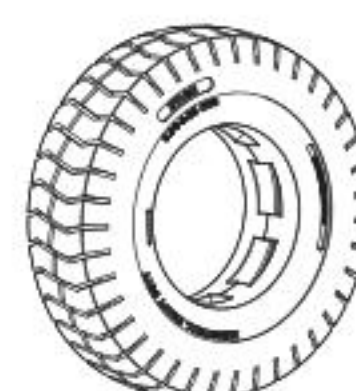

R13 x2

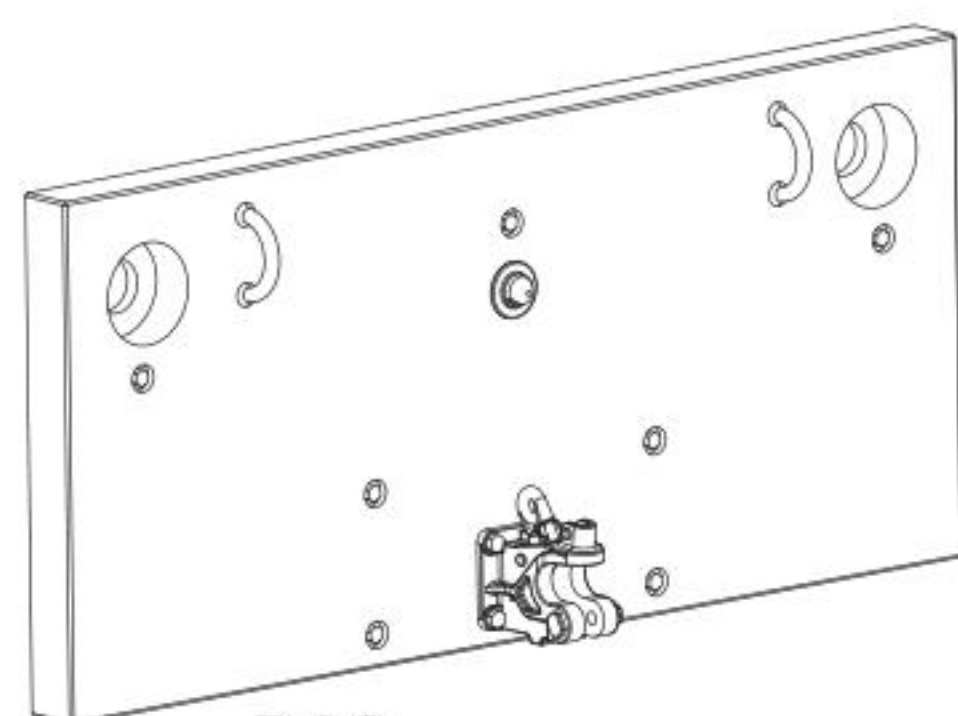

R19



R24



G1 x2



R6 x2



R7 x2




R8 x2




R9 x4

R28

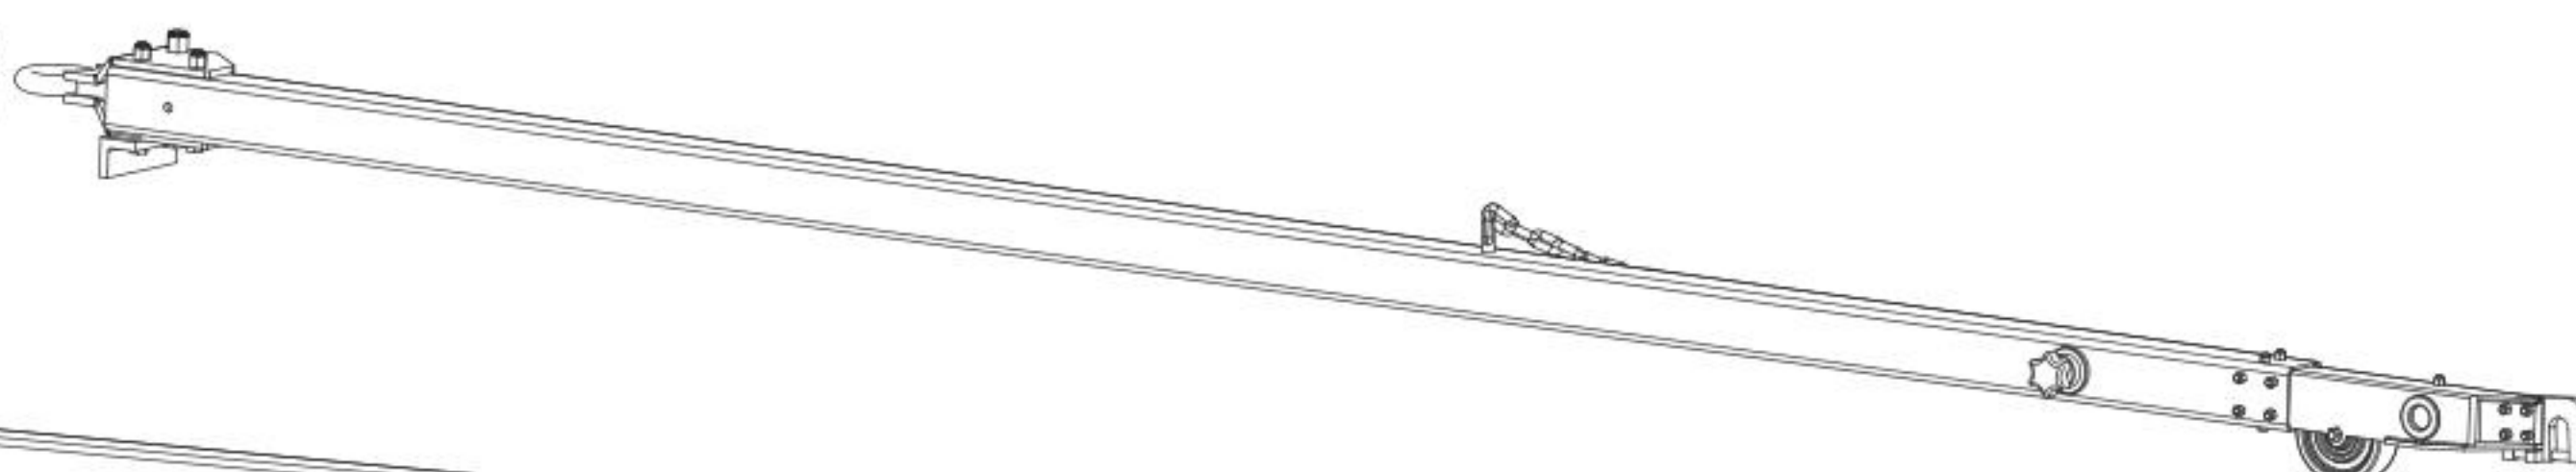


R29

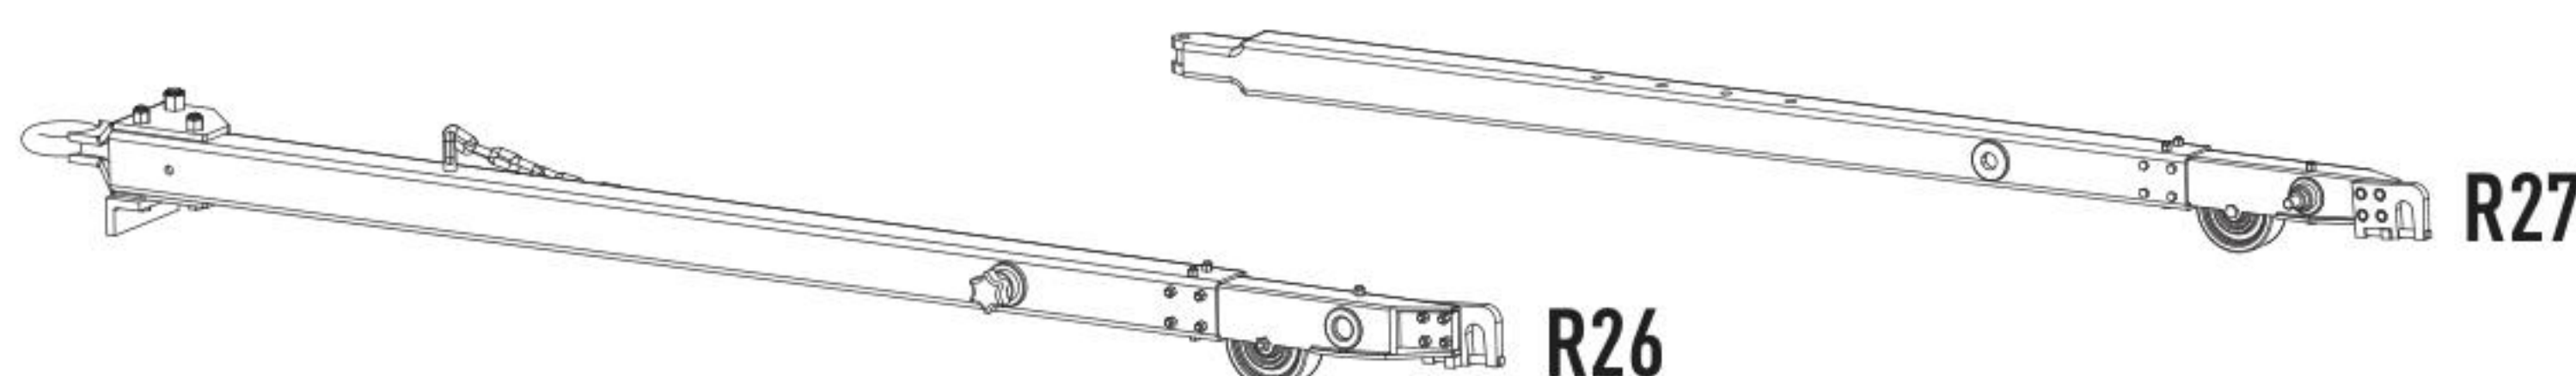




R26


R27

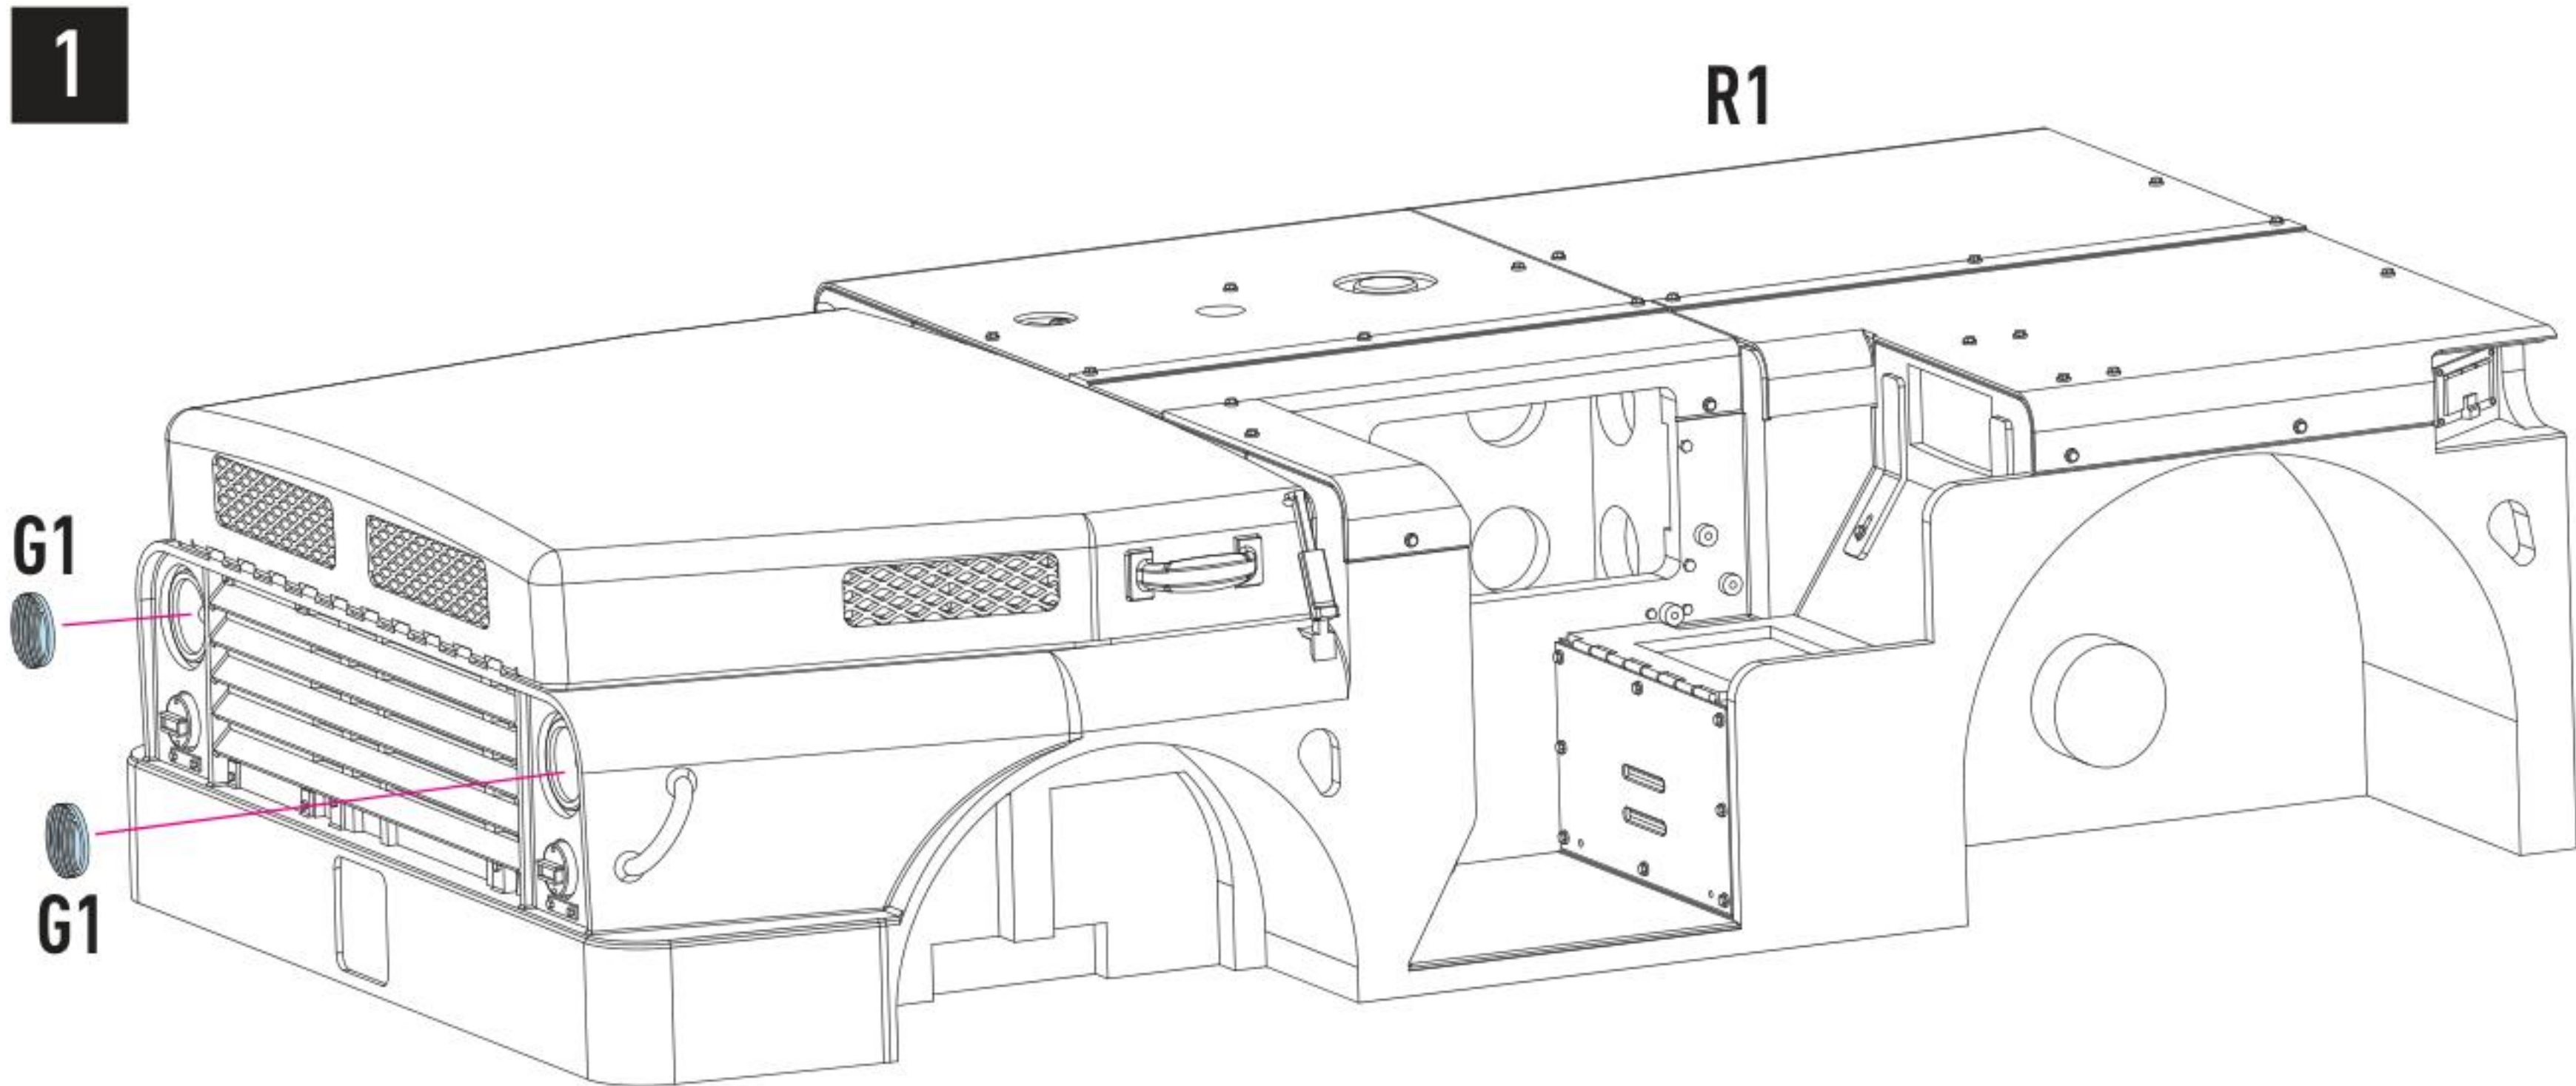


**BEFORE ASSEMBLY, COVER TRANSPARENT PARTS
WITH GLOSSY VARNISH**

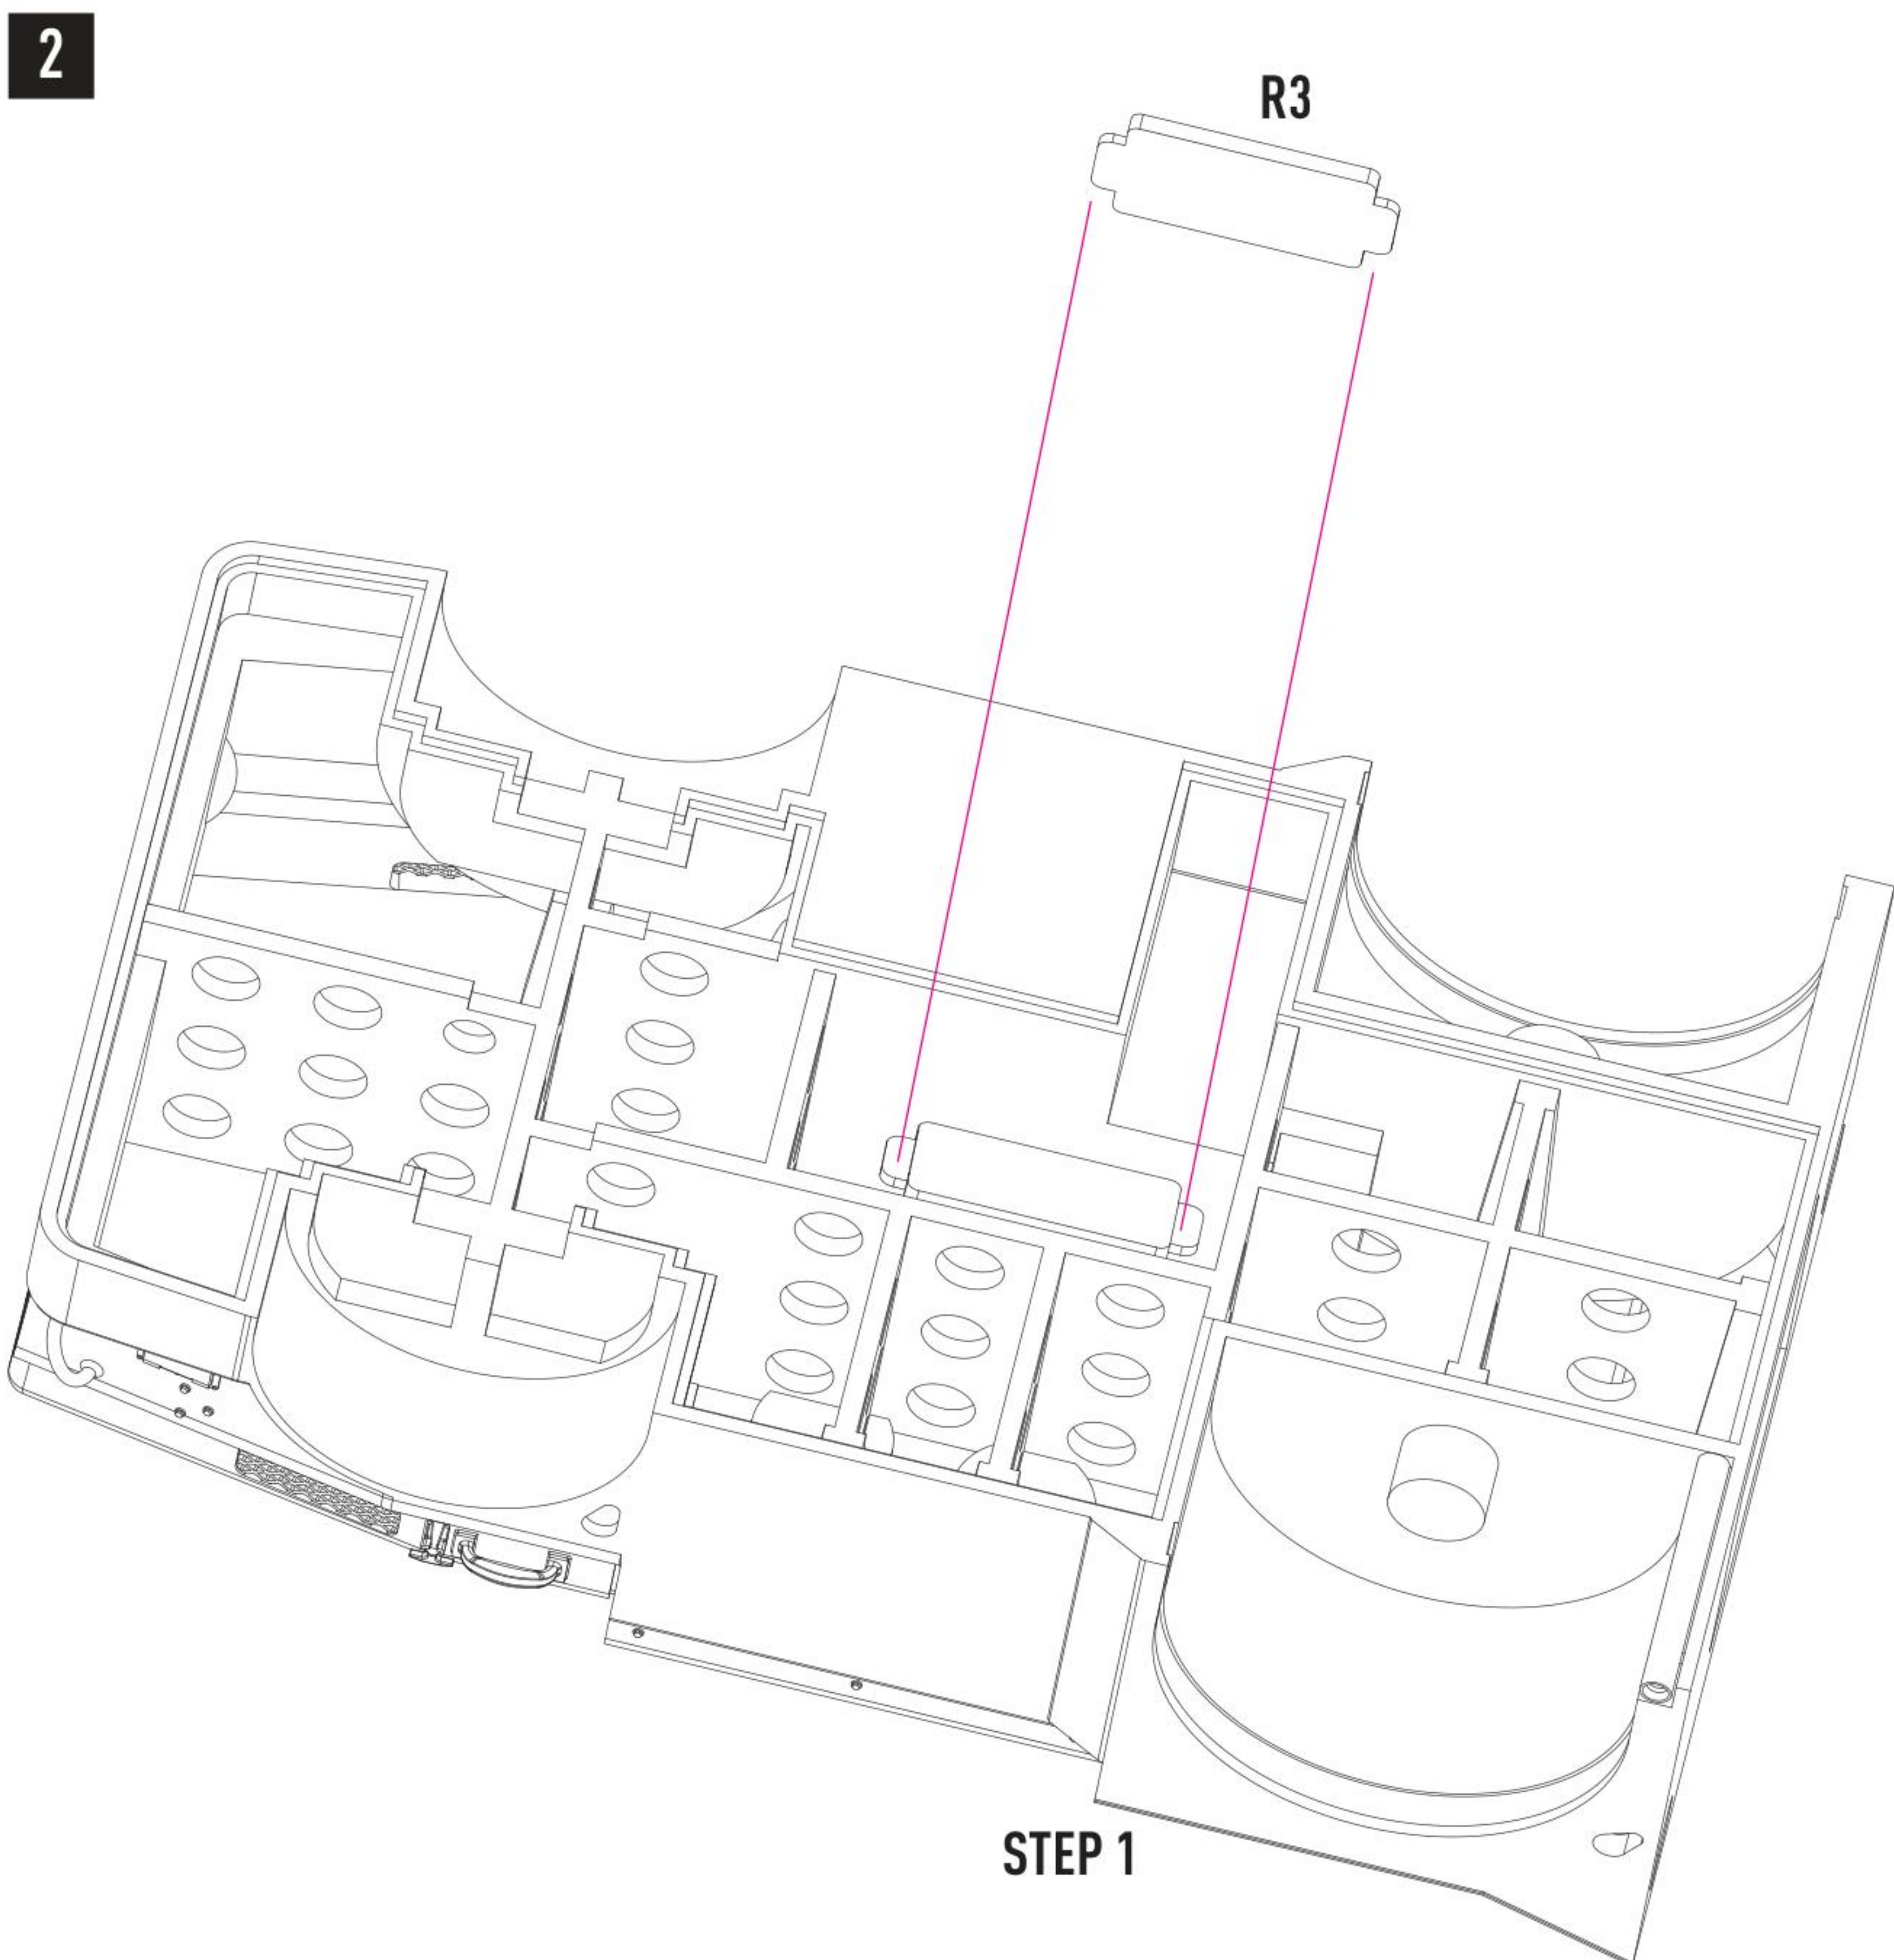

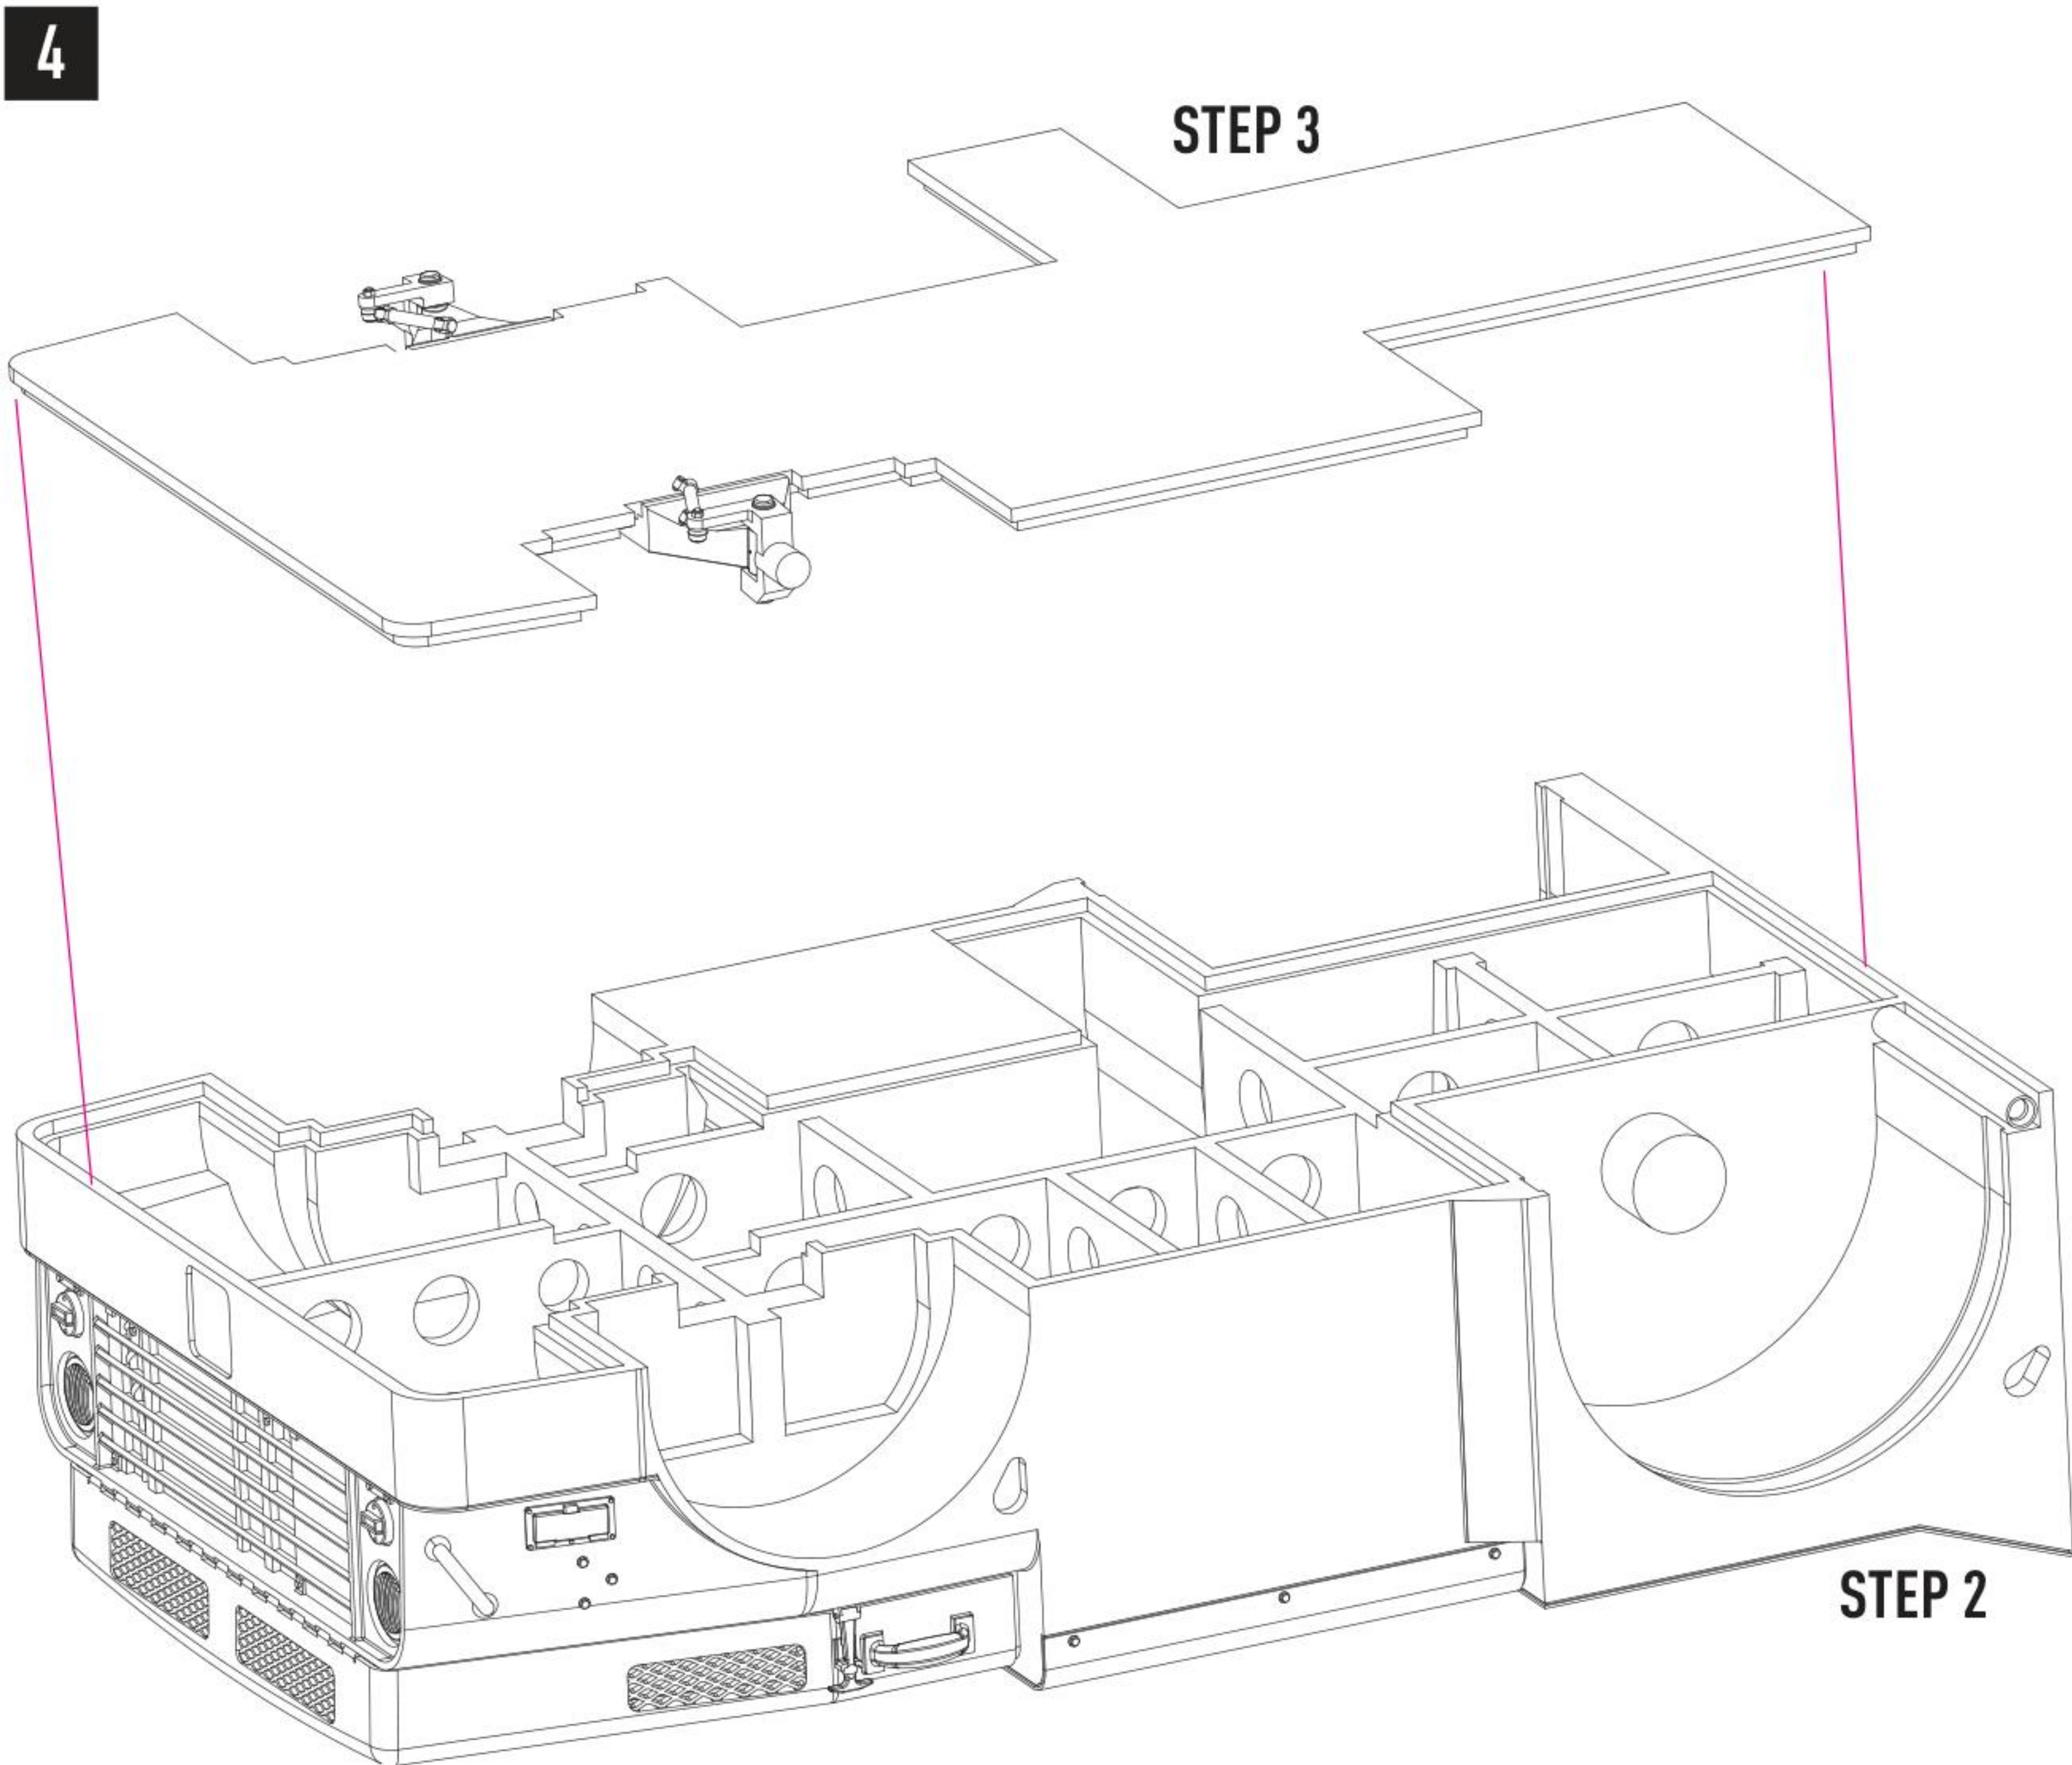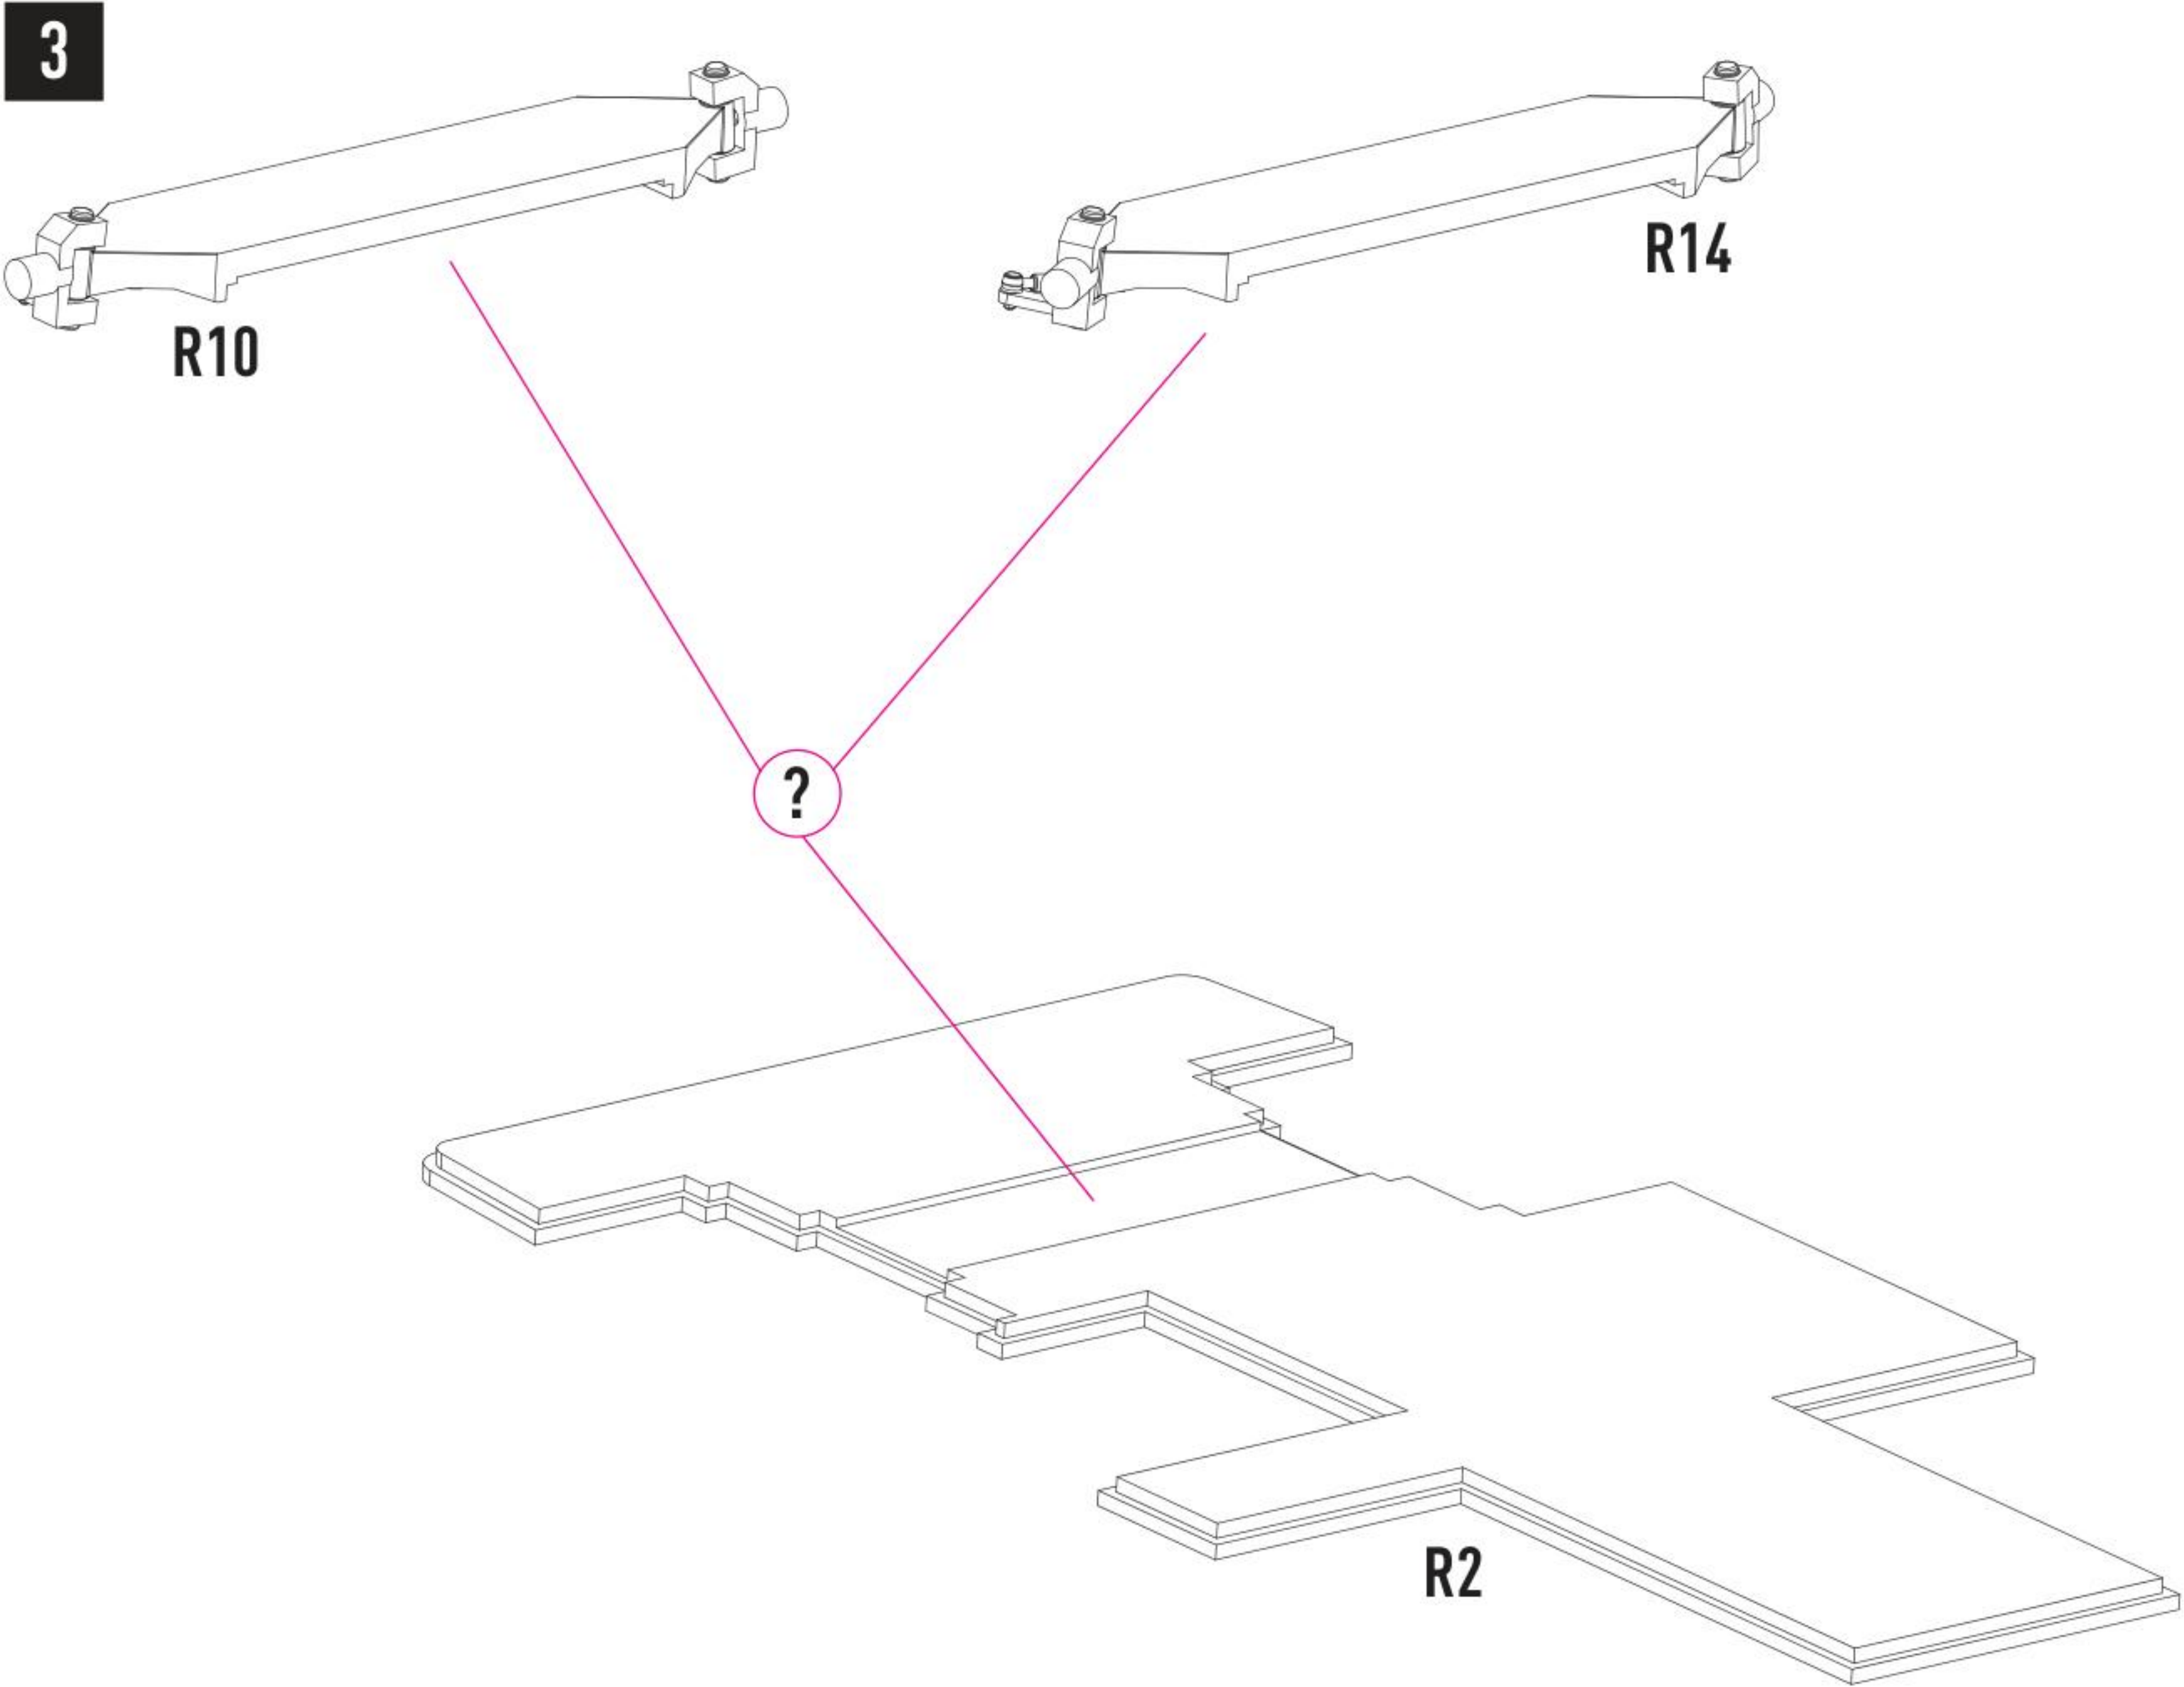


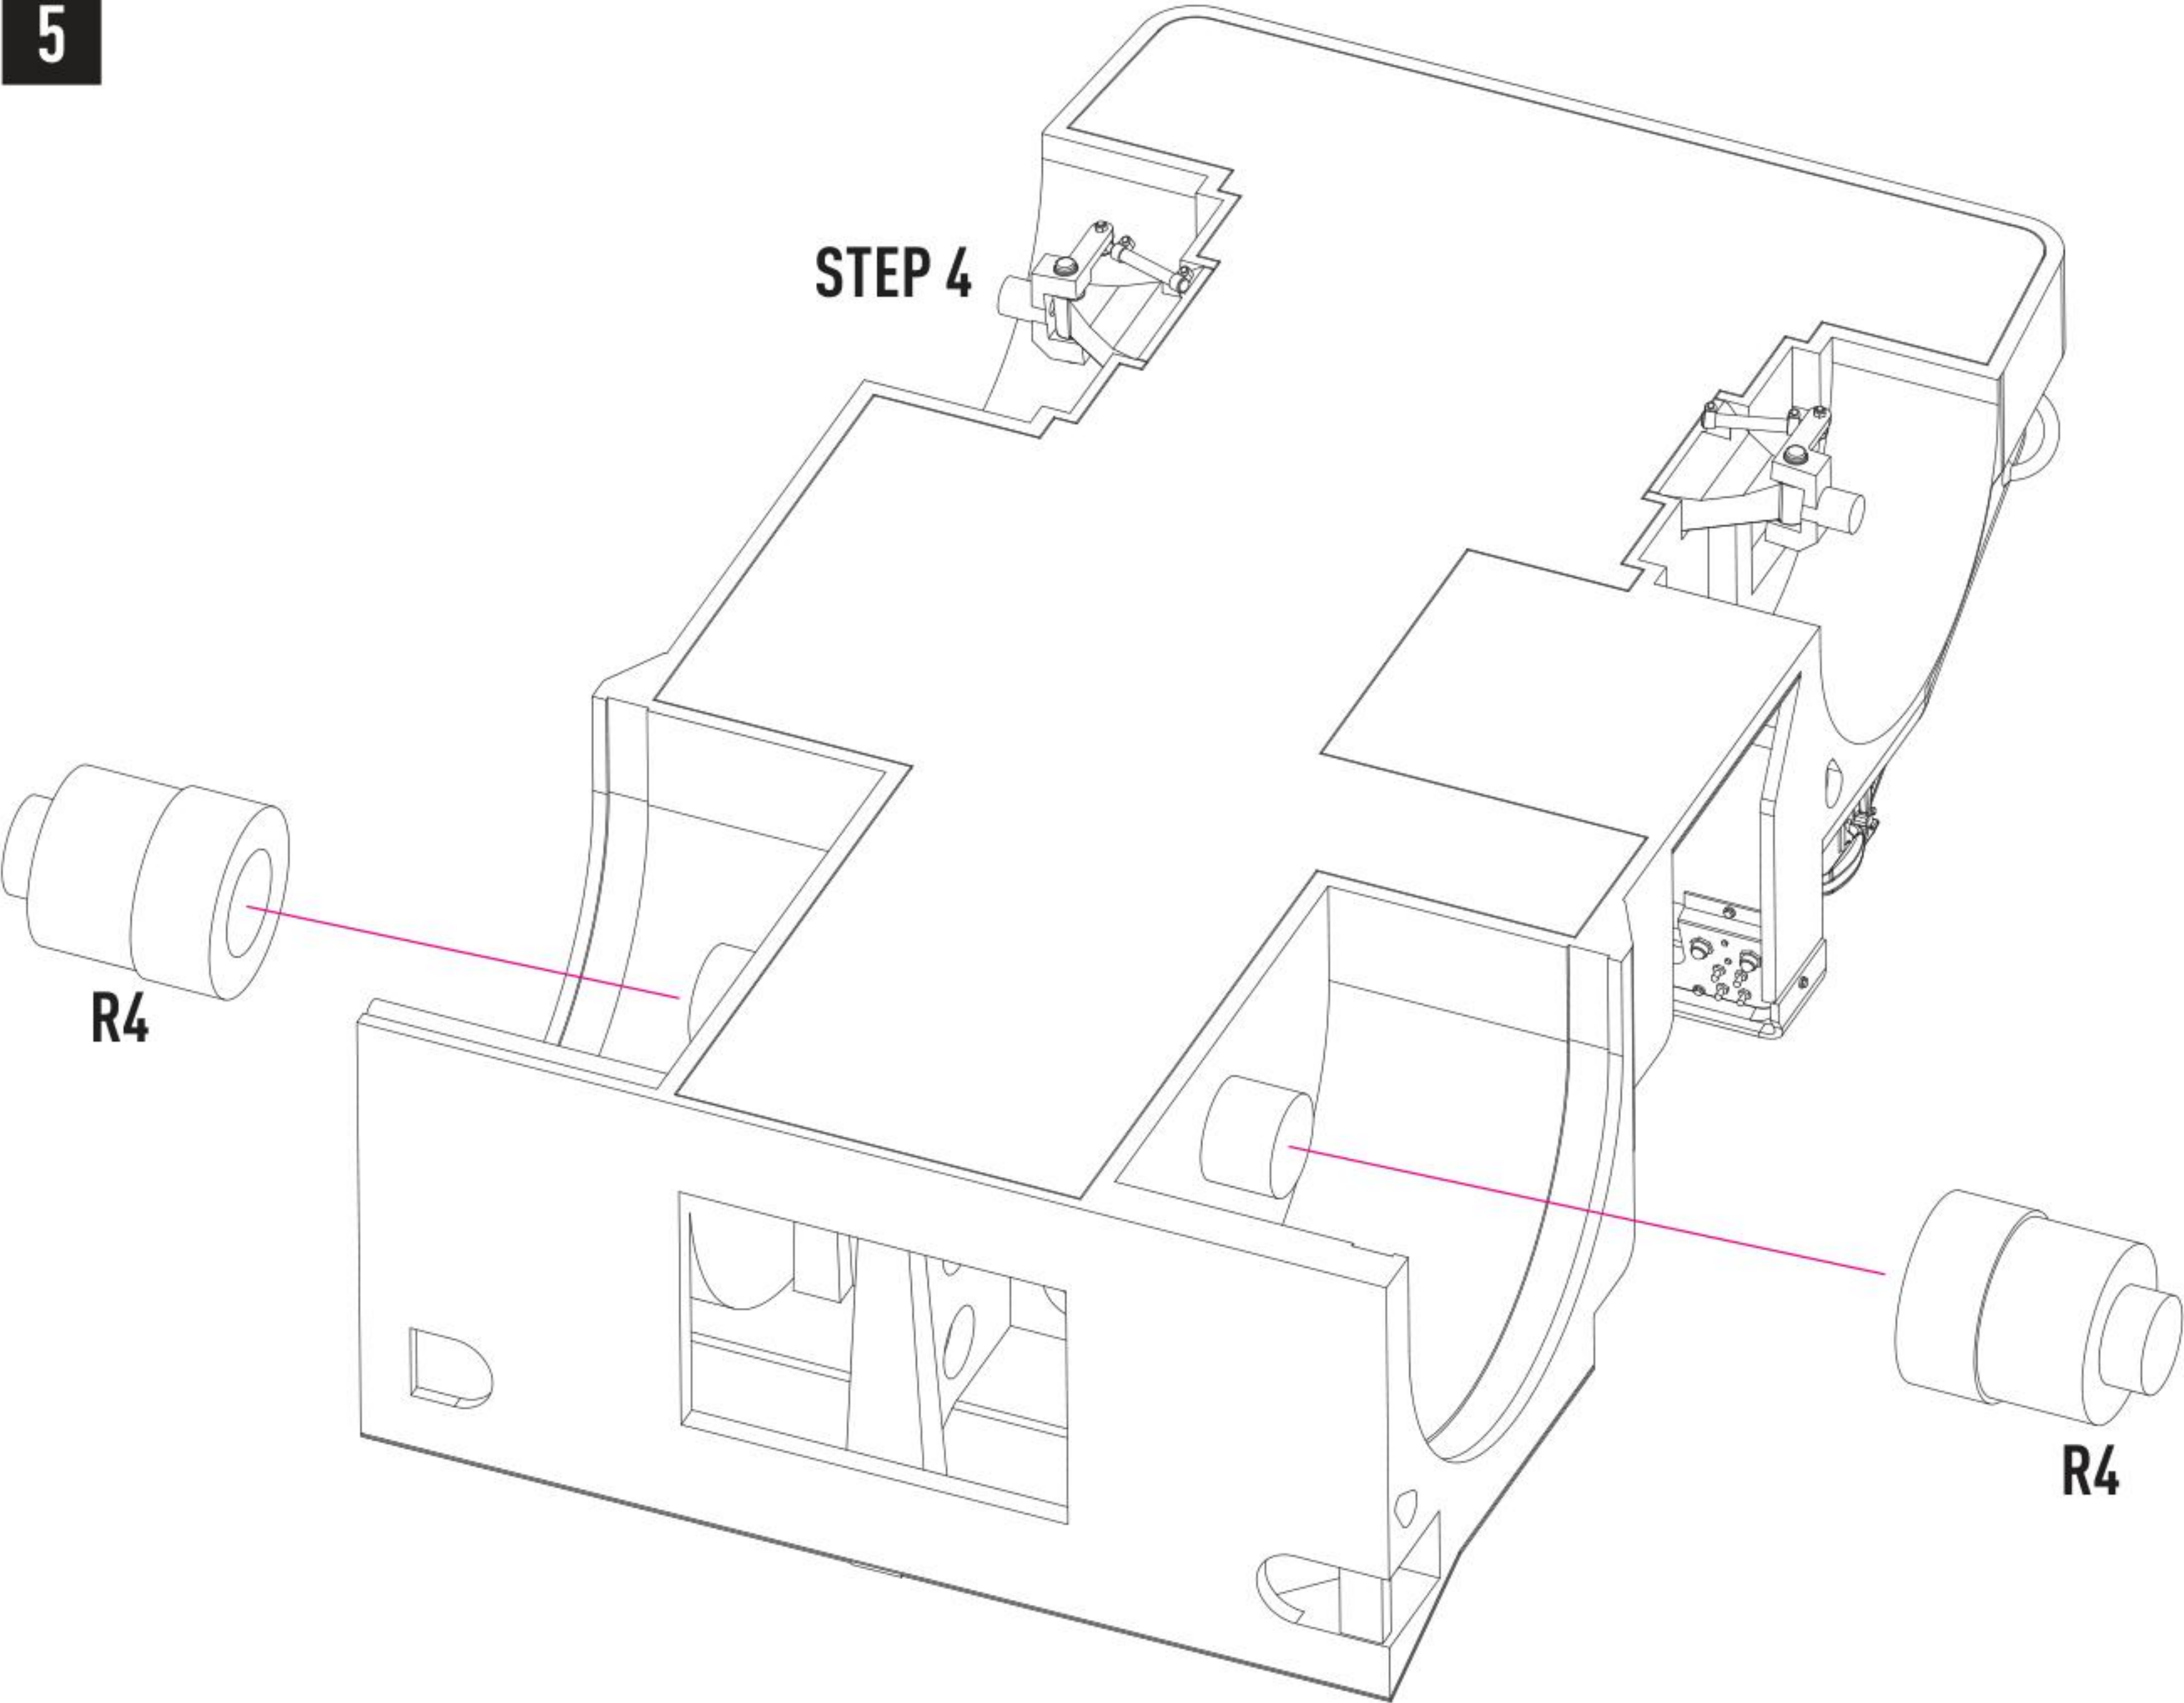


6 X2

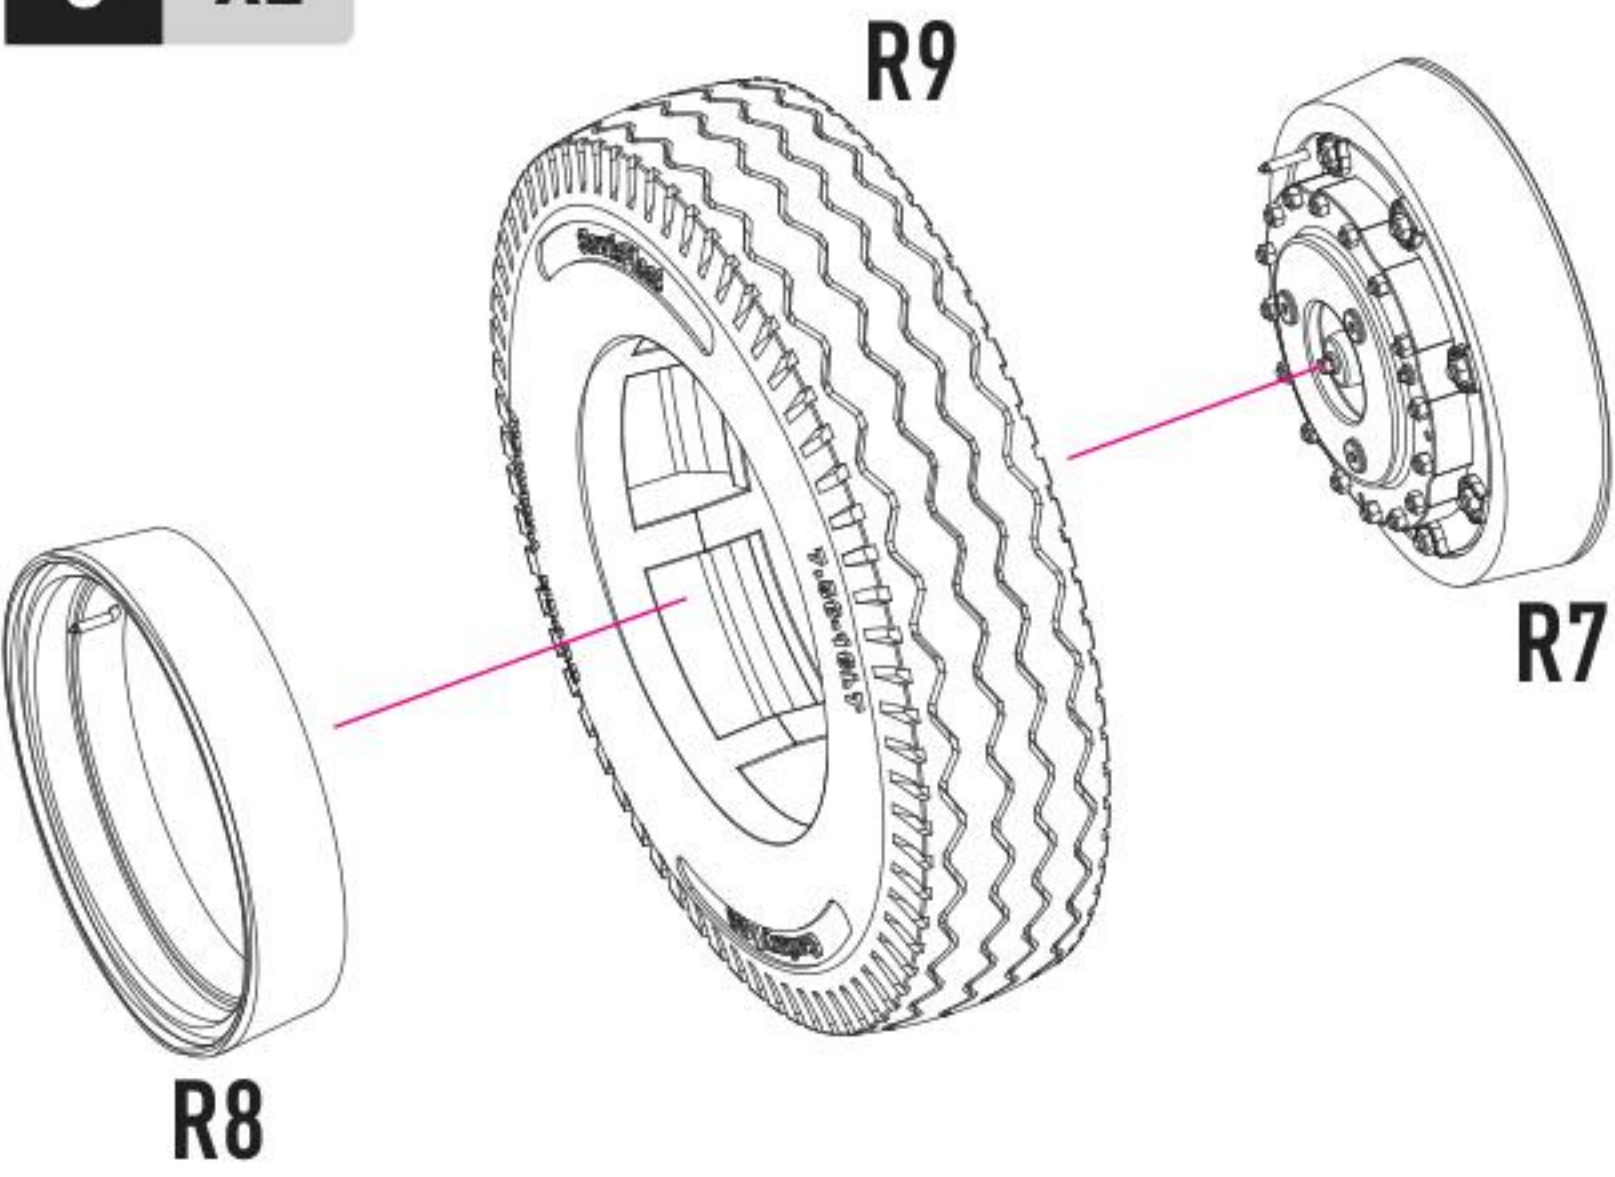



7 X2


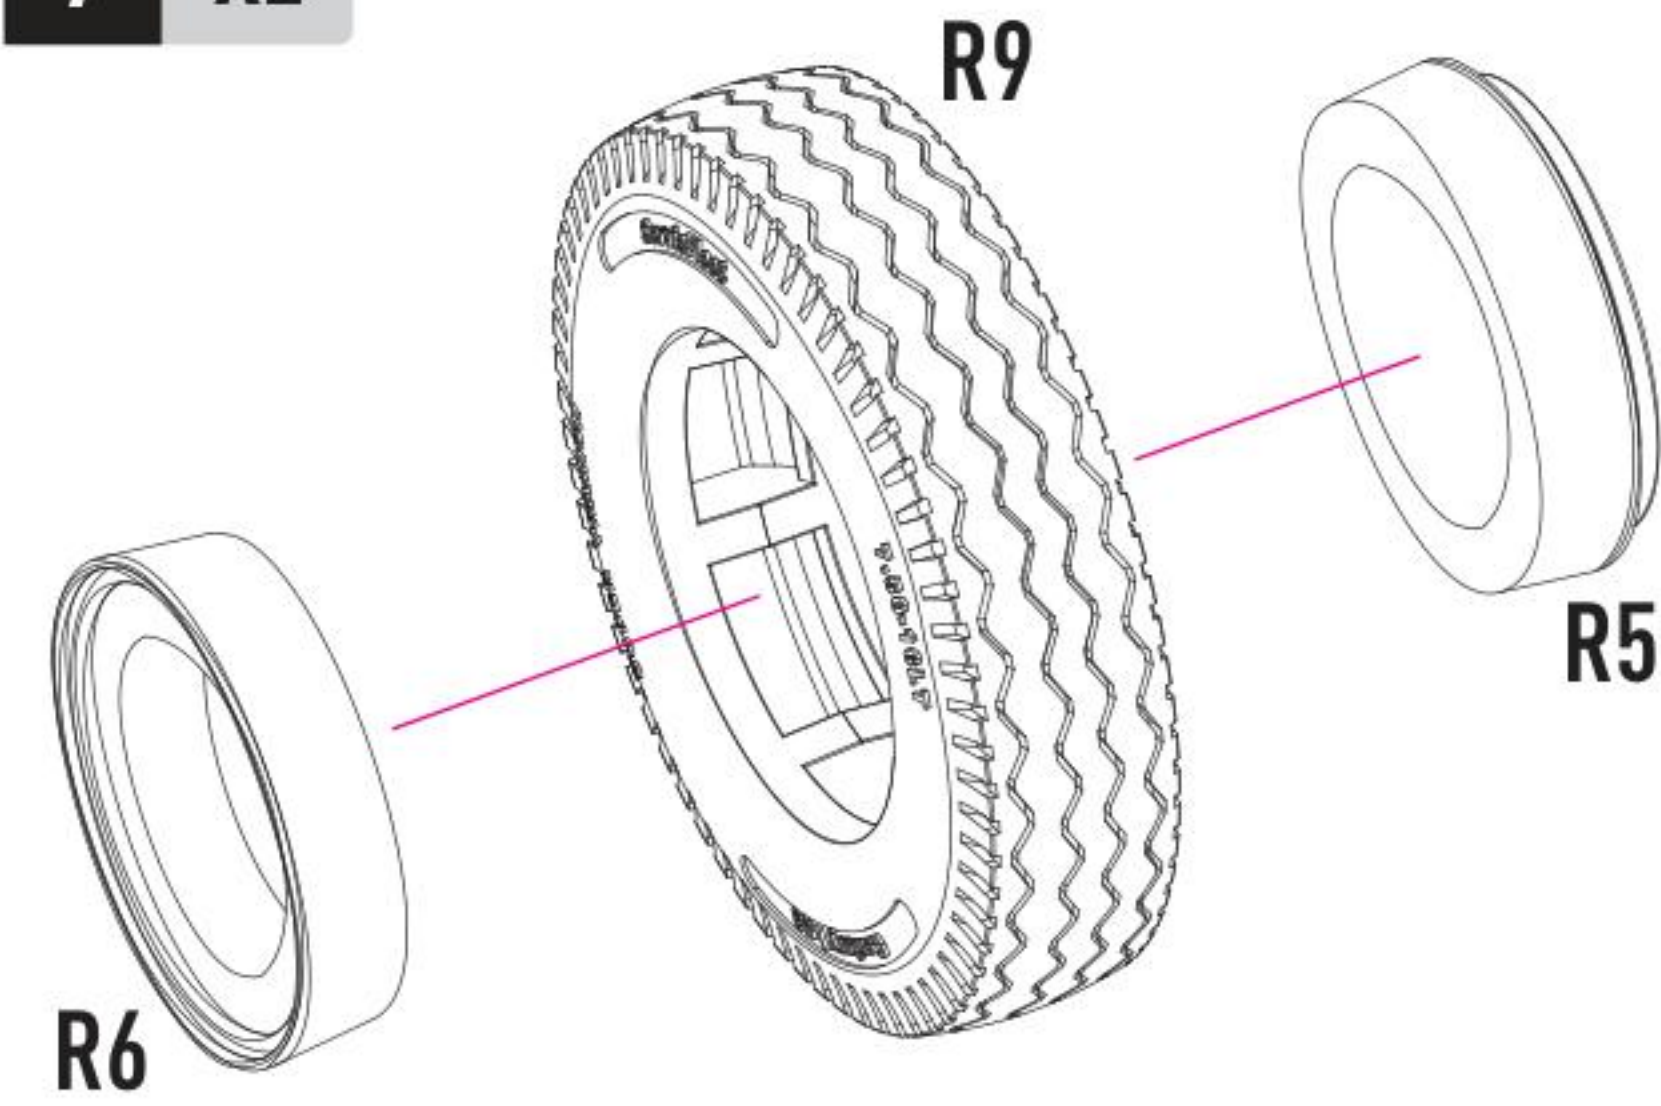


8 X2

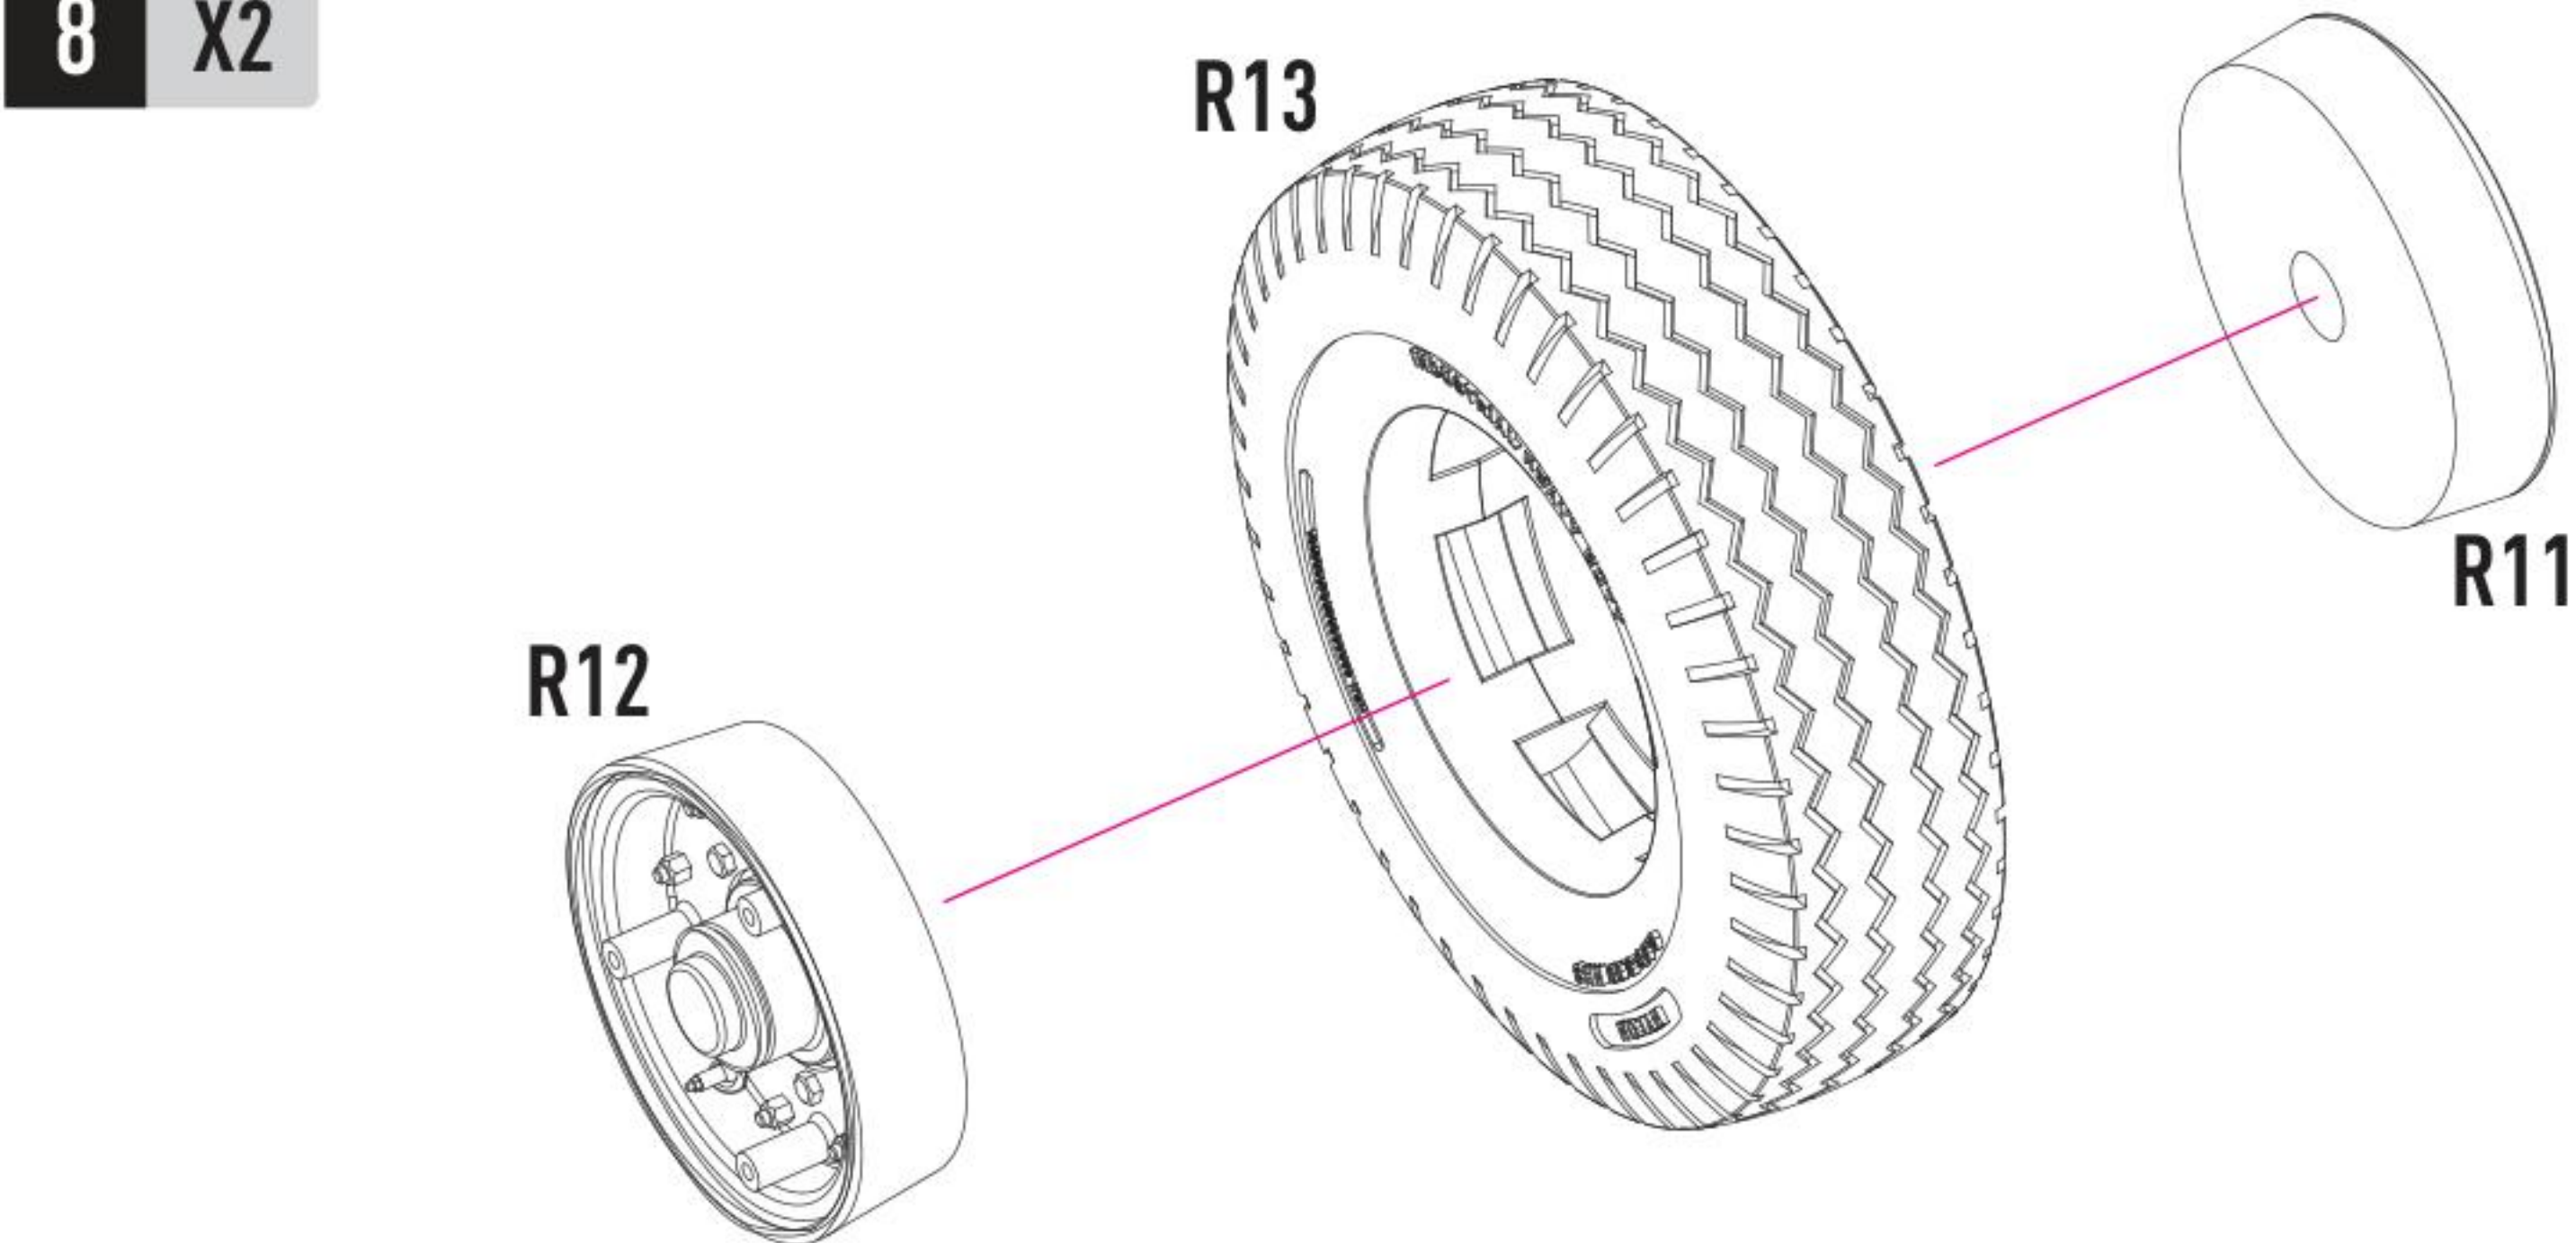


STEP 5

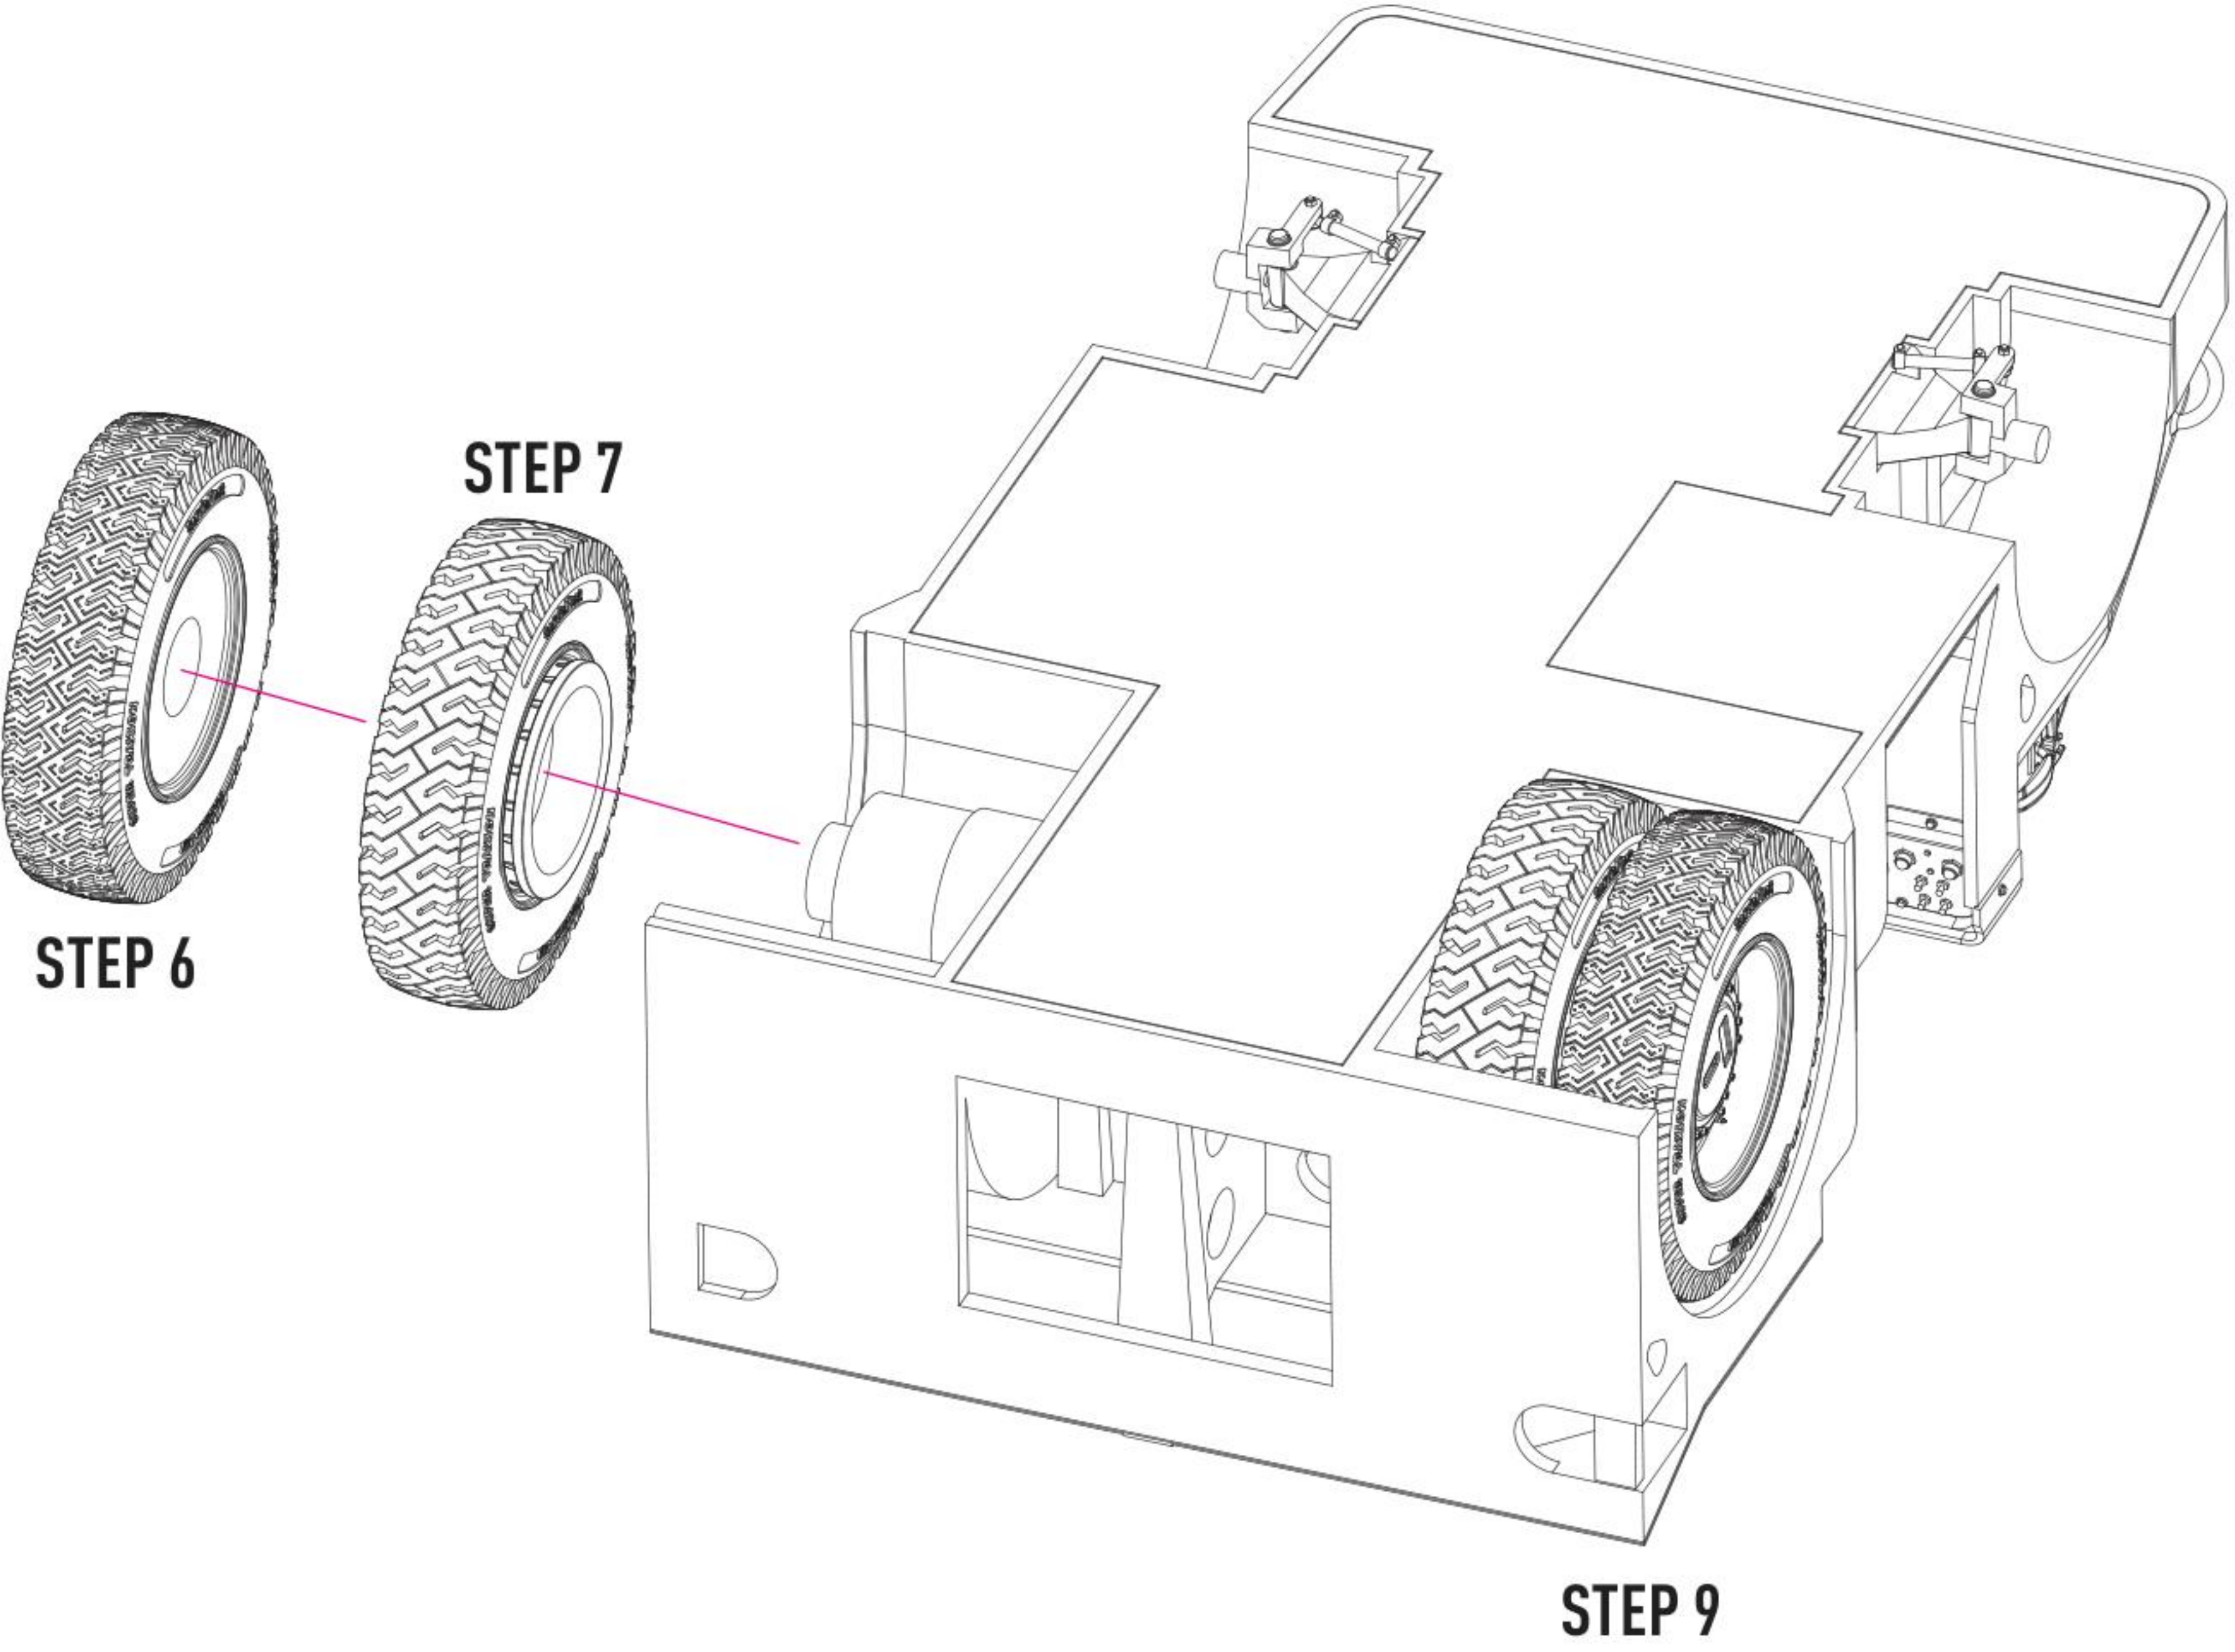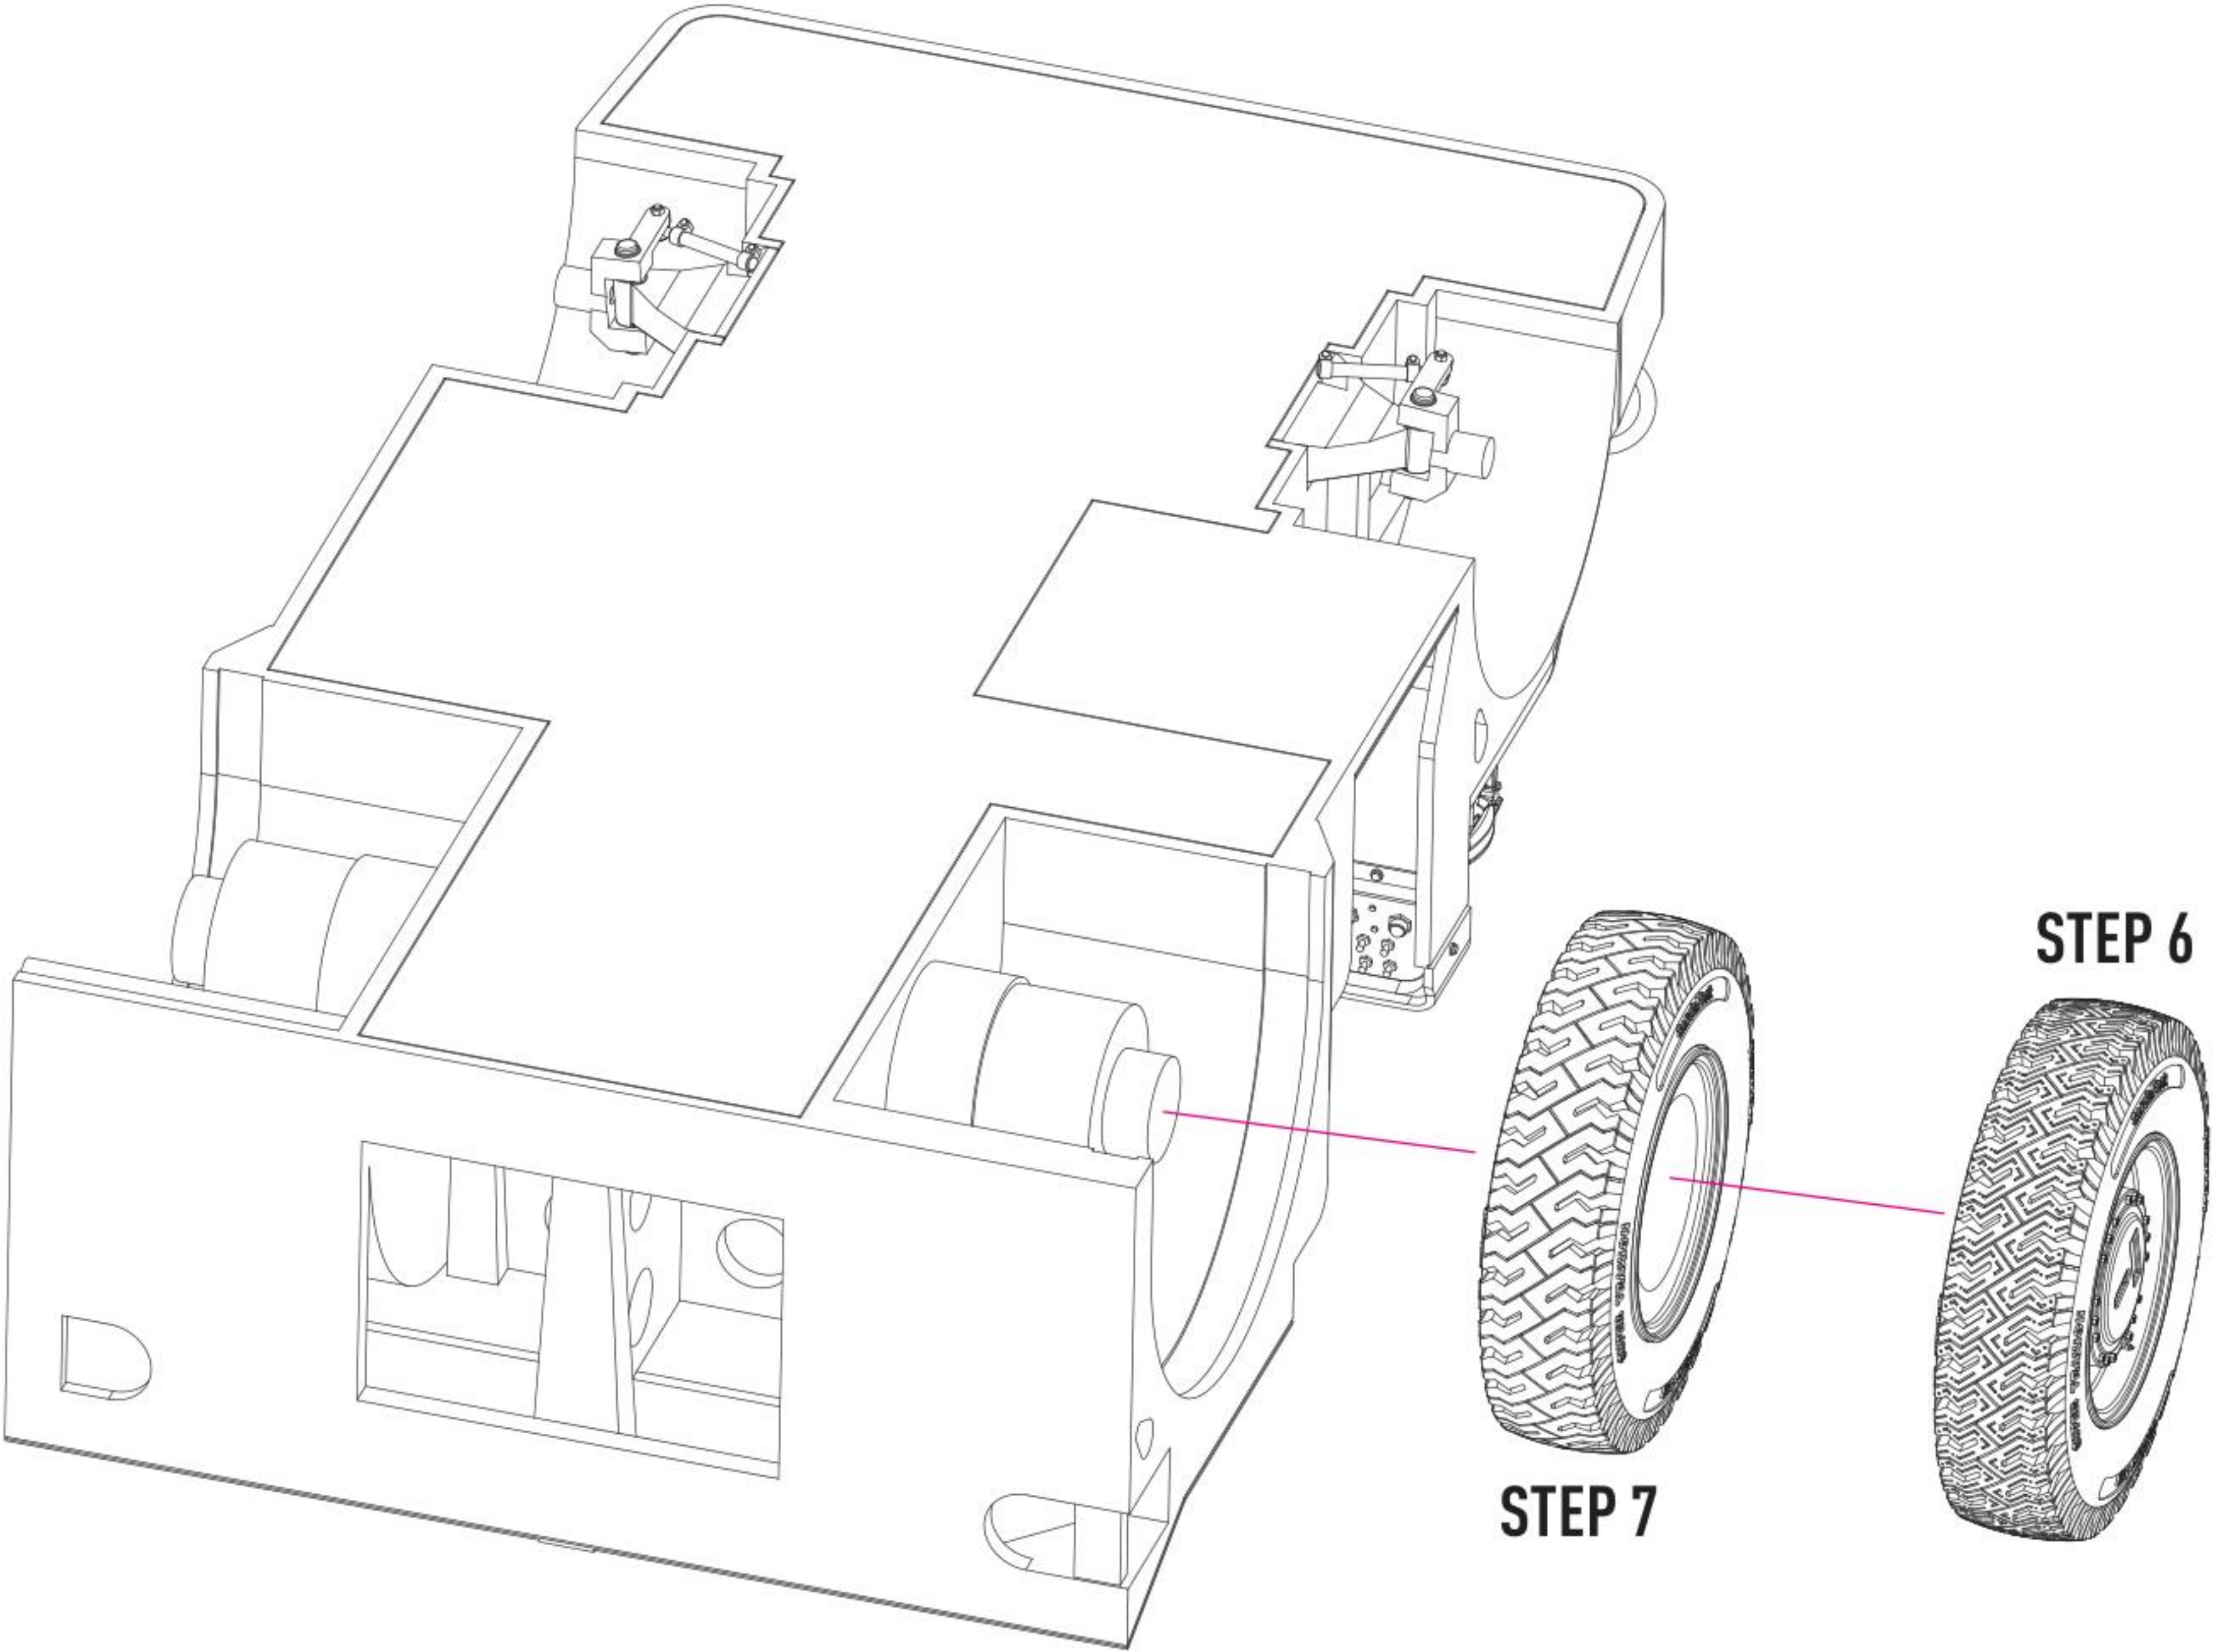


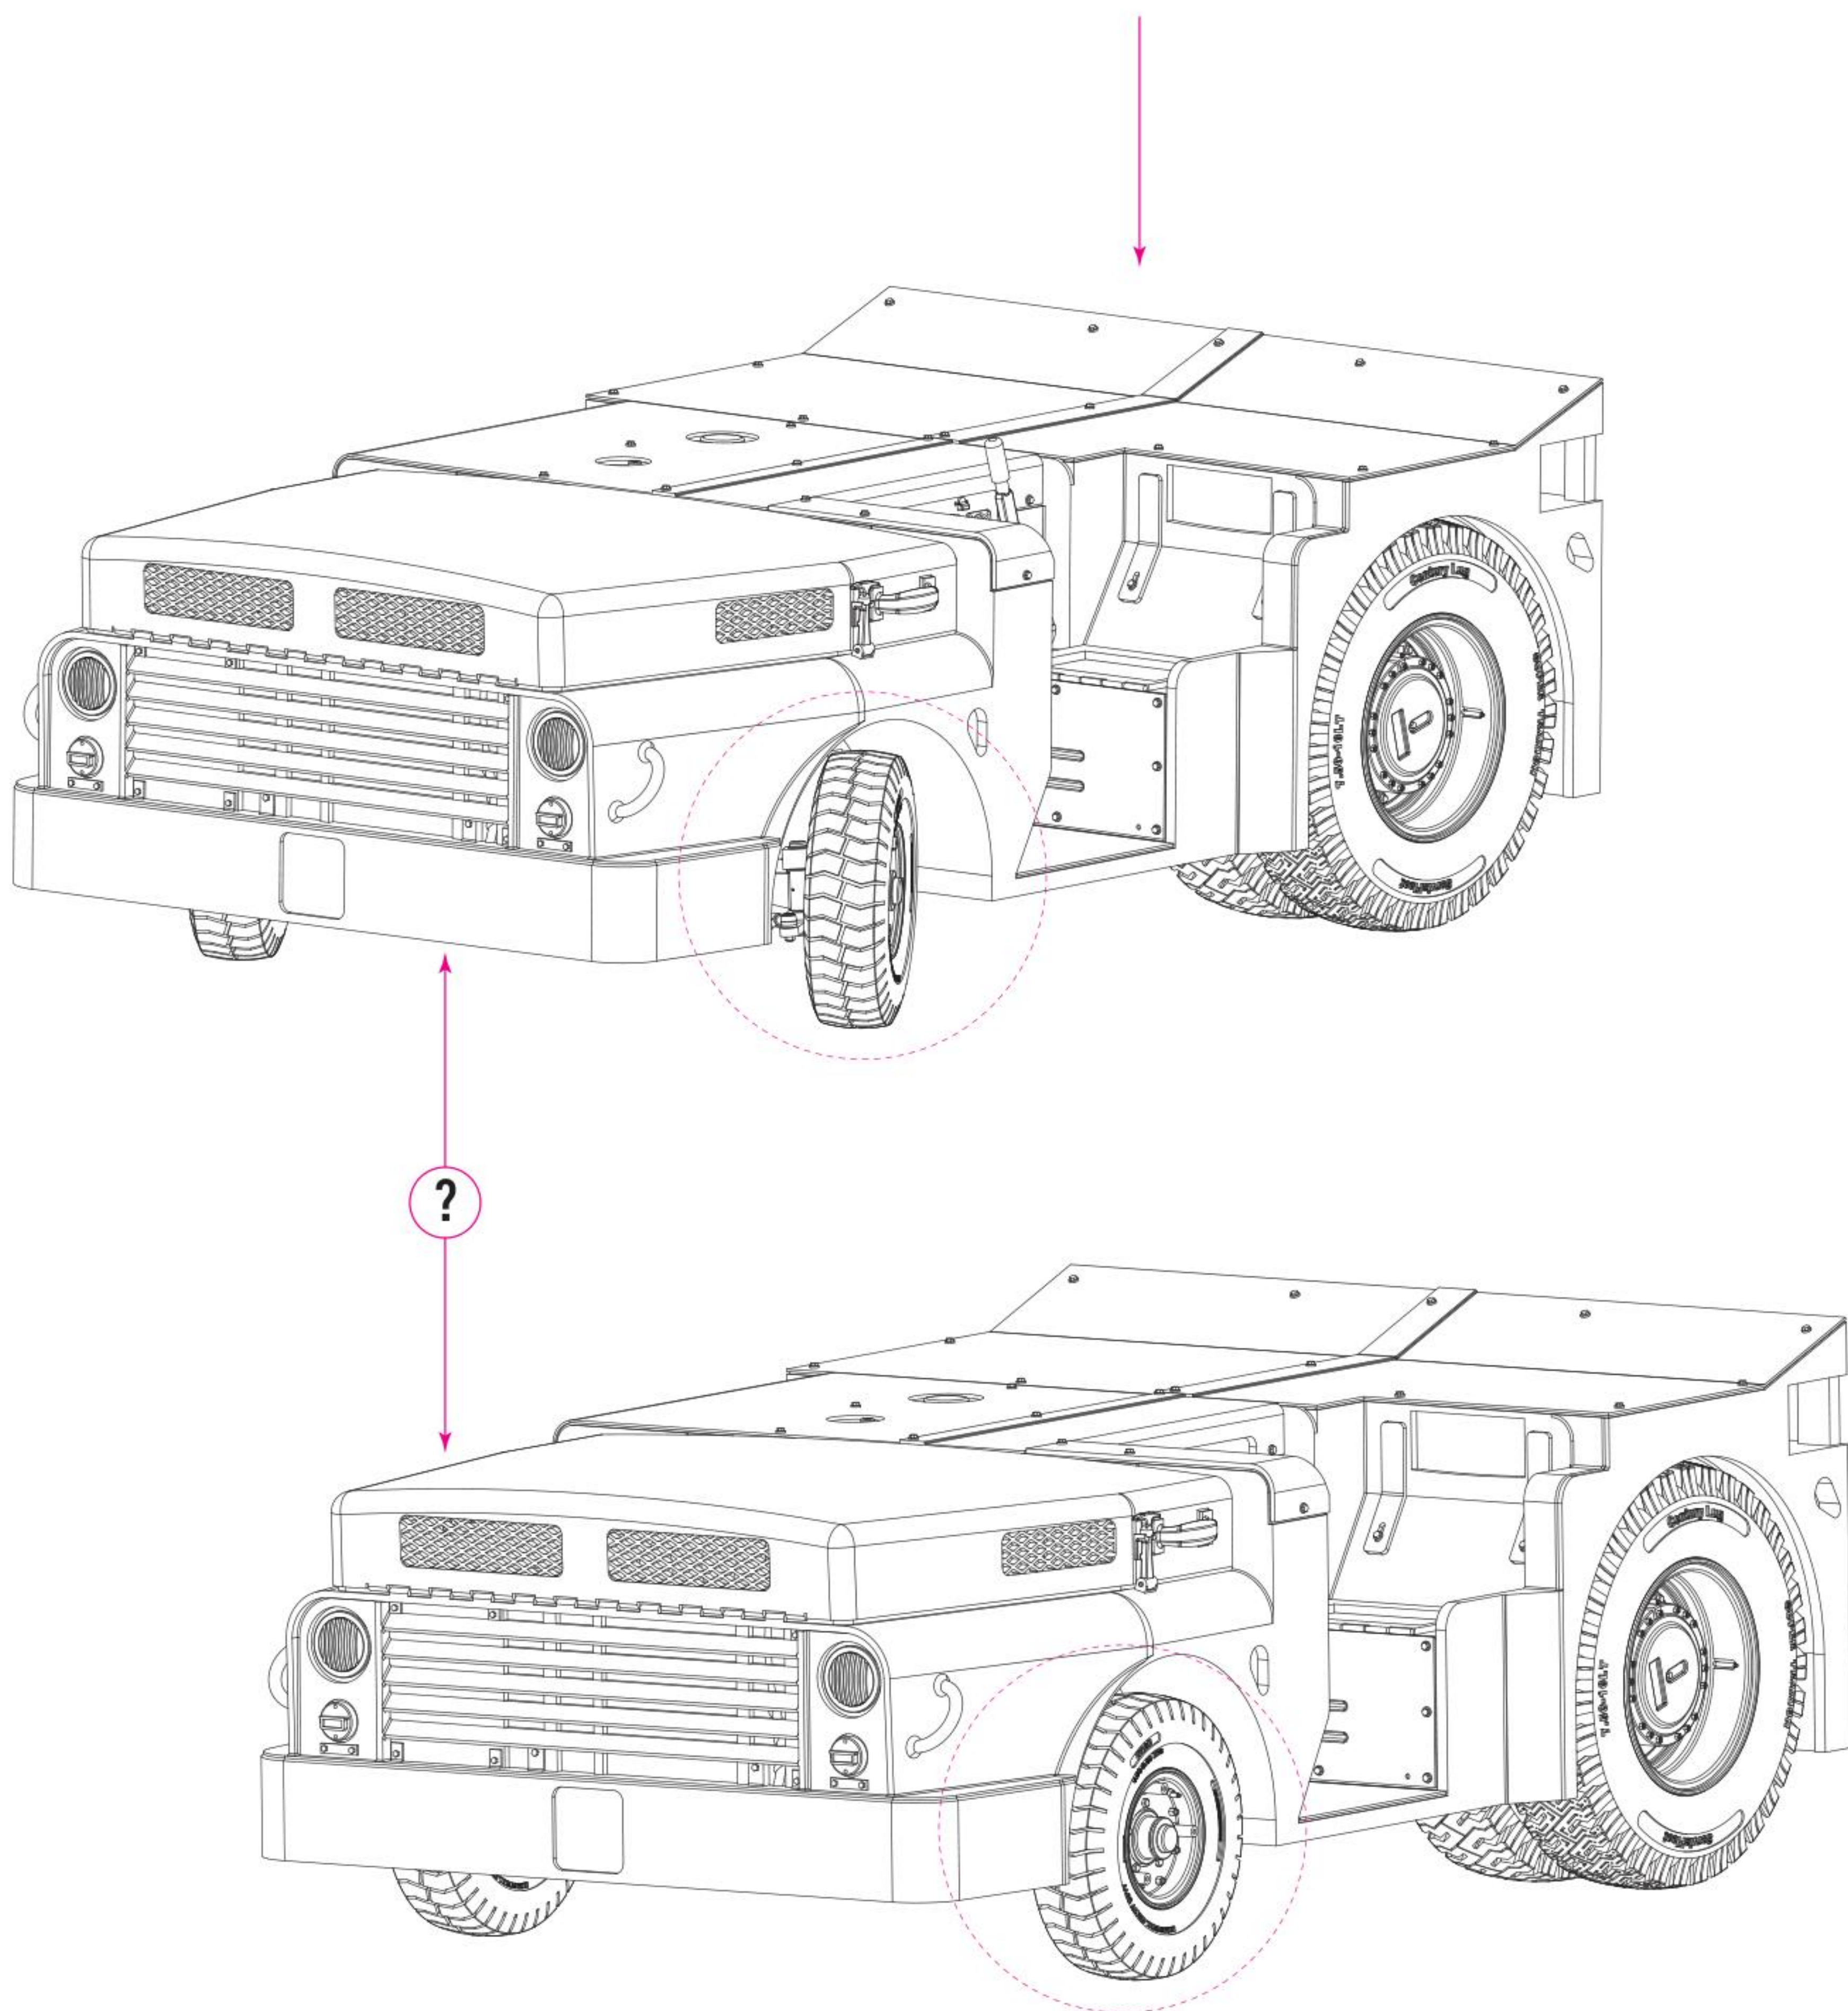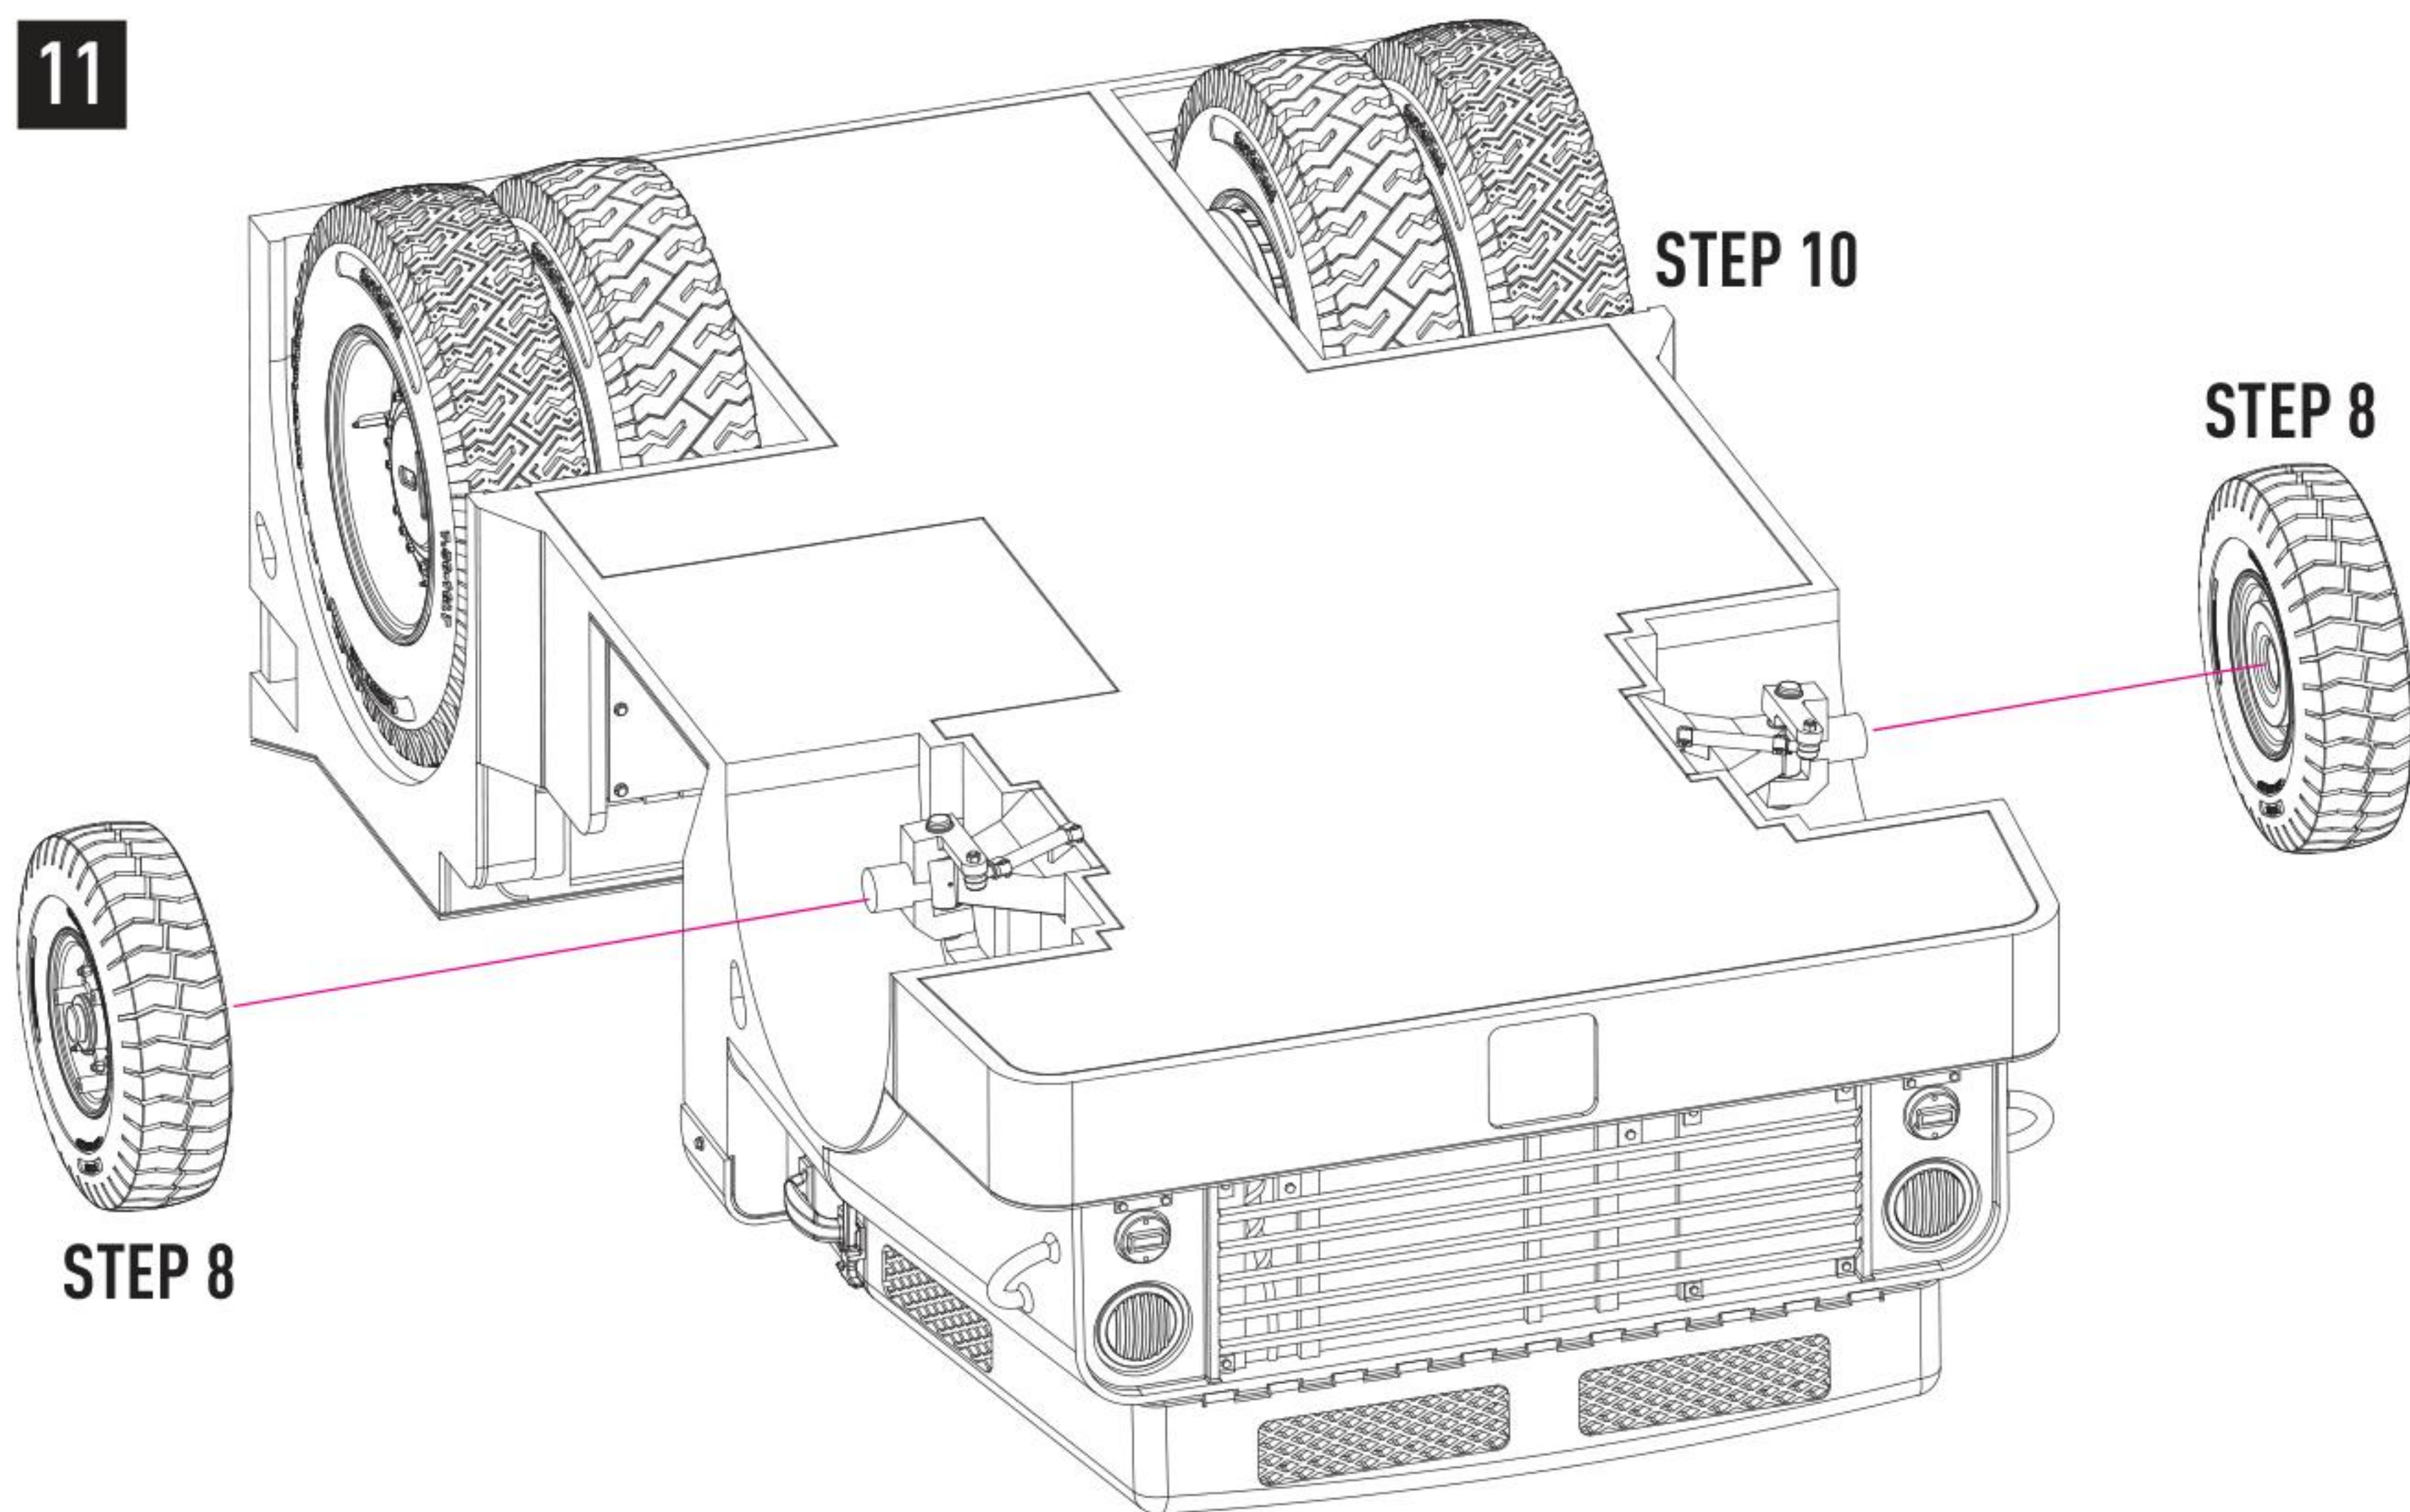


12

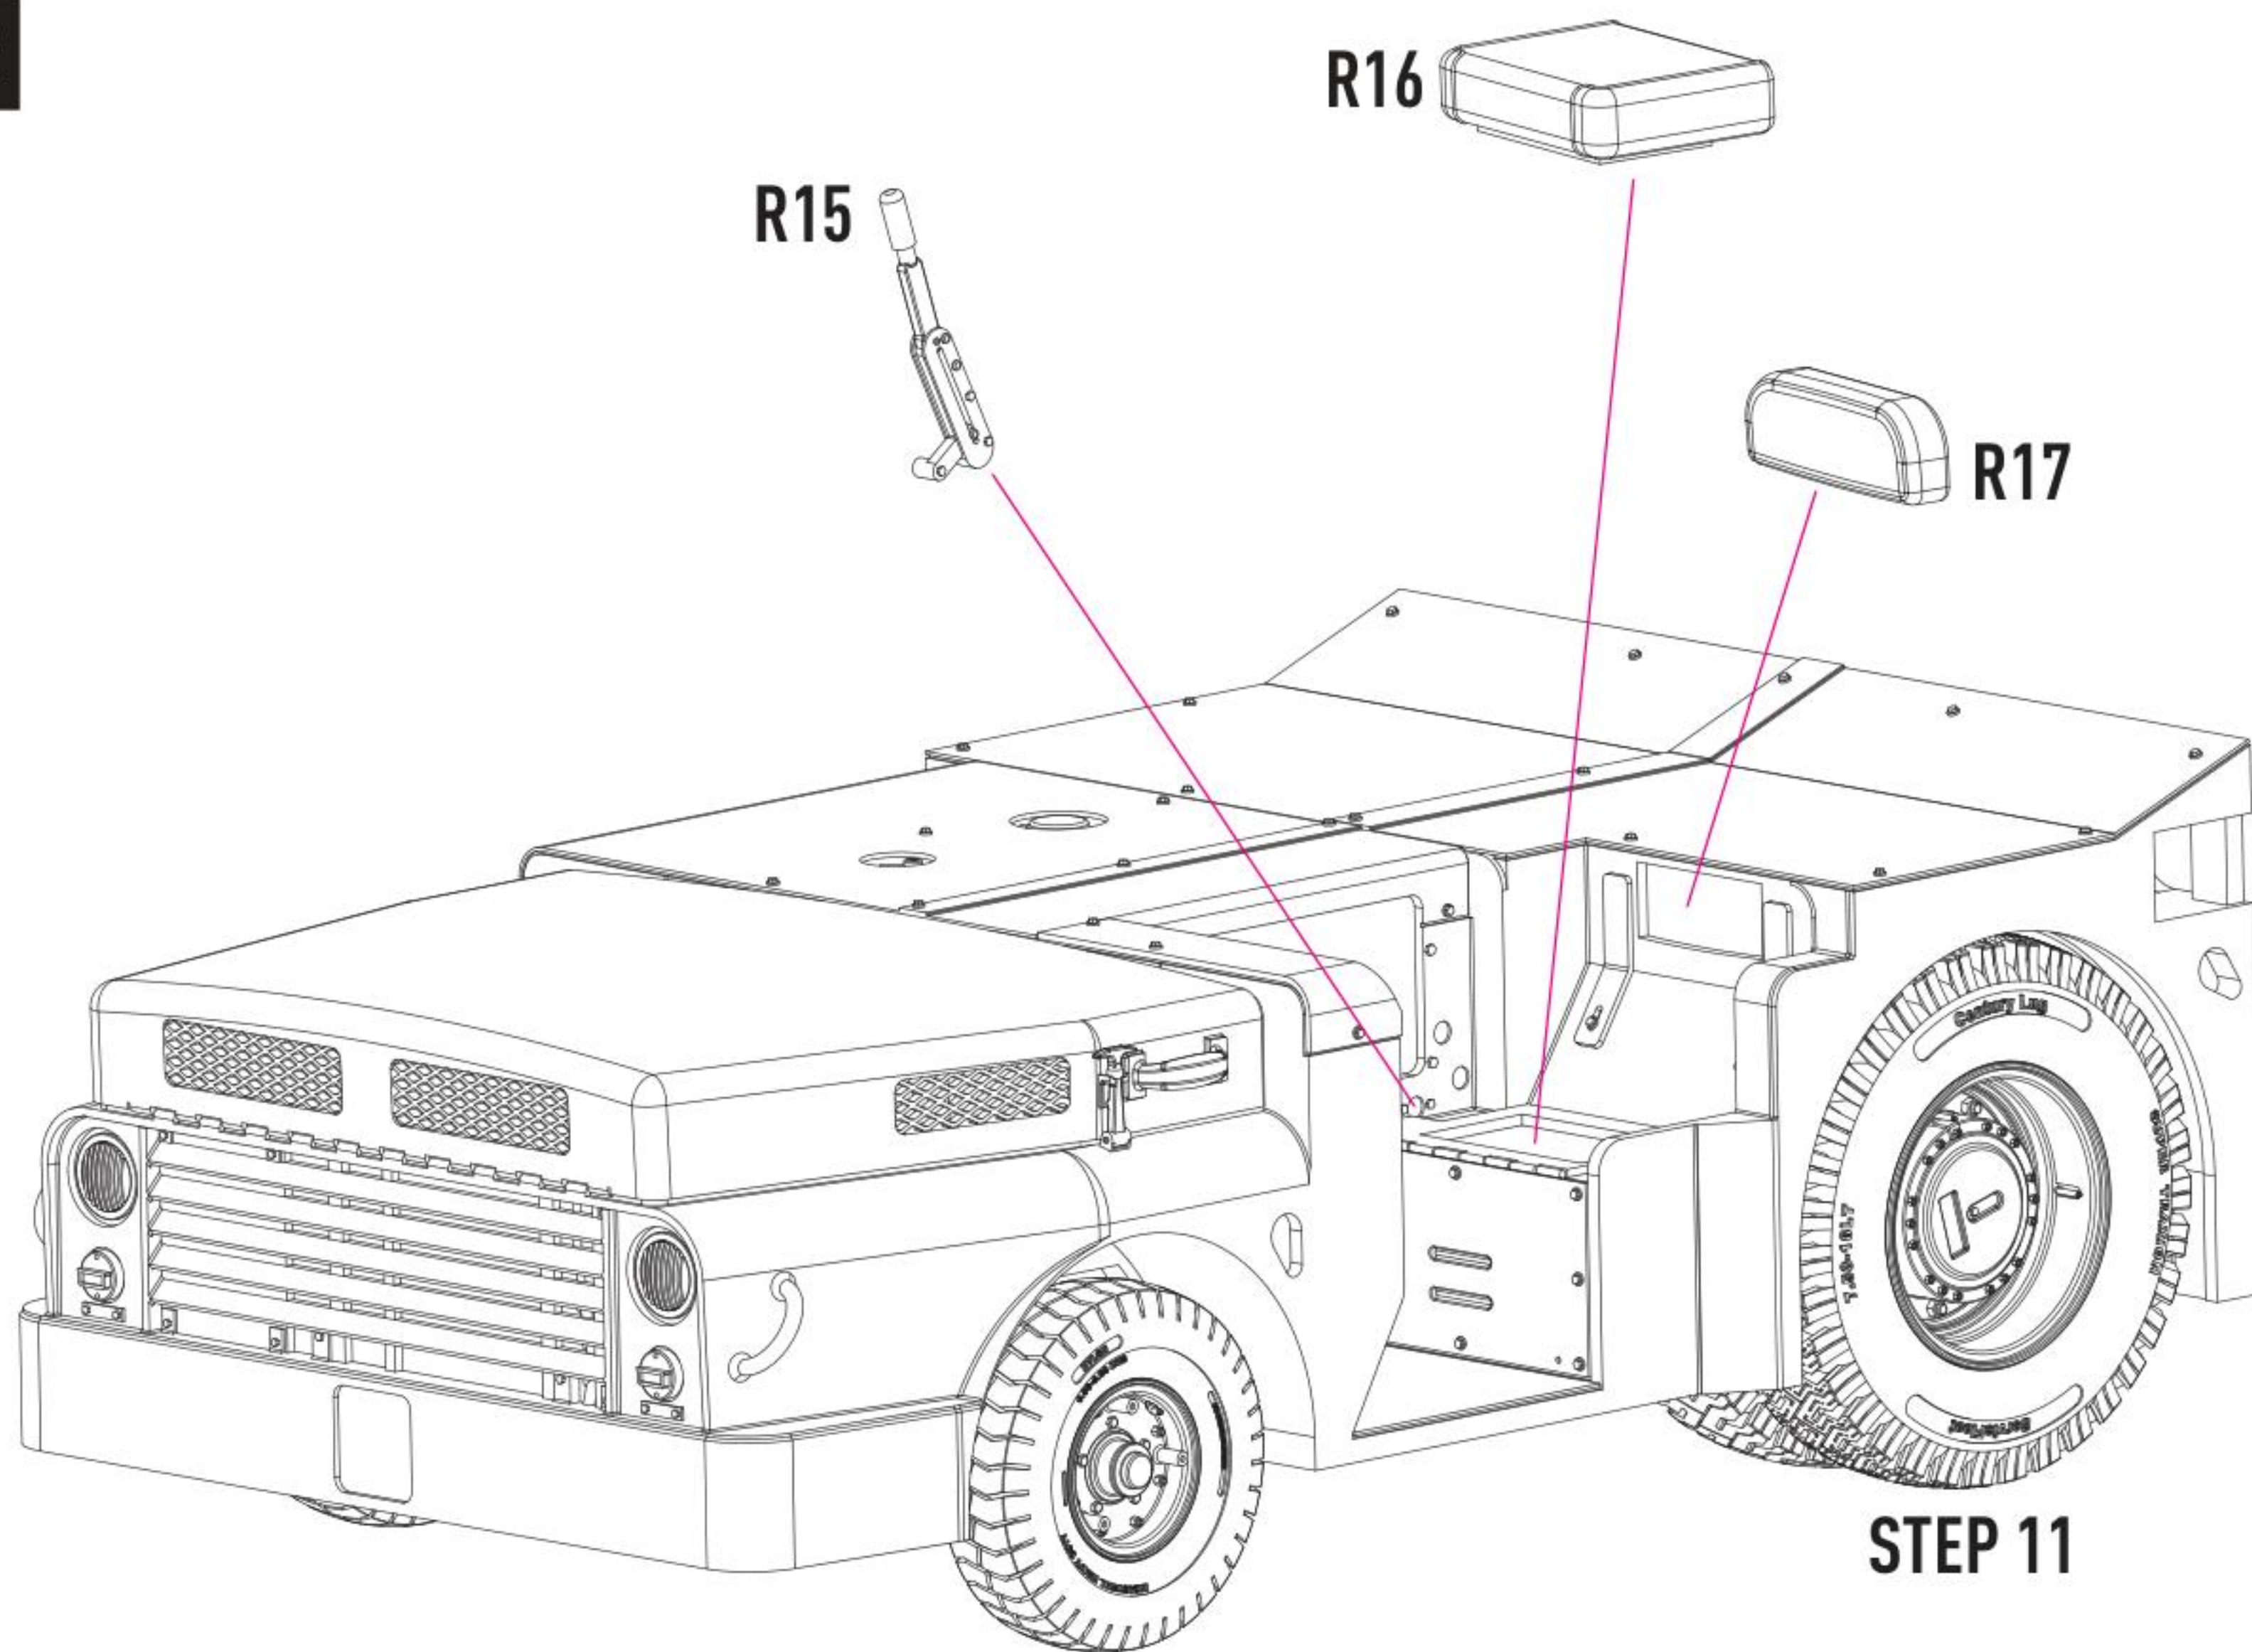


13

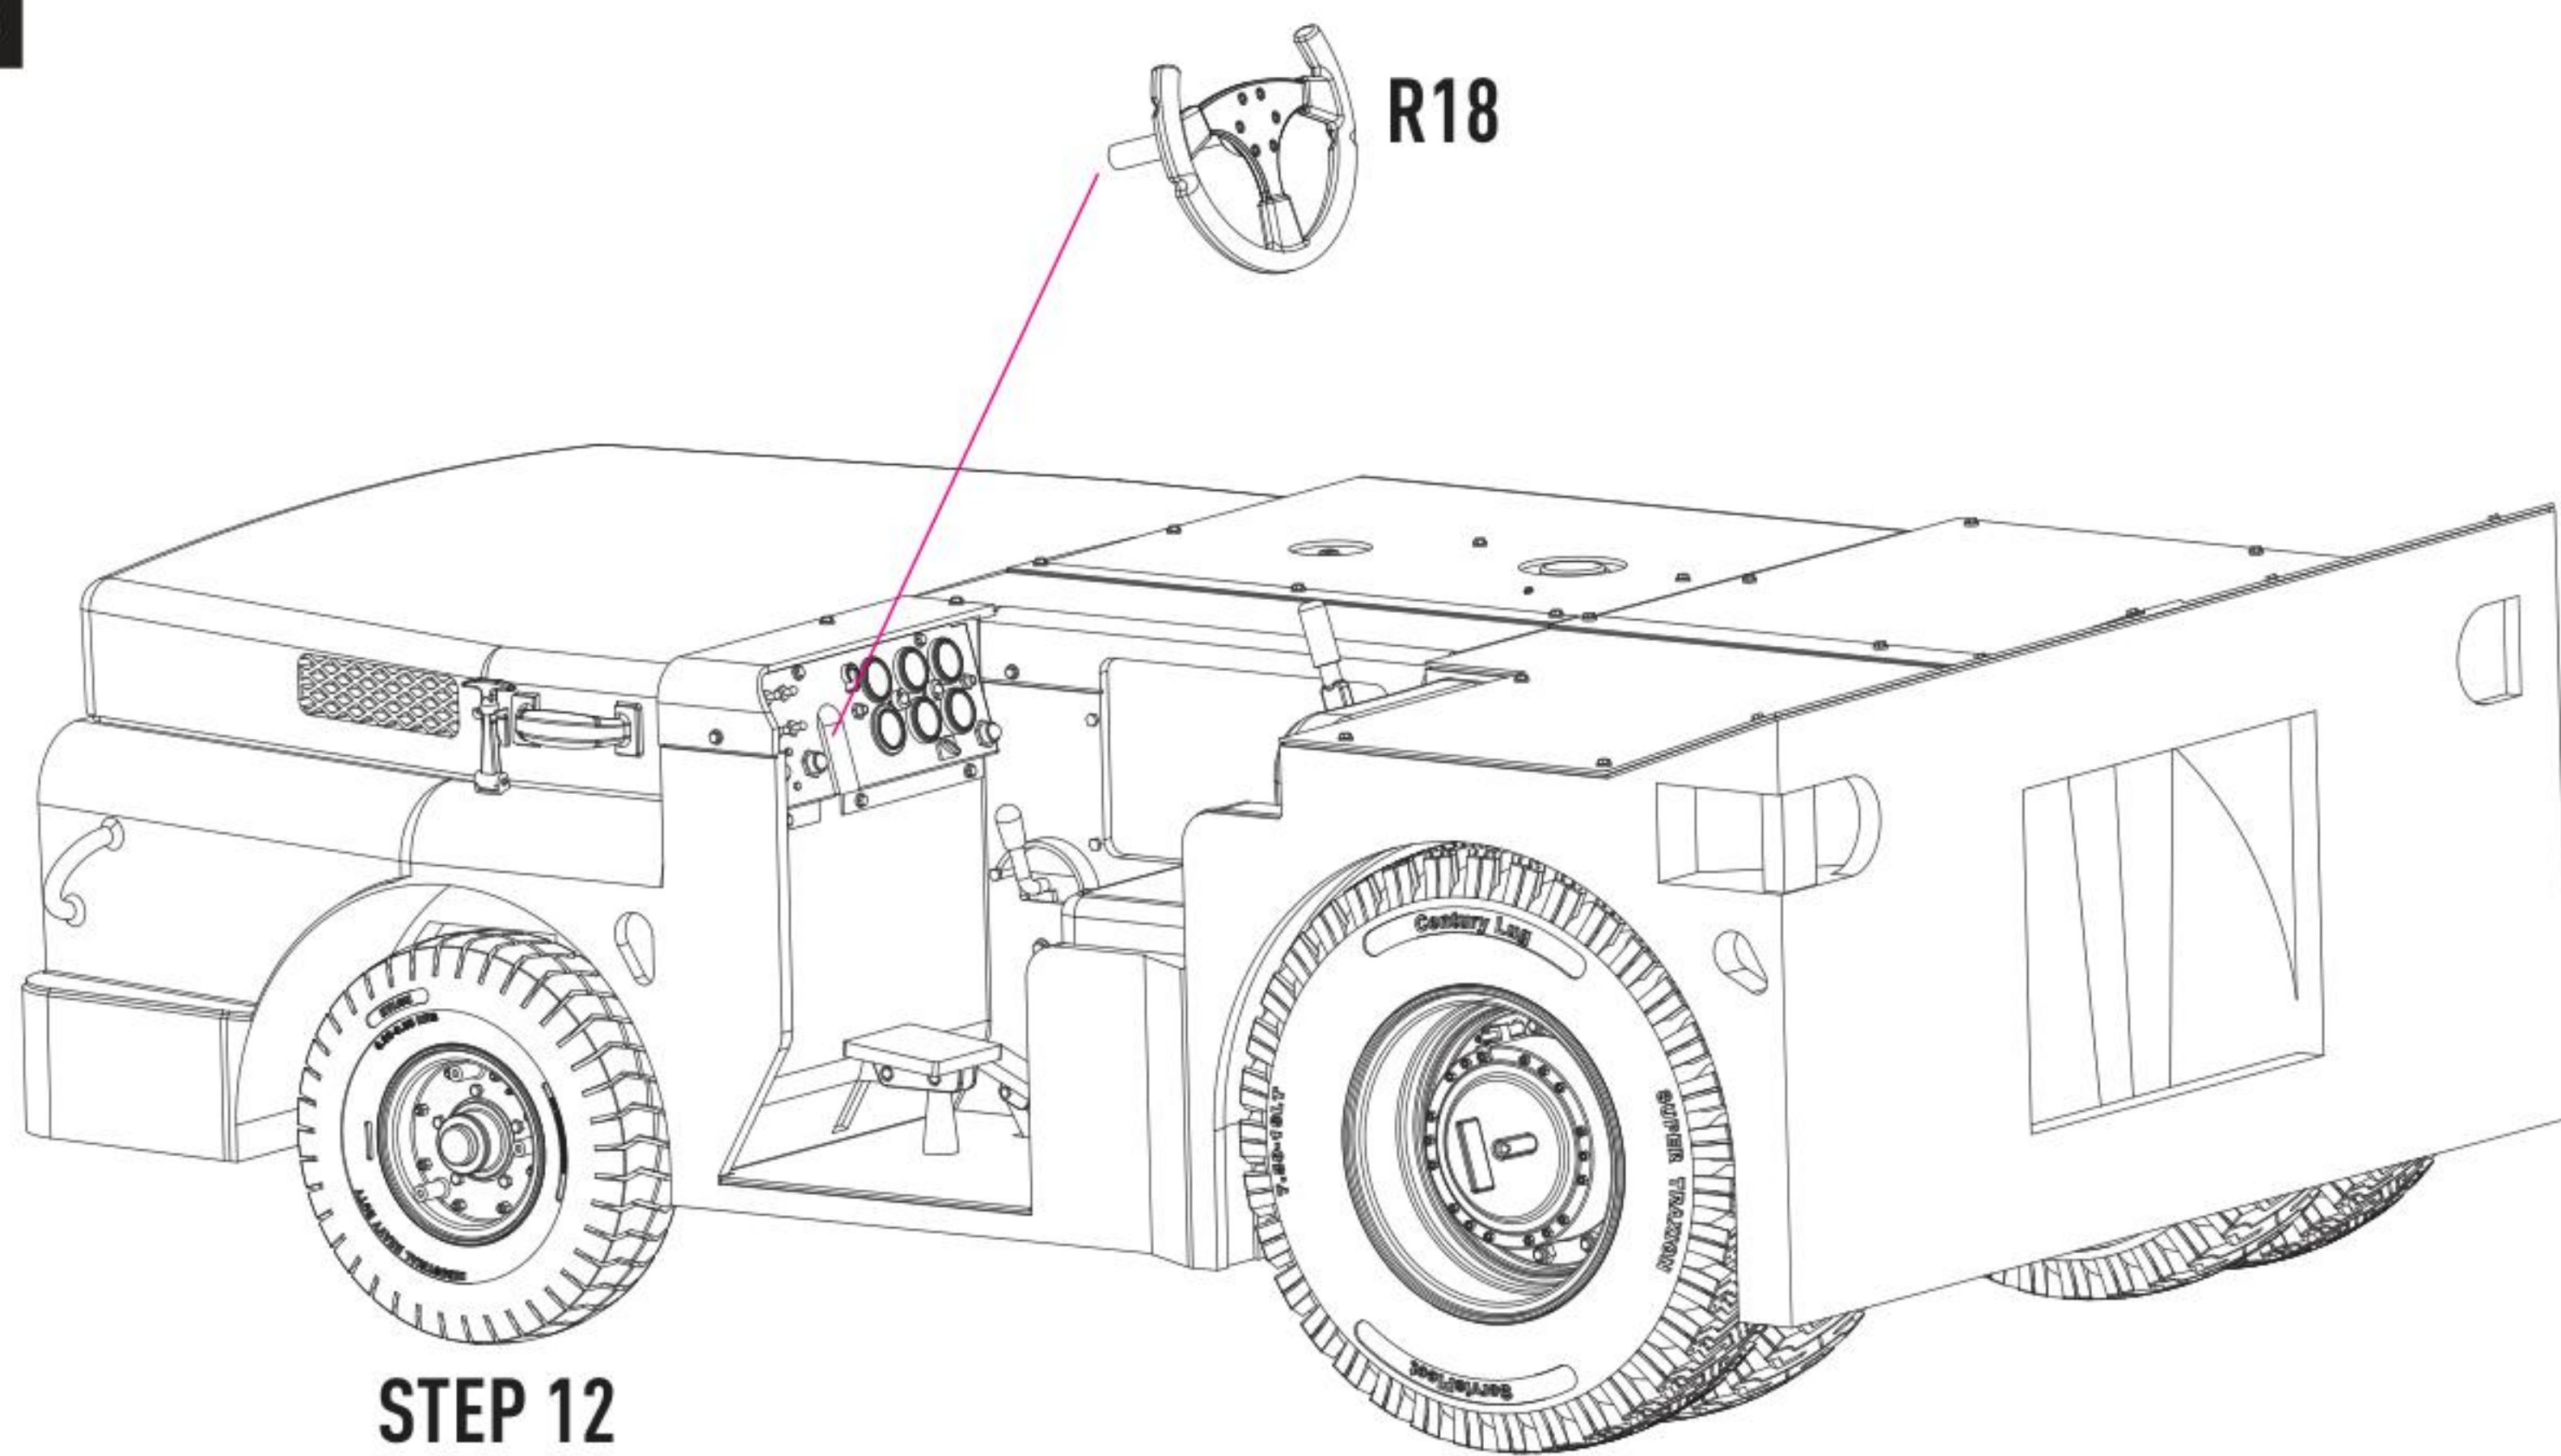


14

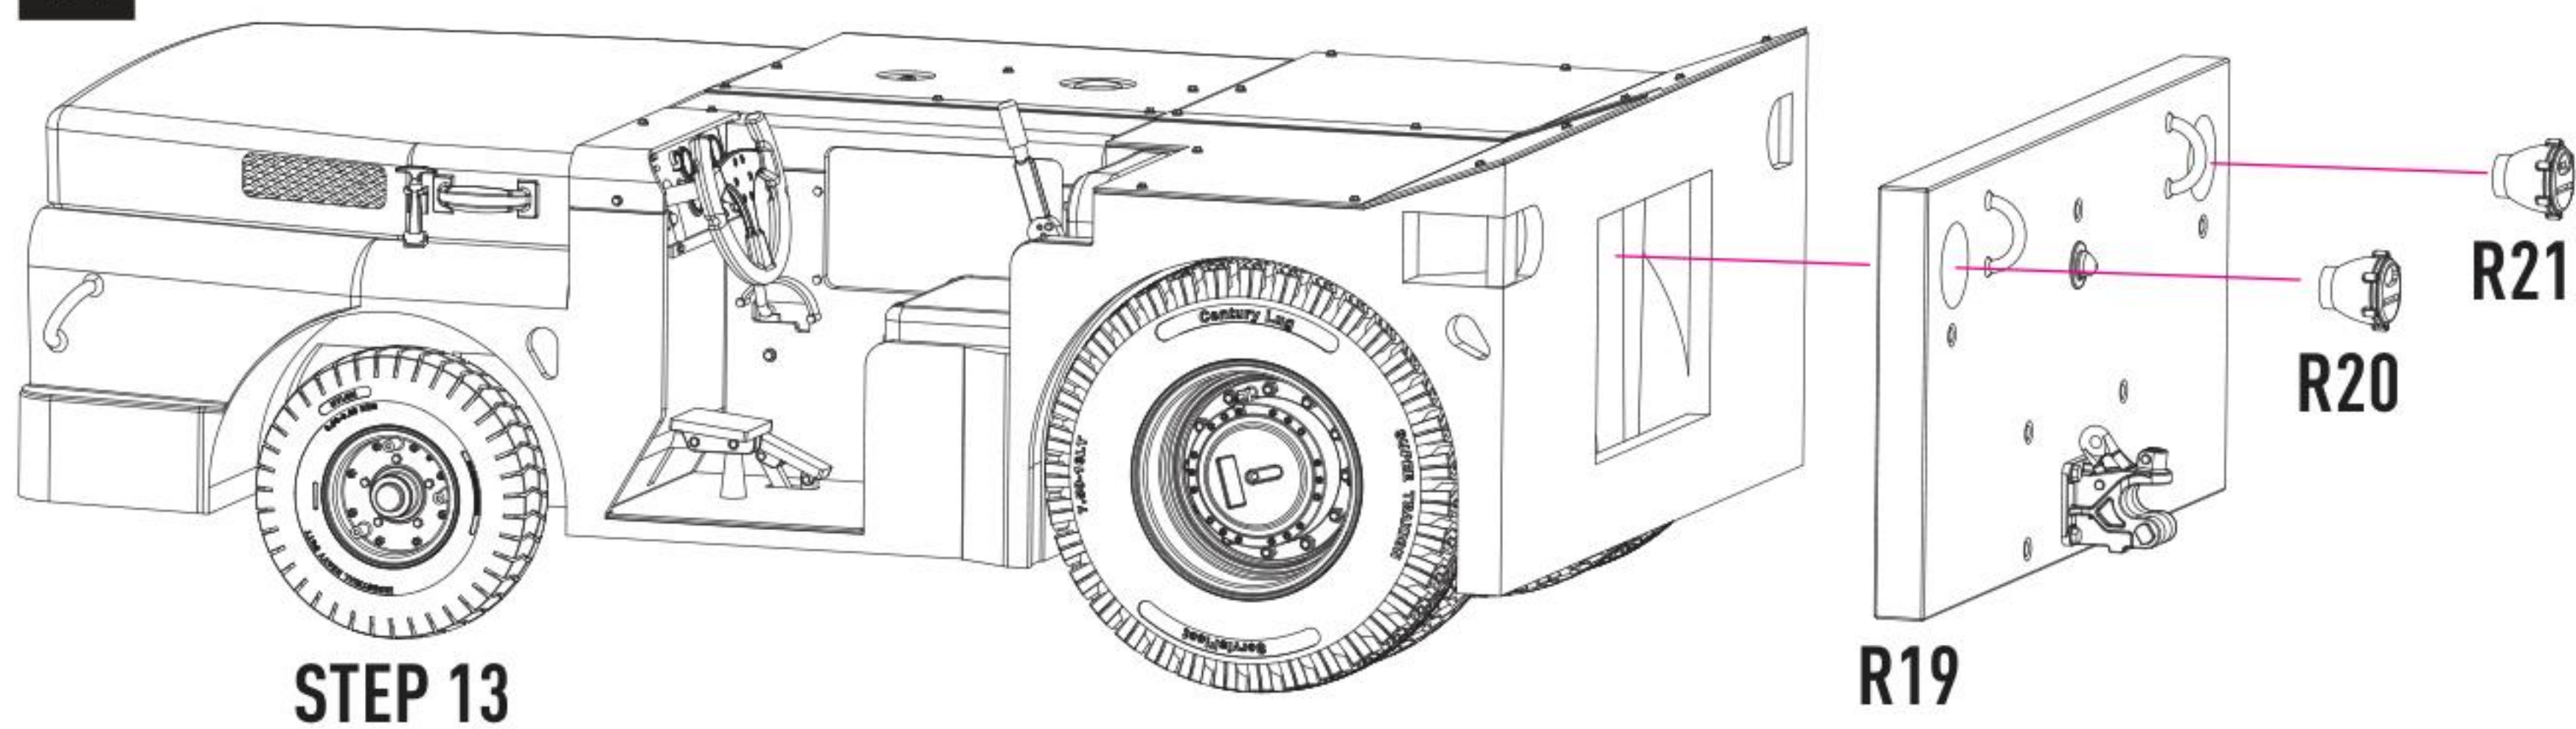


15

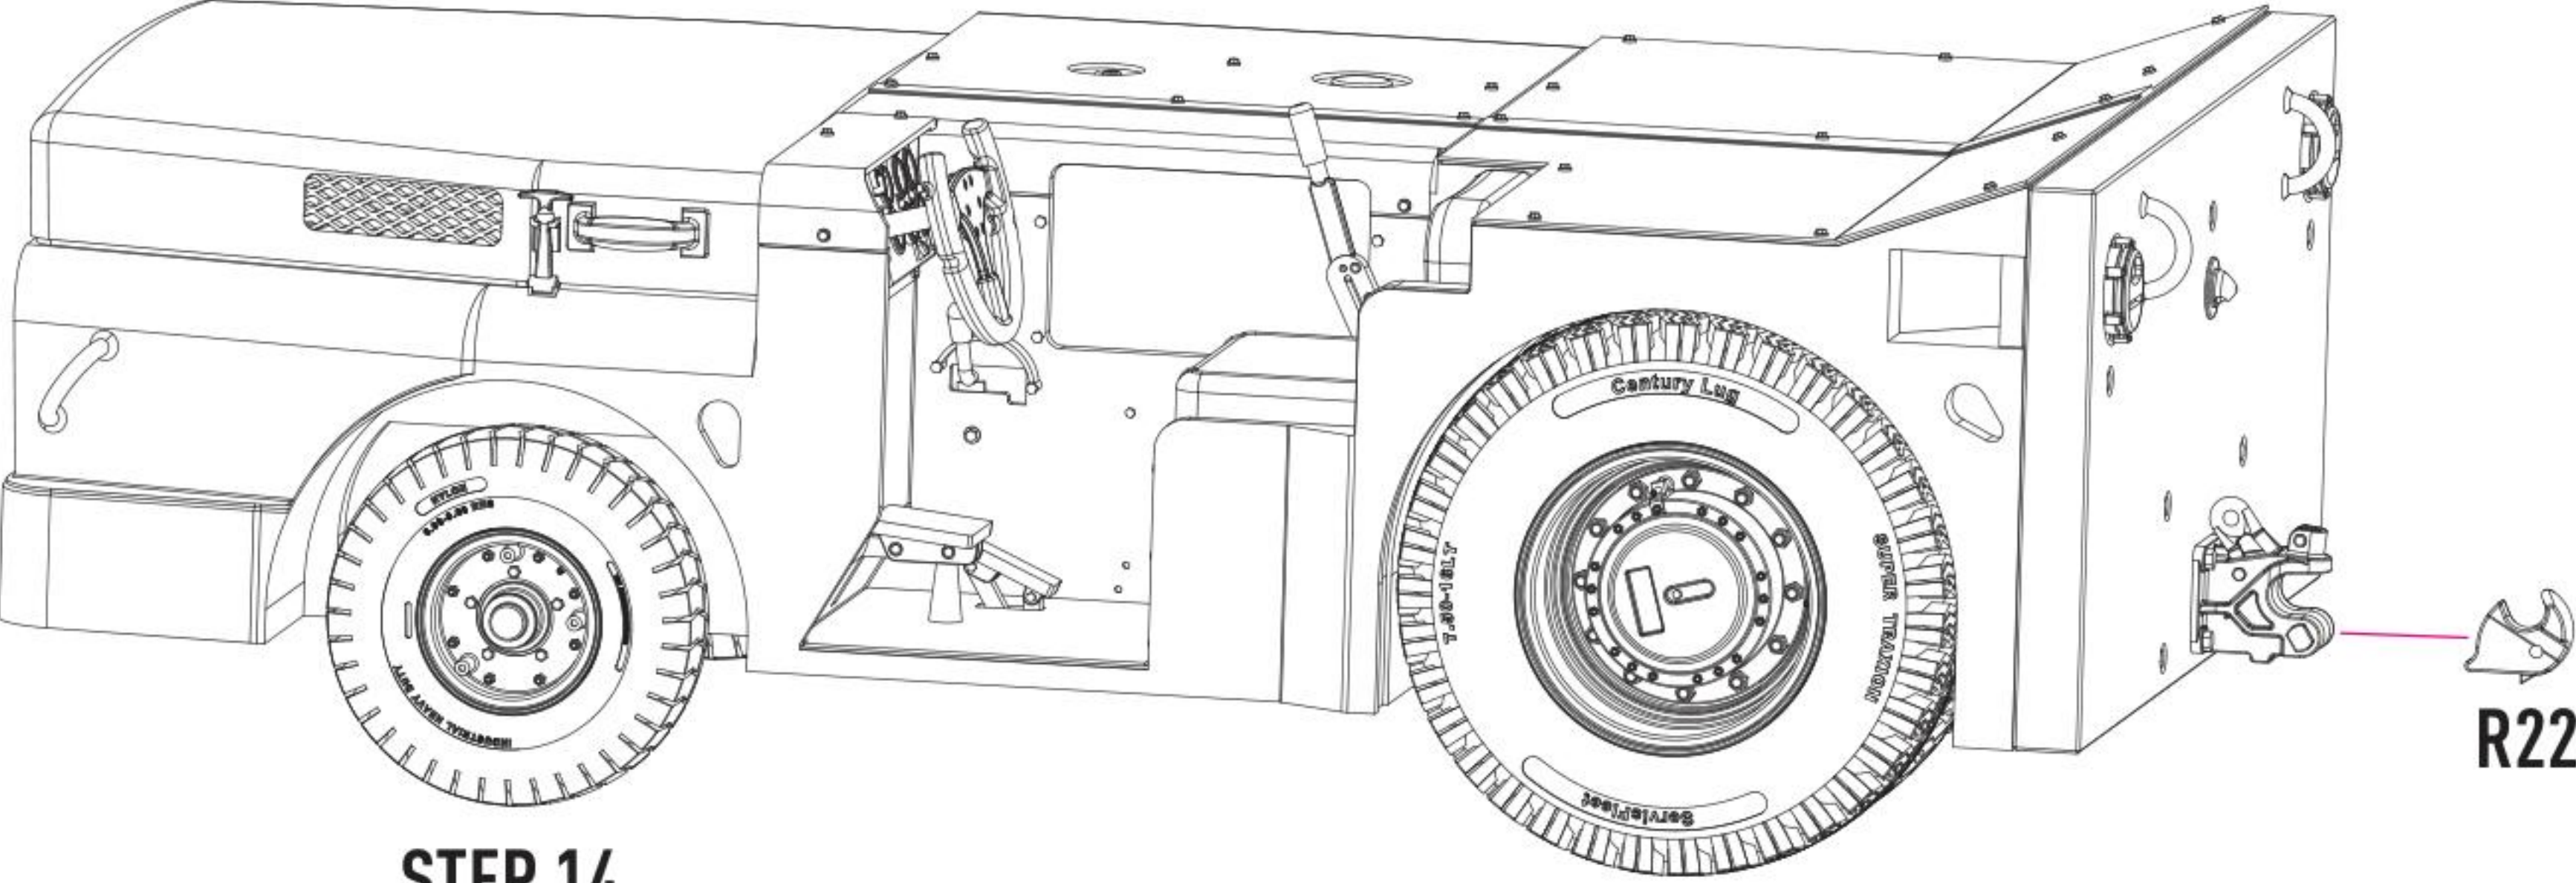


16

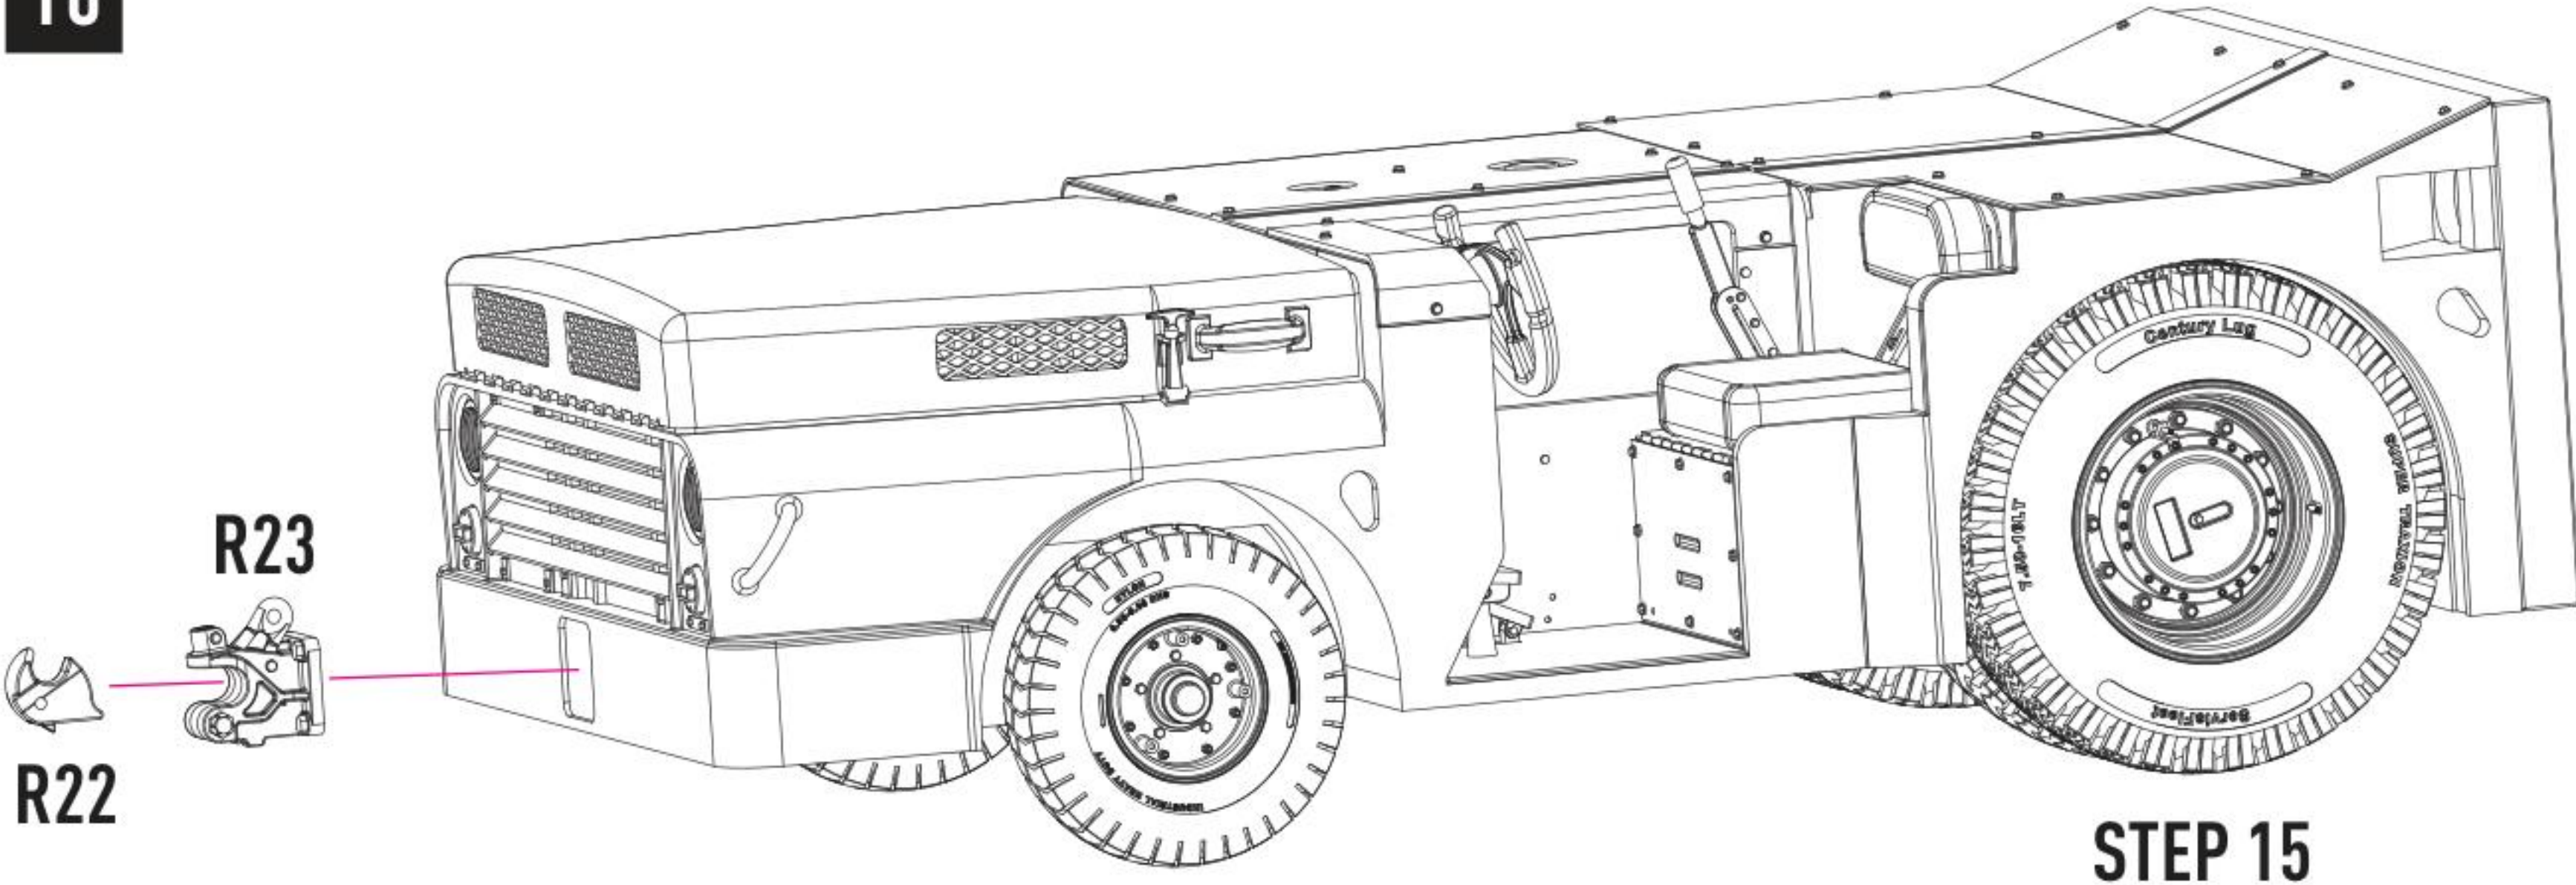


17

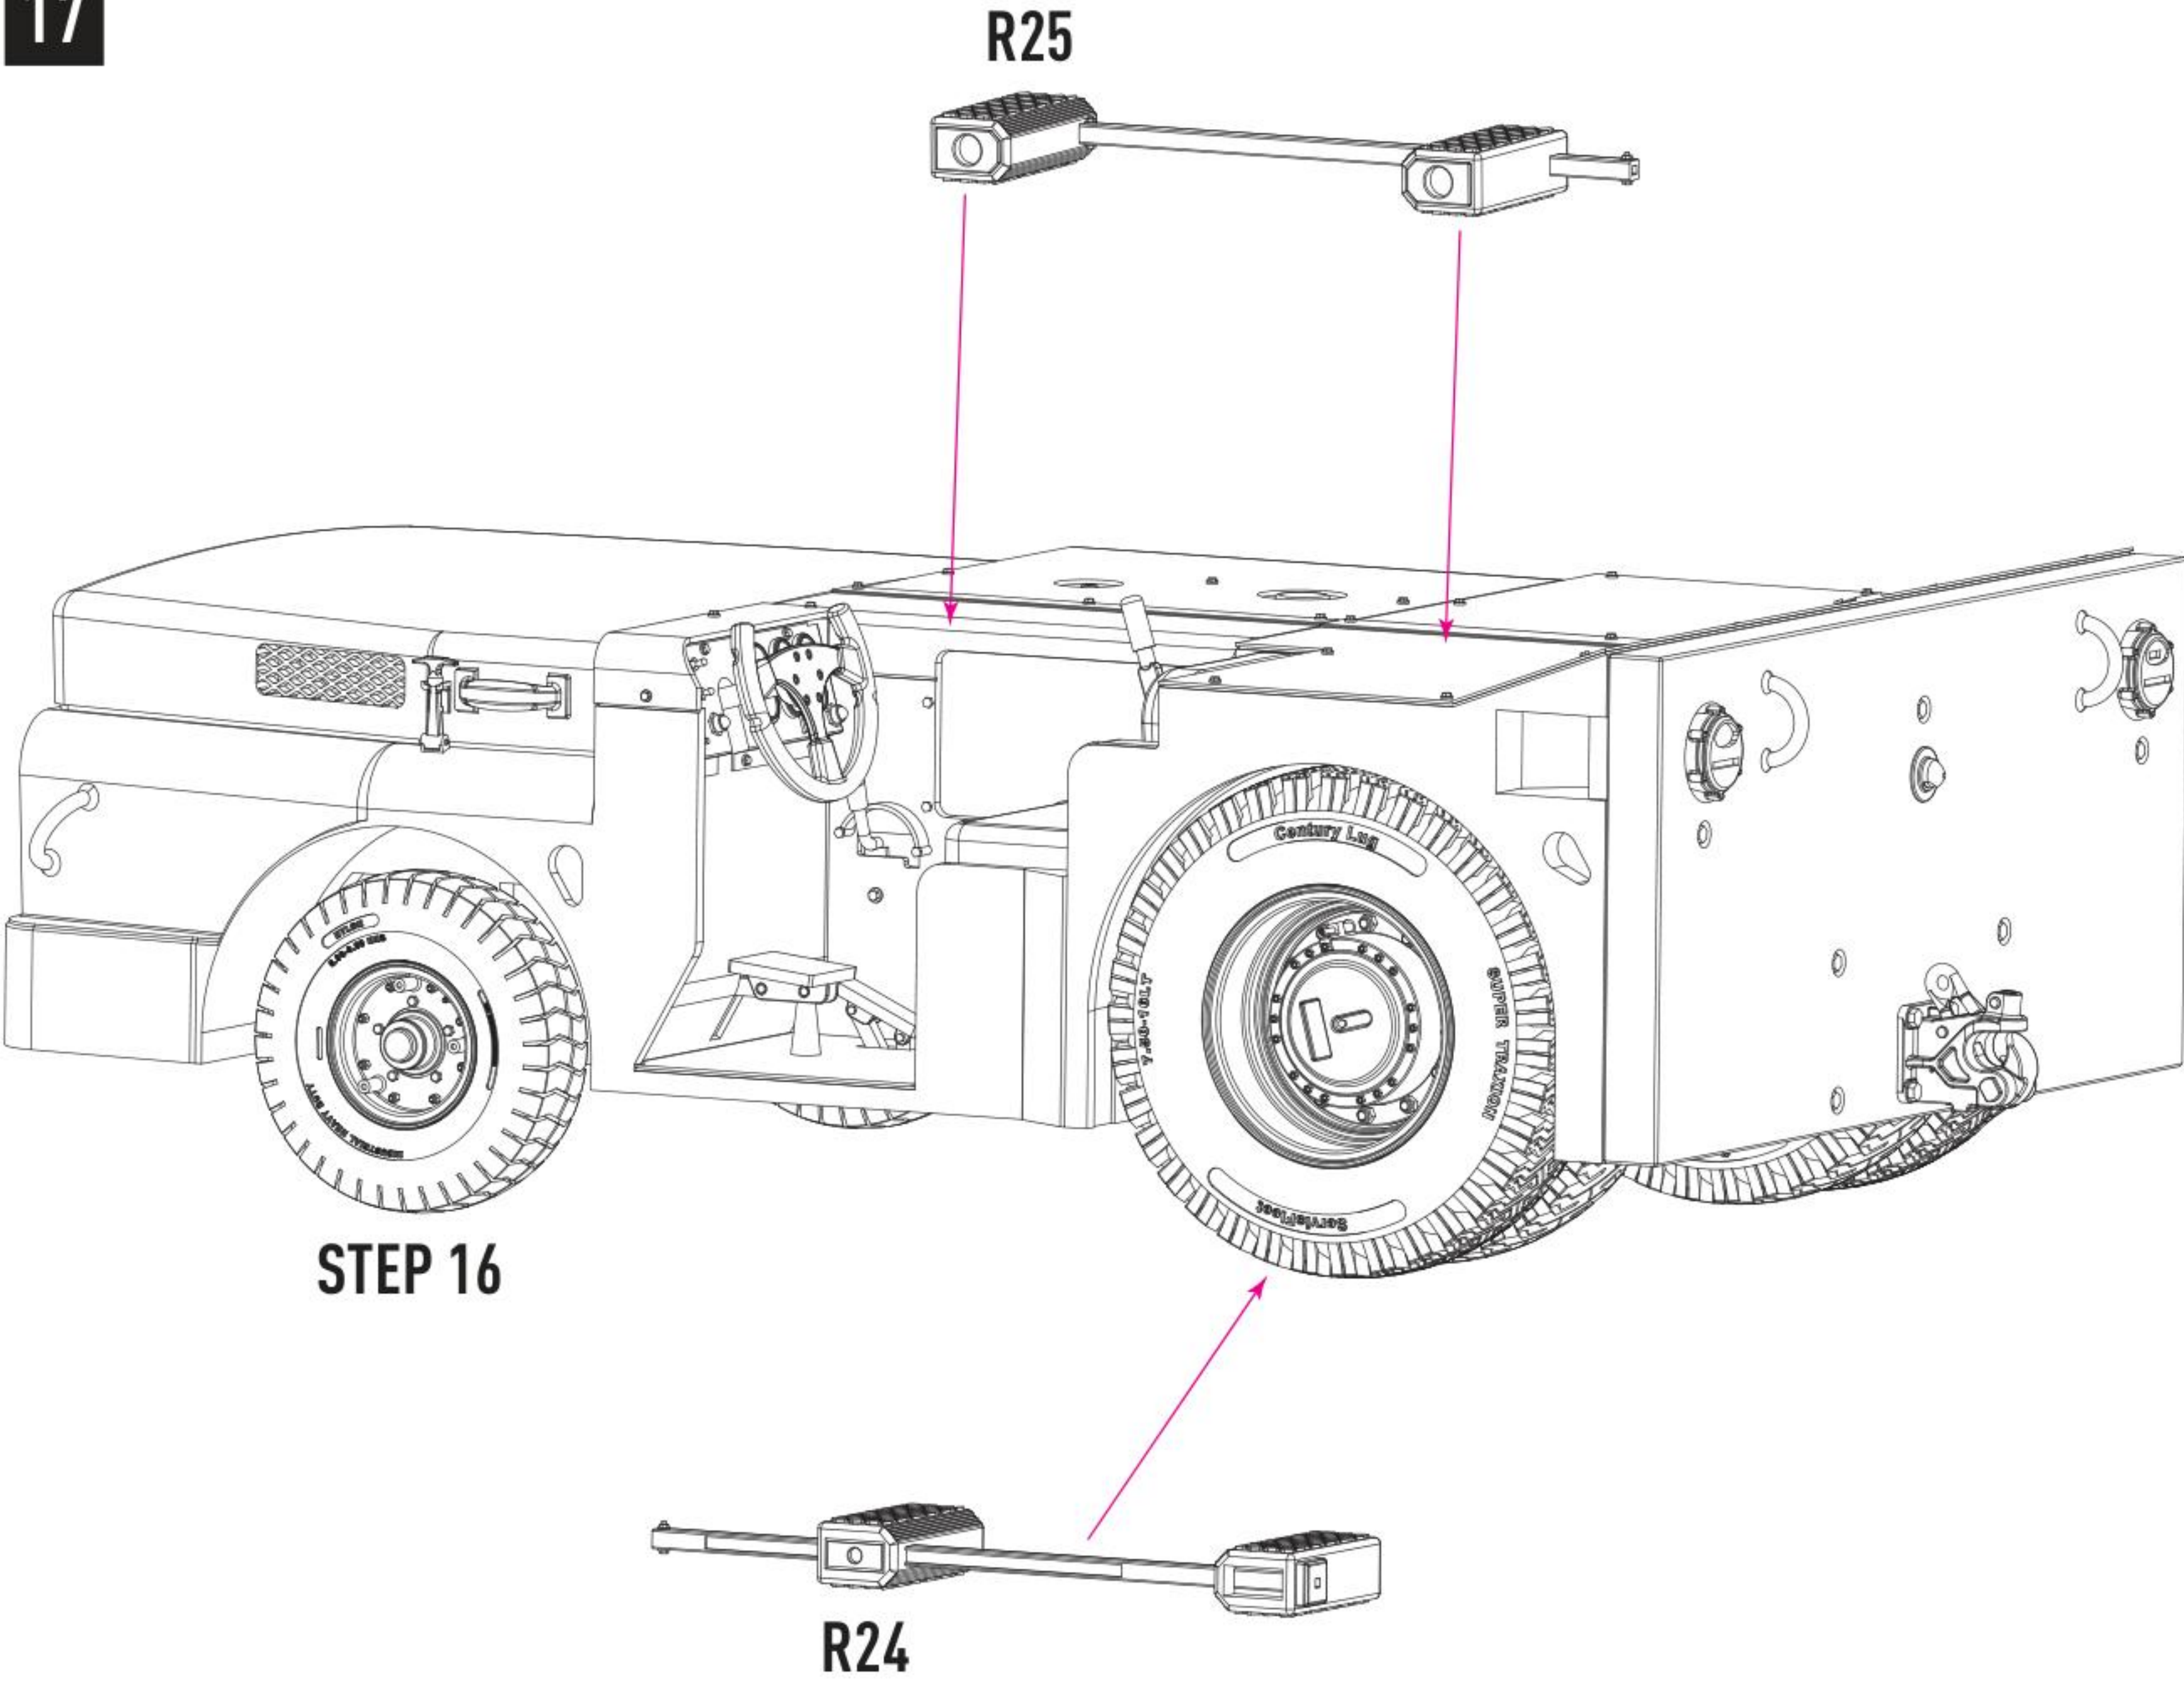


18

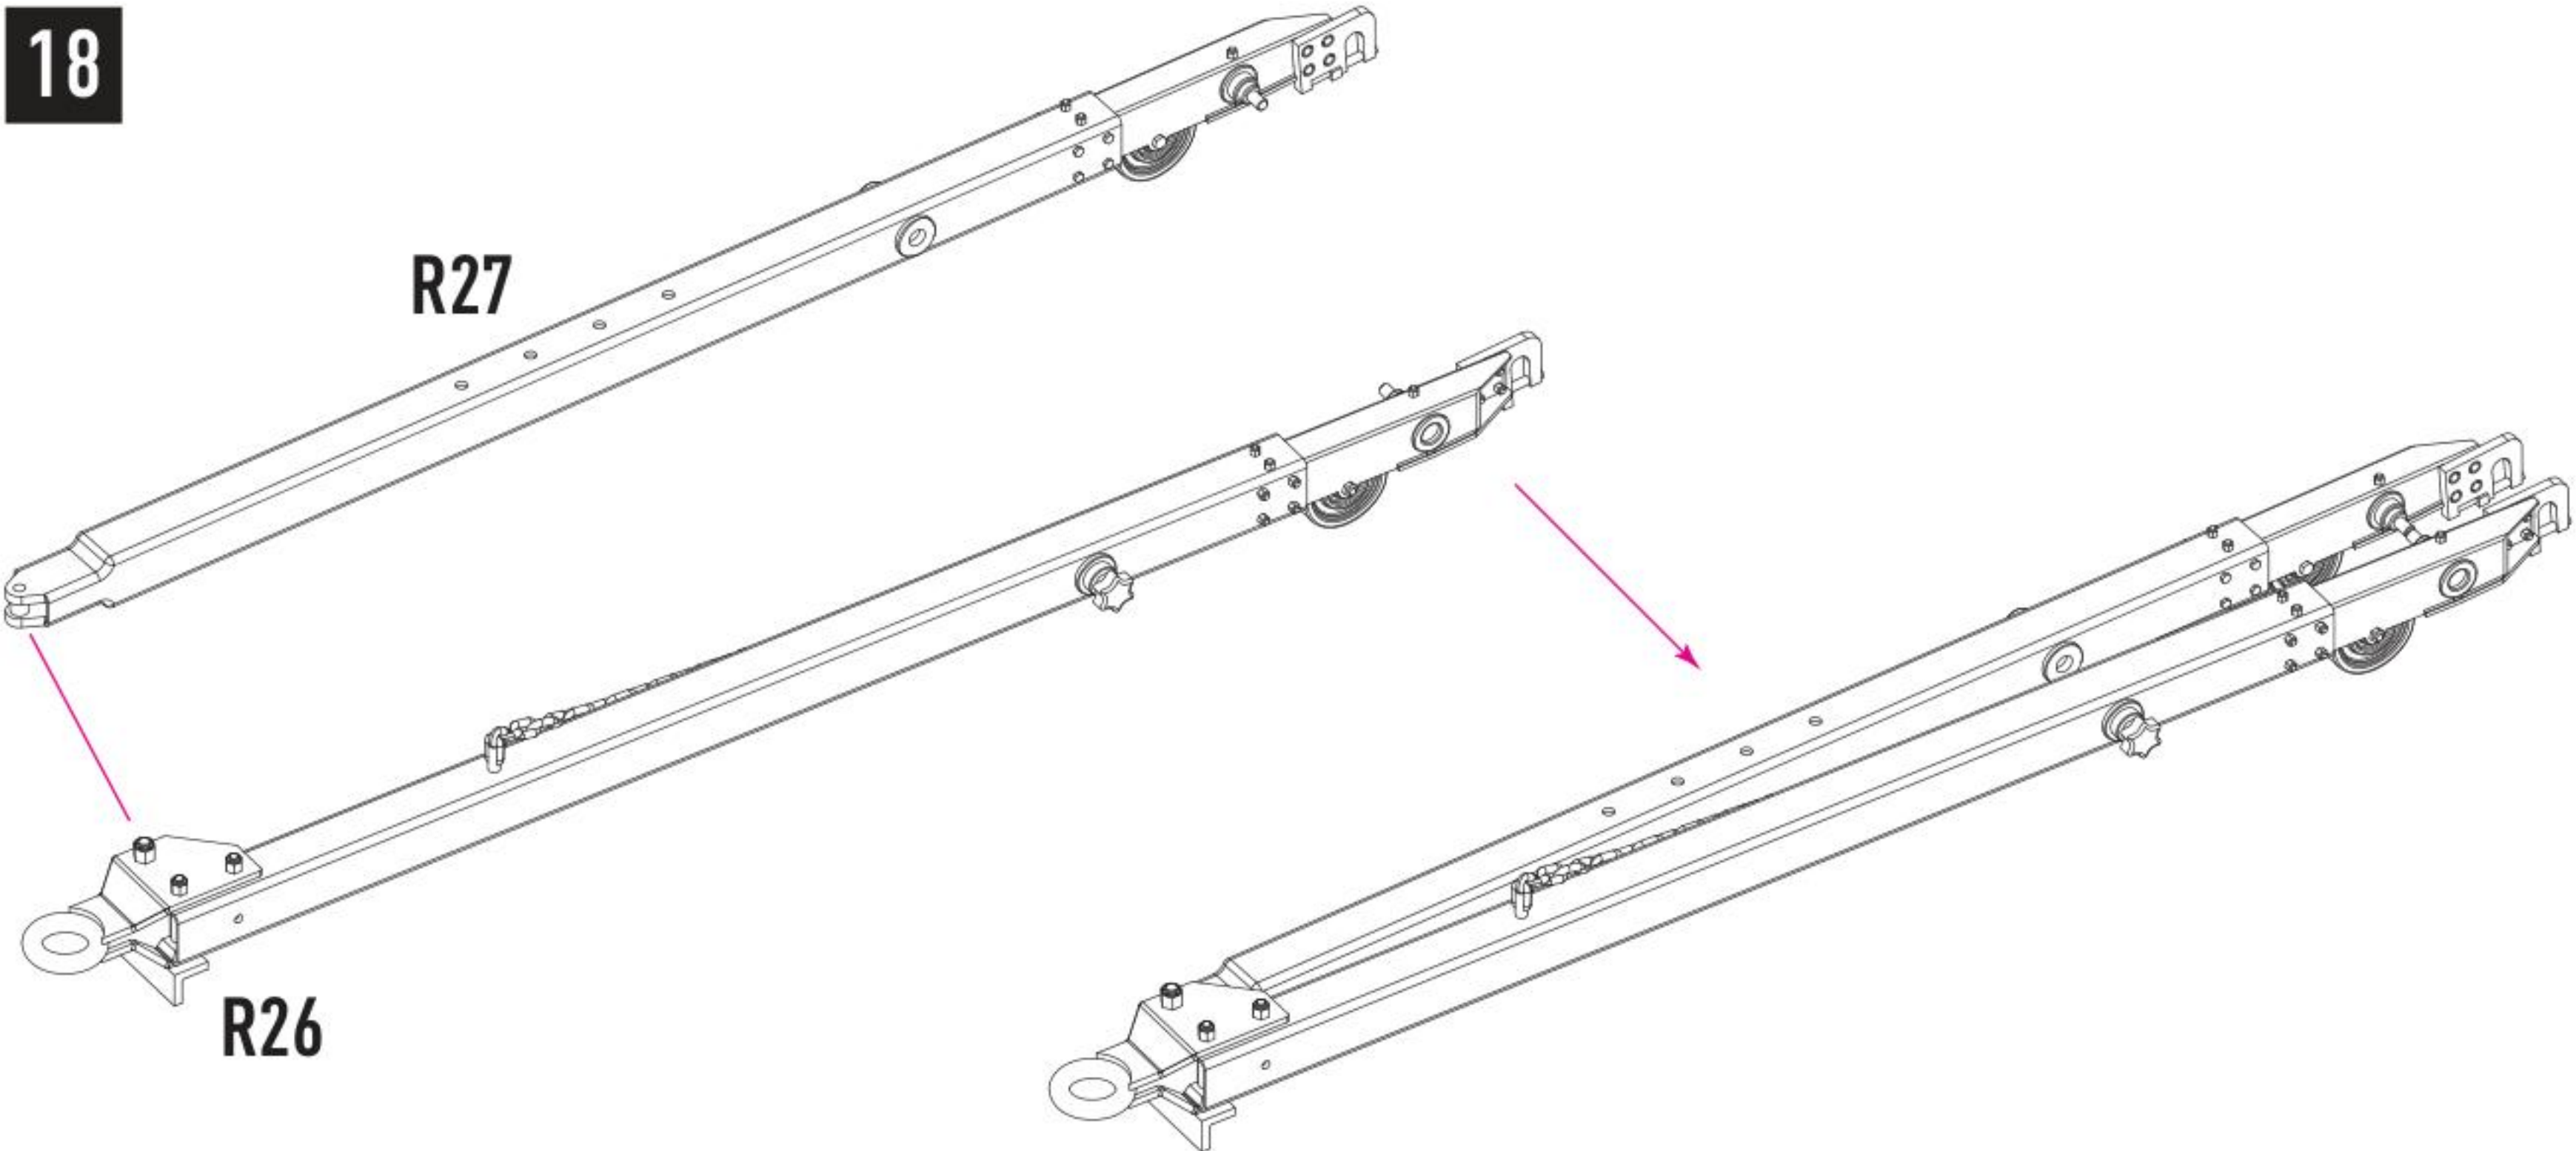


19

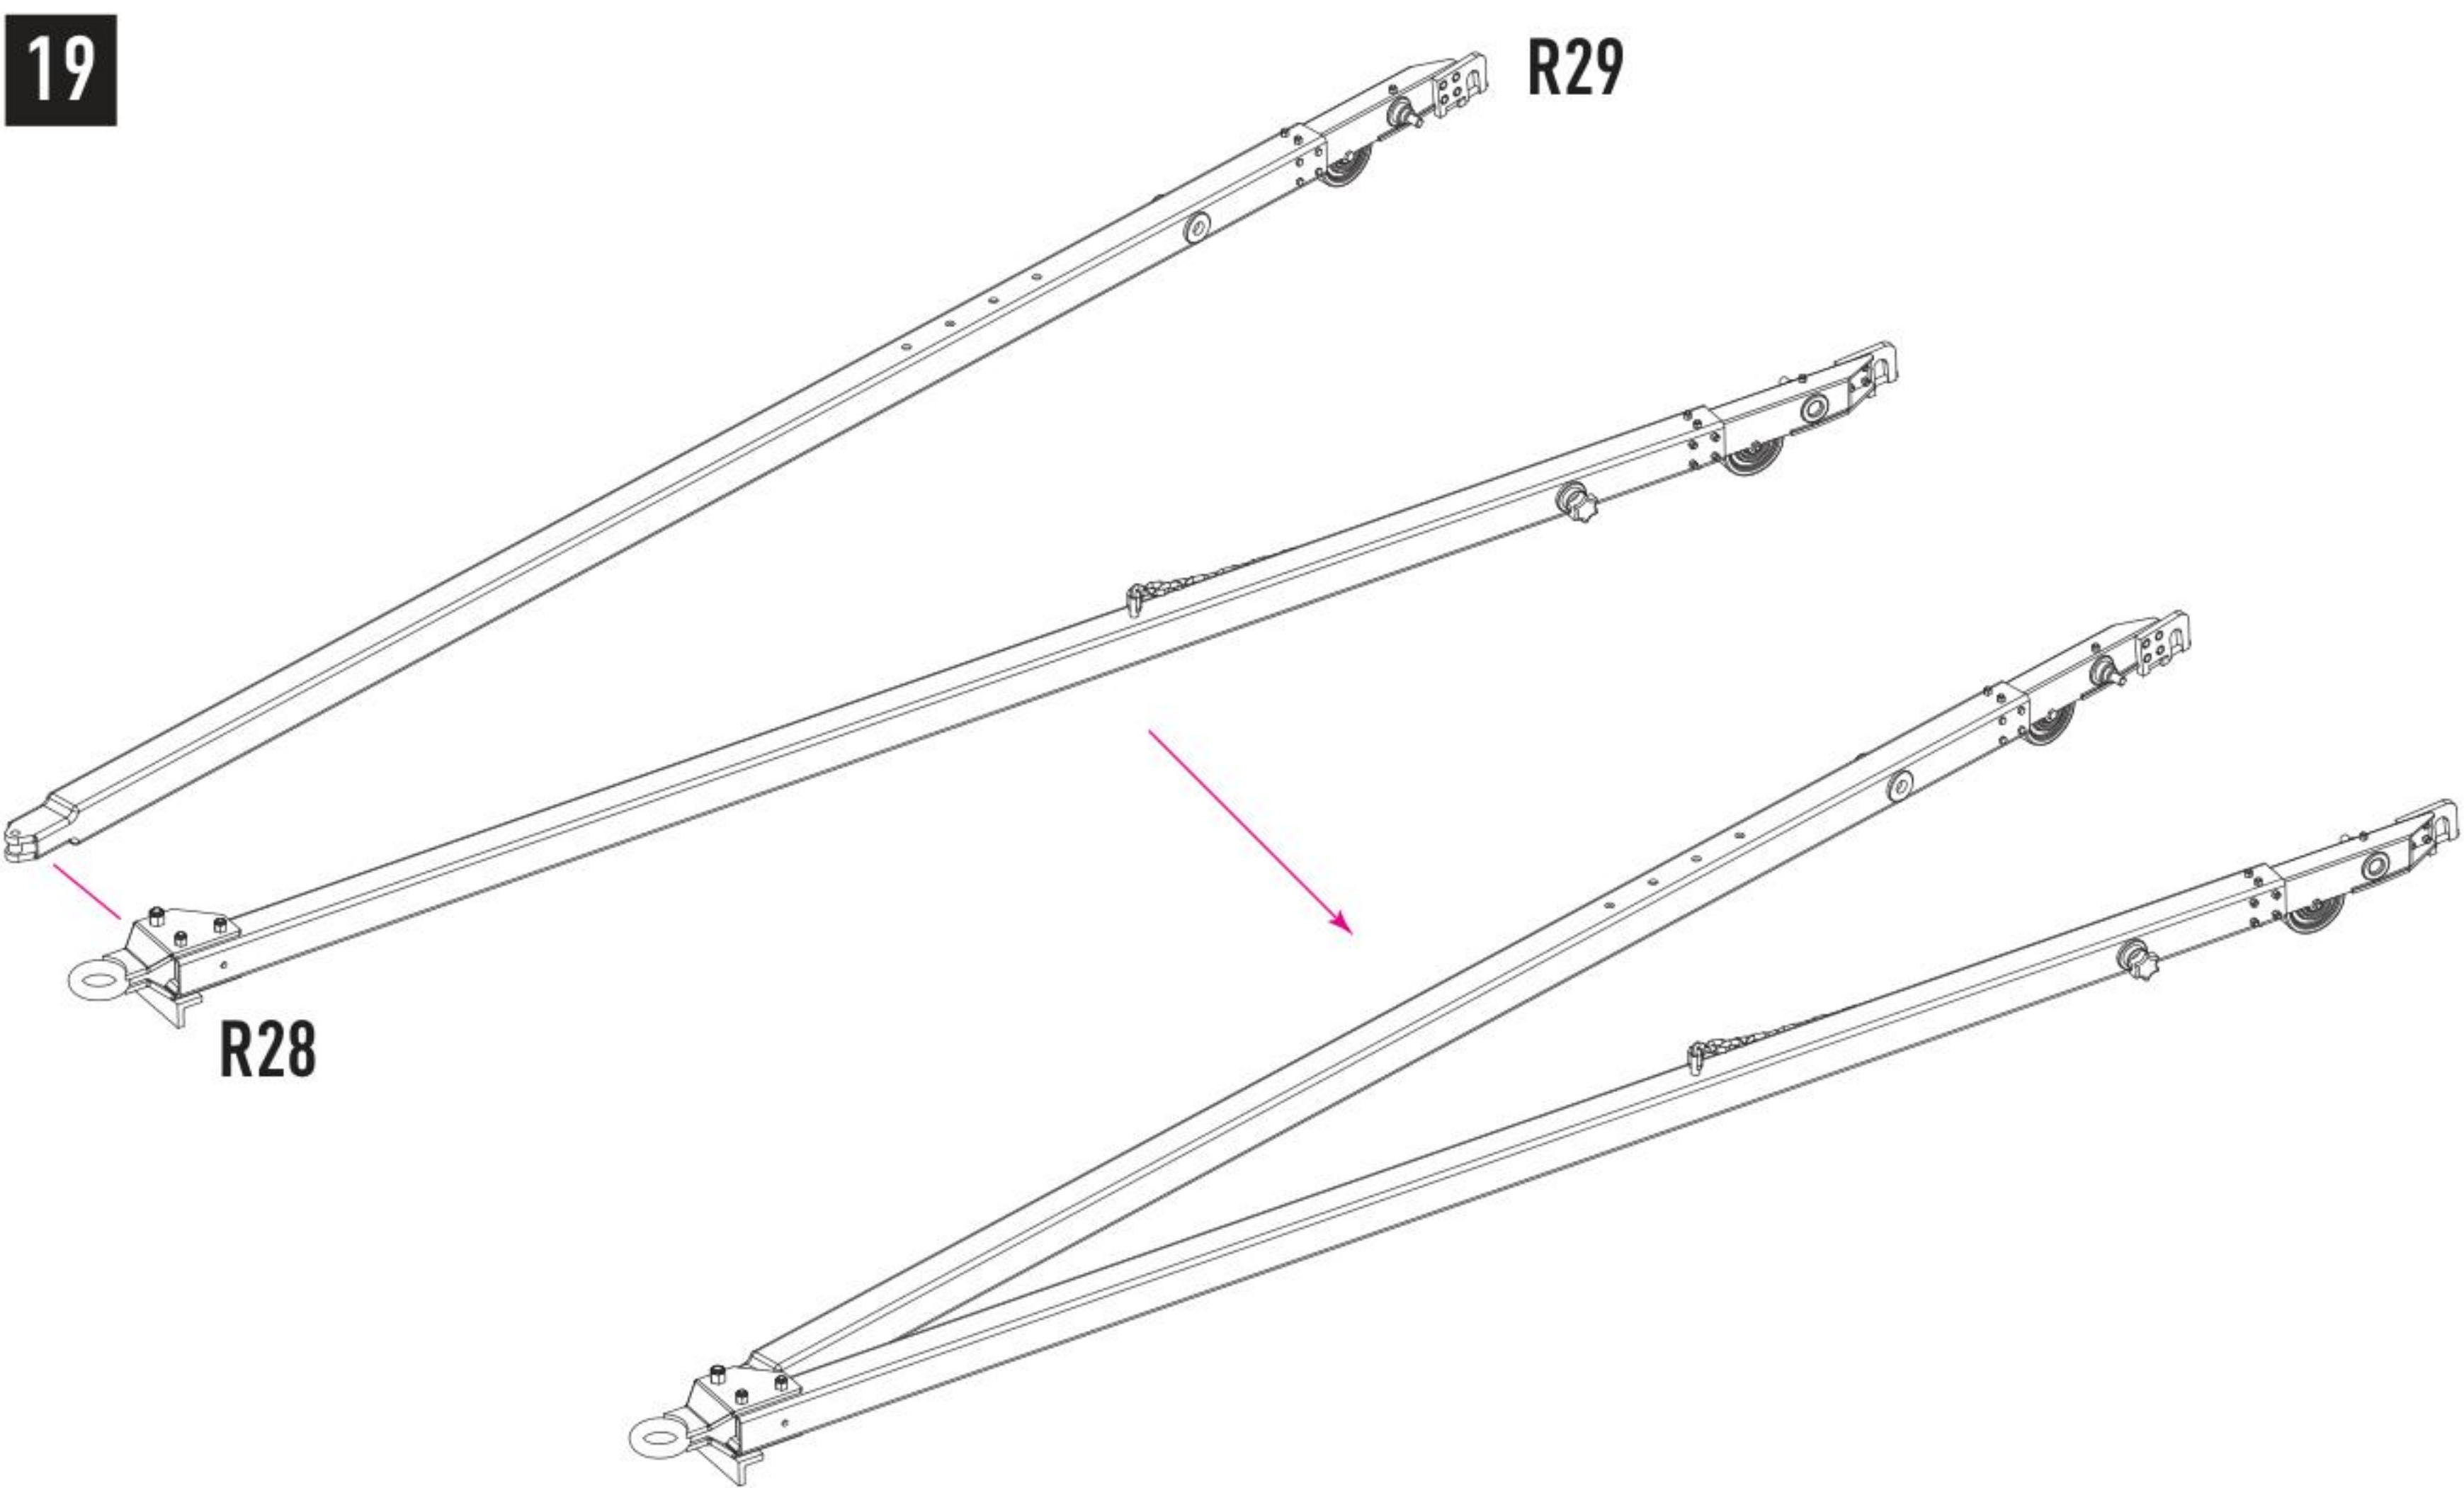


20


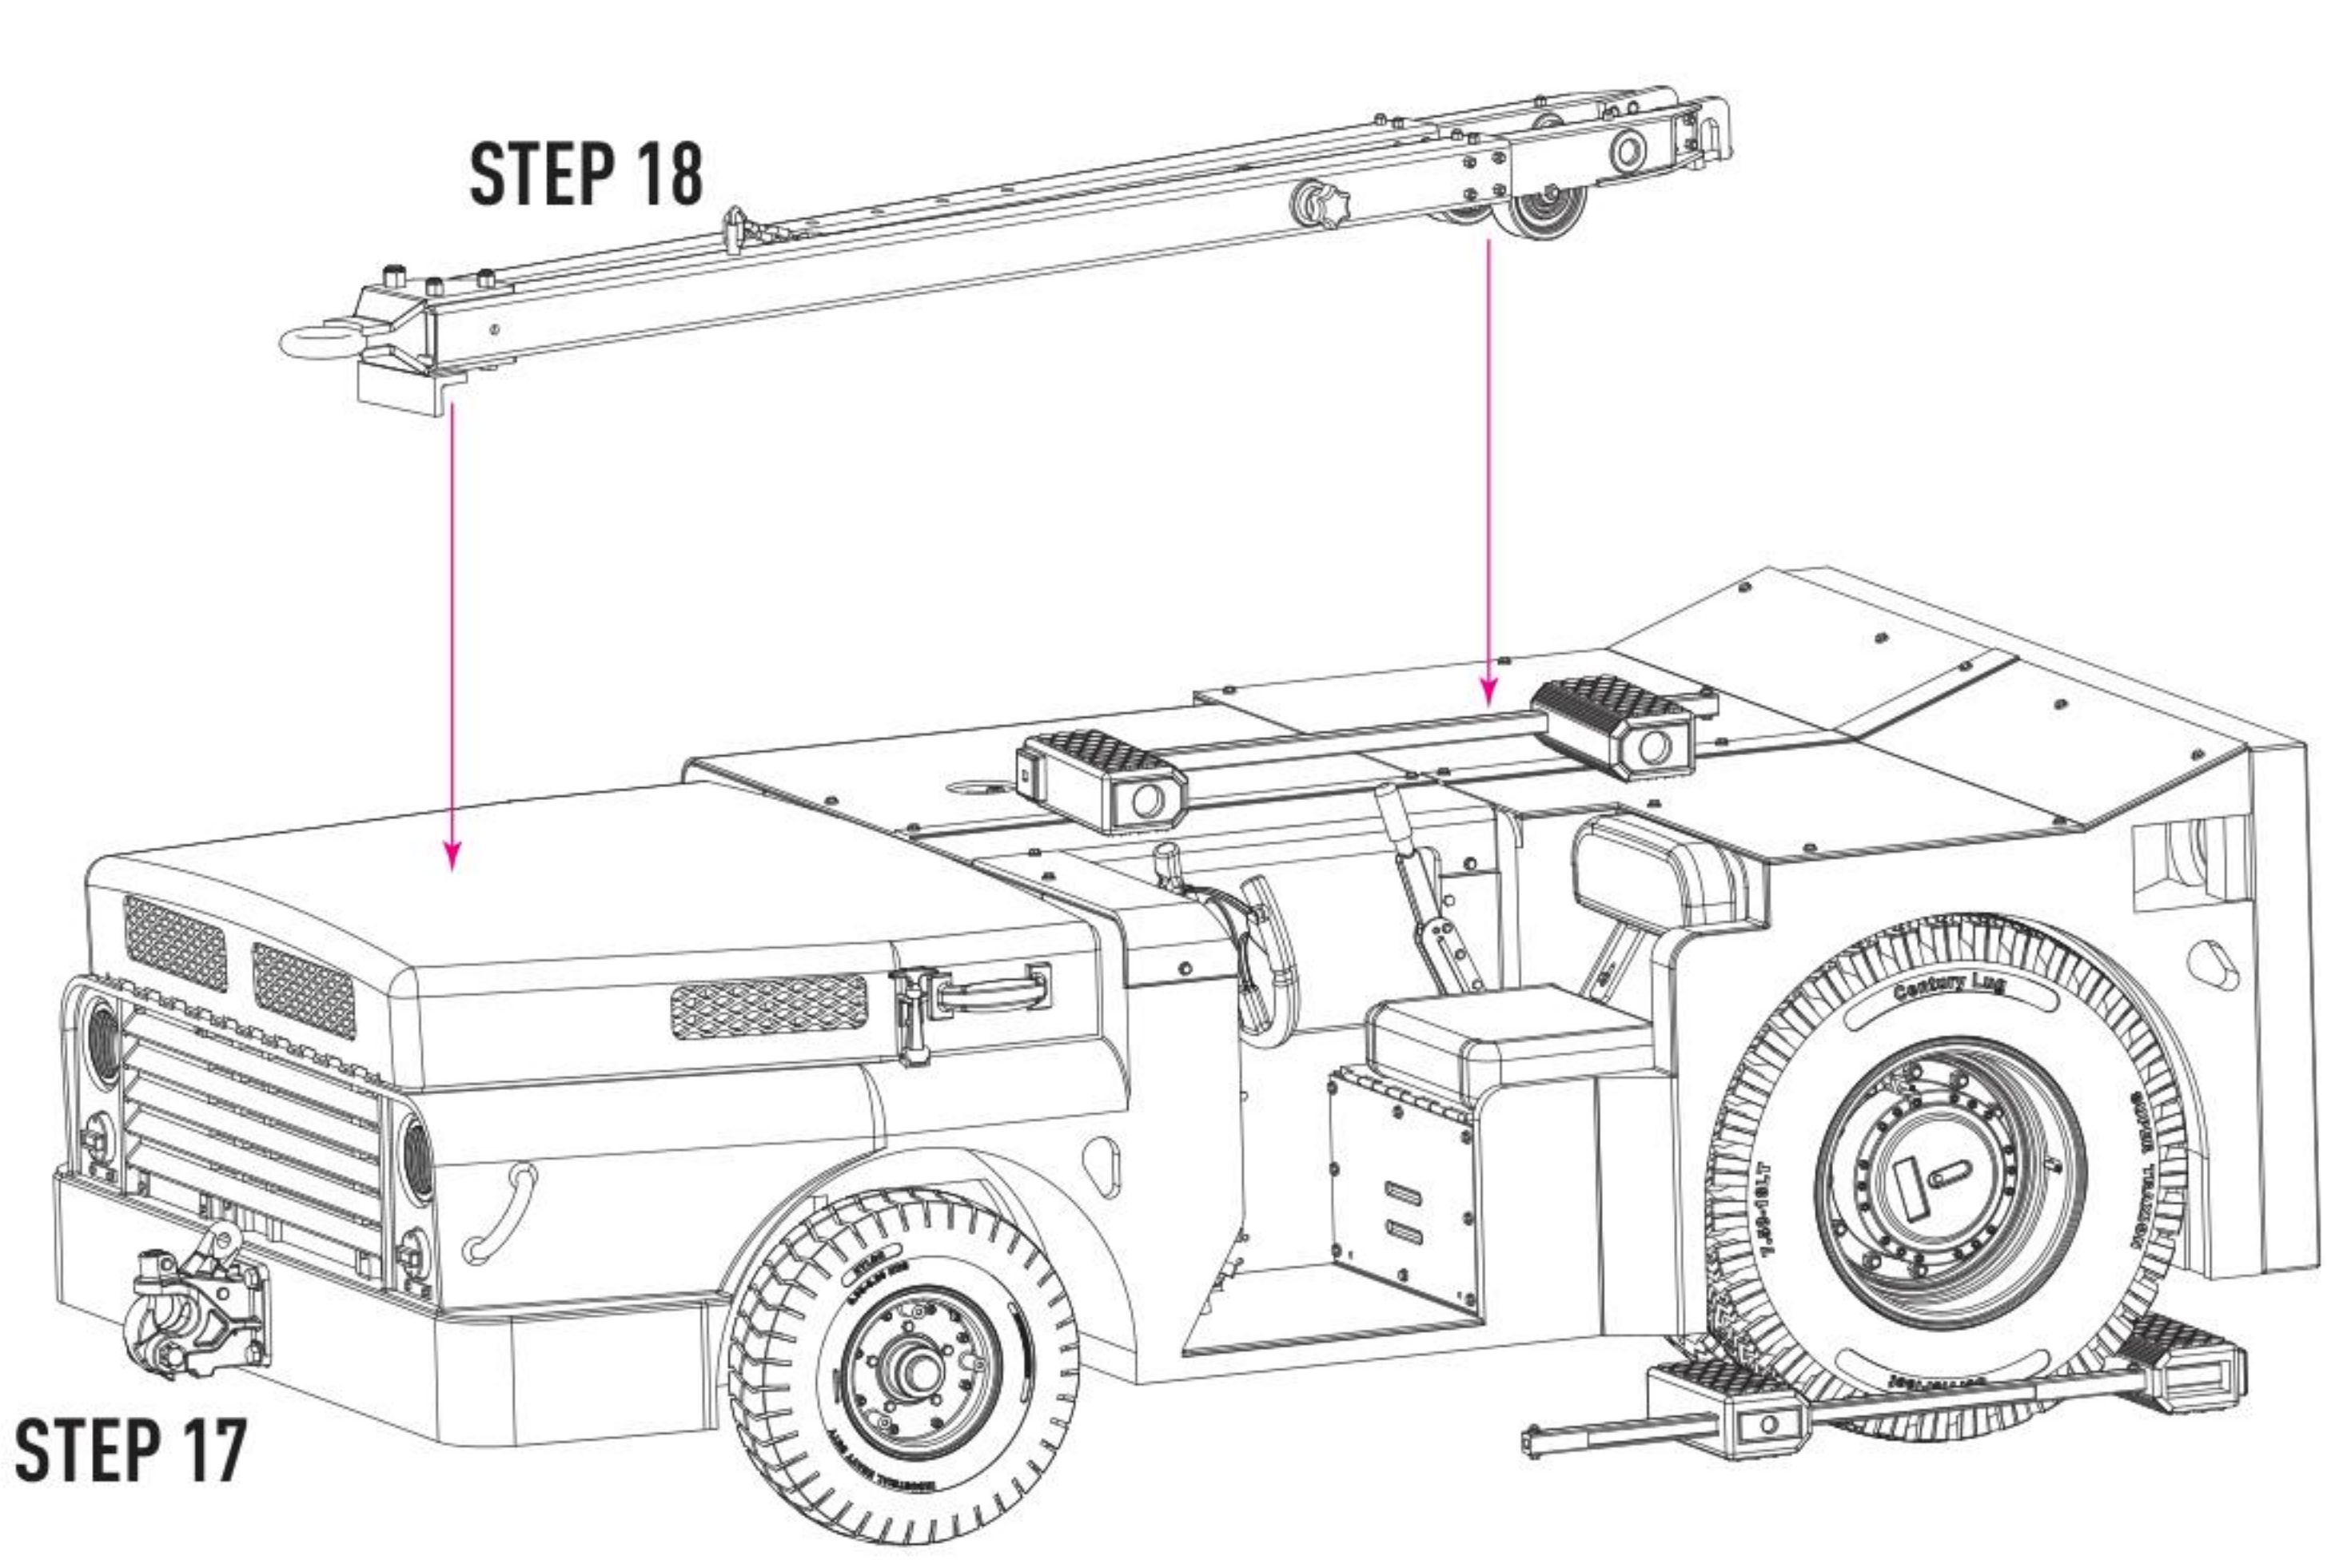


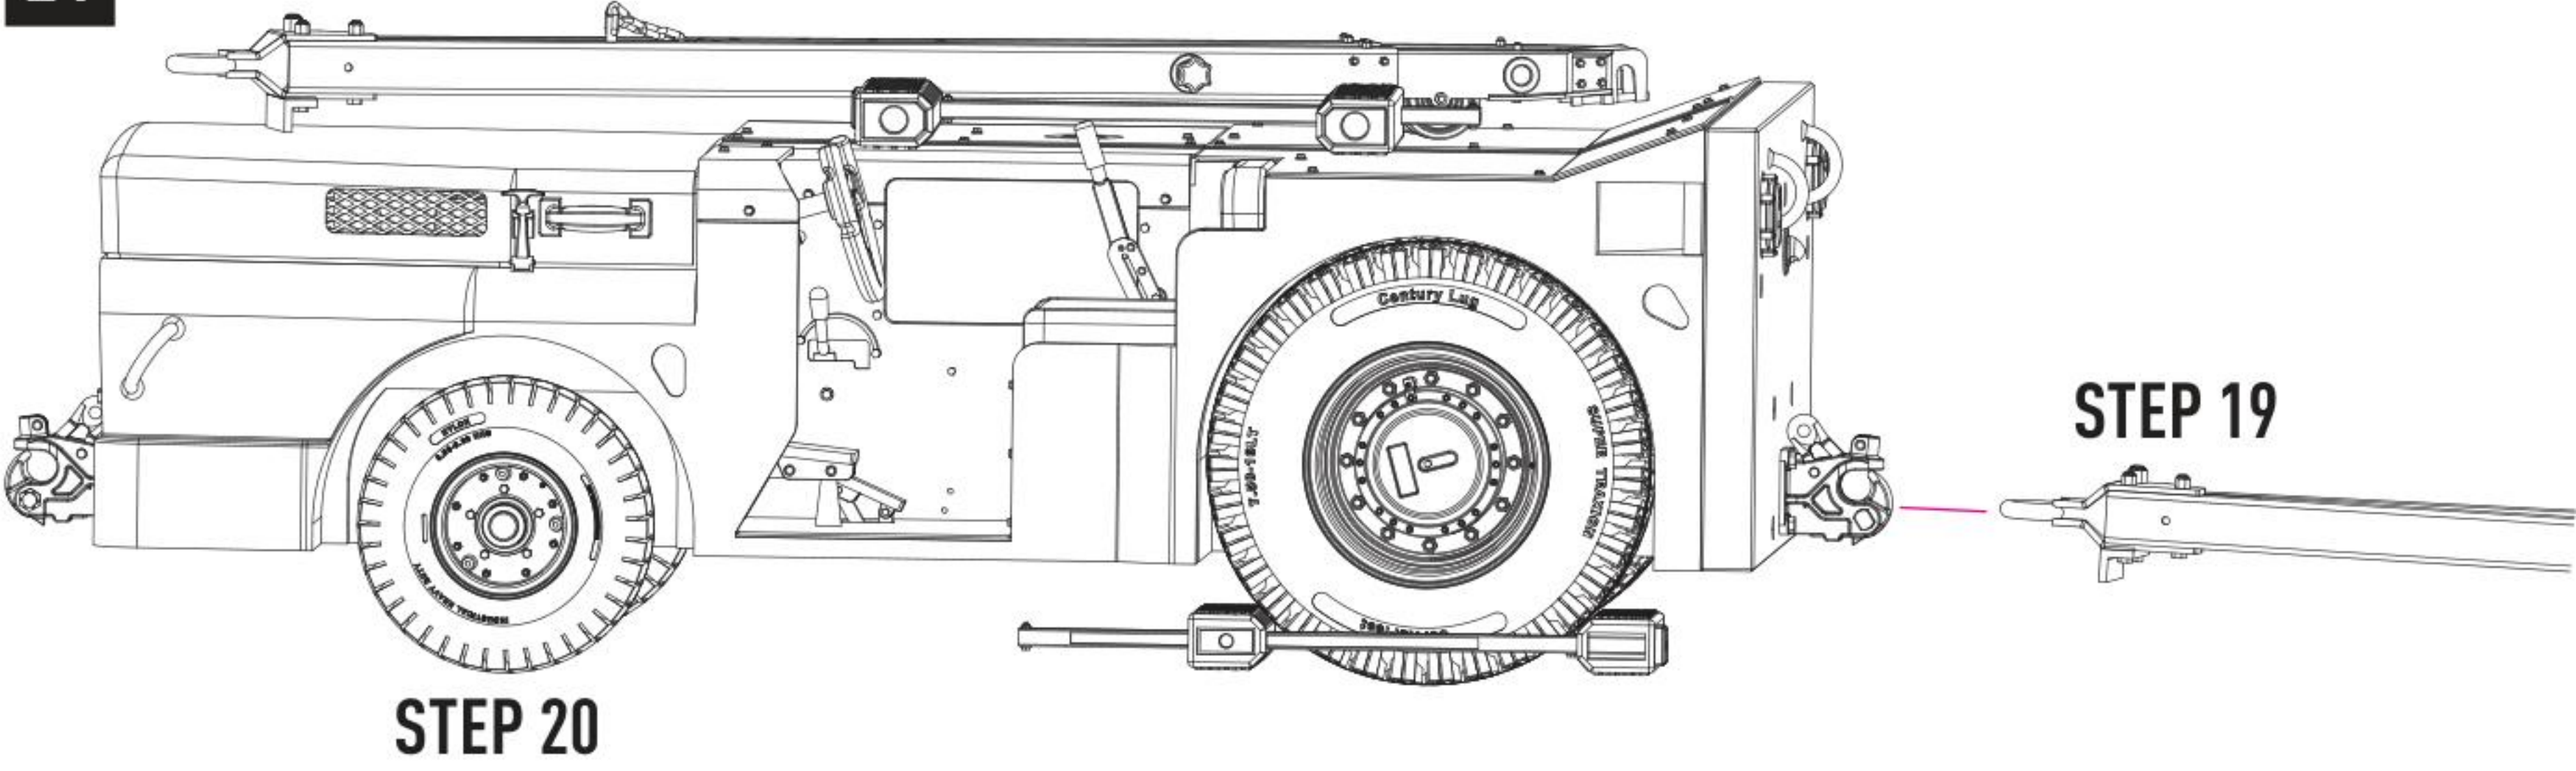



STEP 19

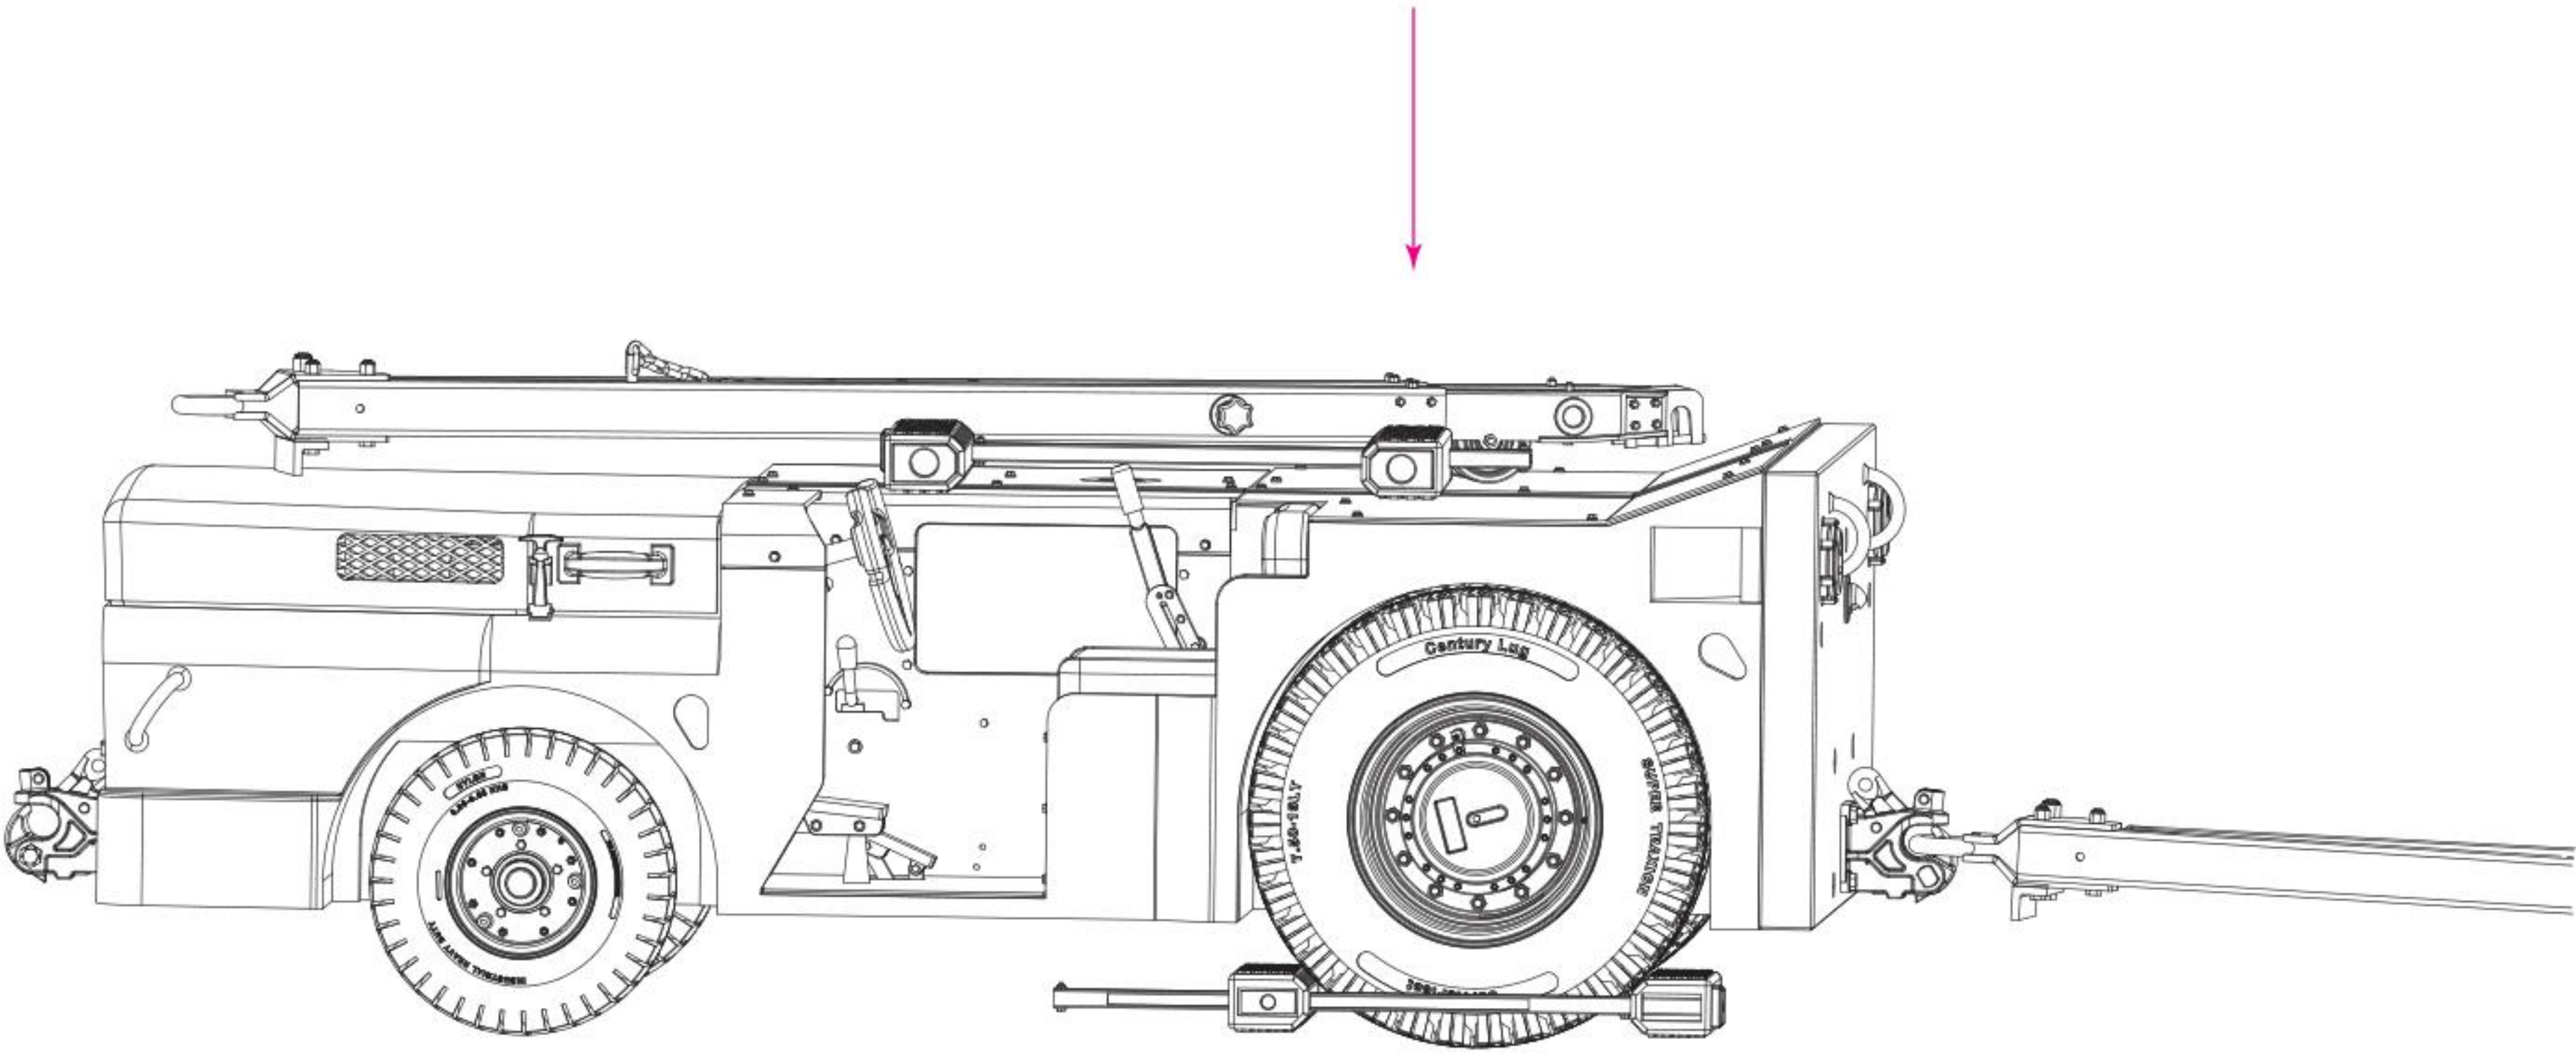

ALBAR UNIVERSAL AIRCRAFT TOWBAR

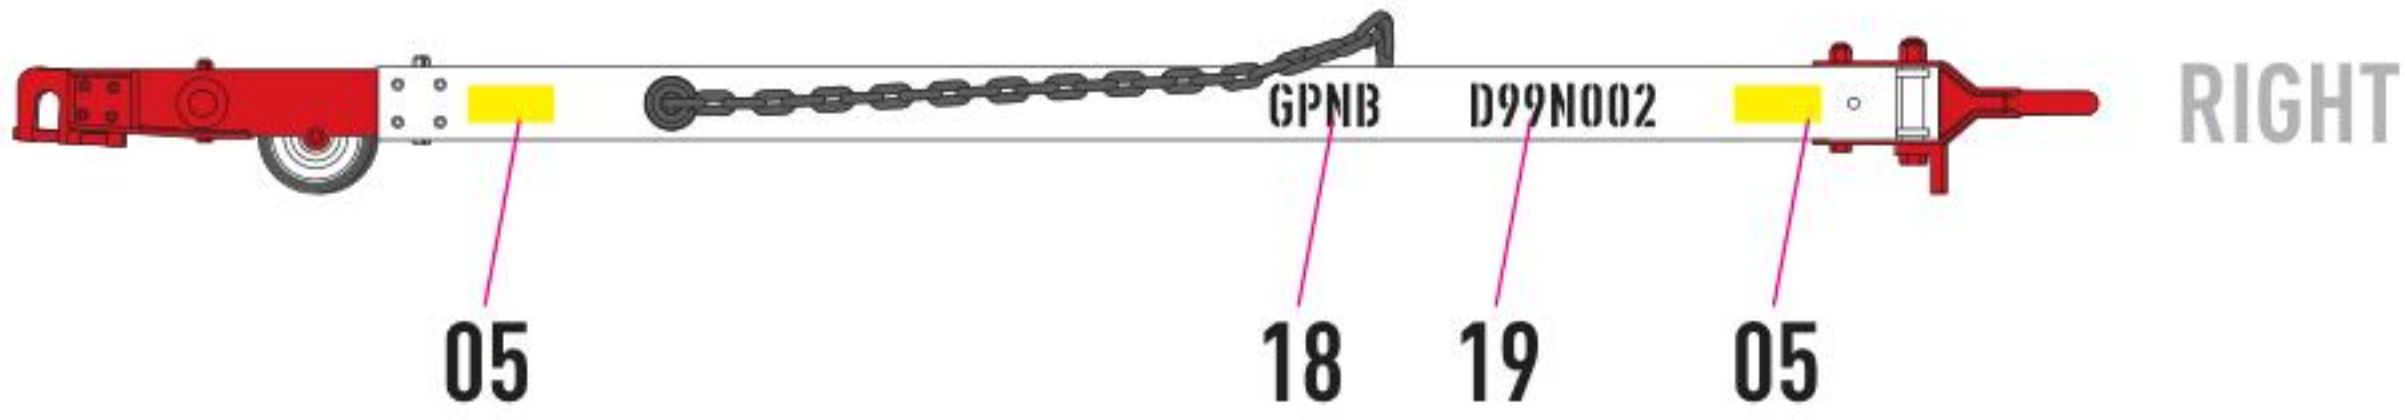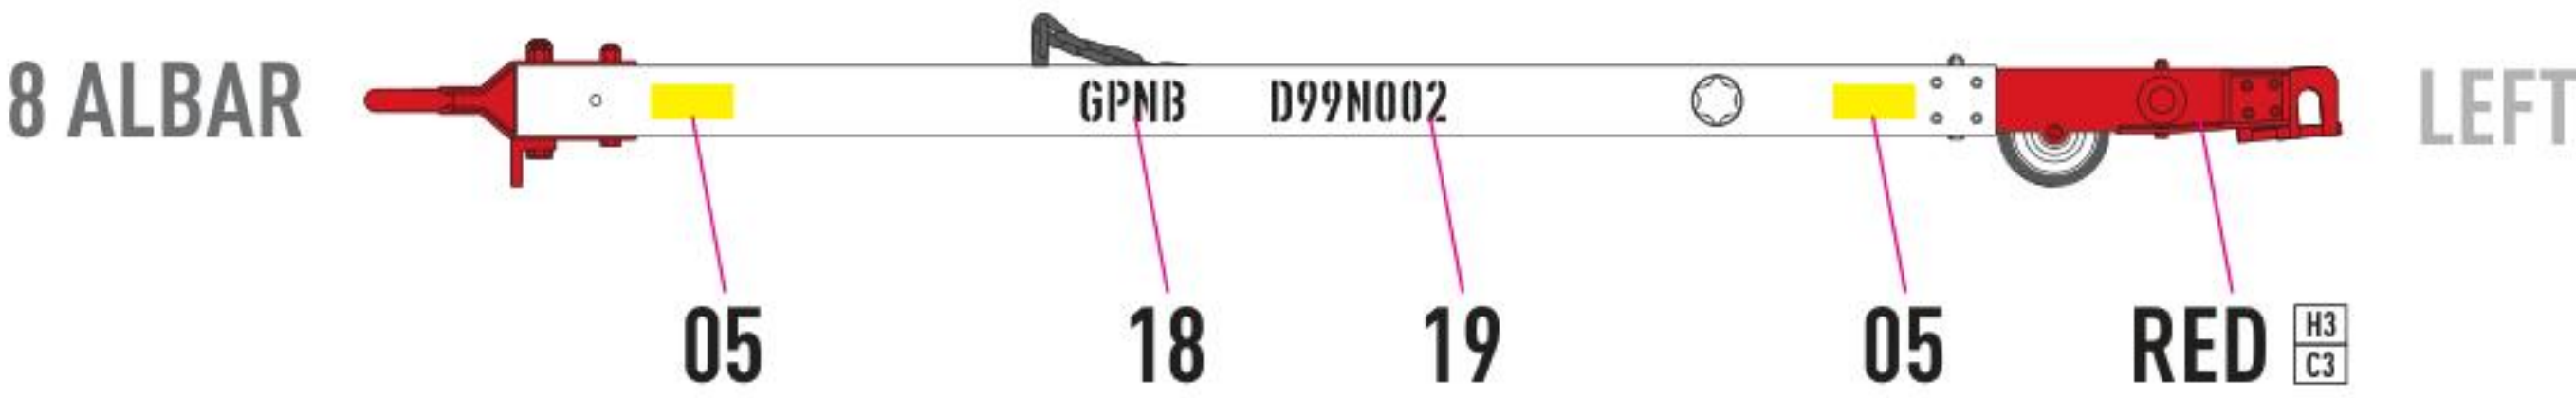






15 ALBAR

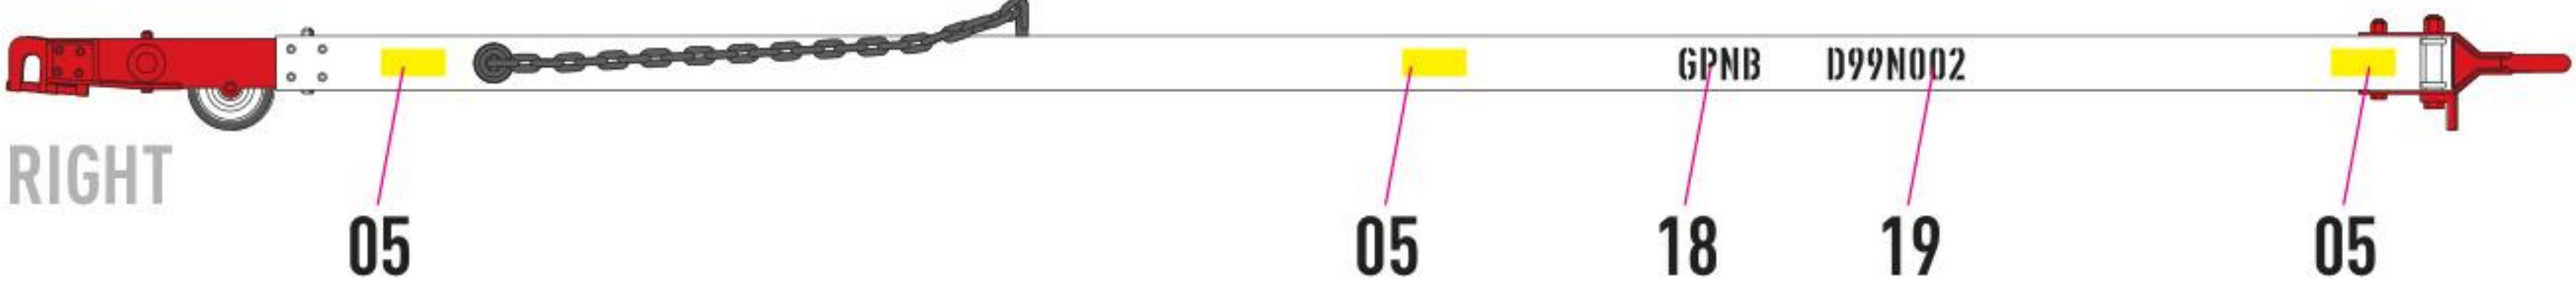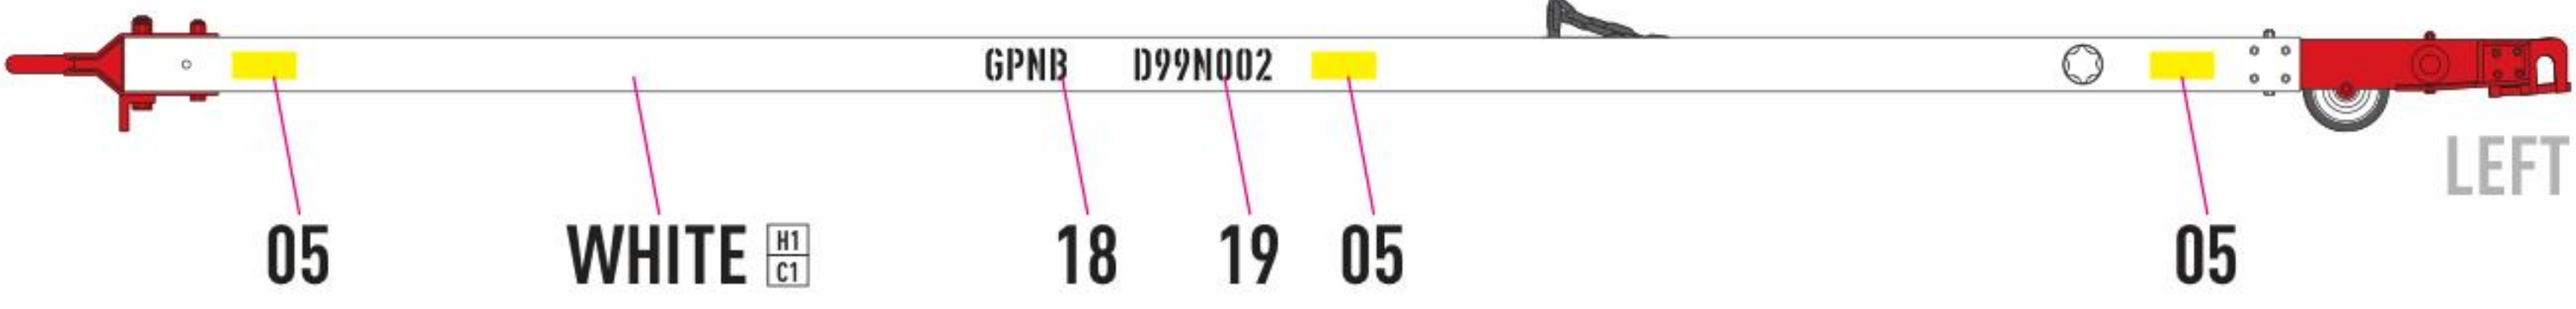

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
WHITE	H1	C1
LIGHT GHOST GRAY	H308	C308

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
RED	H3	C3

DECAL INSTRUCTION
V1

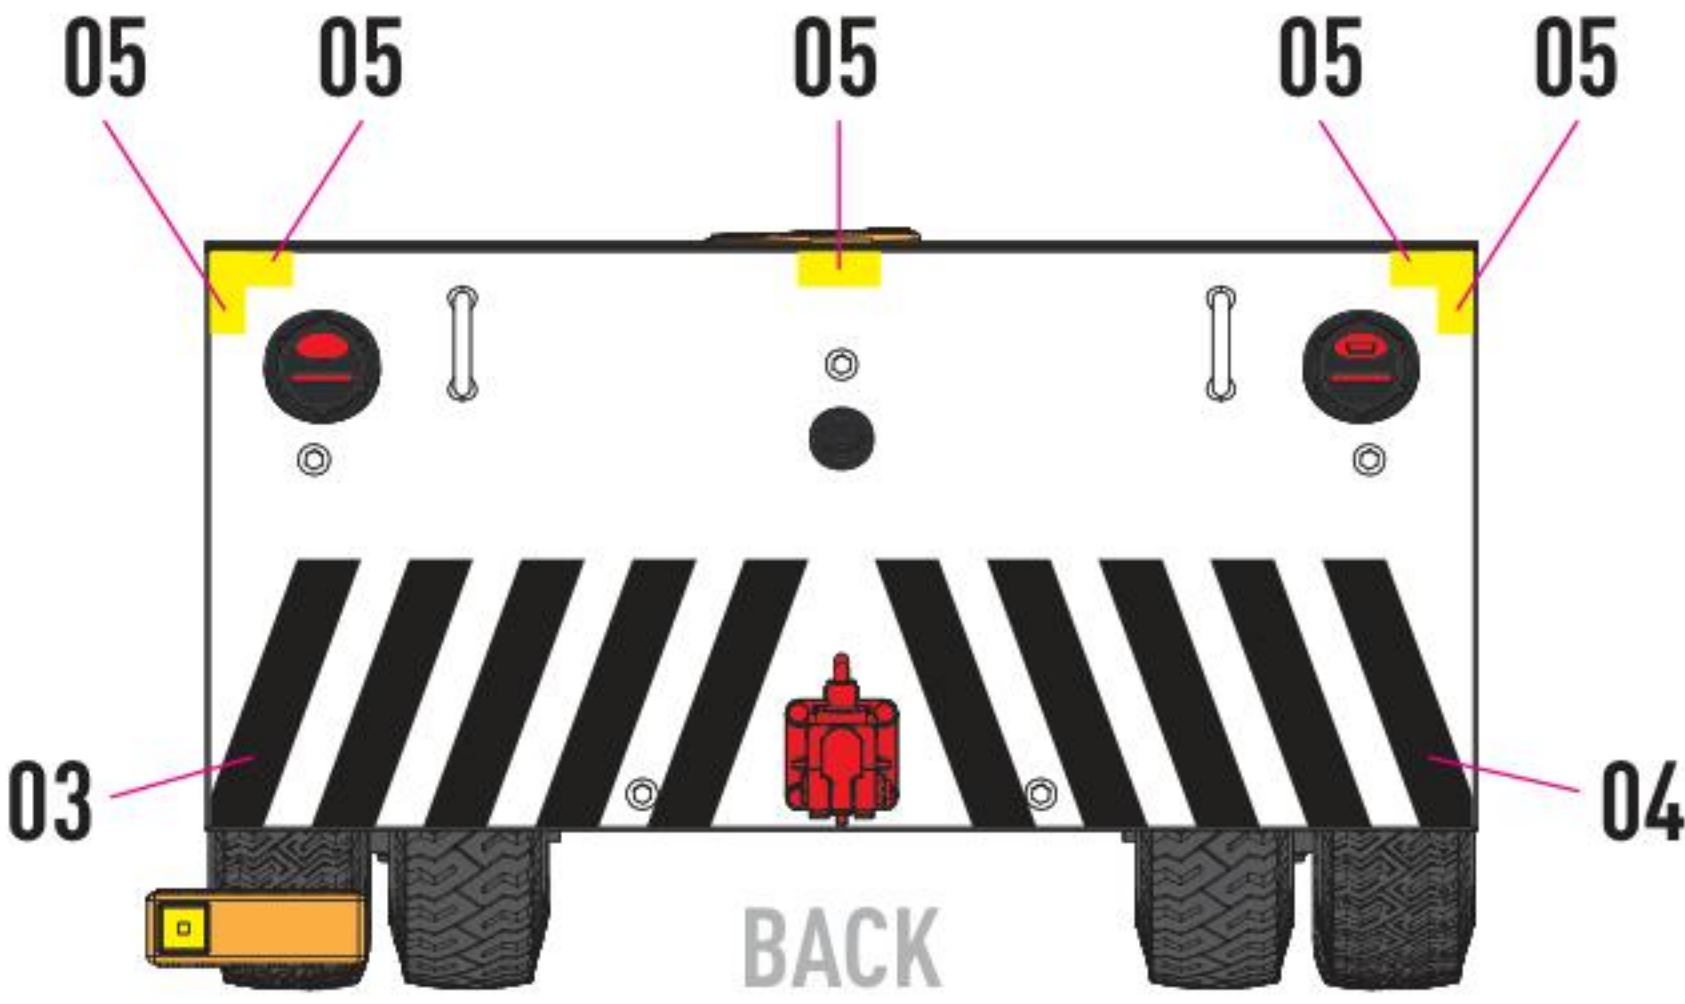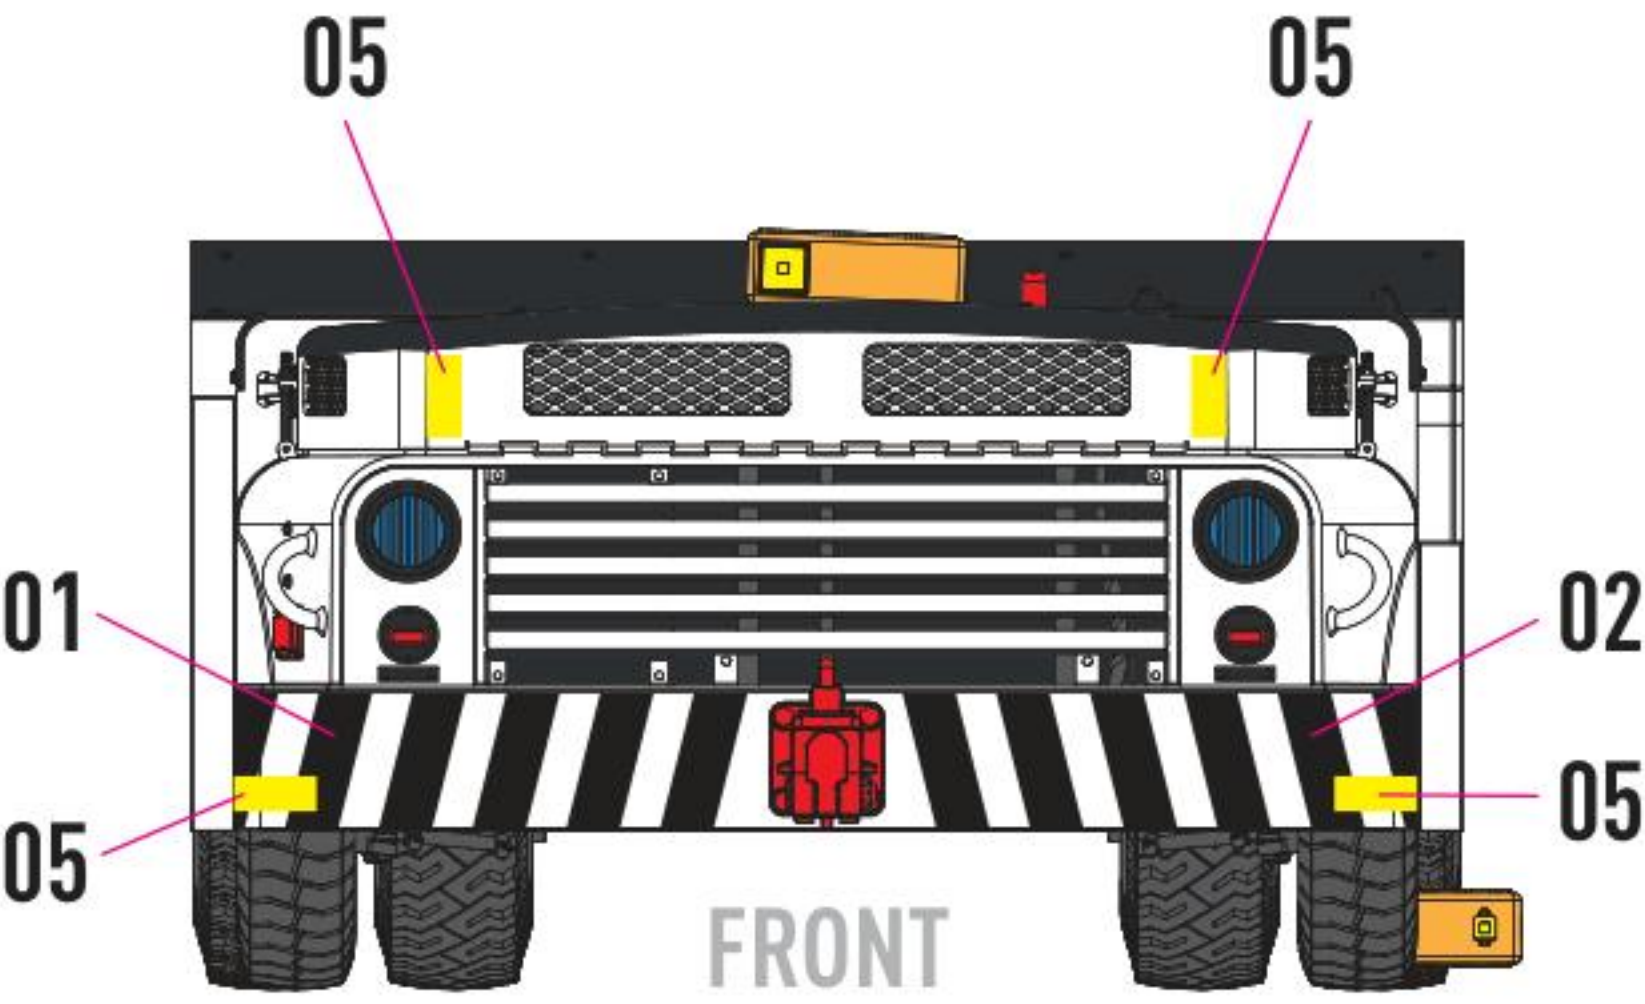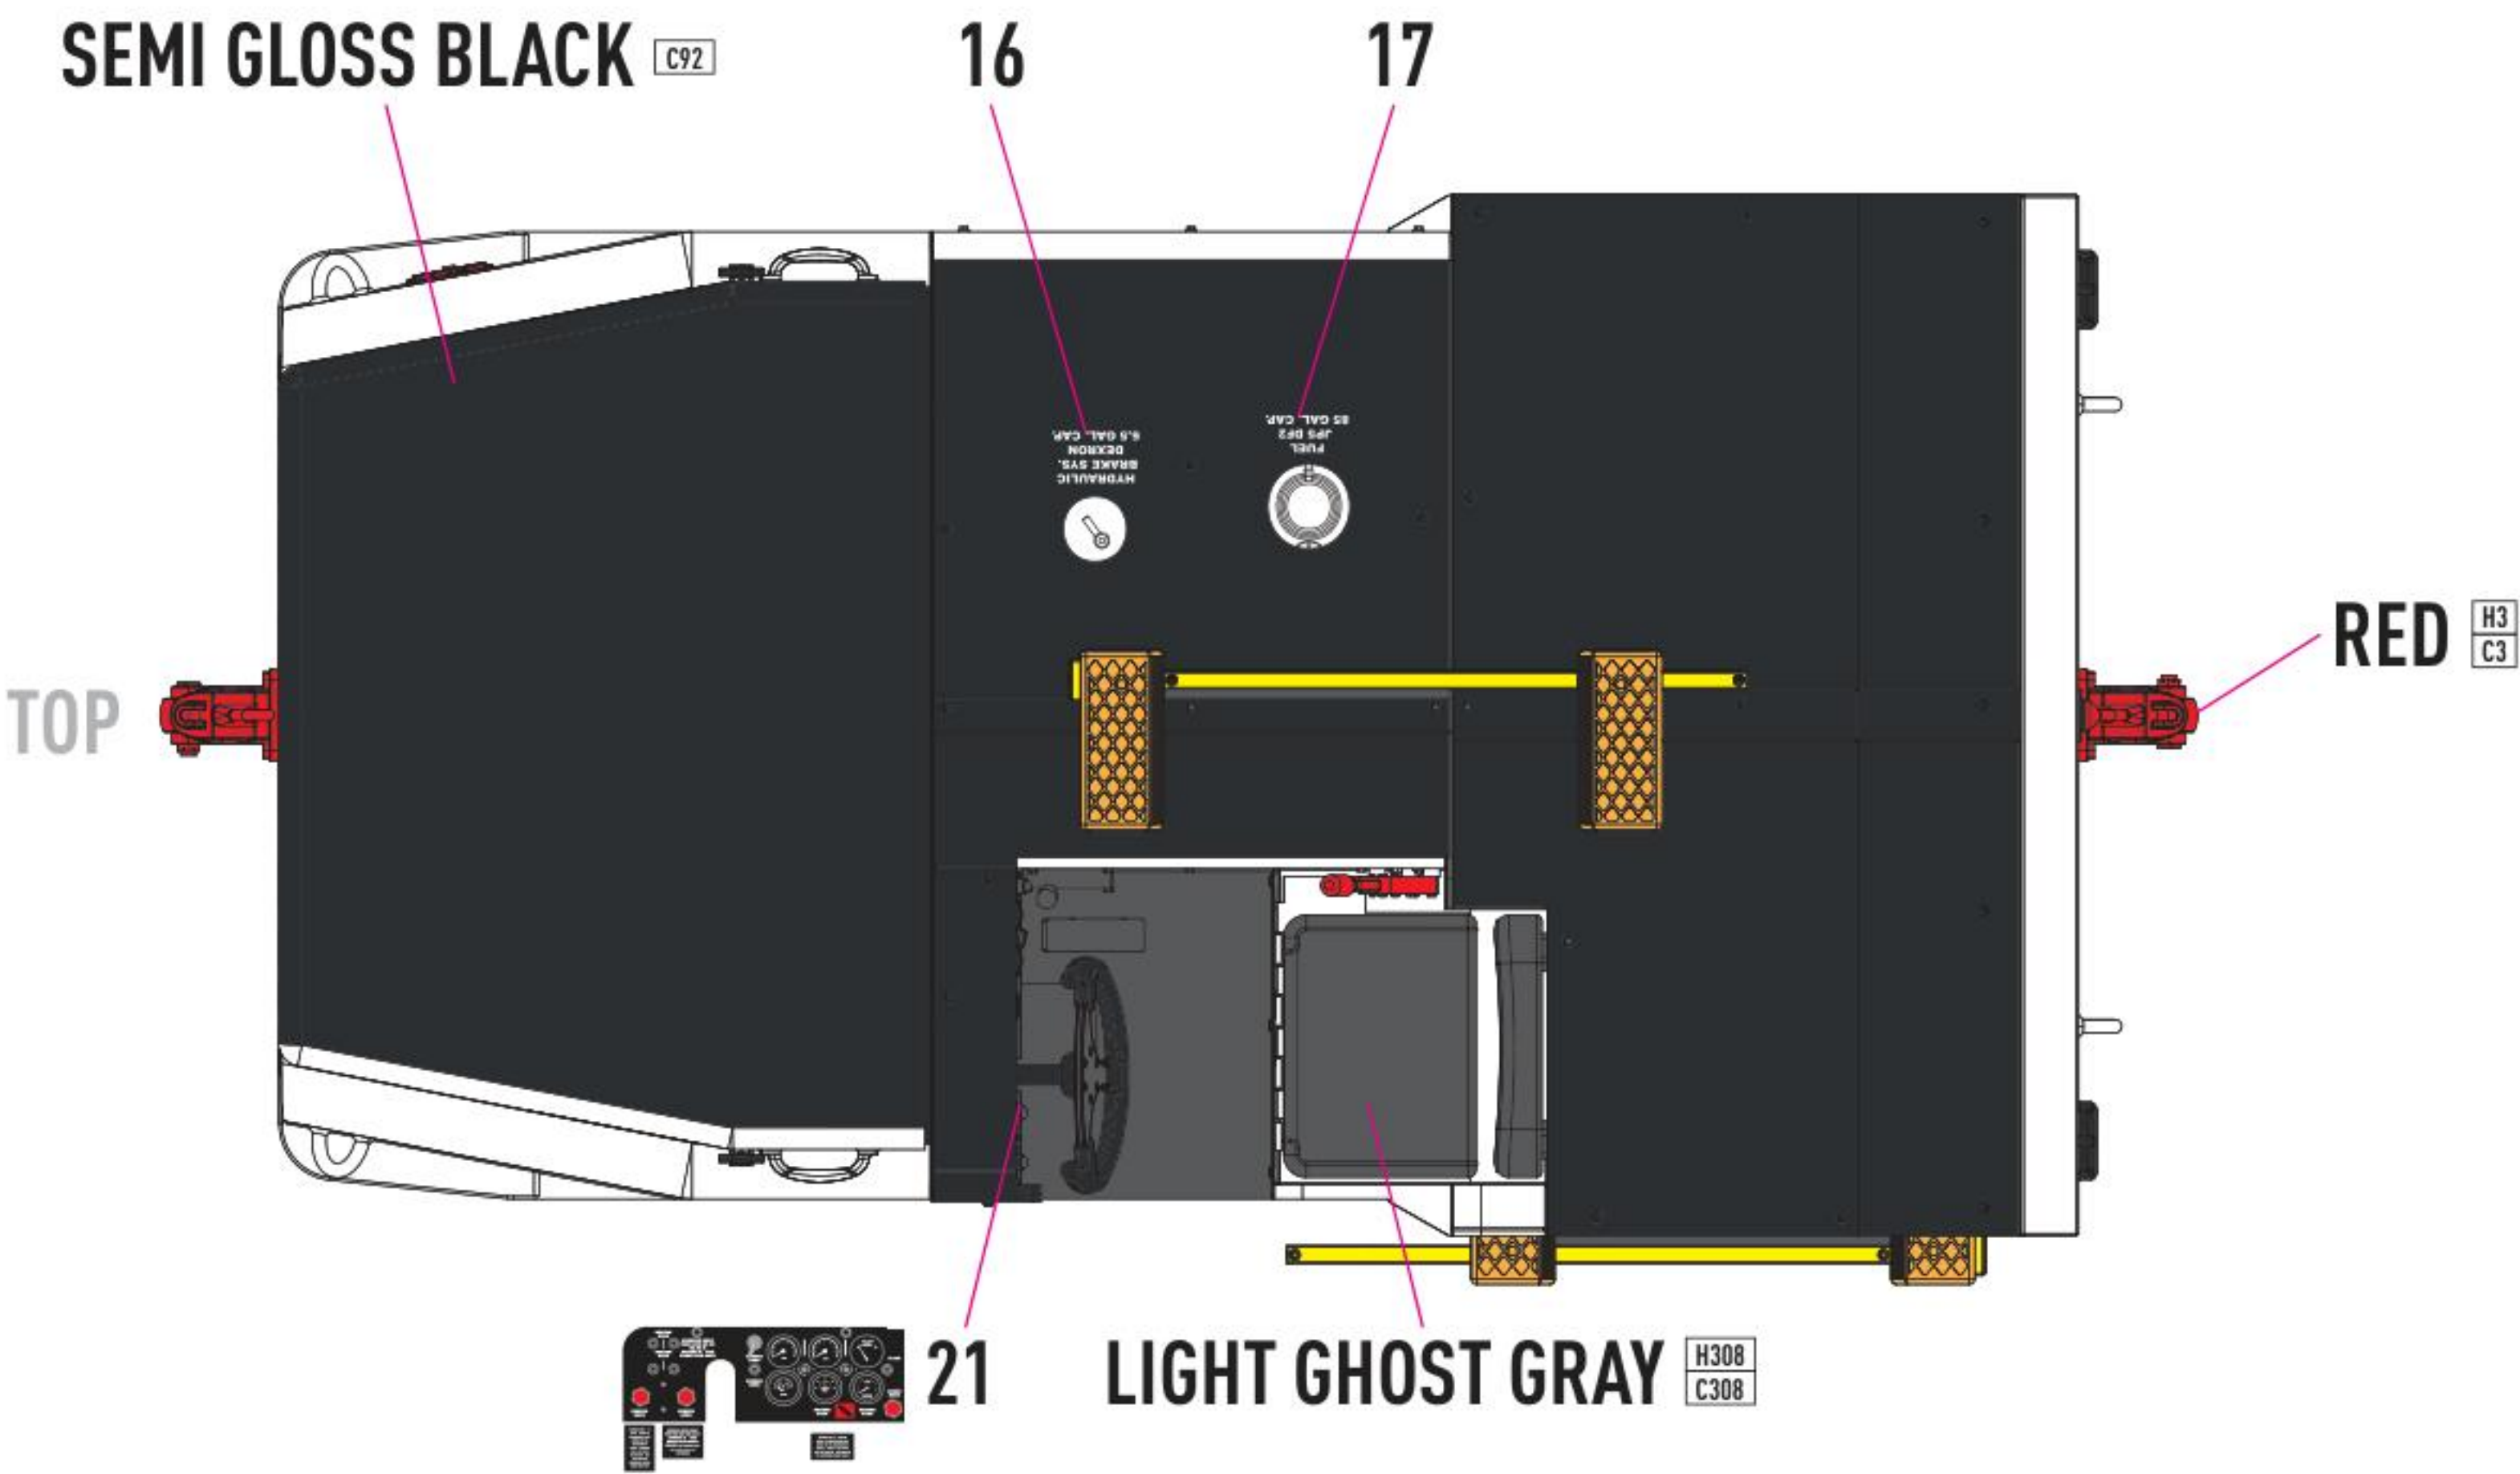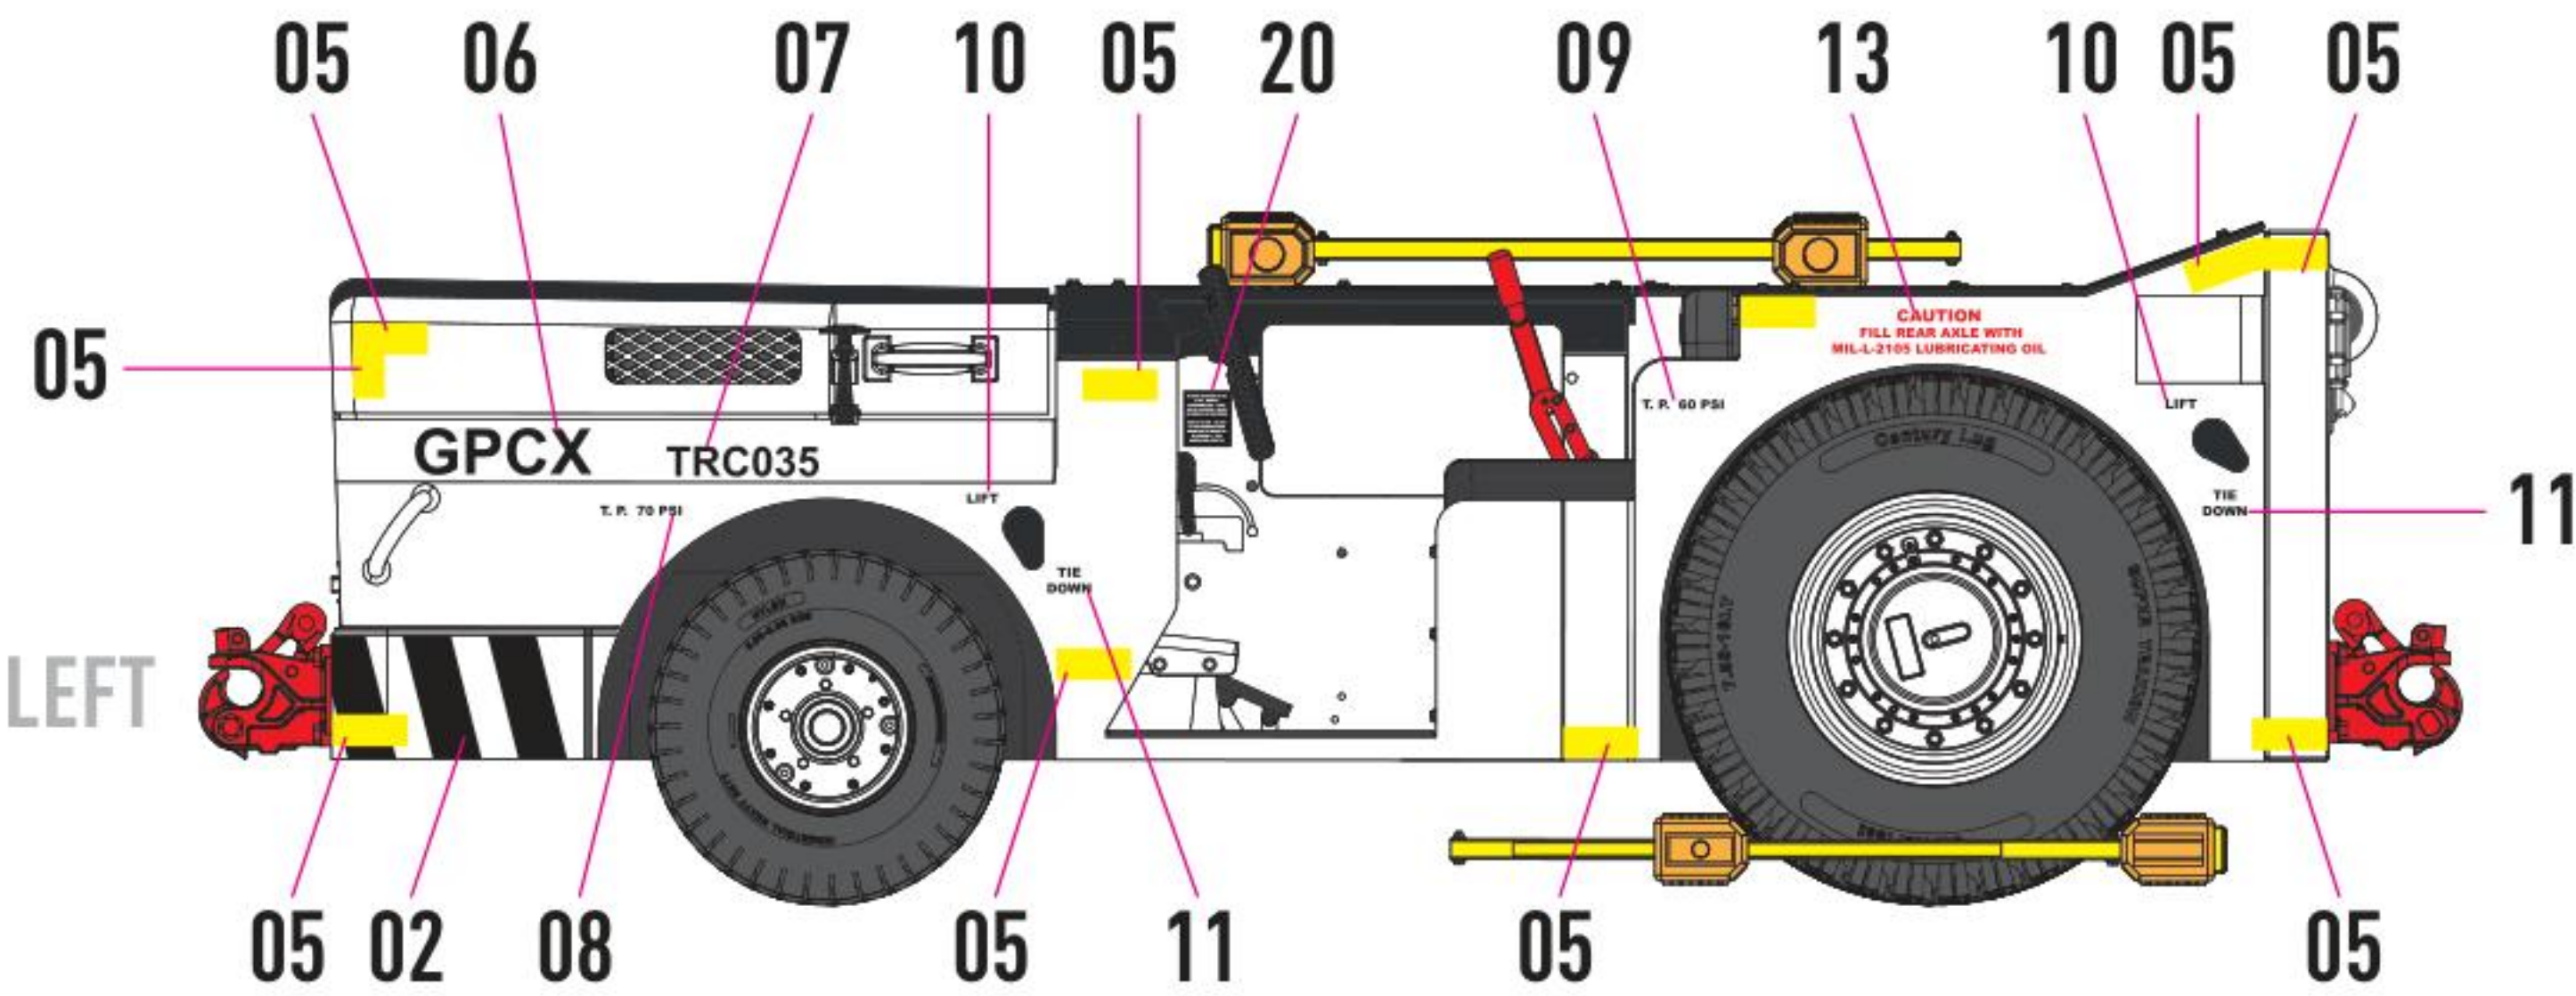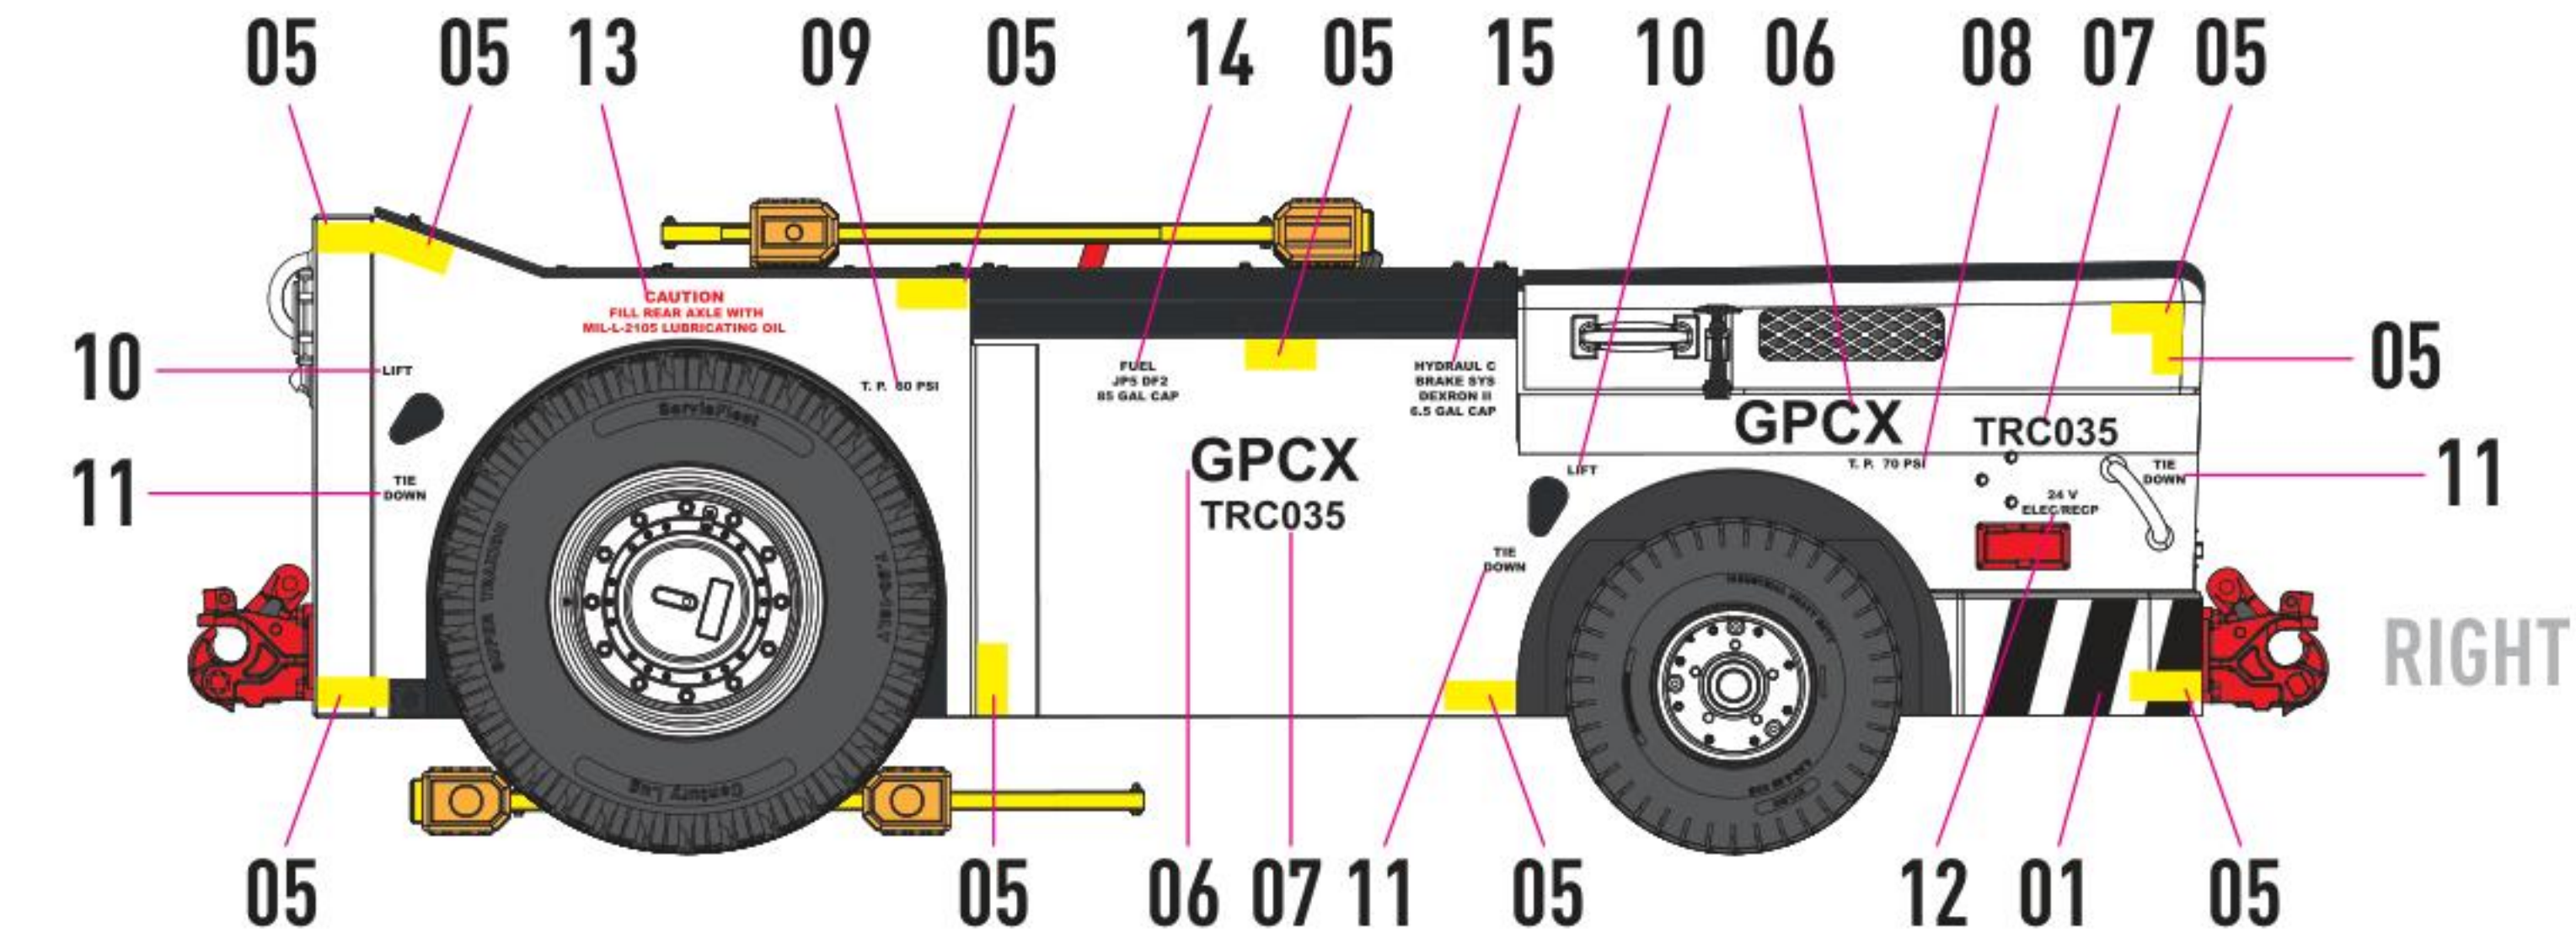

DECAL INSTRUCTION
V2

USS JOHN C. STENNIS (CVN-74), SOUTH CHINA SEA (SEPT. 6, 2004)

