



DETAILS AFTER REMOVAL
FROM SUPPORTS

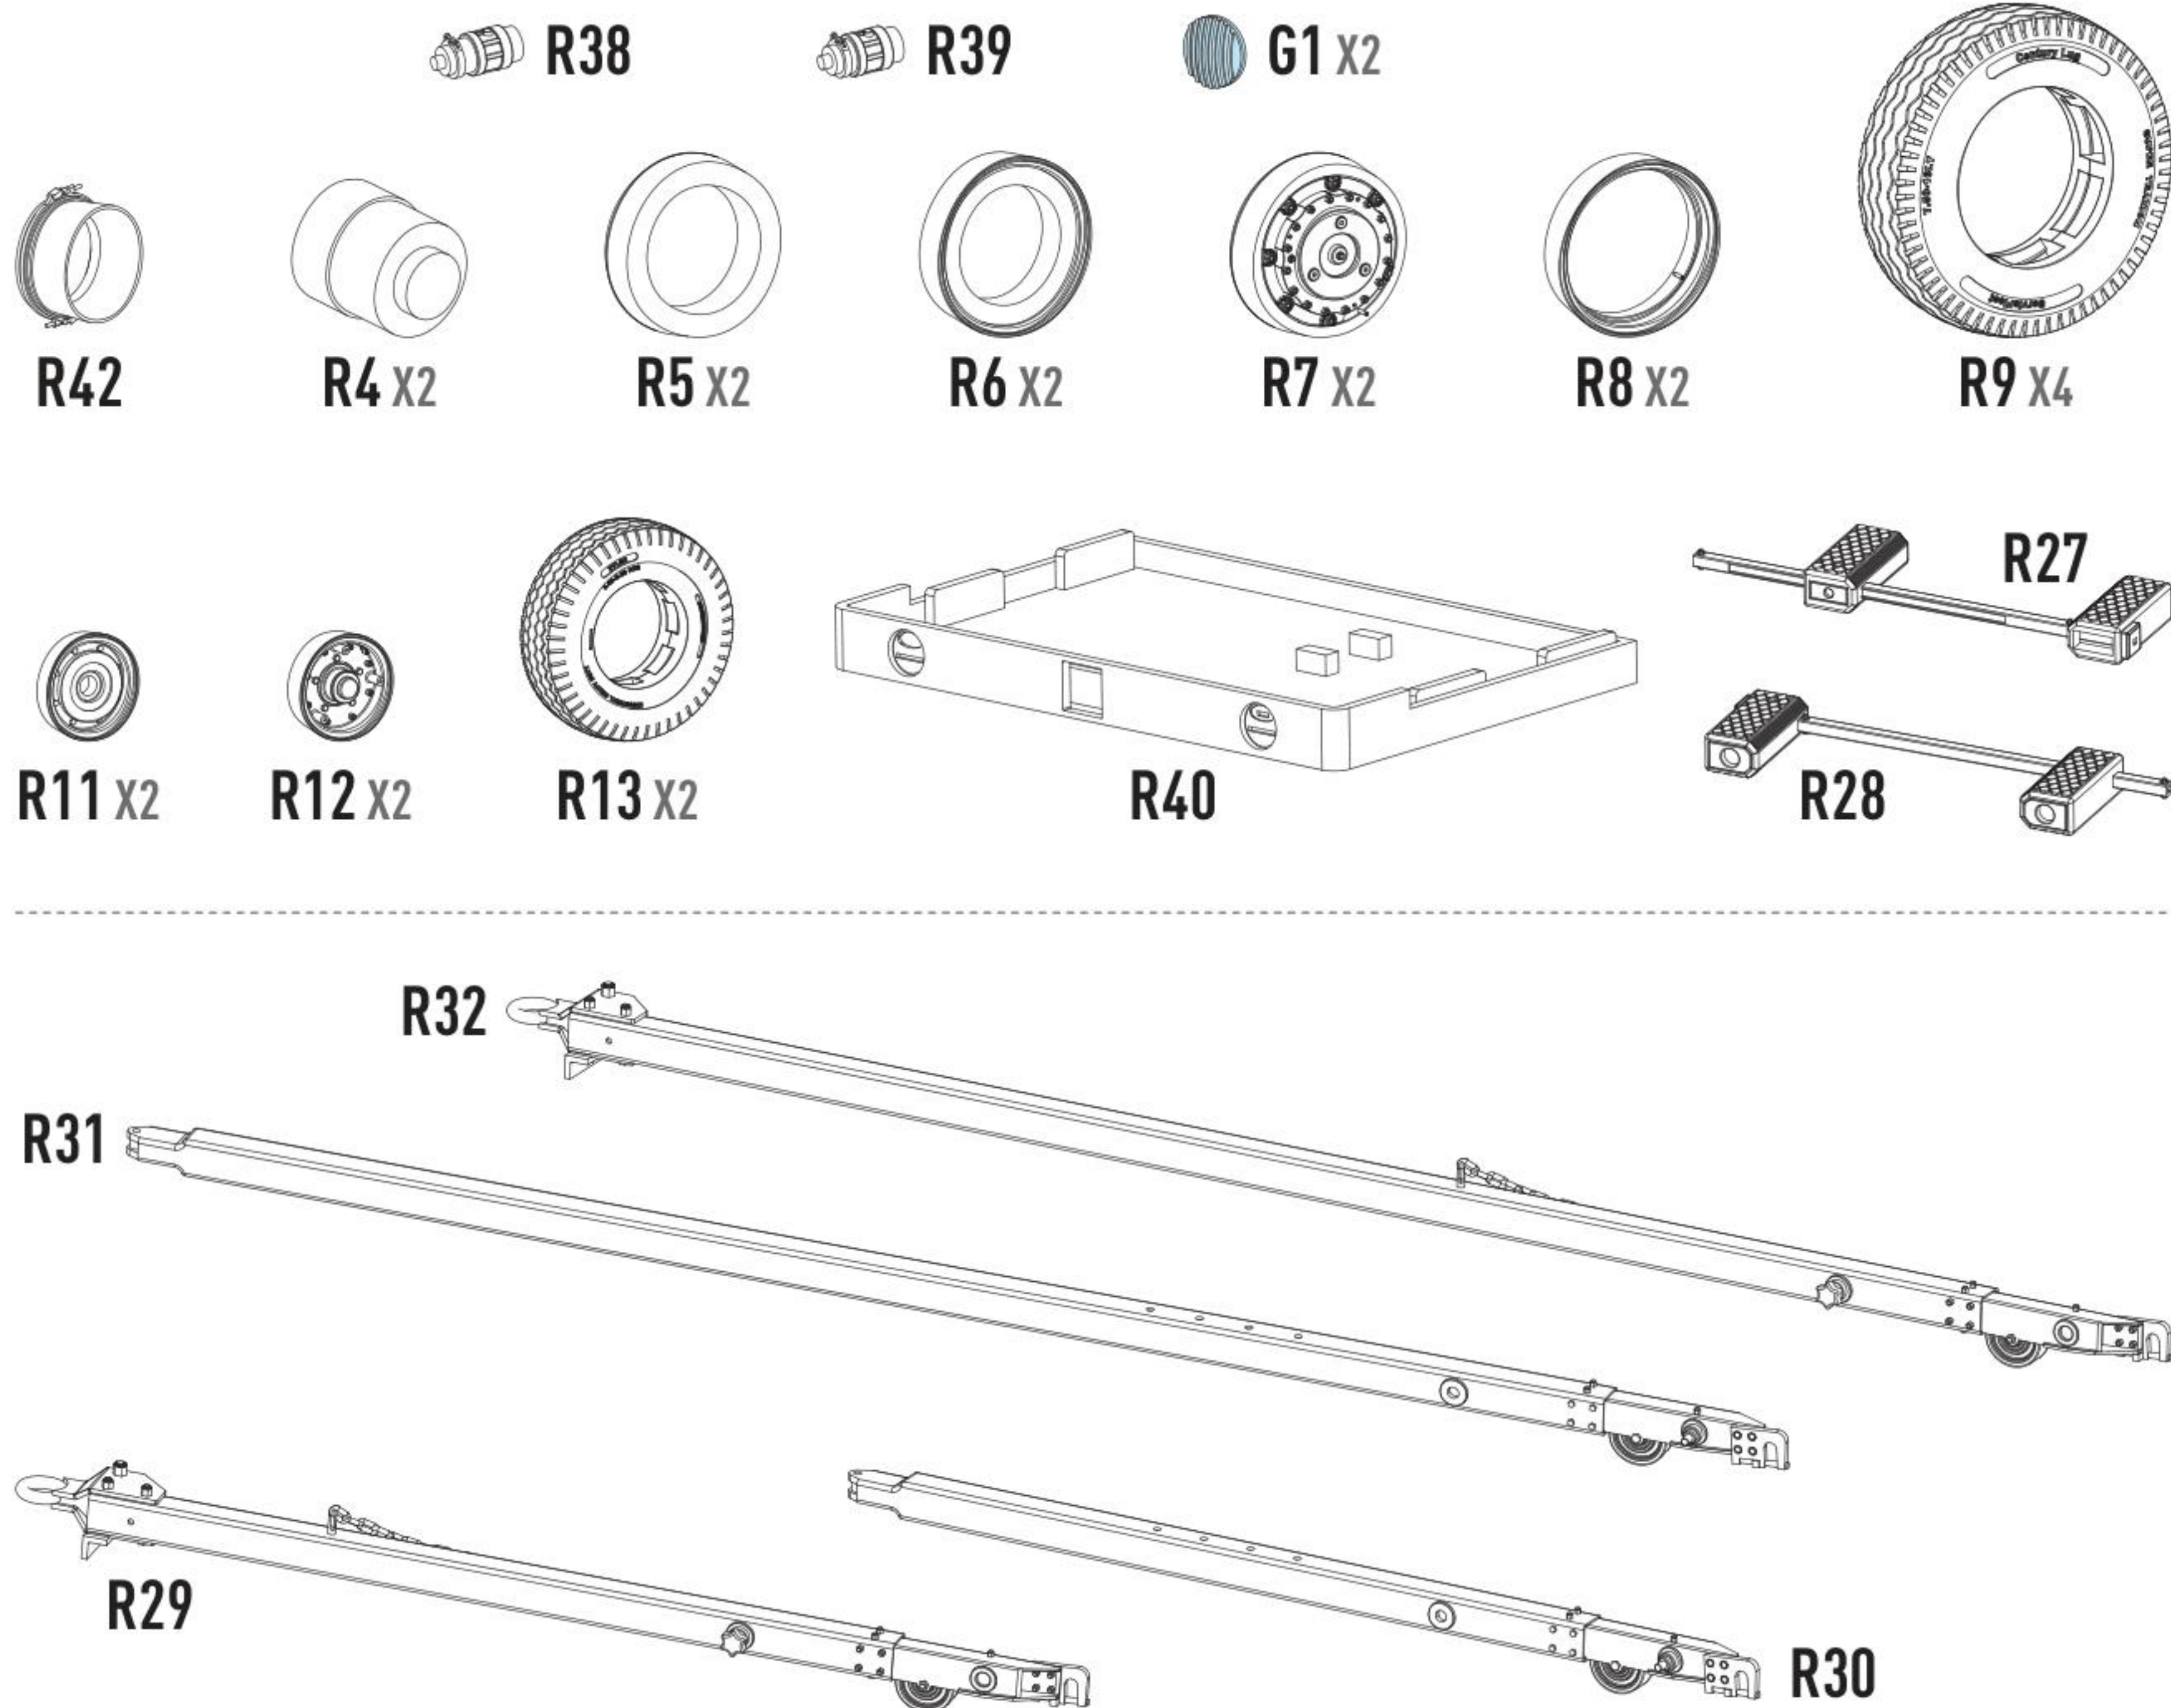


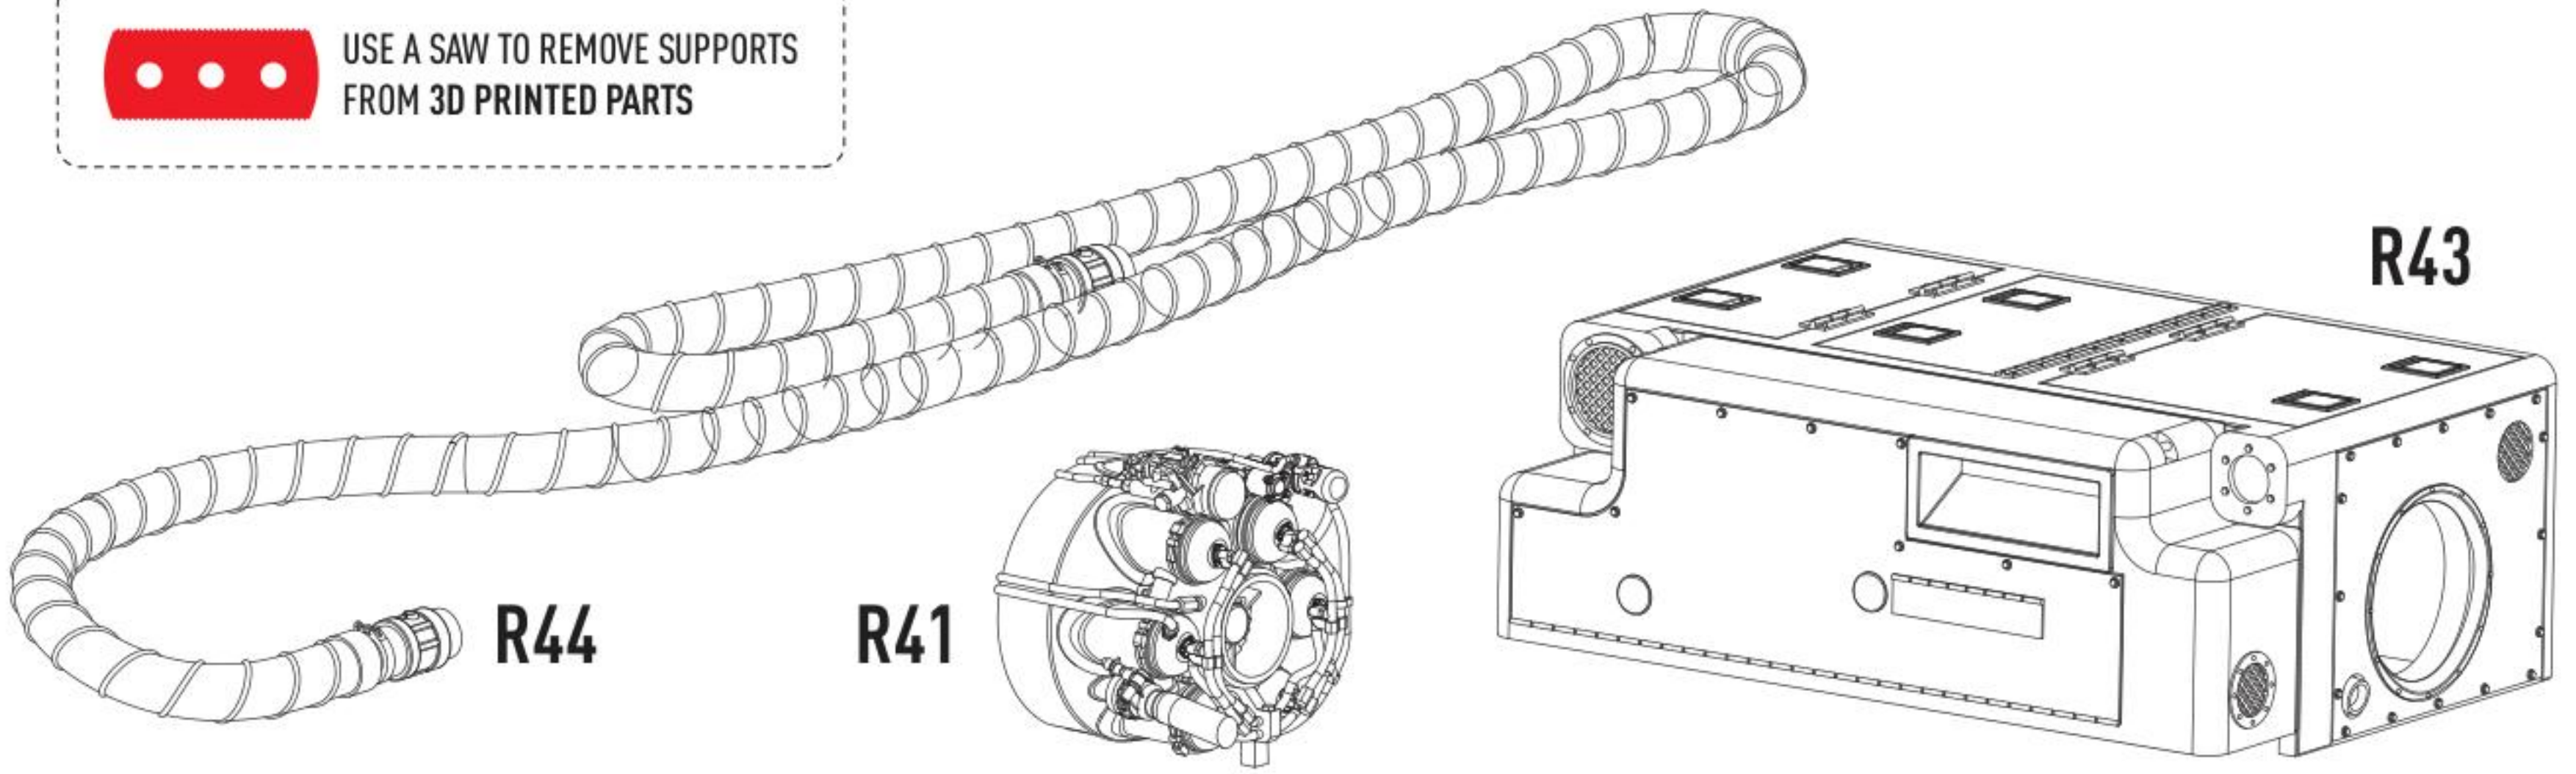

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




1

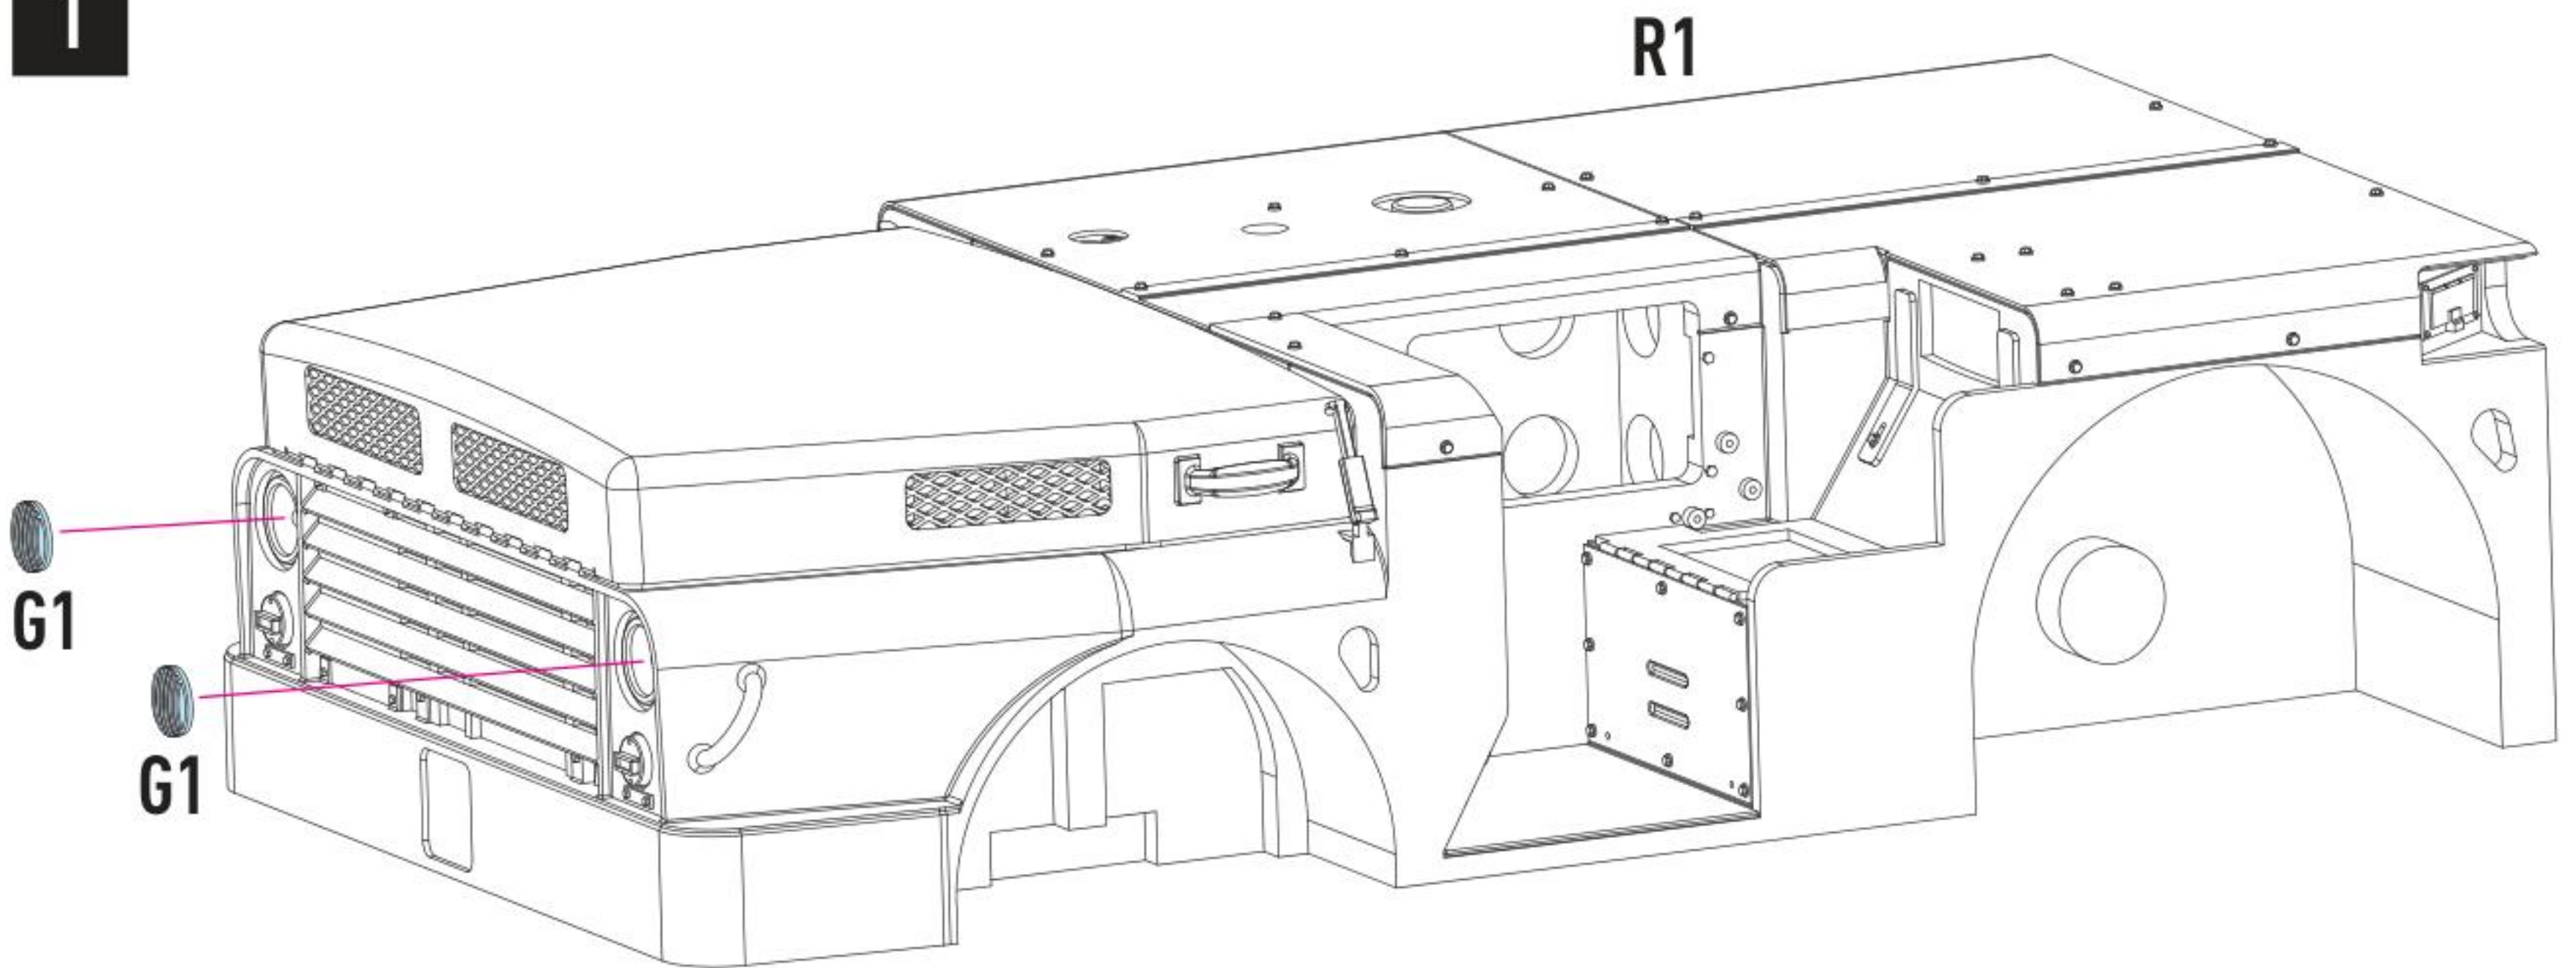


BEFORE ASSEMBLY, COVER TRANSPARENT PARTS WITH GLOSSY VARNISH


2

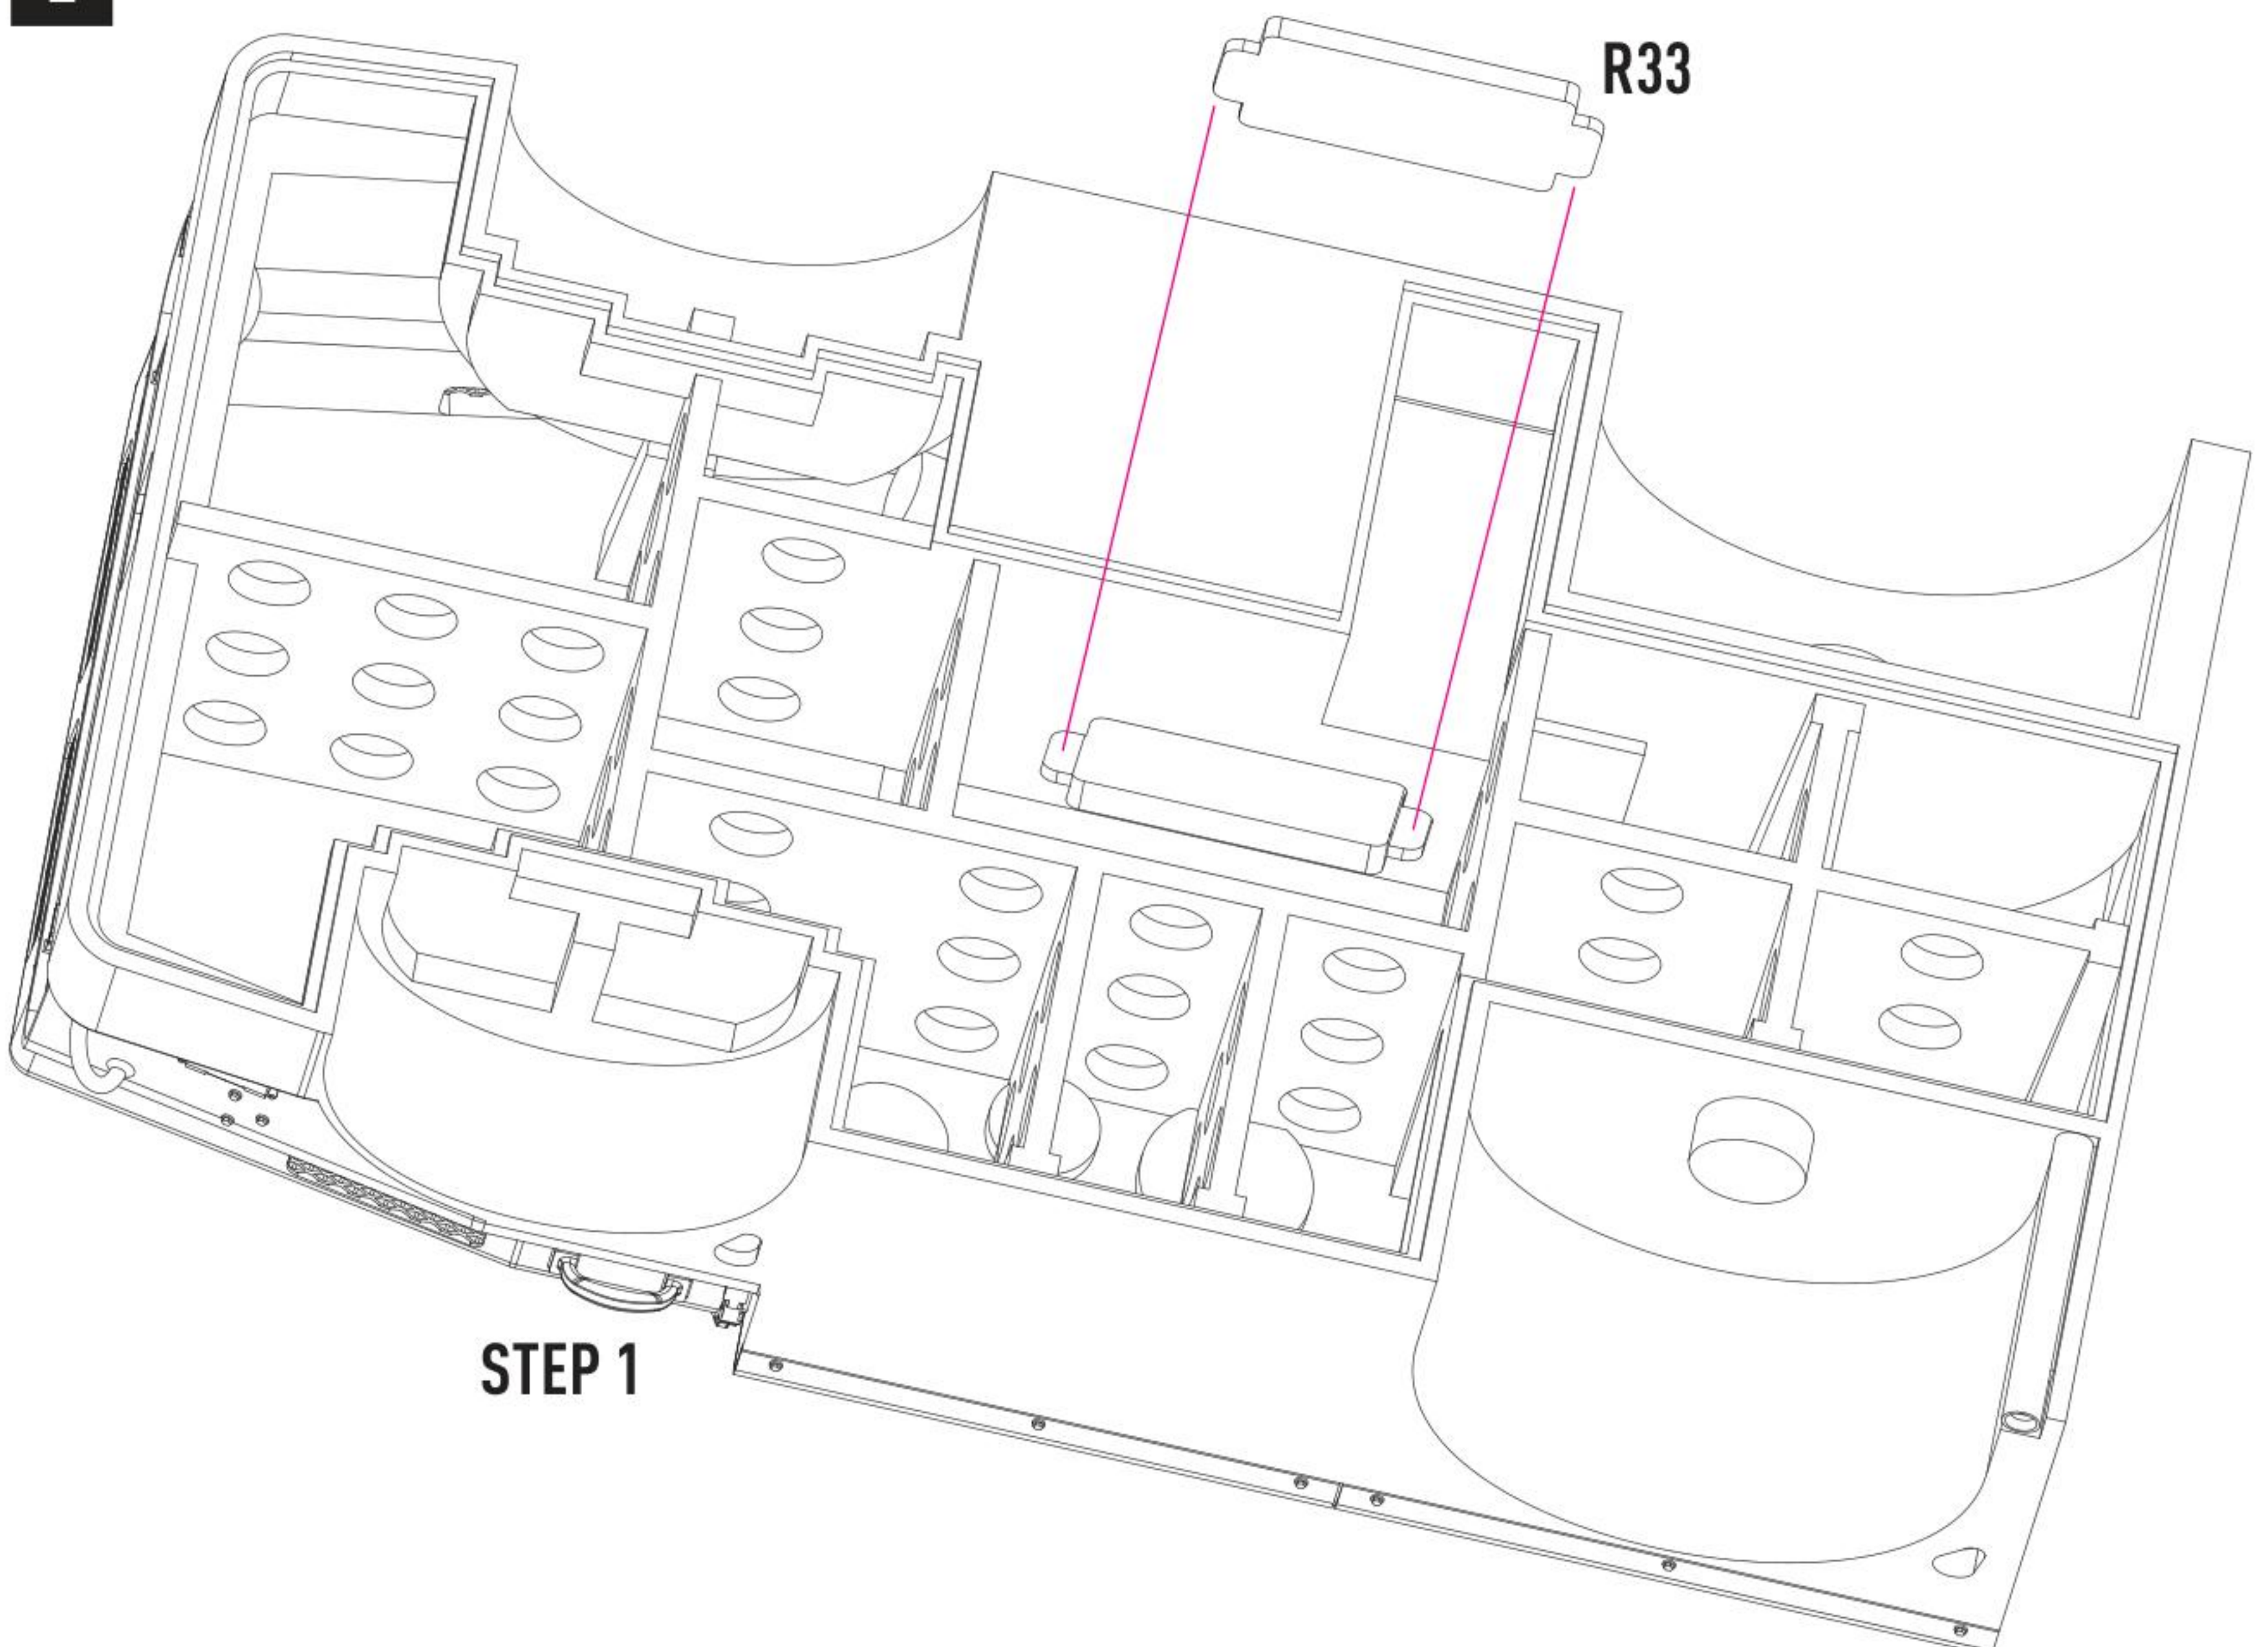


3

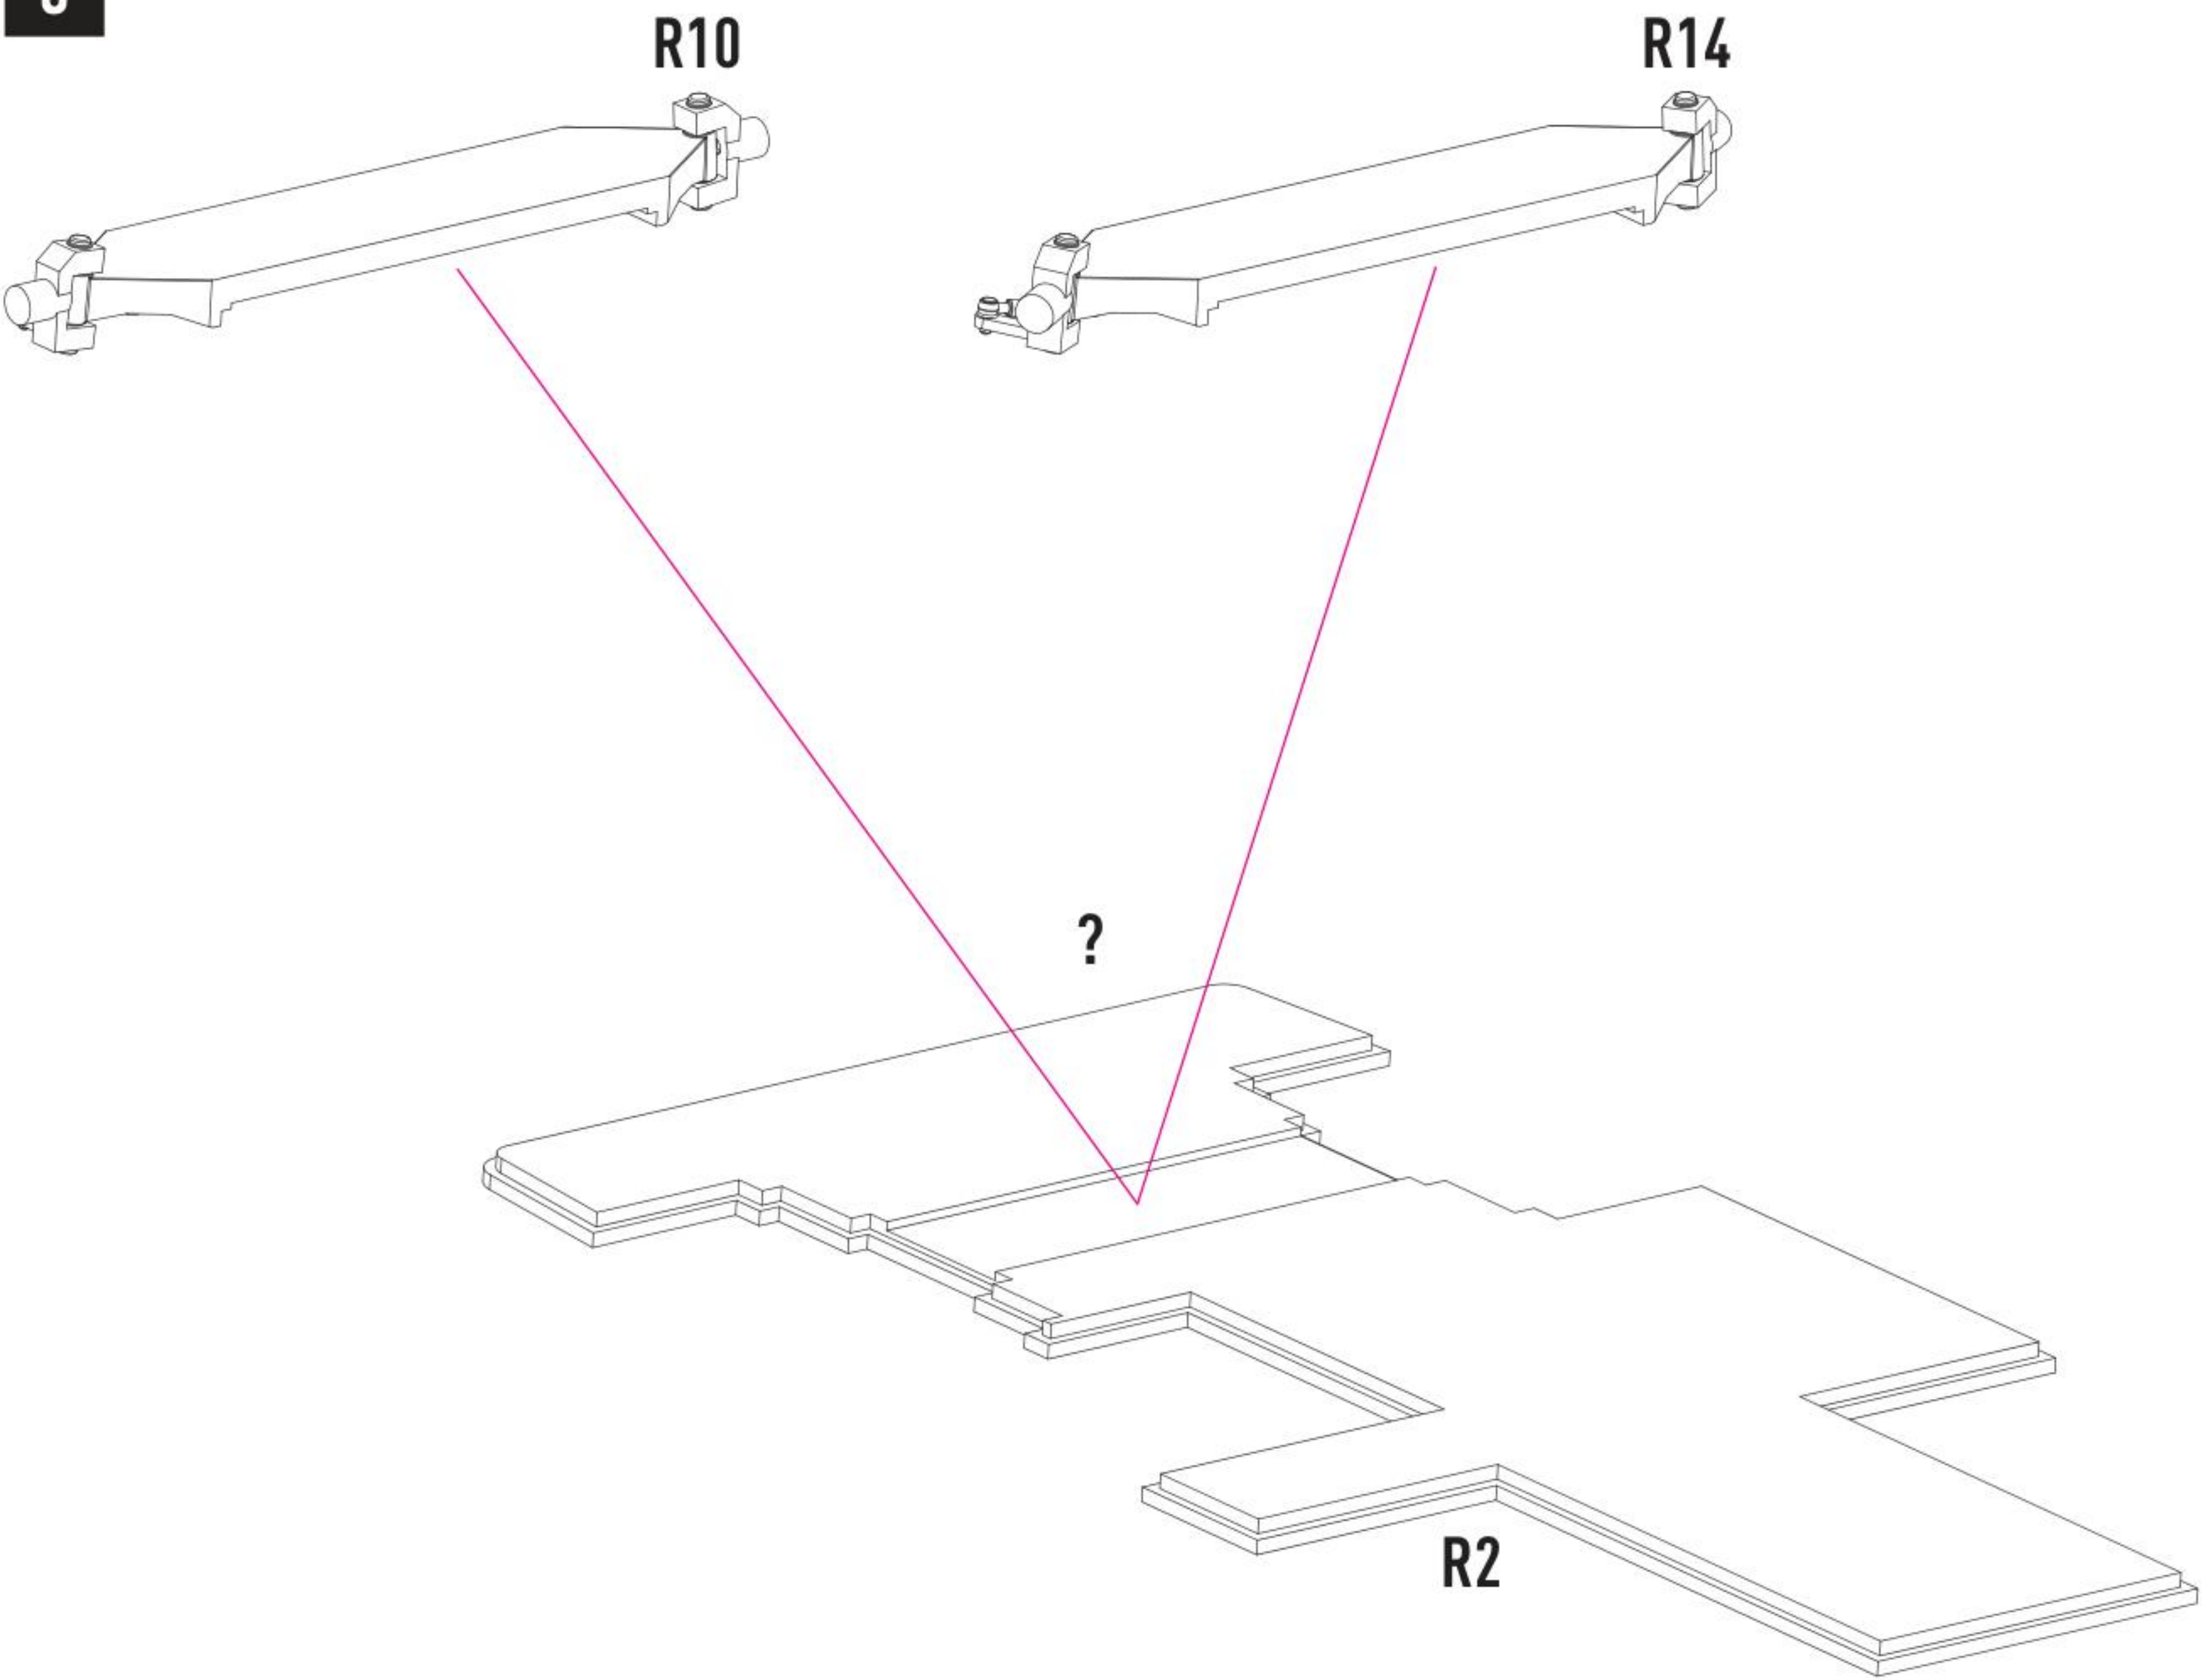


4

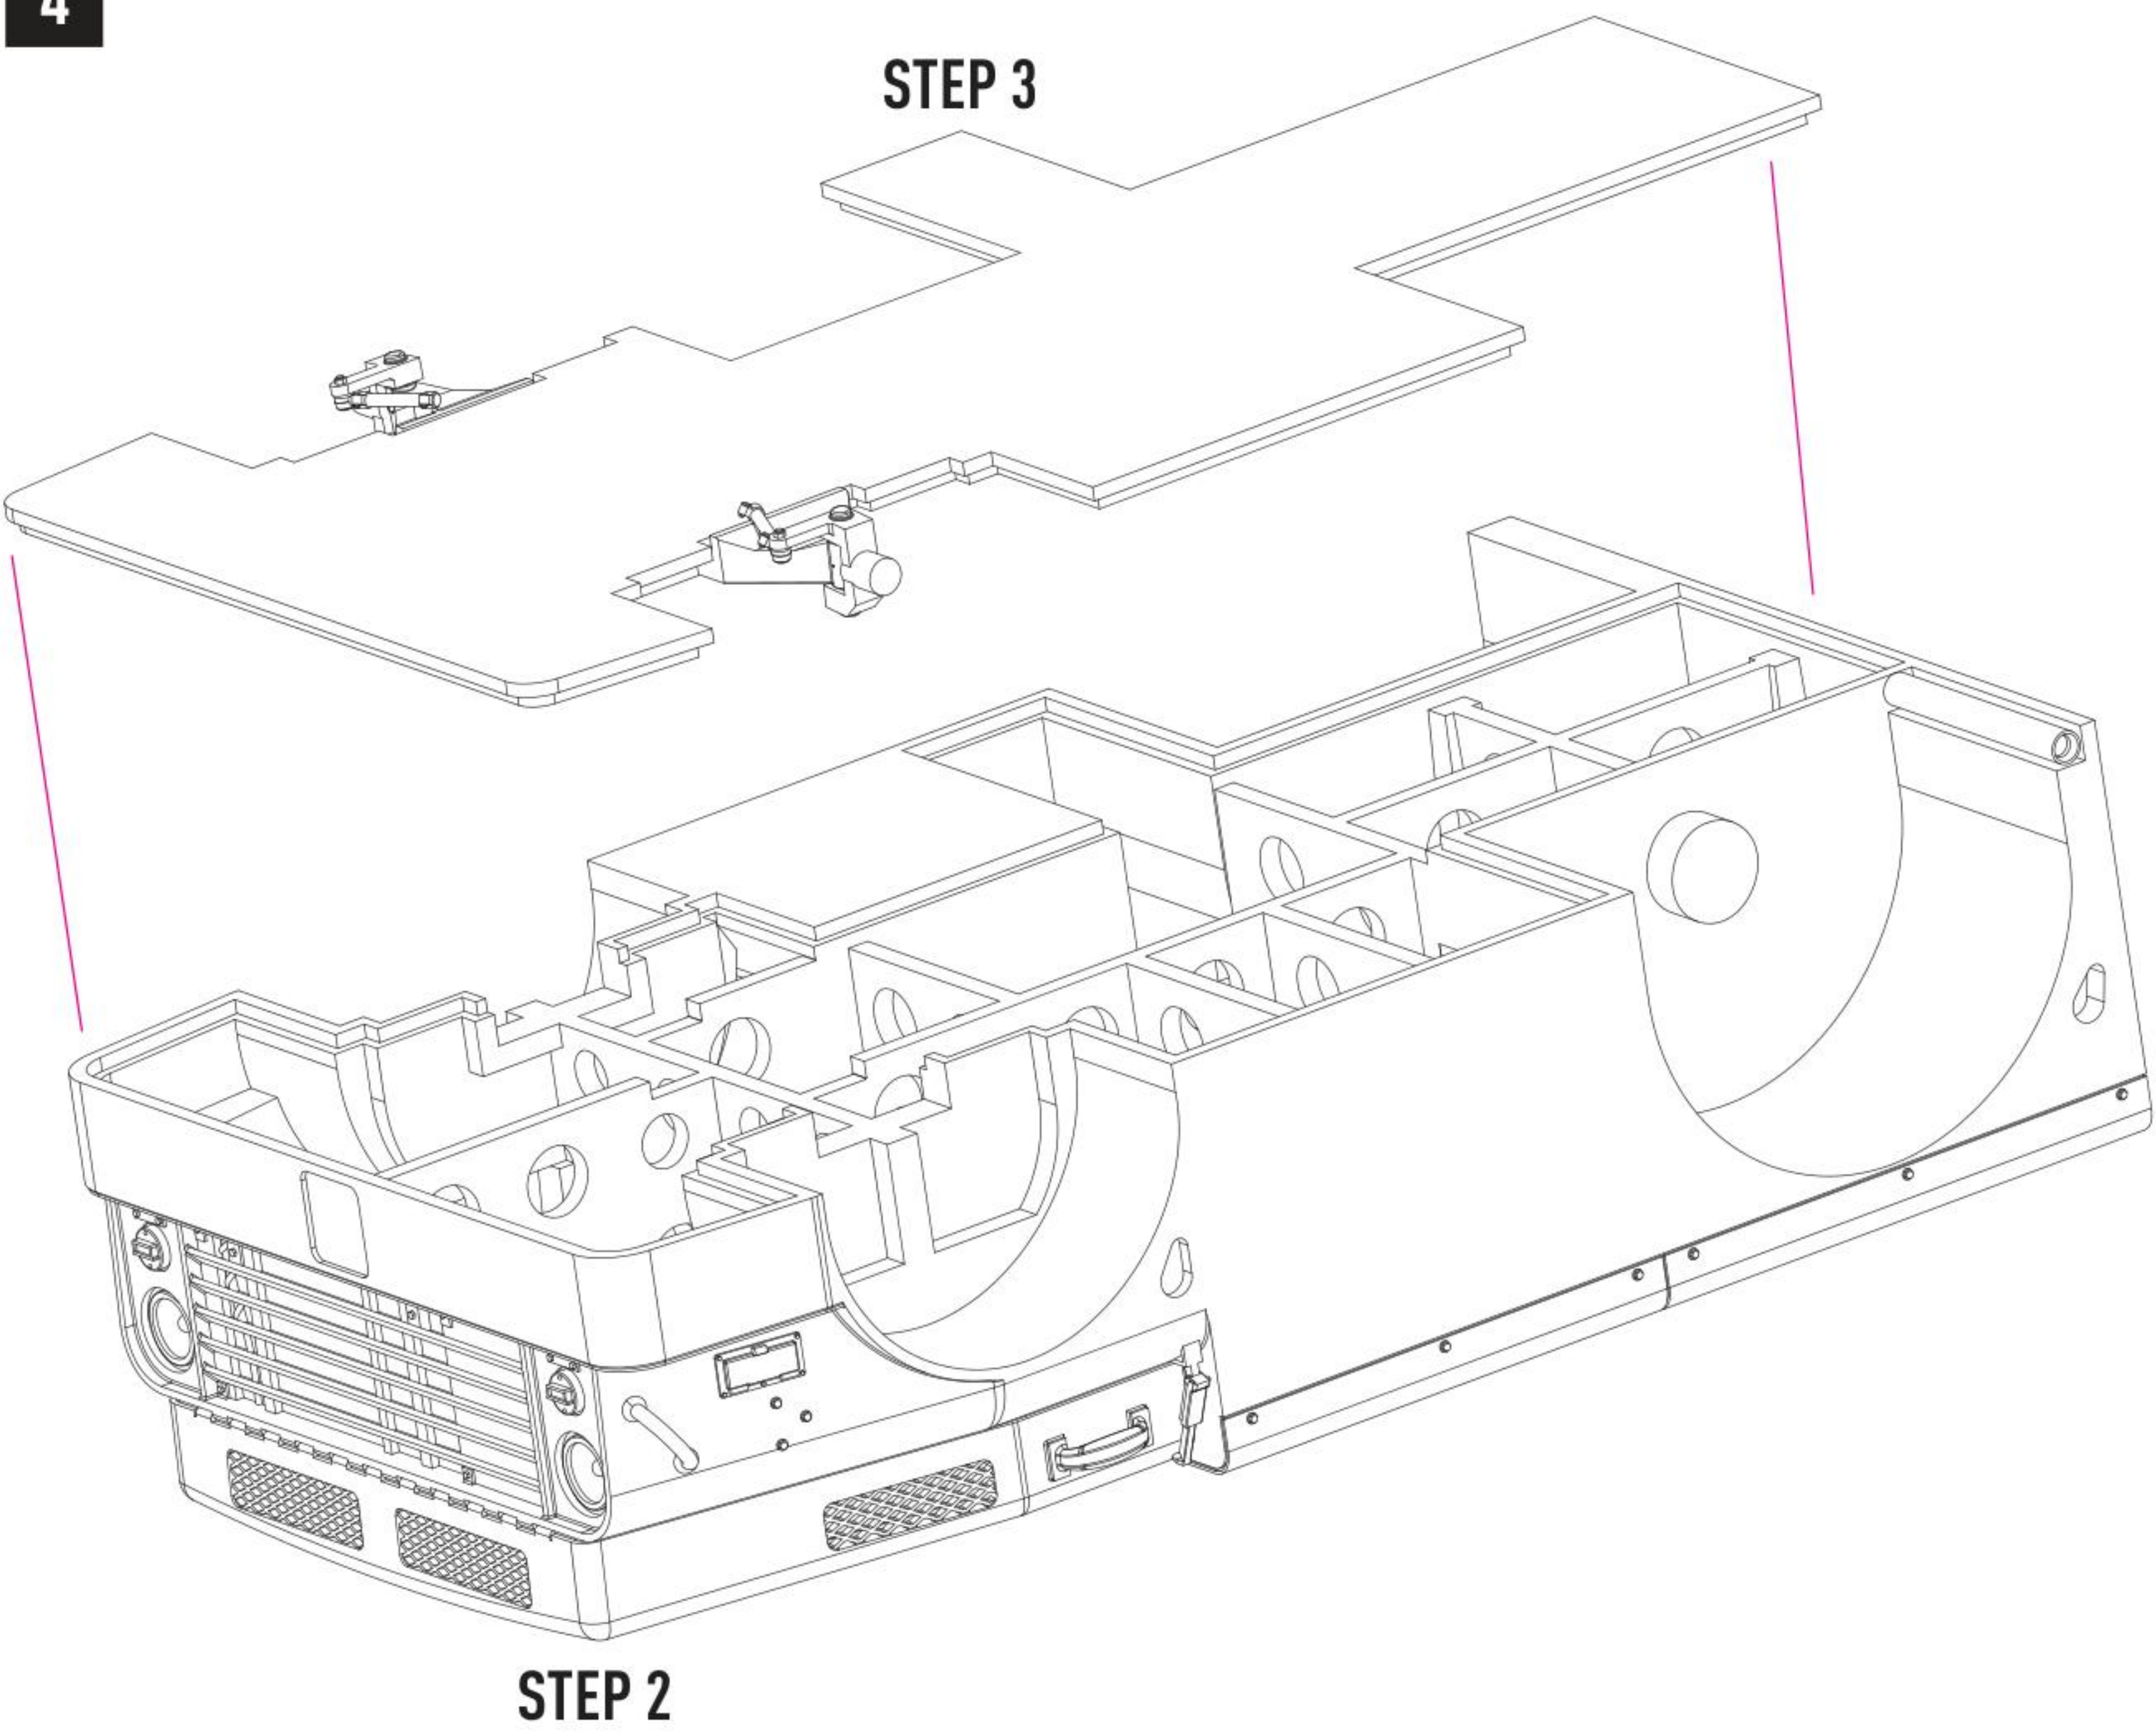


STEP 4

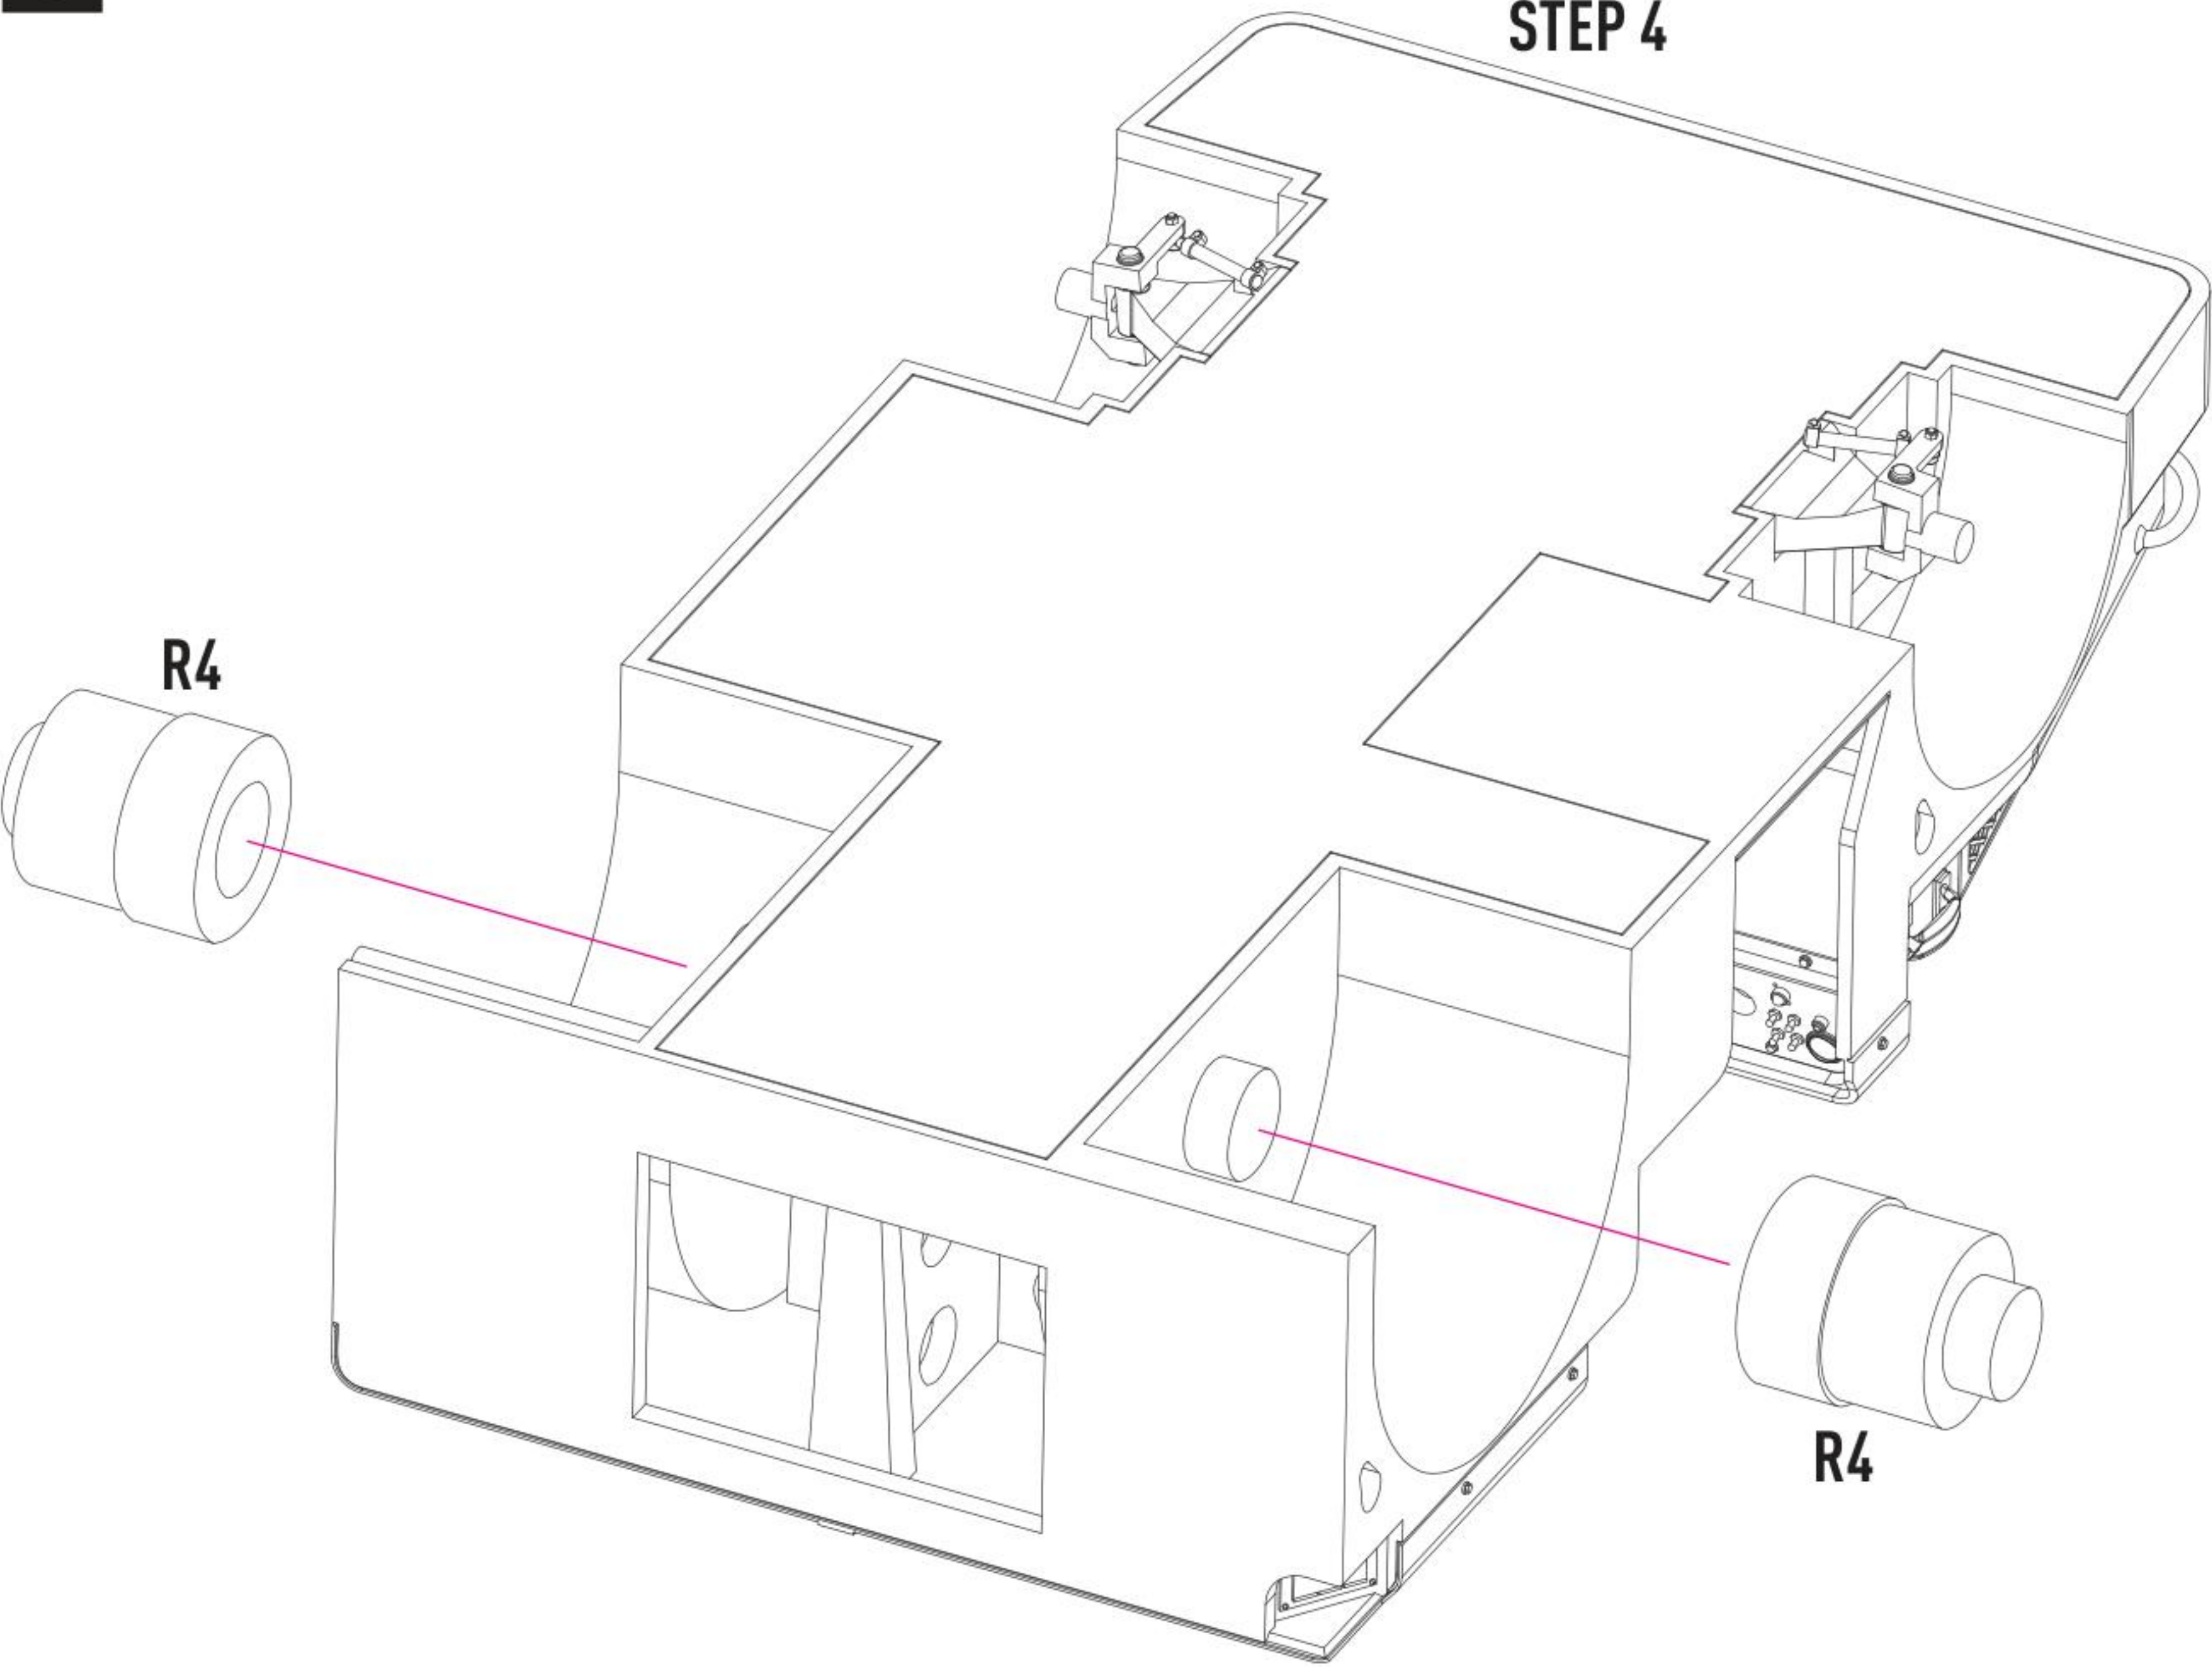


6 X2

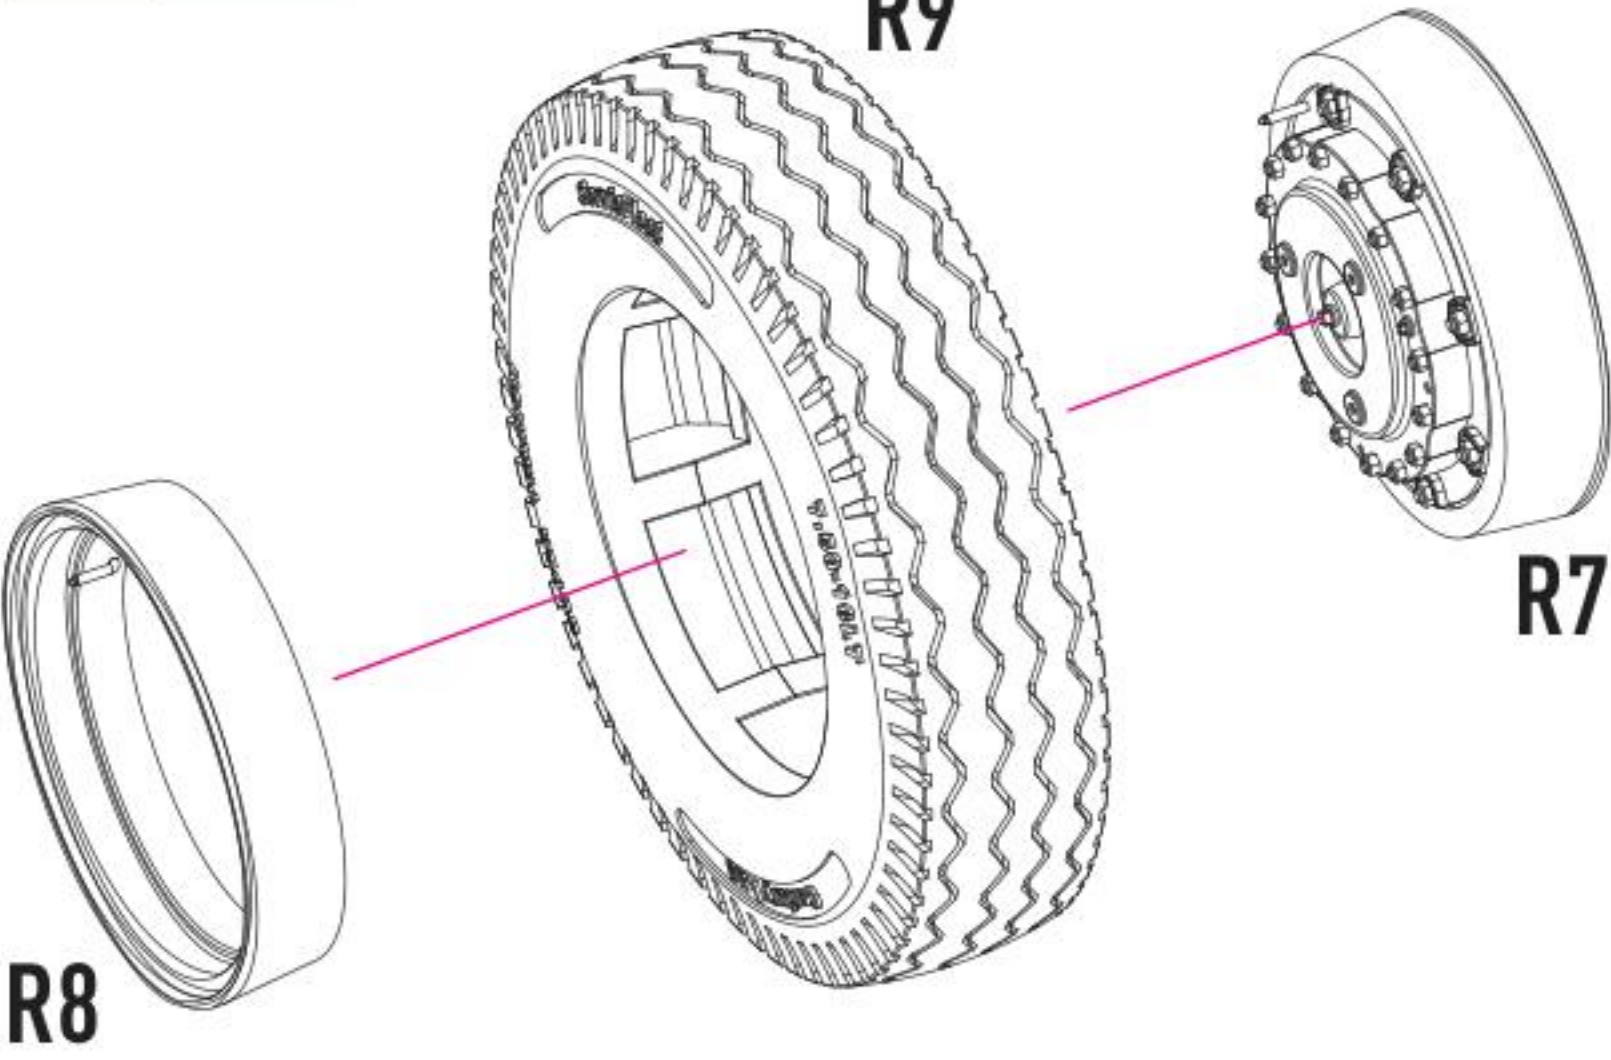


7 X2

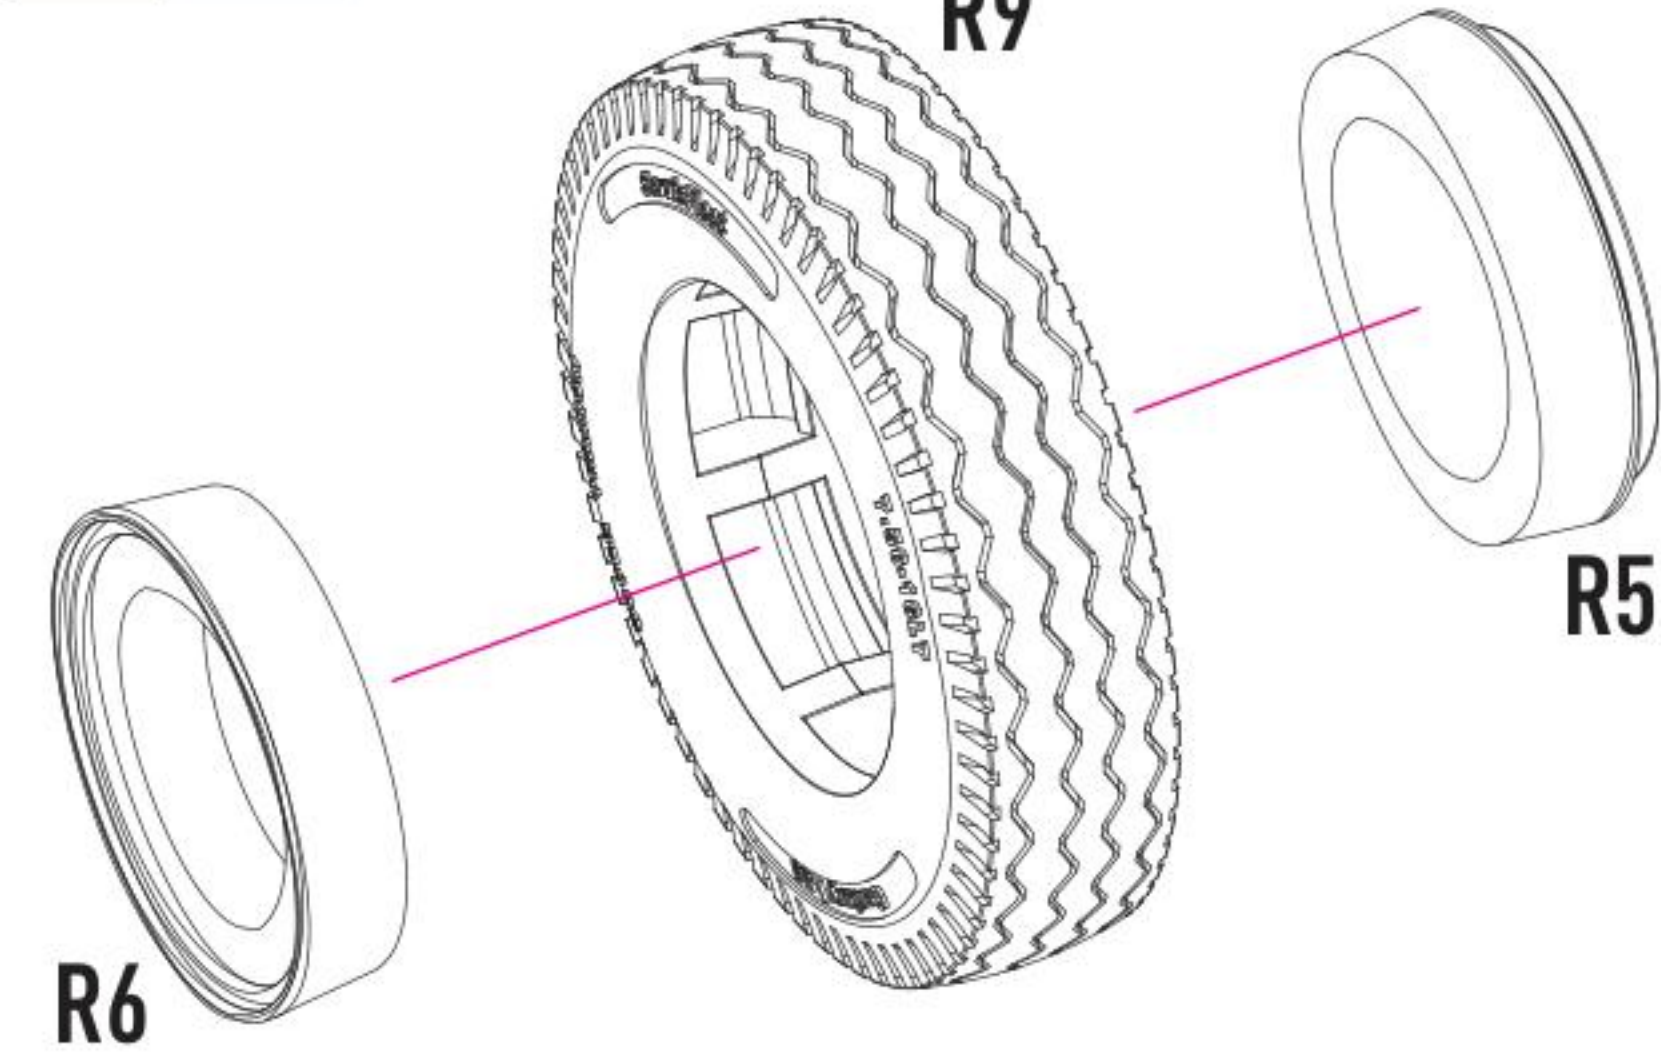


8 X2

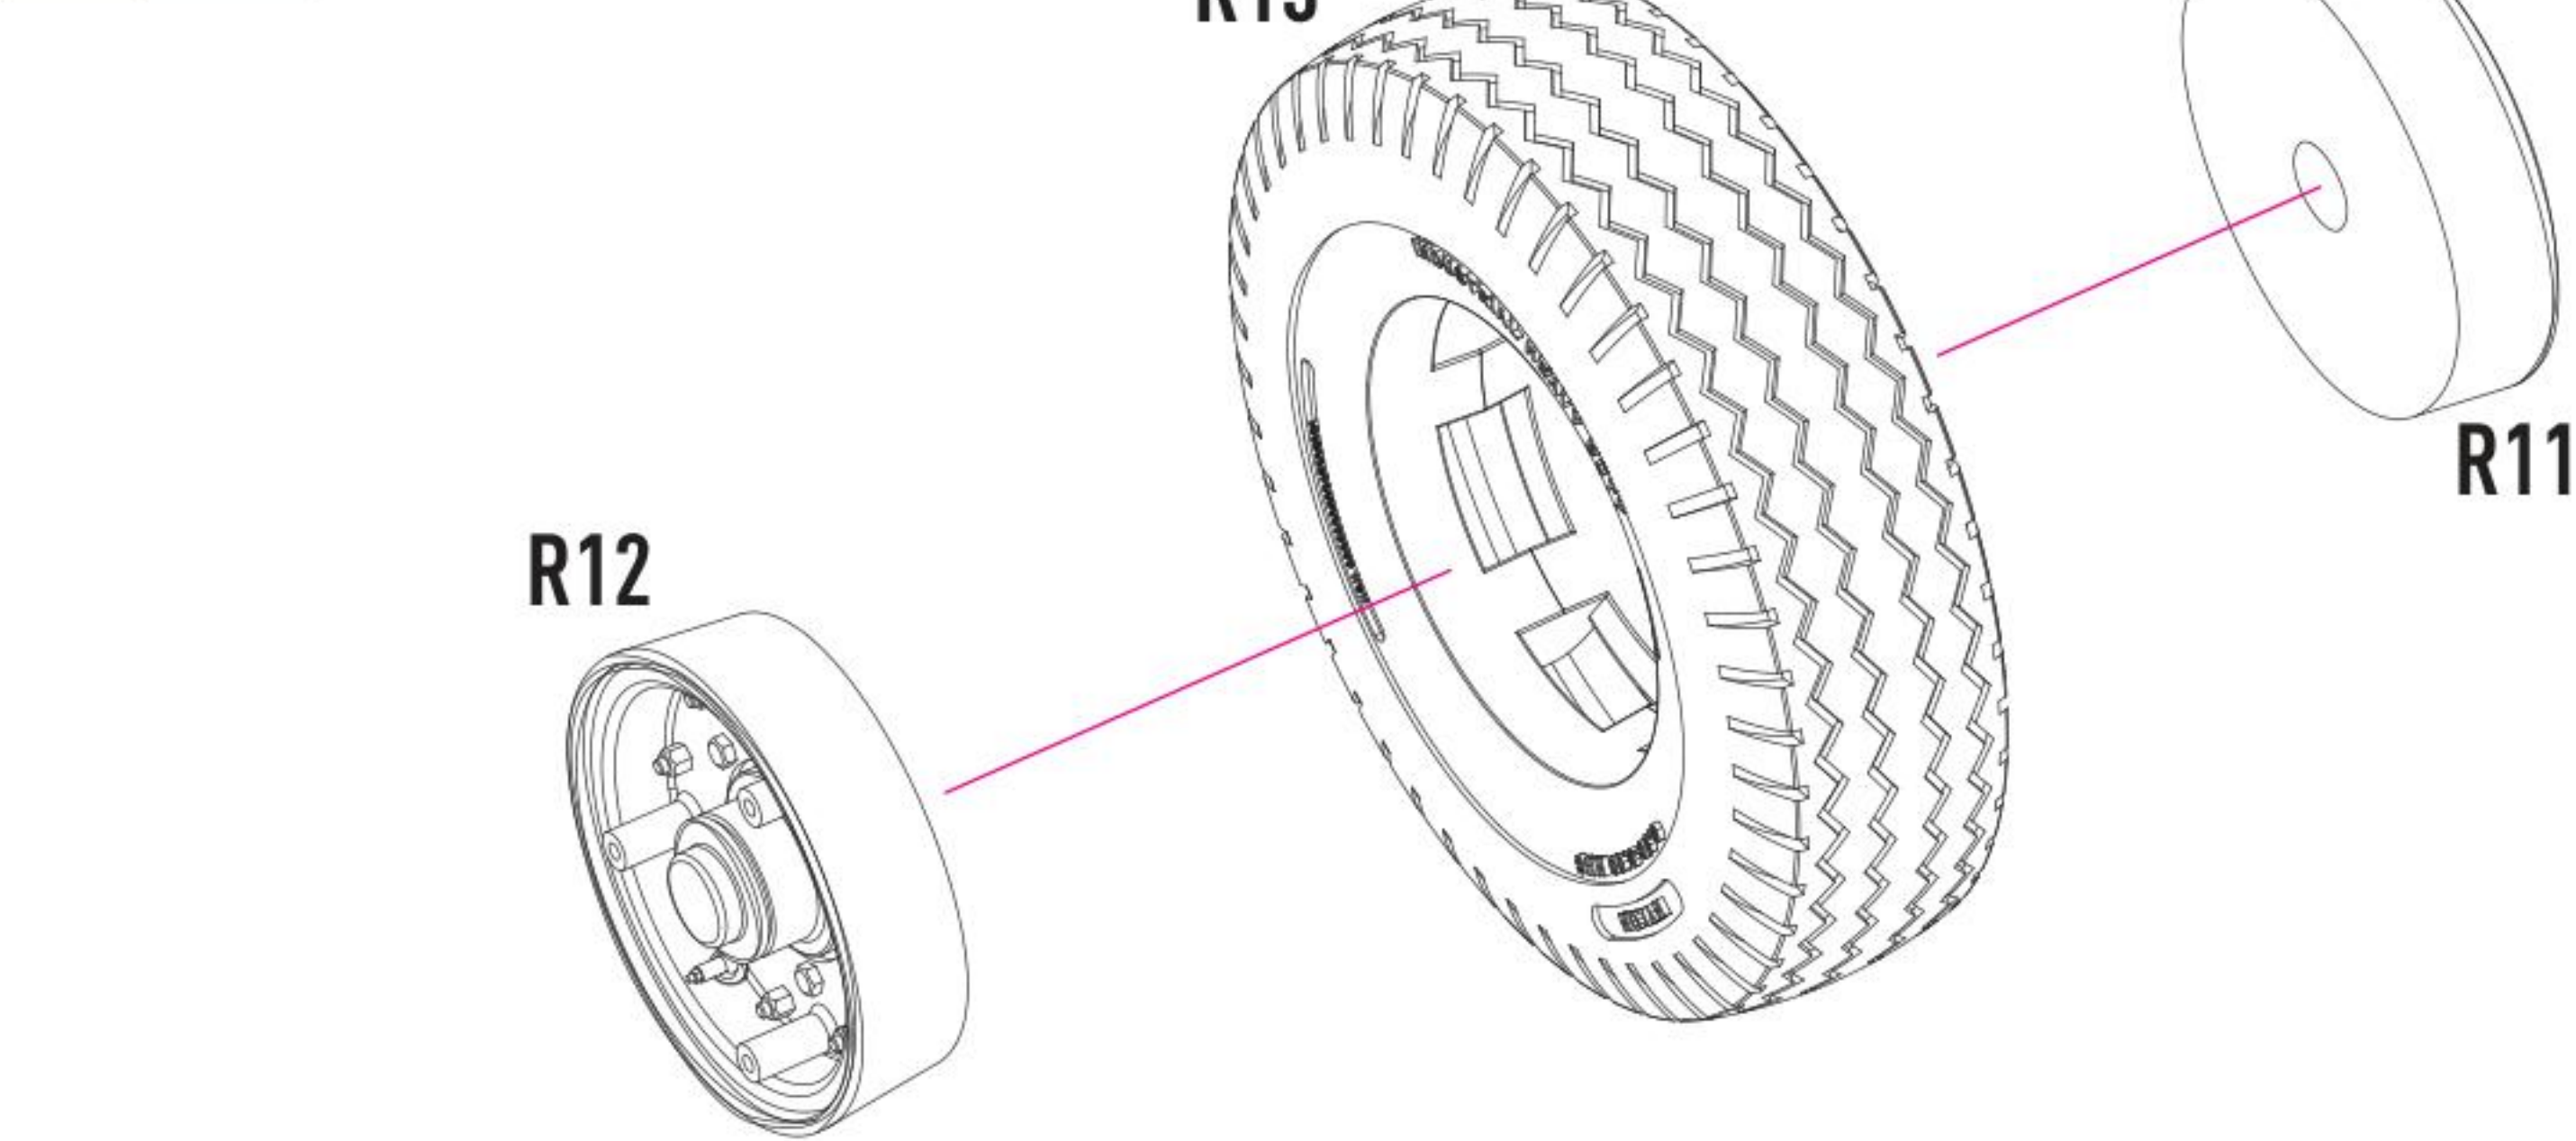




STEP 5

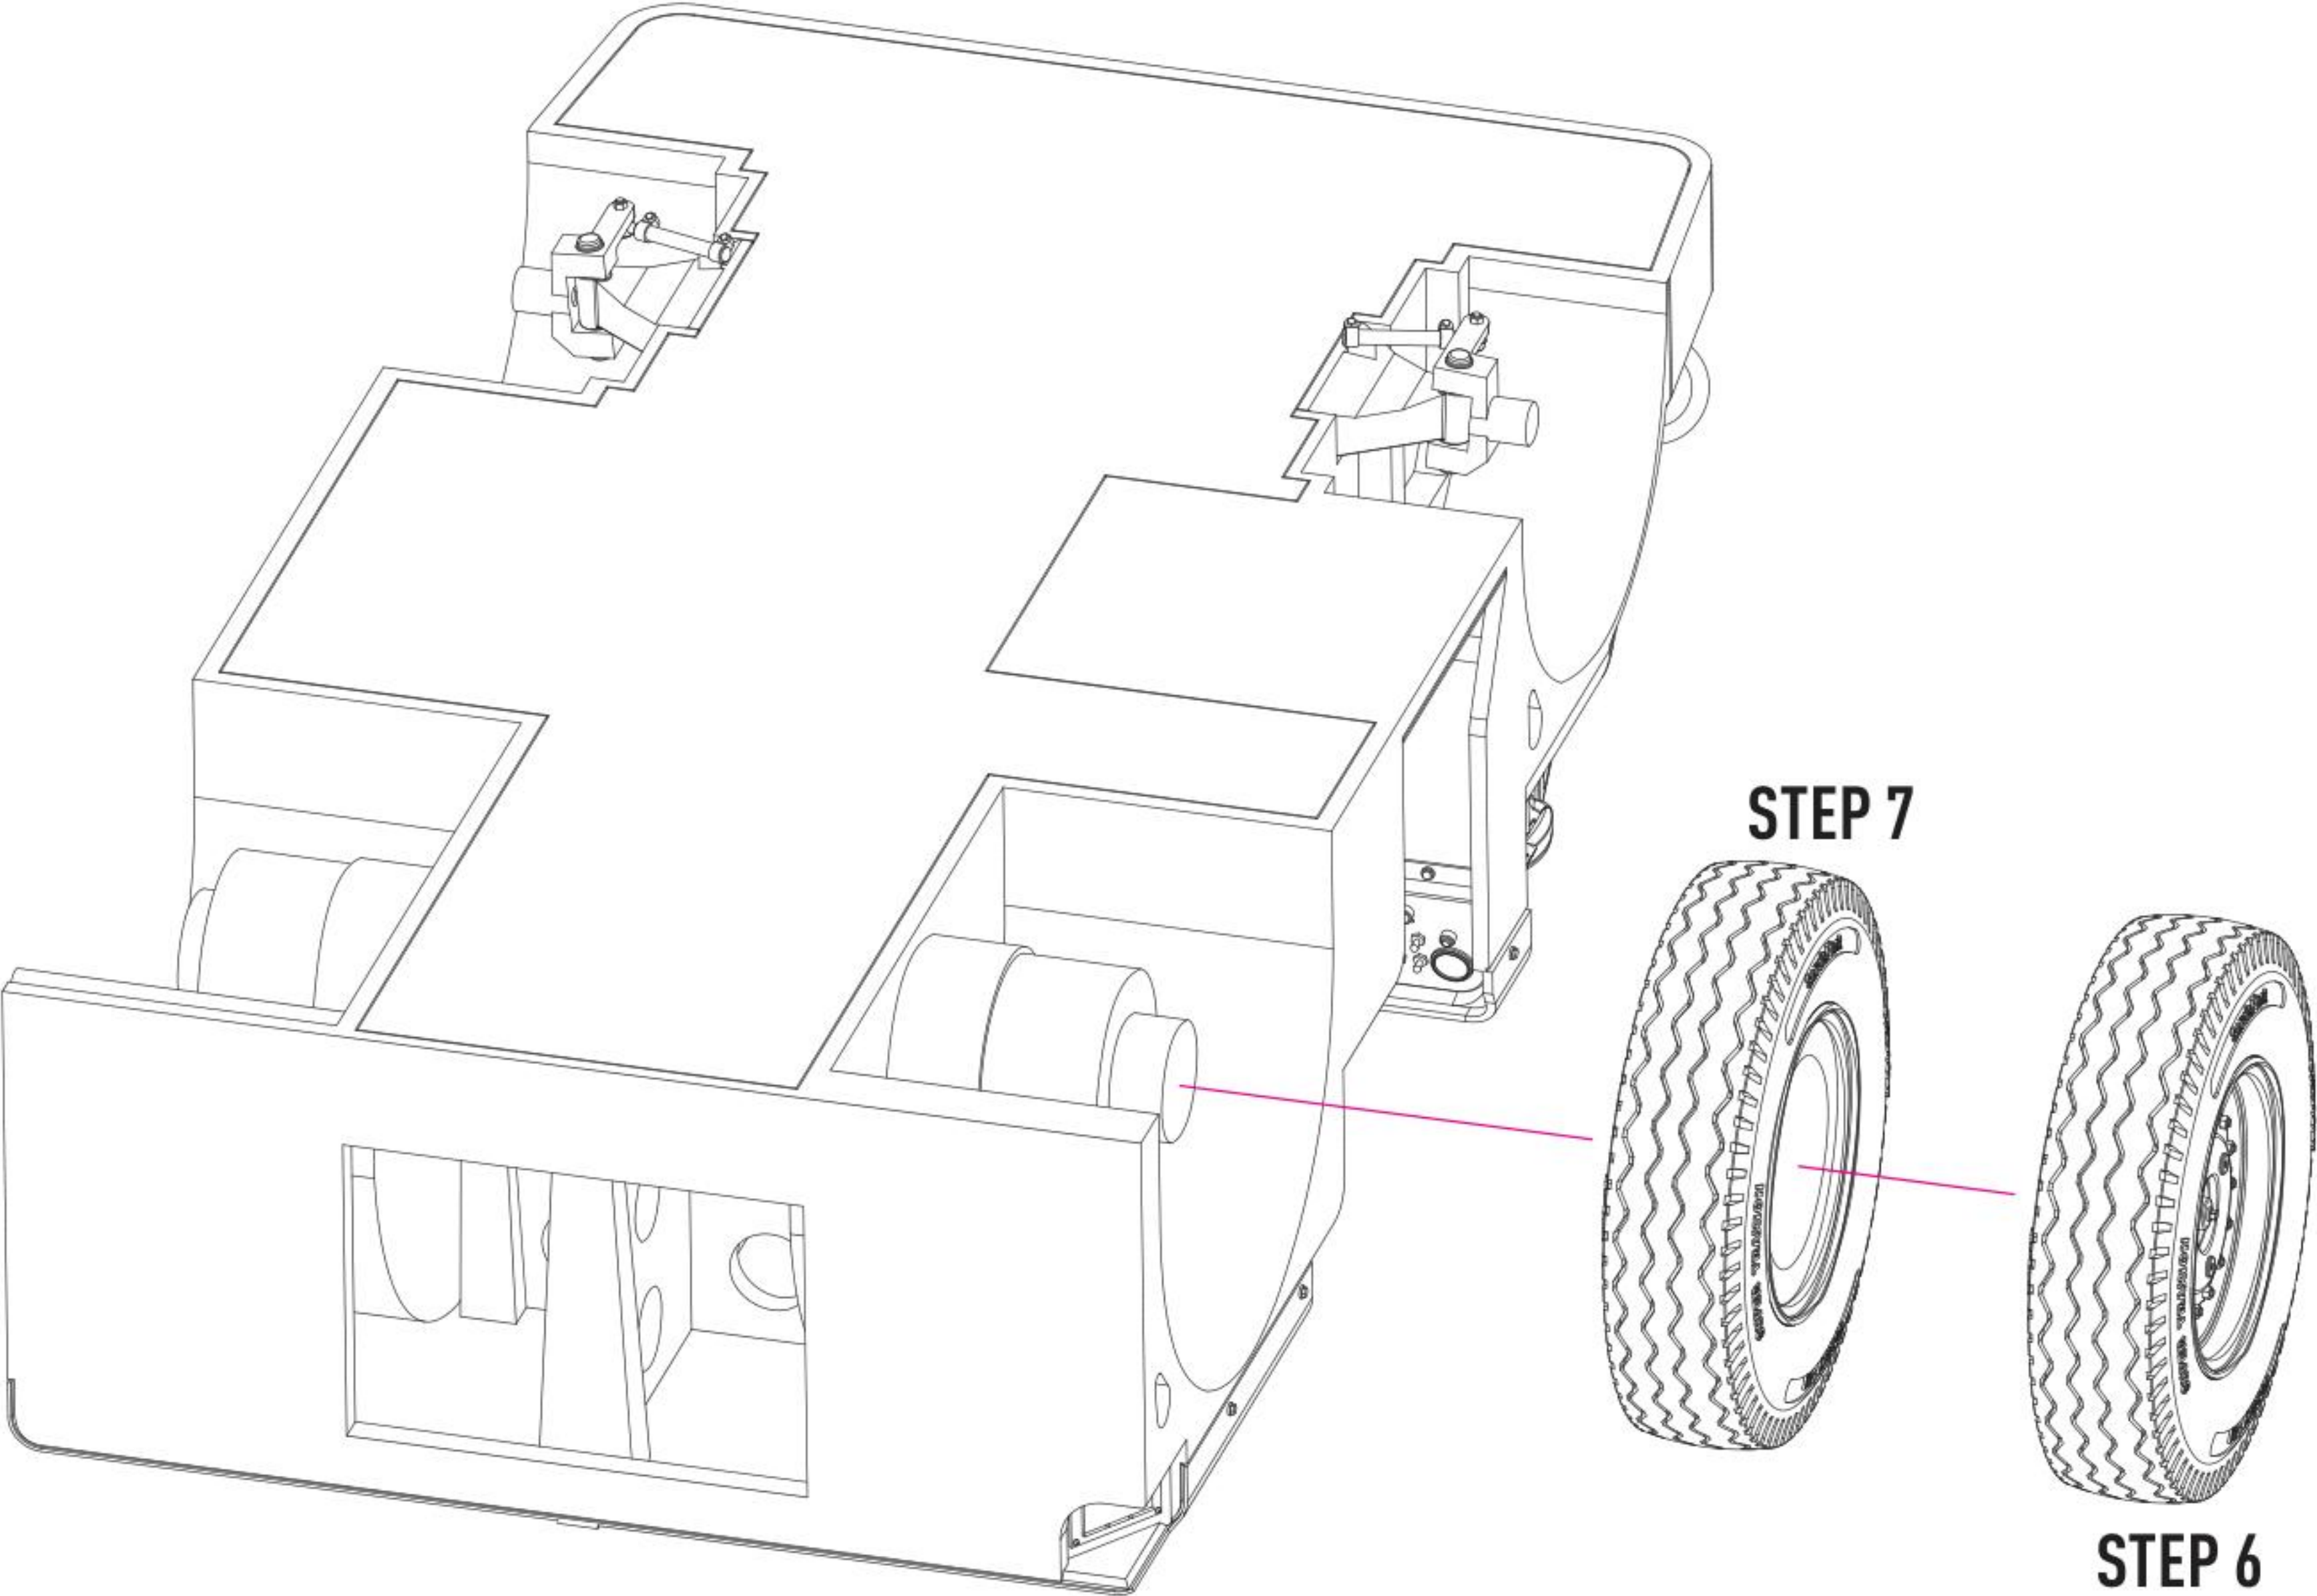


STEP 7

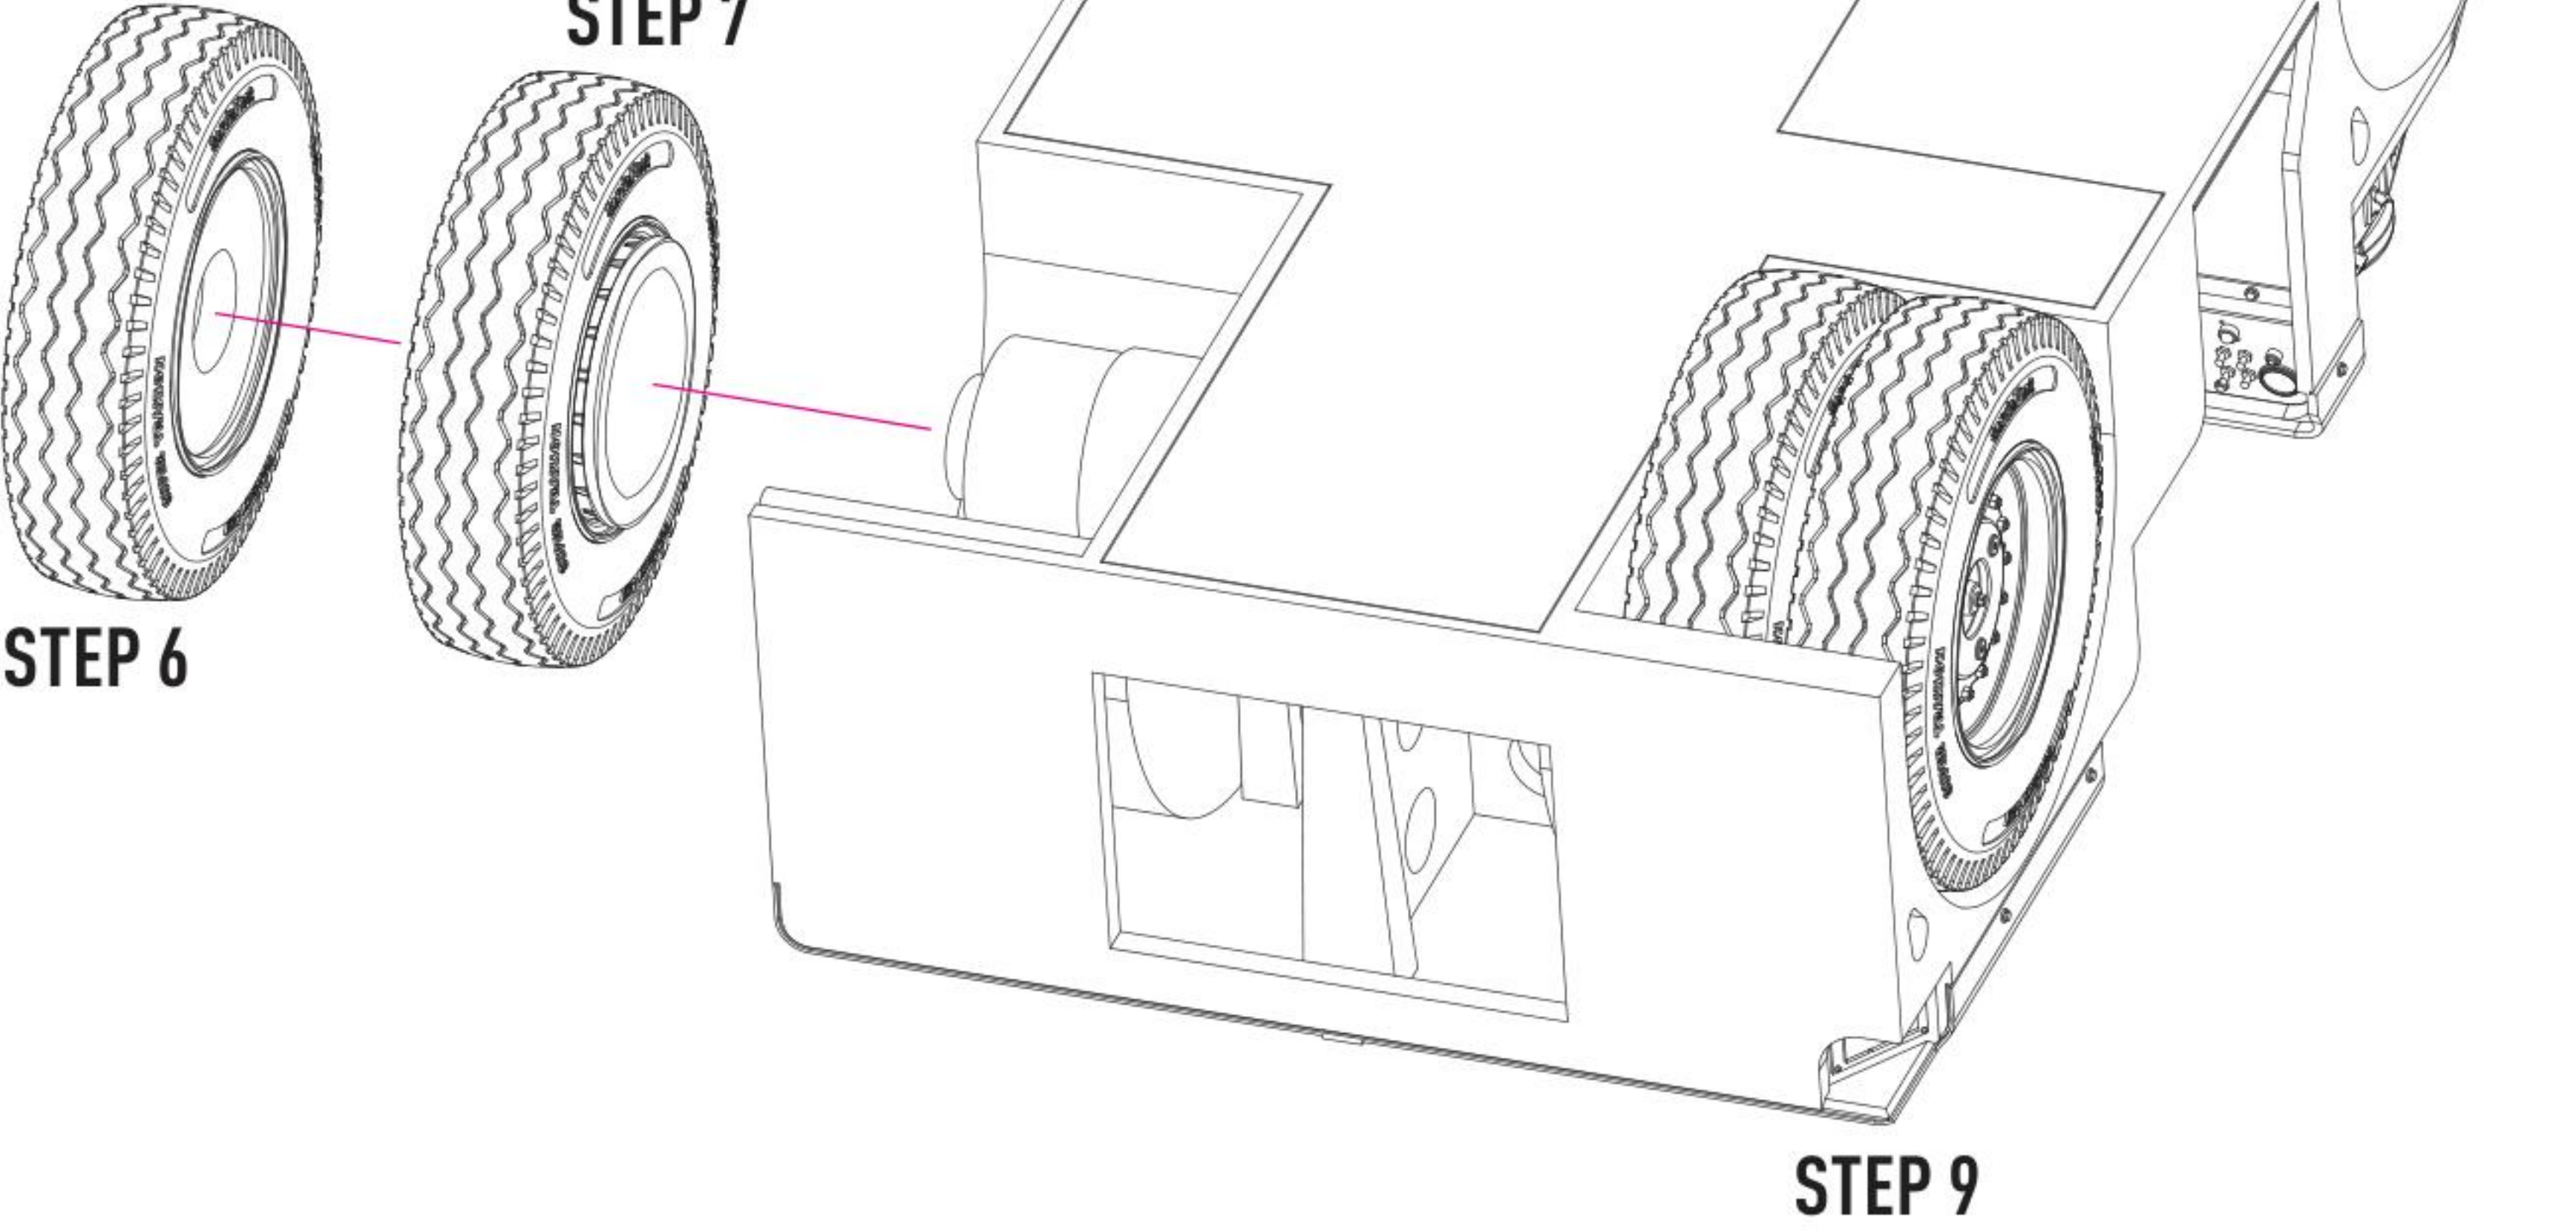


STEP 10

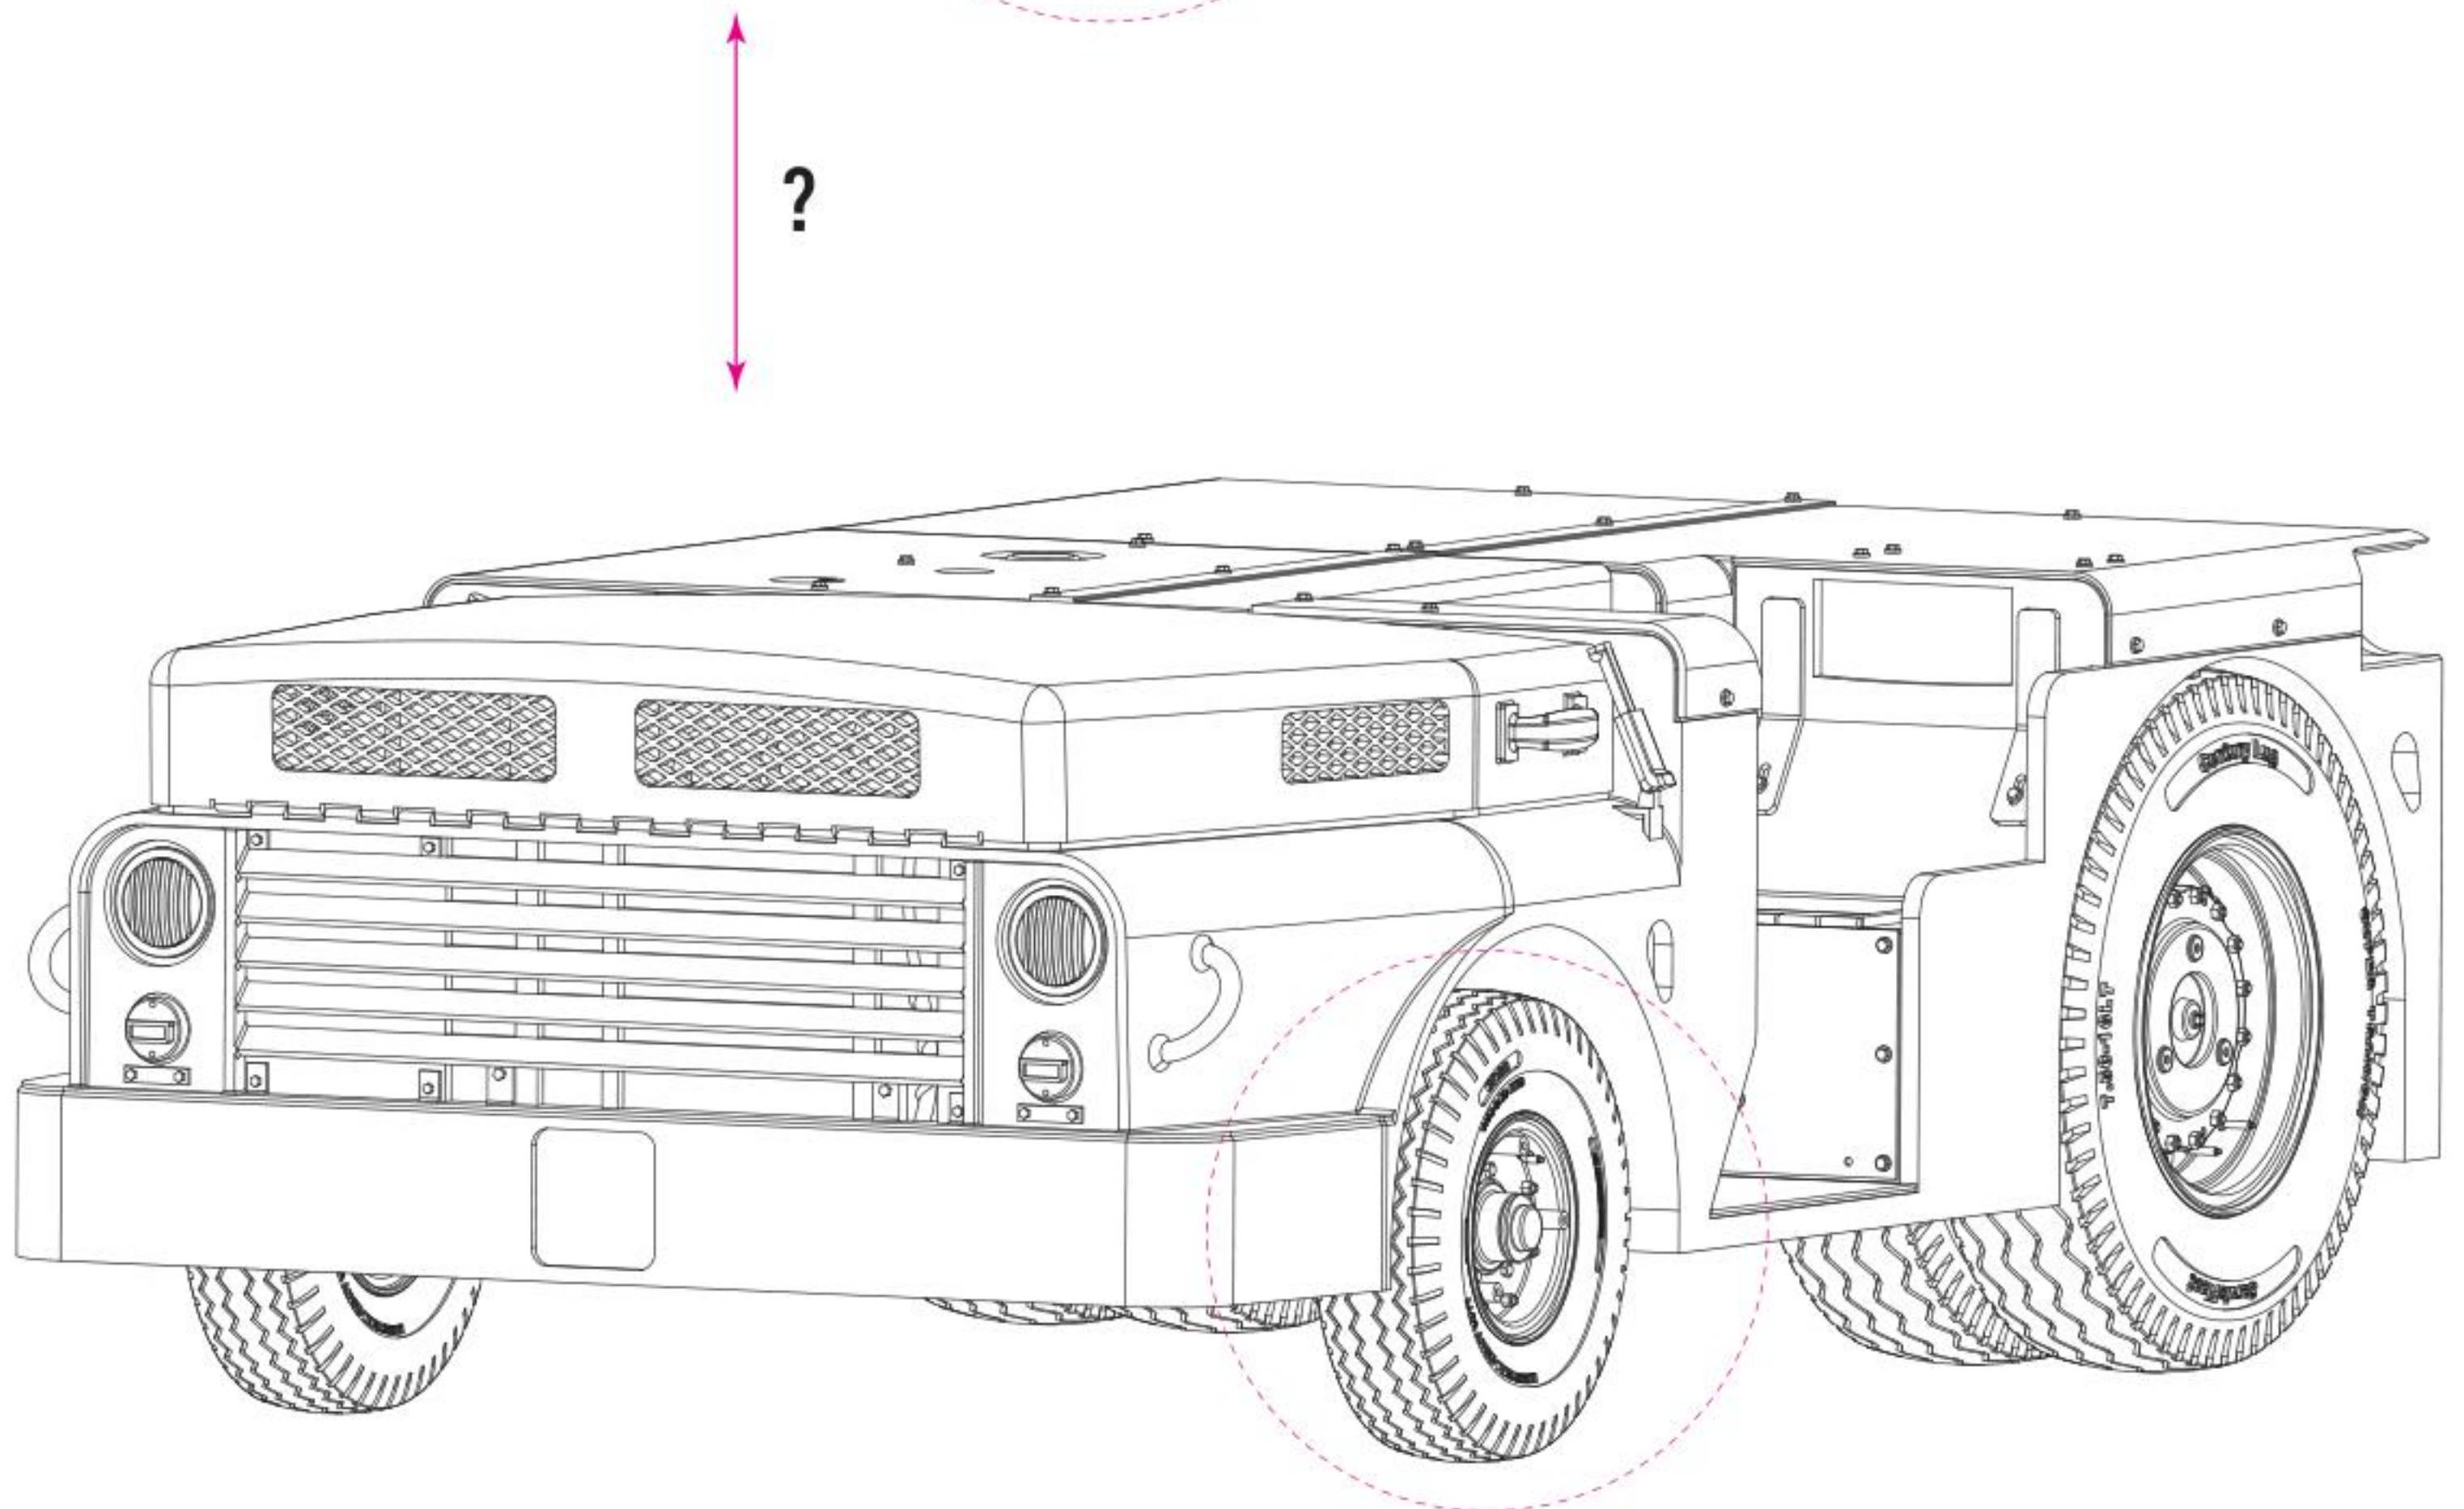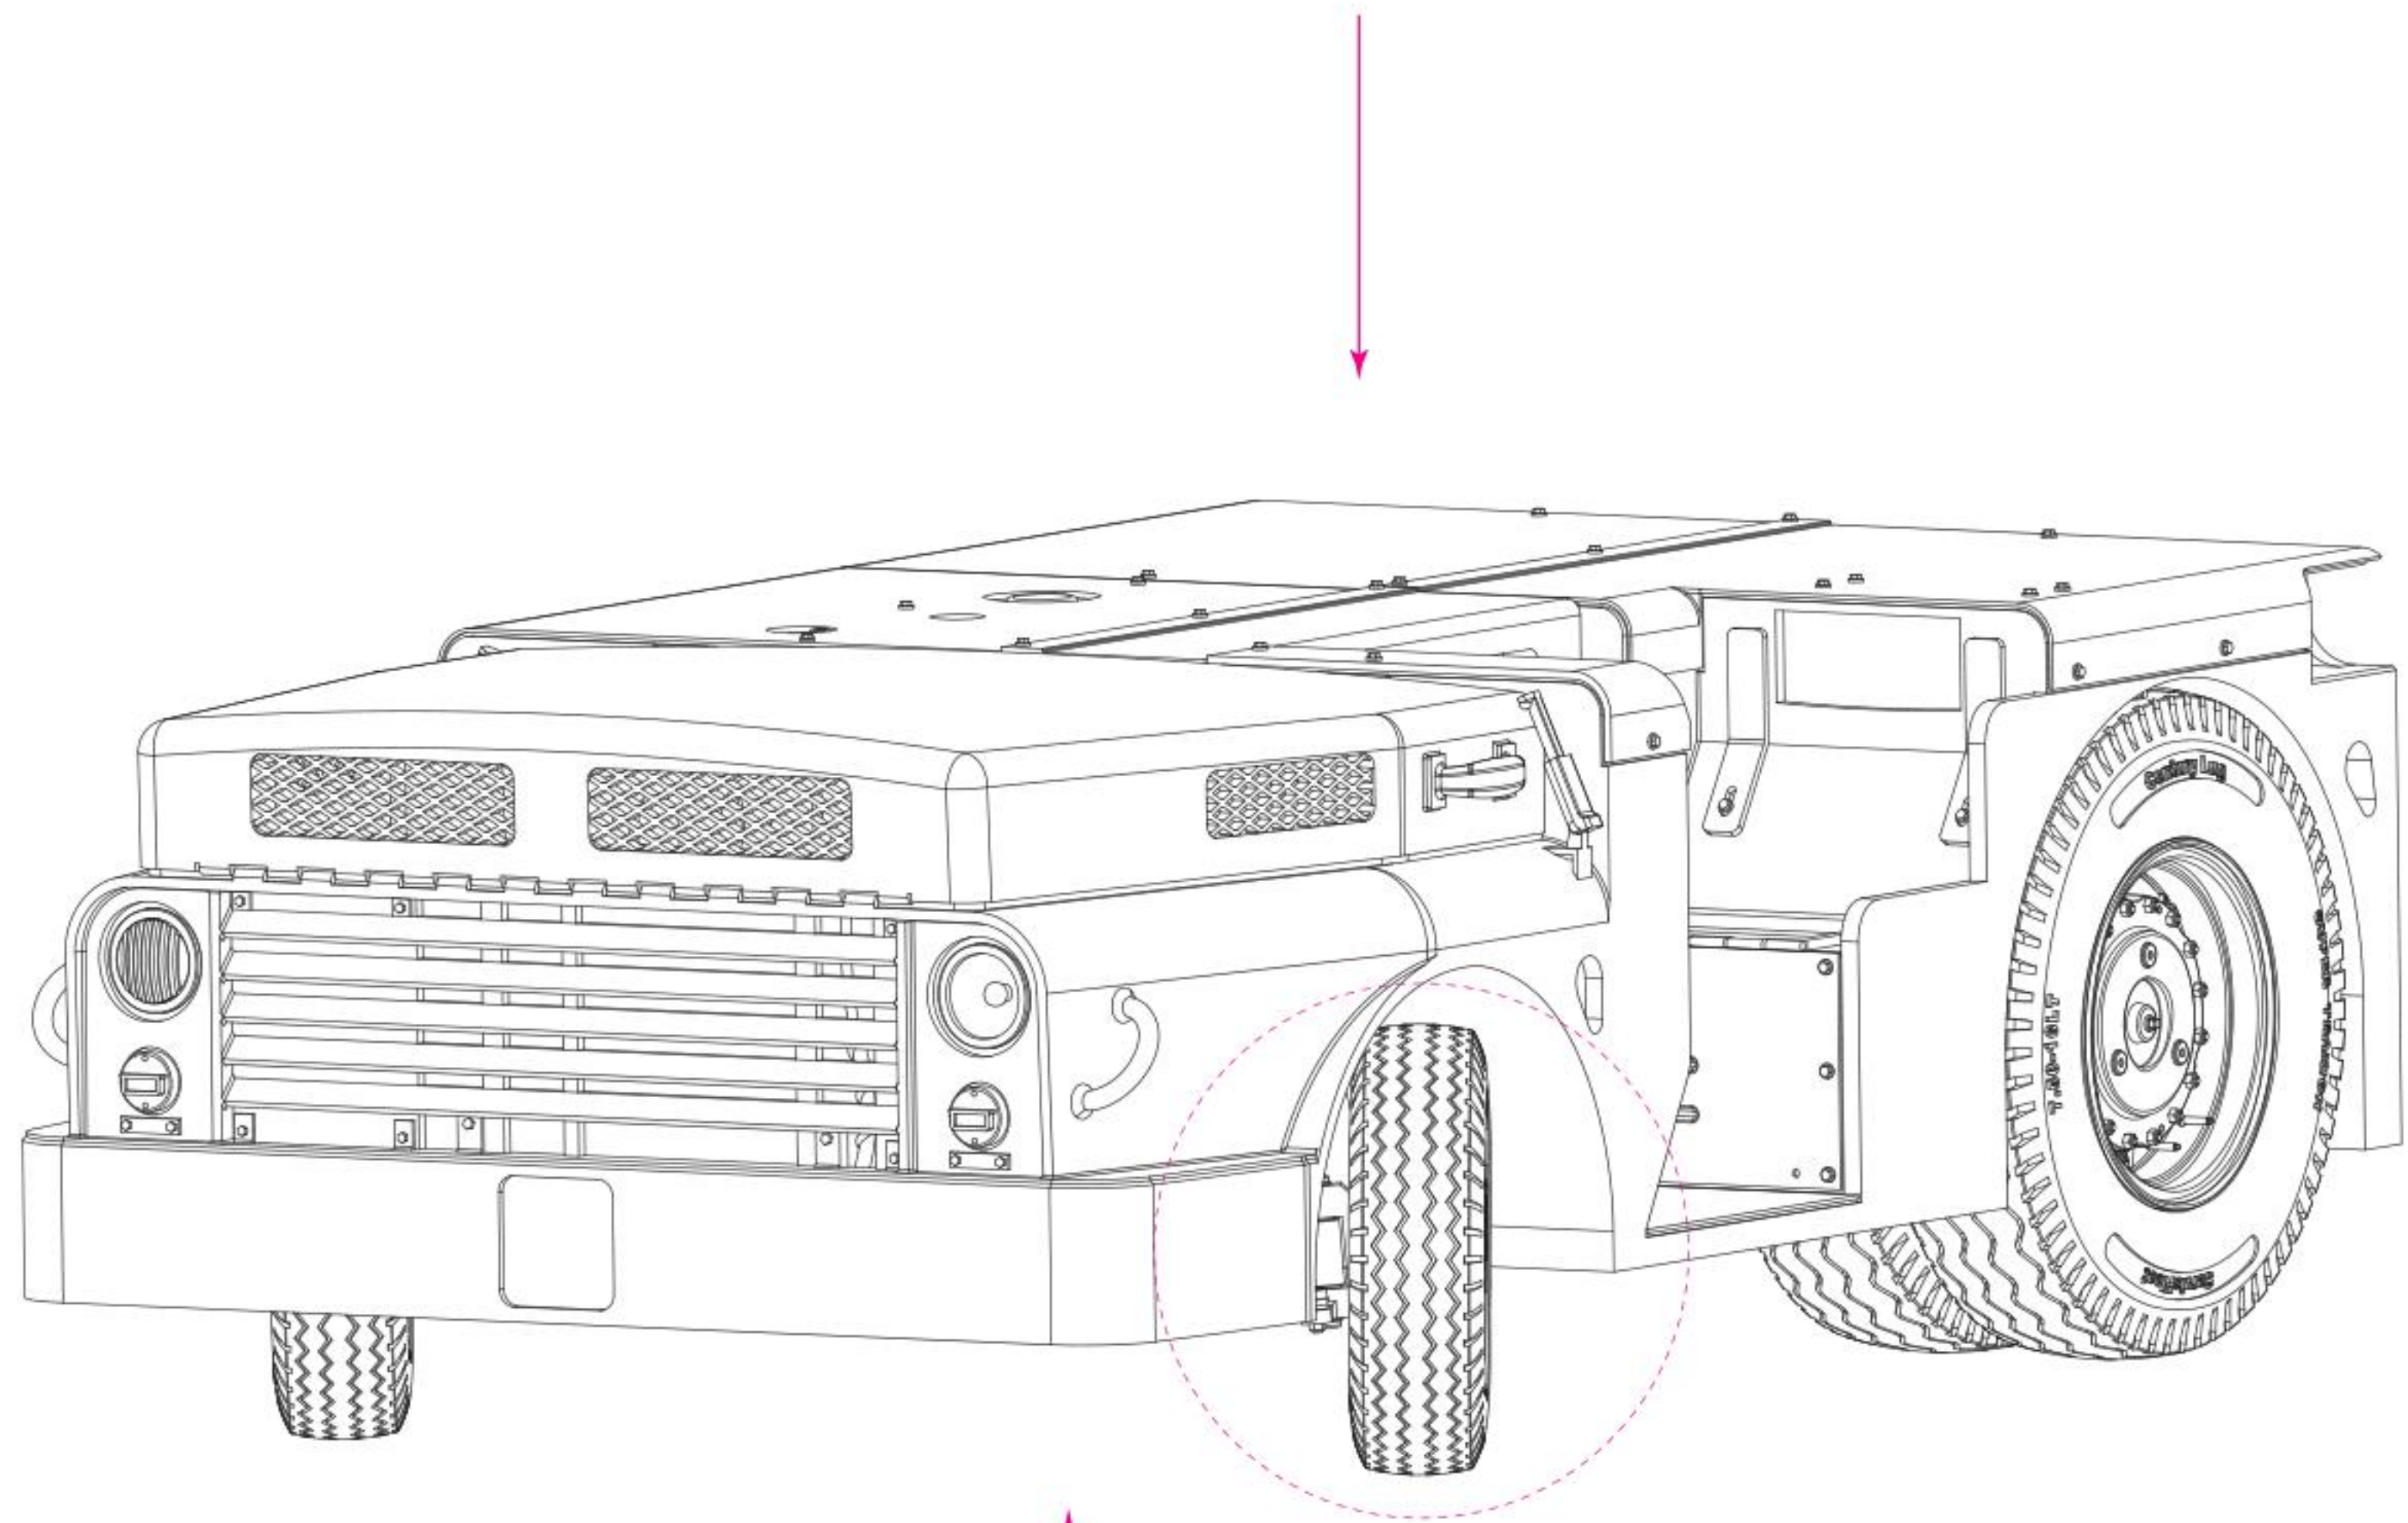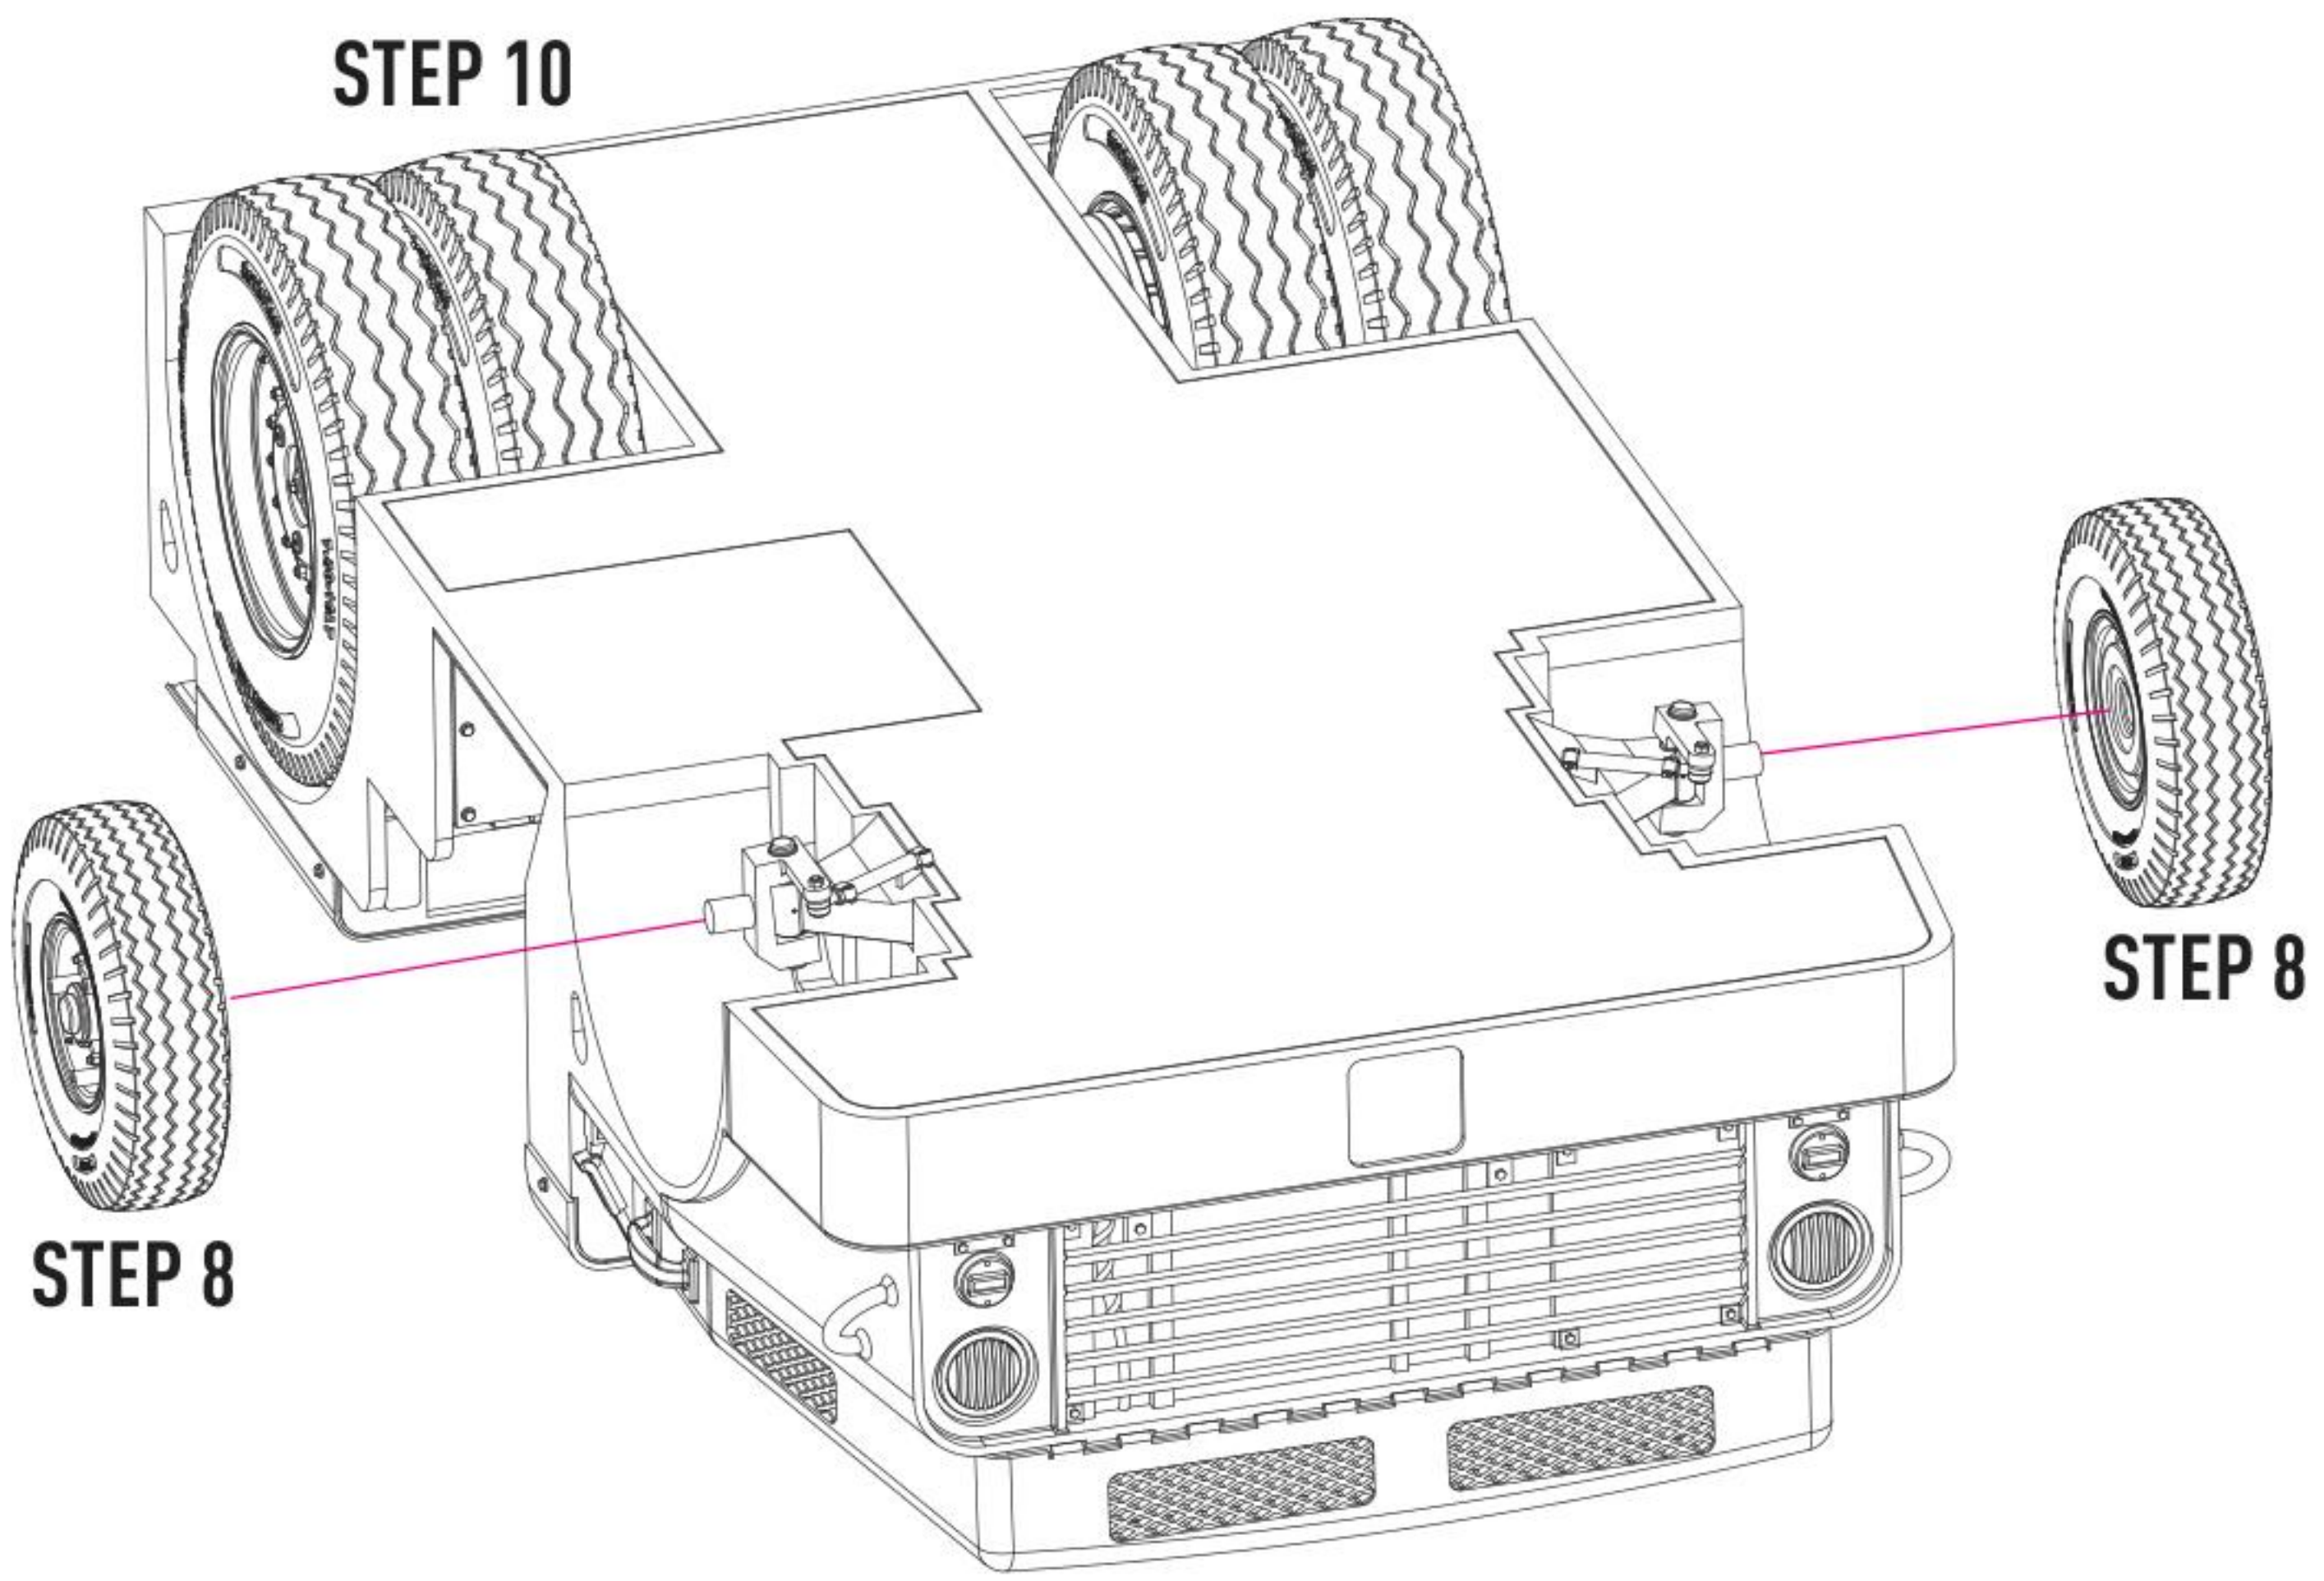


12

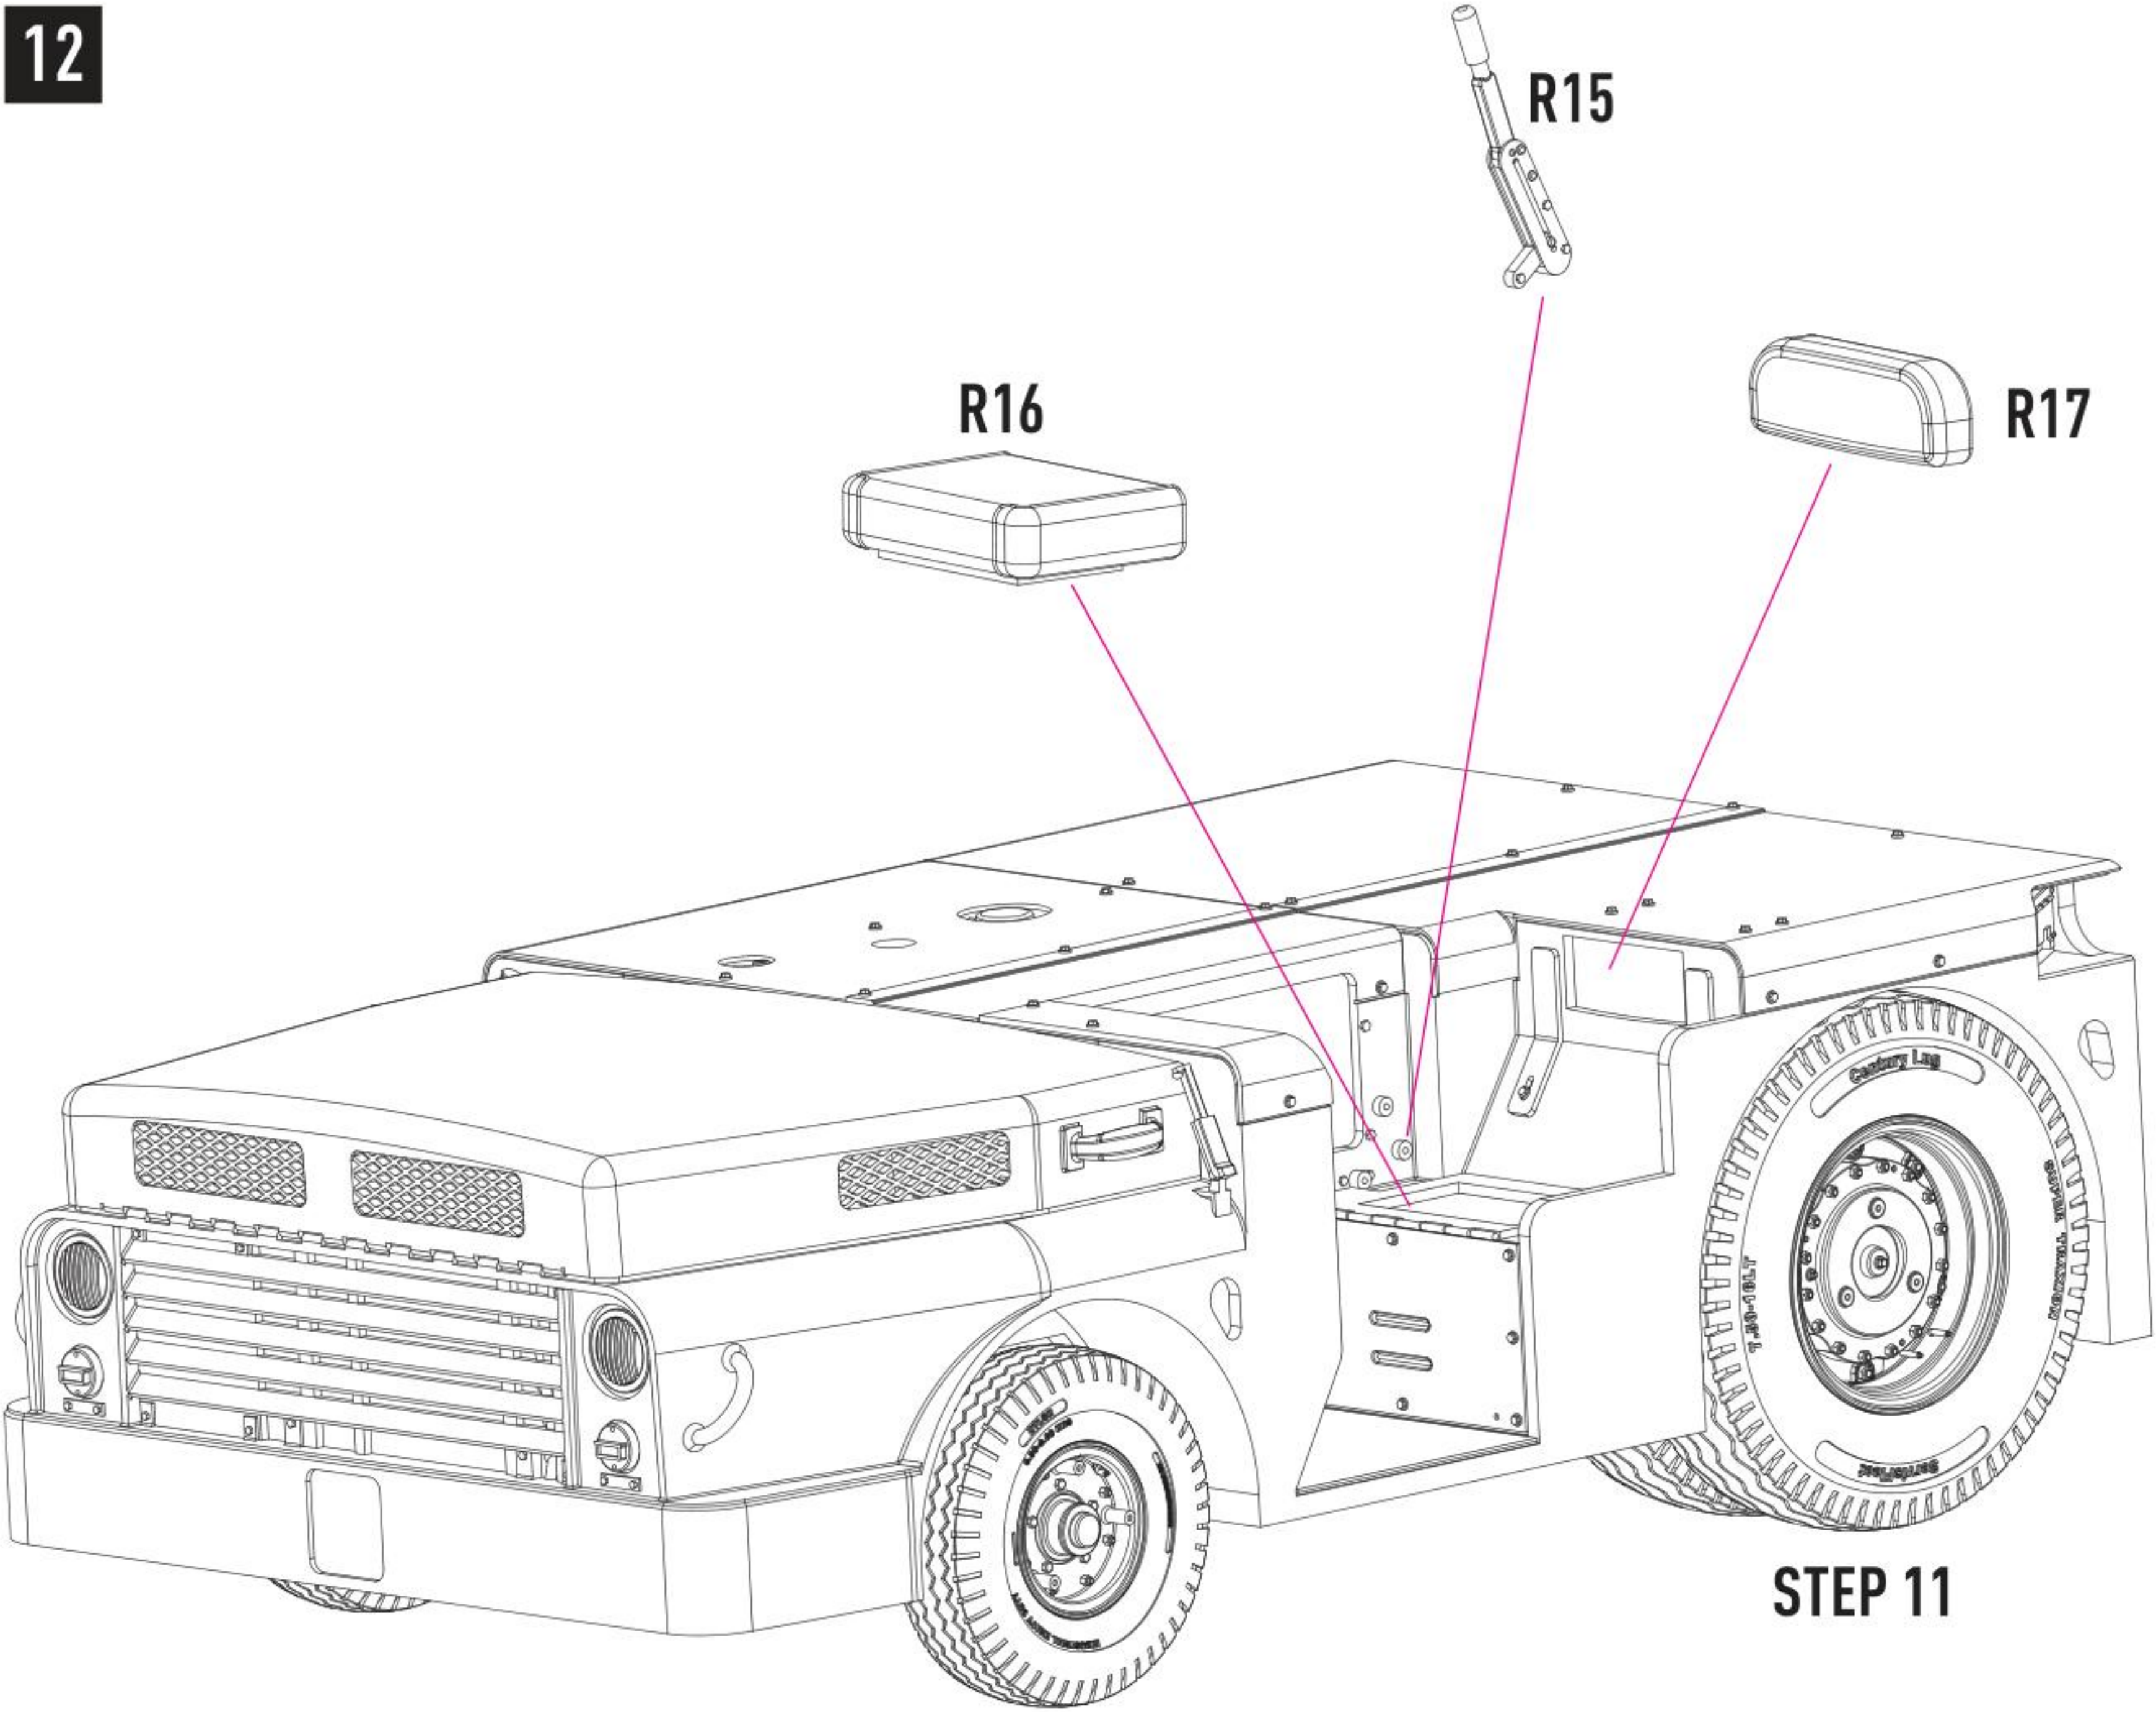


13

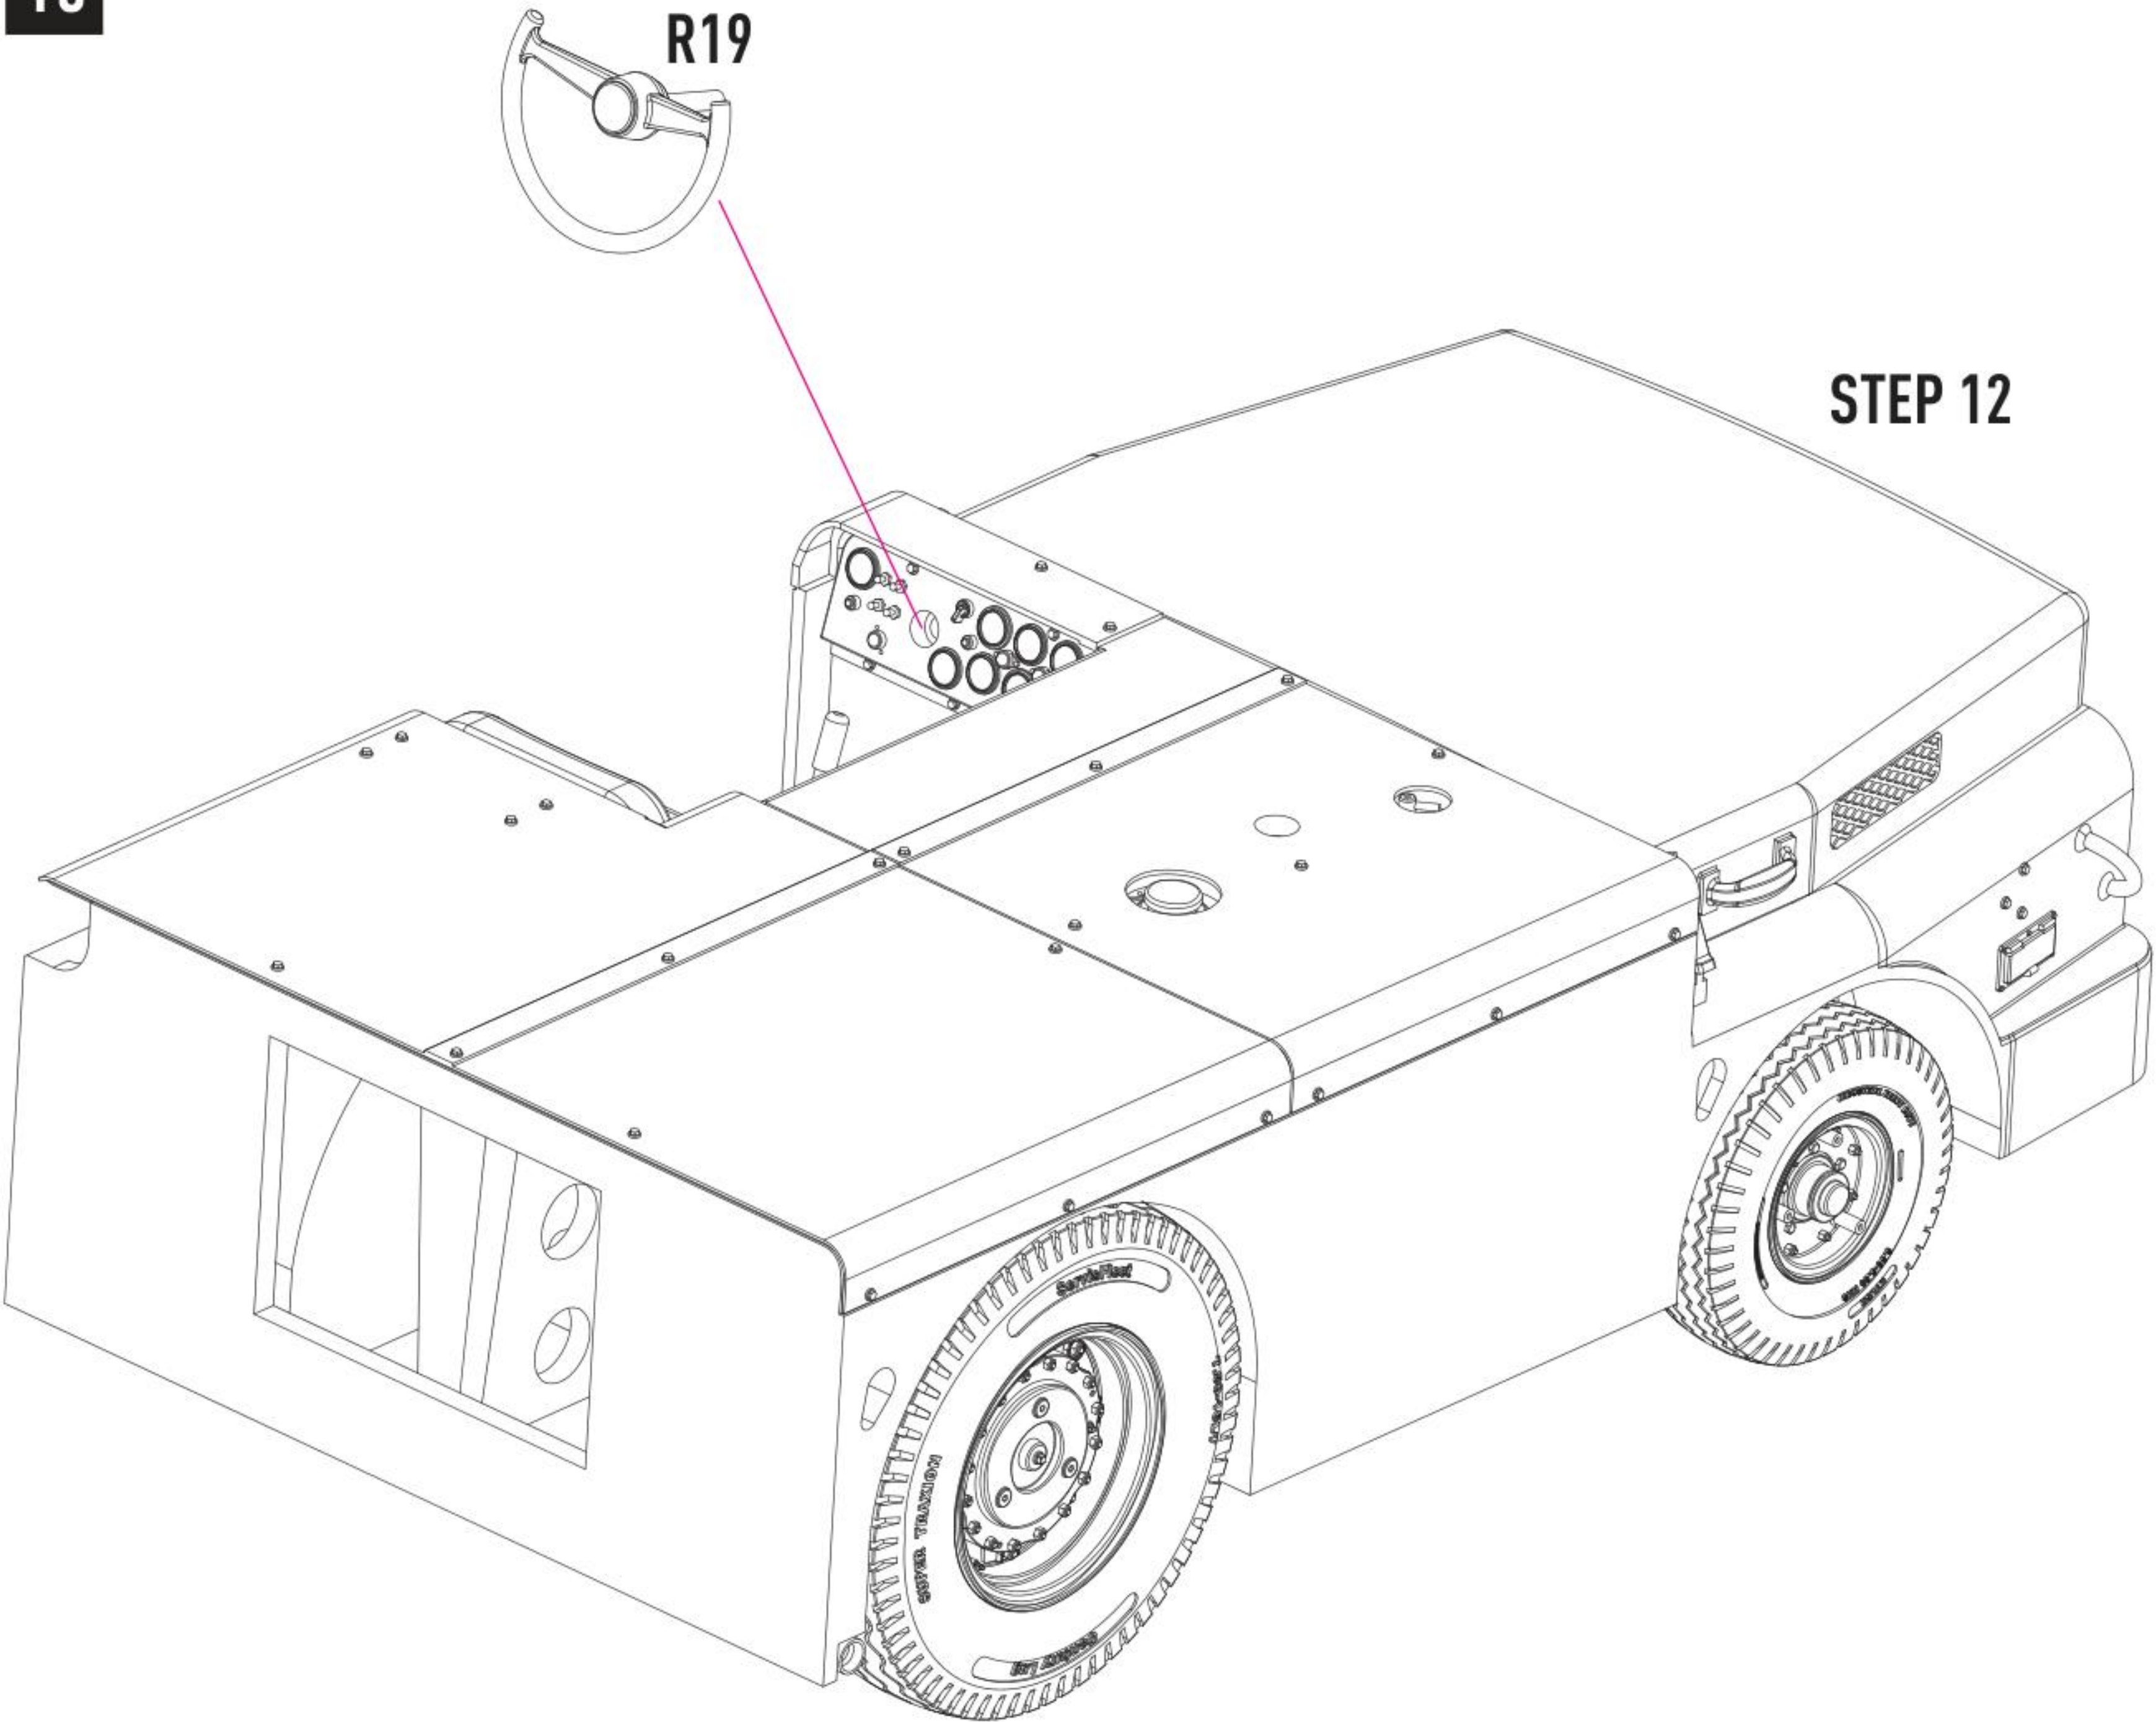


14

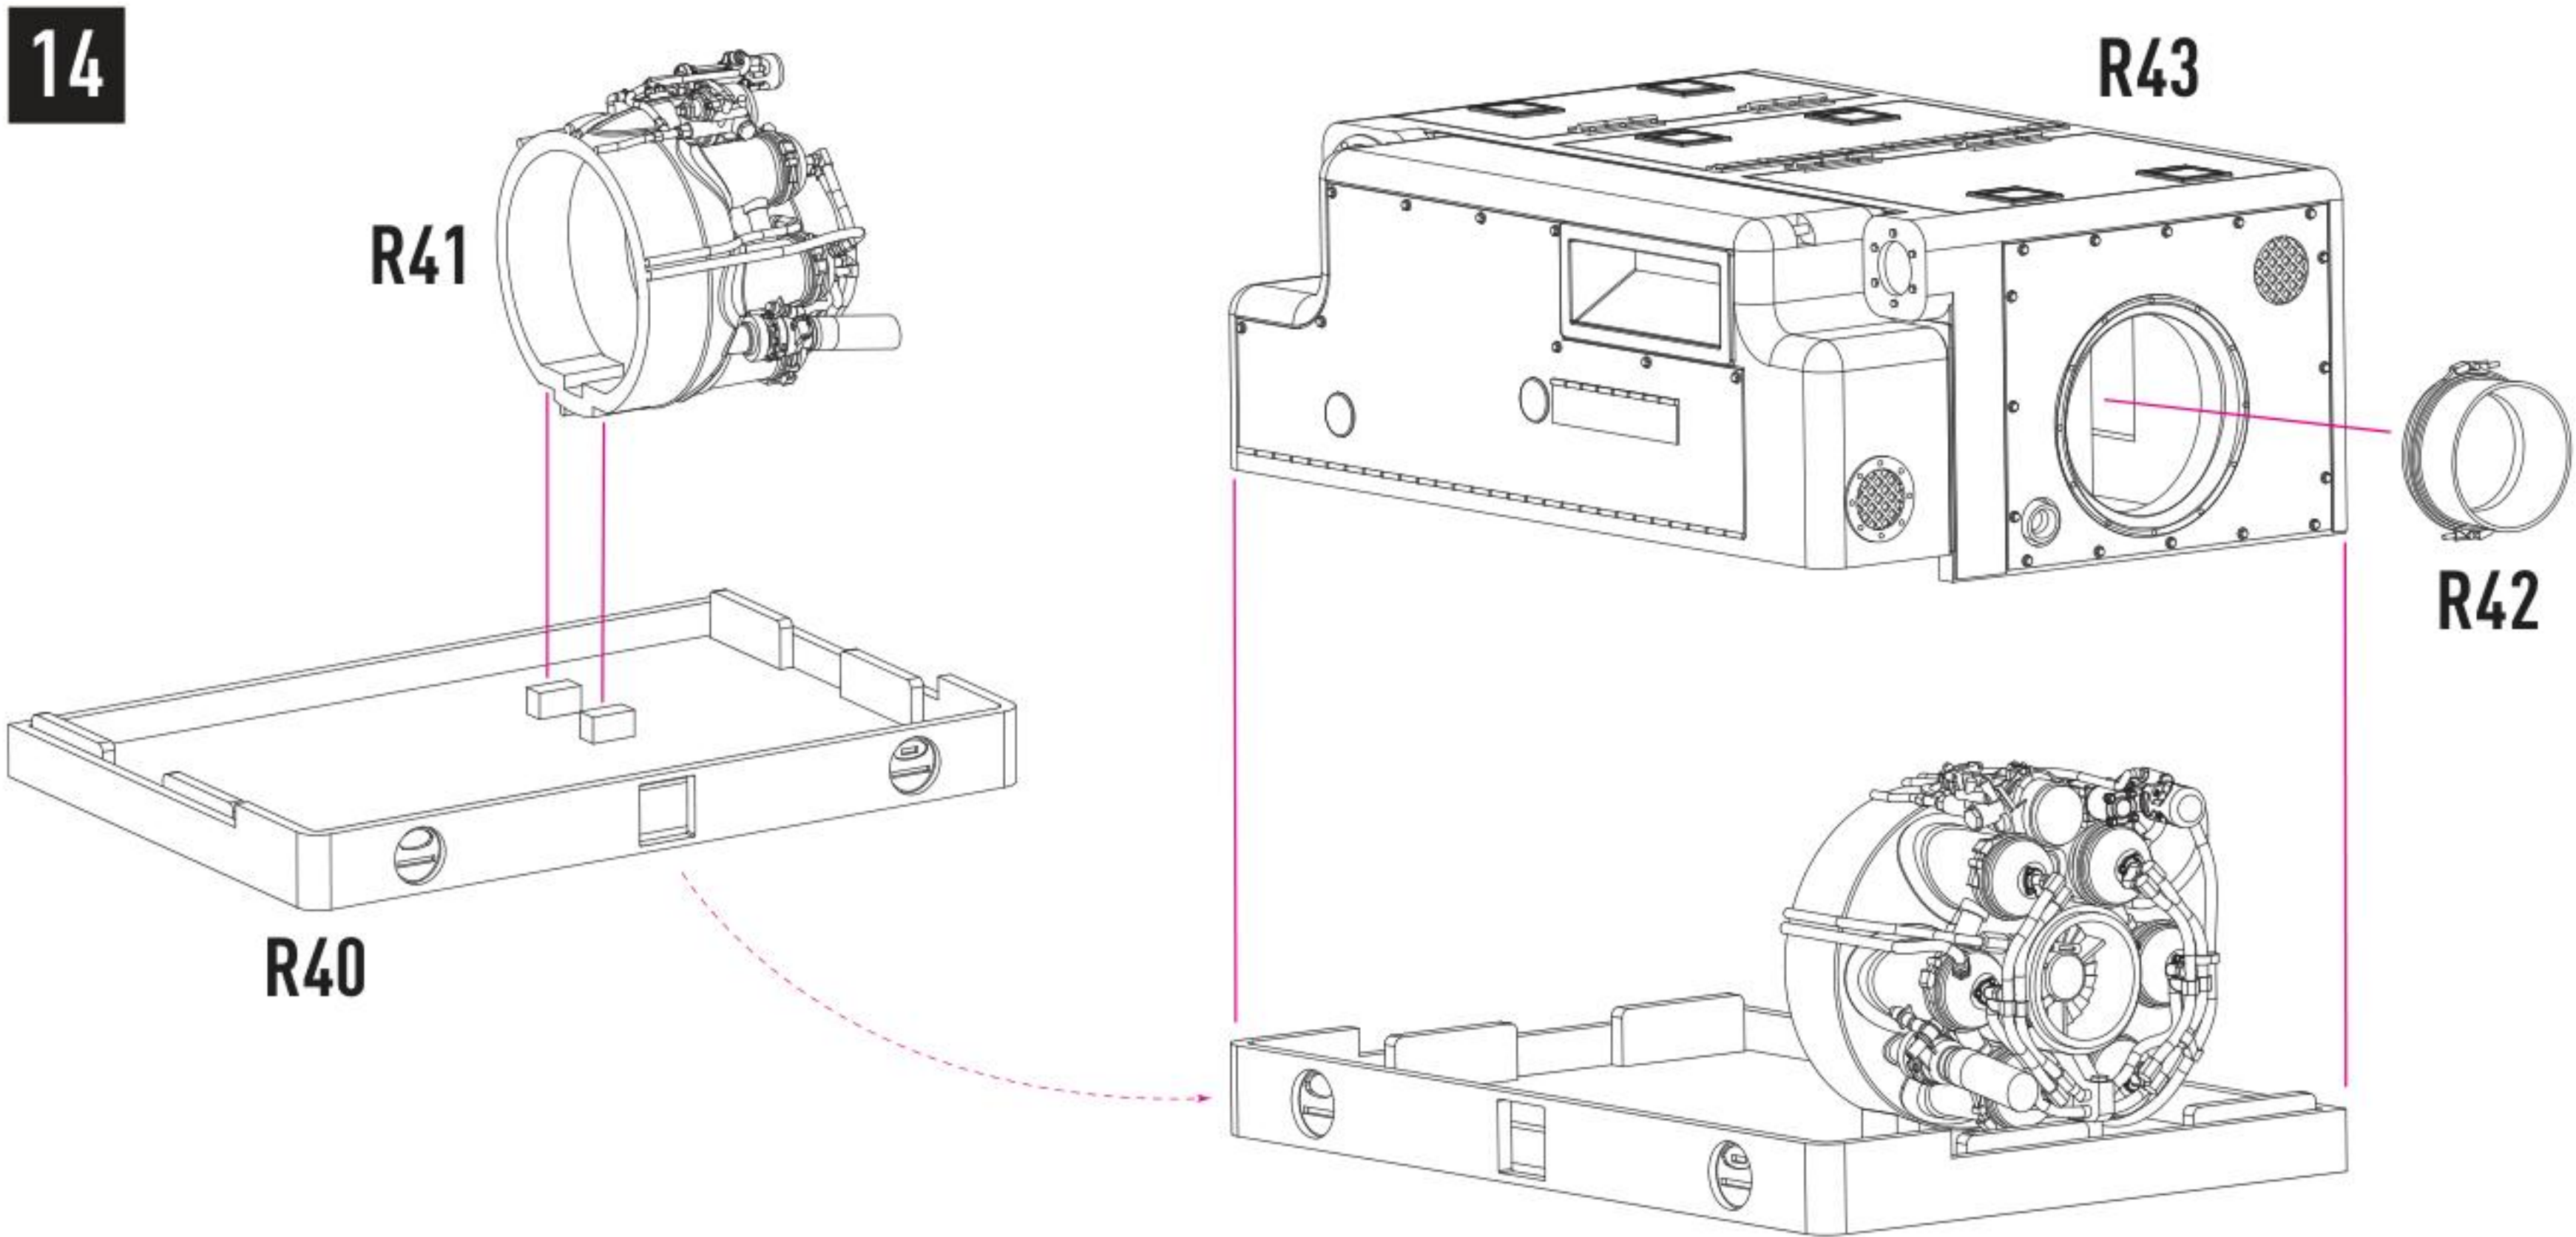


15

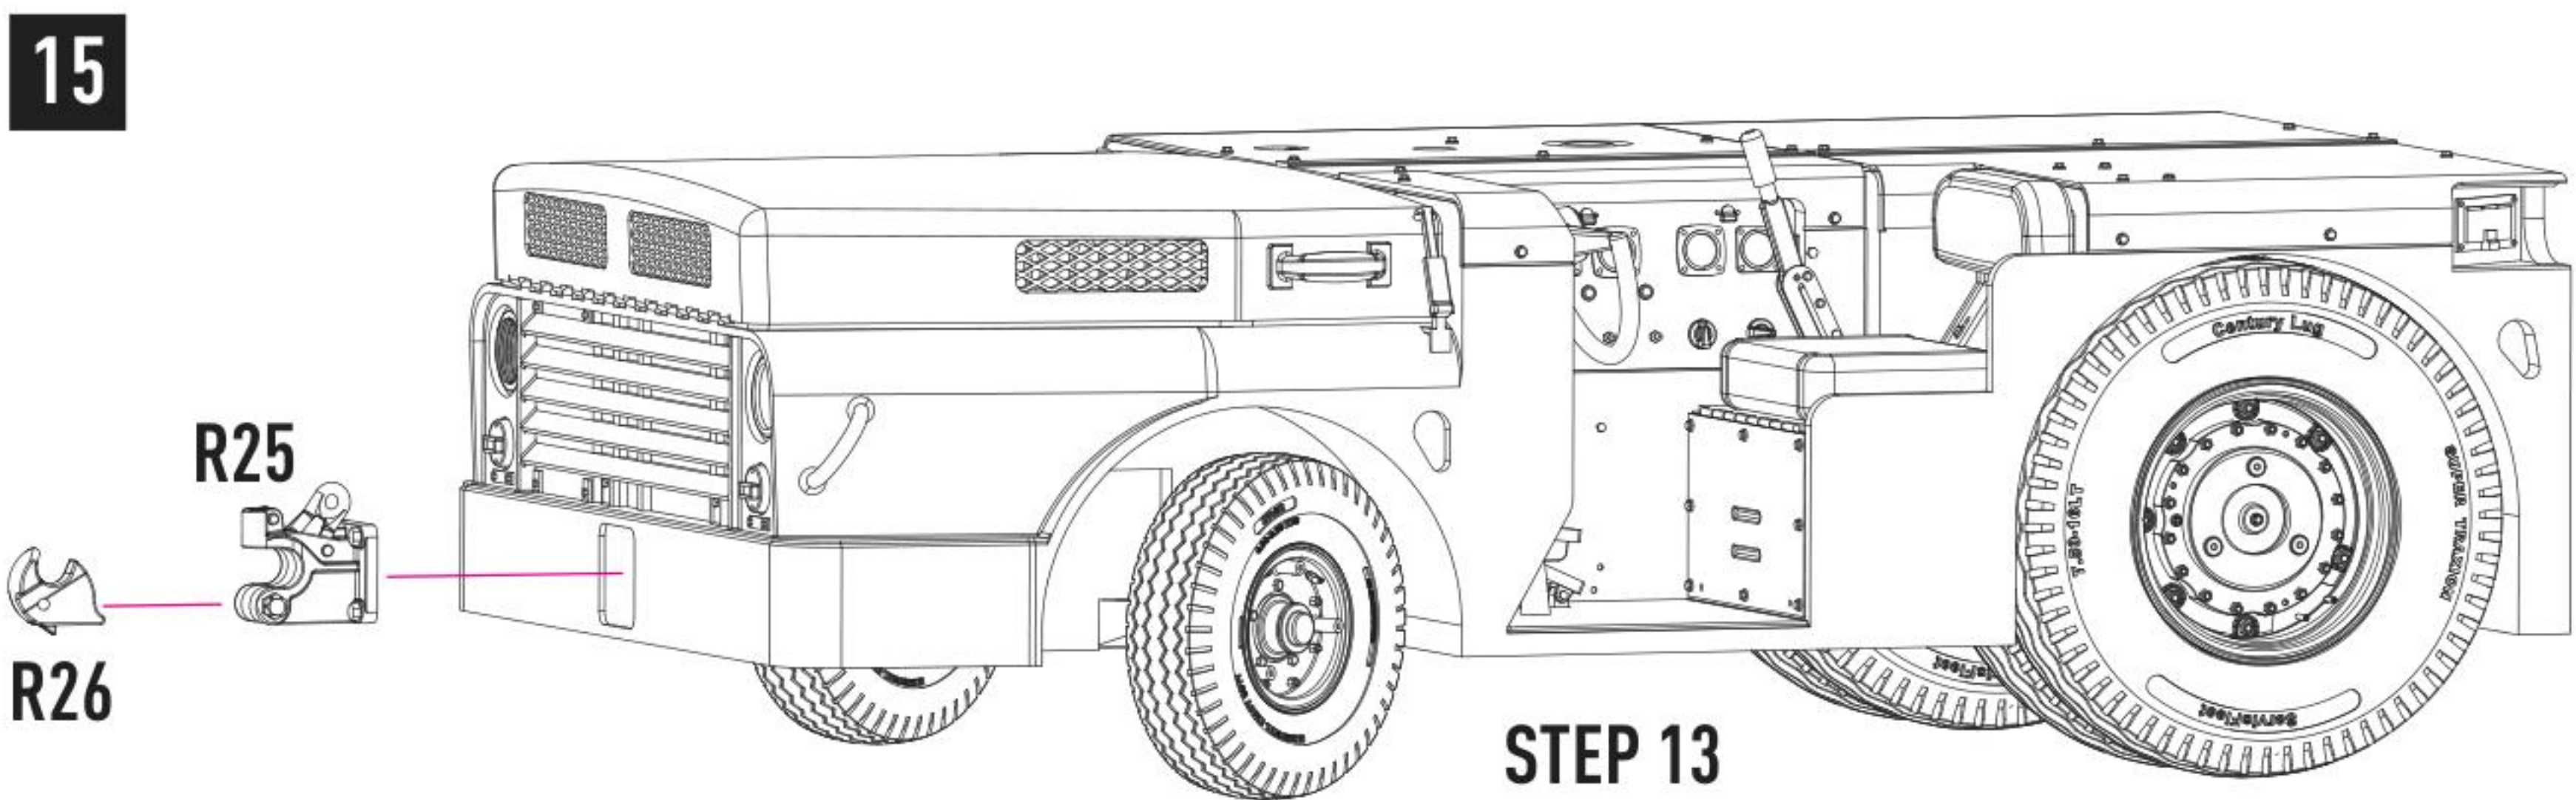



16

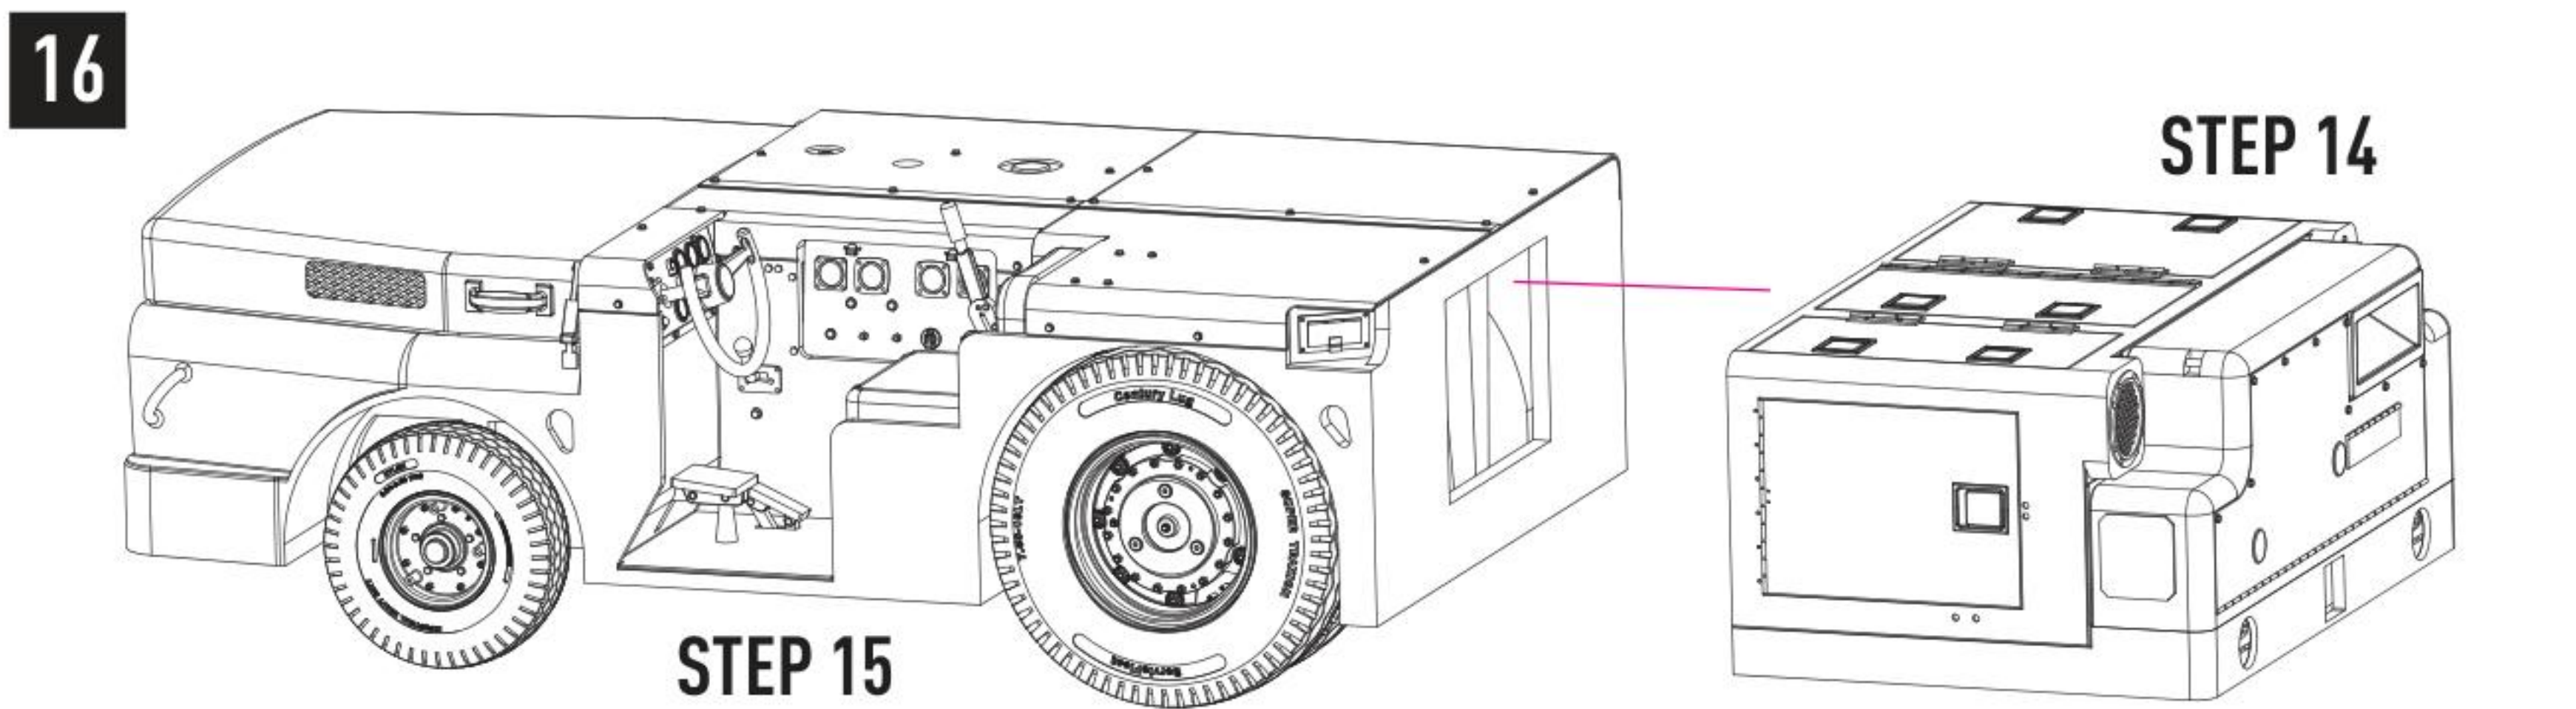


17

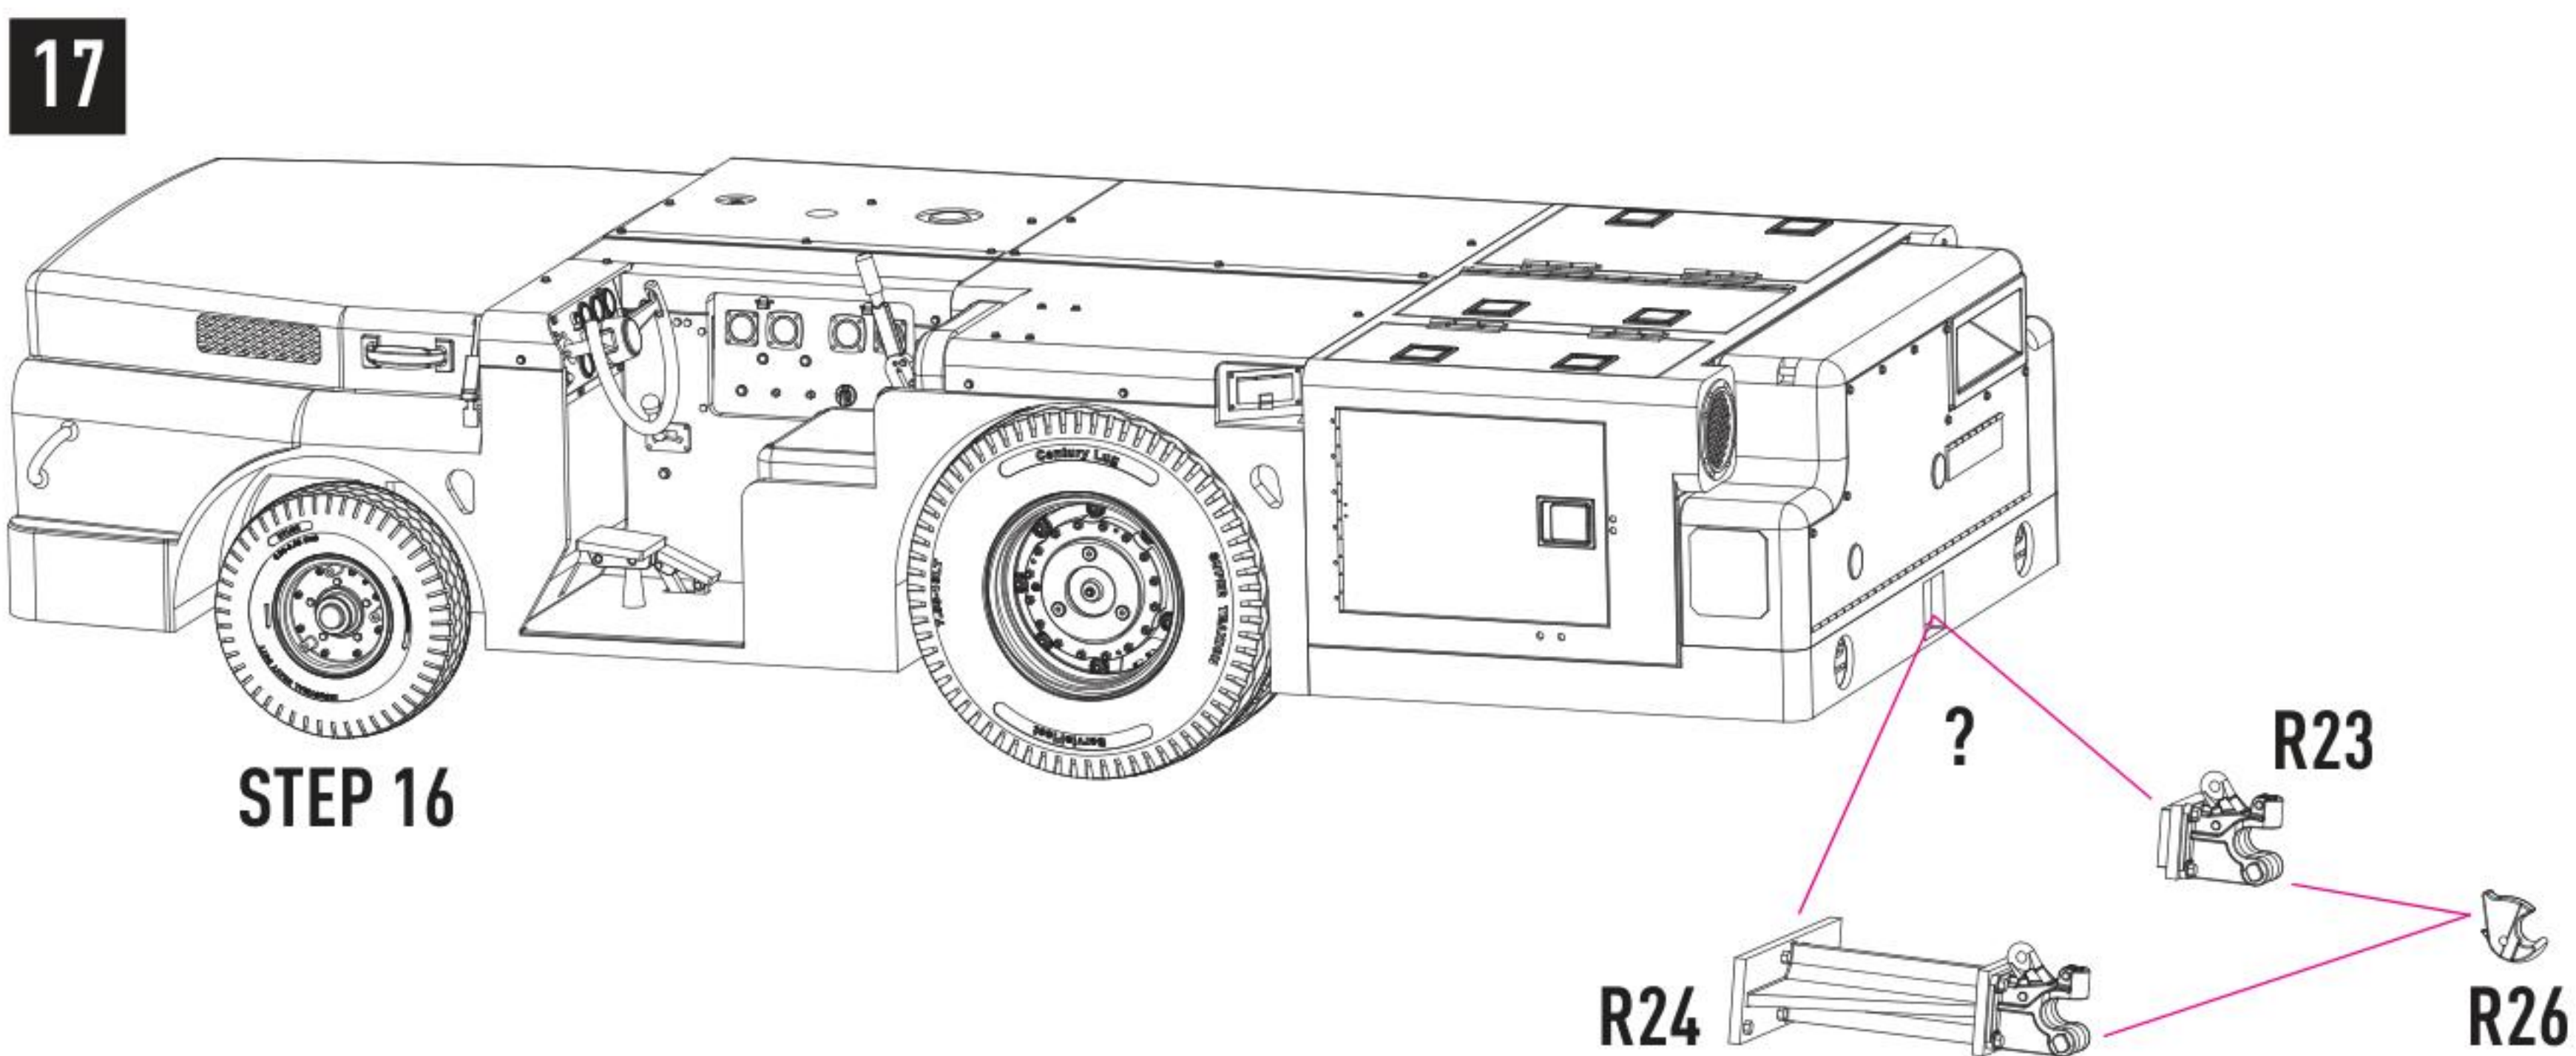


18

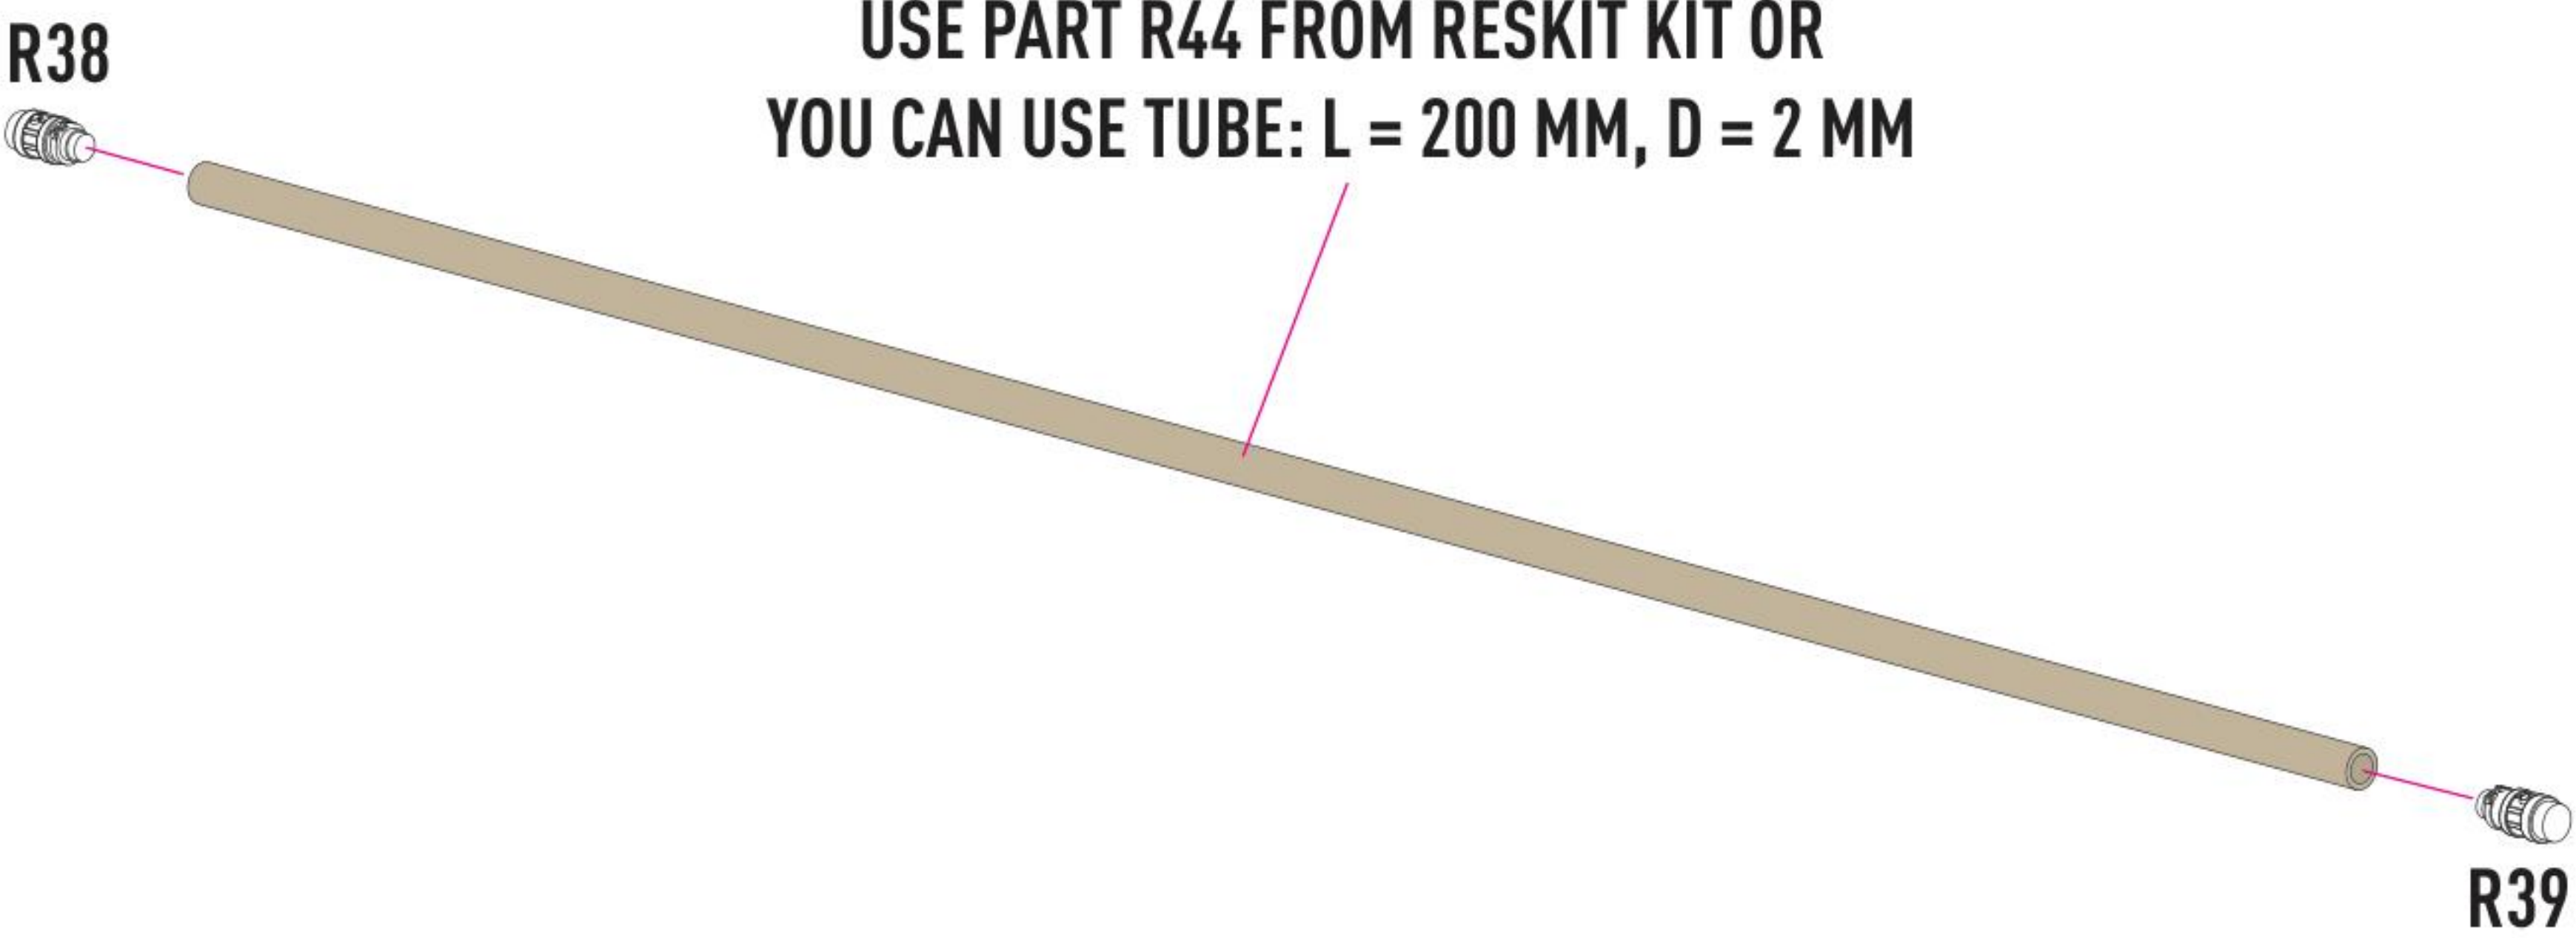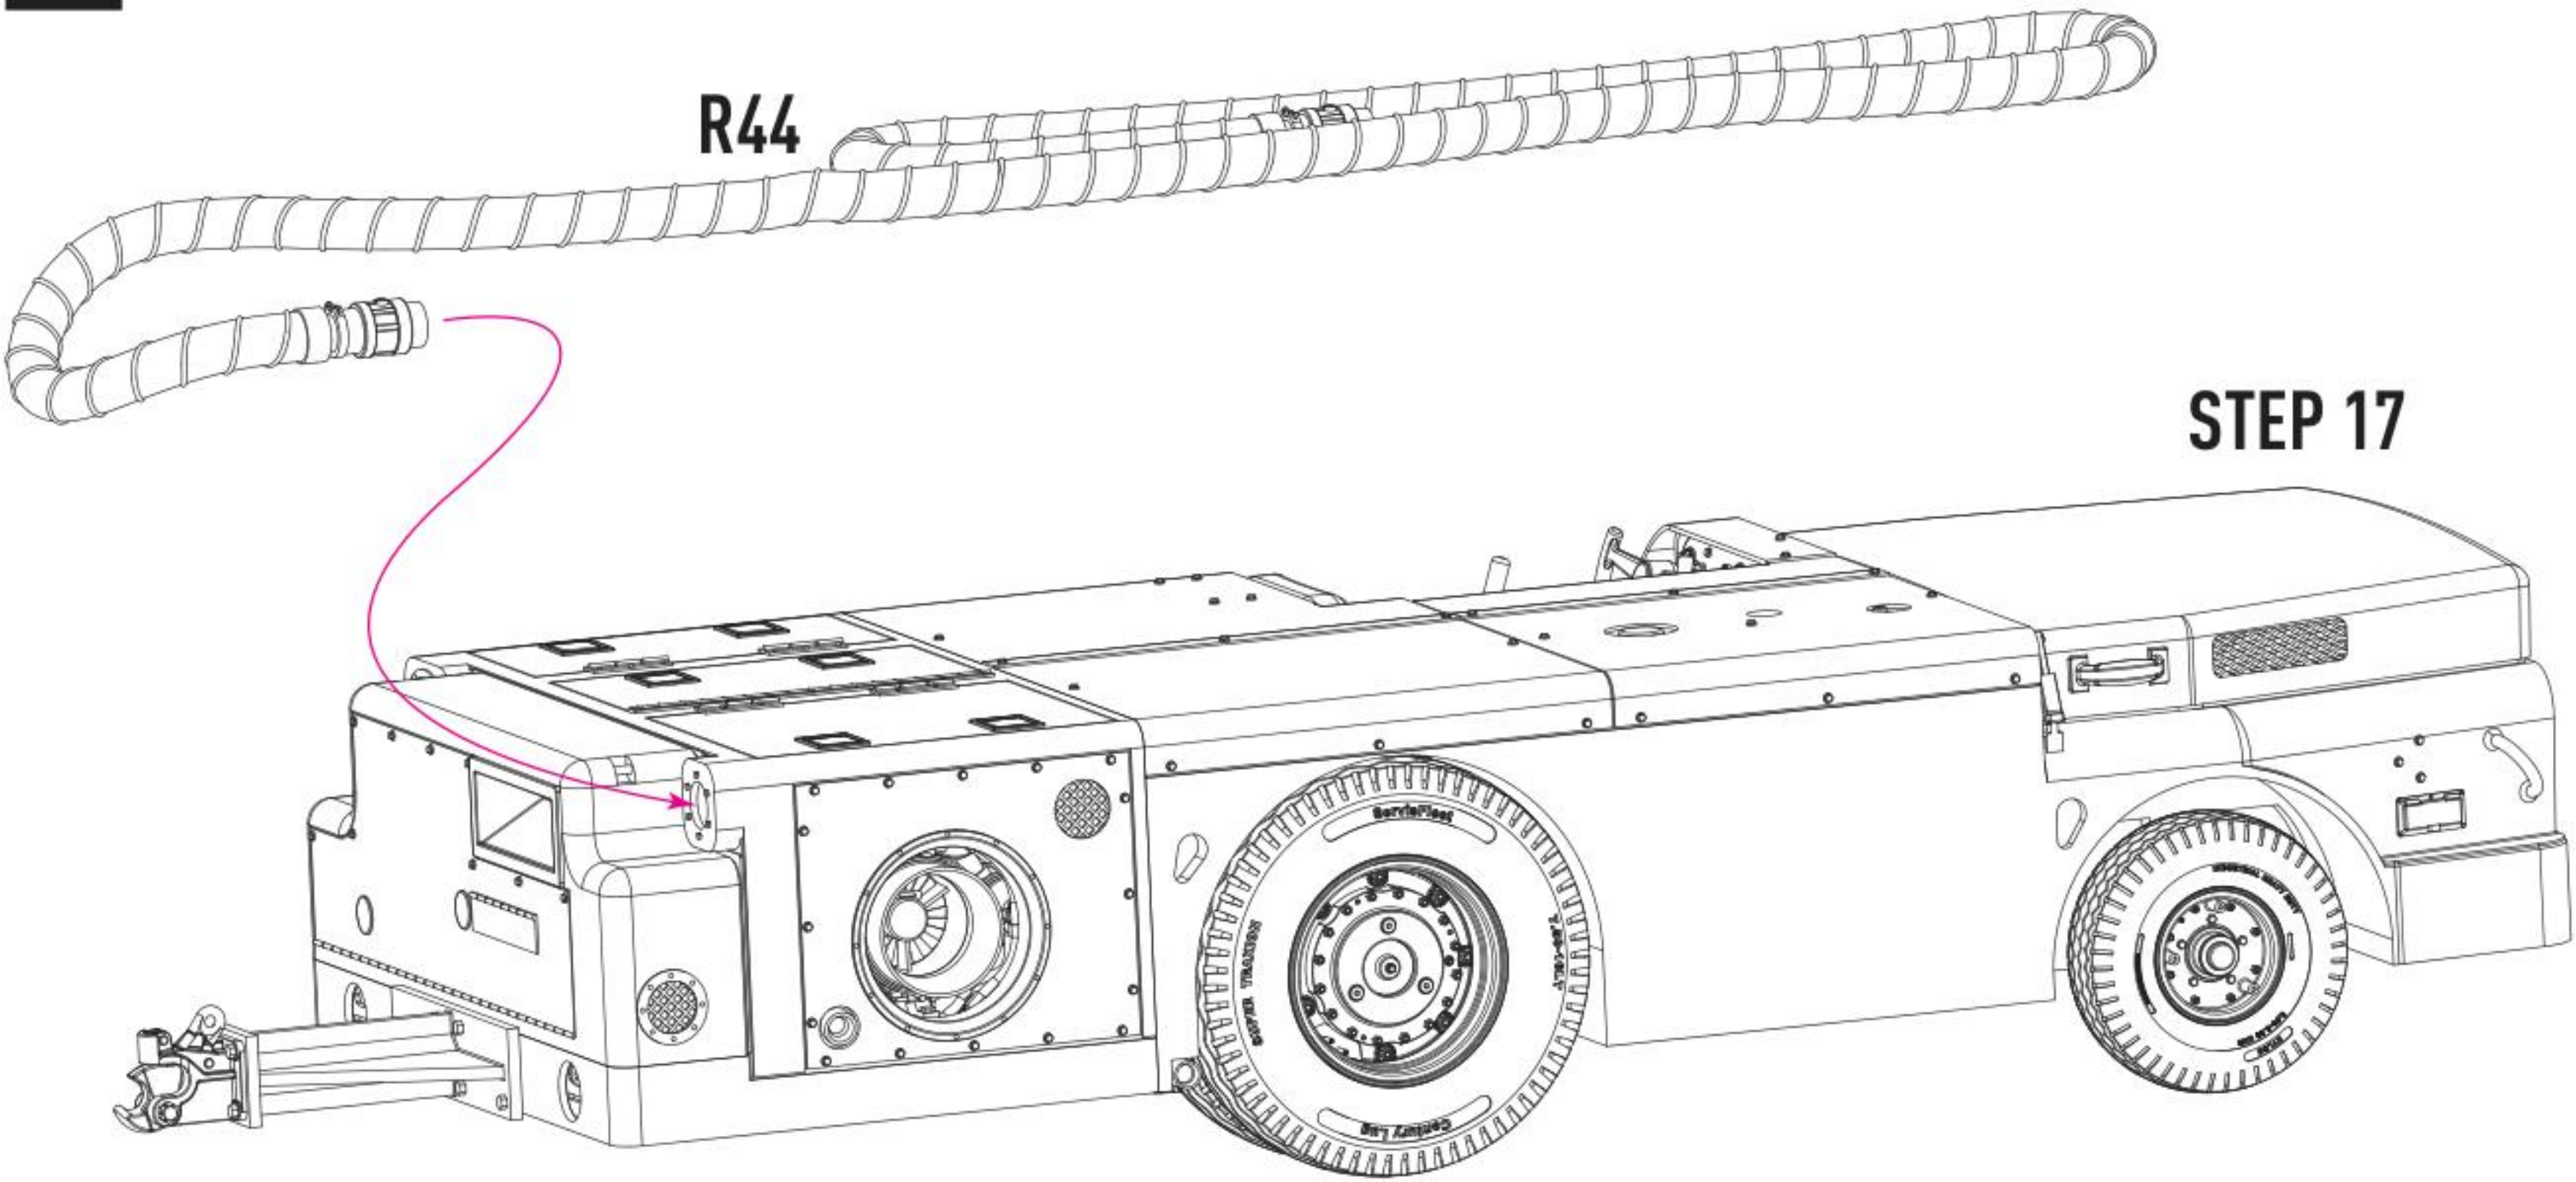


19

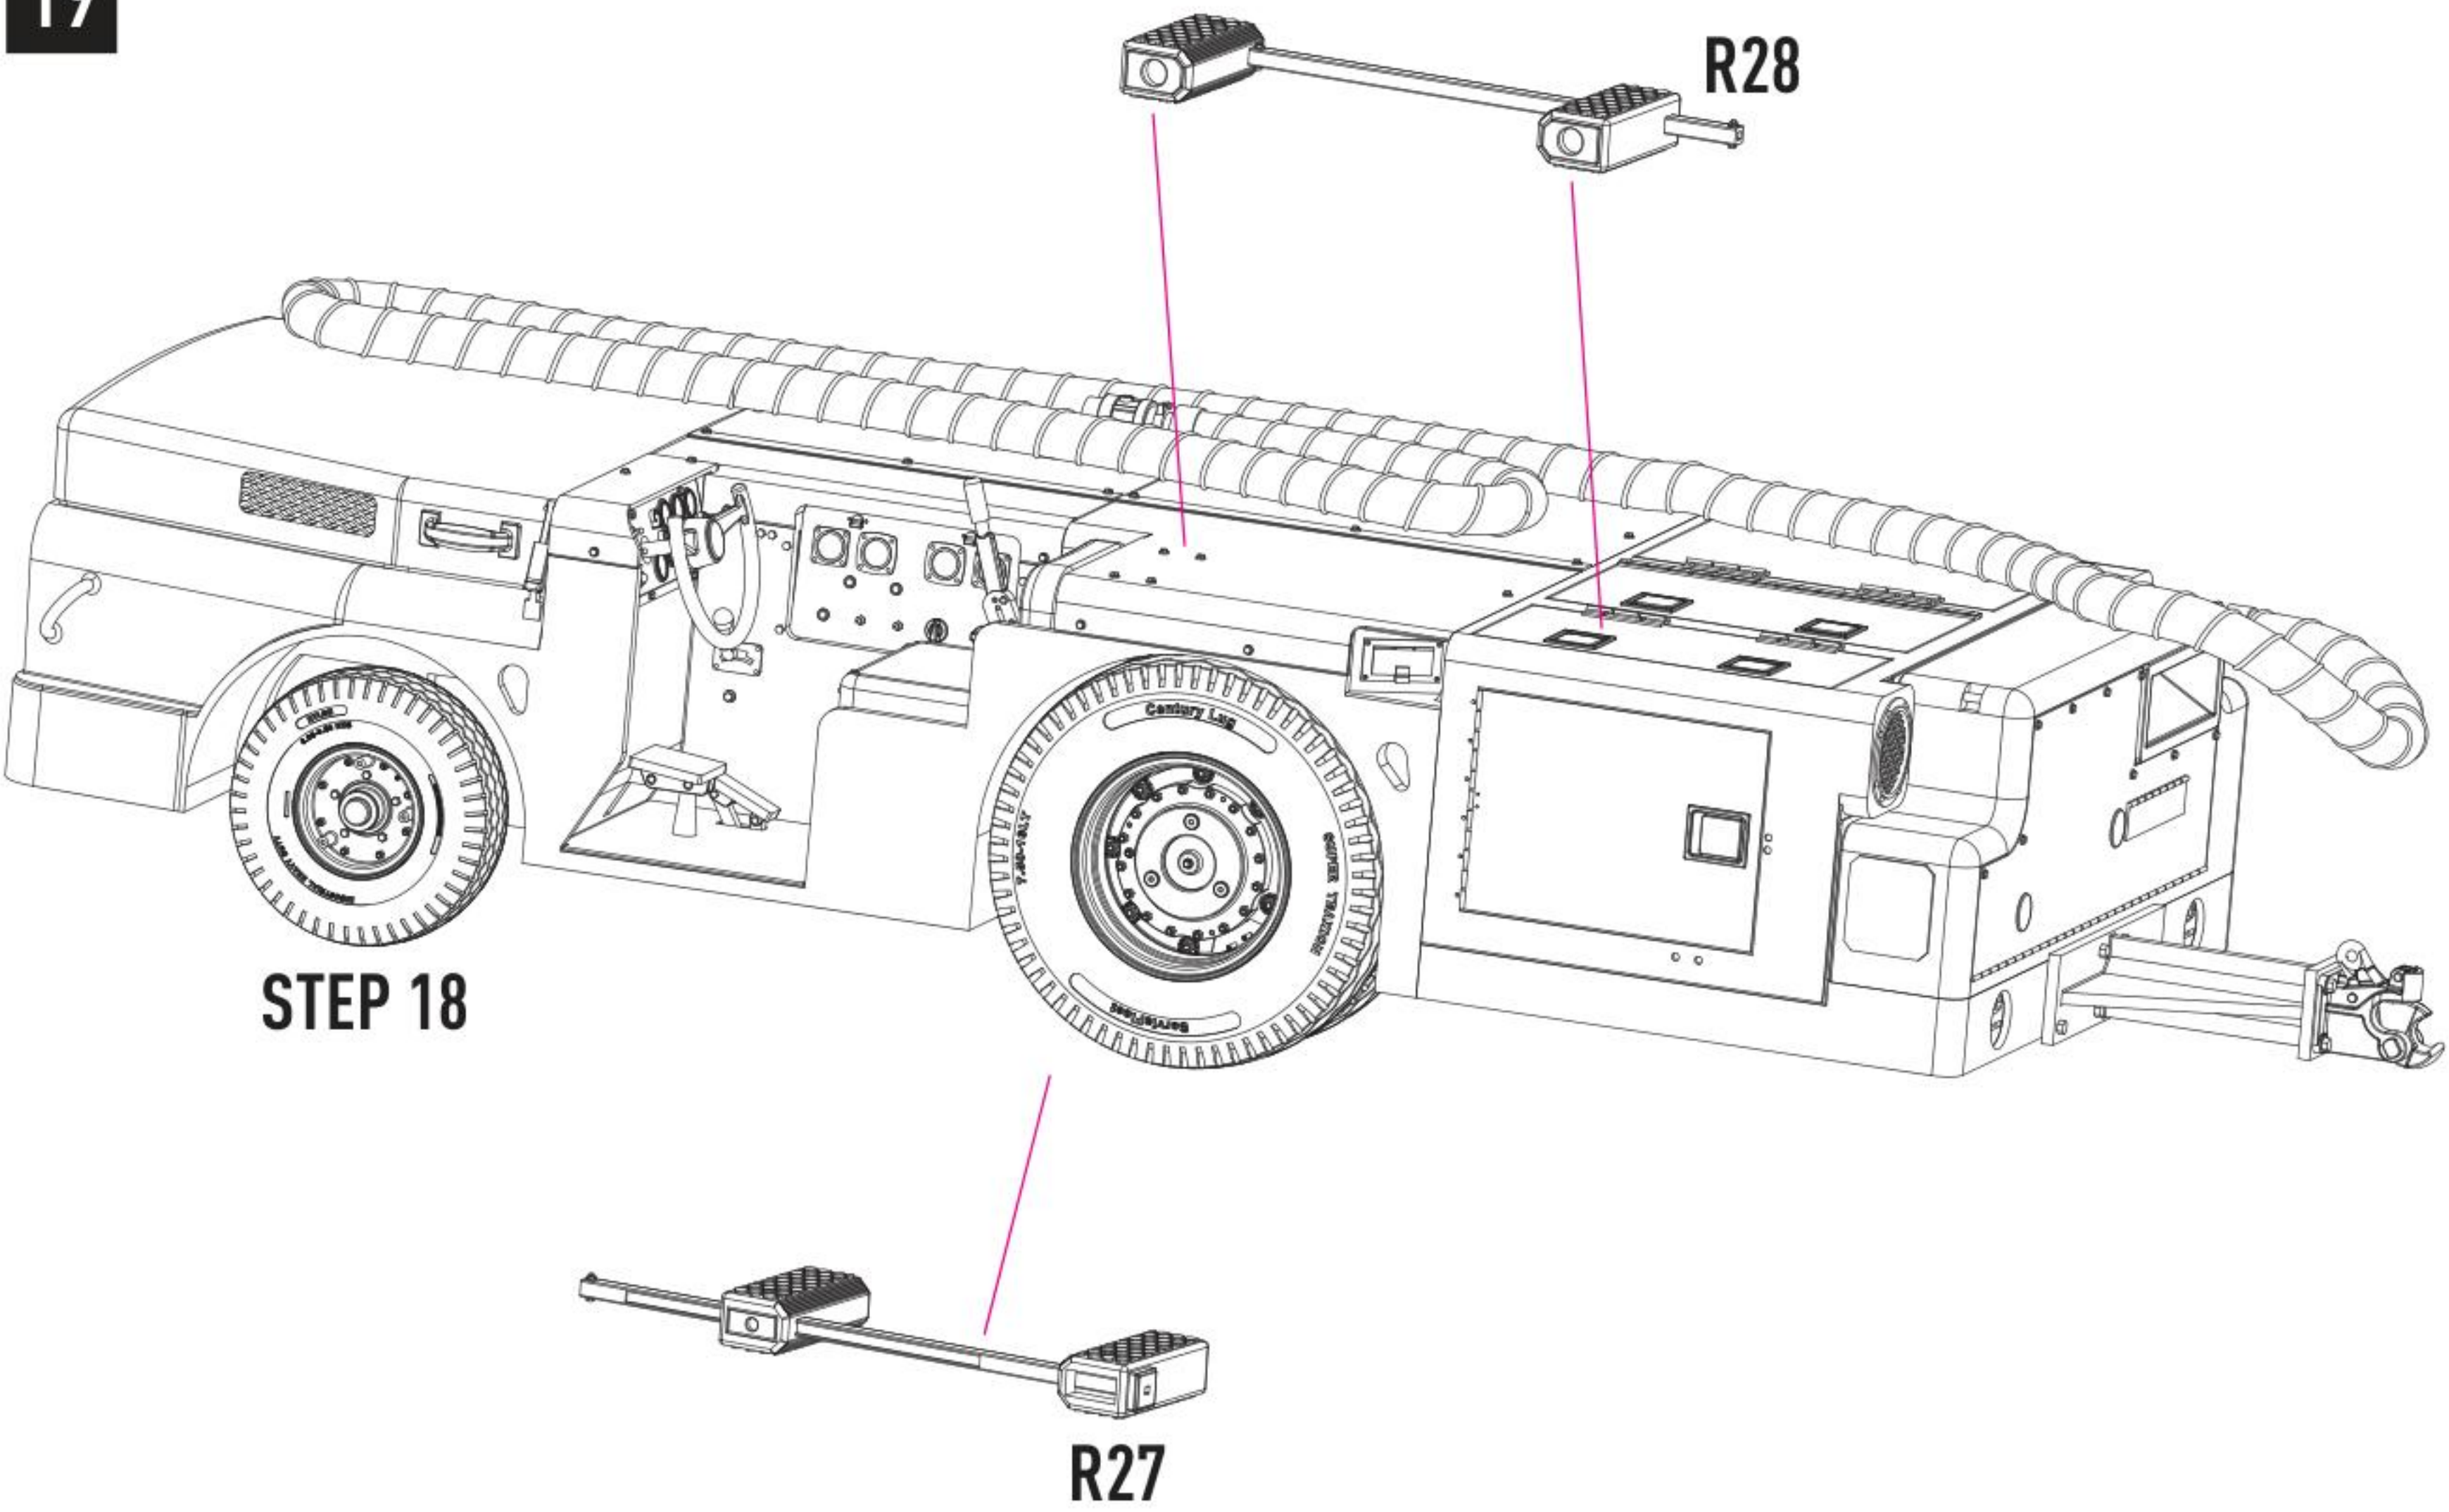


20

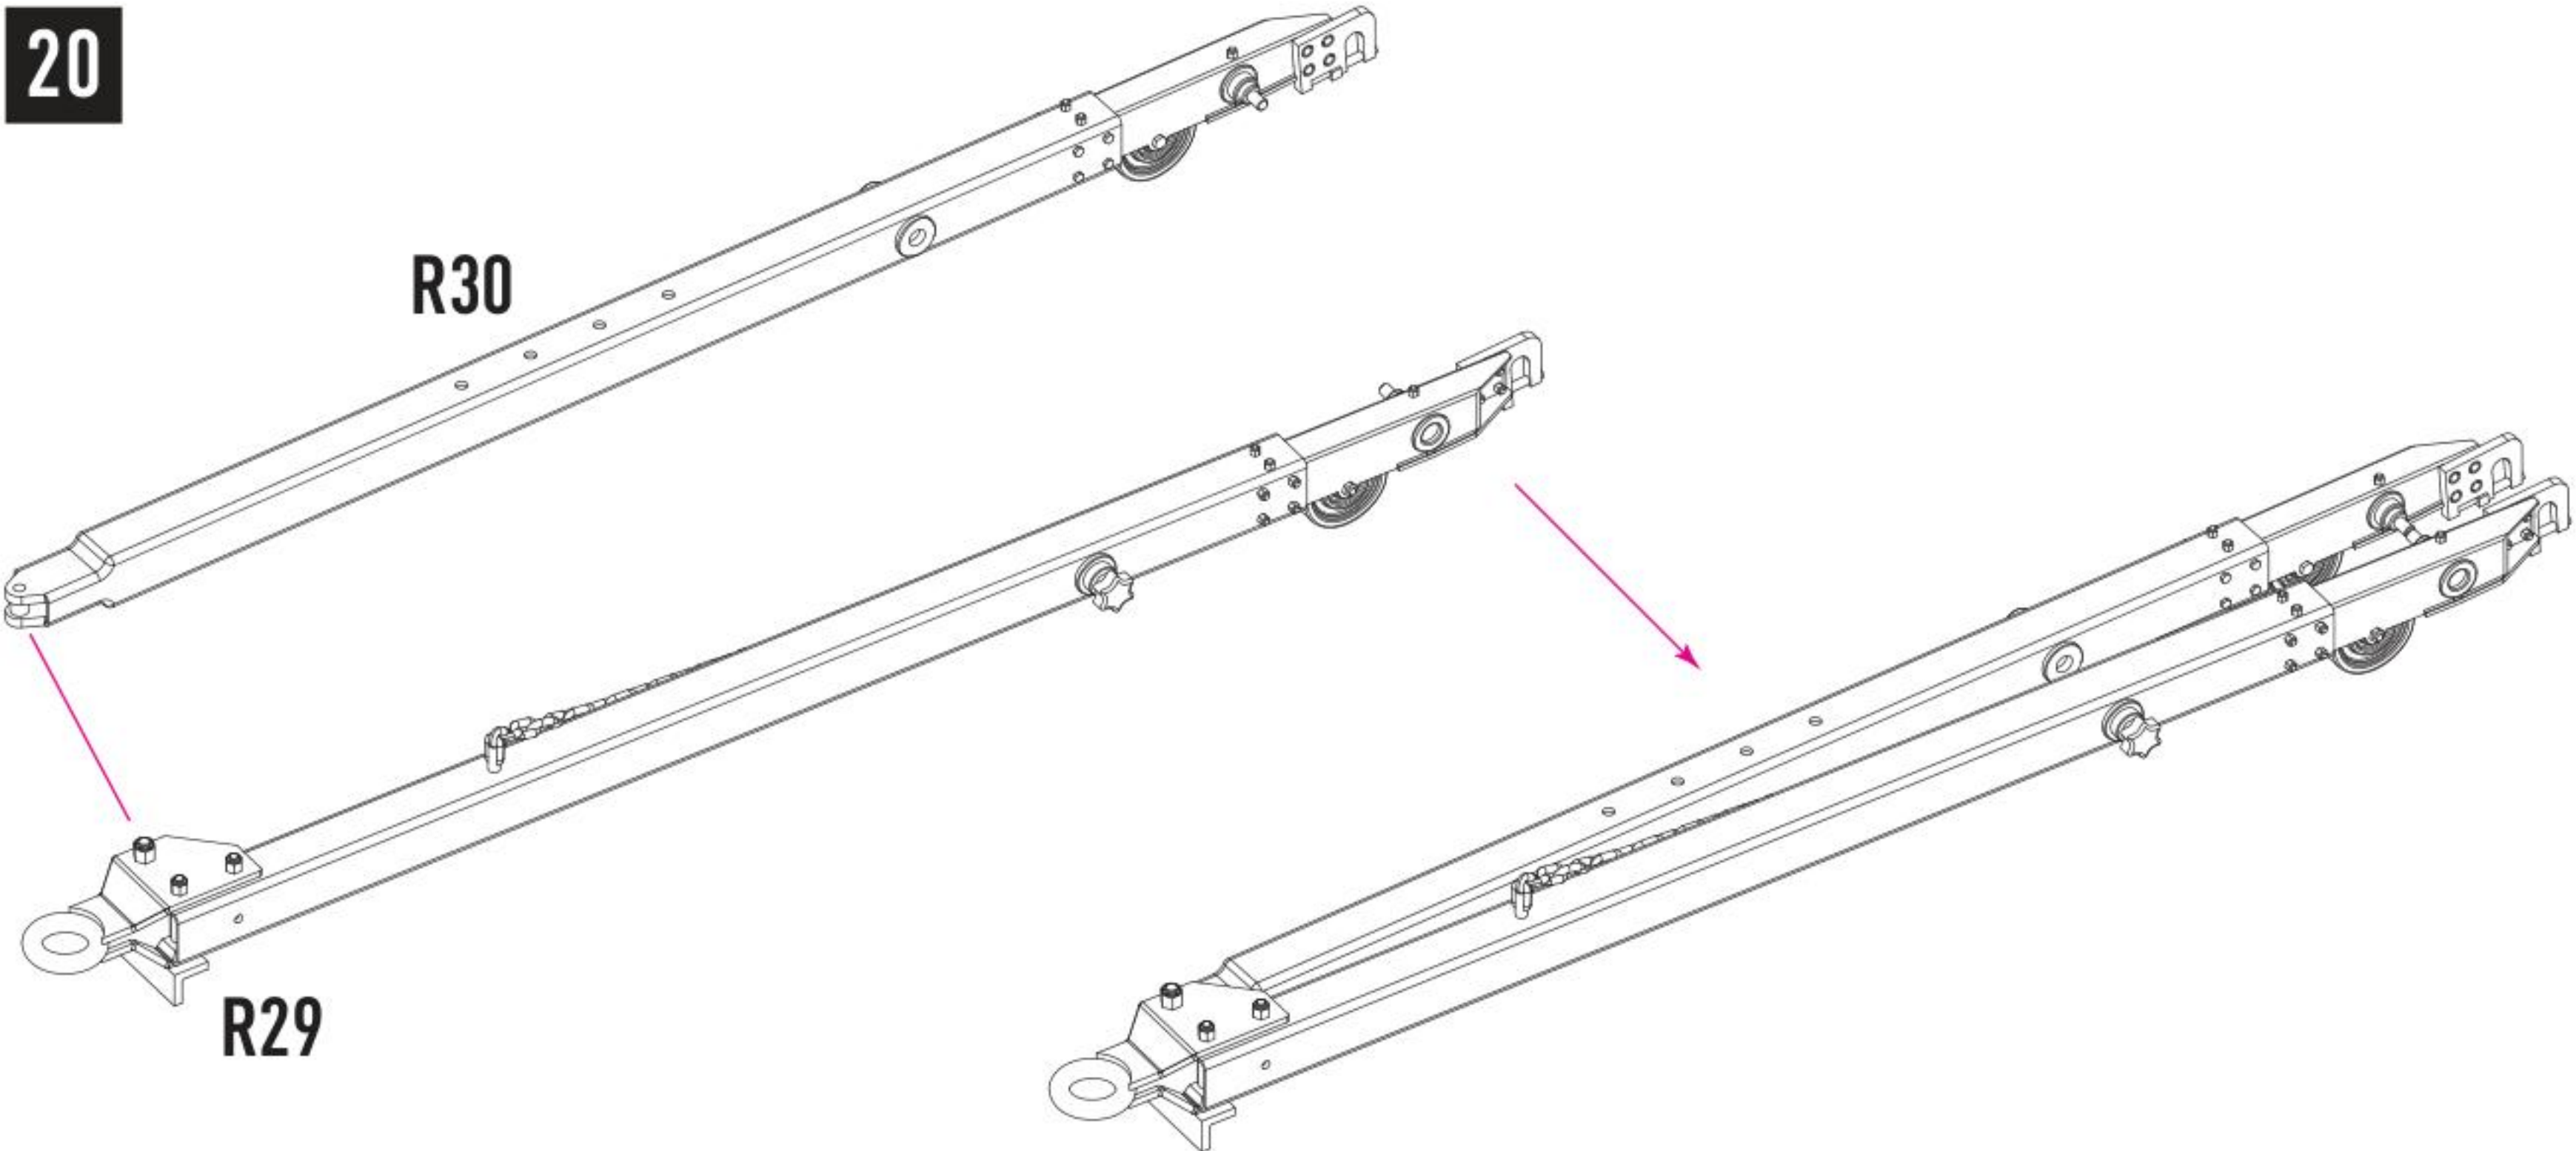


21

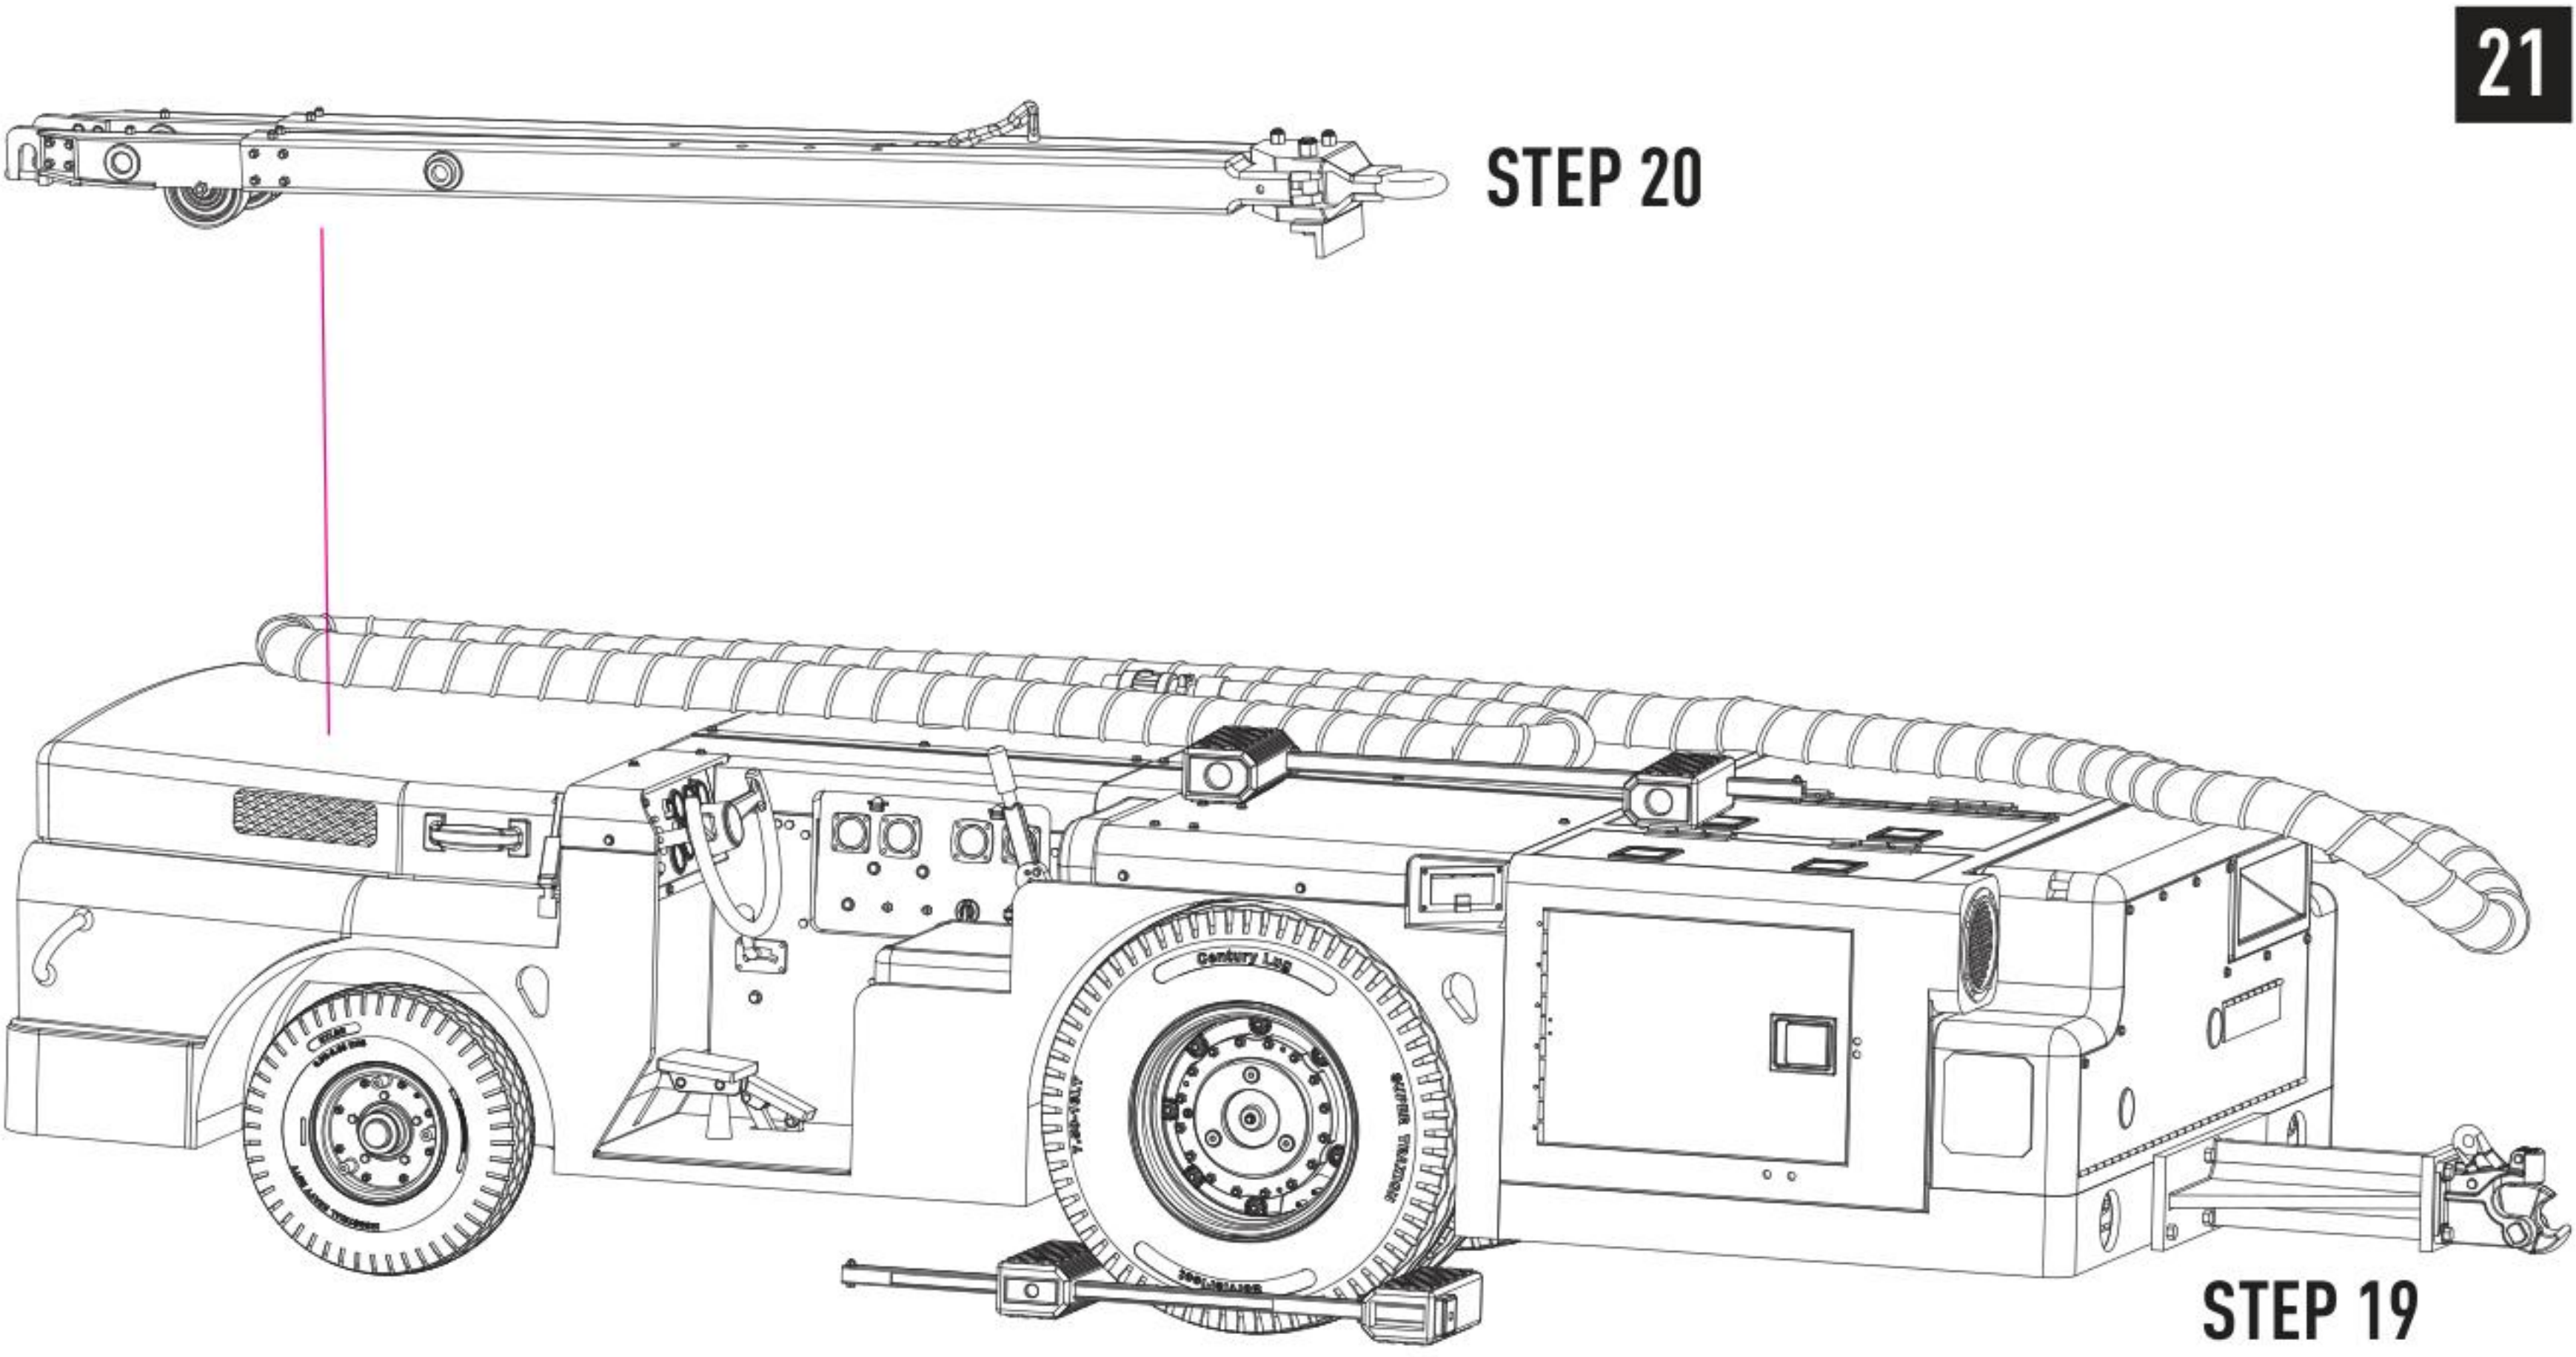

22

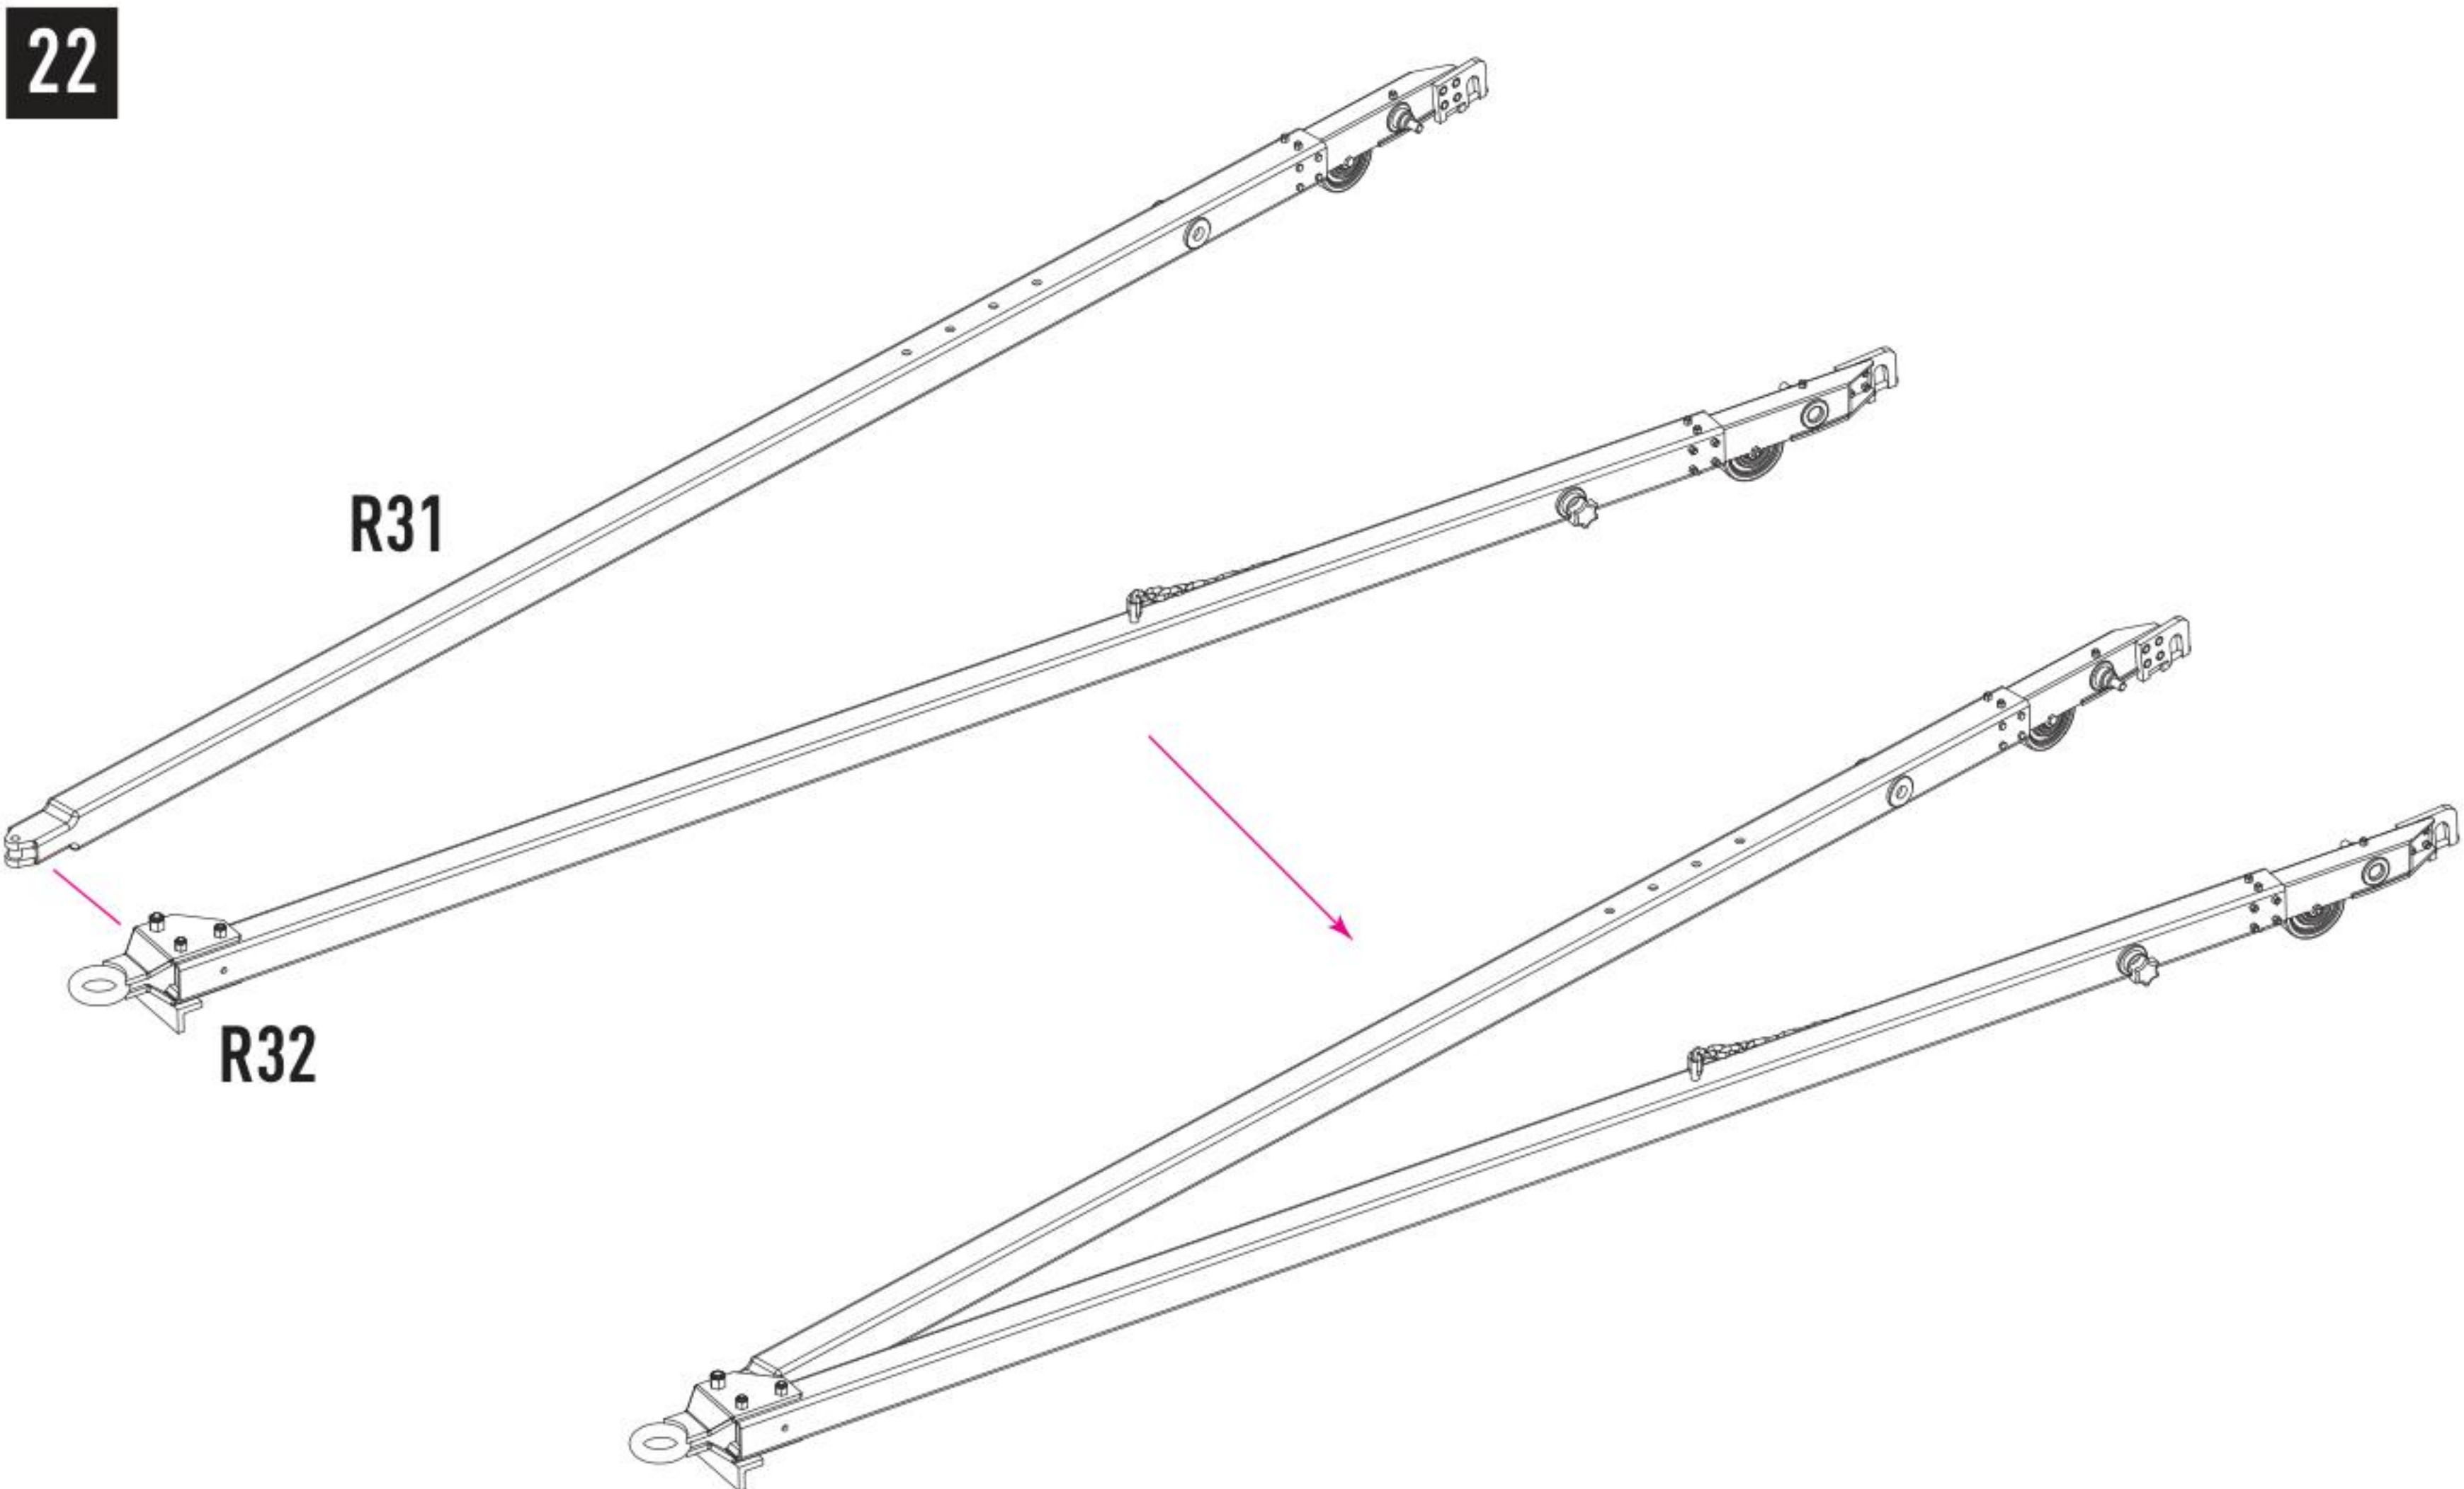

STEP 21

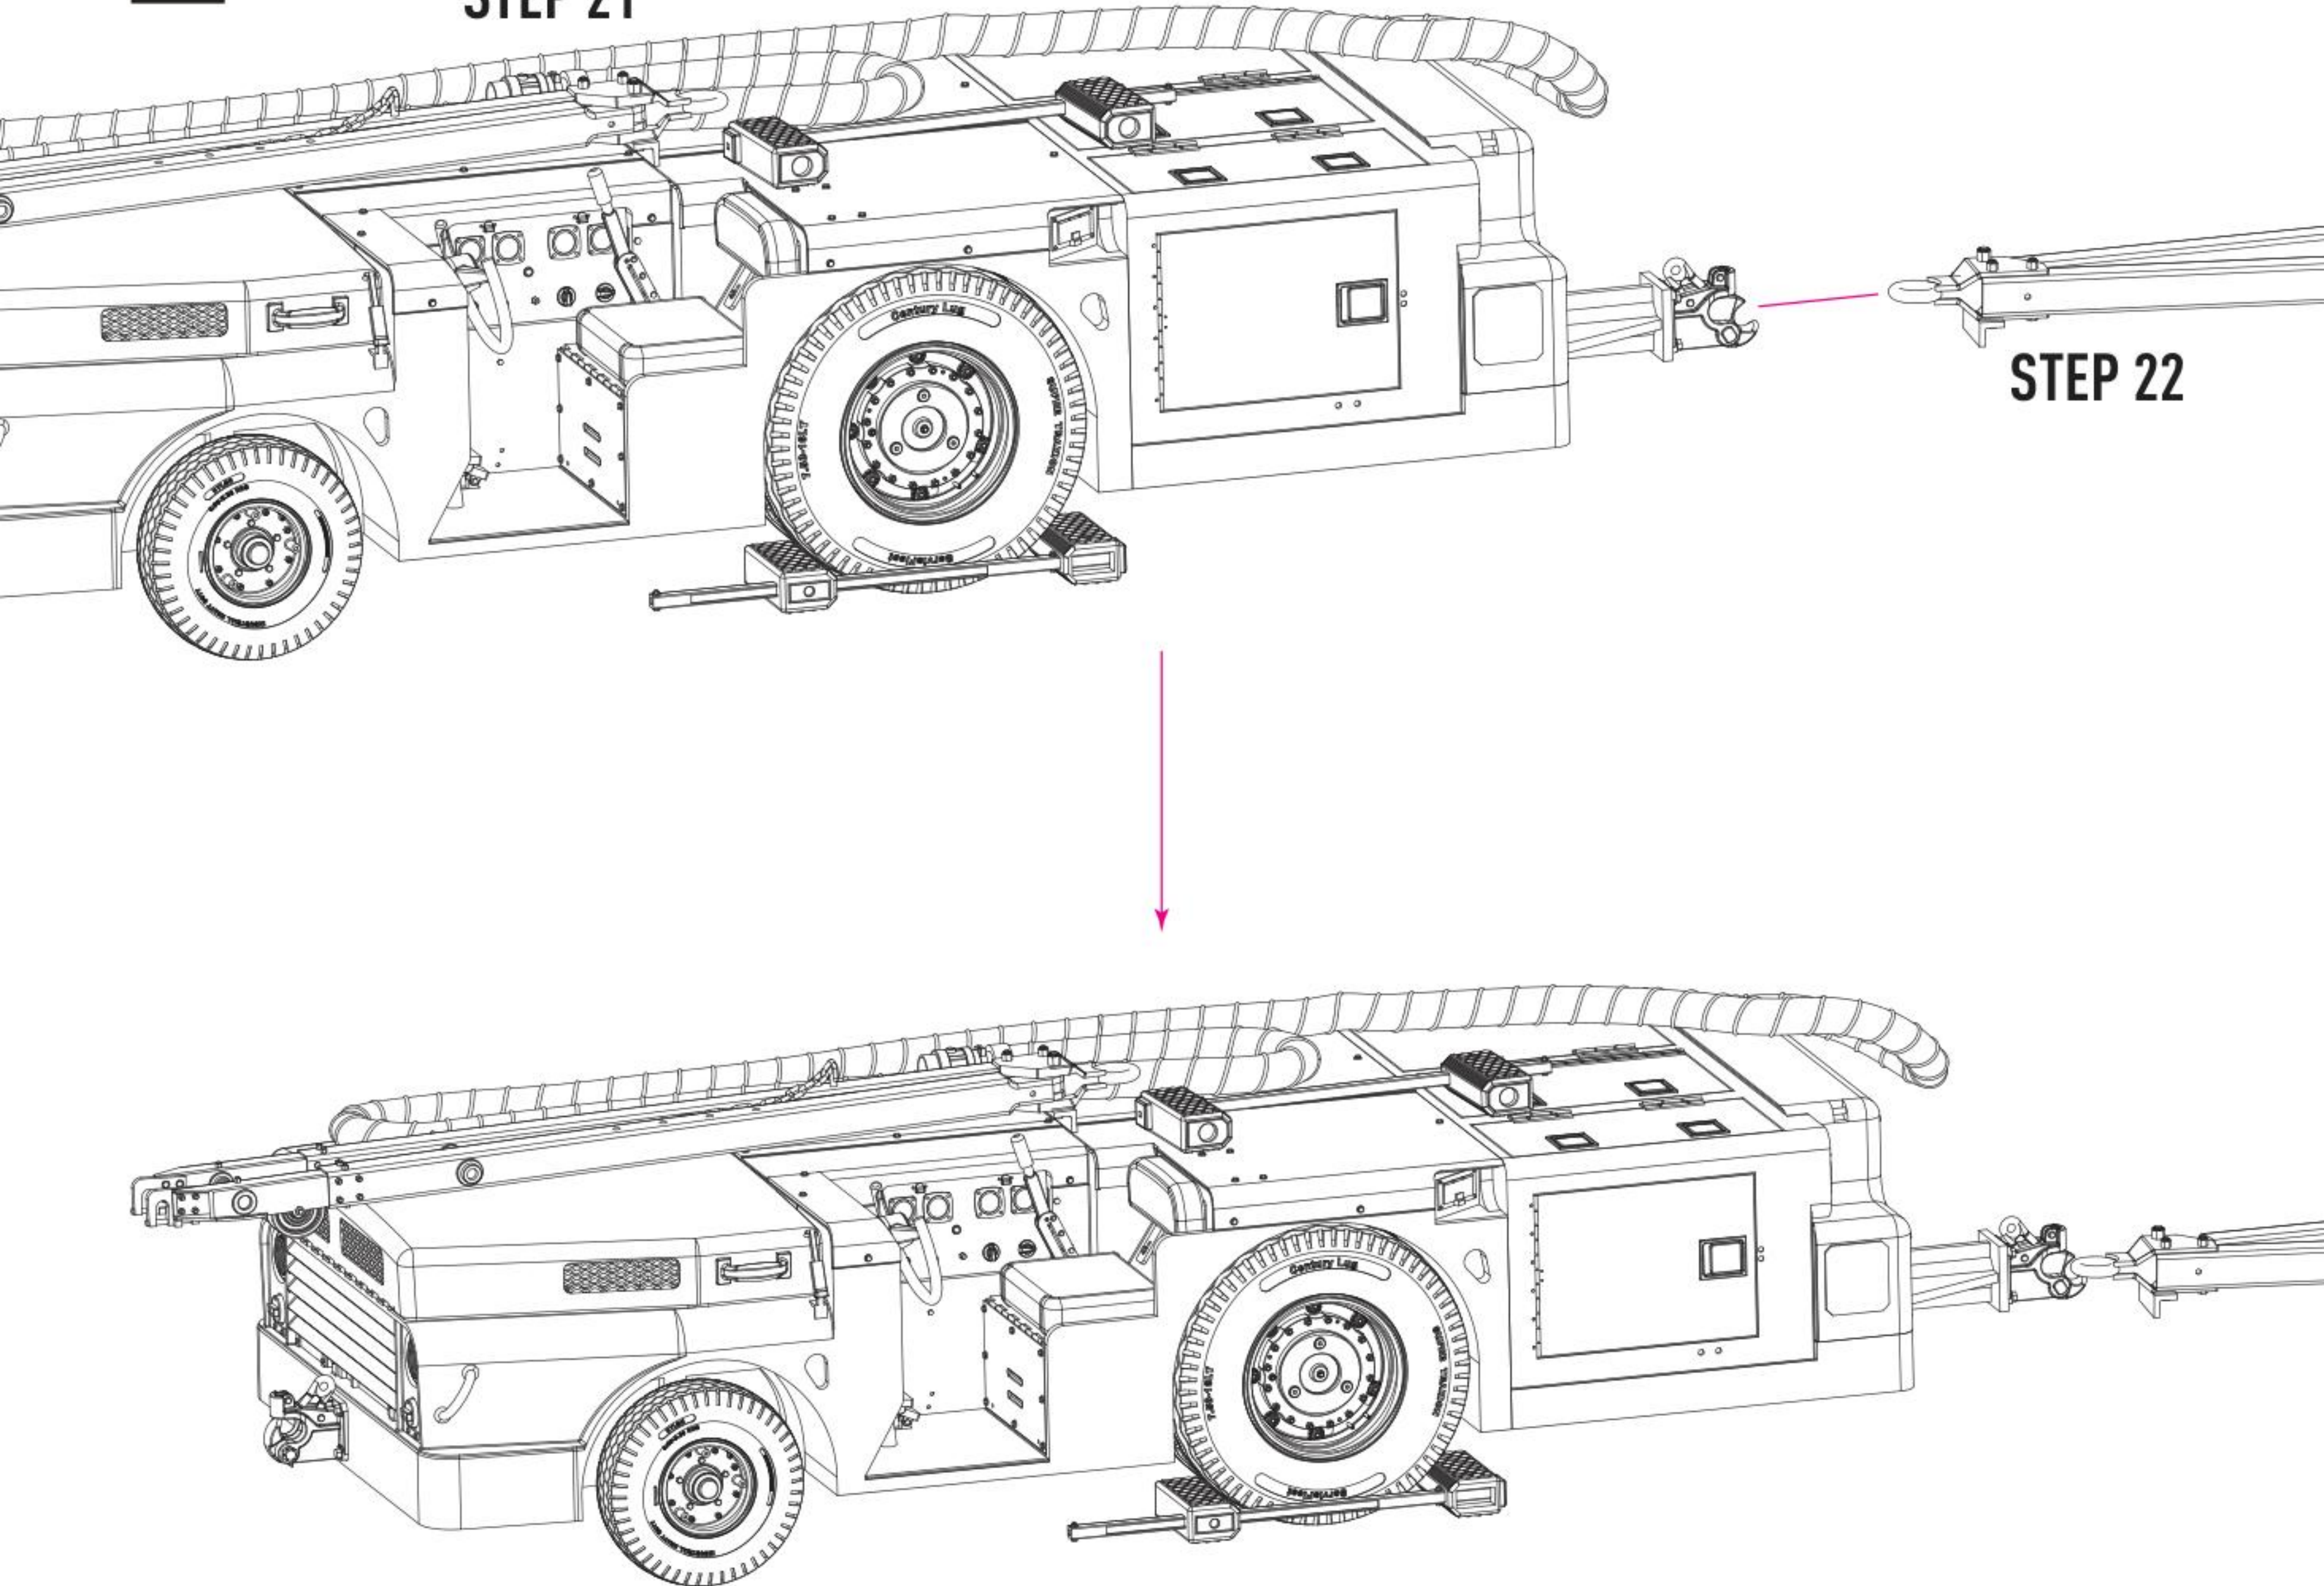

STEP 22

DECAL INSTRUCTION

