

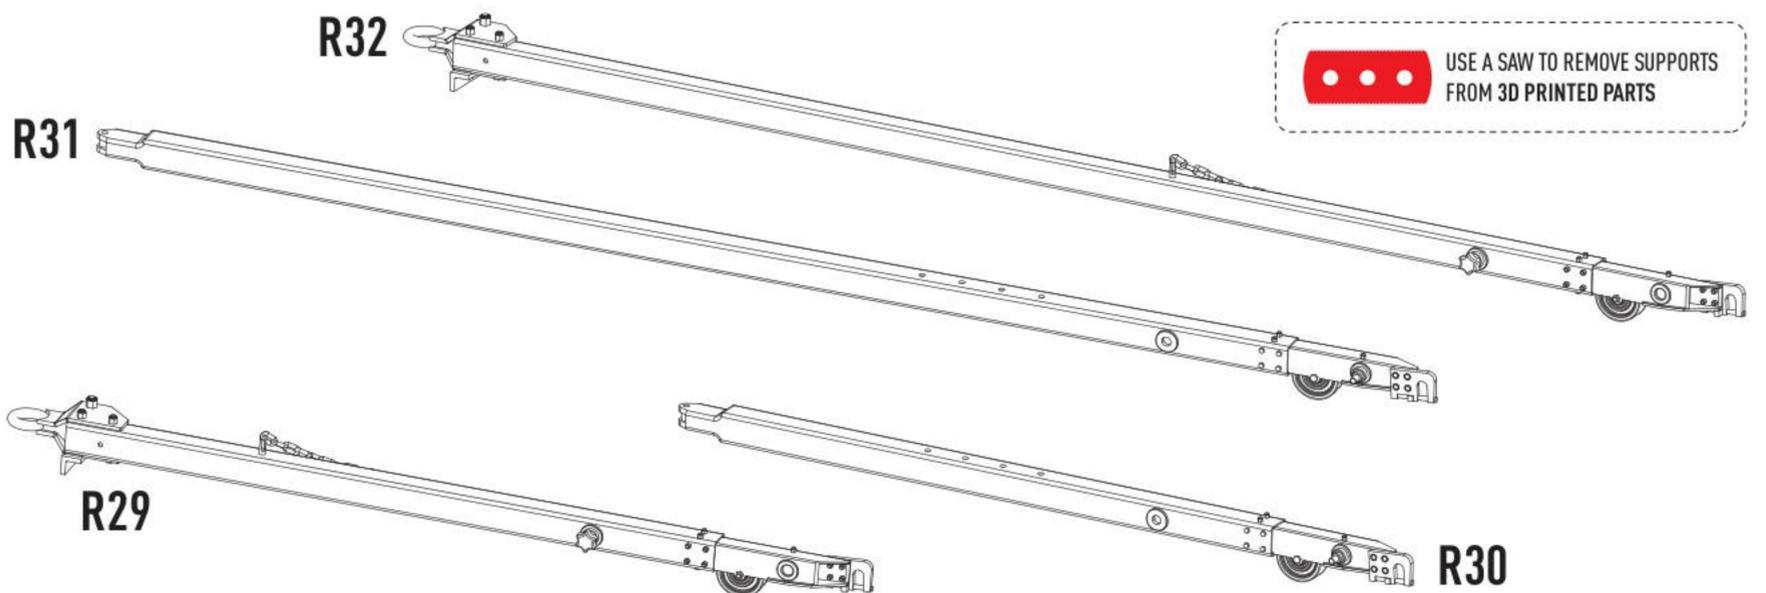
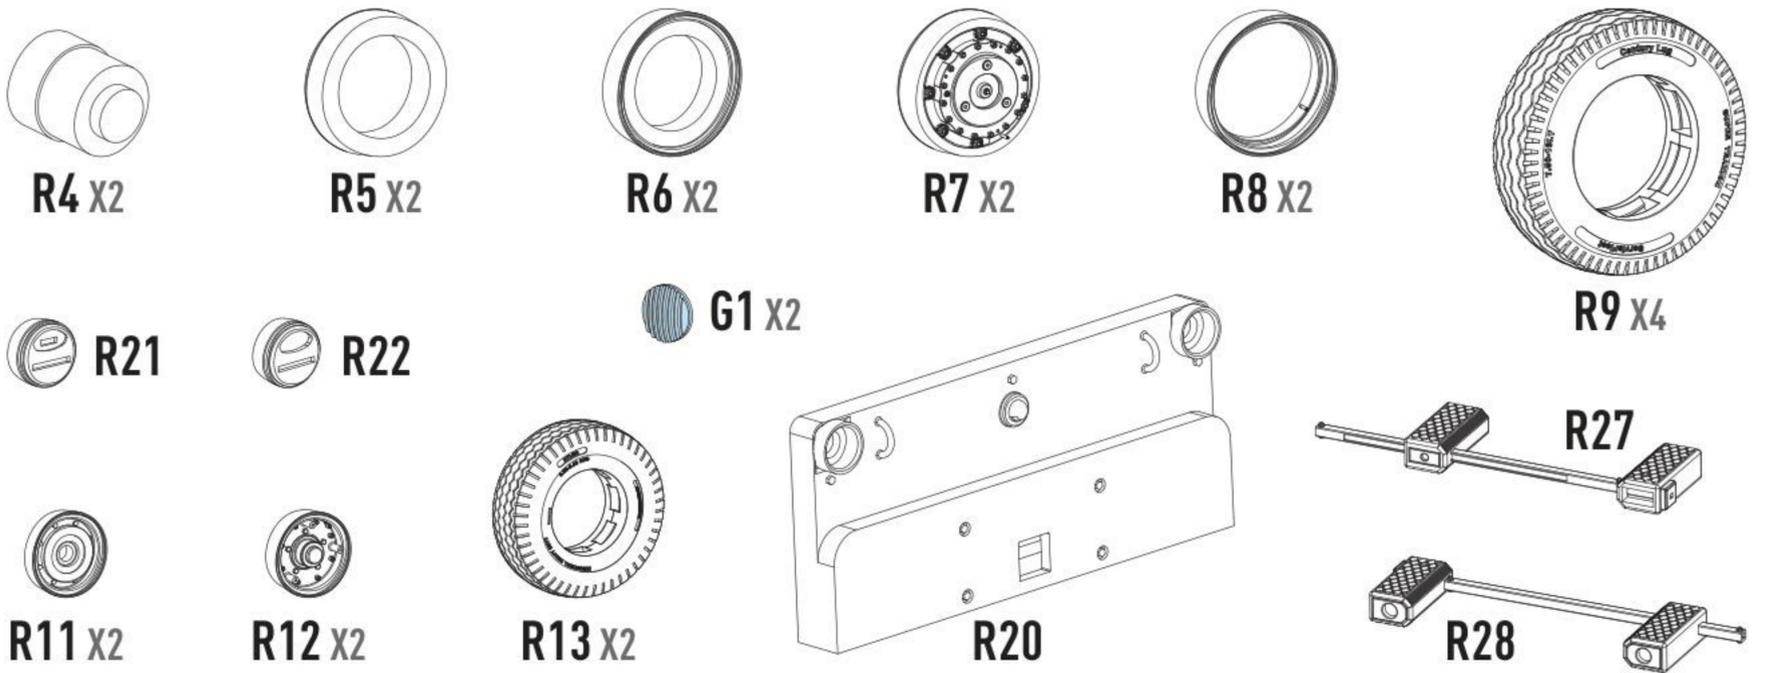


DETAILS AFTER REMOVAL FROM SUPPORTS

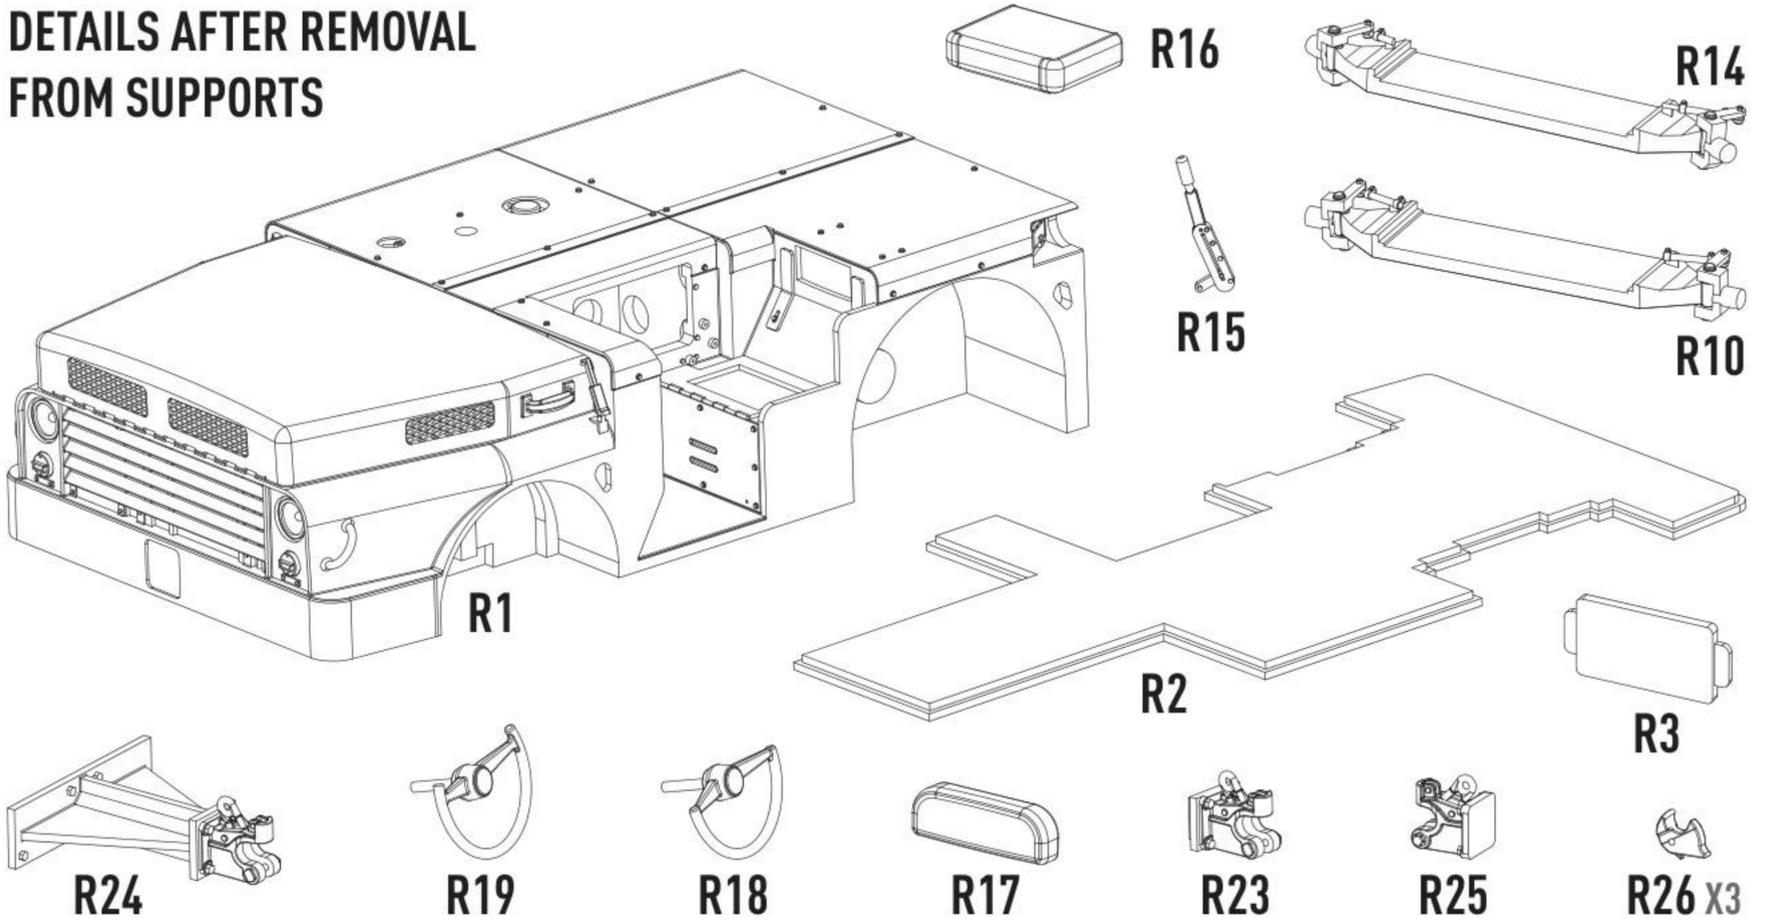


**USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS**

1

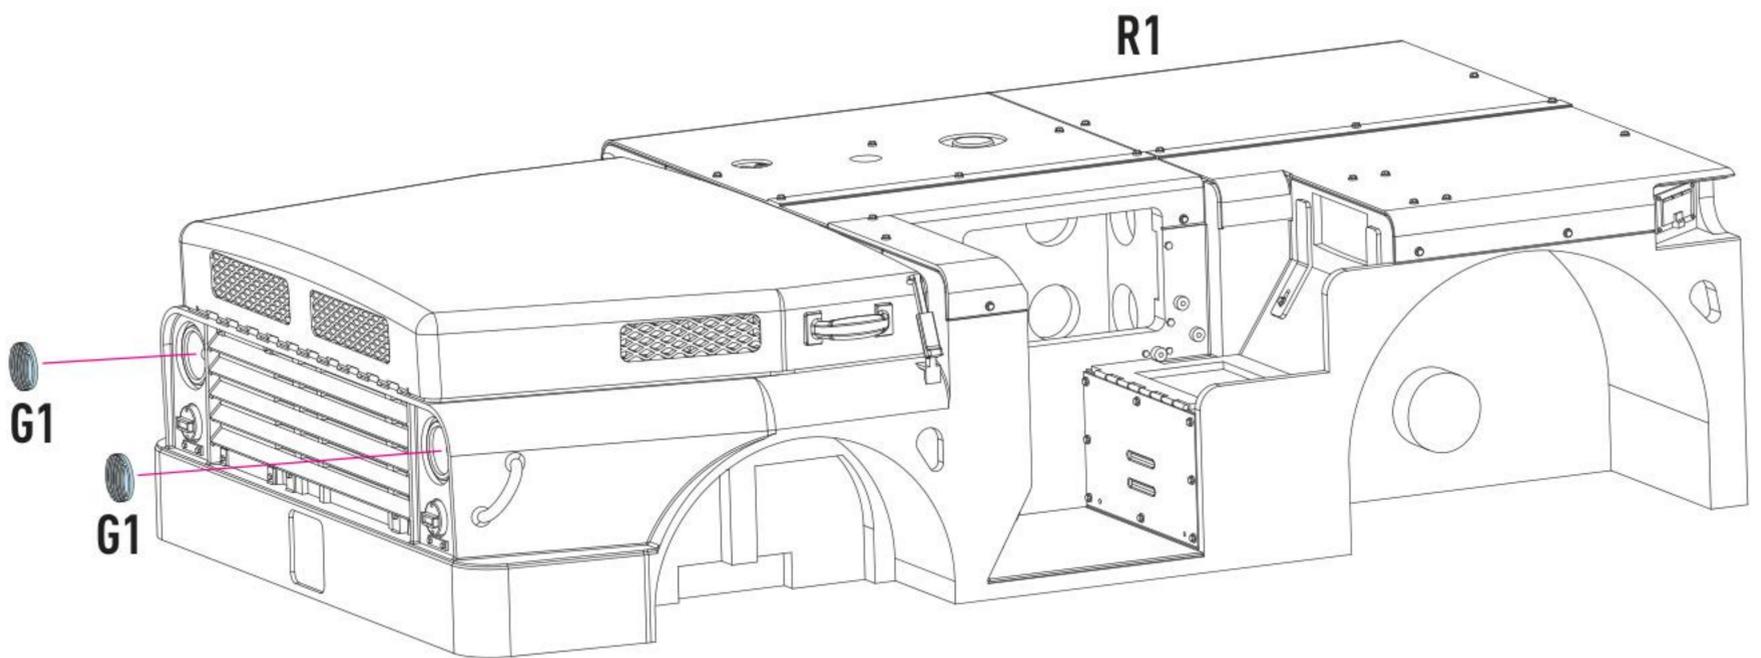


**BEFORE ASSEMBLY,
COVER TRANSPARENT PARTS WITH GLOSSY VARNISH**


2

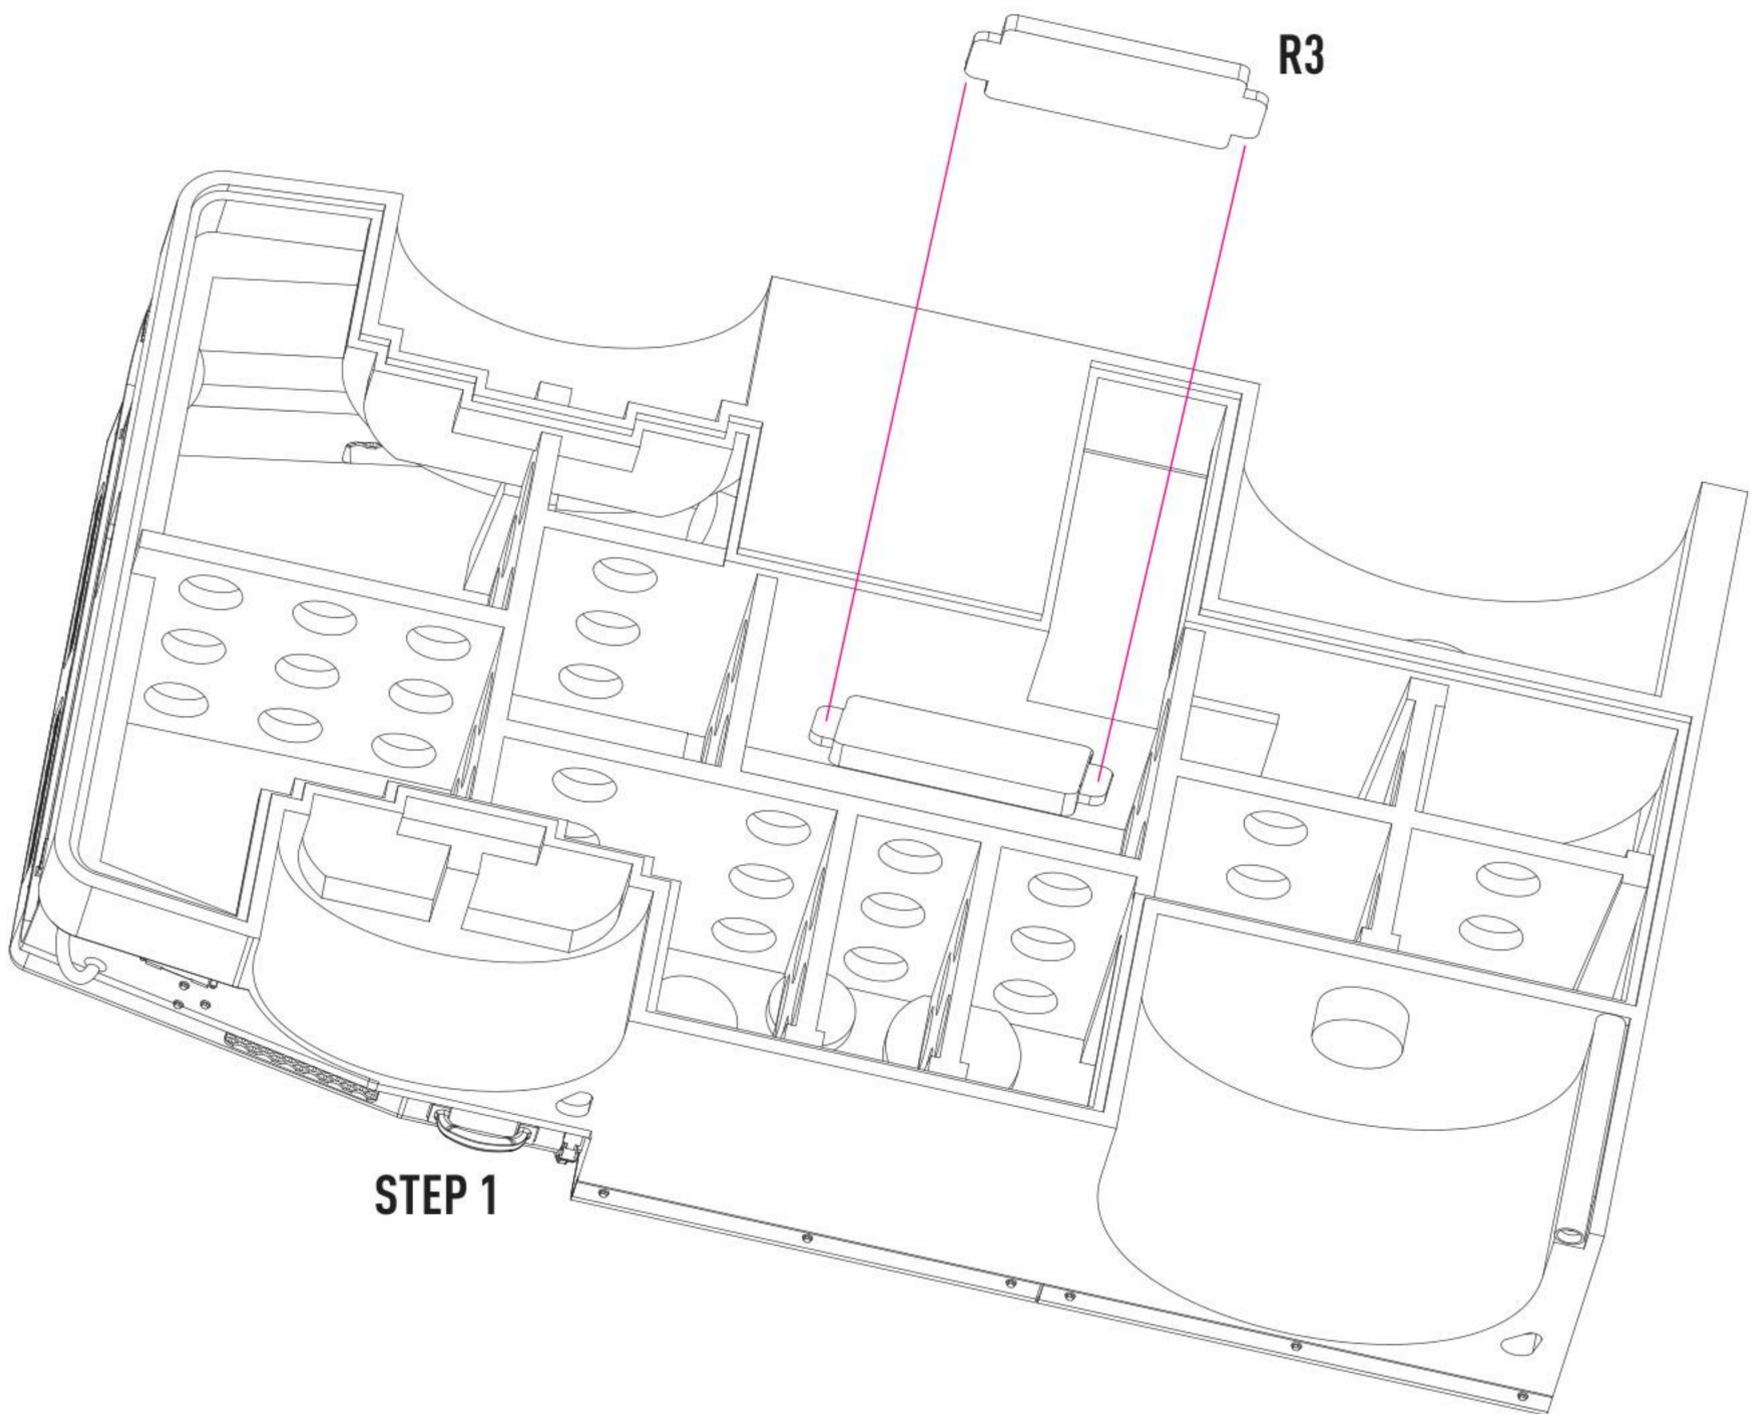

3

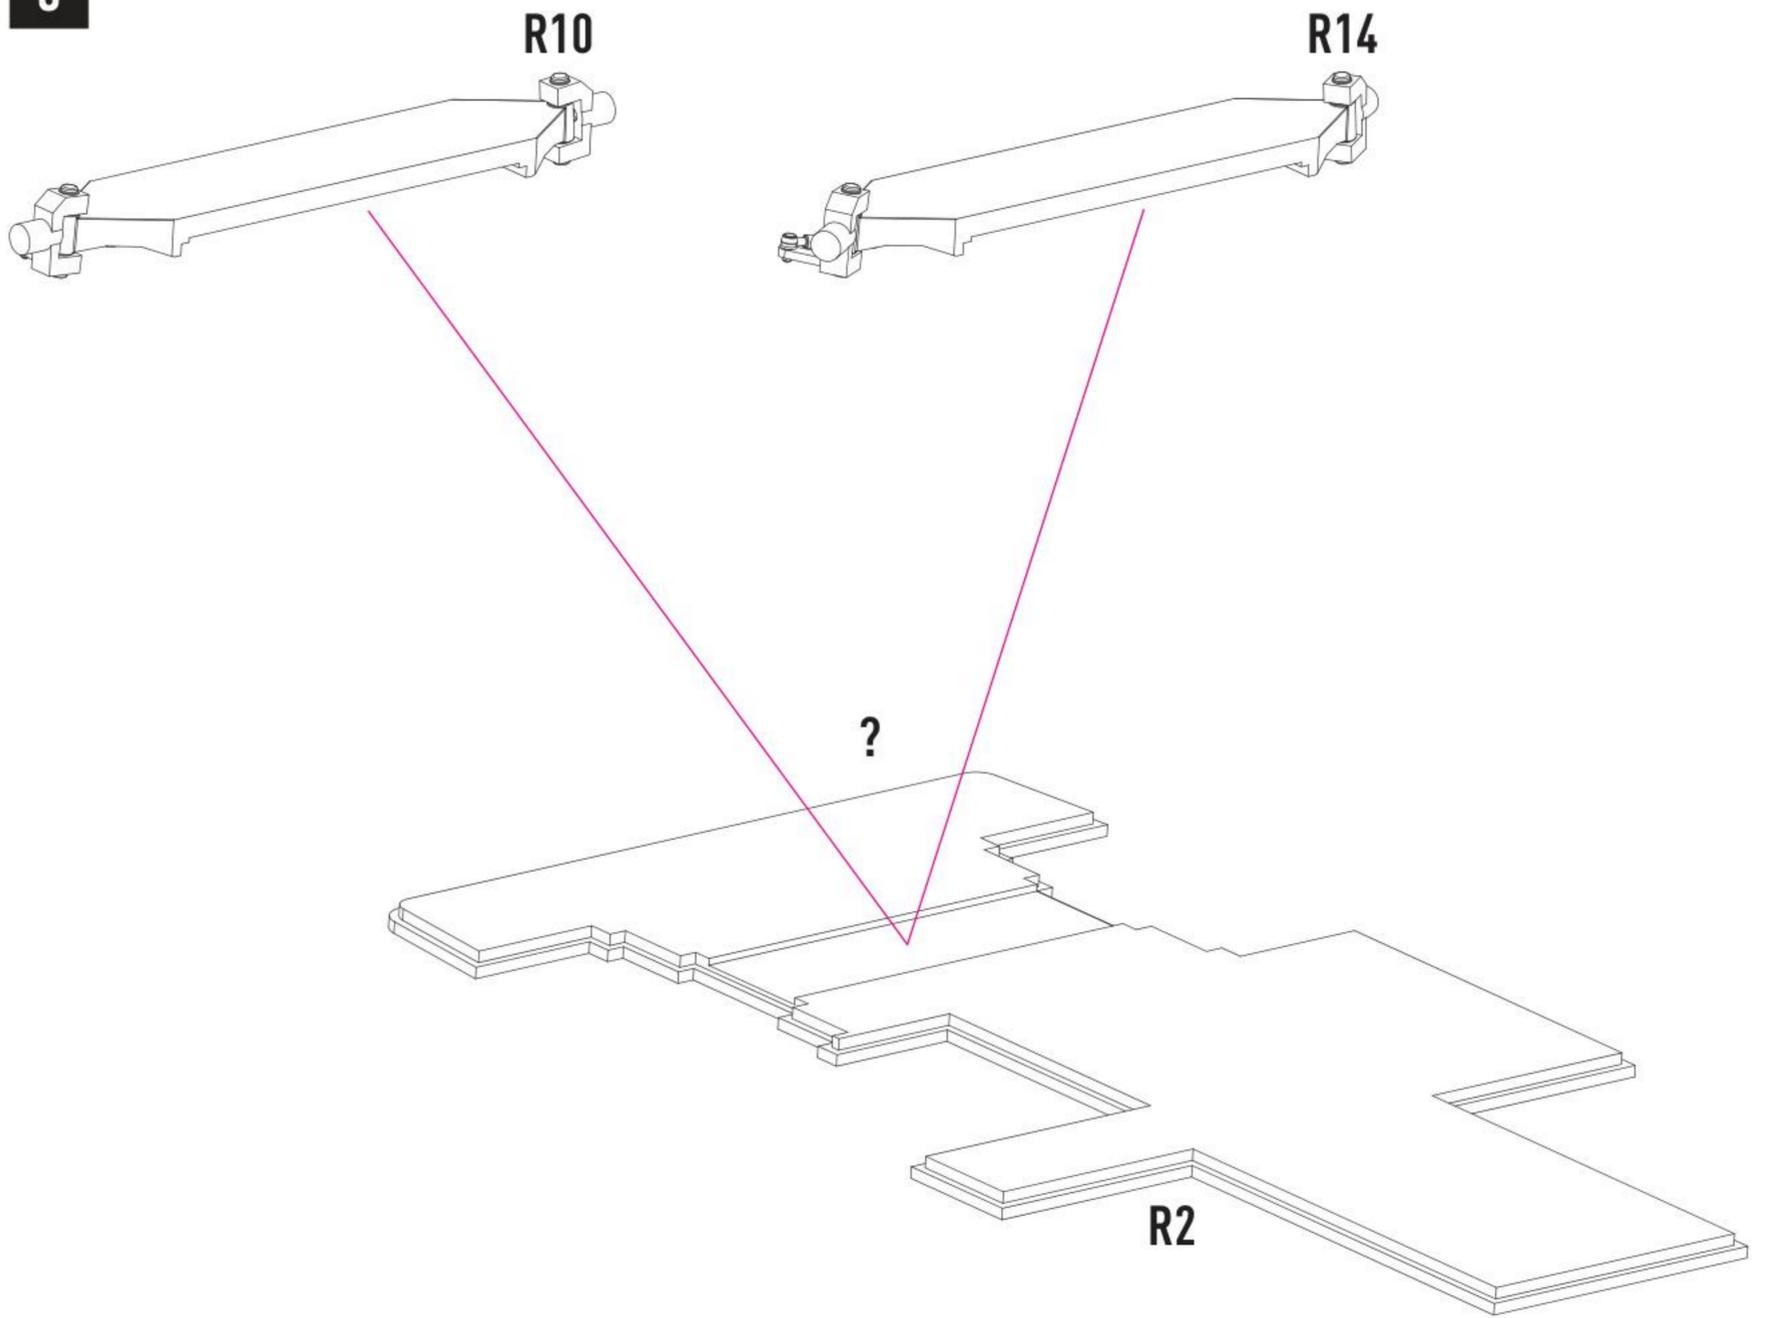


4

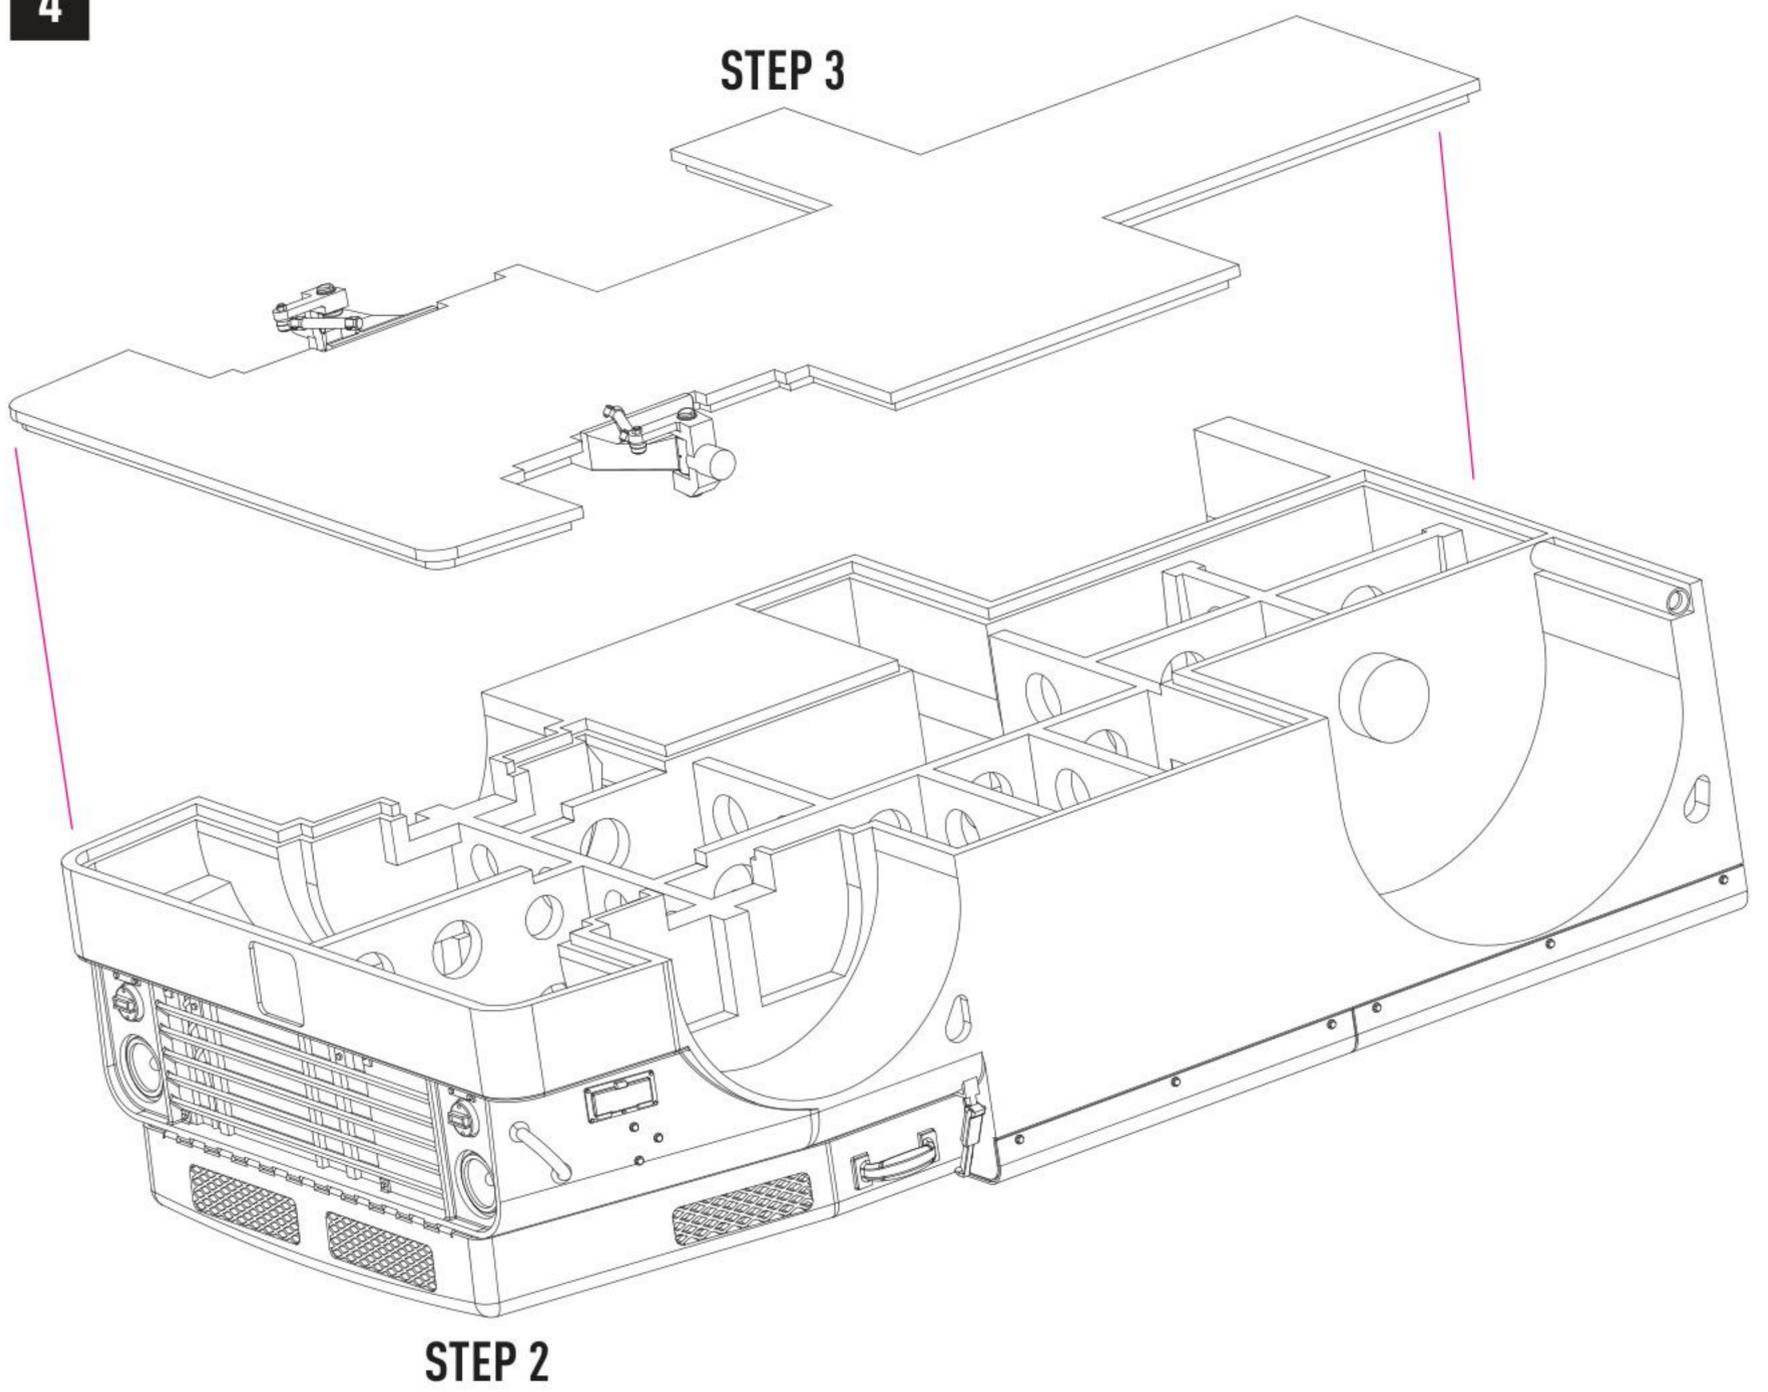


5


STEP 4

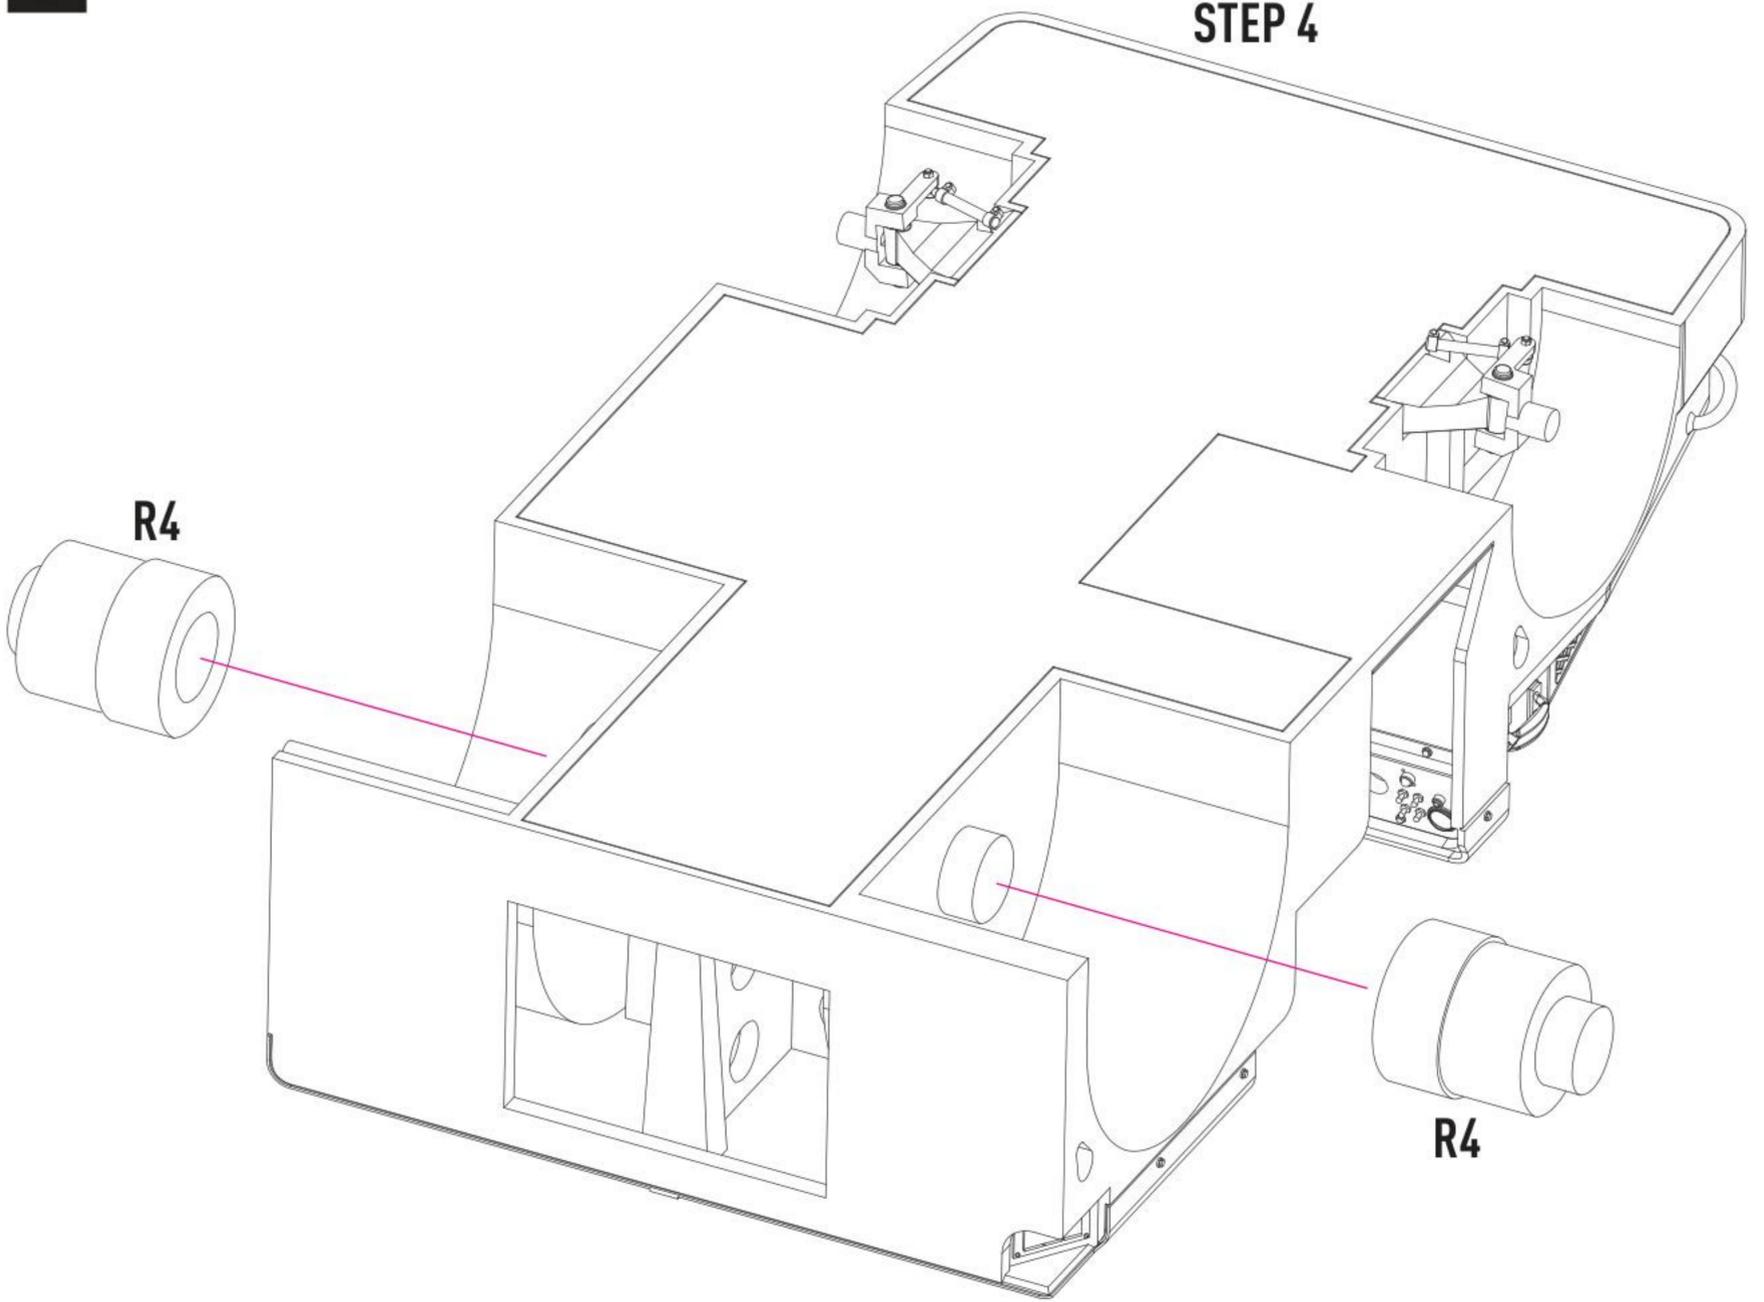


6 X2

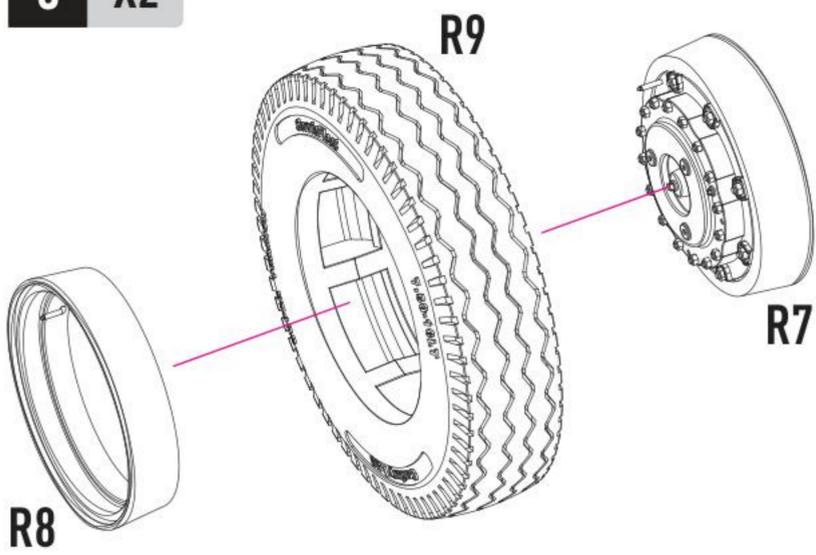


7 X2

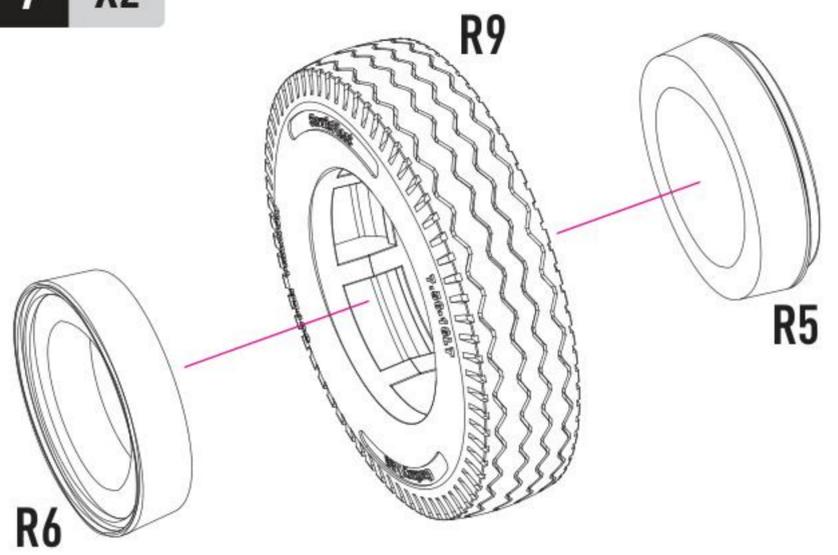


8 X2

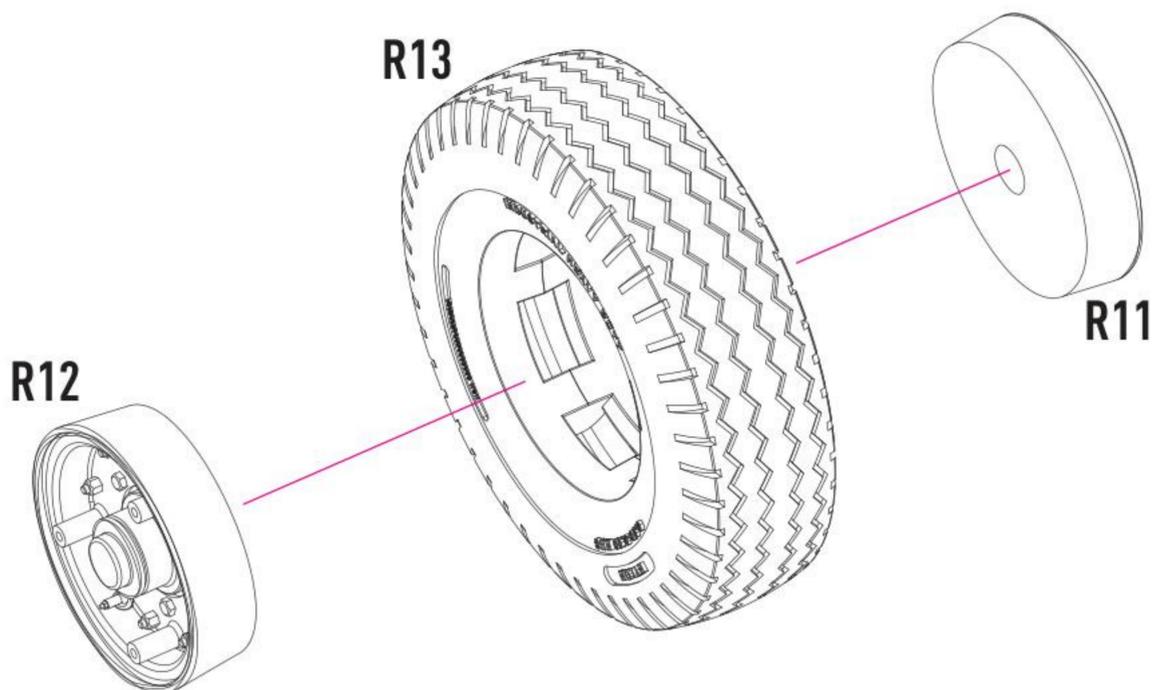



STEP 5

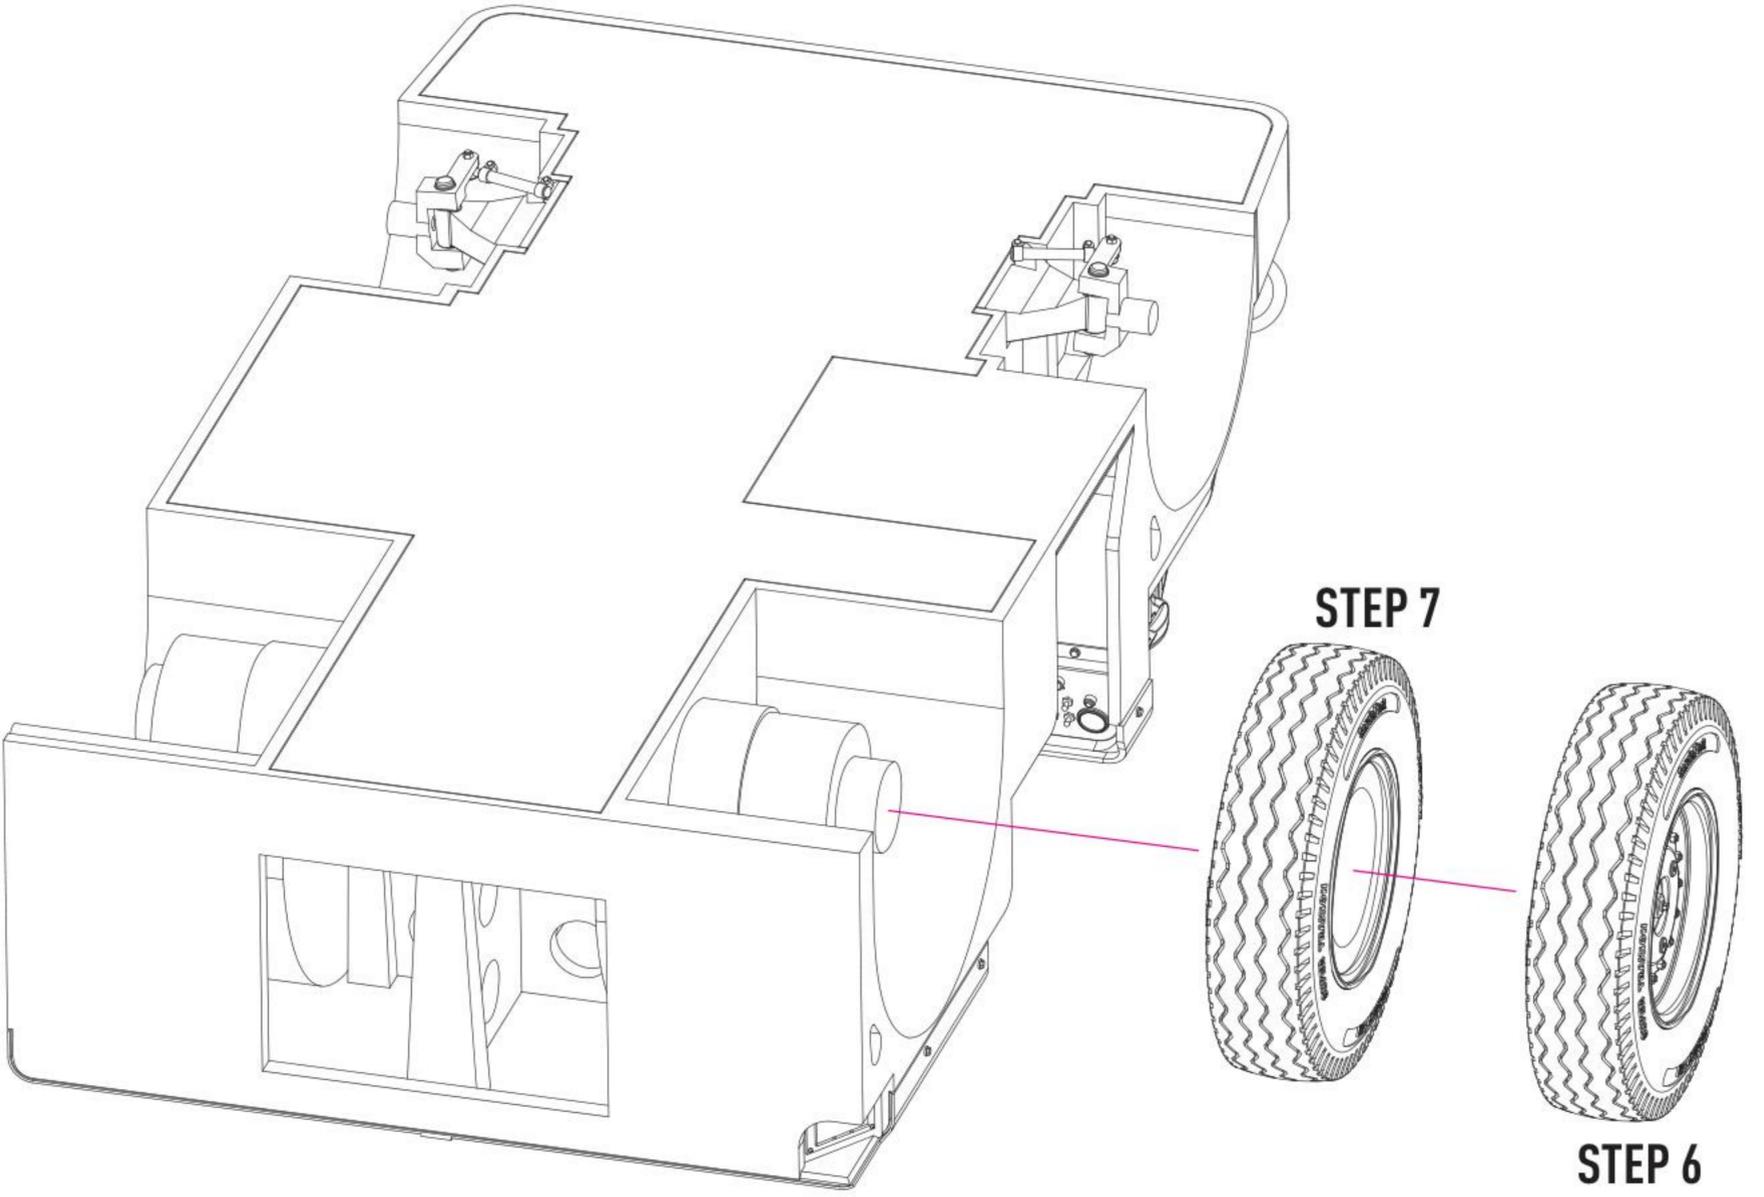


STEP 7

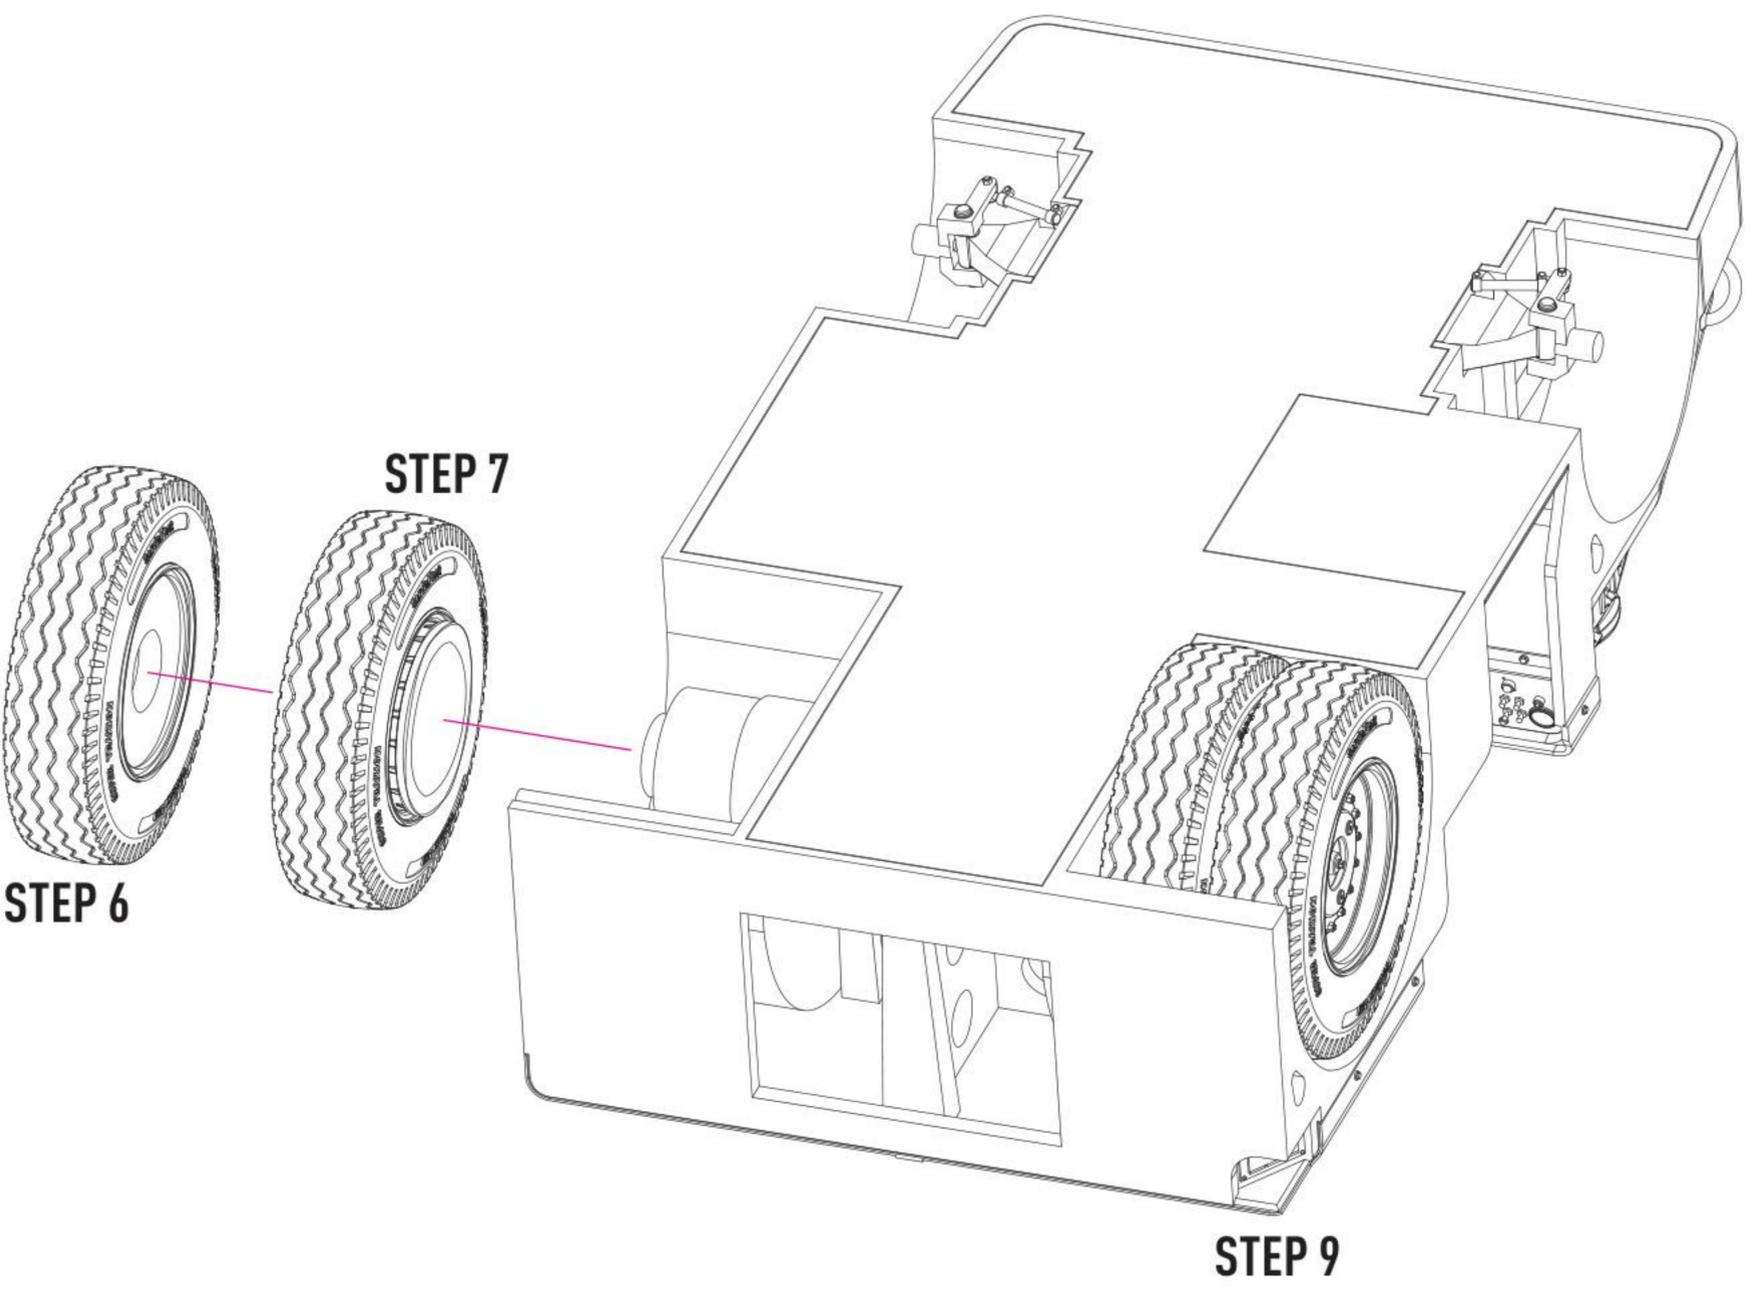


STEP 10

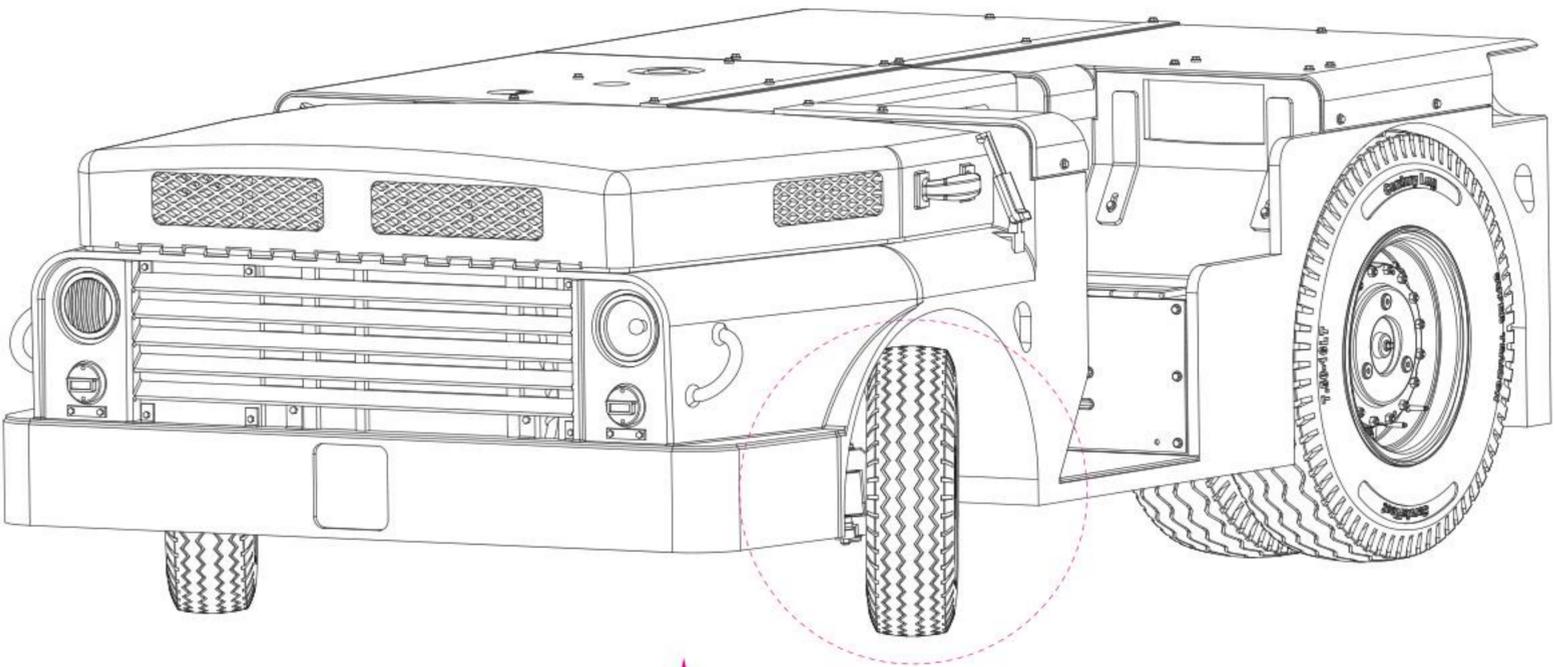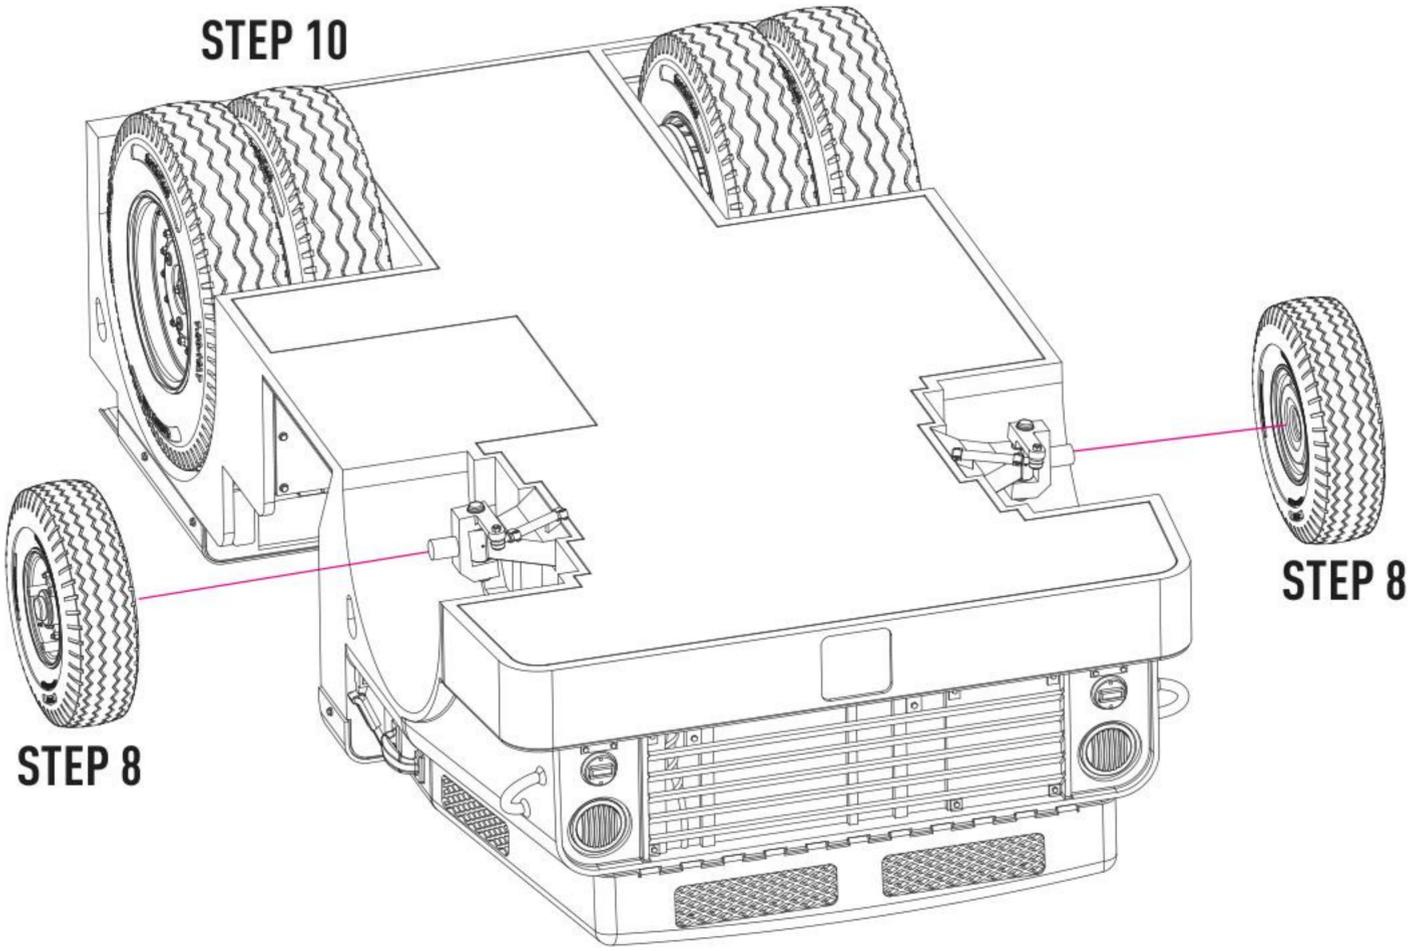


?

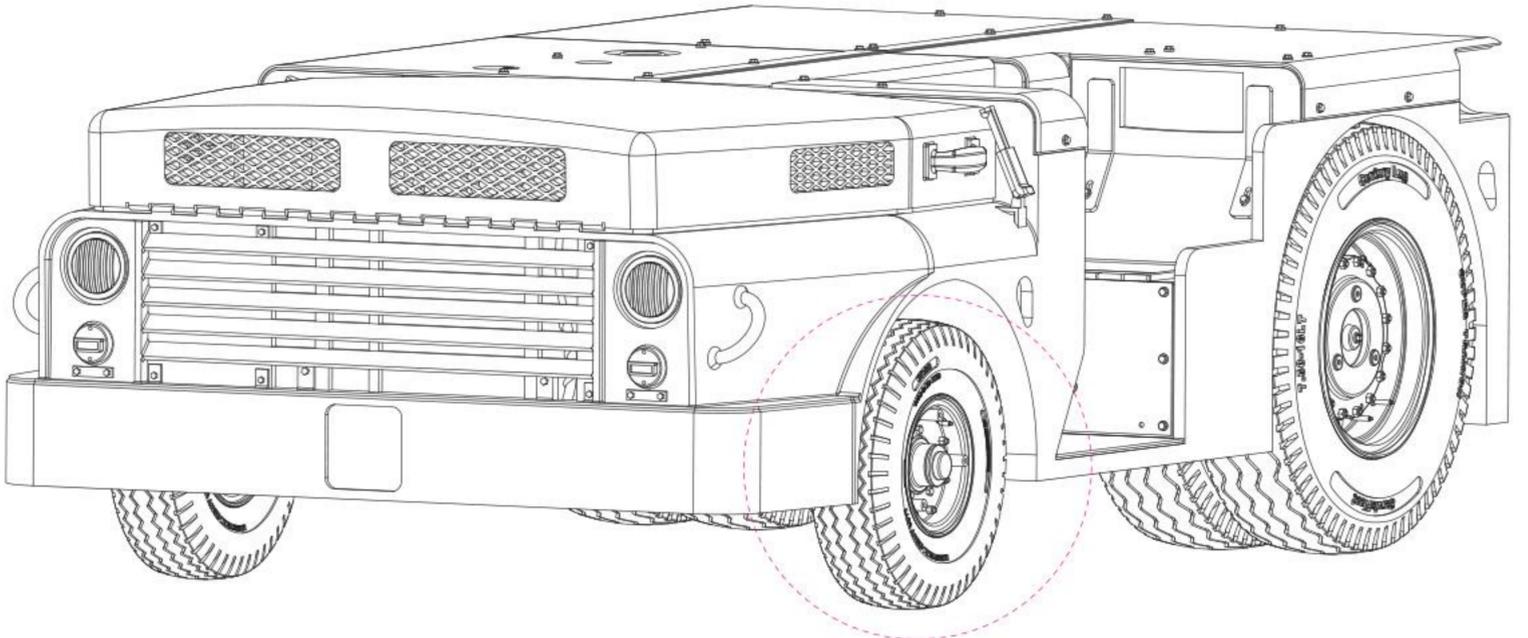


12

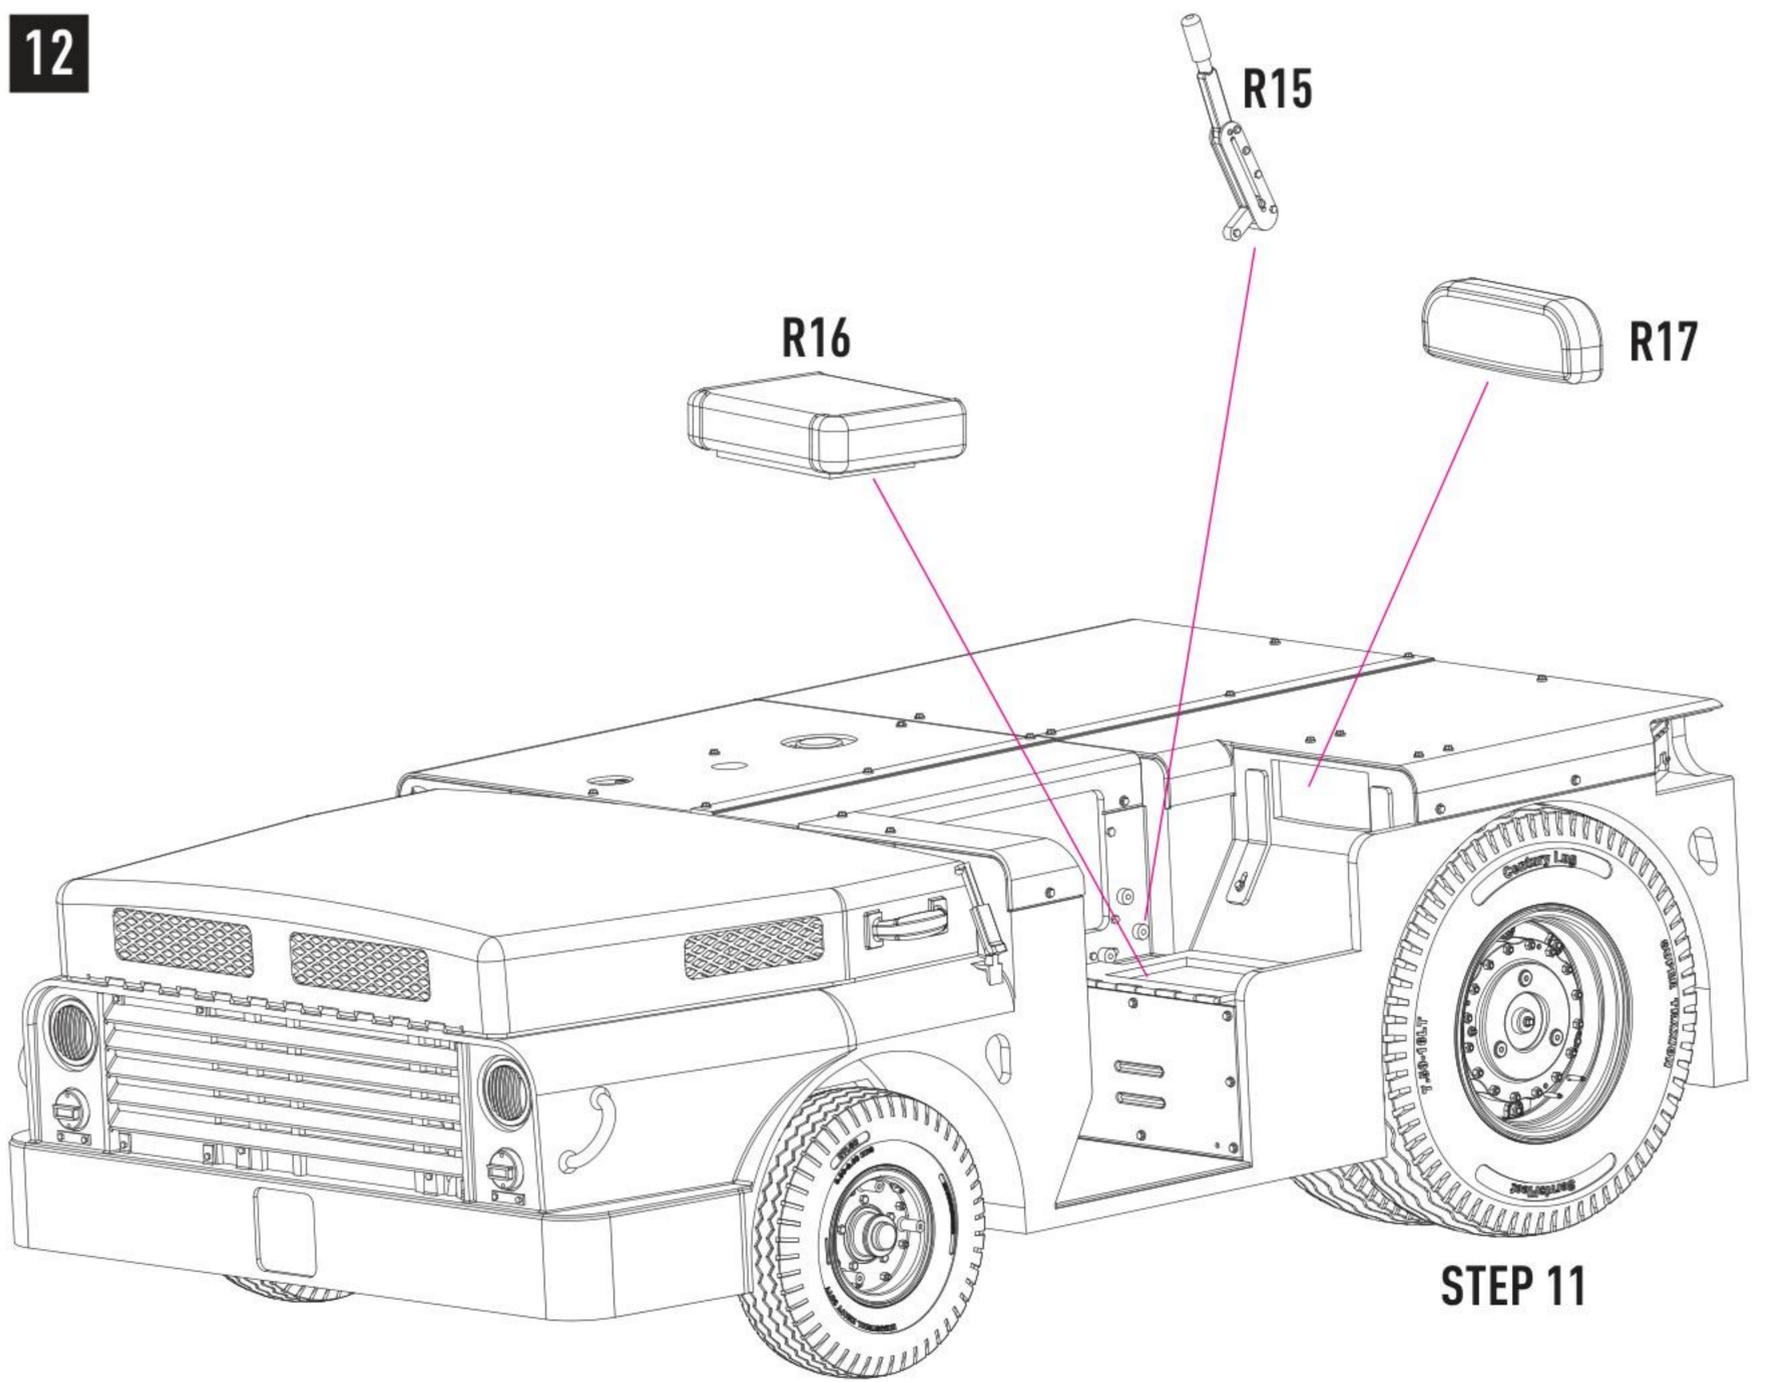


13

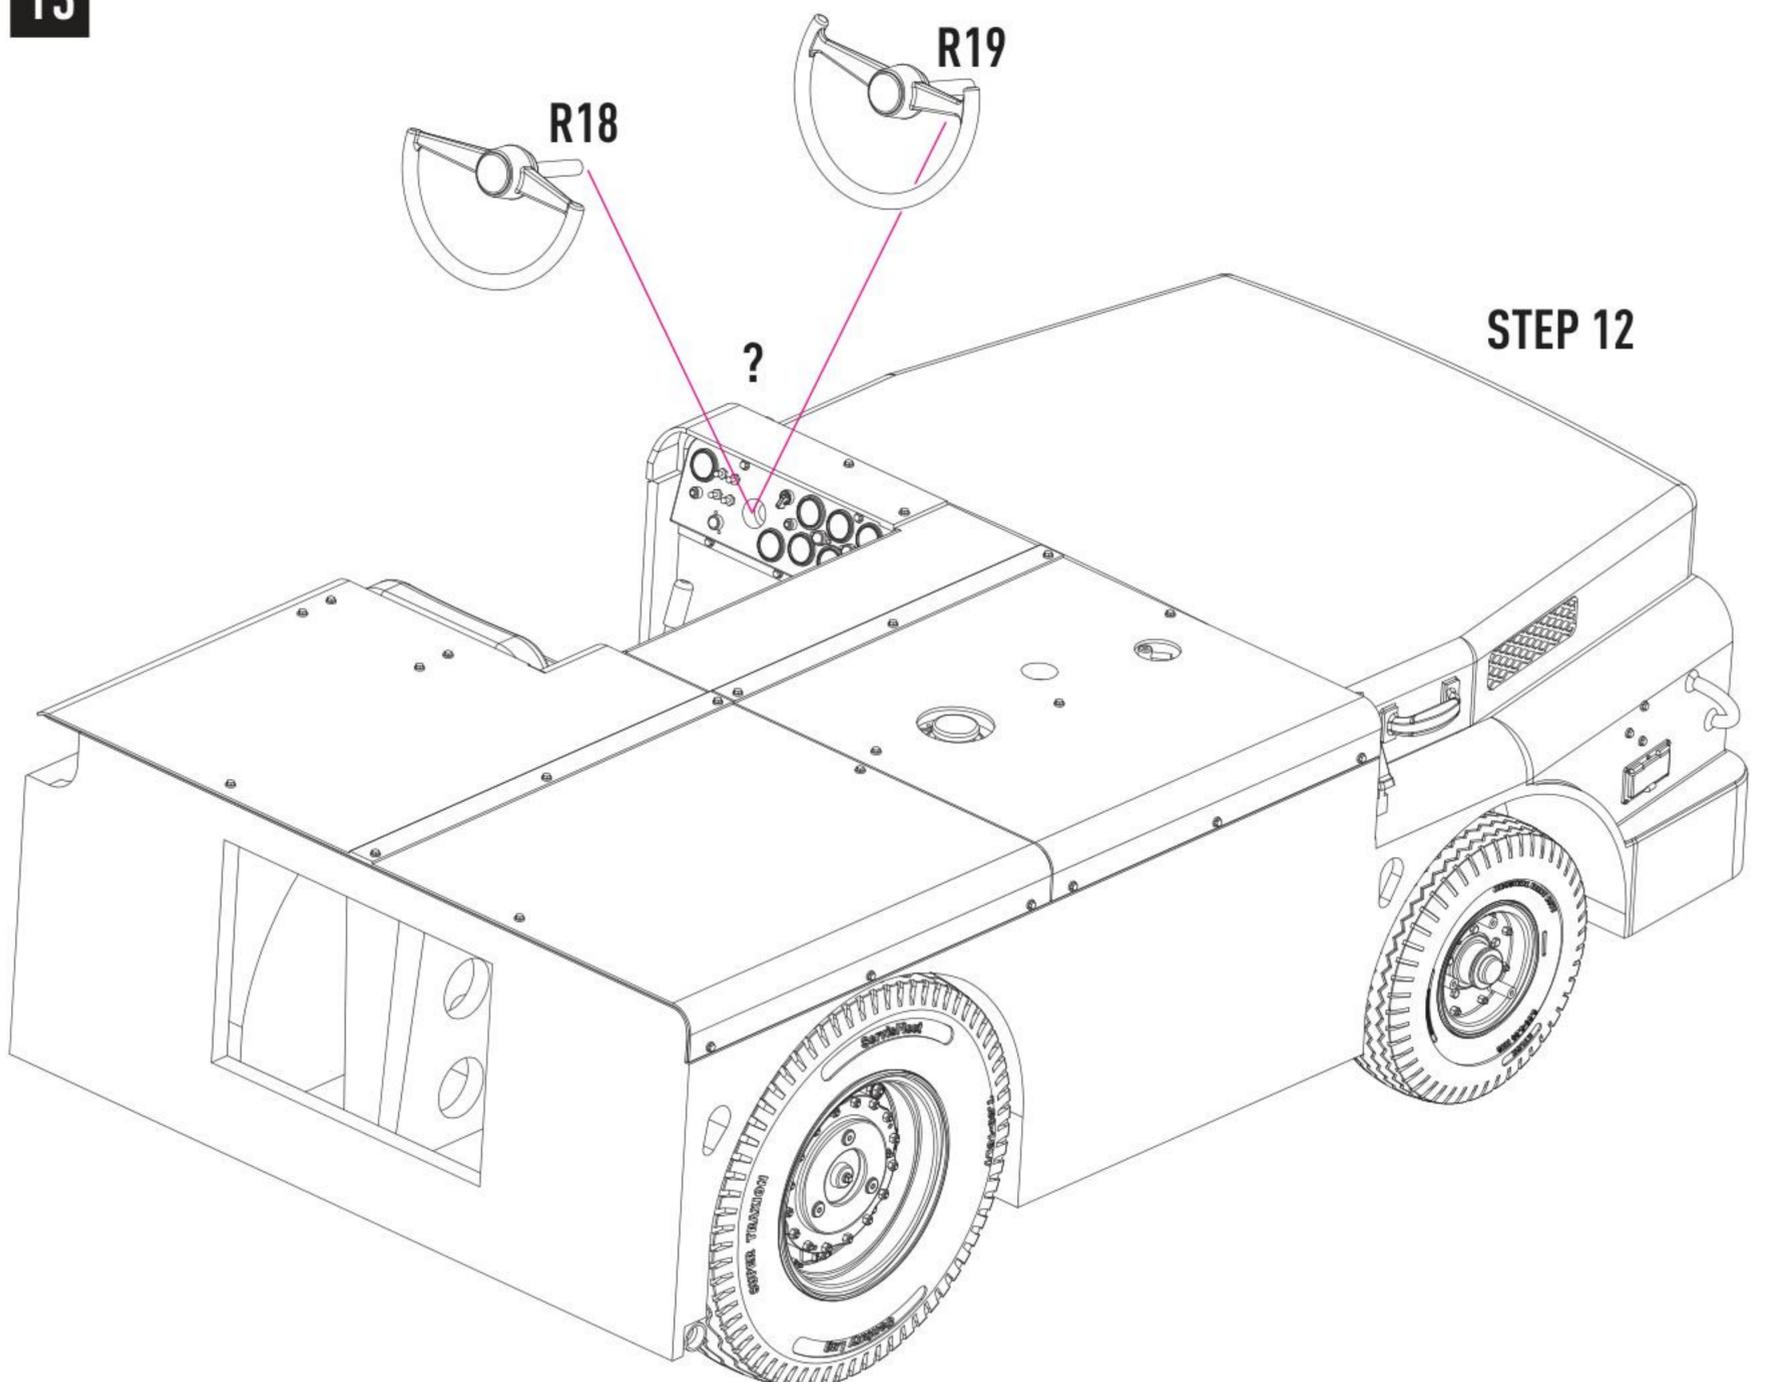


14

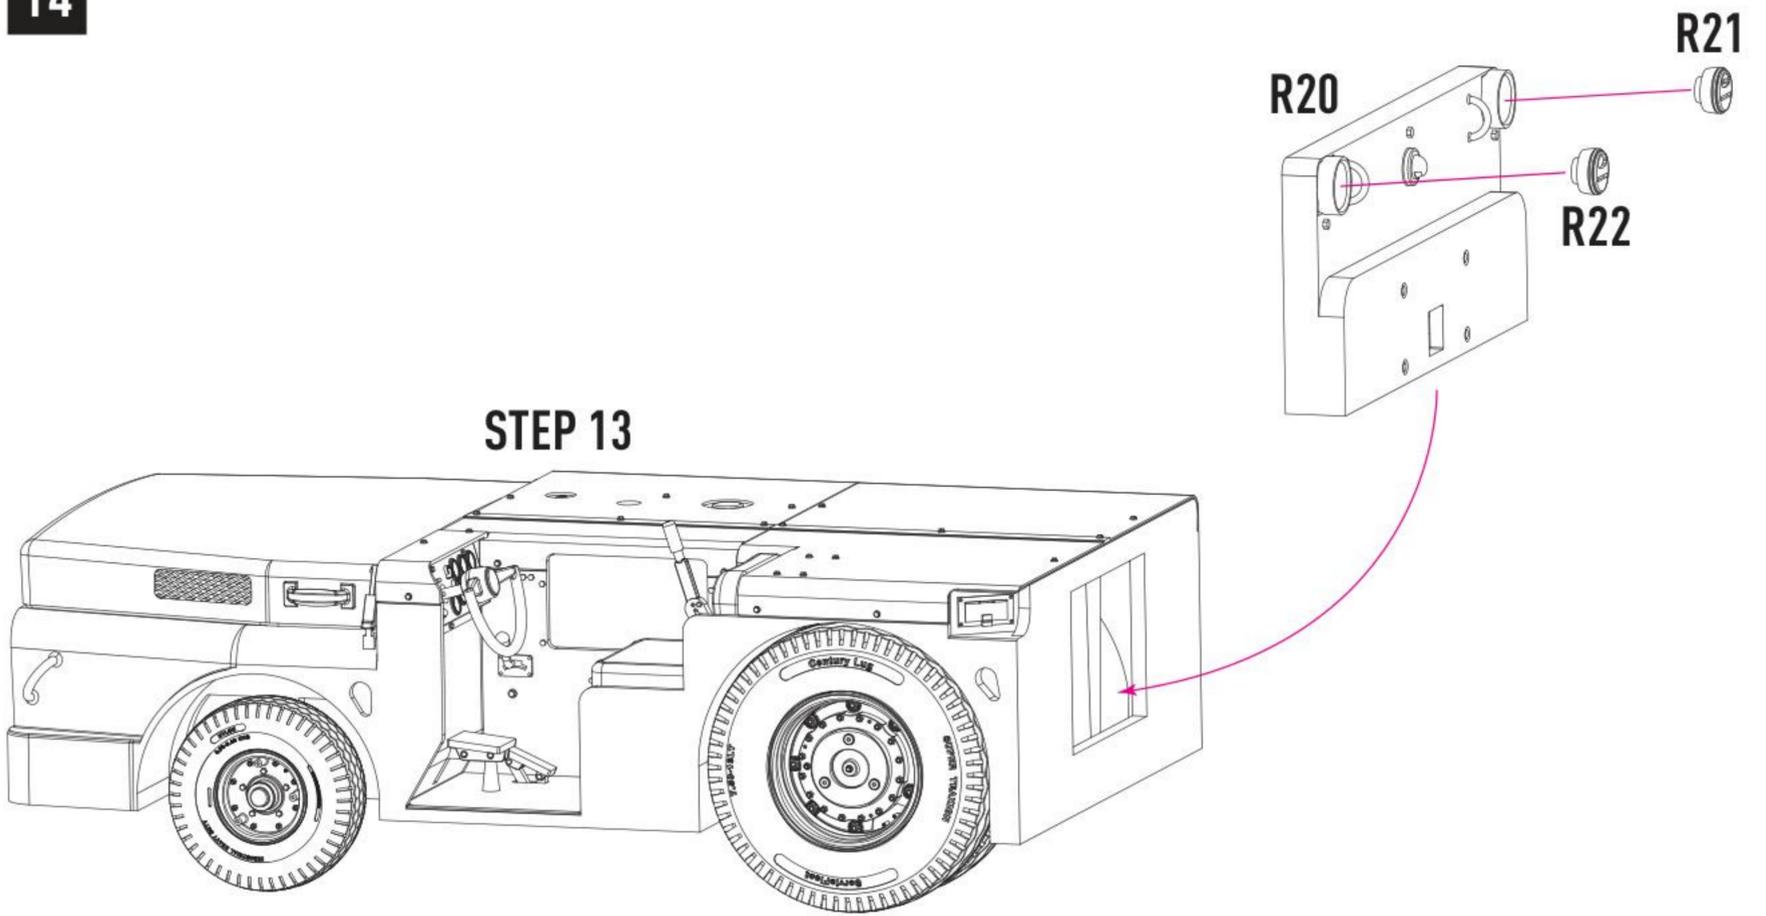

15

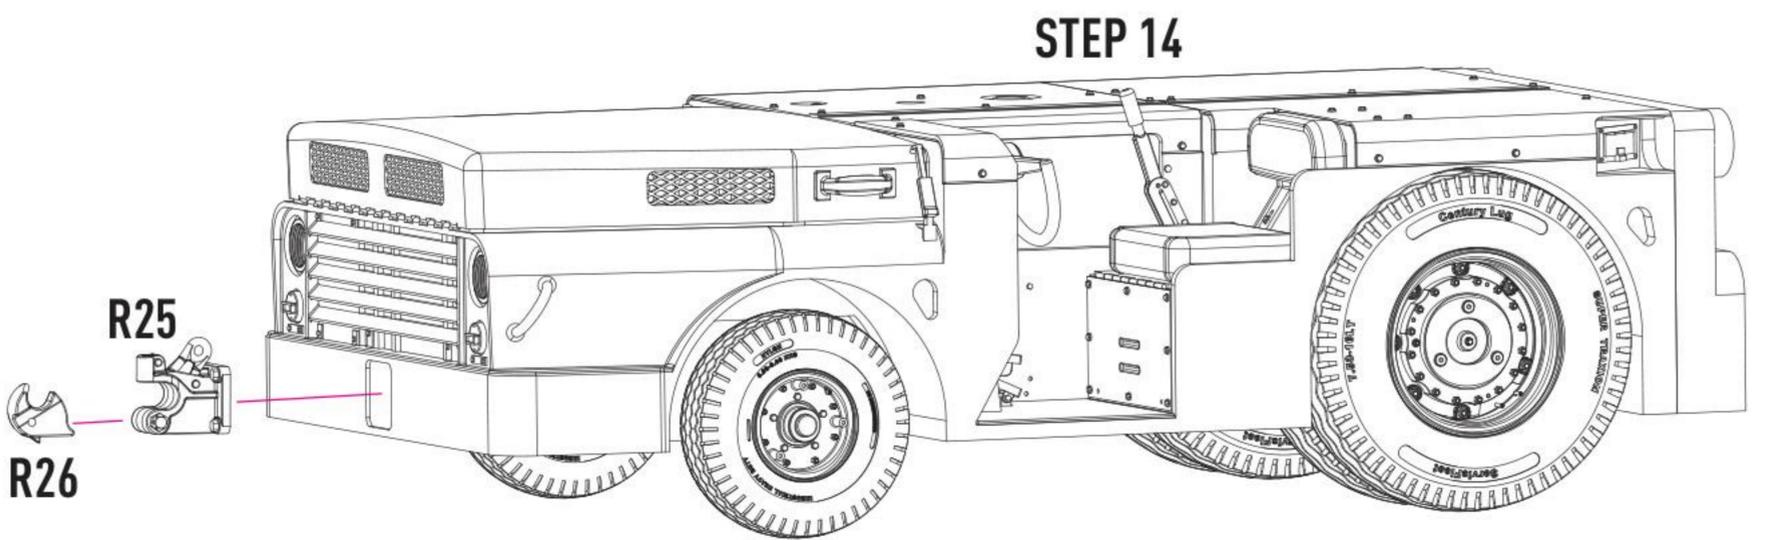


16


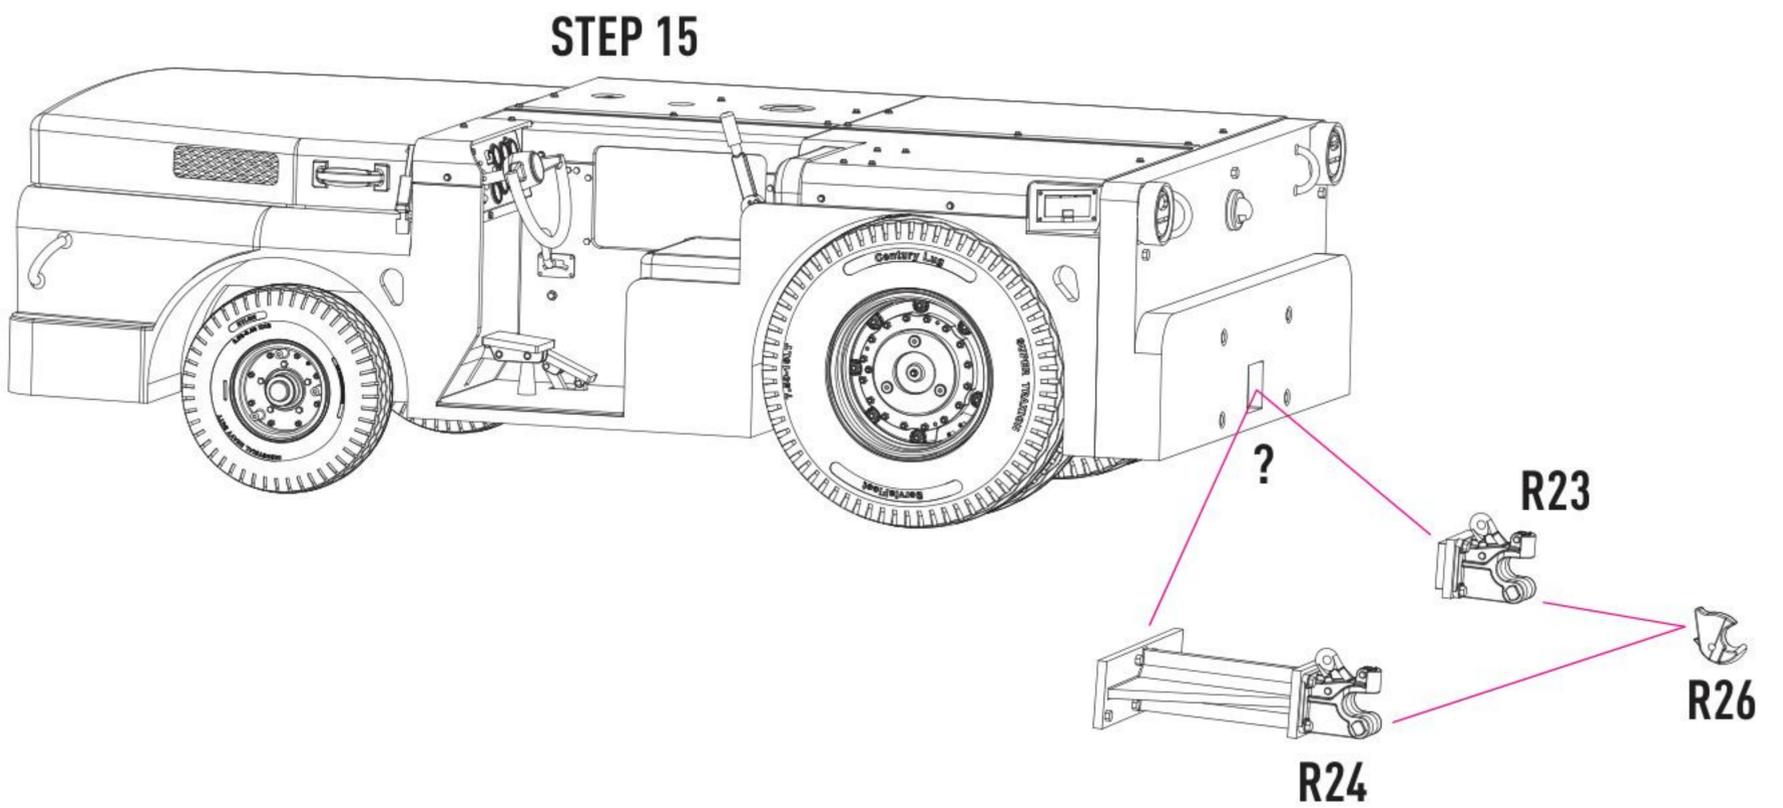


17

R28

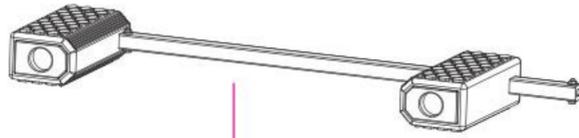


STEP 16

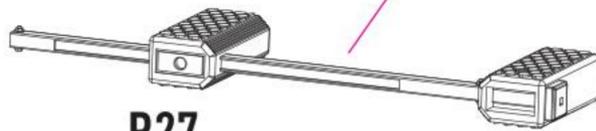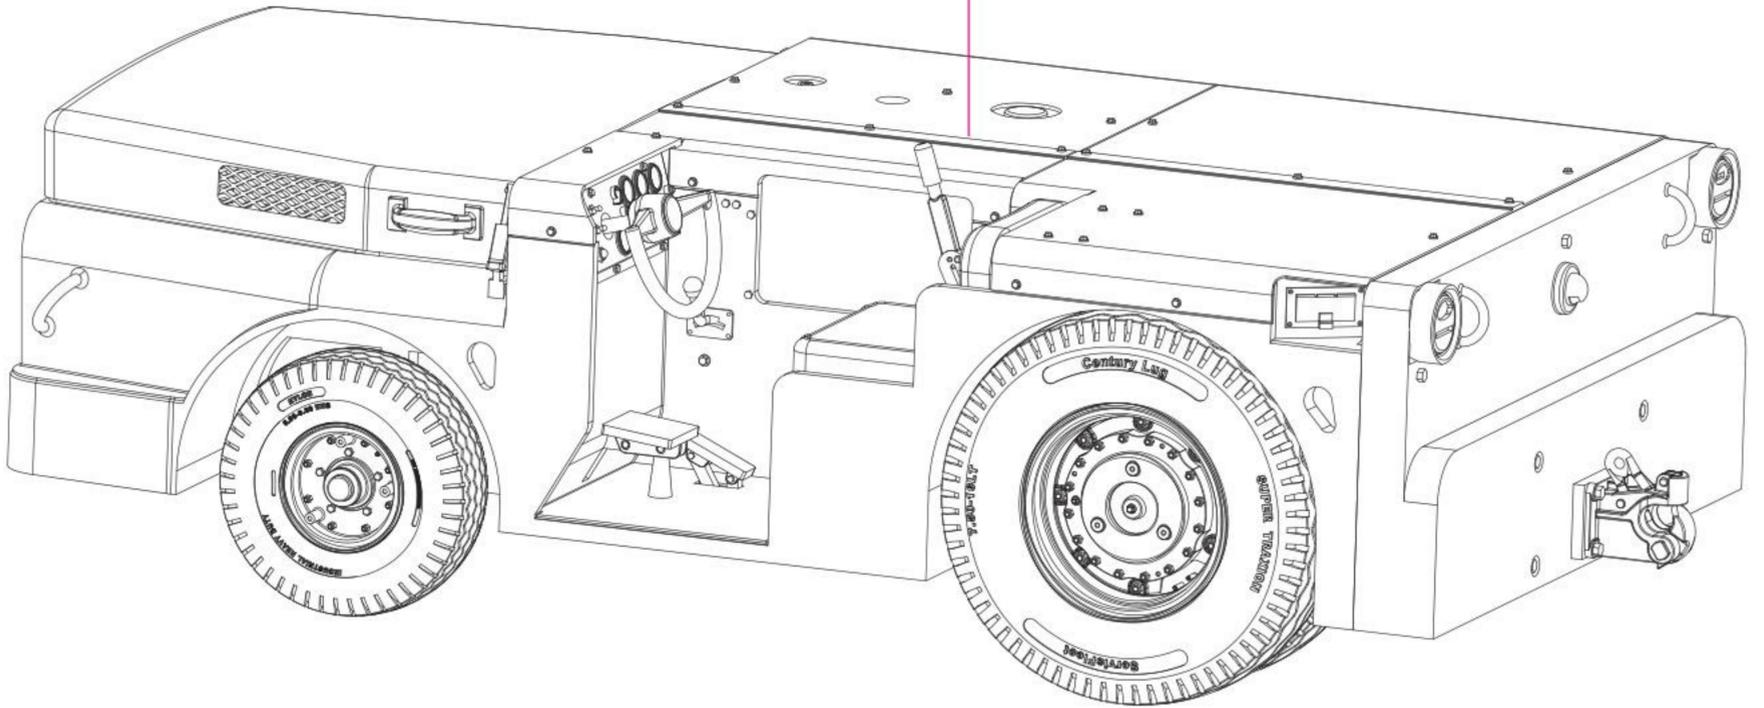

R27


18

R30

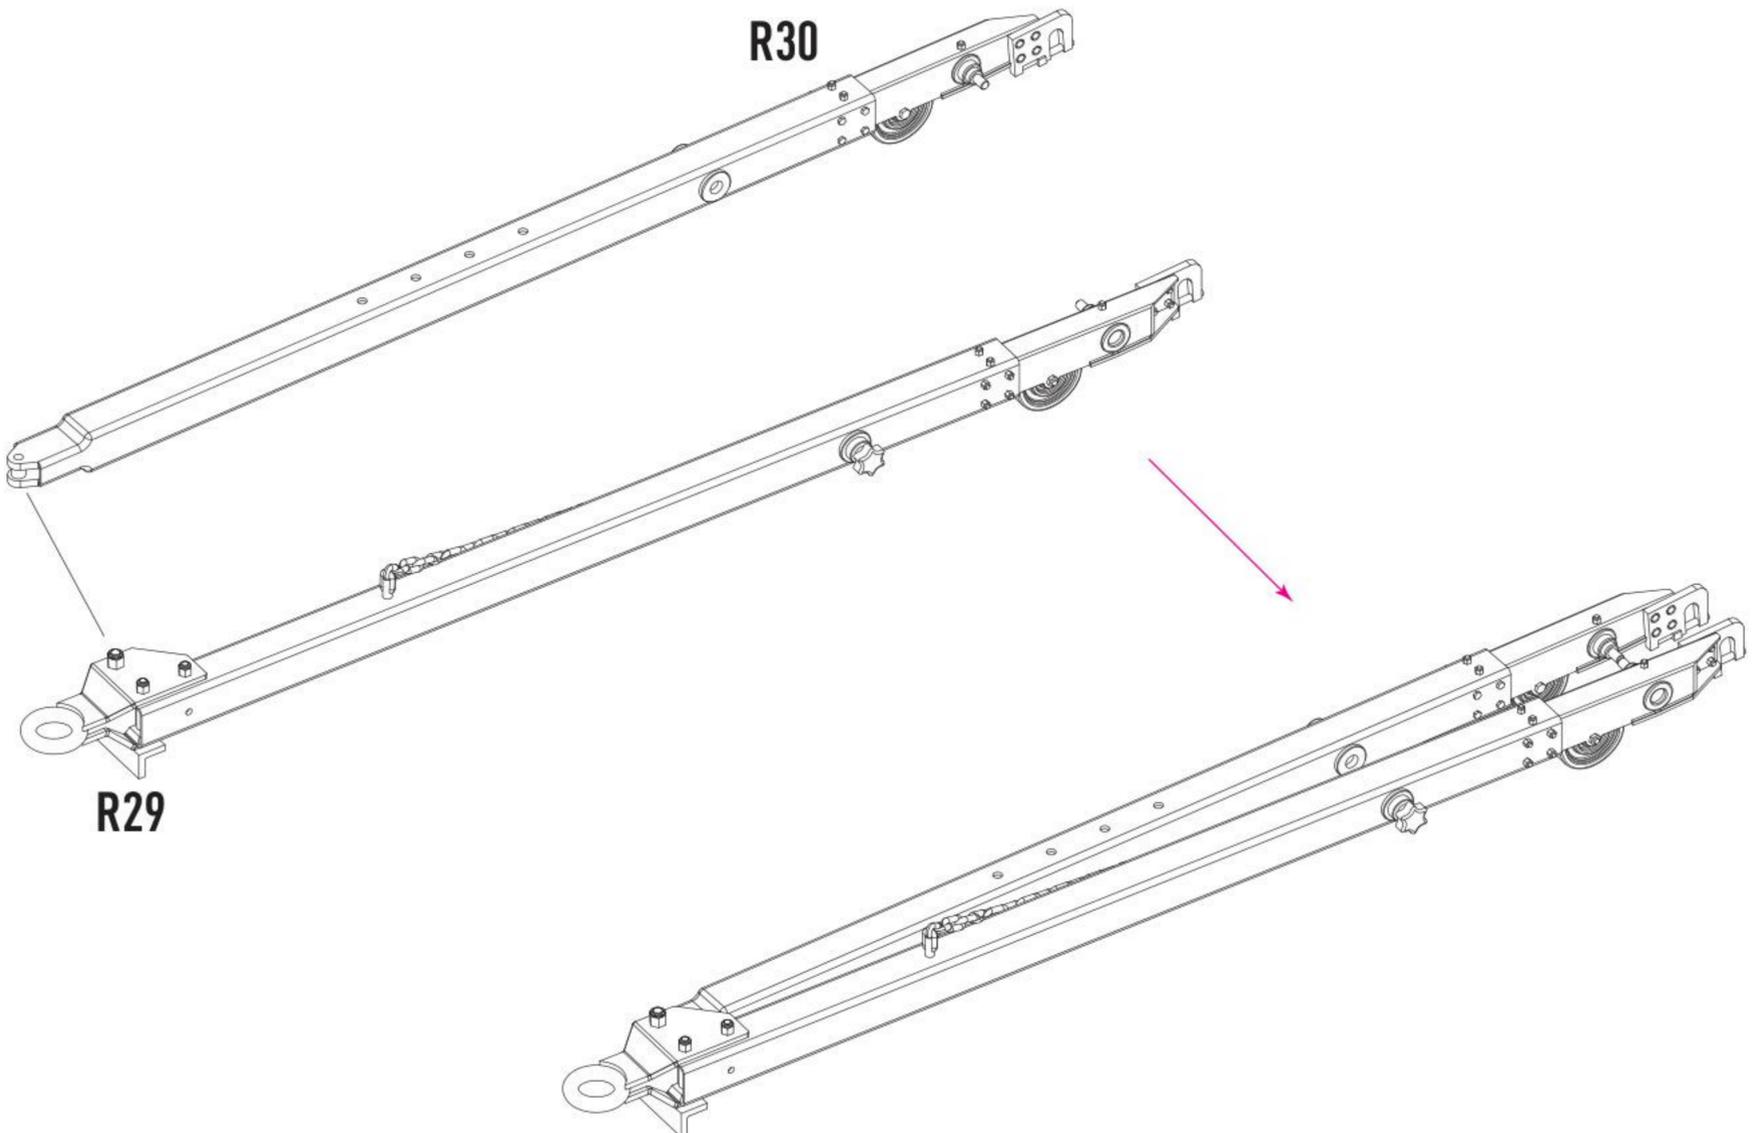


R29





19

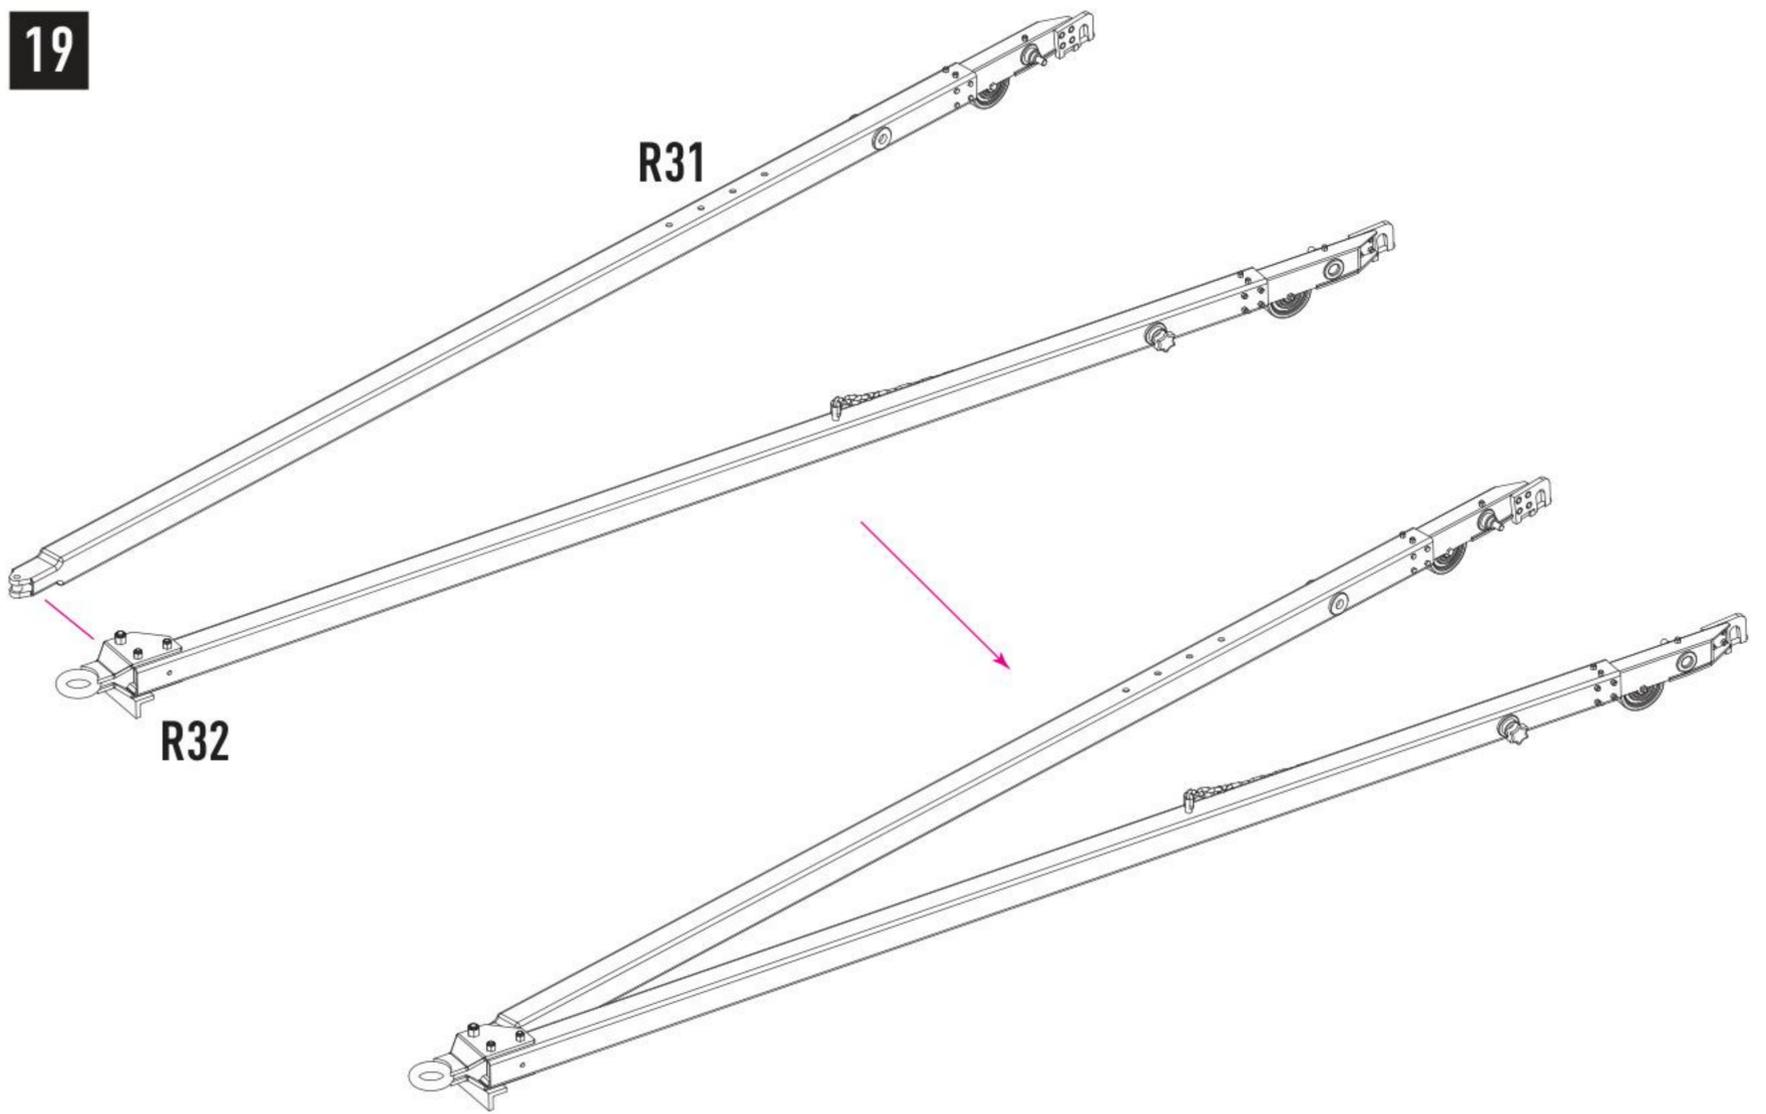



20

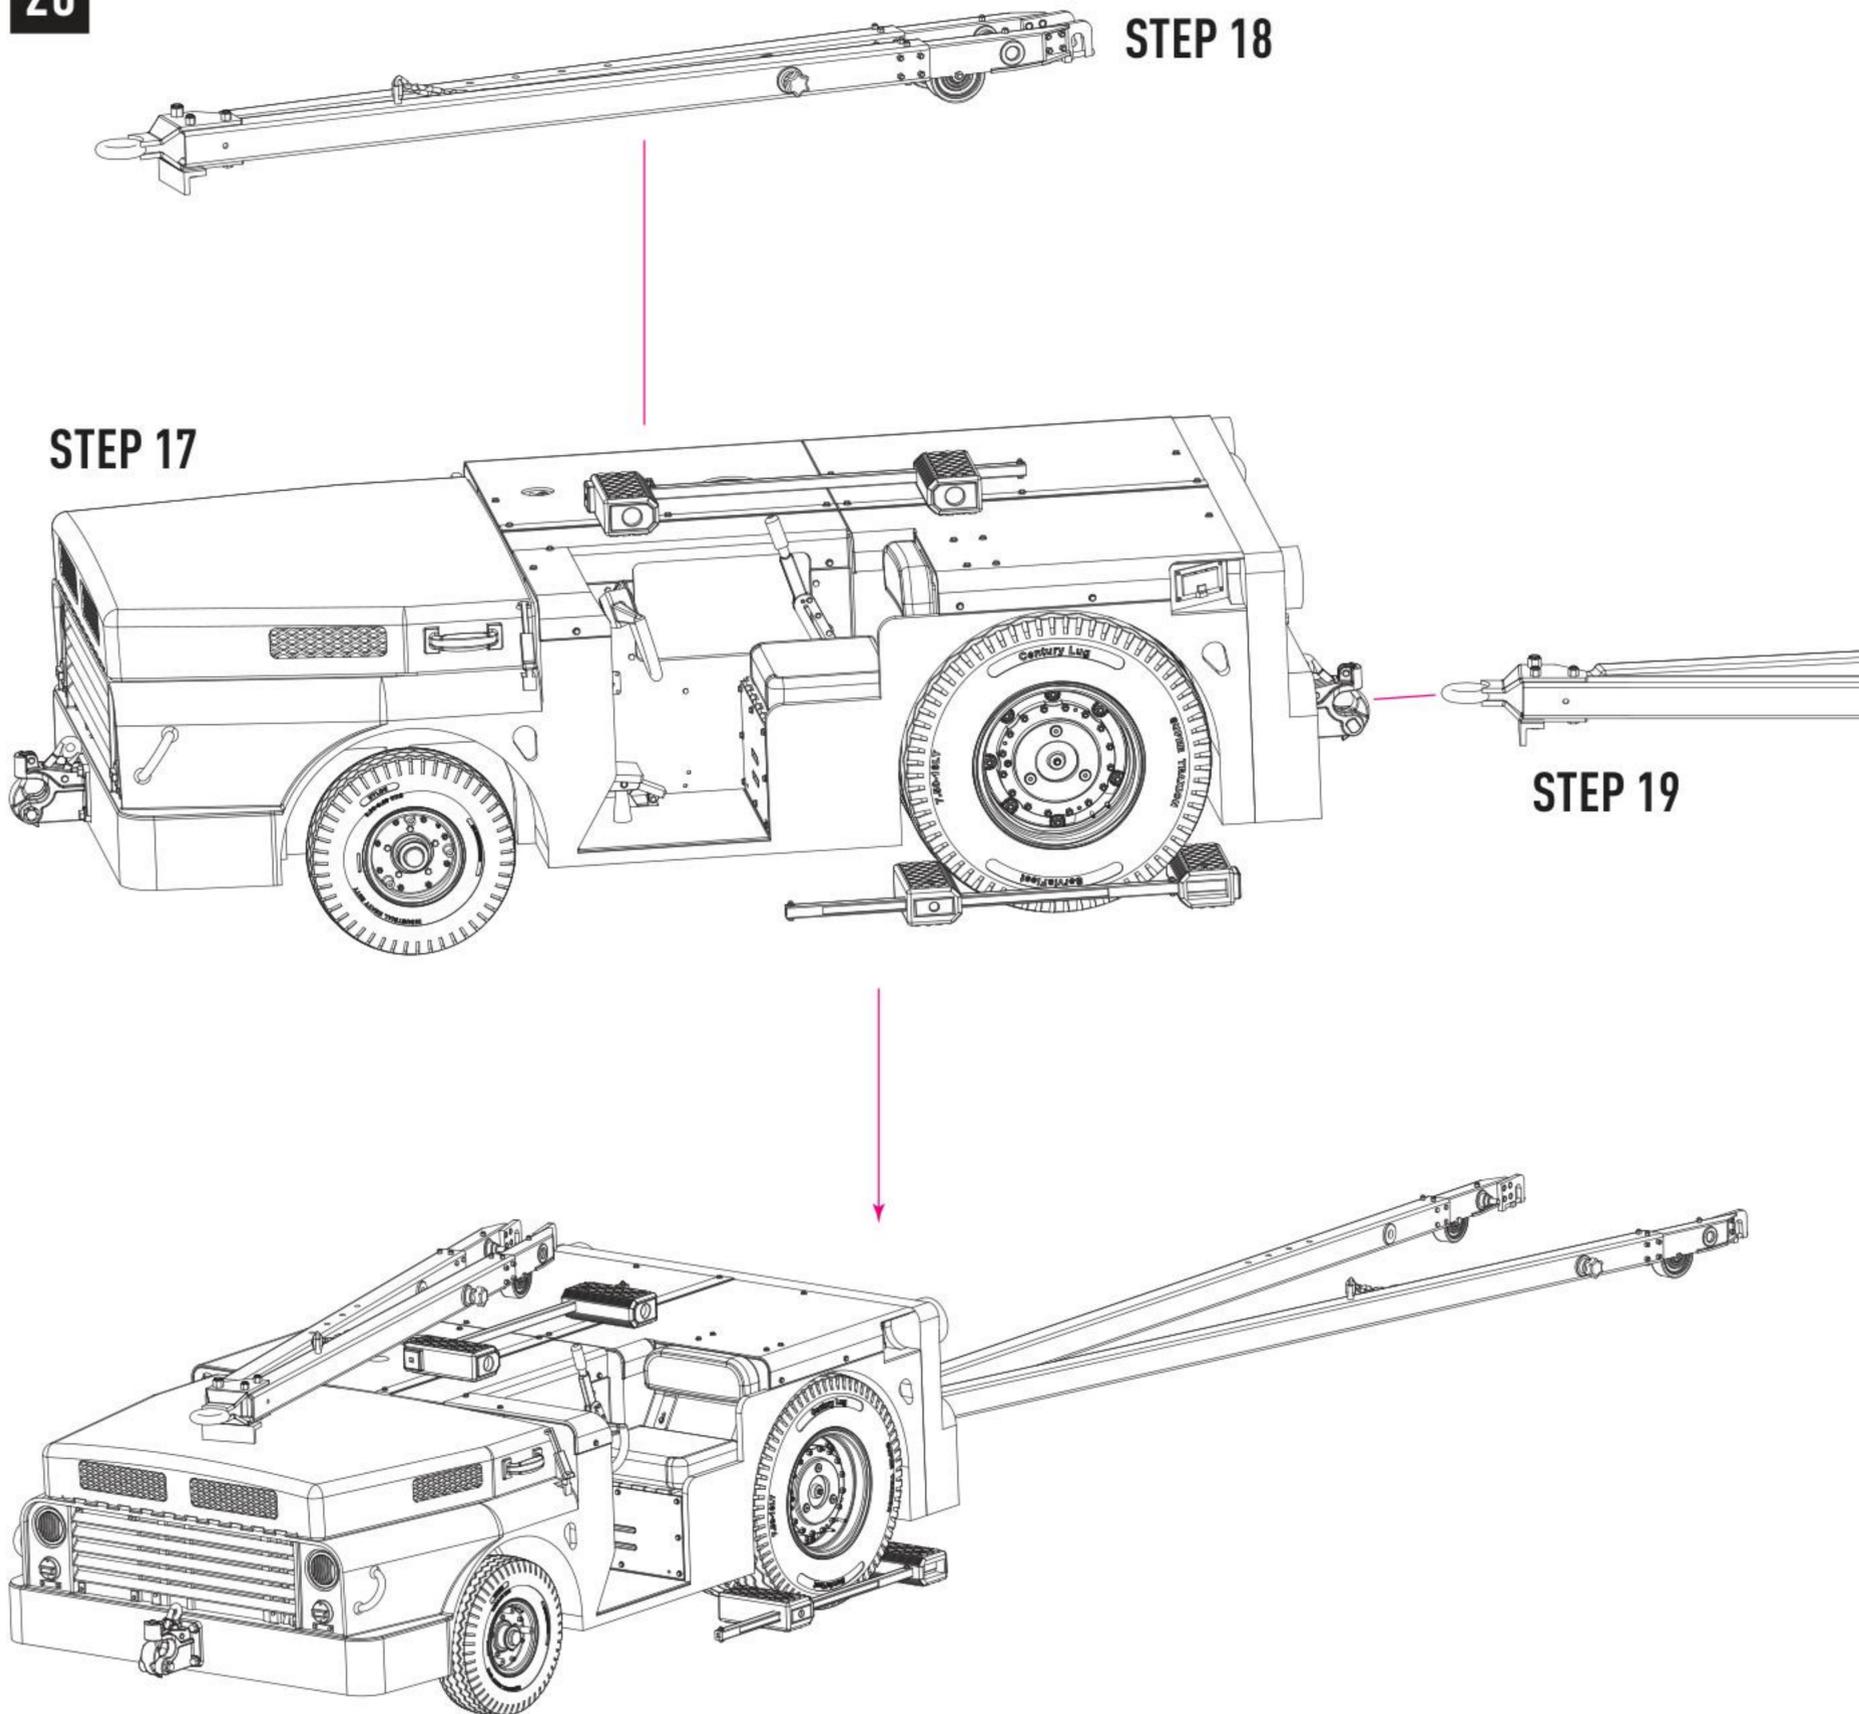



DECAL INSTRUCTION

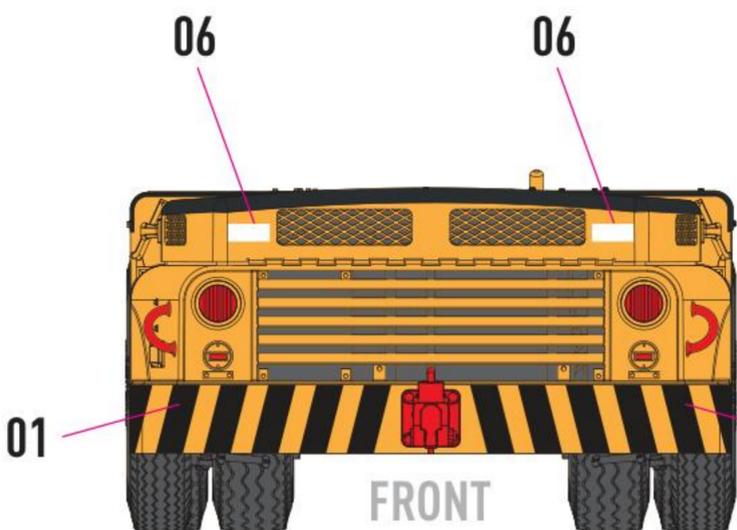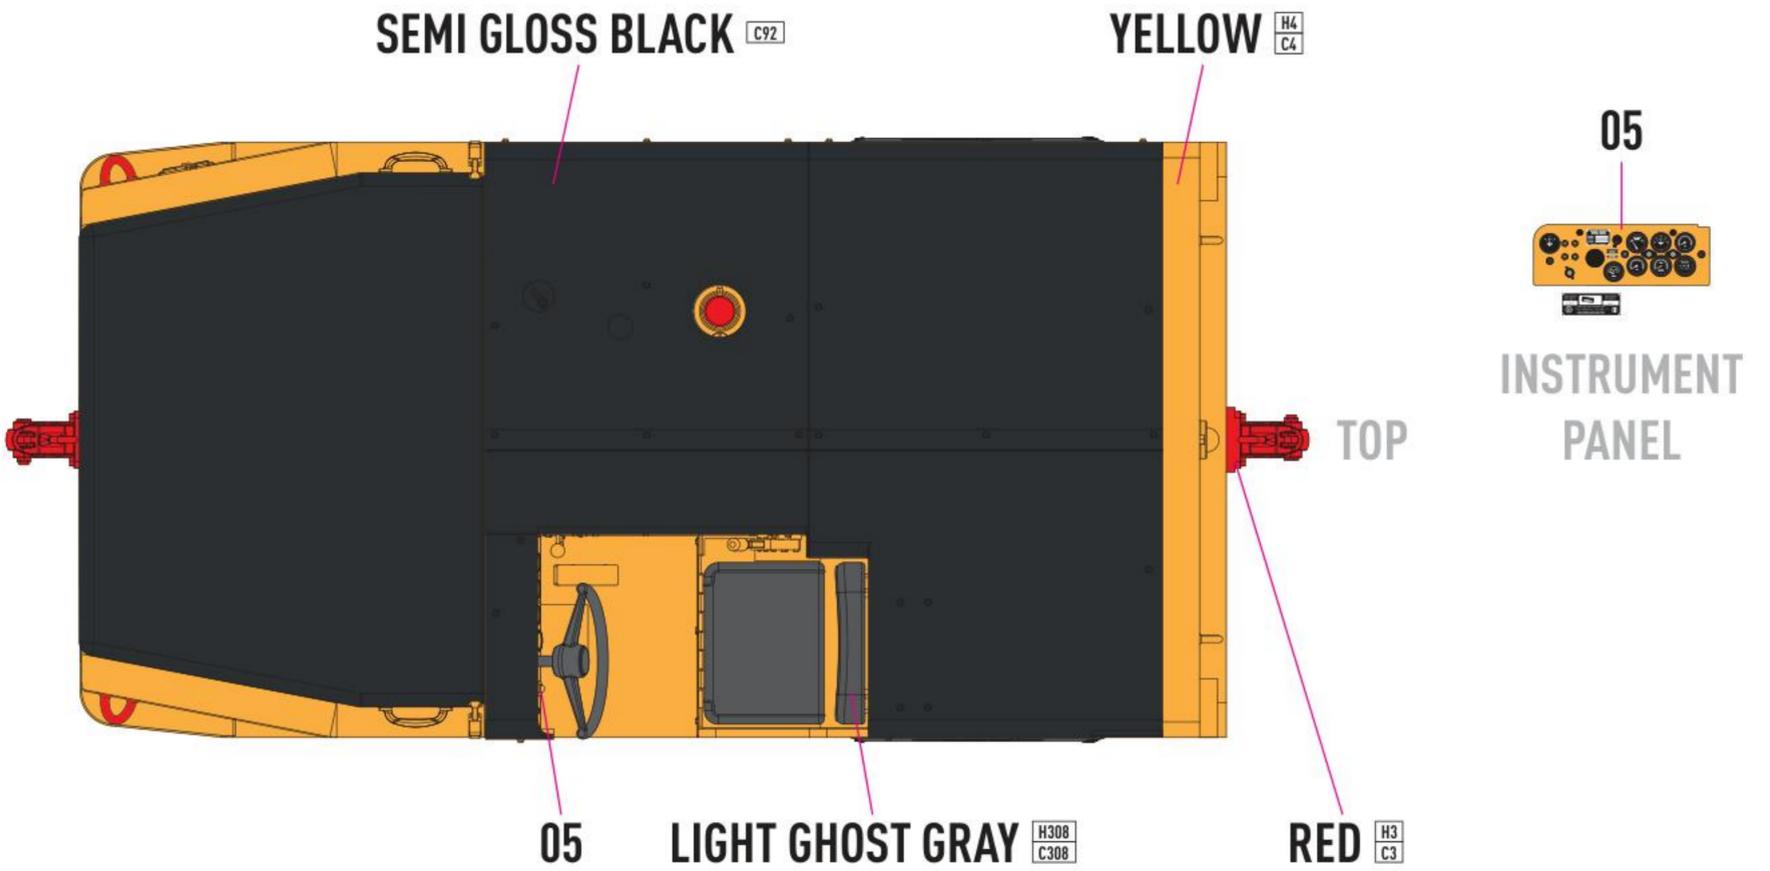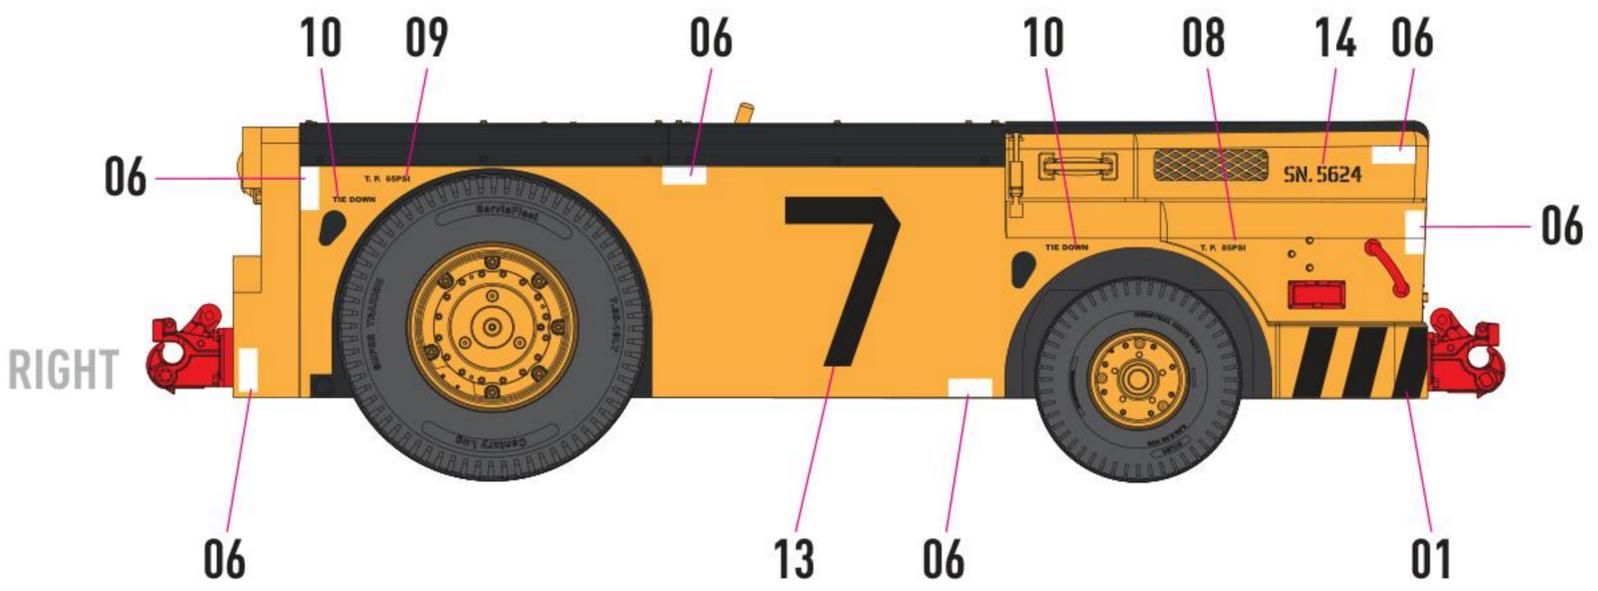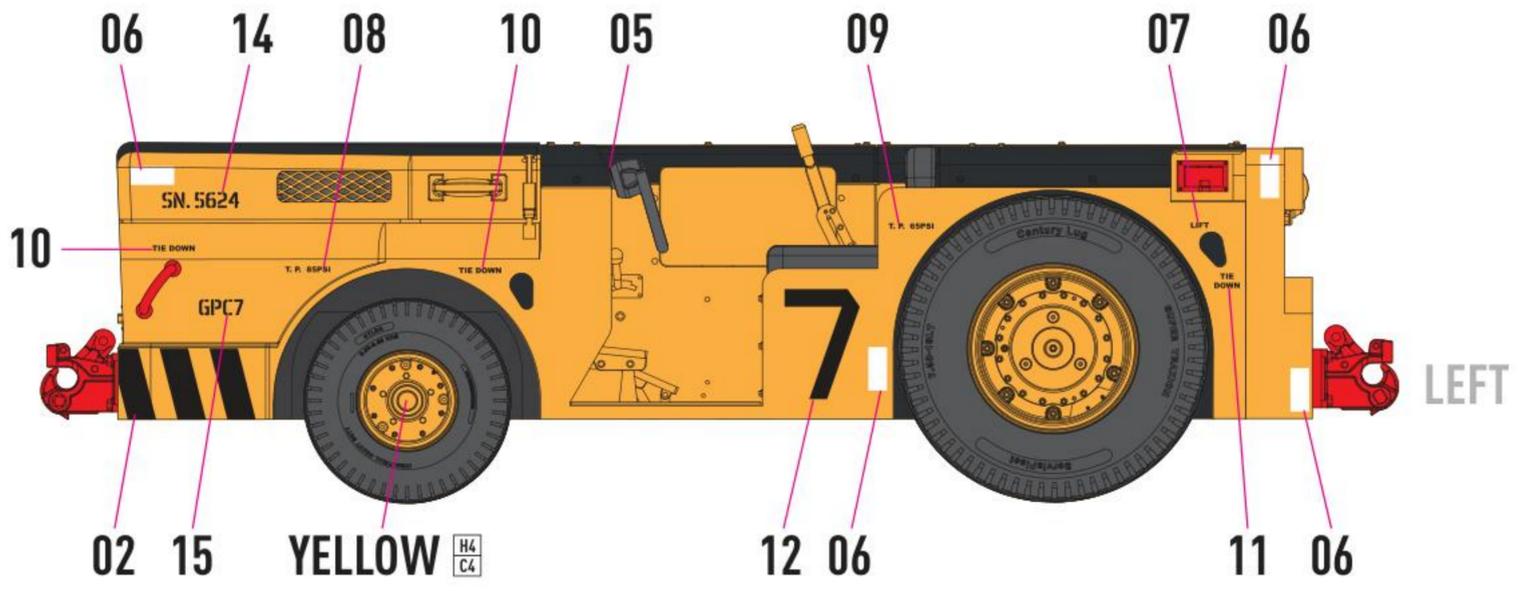

ALBAR UNIVERSAL AIRCRAFT TOWBAR

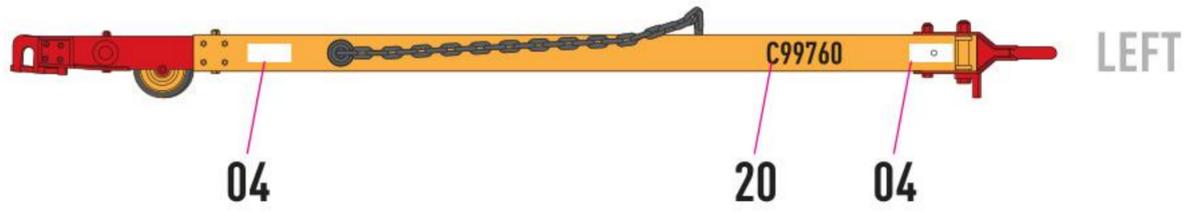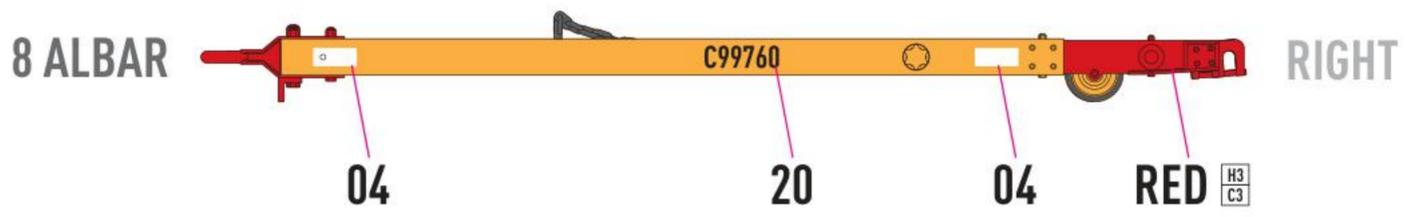

15 ALBAR

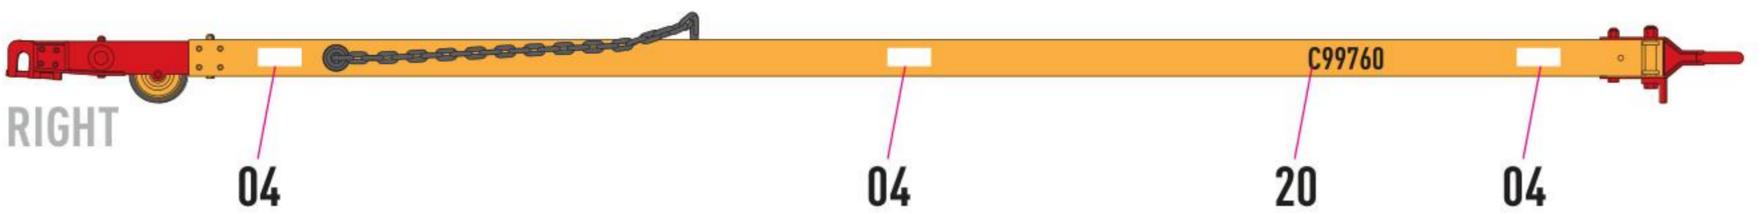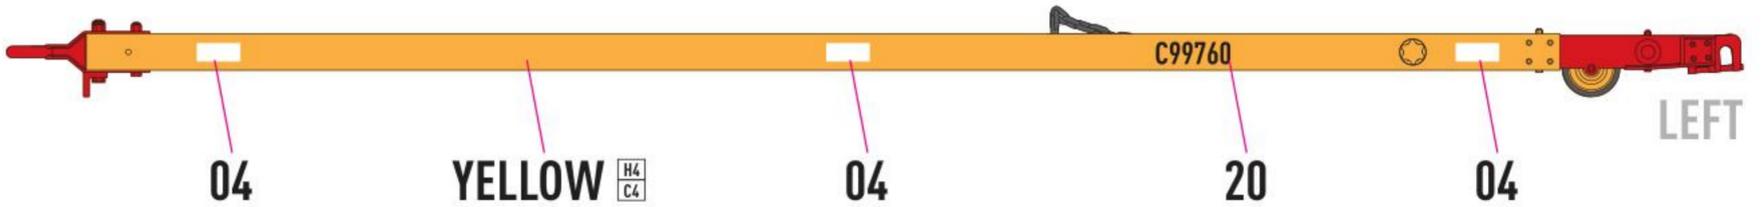

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
 YELLOW	H4	C4
 LIGHT GHOST GRAY	H308	C308

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
 SEMI GLOSS BLACK		C92
 RED	H3	C3

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua