


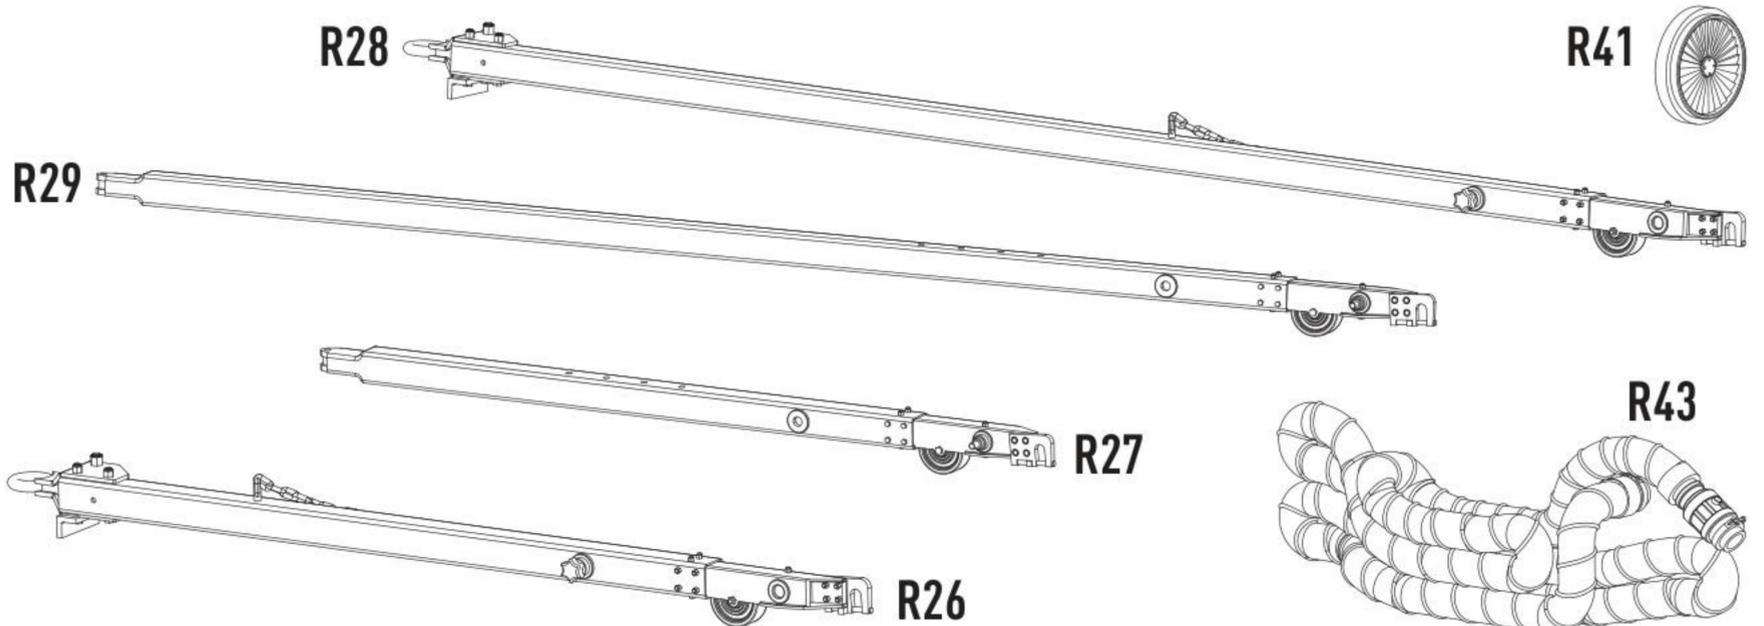
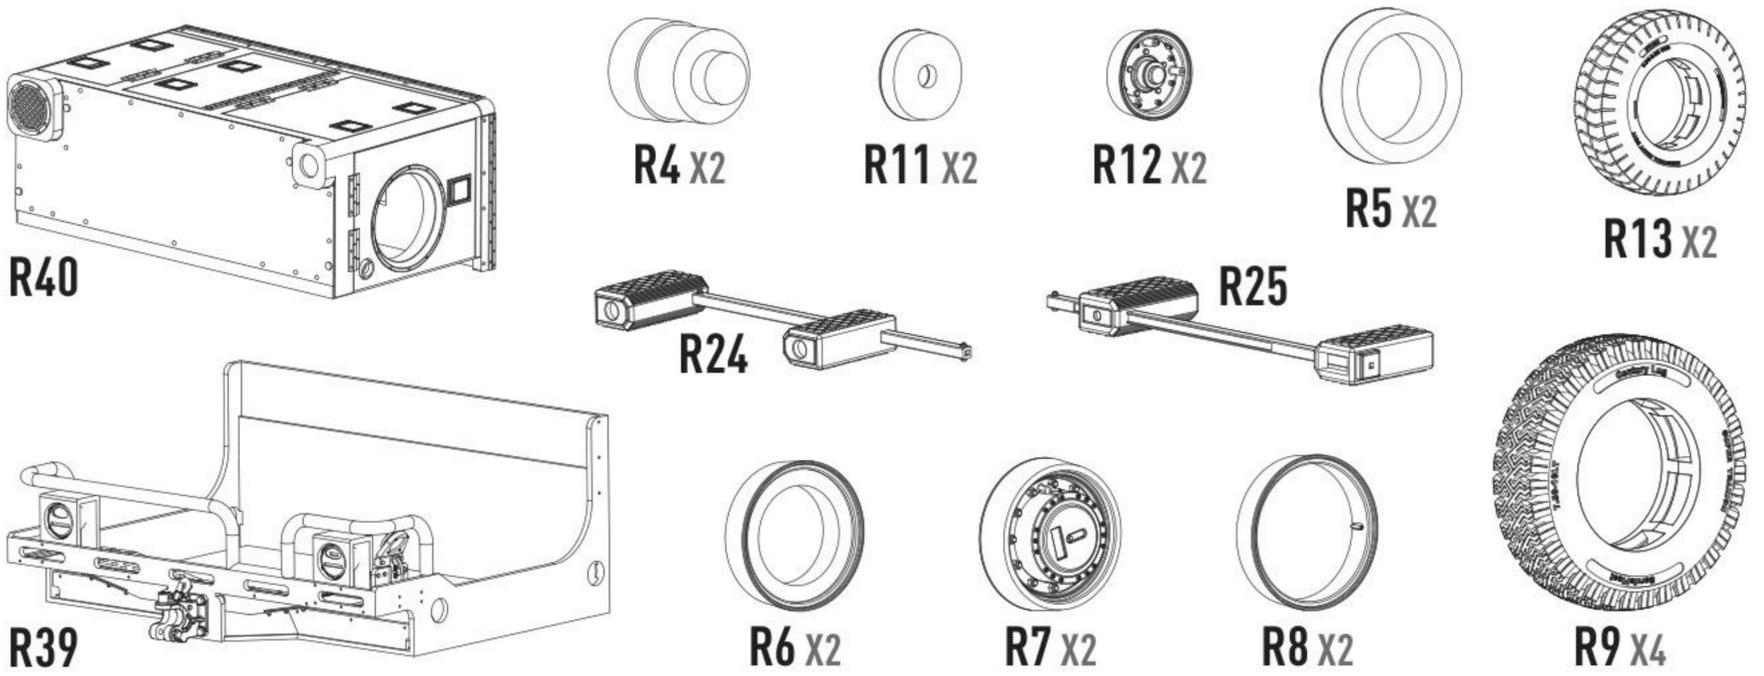
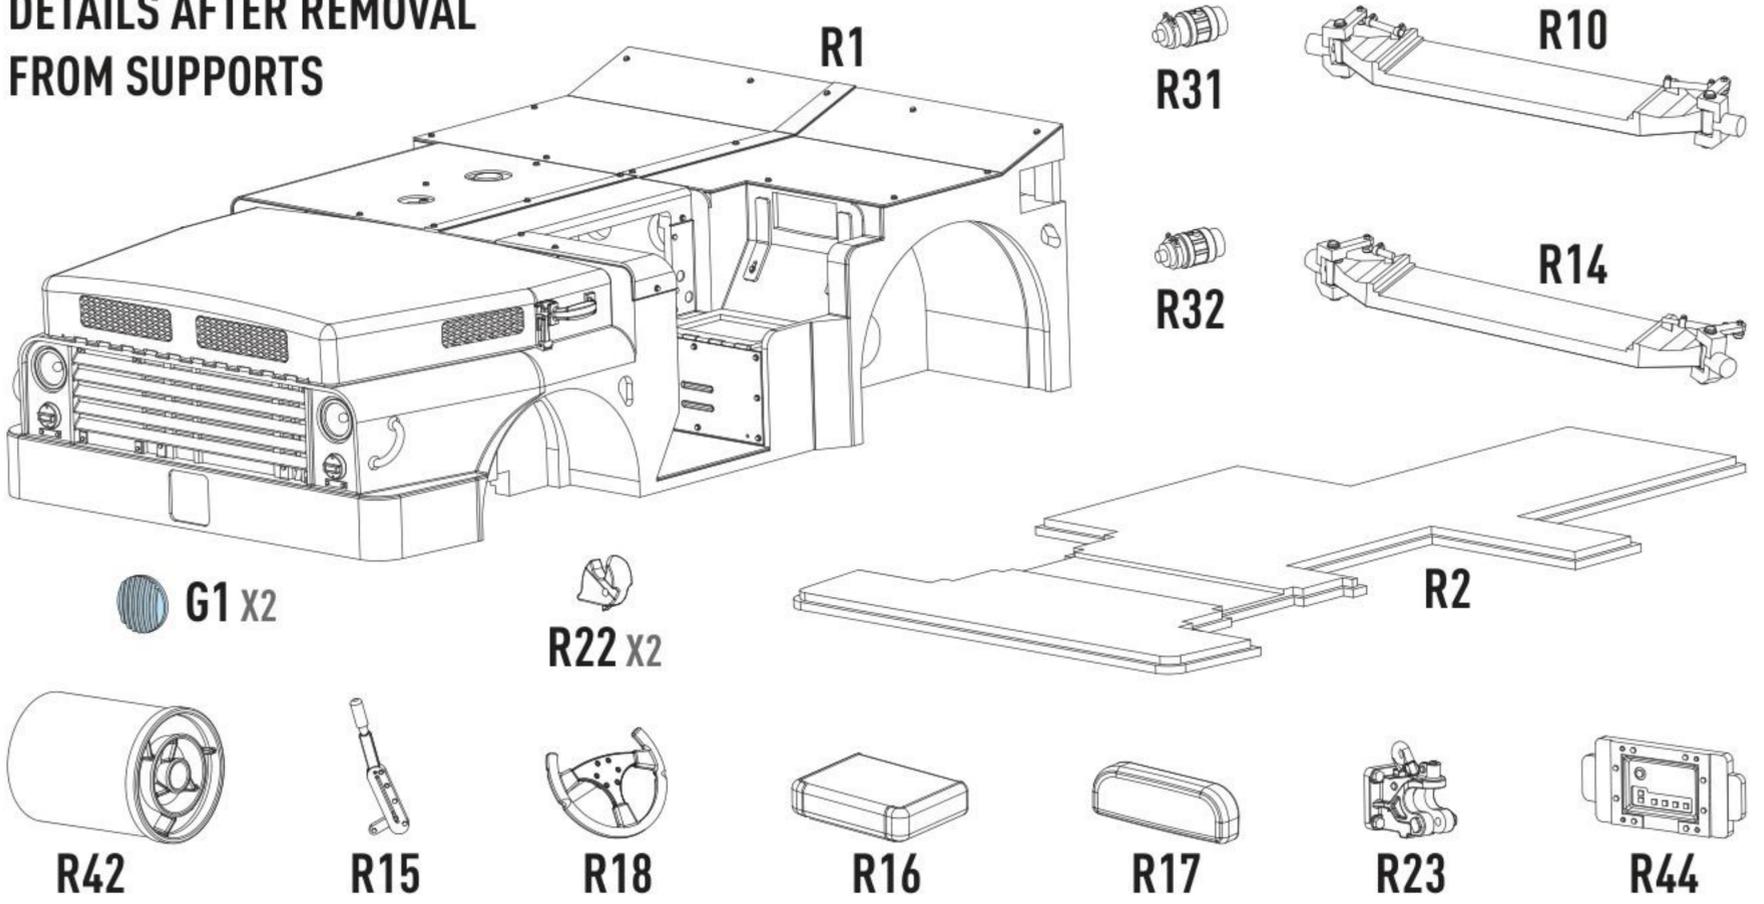


DETAILS AFTER REMOVAL FROM SUPPORTS

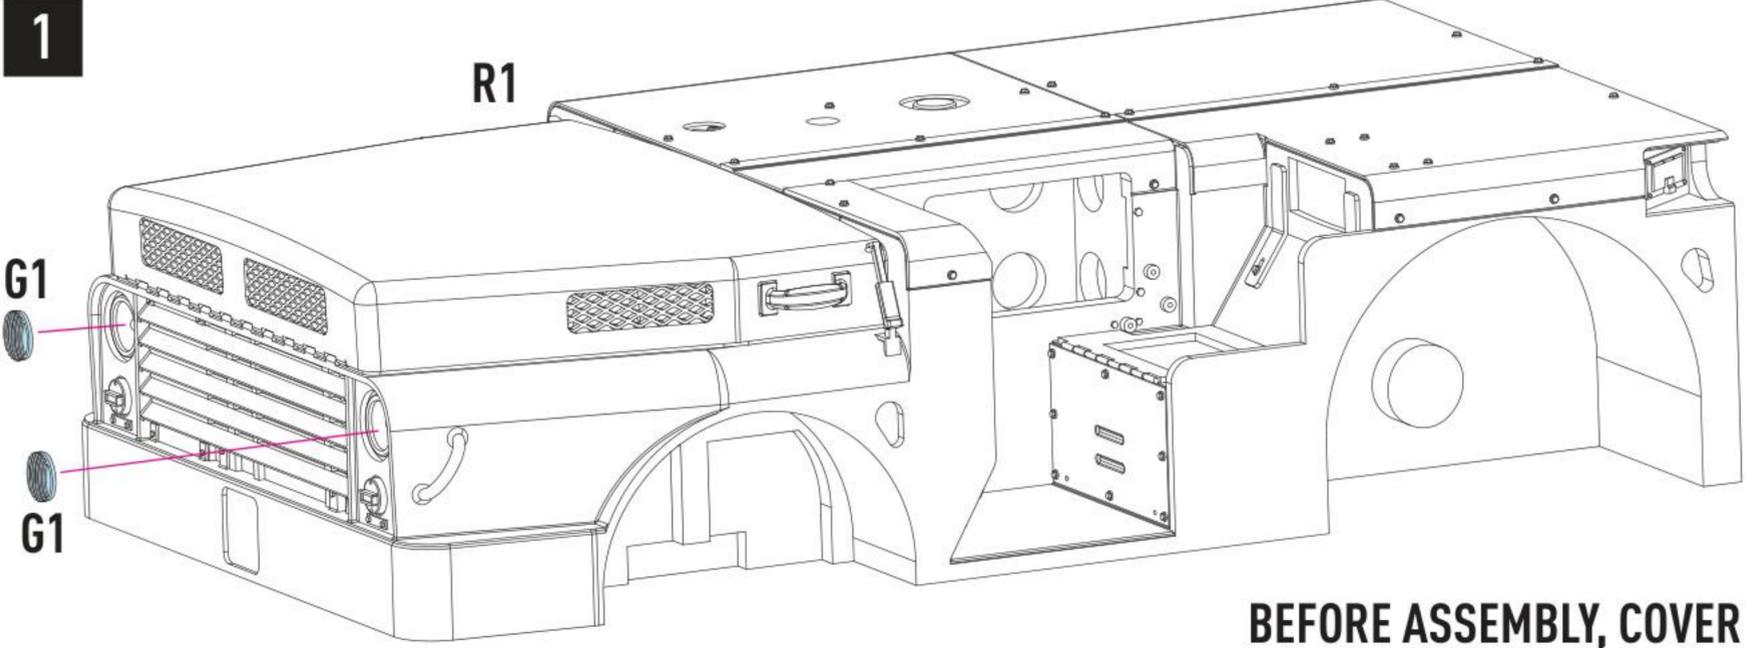


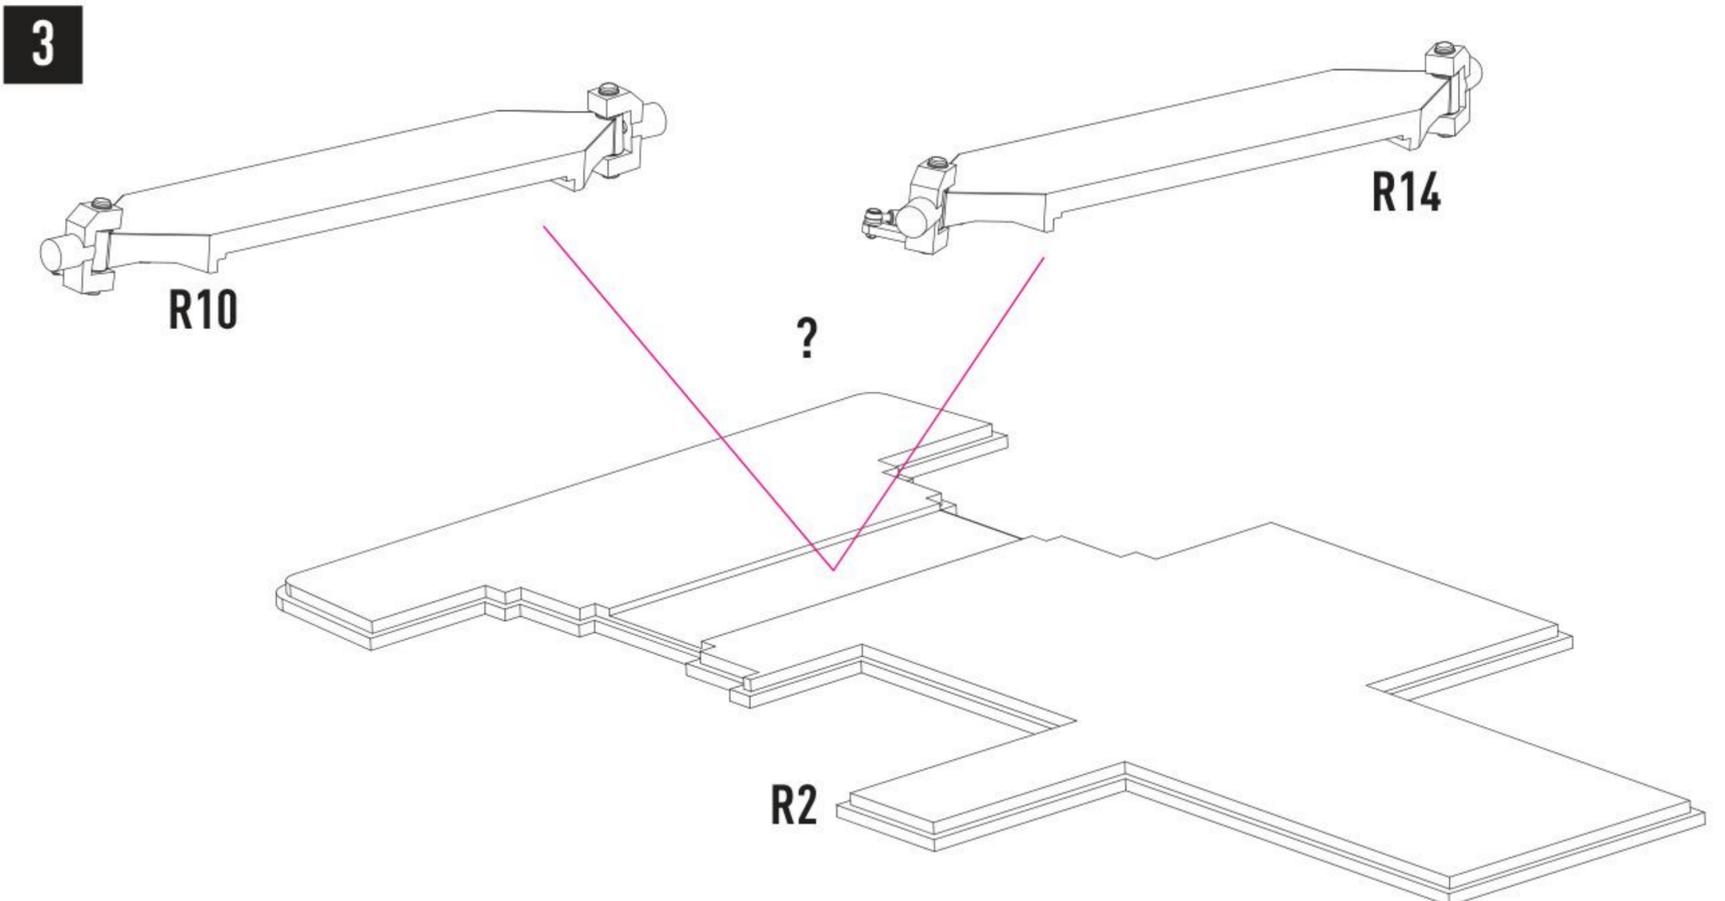


**BEFORE ASSEMBLY, COVER
TRANSPARENT PARTS WITH GLOSSY VARNISH**

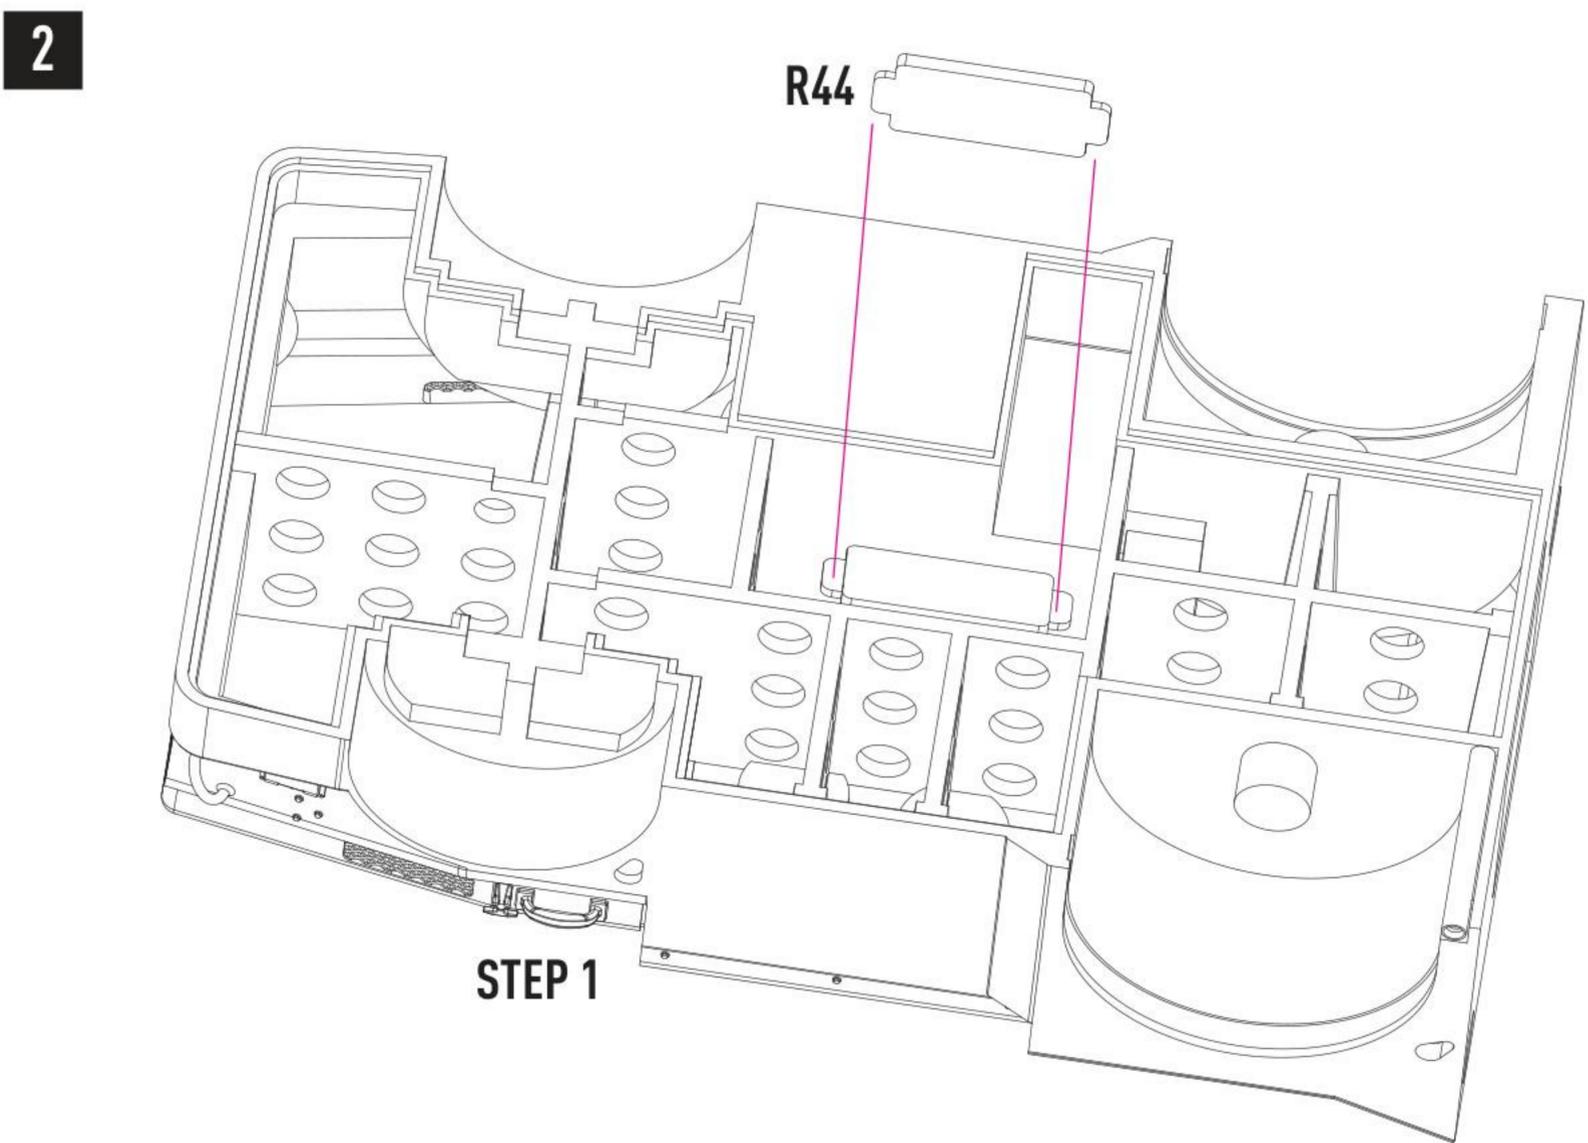


4

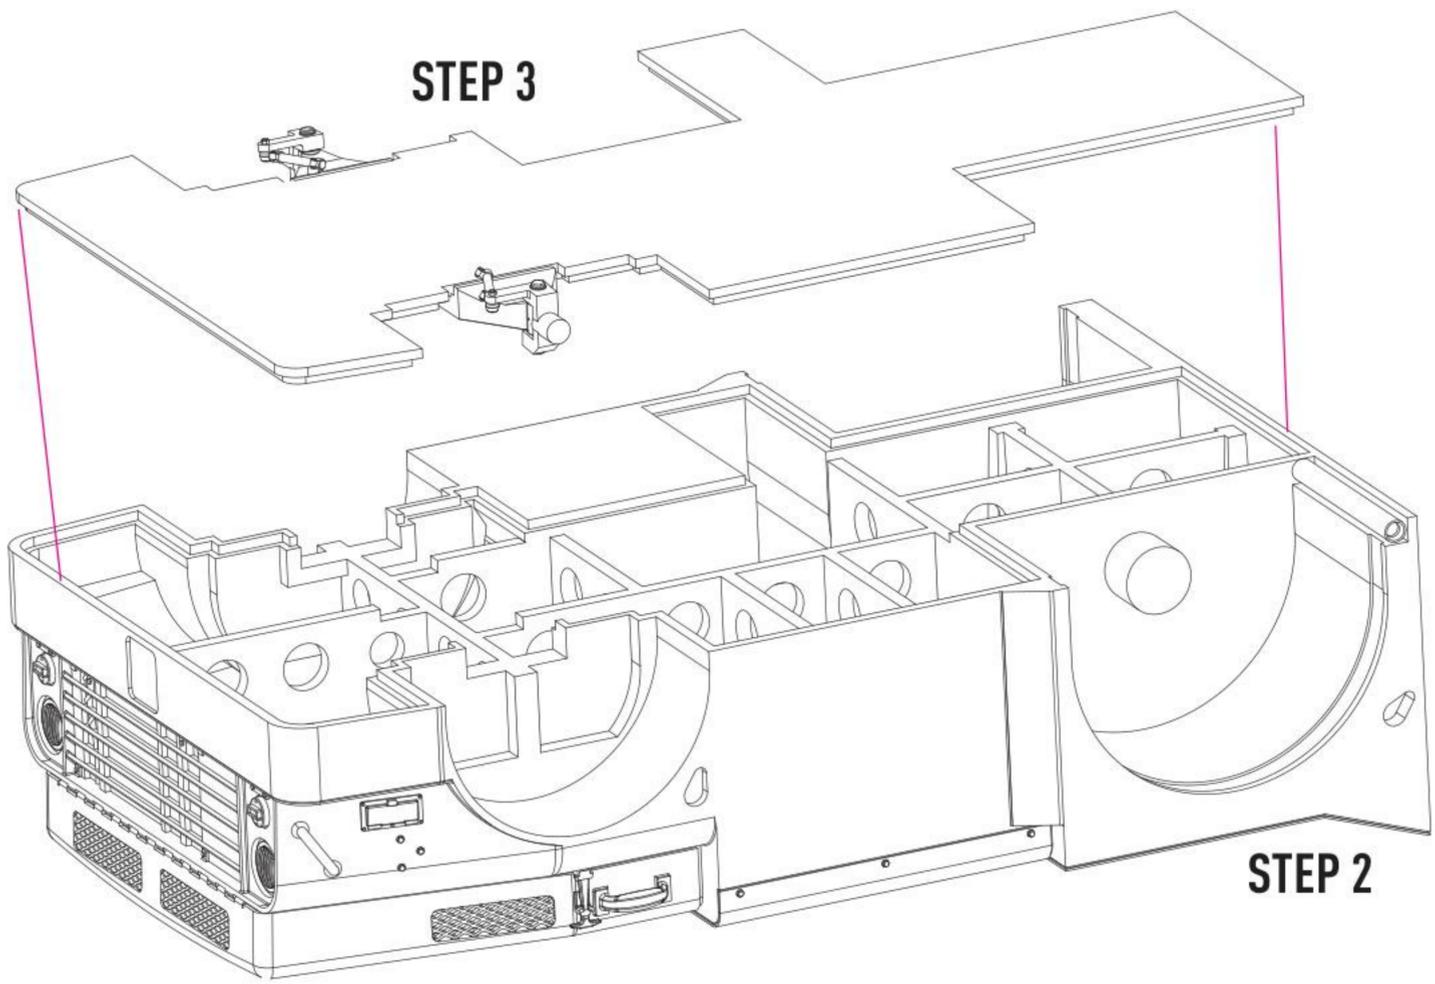


5

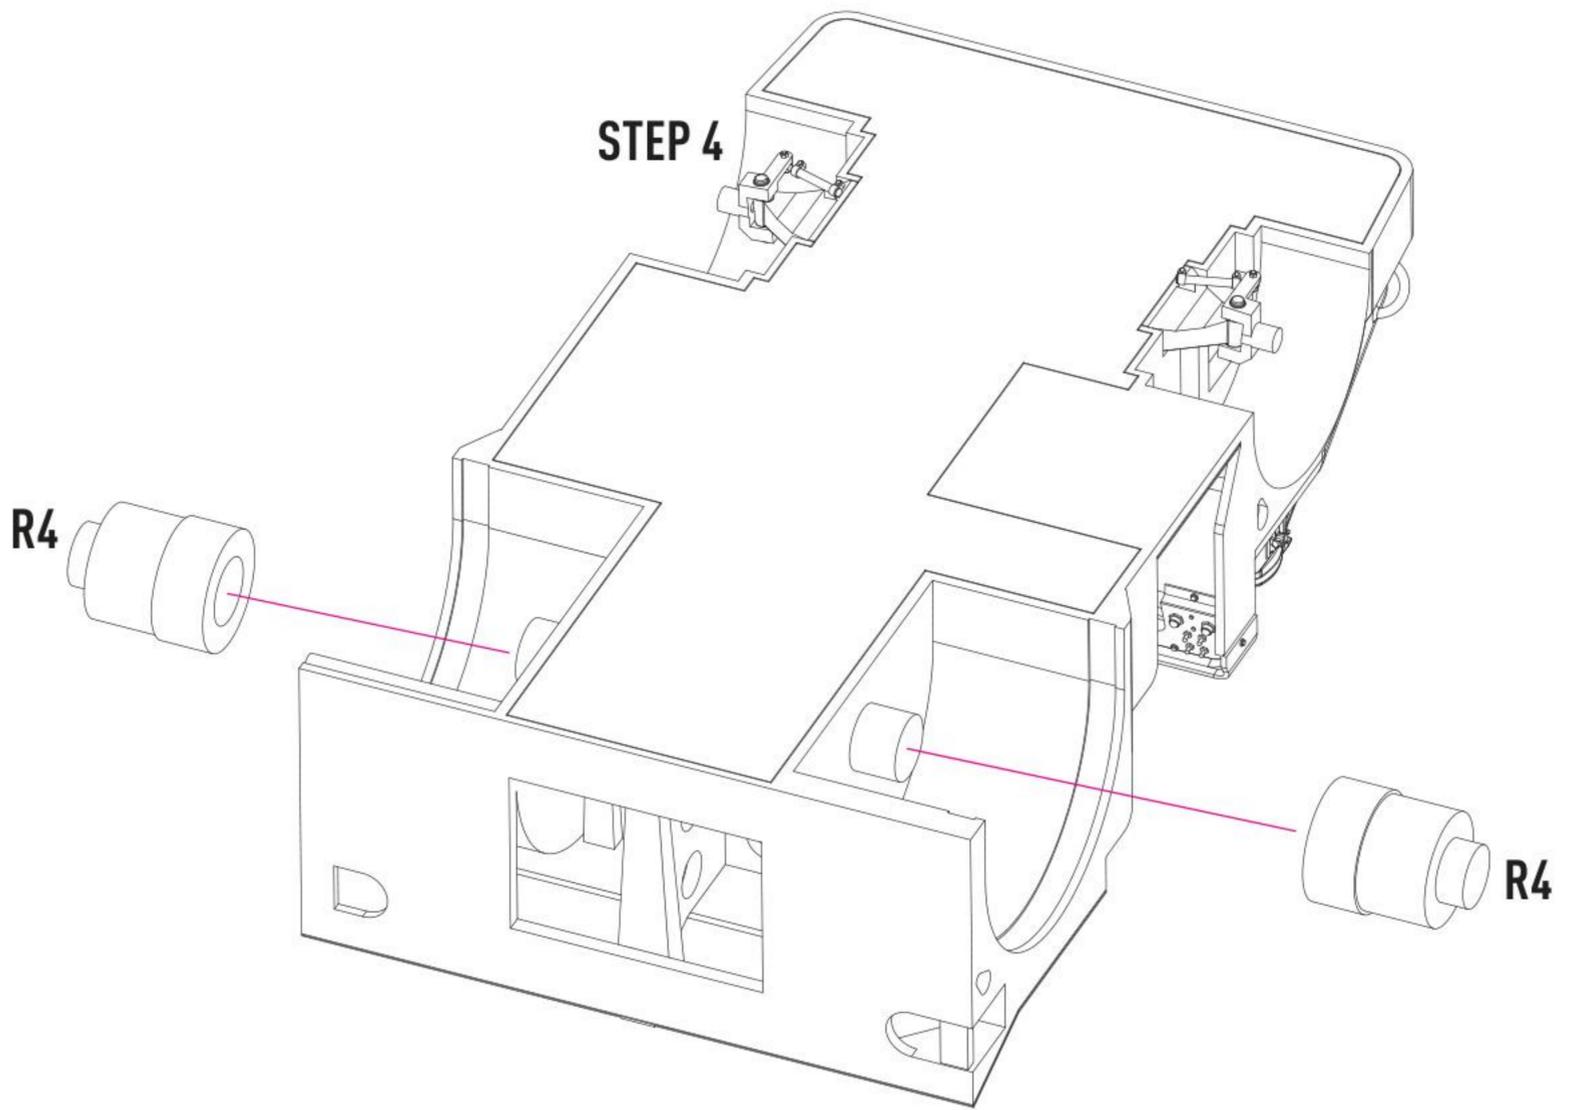


6 X2

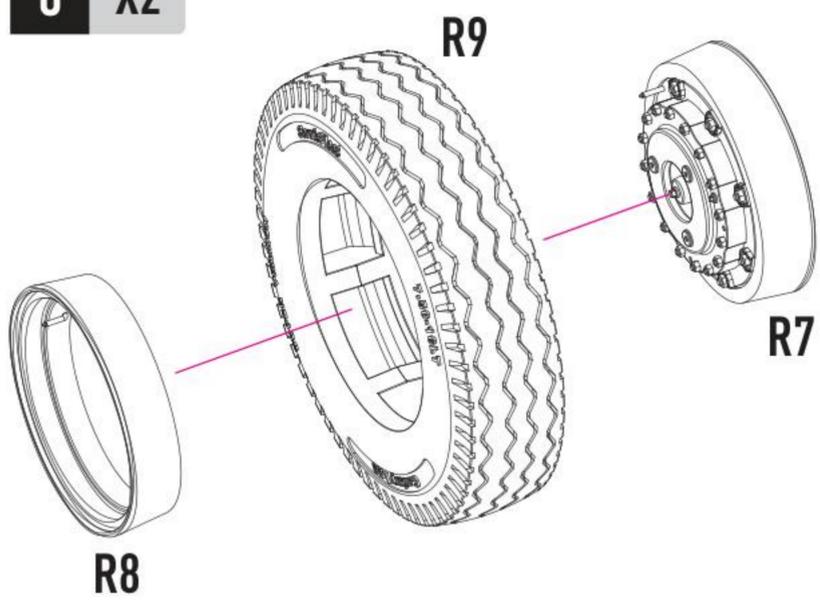


7 X2

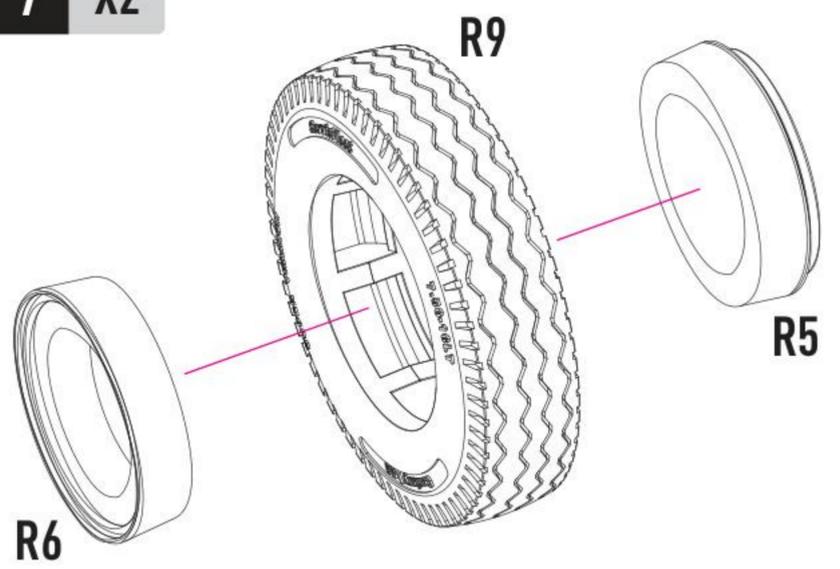


8 X2


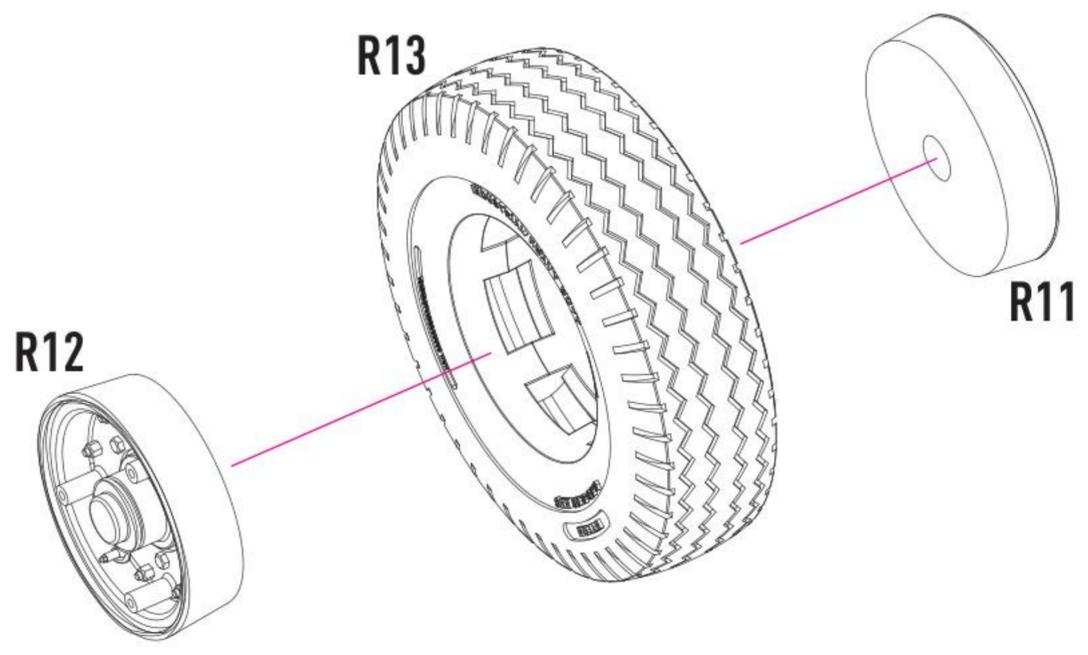


9

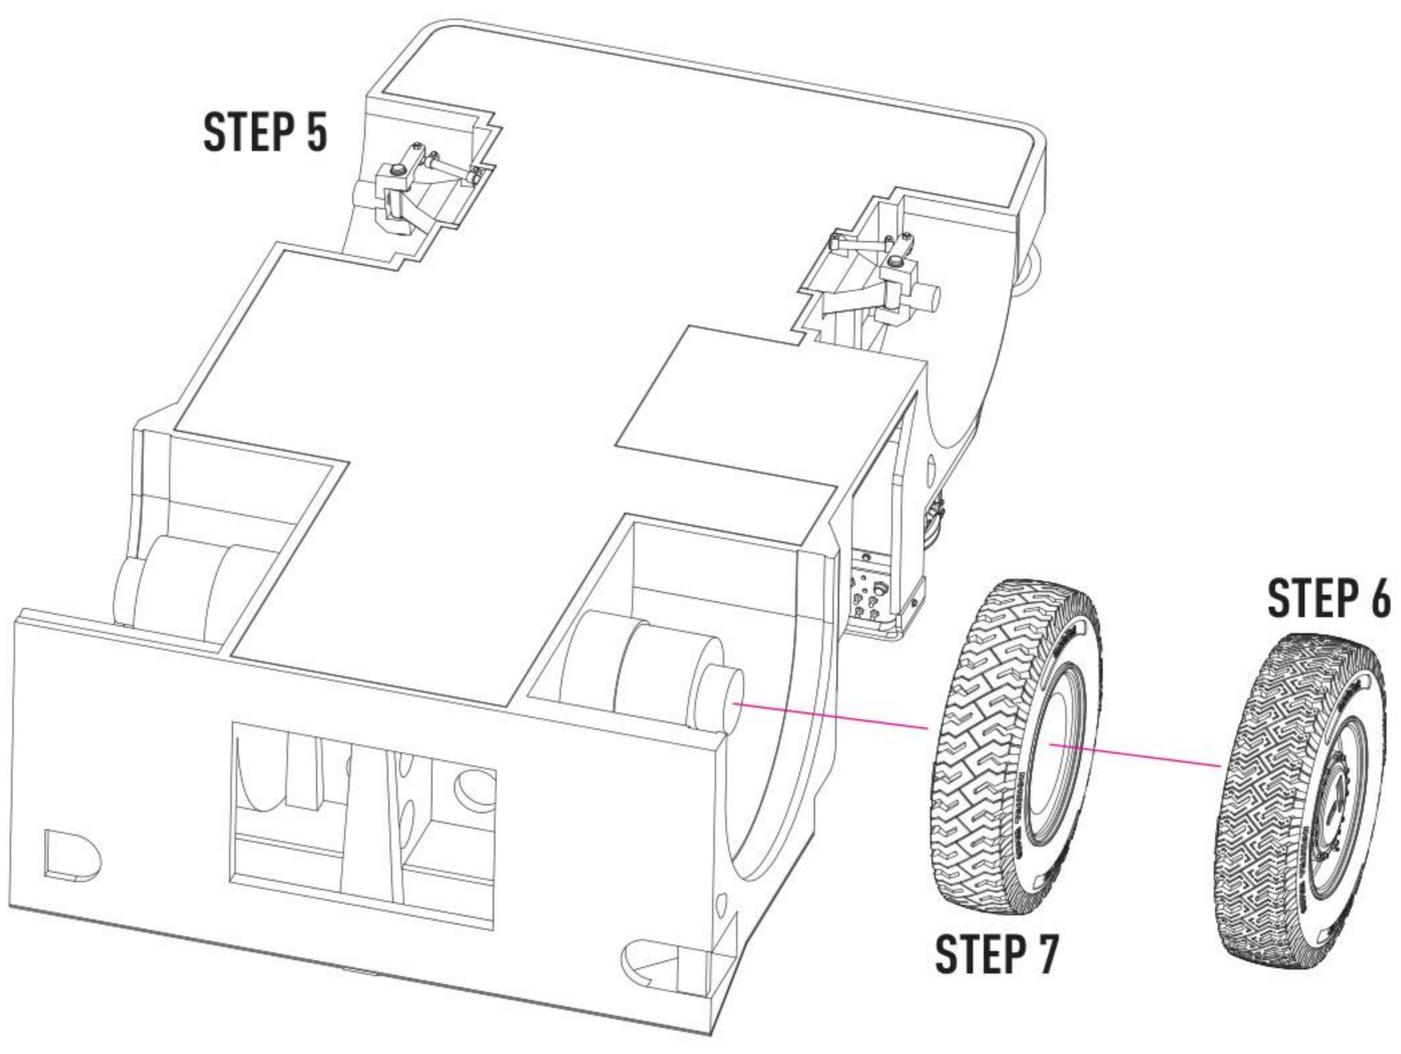


10

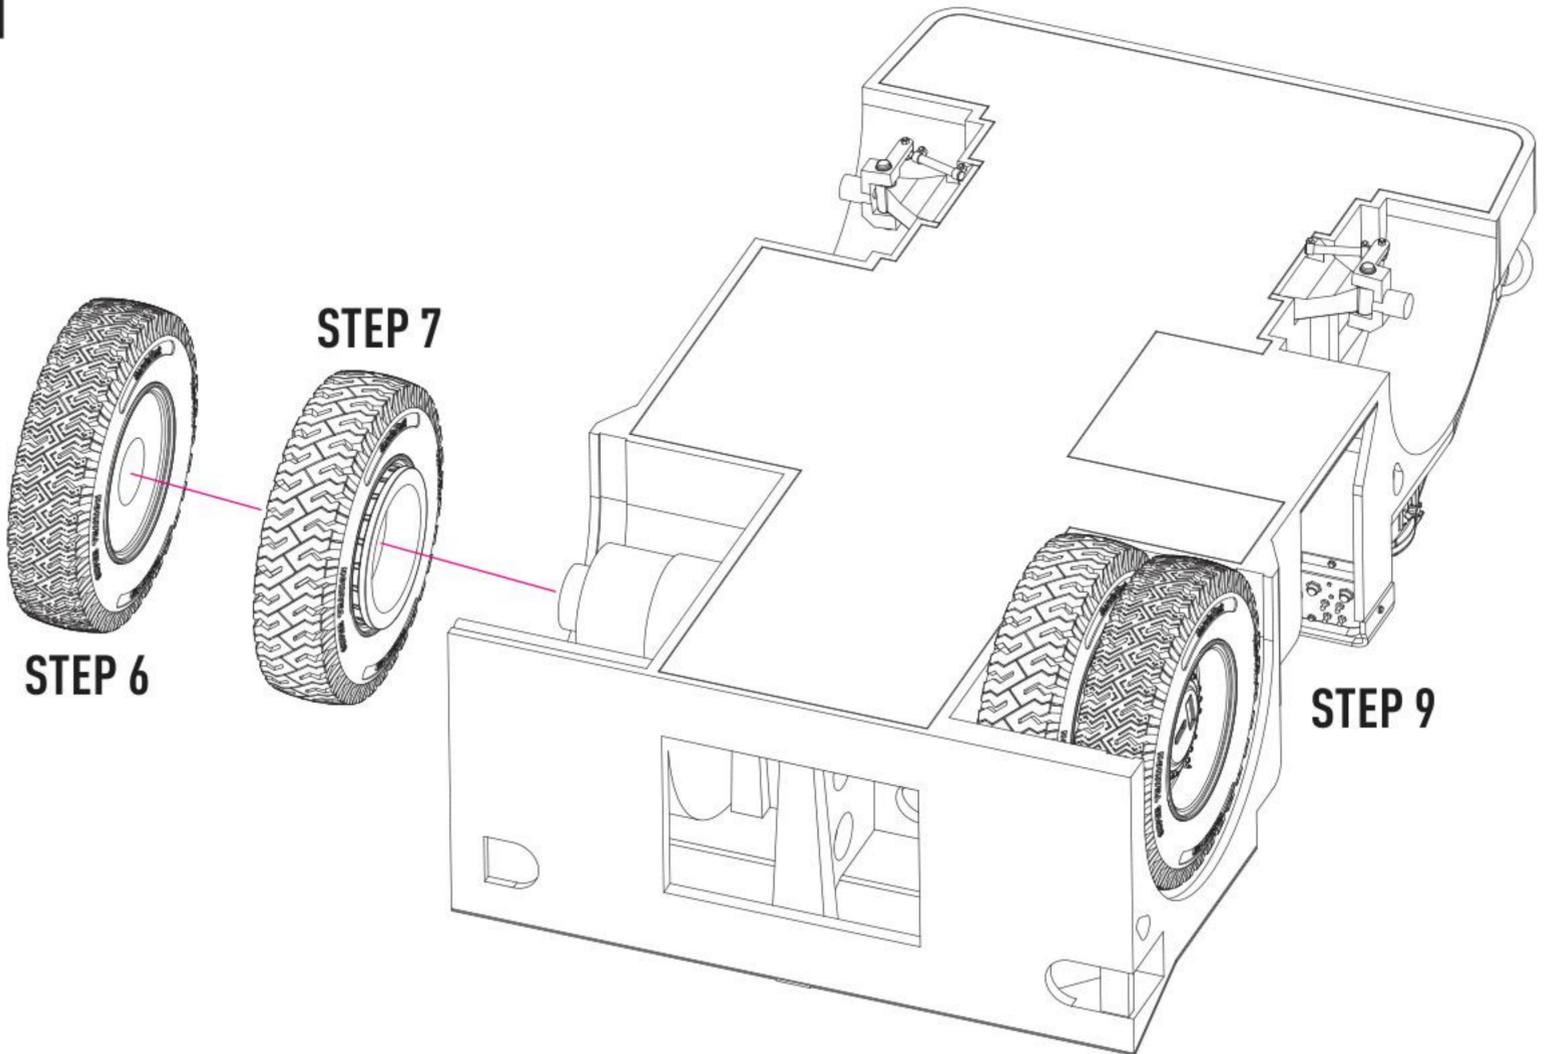


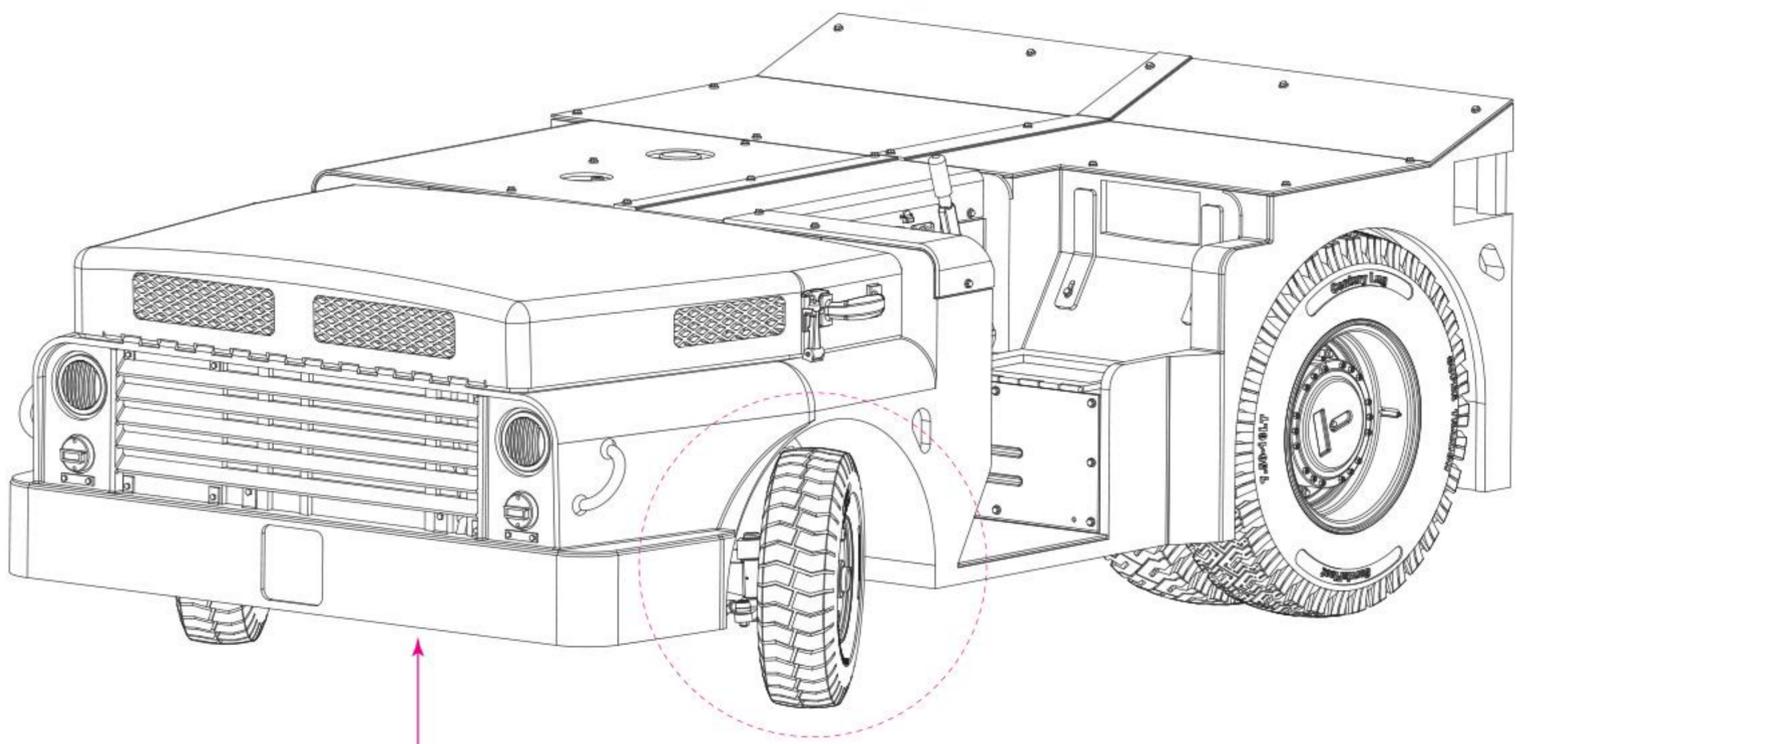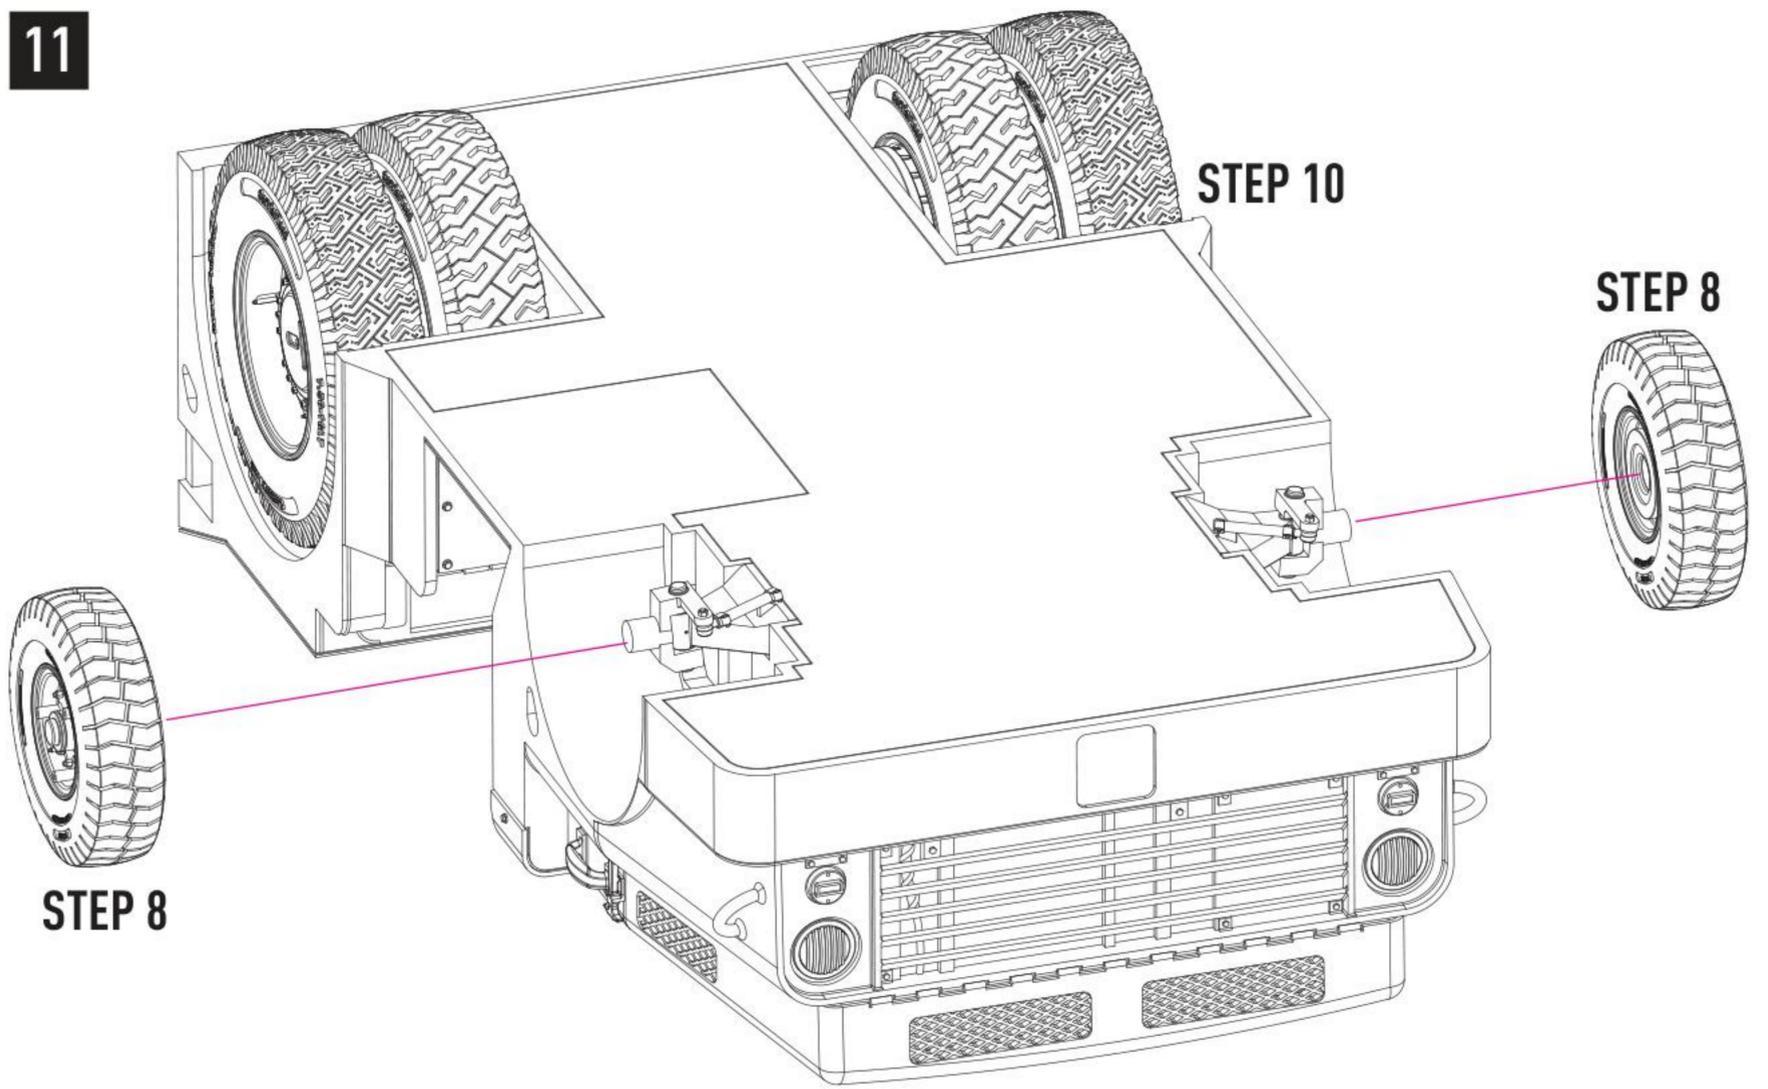


?

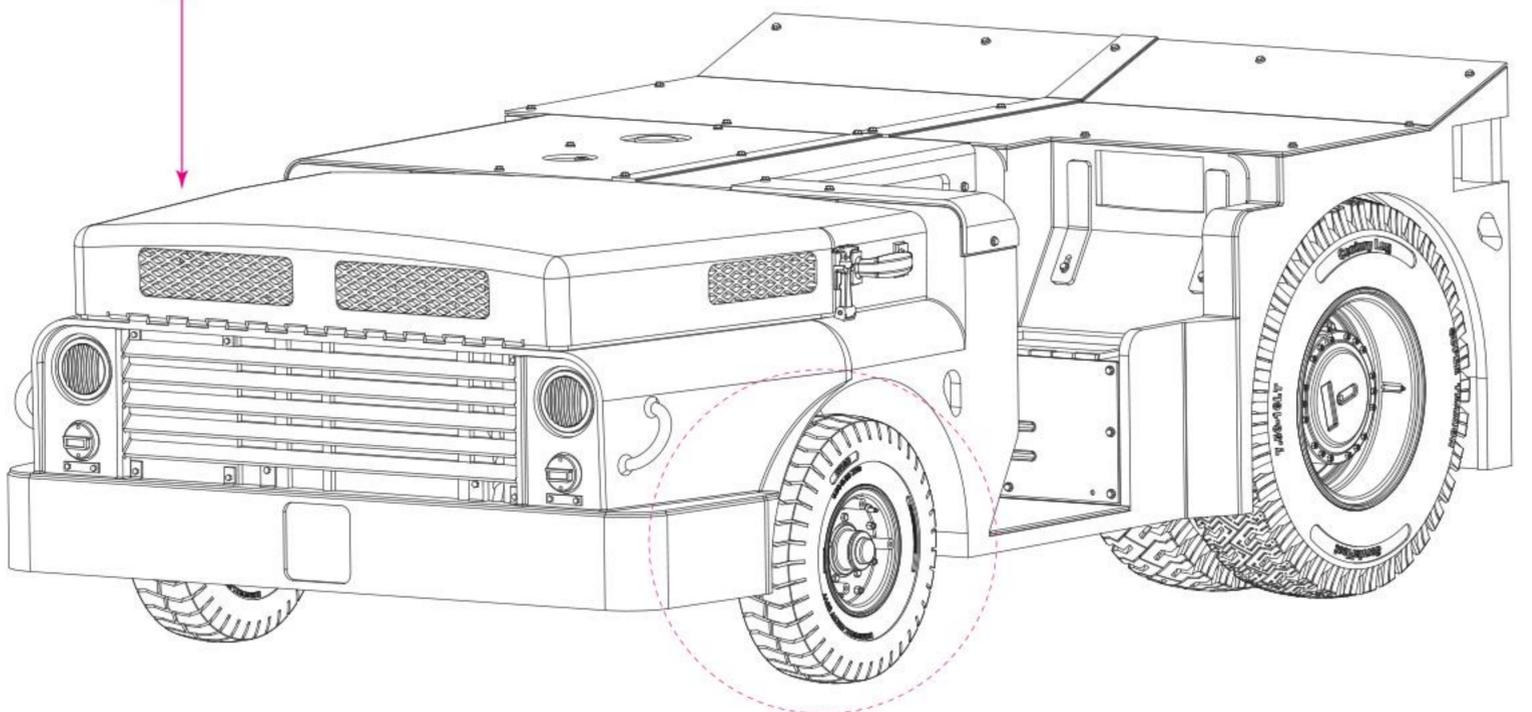


12

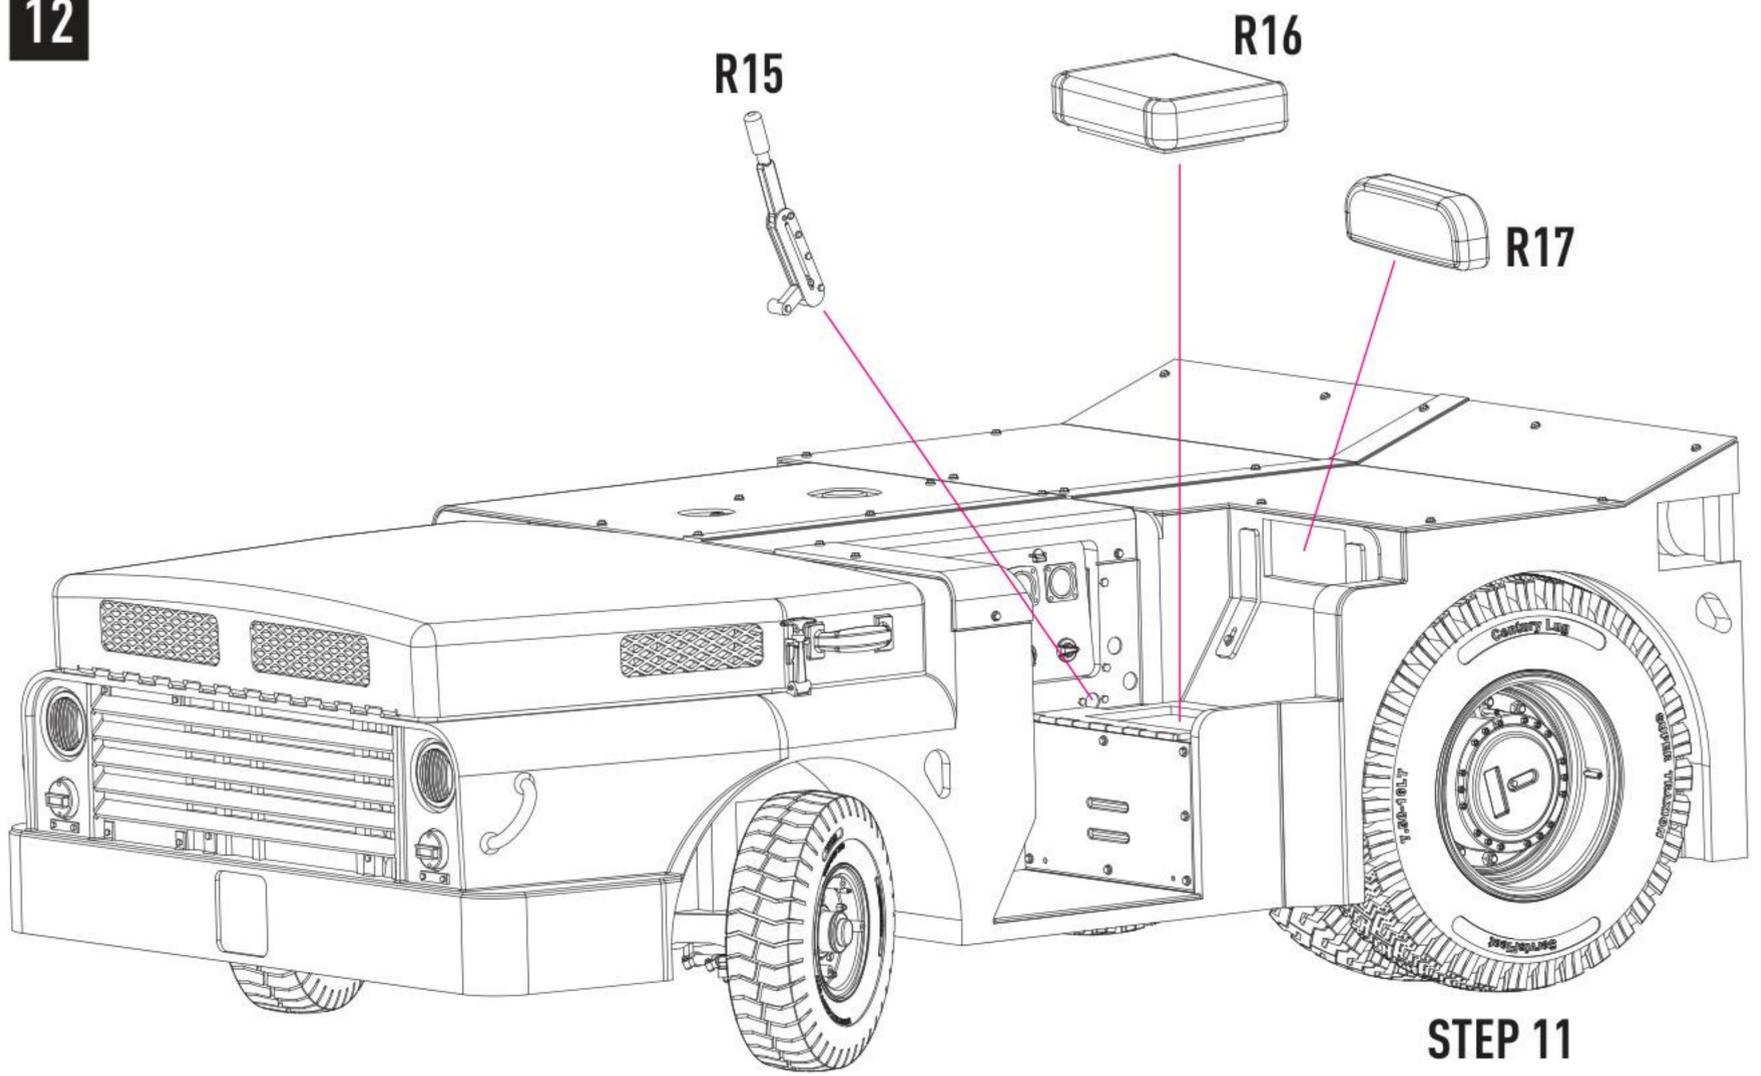

13

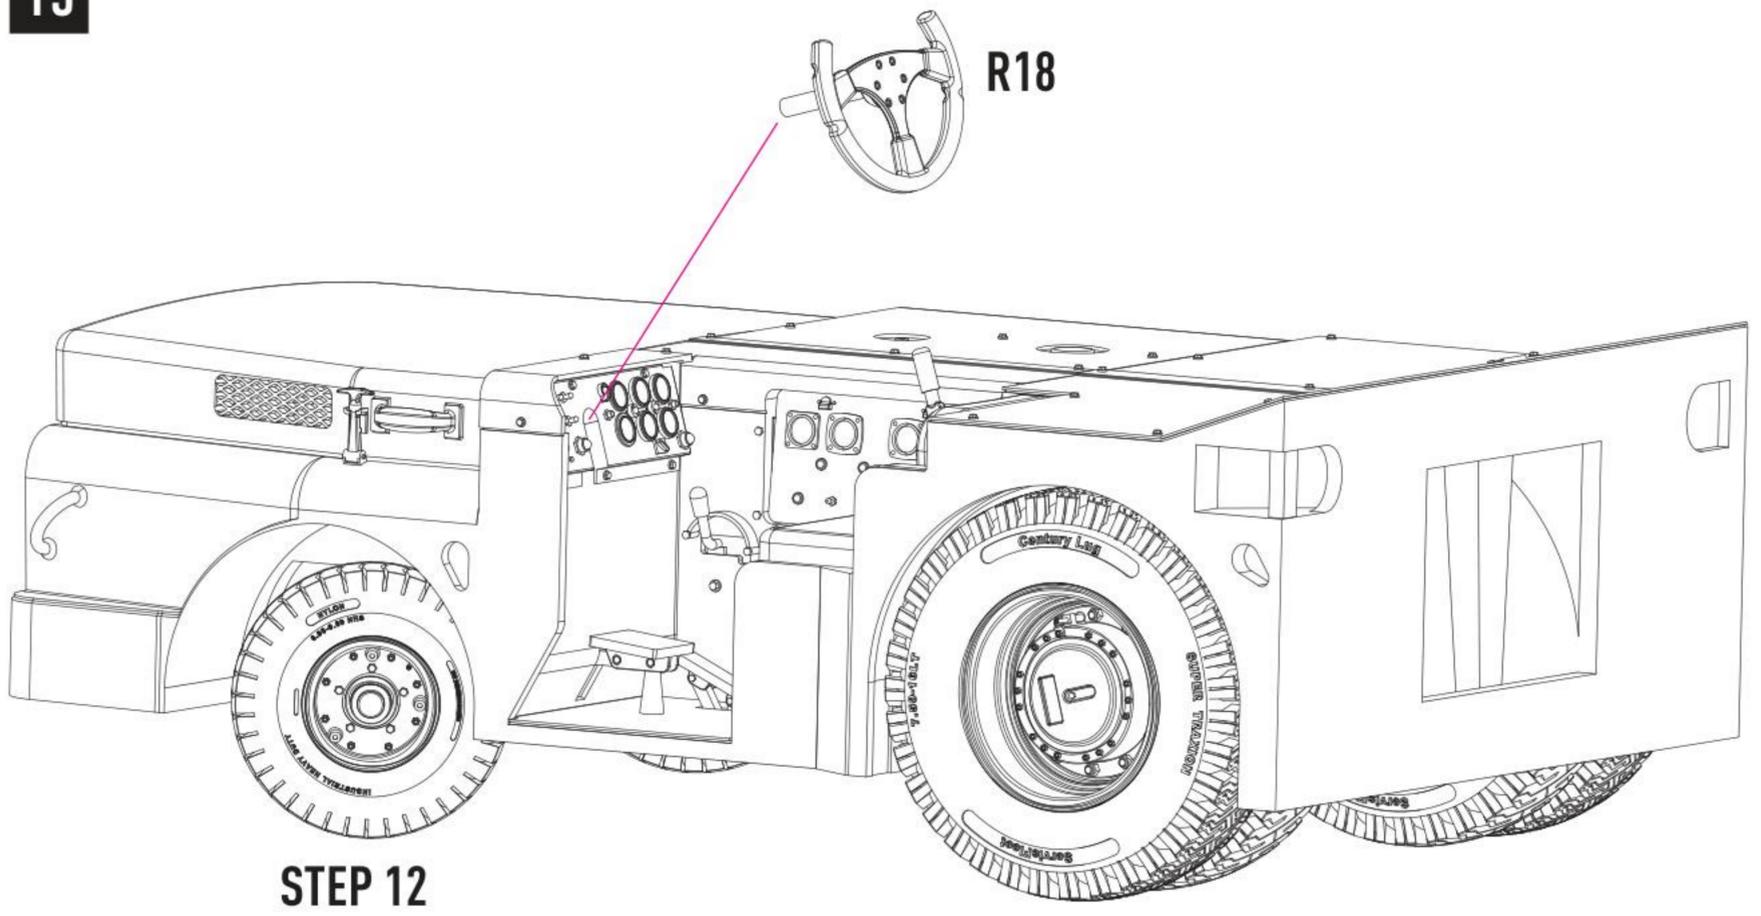


14

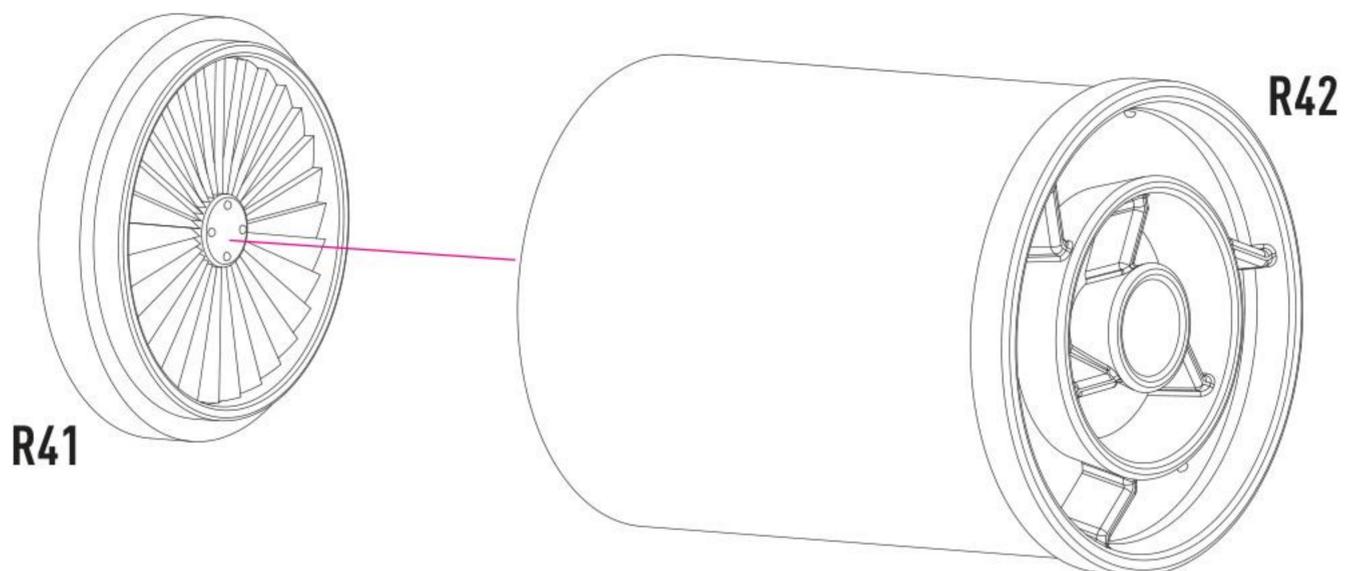


15

R40

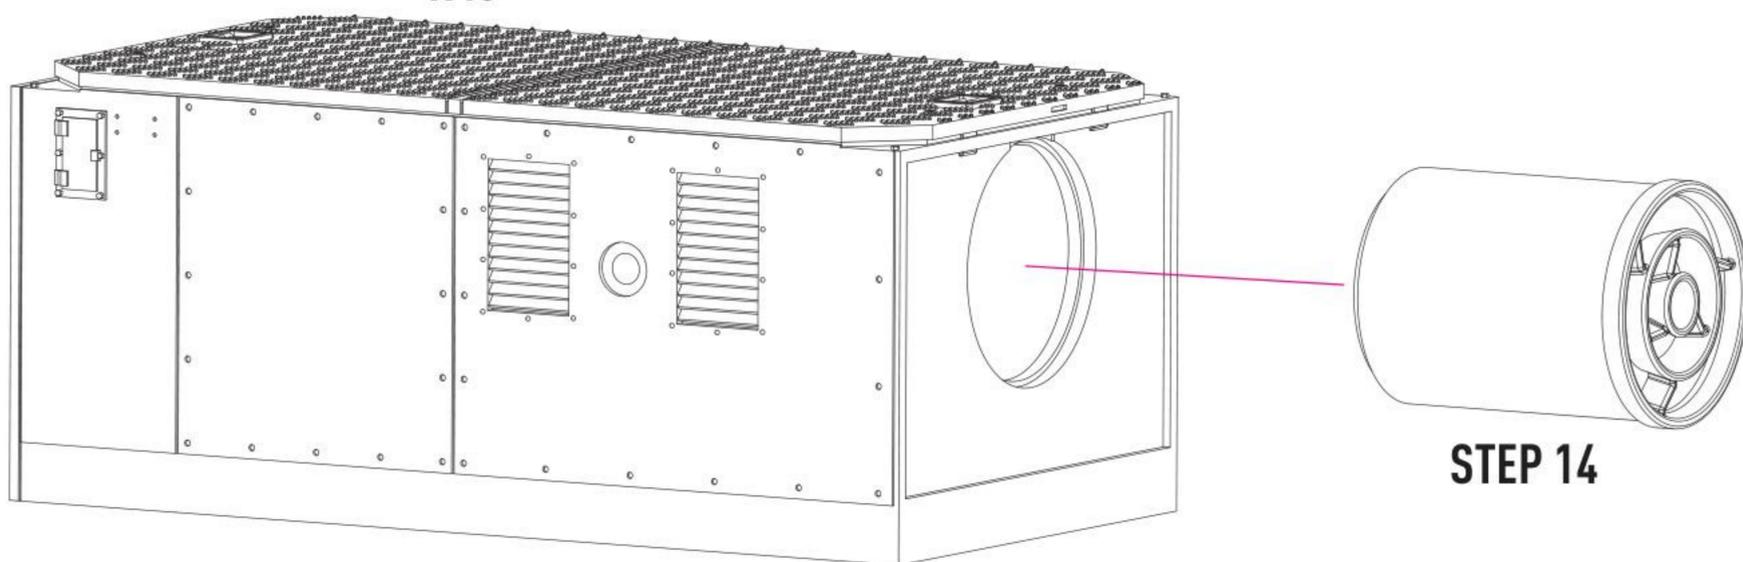


16

STEP 15

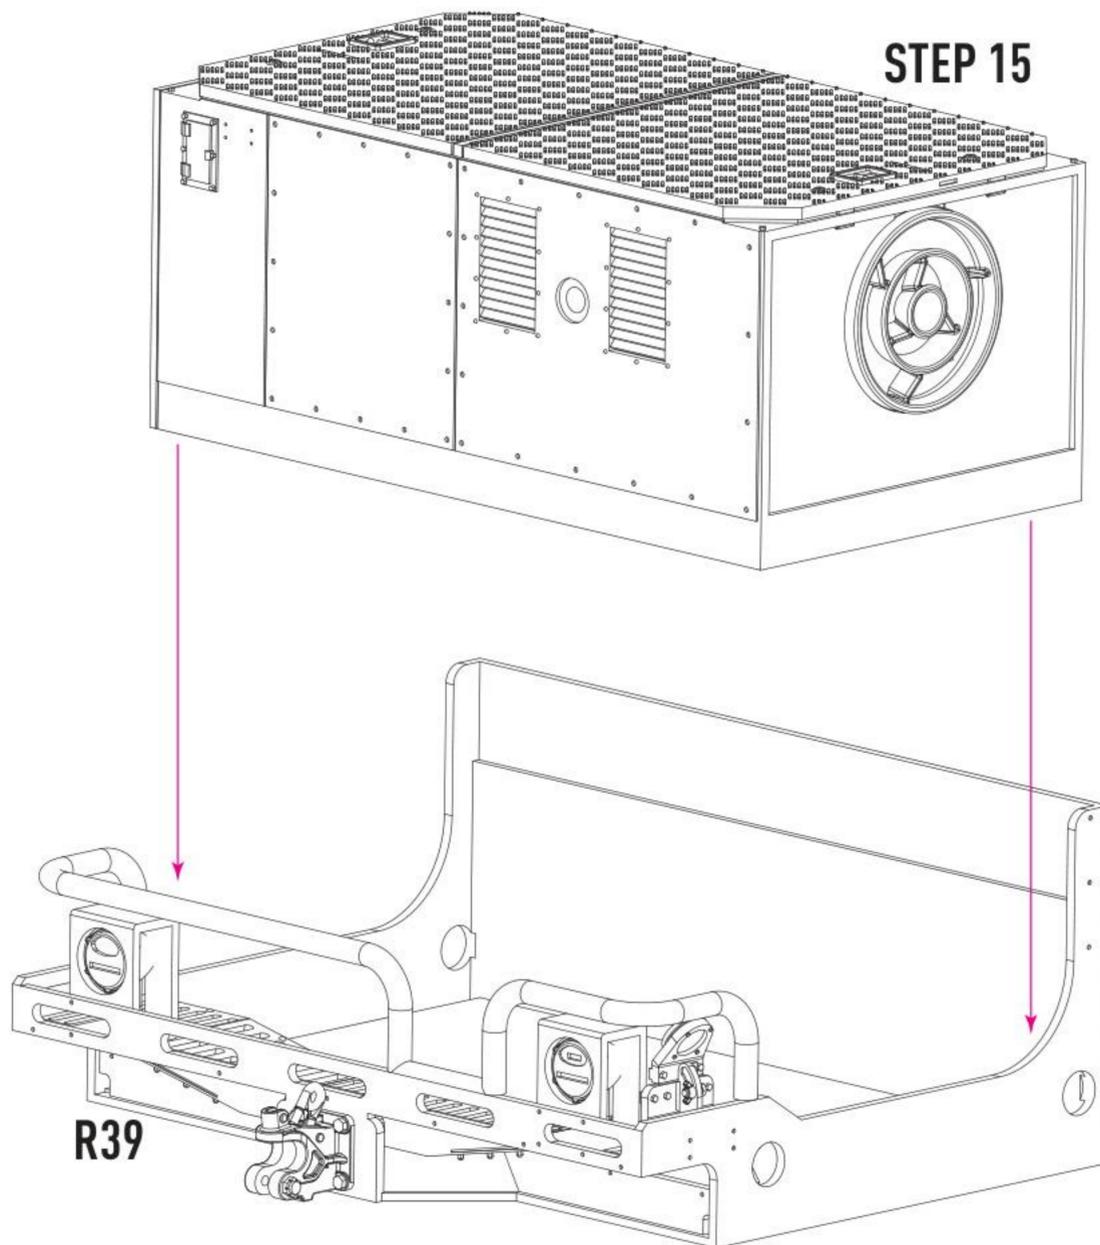



17

R32


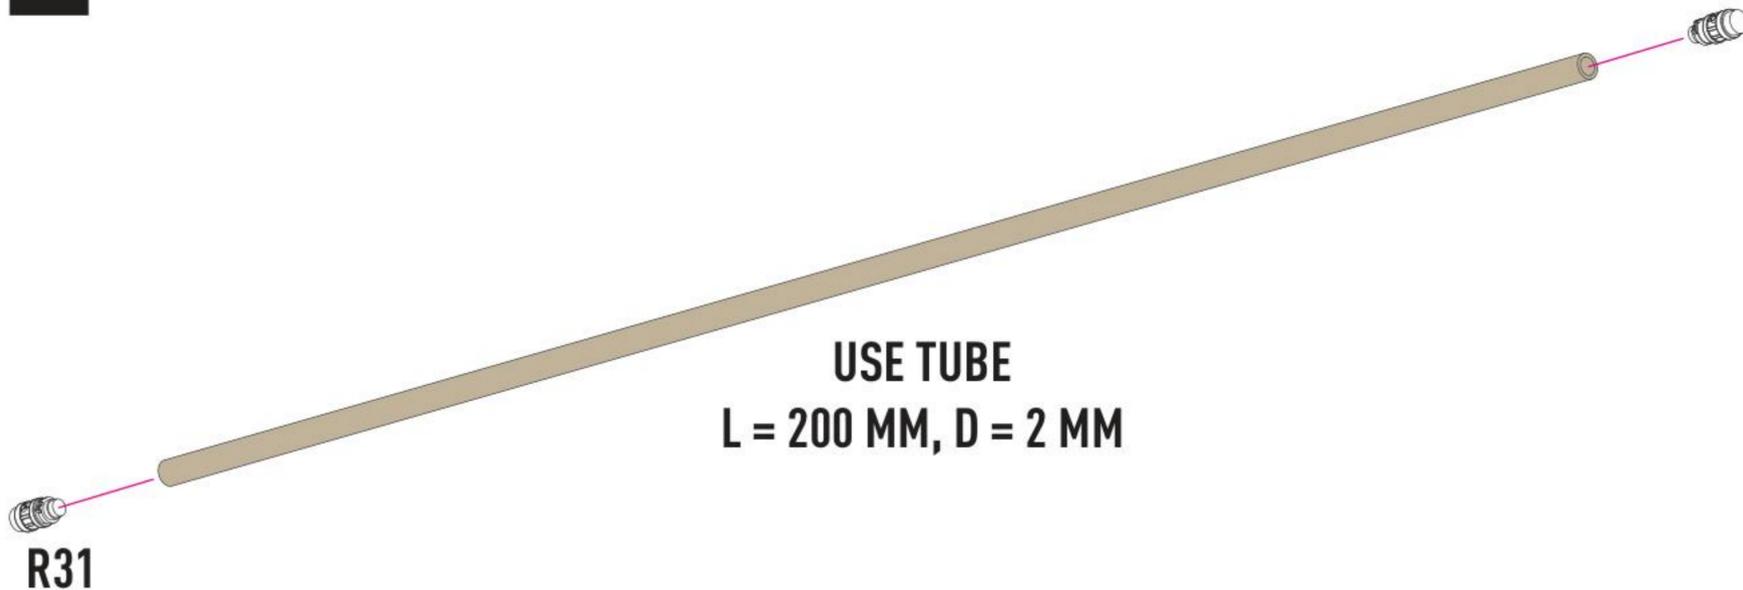


18


**USE R43
OR STEP 17**

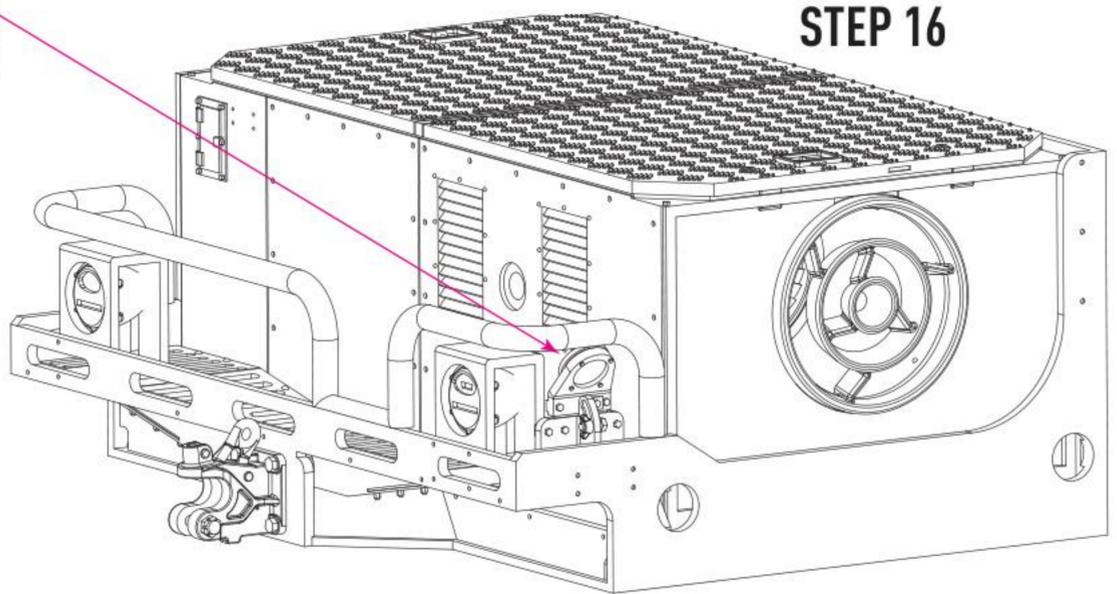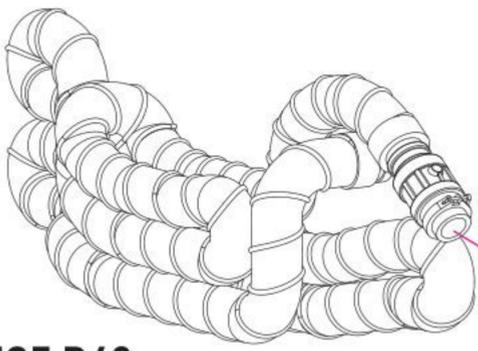


19

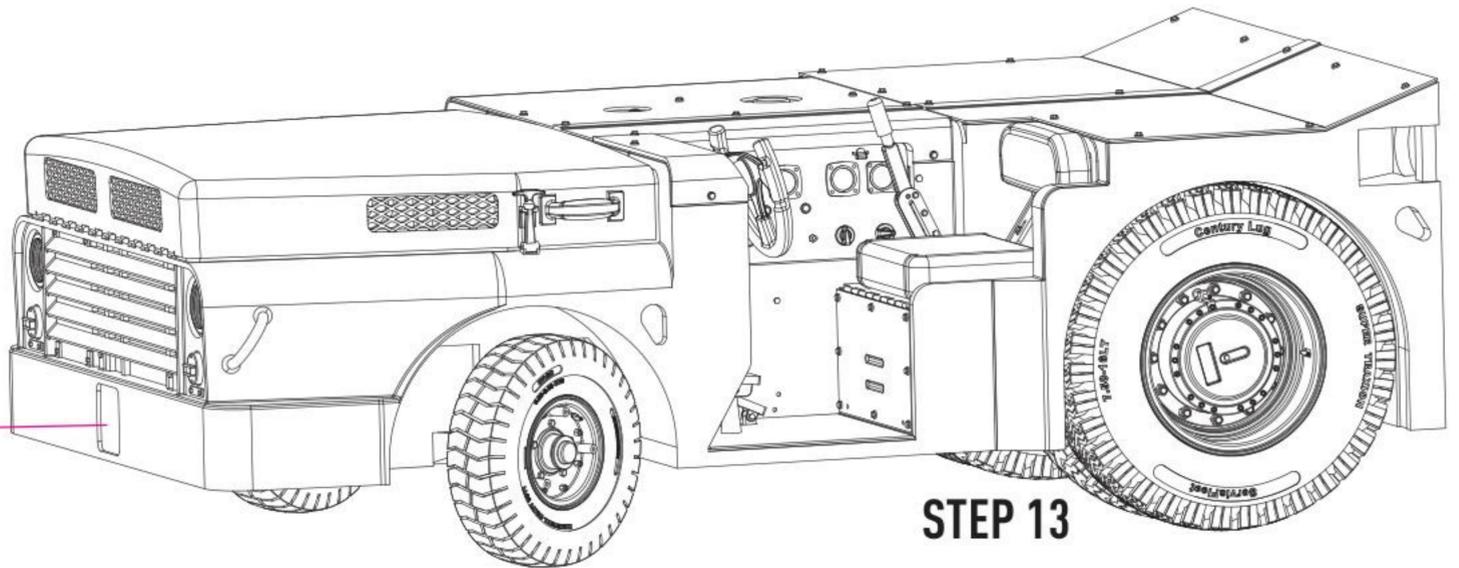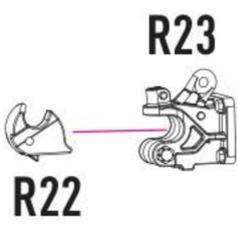


20

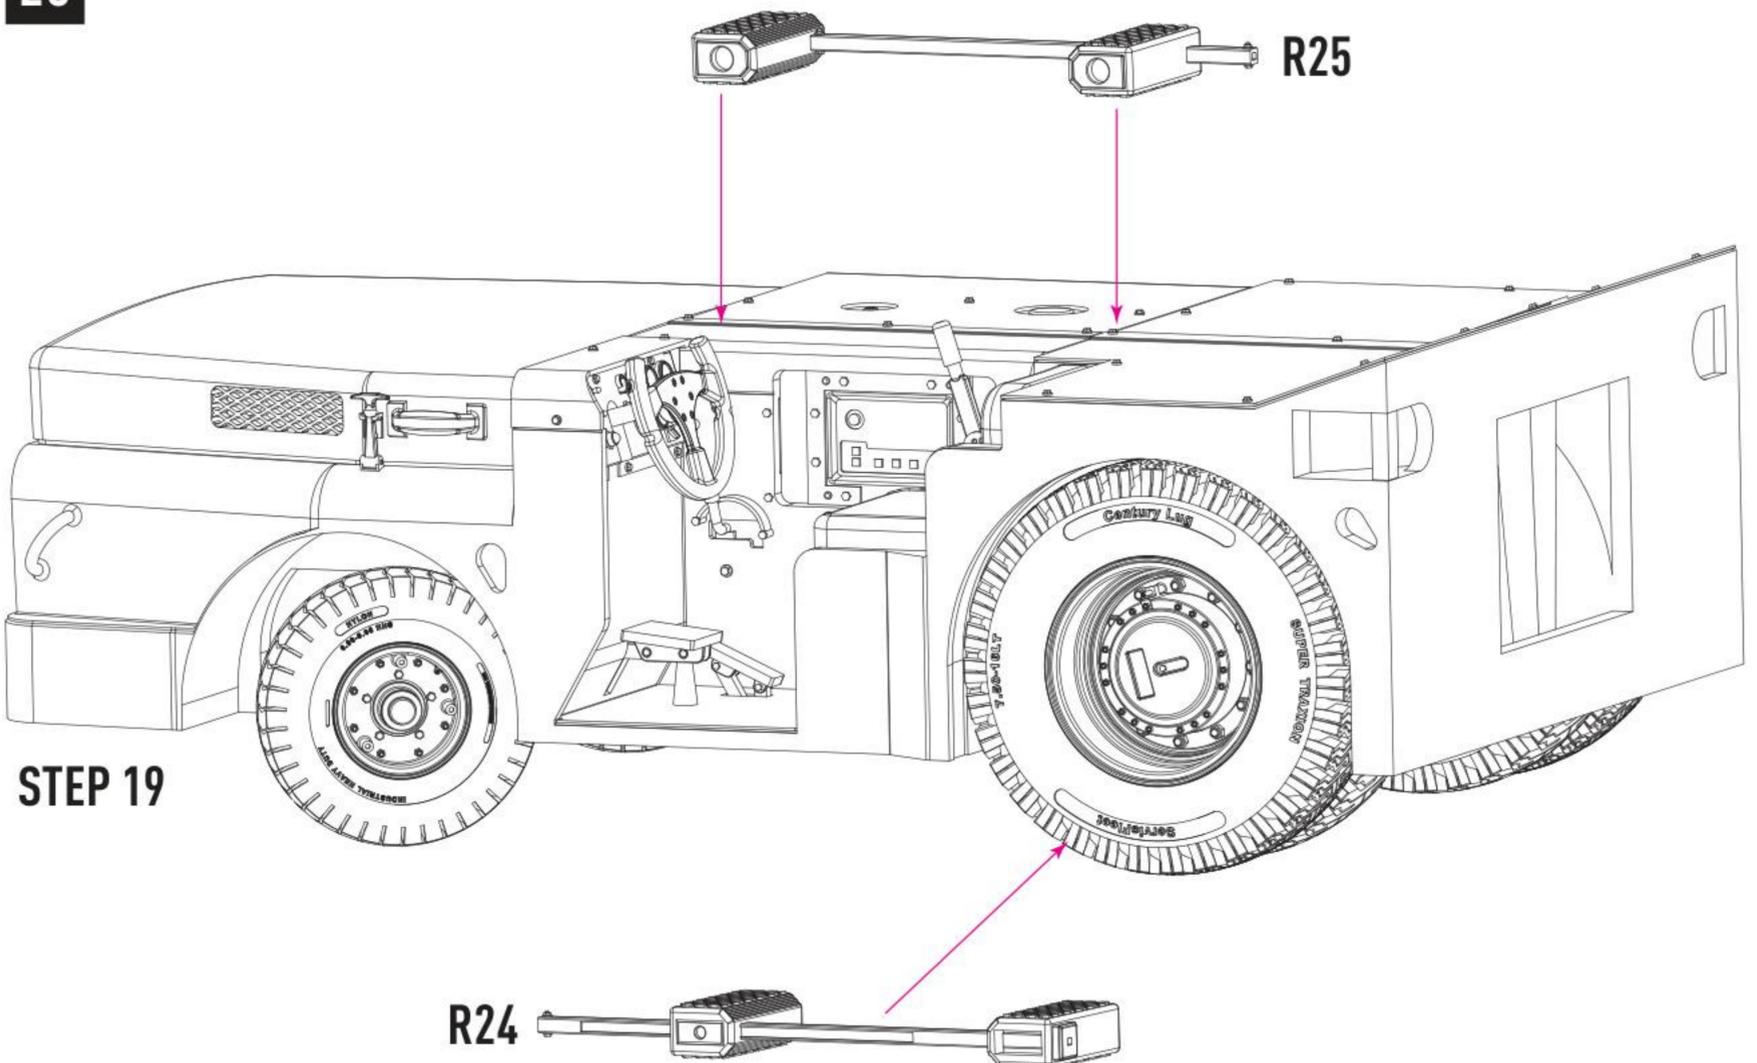


21

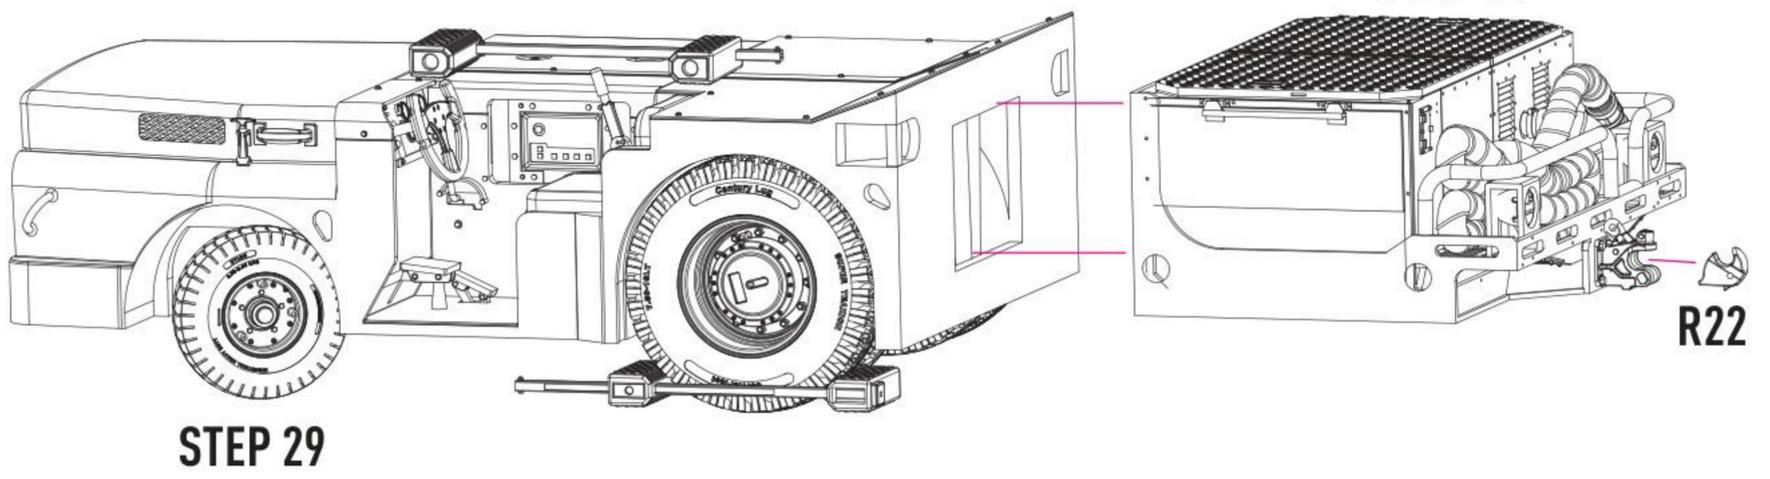

22

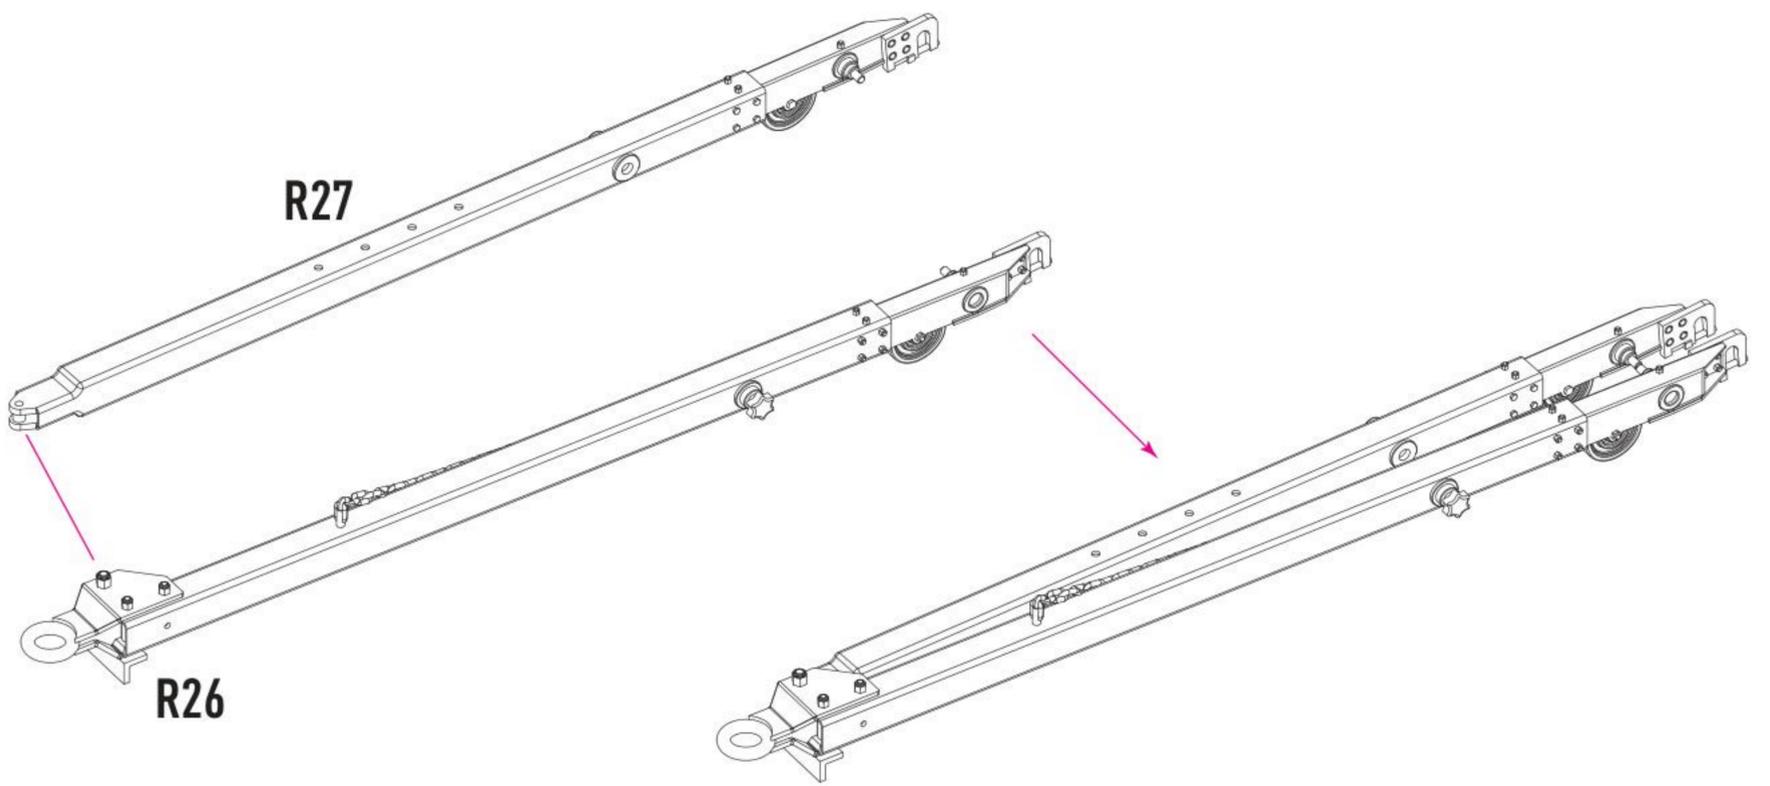


23

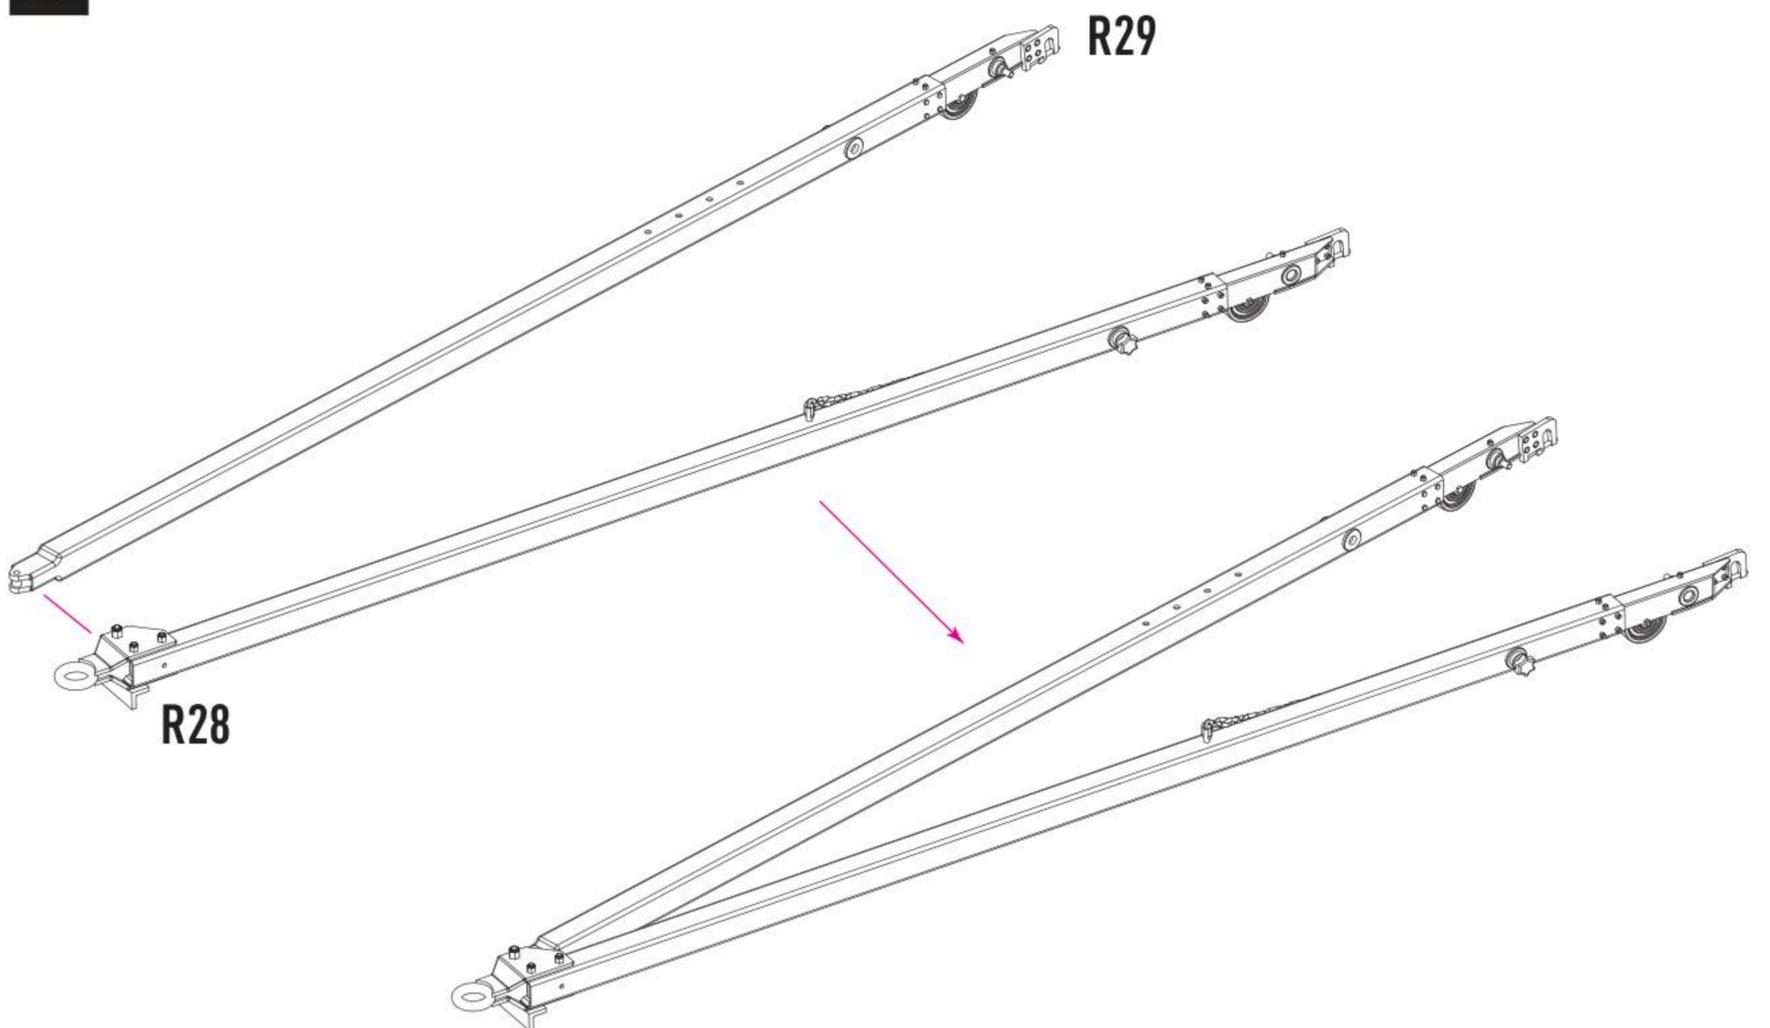

24


STEP 22

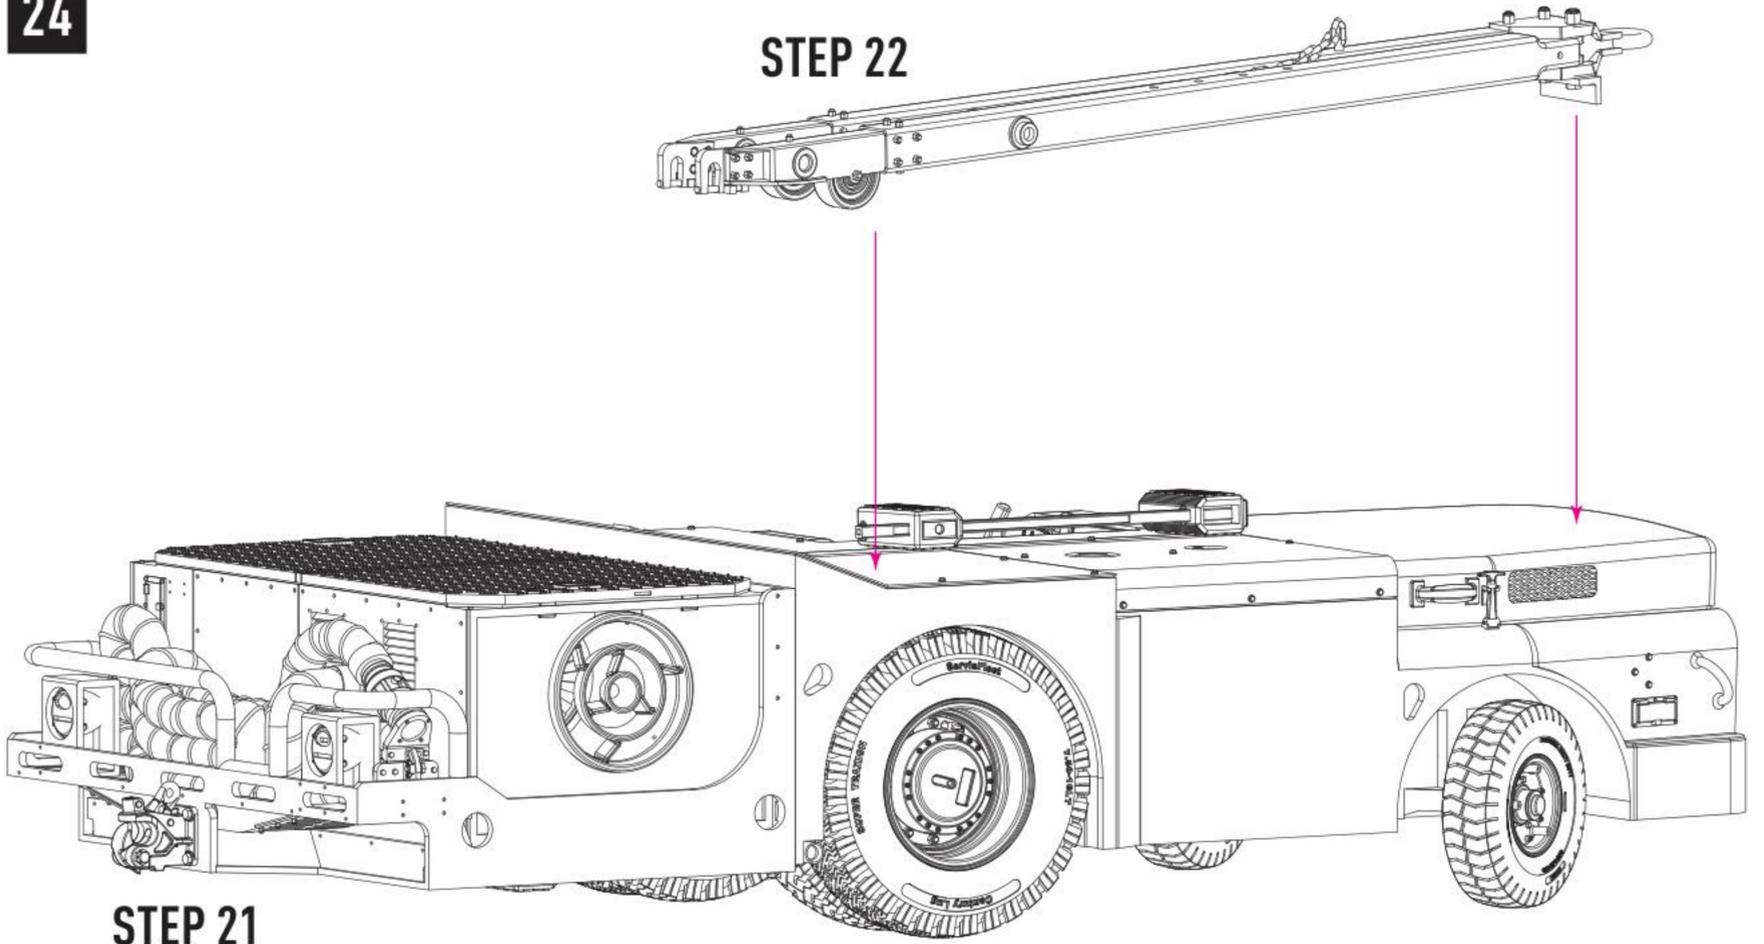


STEP 21


25

STEP 24




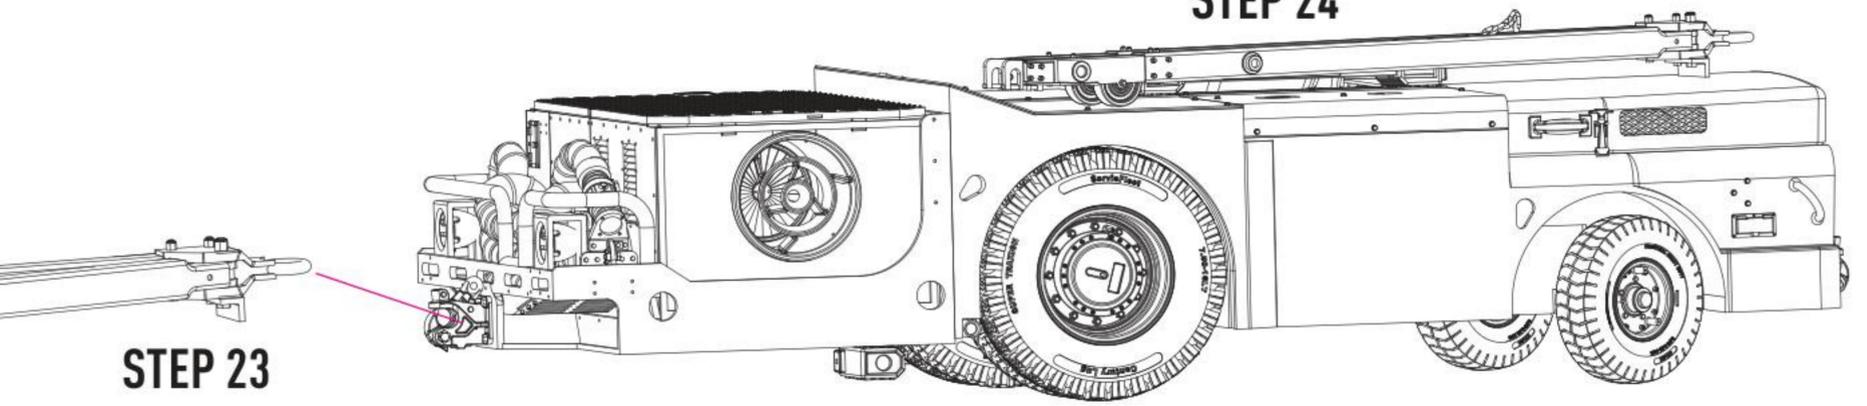


STEP 23

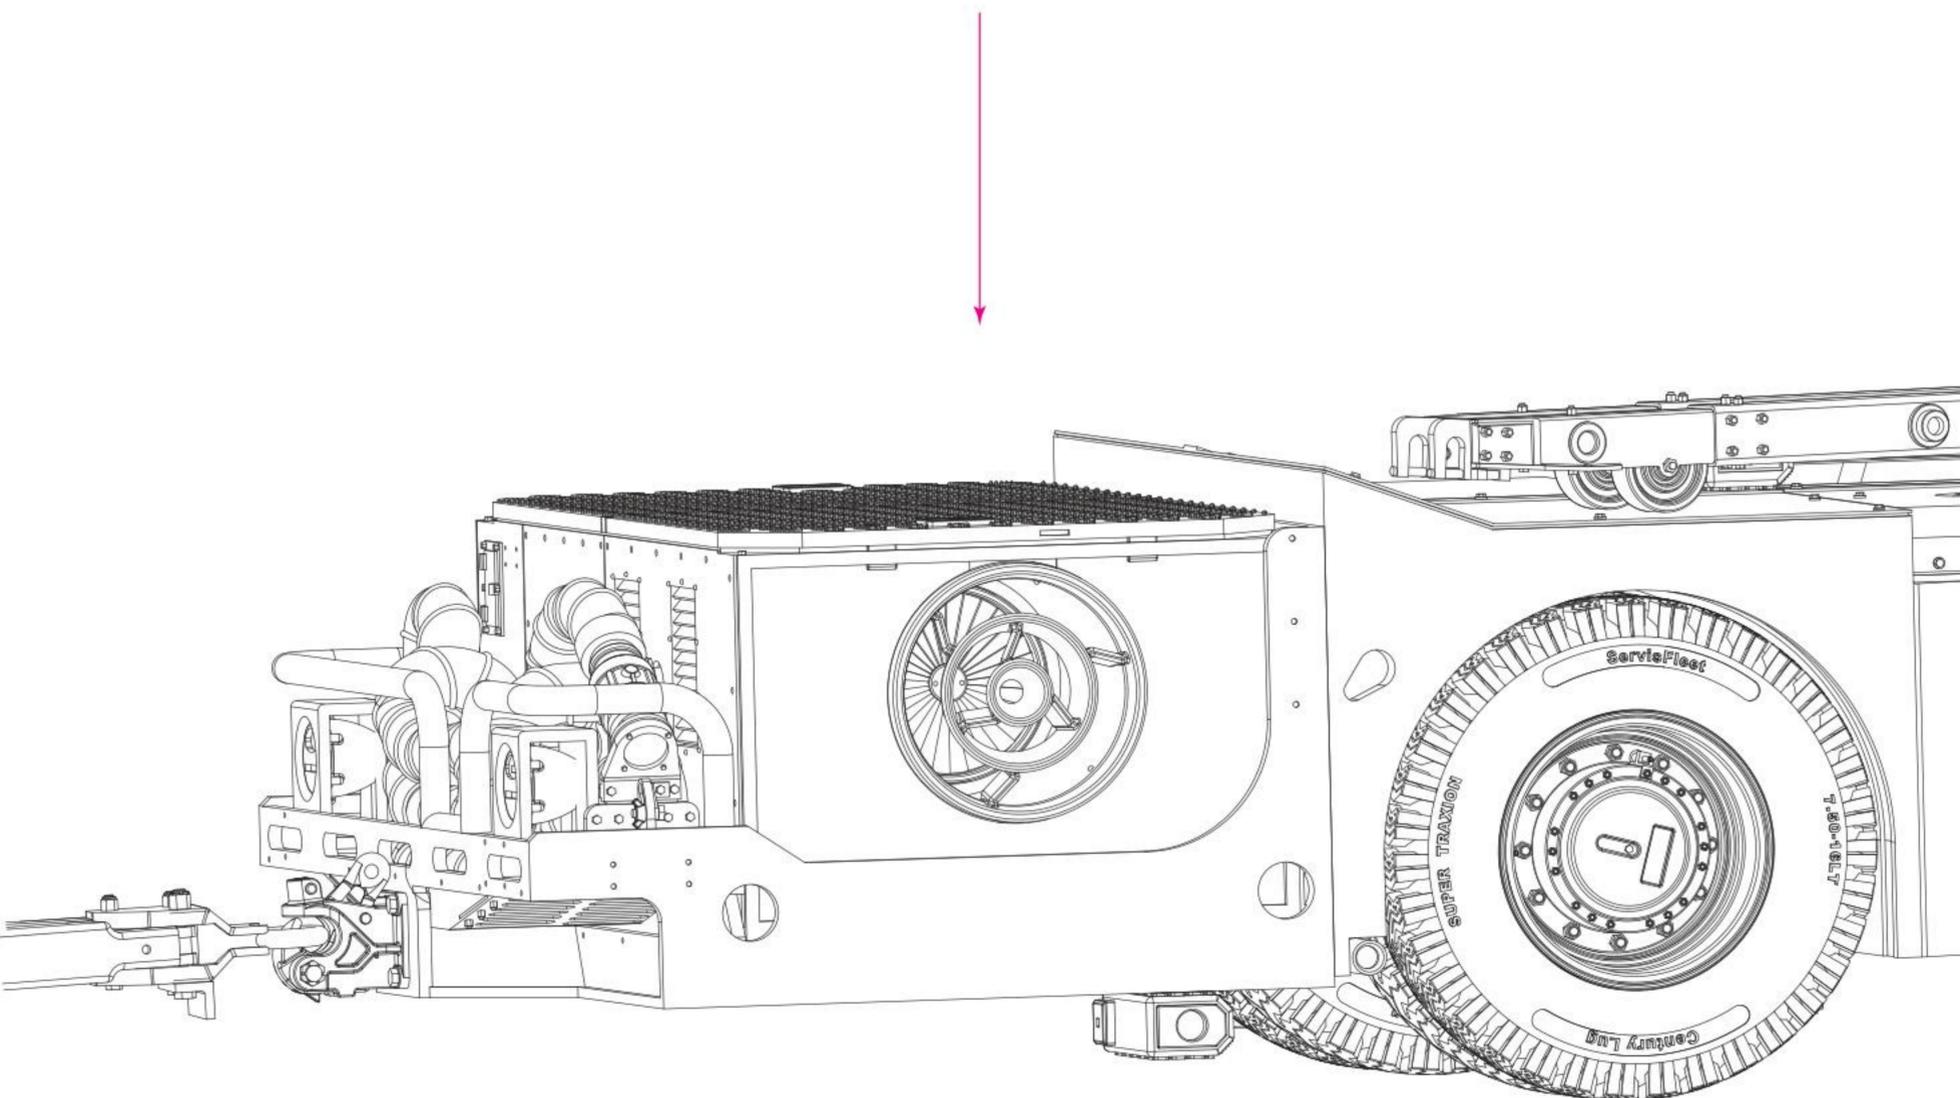

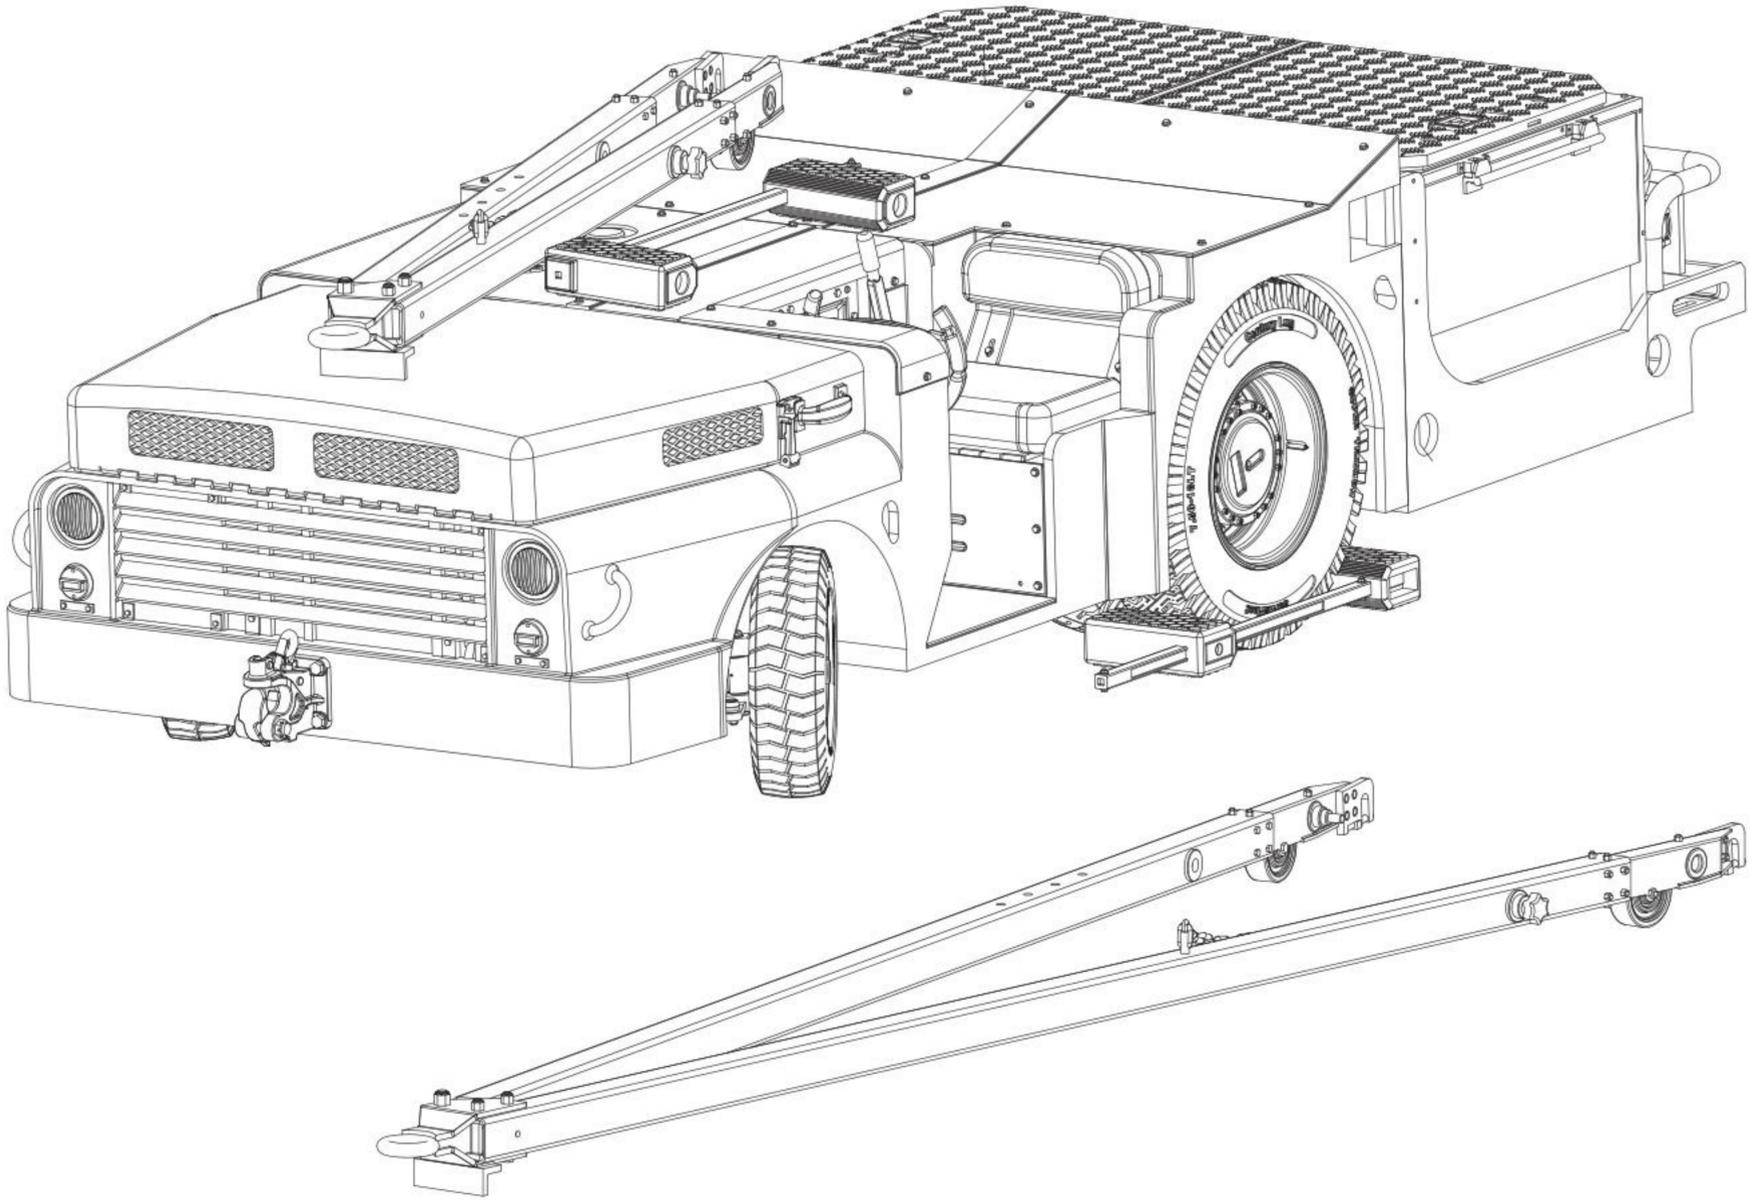

DECAL INSTRUCTION ALBAR UNIVERSAL AIRCRAFT TOWBAR

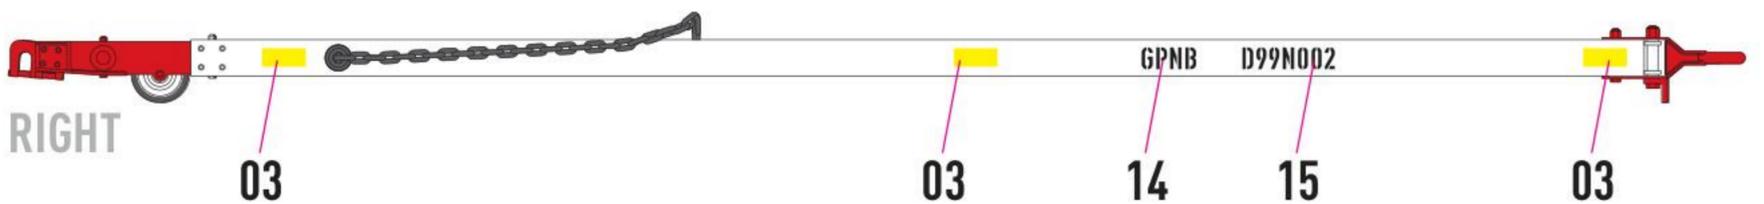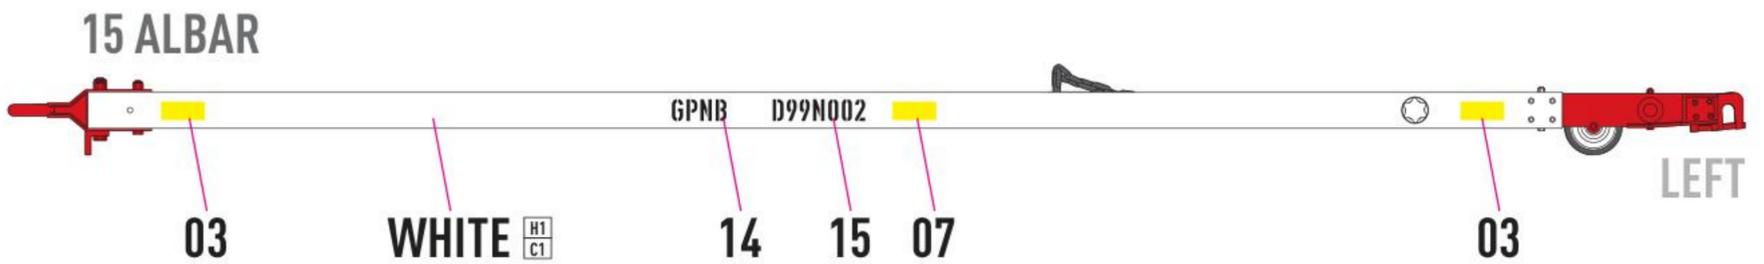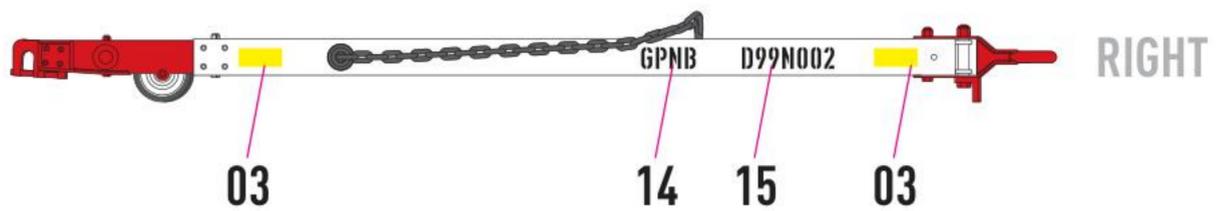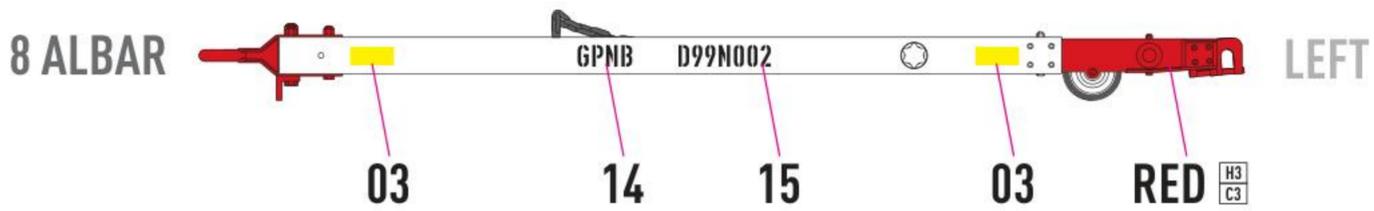

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
WHITE	H1	C1
LIGHT GHOST GRAY	H308	C308

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
RED	H3	C3

