



USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

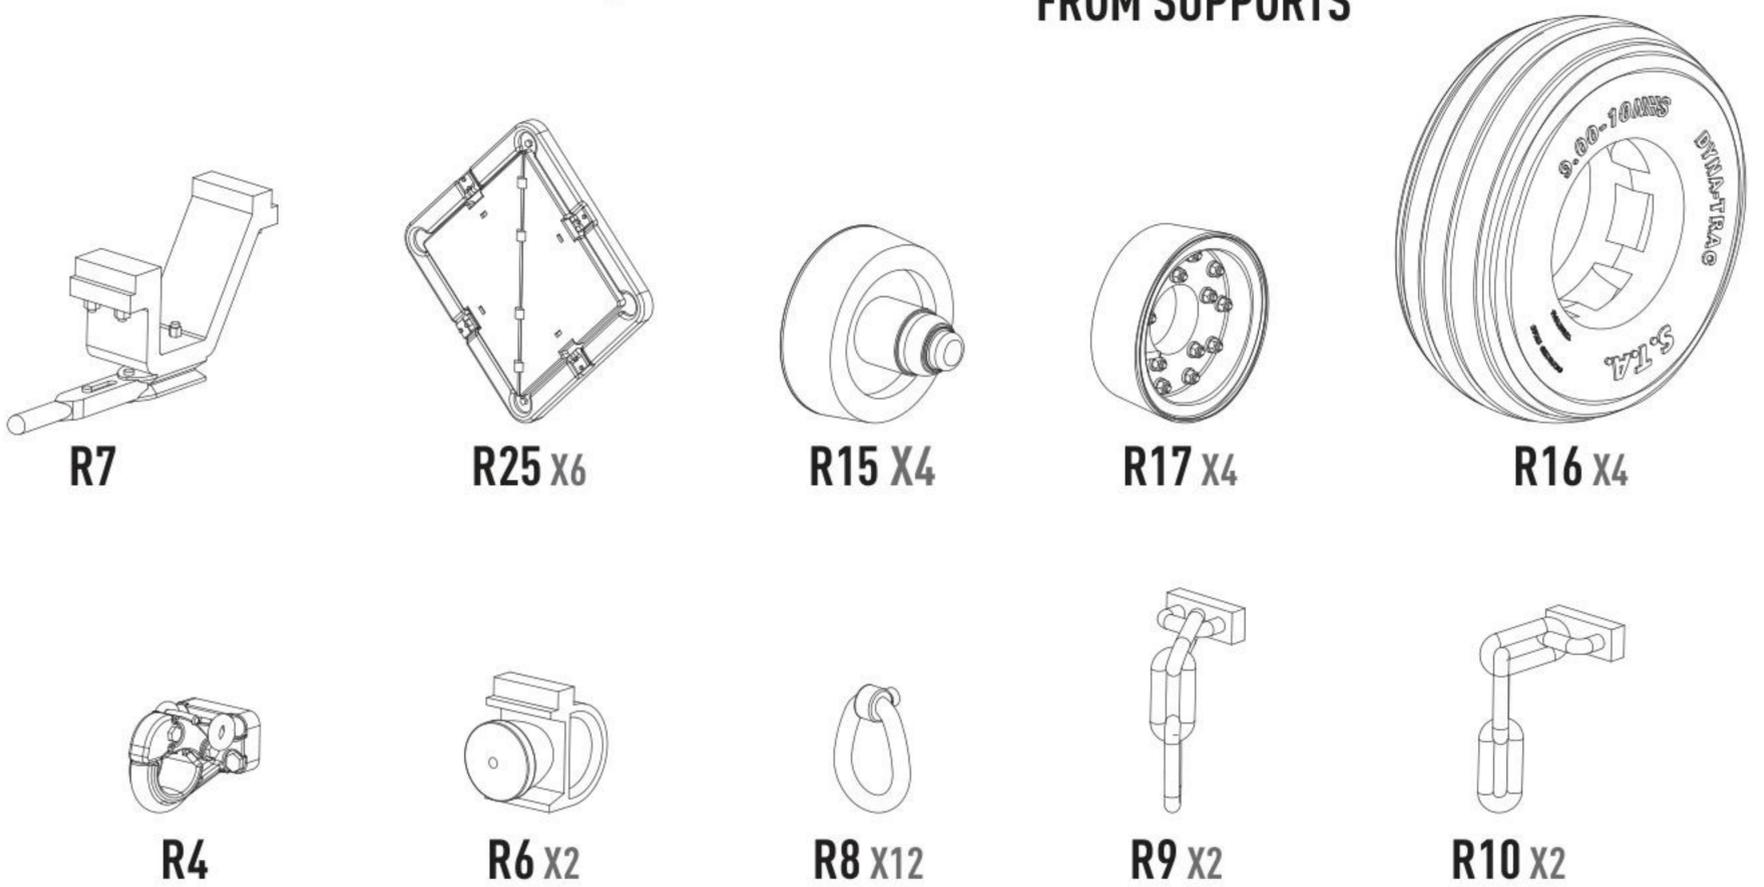


1



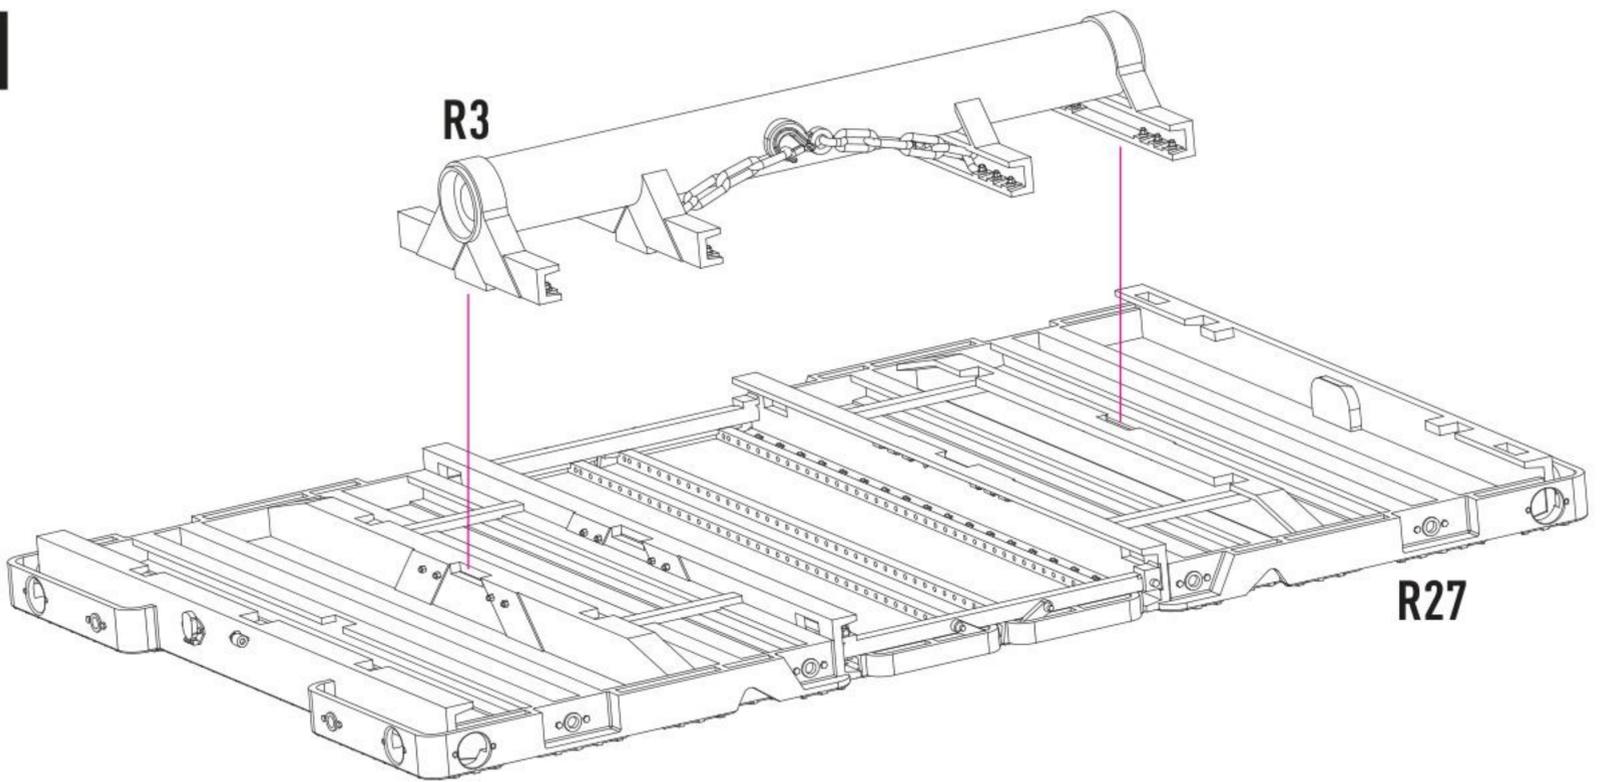


2

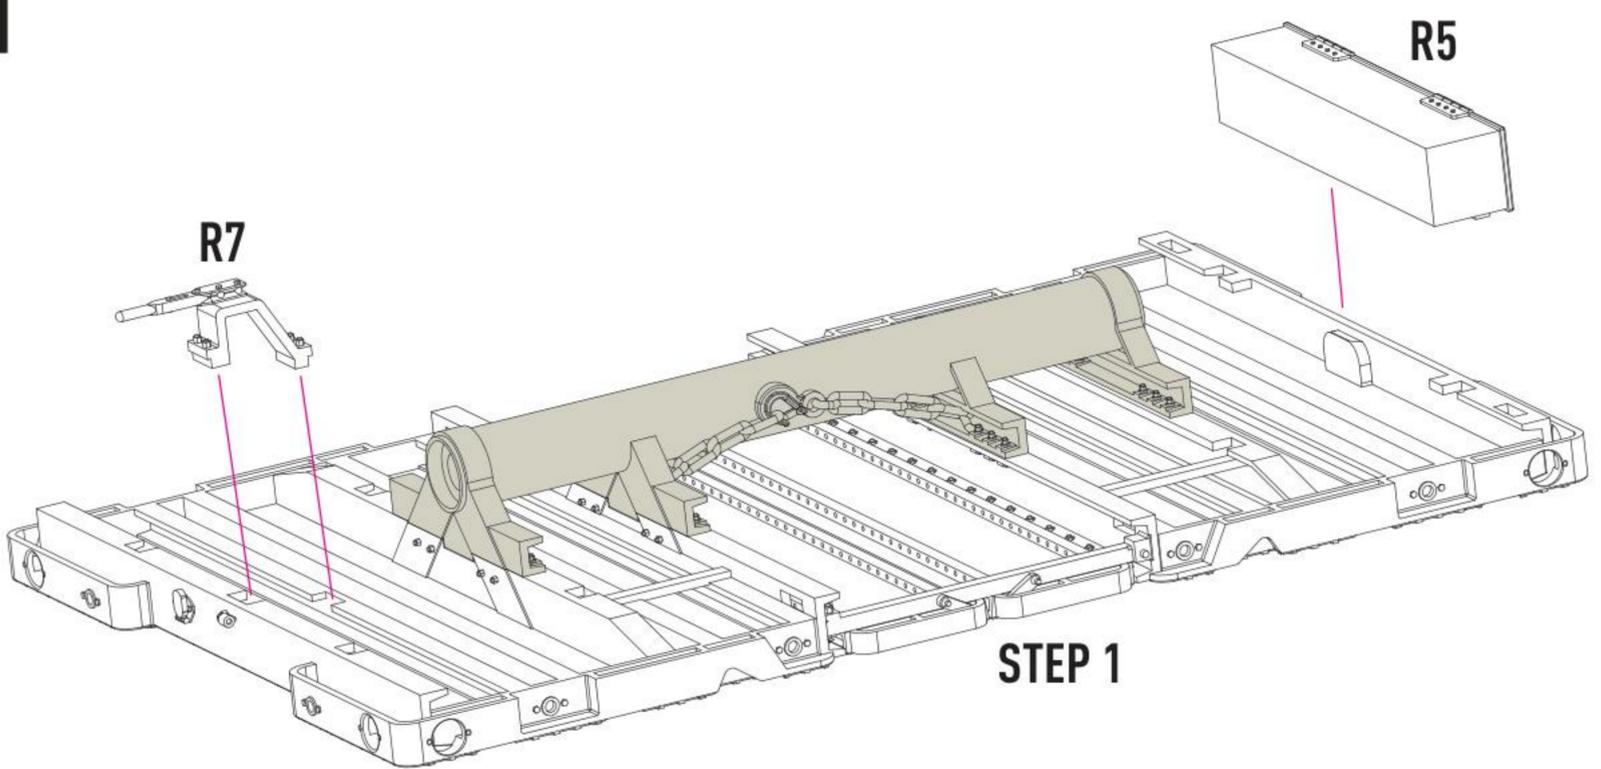


3

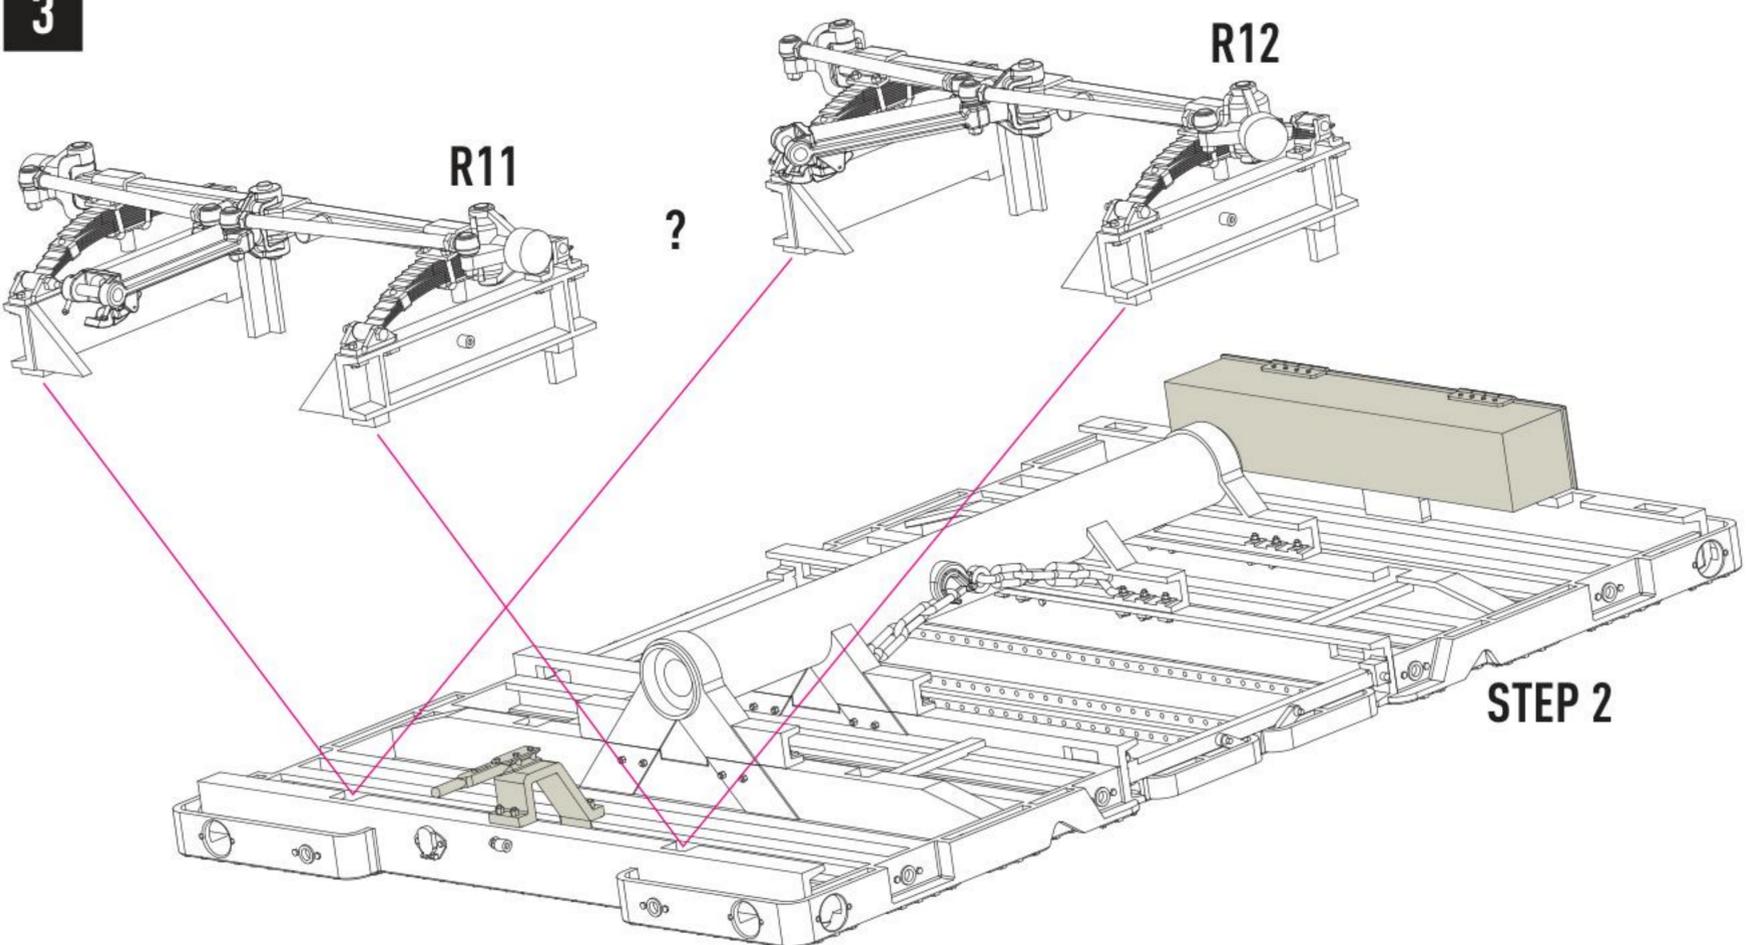


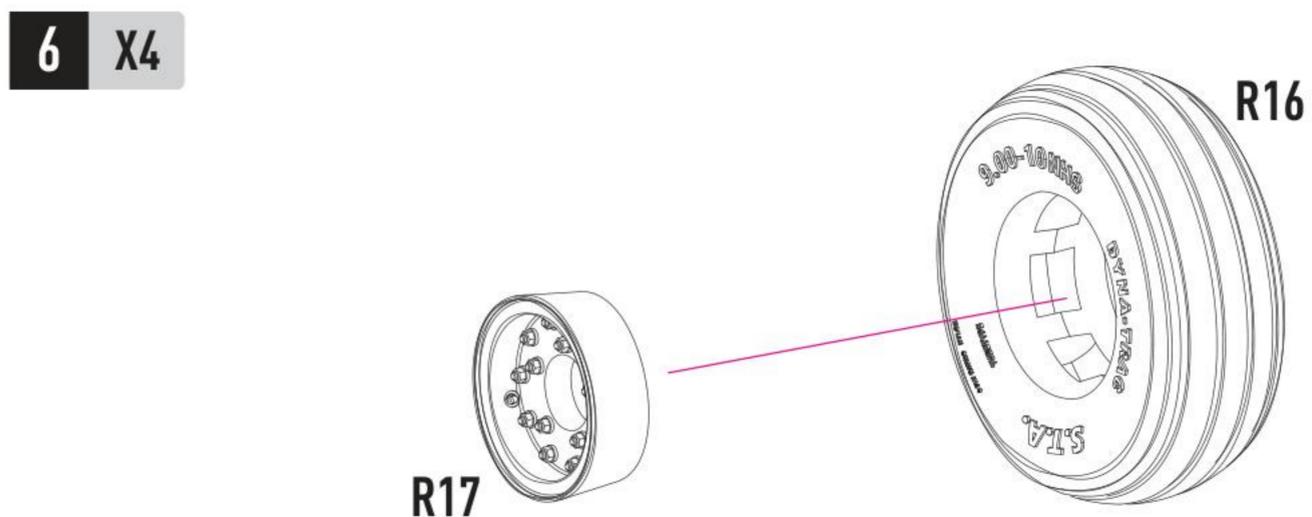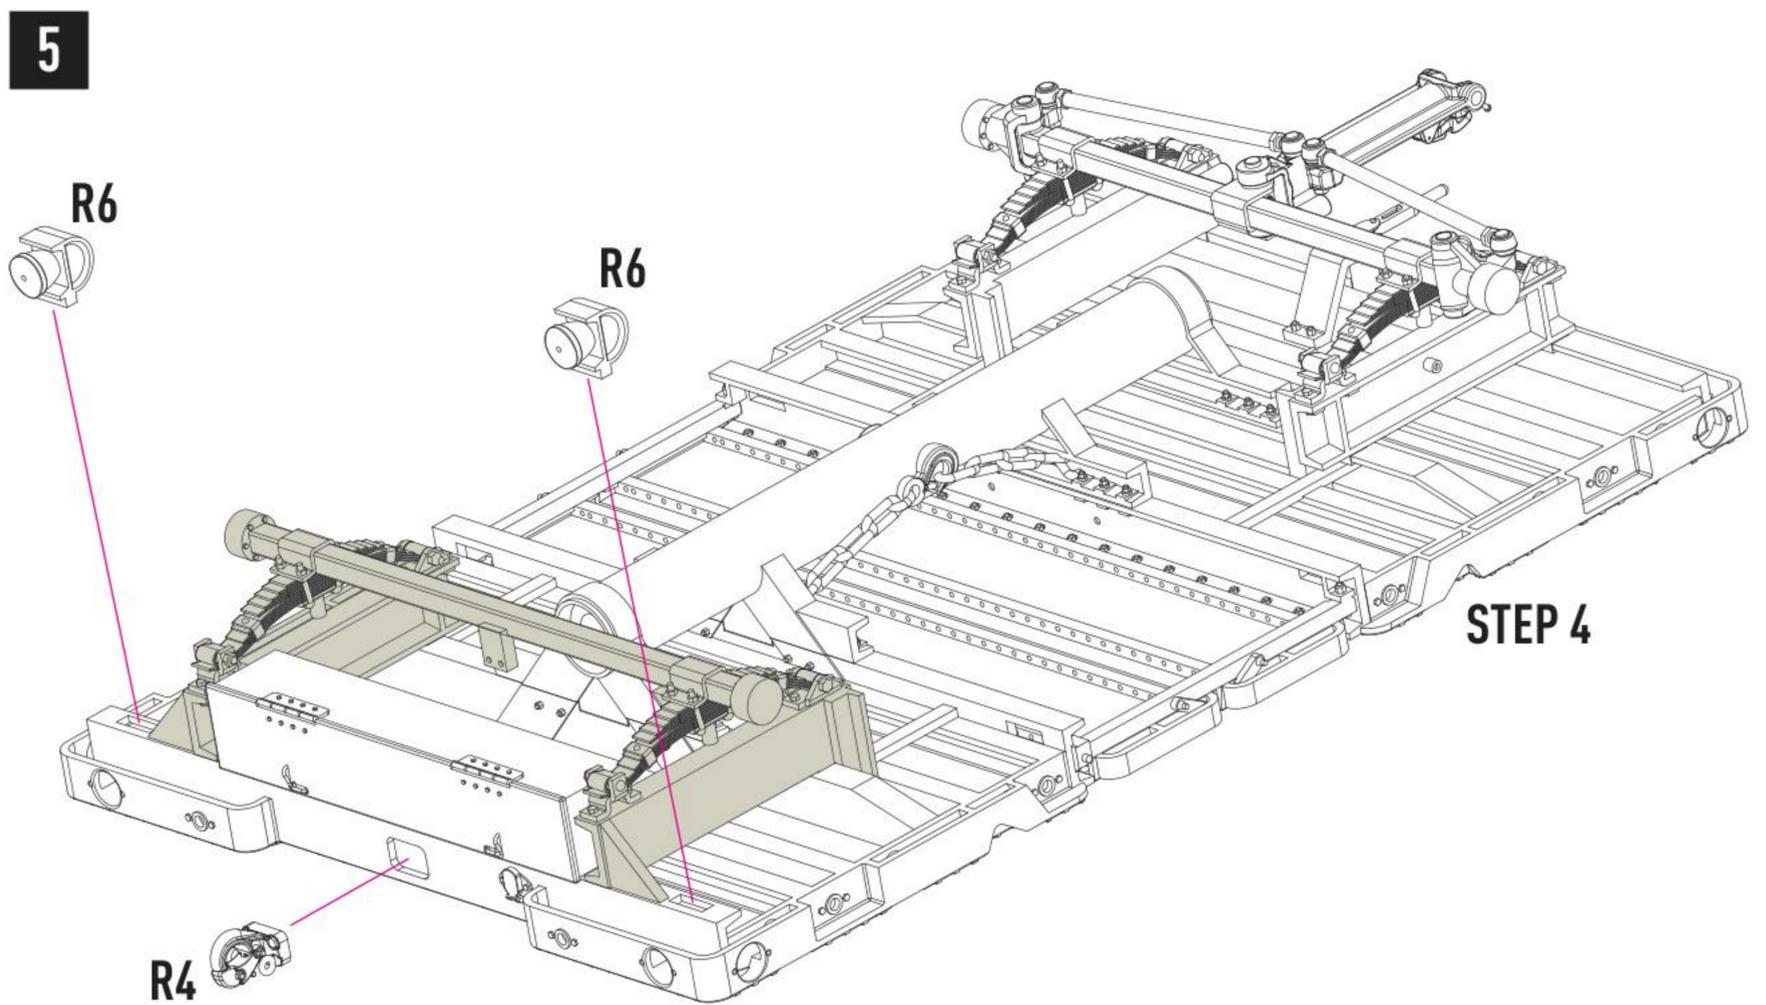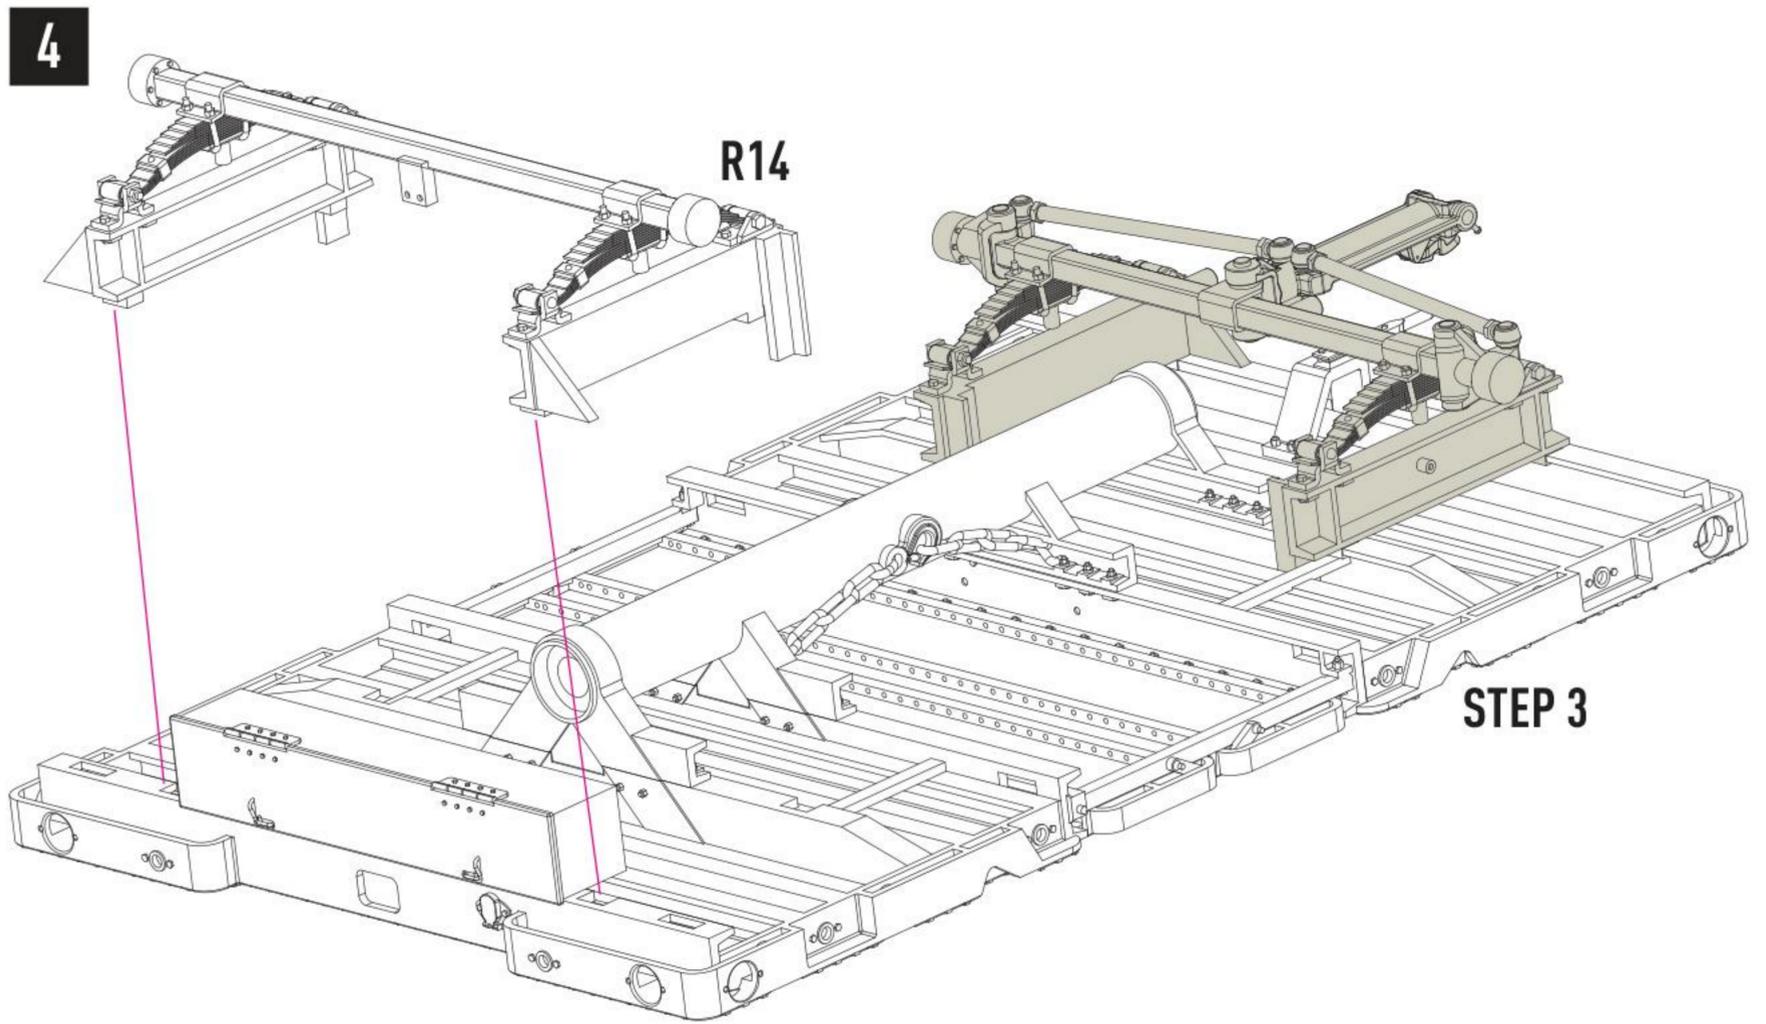

7

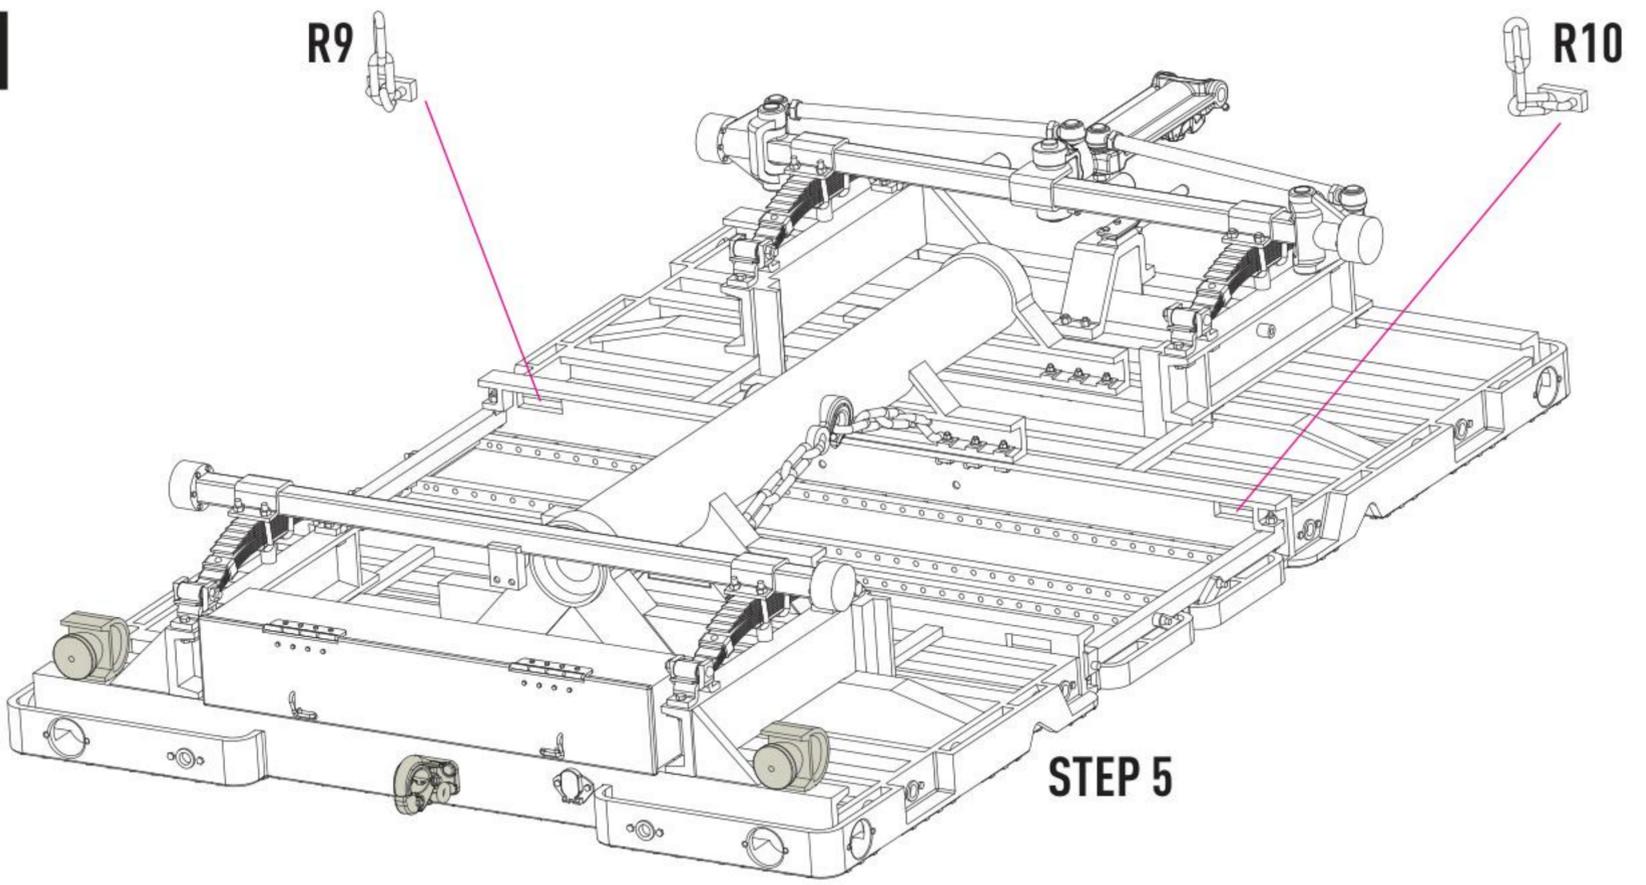


8

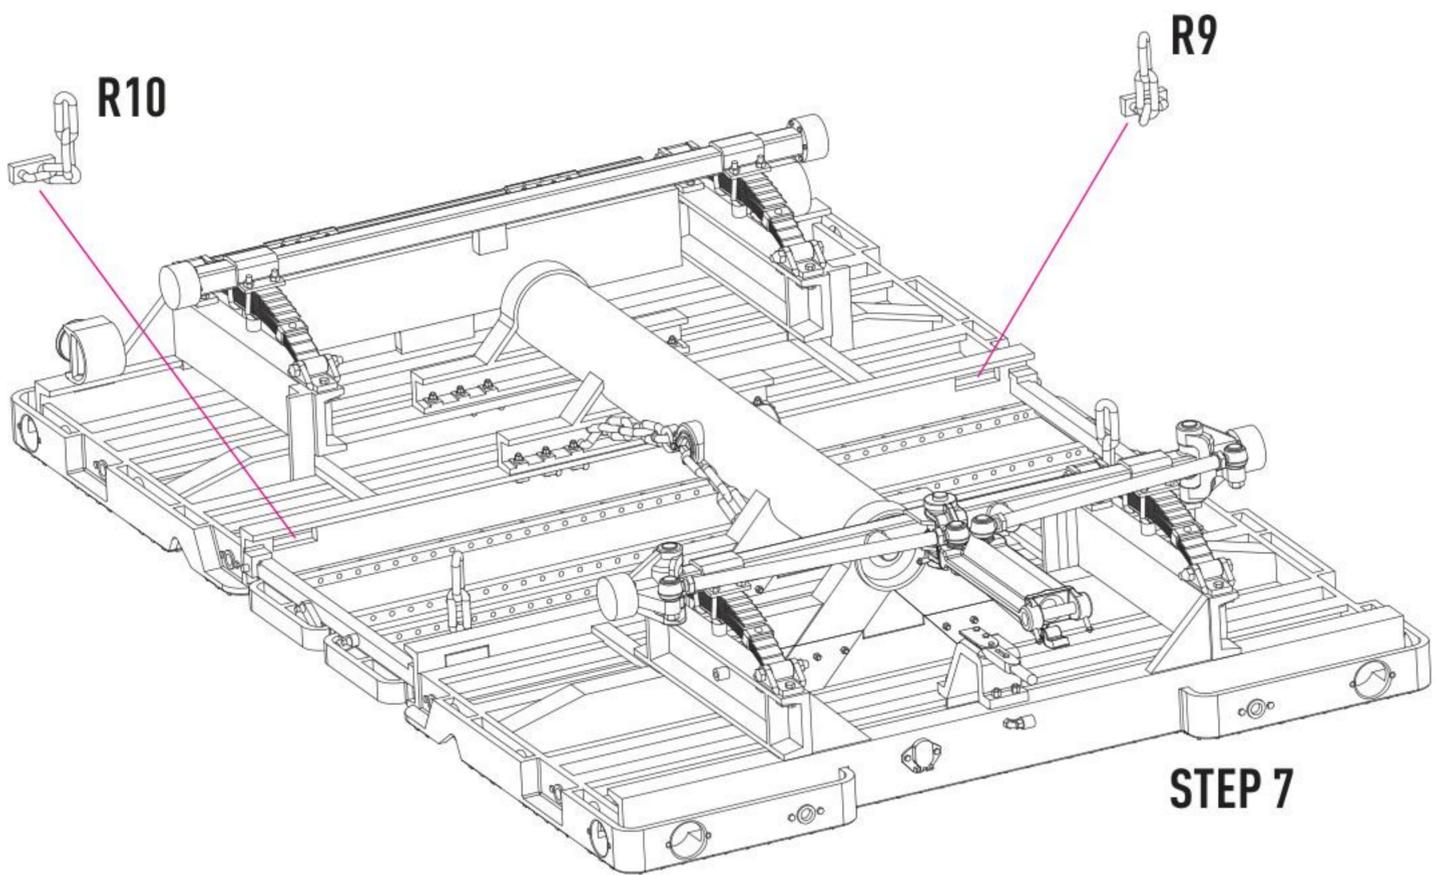


STEP 8

9

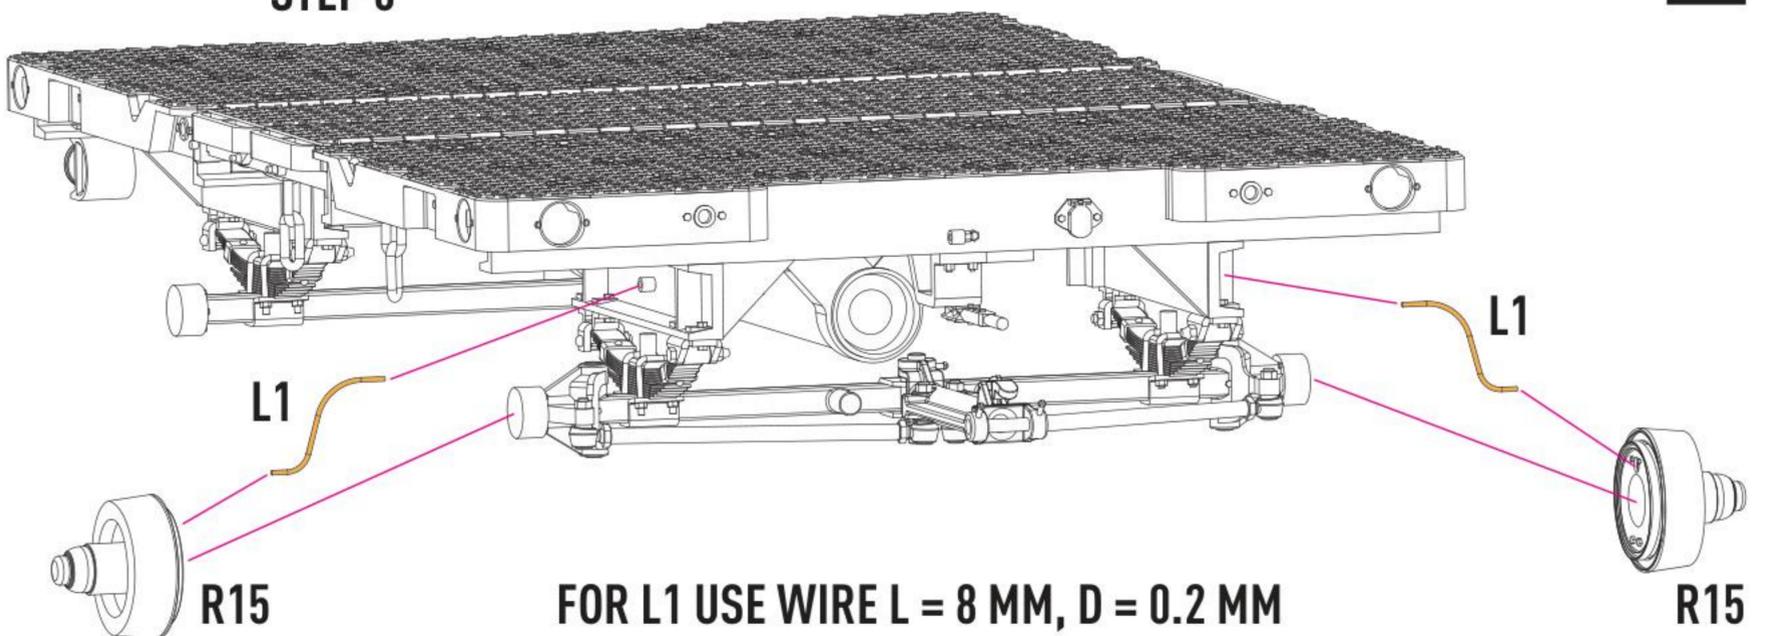


10


STEP 9

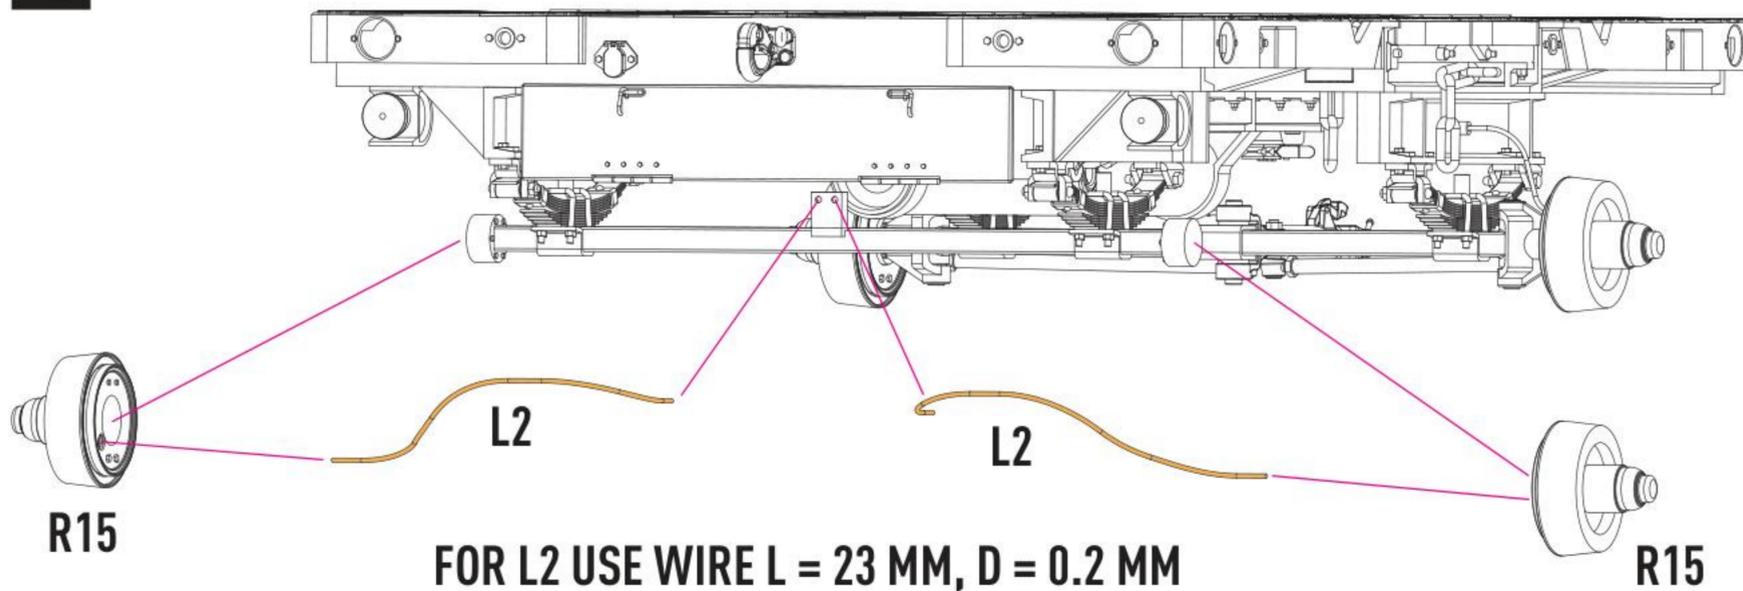


11

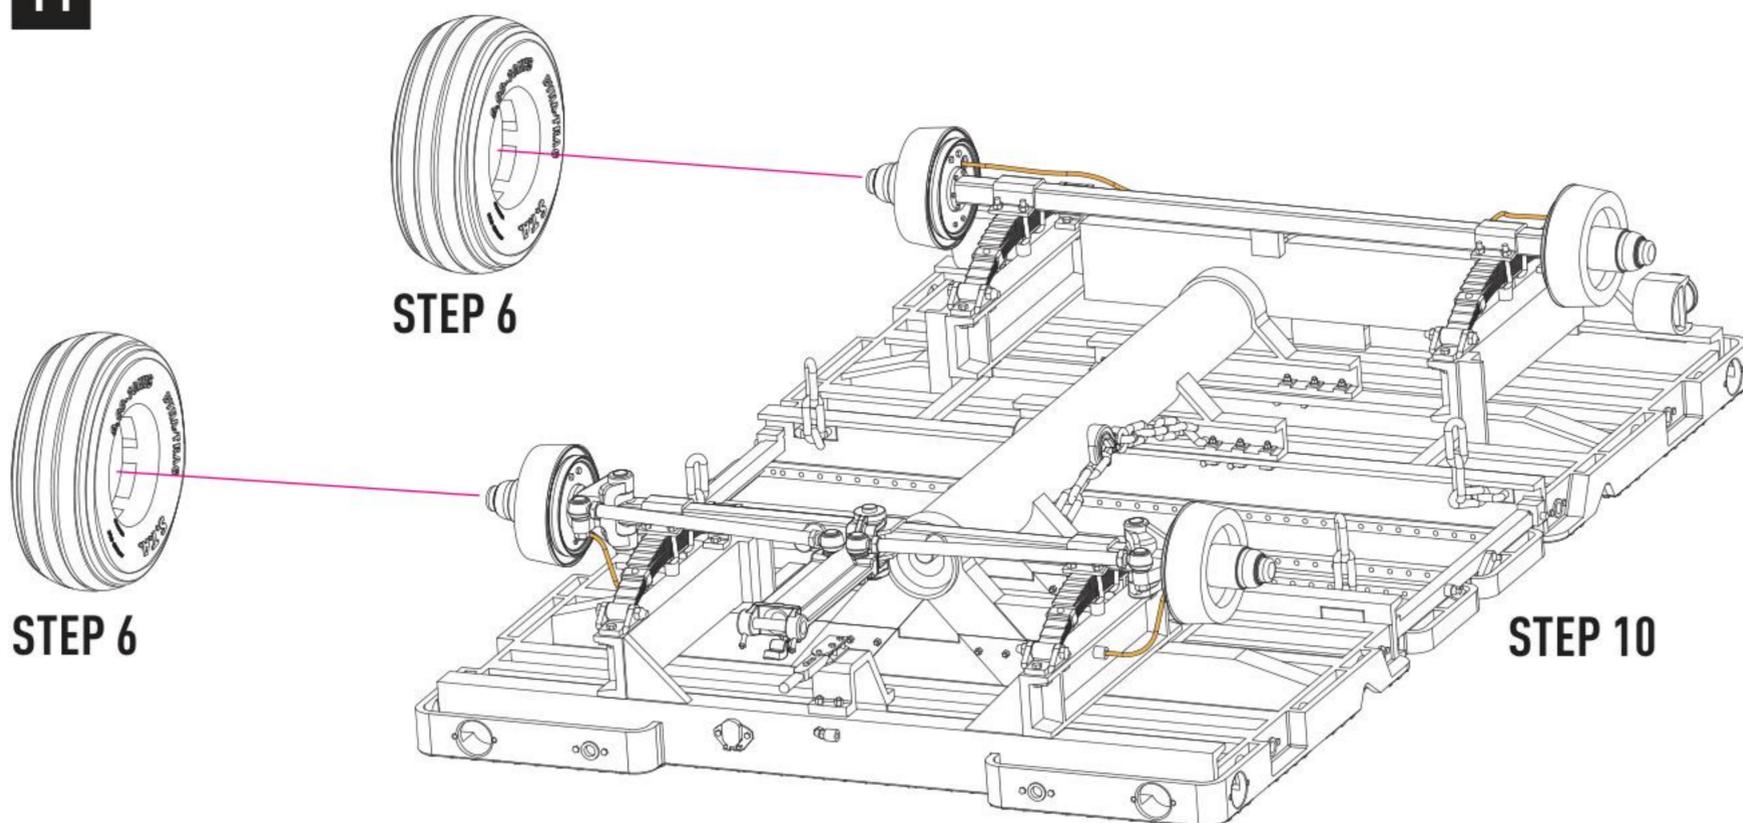

12

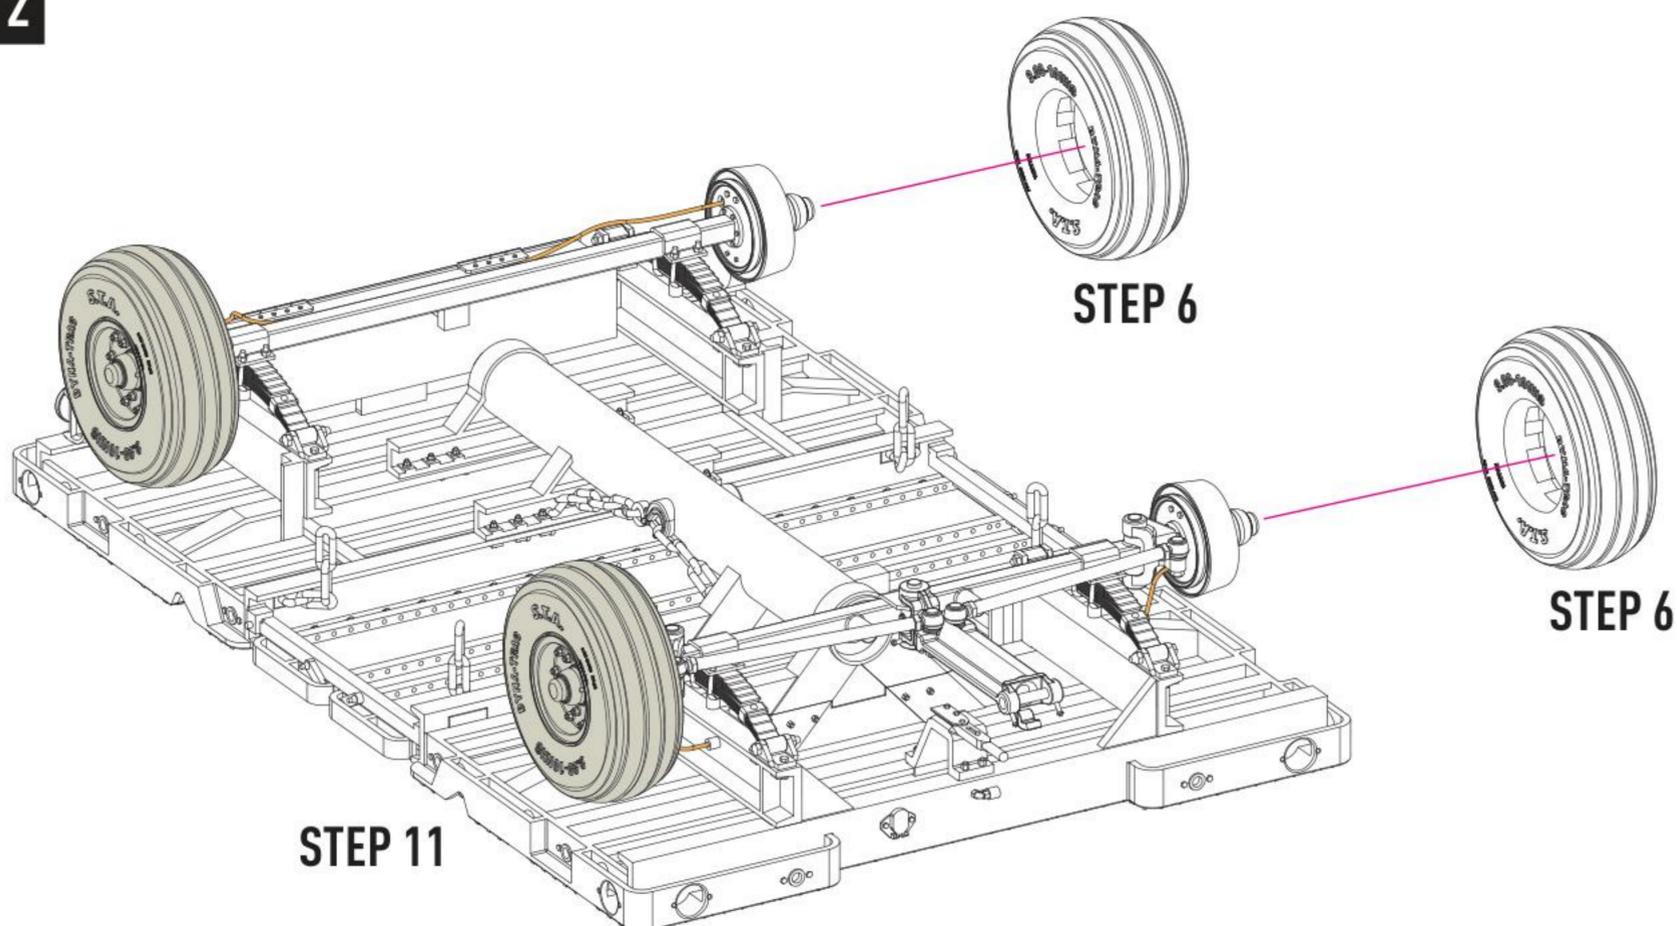


13

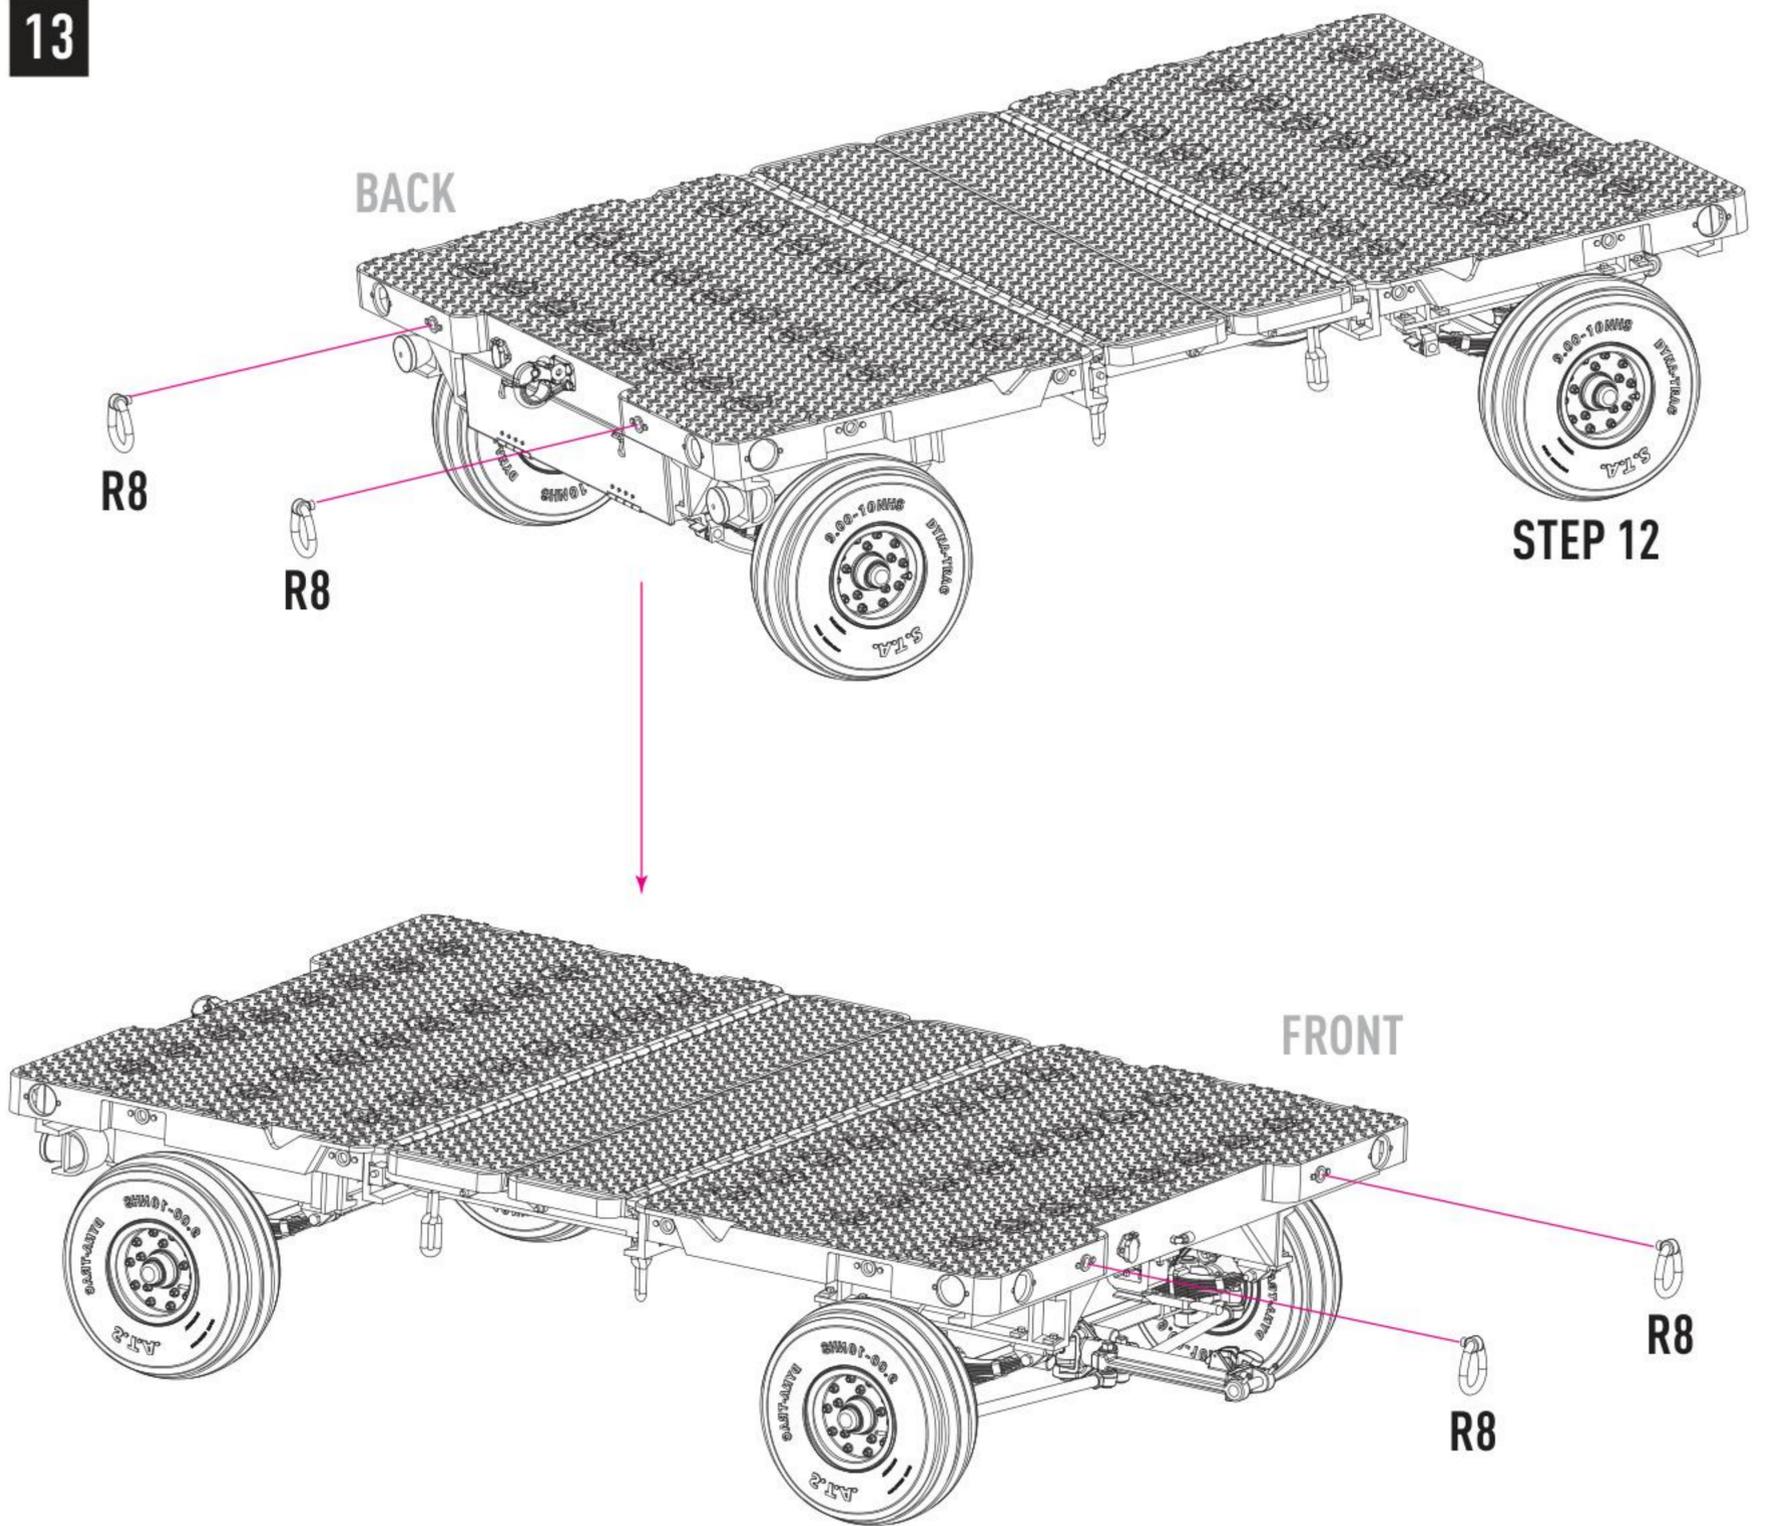


14

REPEAT THE SAME PROCESS FOR THE OTHER SIDE

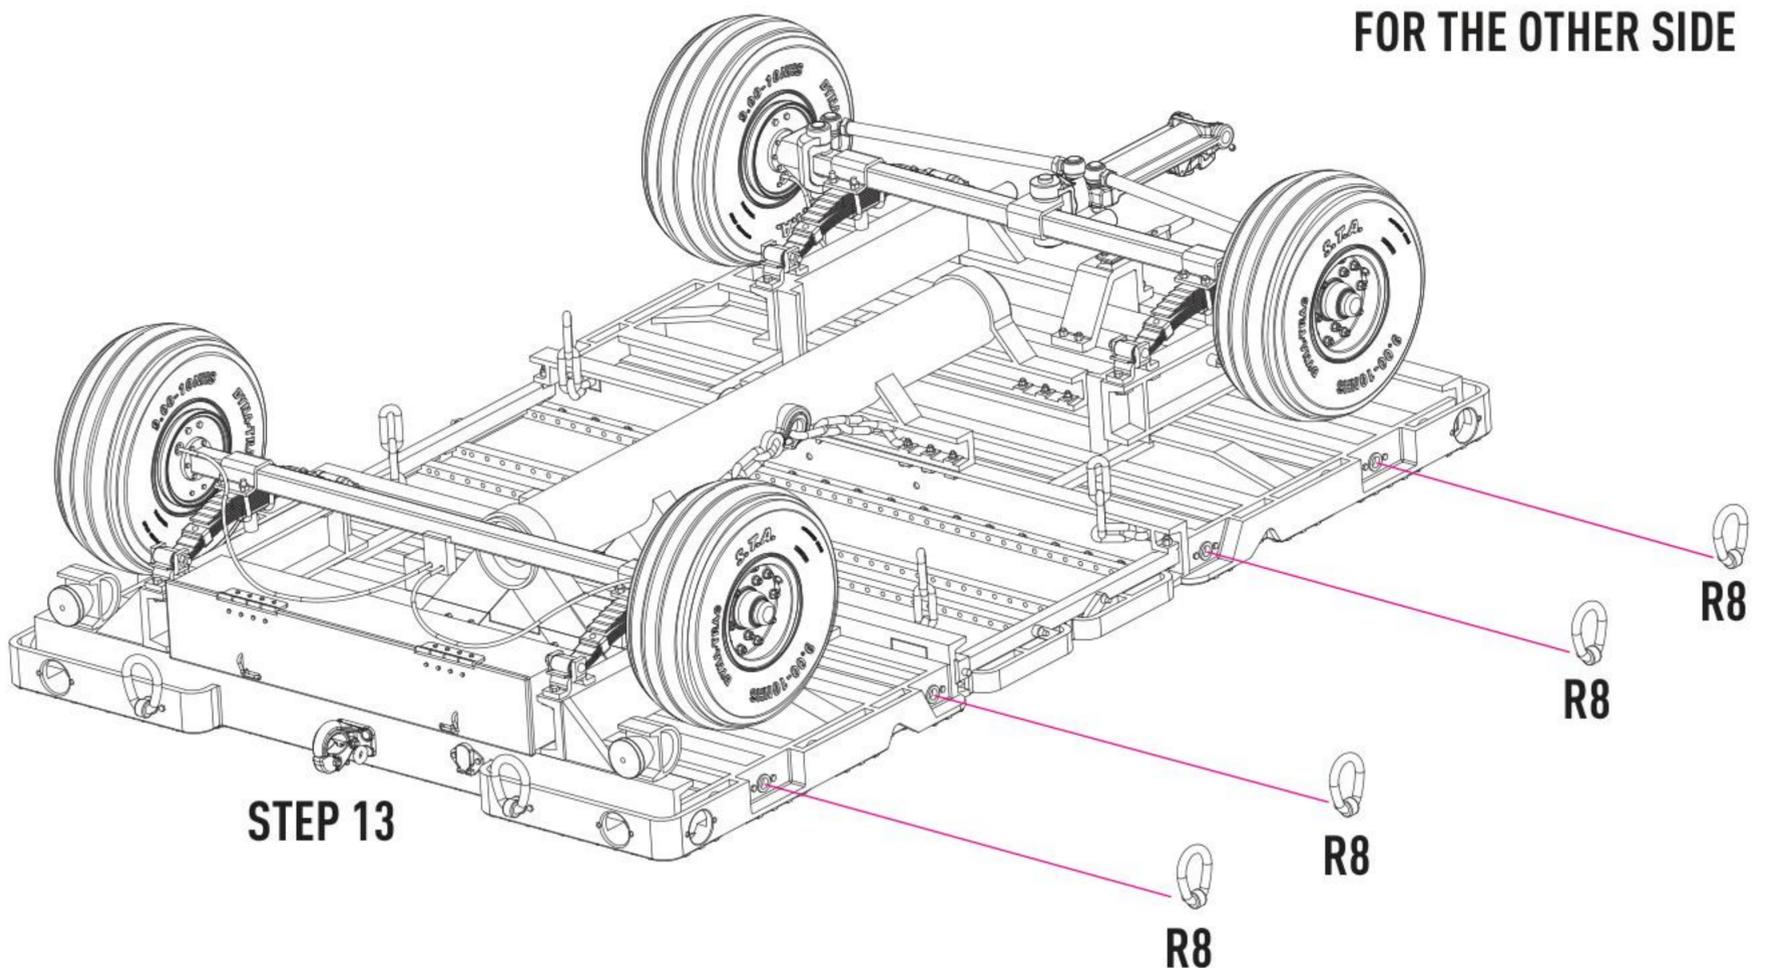

15



STEP 14

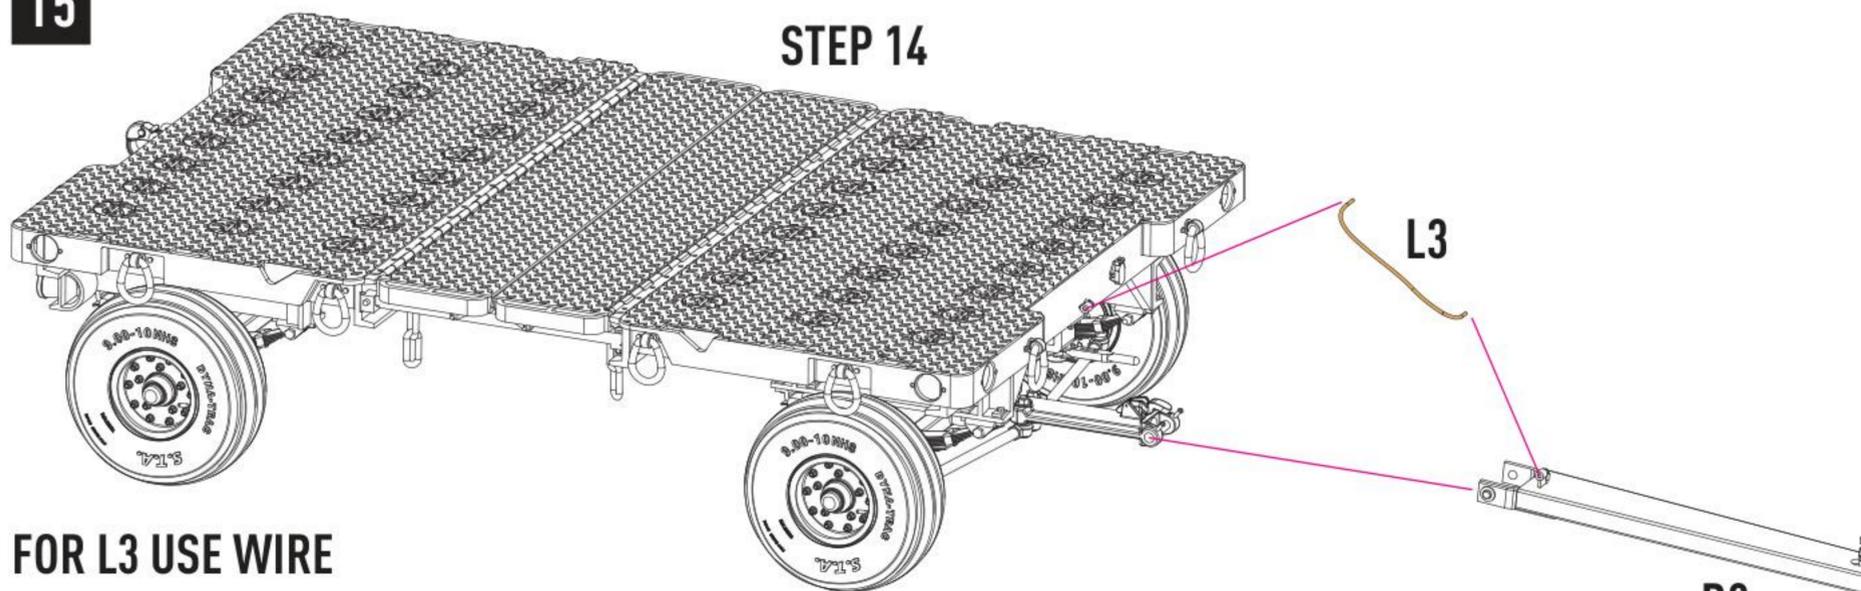


FOR L3 USE WIRE
L = 15 MM, D = 0.2 MM

16

STEP 15

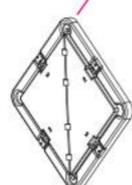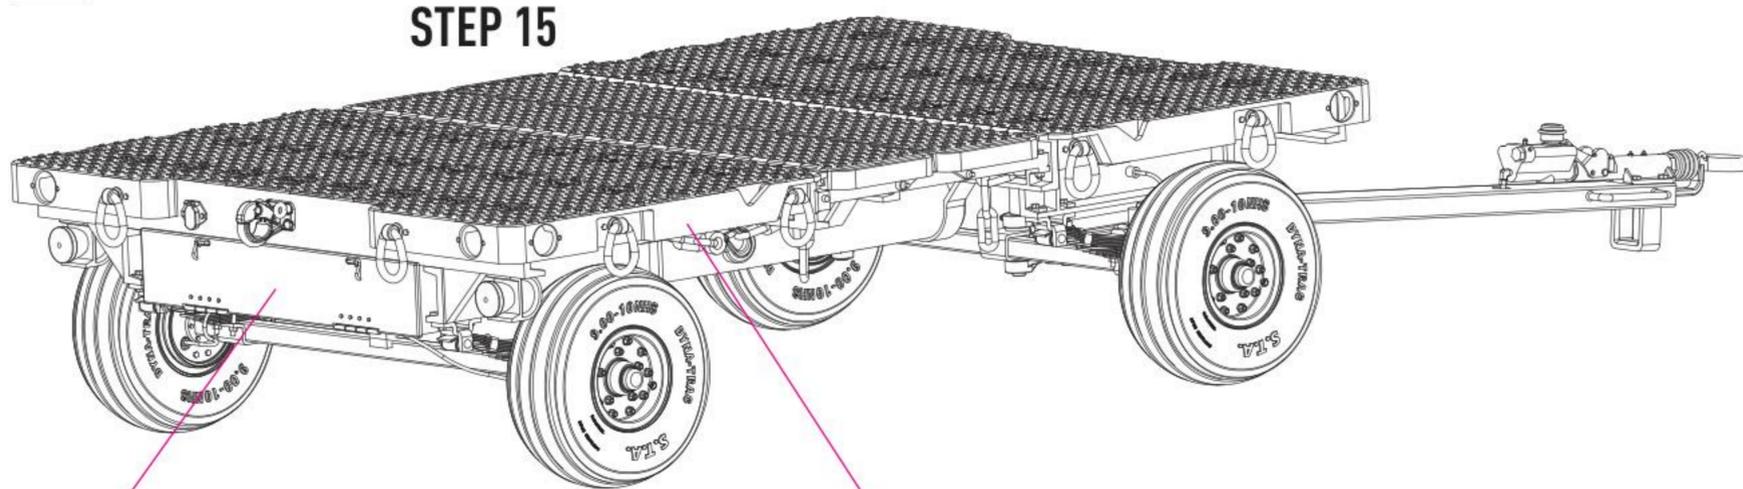

R25


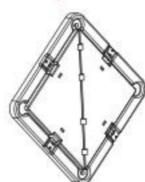


R25

WHEN INSTALLING PARTS,
REFER TO THE PROTOTYPE PHOTO

17

STEP 16

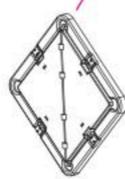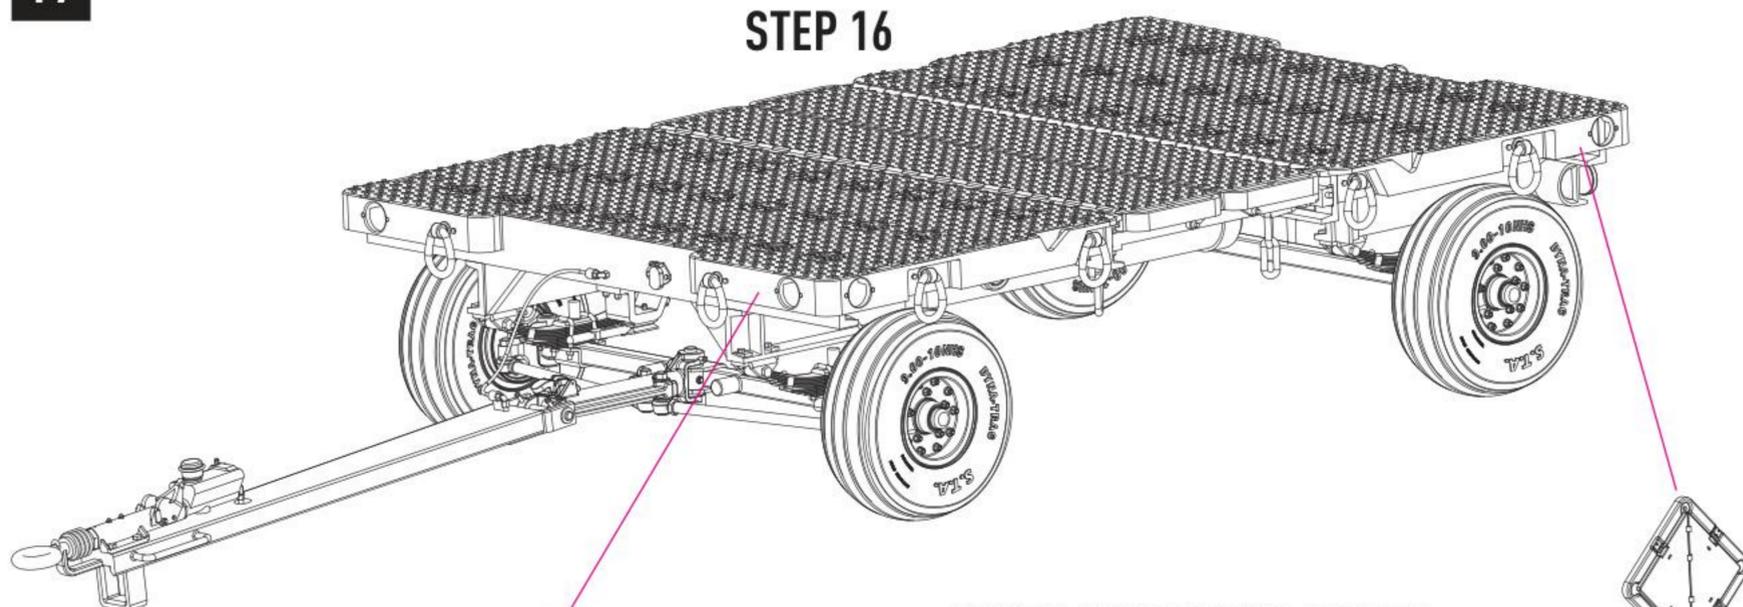




R25



R25

WHEN INSTALLING PARTS,
REFER TO THE PROTOTYPE PHOTO

DECAL INSTRUCTION

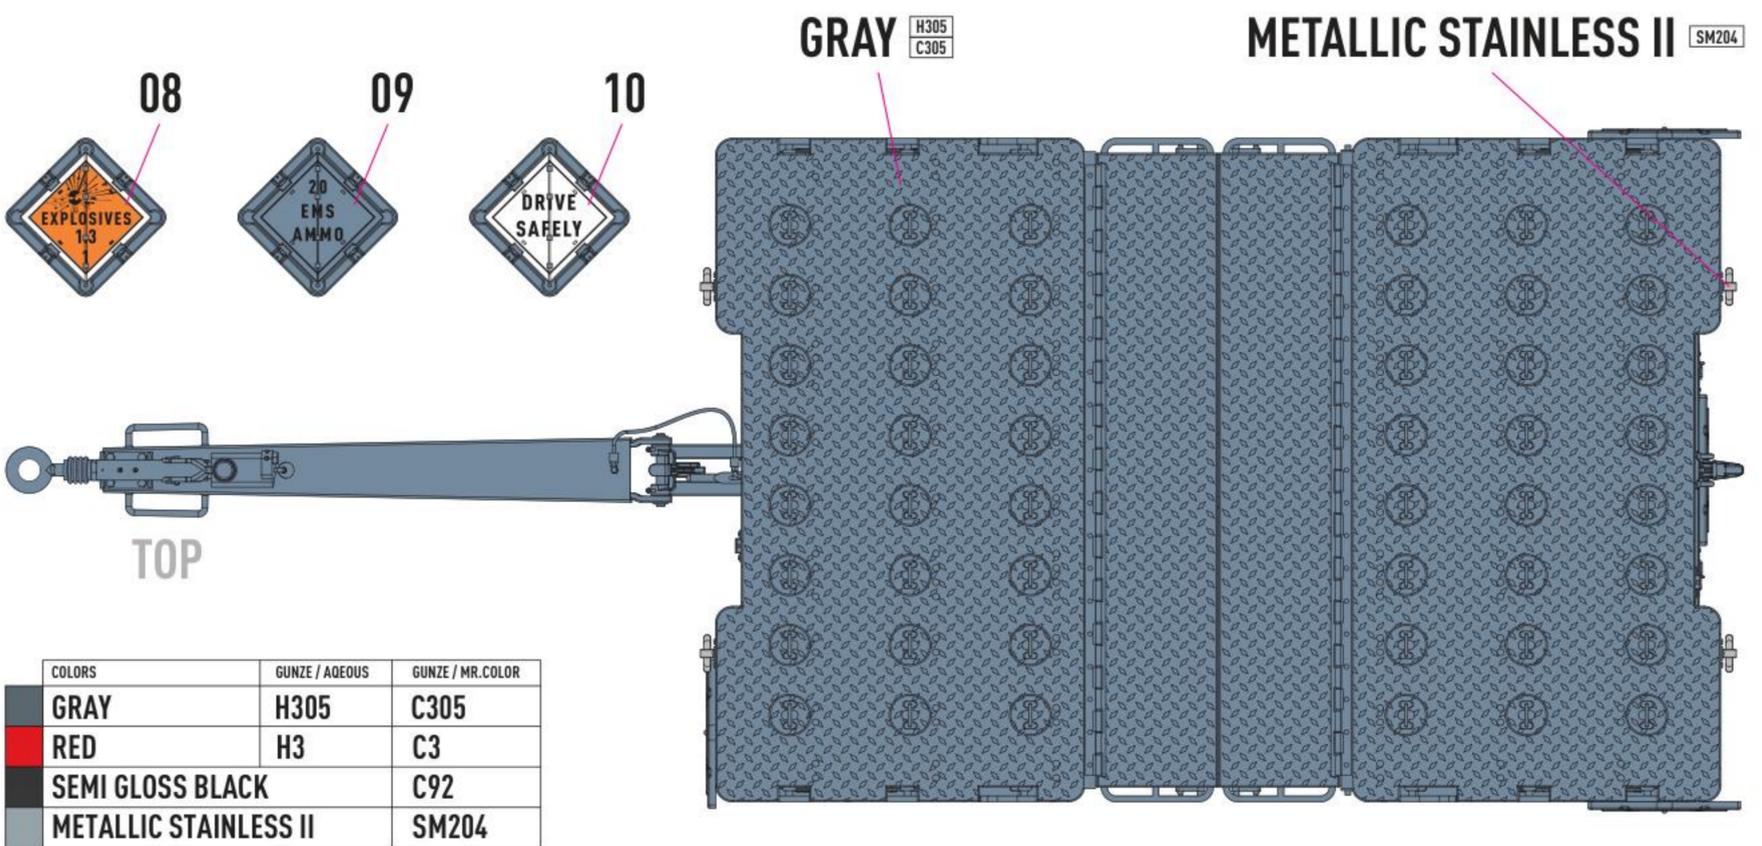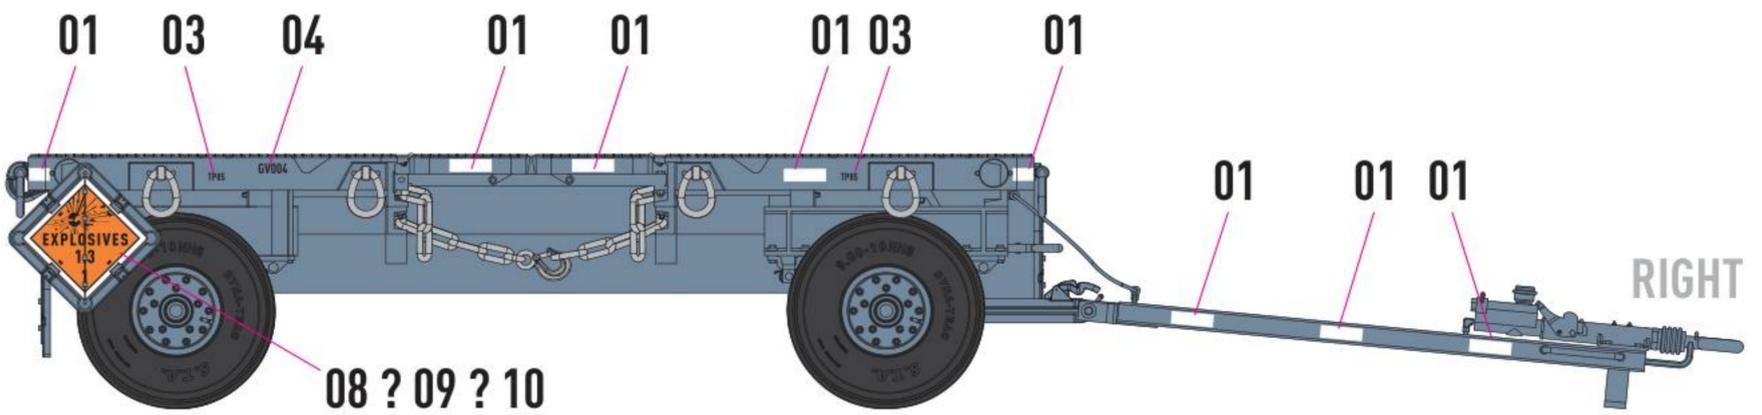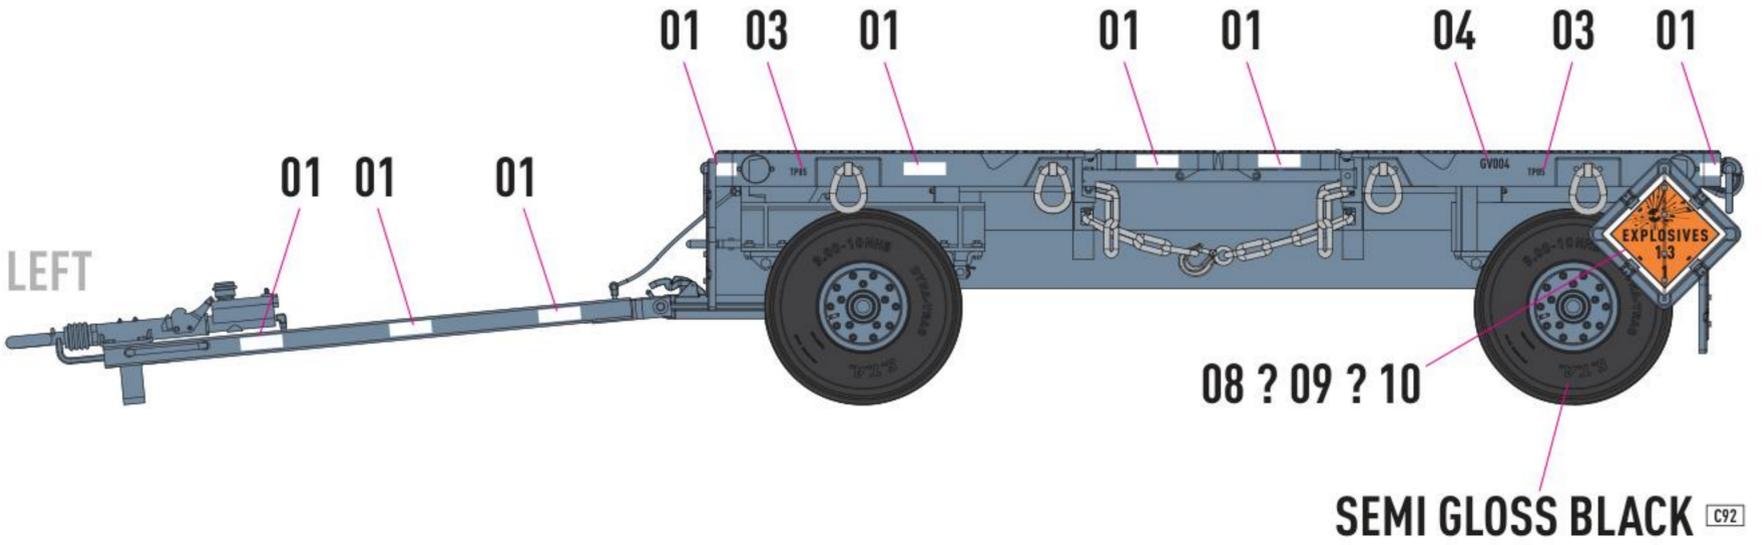

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H305	C305
RED	H3	C3
SEMI GLOSS BLACK		C92
METALLIC STAINLESS II		SM204

