

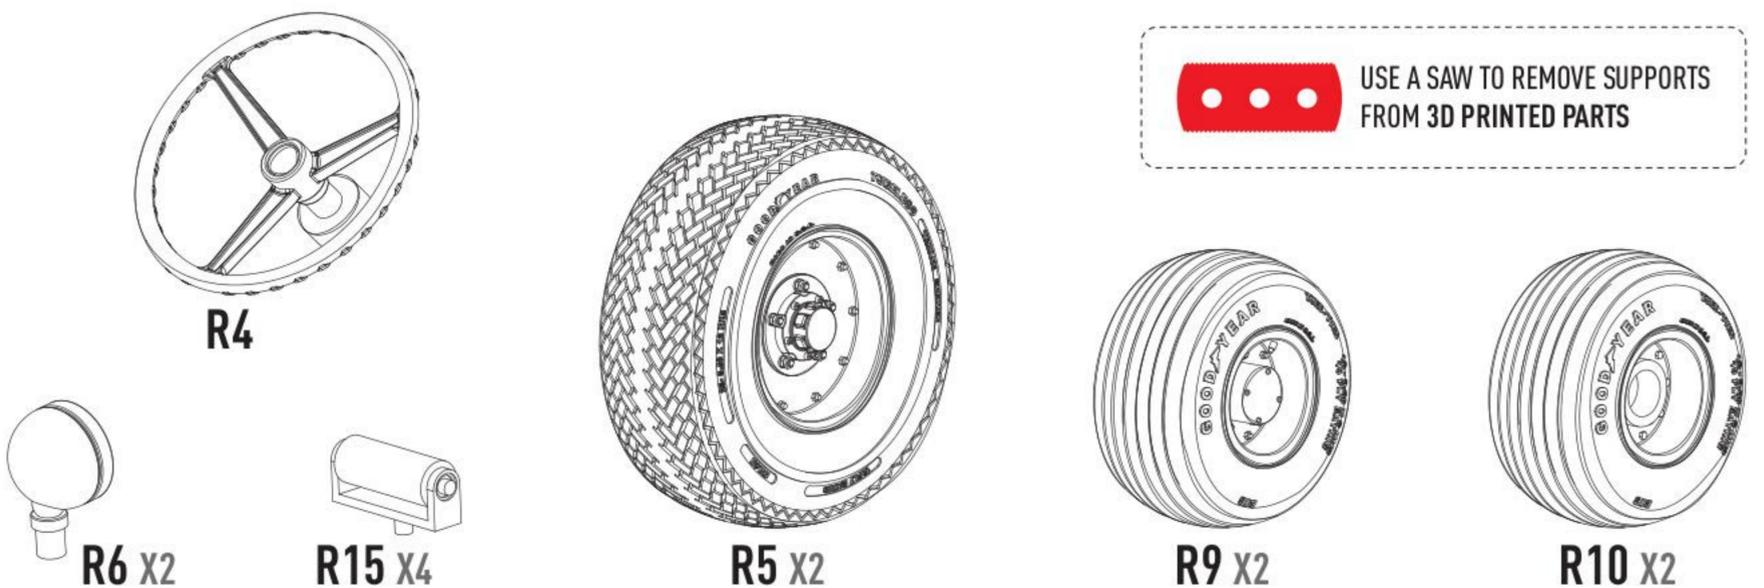
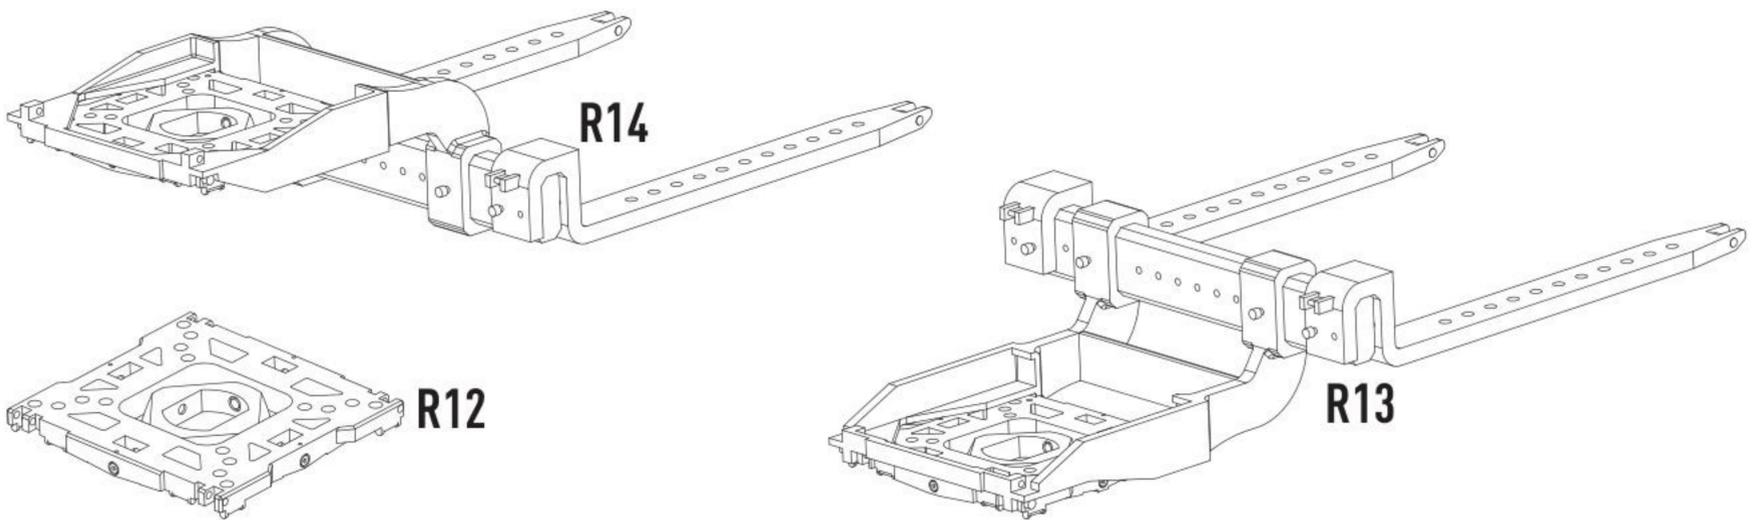


**DETAILS AFTER REMOVAL FROM SUPPORTS**

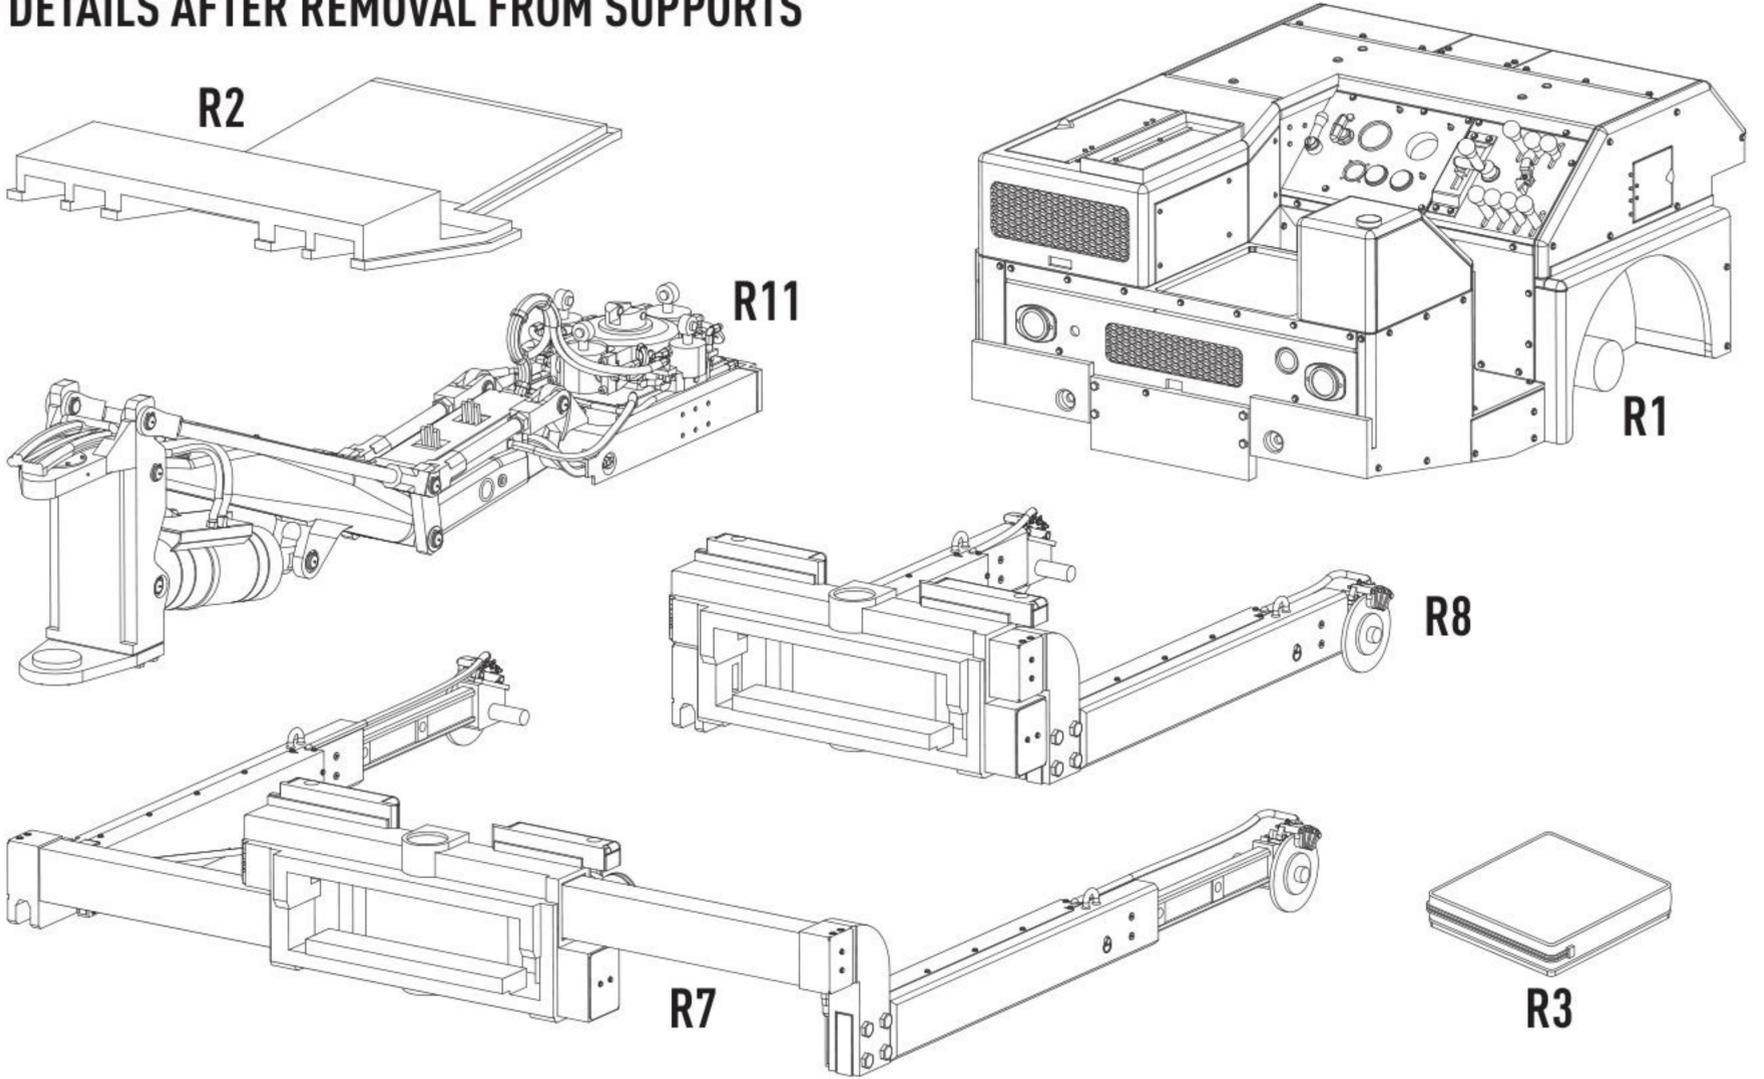


**USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS**

1

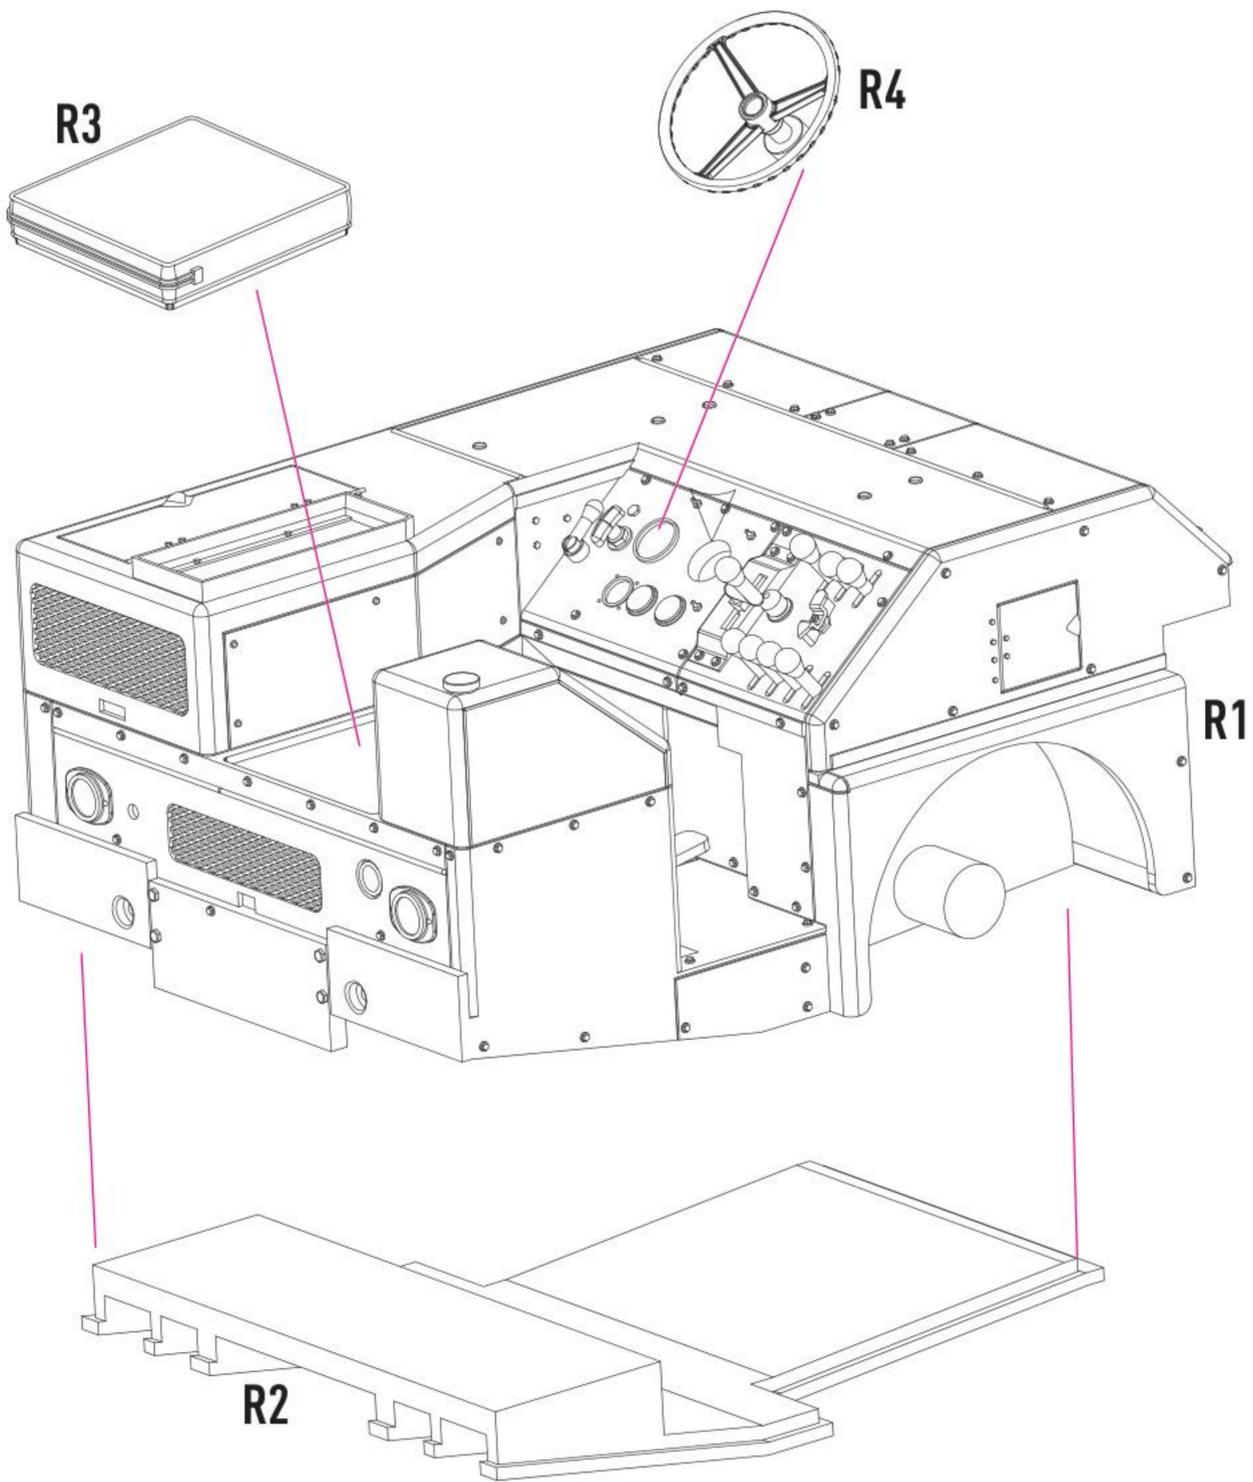


2

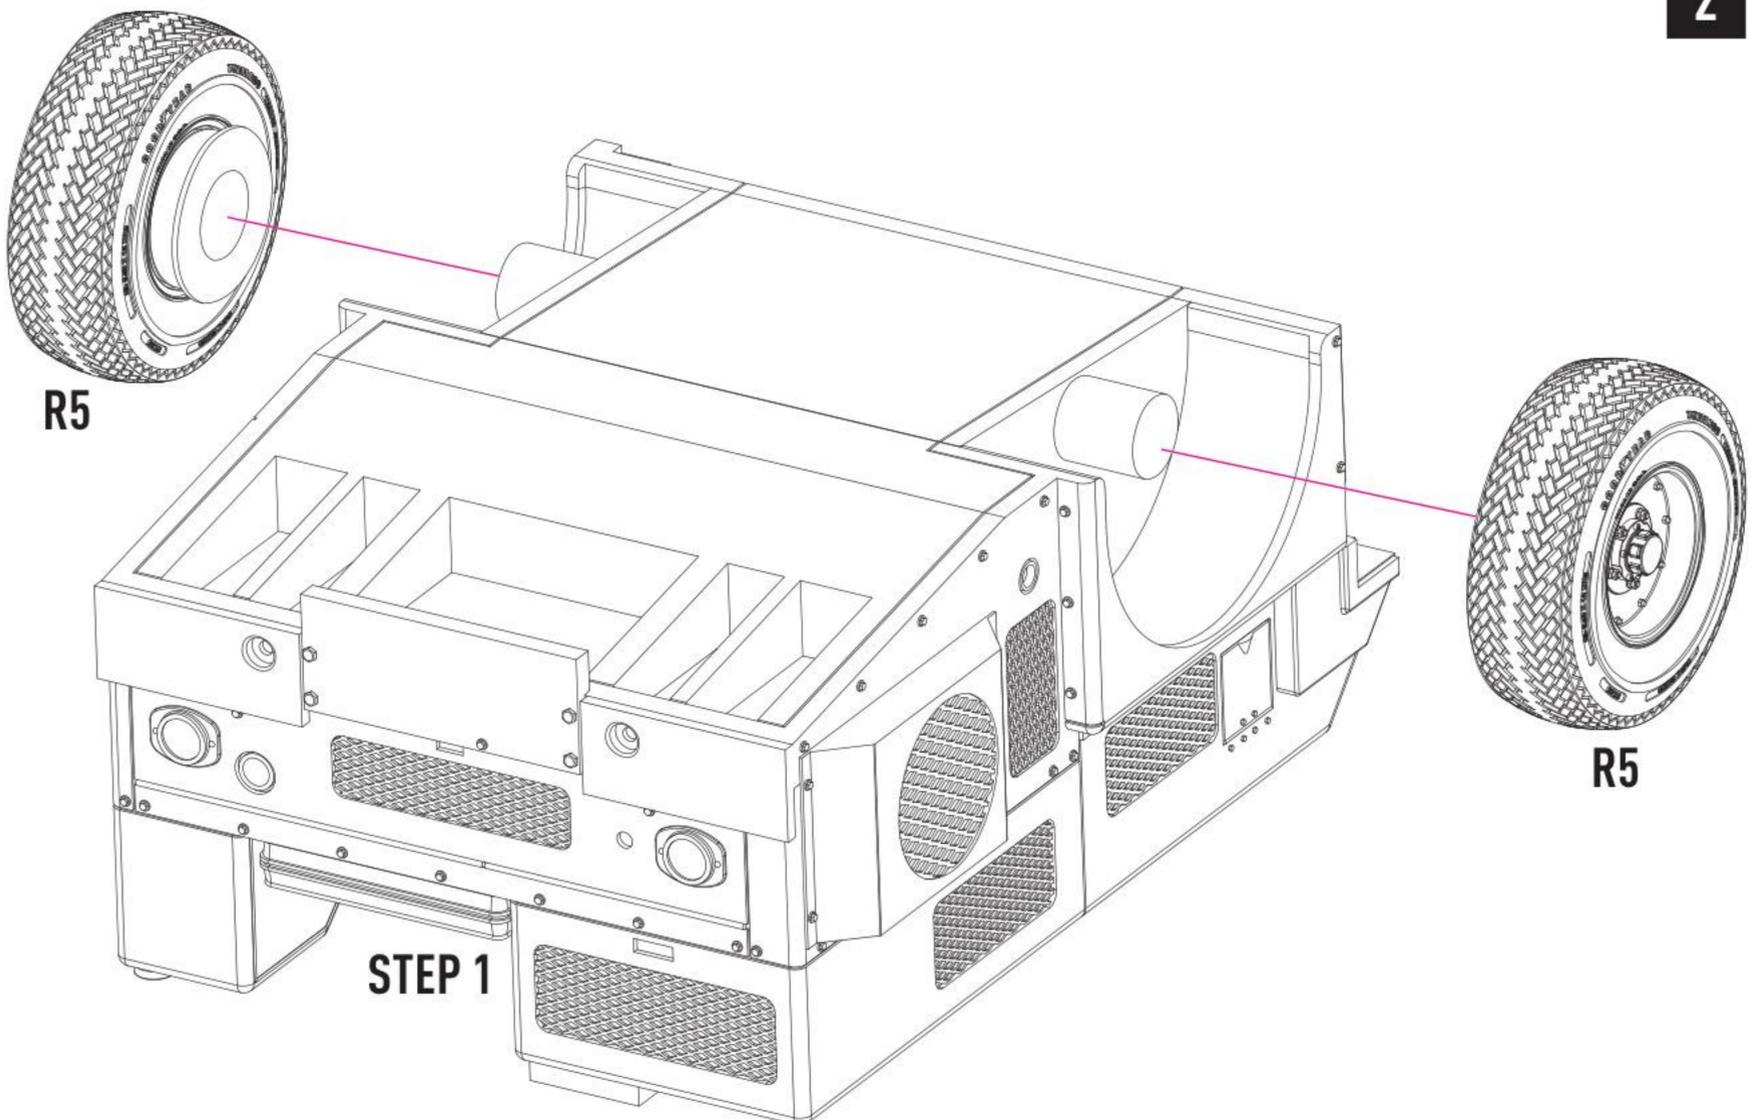

3

R7

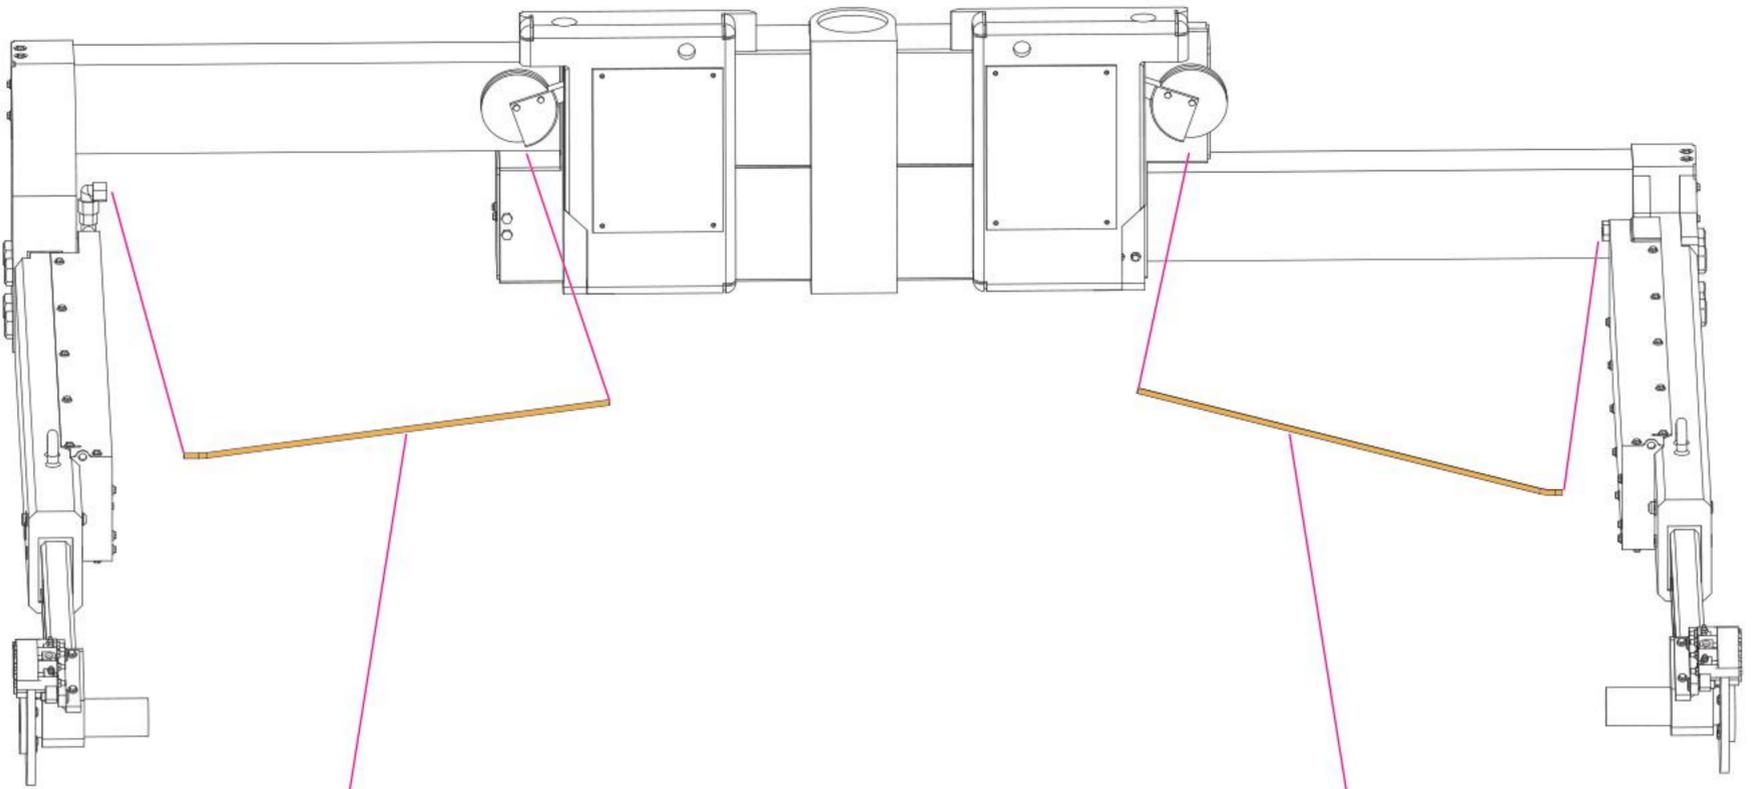


**USE WIRE**  
**D=0.13 MM, L=11 MM**

**USE WIRE**  
**D=0.13 MM, L=11 MM**

4



**USE WIRE**  
**D=0.13 MM, L=15 MM**

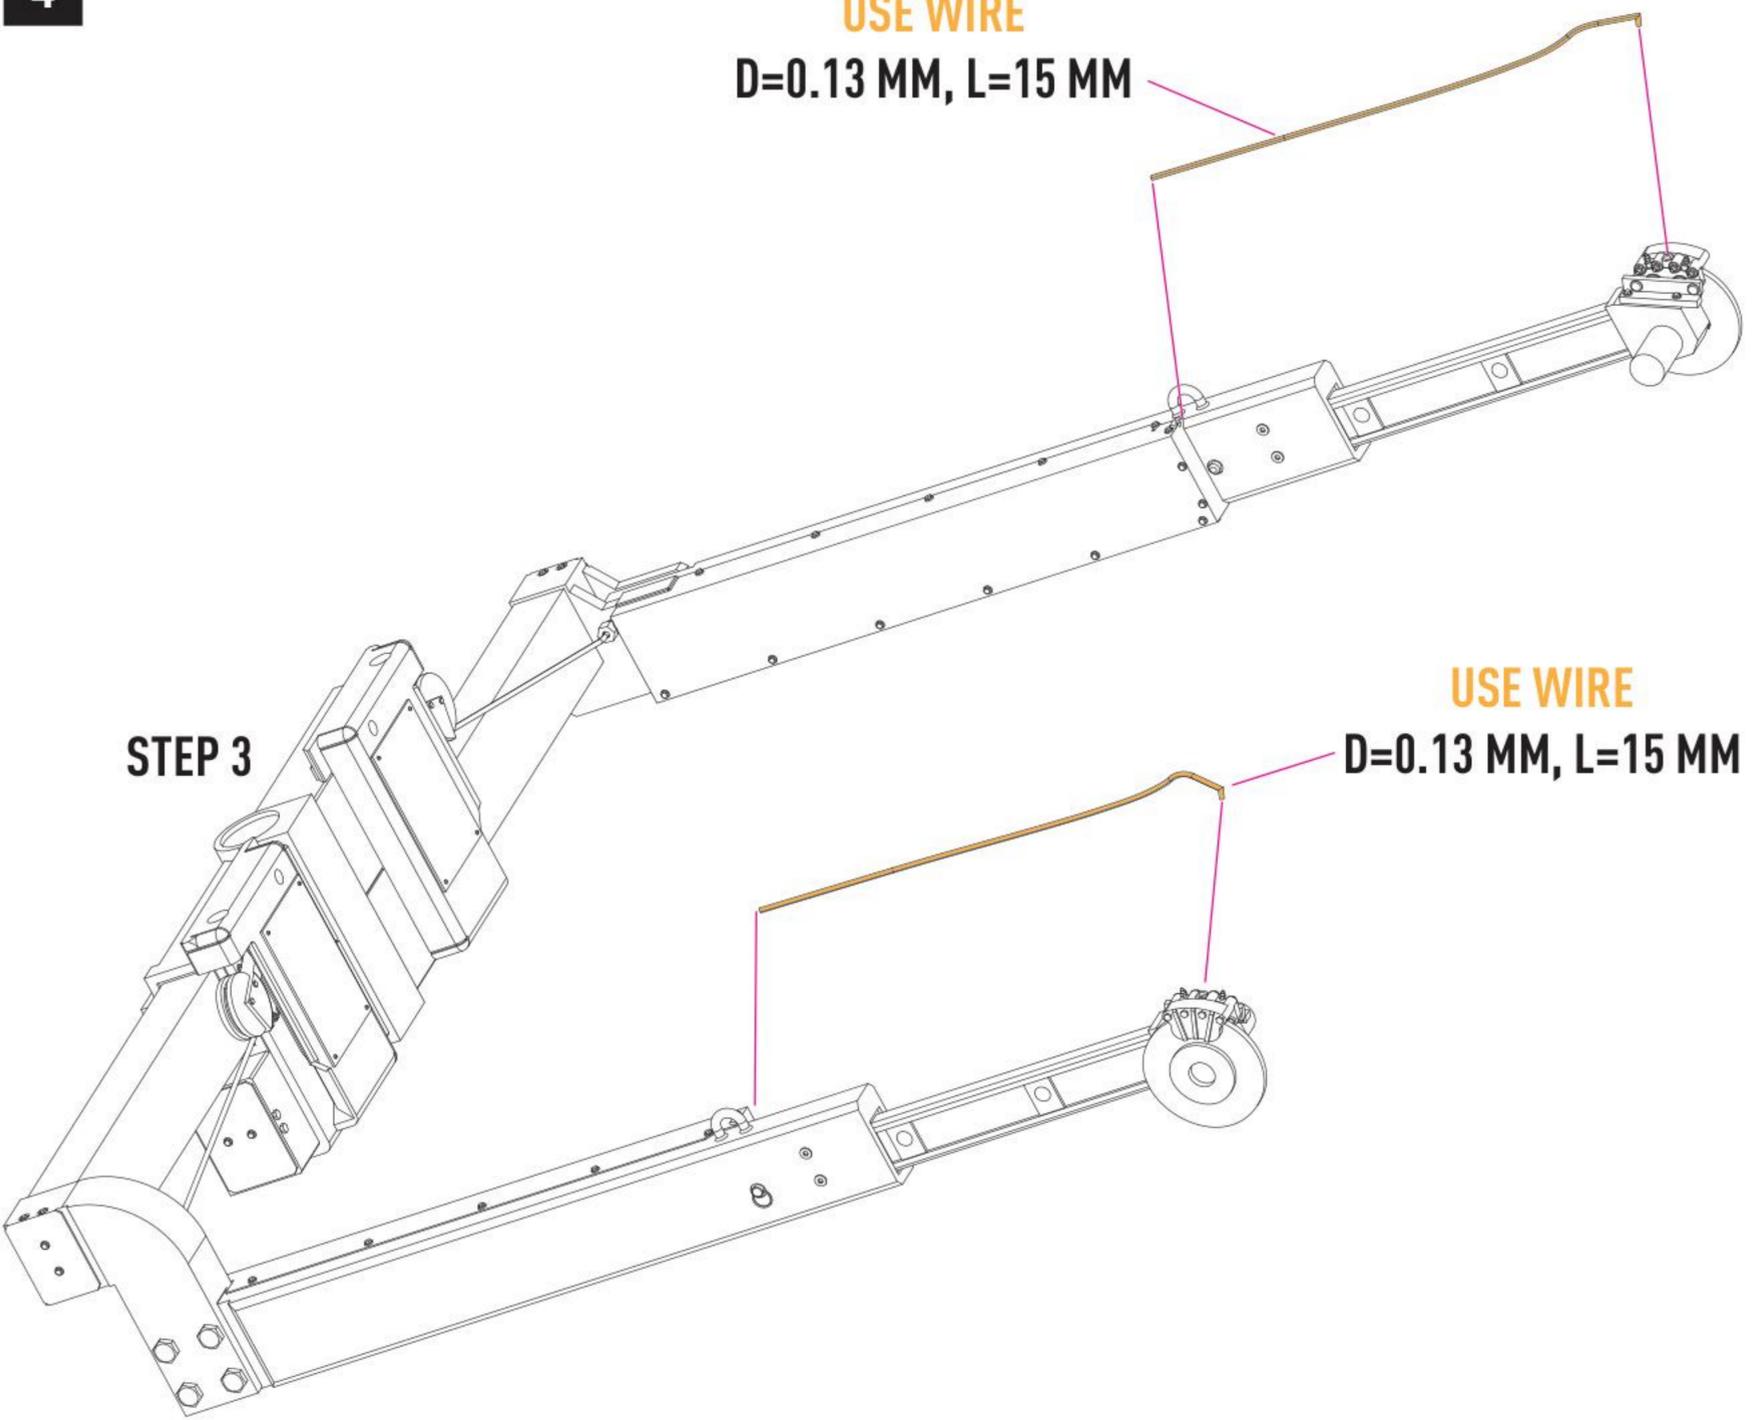


STEP 3

**USE WIRE**  
**D=0.13 MM, L=15 MM**

5

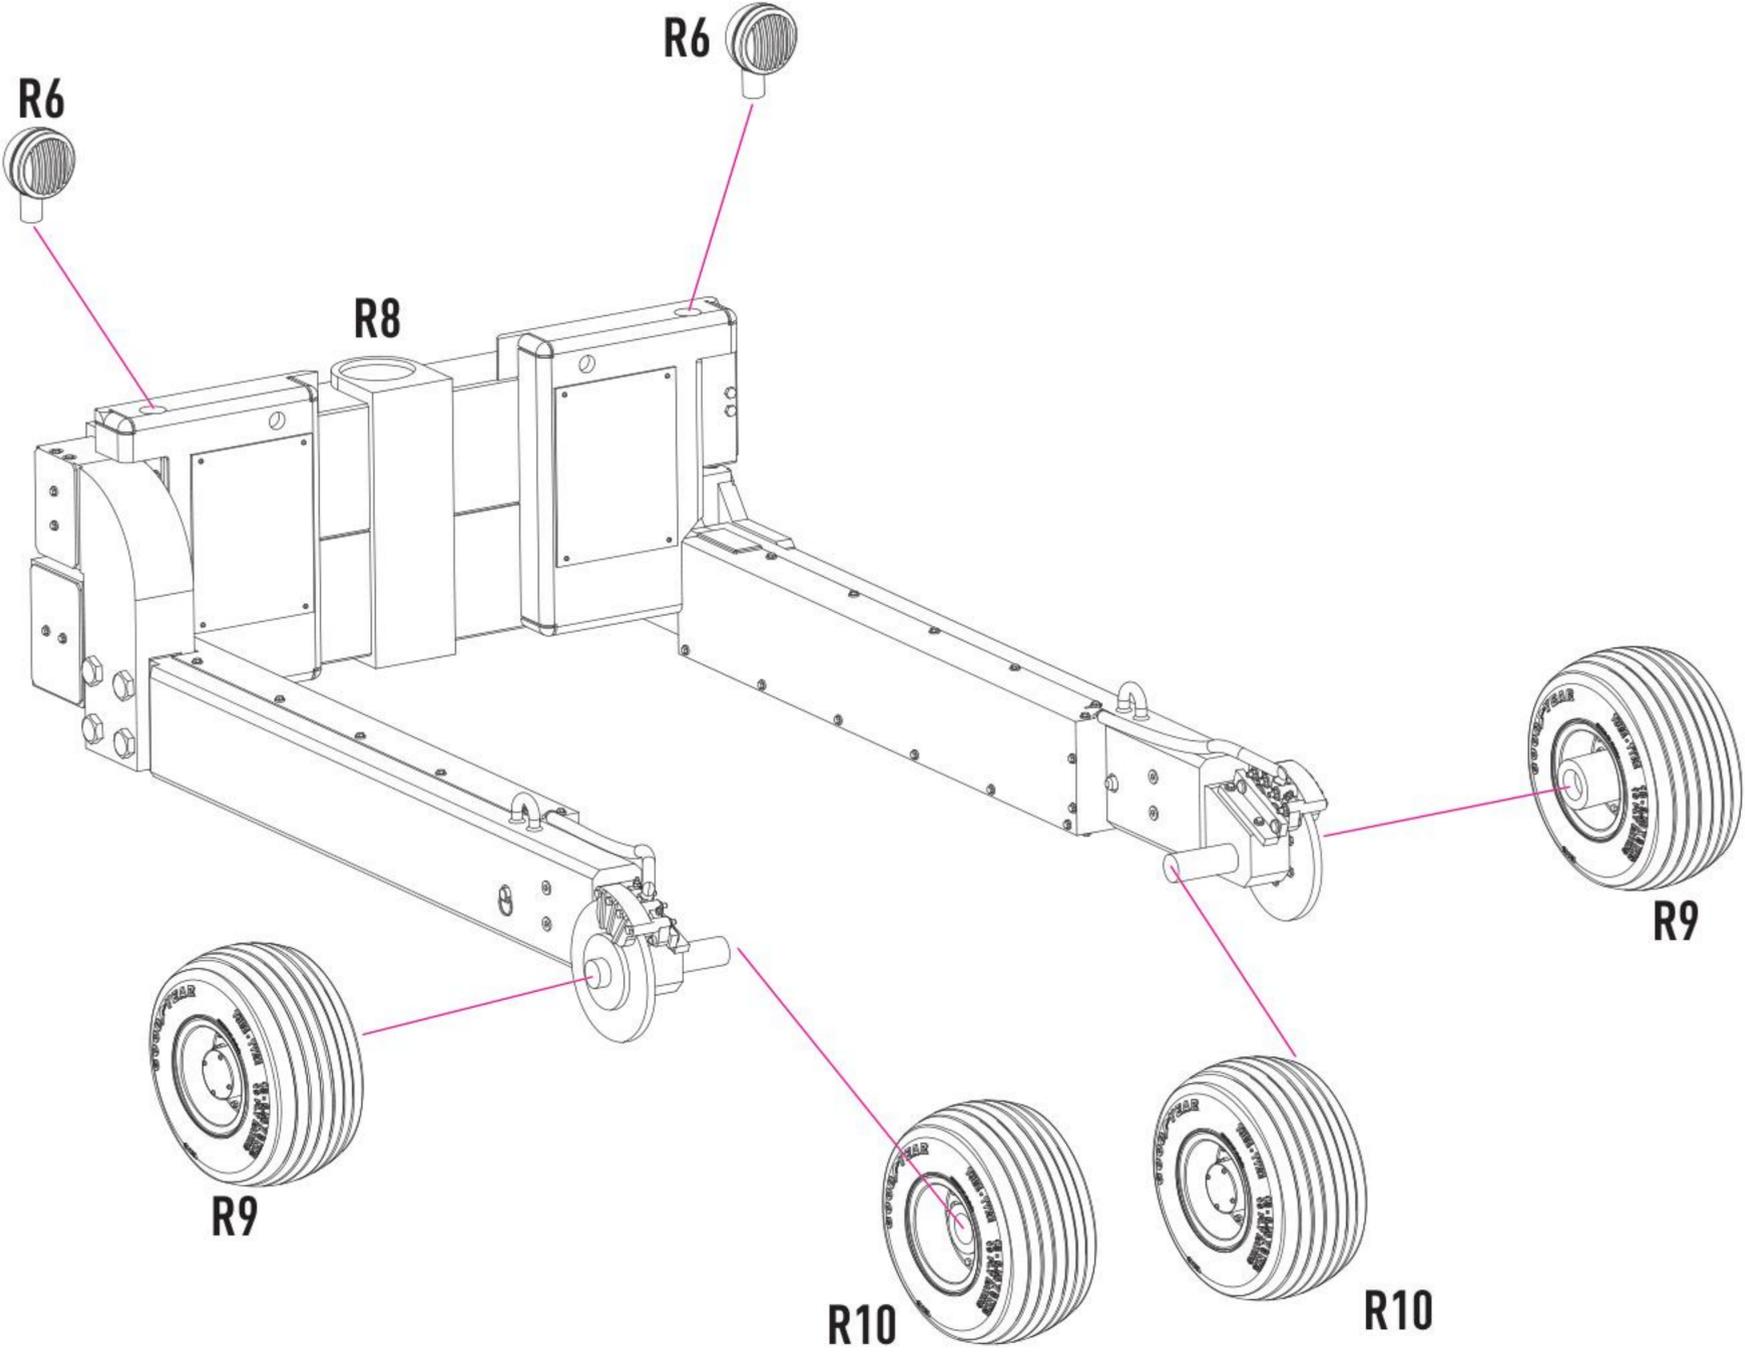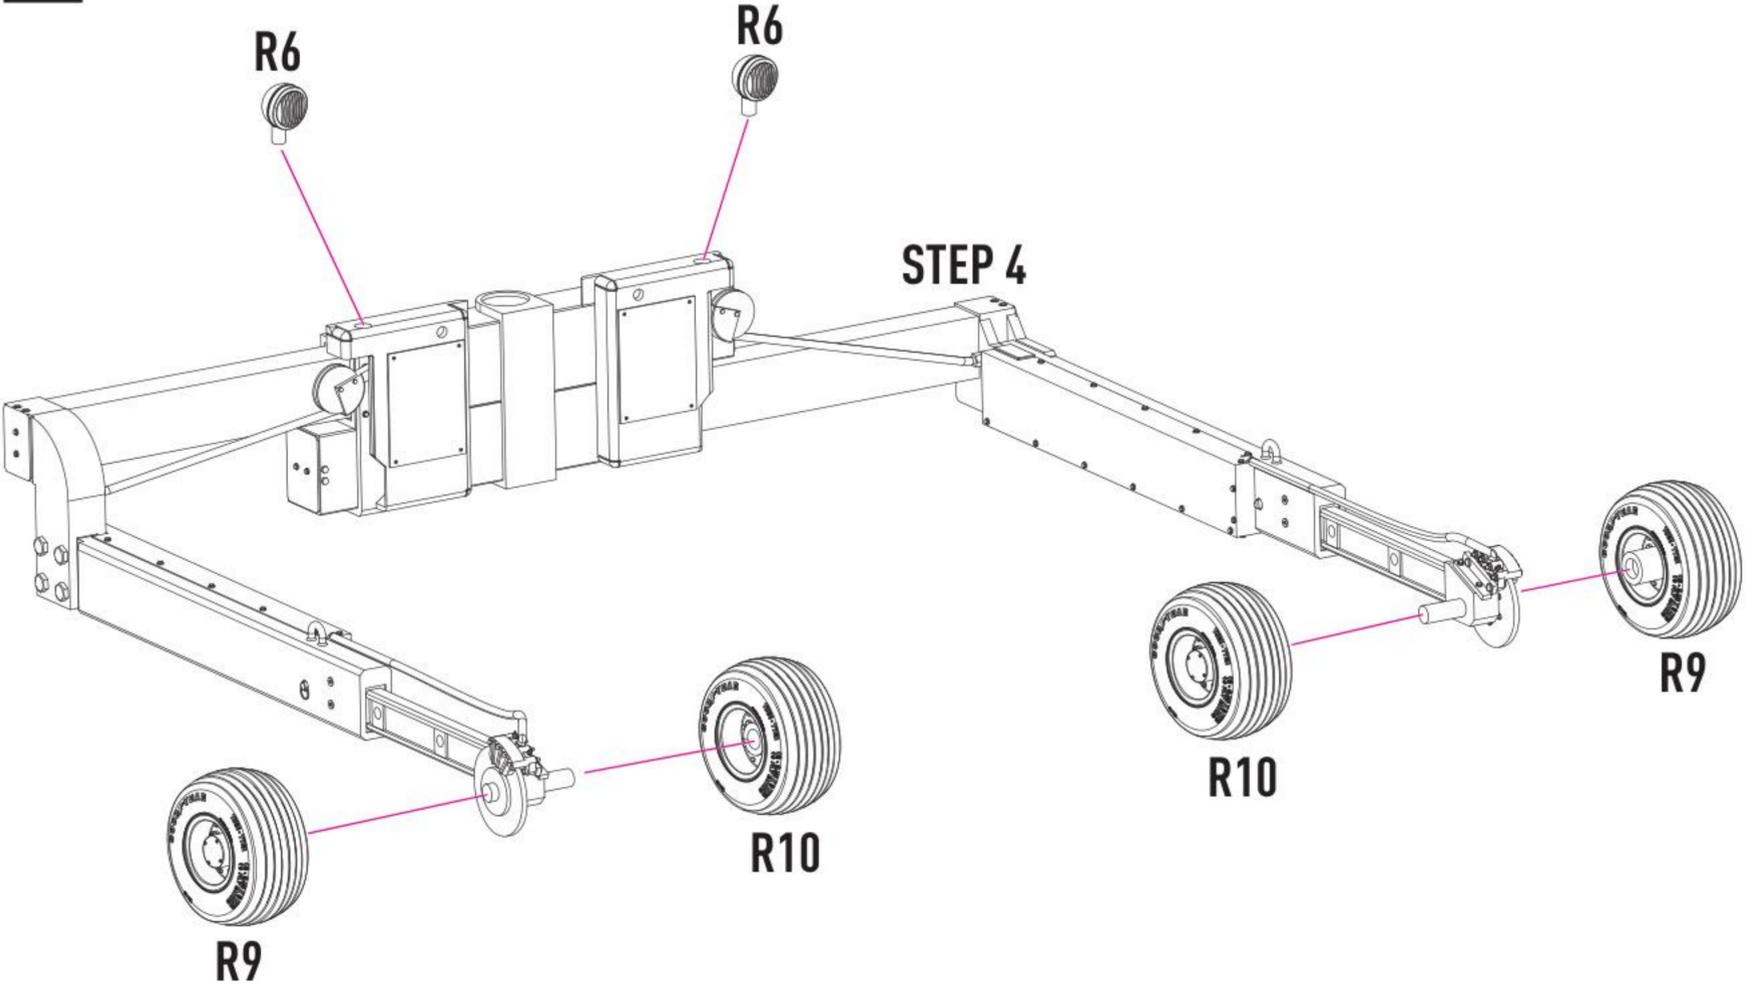


STEP 2

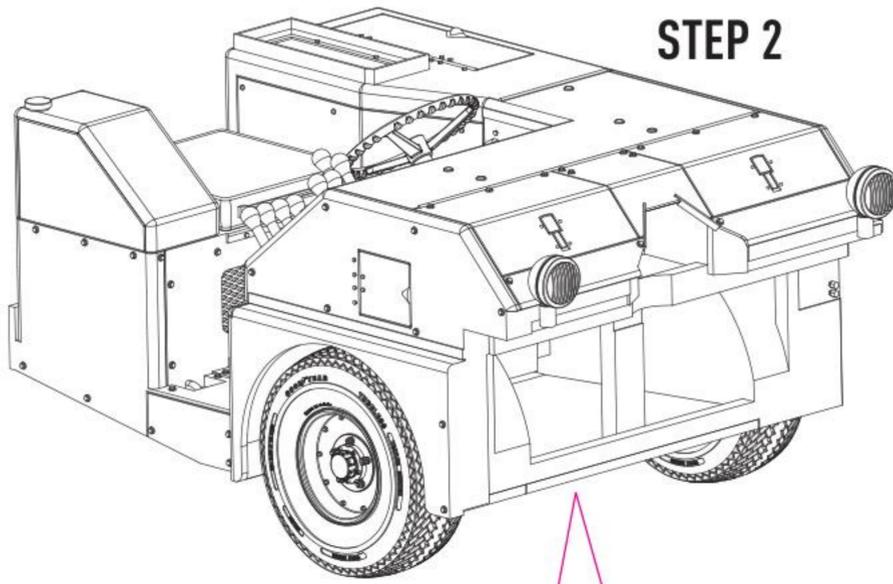


?



STEP 5

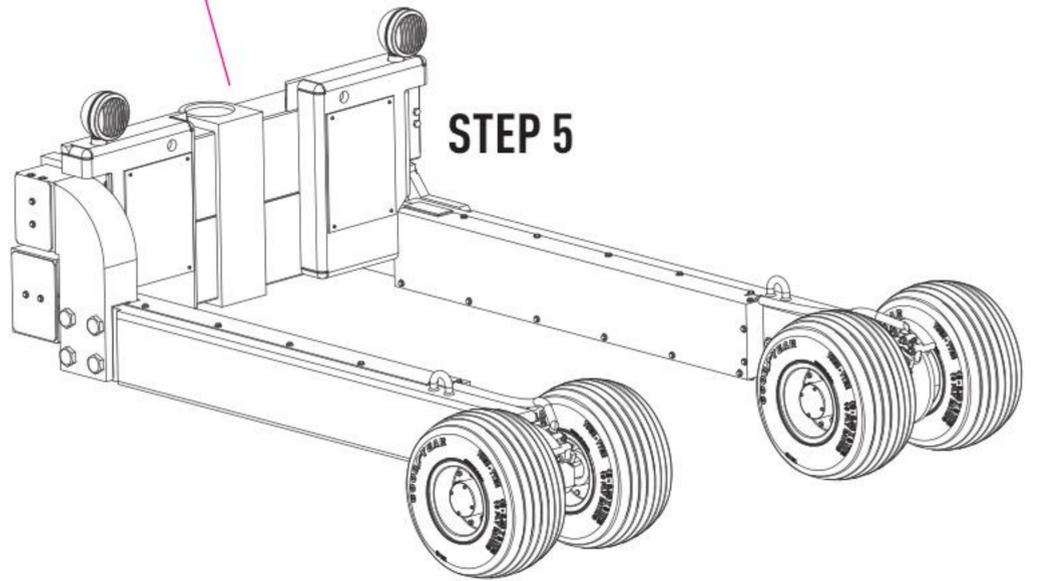


STEP 5

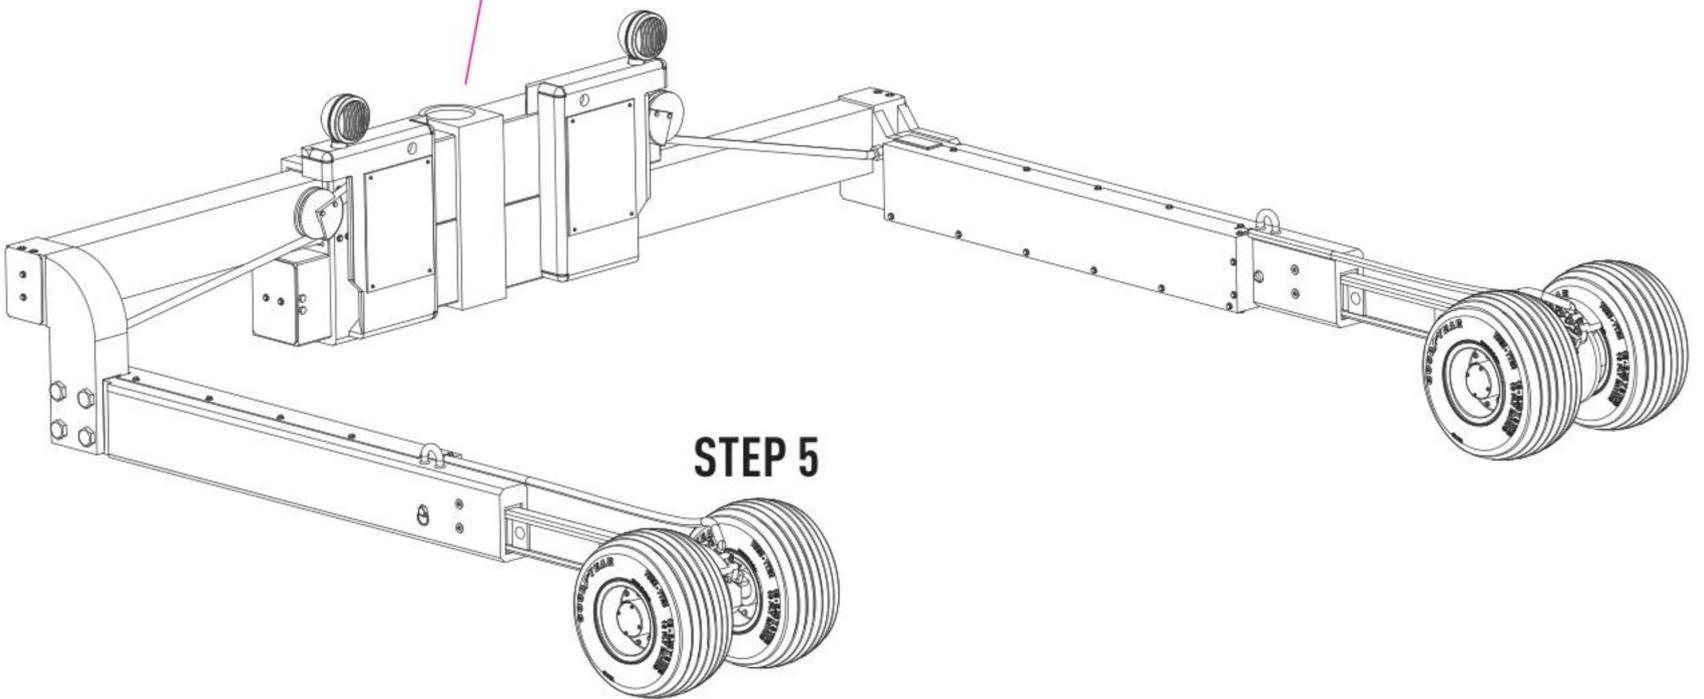


**7** FOR PROPER ROLLERS POSITION PLEASE CHECK YOUR PHOTO REFERENCE

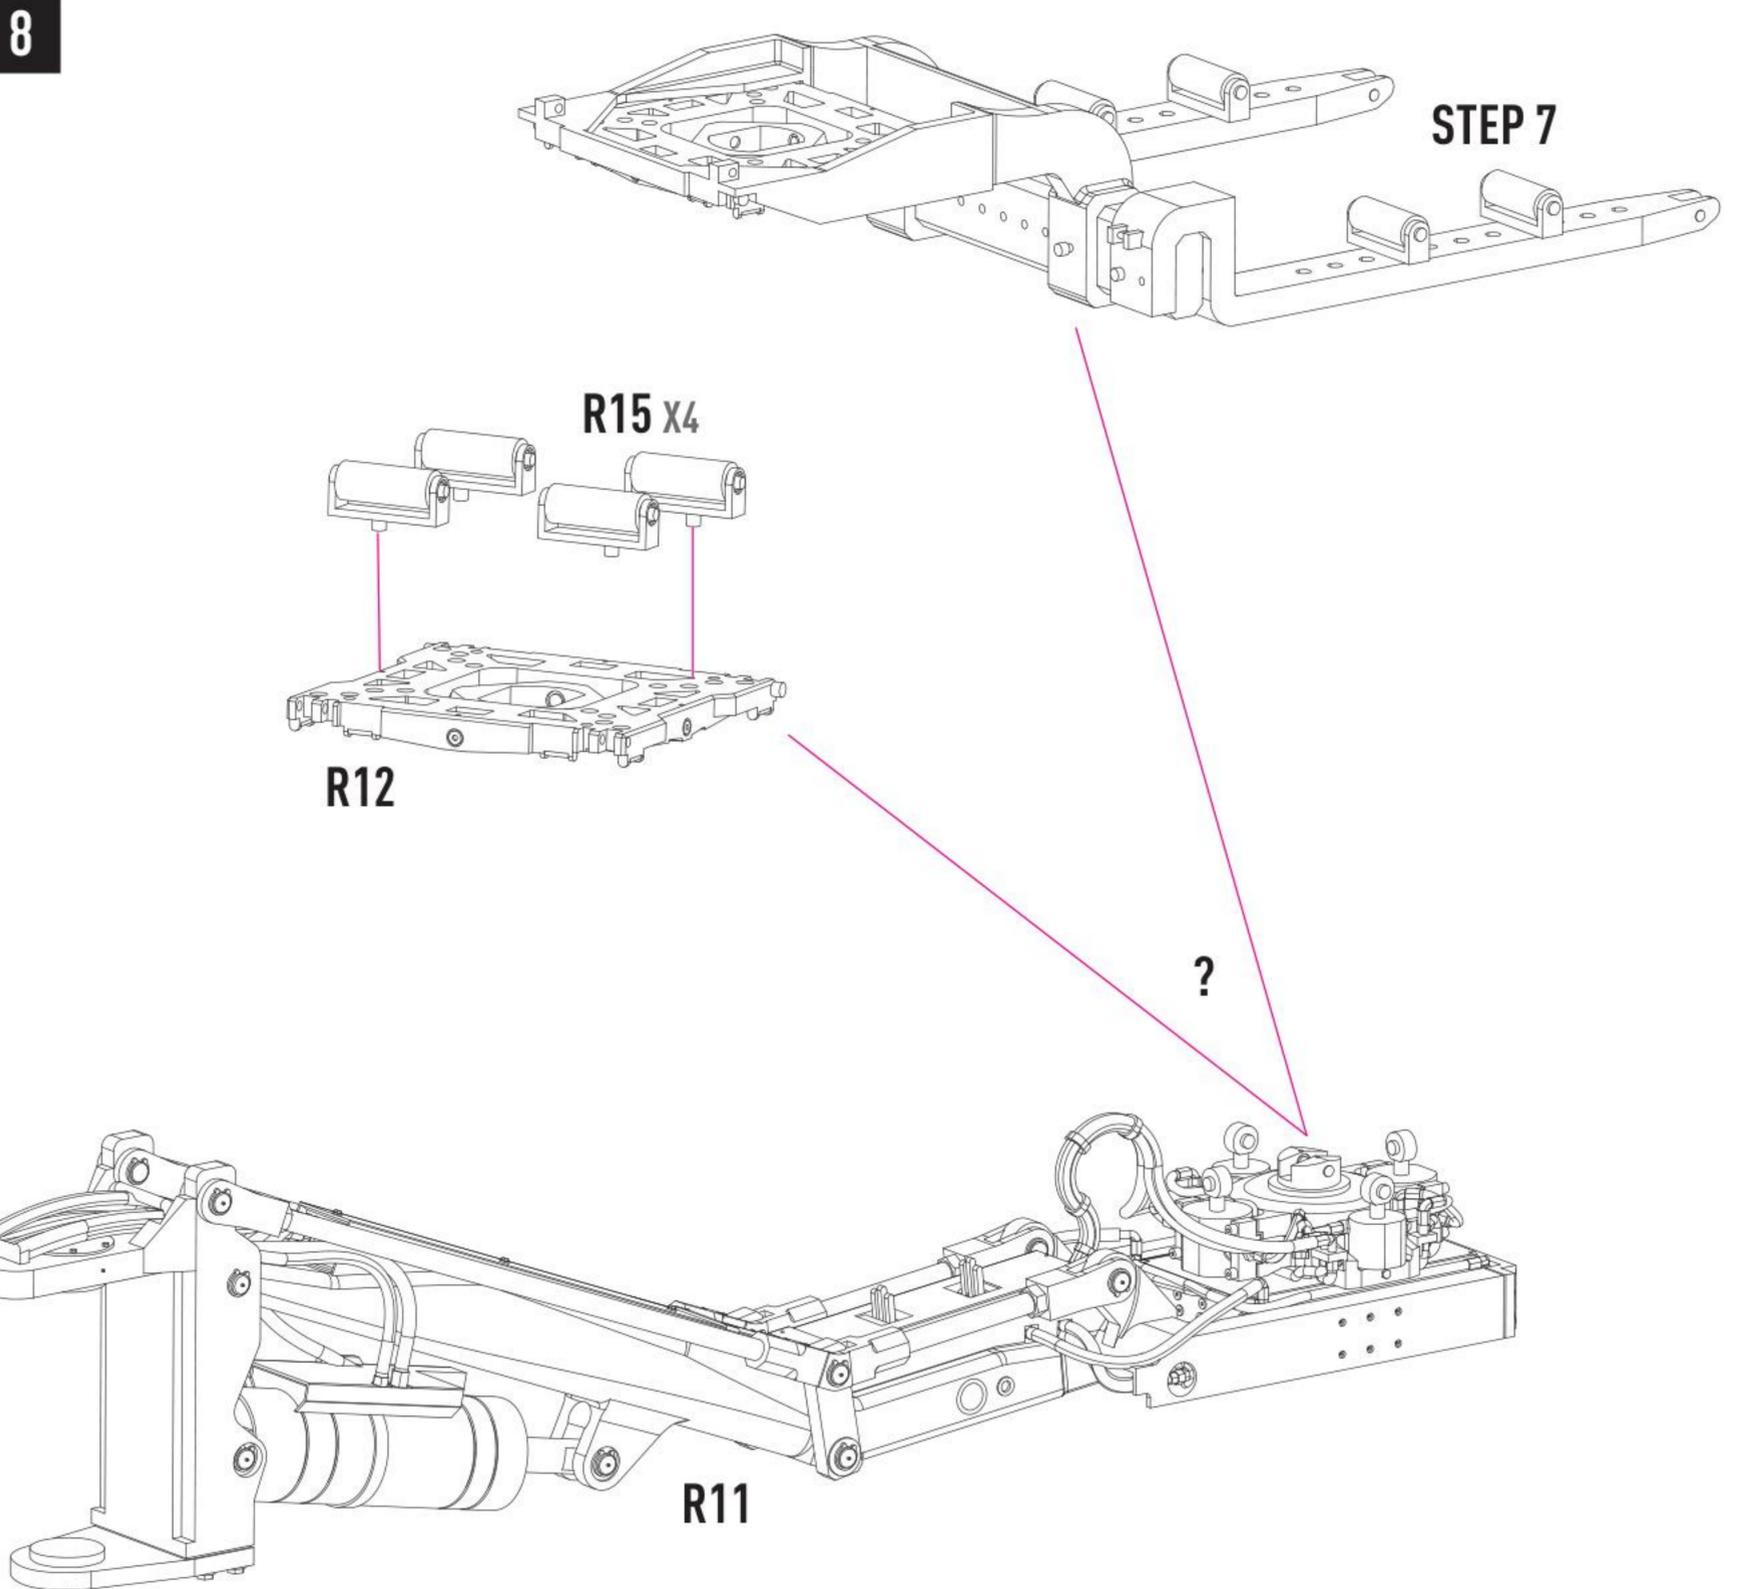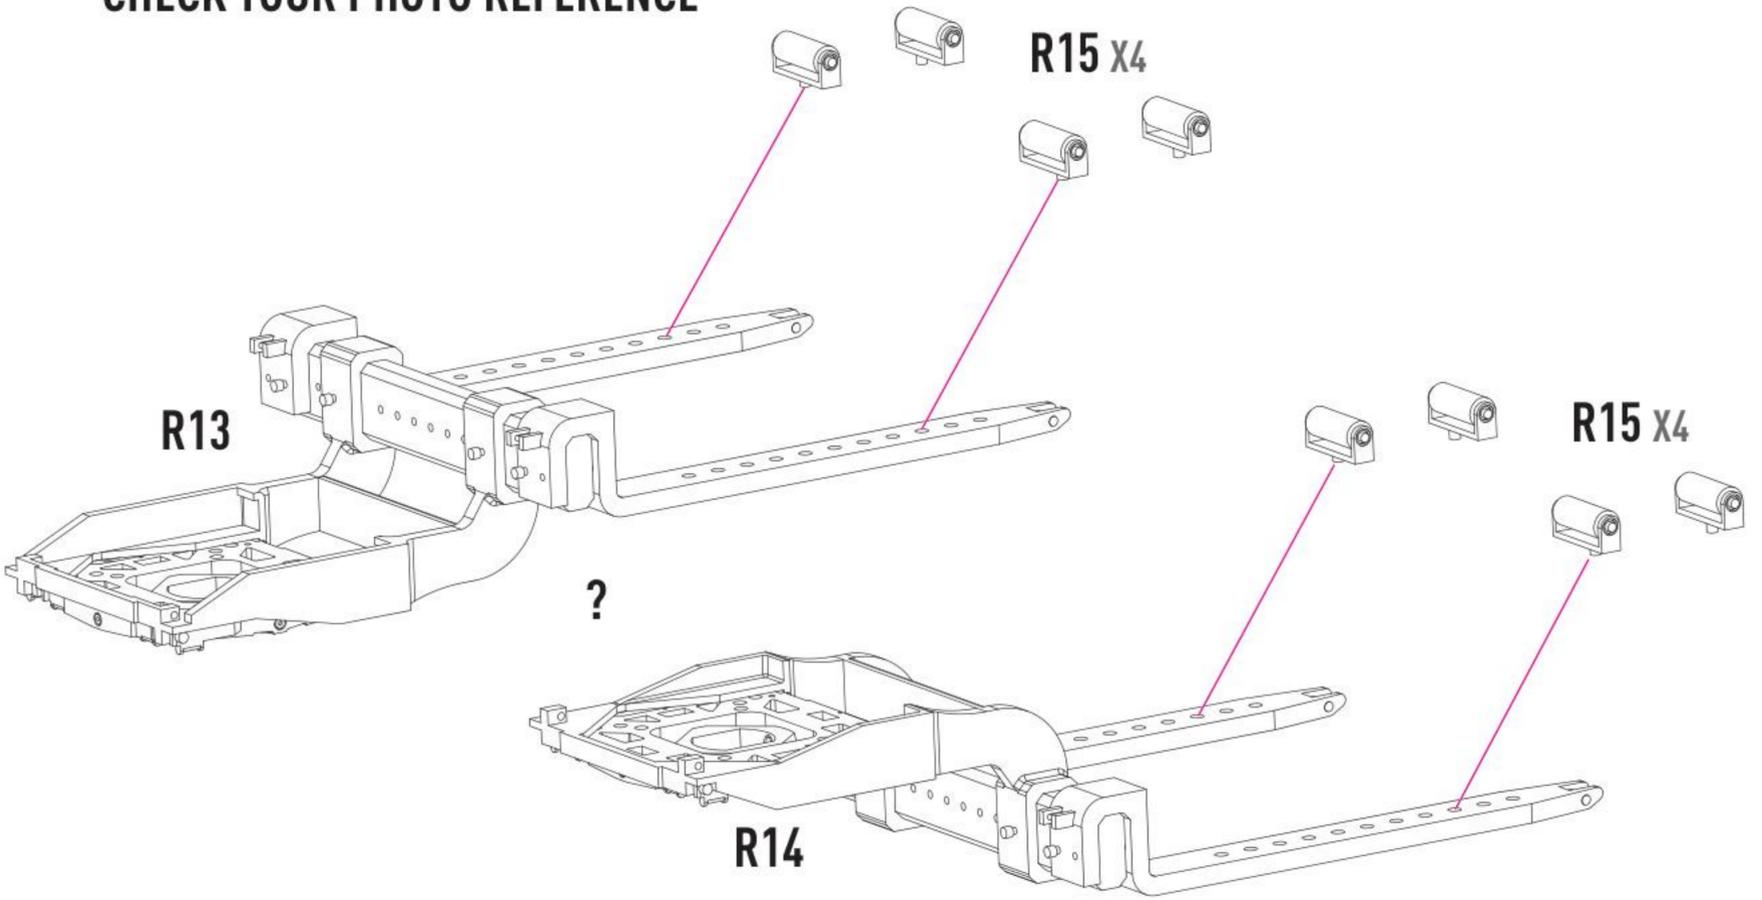





STEP 6

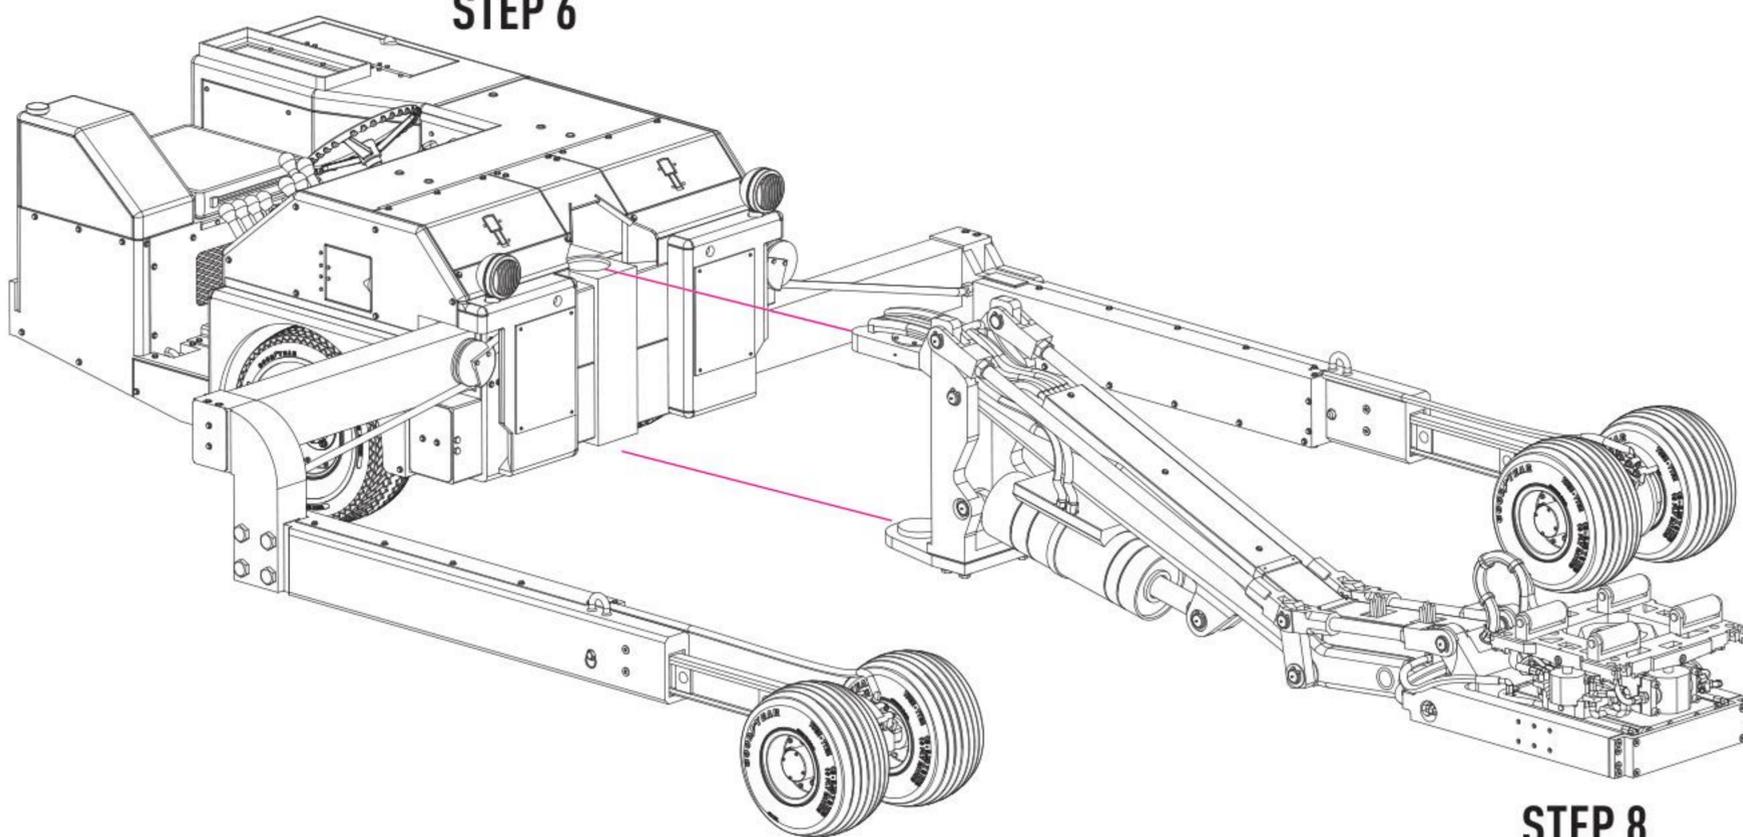


STEP 8

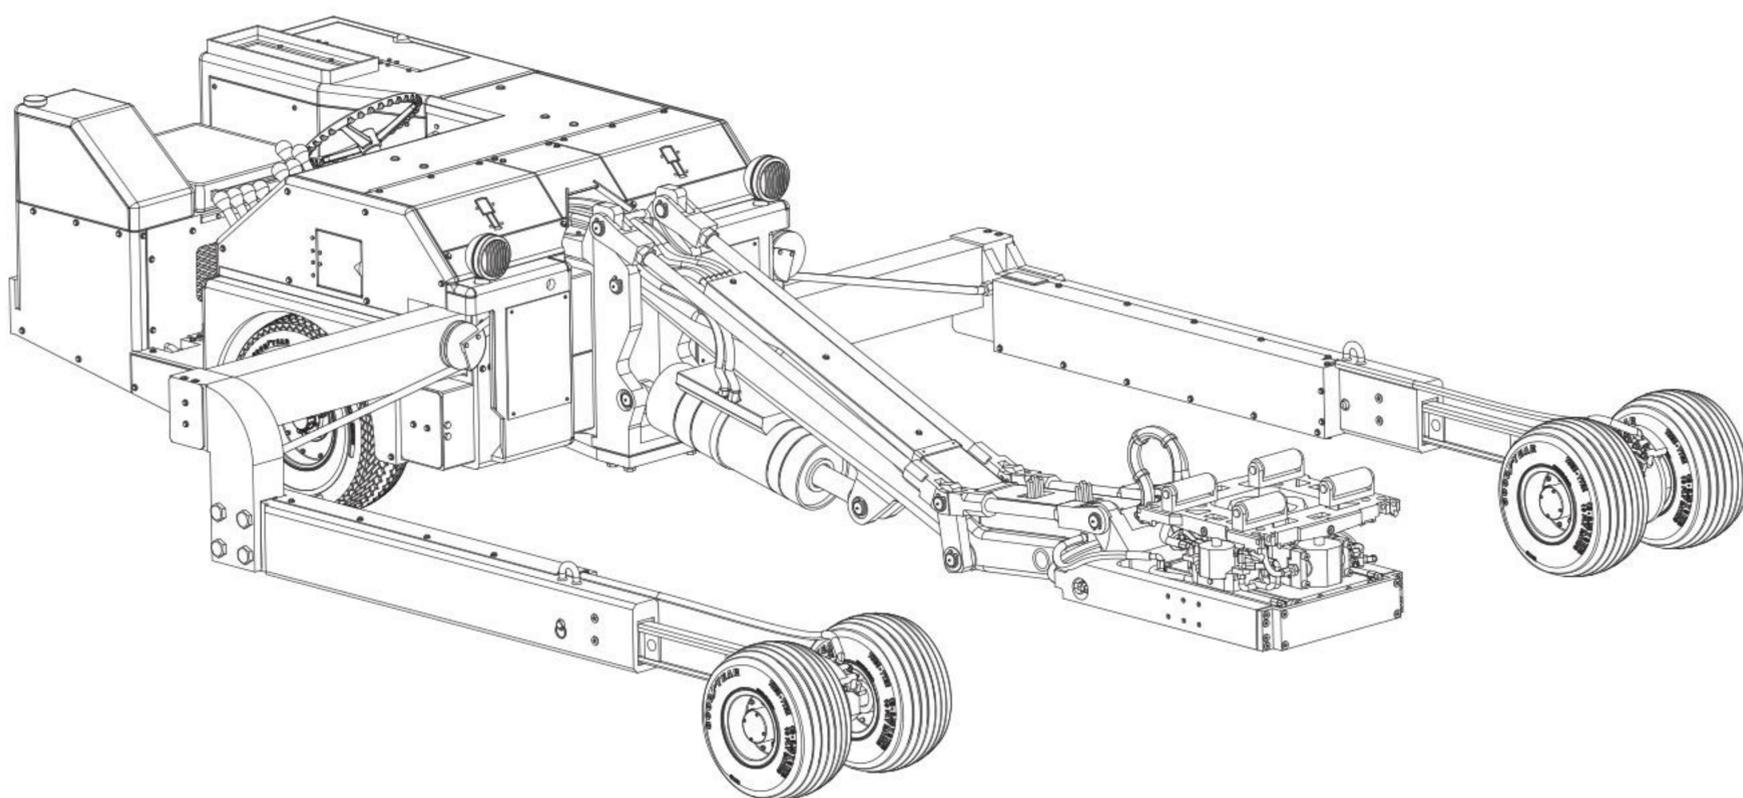

# DECAL INSTRUCTION

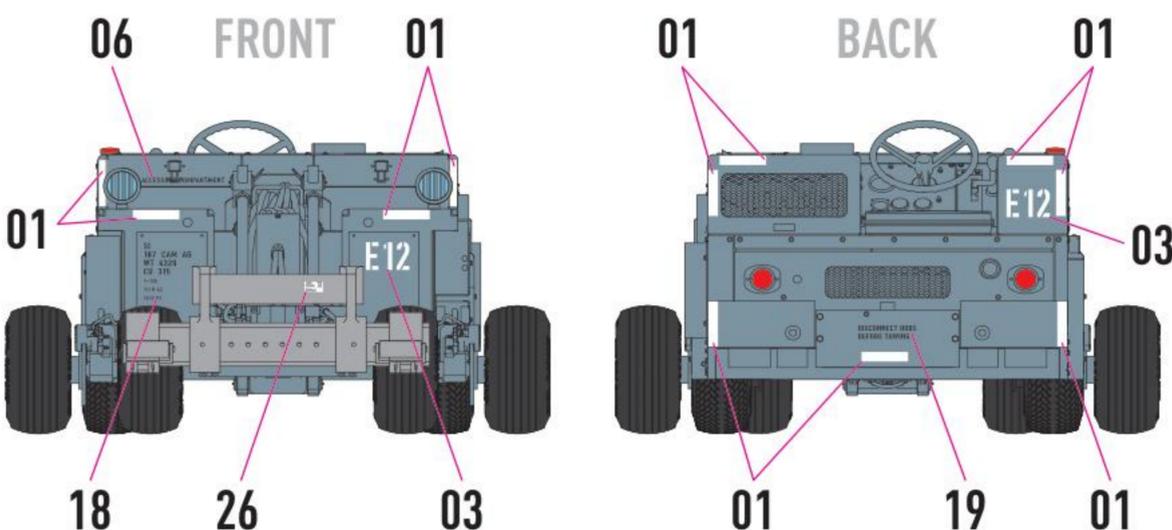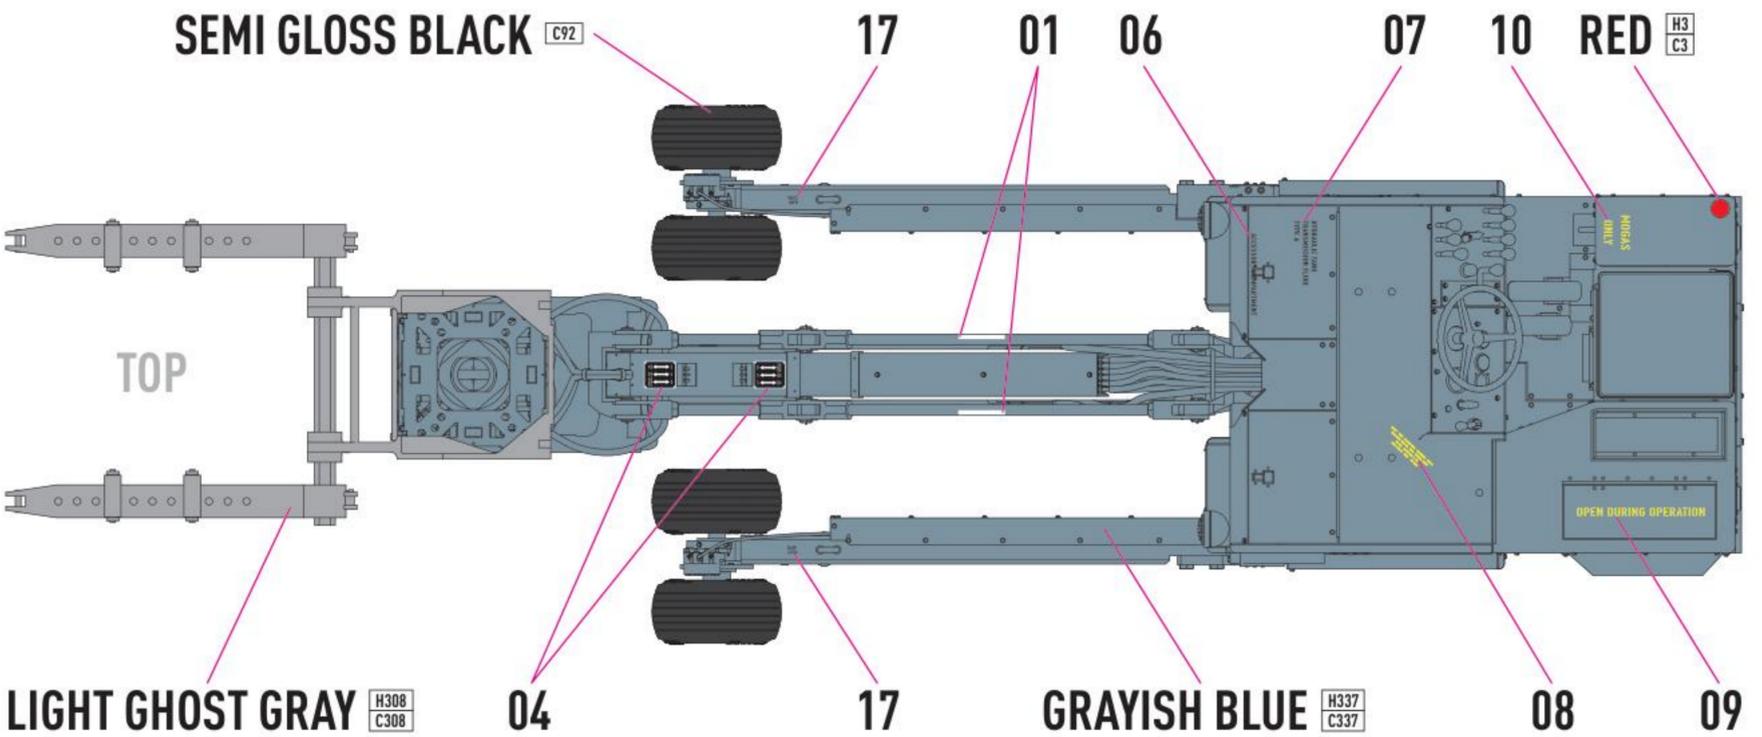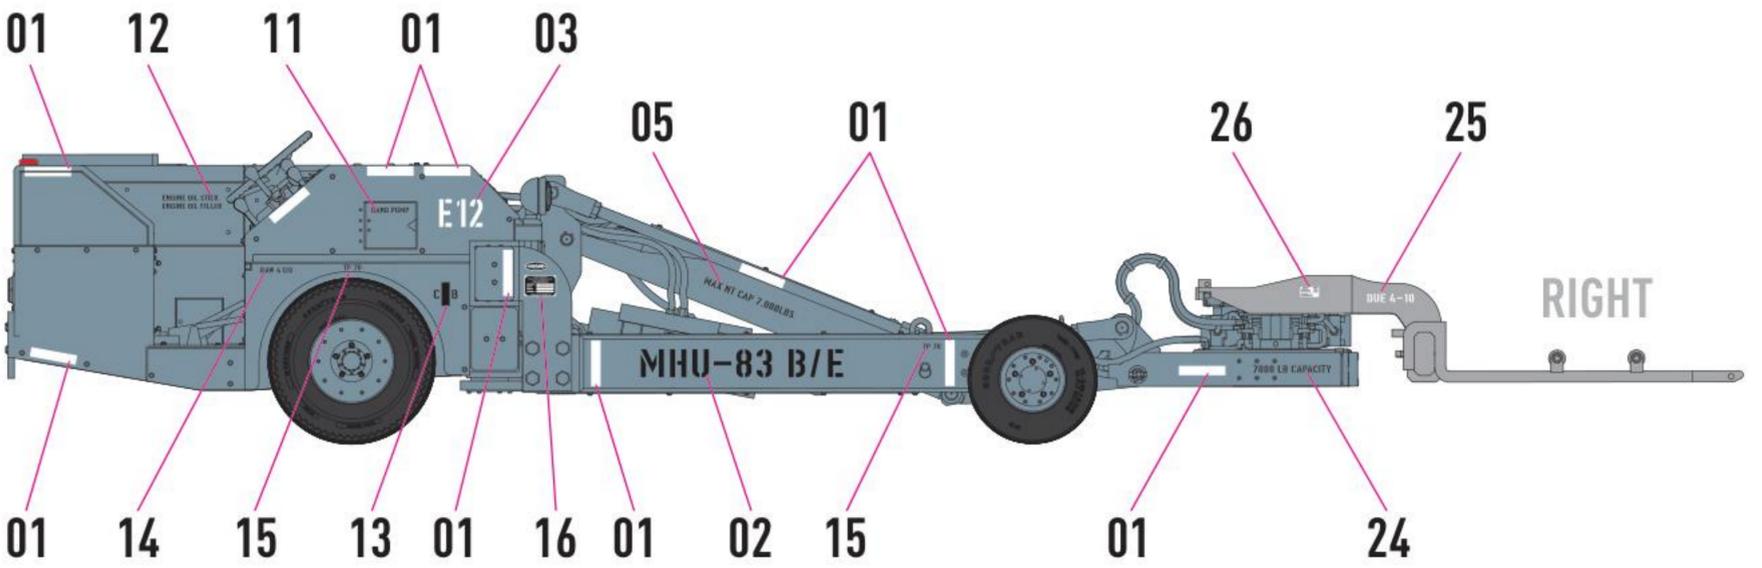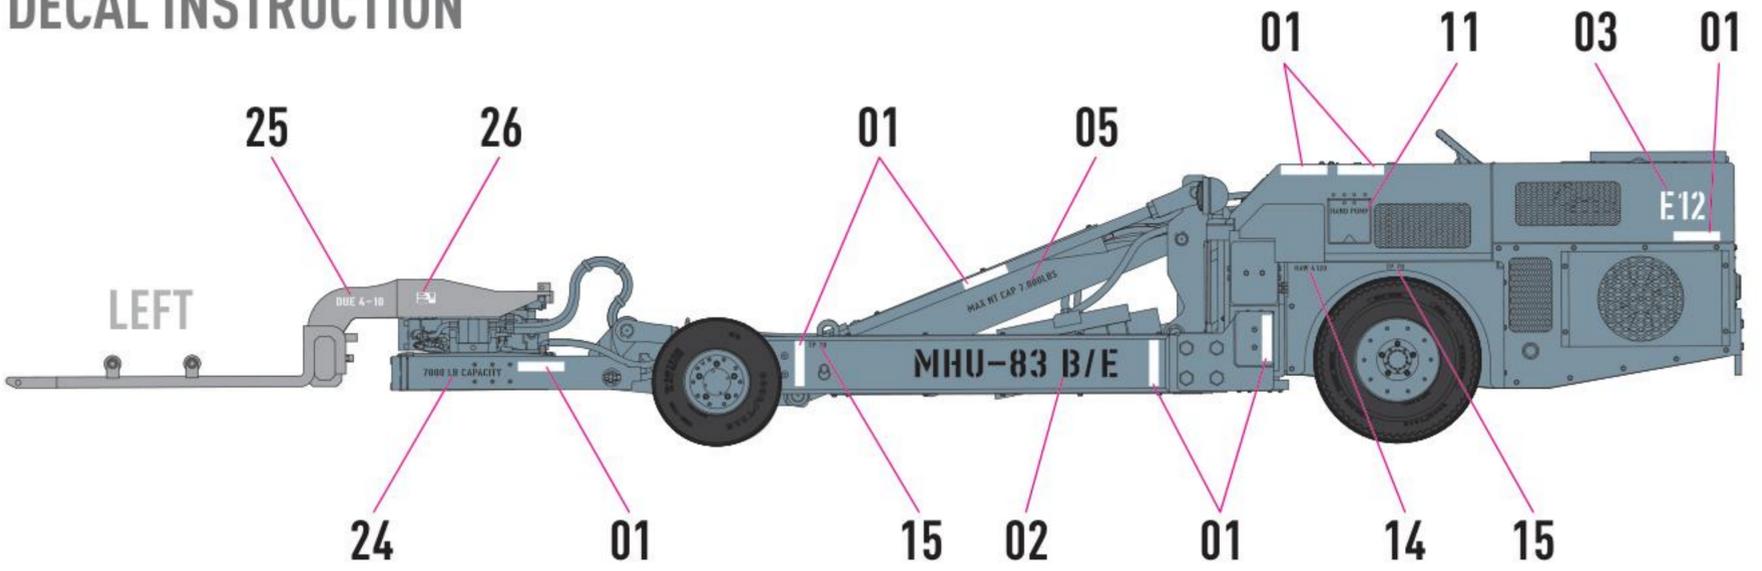

## INSTRUMENT PANEL

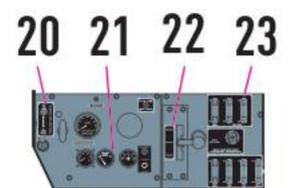

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAYISH BLUE	H337	C337
RED	H3	C3
SEMI GLOSS BLACK		C92
LIGHT GHOST GRAY	H308	C308

general issues: [info@reskit.com.ua](mailto:info@reskit.com.ua) / claim resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)

**RESKIT-MODELS.COM**

[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit\\_official](https://www.instagram.com/reskit_official)

[pinterest.com/reskit\\_official](https://www.pinterest.com/reskit_official)