



 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

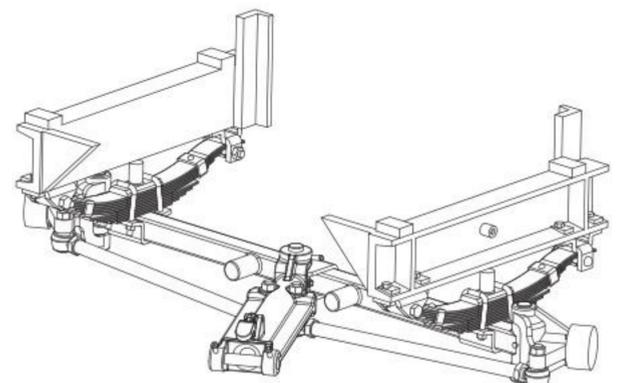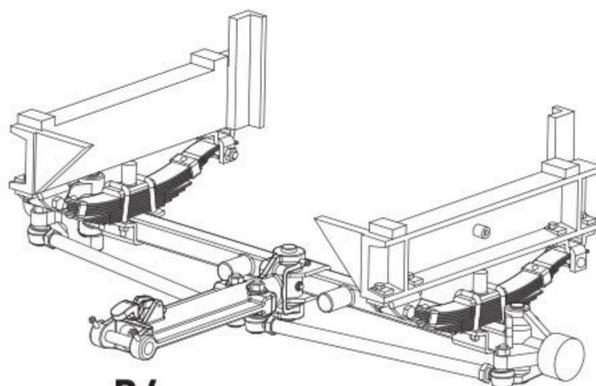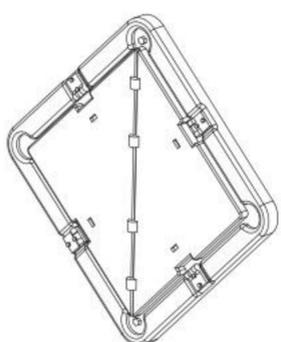


1

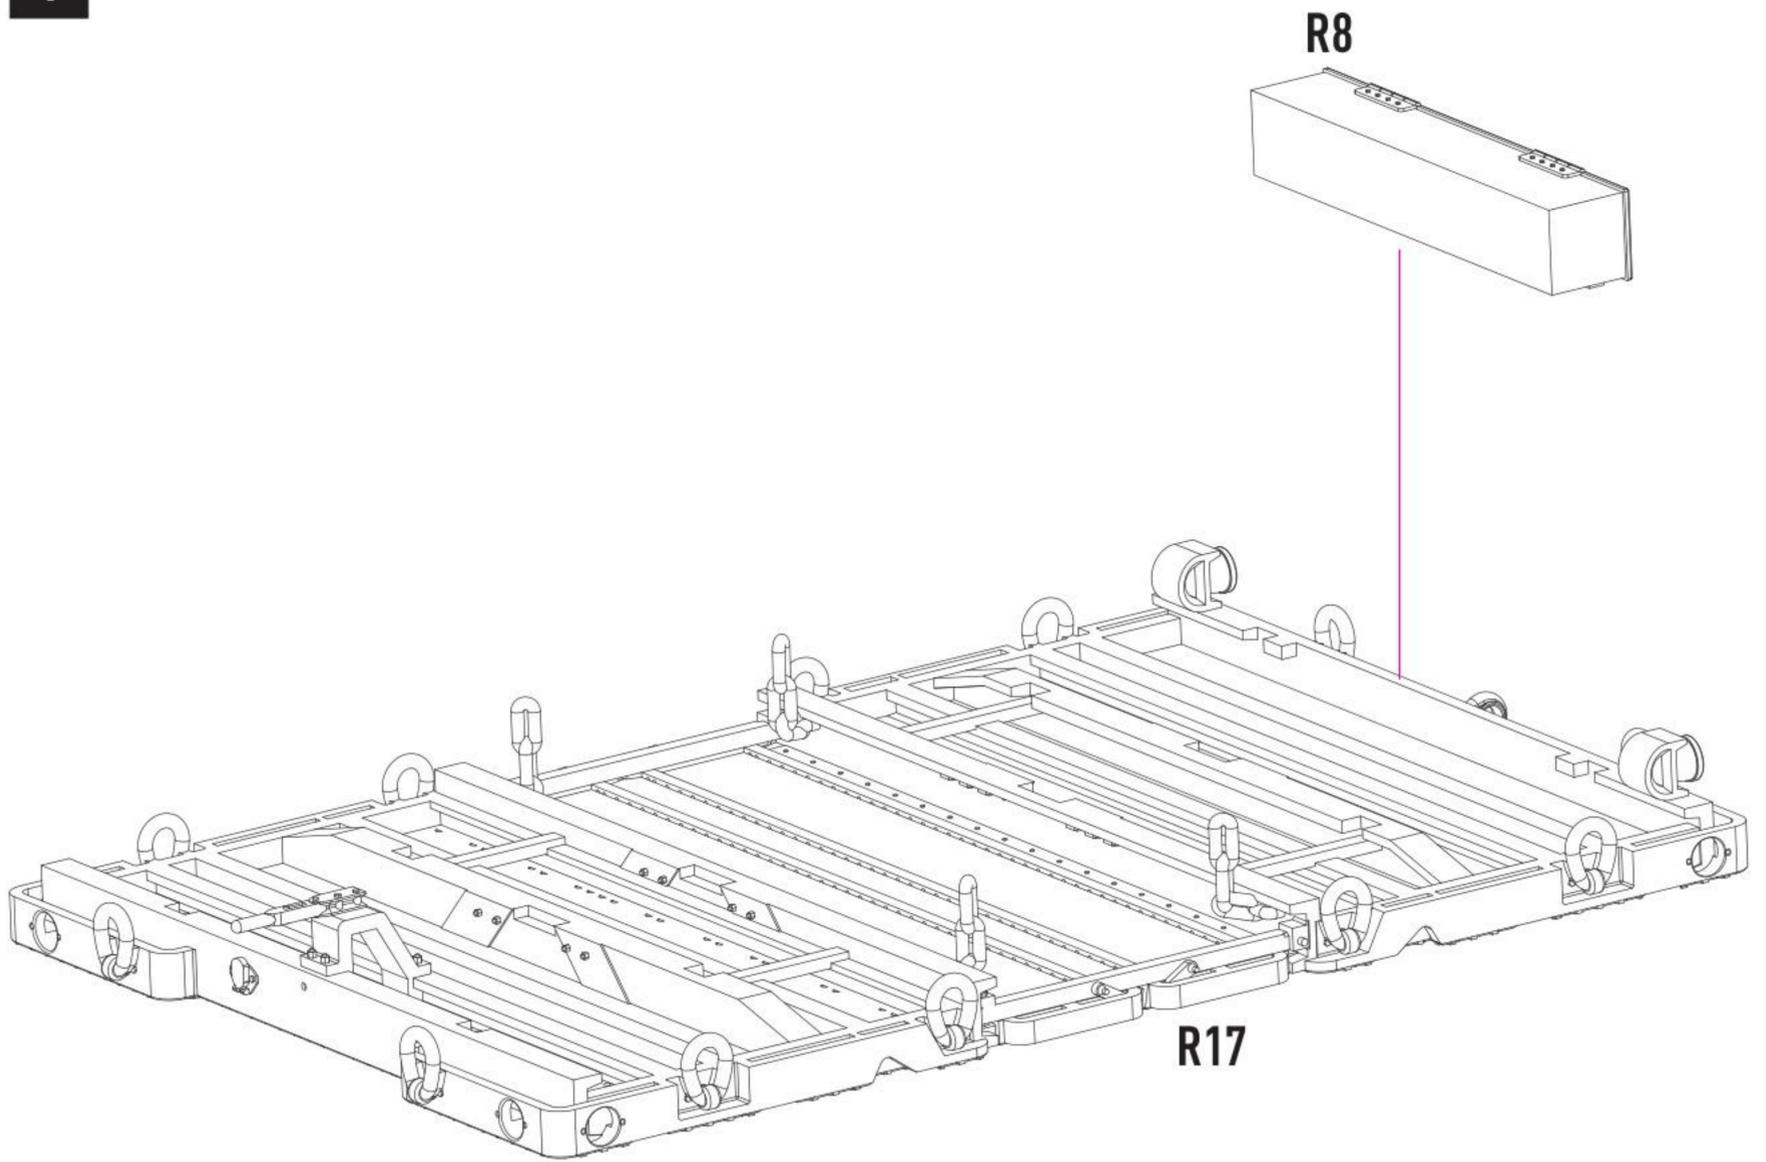


2

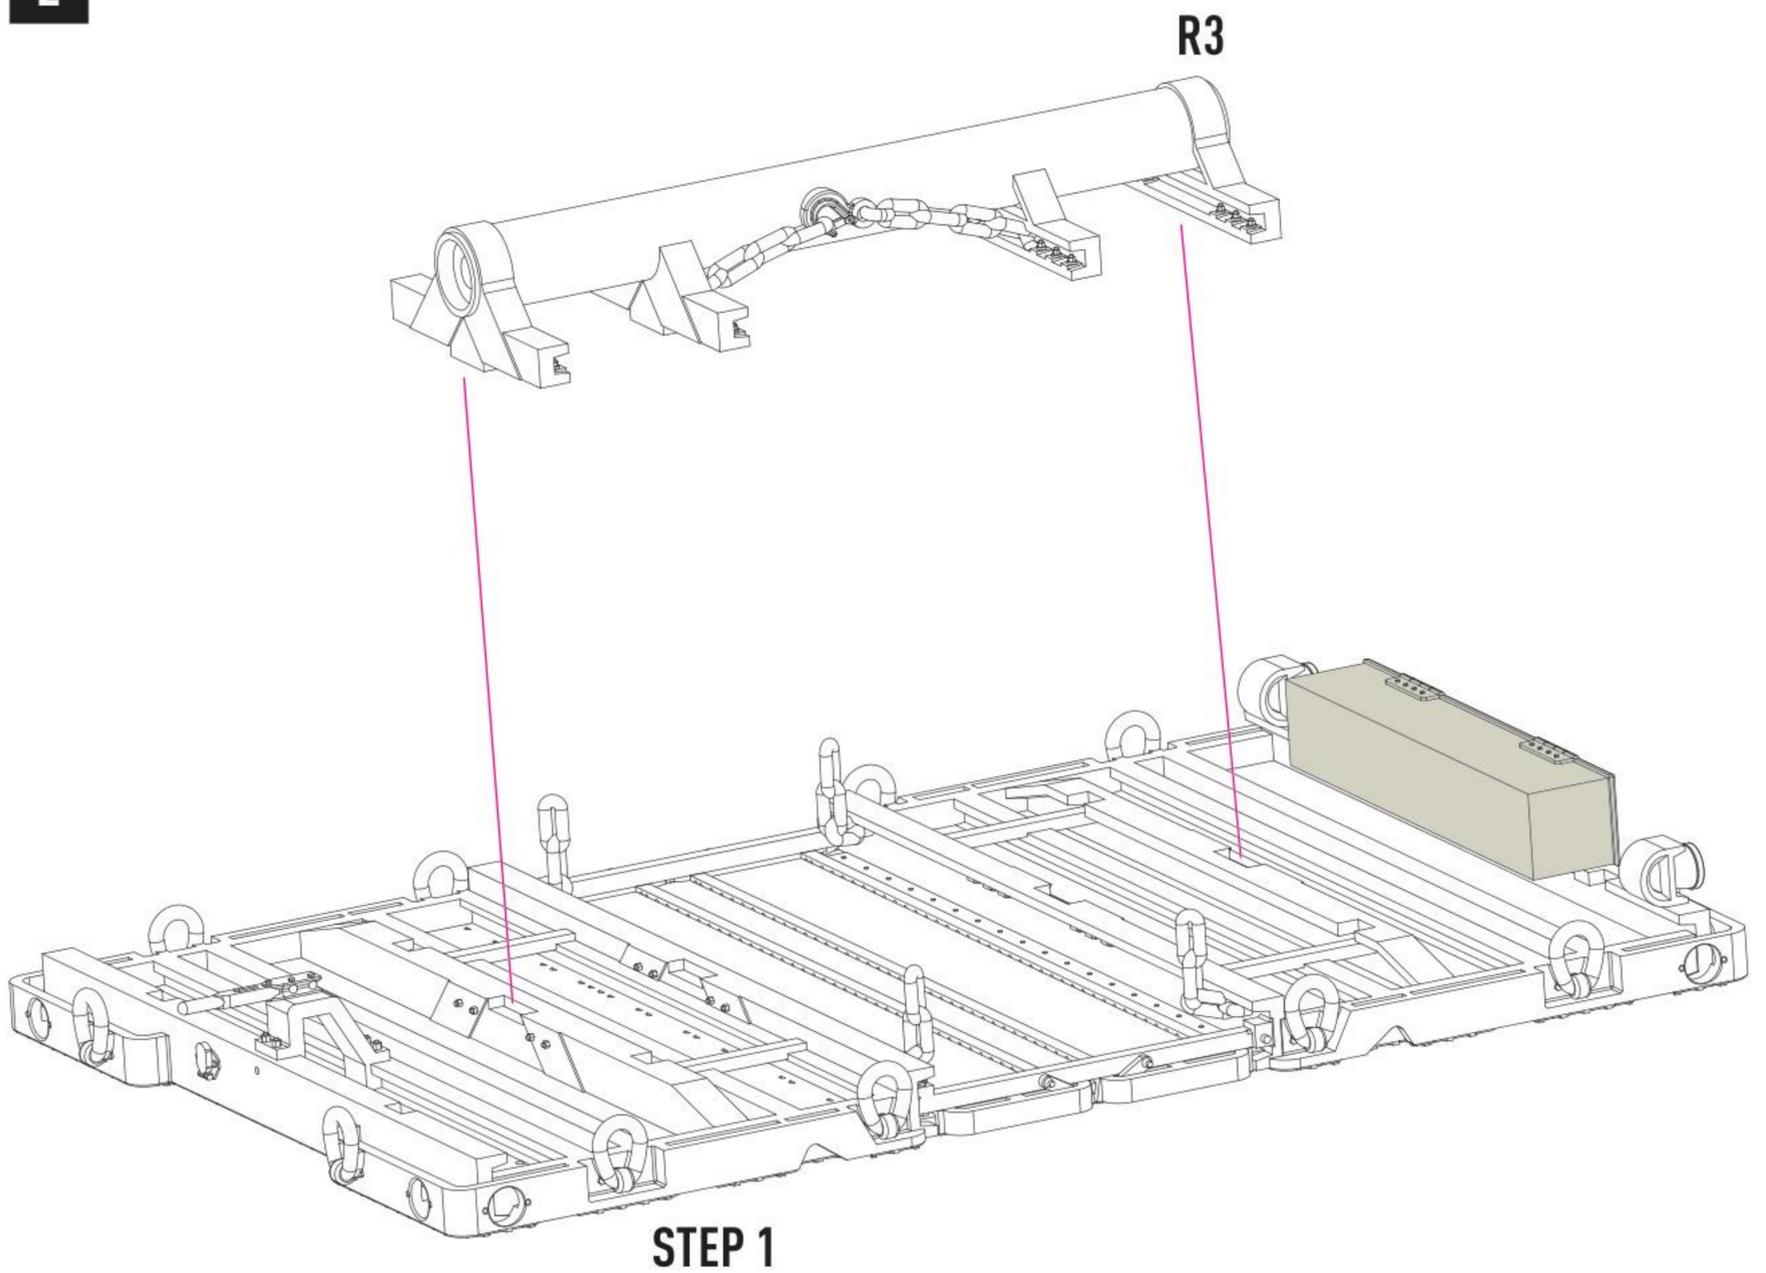

3

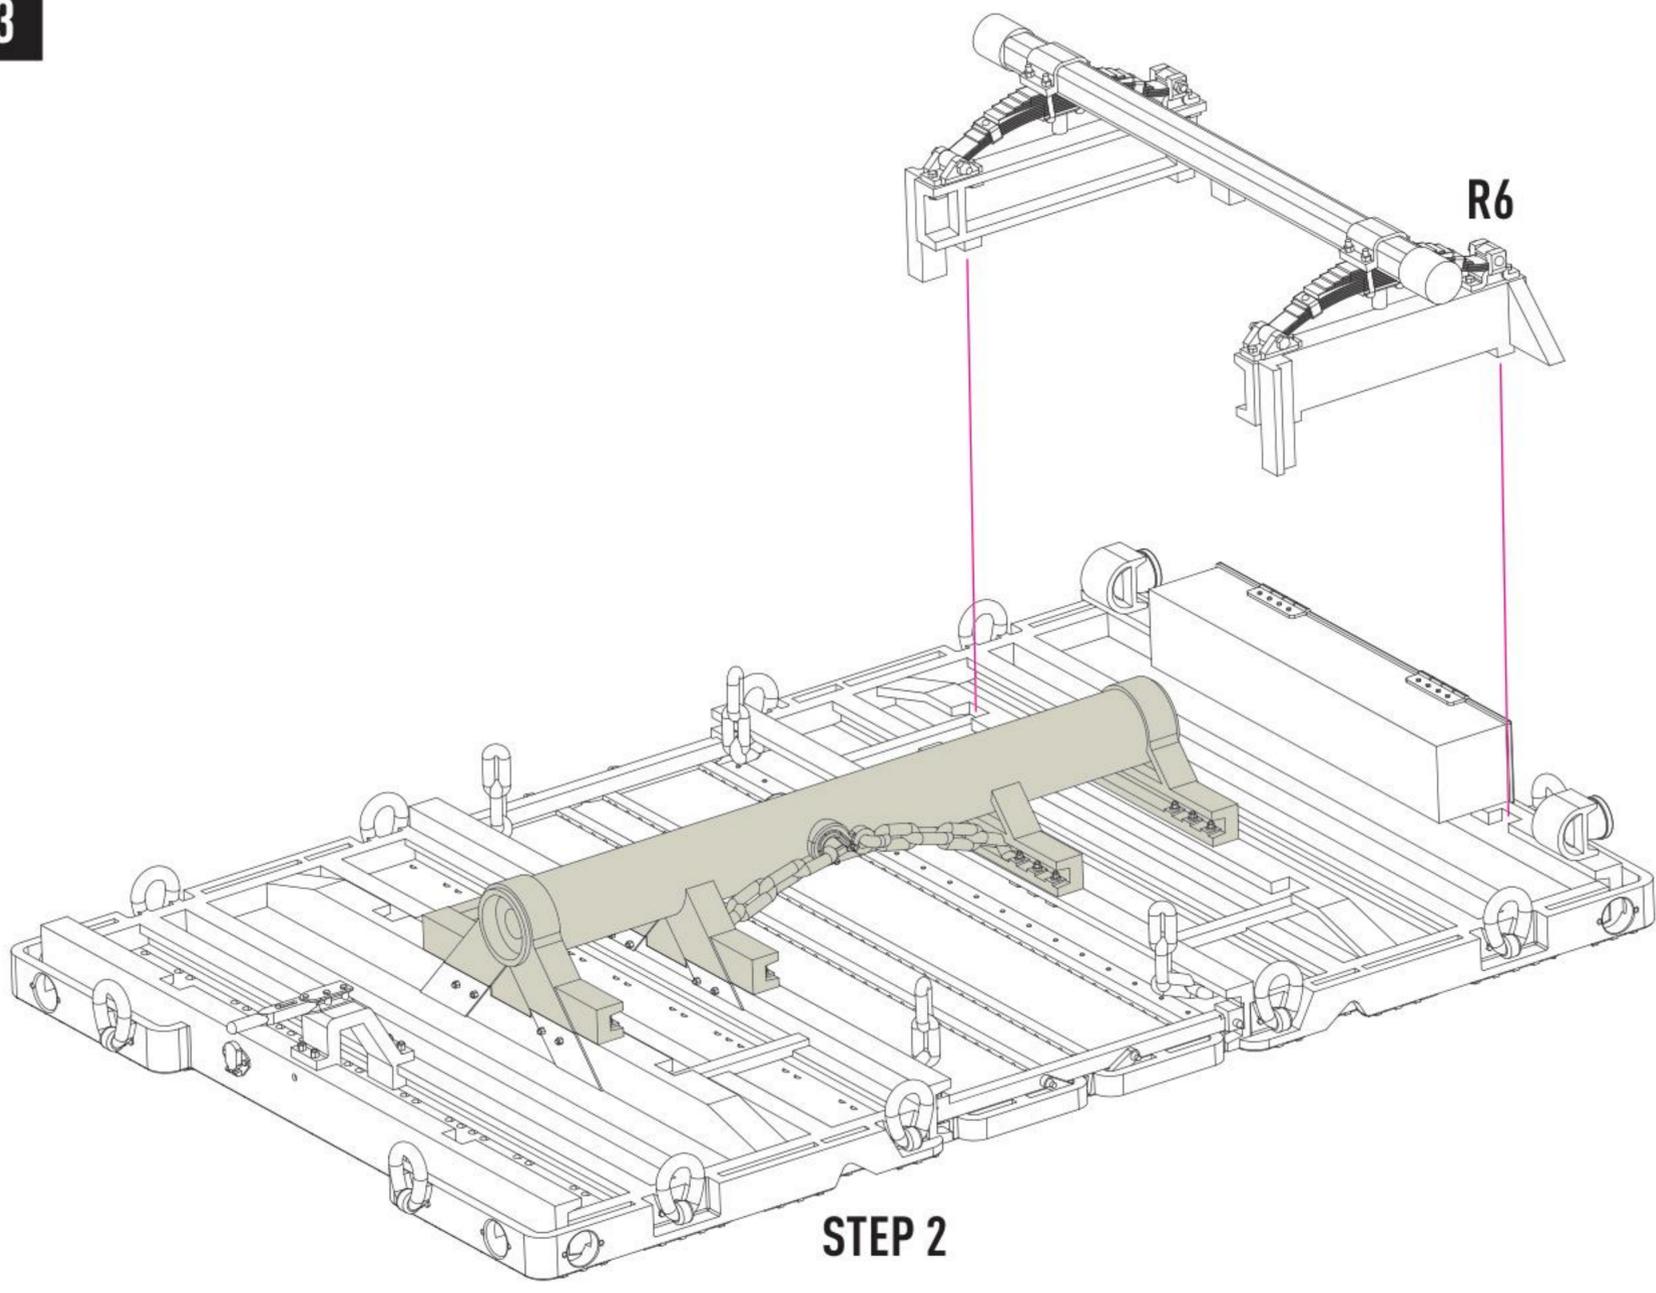


4

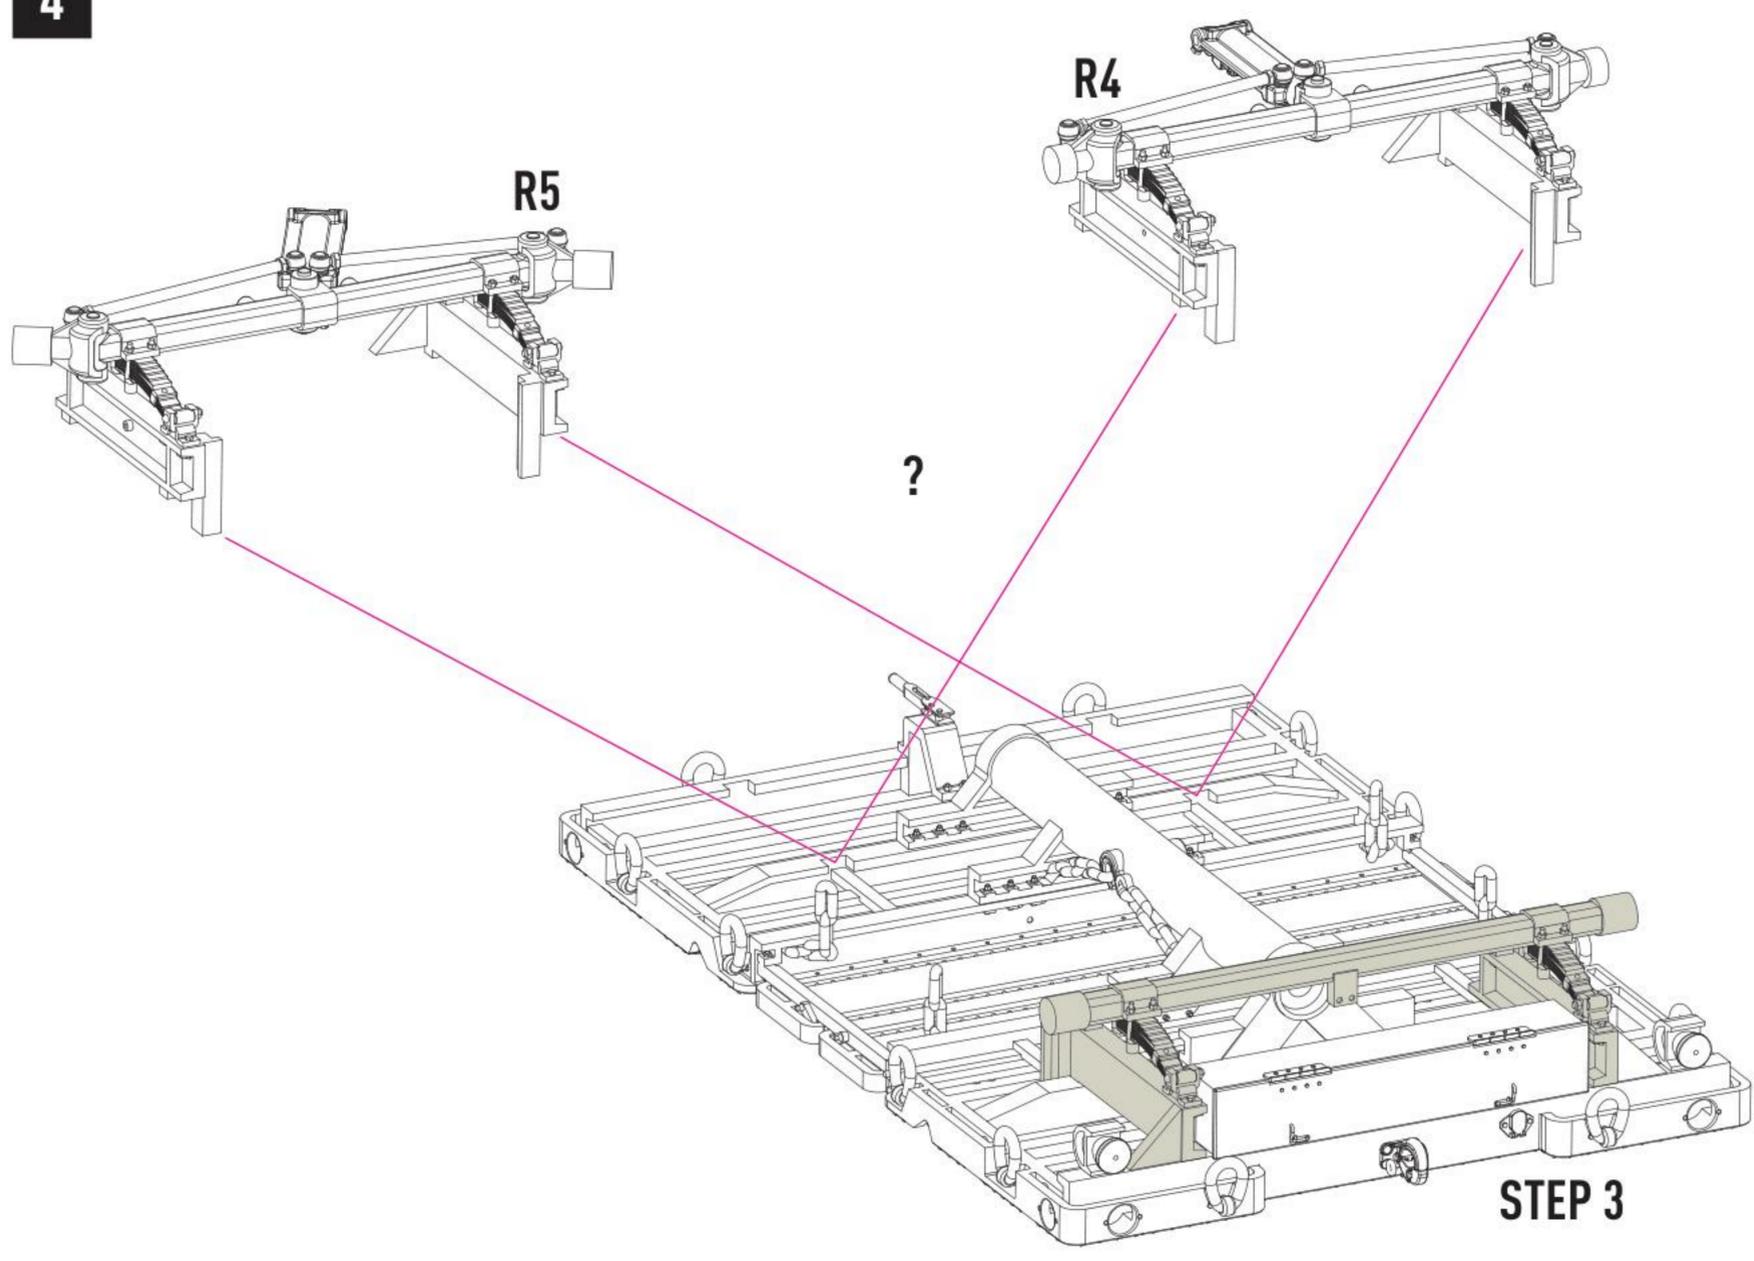


5

STEP 4

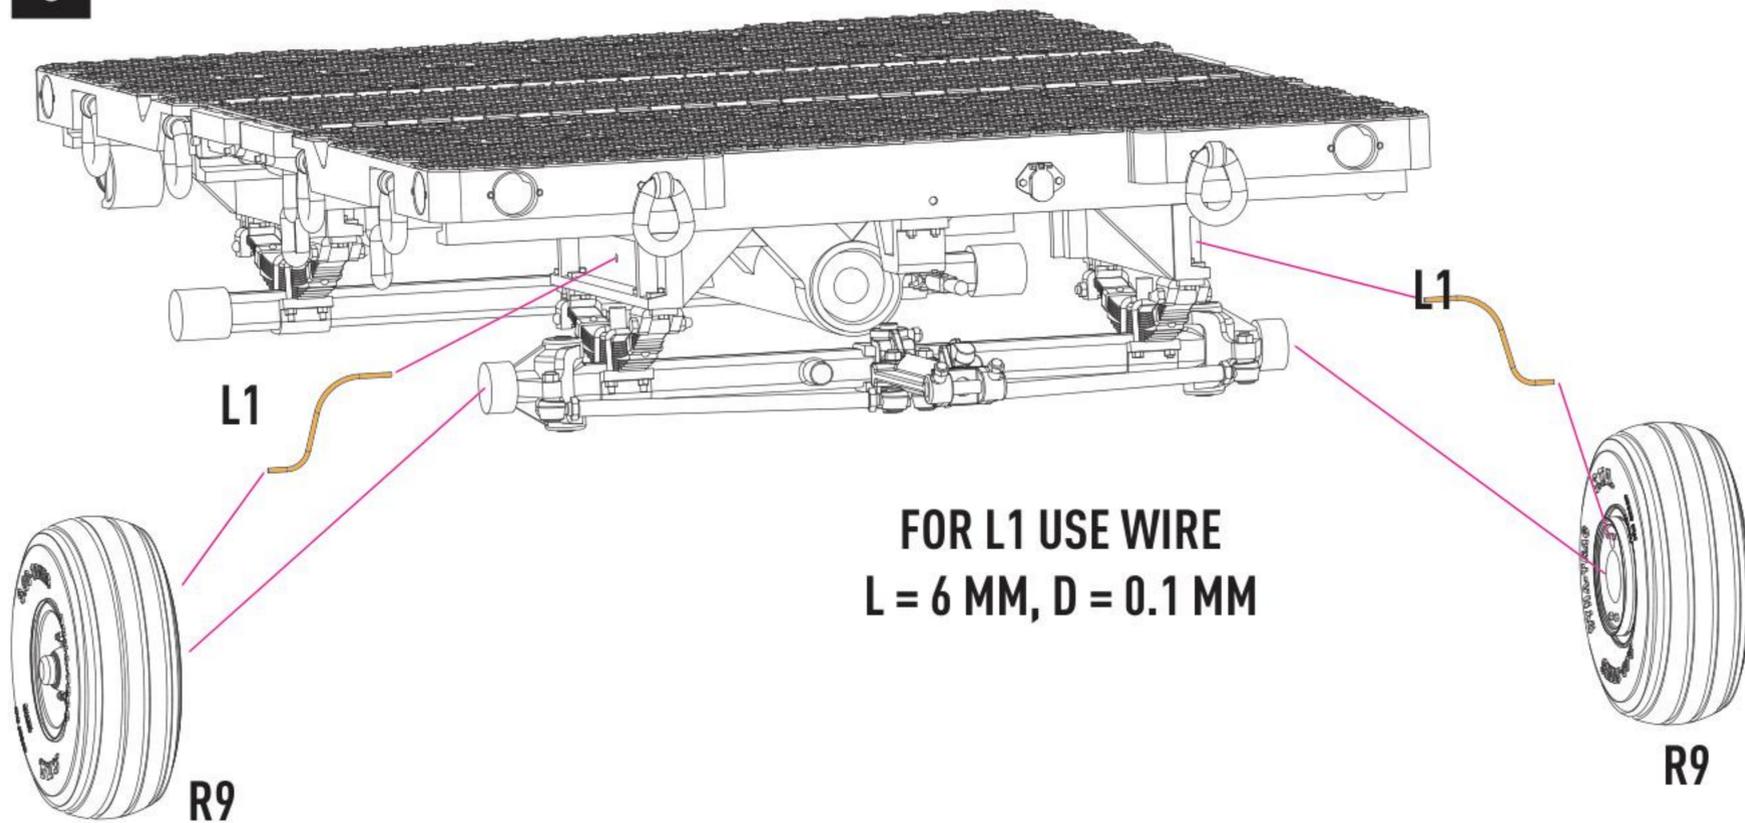


6

STEP 5


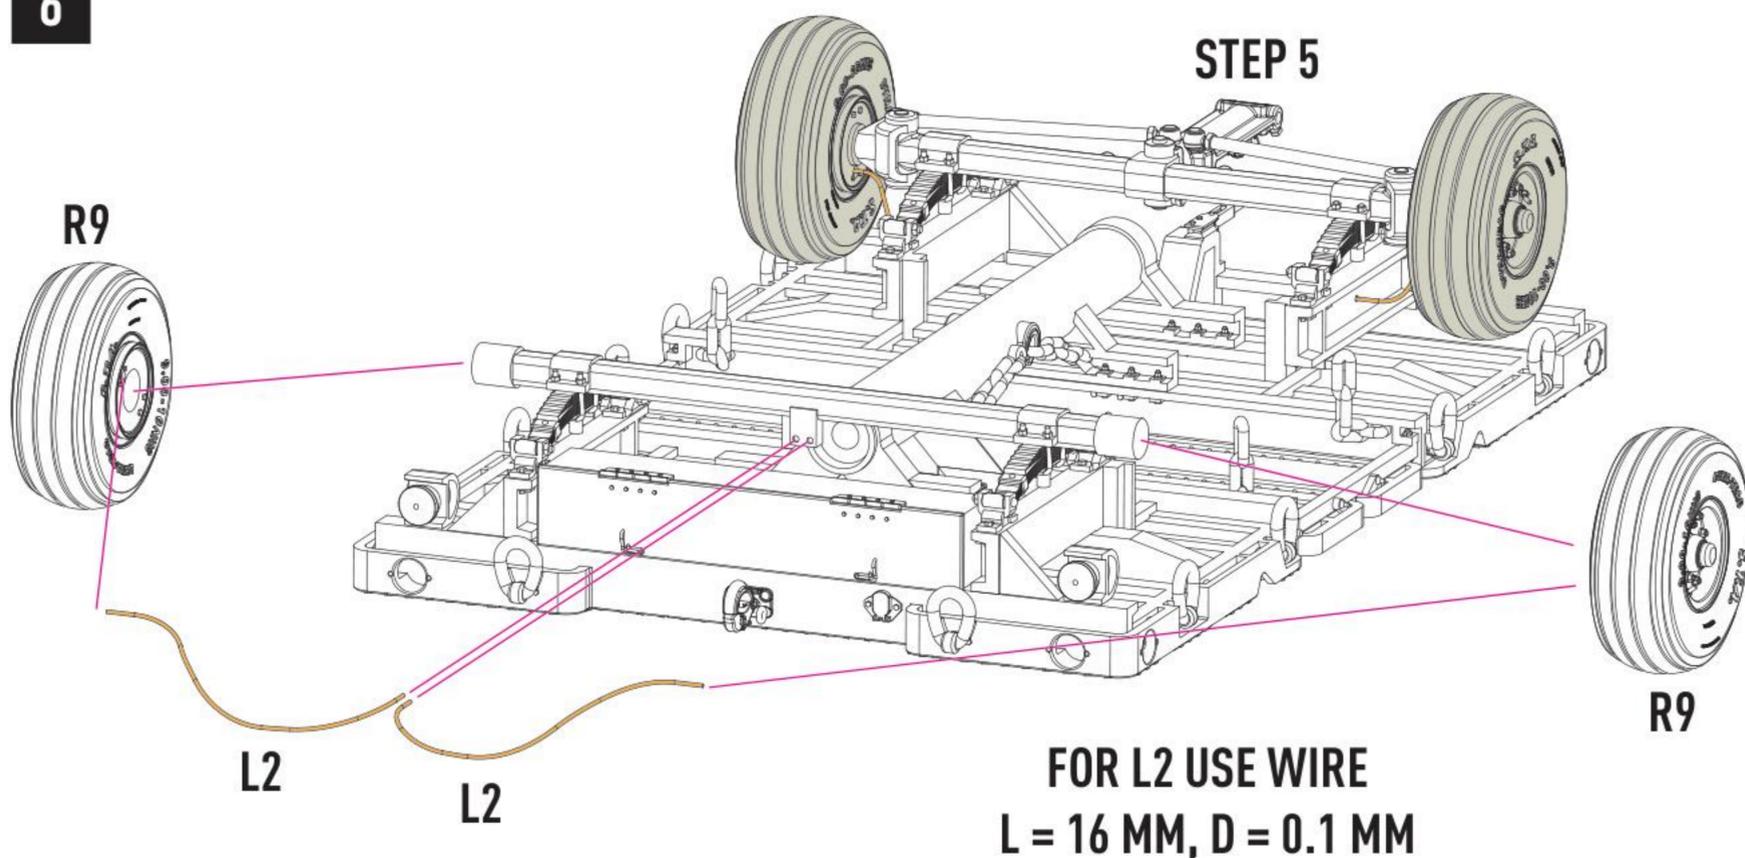


7

STEP 6

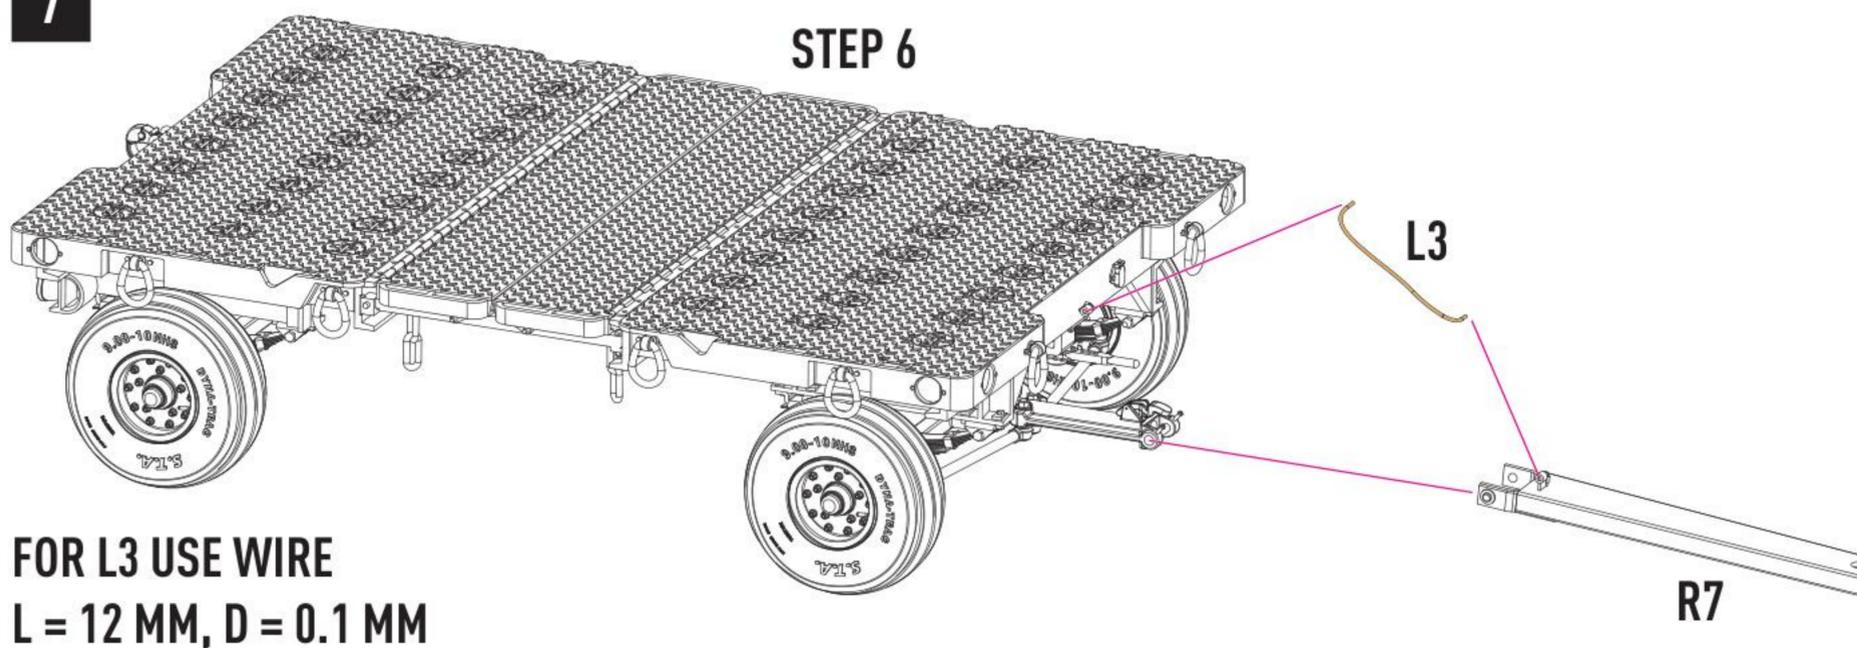


STEP 7

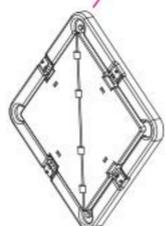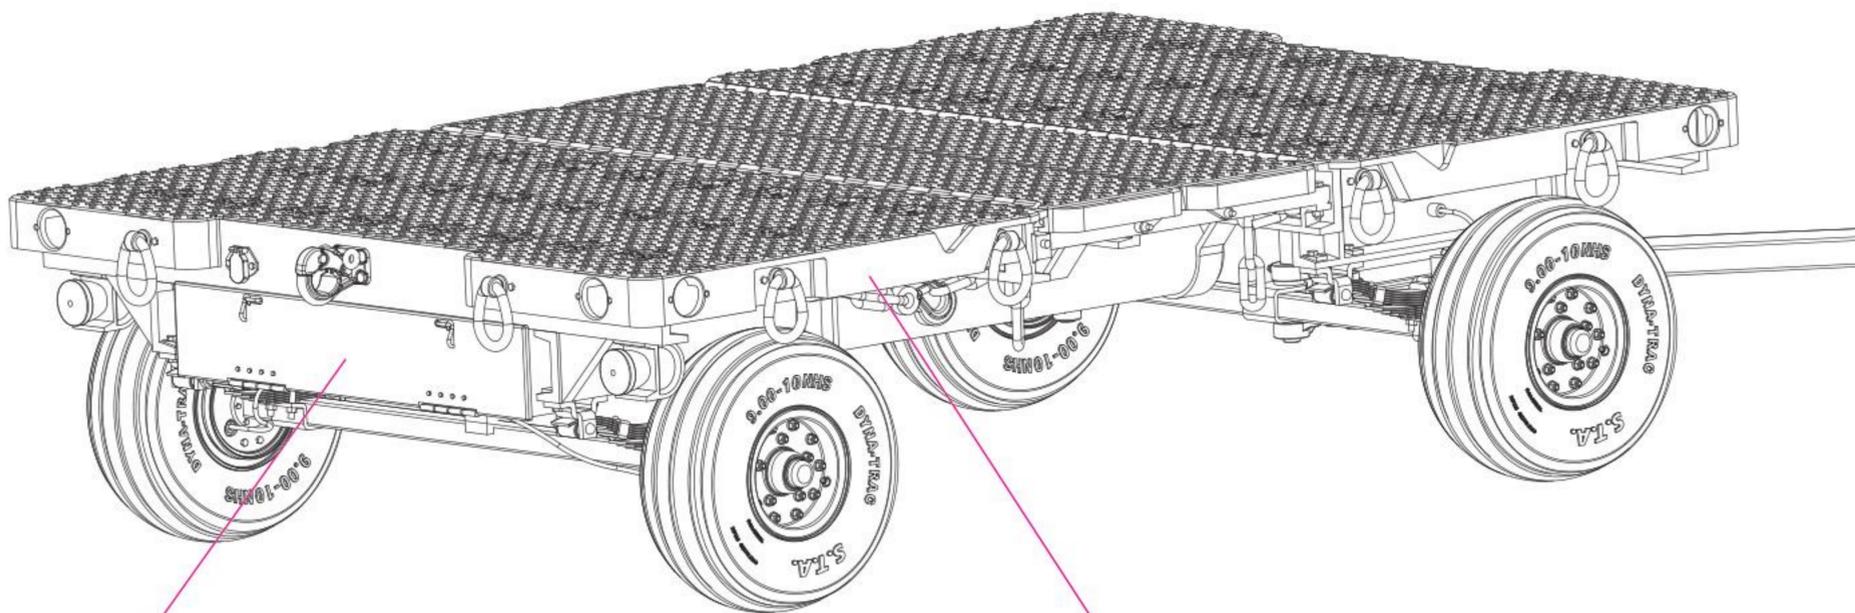



R16

WHEN INSTALLING PARTS,
REFER TO THE PROTOTYPE PHOTO

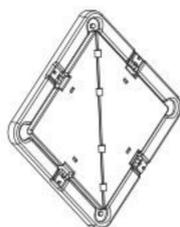


R16

STEP 8

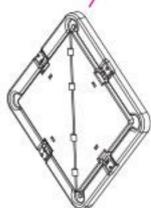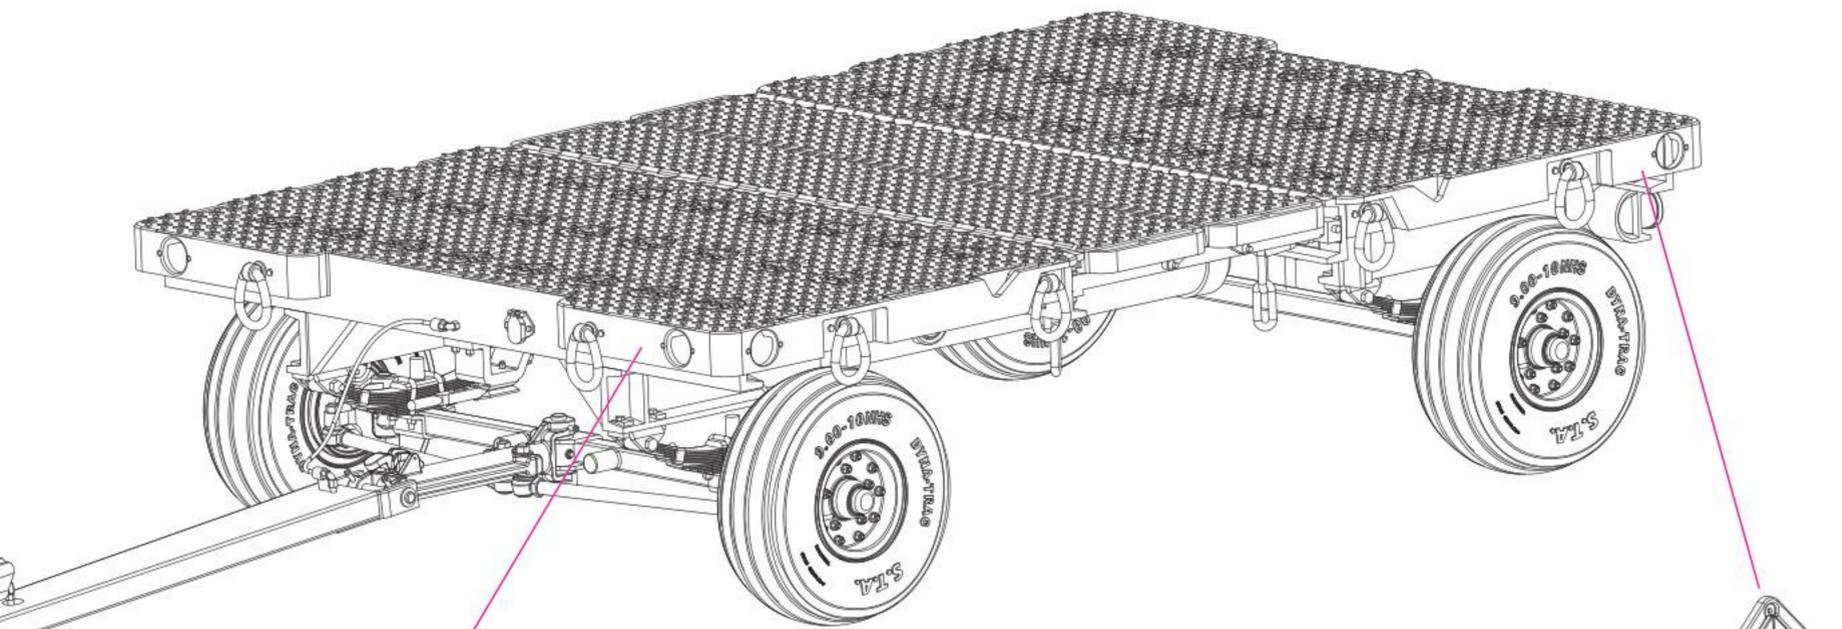


R16

WHEN INSTALLING PARTS,
REFER TO THE PROTOTYPE PHOTO

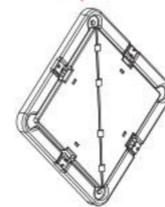

R16

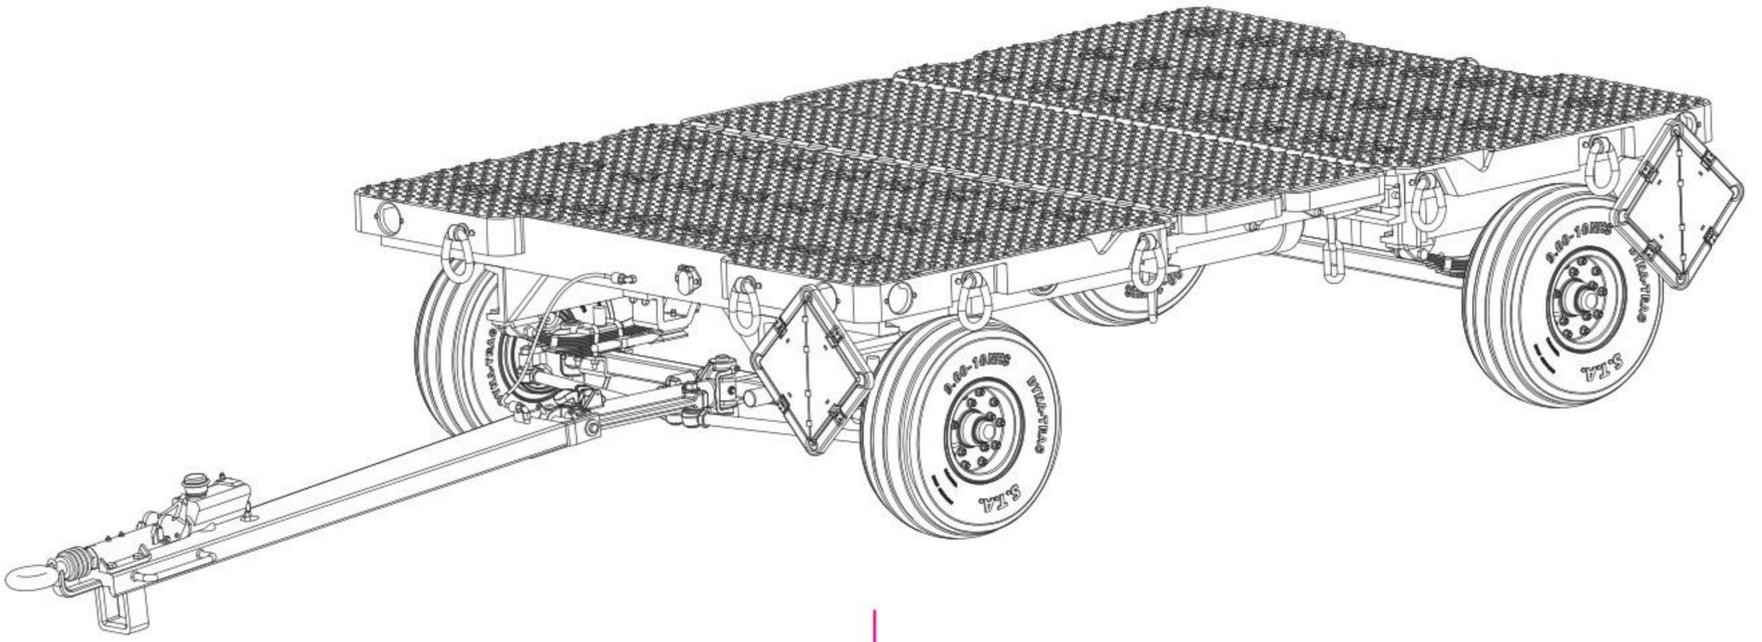

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua





RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official

 youtube.com/@reskit-usmd

DECAL INSTRUCTION

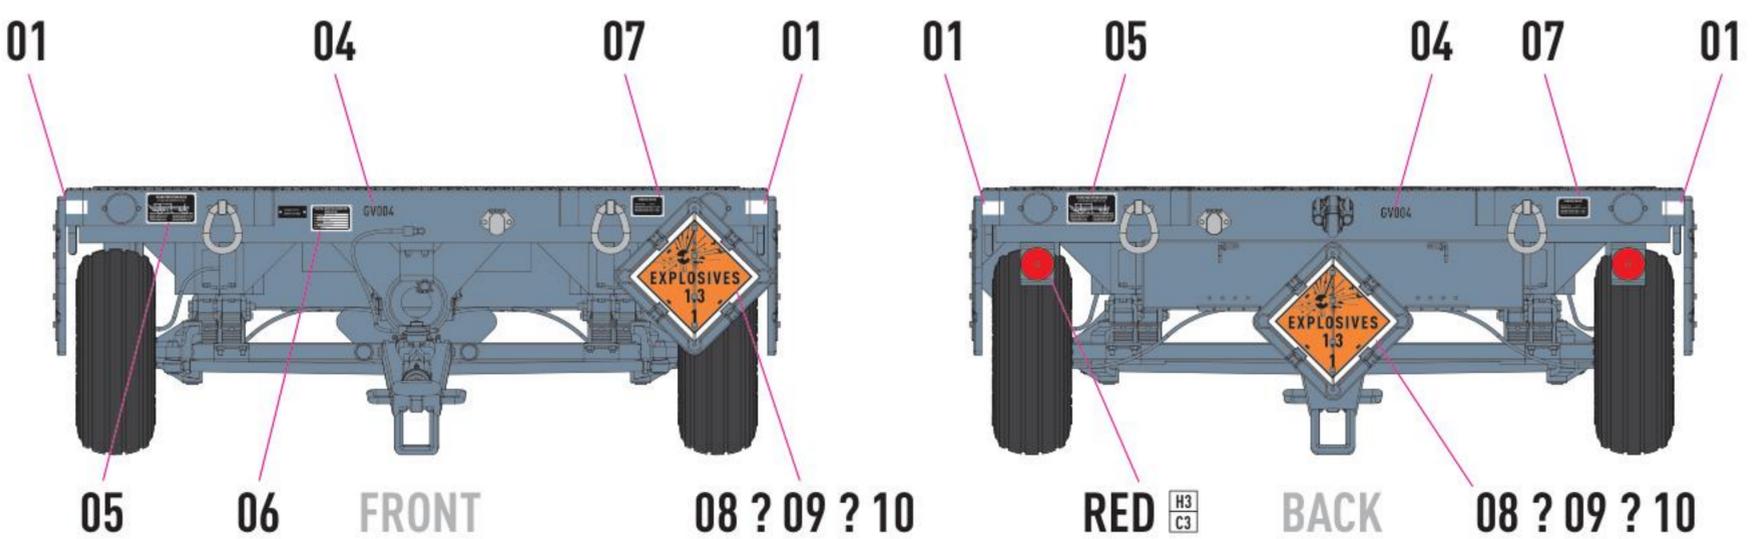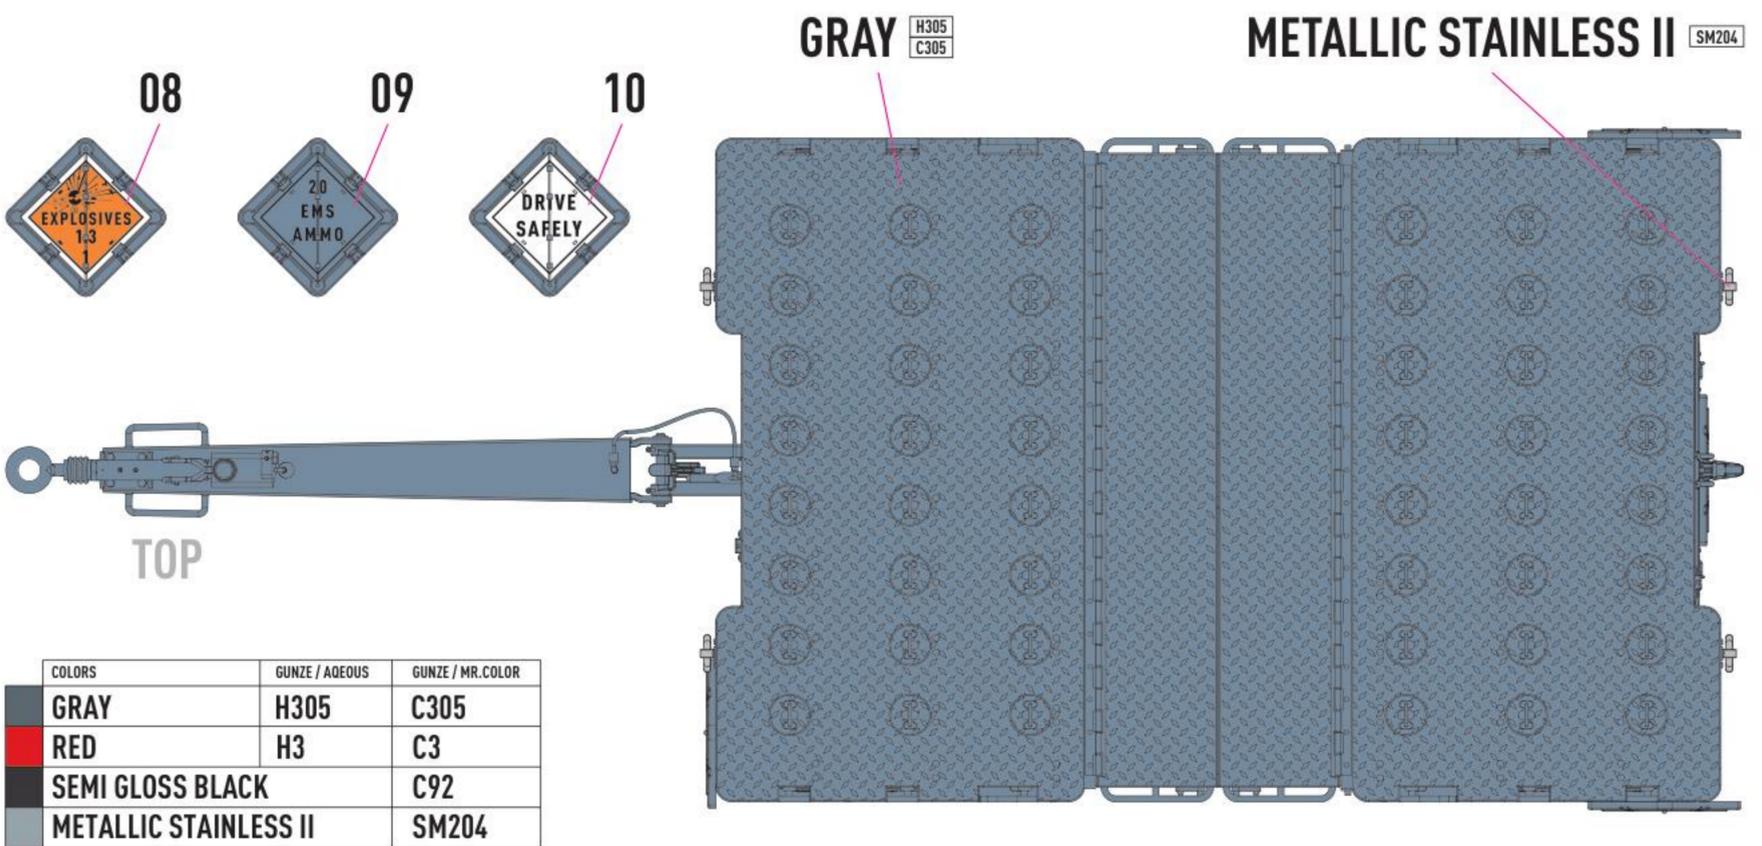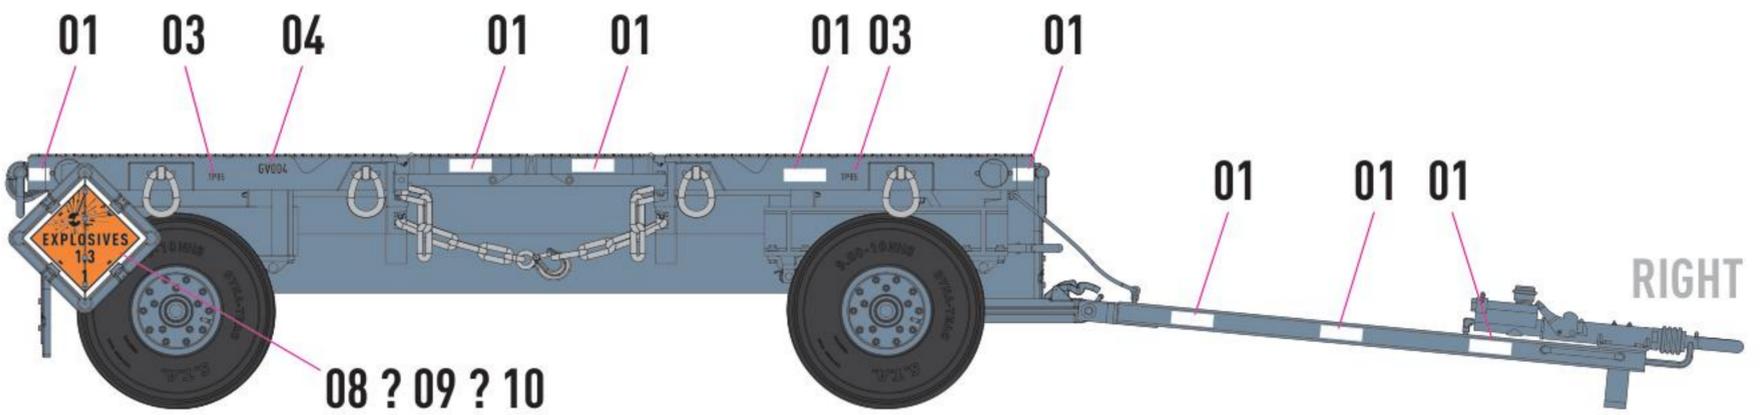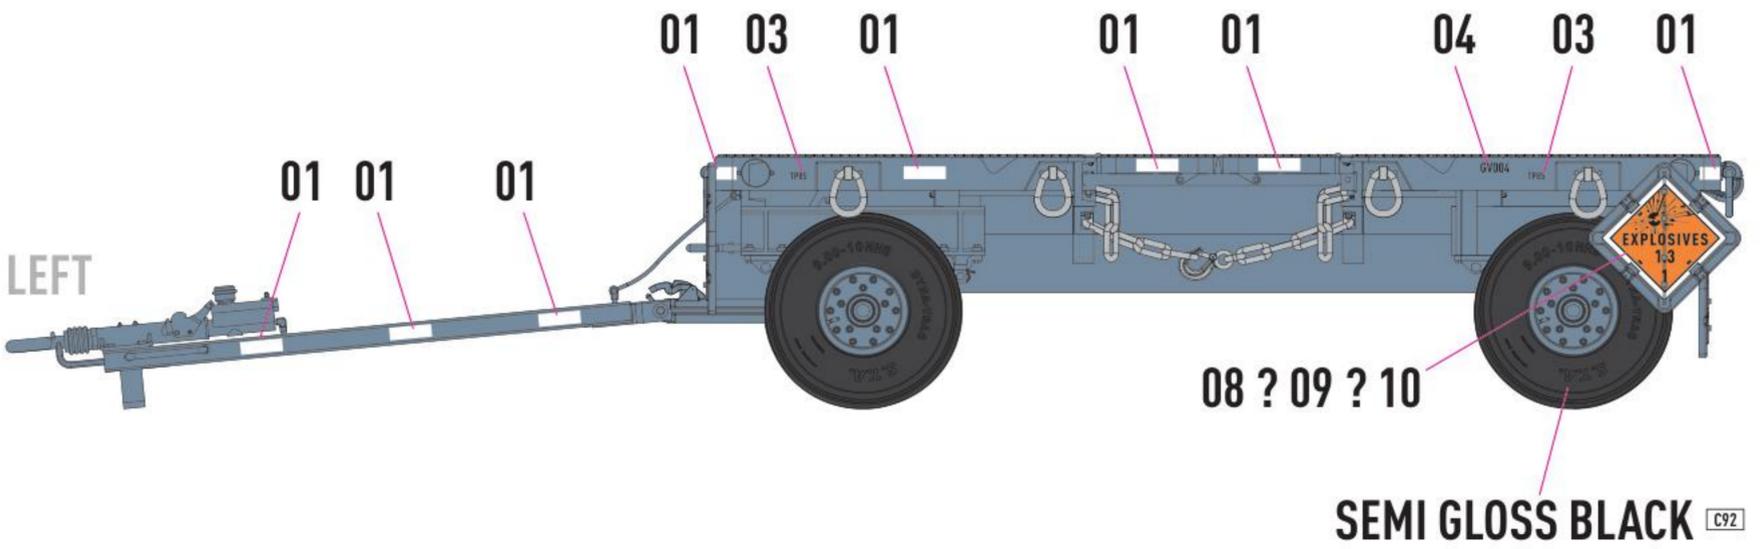

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua