



DETAILS AFTER REMOVAL FROM SUPPORTS

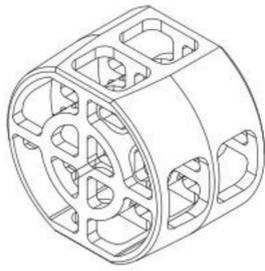


R2

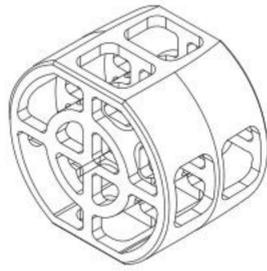


R4


 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

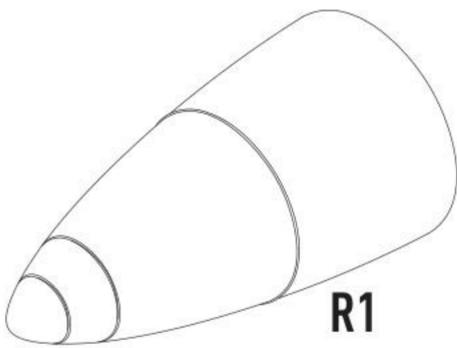

R1

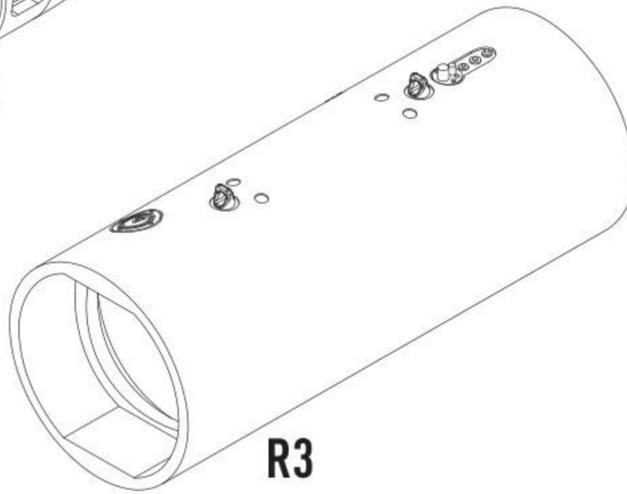






R3

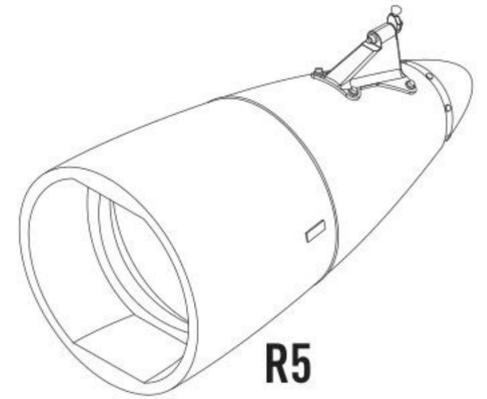

R5

1

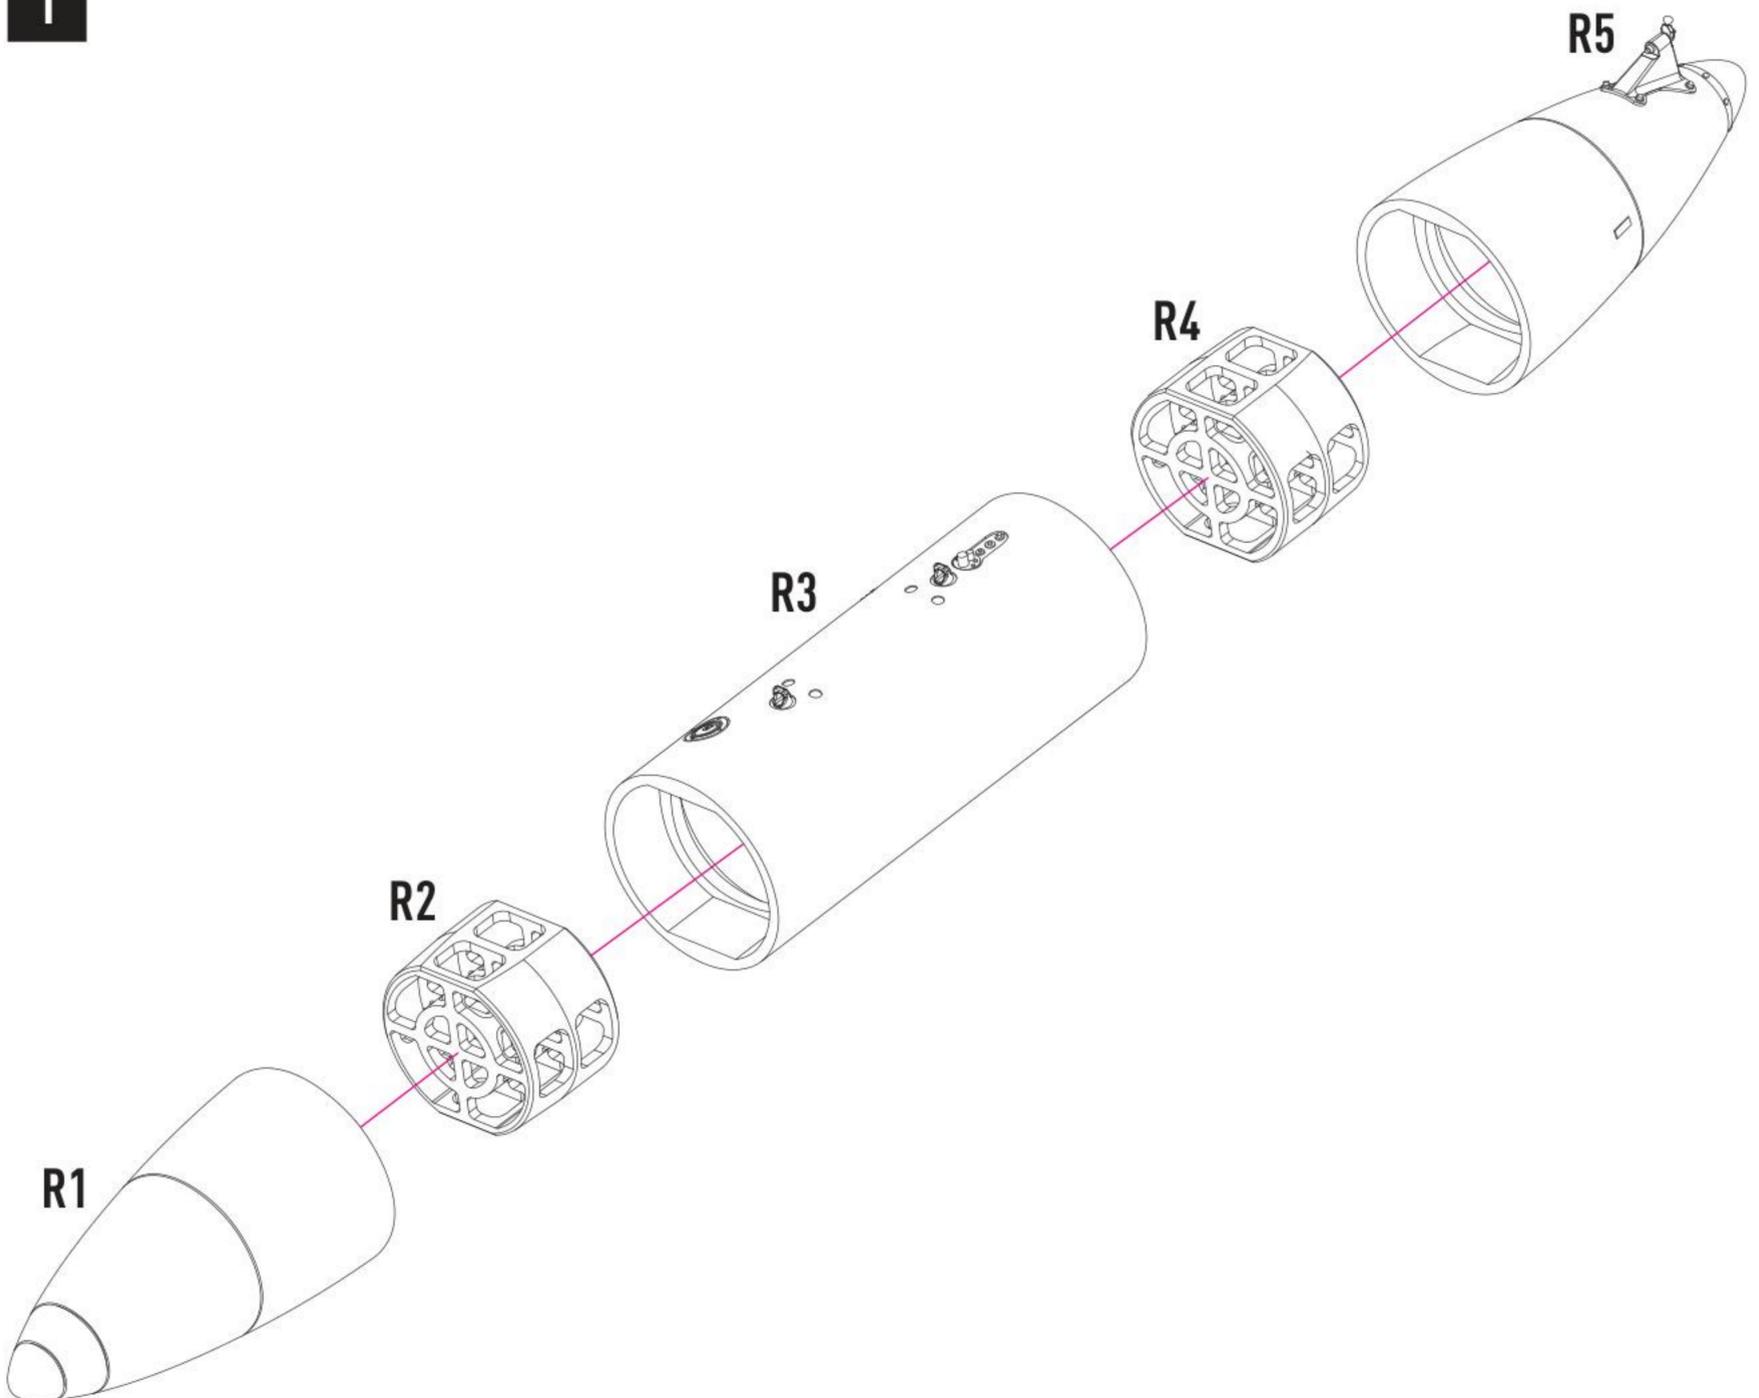

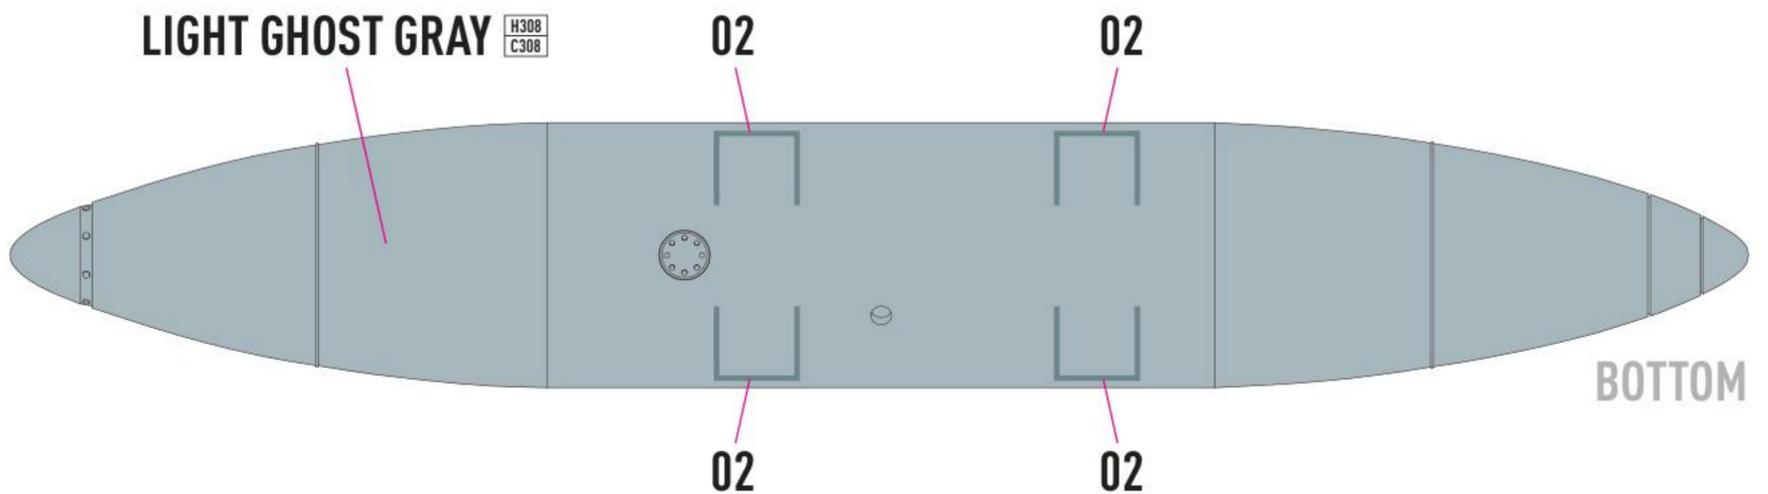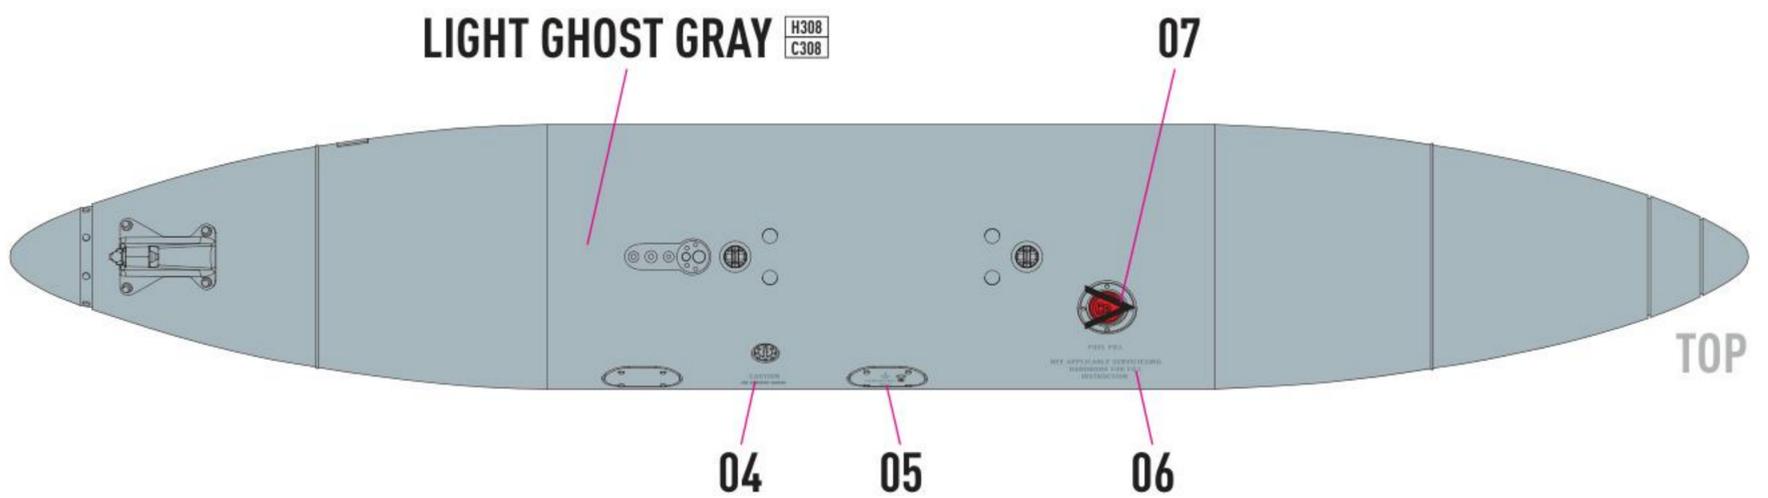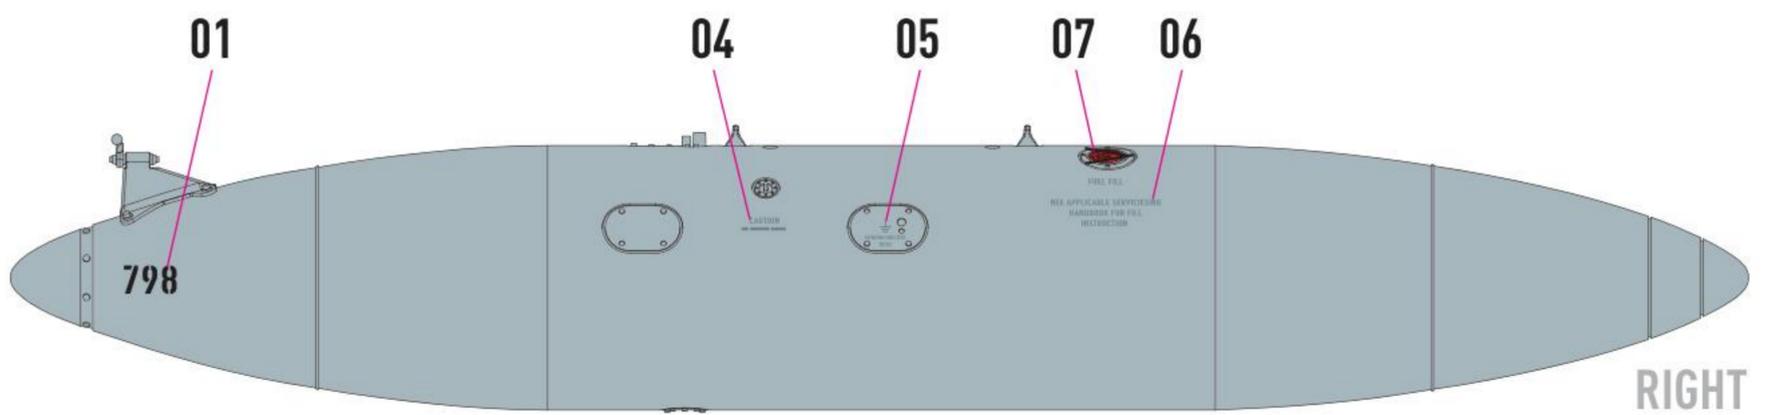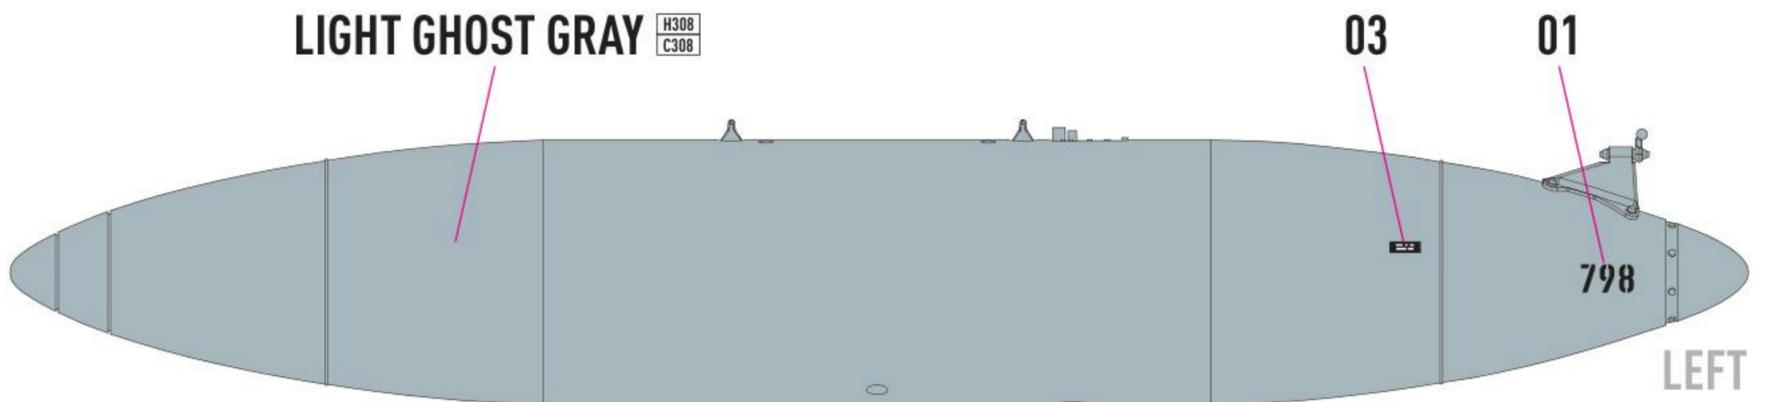

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
LIGHT GHOST GRAY	H308	C308