

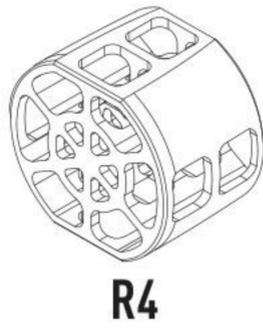
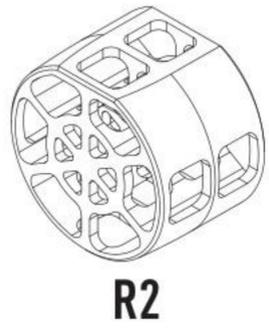
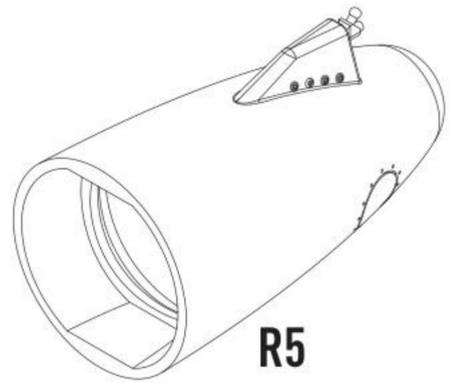



DETAILS AFTER REMOVAL FROM SUPPORTS




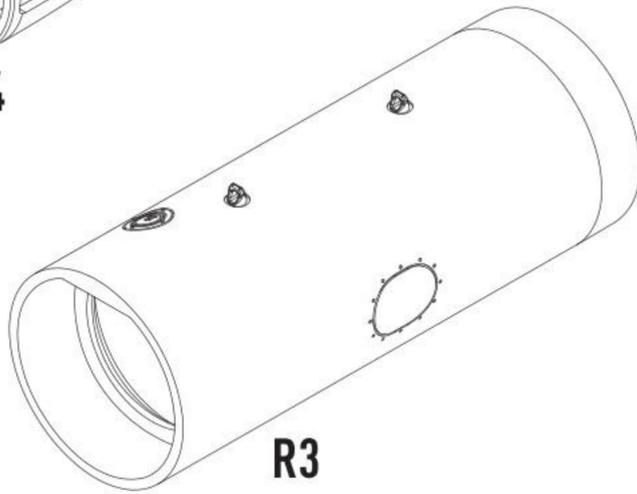


 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

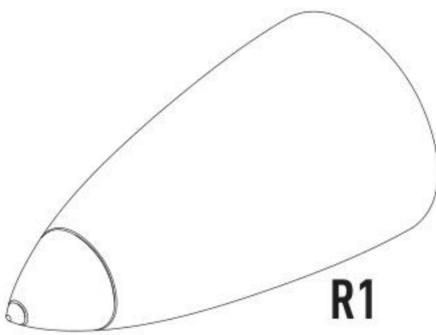

1

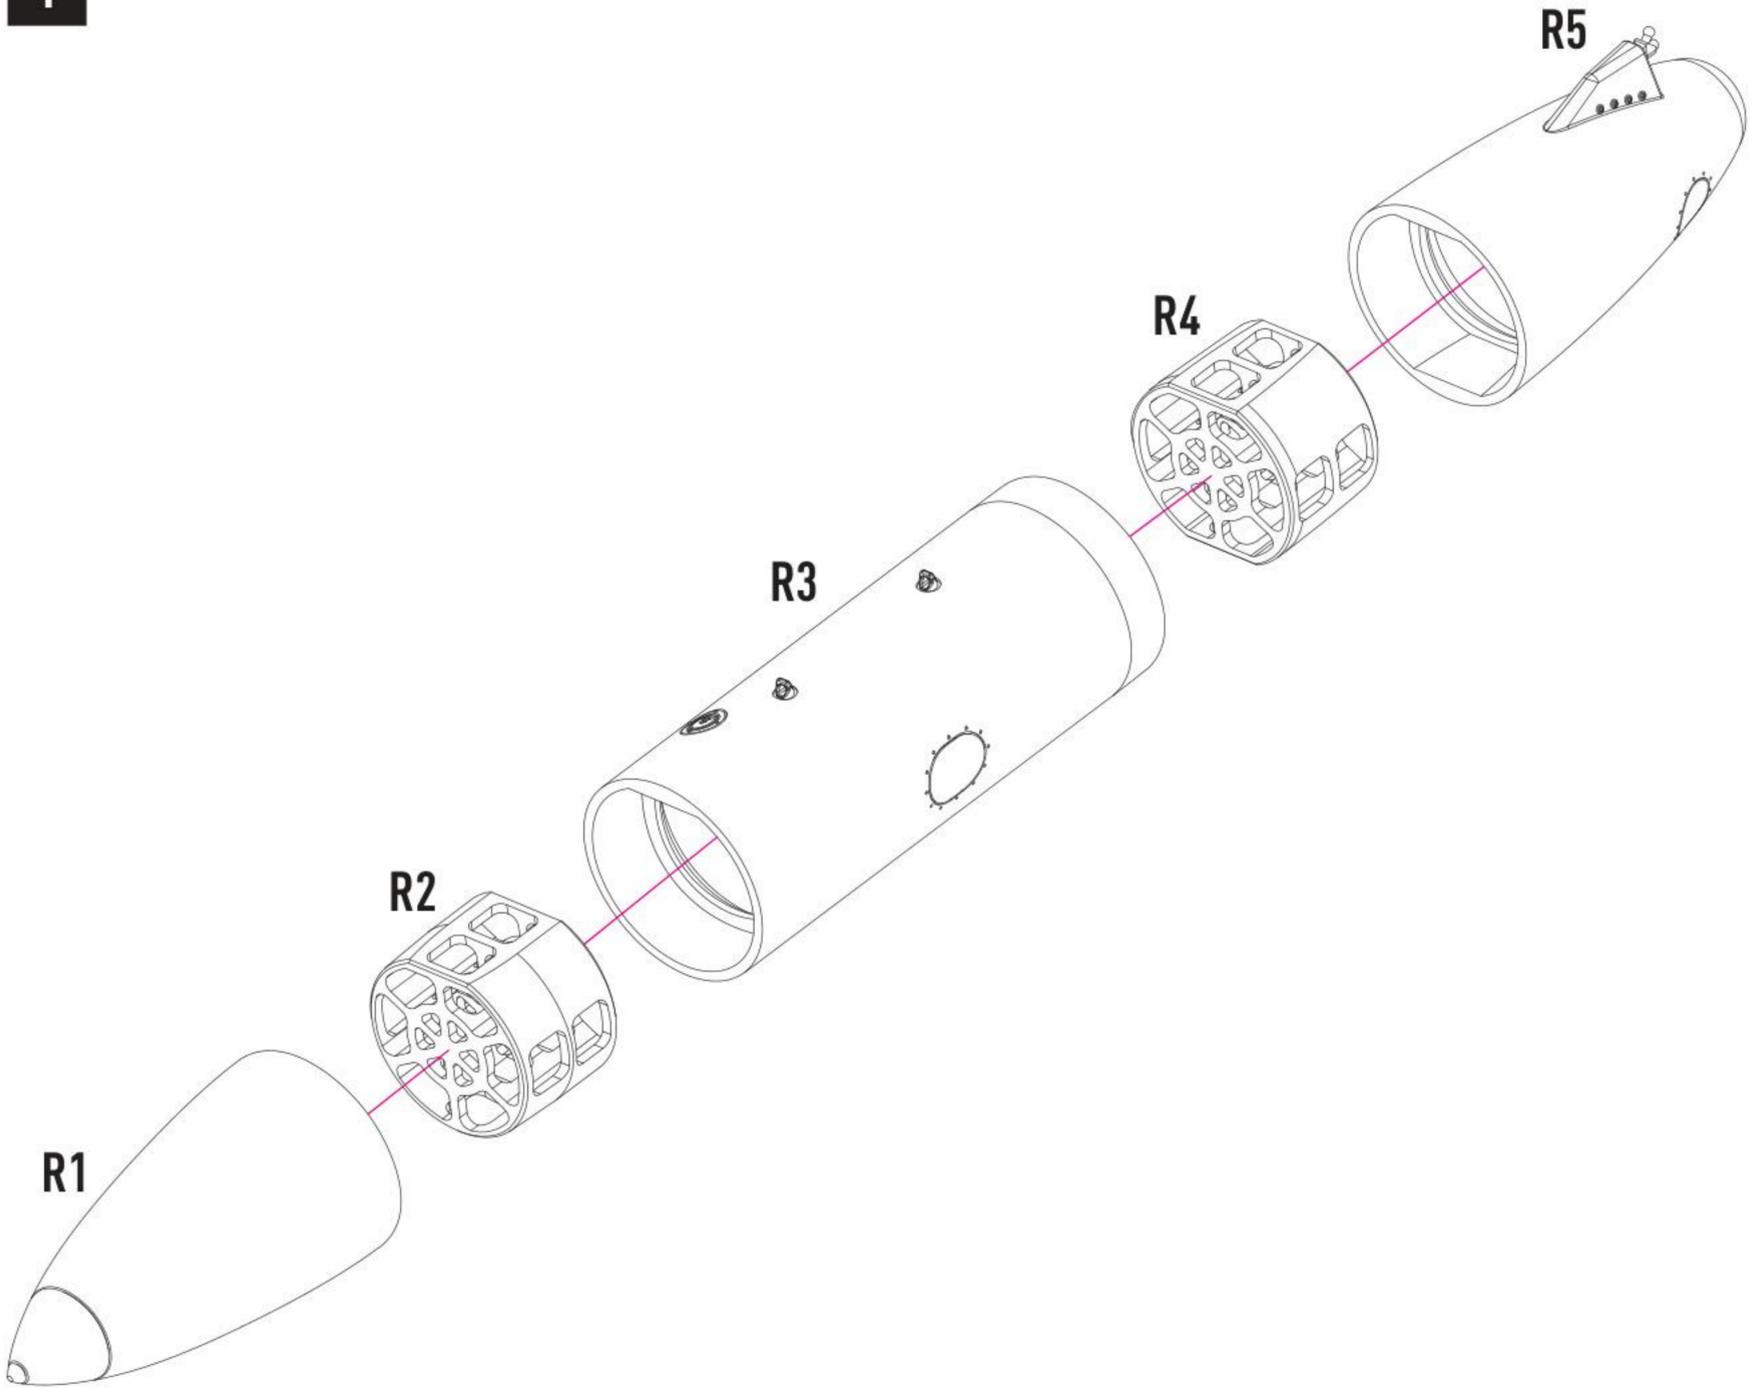

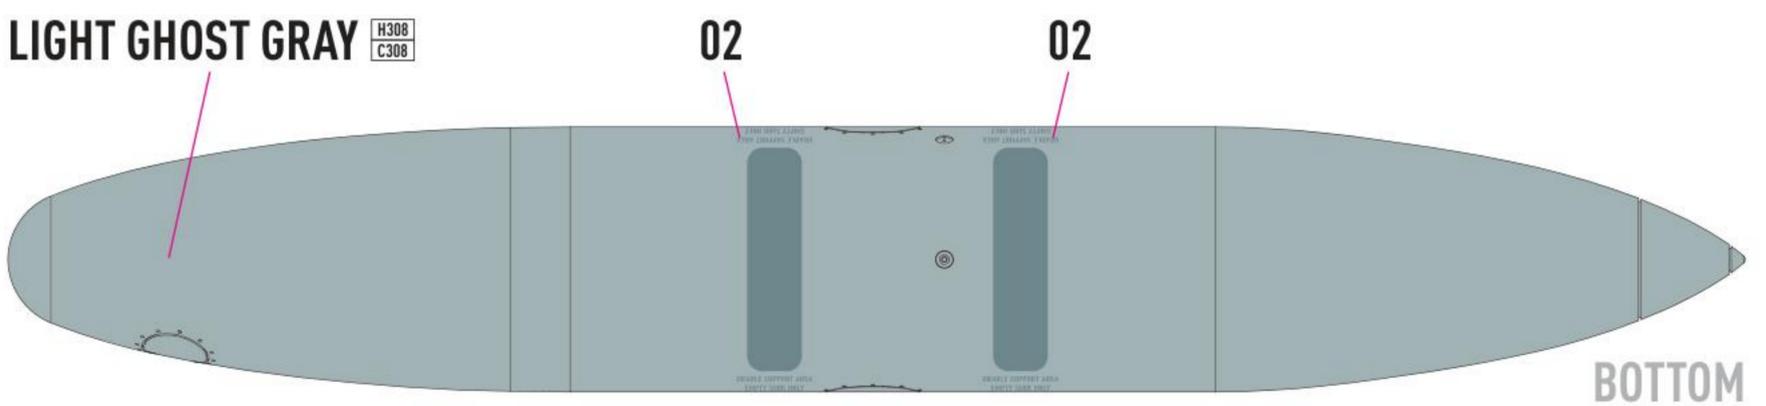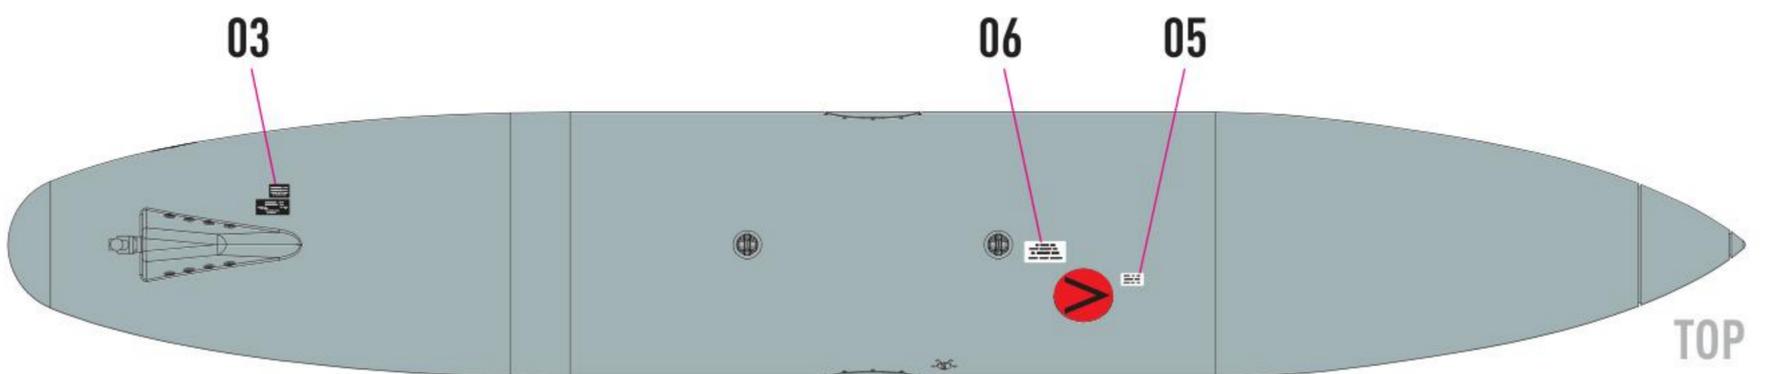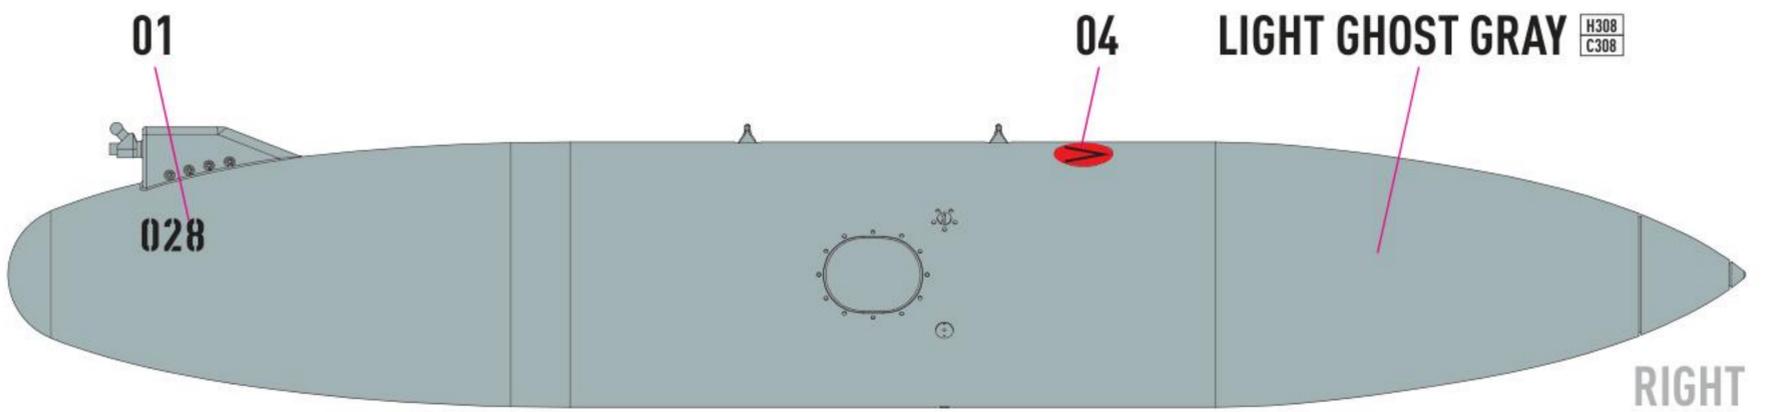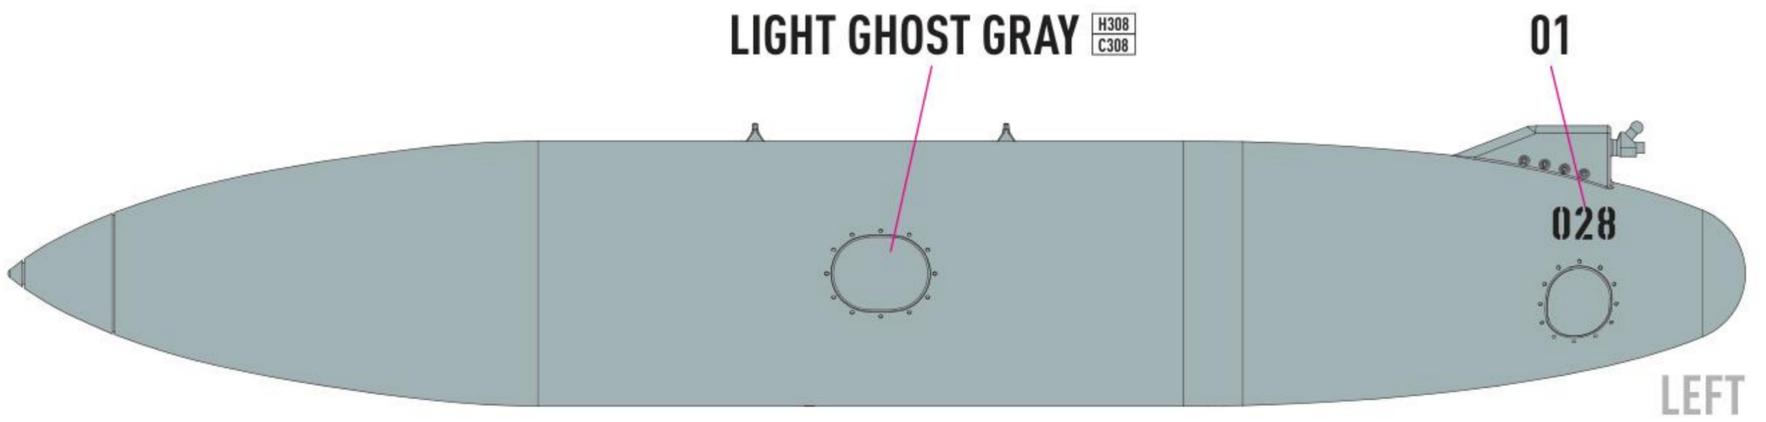

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
LIGHT GHOST GRAY	H308	C308