


F-14 (A, B, D) "TOMCAT" LANDING GEARS FOR TRUMPETER KIT

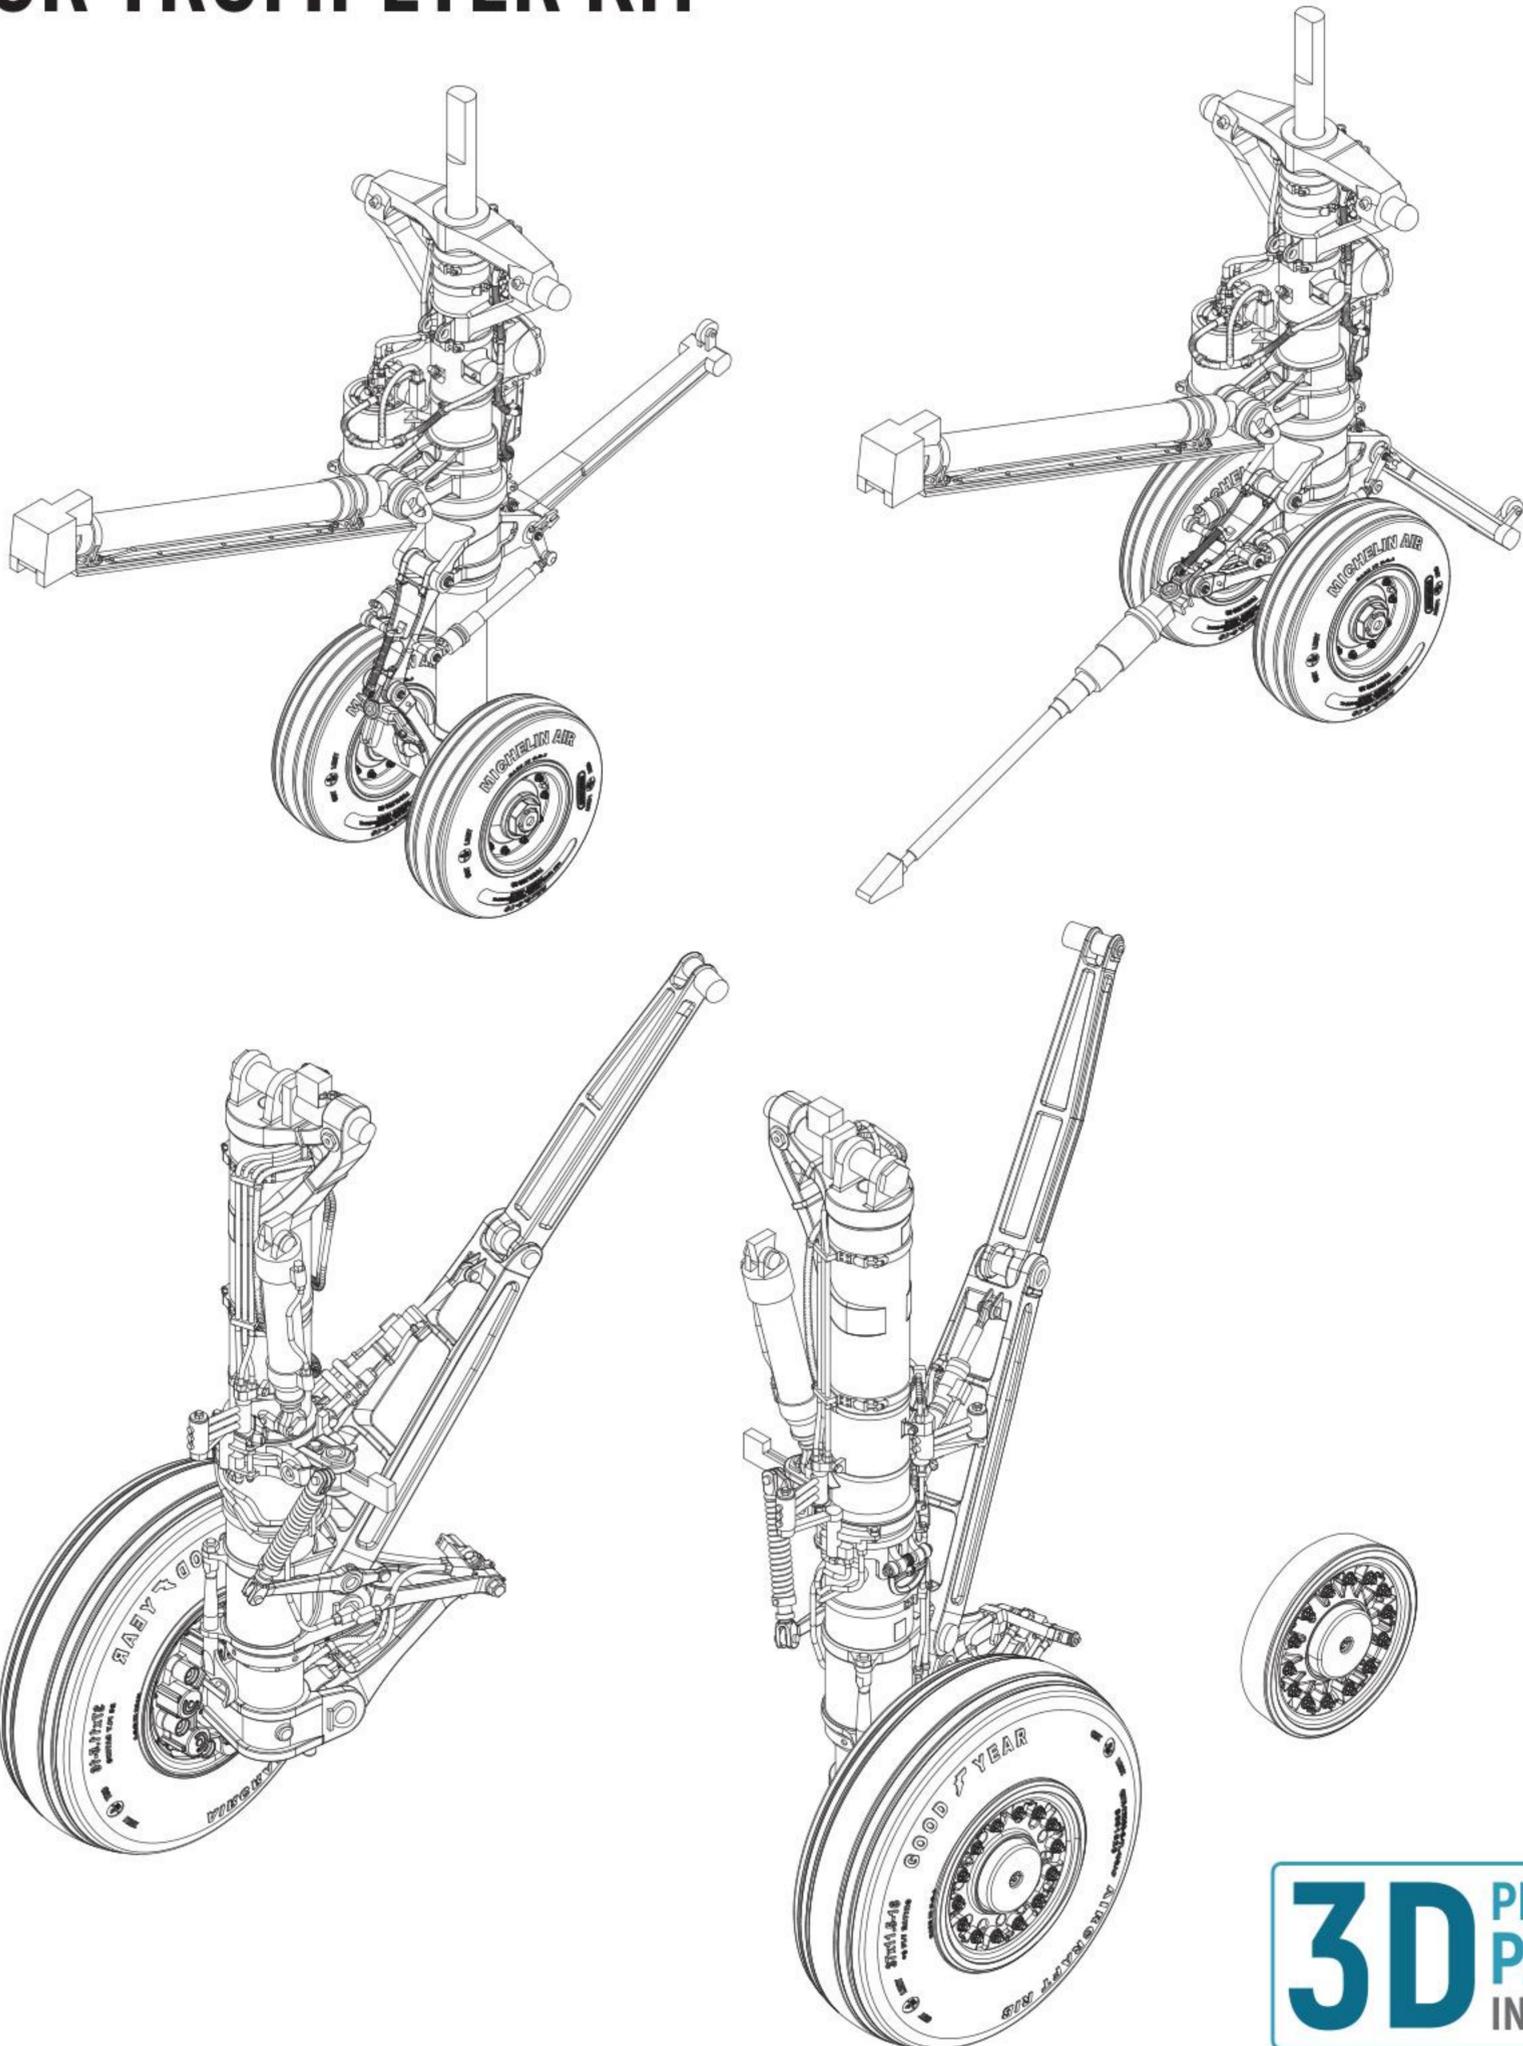

3D PRINTED
PARTS
INCLUDED

CUT




F1




R1


R2

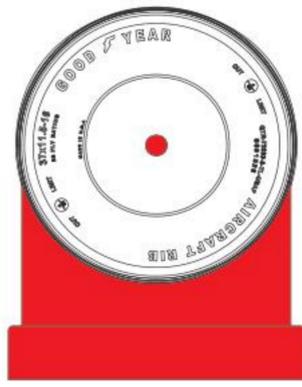

R3

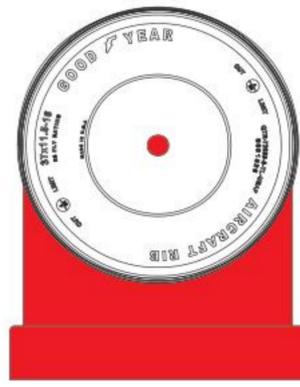

R4

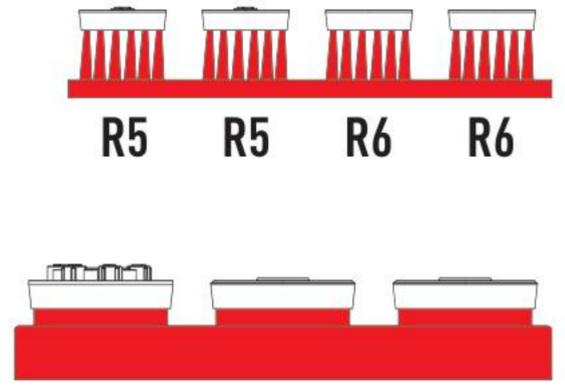

R5

R5


R6

R6


R7

R17



R18

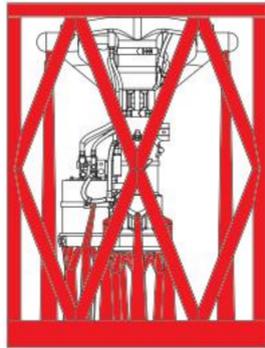

R8

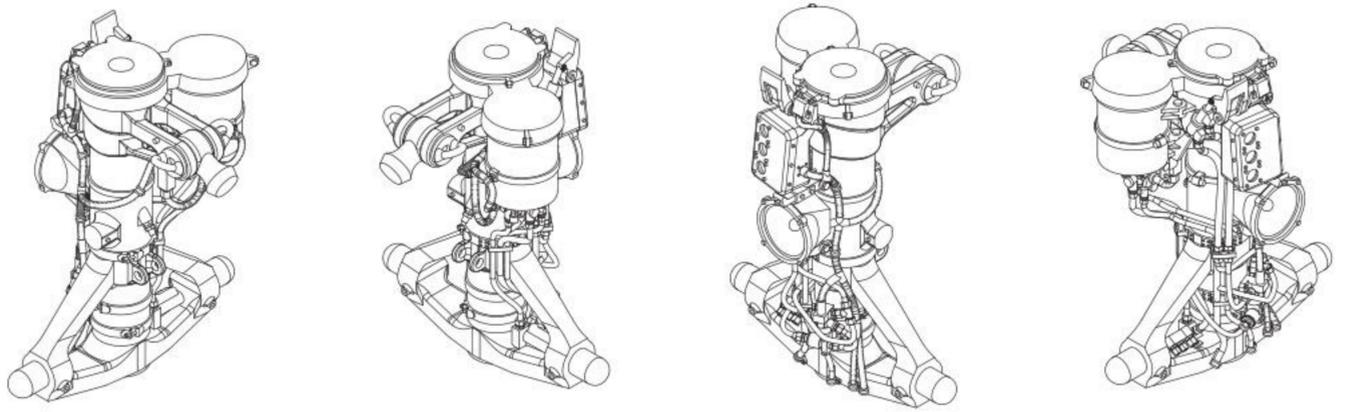

R9 R16

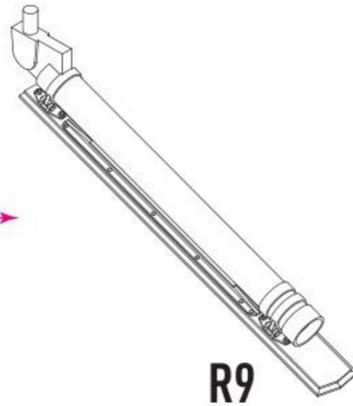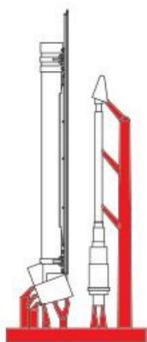


R9





R16

USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

REMOVE PROTECTIVE COVER

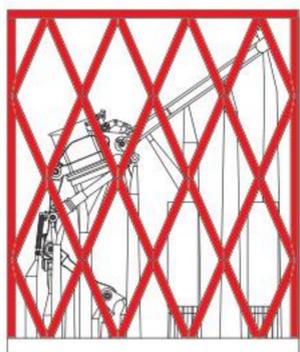

R10 R12

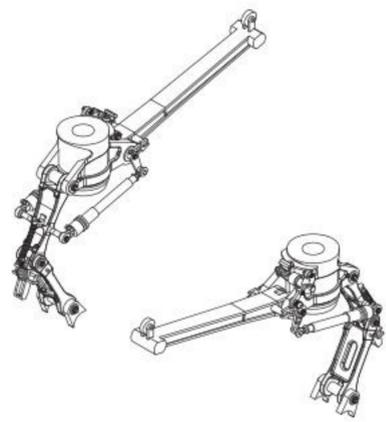
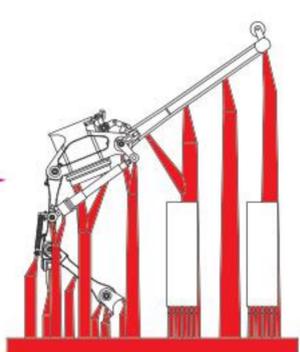


R12

R10



R11 R19

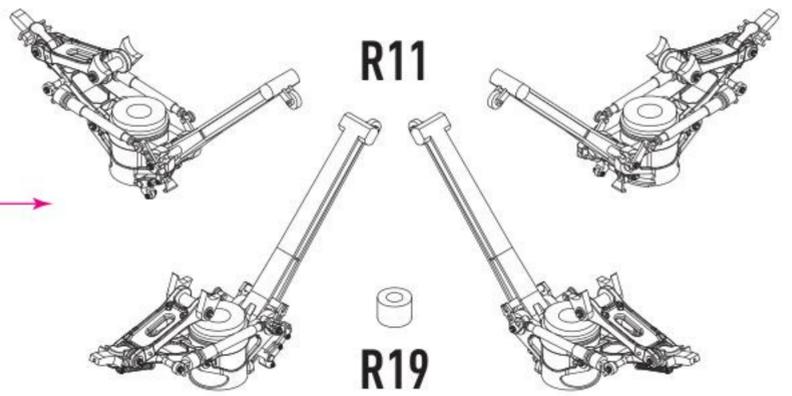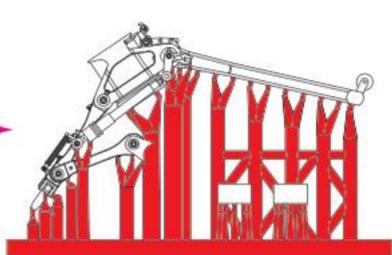

R11

R19


**DETAILS AFTER REMOVAL
FROM SPRUES**



R15






R20

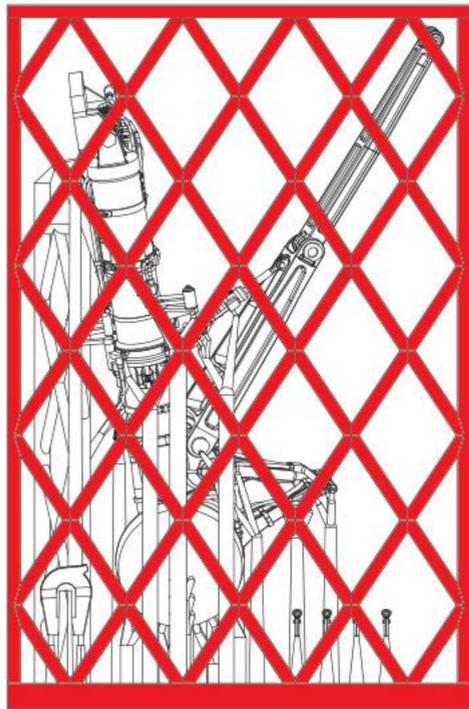


R20

R13

R15

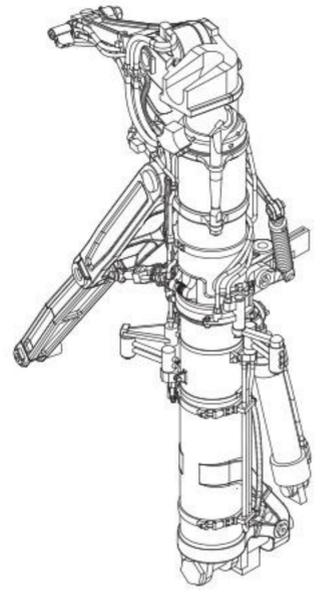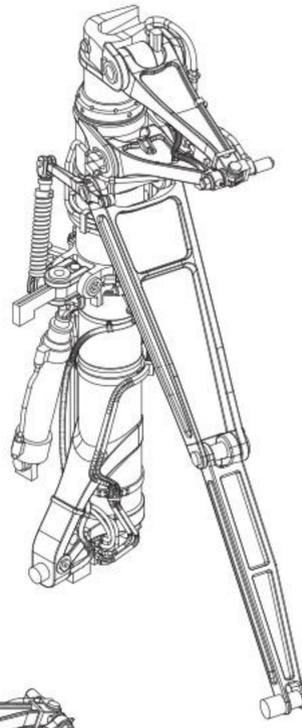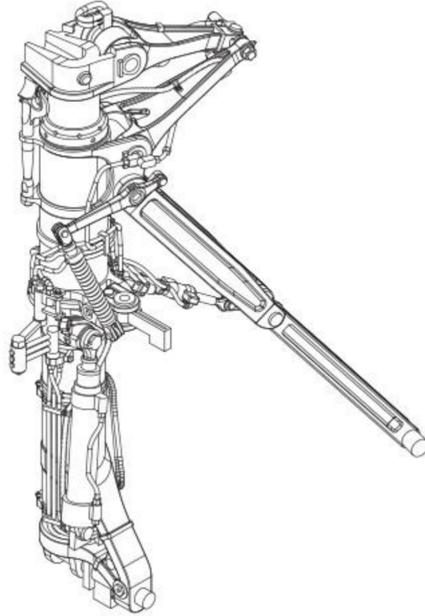


R13

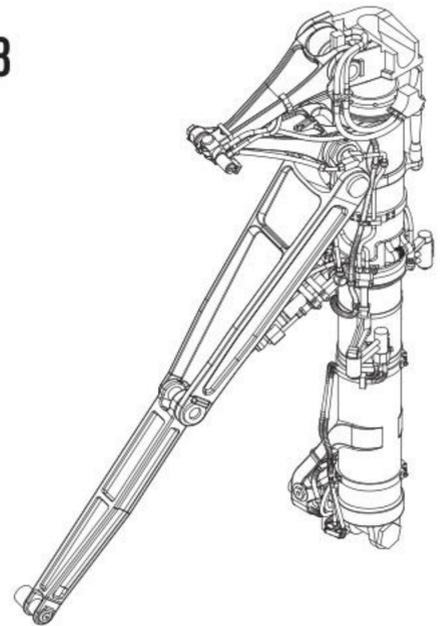

R15






R21

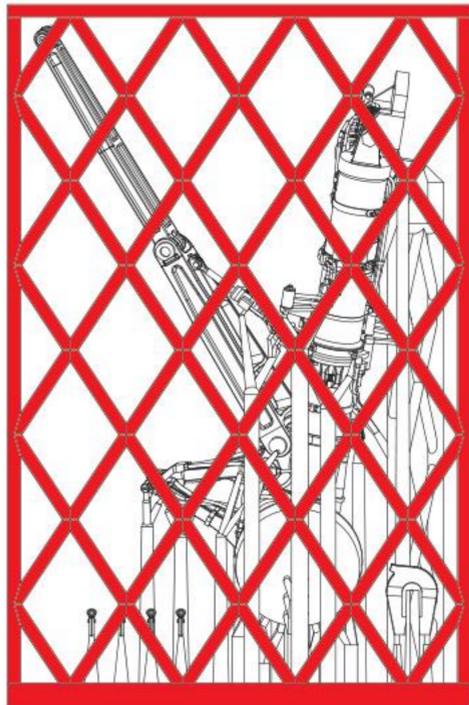


R15

R14


R21

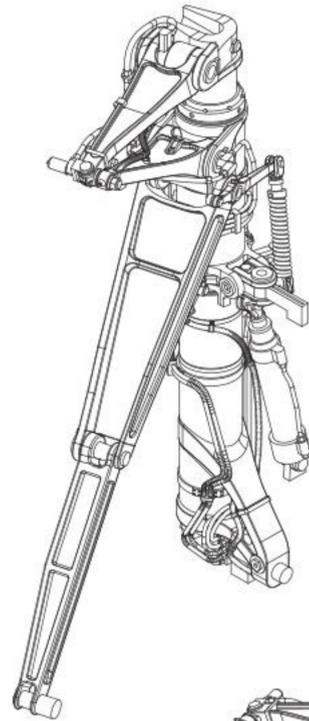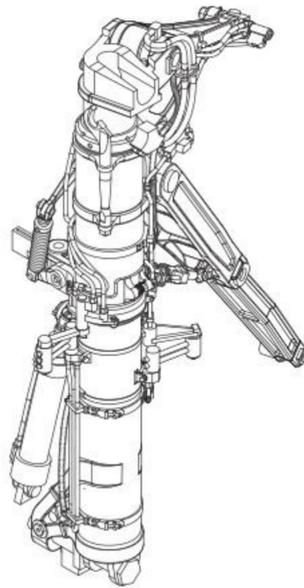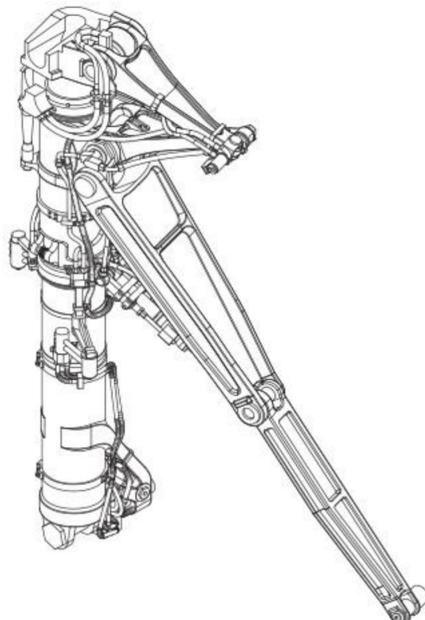


R14

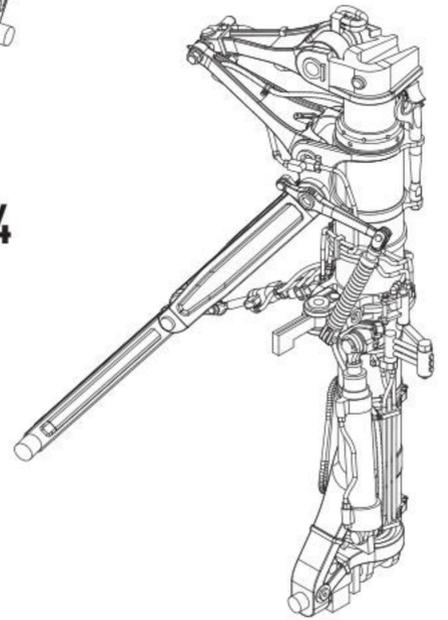

1

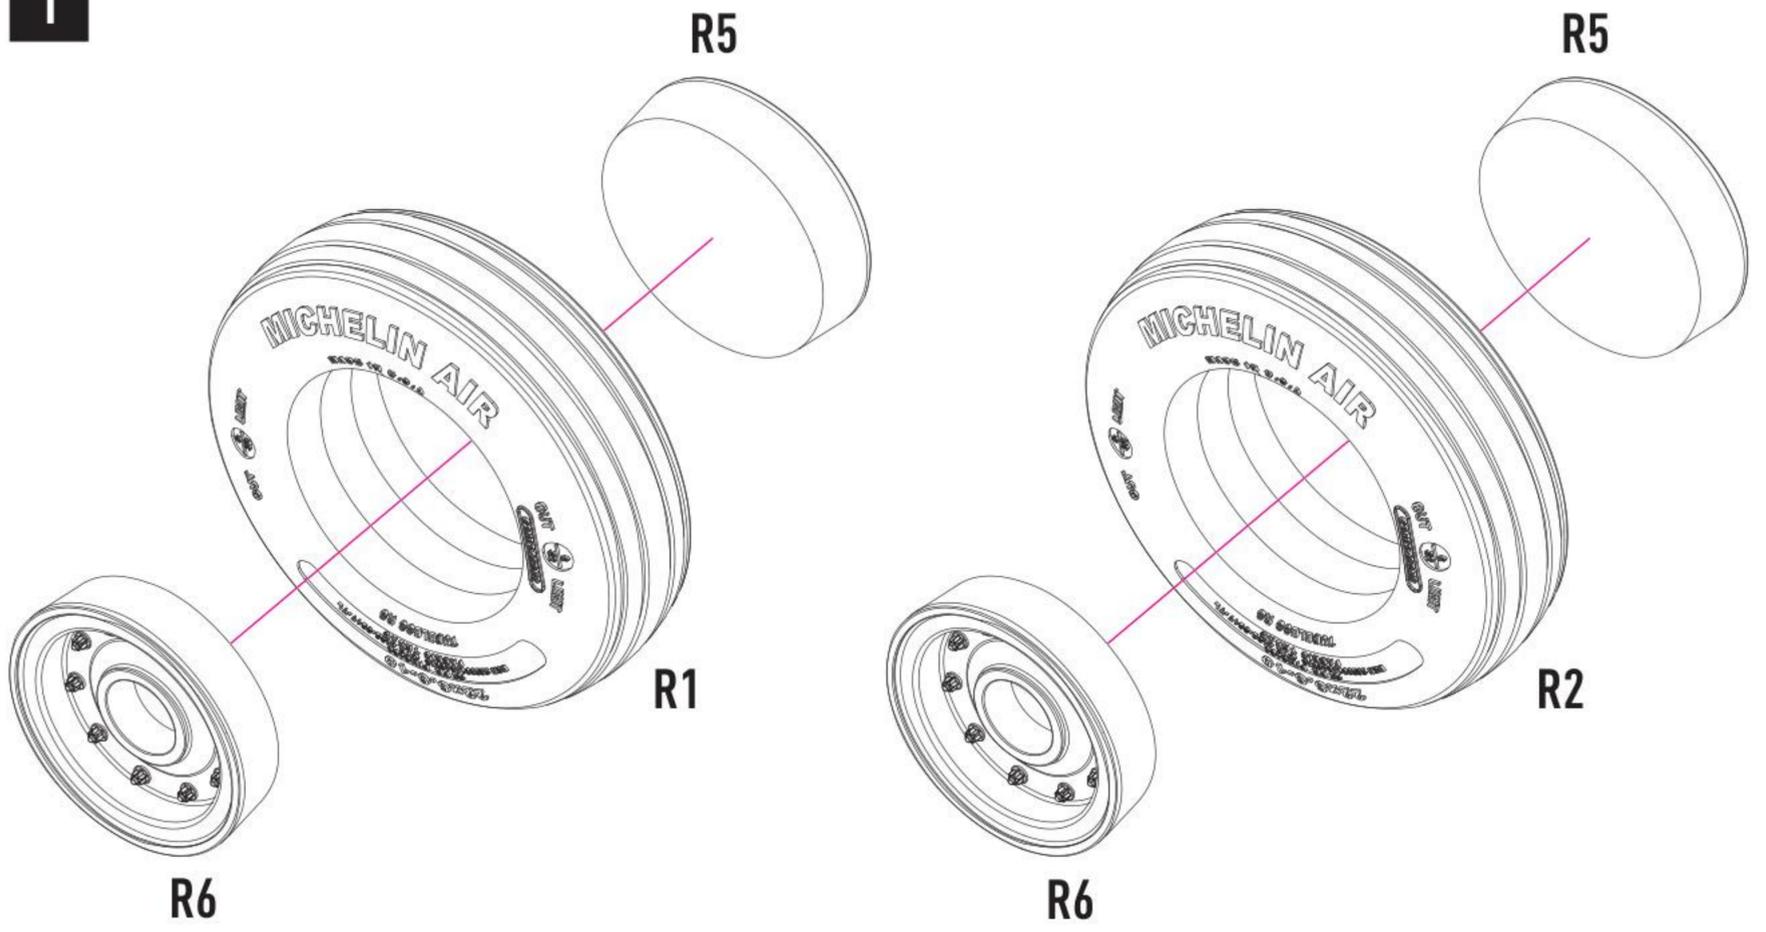


2

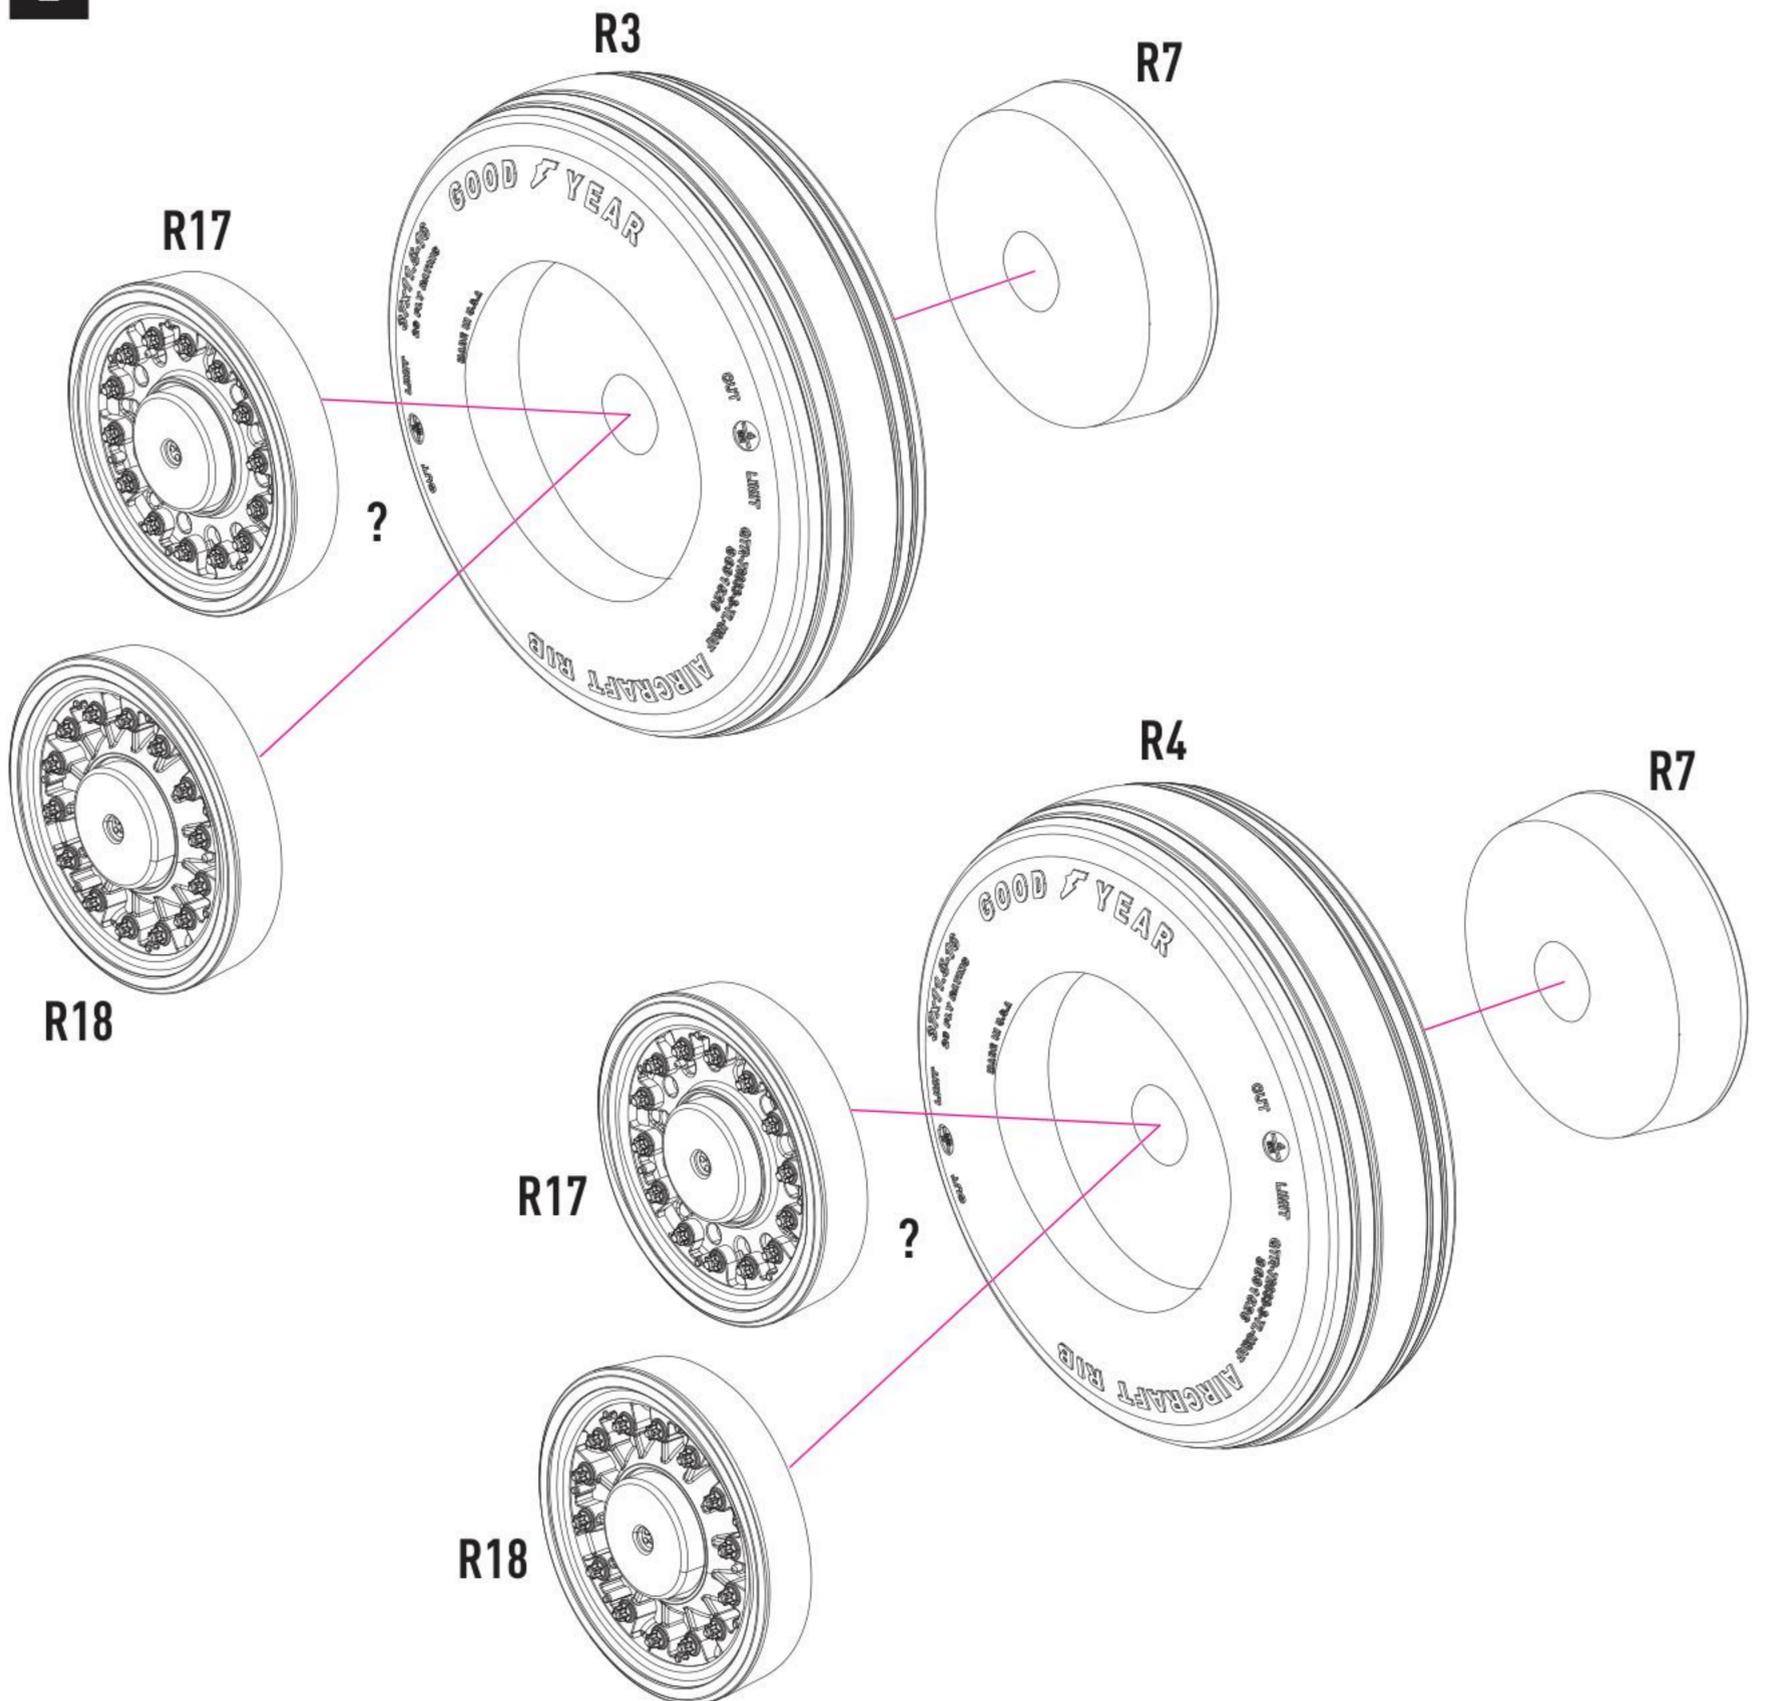


USE R17 FOR F-14D MODIFICATION / USE R18 FOR F-14 (A, B) MODIFICATION

3 MAIN ALLOY UNDERCARRIAGE
PART FROM THE KIT

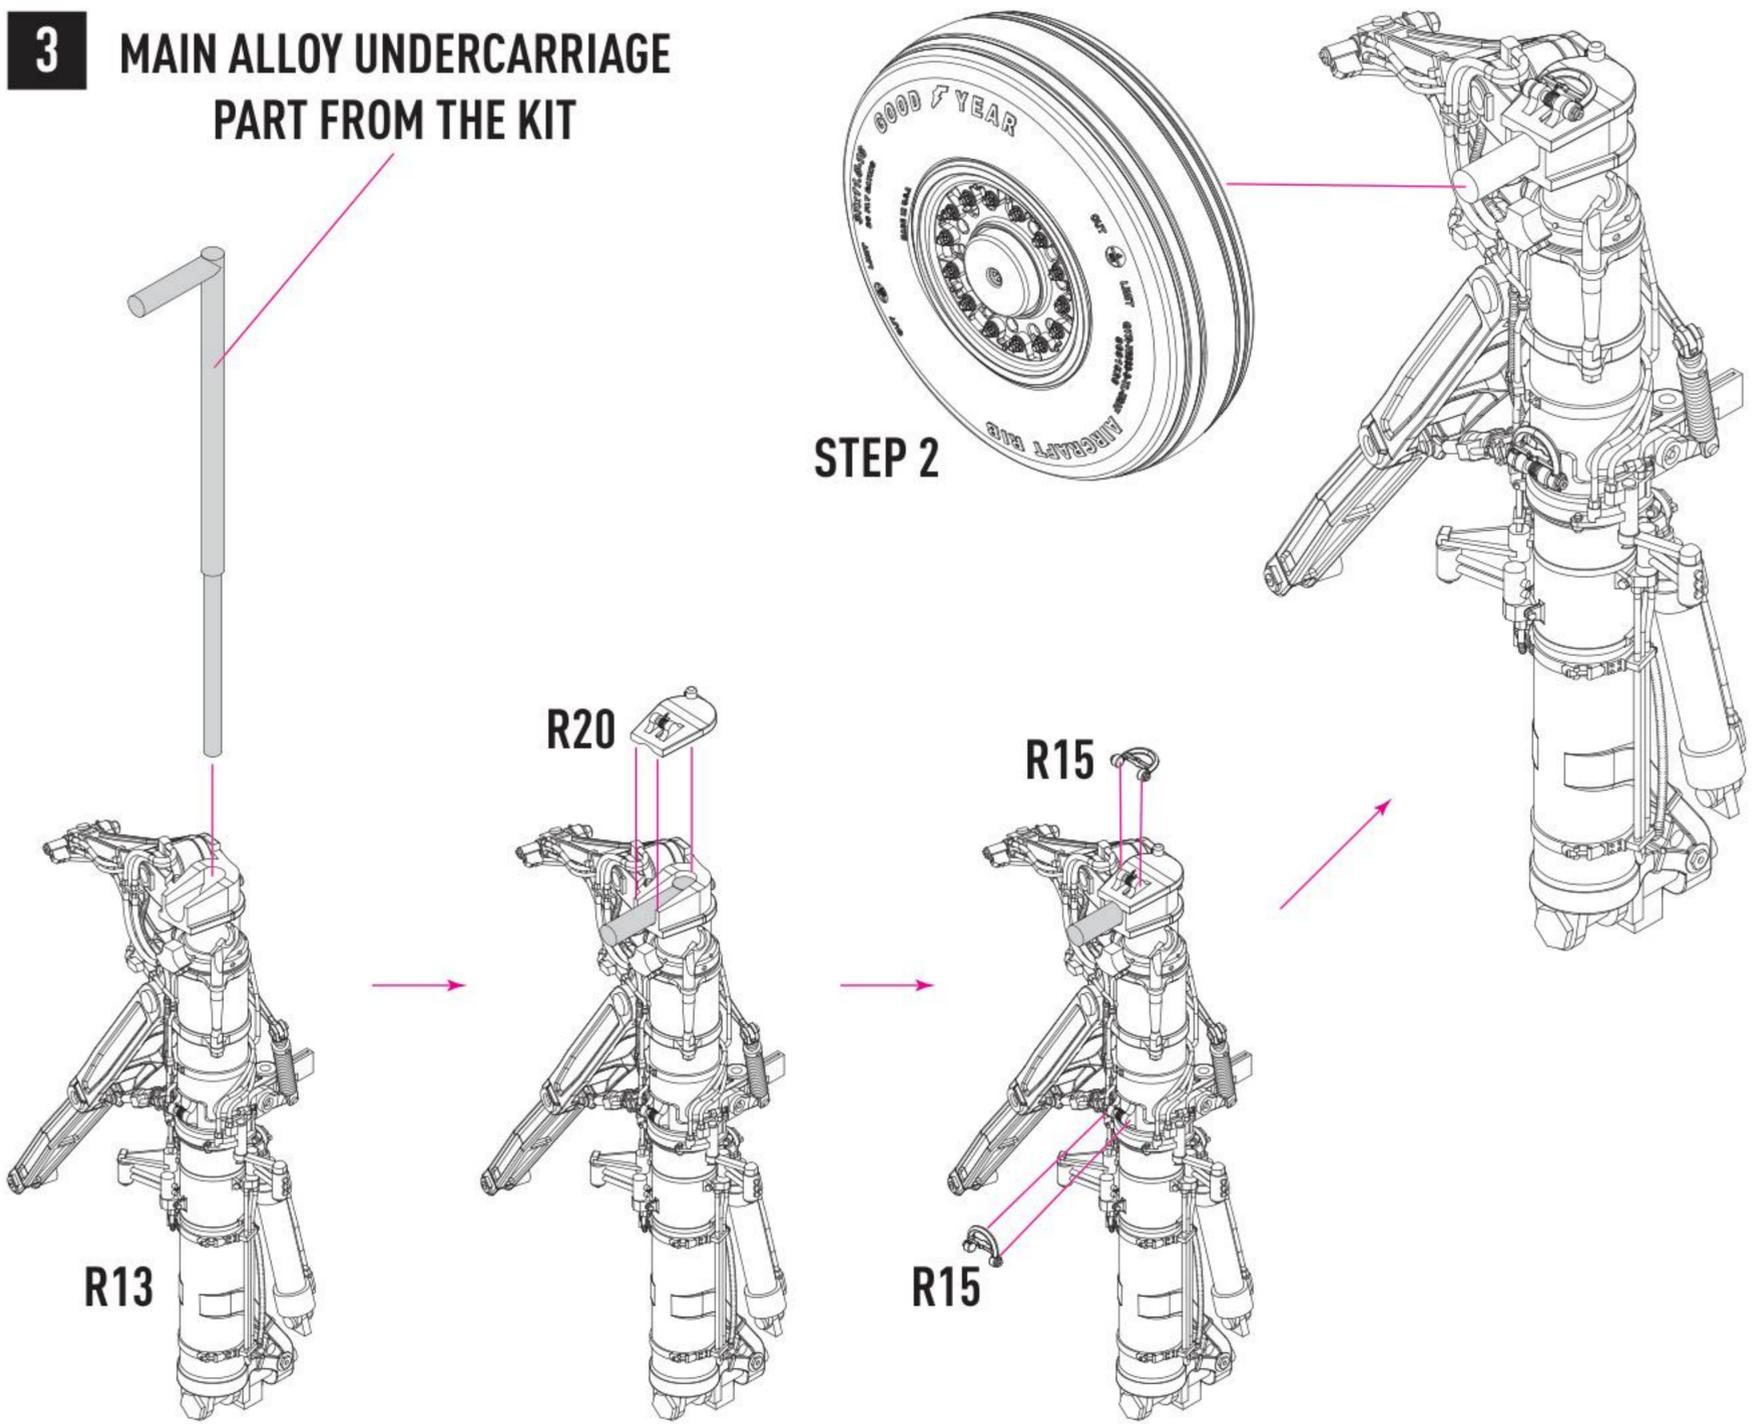


MAIN ALLOY UNDERCARRIAGE
PART FROM THE KIT


4

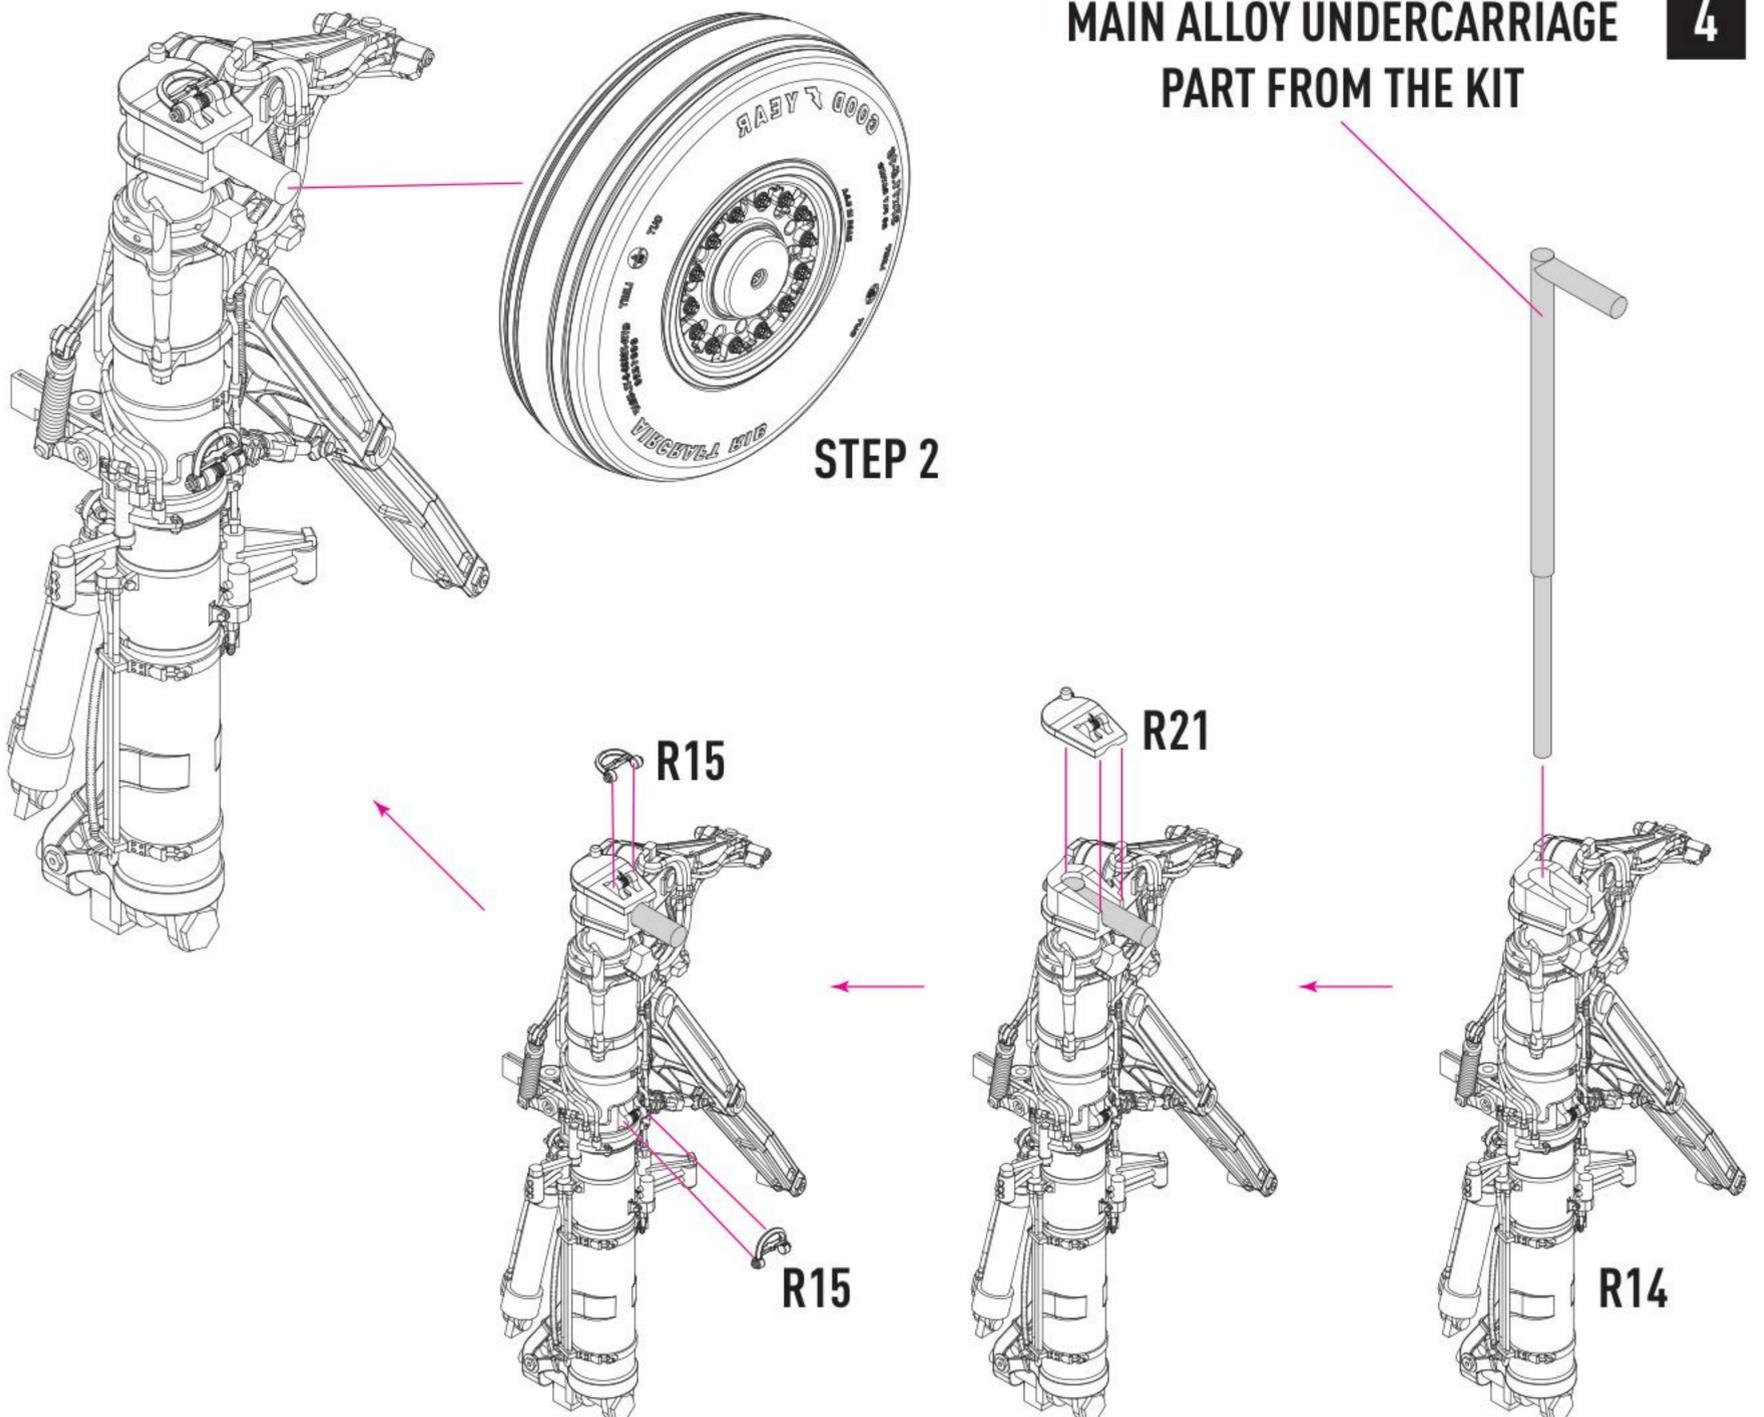


5 NOSE STRUT

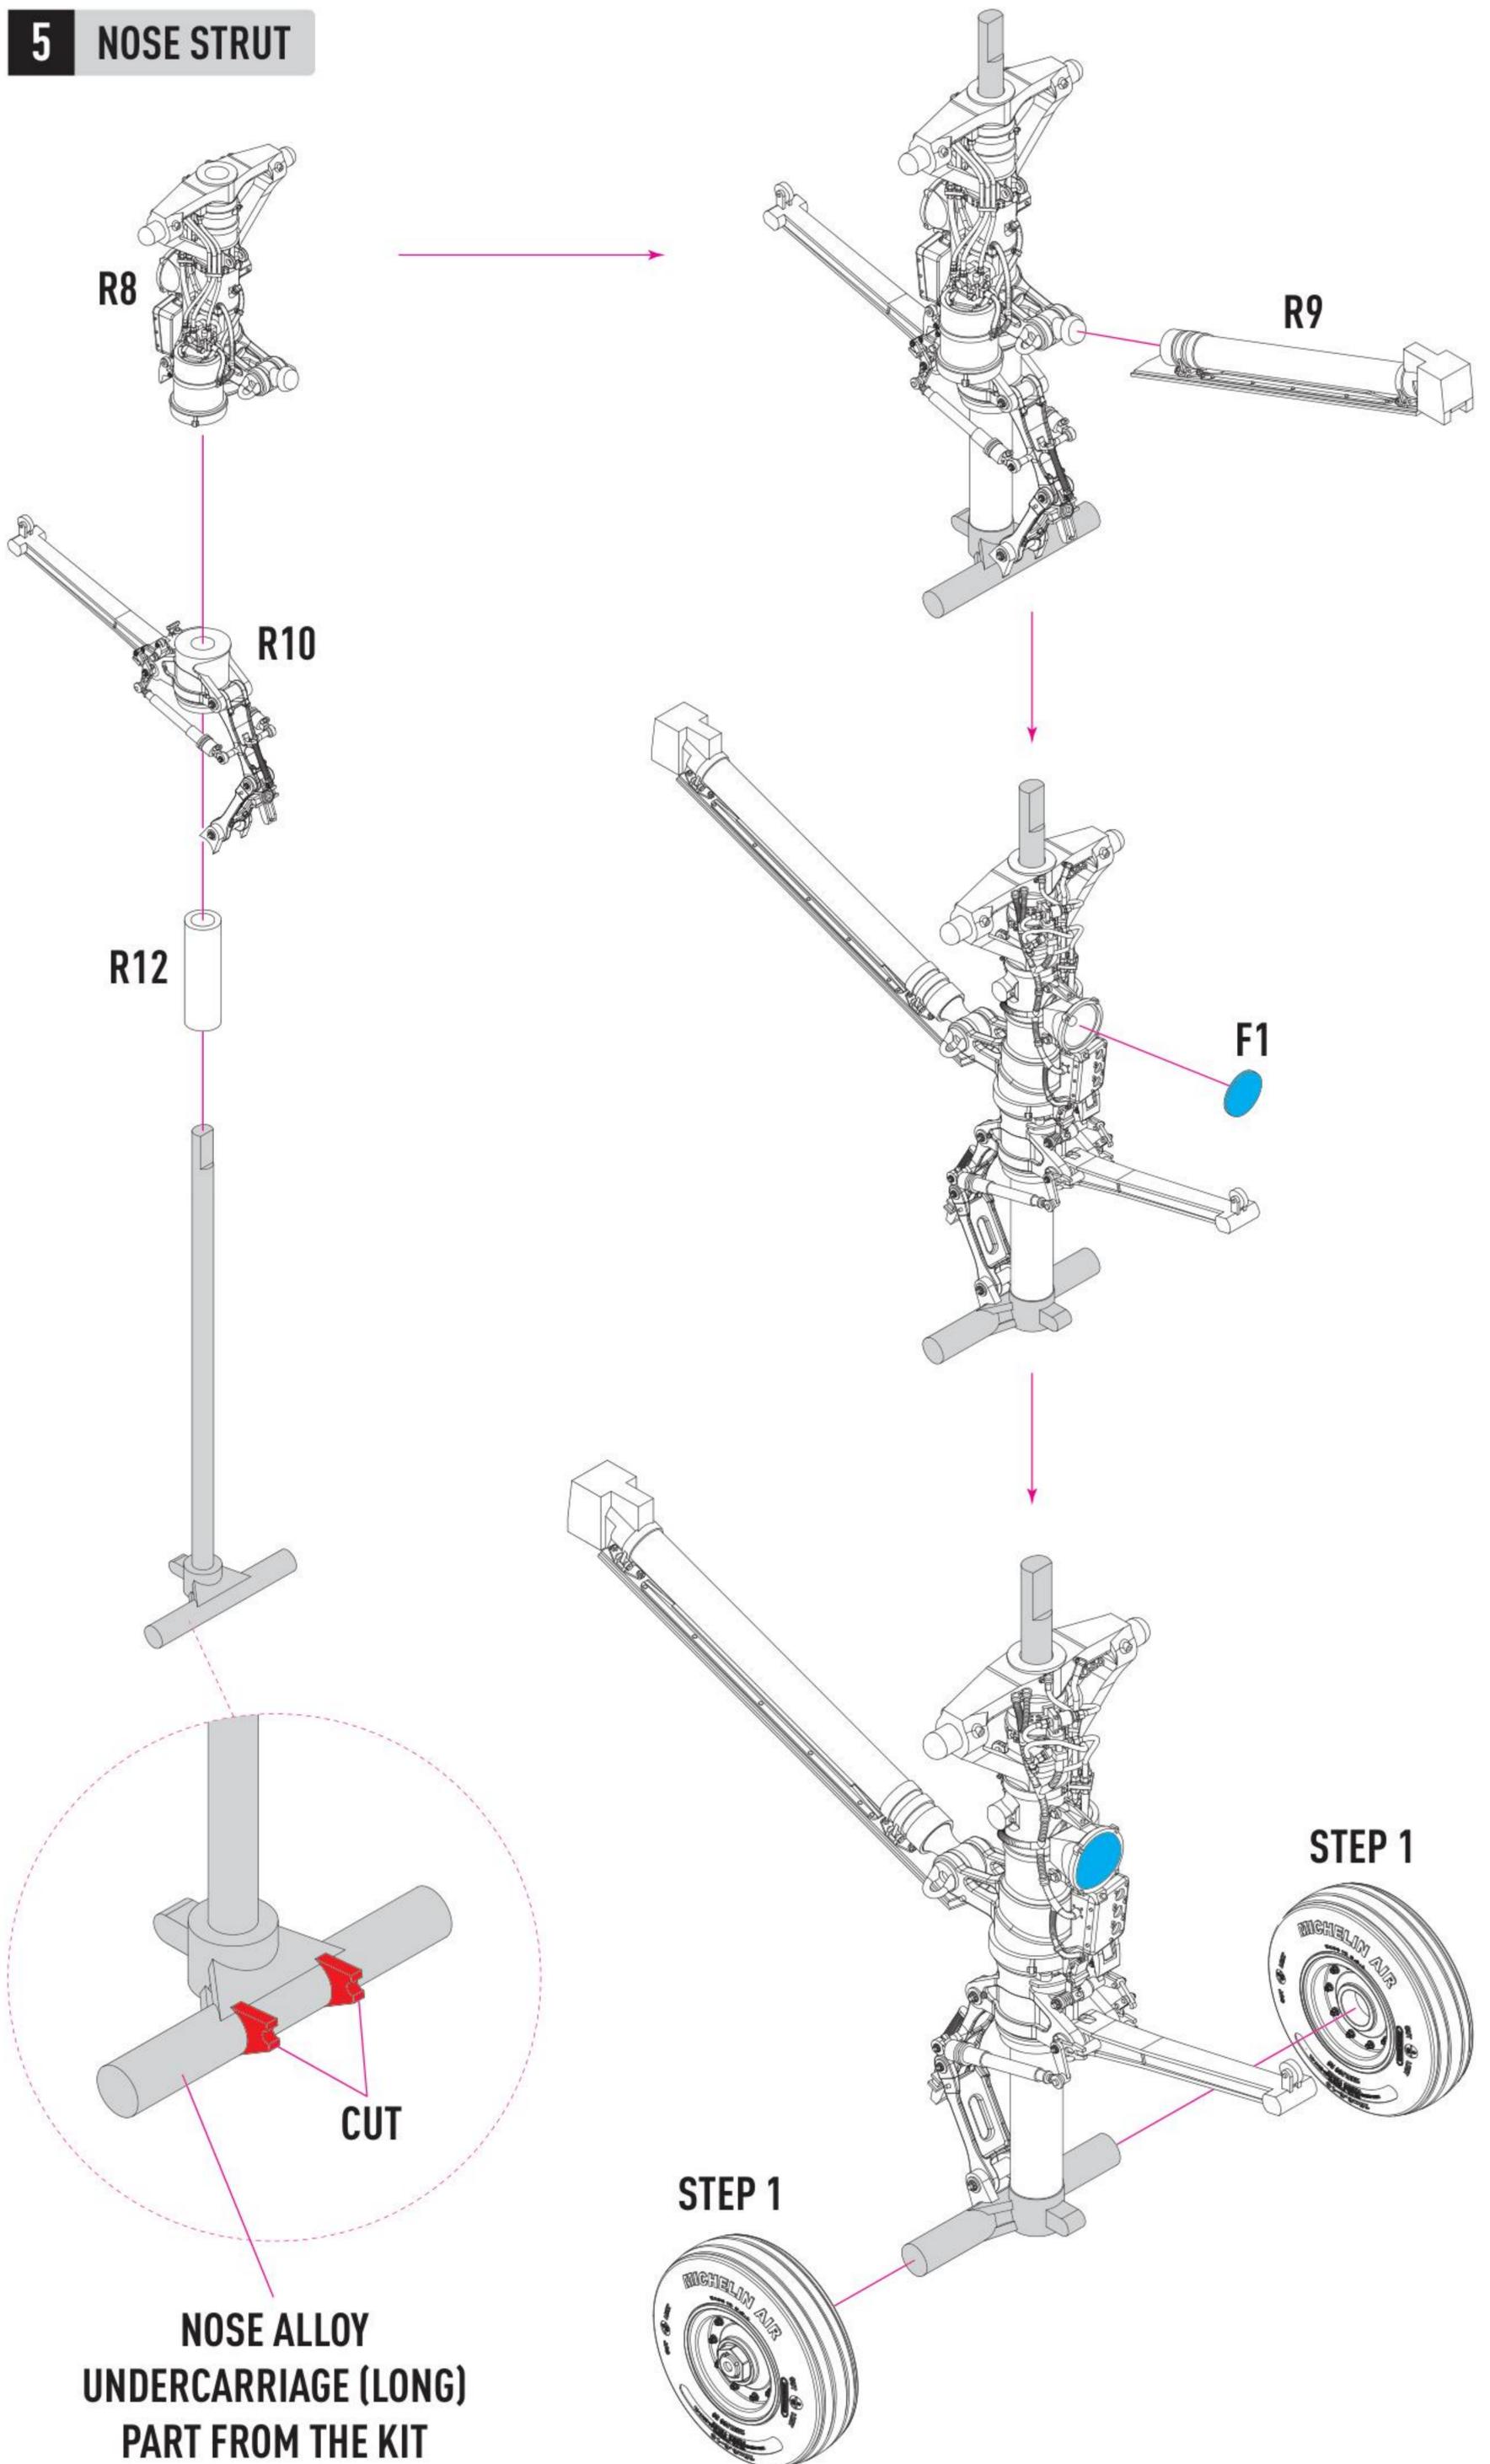


6 NOSE STRUT POSITION ON THE CATAPULT

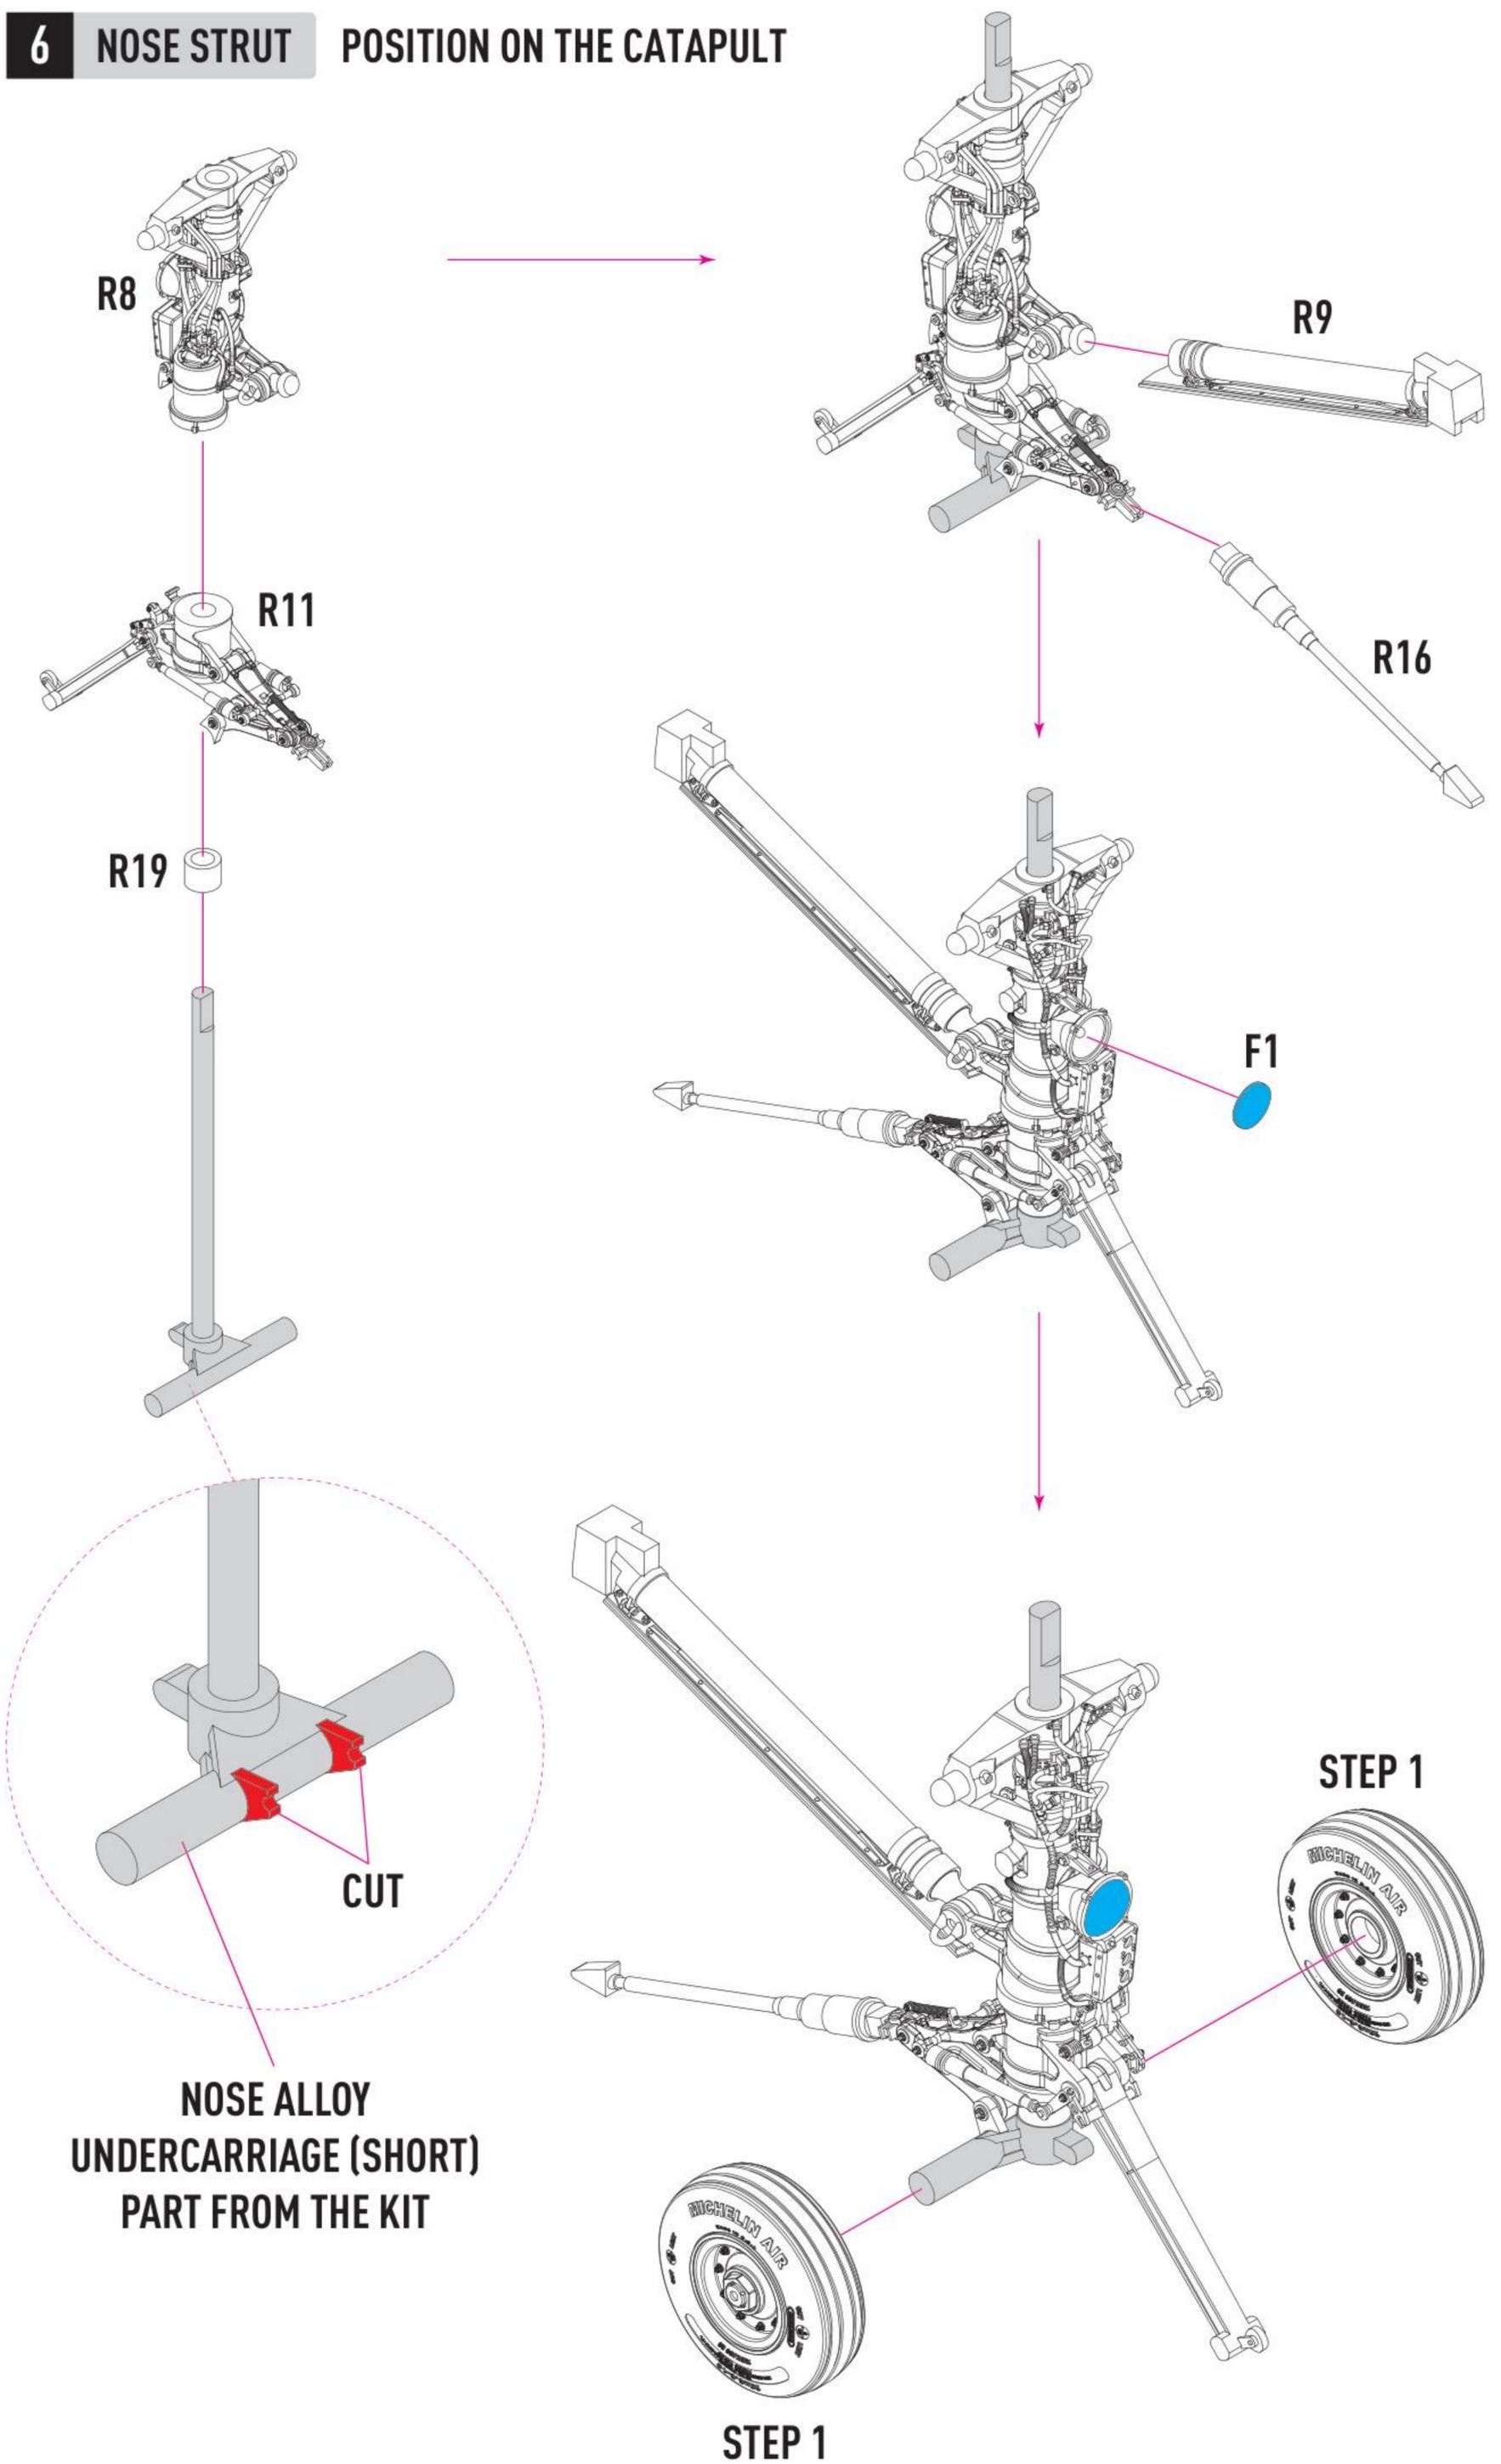

DECAL INSTRUCTION

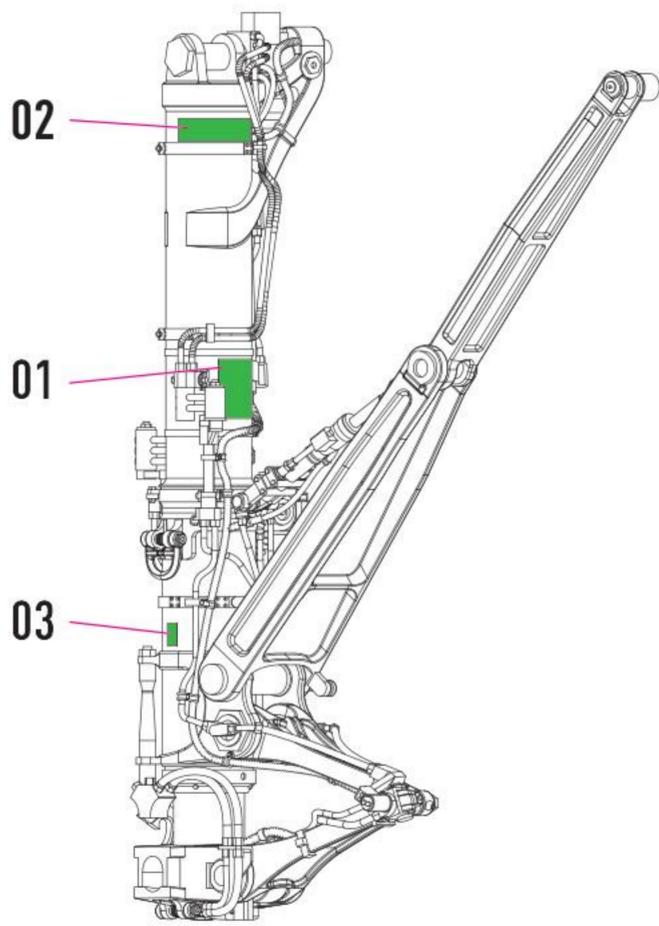

R13

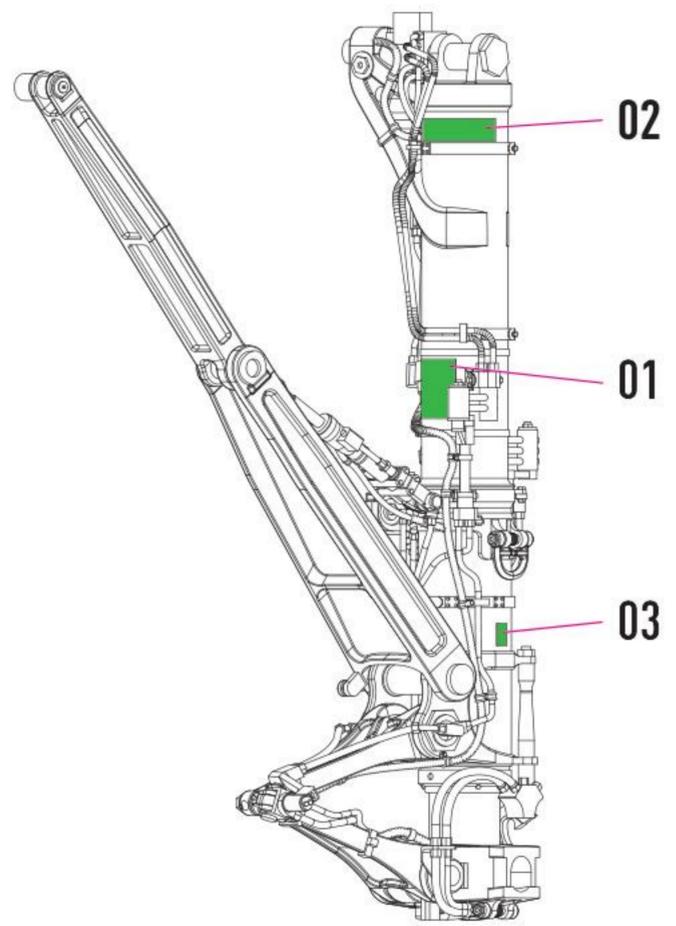

R14

