



RESIN PARTS  
FOR SCALE PLASTIC KITS


YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION **RSU32-0095**

# MIRAGE 2000N COCKPIT

## (BASIC EDITION WITH 3D DECALS)

### FOR KITTY HAWK / ZIMIMODEL KIT

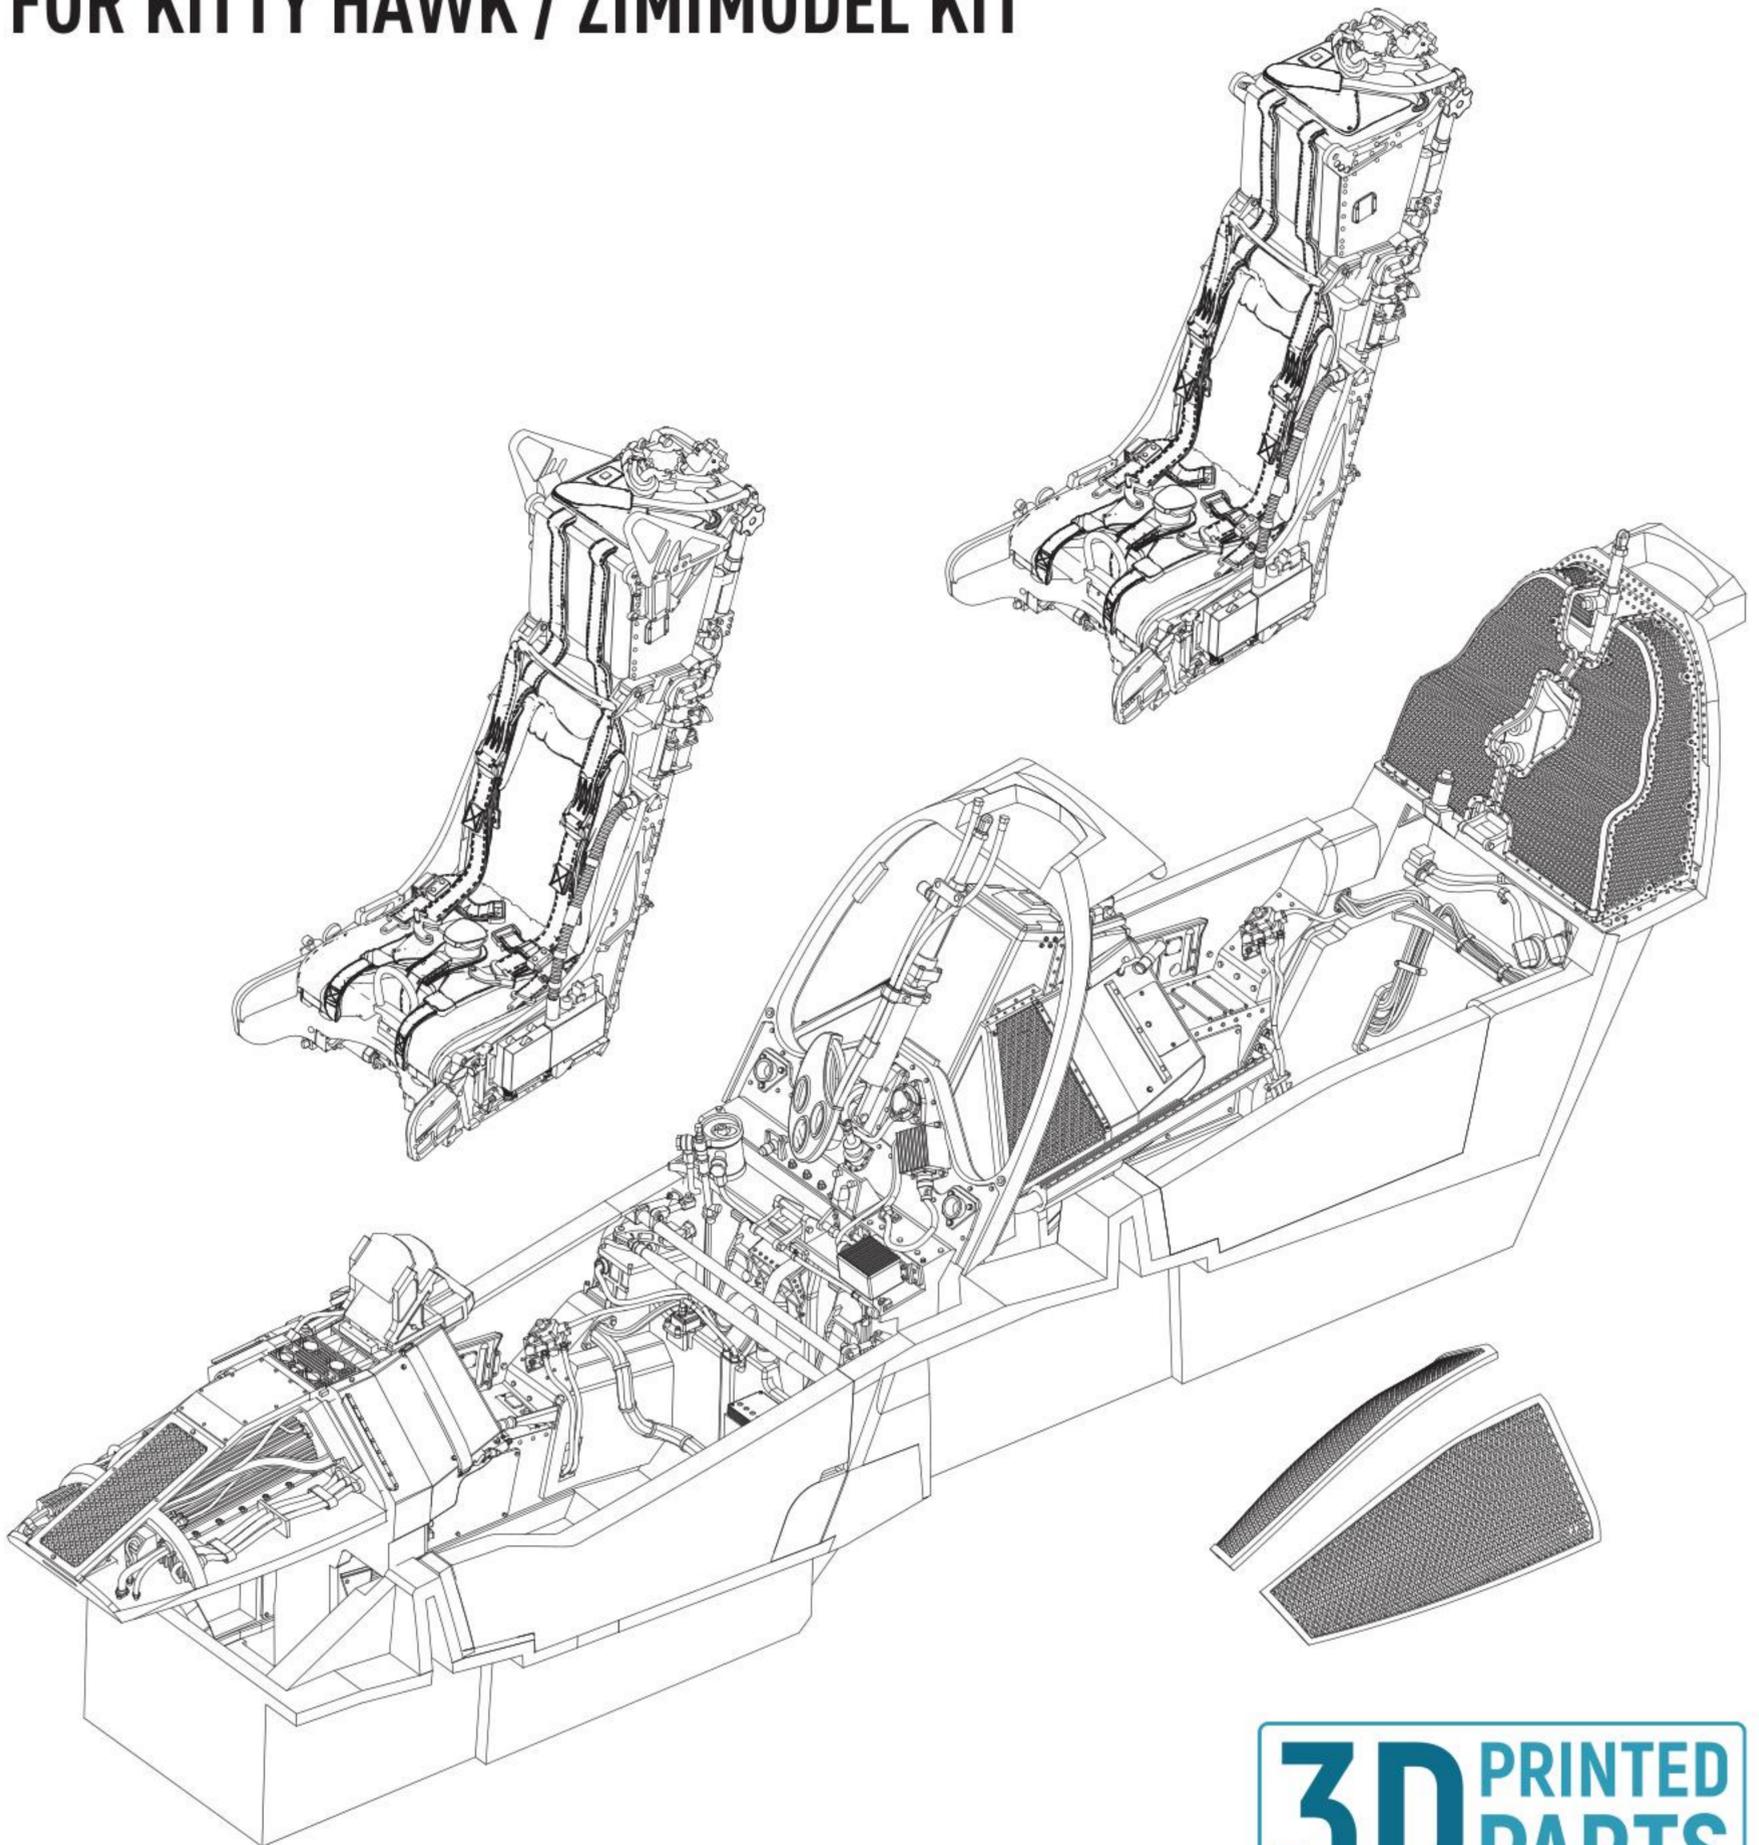

**3D** PRINTED  
PARTS

general issues: [info@reskit.com.ua](mailto:info@reskit.com.ua) / claim resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)

**RESKIT-MODELS.COM**



 [fb.com/reskit.official](https://fb.com/reskit.official)

 [instagram.com/reskit\\_official](https://instagram.com/reskit_official)


 [pinterest.com/reskit\\_official](https://pinterest.com/reskit_official)




# DECAL INSTRUCTION

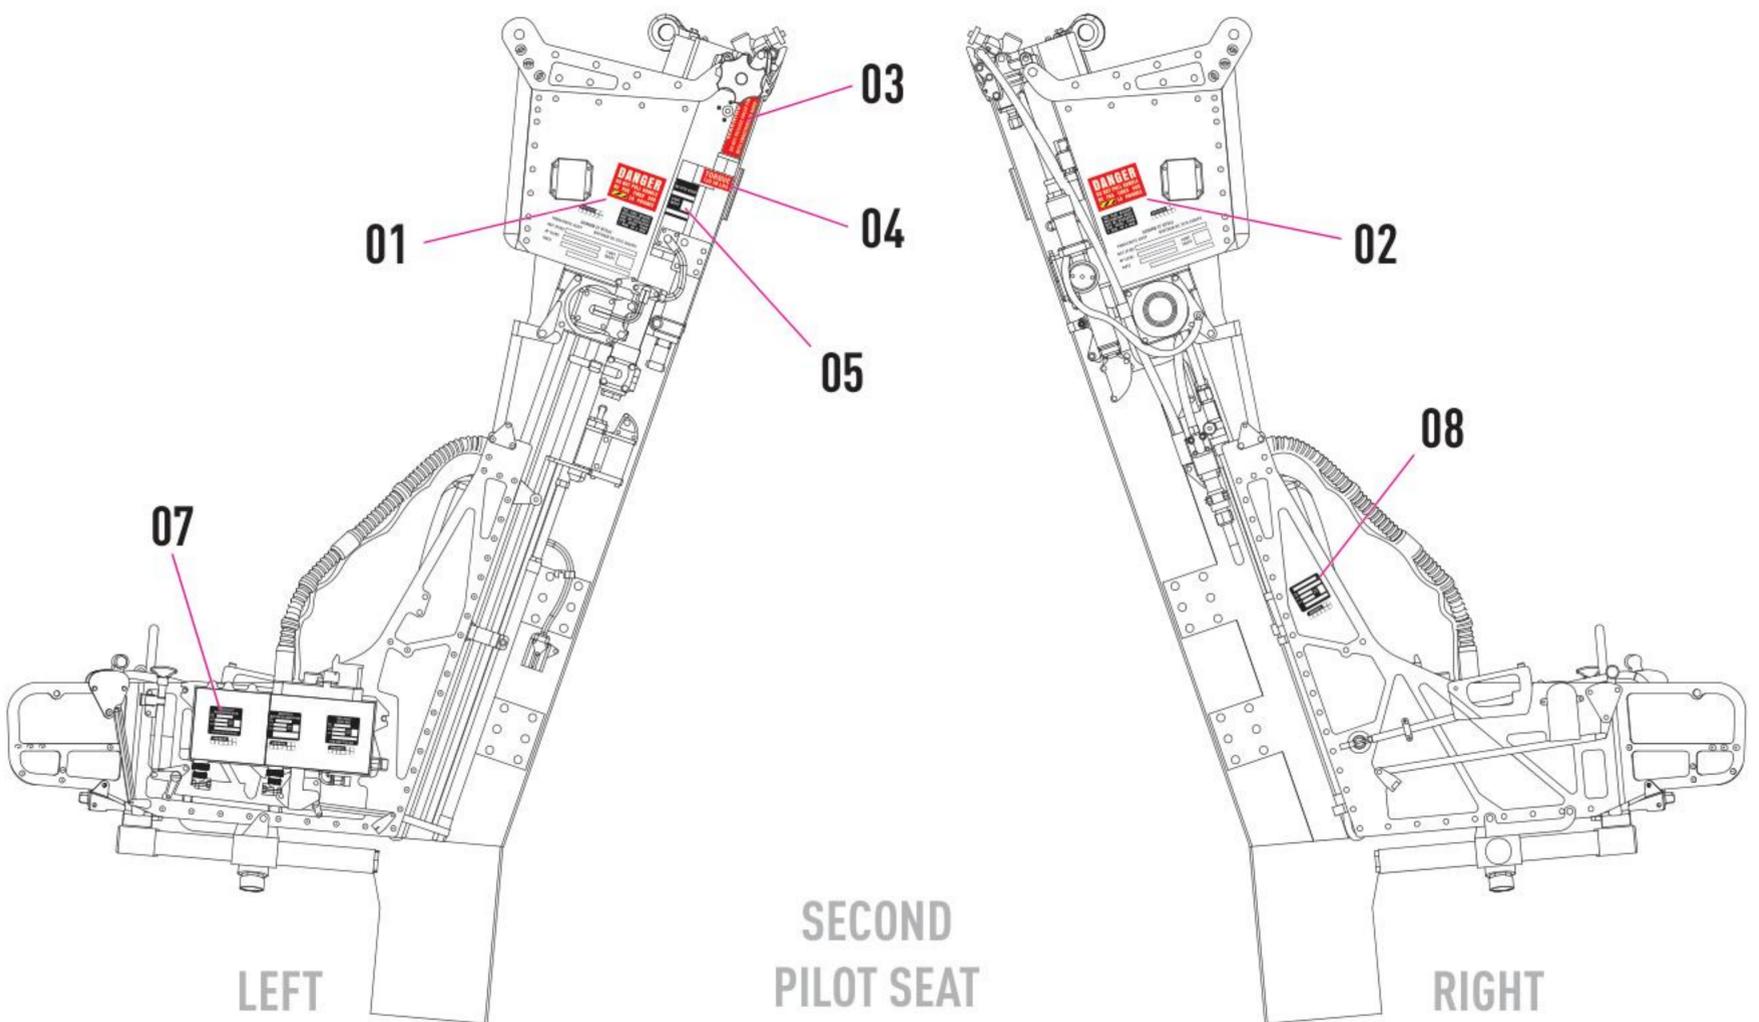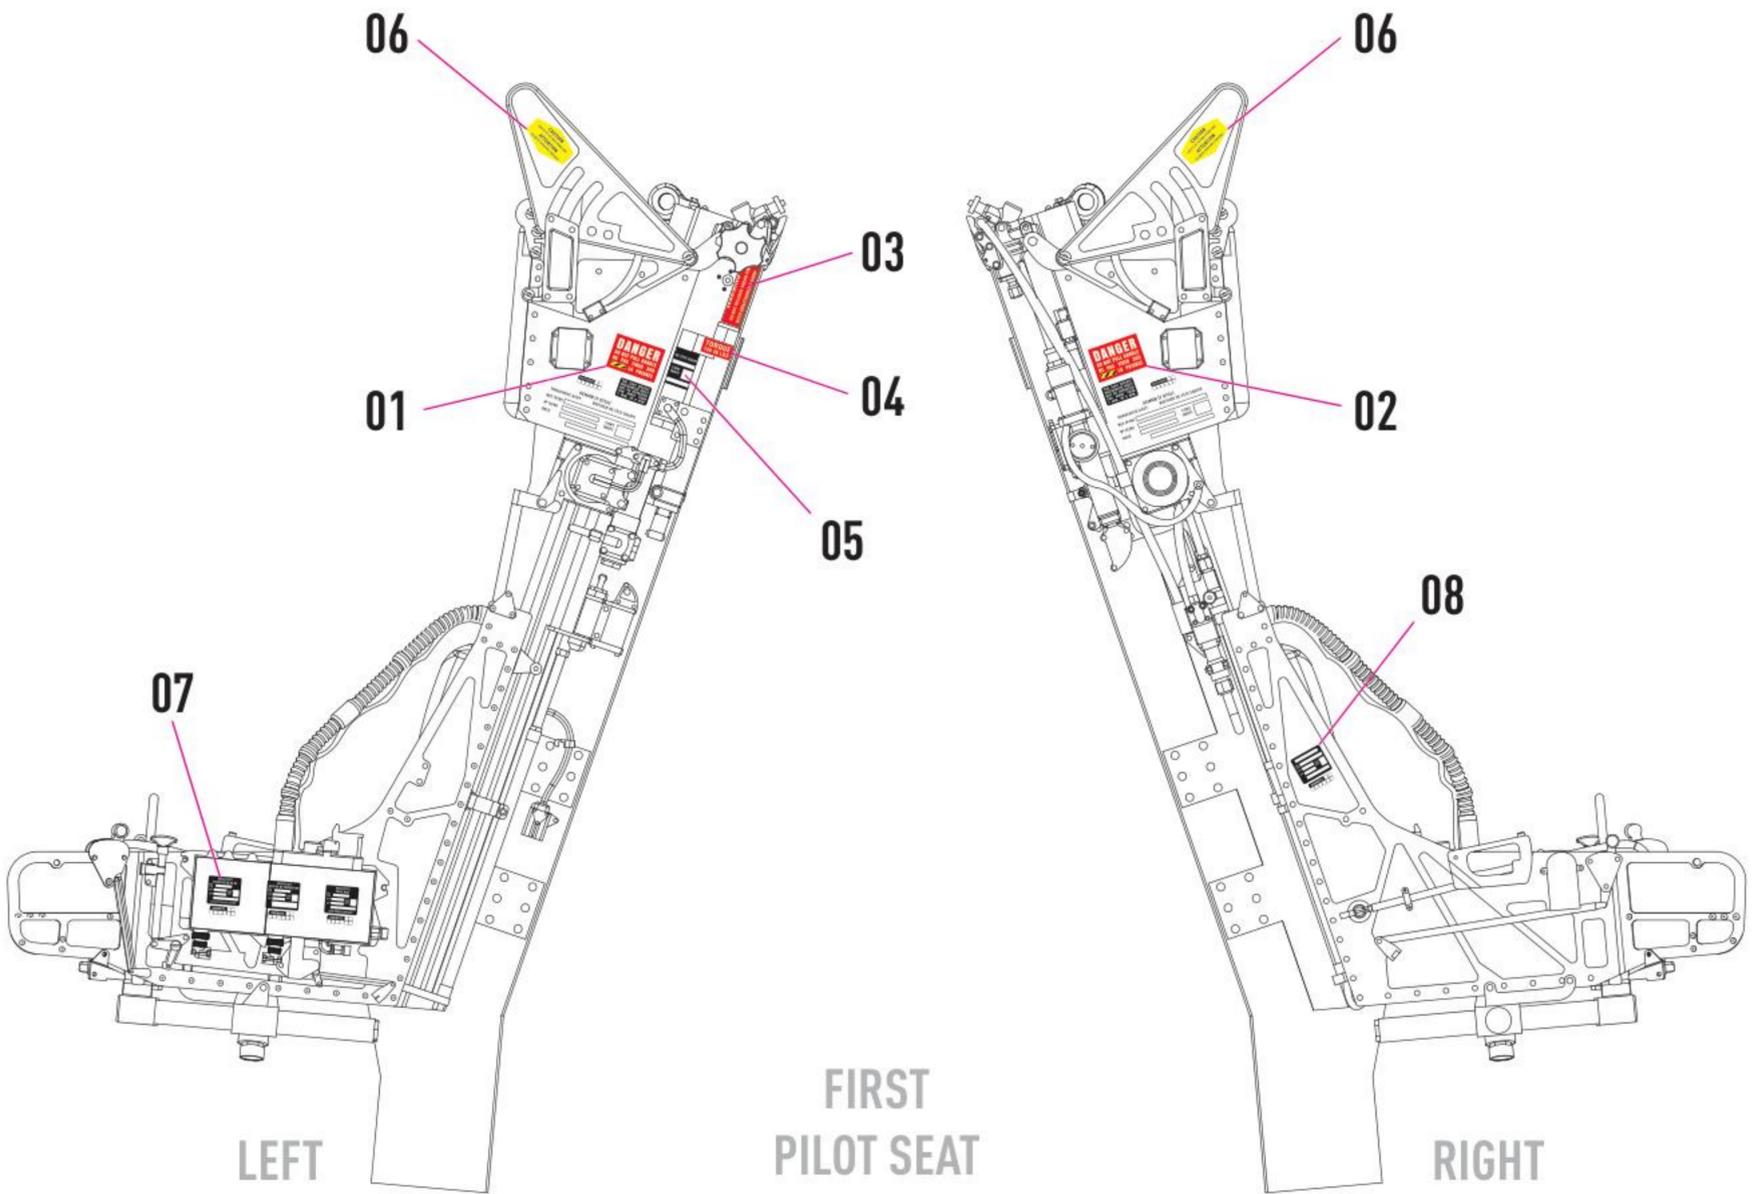


# 1 FIRST PILOT

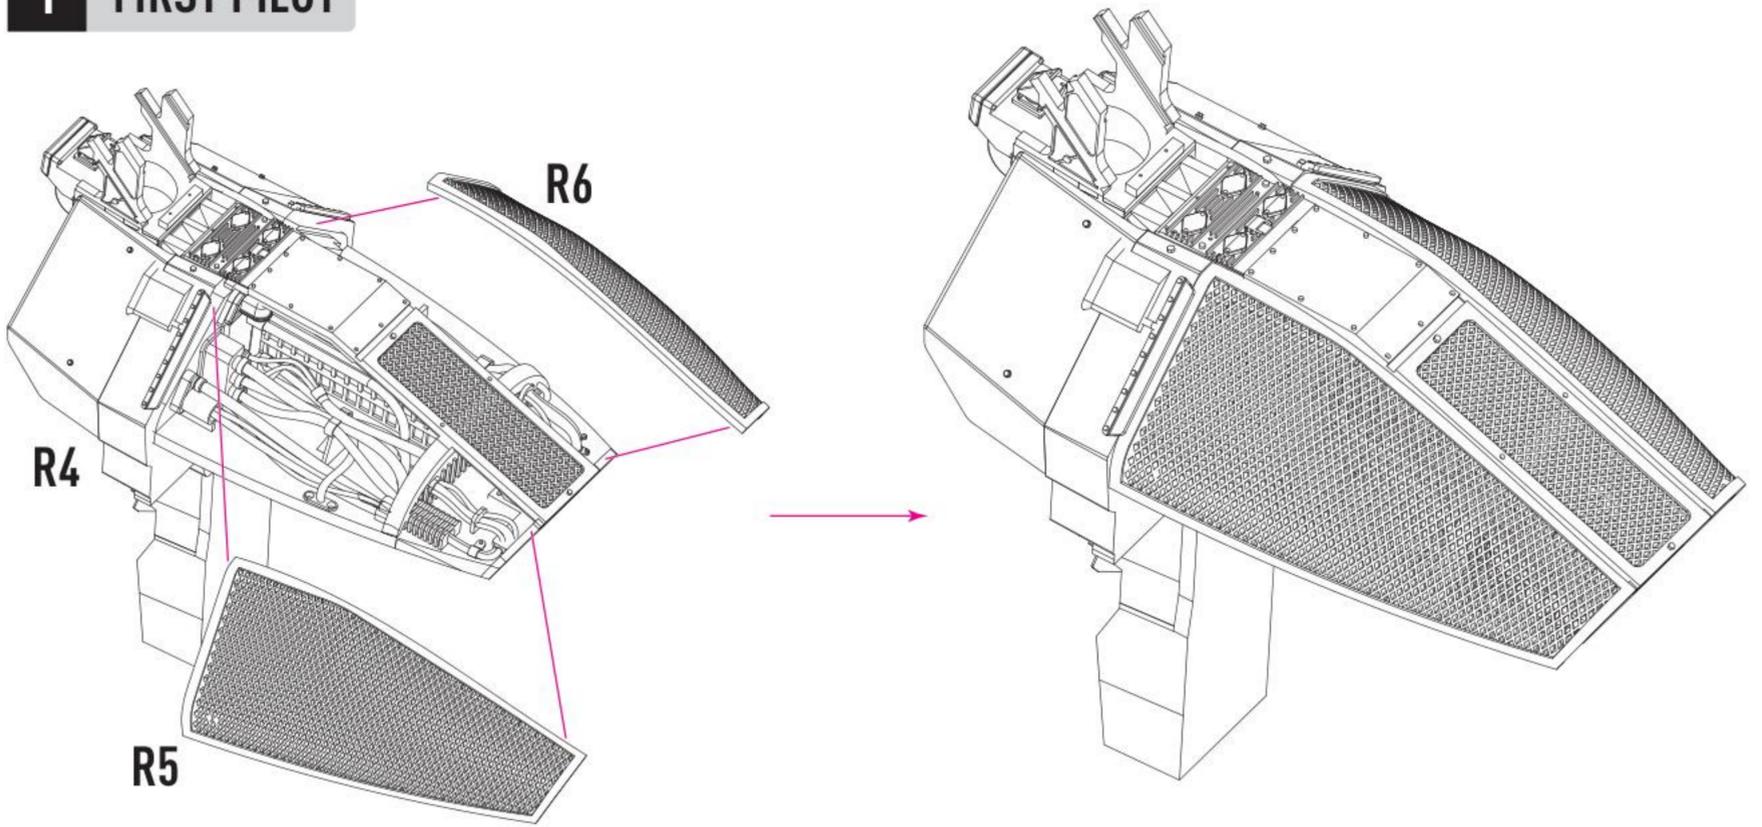


# 2 3D DECALS ●

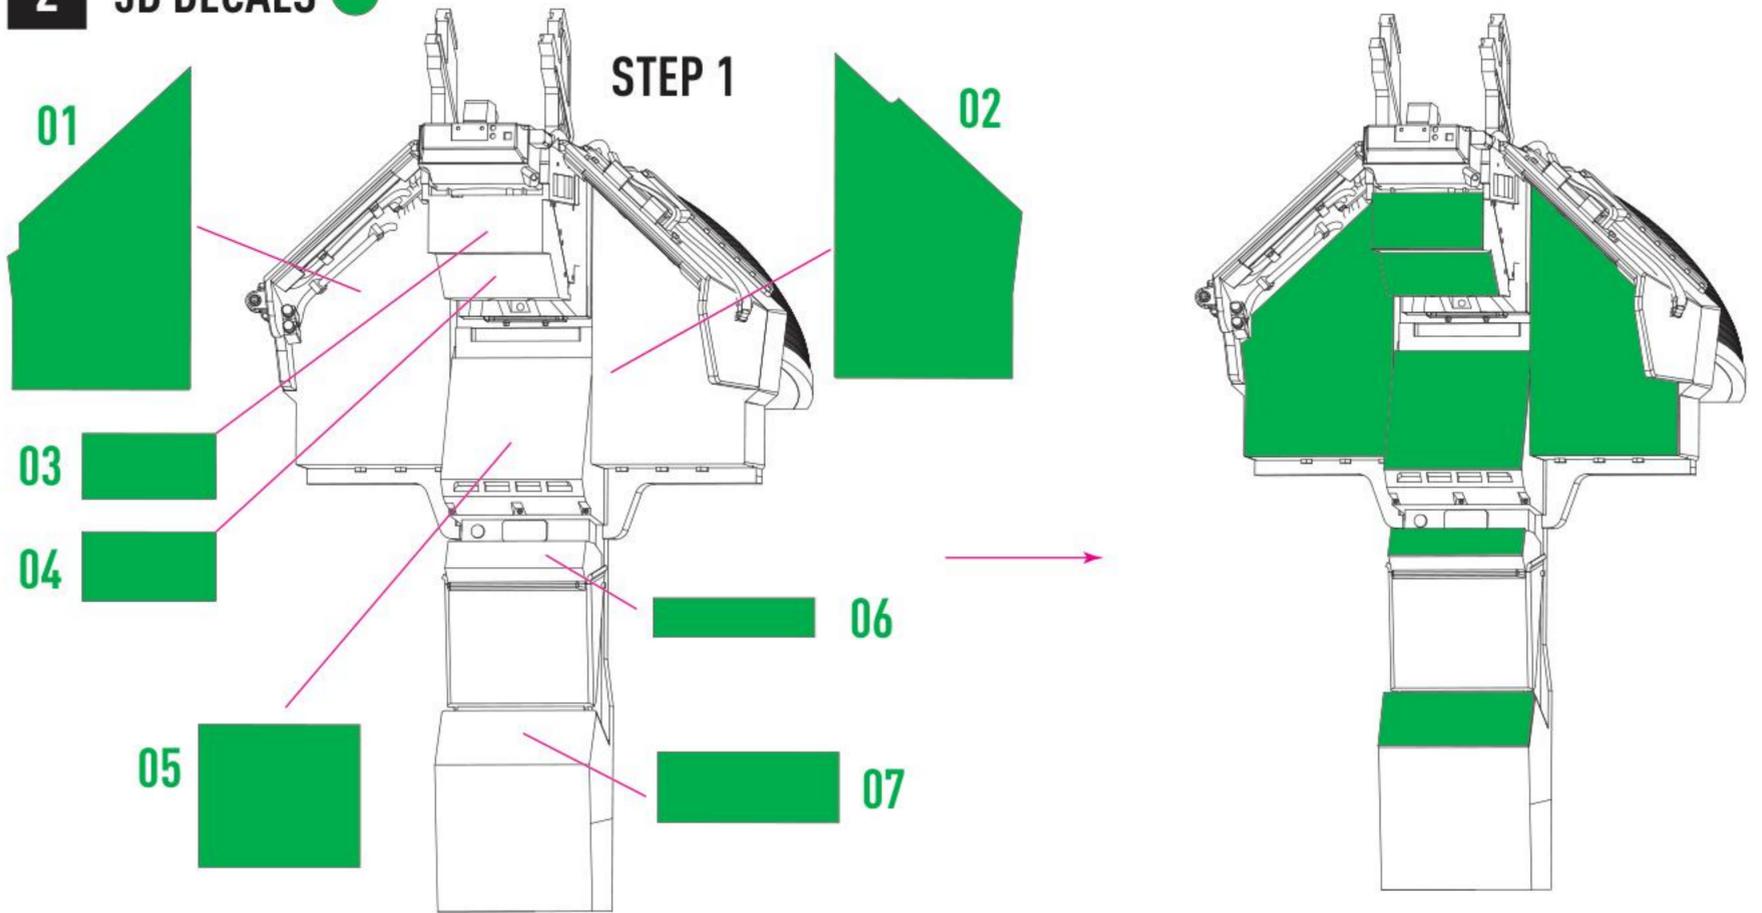


# 3

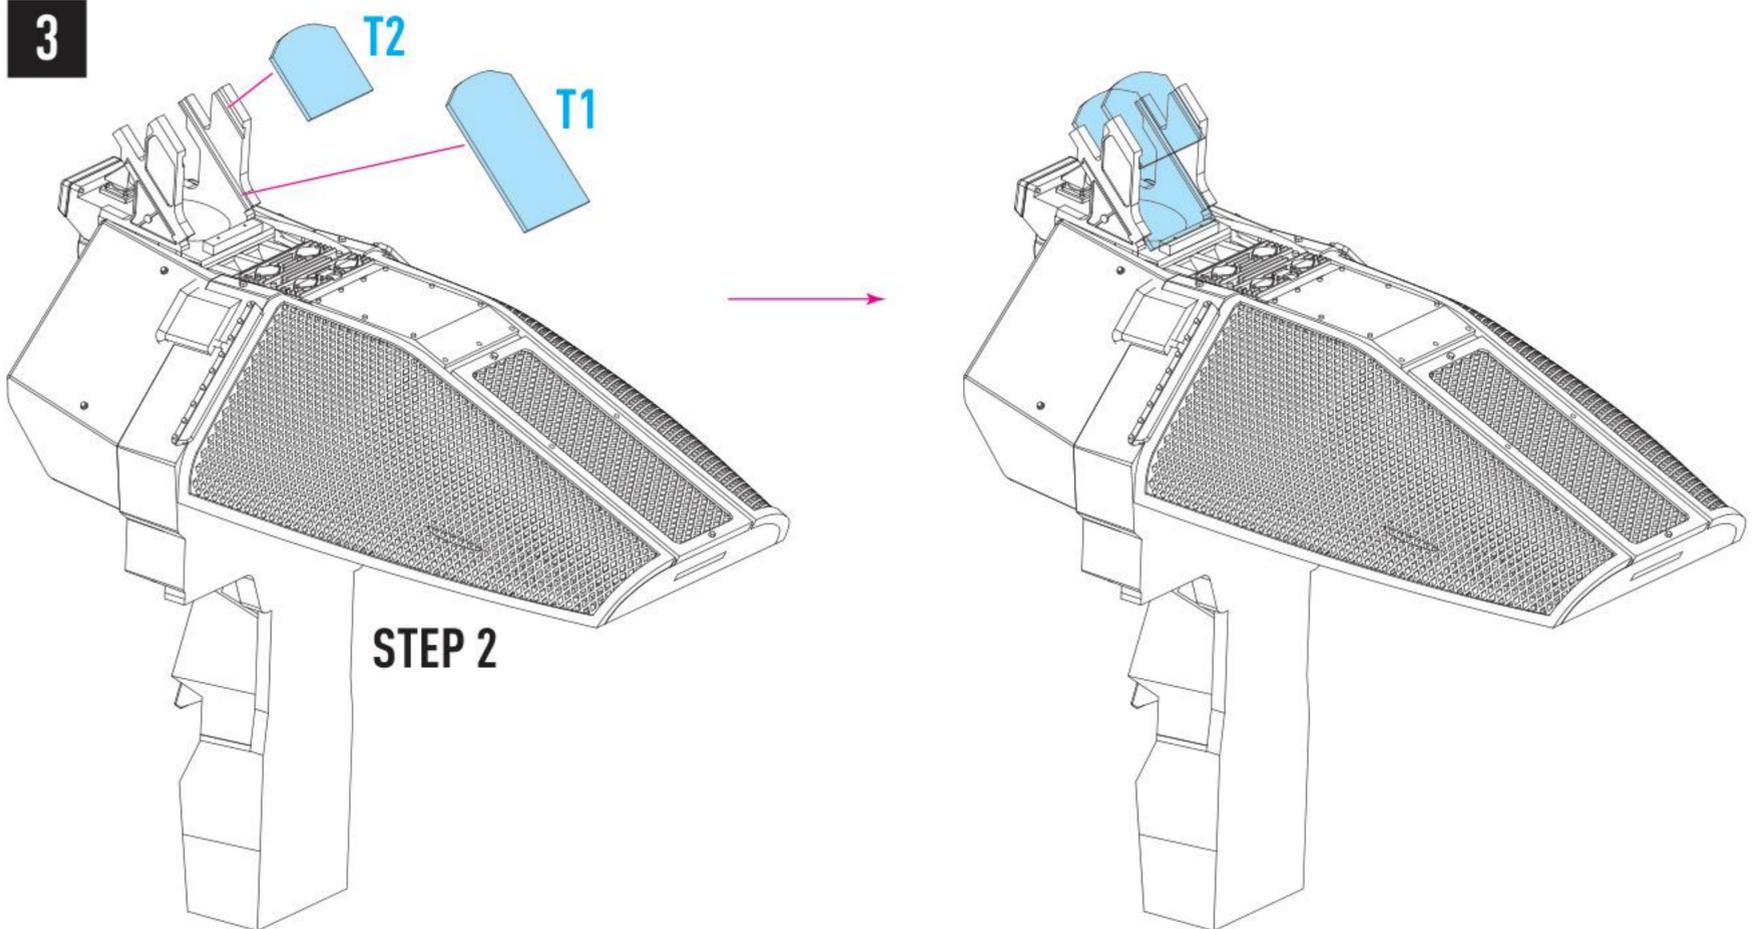


**4** SECOND PILOT


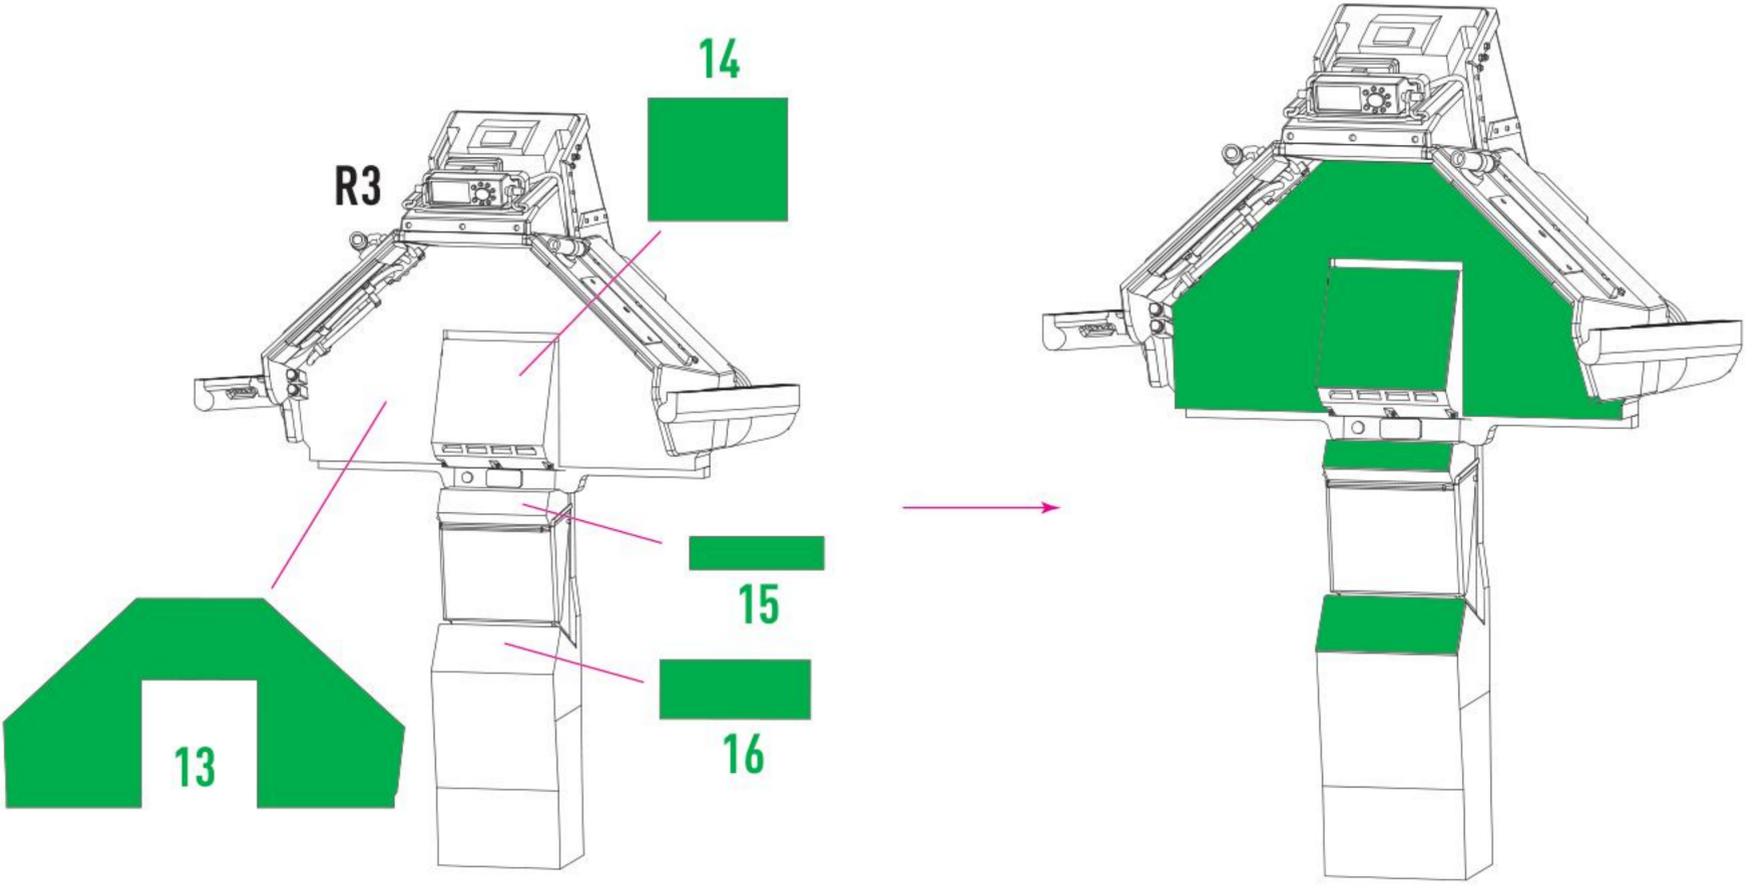


**5**

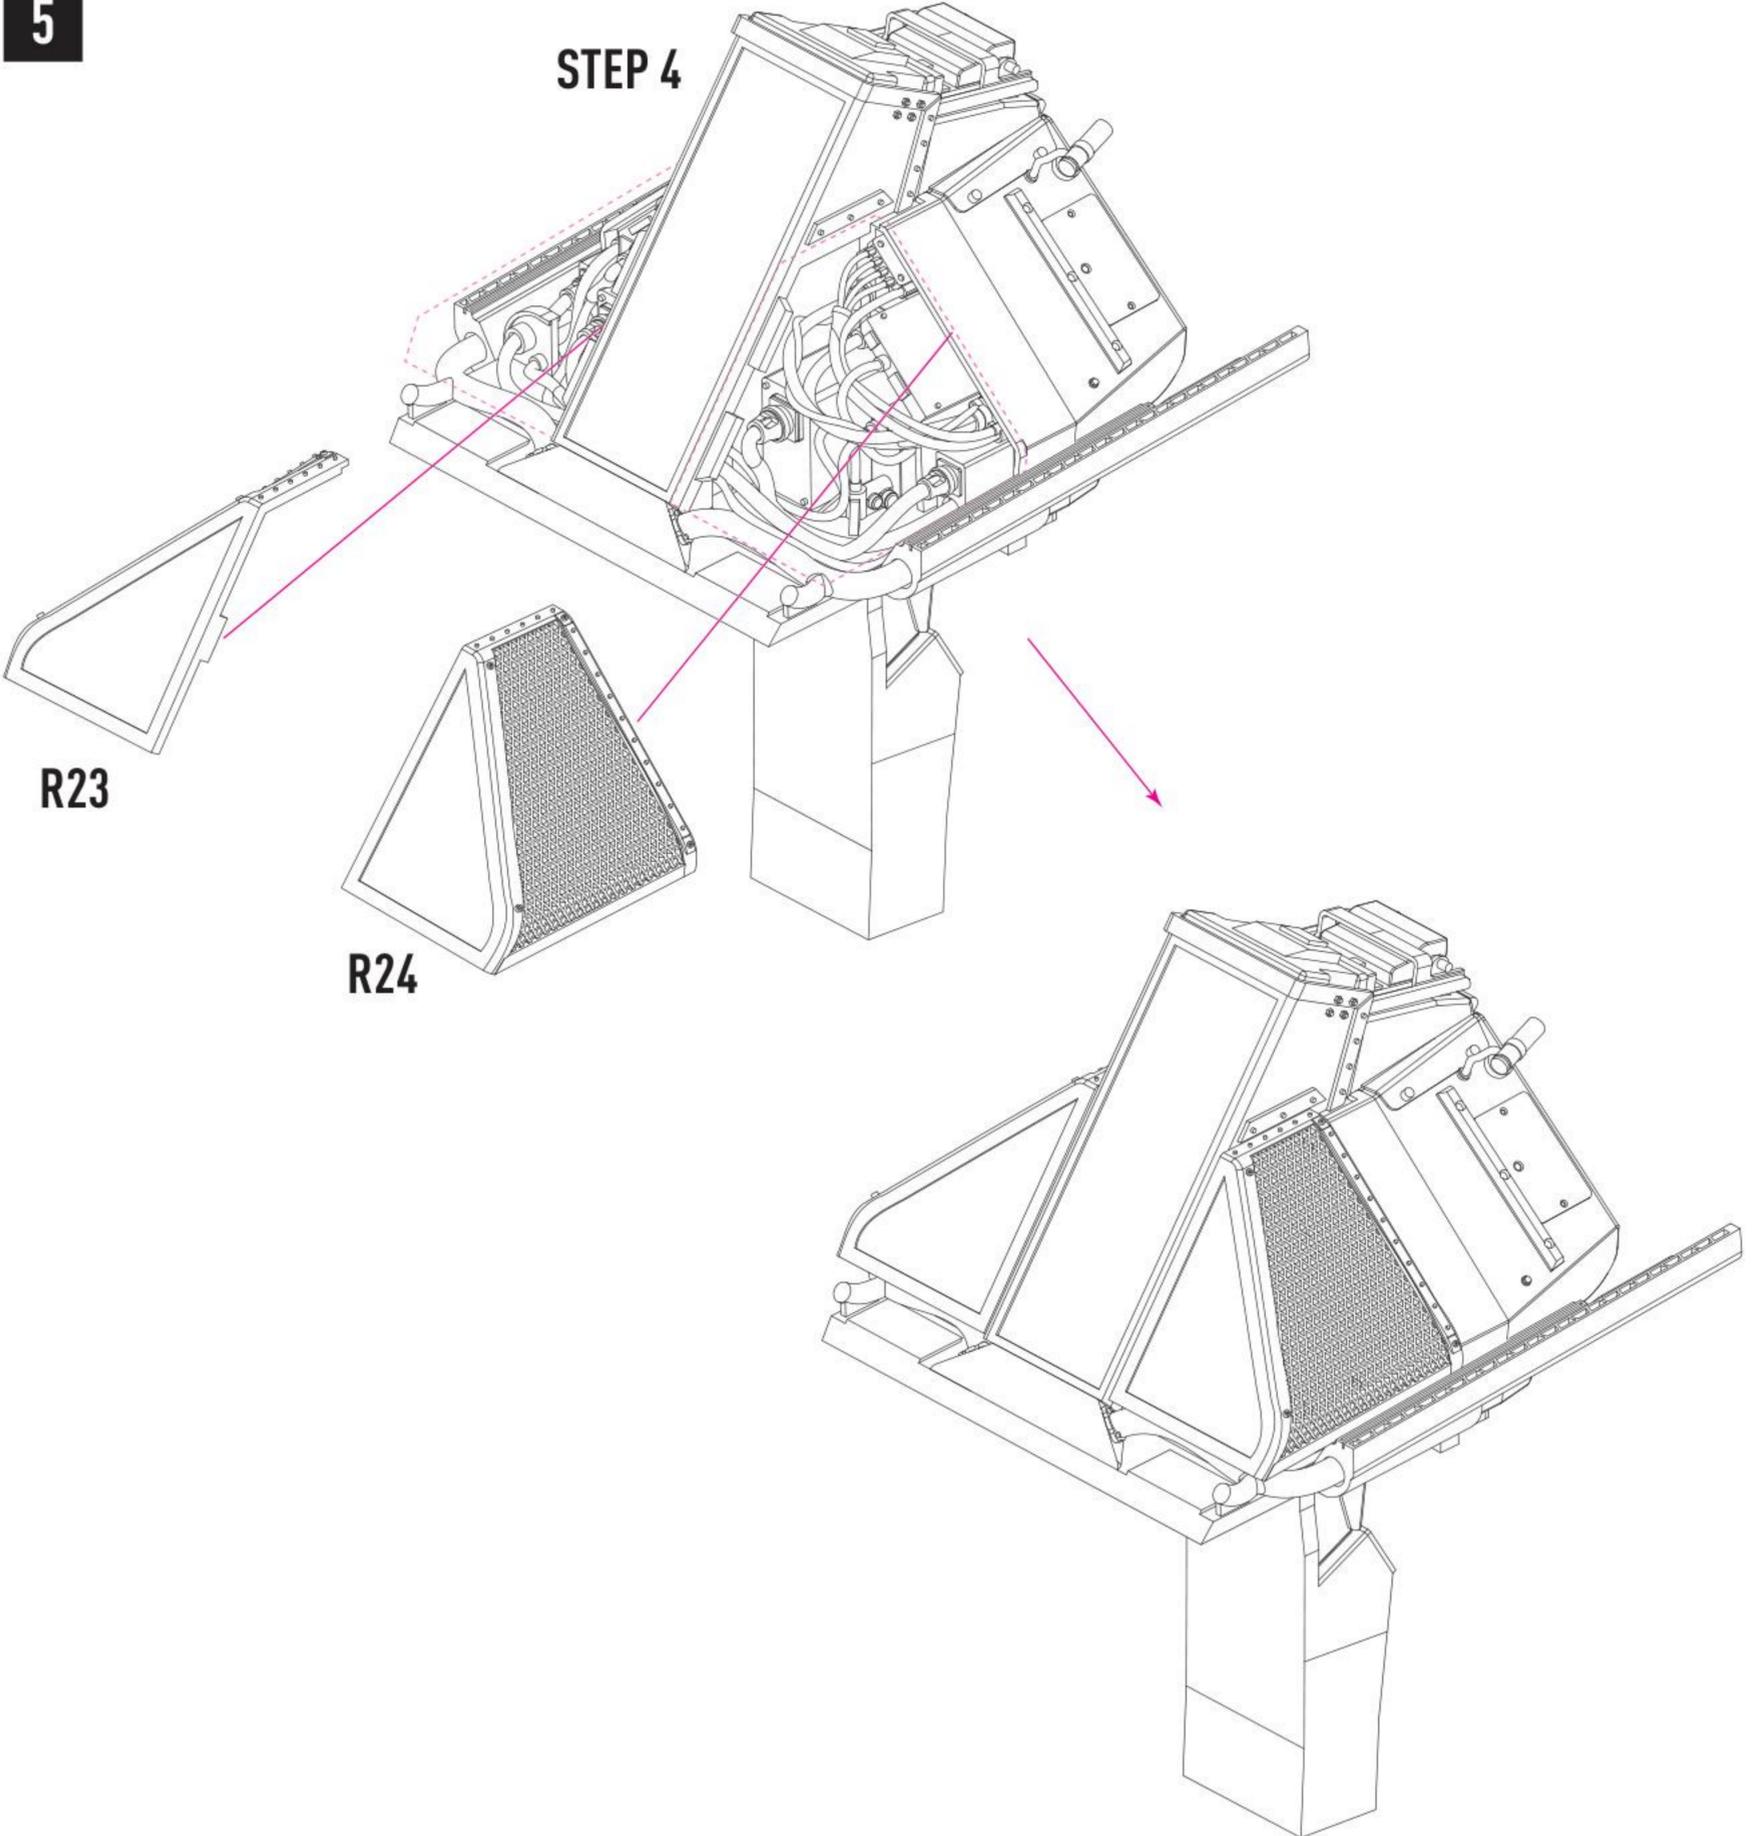


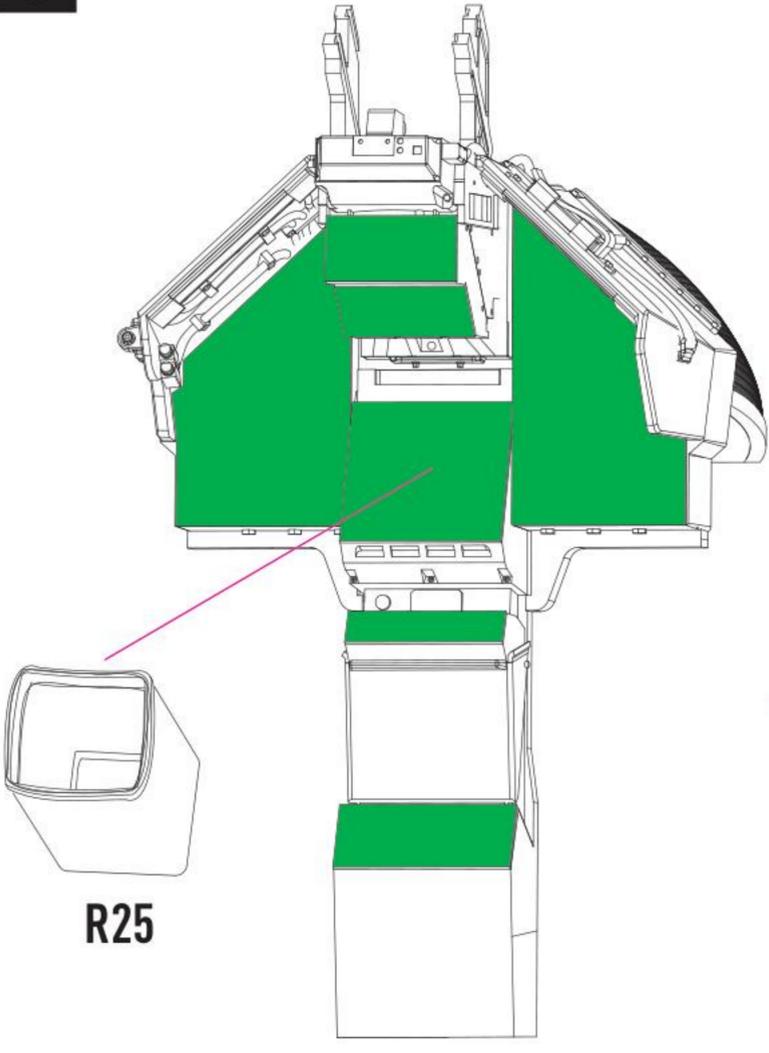

STEP 3

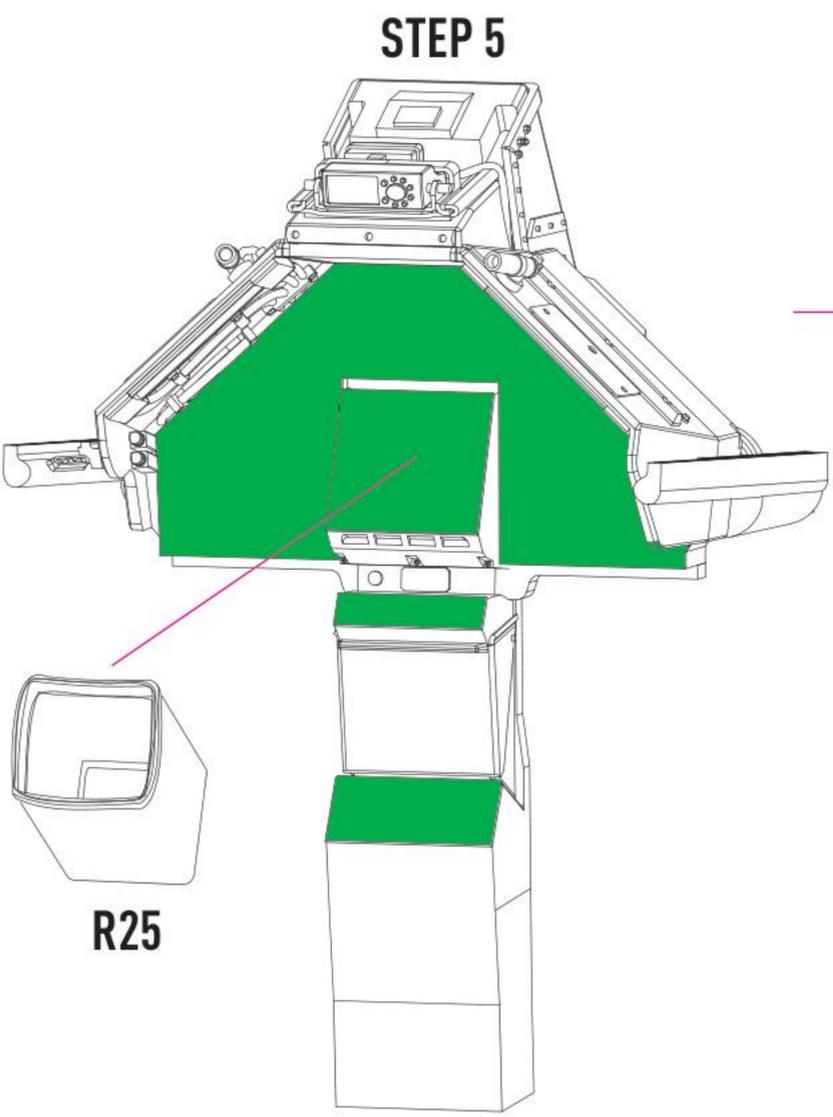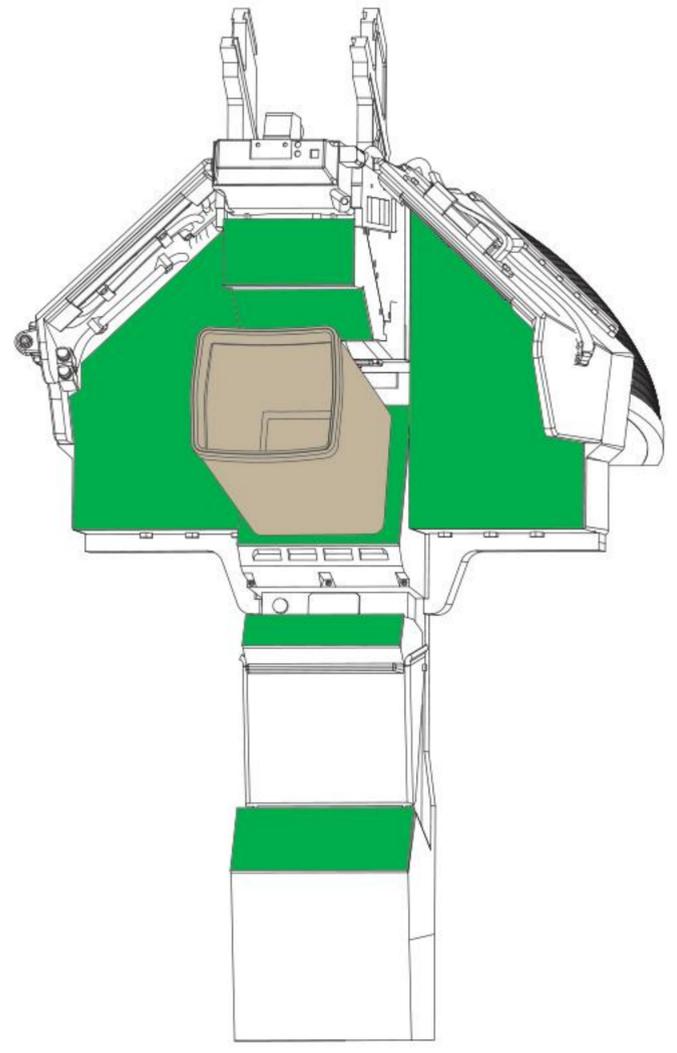


STEP 5

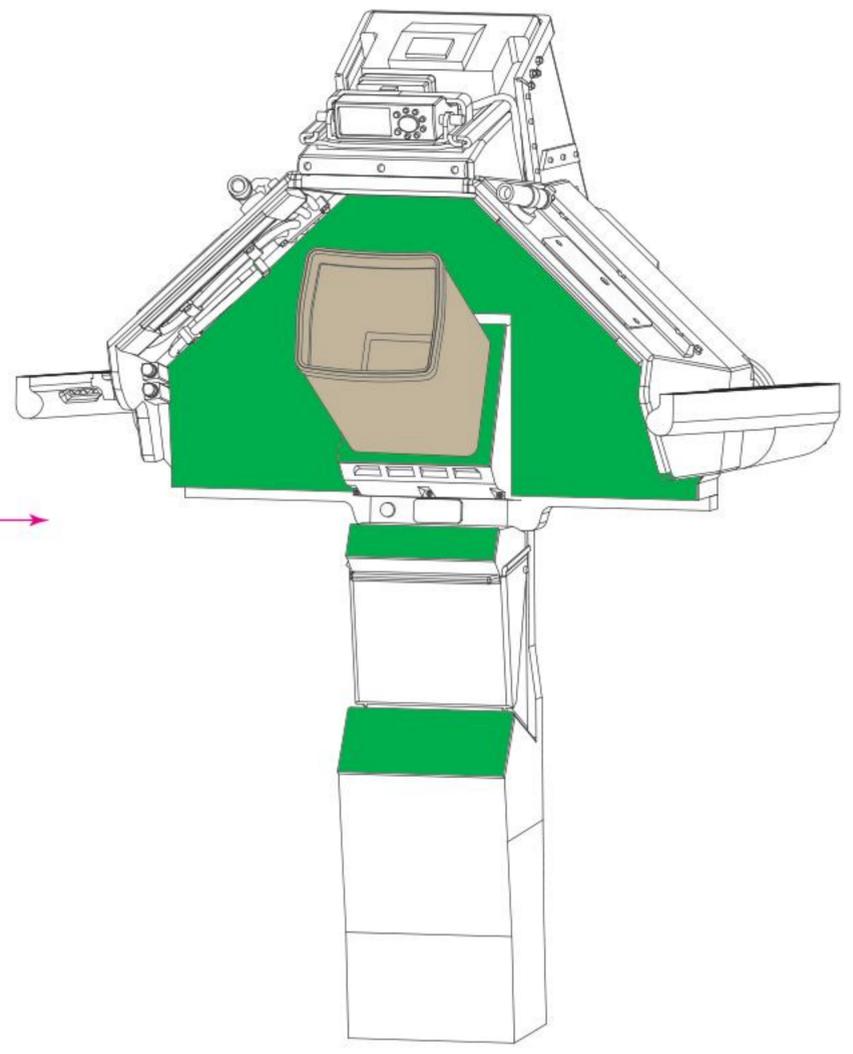


7

PART FROM  
THE KIT

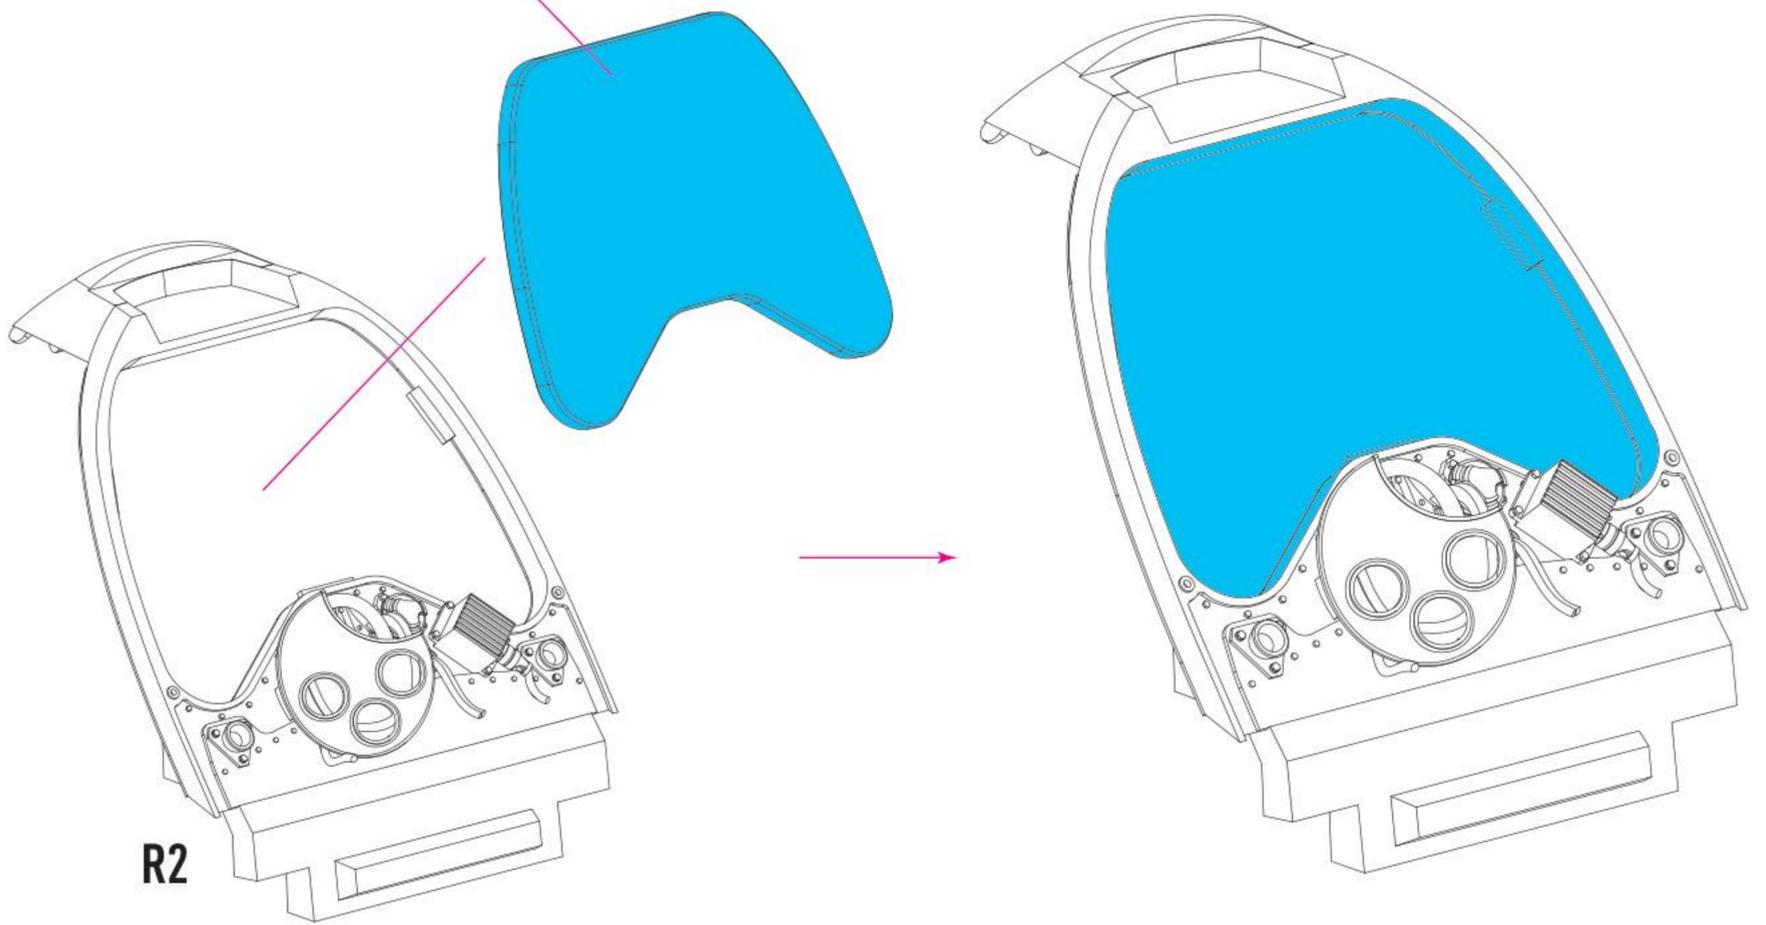


8


STEP 7

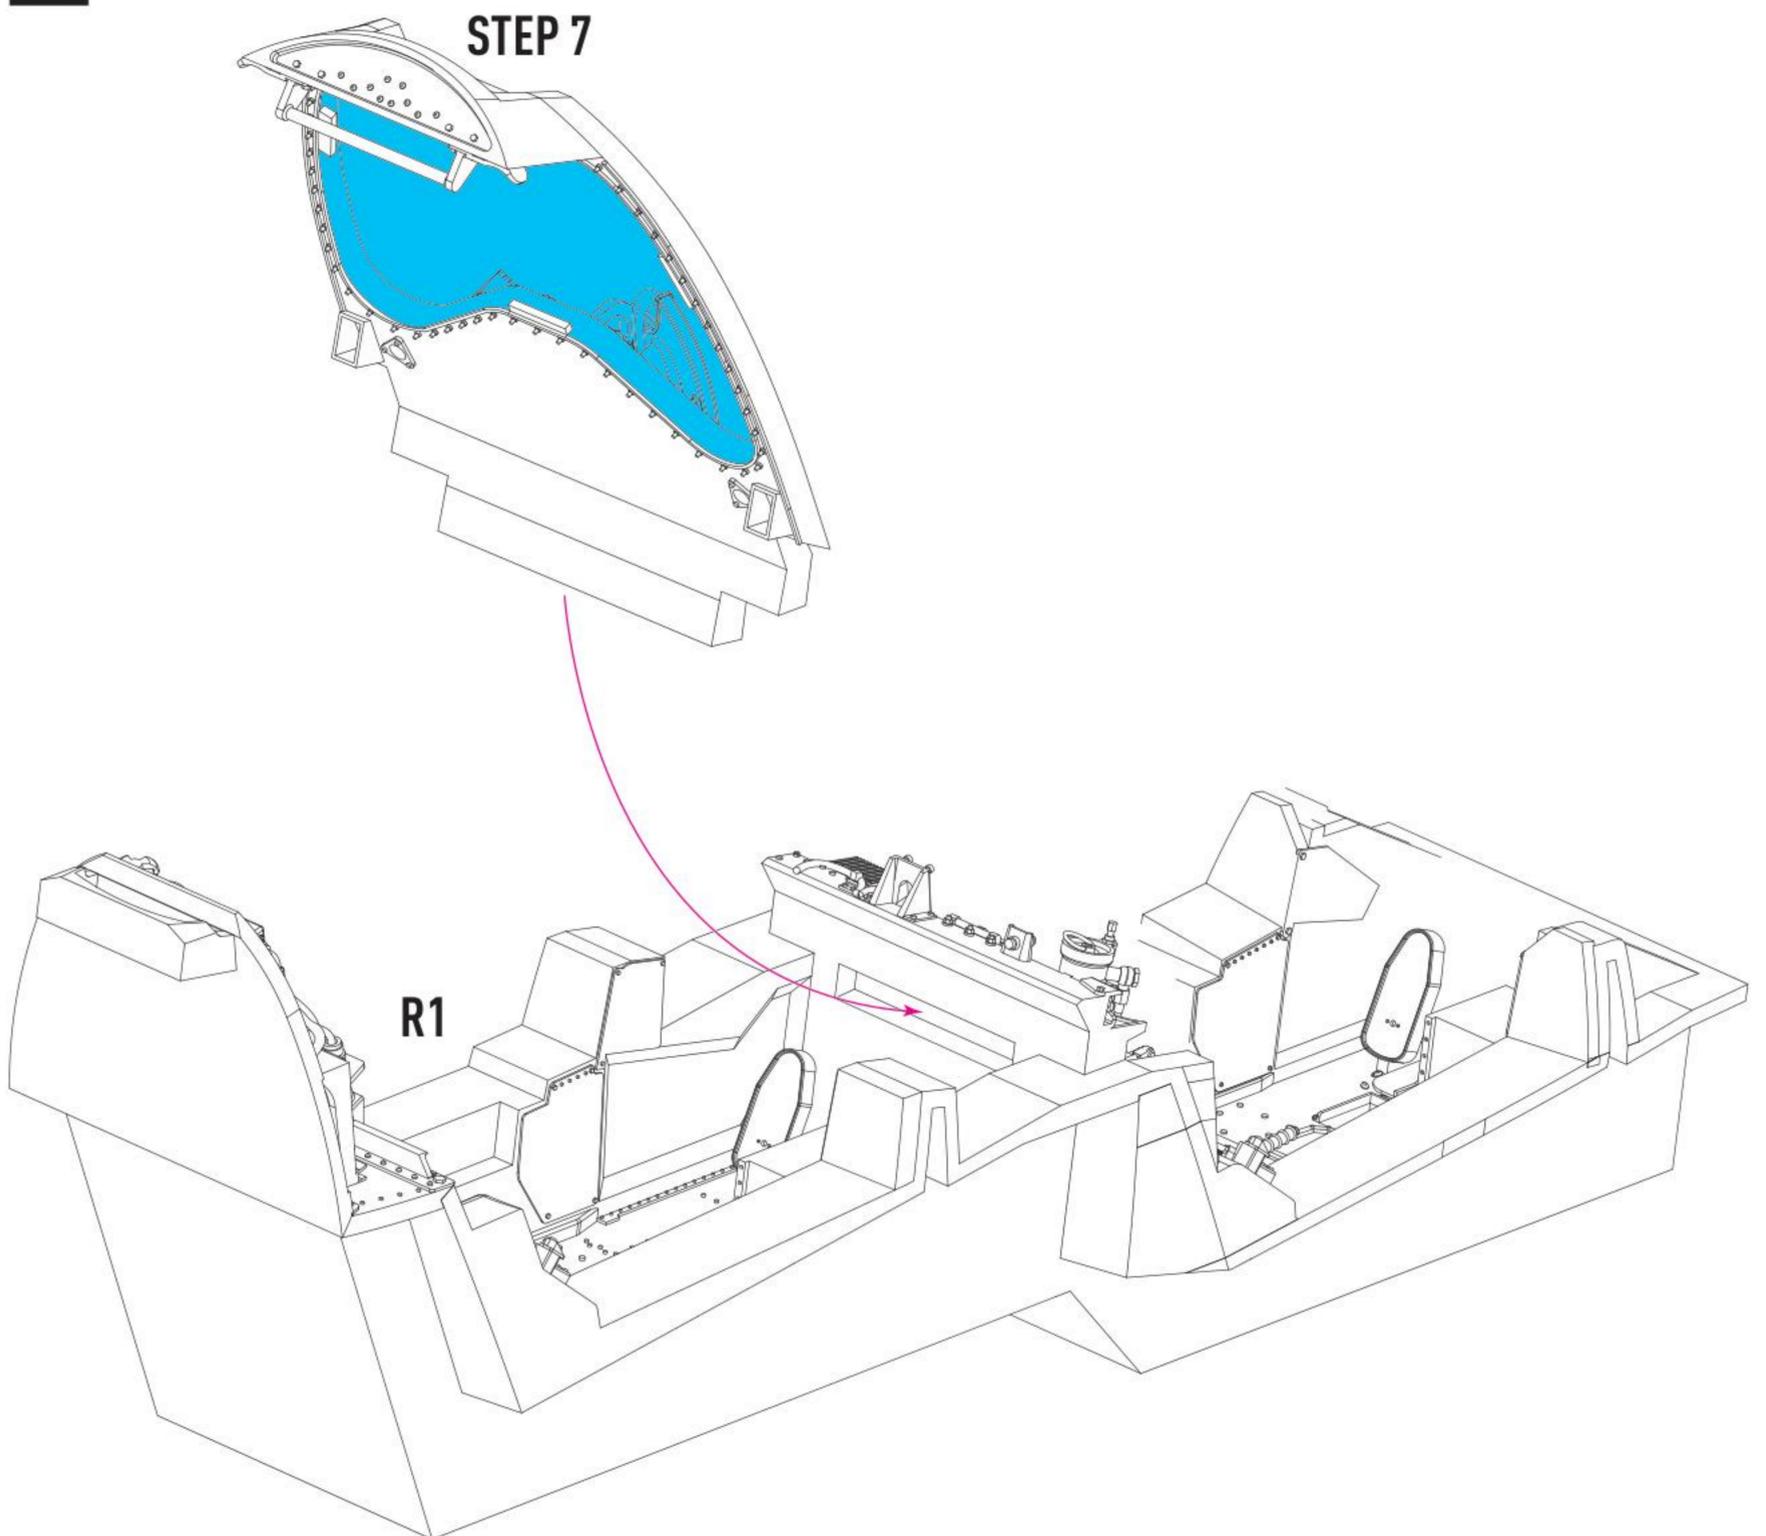



9

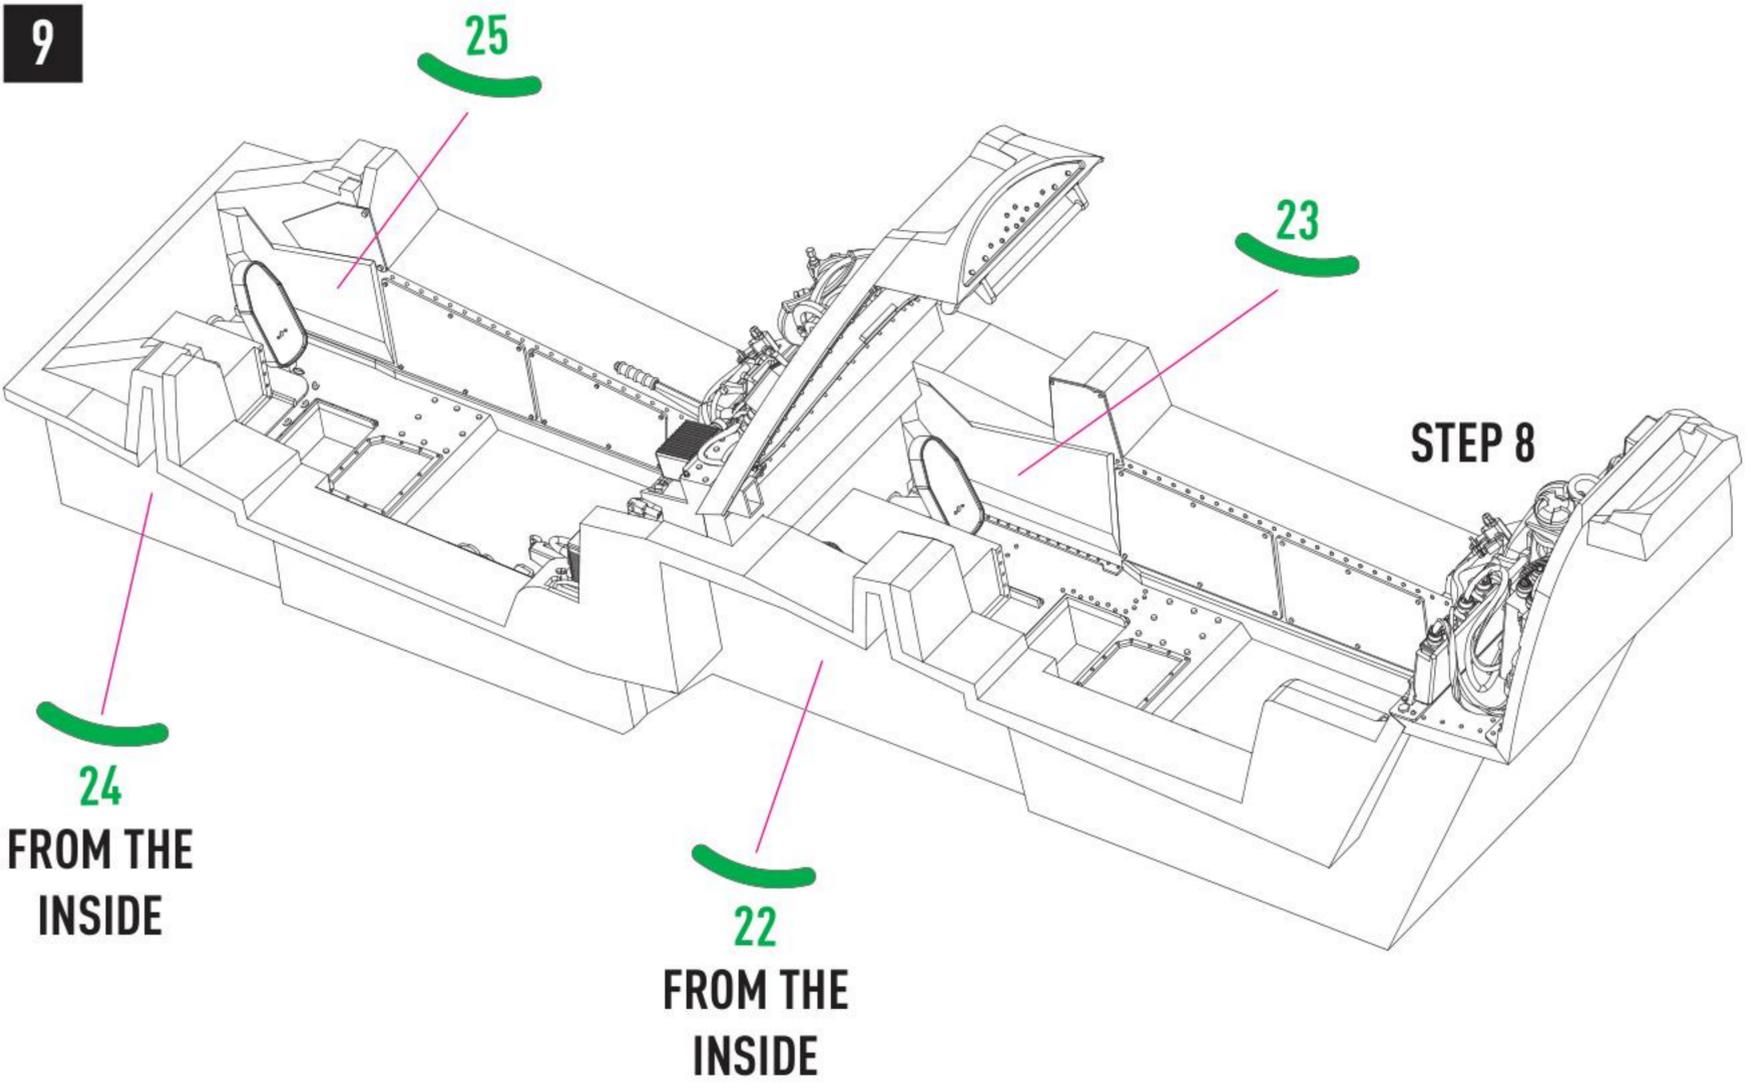


10

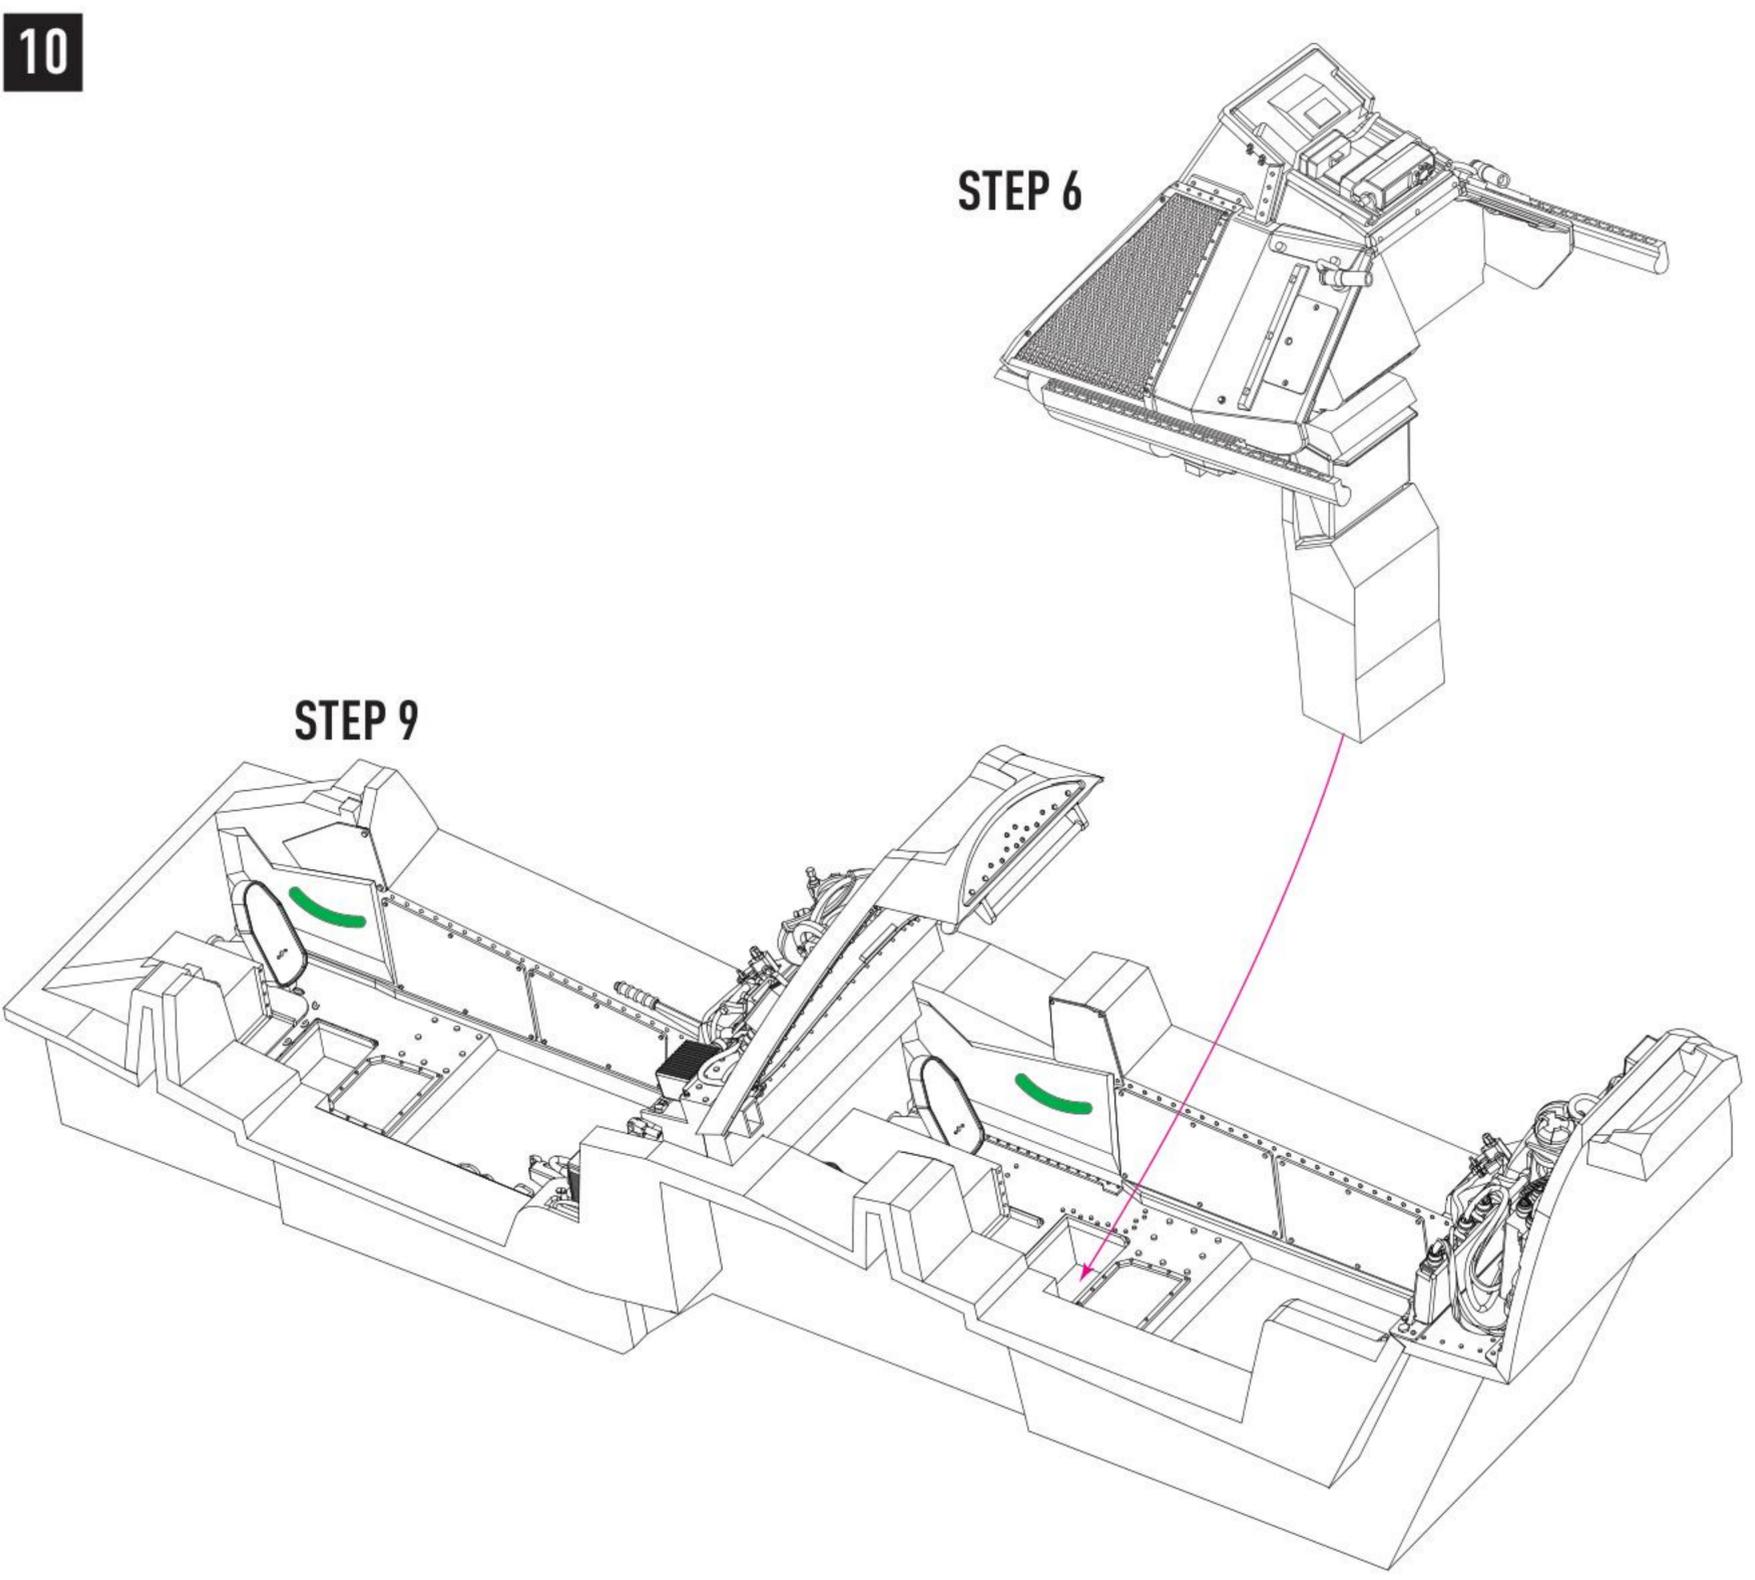


STEP 10

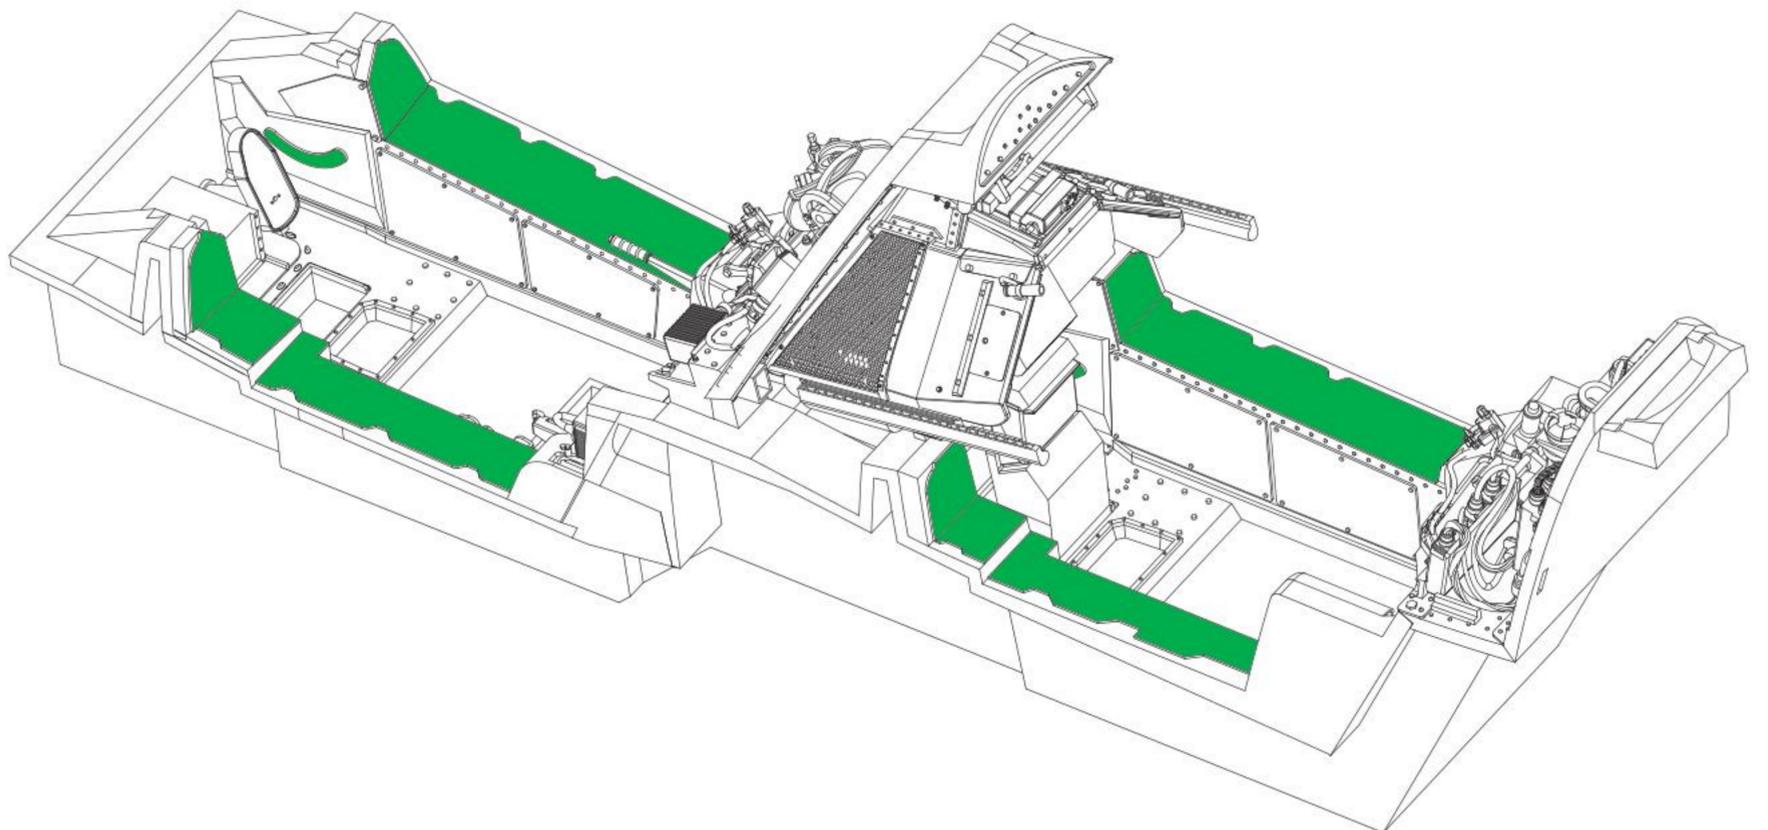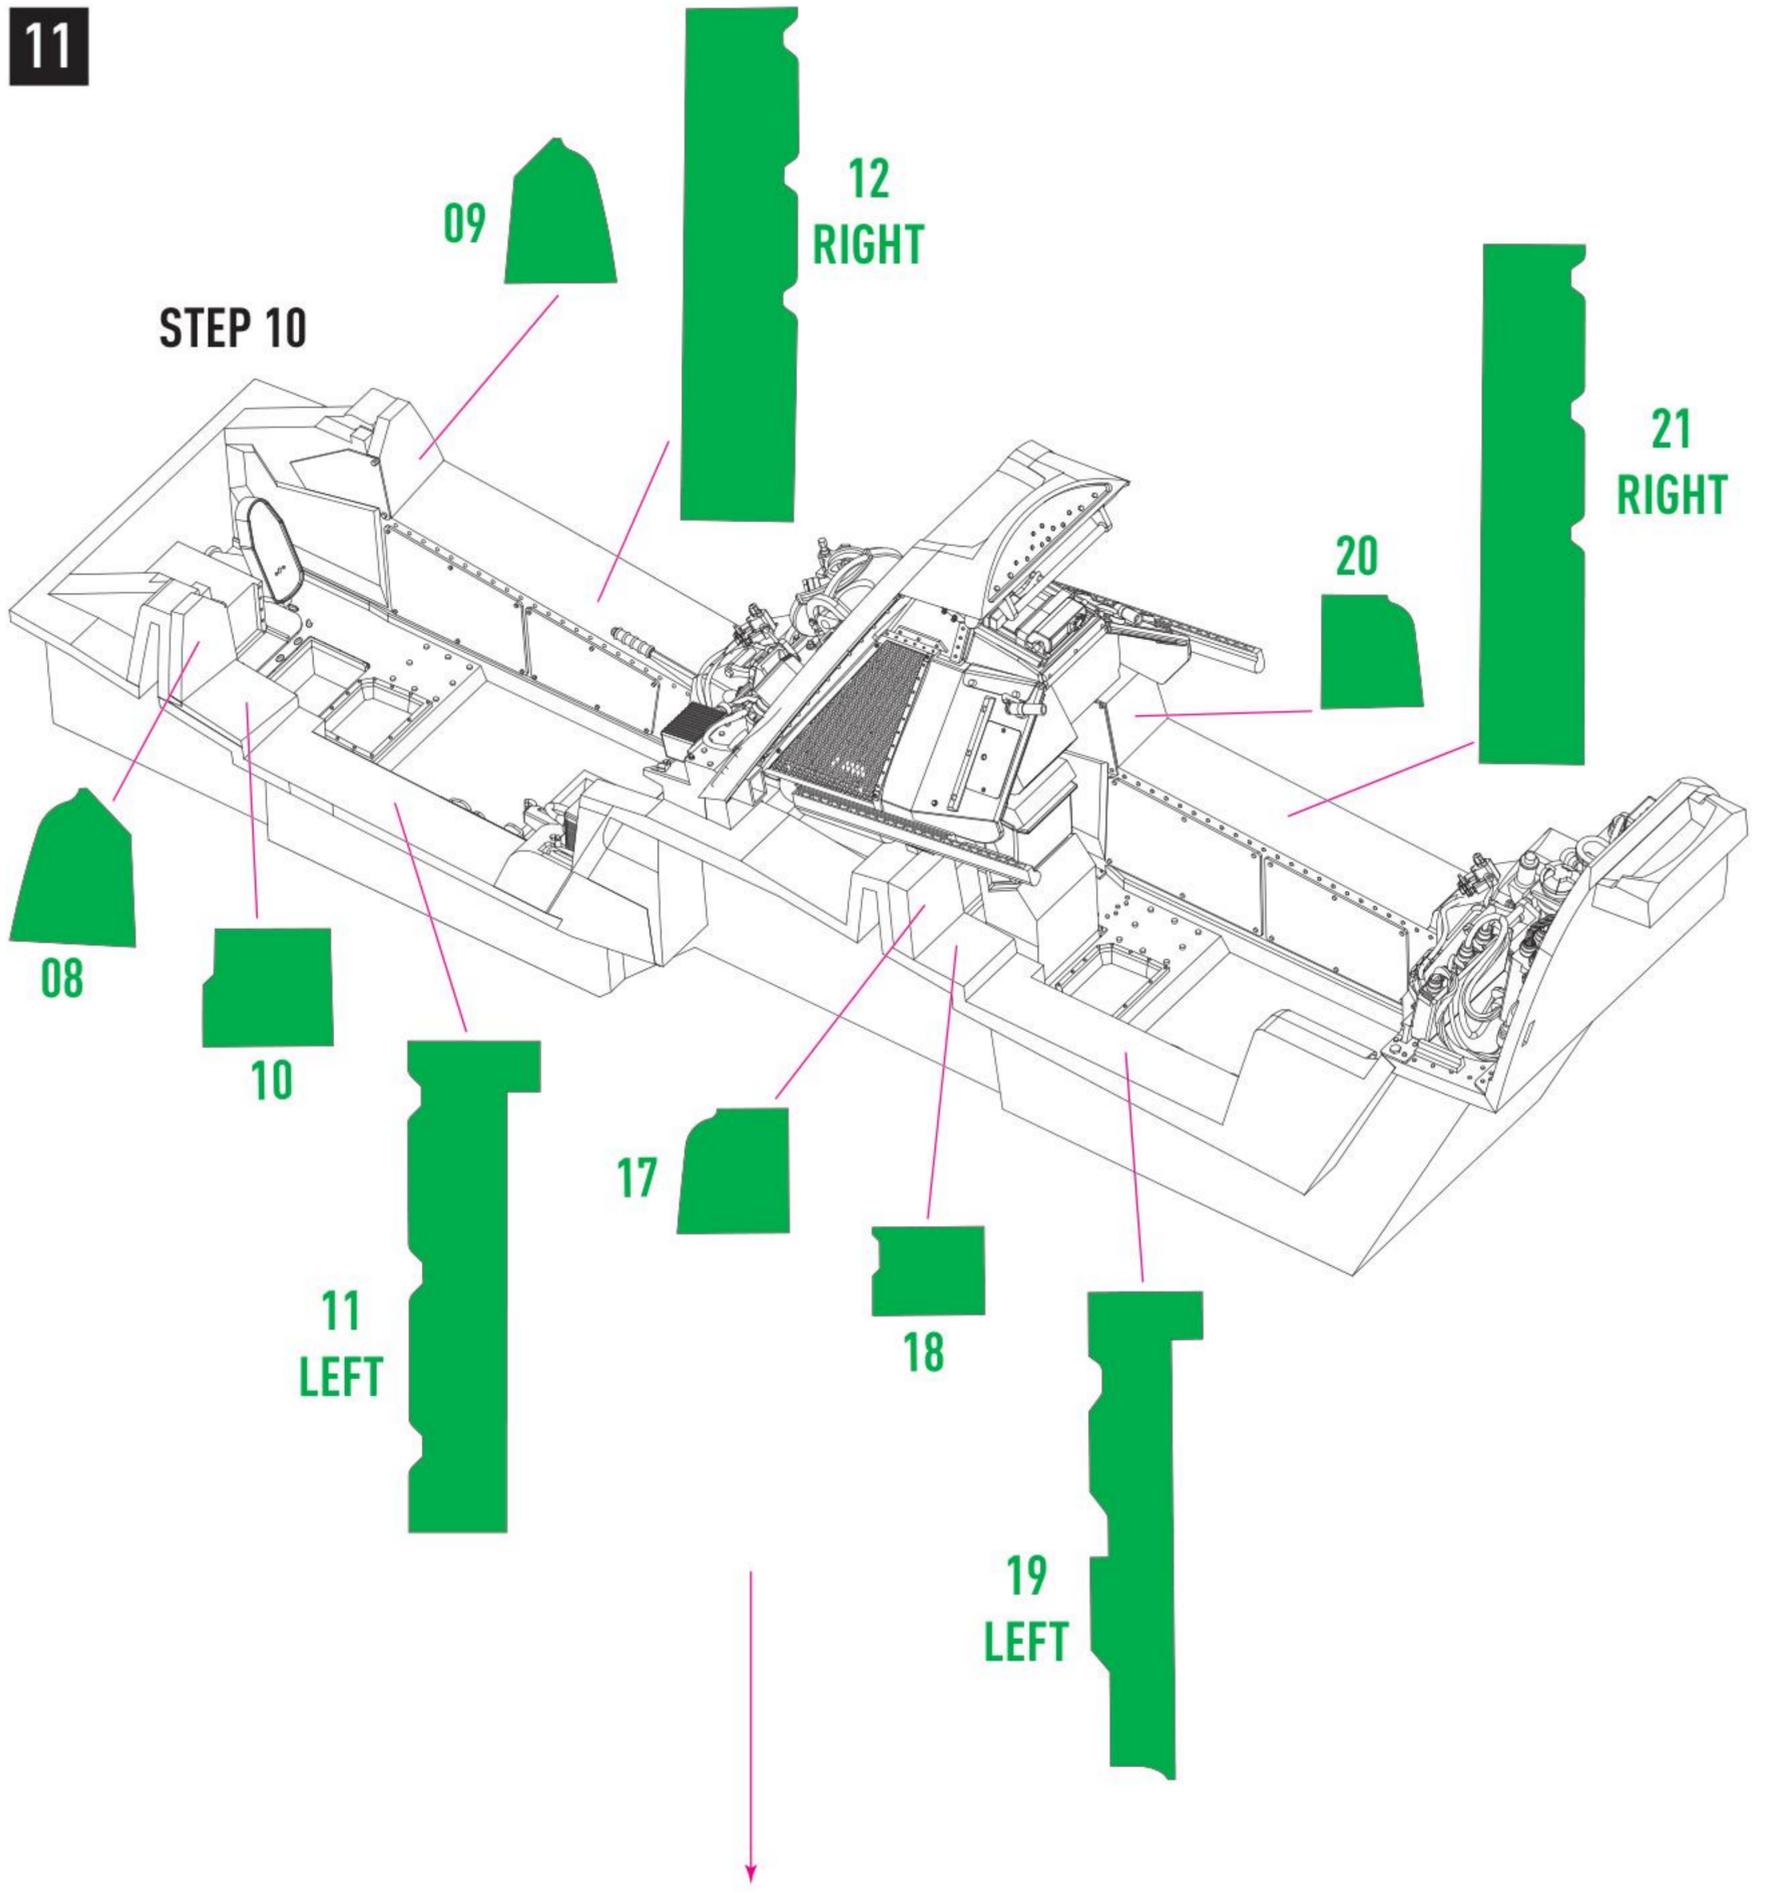

**12**

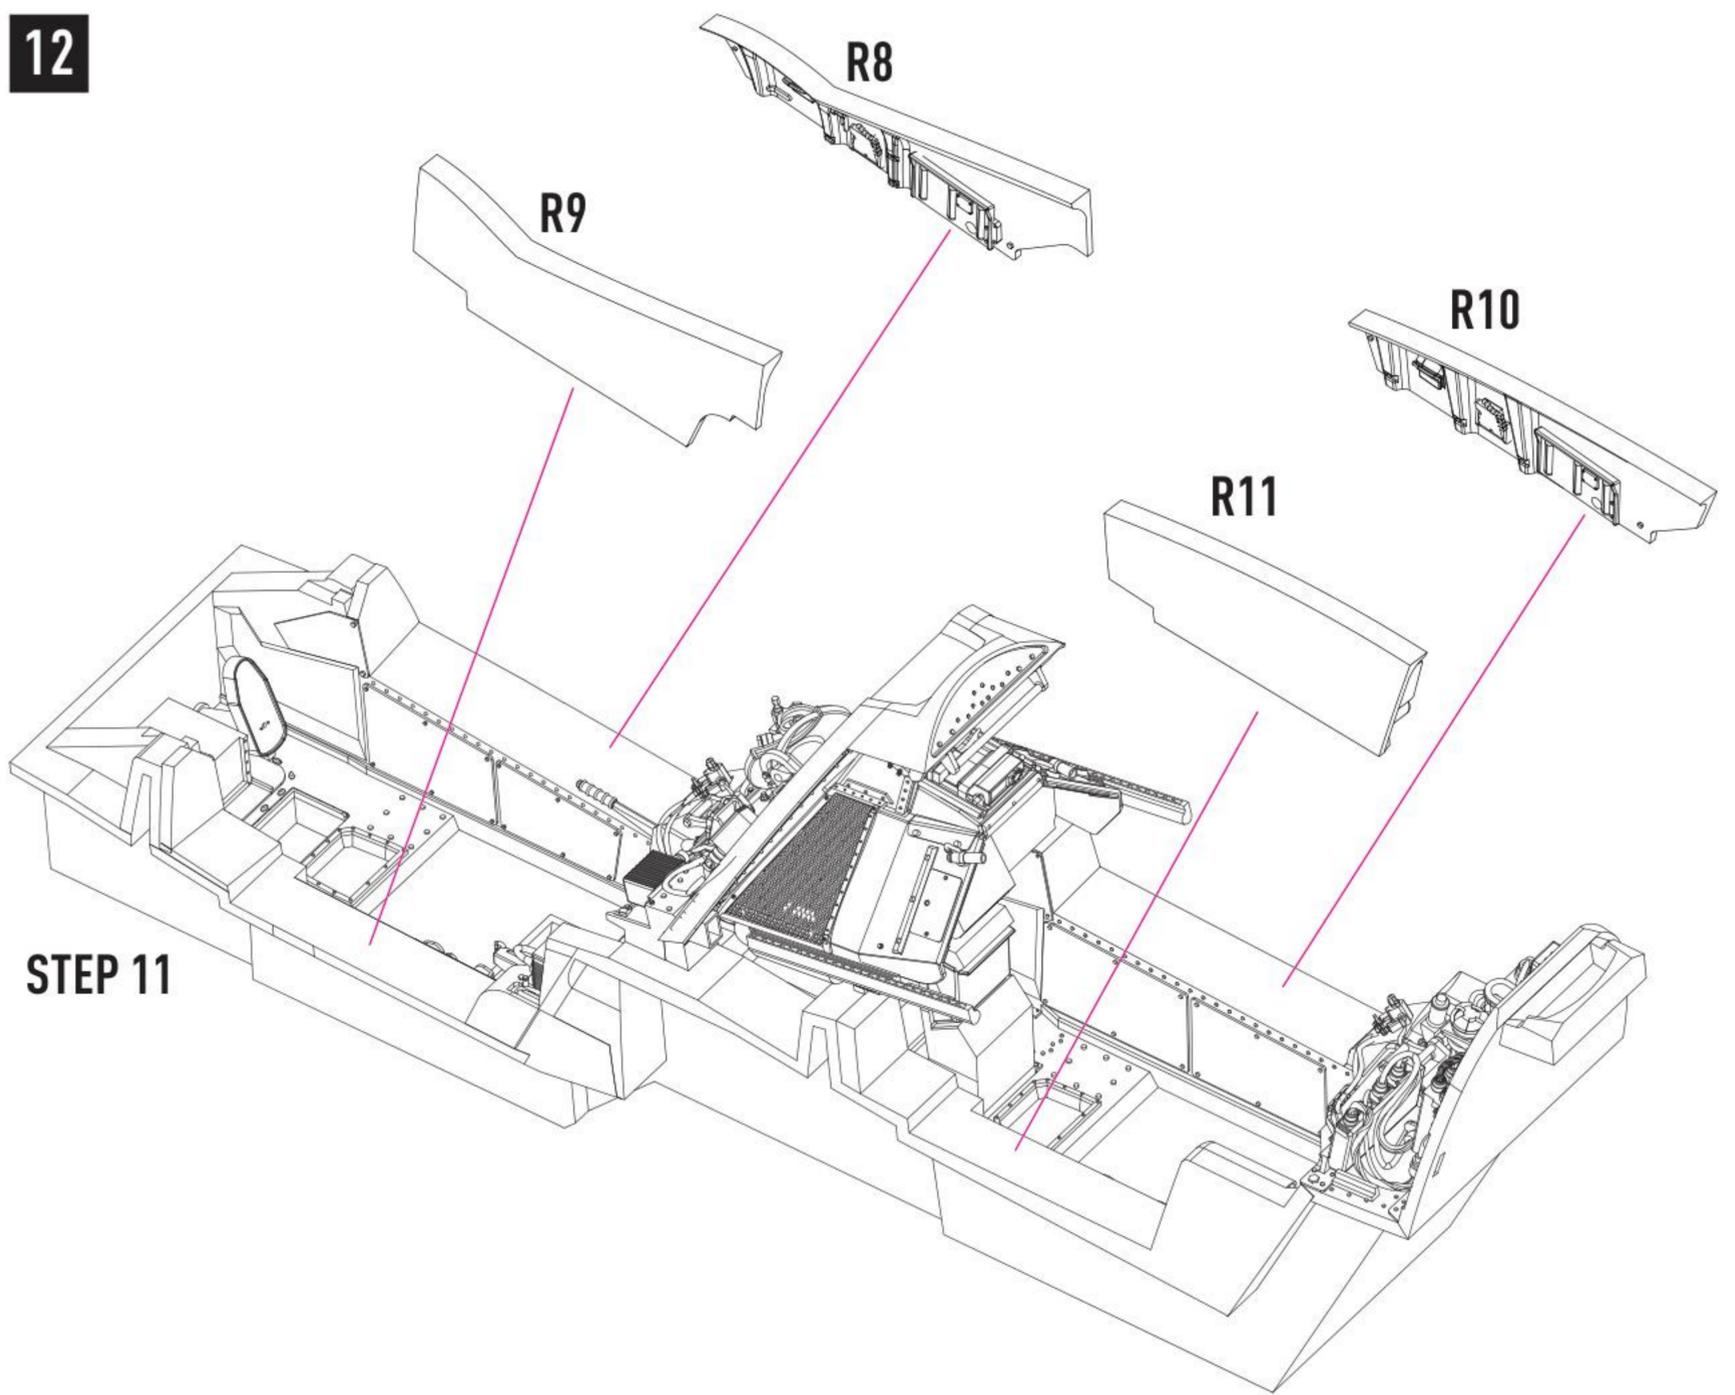


**13**

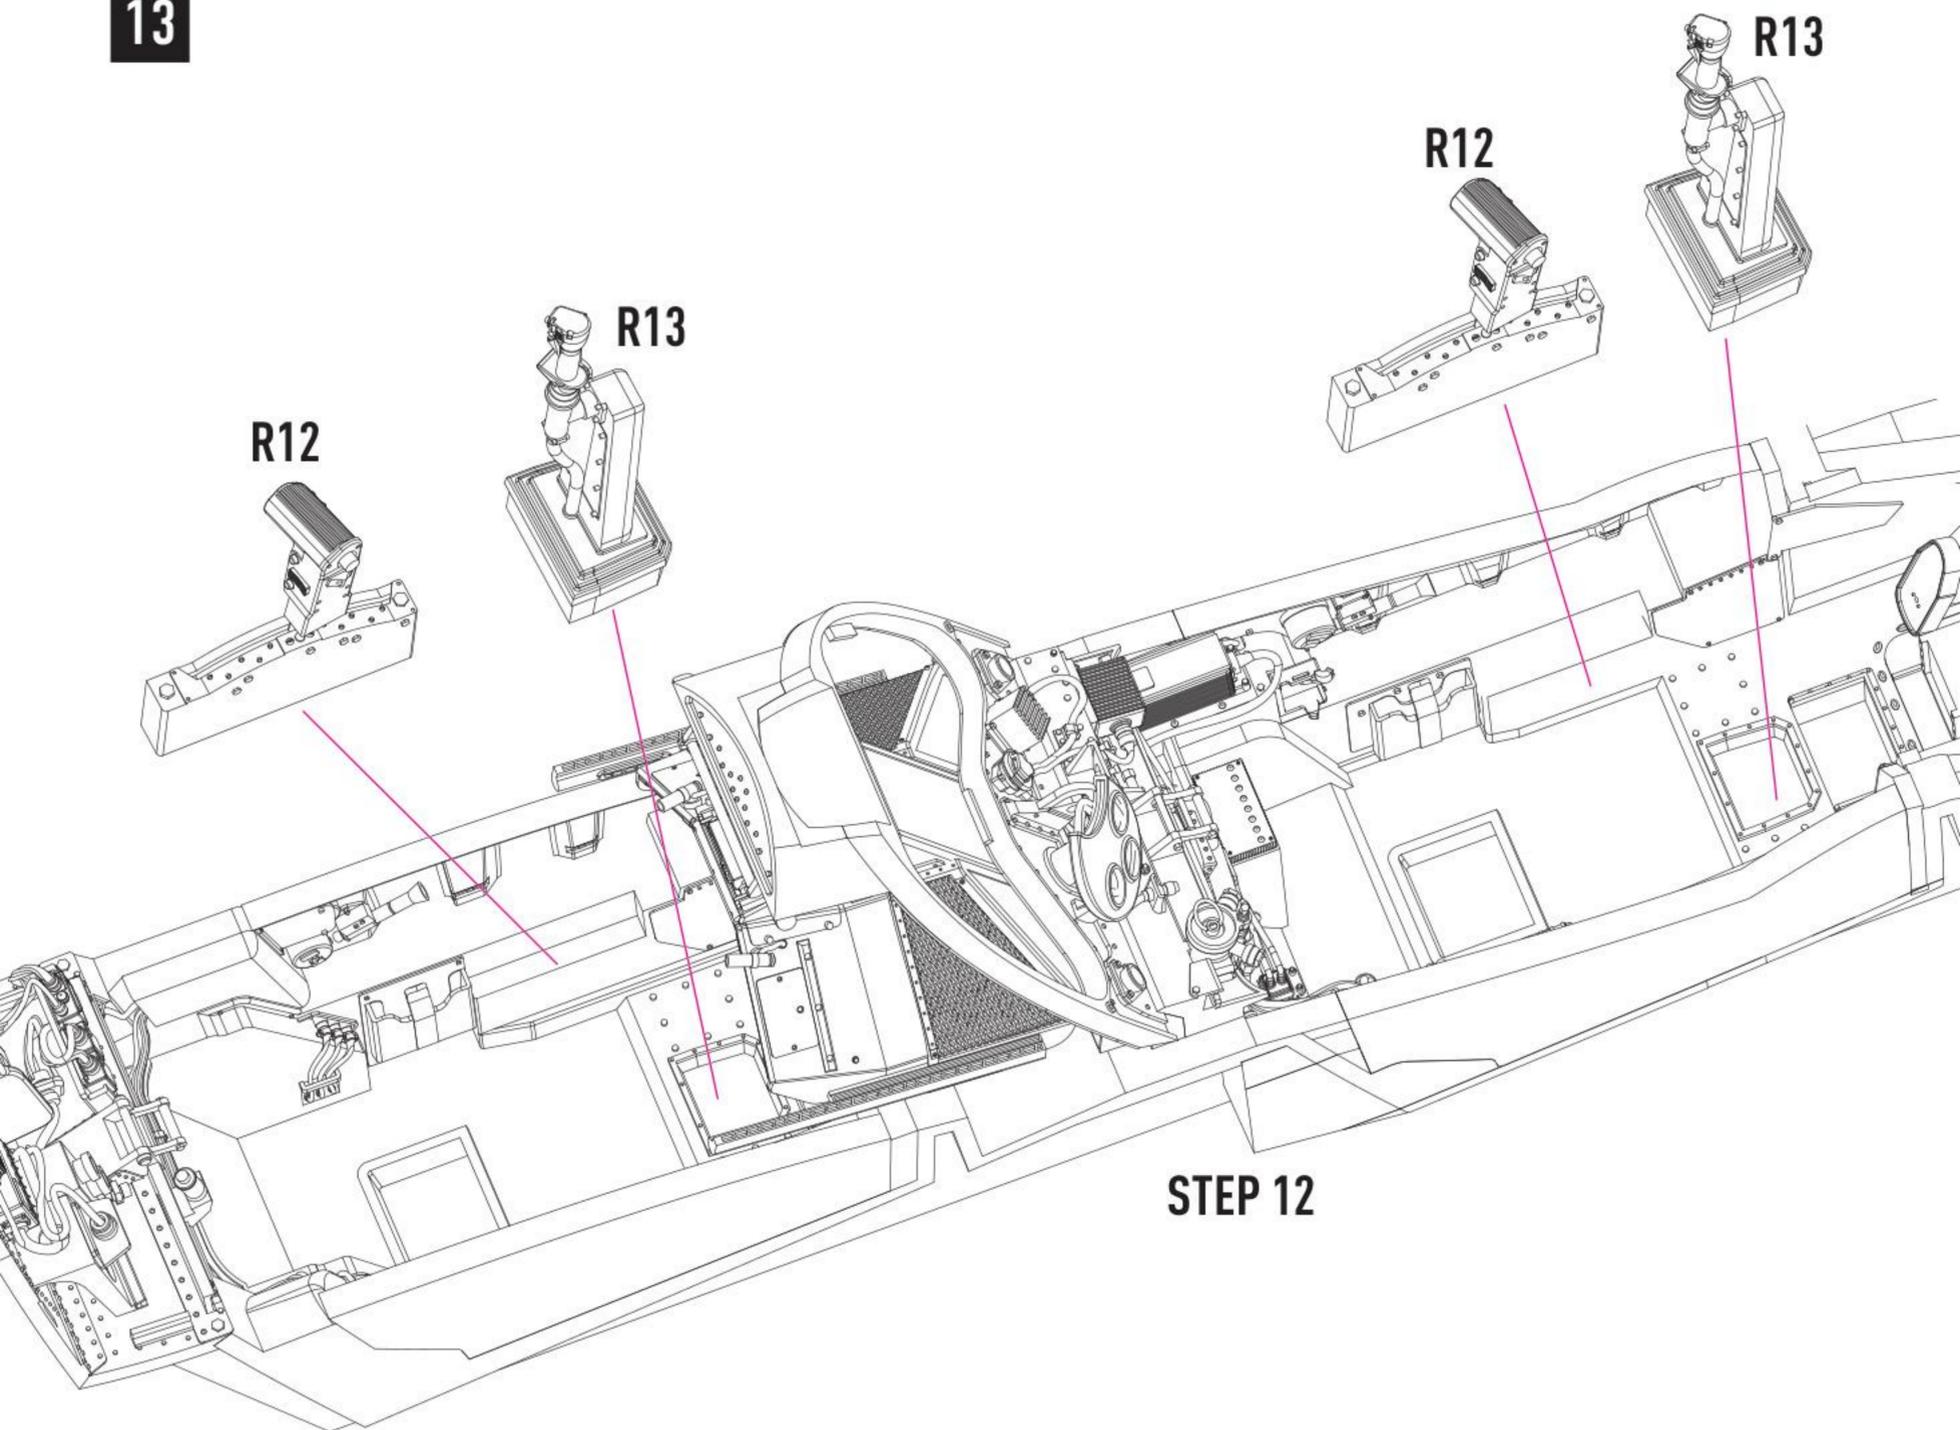


14

PART FROM THE KIT


CUT 2,4 MM

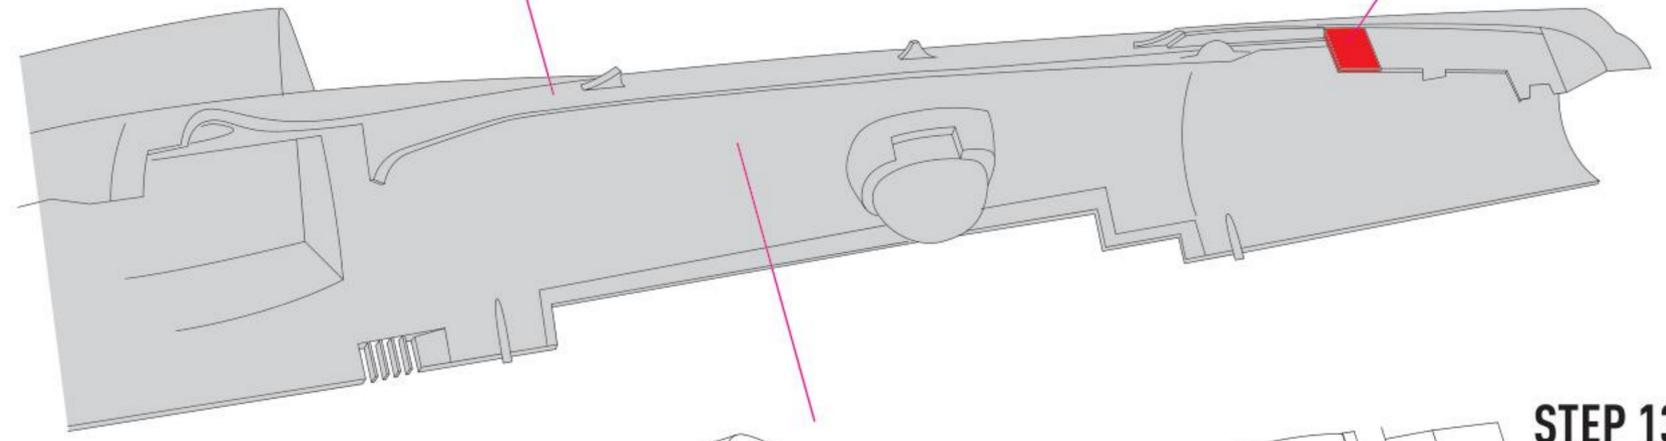


STEP 13

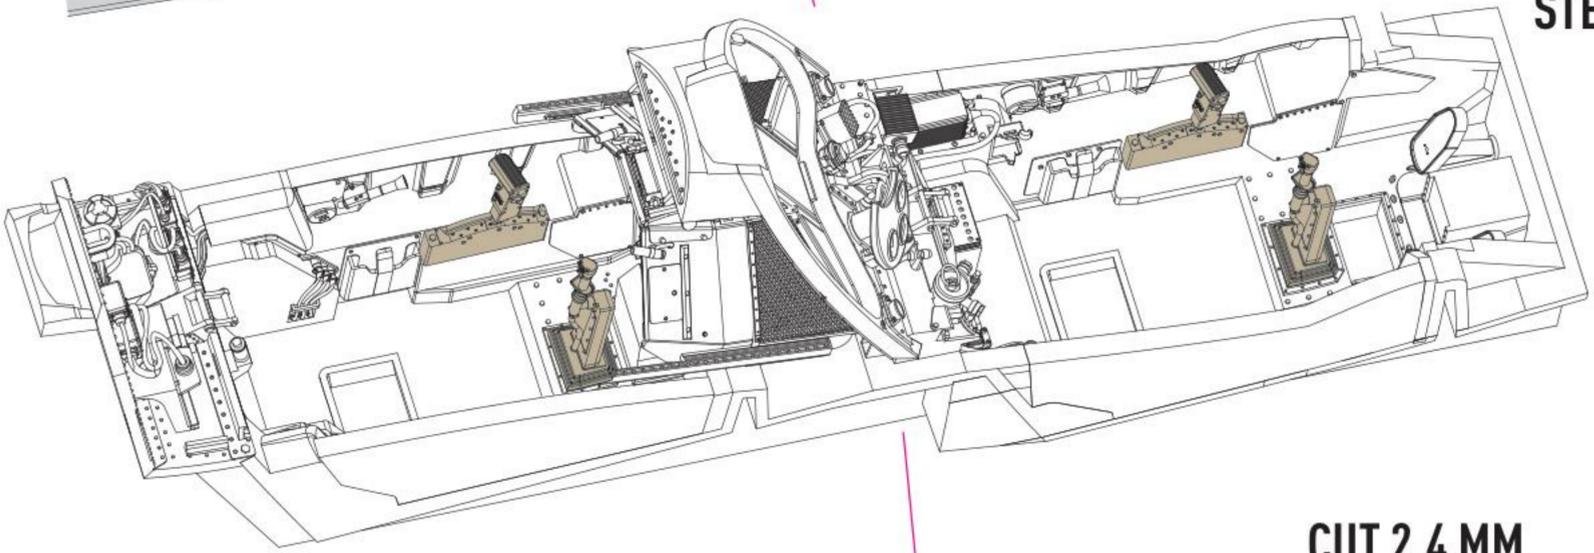


CUT 2,4 MM

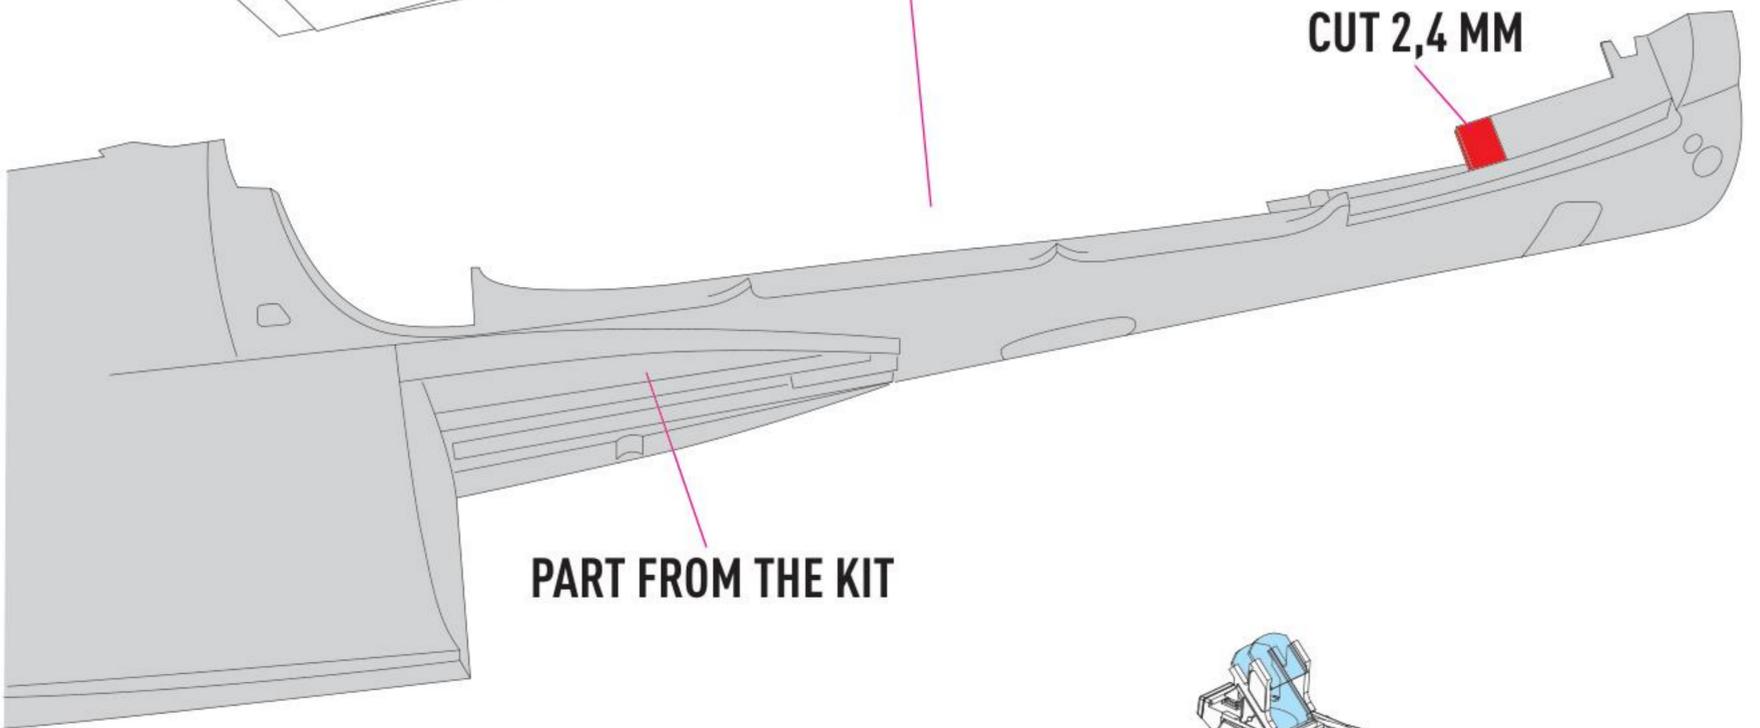


PART FROM THE KIT

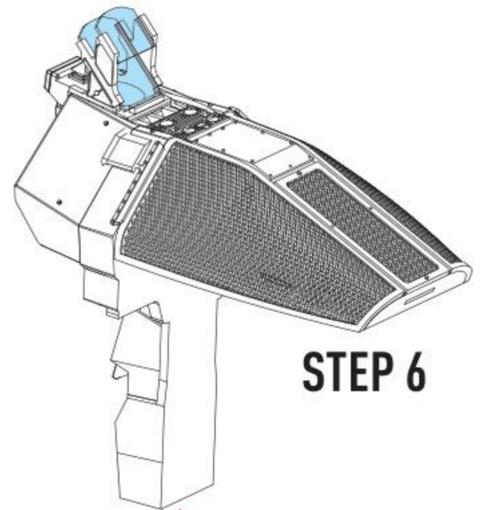


STEP 6

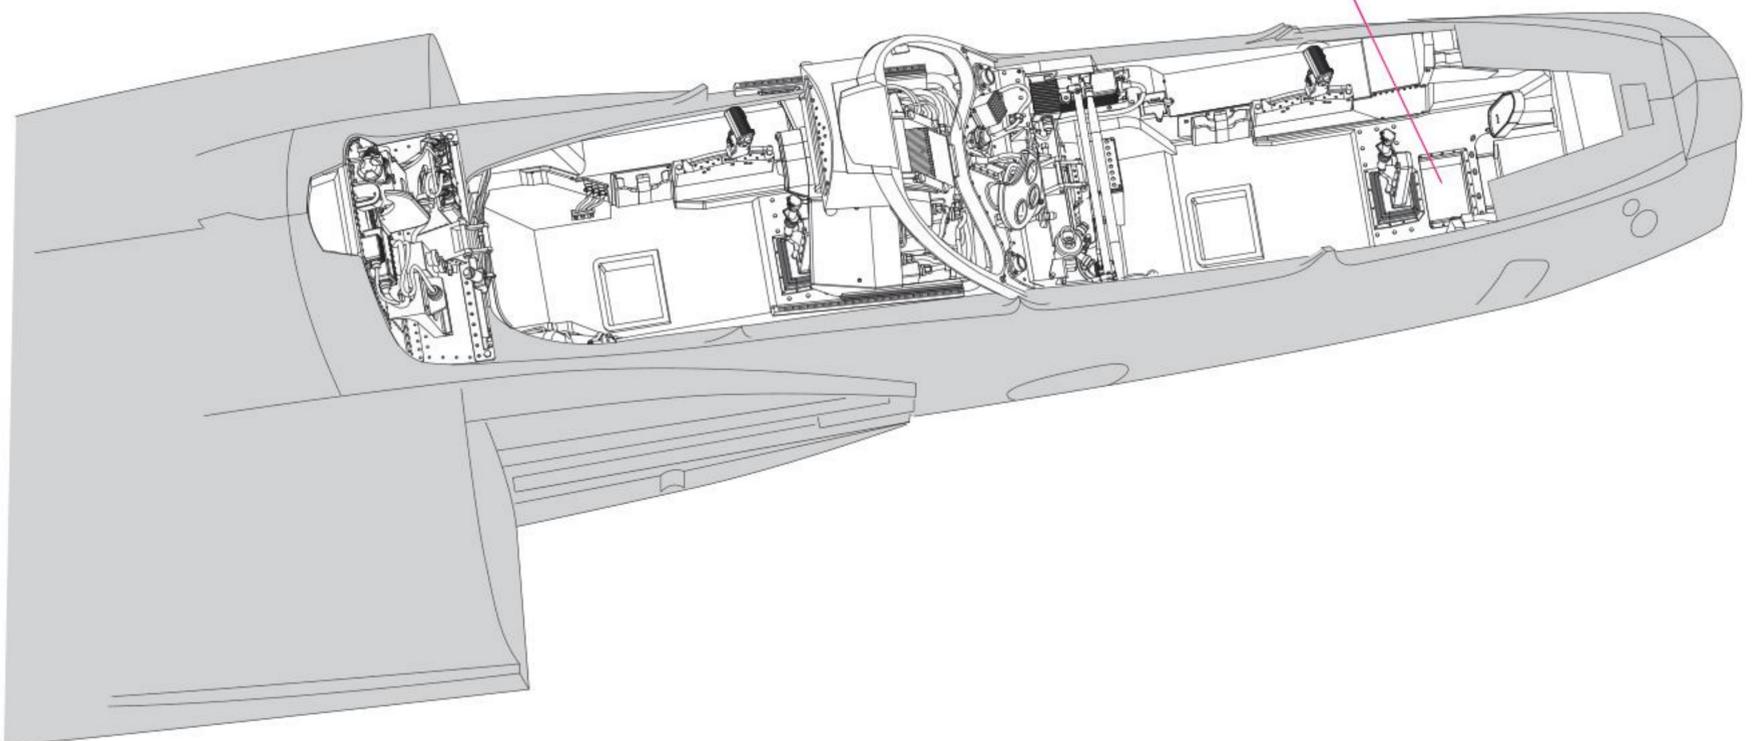

**15**

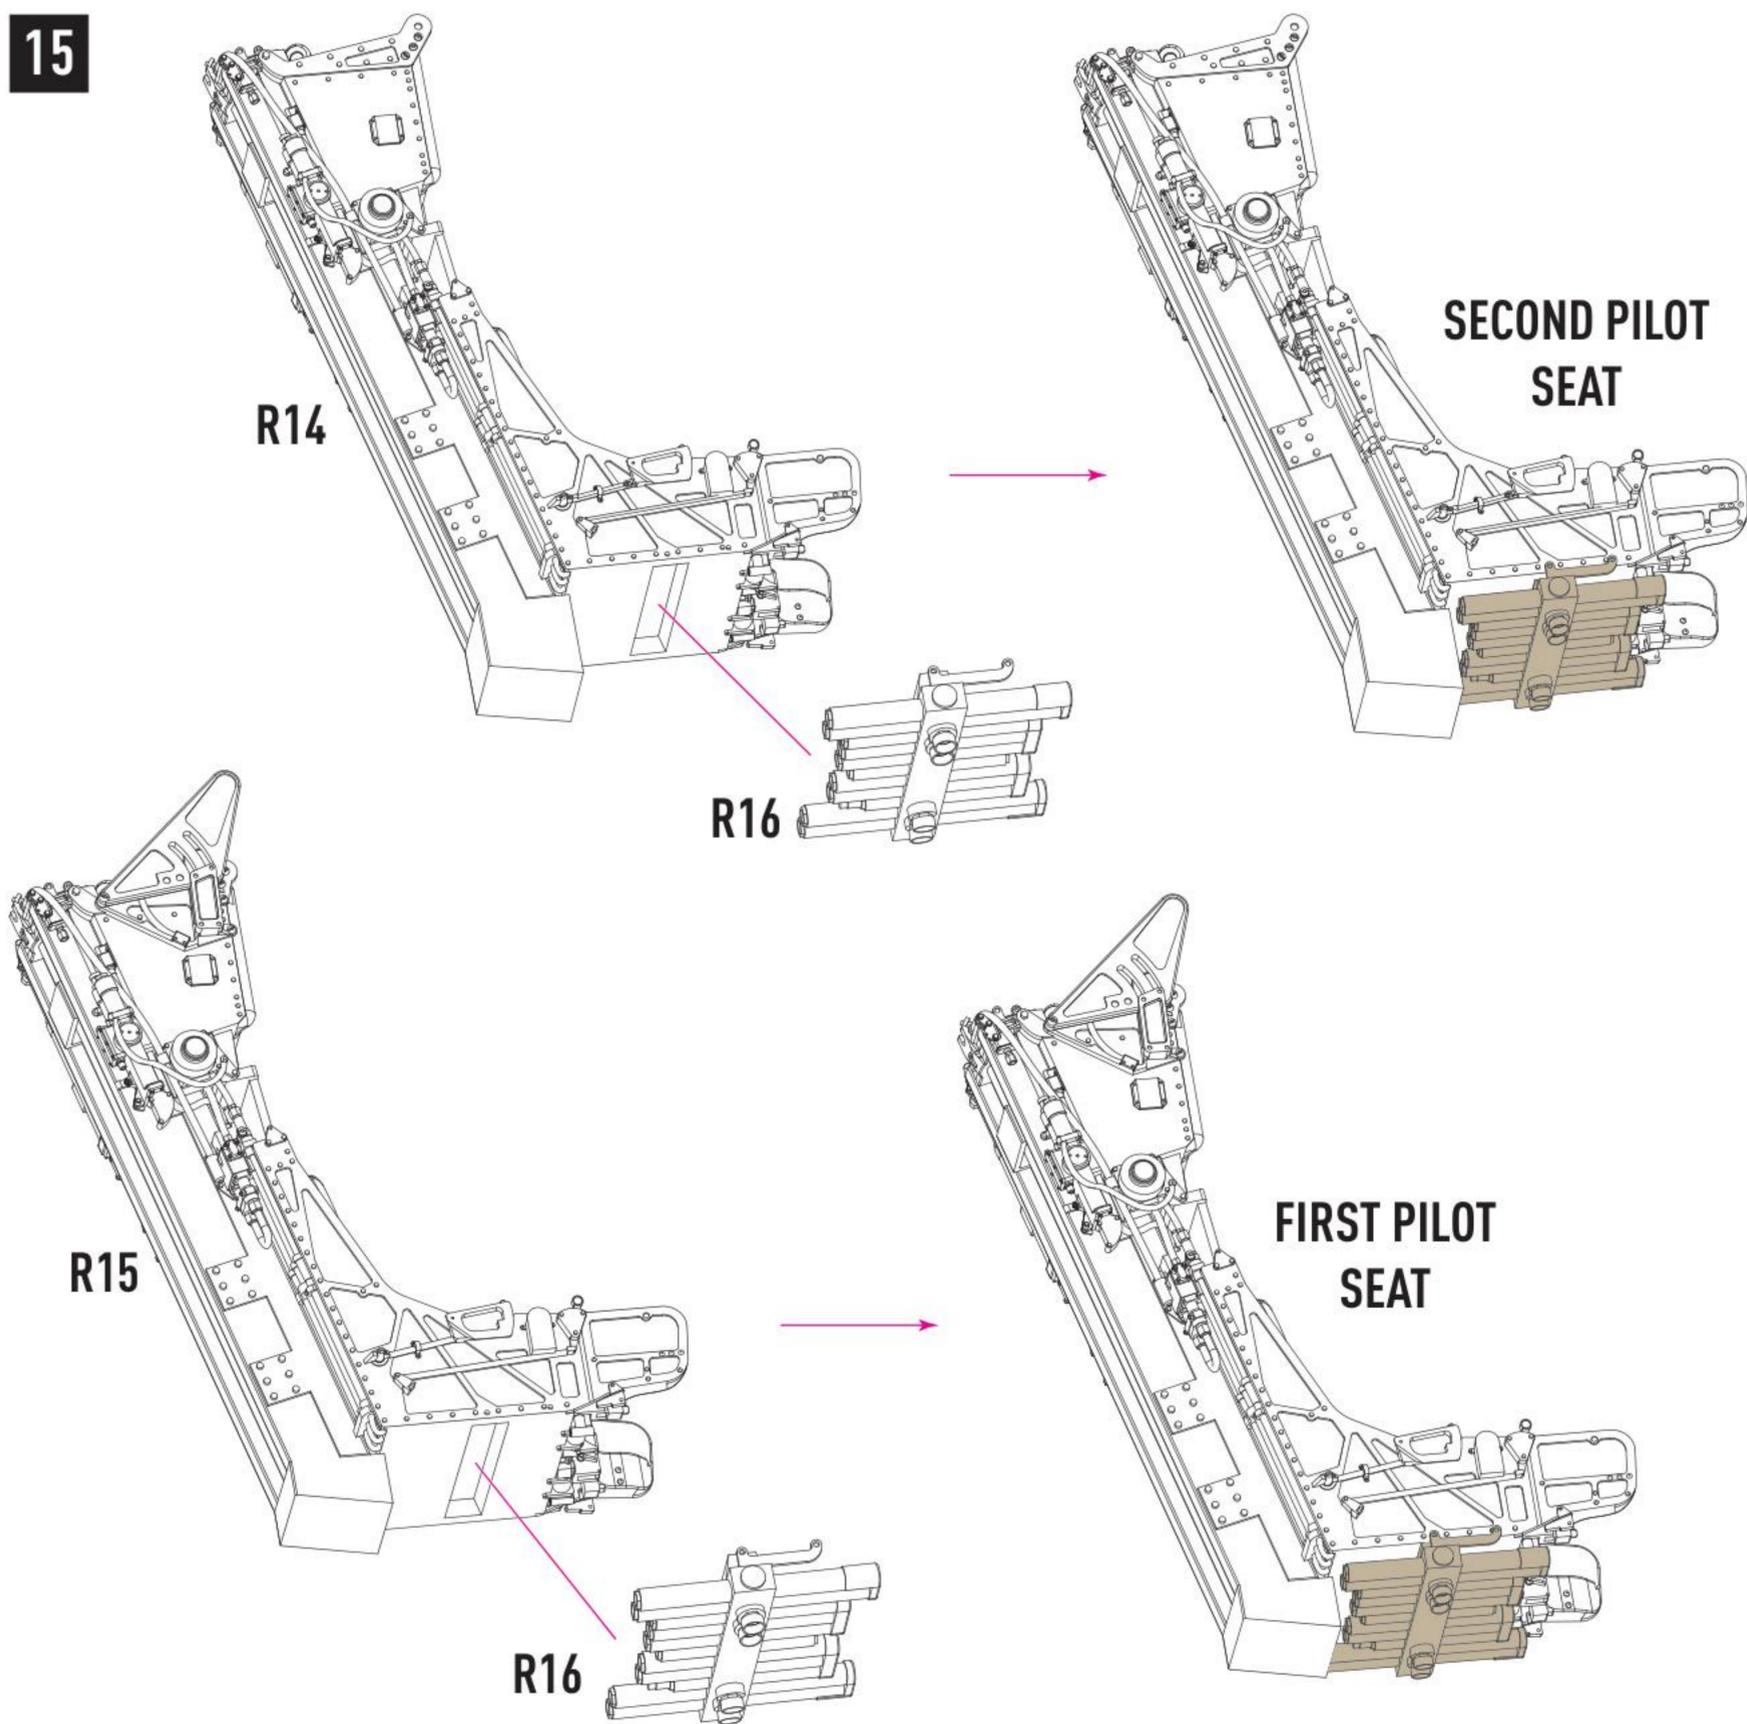


**16**

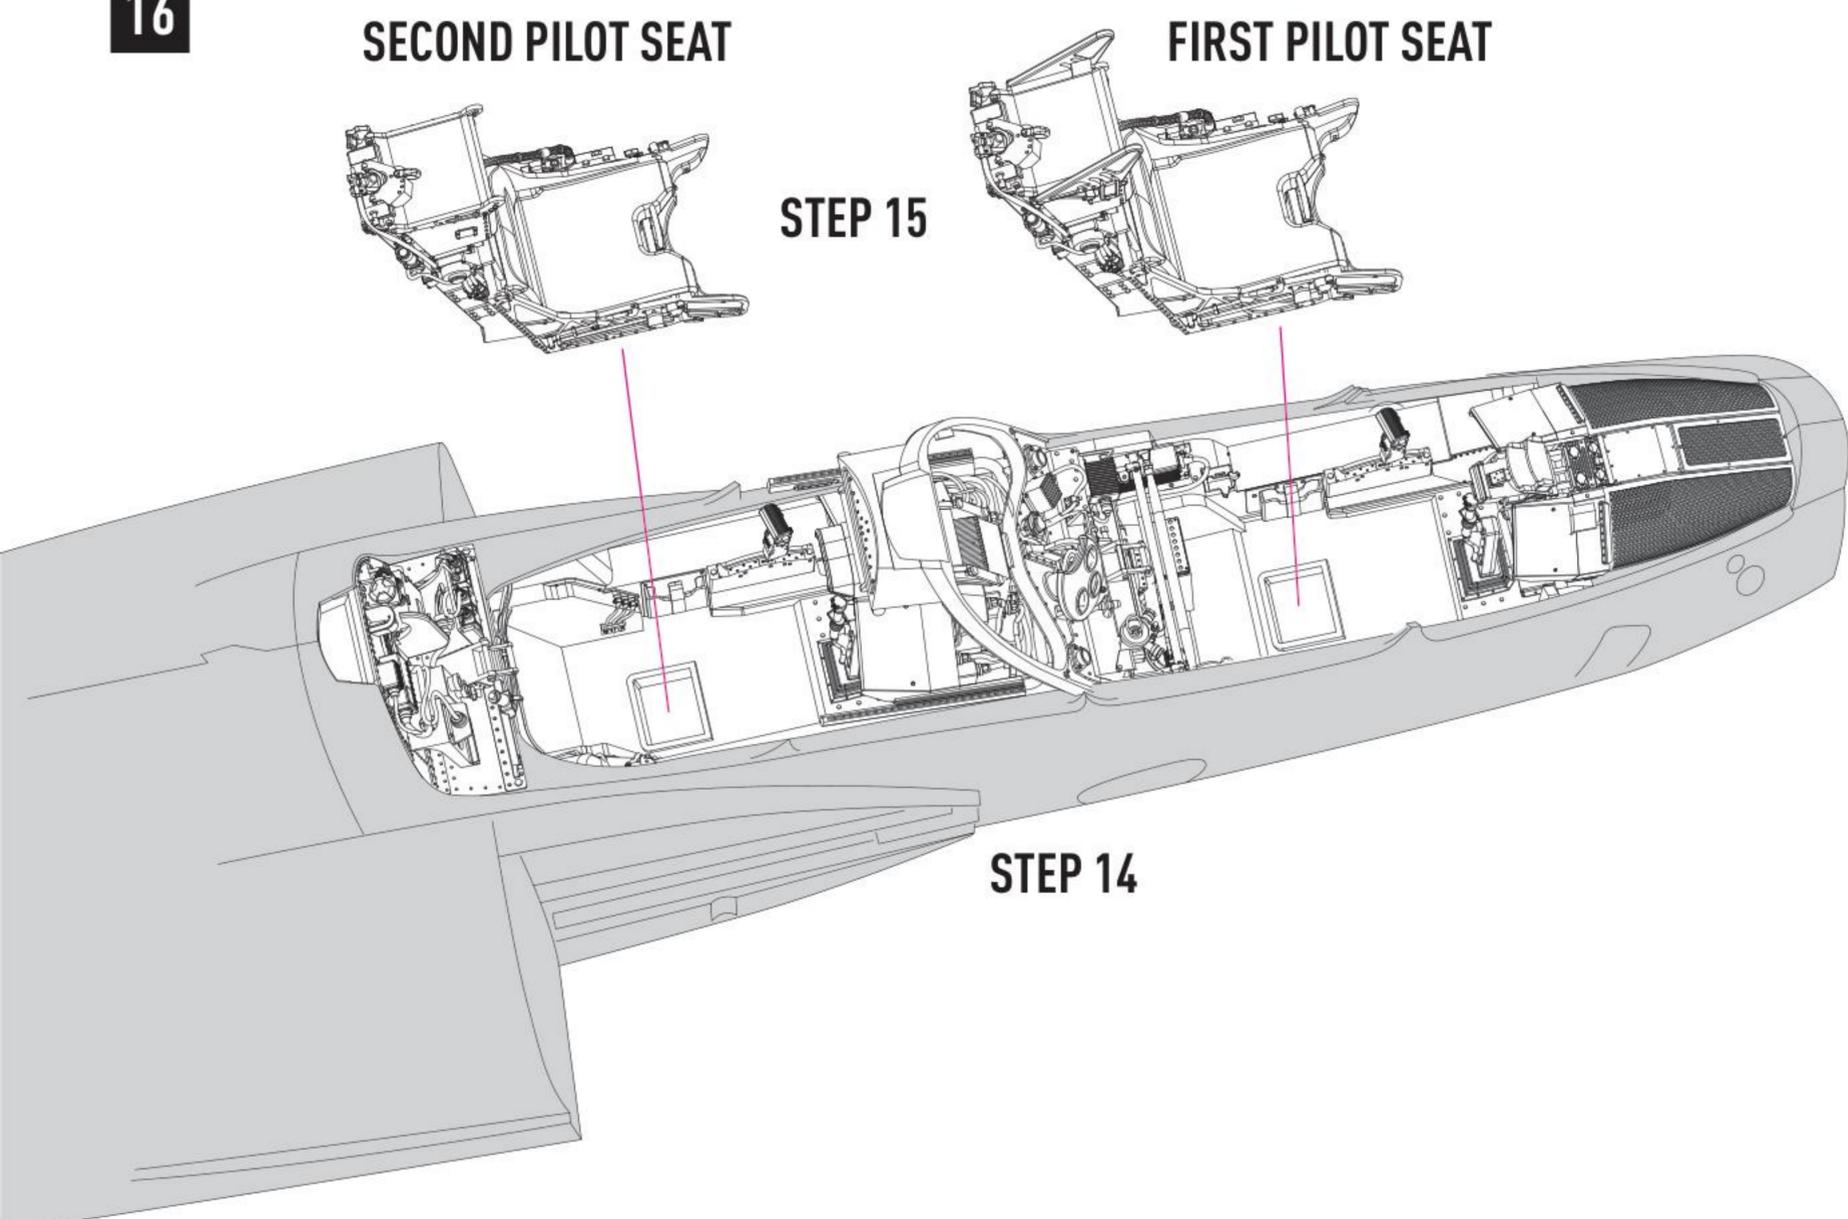

R18  
FOR CLOSED  
COCKPIT

R17  
FOR OPEN  
COCKPIT


?

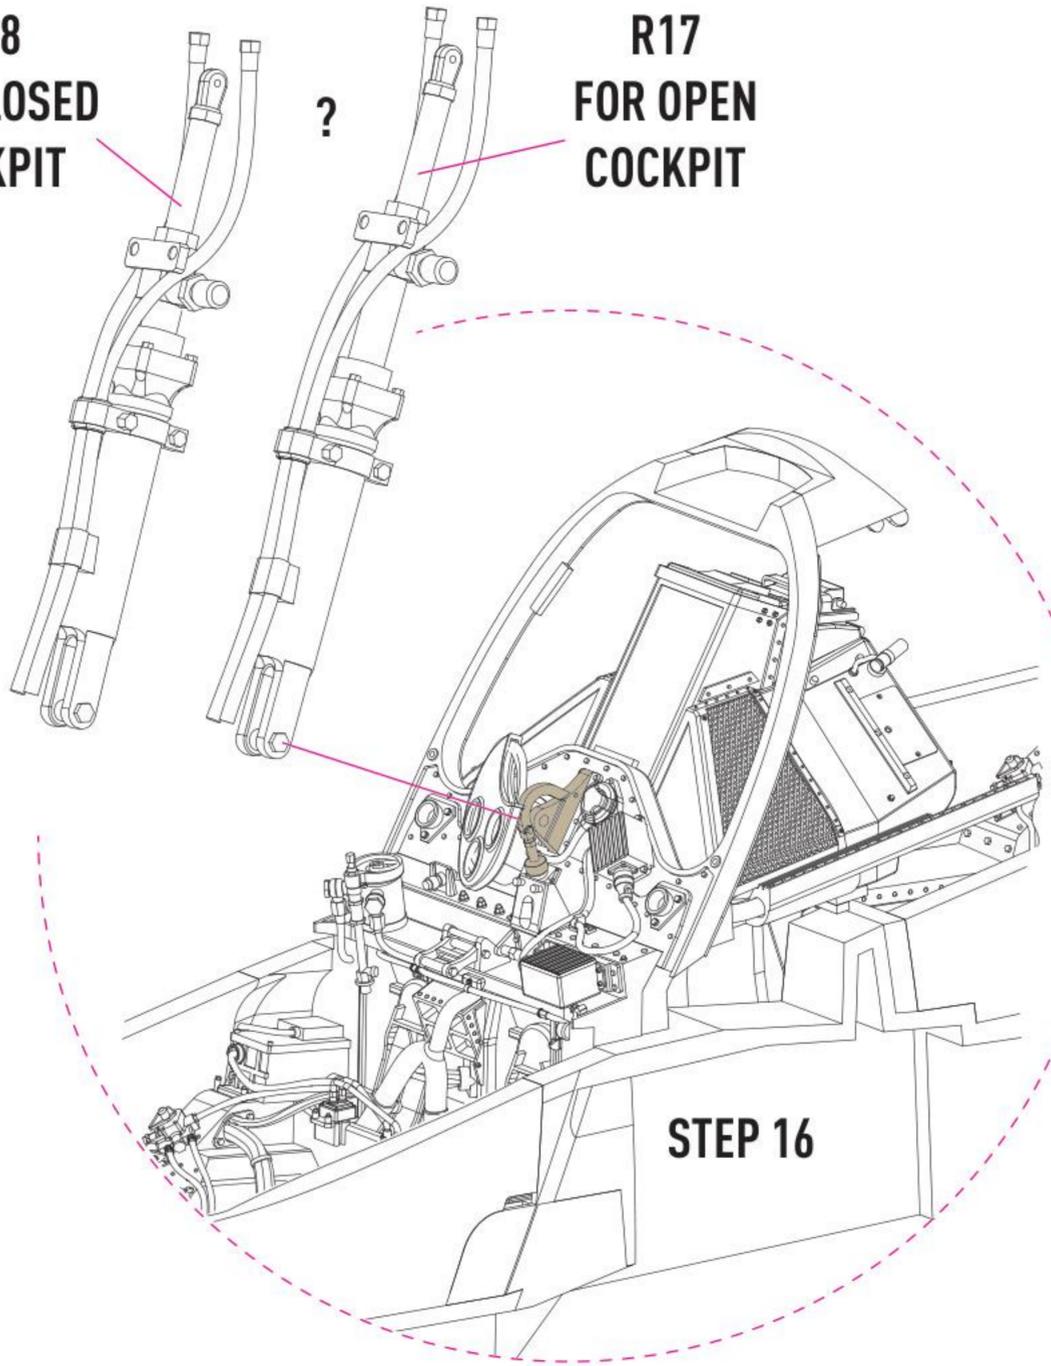

R20  
FOR CLOSED  
COCKPIT

R19  
FOR OPEN  
COCKPIT


?

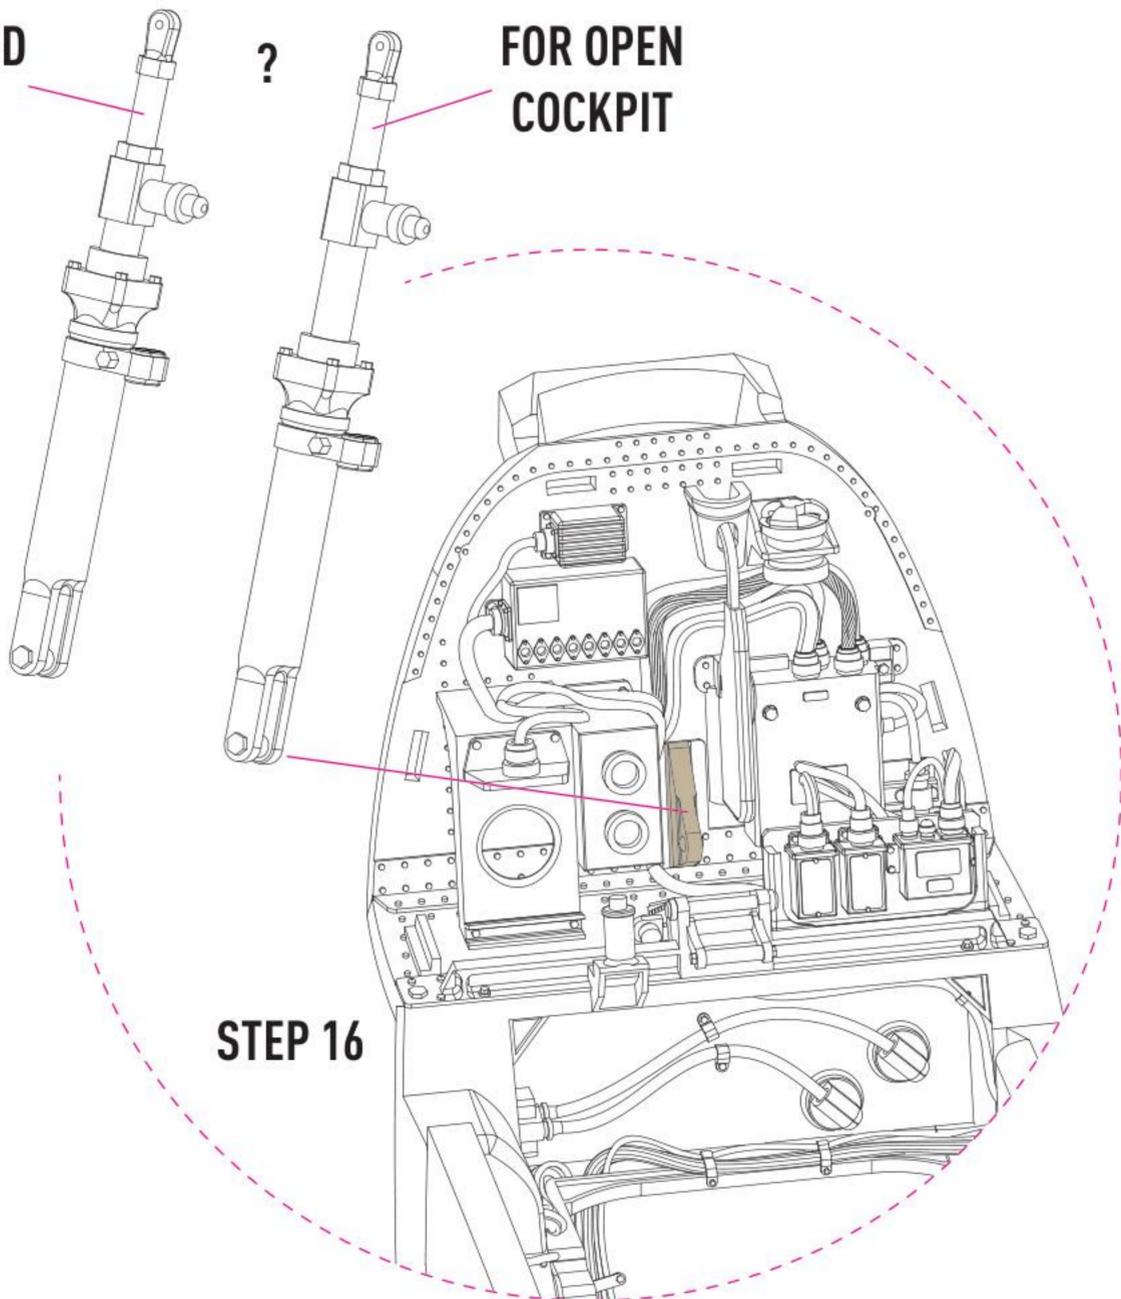

STEP 17




R21

R22

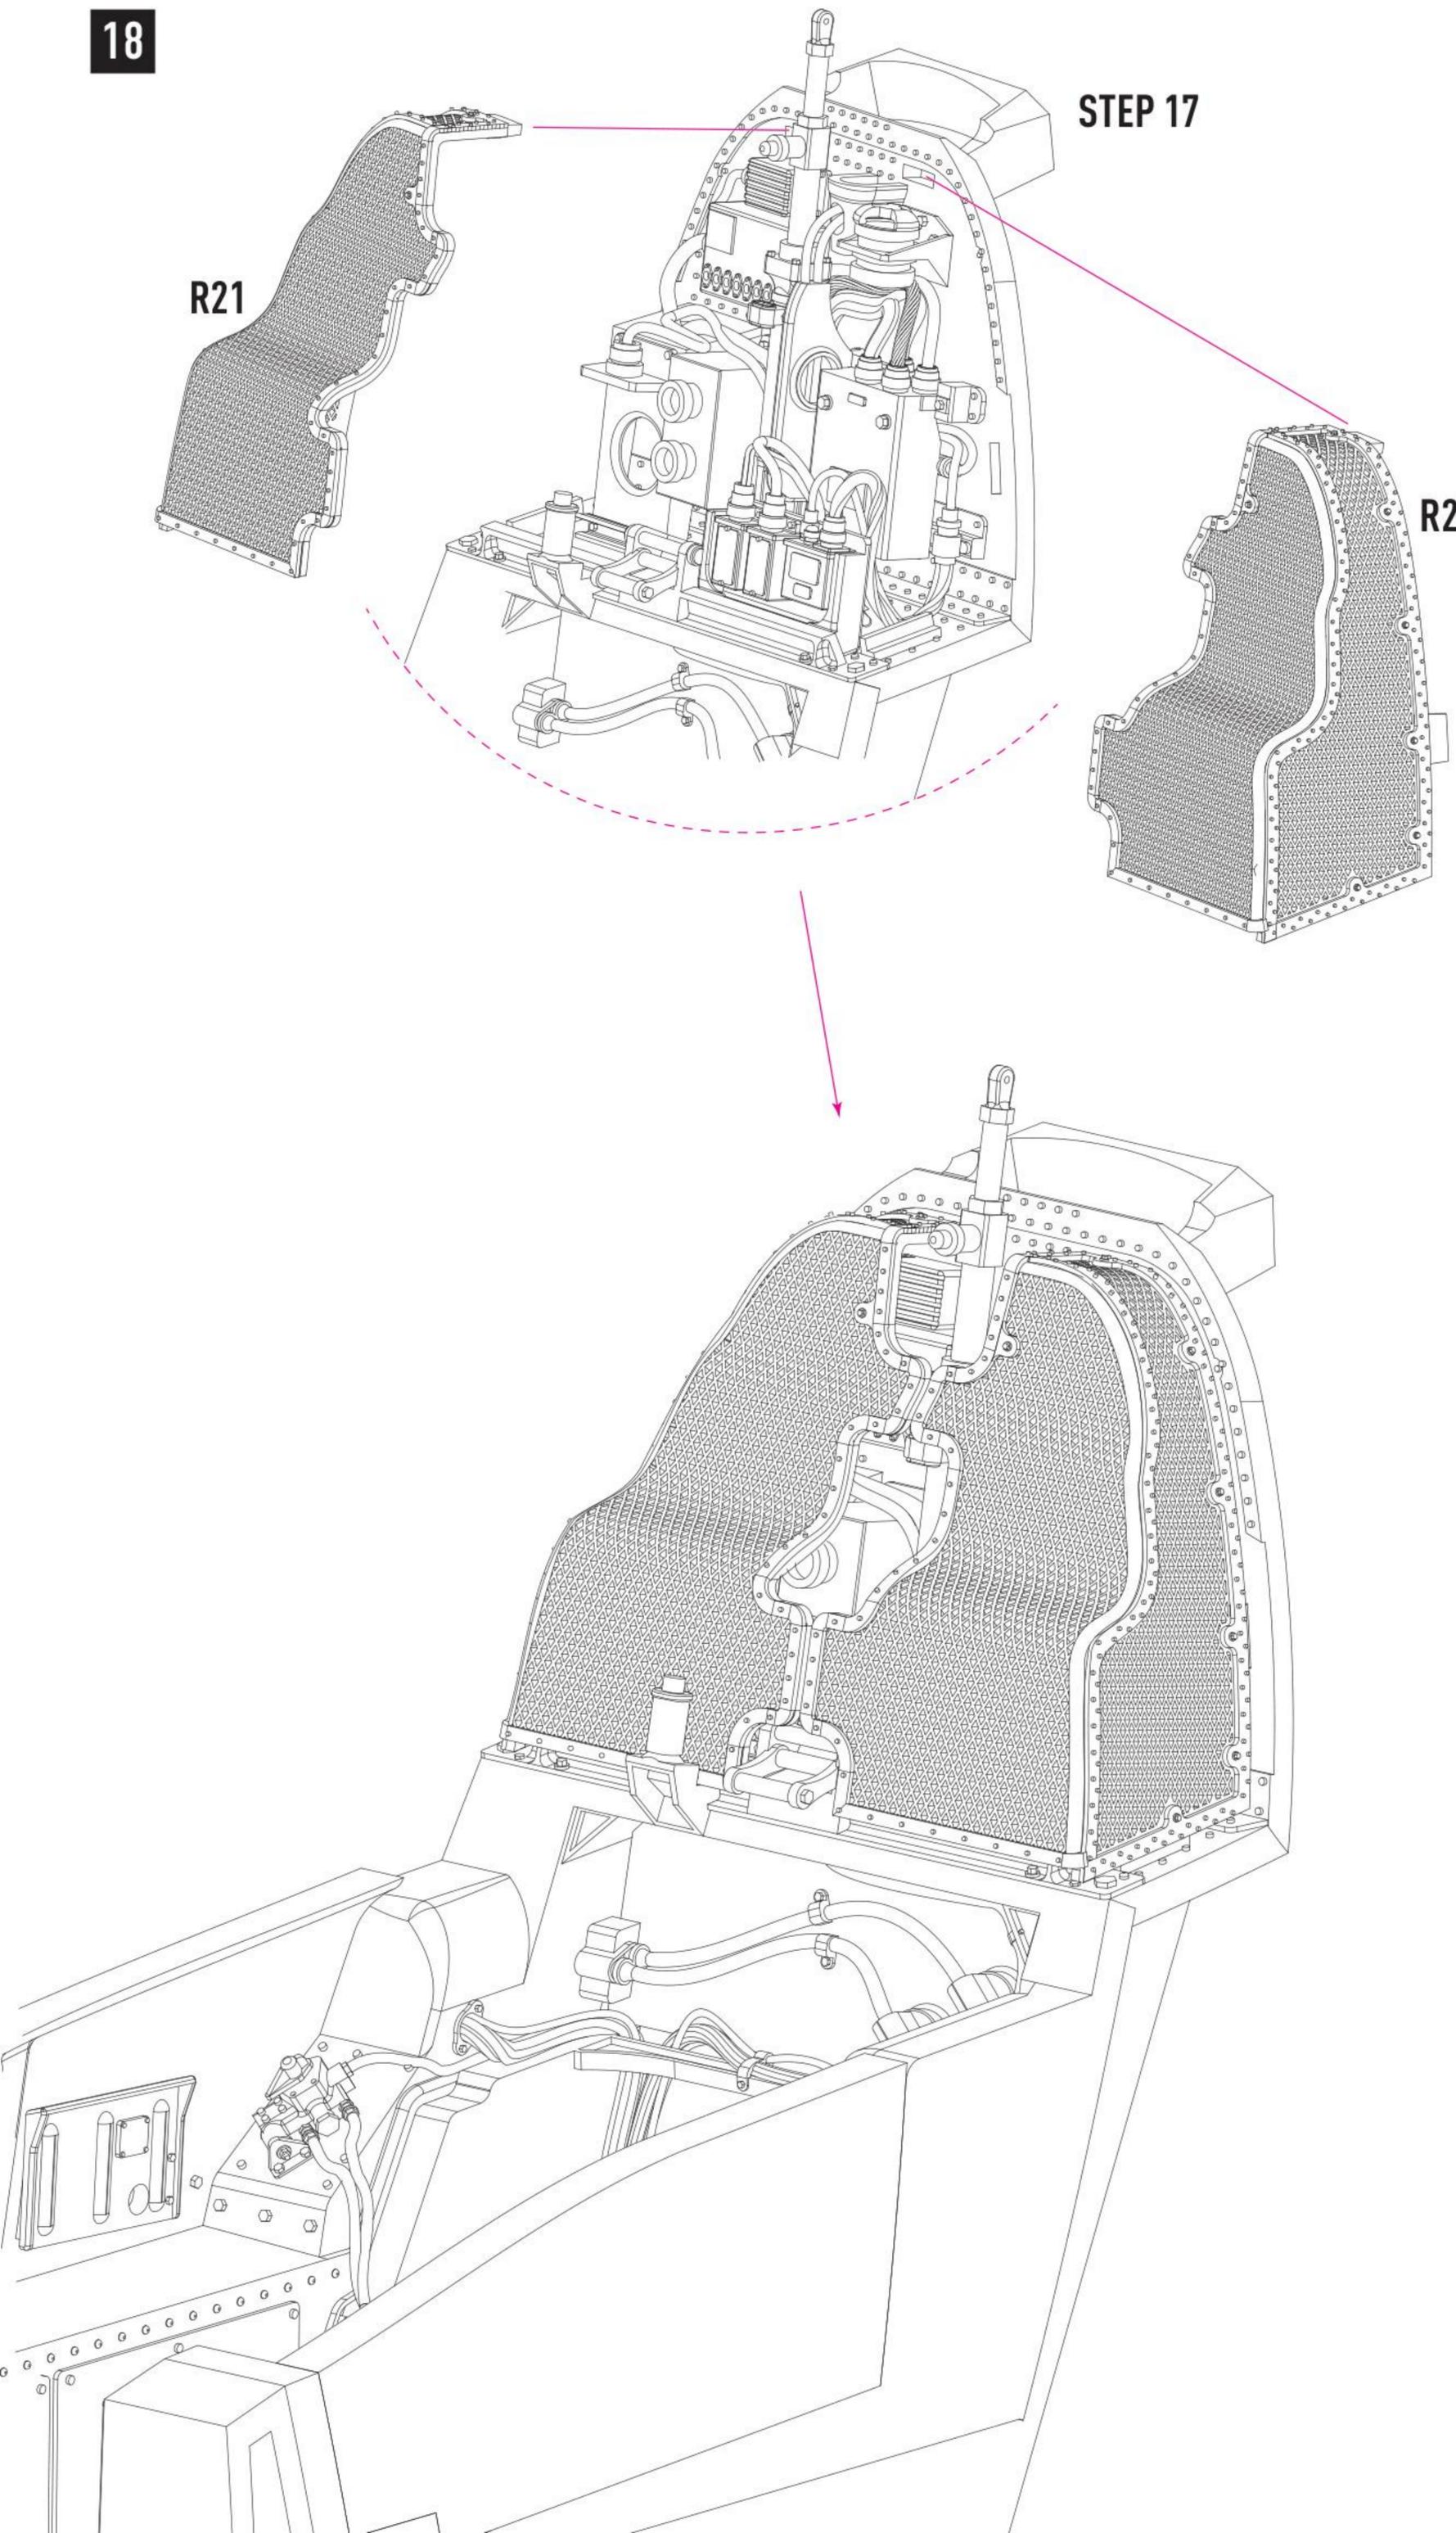

R7

26

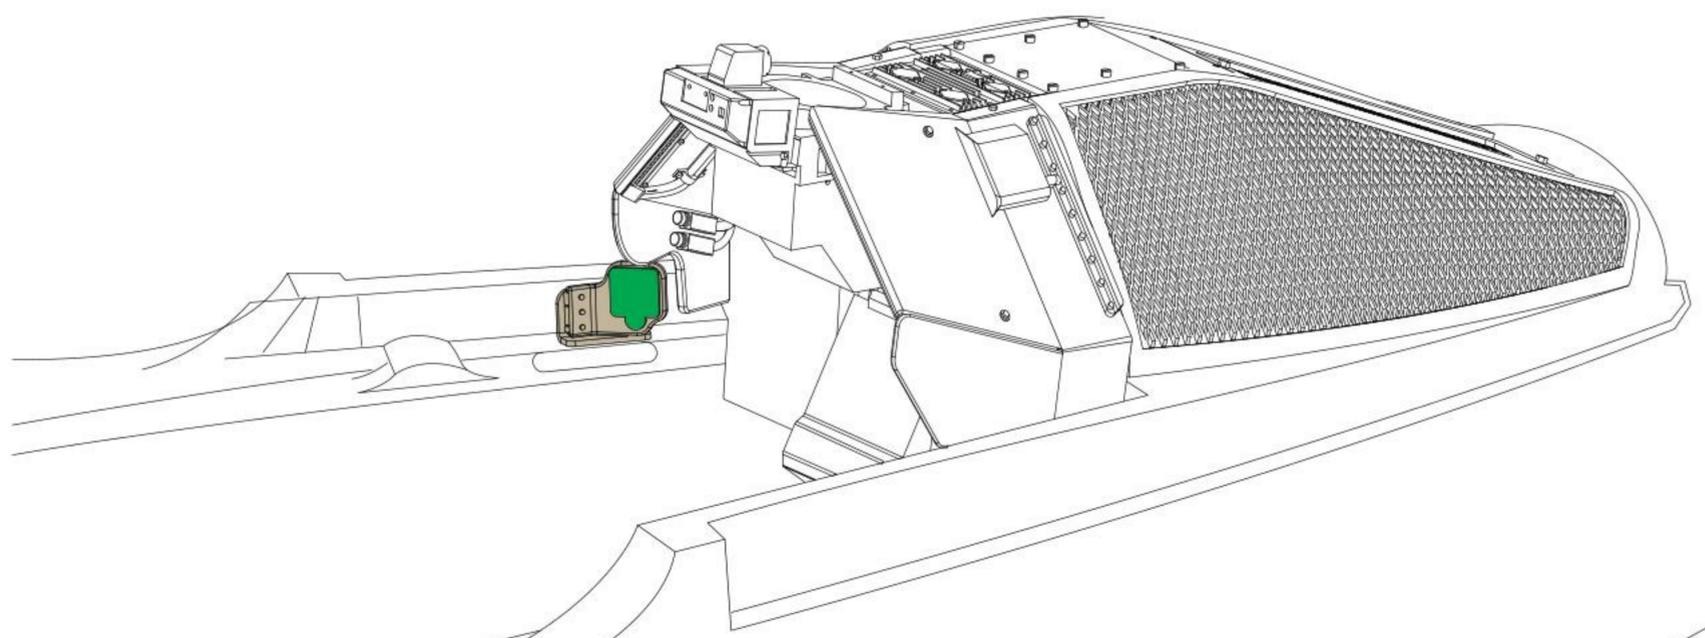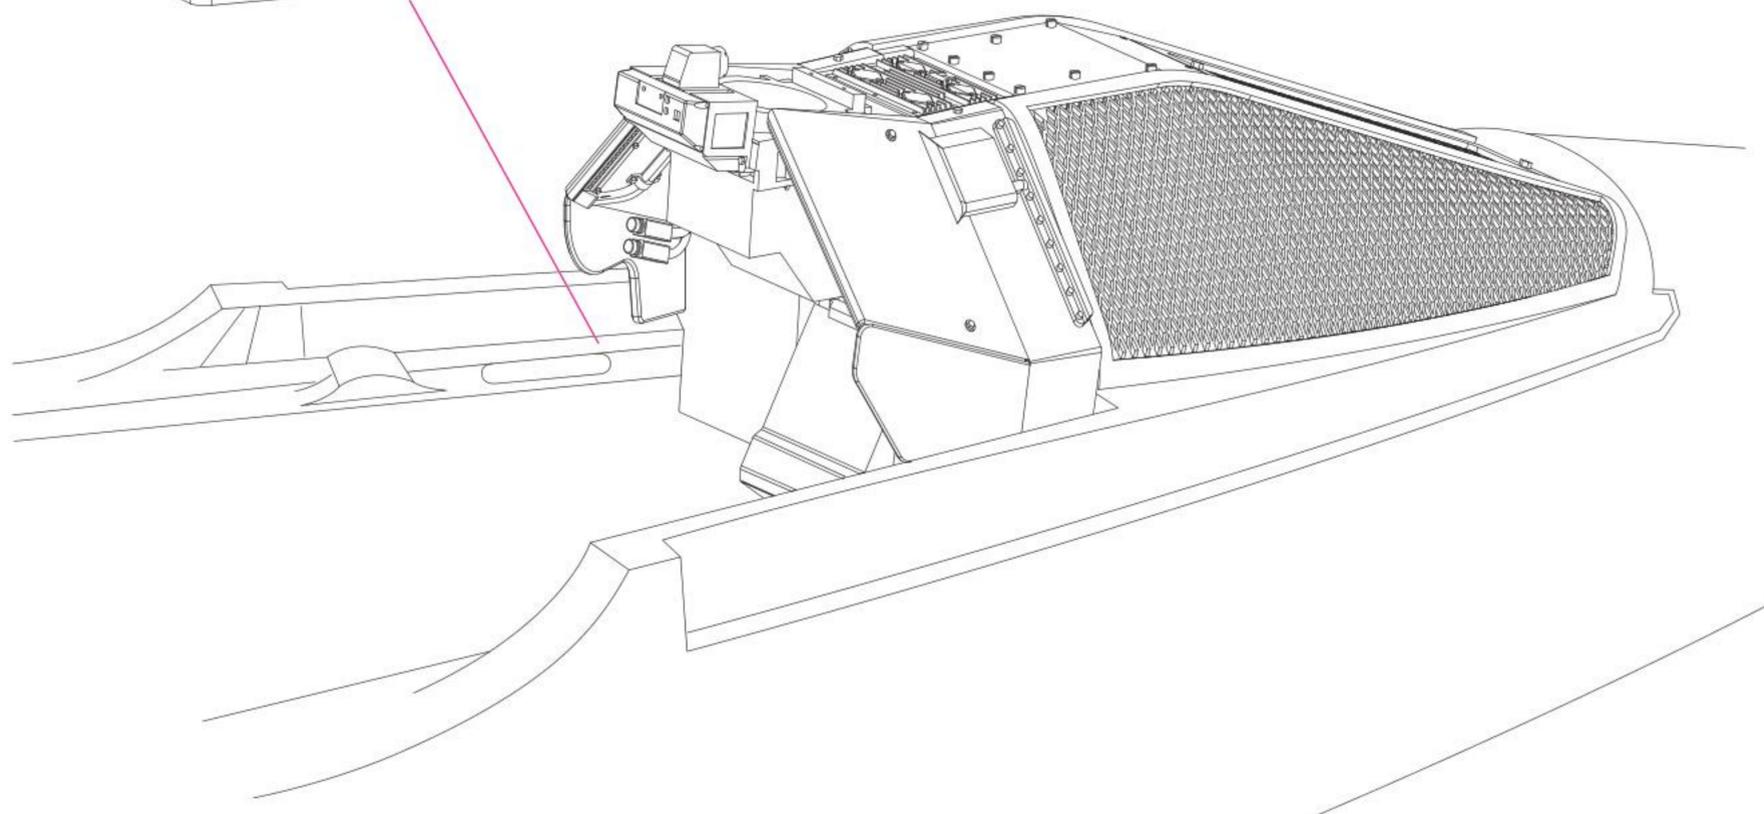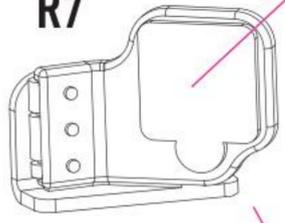

**YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE**

**RESKIT-MODELS.COM**

**General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)**

**Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)**

**Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)**