


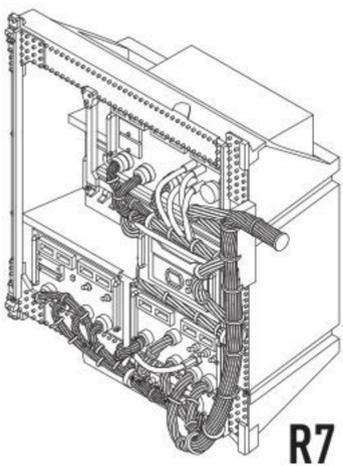
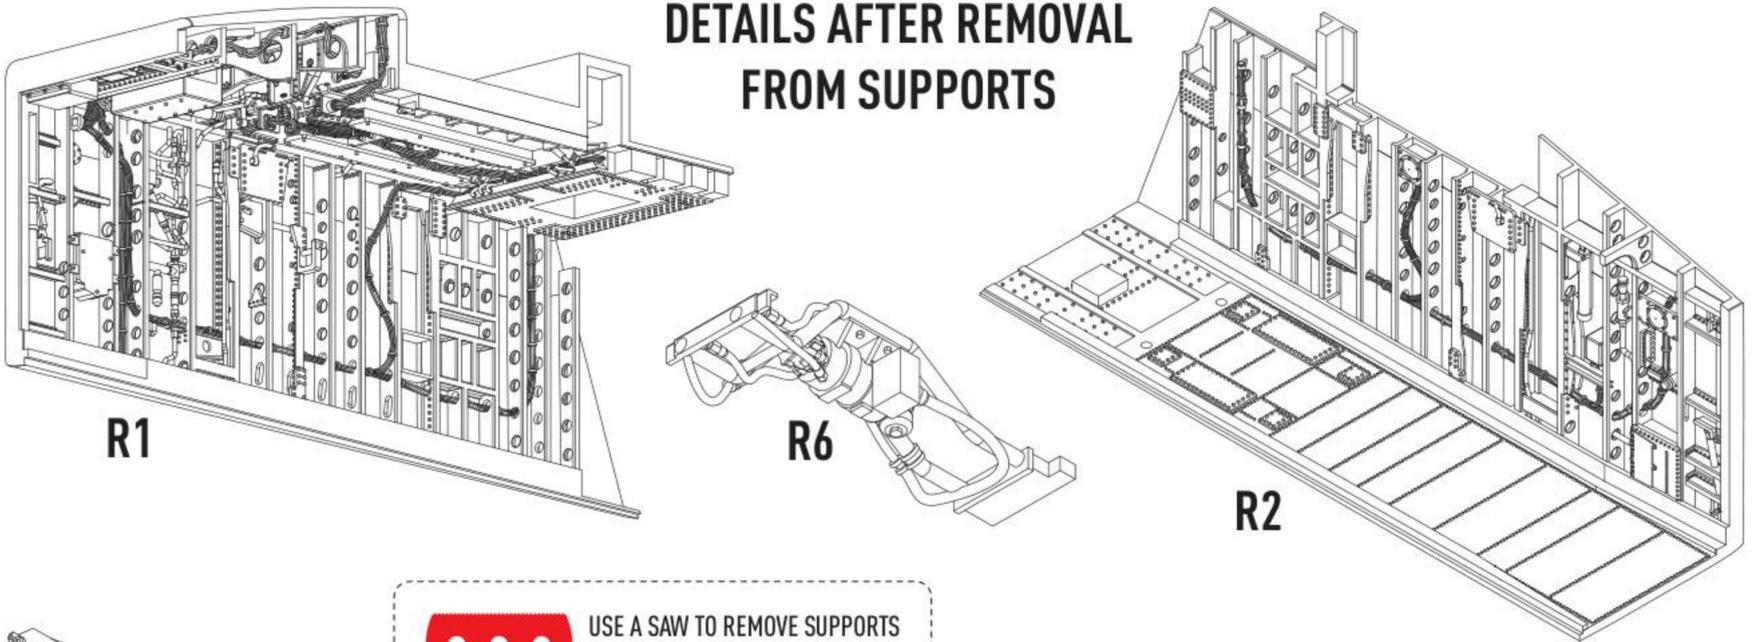
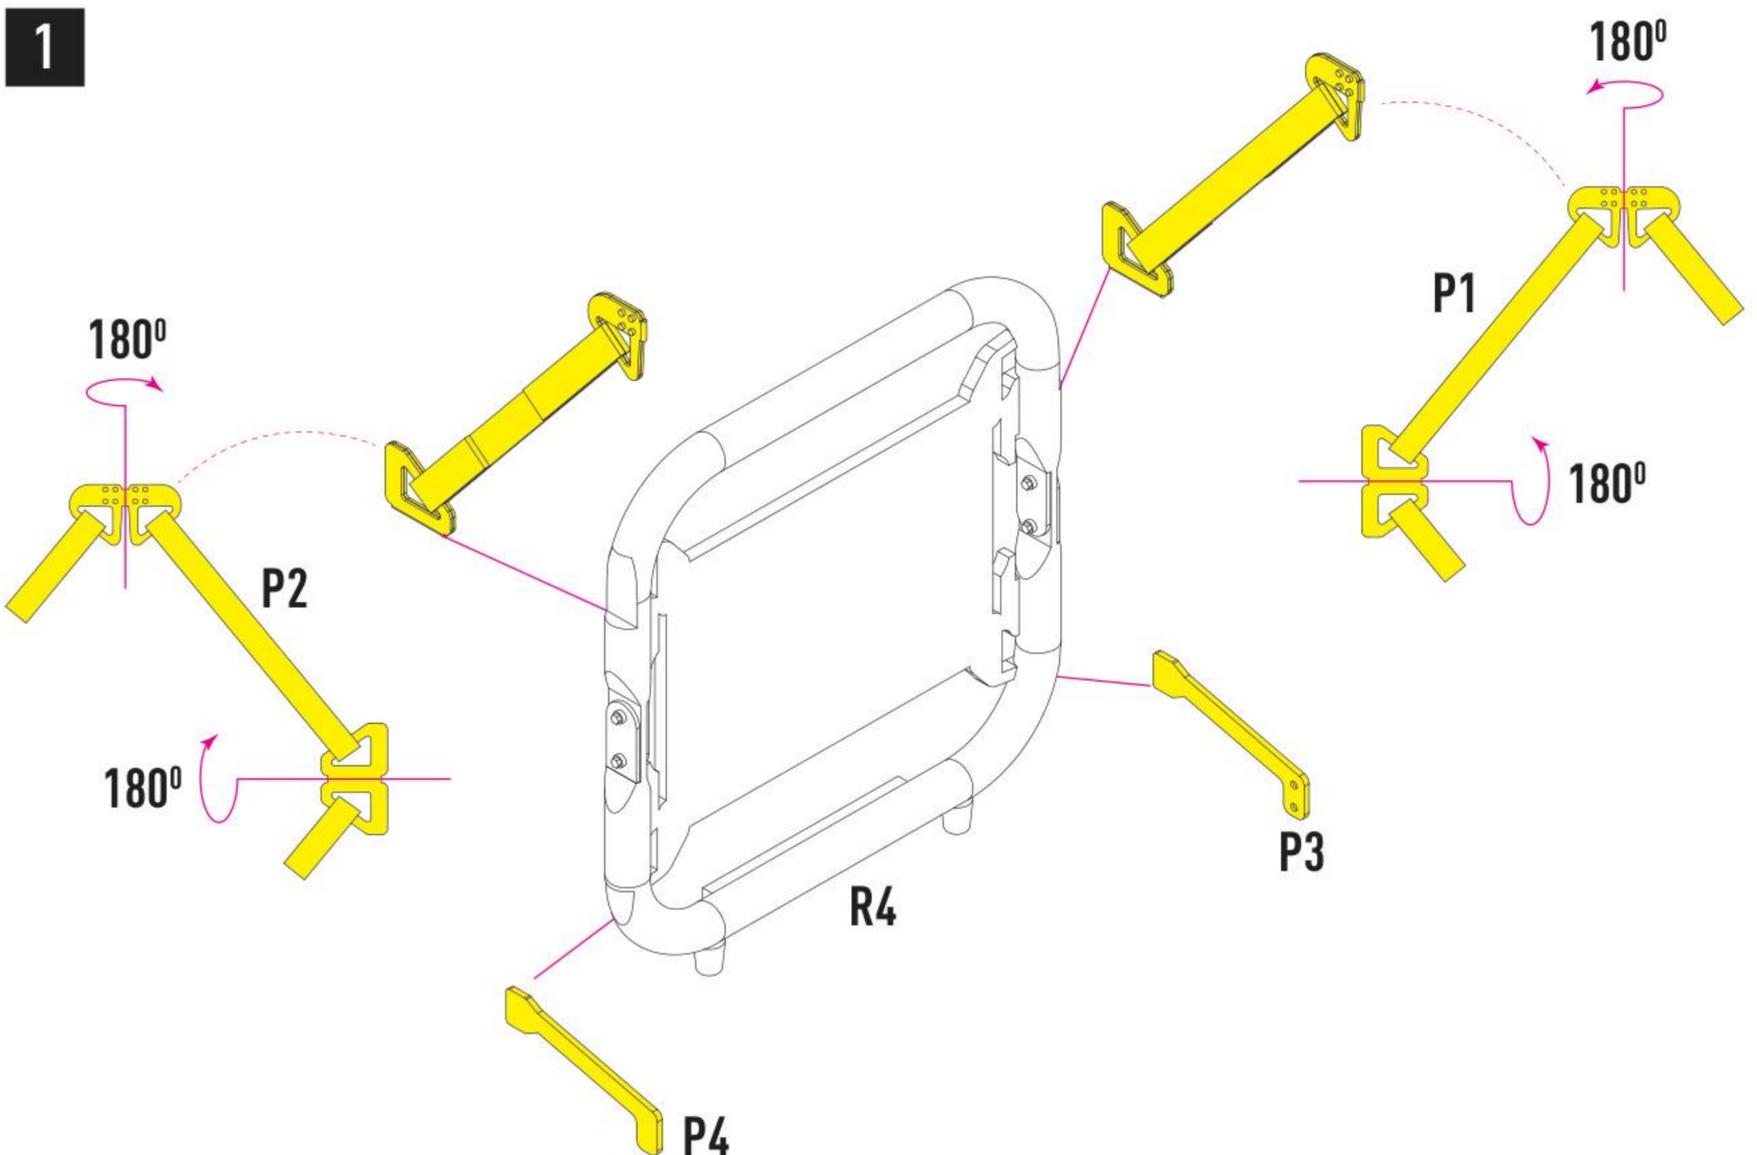
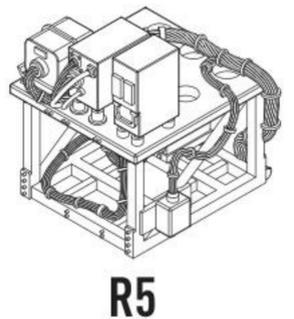
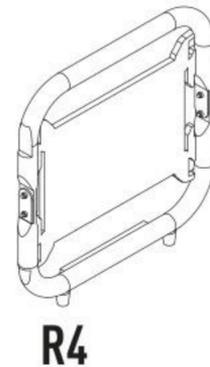


**DETAILS AFTER REMOVAL
 FROM SUPPORTS**

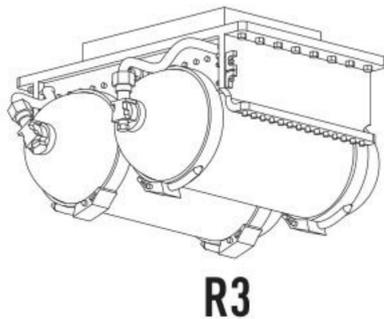


**USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS**


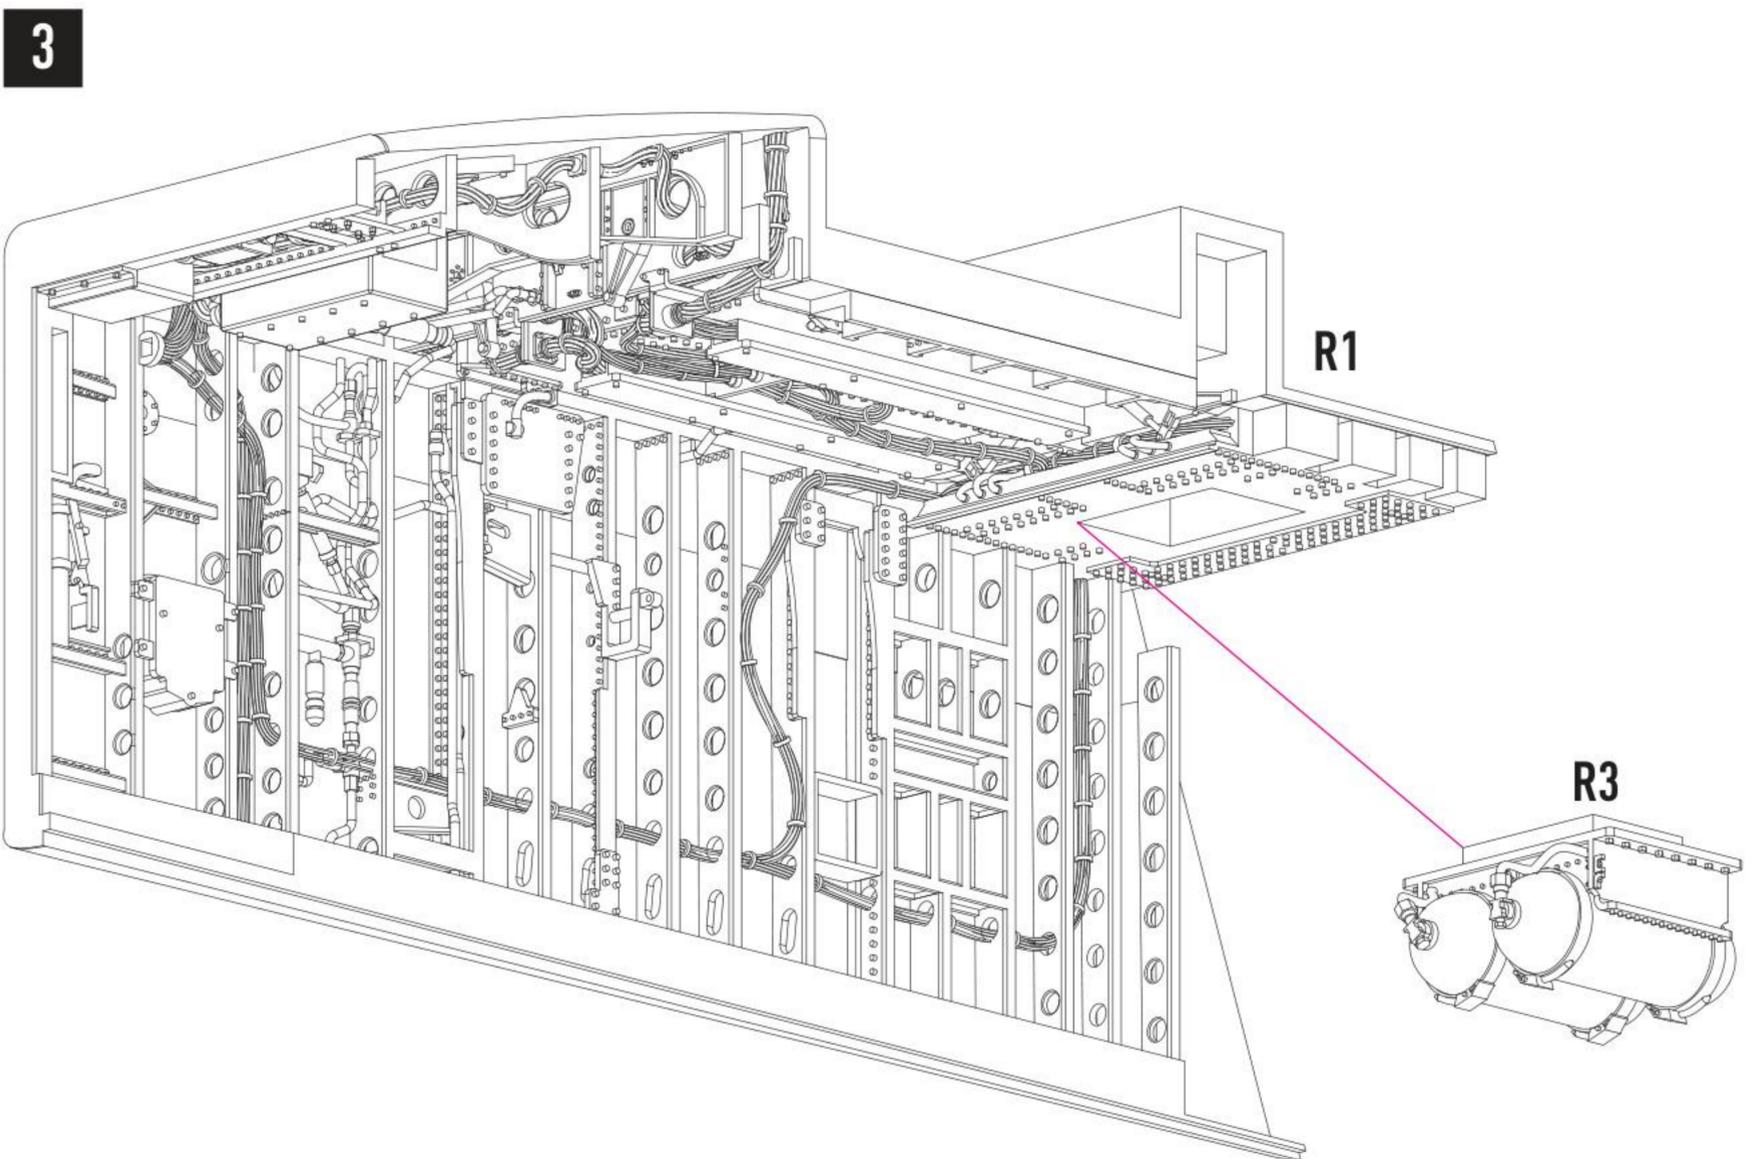


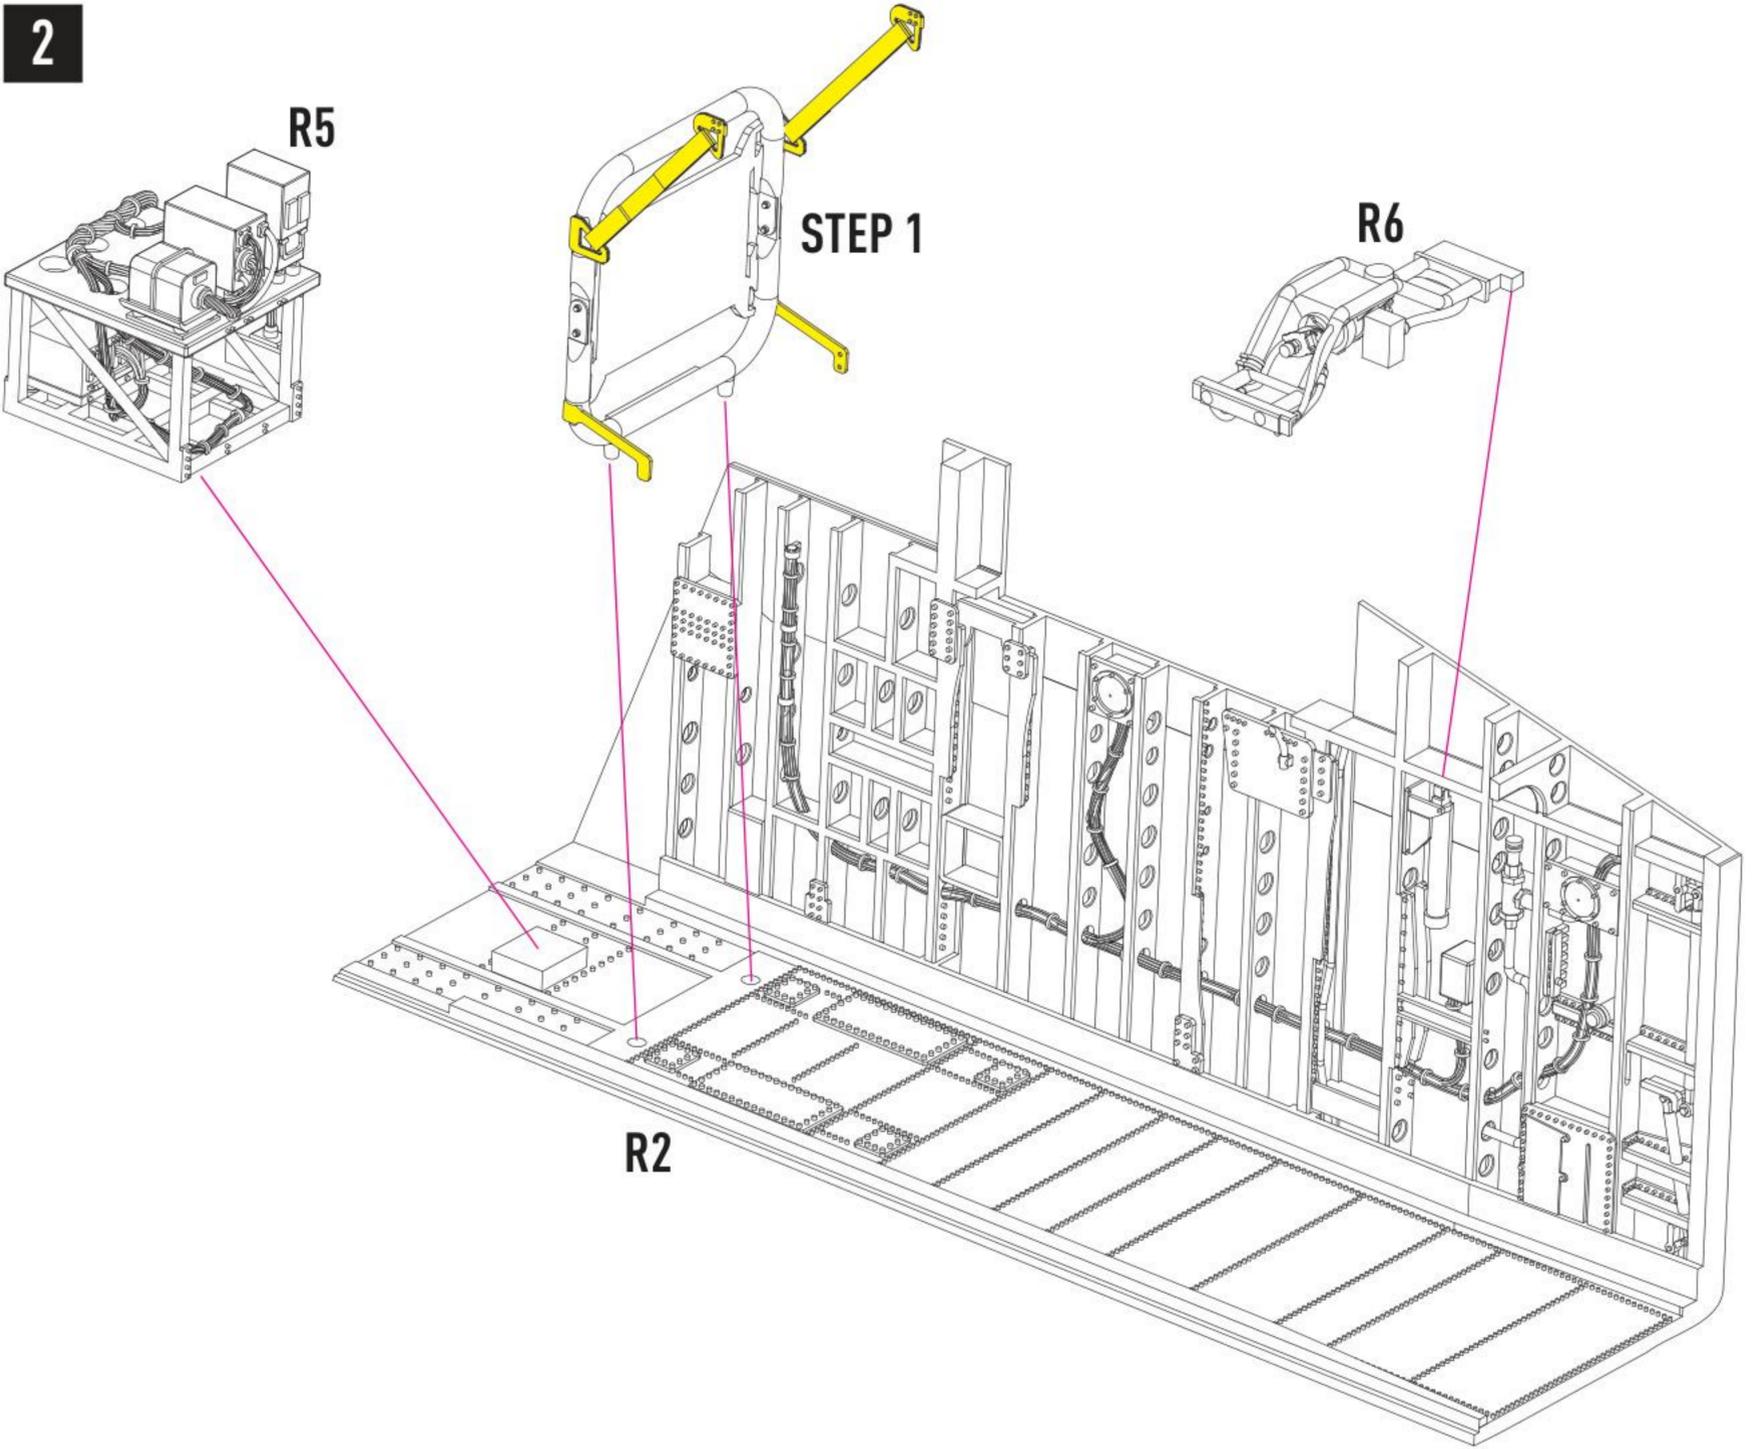

4

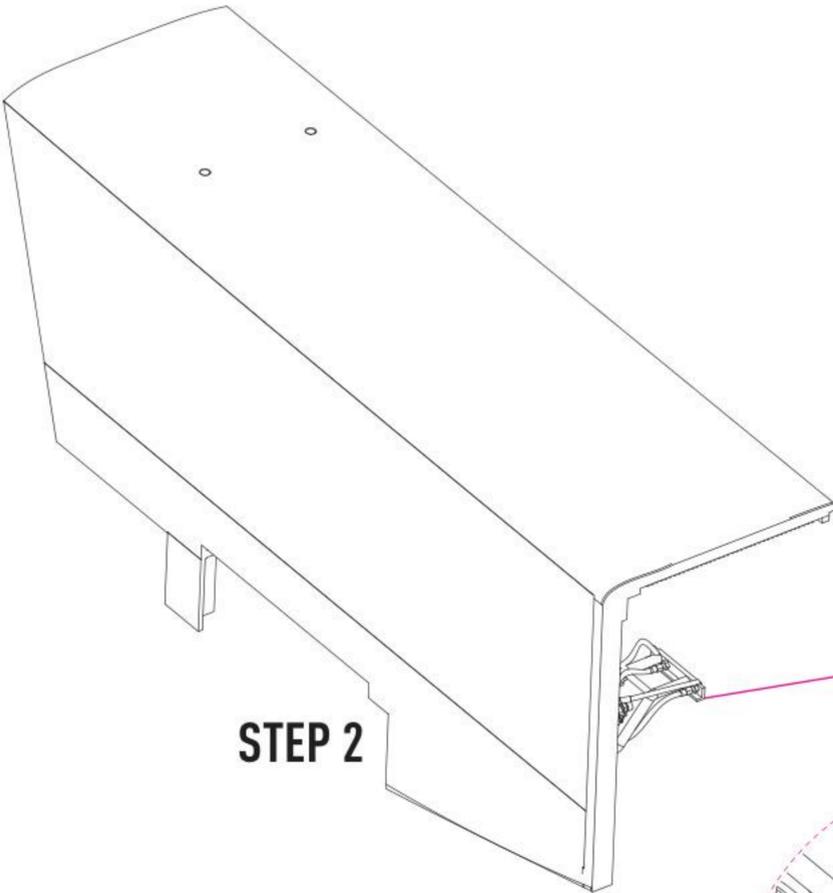


STEP 3

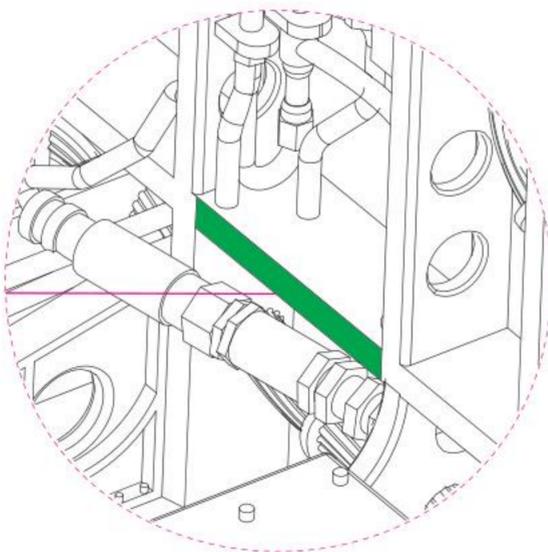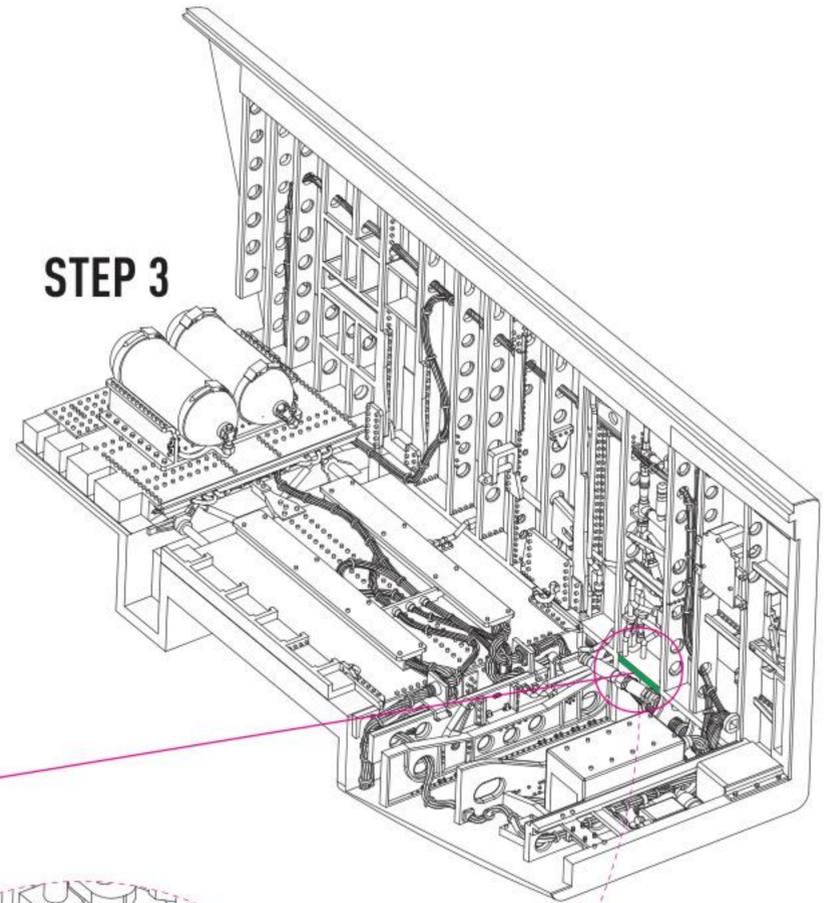


5

CUT

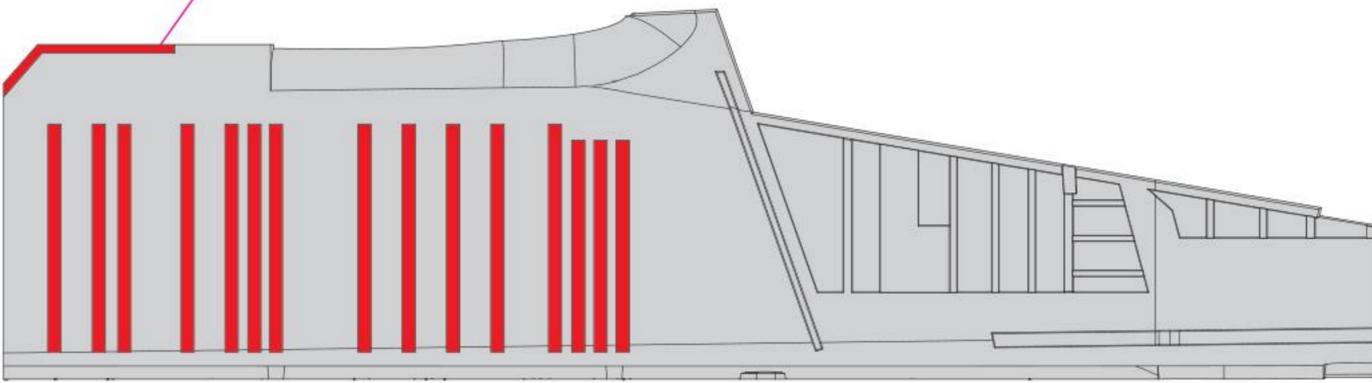

PART D1 FROM THE KIT

CUT

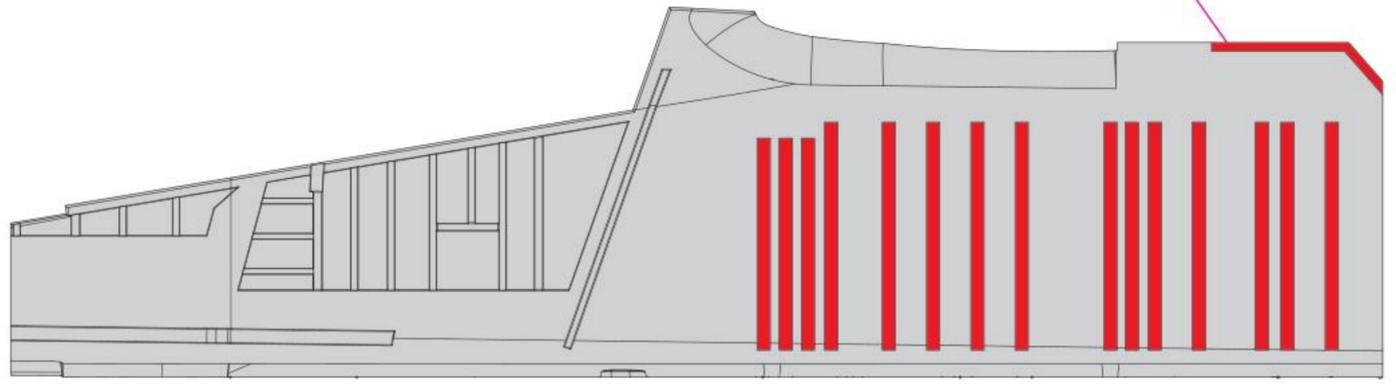


PART D6 FROM THE KIT


6

PARTS E19+E20+E14
FROM THE KIT


PARTS D1+D6+A34+A32+J21+PE8
FROM THE KIT

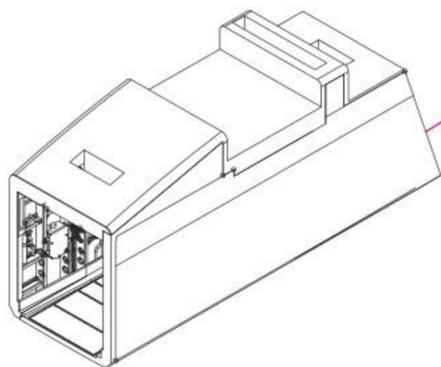


STEP 4

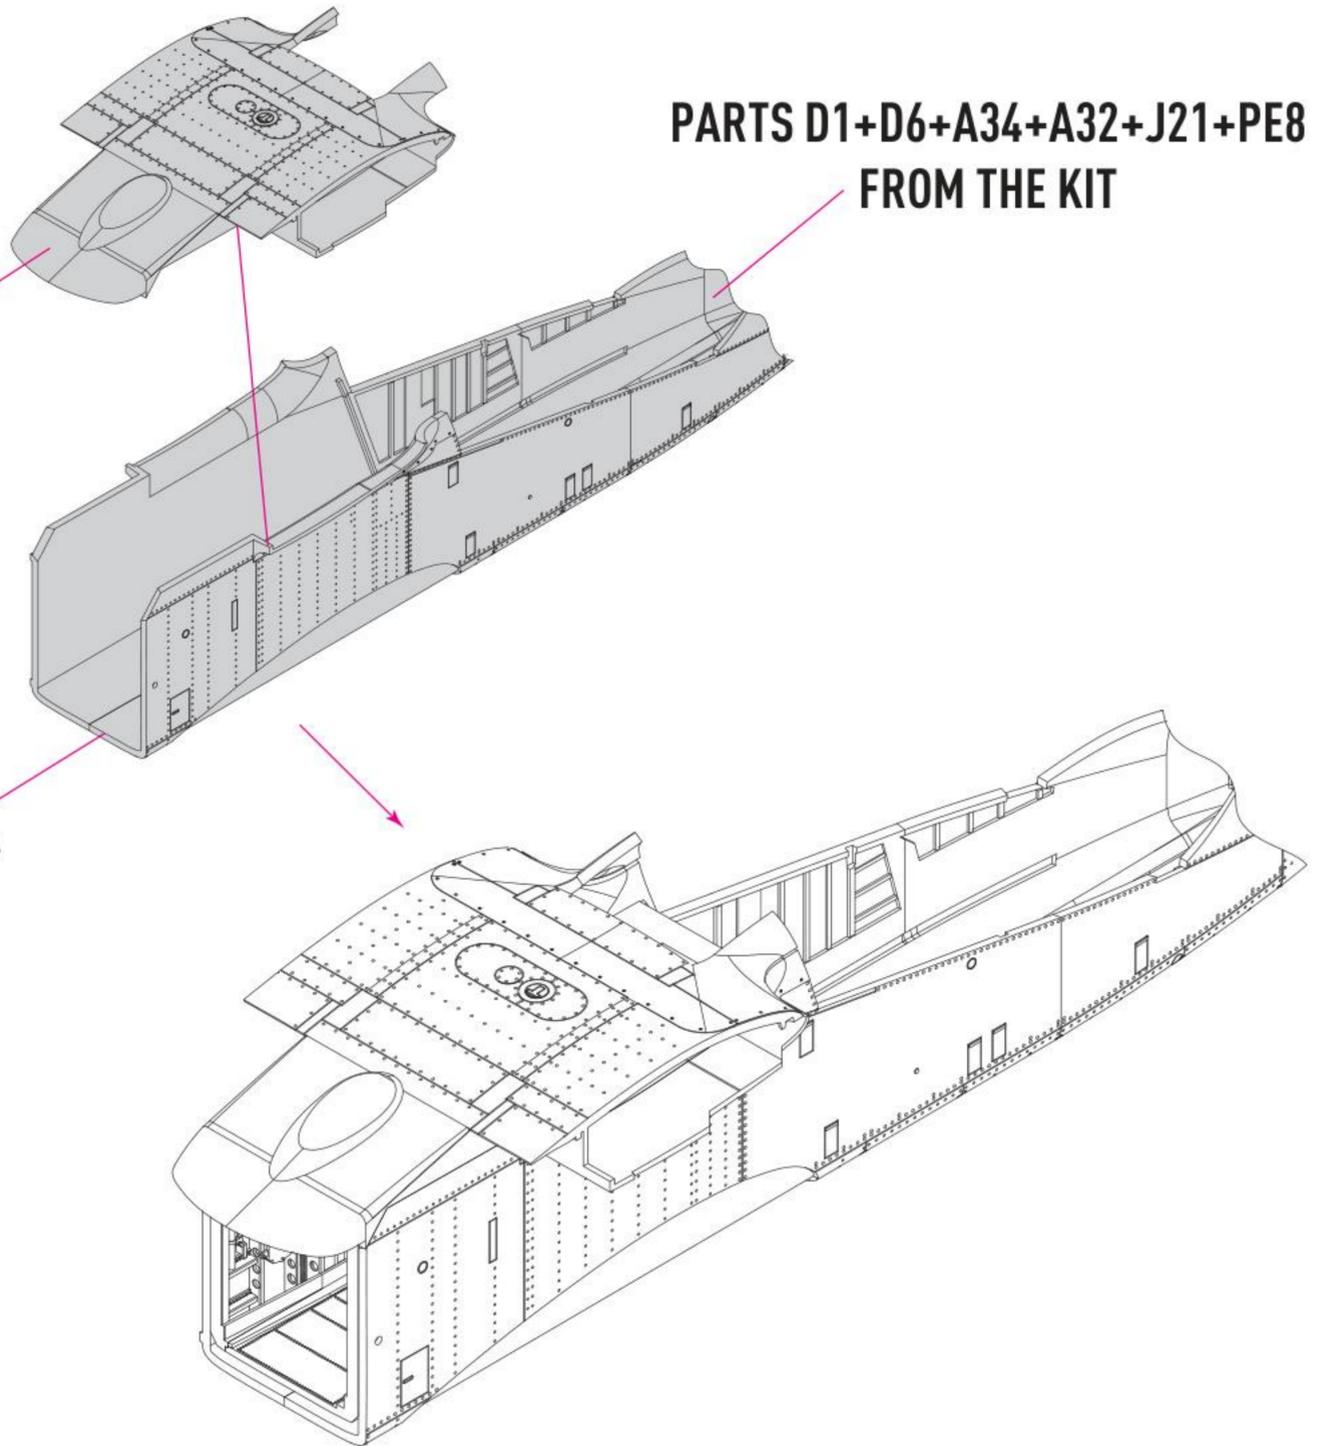

7


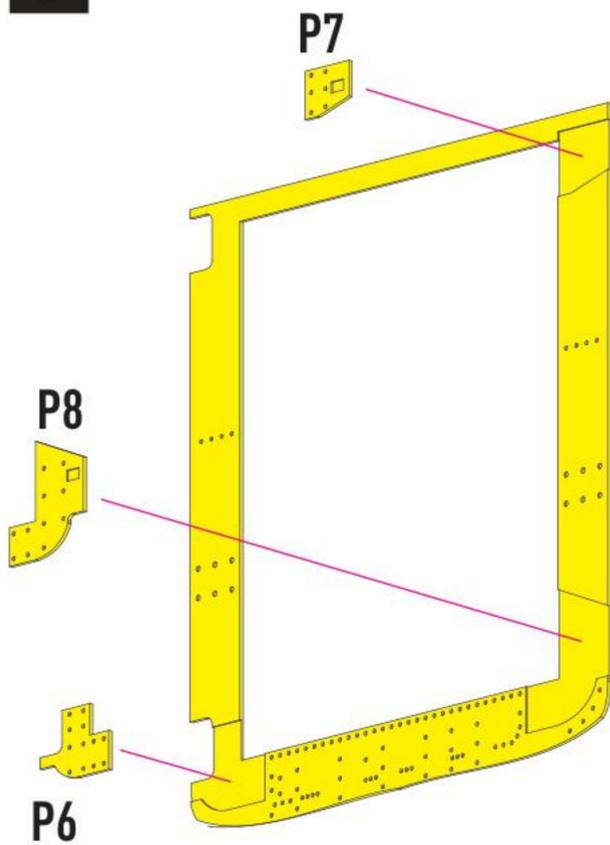


STEP 6

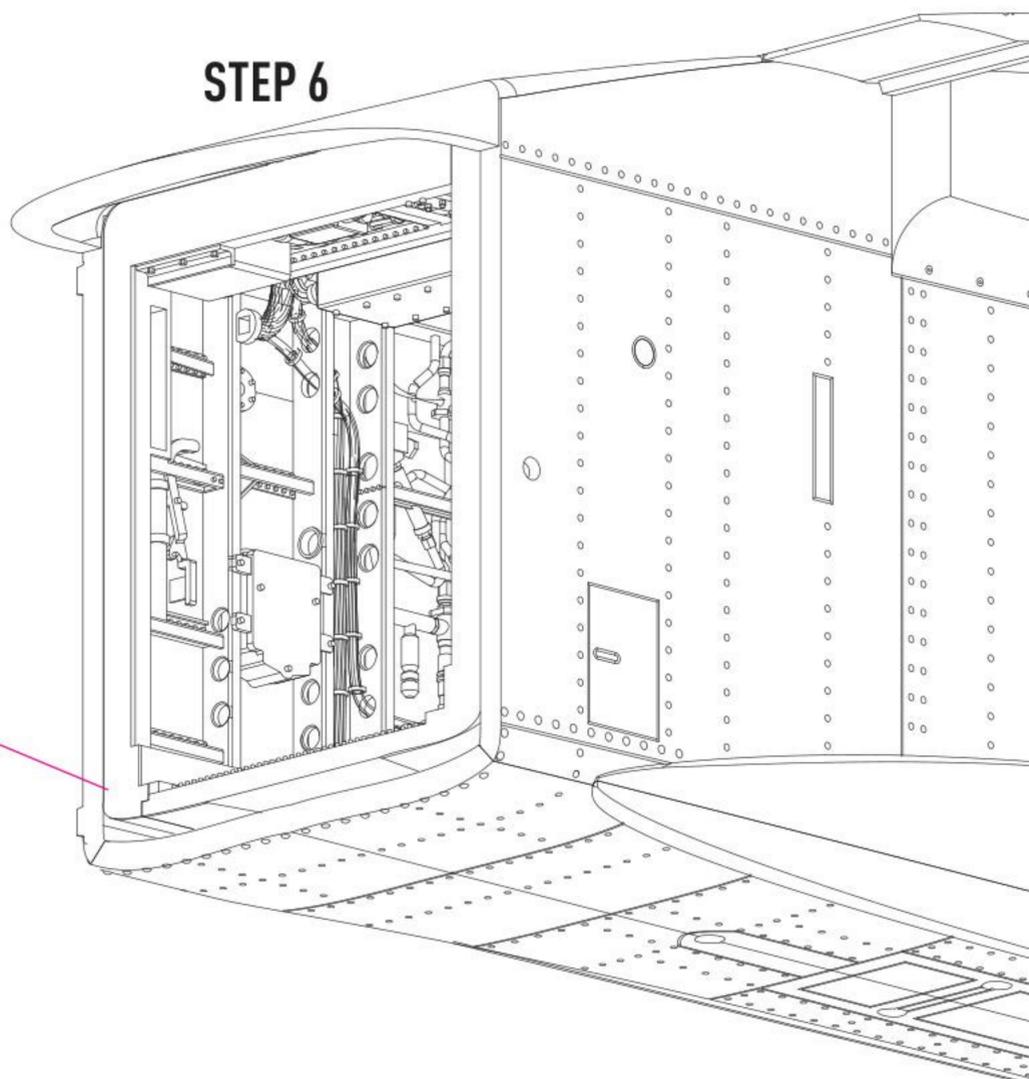



8

STEP 7

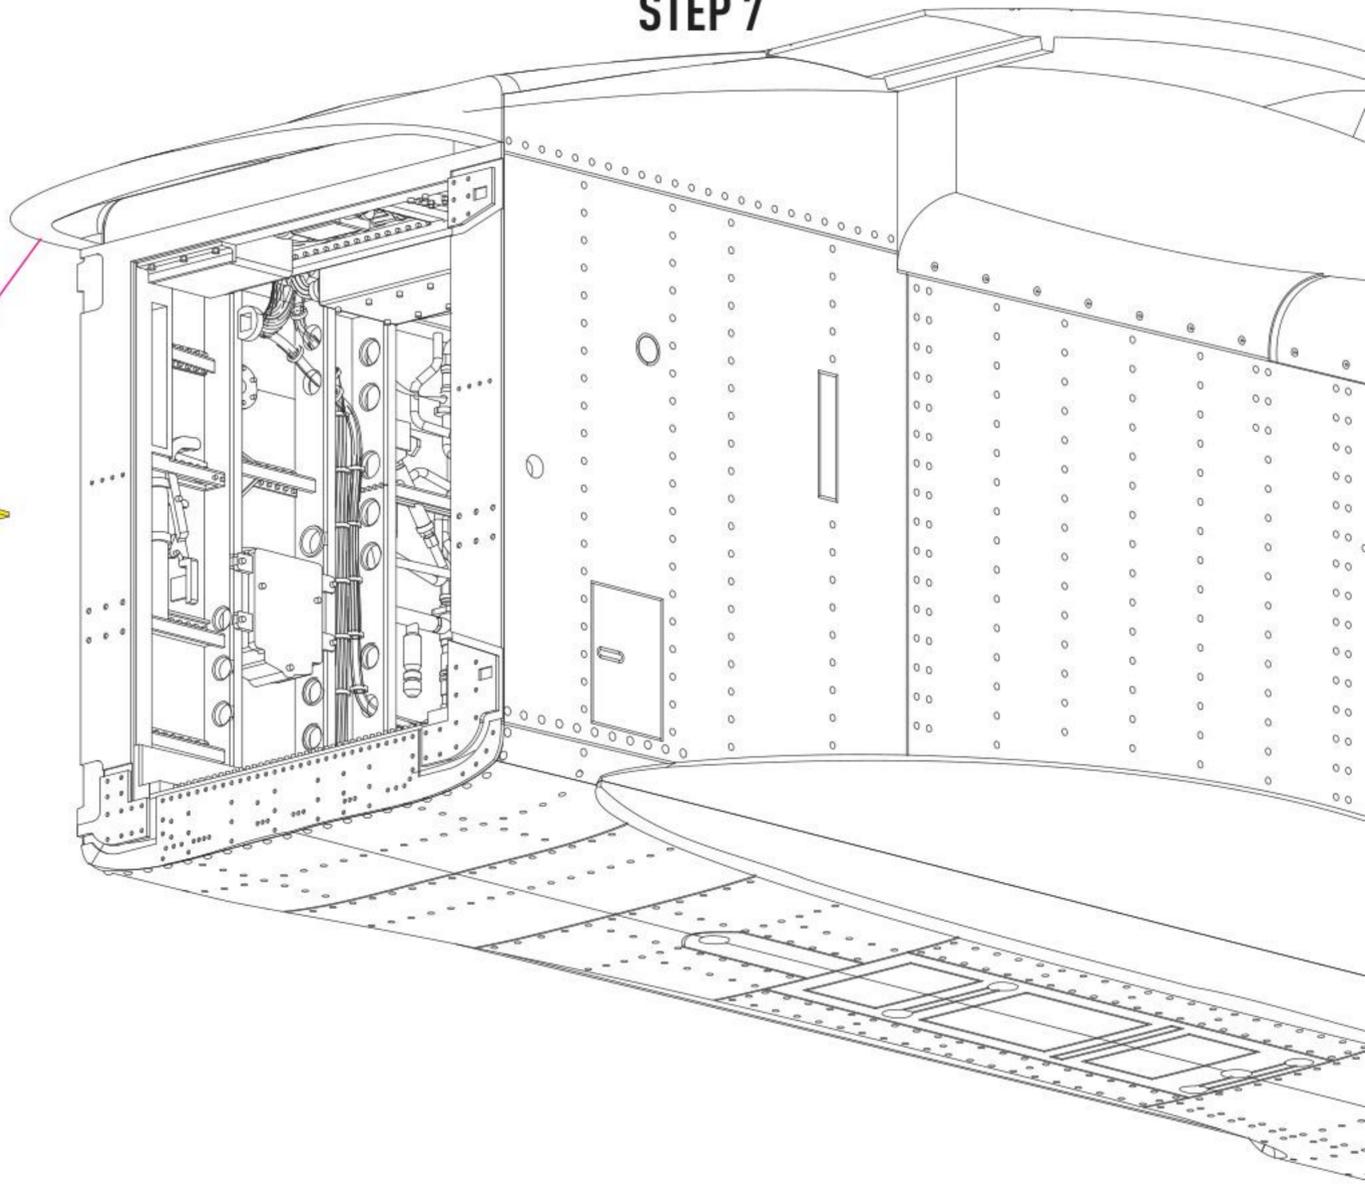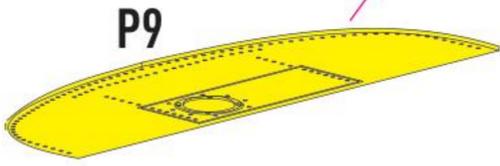




9

PARTS D7+D8
FROM THE KIT

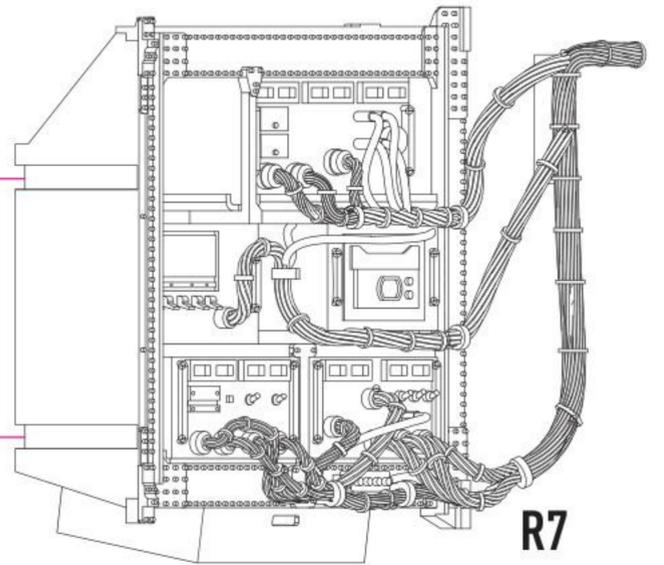
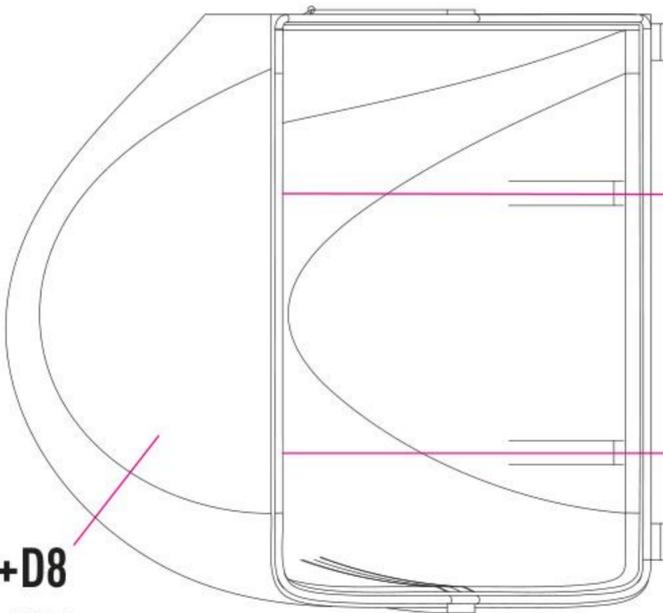


10

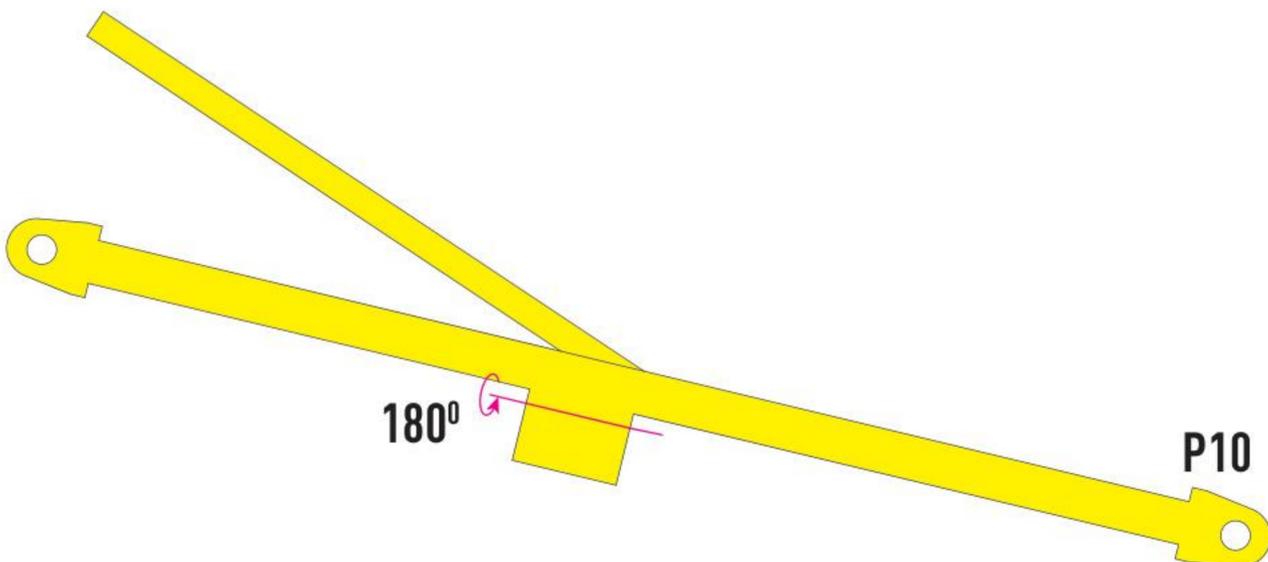


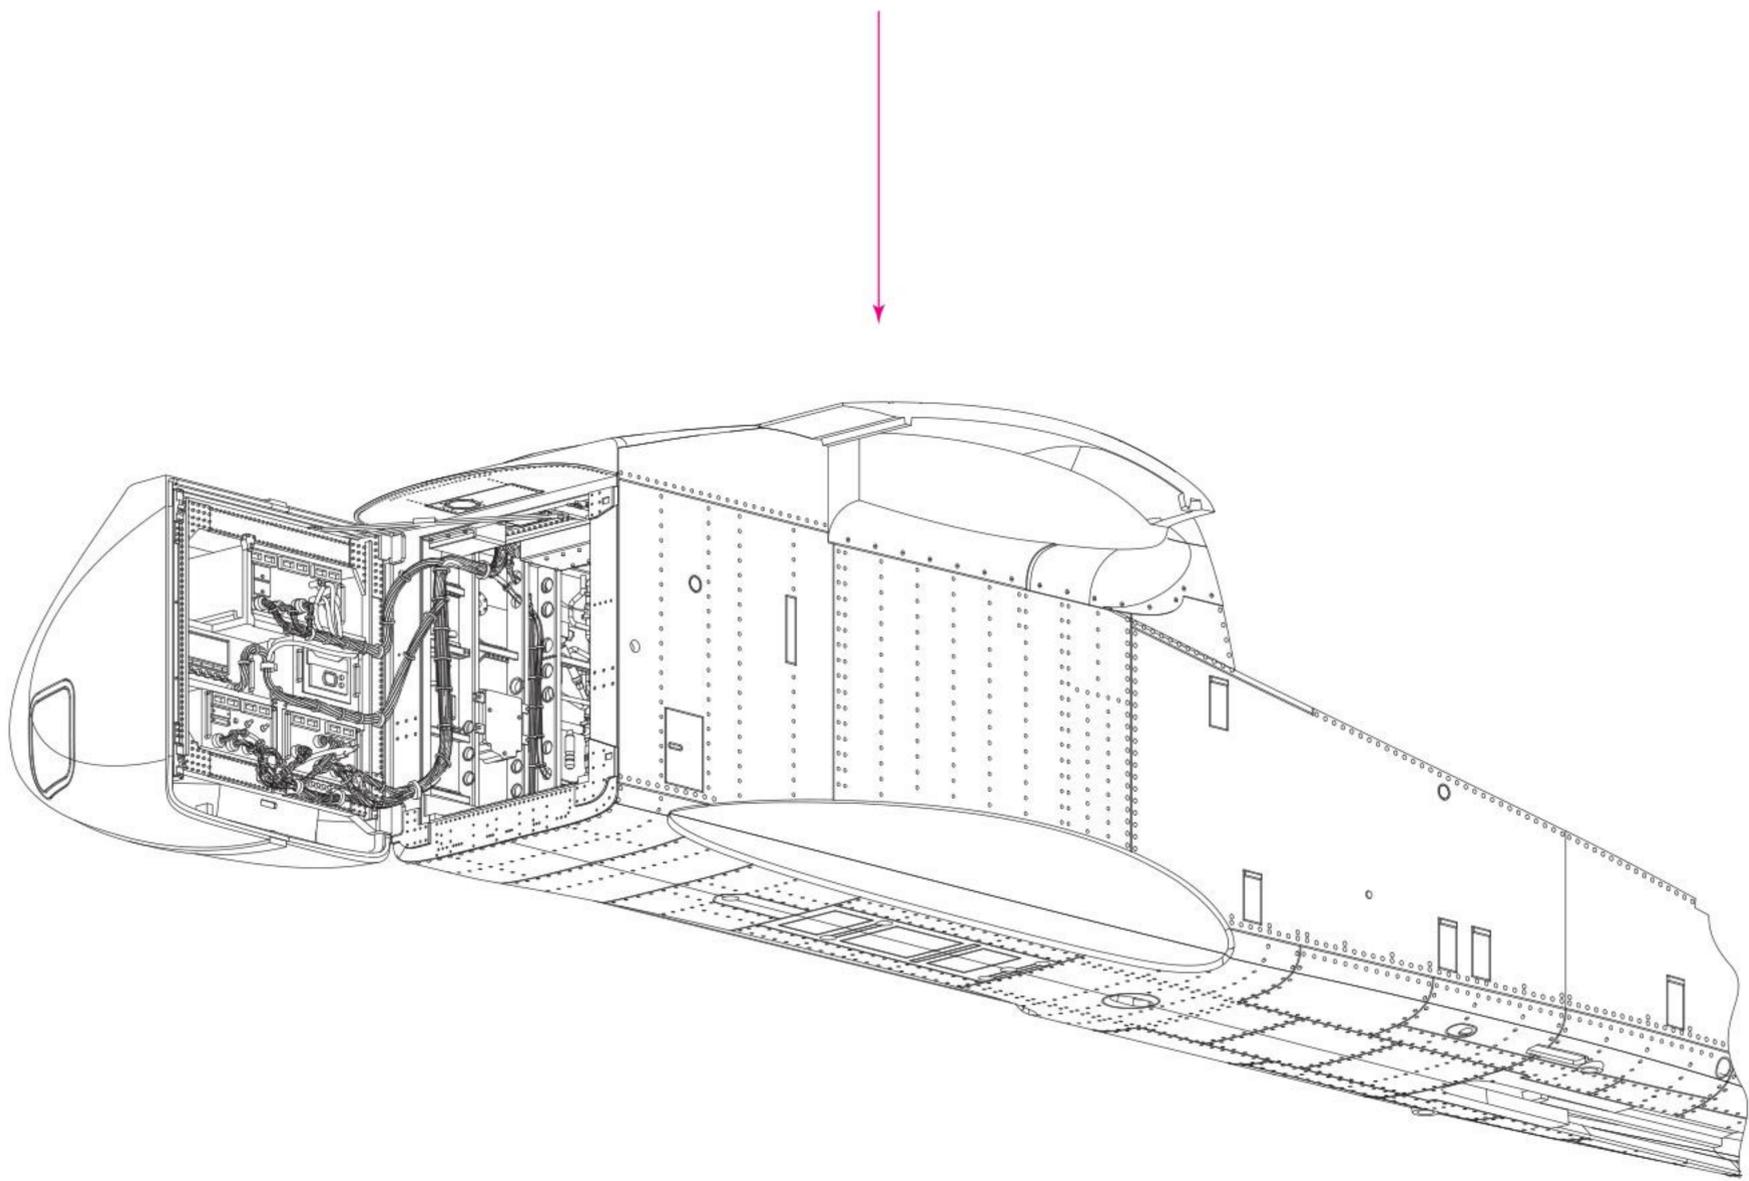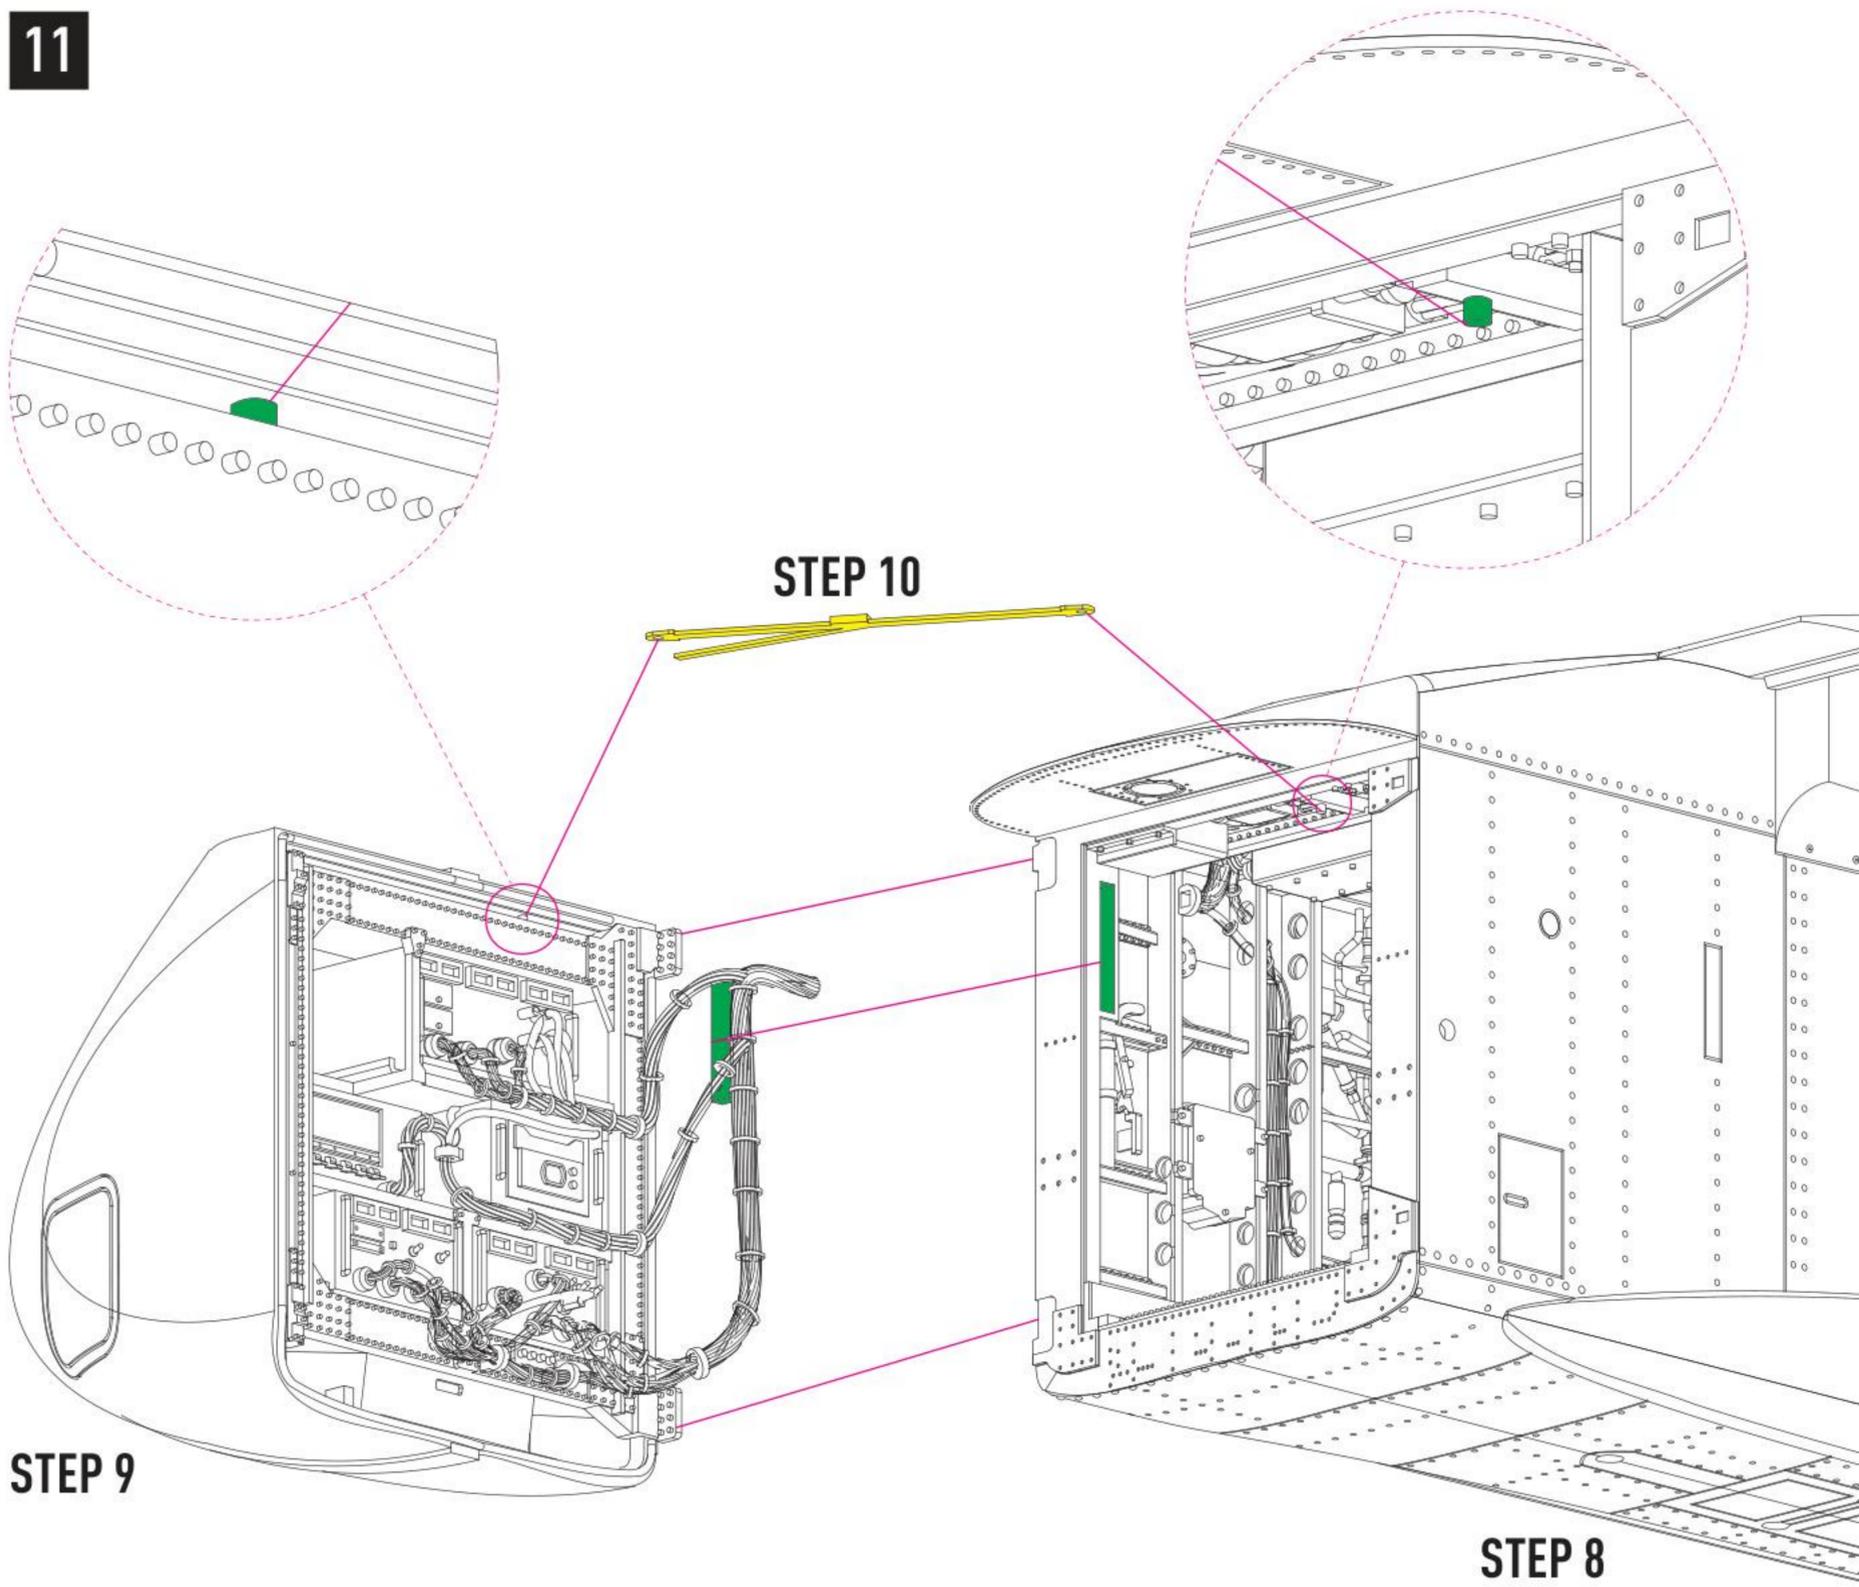


TEMPLATE FOR LINING MASKS

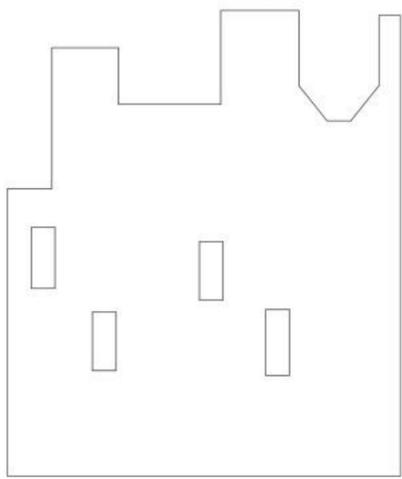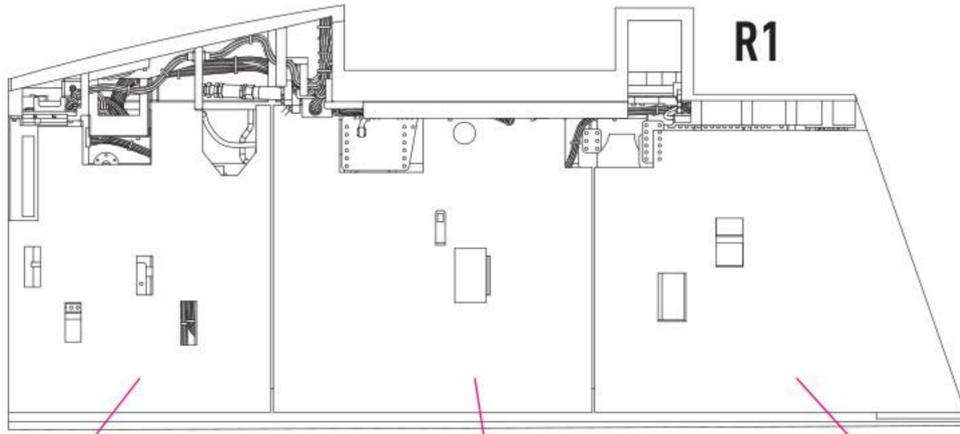



01

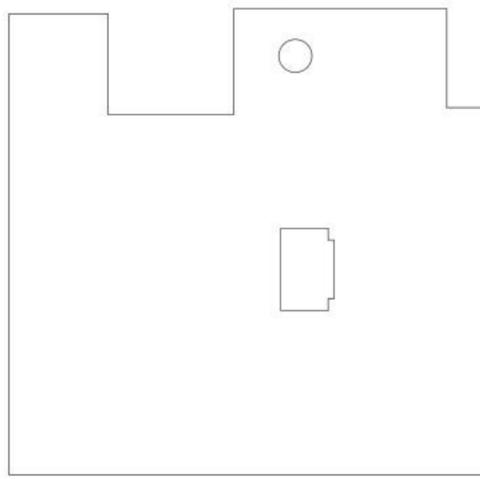


02

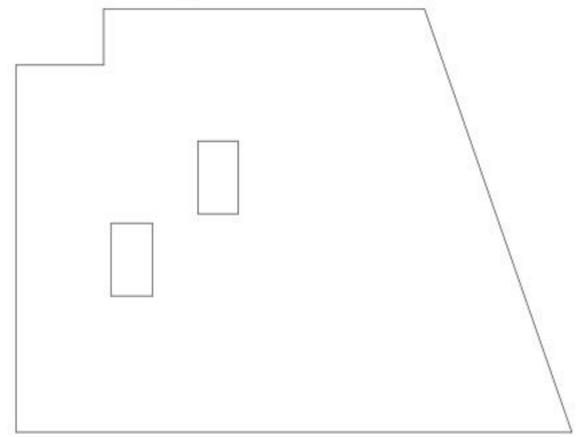


03

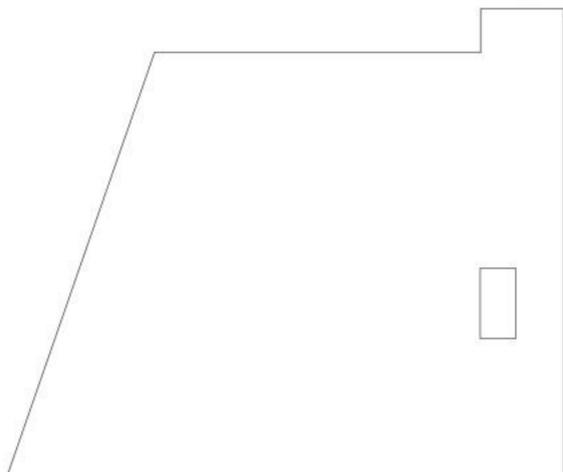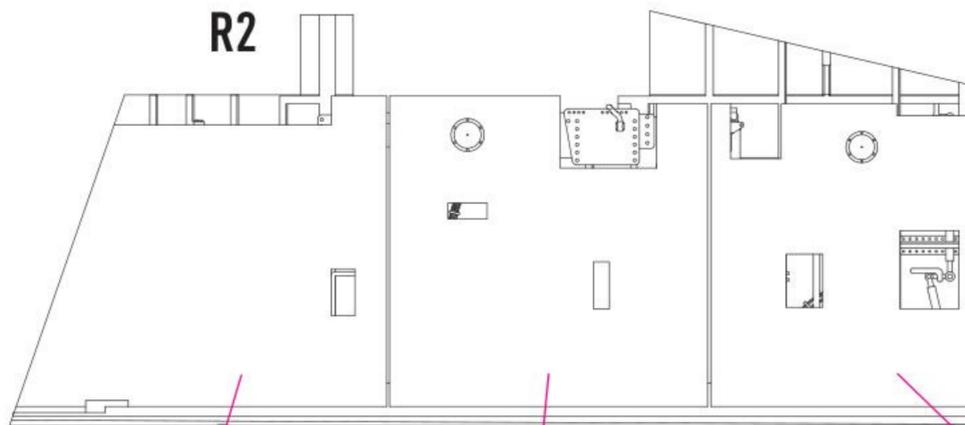

04

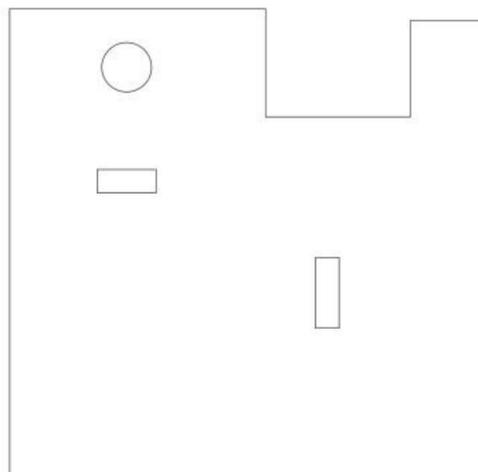

05

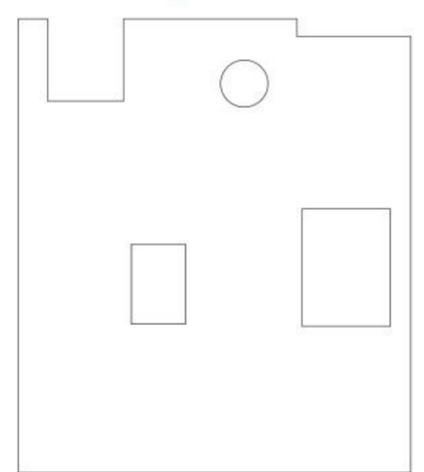

06

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua