




3D DECAL INSTRUCTION

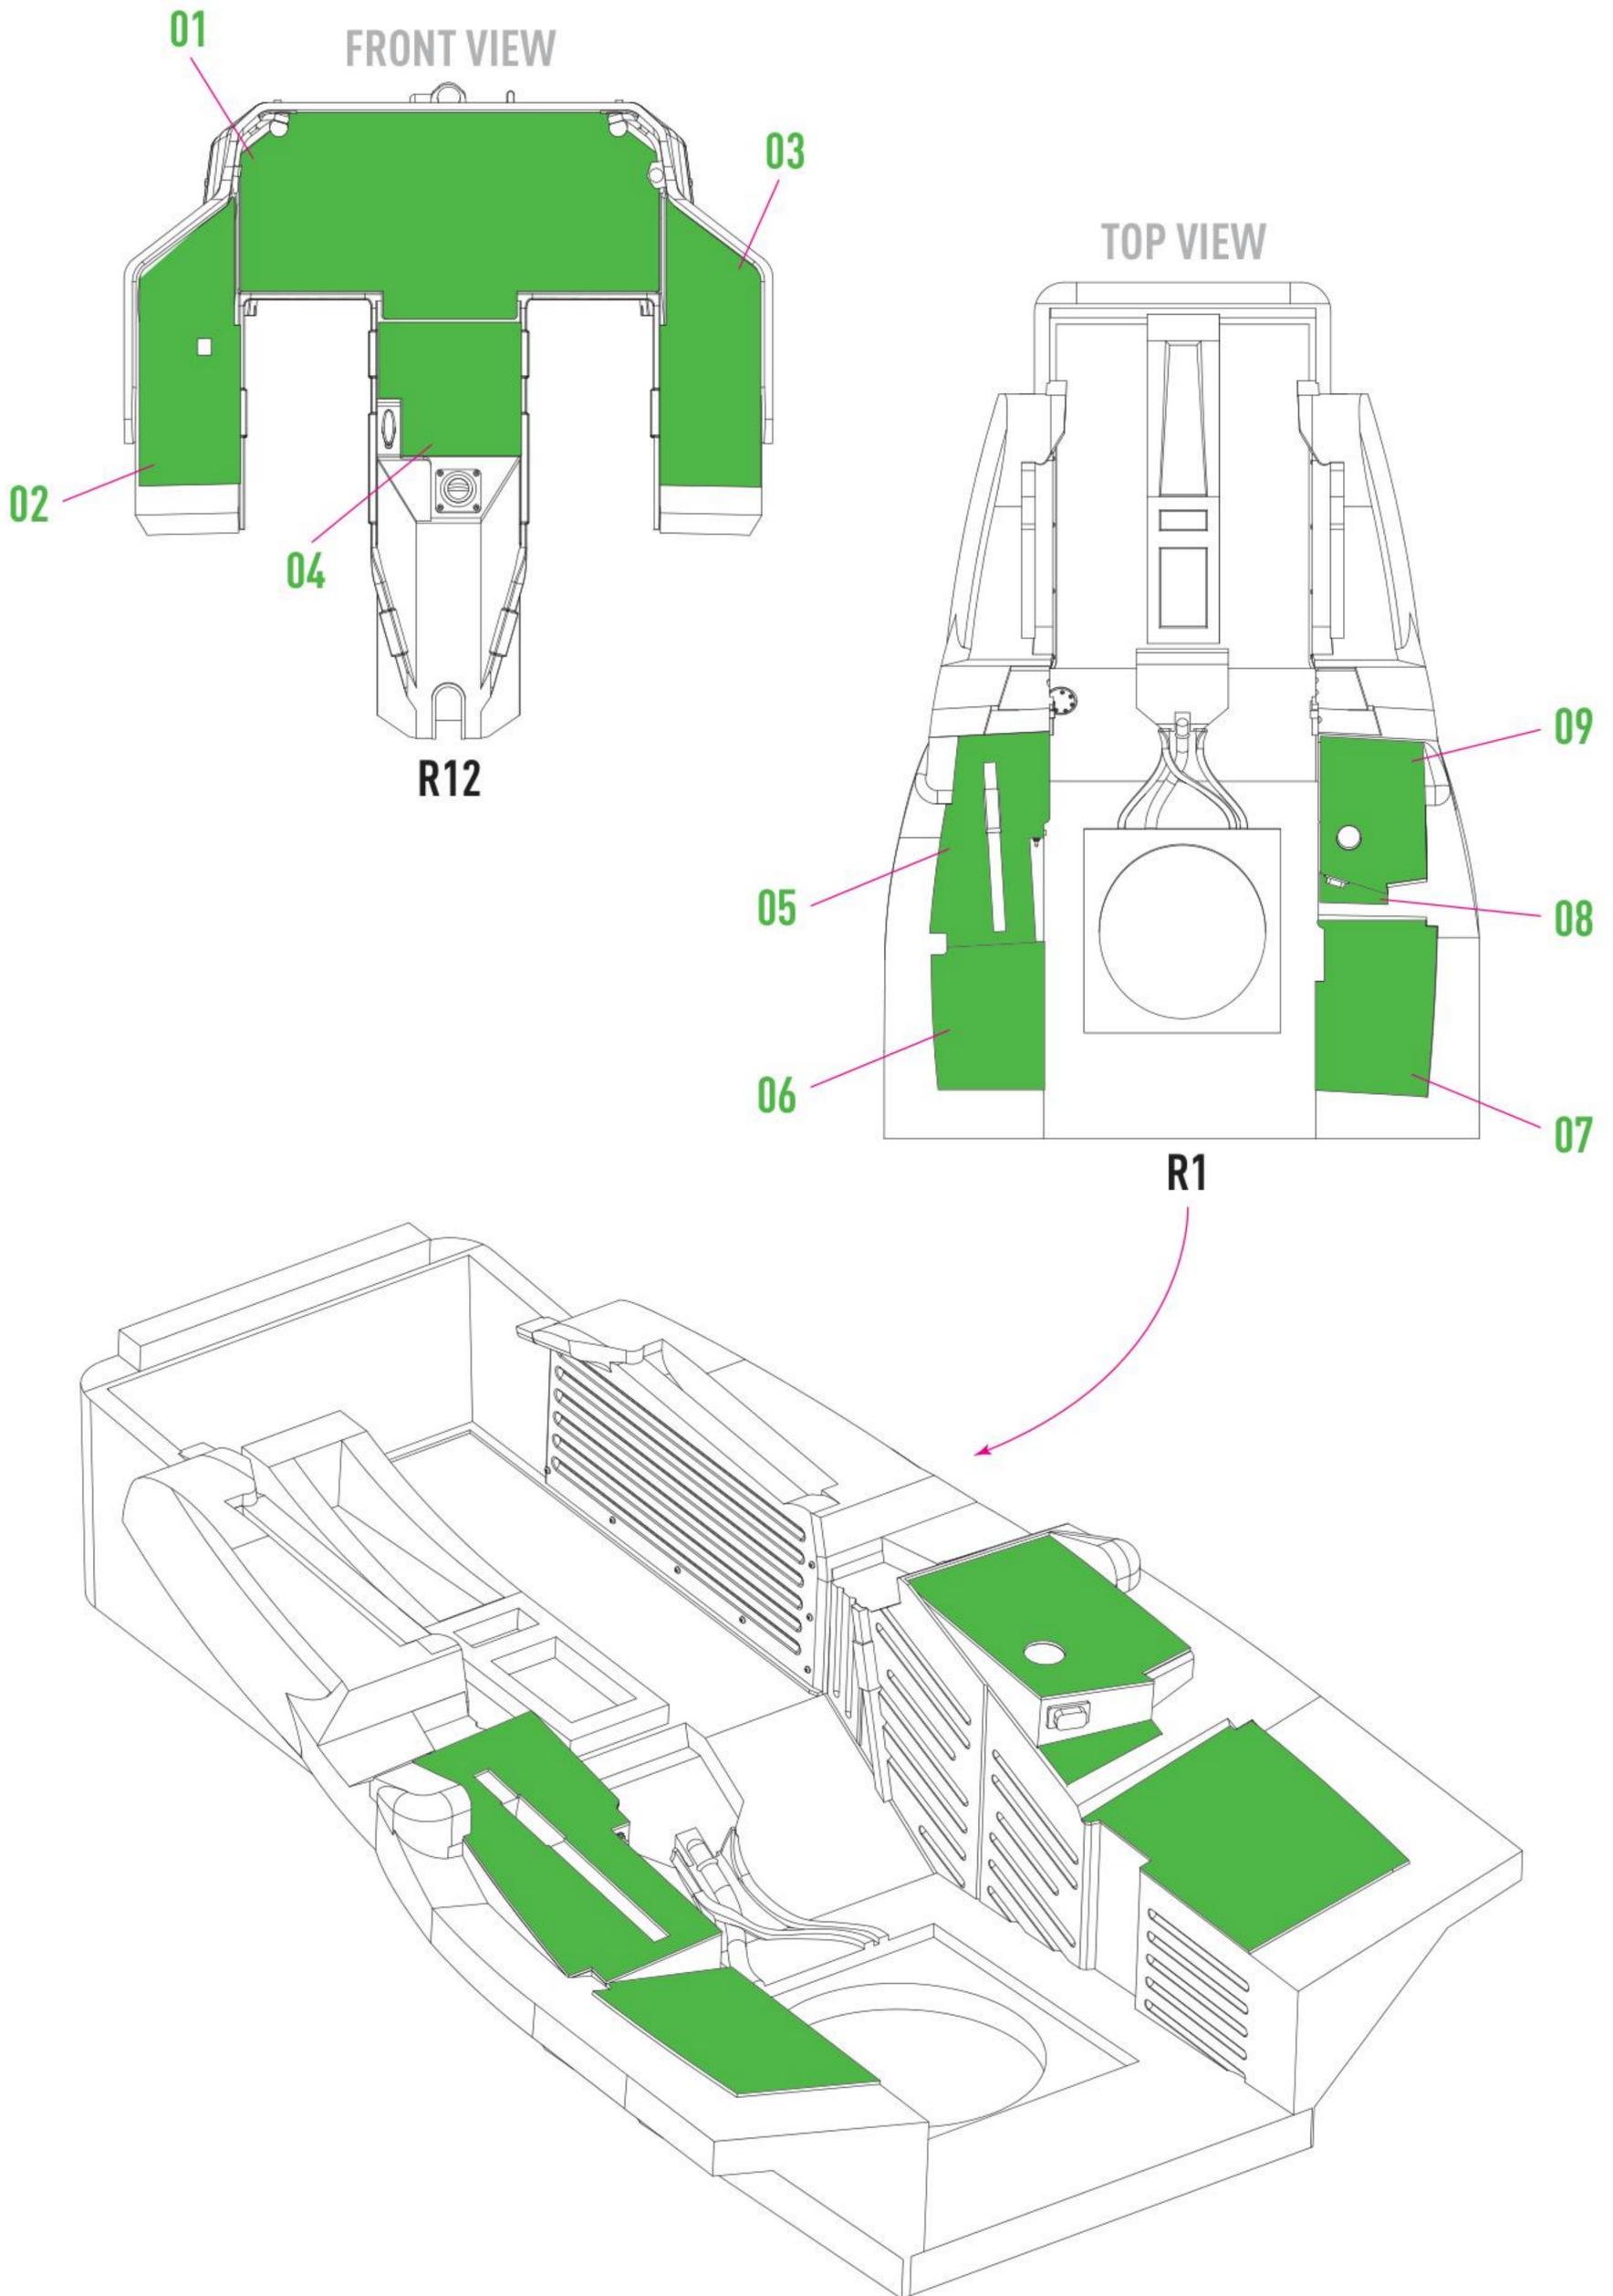


1

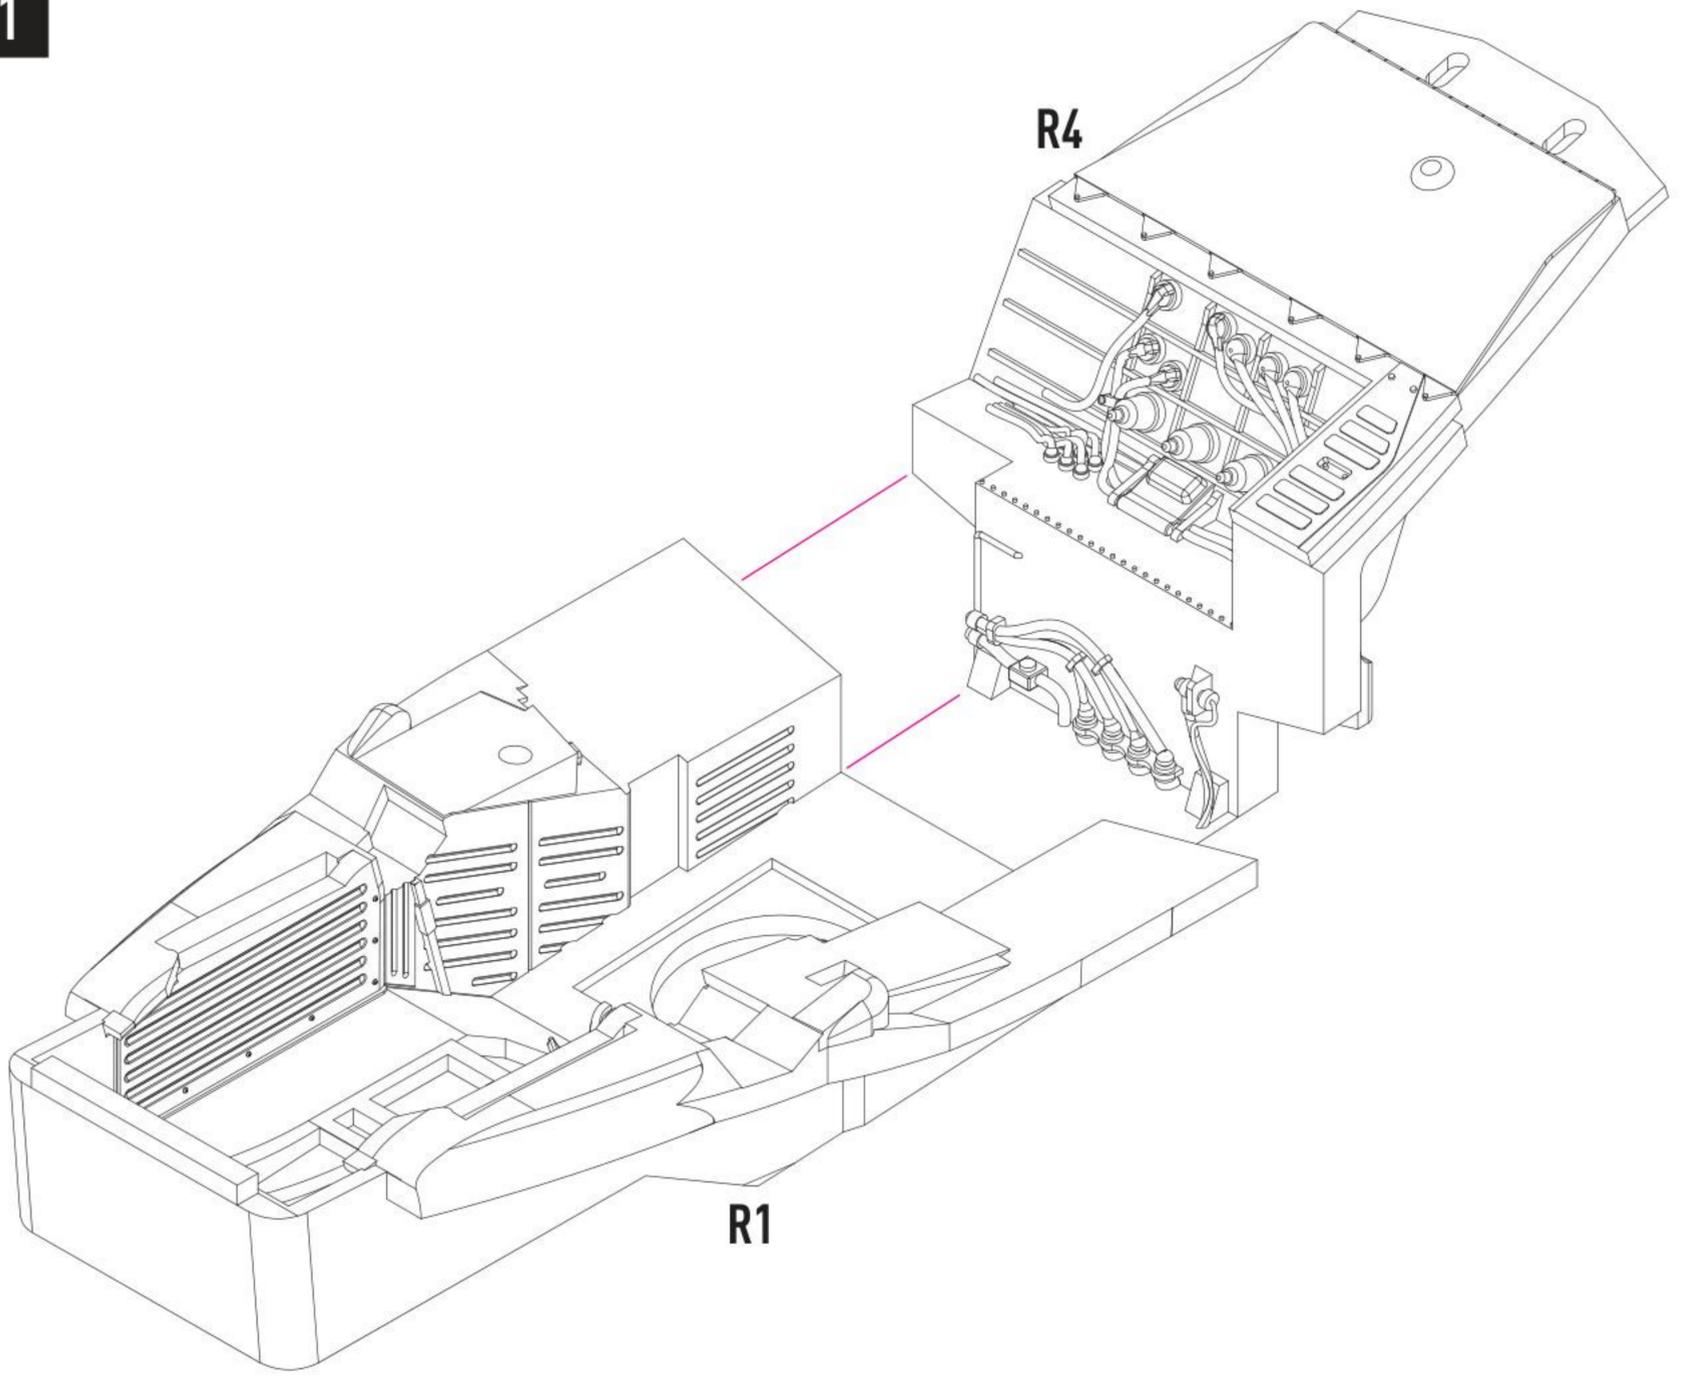


2

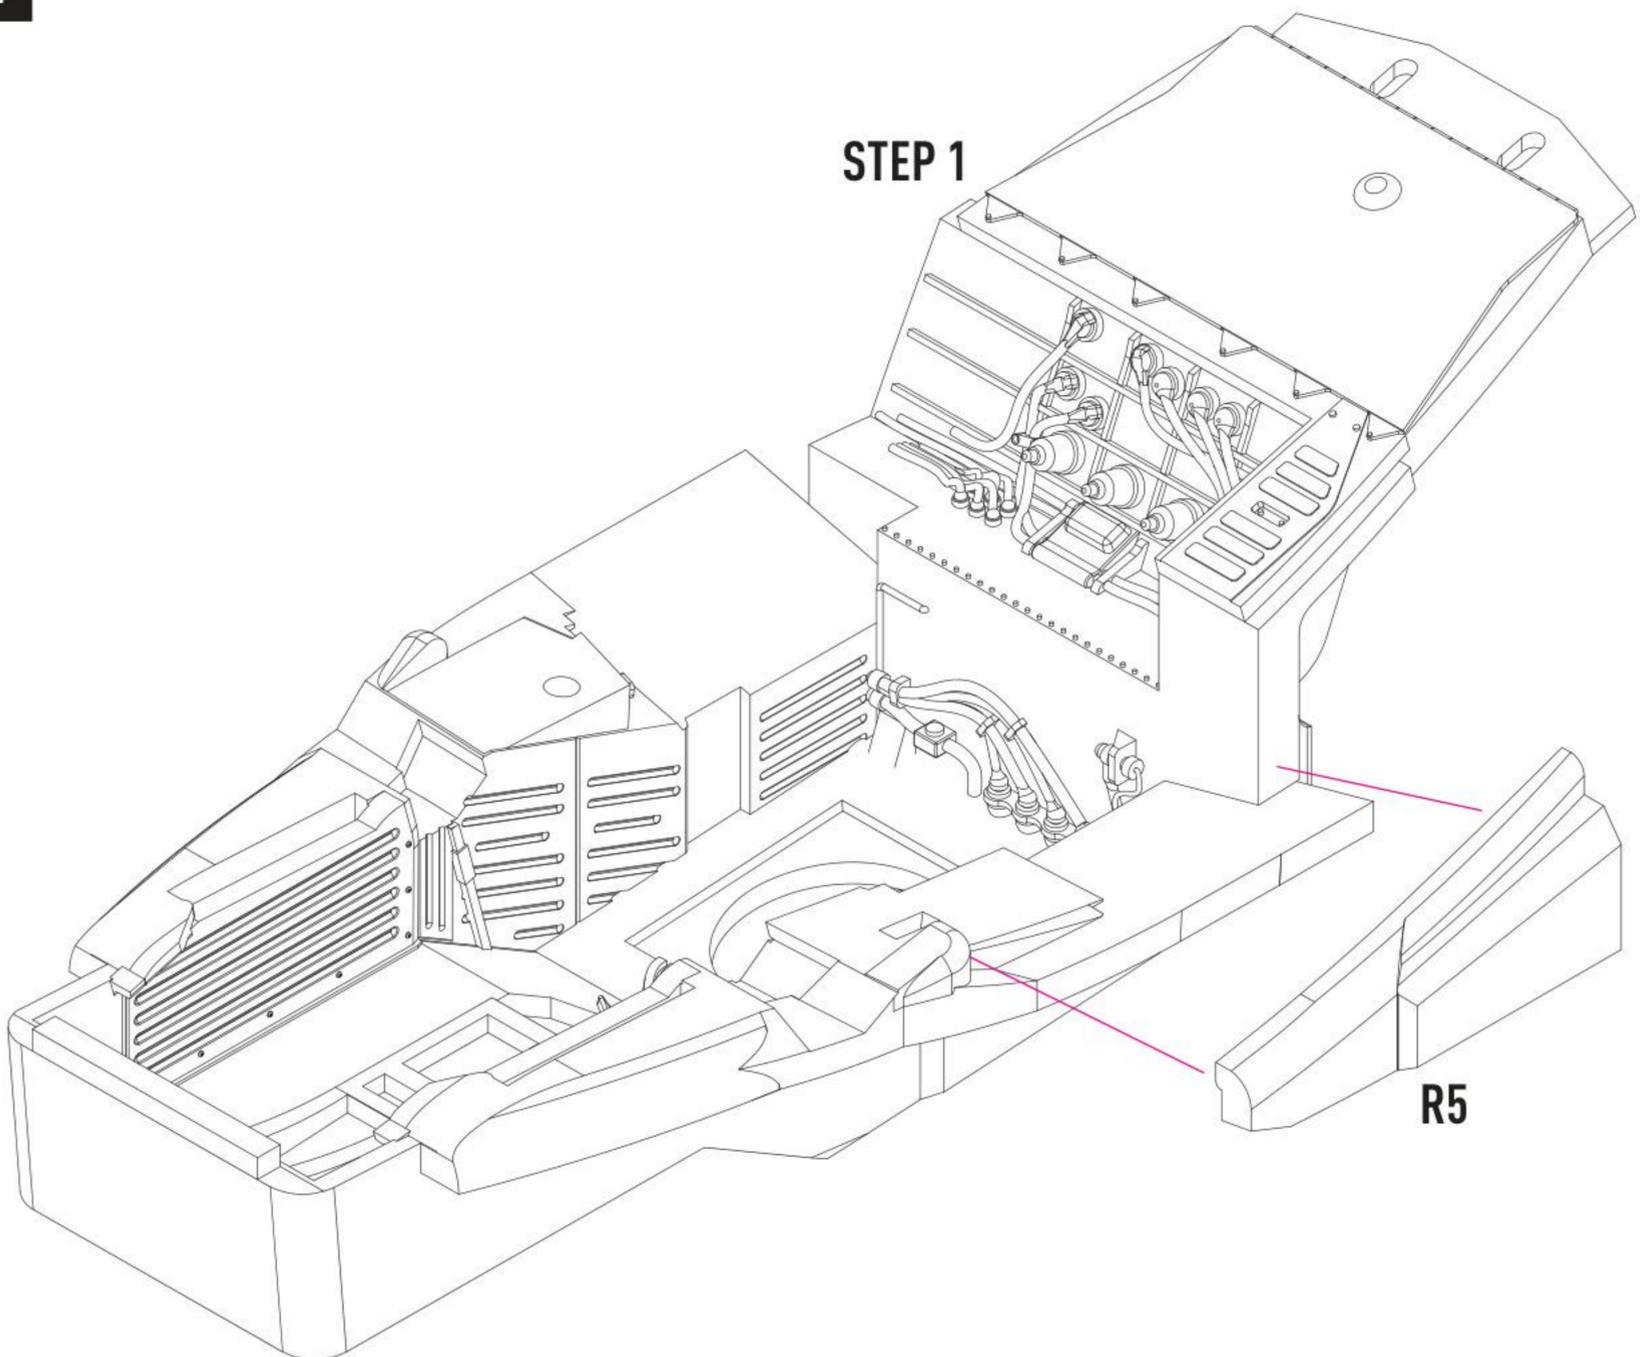


3

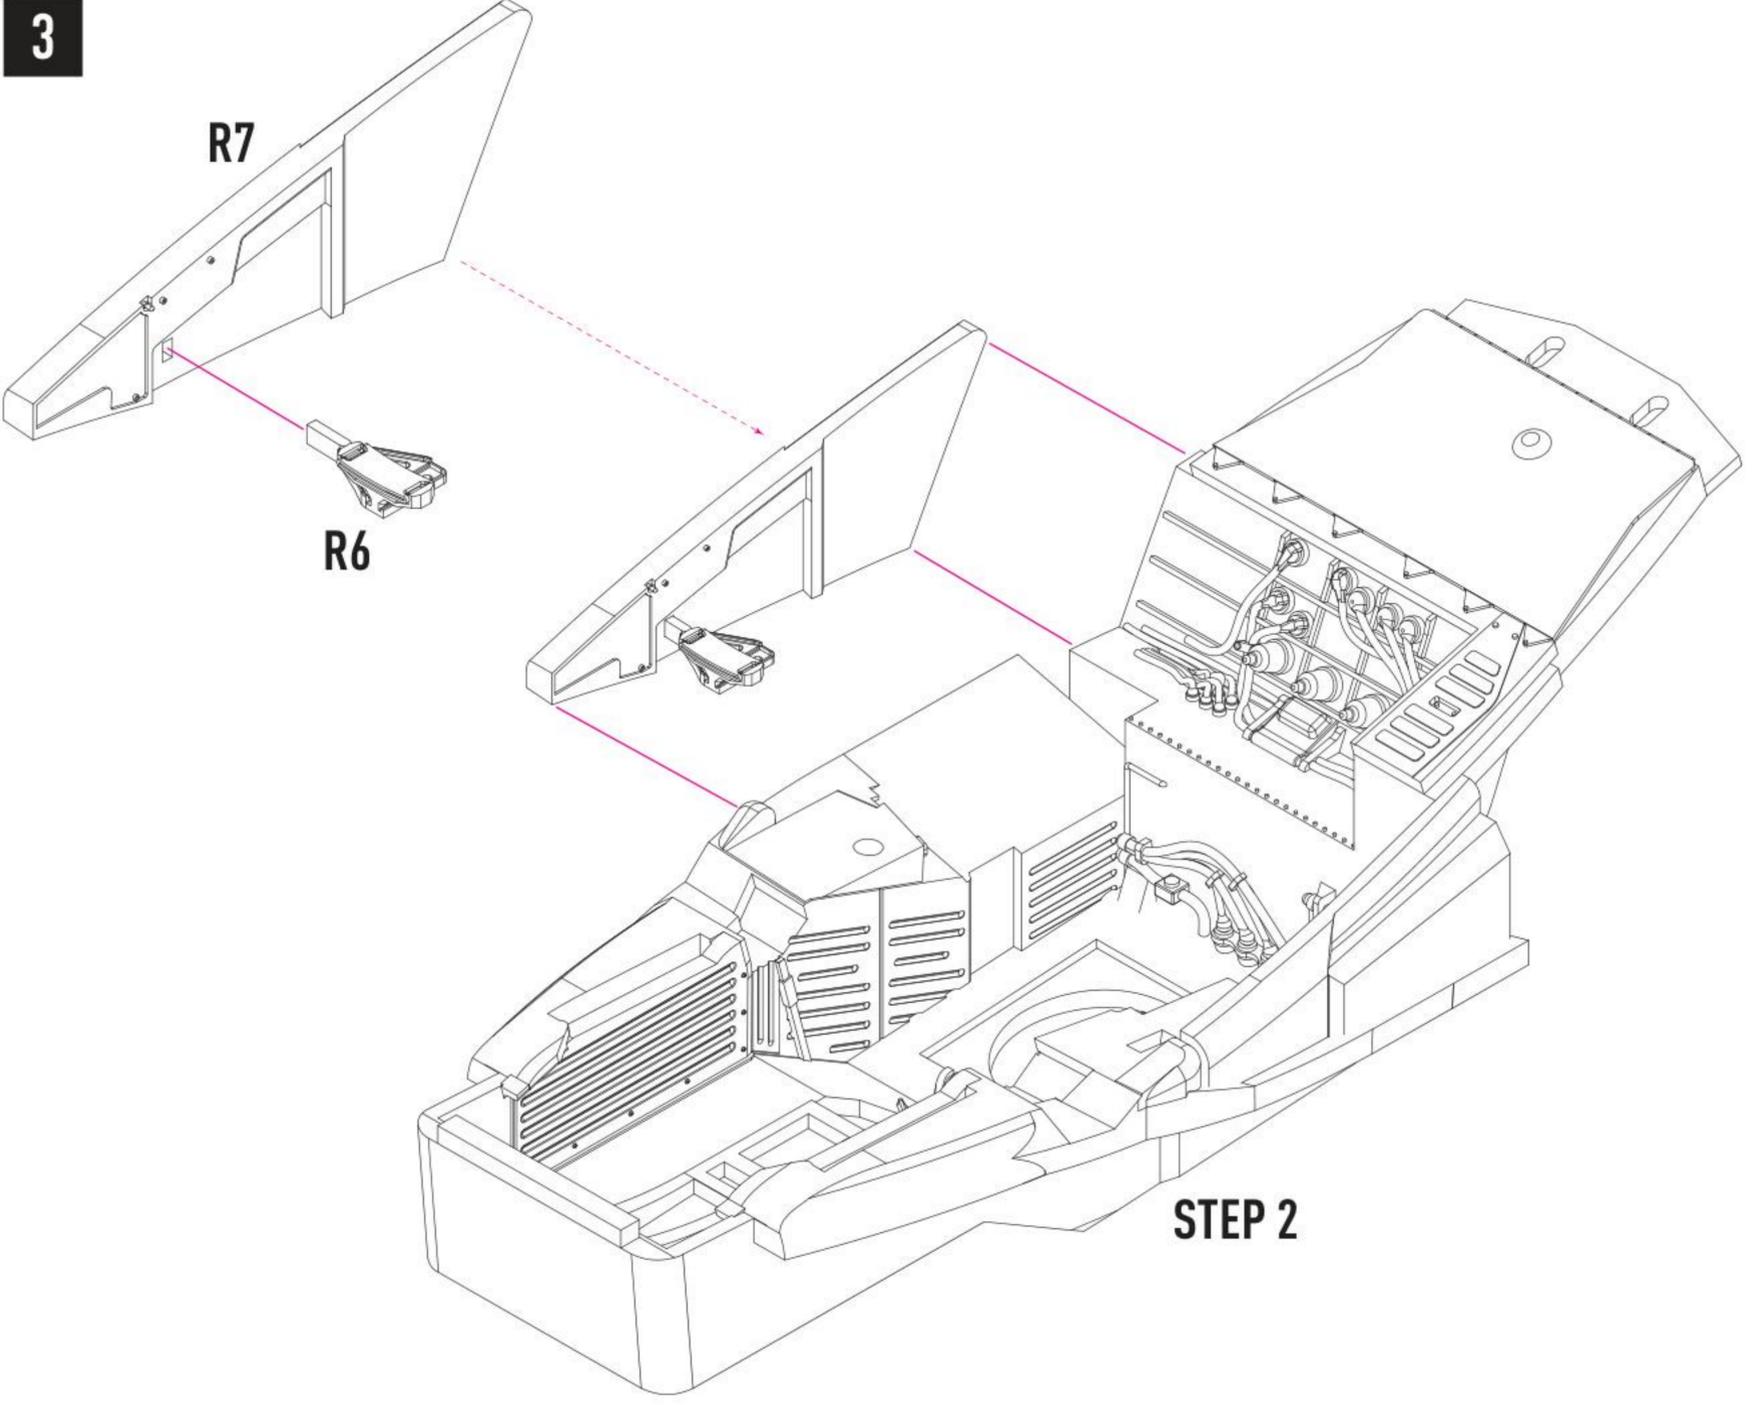


4

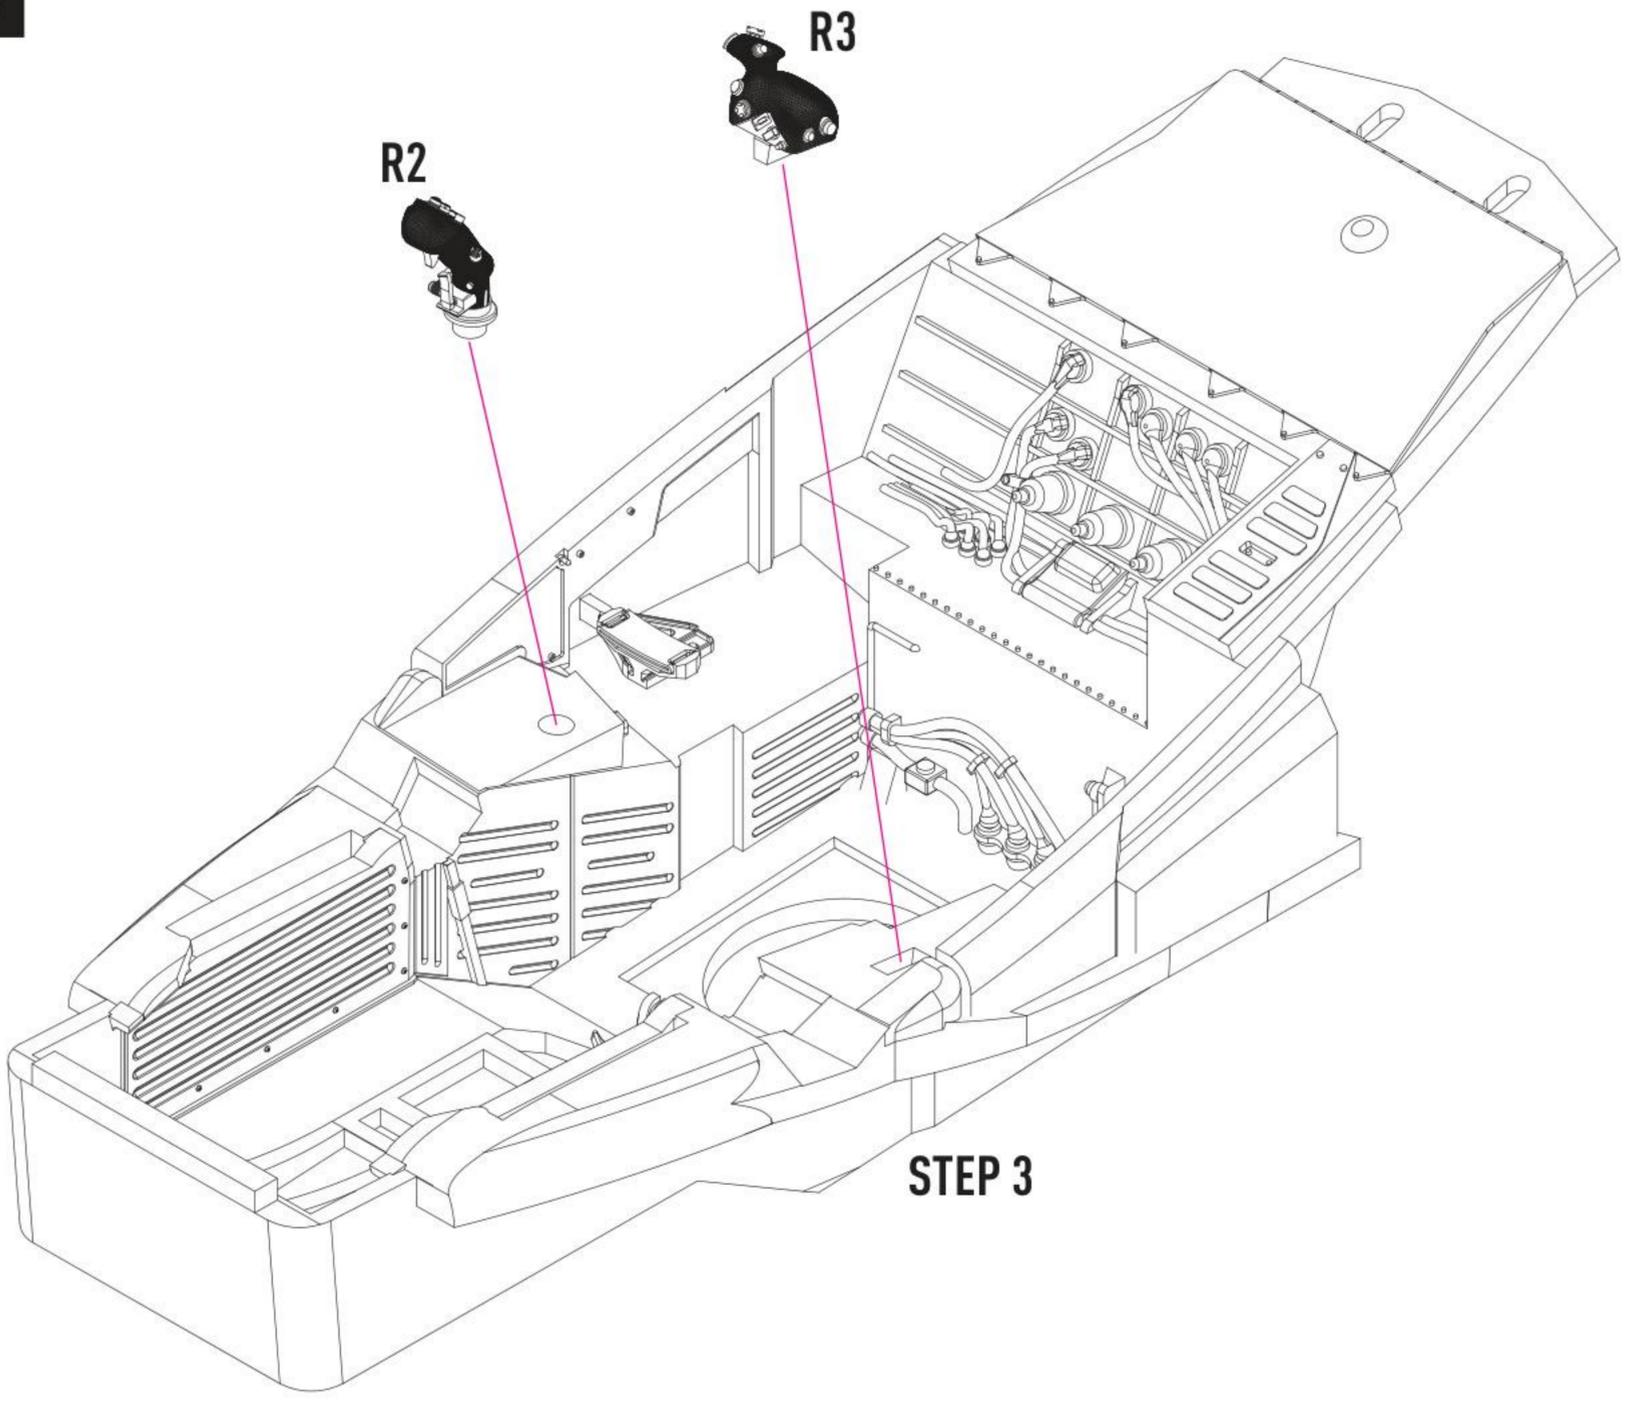


5

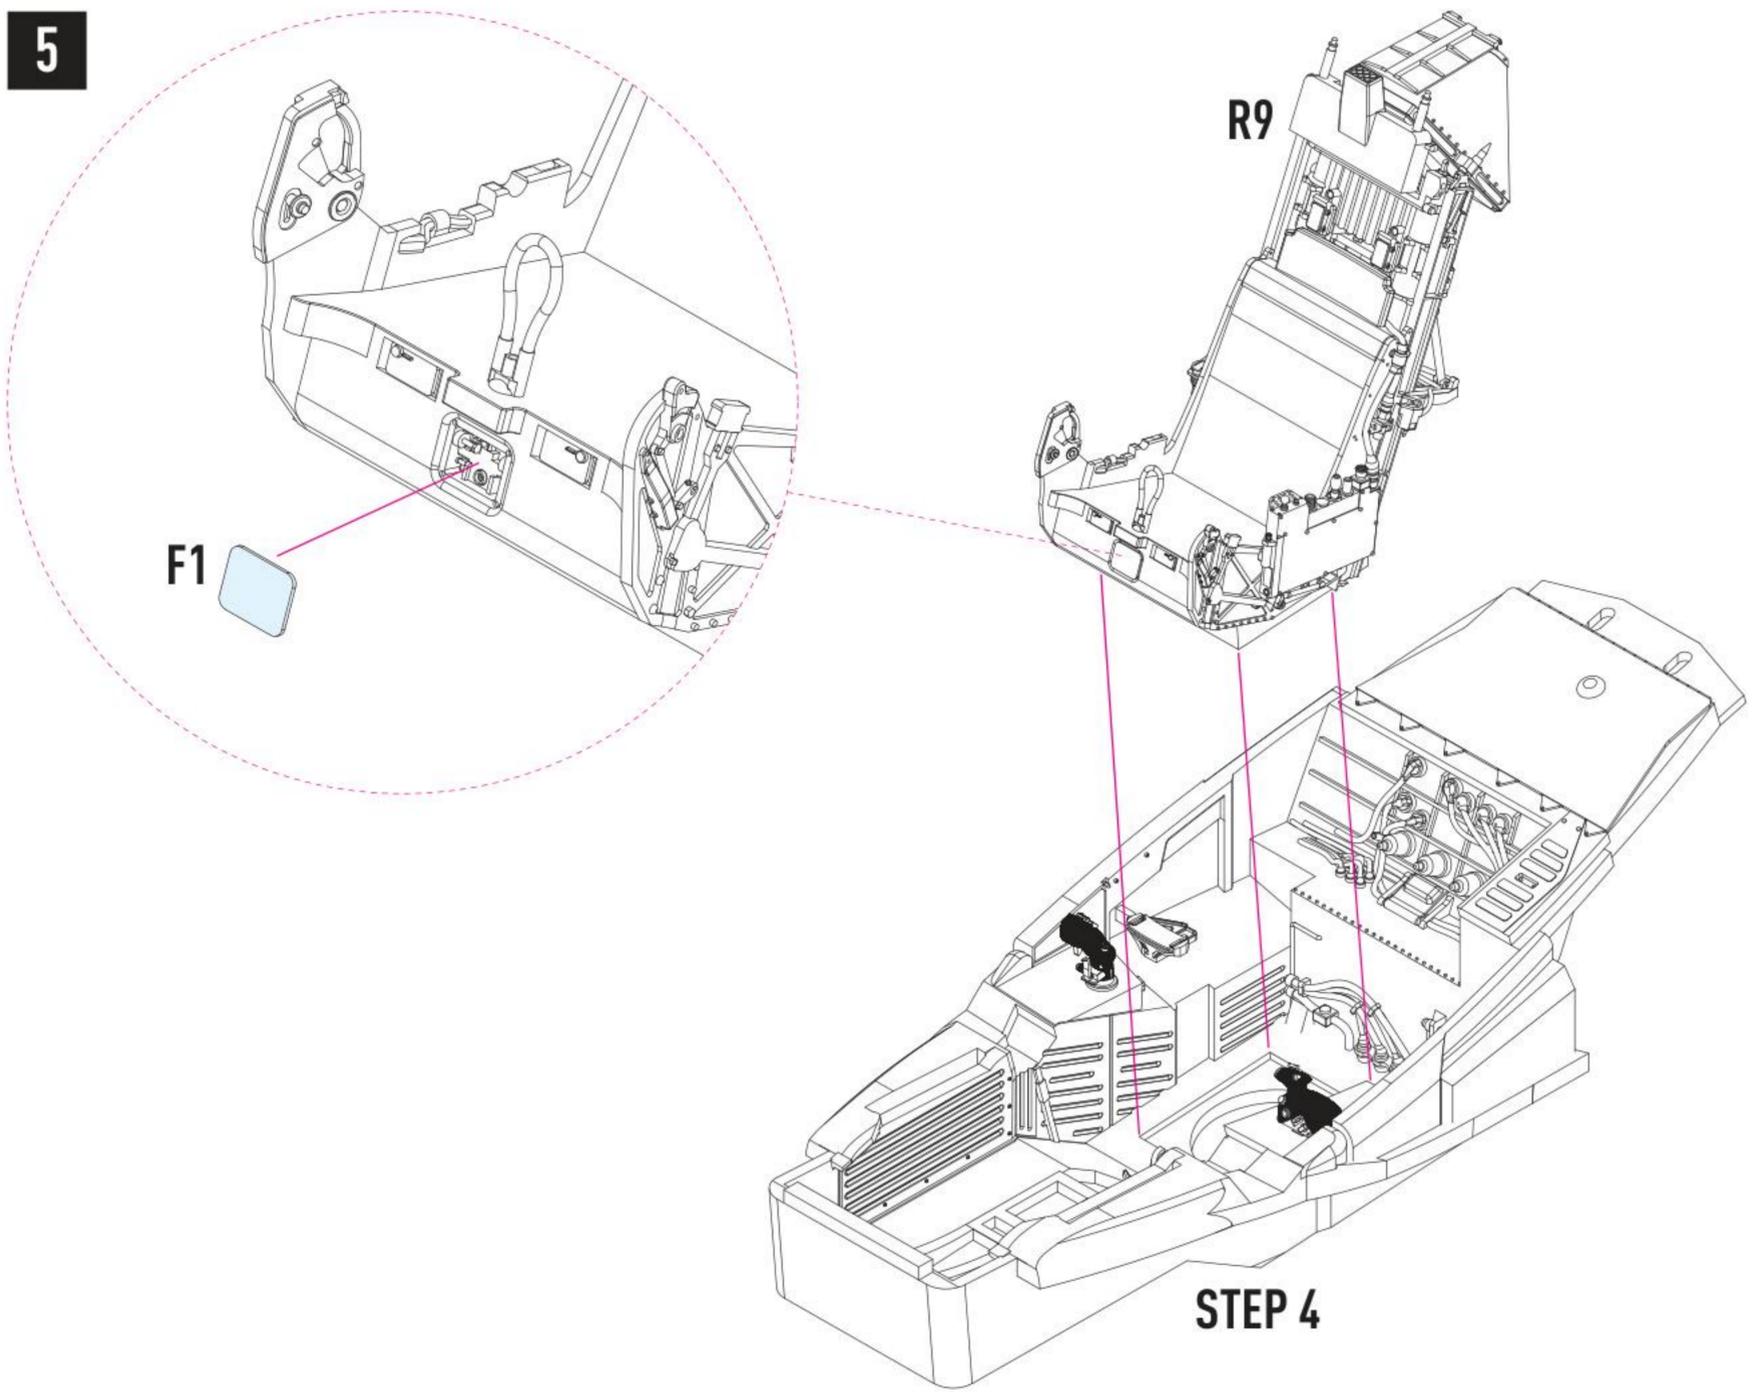


6

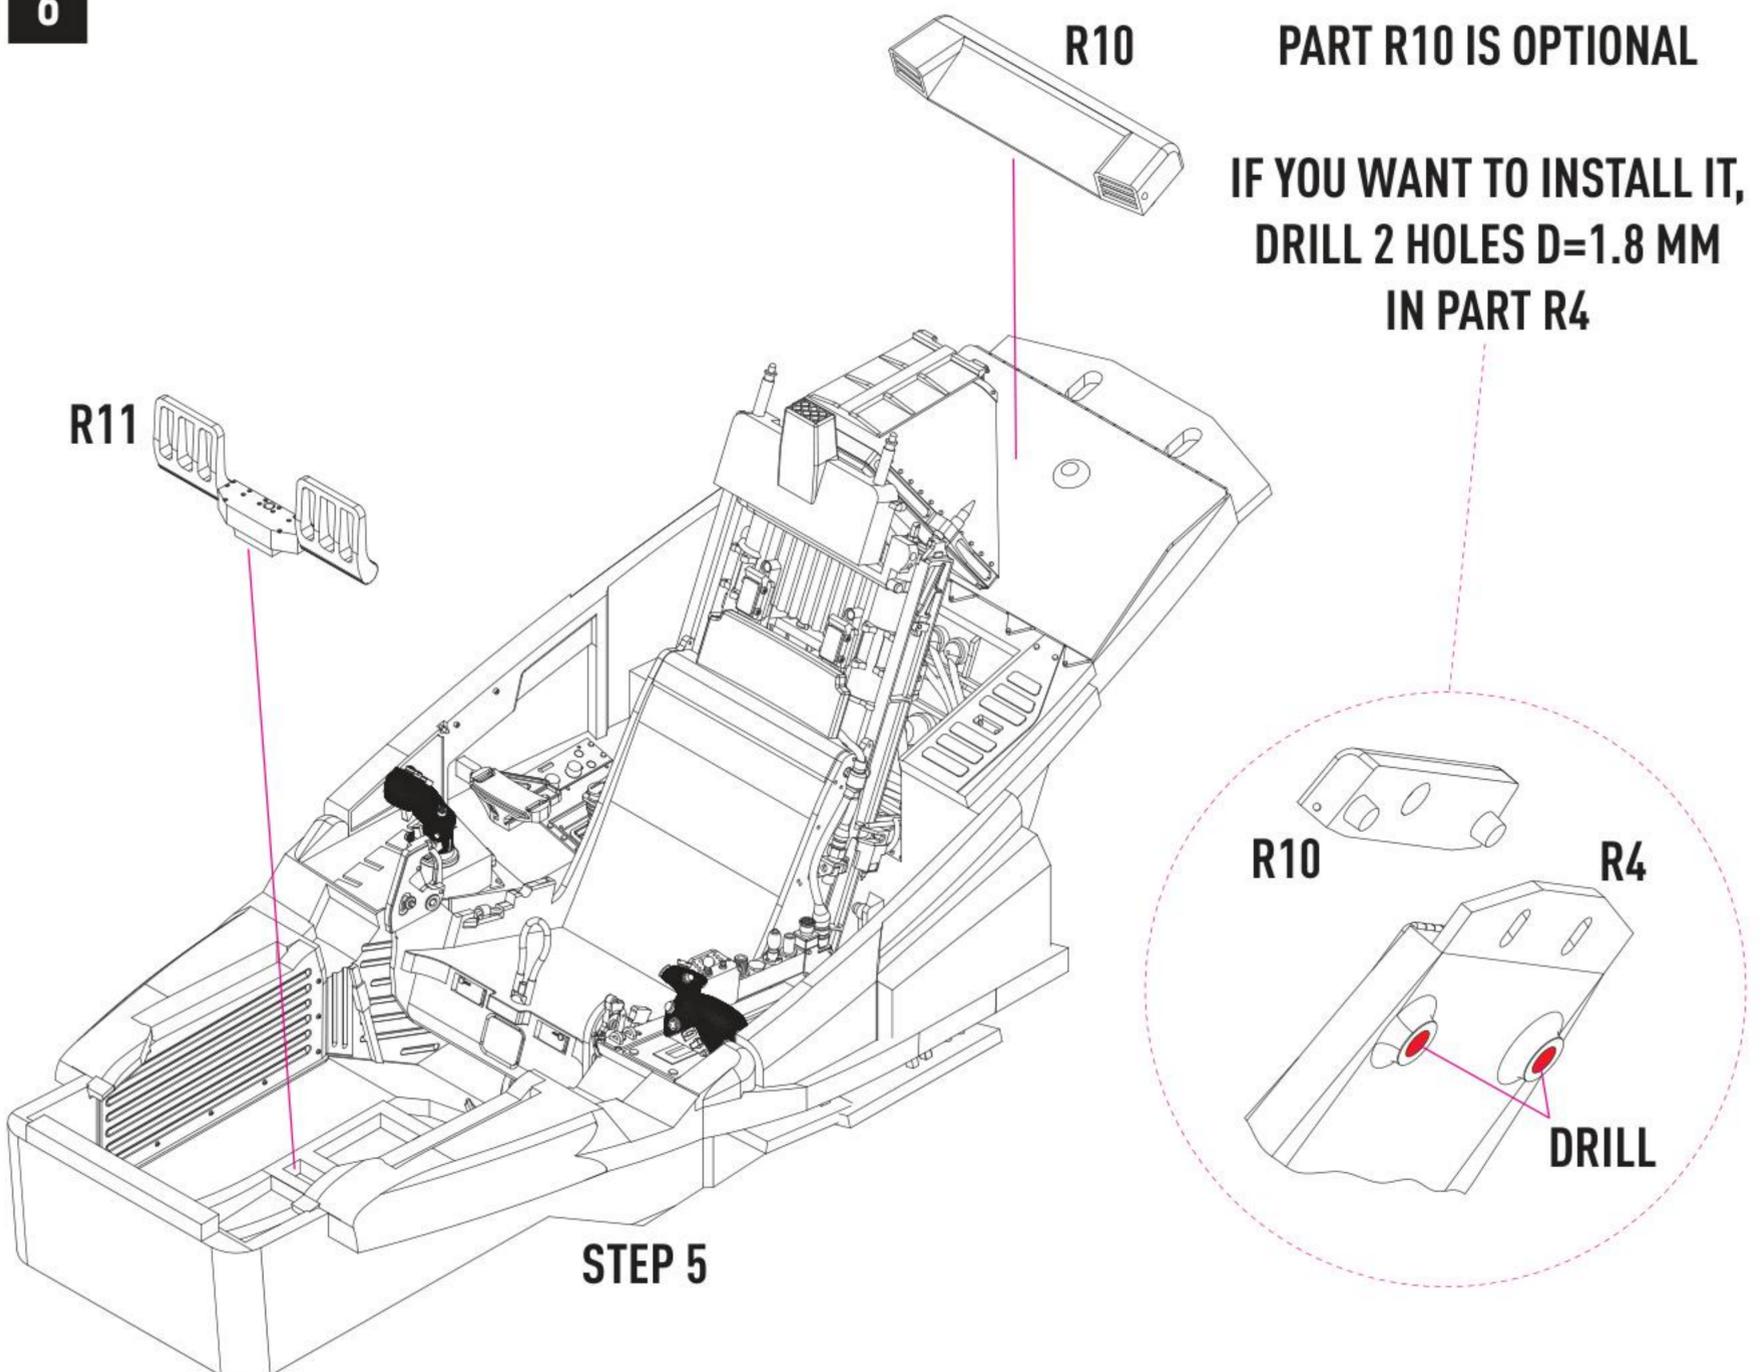


7

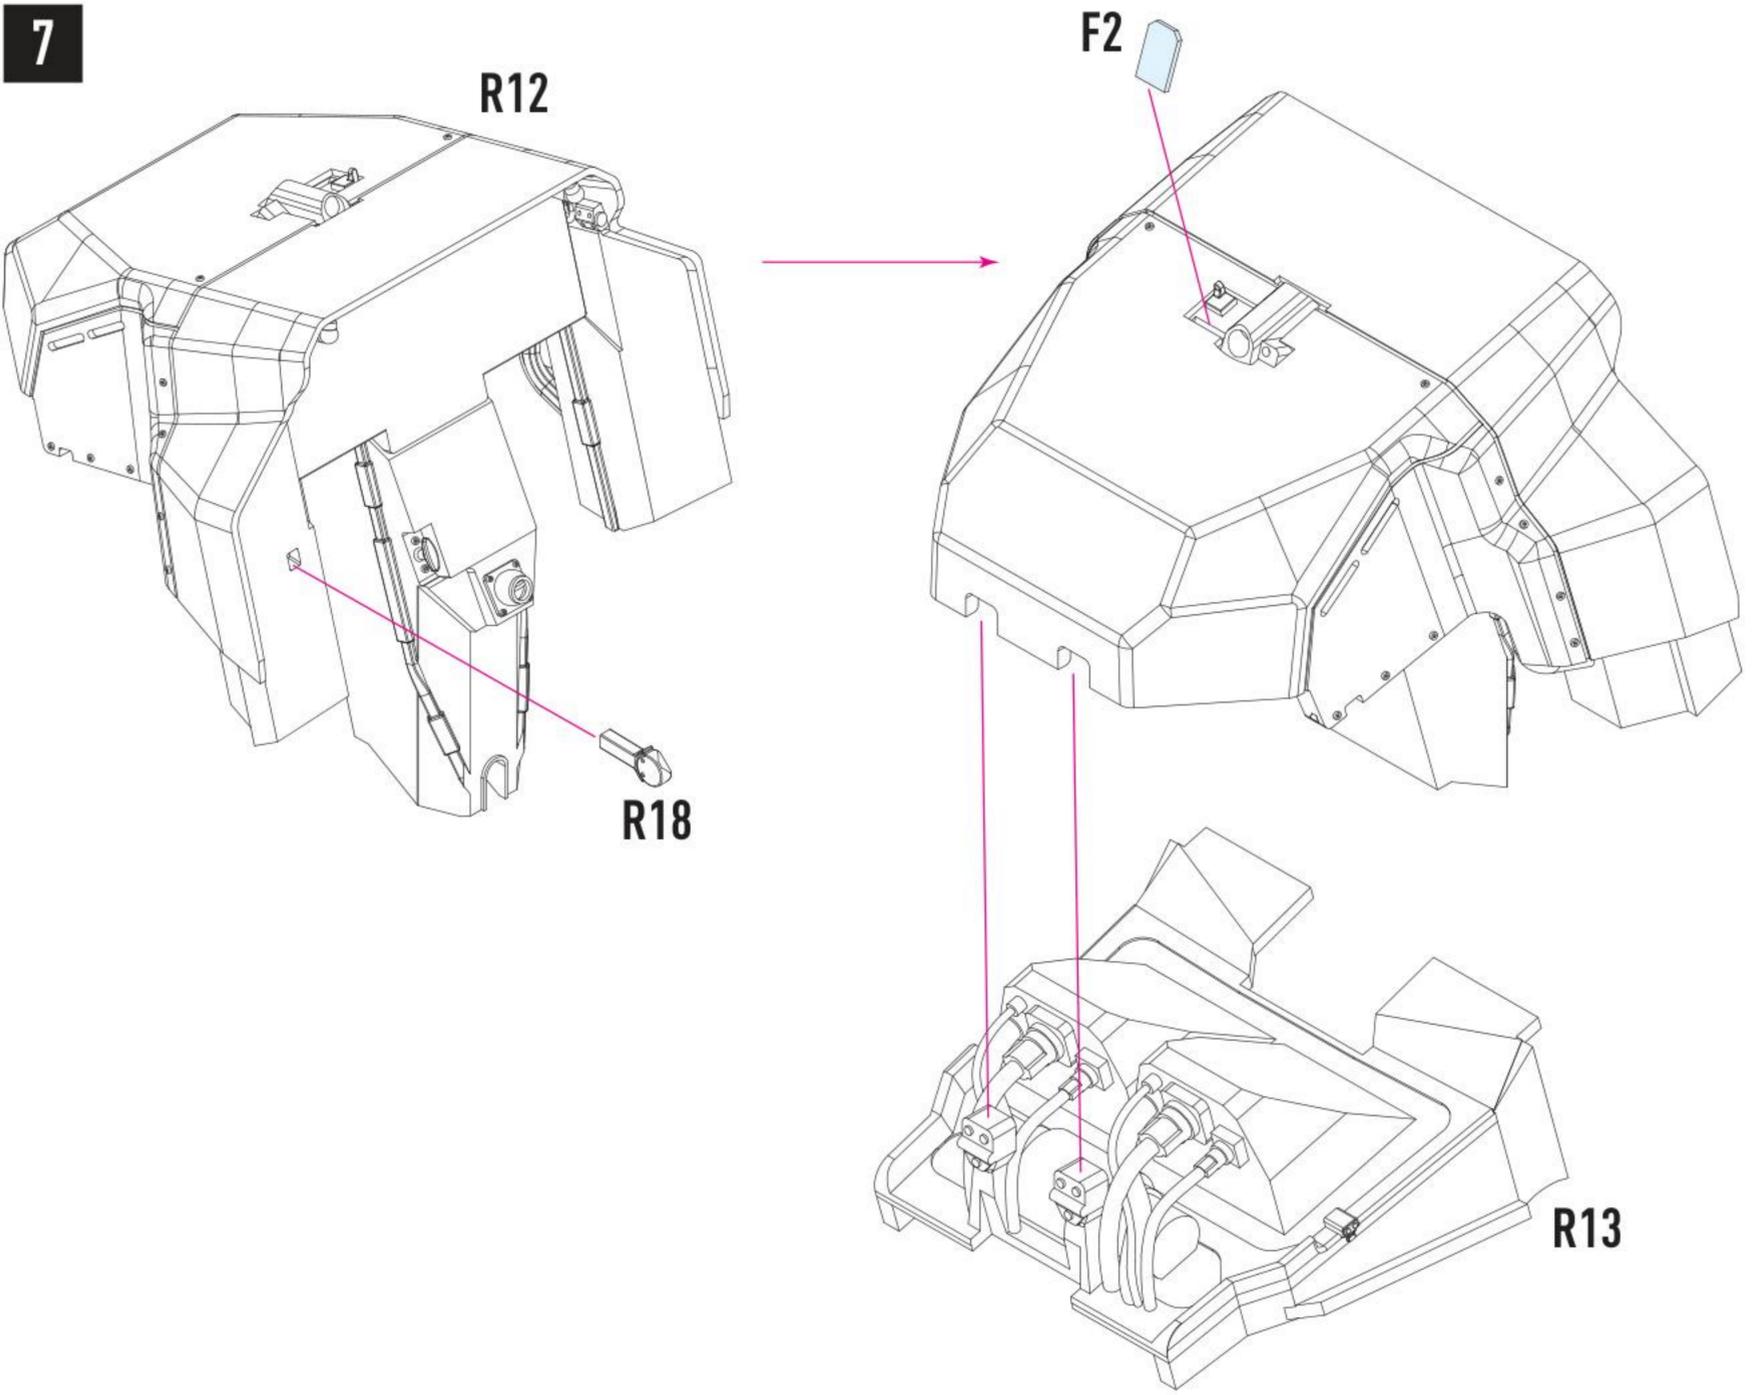


8

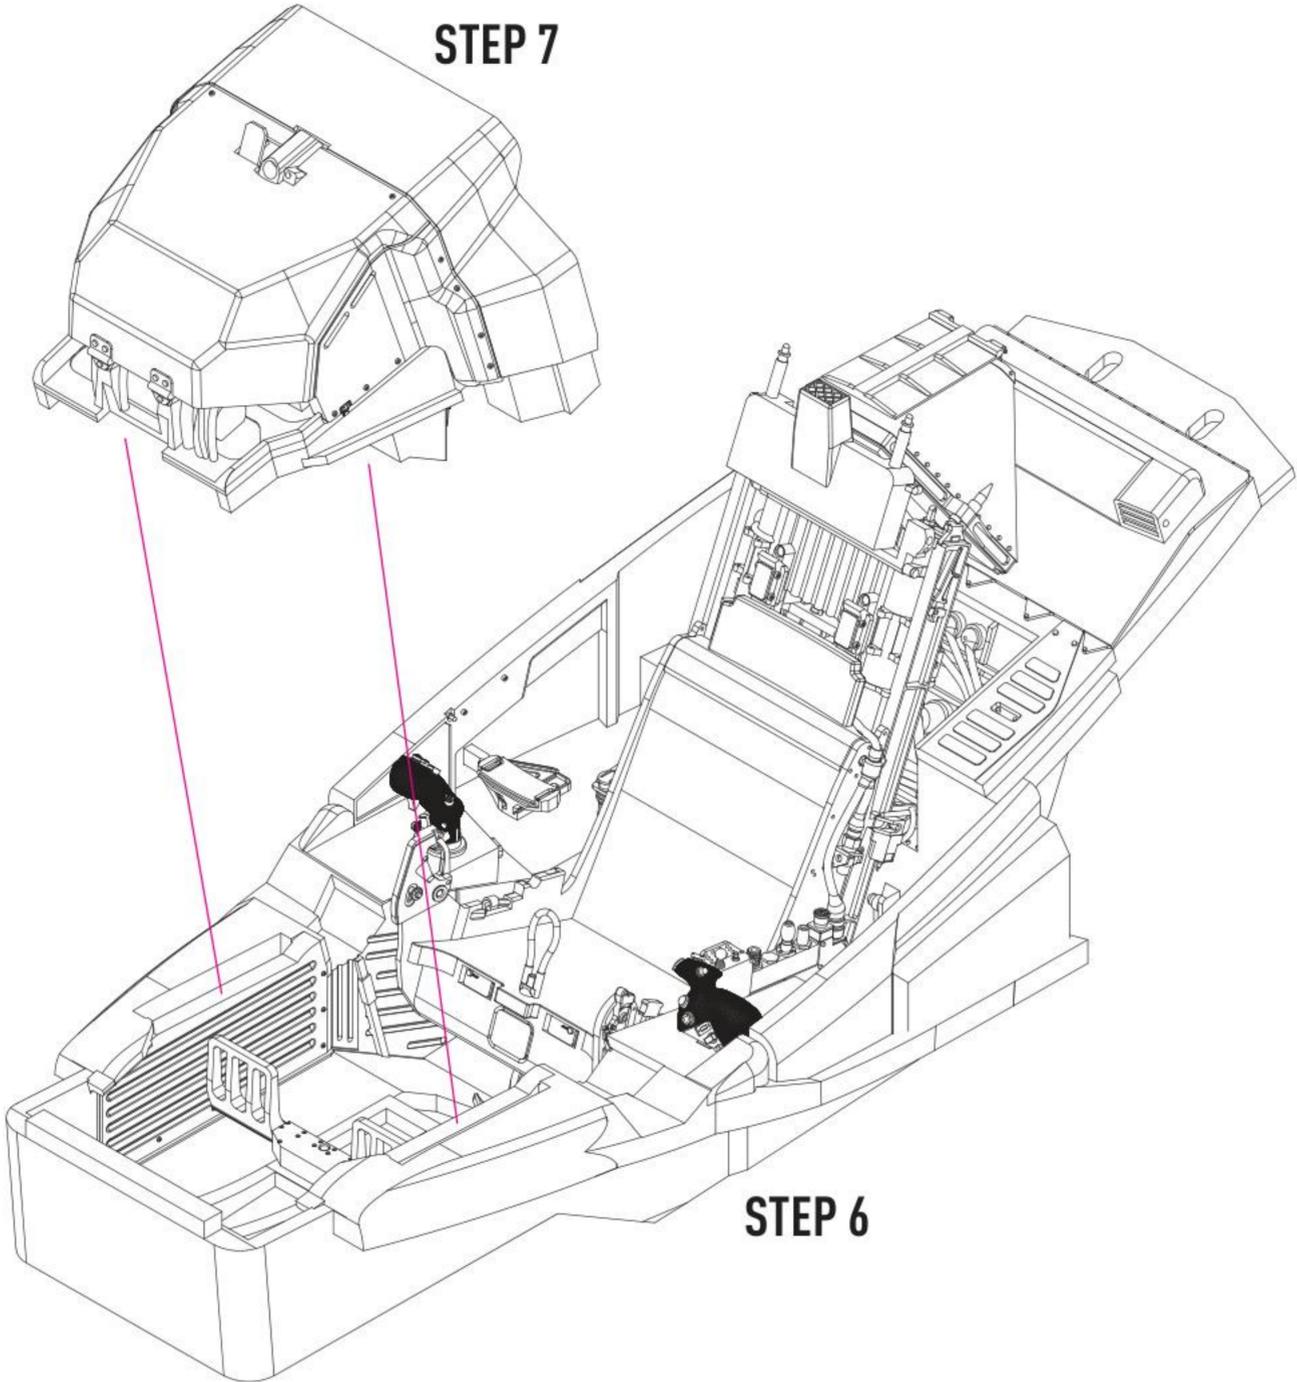

9 IN TRUMPETER INSTRUCTIONS ON PAGE 4, STEP 1, REMOVE ALL USED PARTS AND REPLACE WITH RESKIT KIT PARTS FROM STEP 8

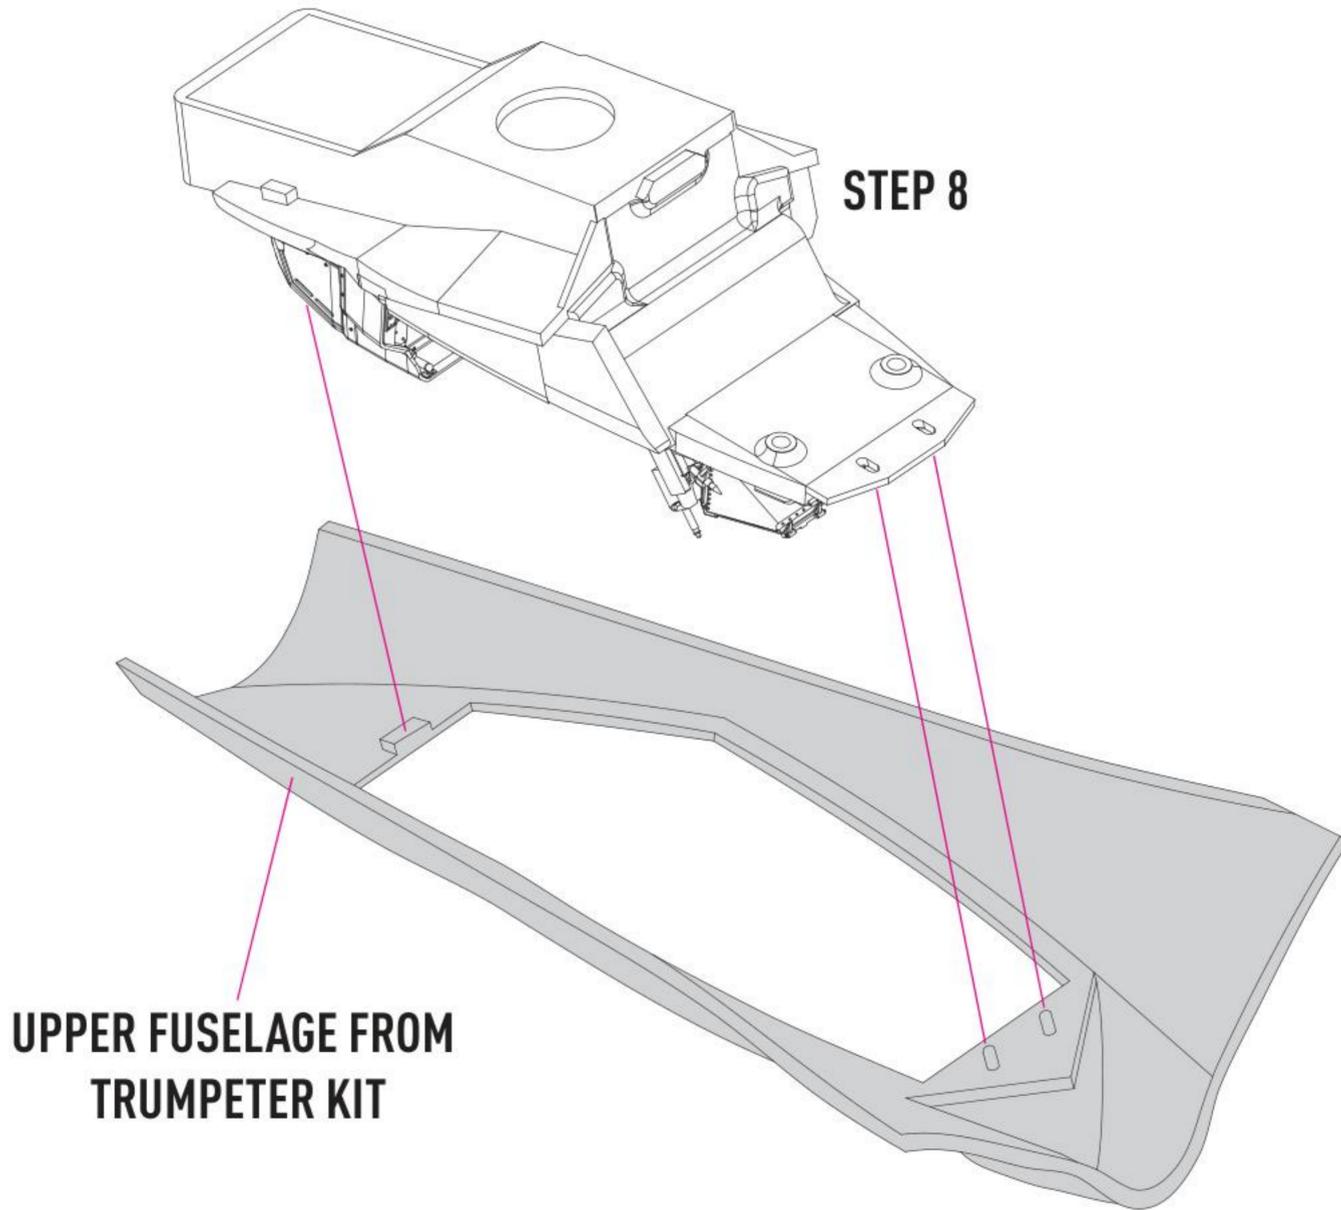

10 IN TRUMPETER INSTRUCTIONS ON PAGE 5, STEP 2, REPLACE PART G28 WITH RESKIT KIT PART R17

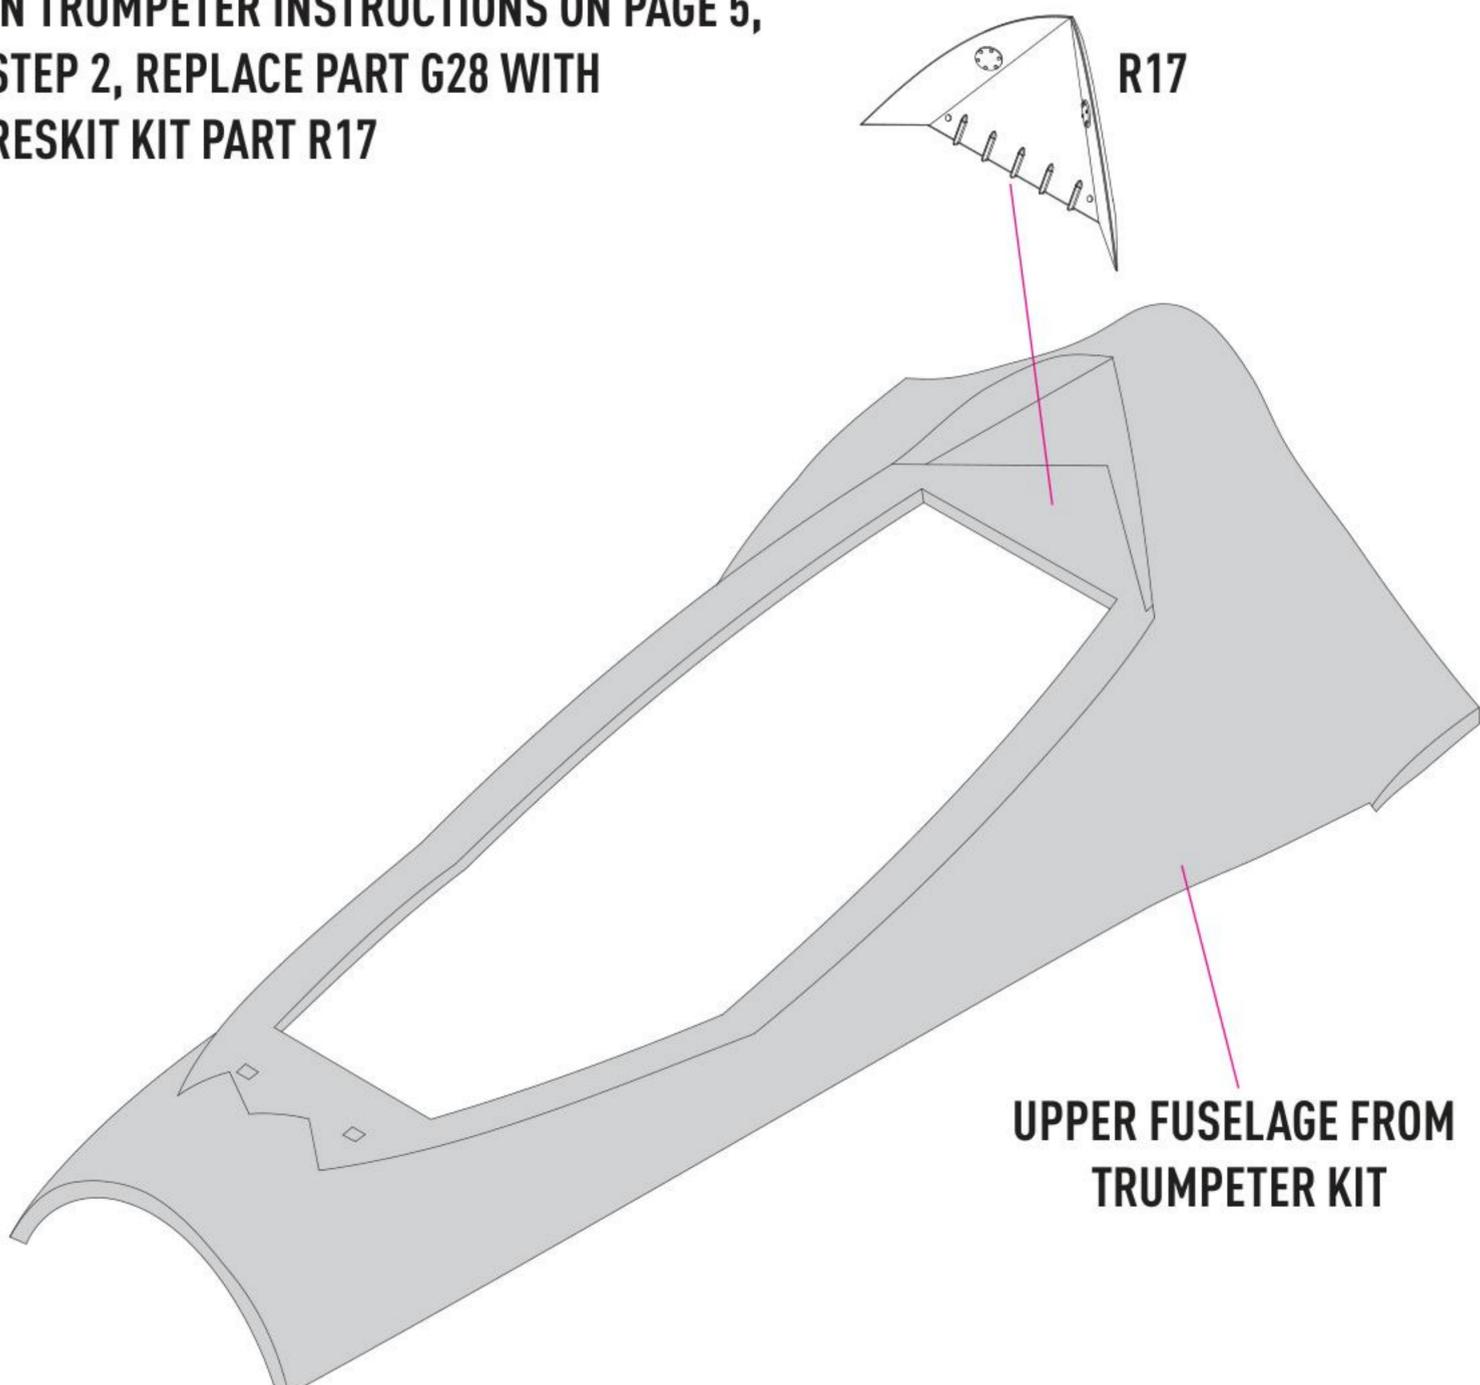

DECAL INSTRUCTION

