



1 HYPER DETAILED EDITION


ASSEMBLY

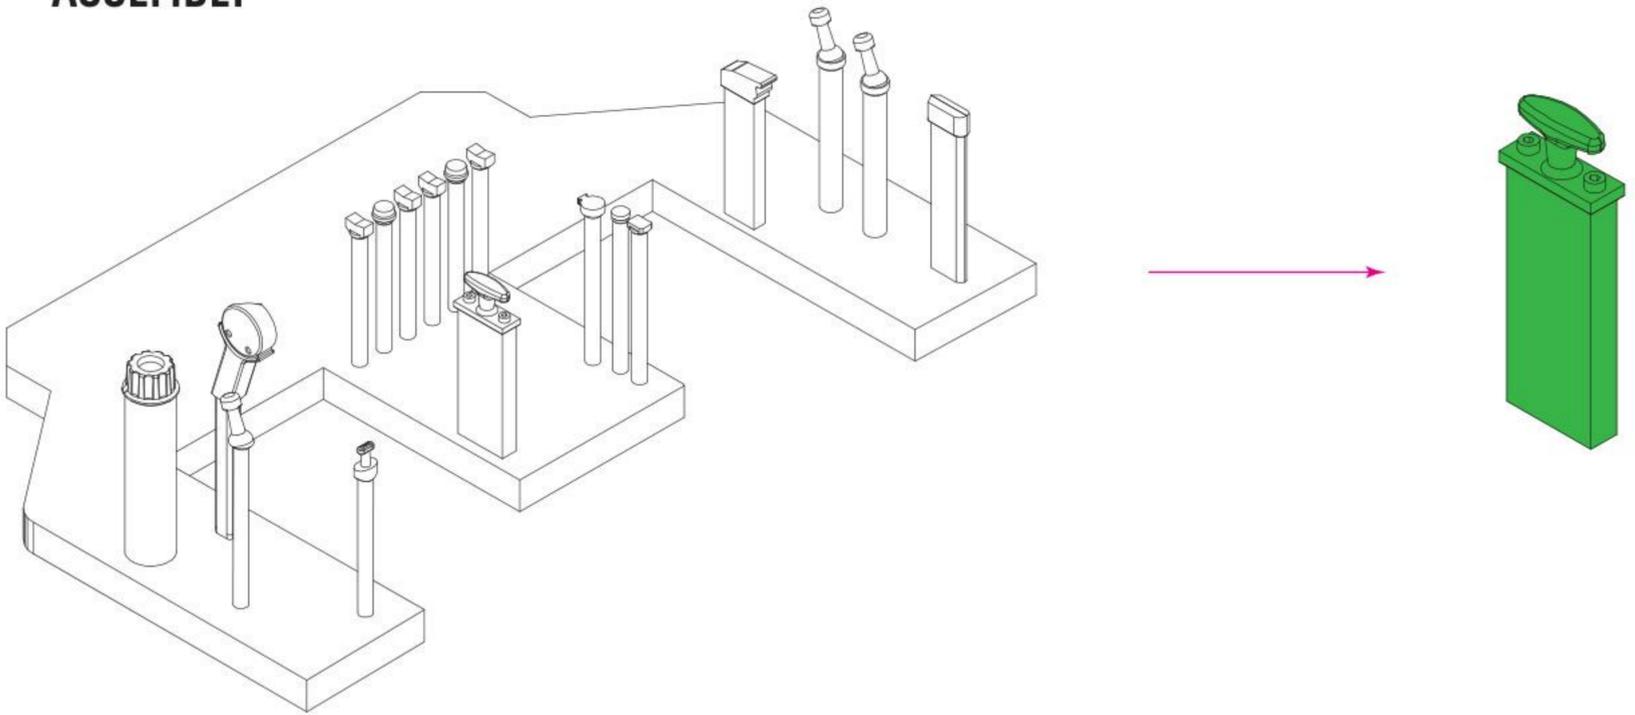

REMOVE PART FROM THE PANEL WITH ELEMENTS

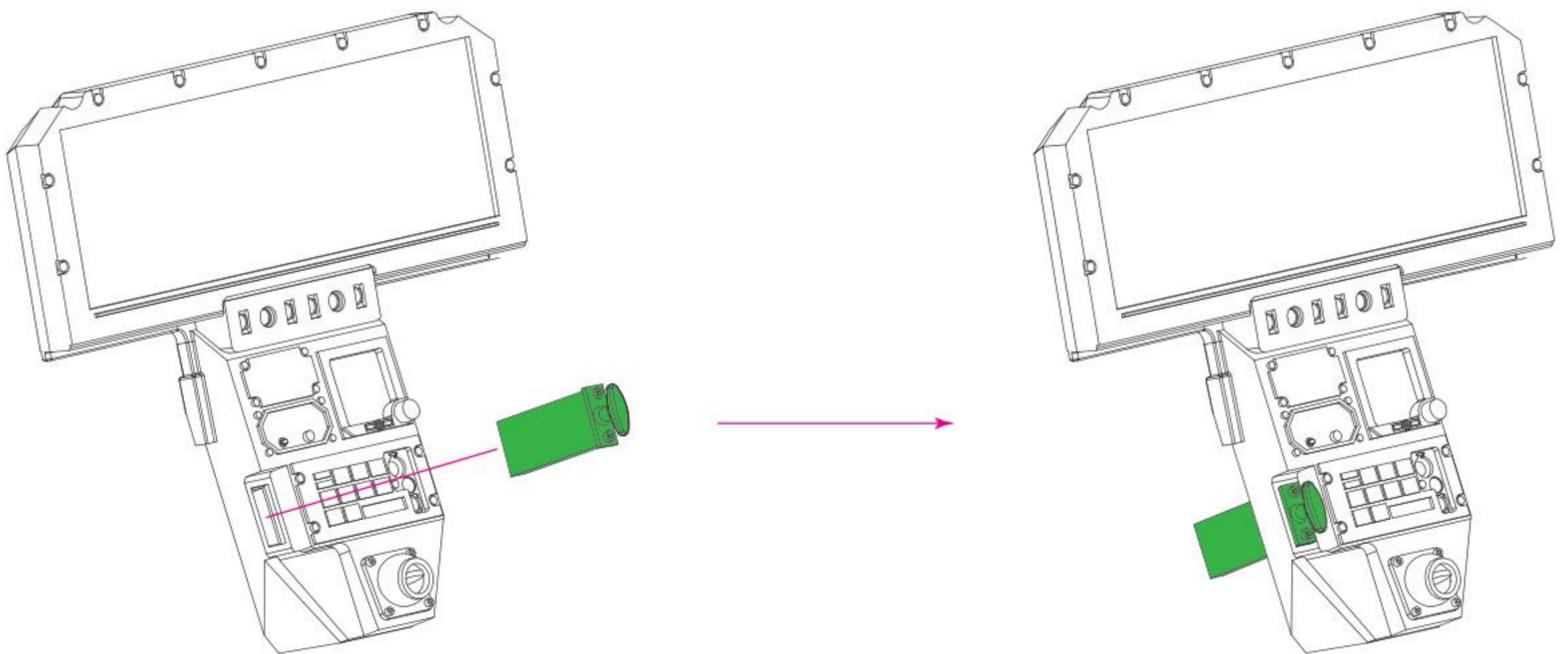

INSERT PART INTO THE PANEL WITH HOLES

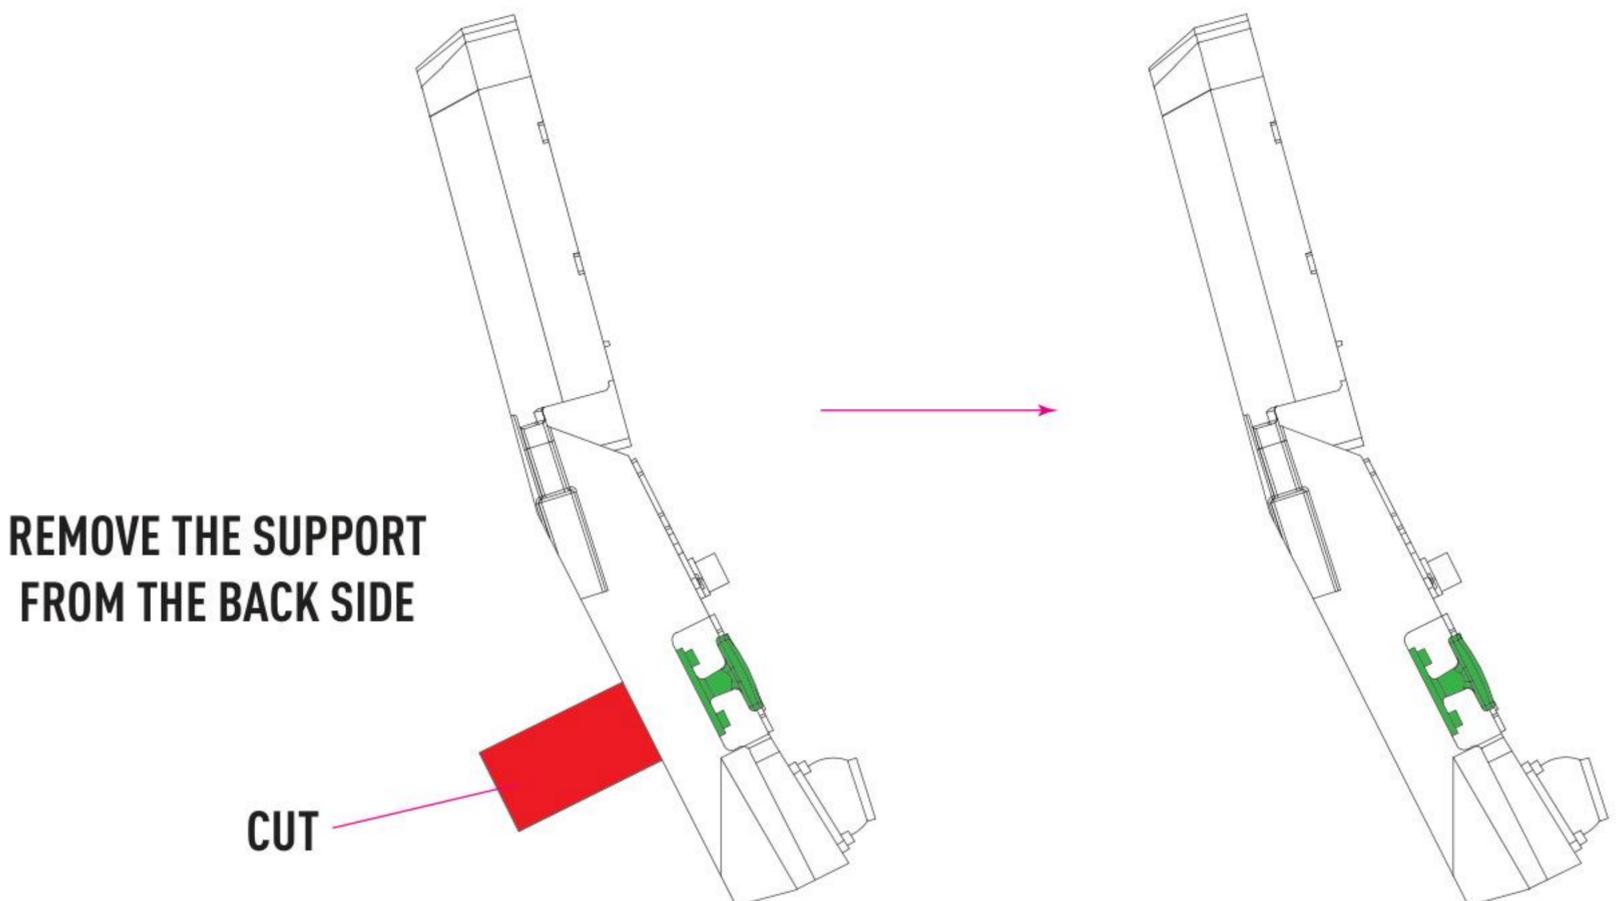


REMOVE THE SUPPORT FROM THE BACK SIDE



CUT

2




R1

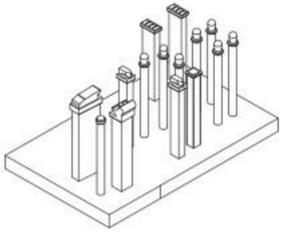


R1.2

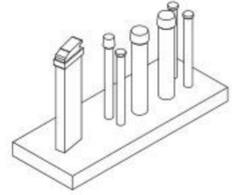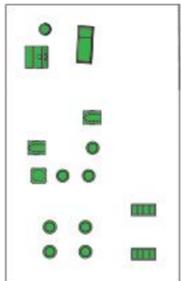


R1.1

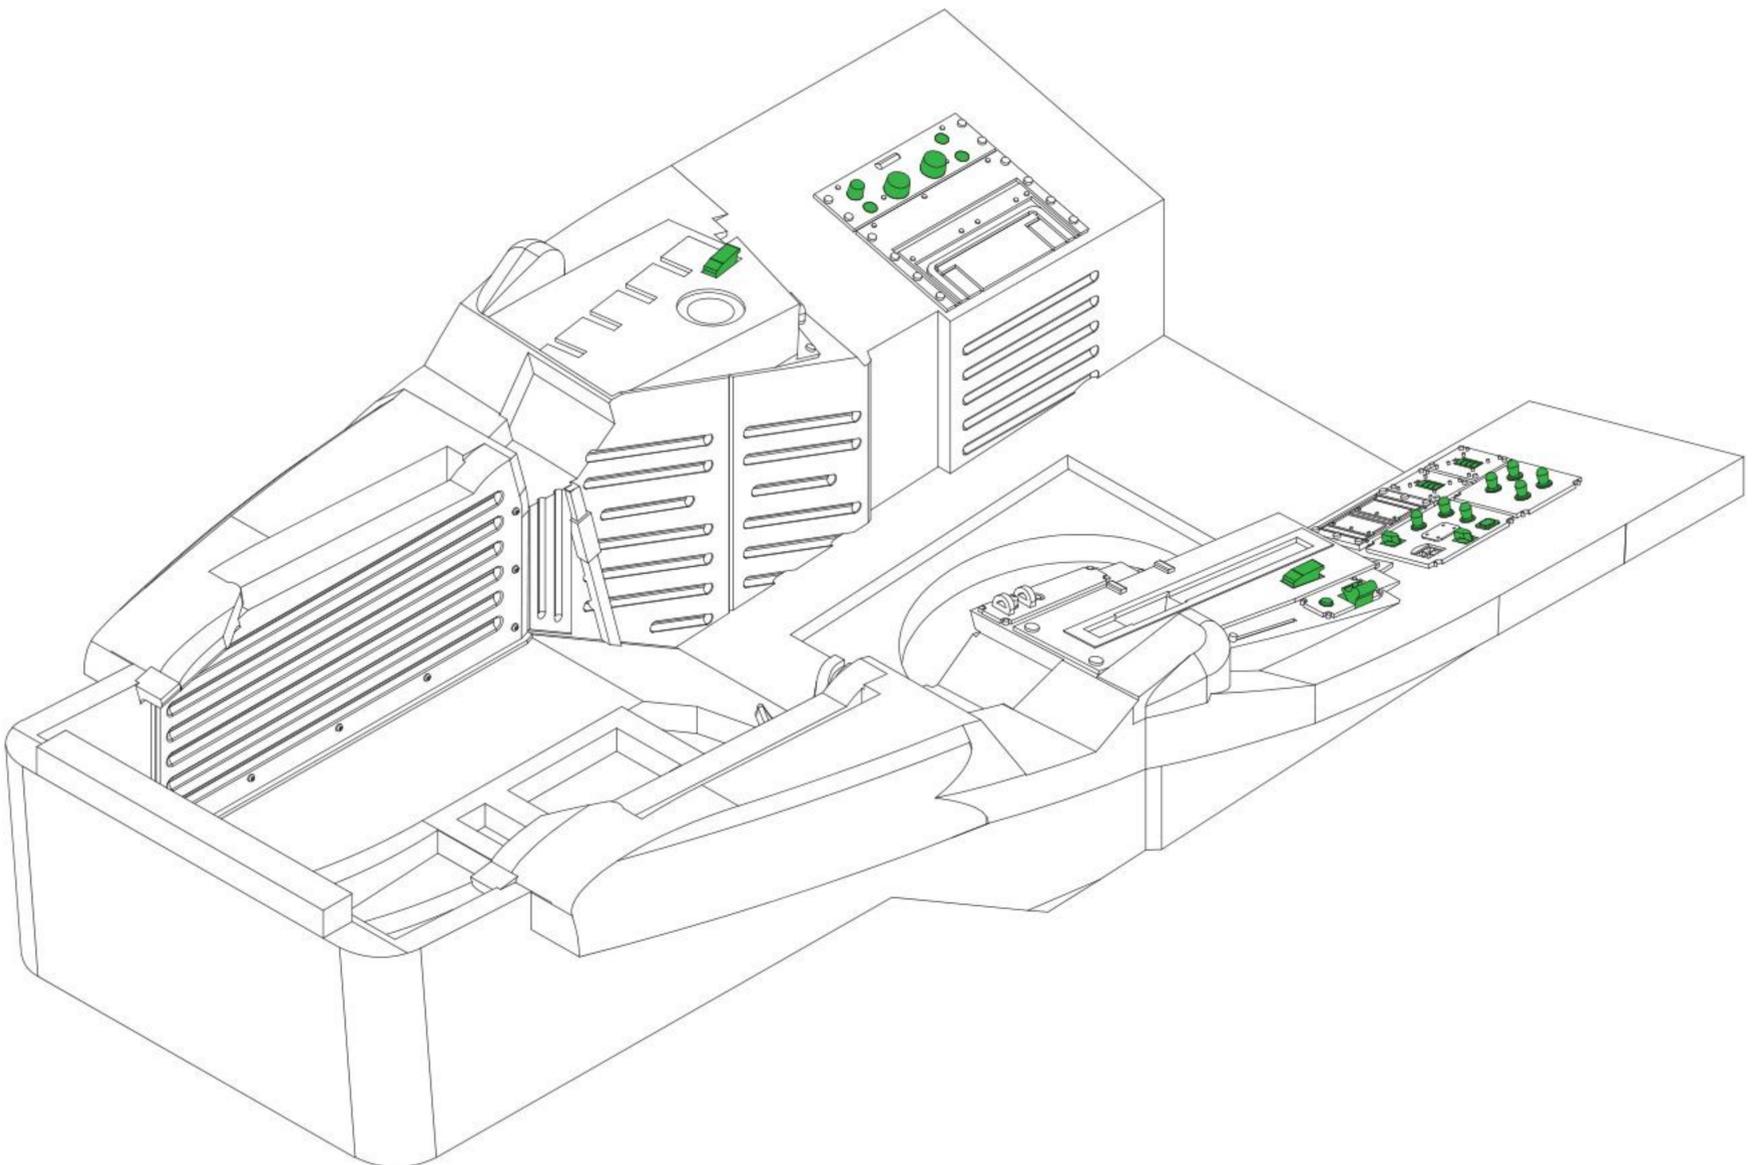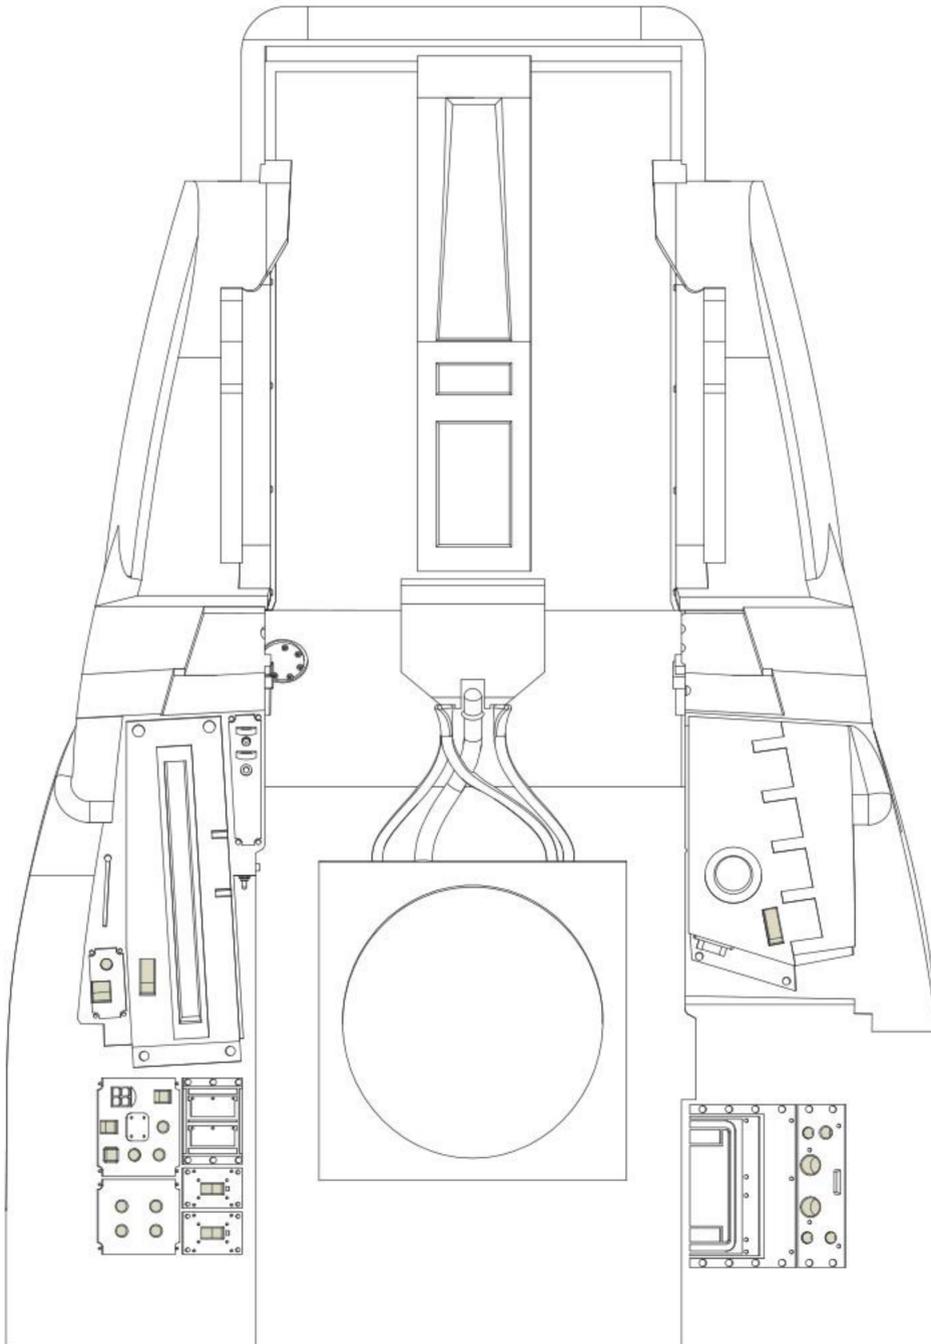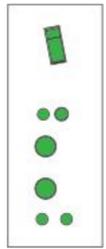


3

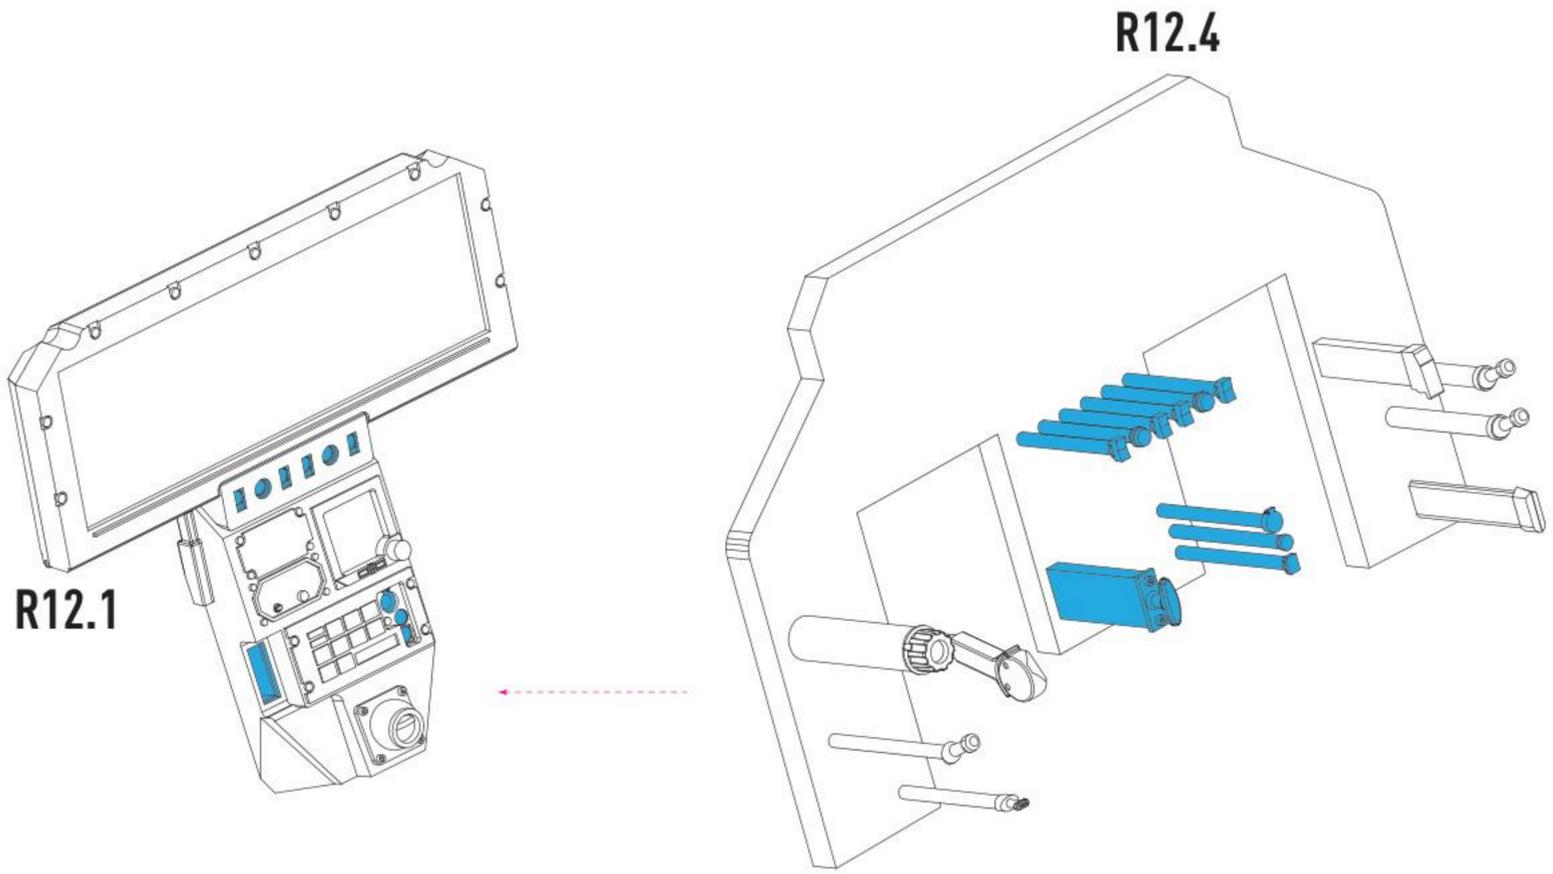


4

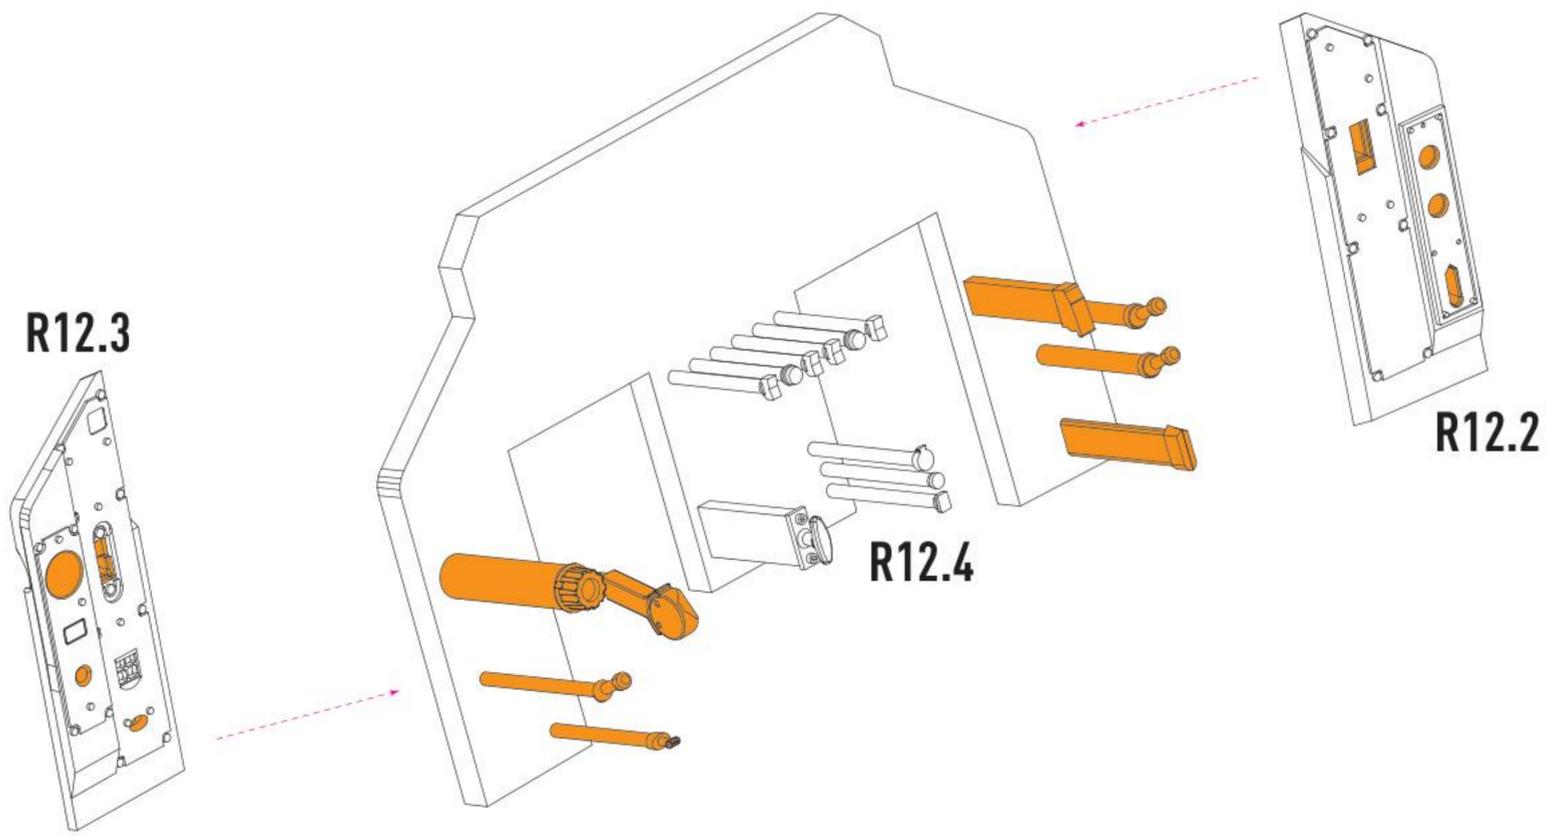


5


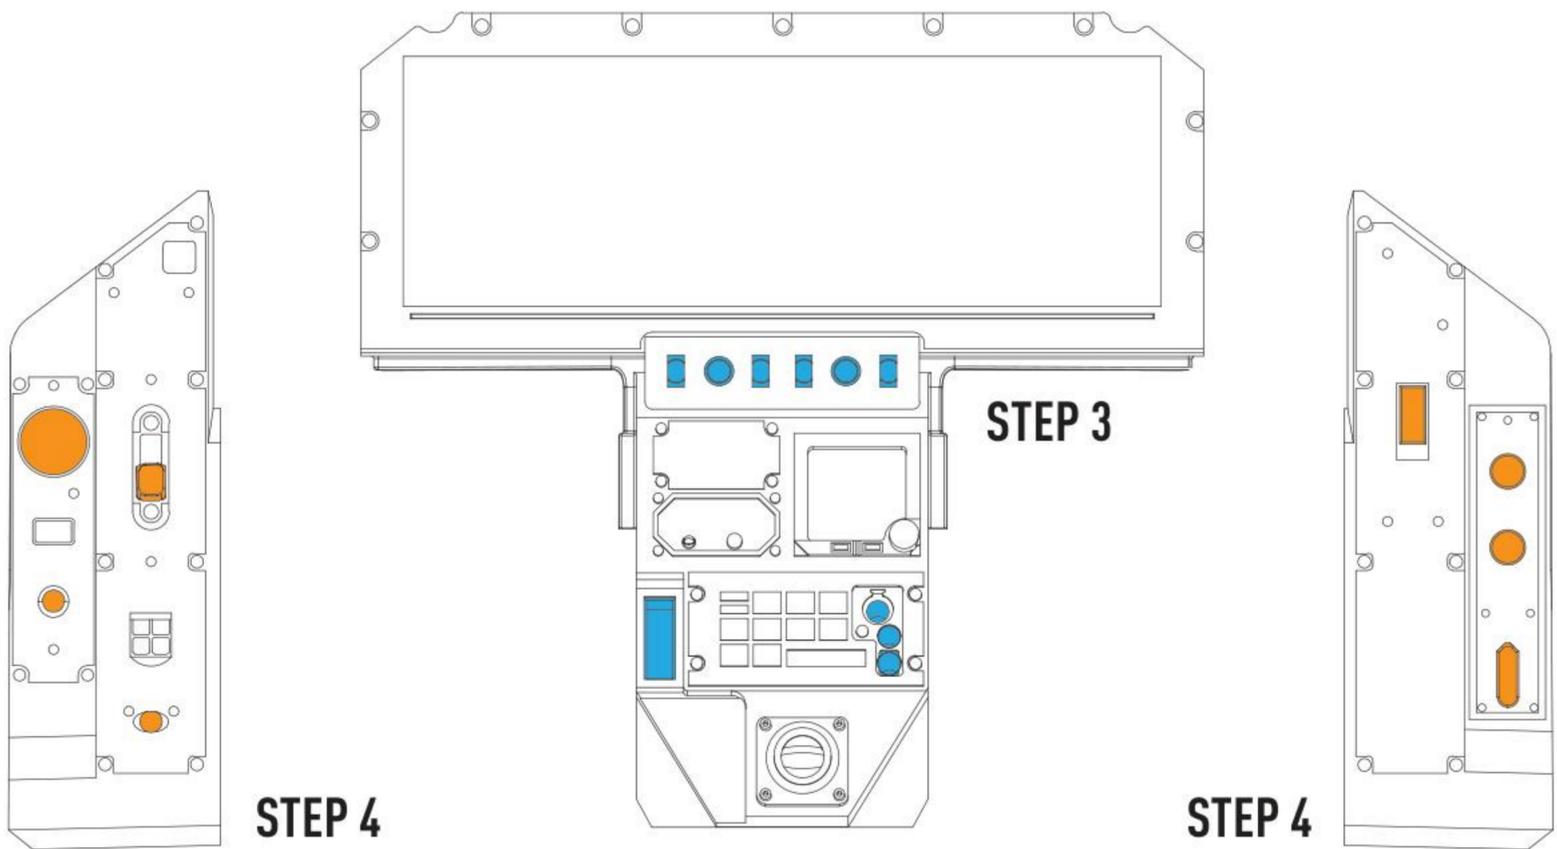


6

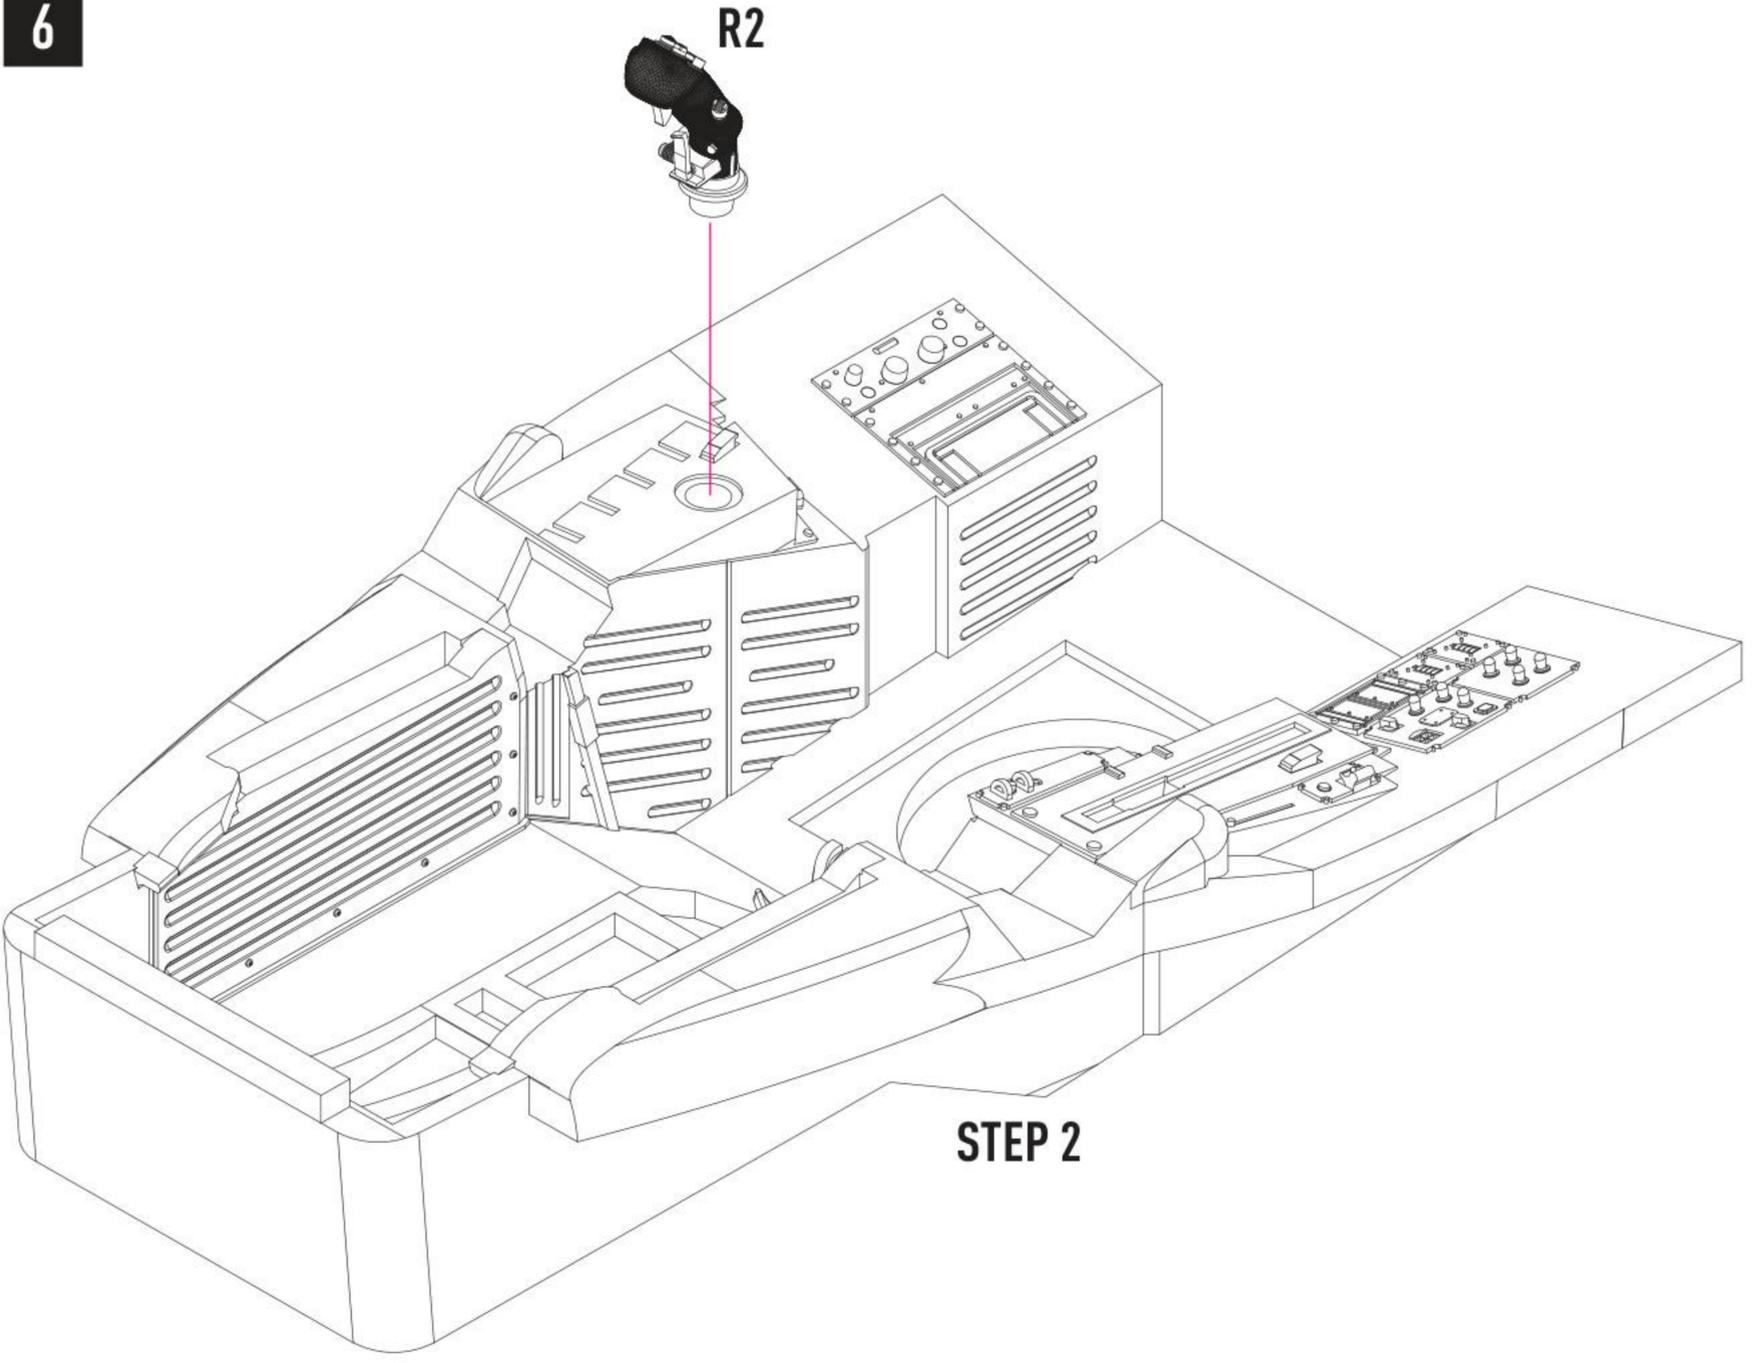


7

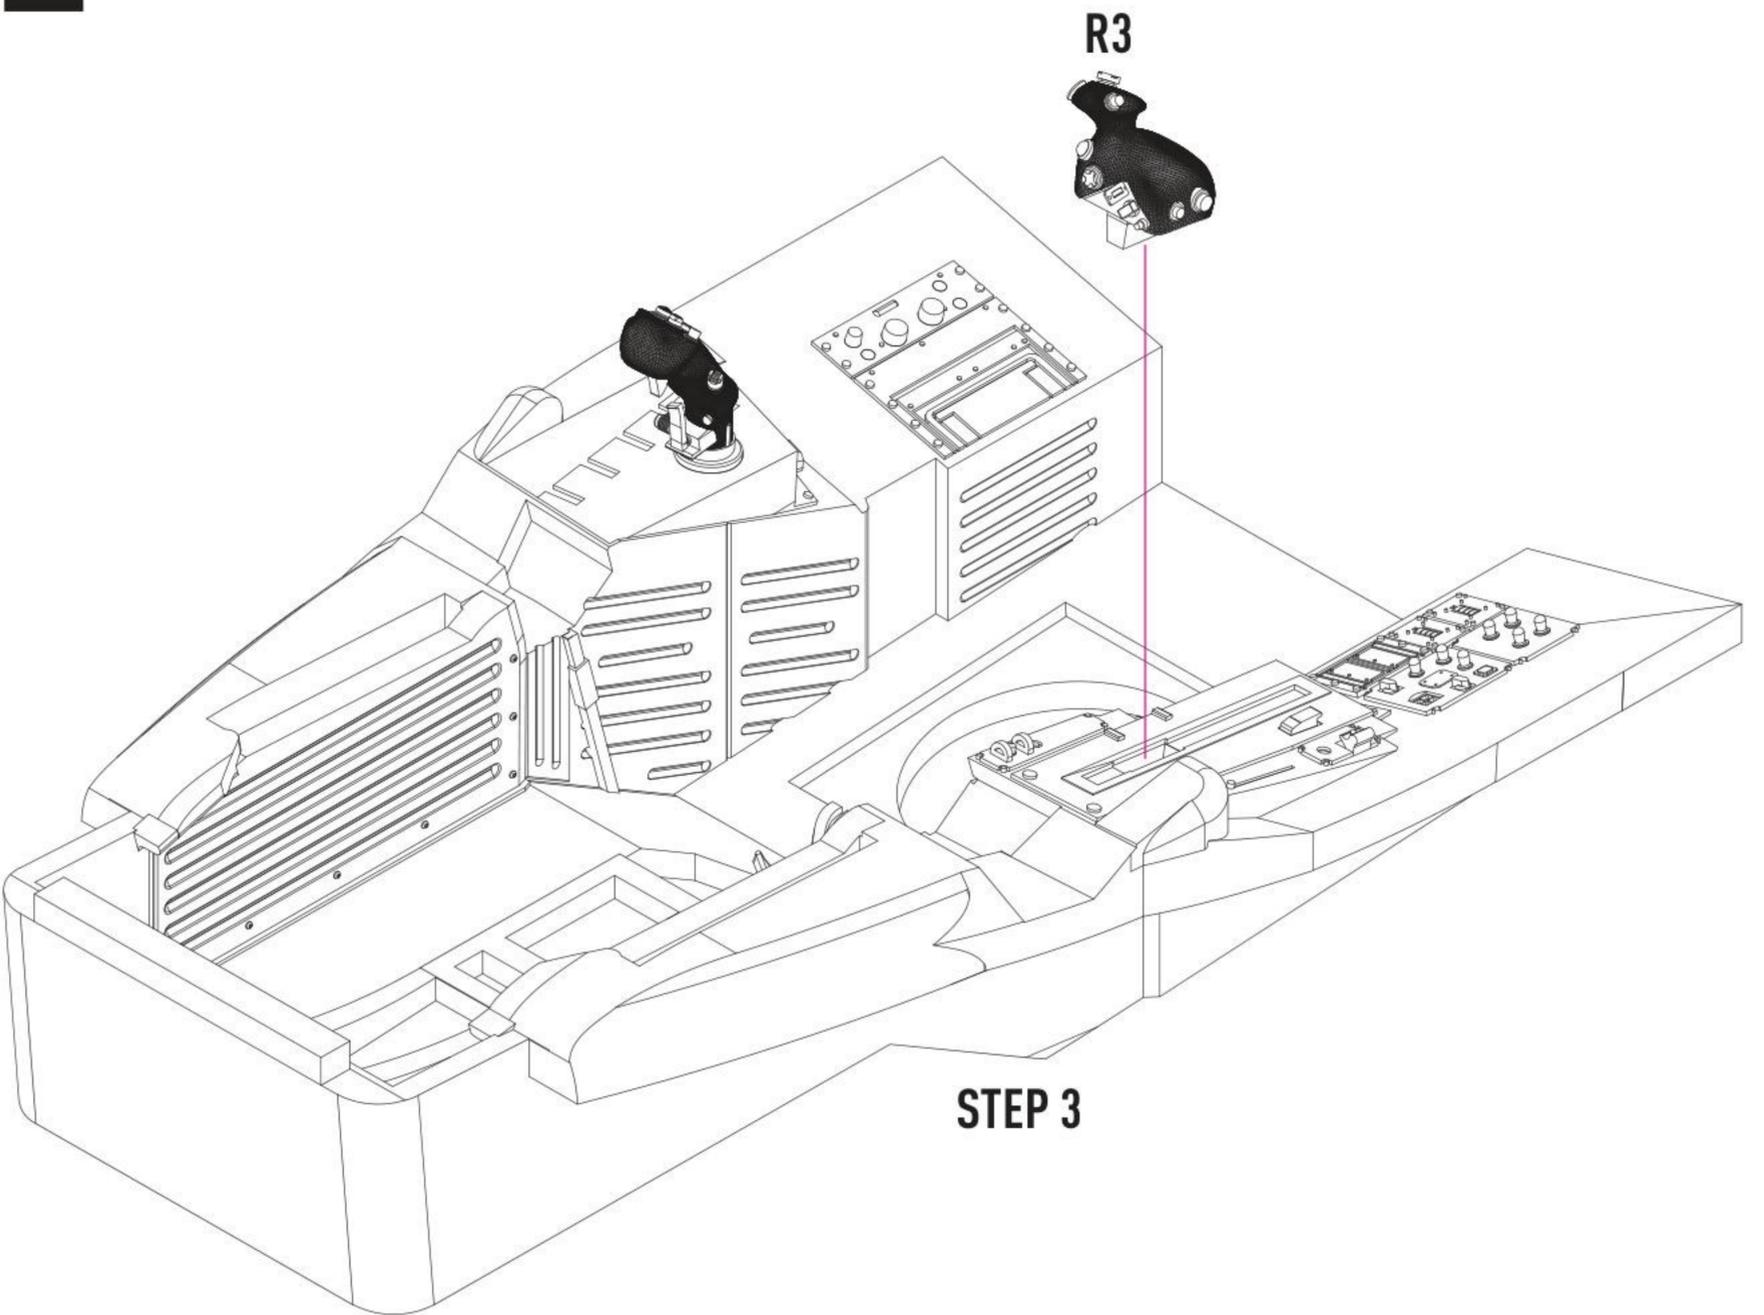


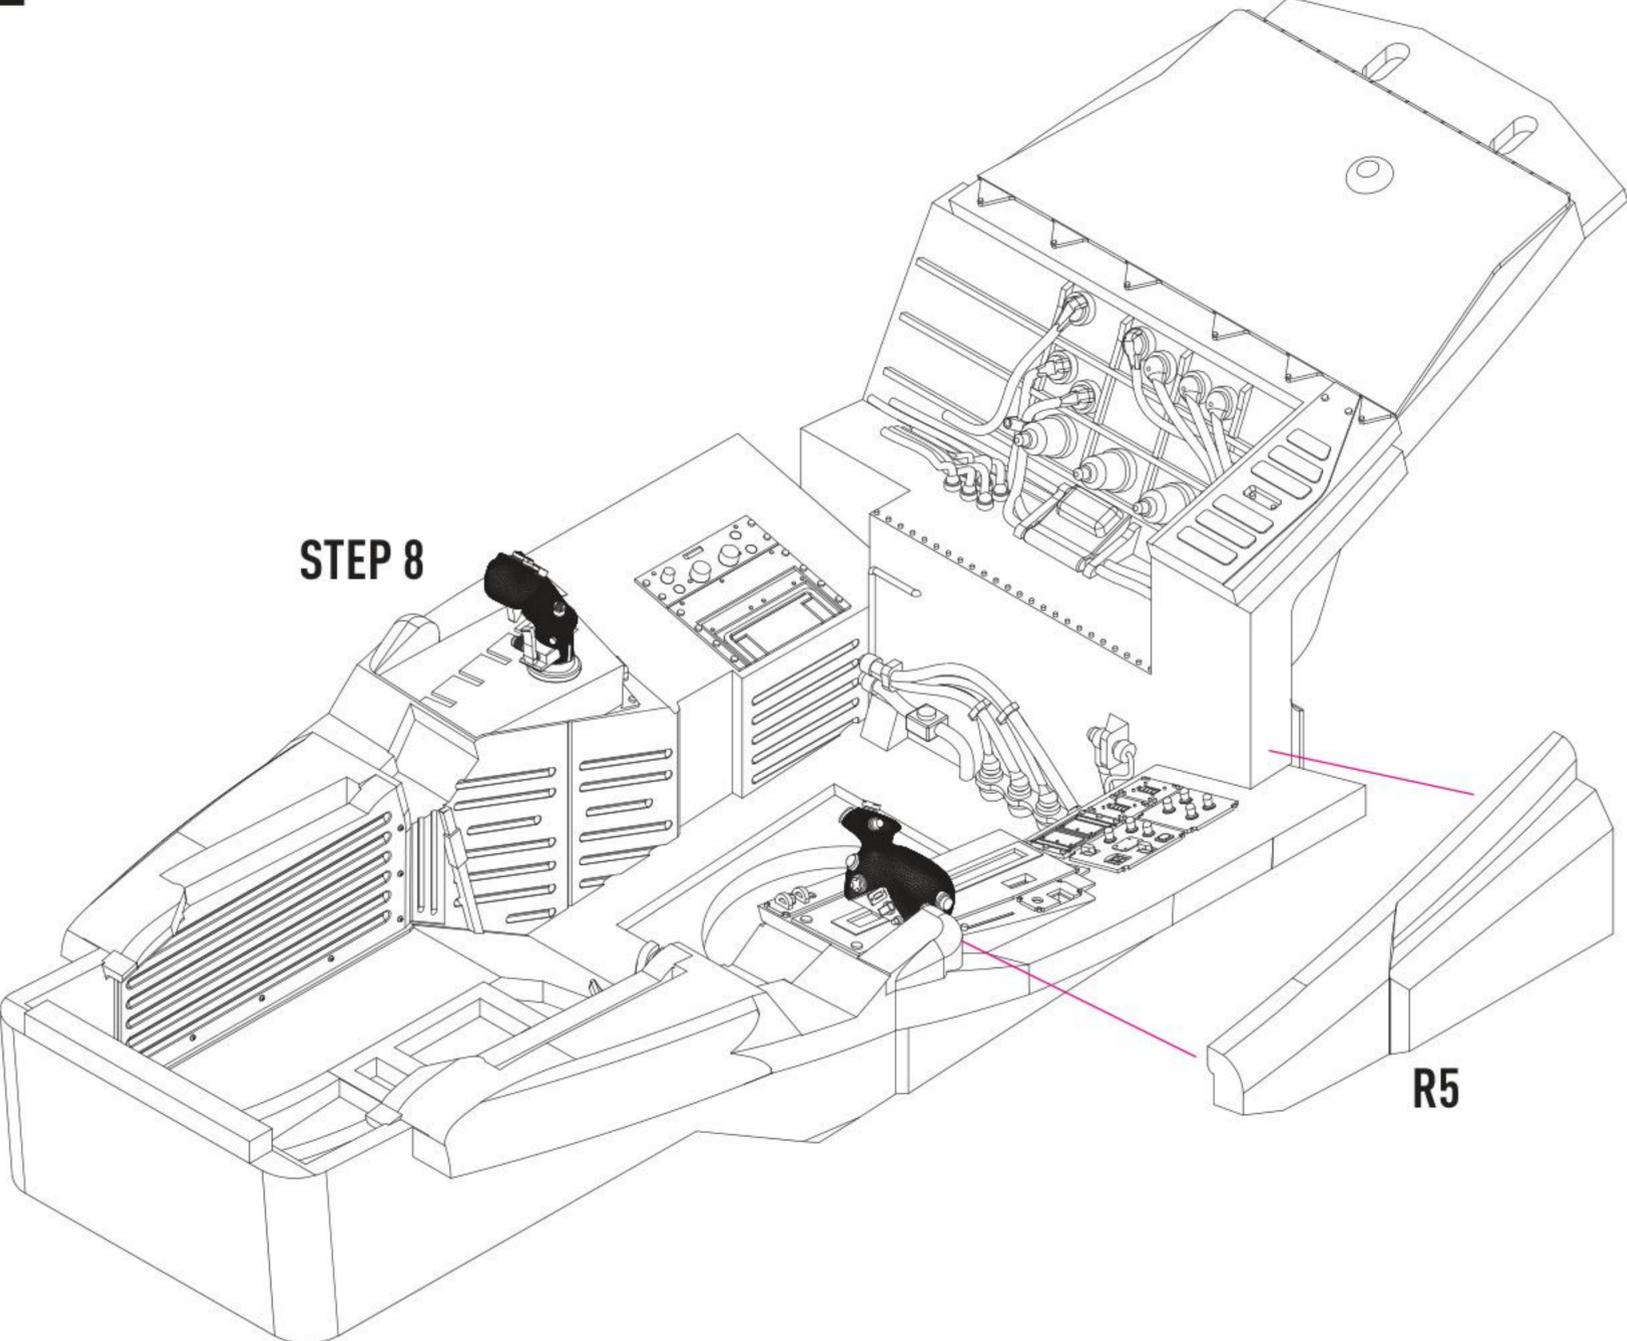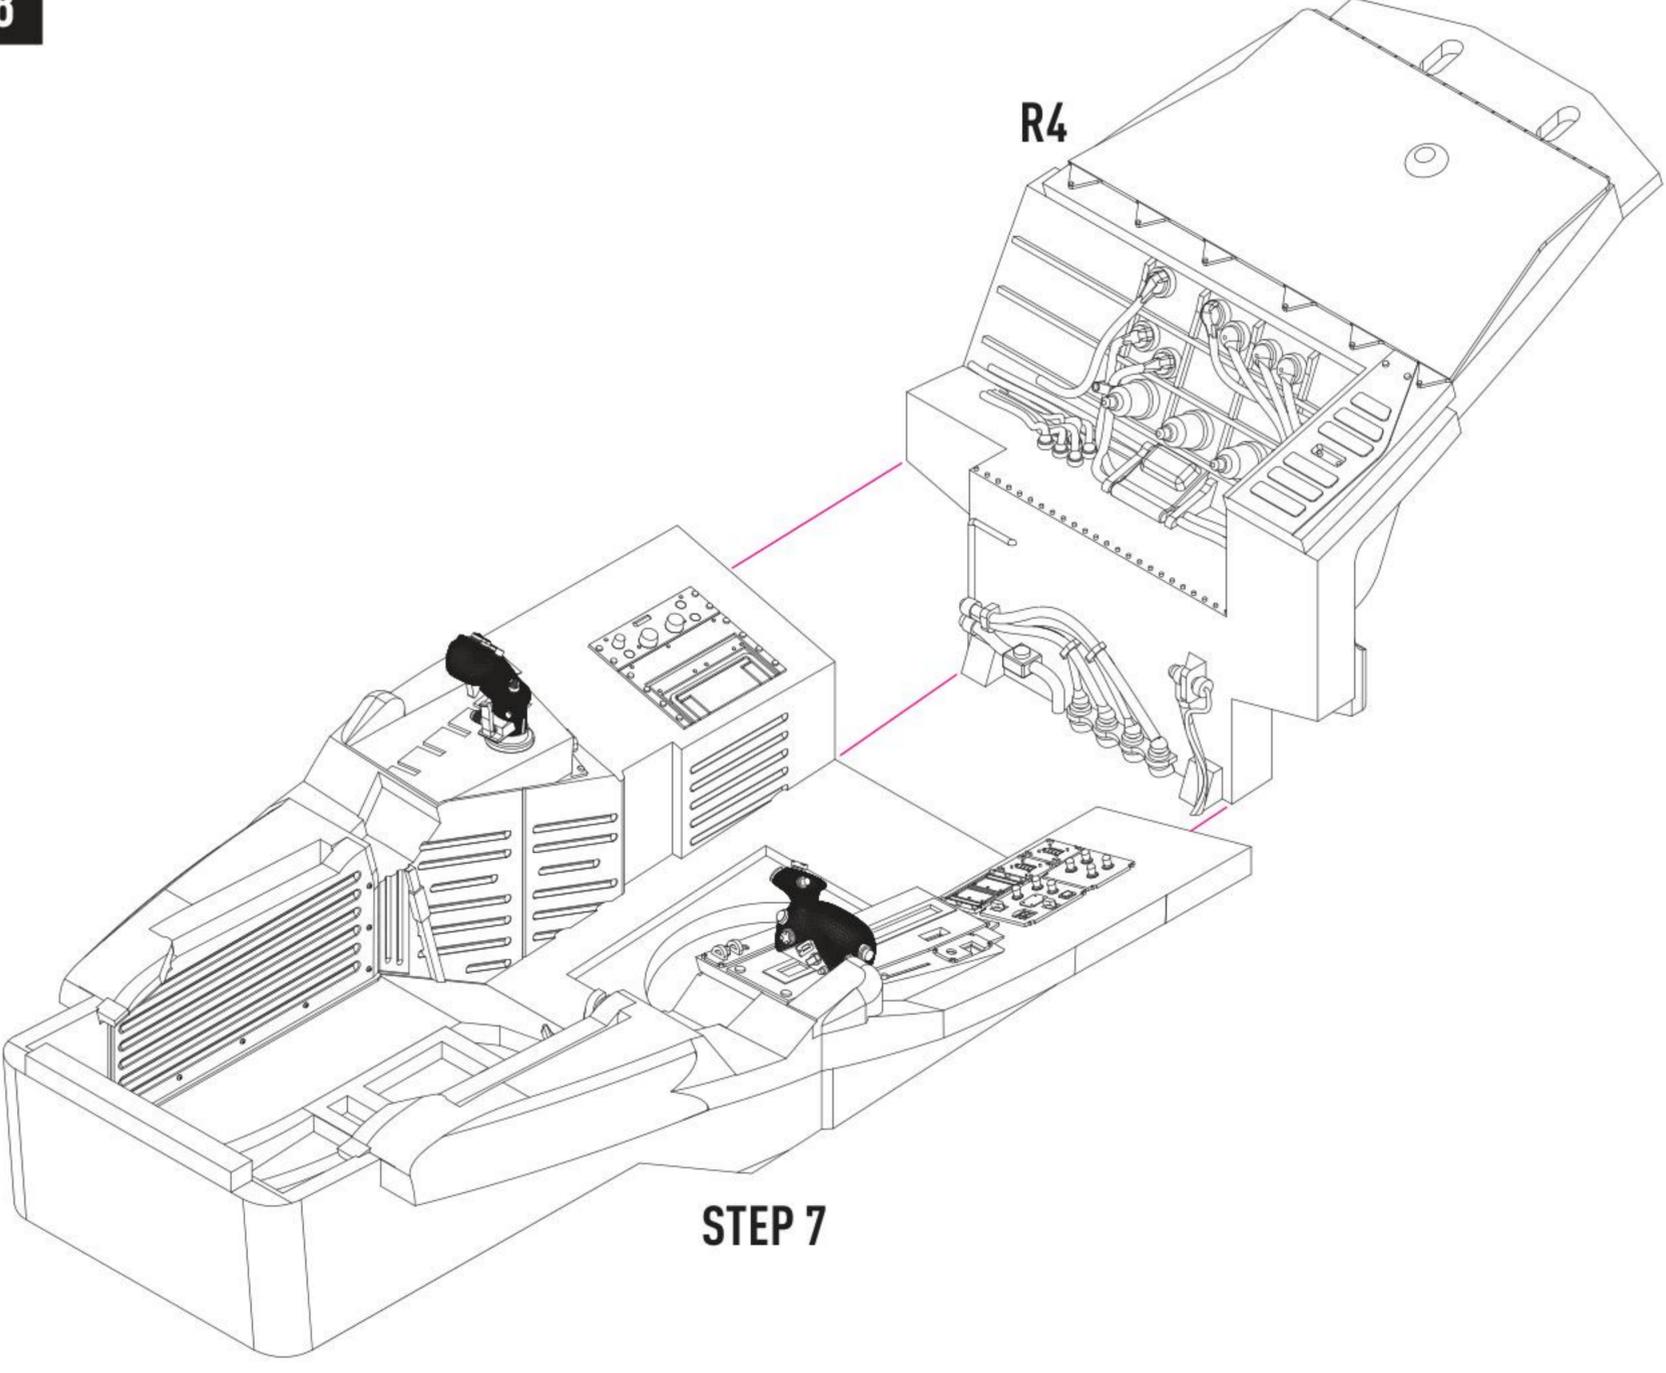


10

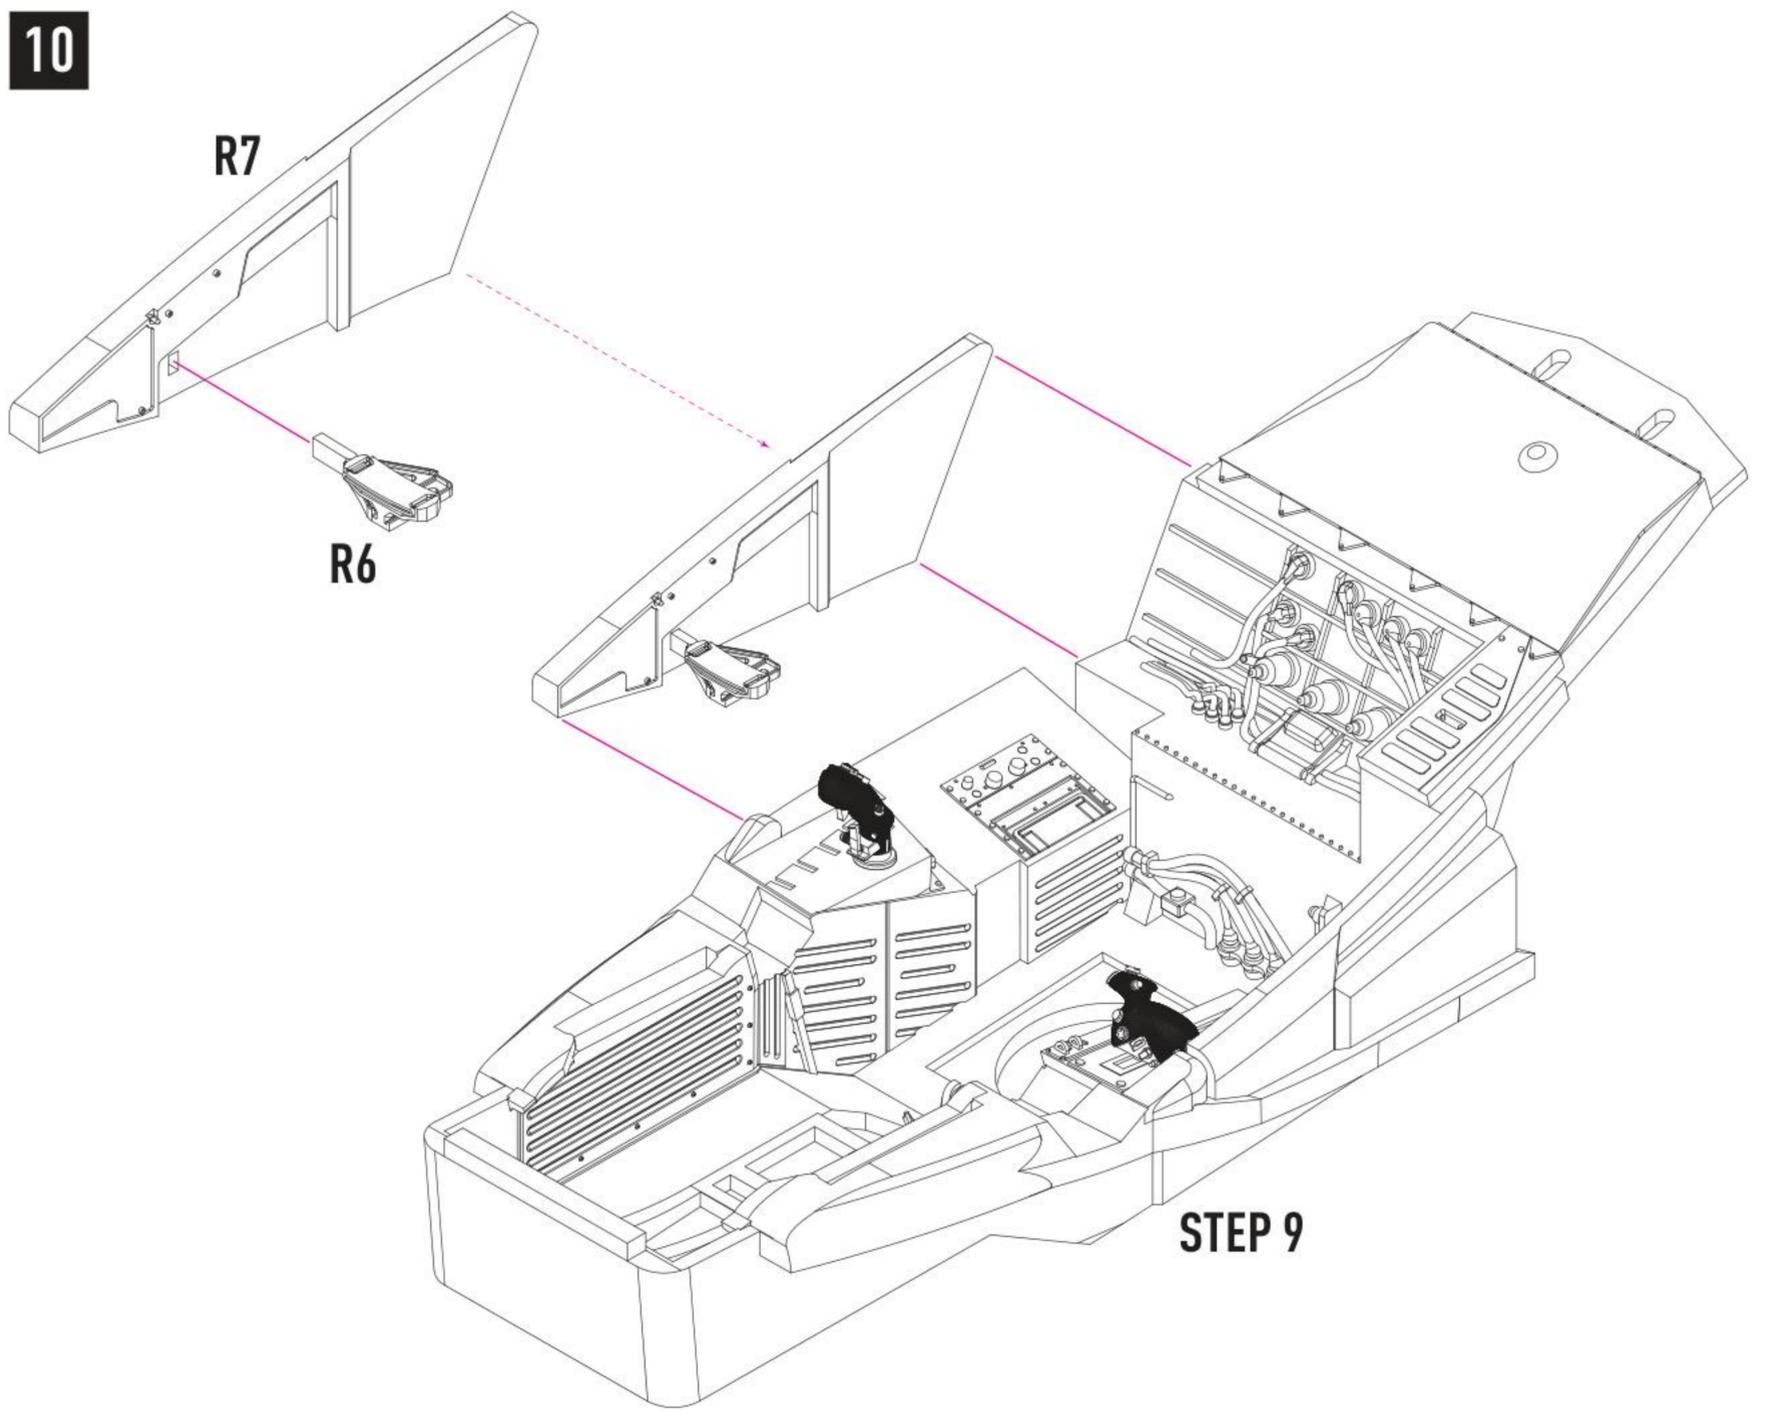

11

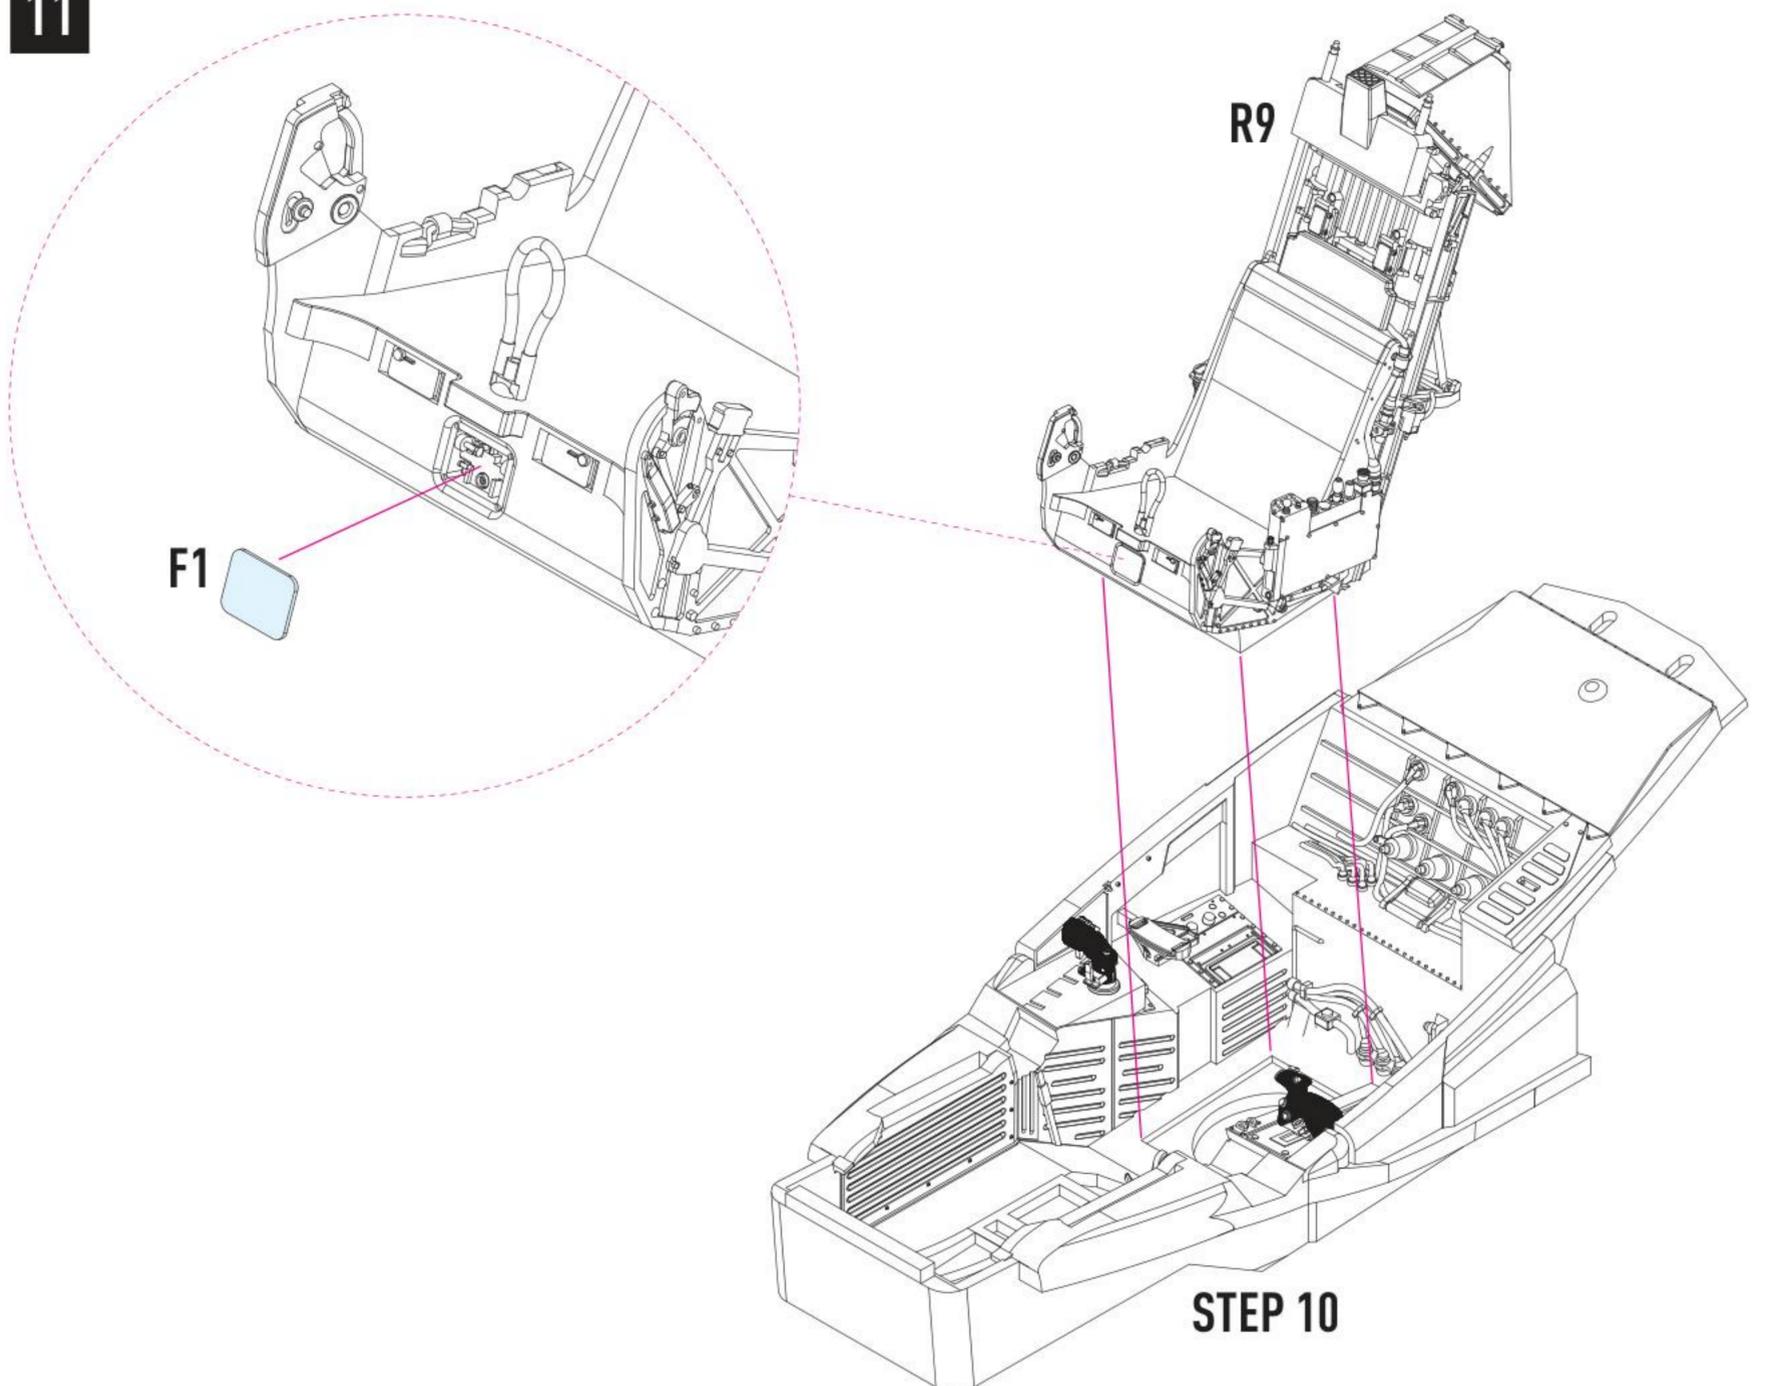

12


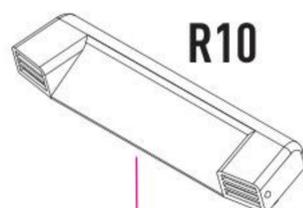


R10


PART R10 IS OPTIONAL

IF YOU WANT TO INSTALL IT,
DRILL 2 HOLES D=1.8 MM
IN PART R4

R11

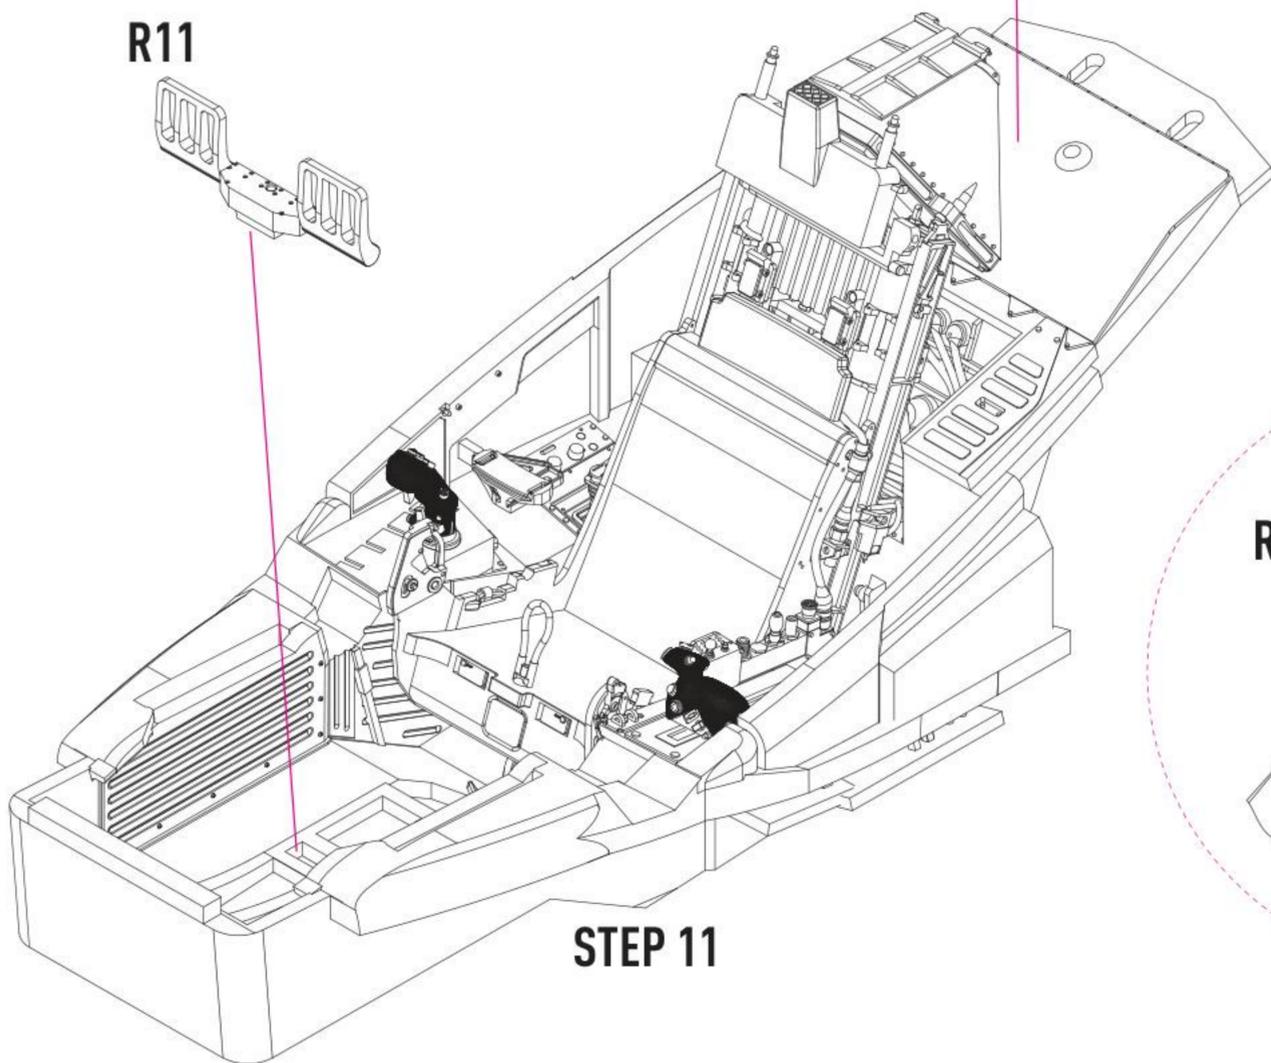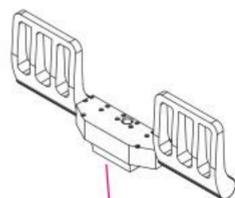

STEP 11

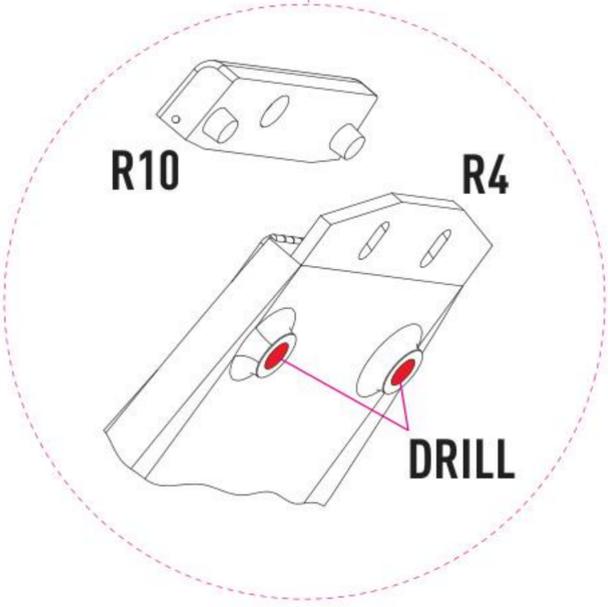


R10

R4

DRILL

13

GLUE PART 12 WITH PARTS FROM STEP 5 OR USE READY PARTS R14, R15, R16

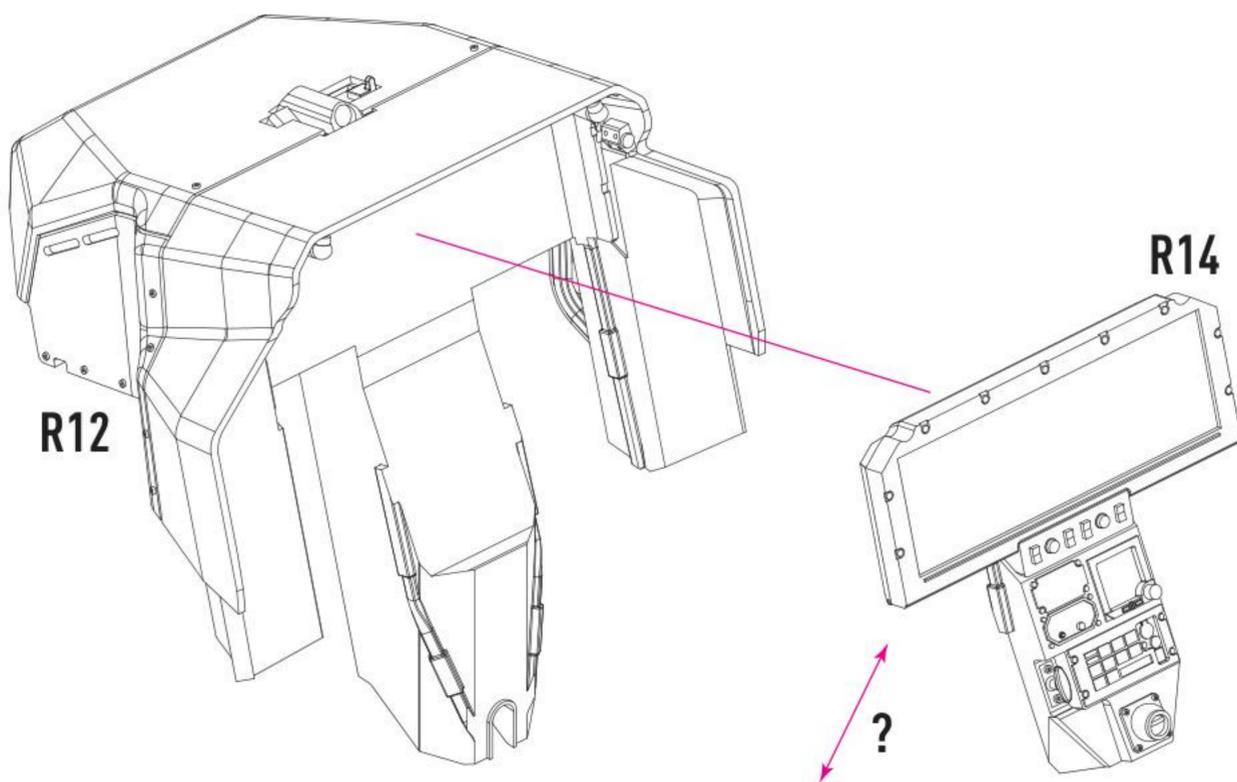


R12


R14

?


STEP 3

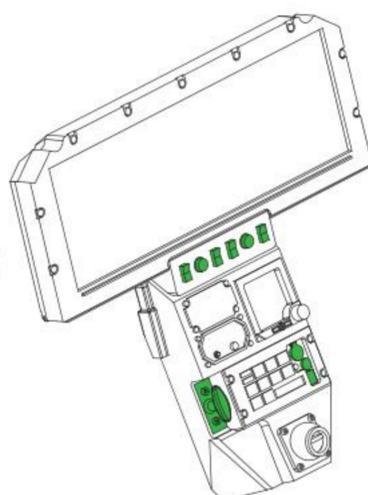


STEP 13

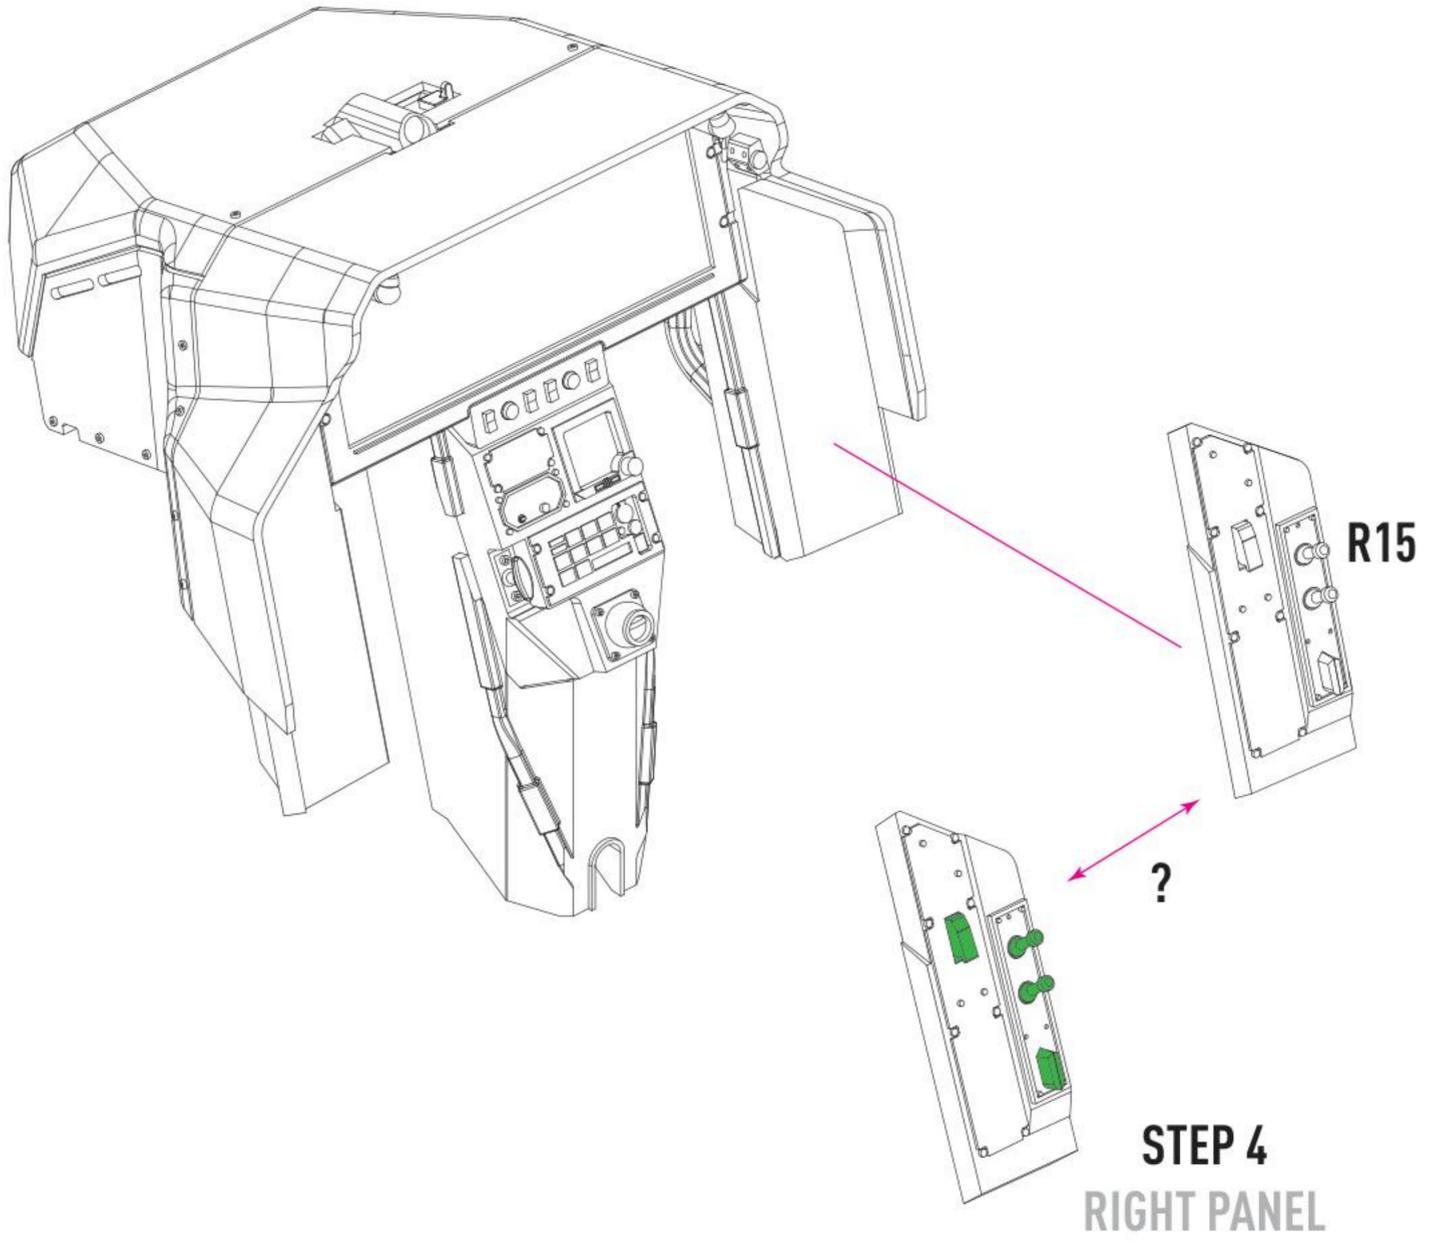


STEP 14

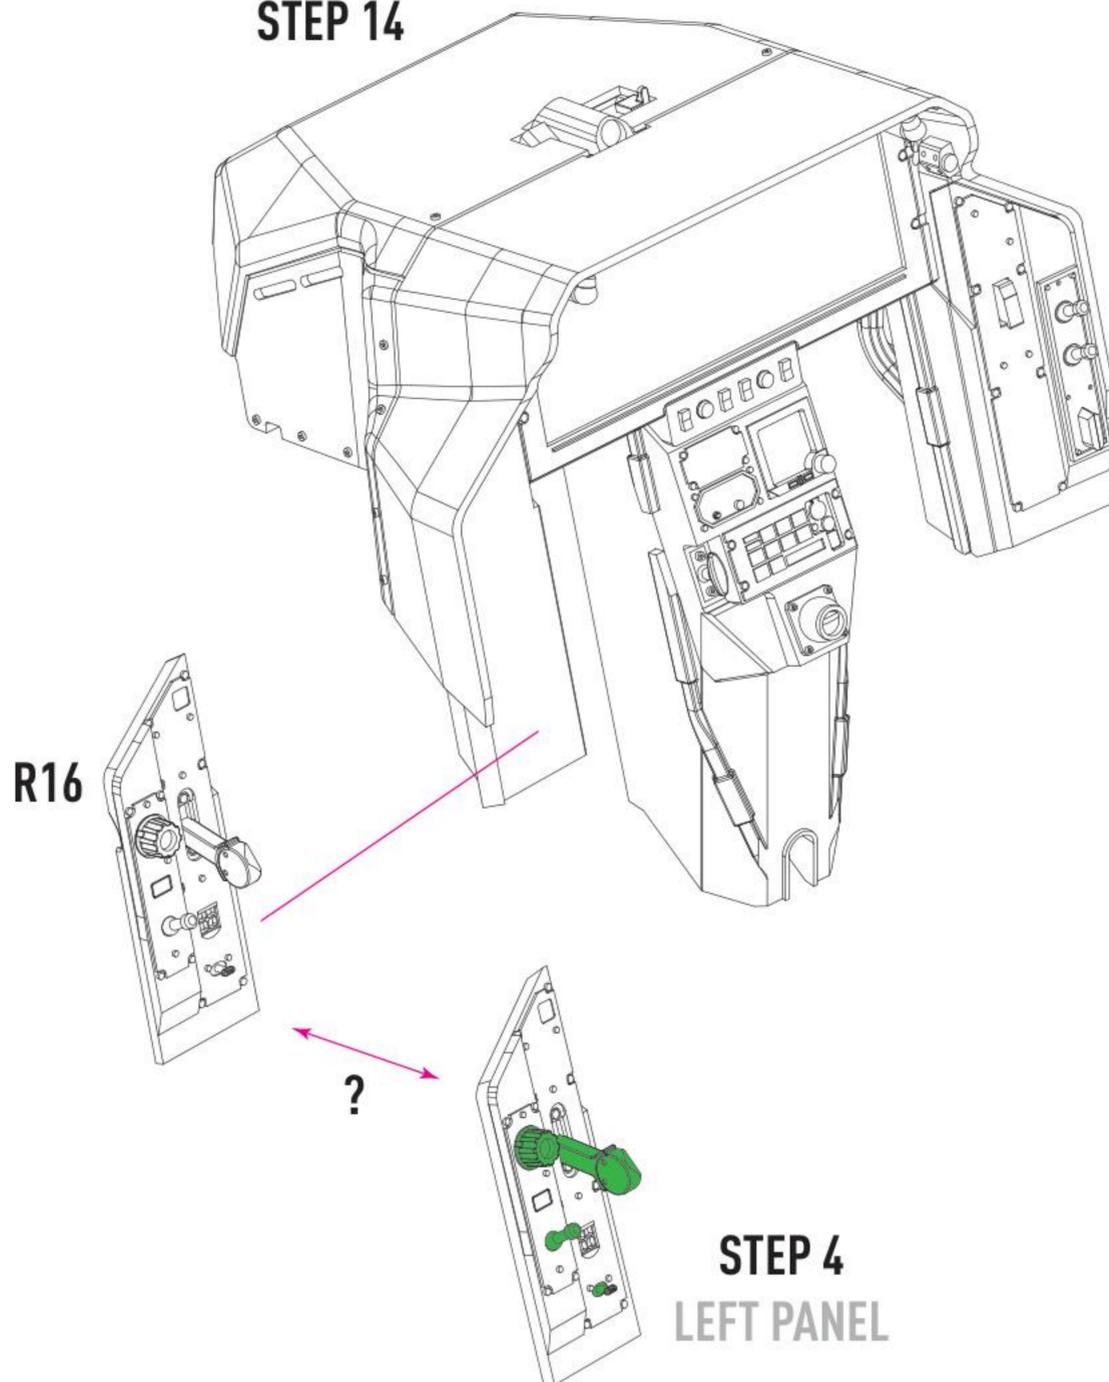


STEP 15

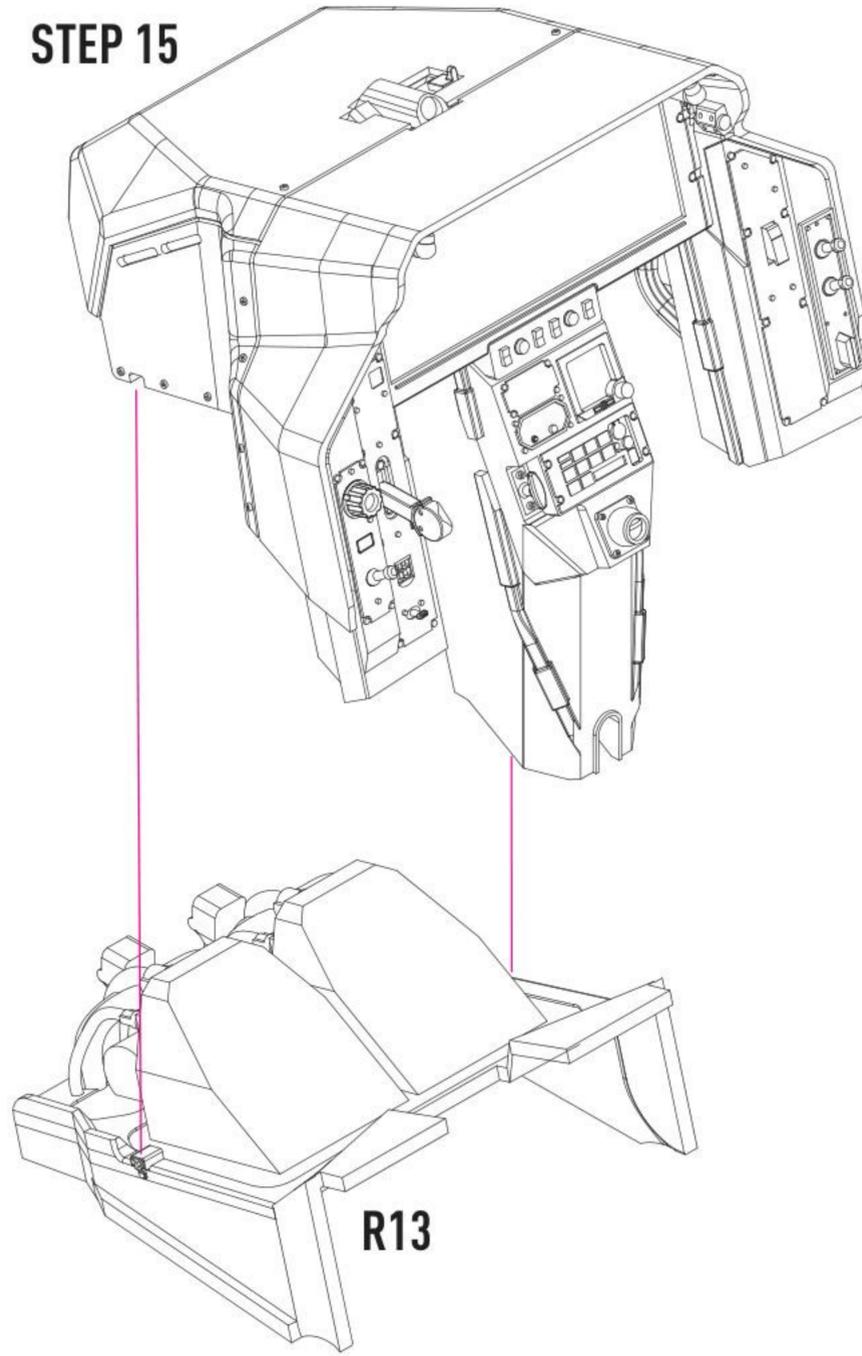


STEP 16

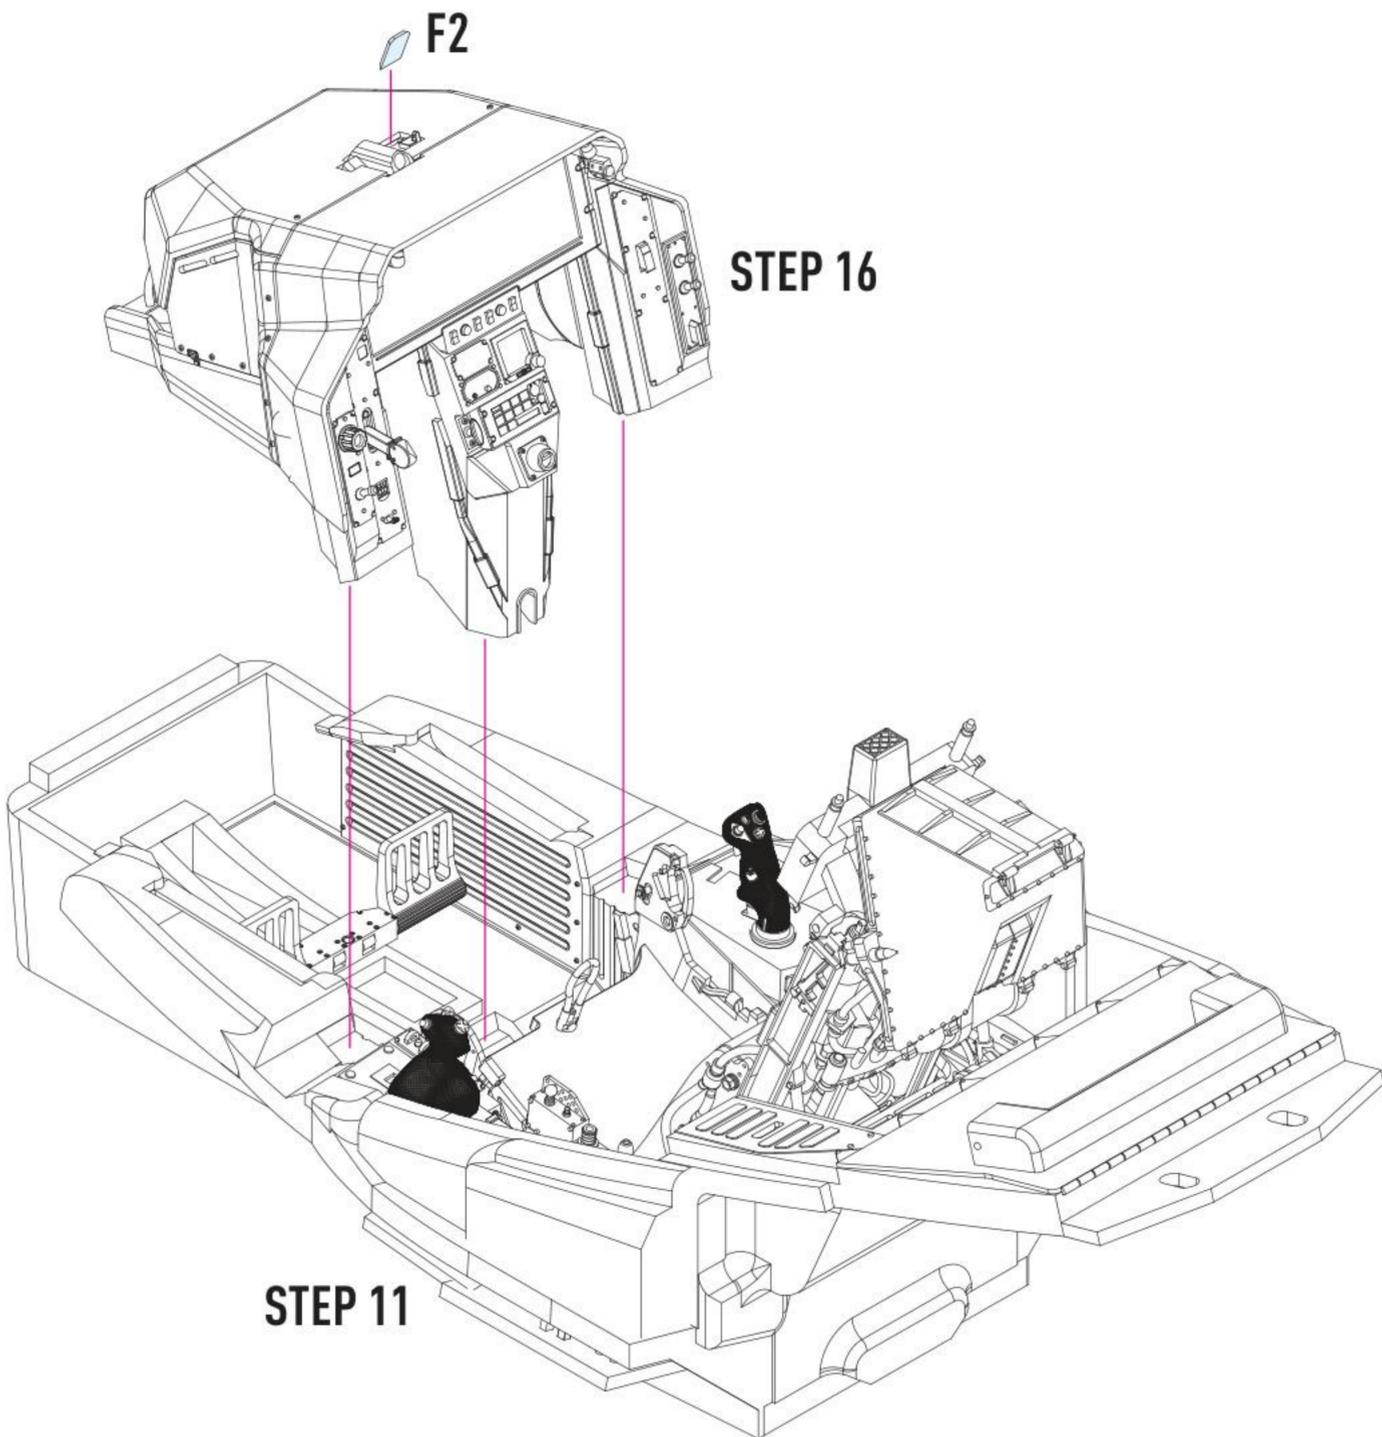




18 IN TRUMPETER INSTRUCTIONS ON PAGE 4, STEP 1, REMOVE ALL USED PARTS AND REPLACE WITH RESKIT KIT PARTS FROM STEP 17

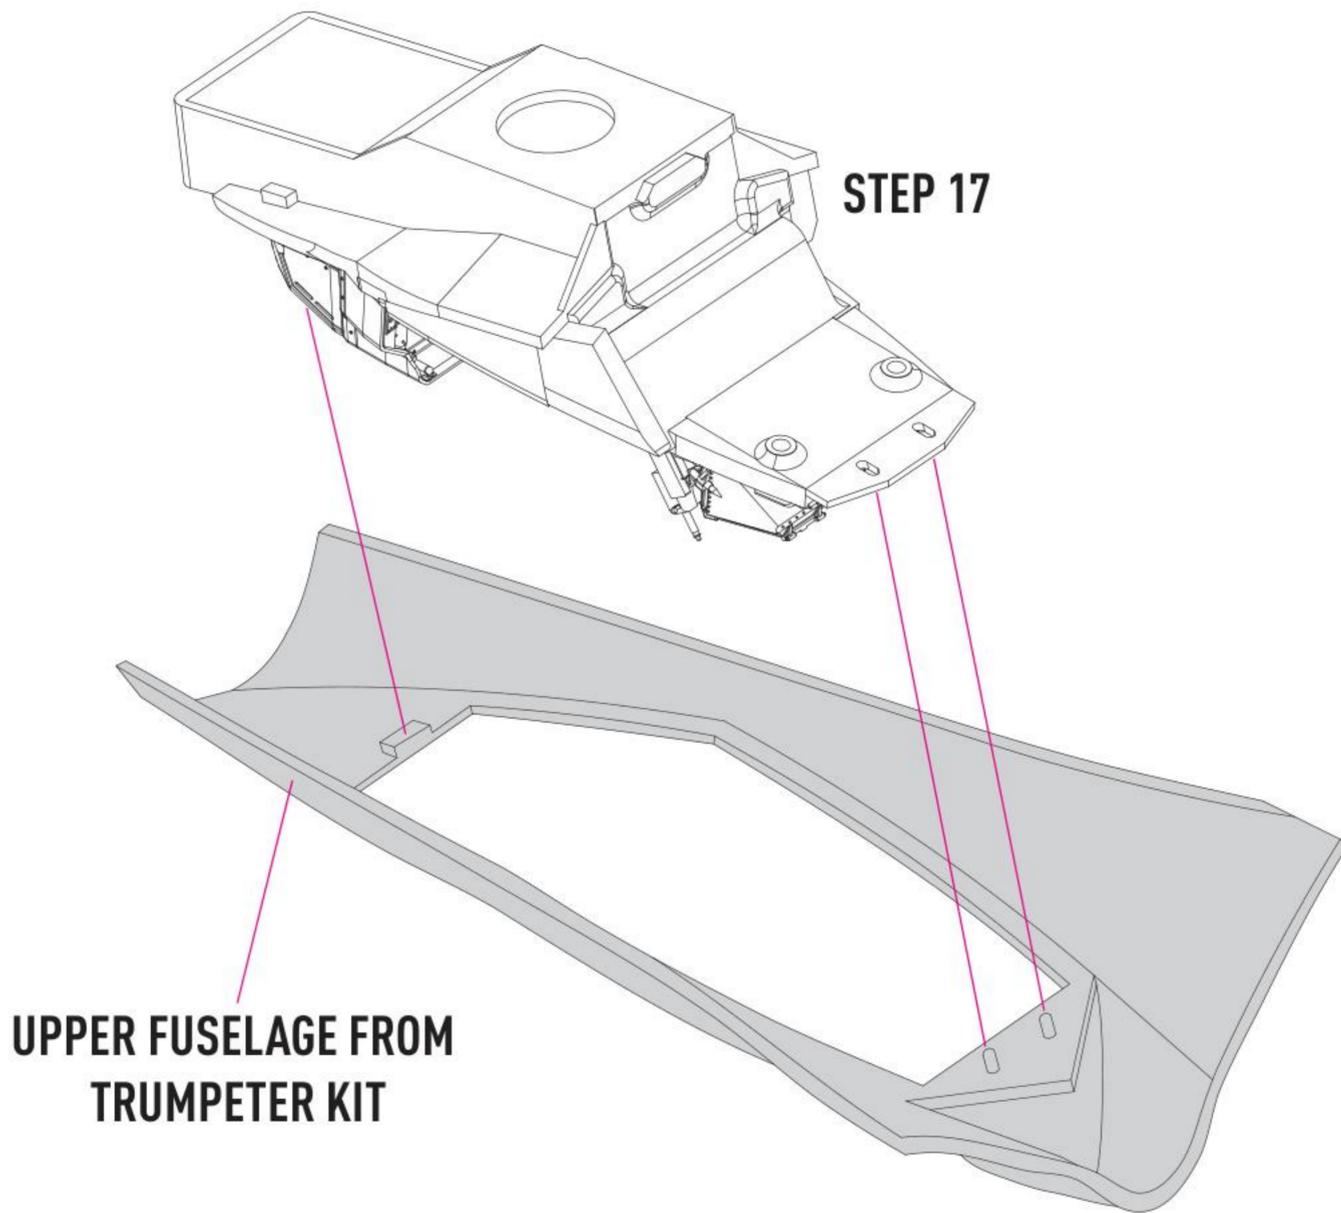


19 IN TRUMPETER INSTRUCTIONS ON PAGE 5, STEP 2, REPLACE PART G28 WITH RESKIT KIT PART R17

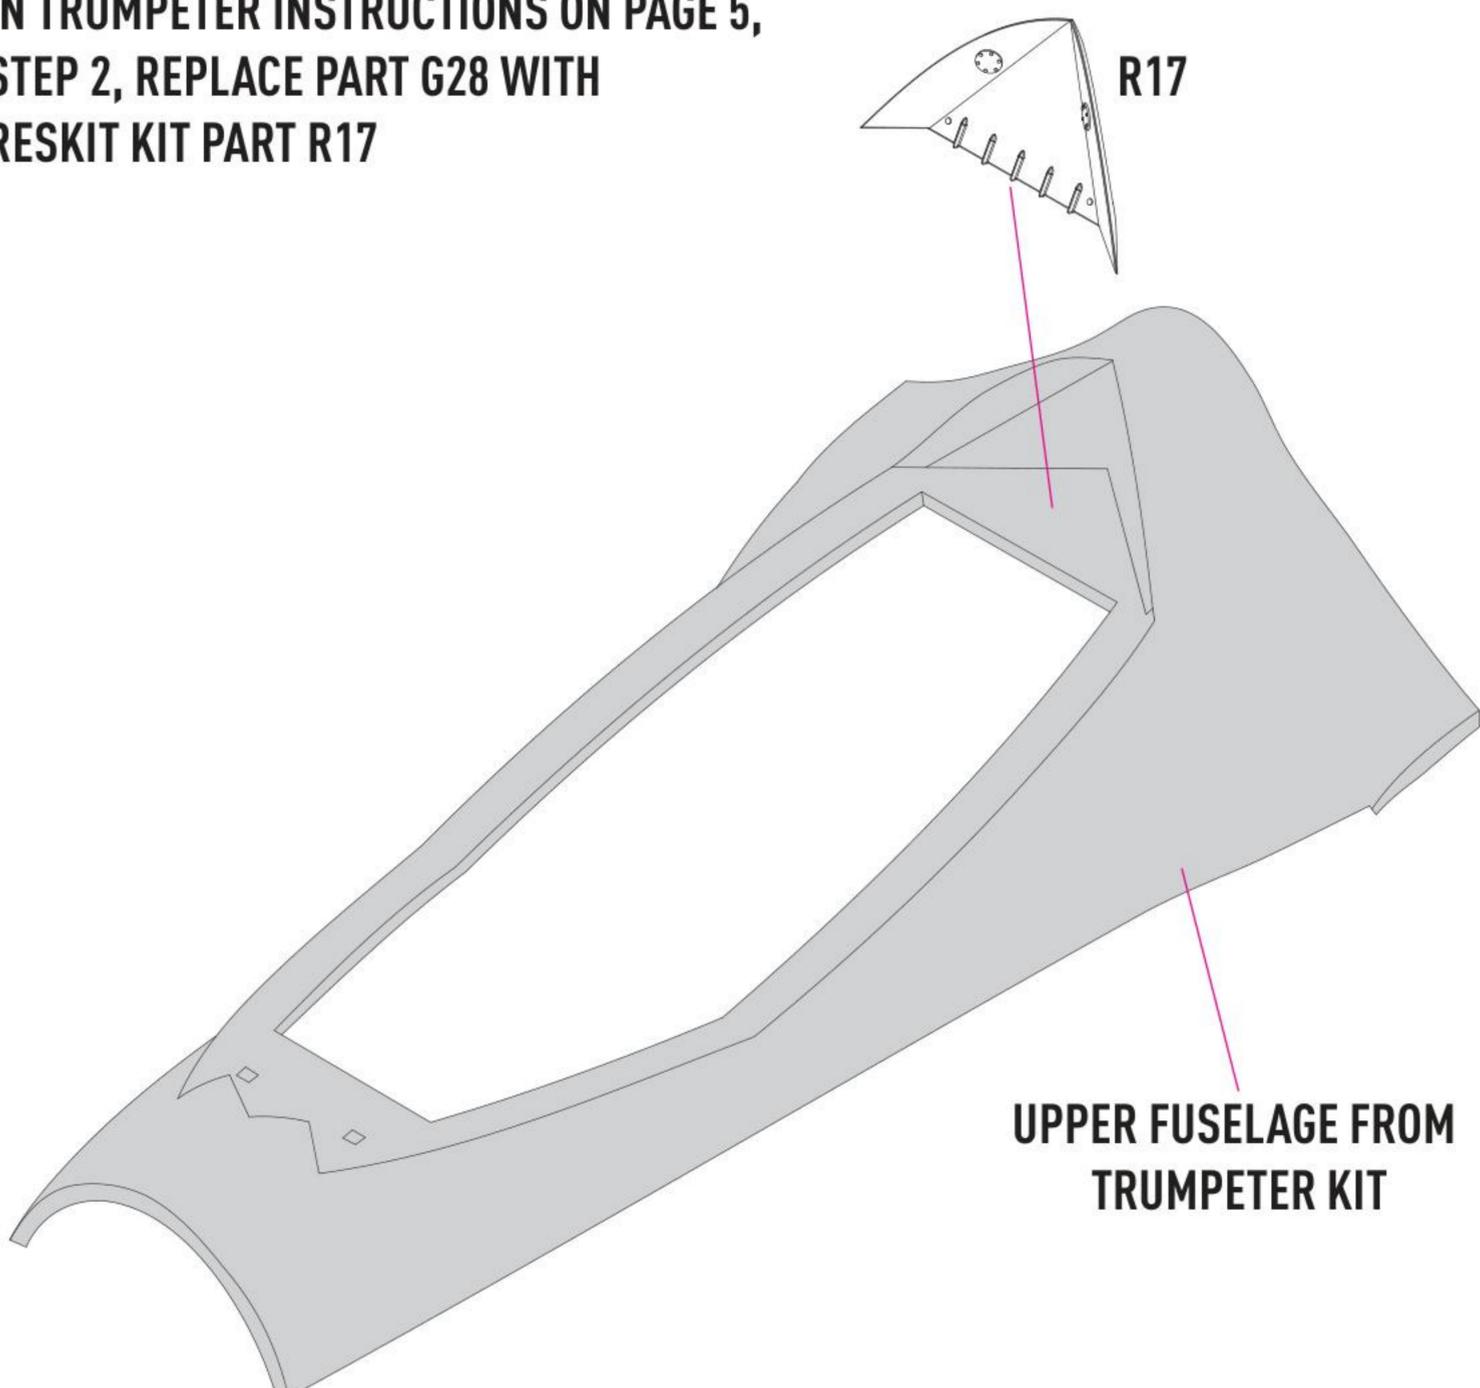


DECAL INSTRUCTION

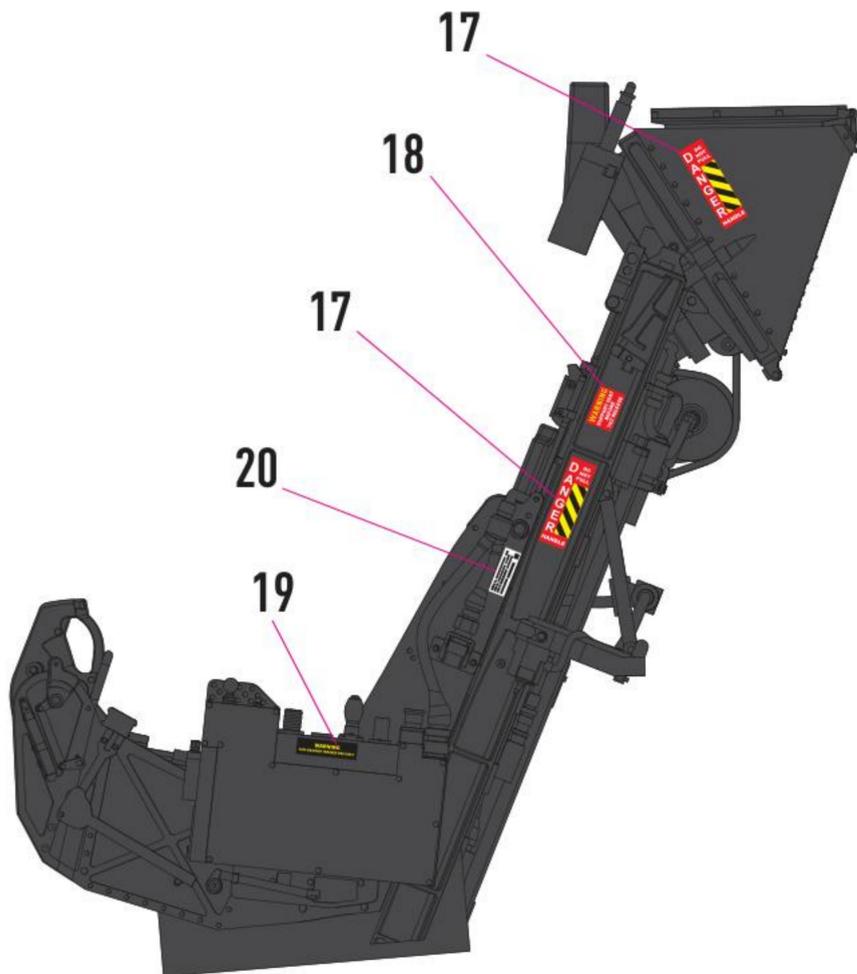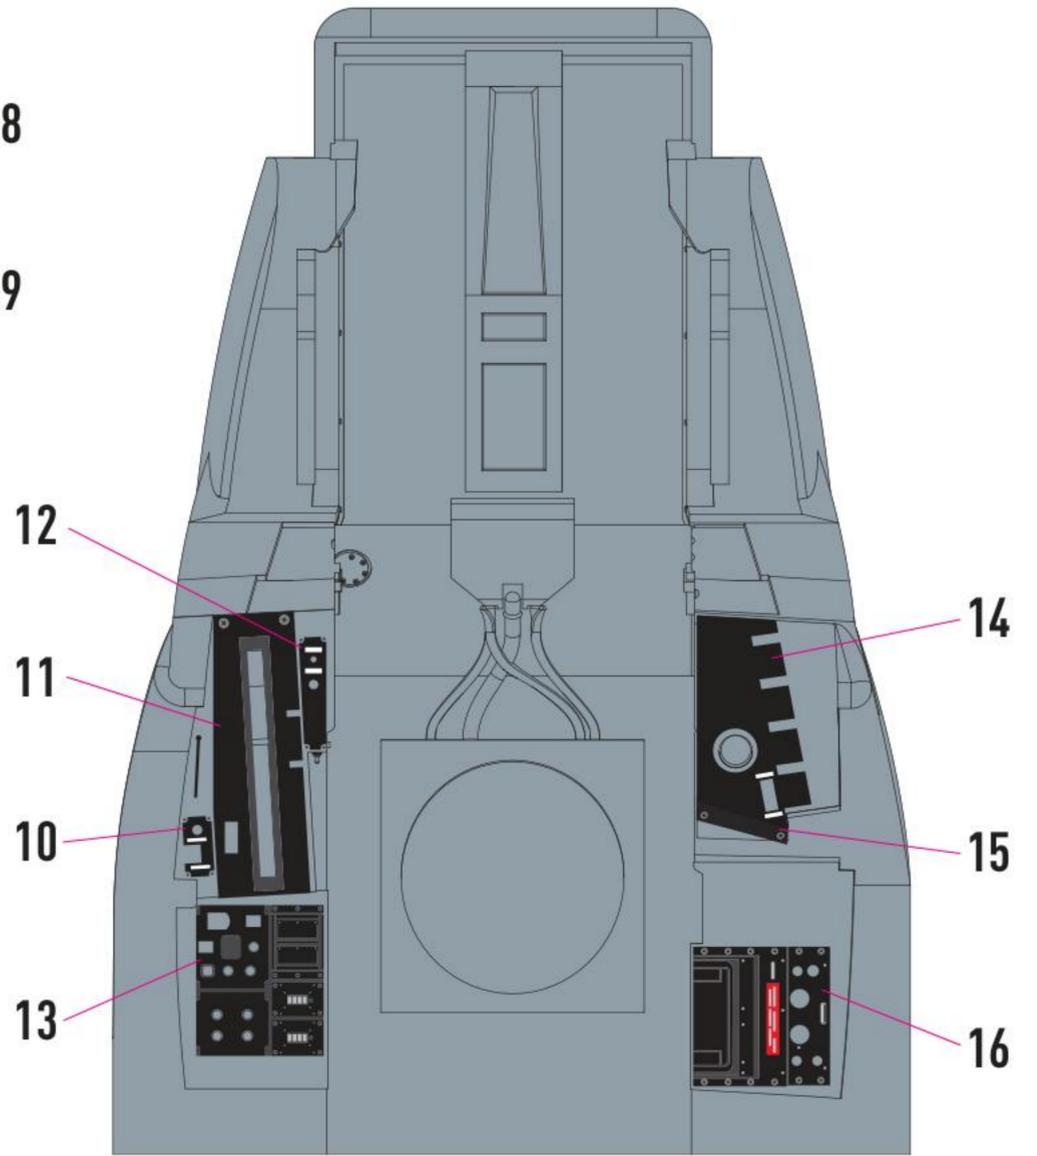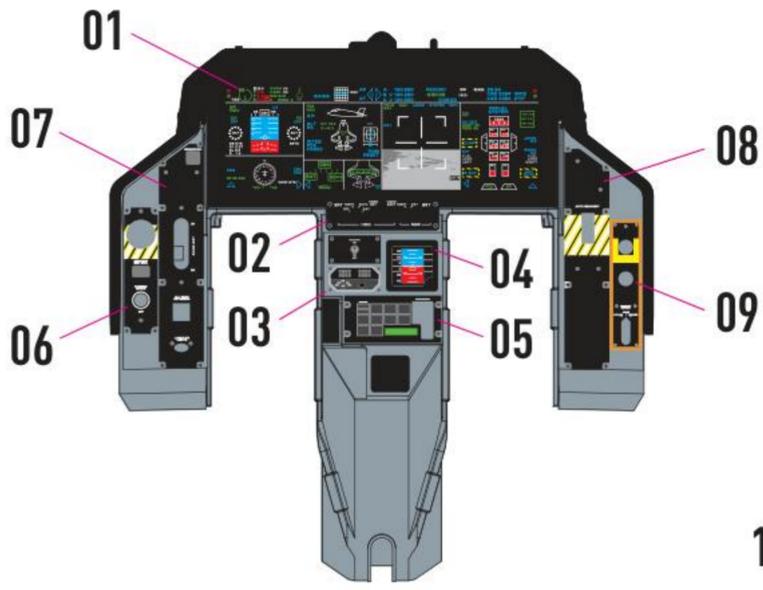

LEFT

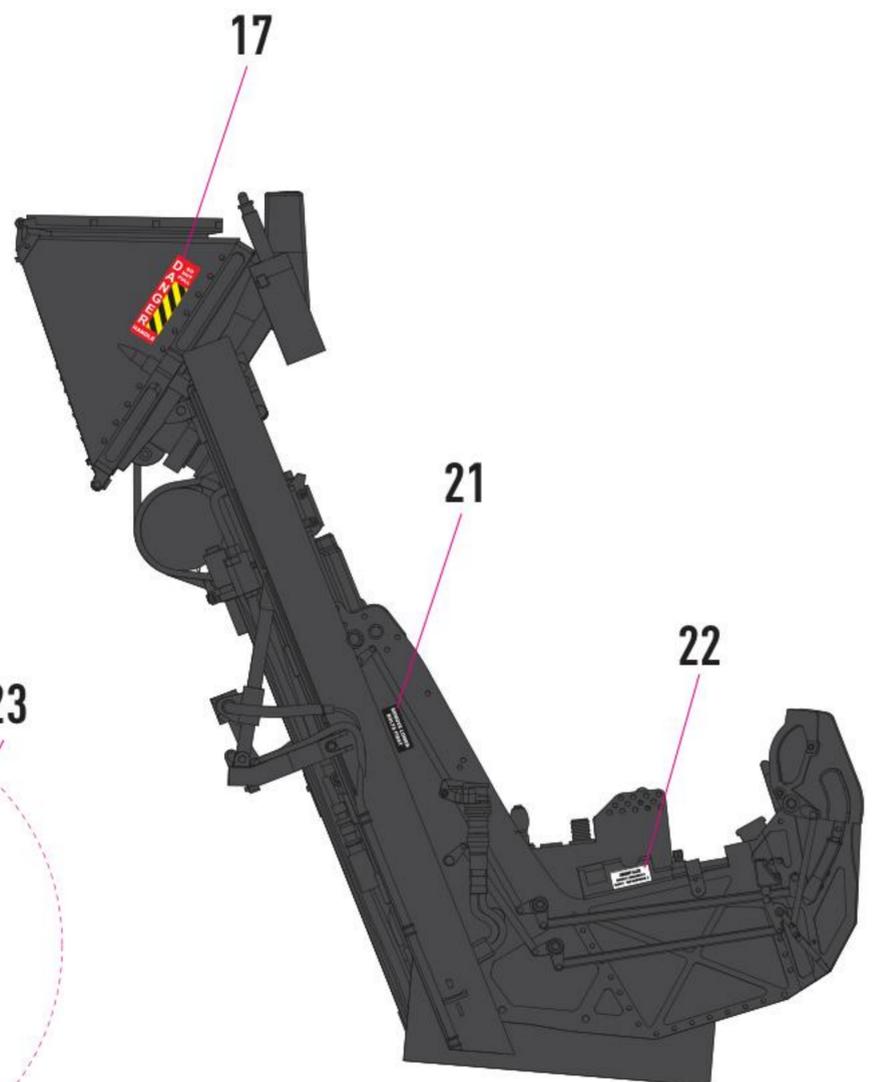

RIGHT

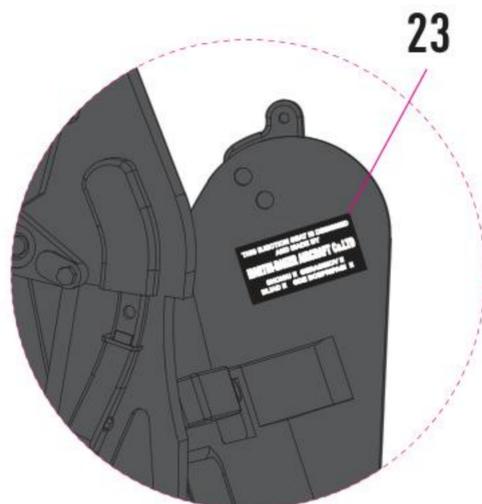

INNER PART