


**CUT**


**REMOVE PROTECTIVE COVER**

**USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS**

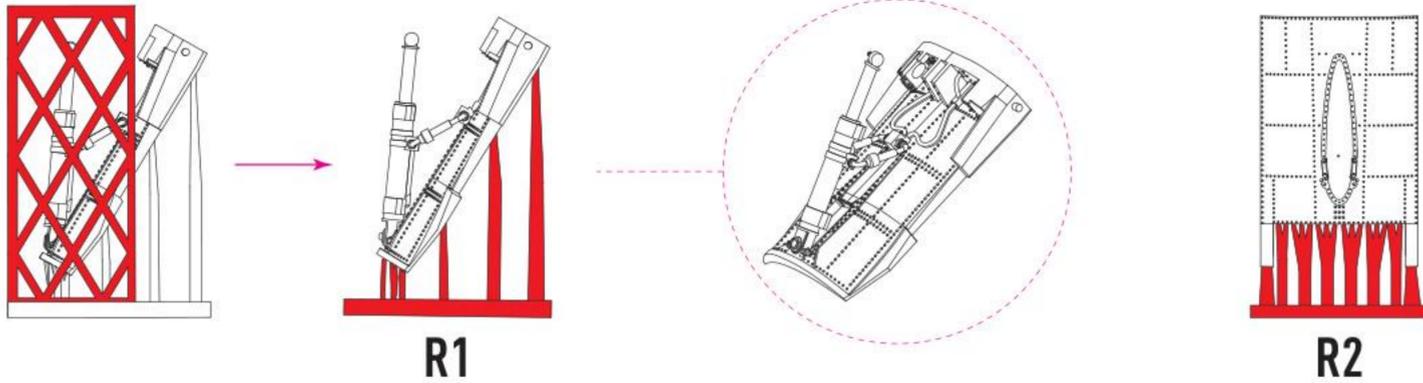


**1**

**PART 20 FROM THE REVELL KIT**

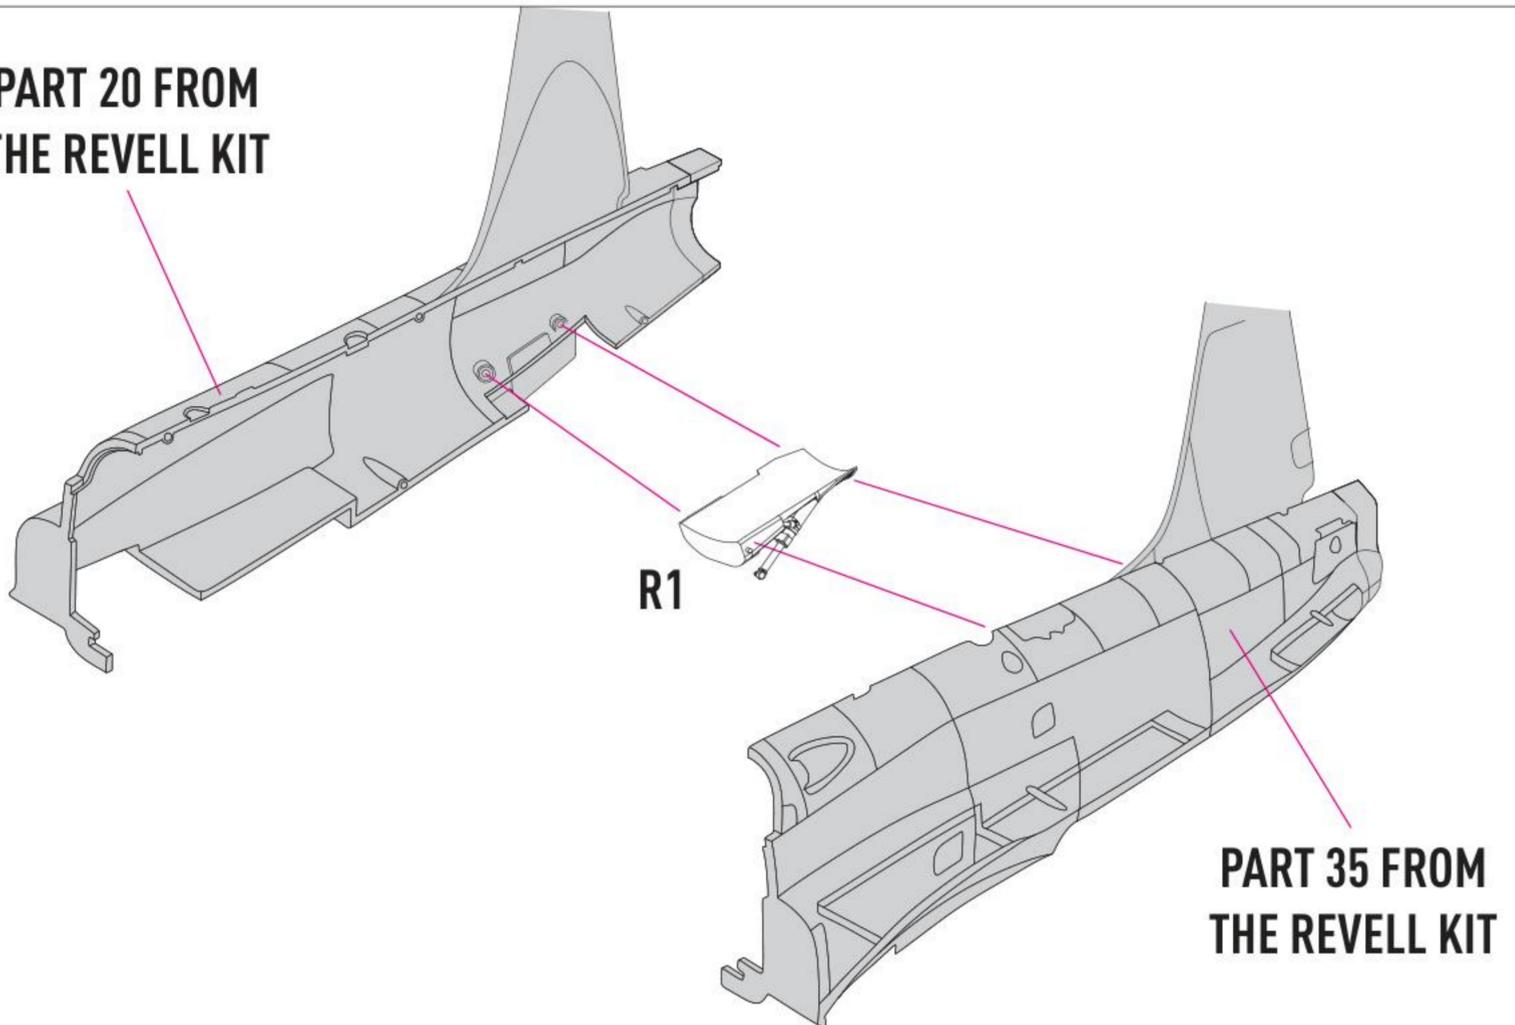

**2**

**R2**

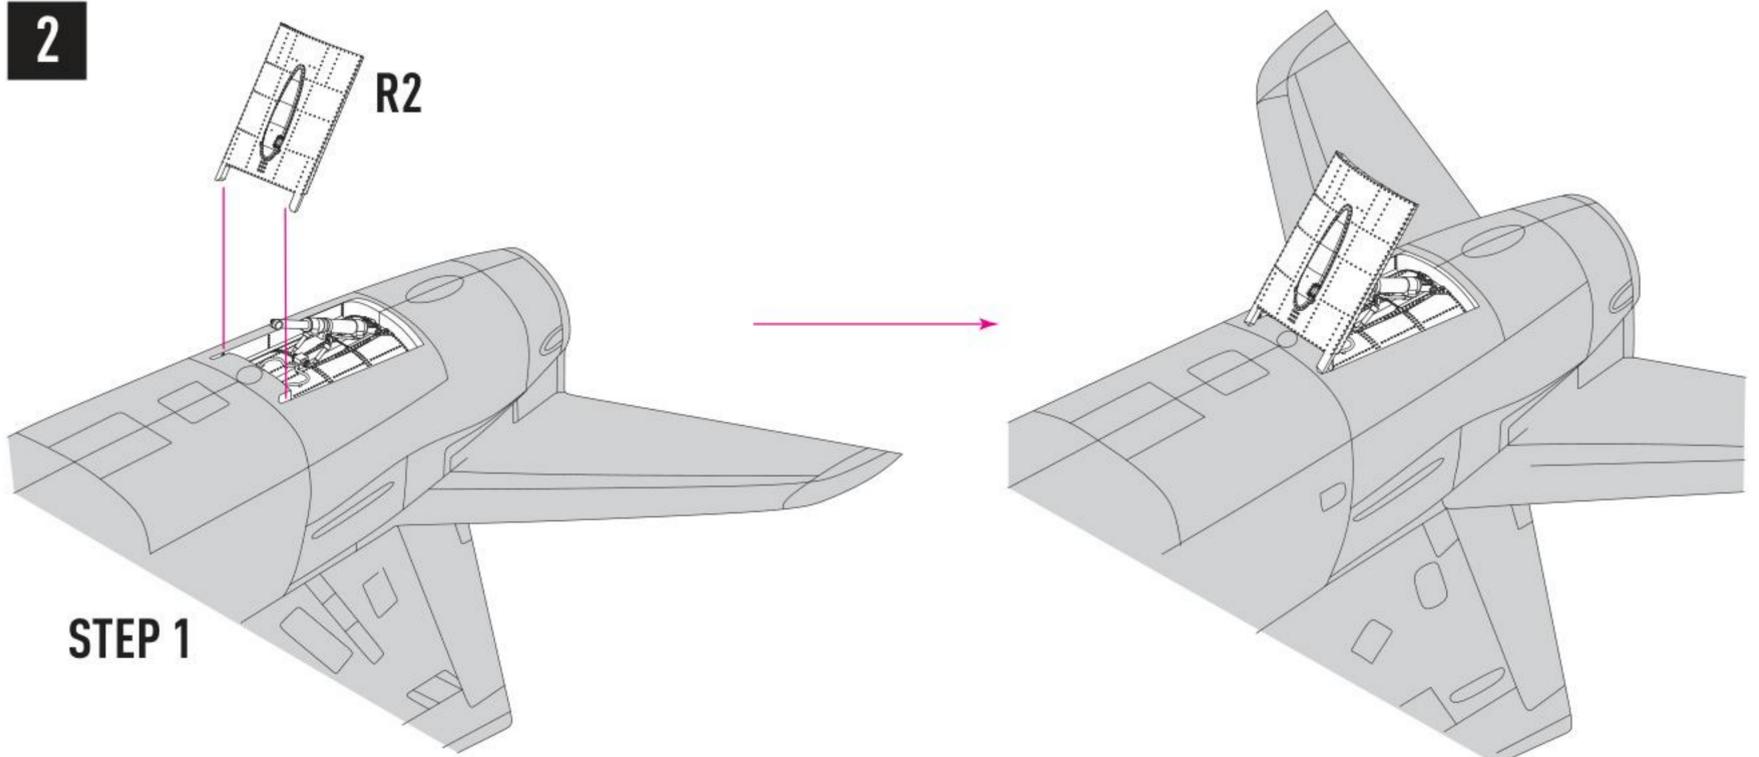

**STEP 1**