




RESIN PARTS
FOR SCALE PLASTIC KITS

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION **RSU32-0140**

MIRAGE 2000N COCKPIT (DETAILED EDITION) FOR KITTY HAWK / ZIMIMODEL KIT

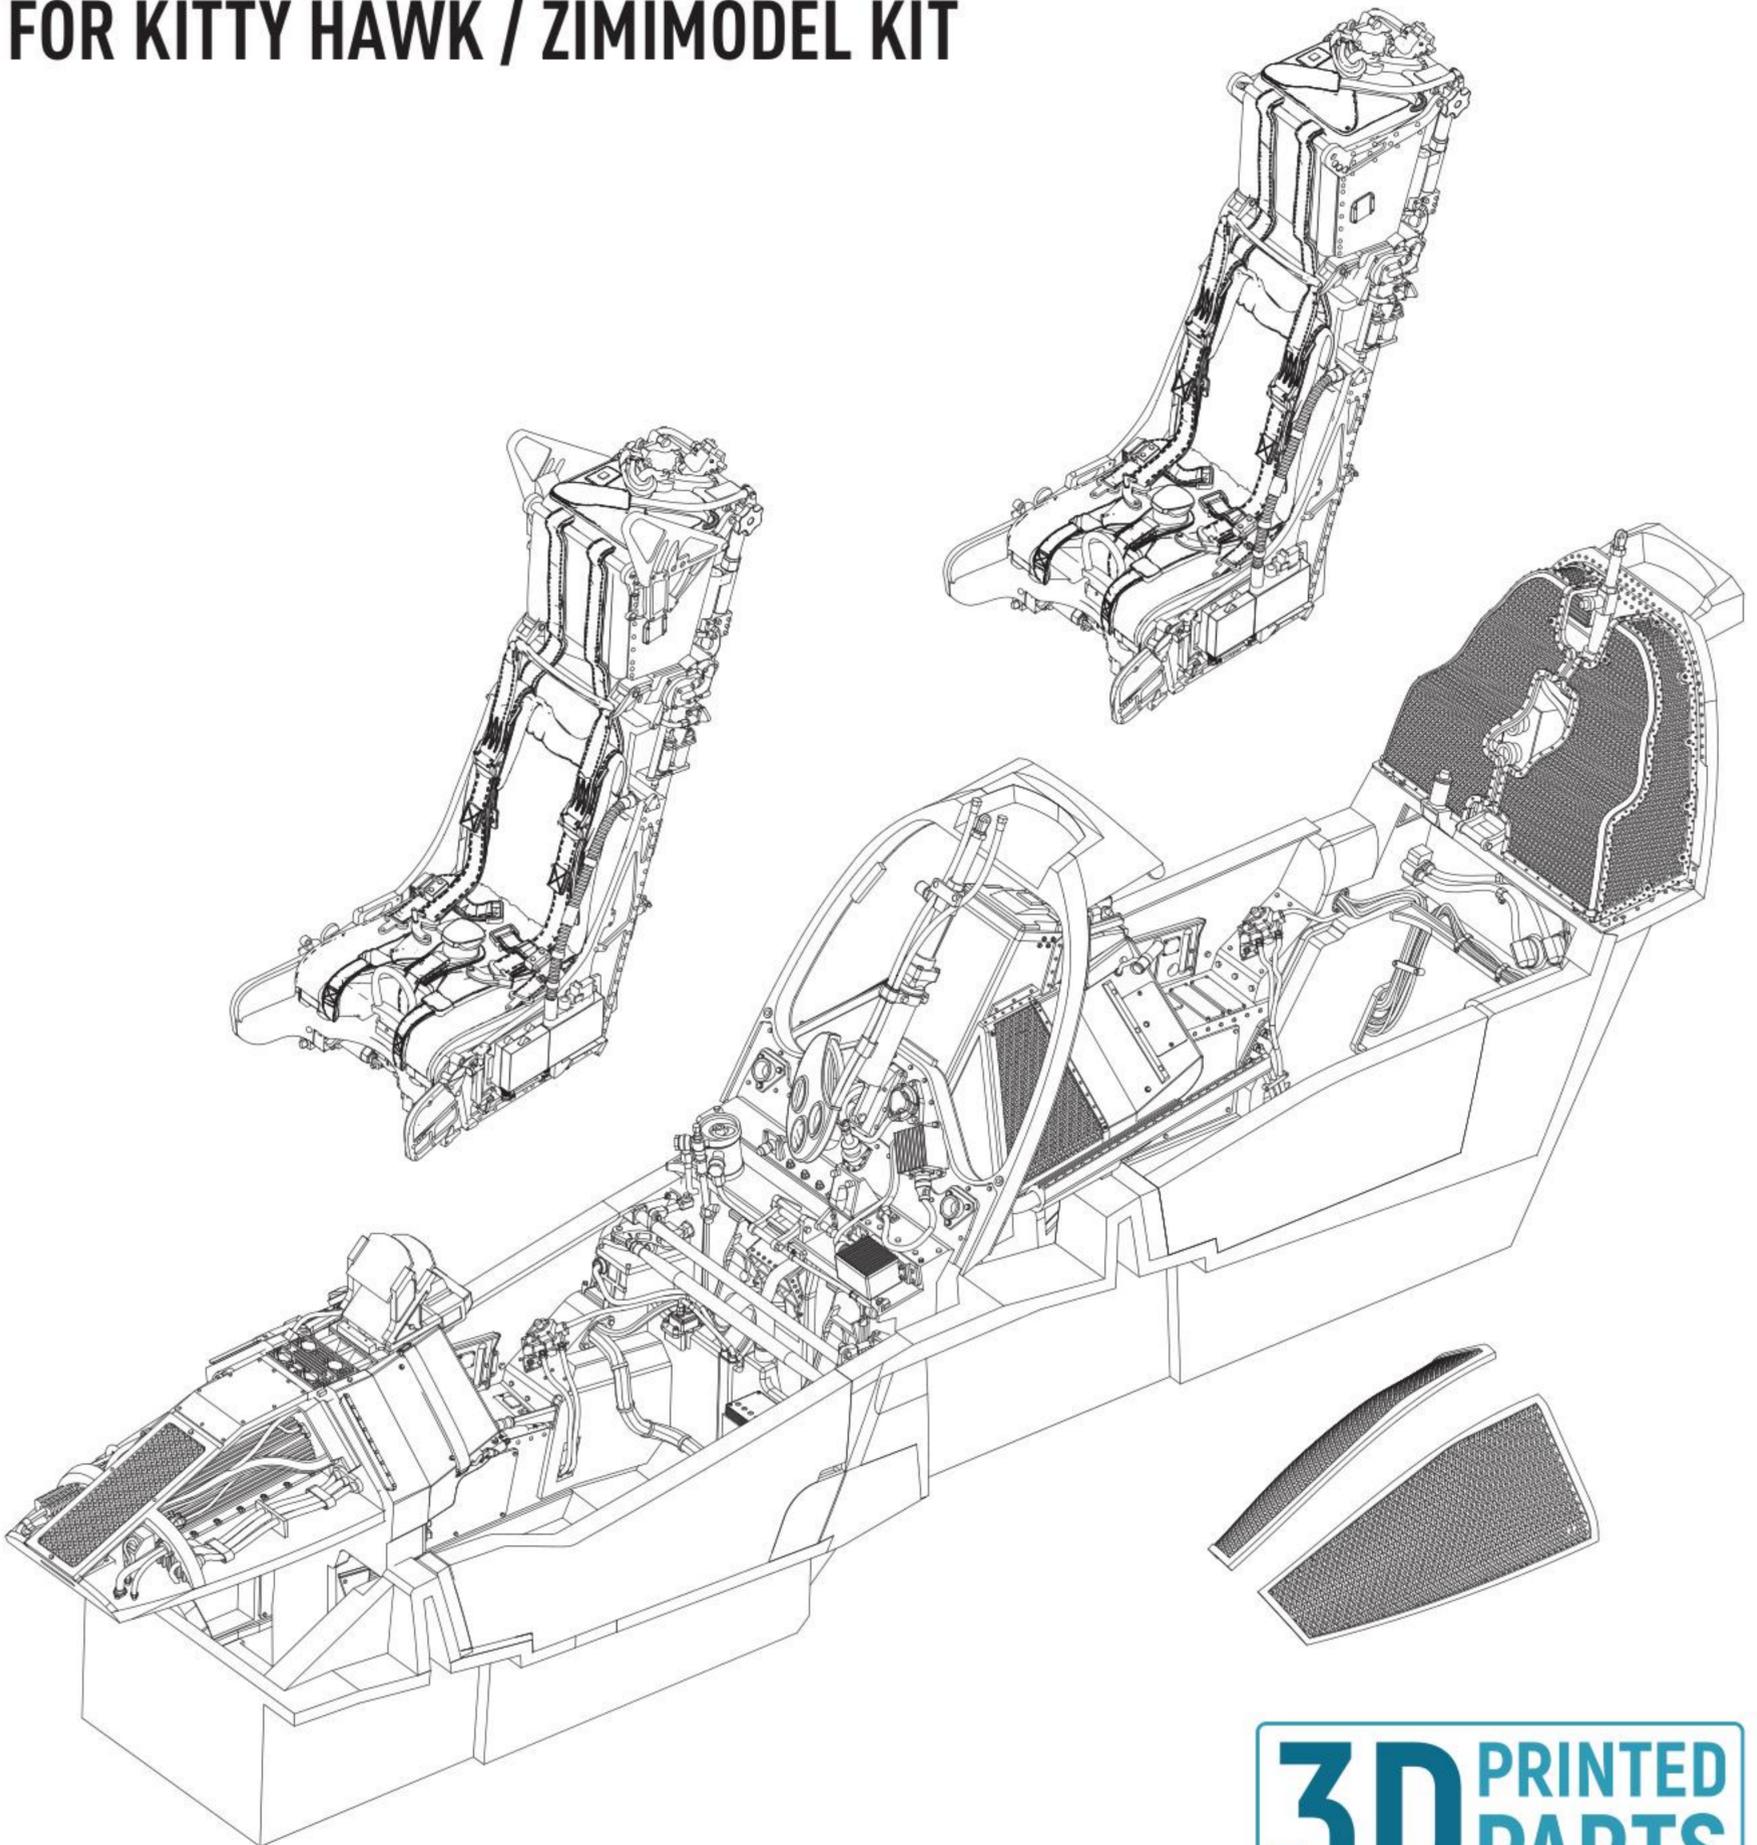

3D PRINTED
PARTS

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua



RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official

 pinterest.com/reskit_official



DECAL INSTRUCTION

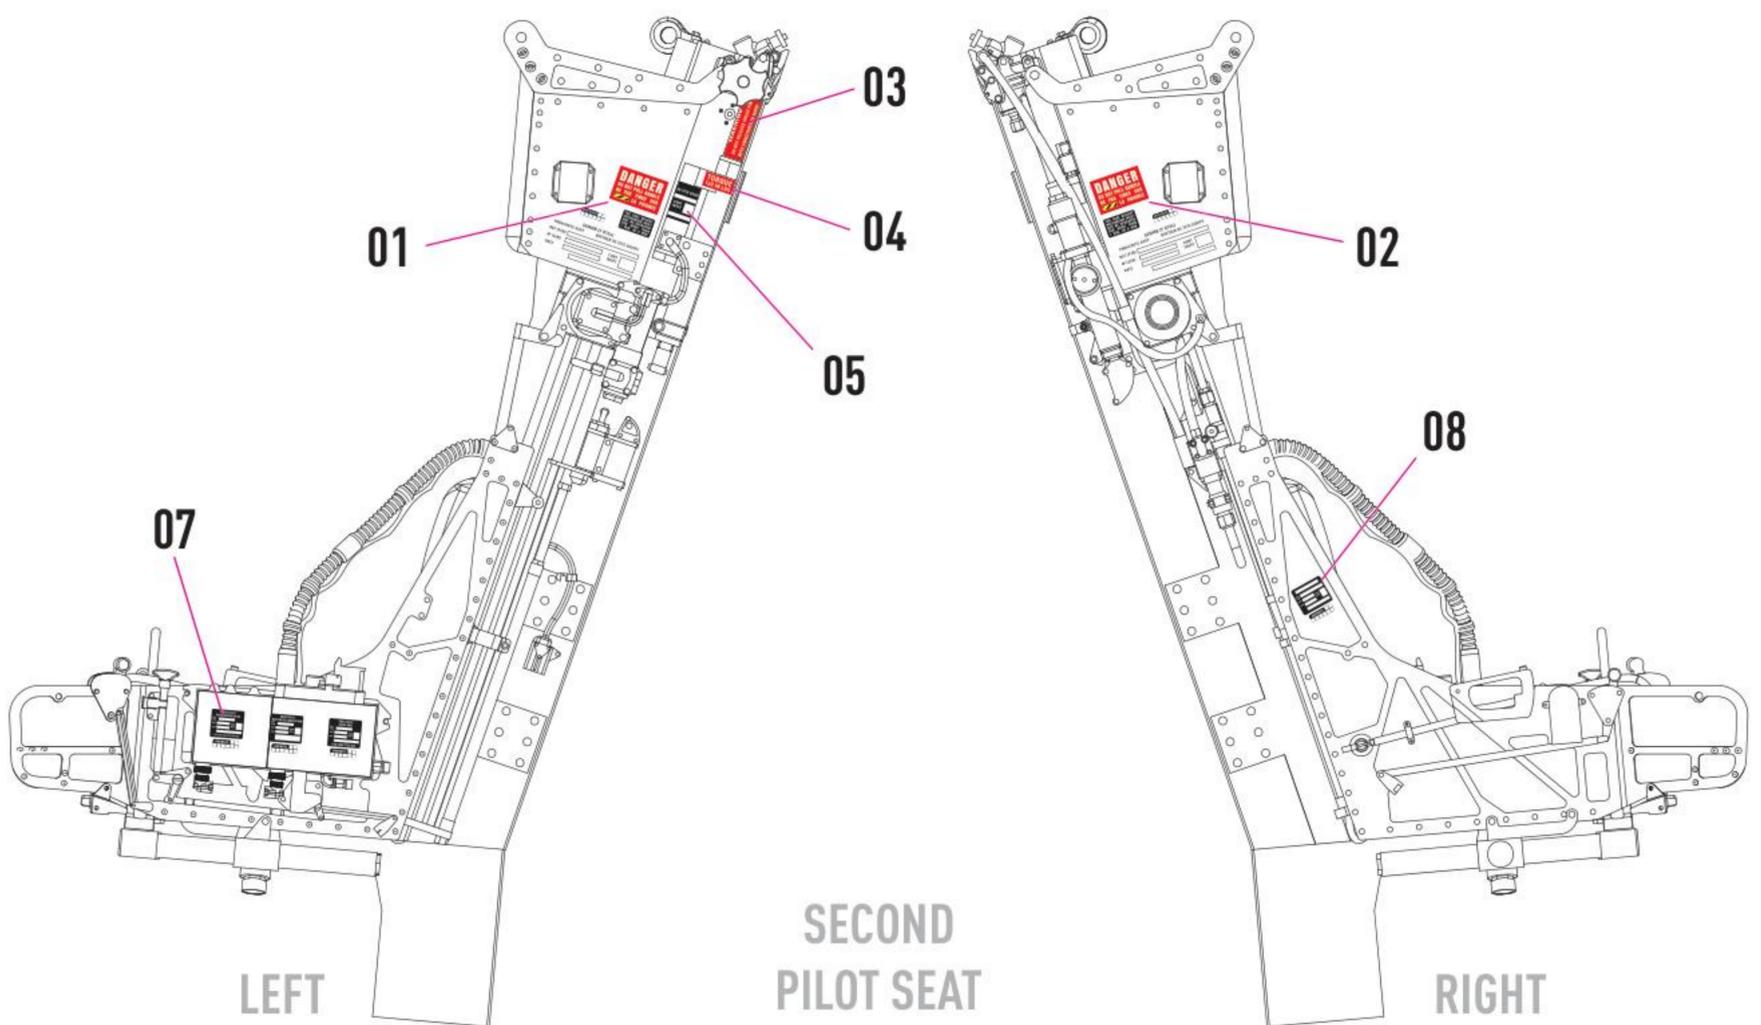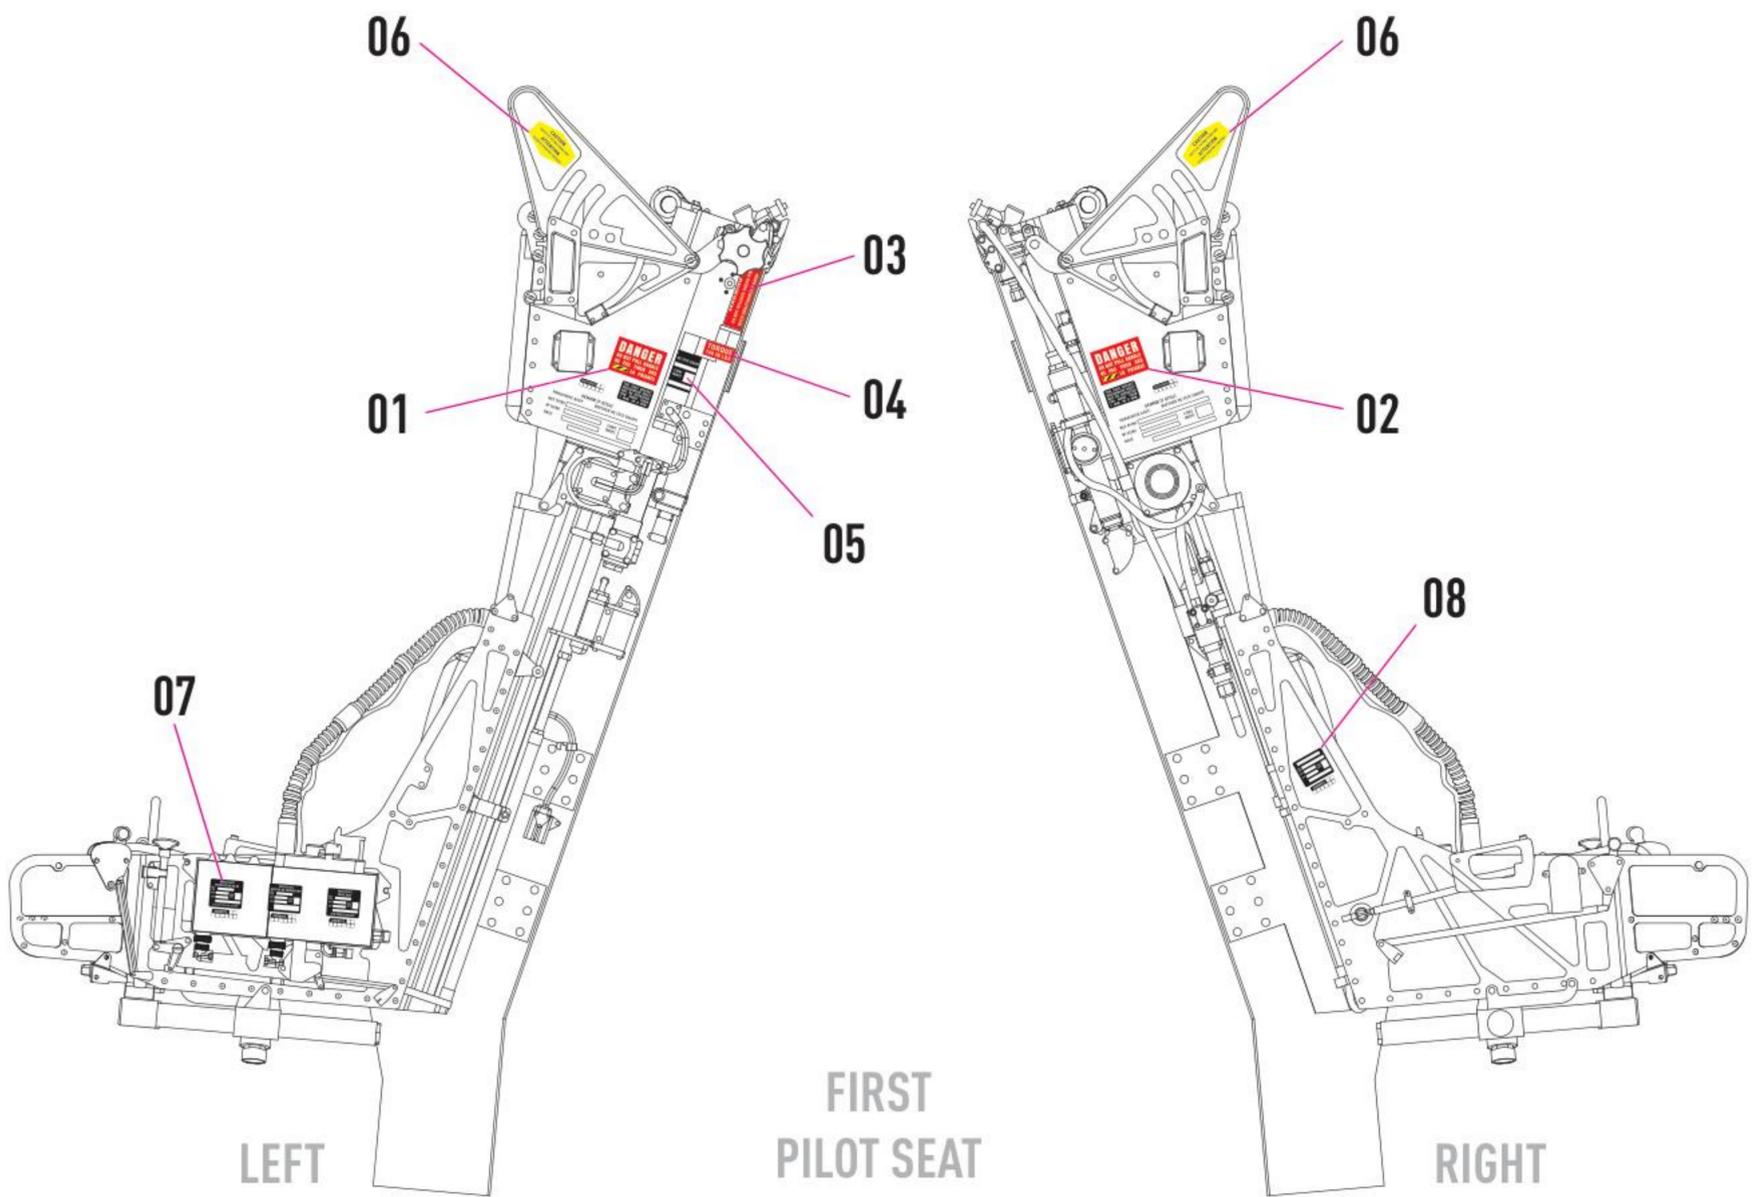


1 FIRST PILOT

FILM ●


PAINT THE PANELS UNDER THE FILMS IN WHITE COLOR

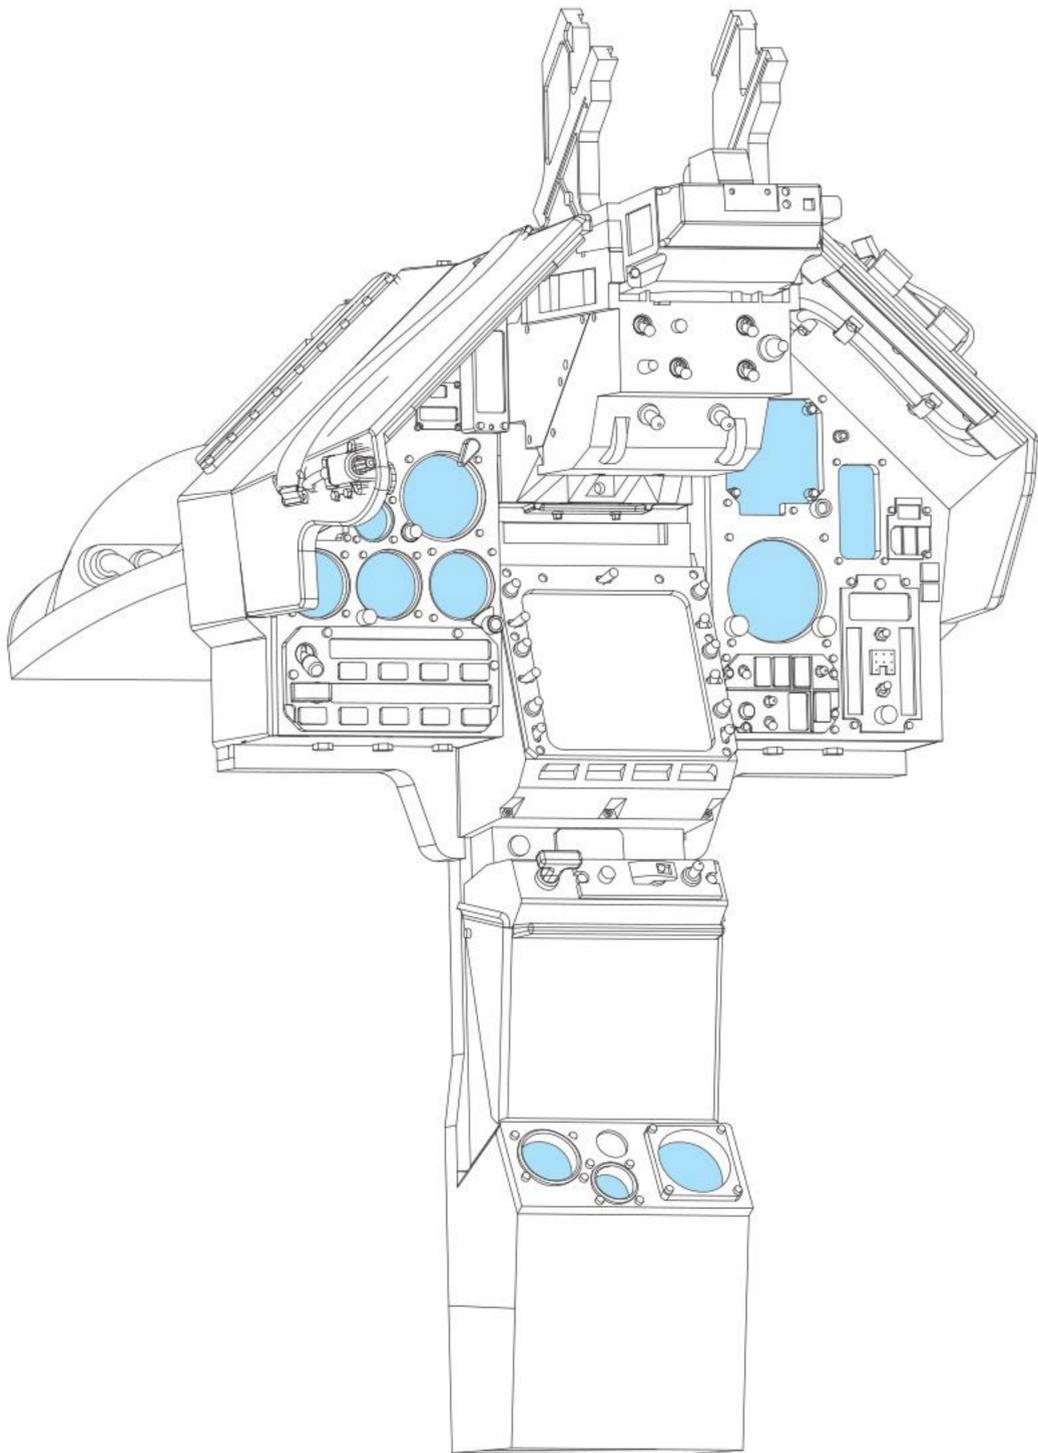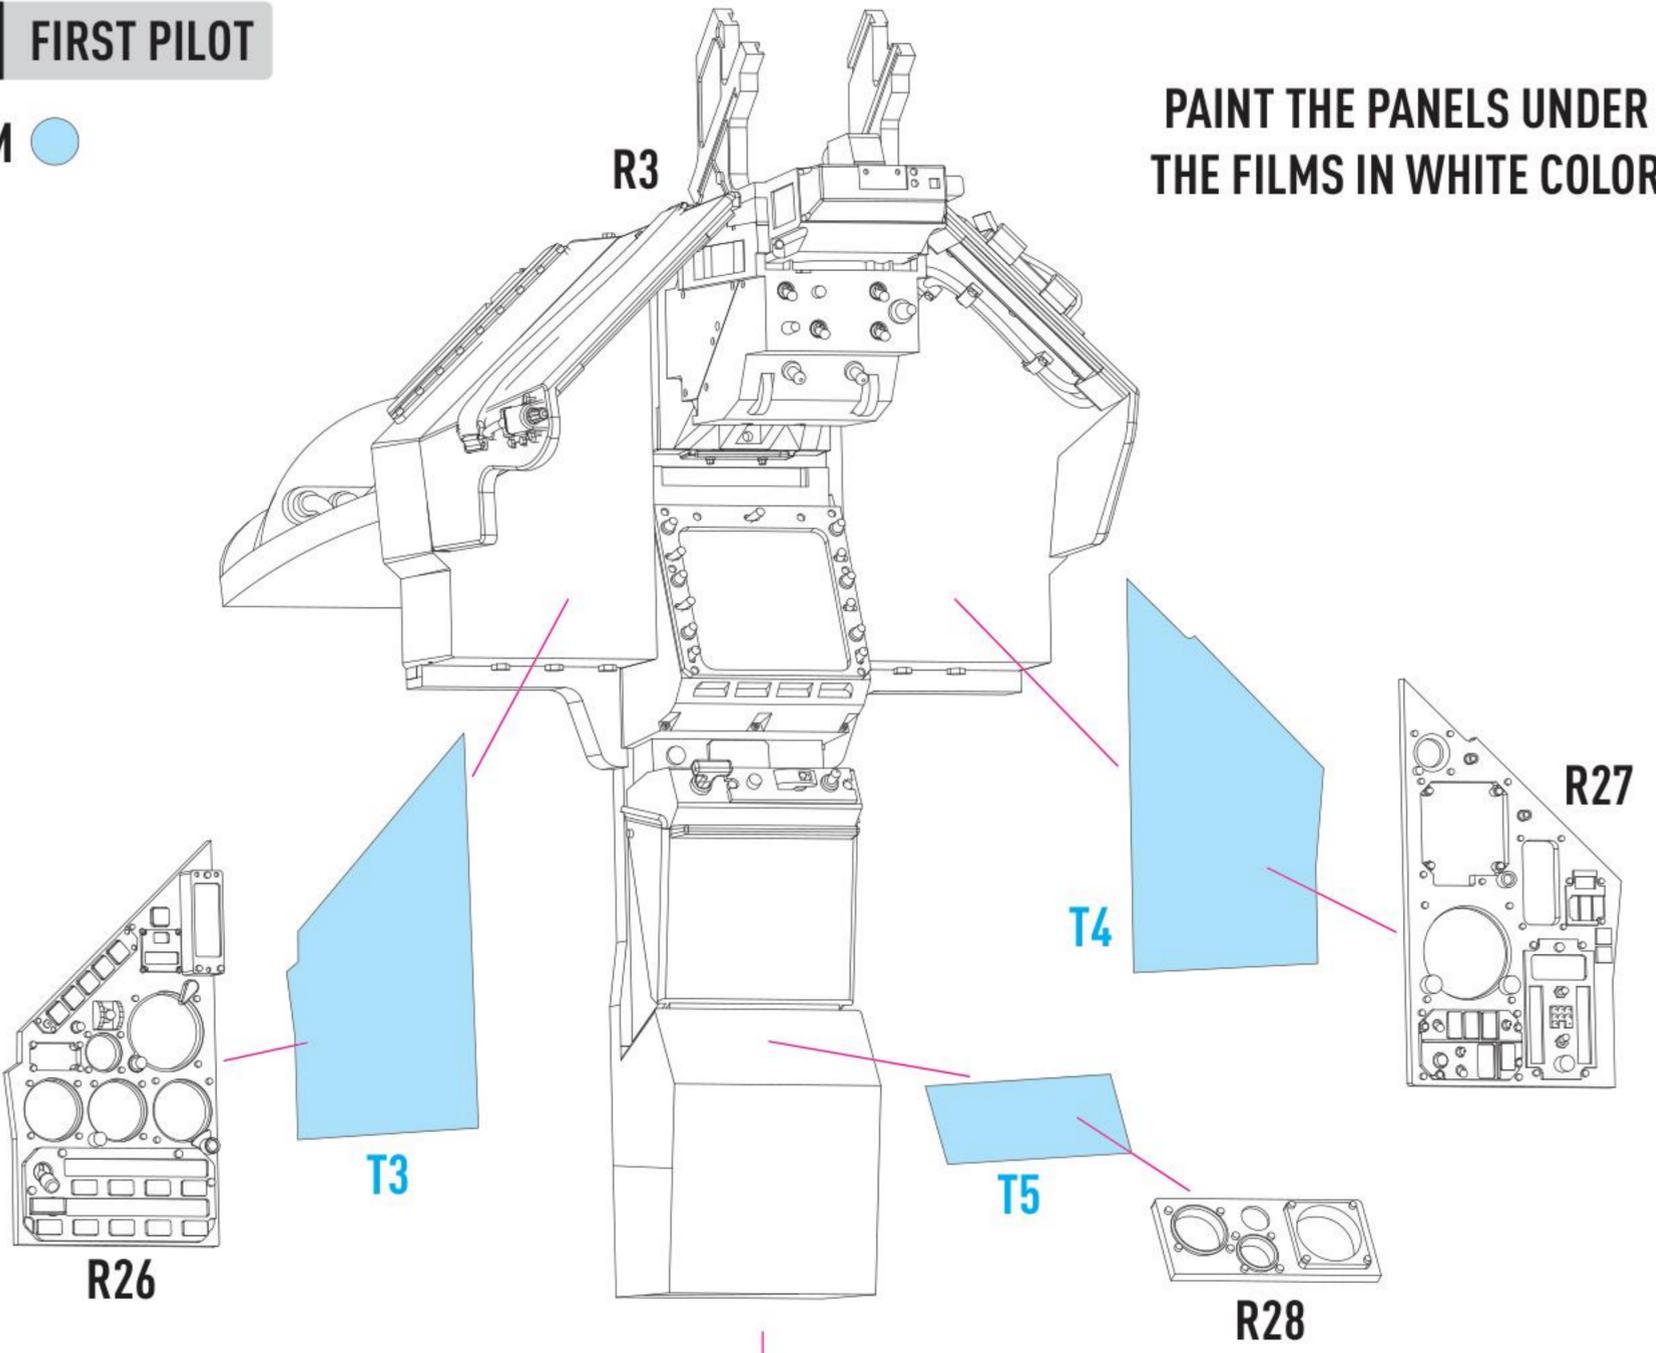


2

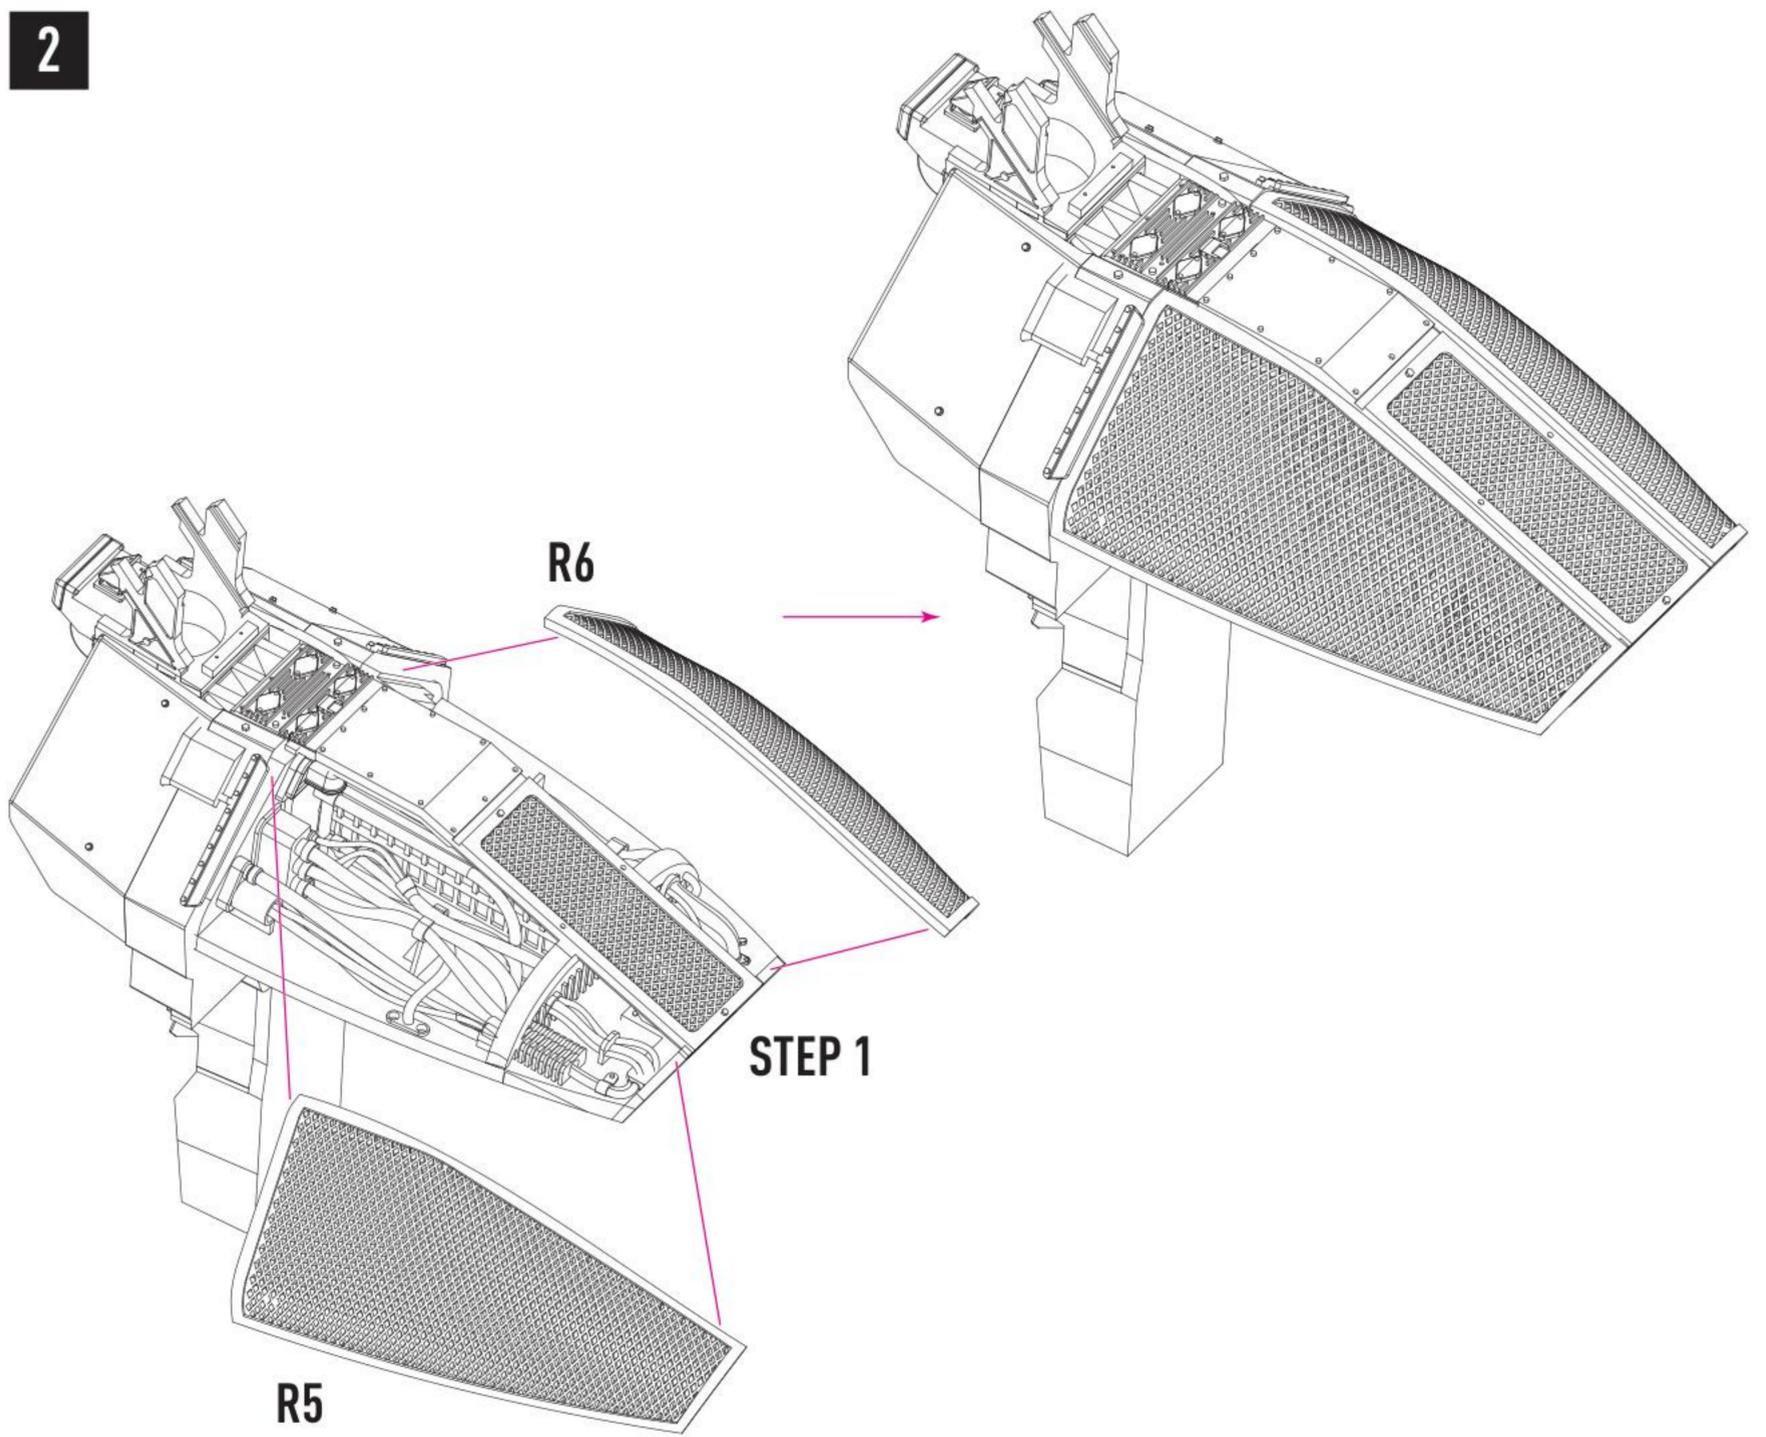

3

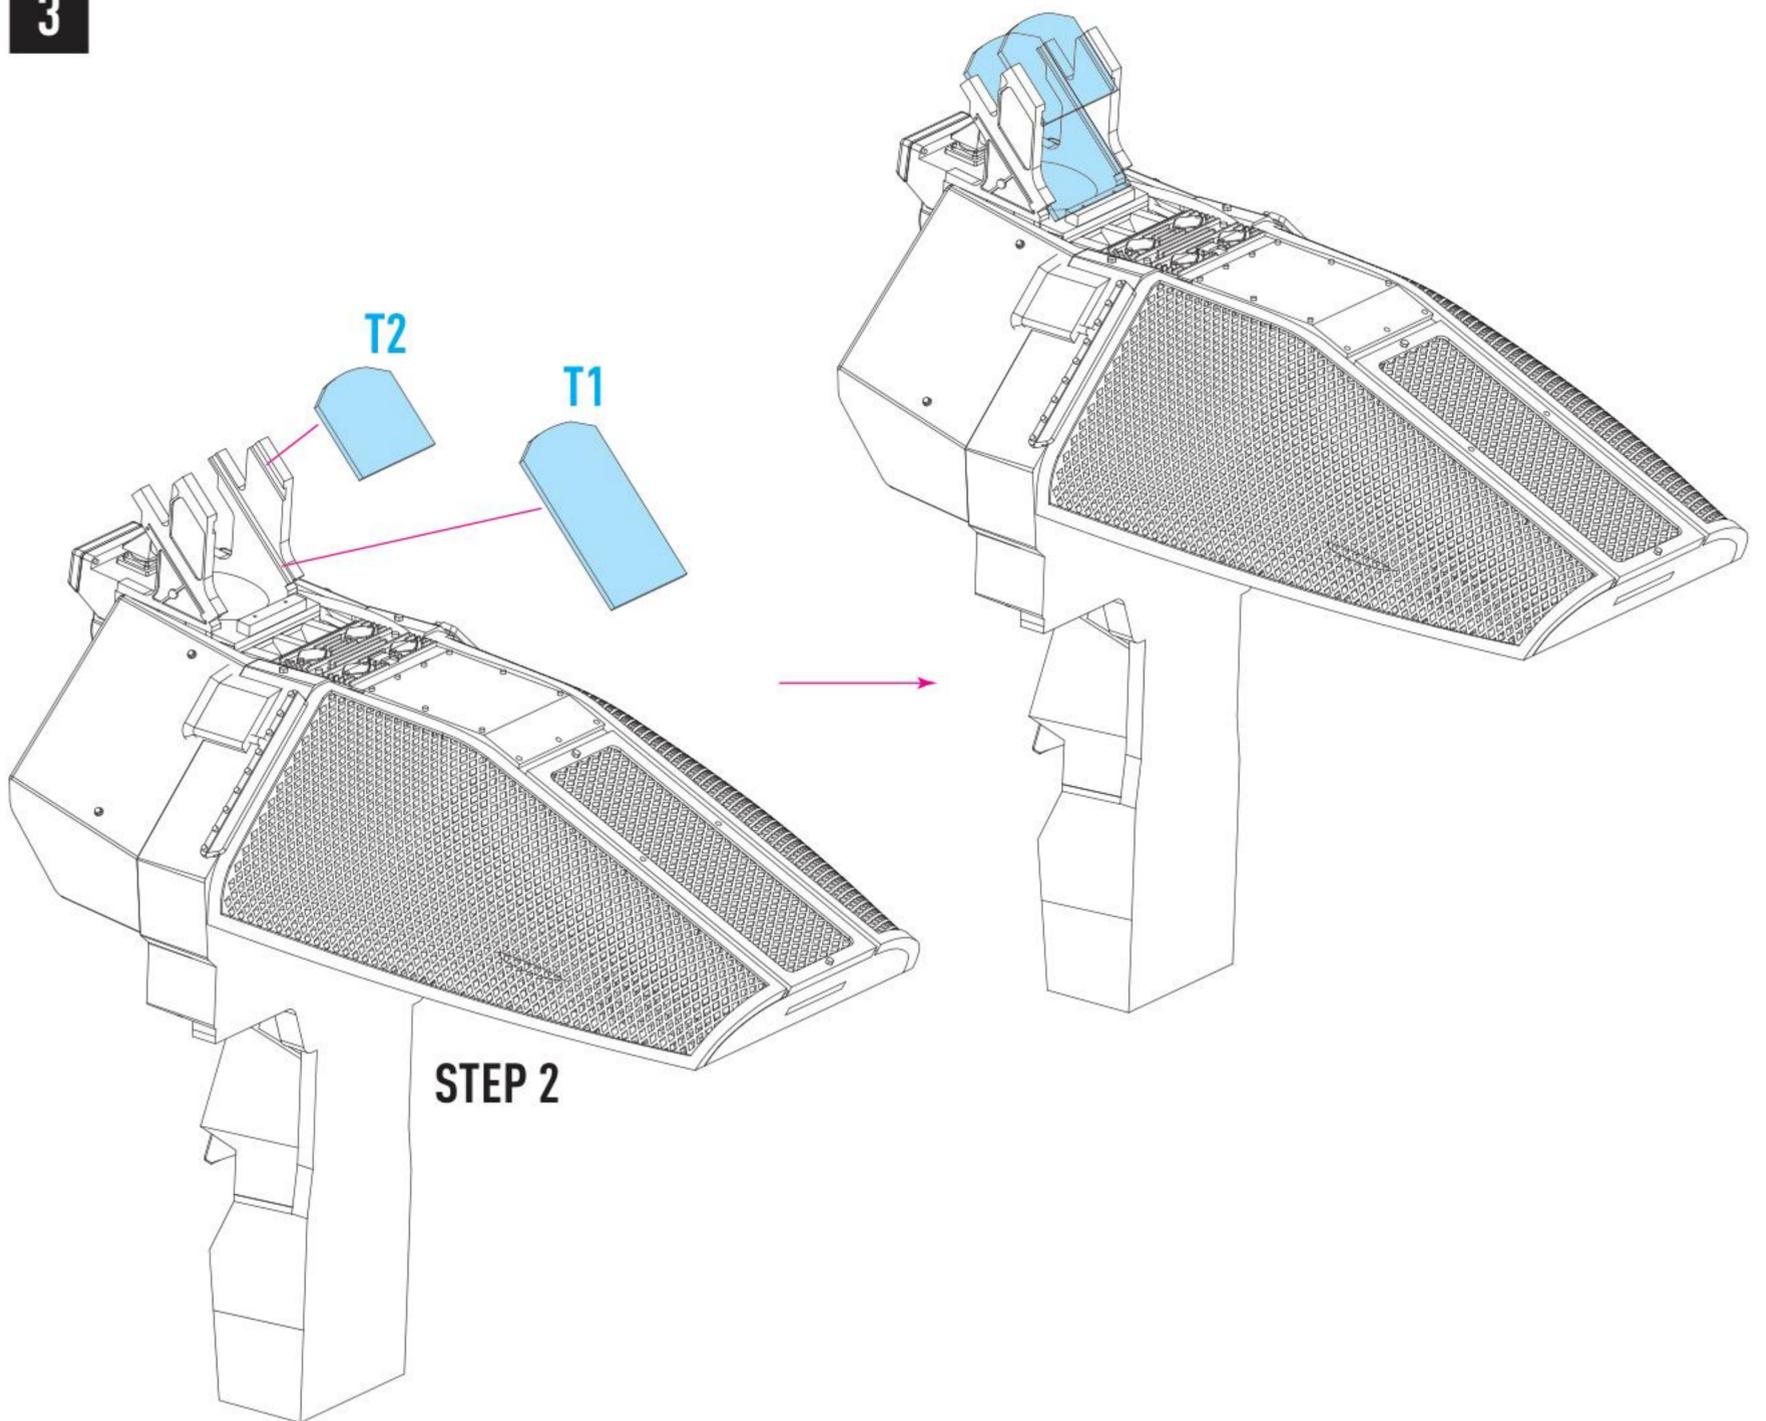




4 SECOND PILOT

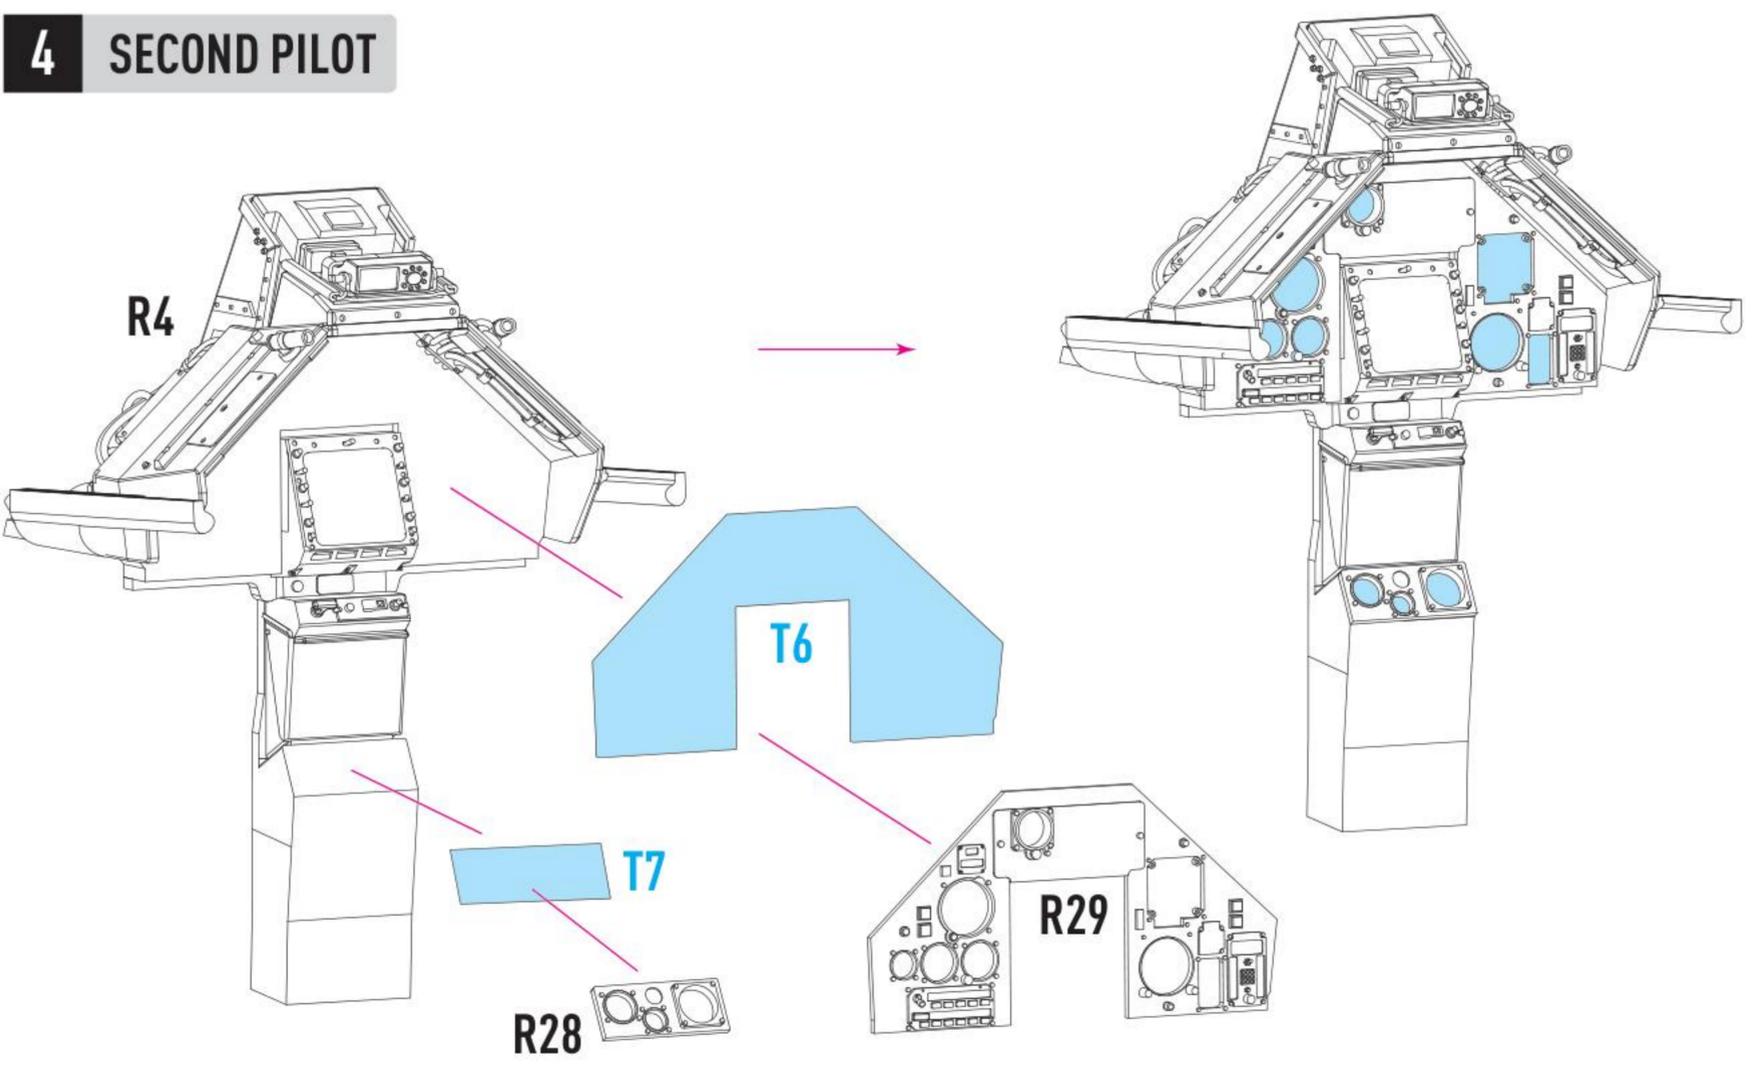

5


STEP 4

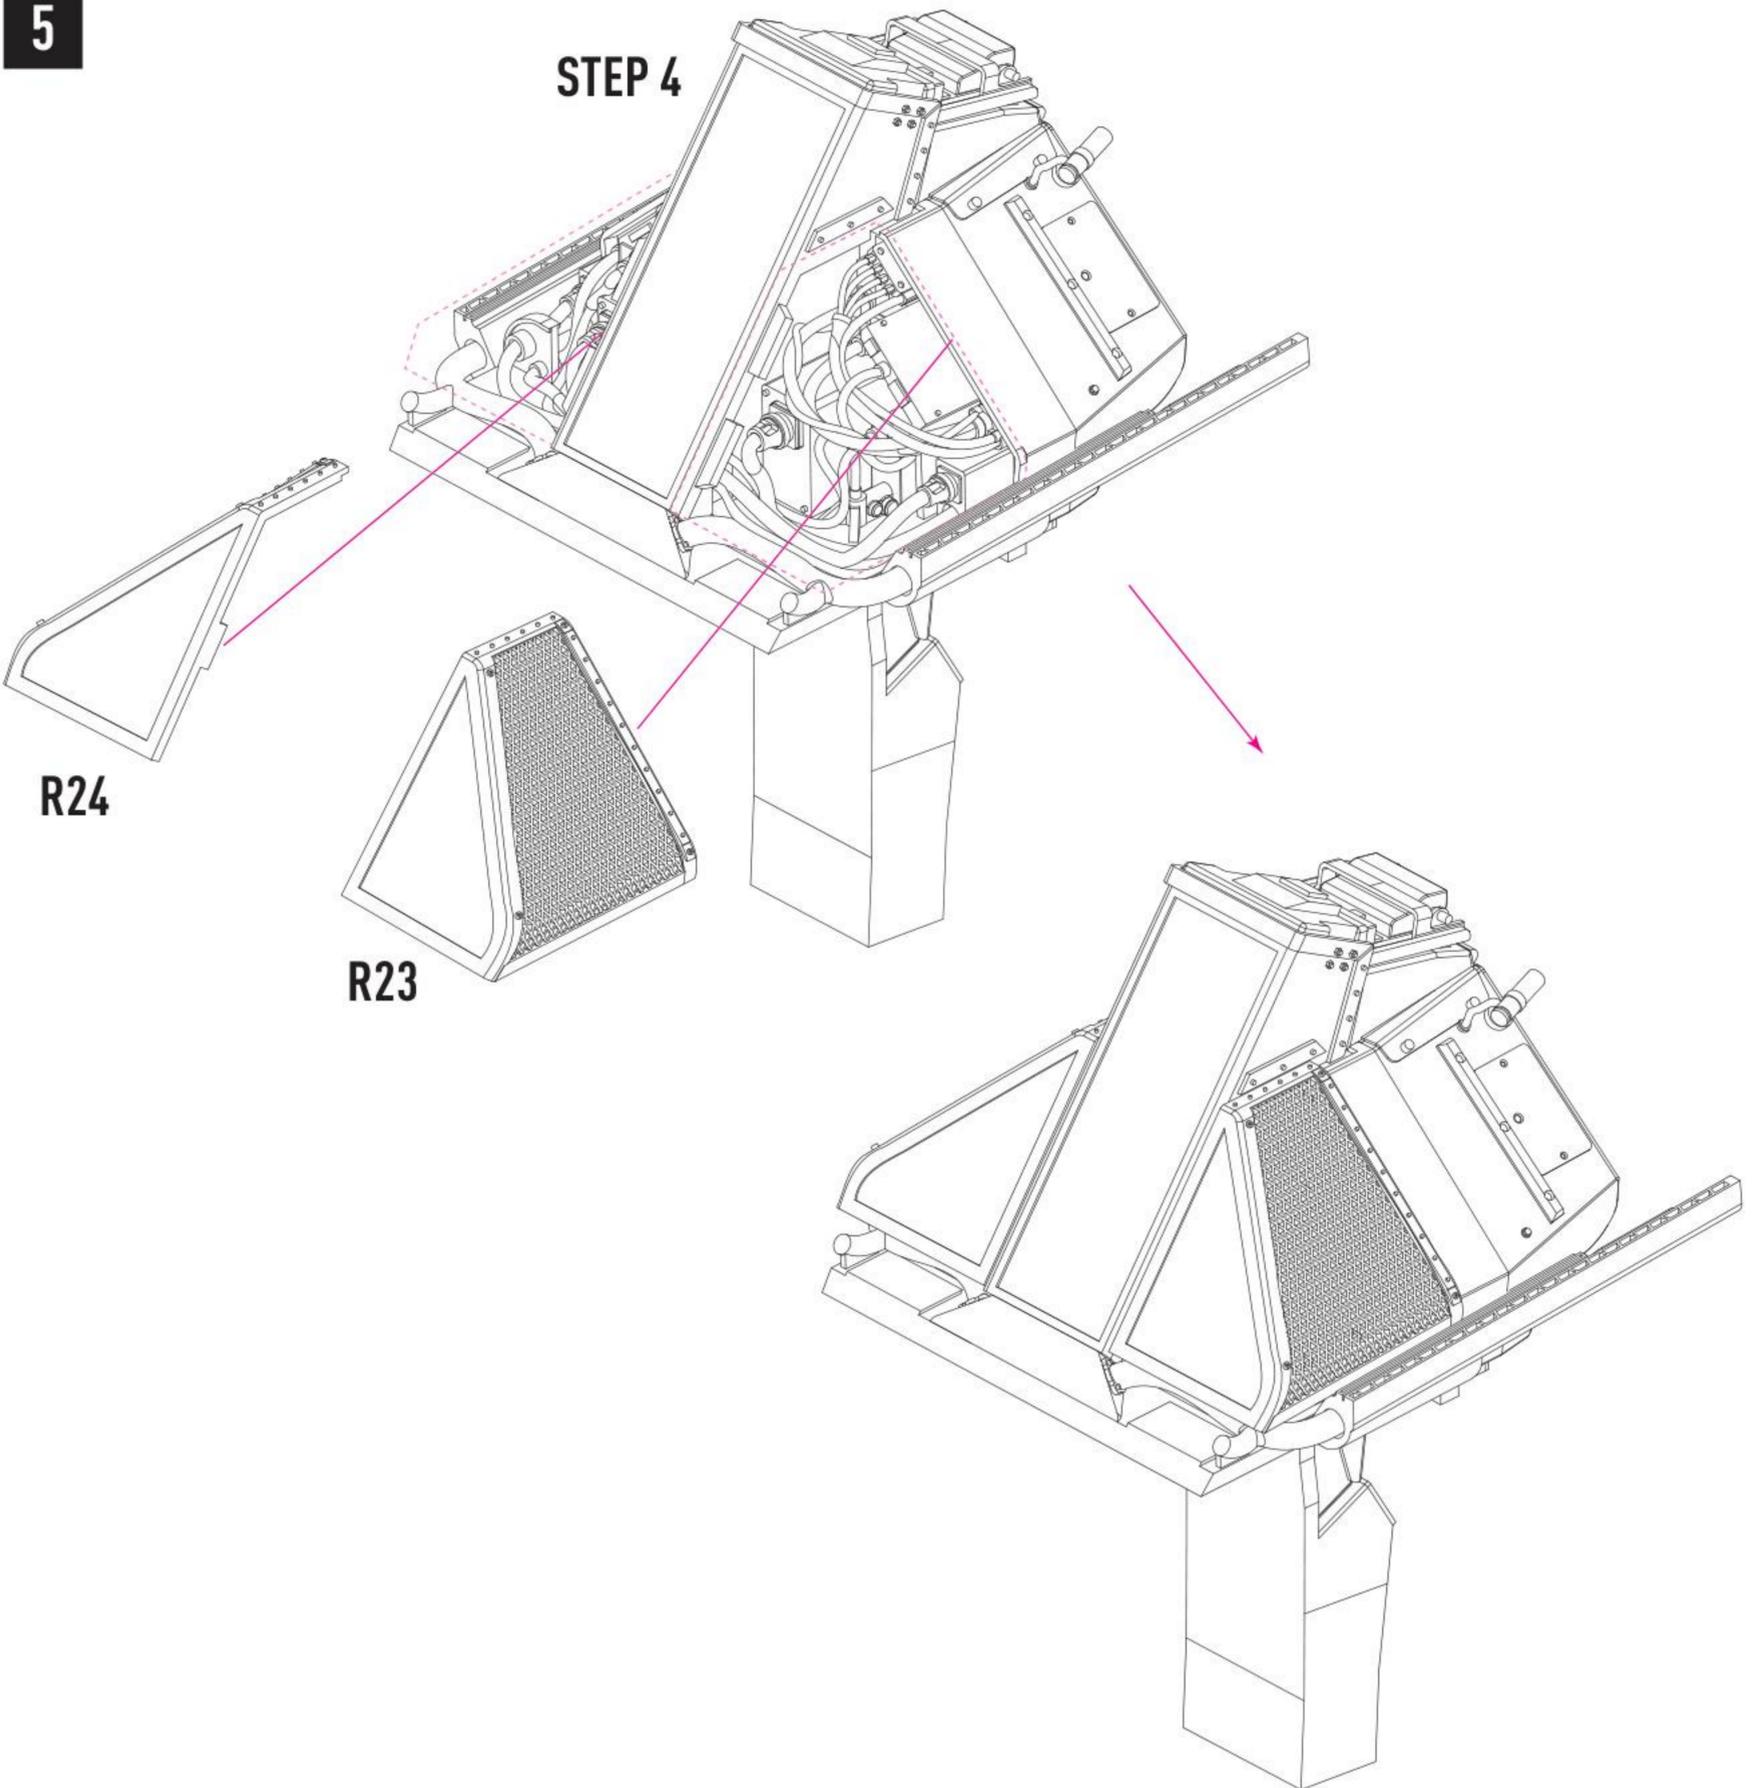

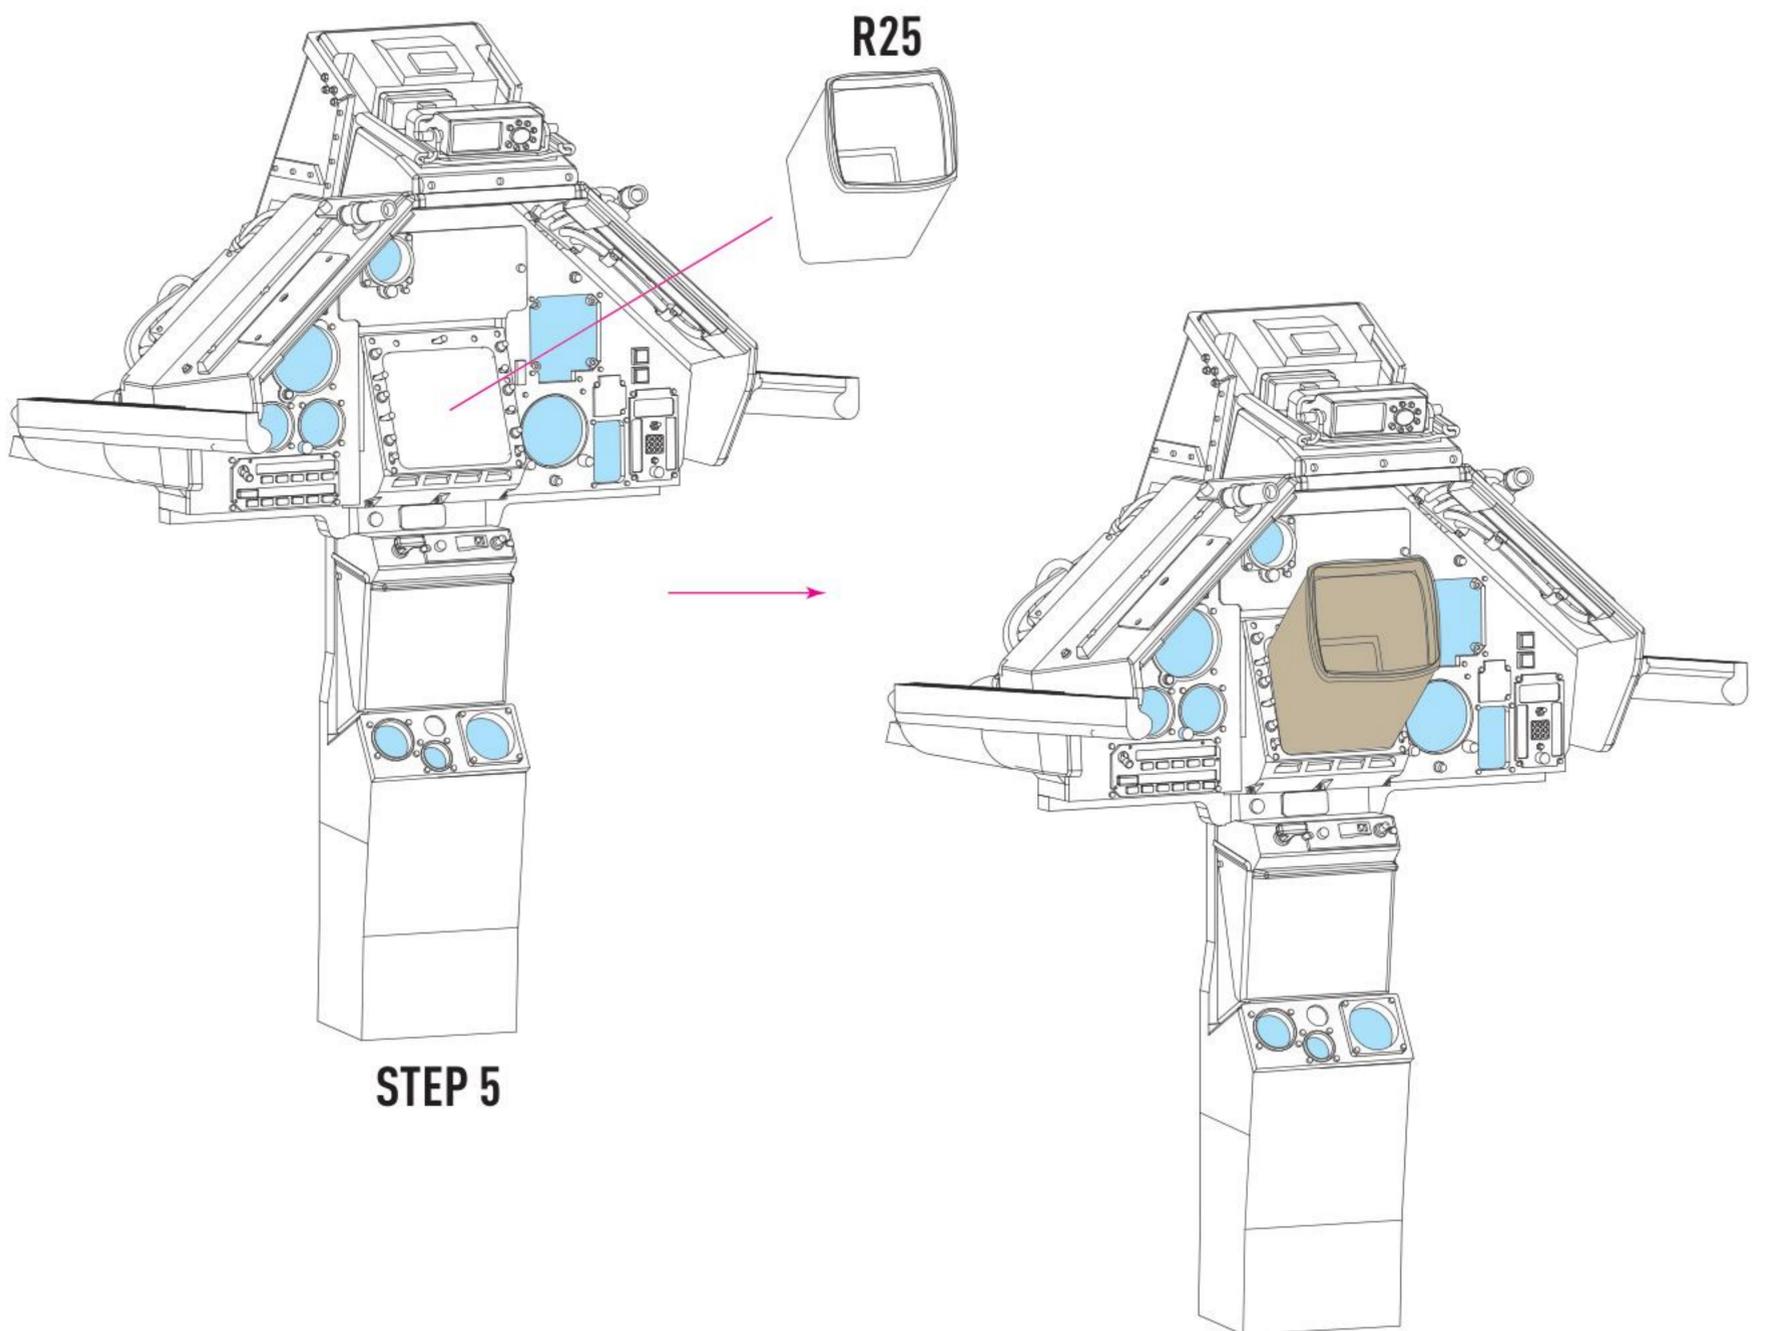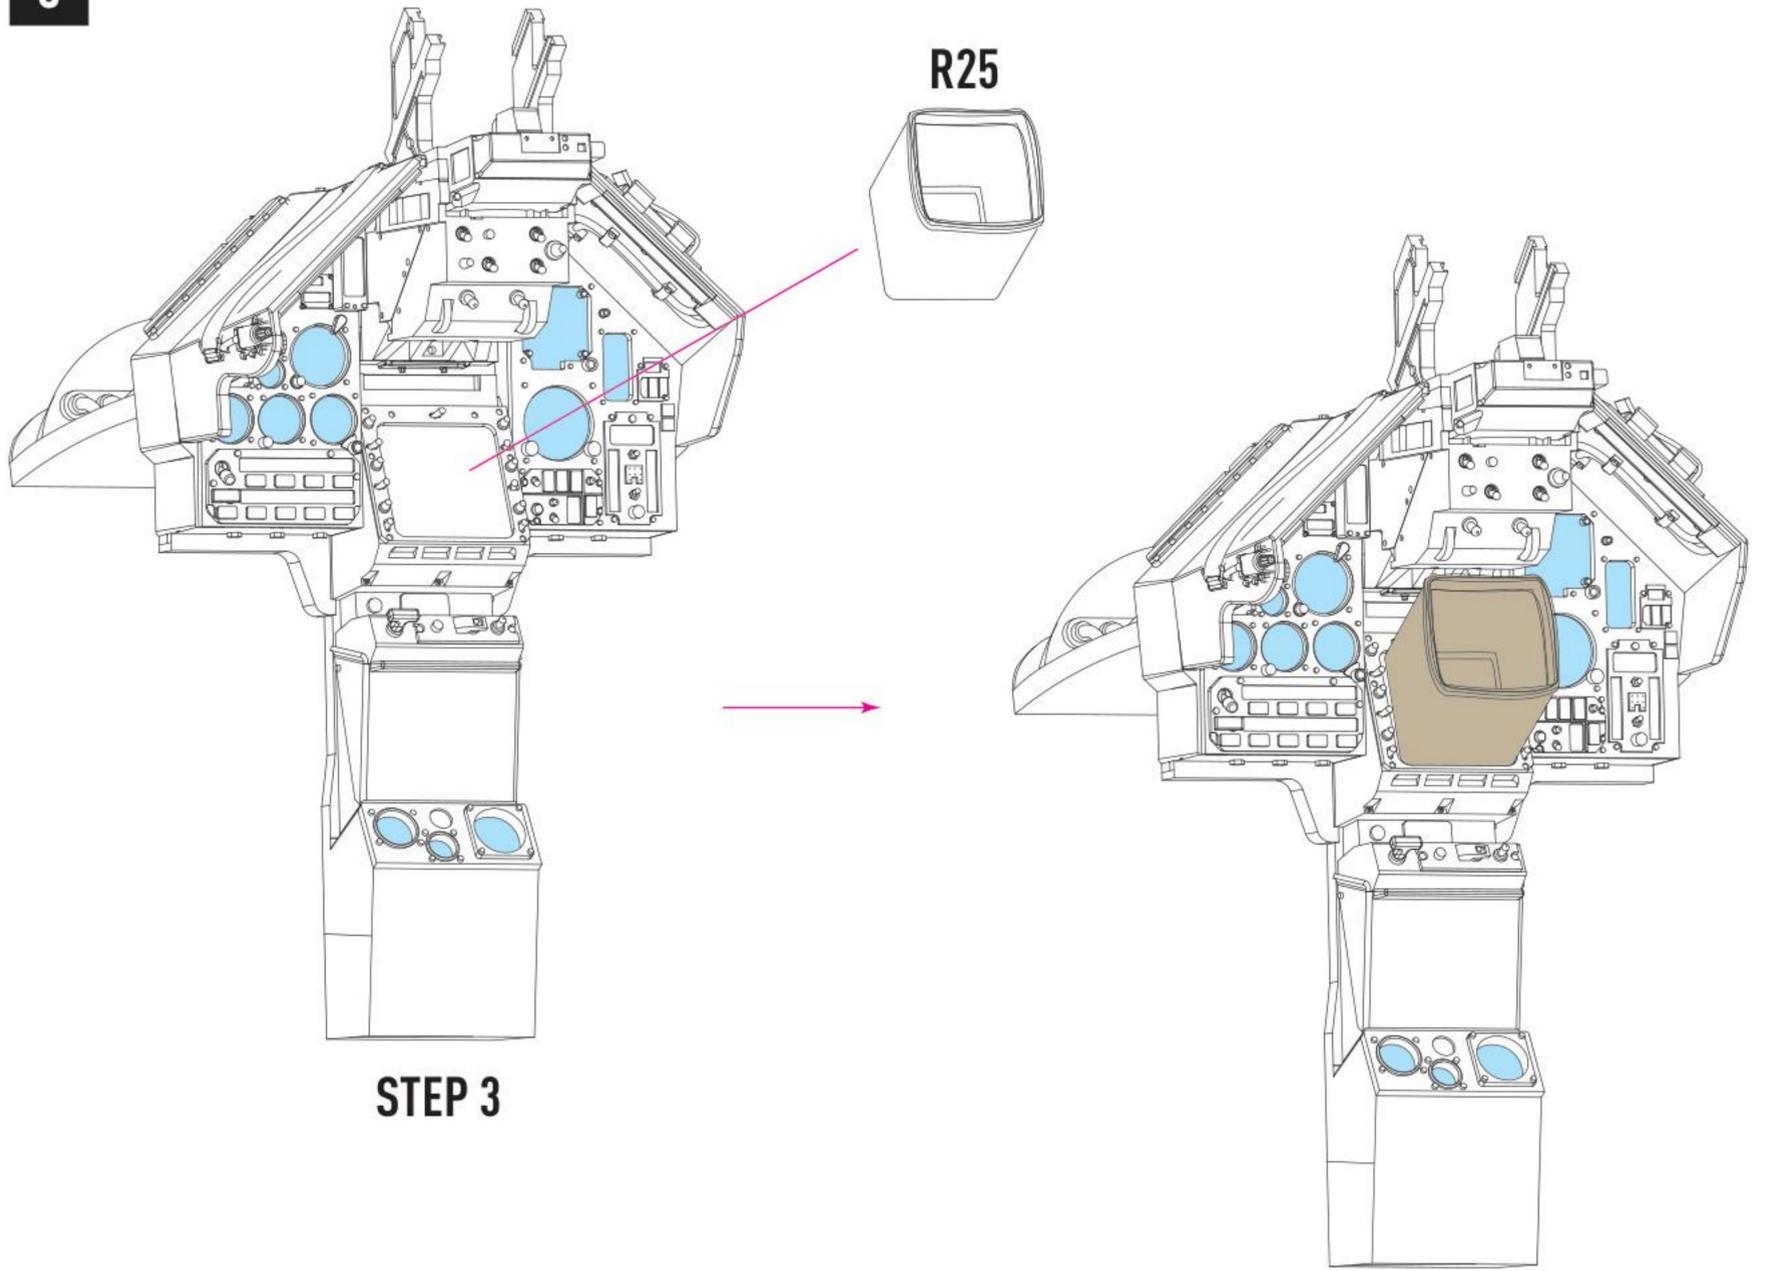


7

PART FROM
THE KIT


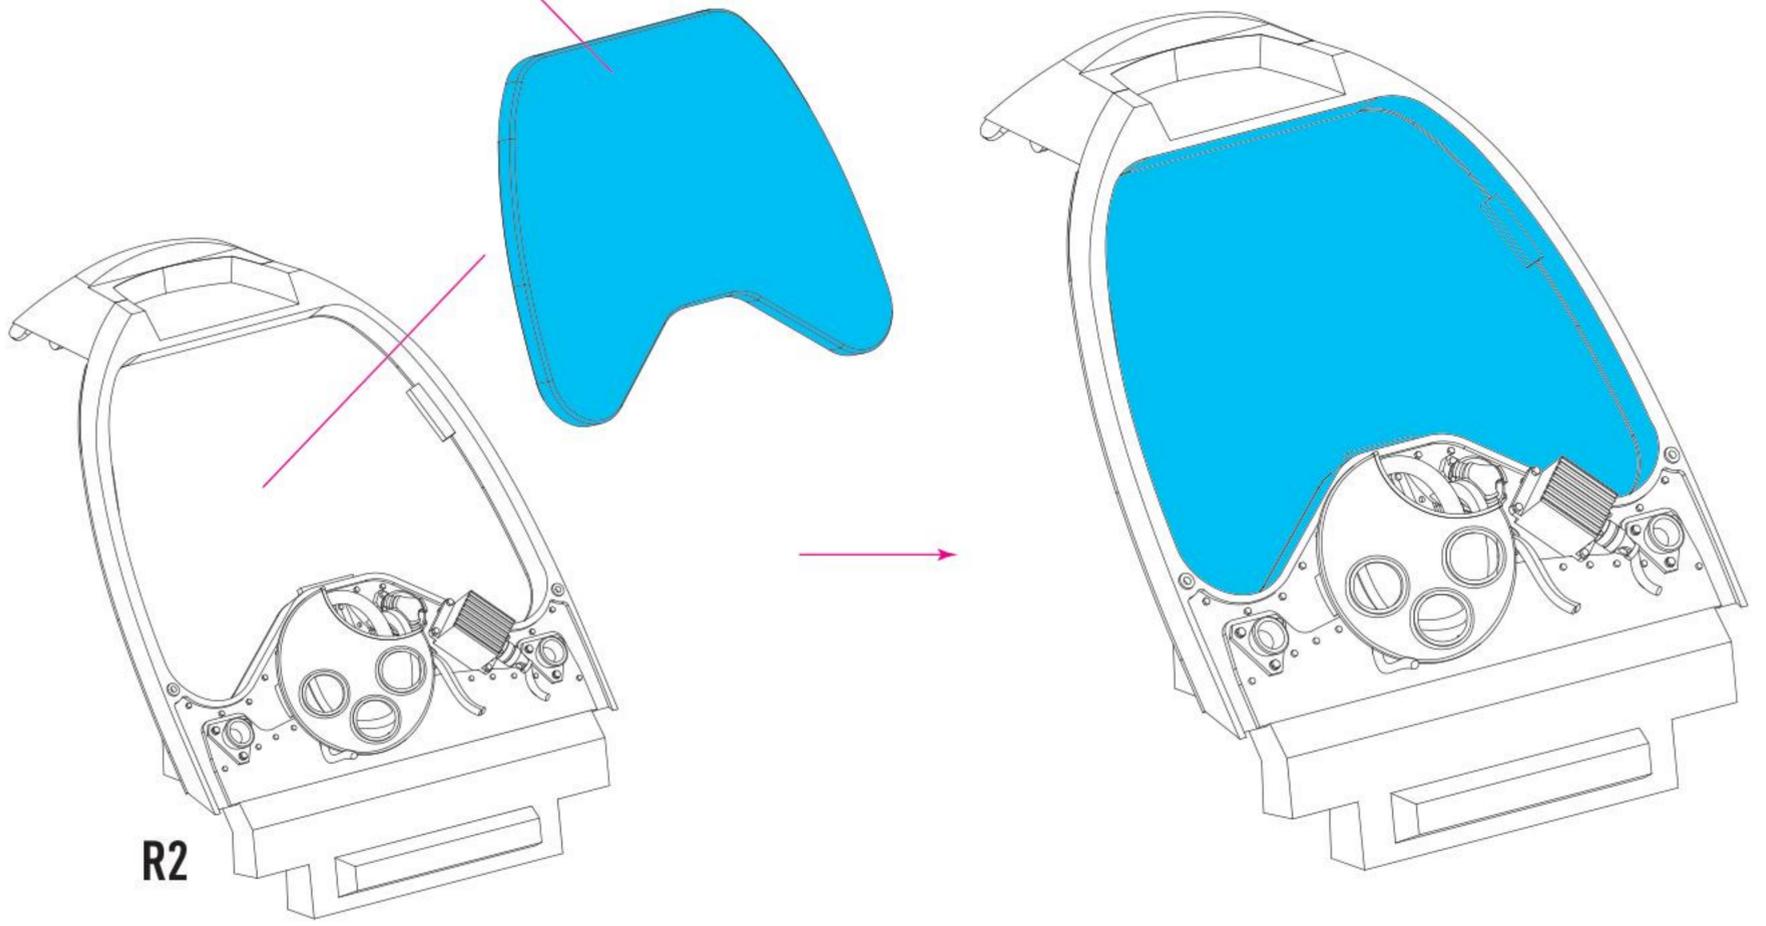


8

STEP 7

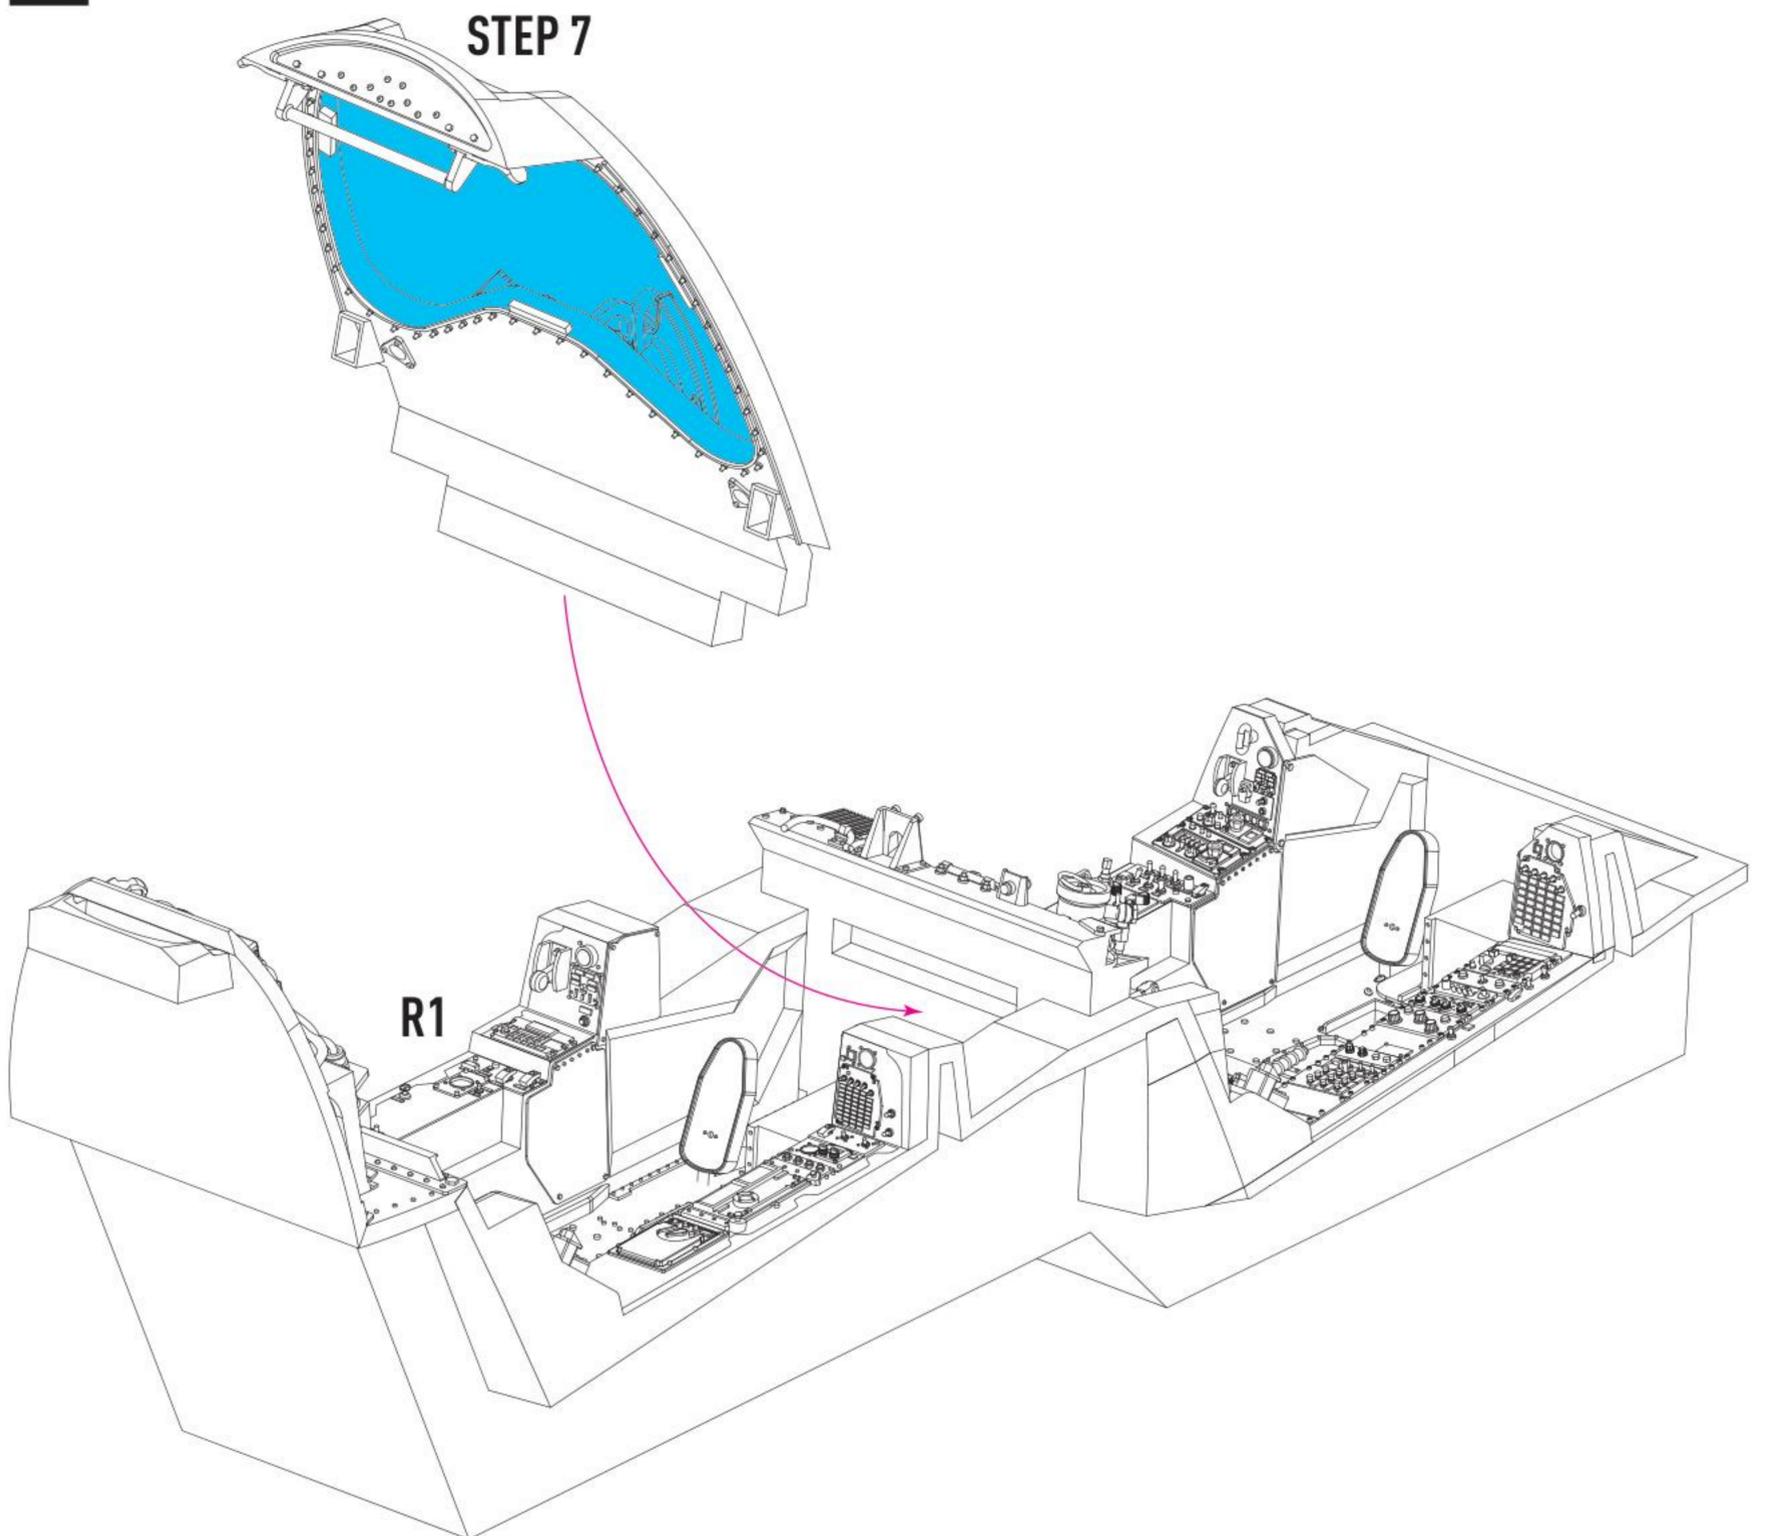


STEP 6

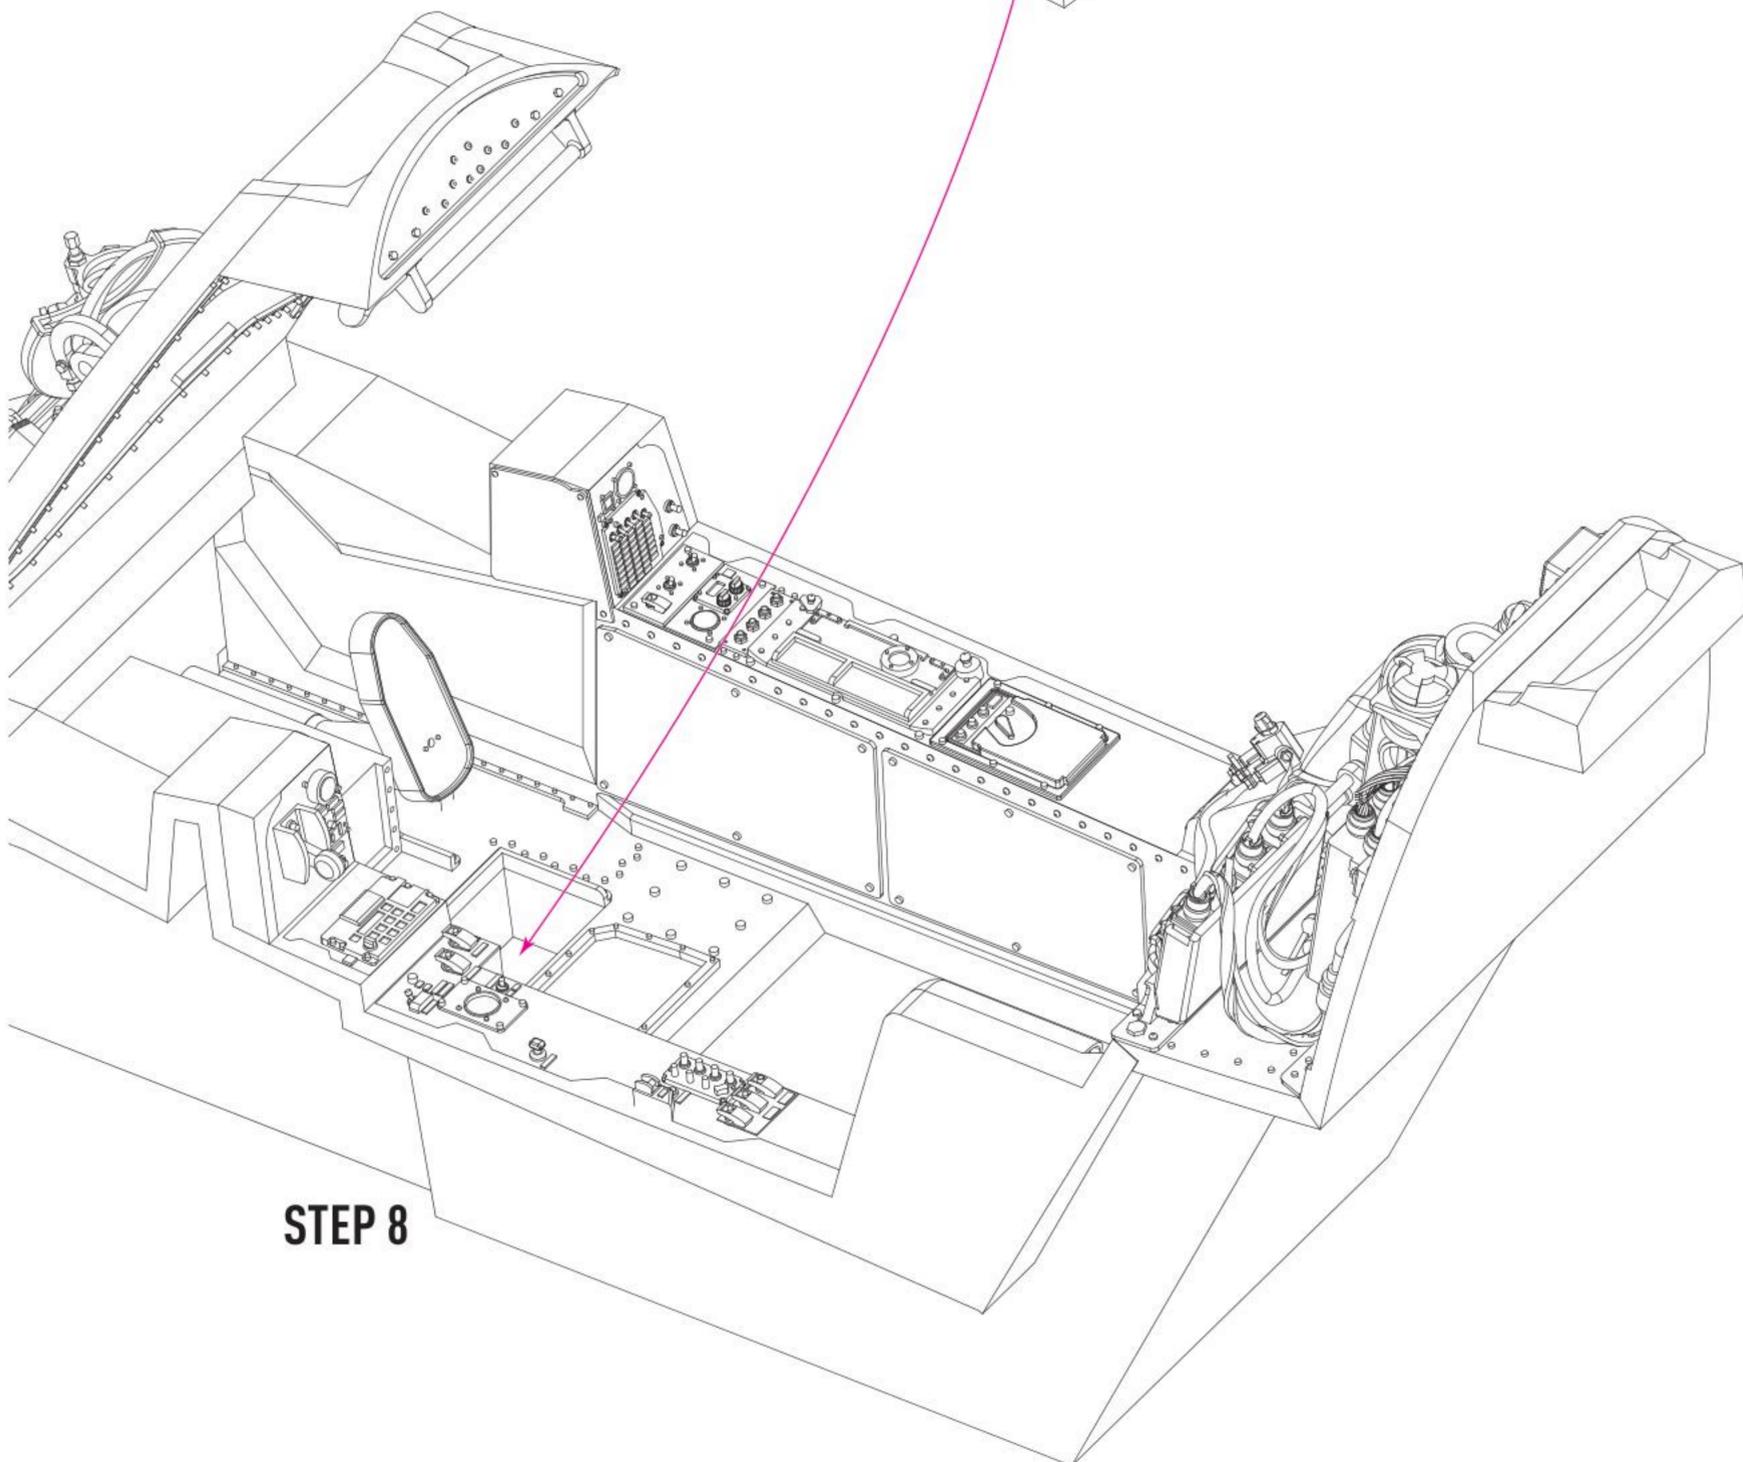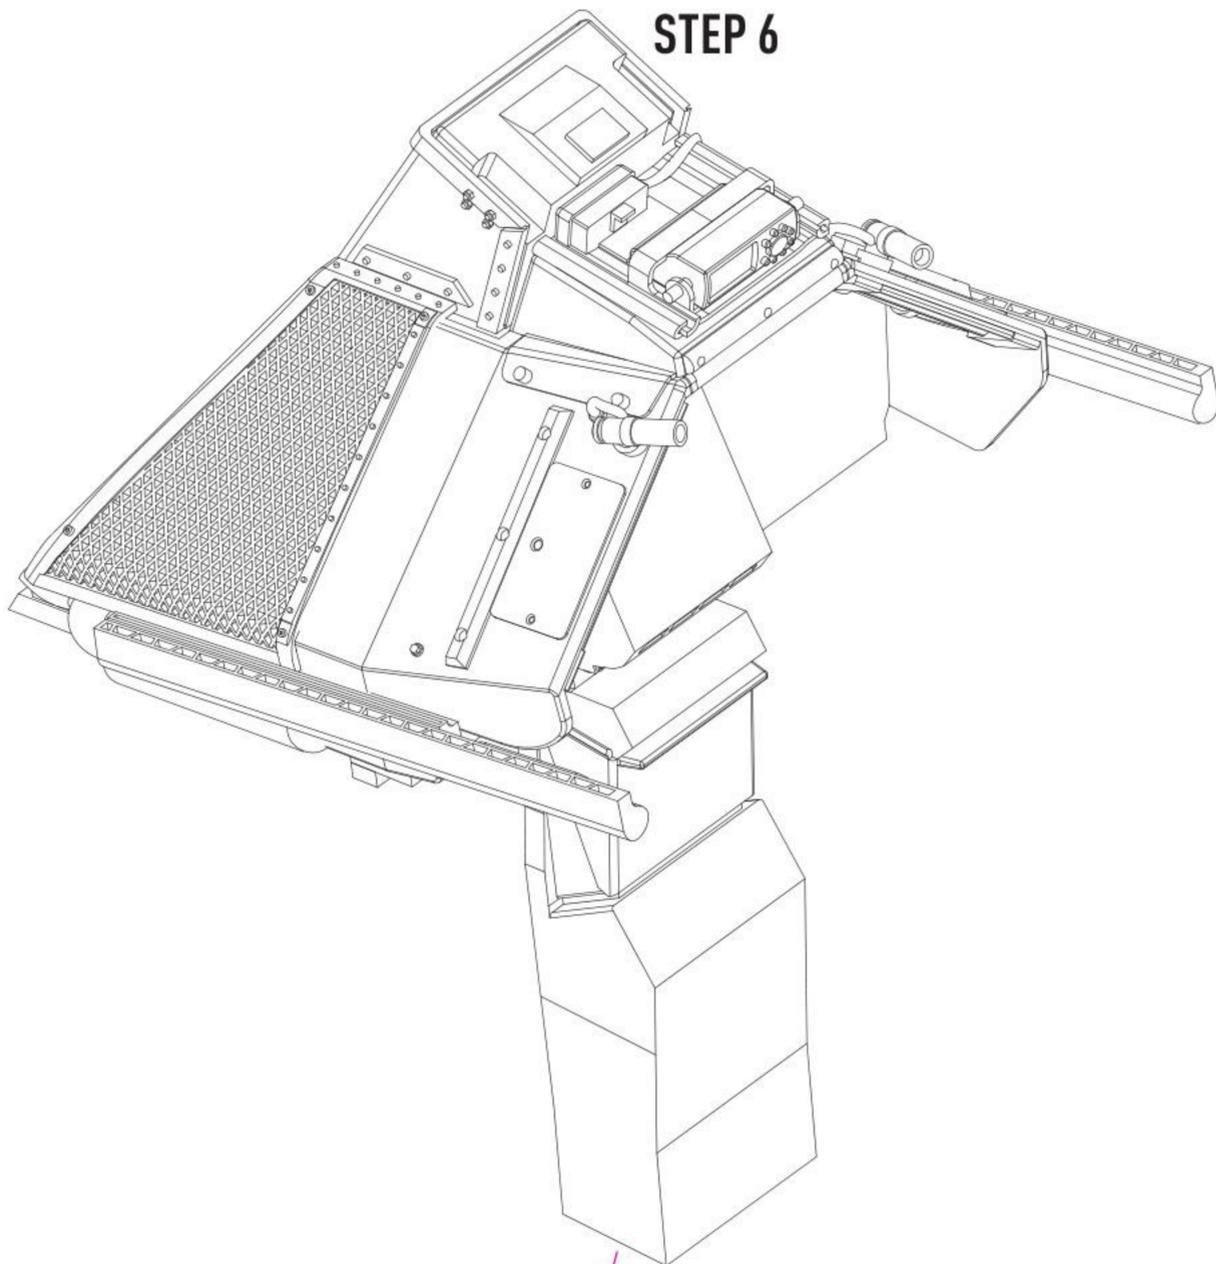


STEP 8

10

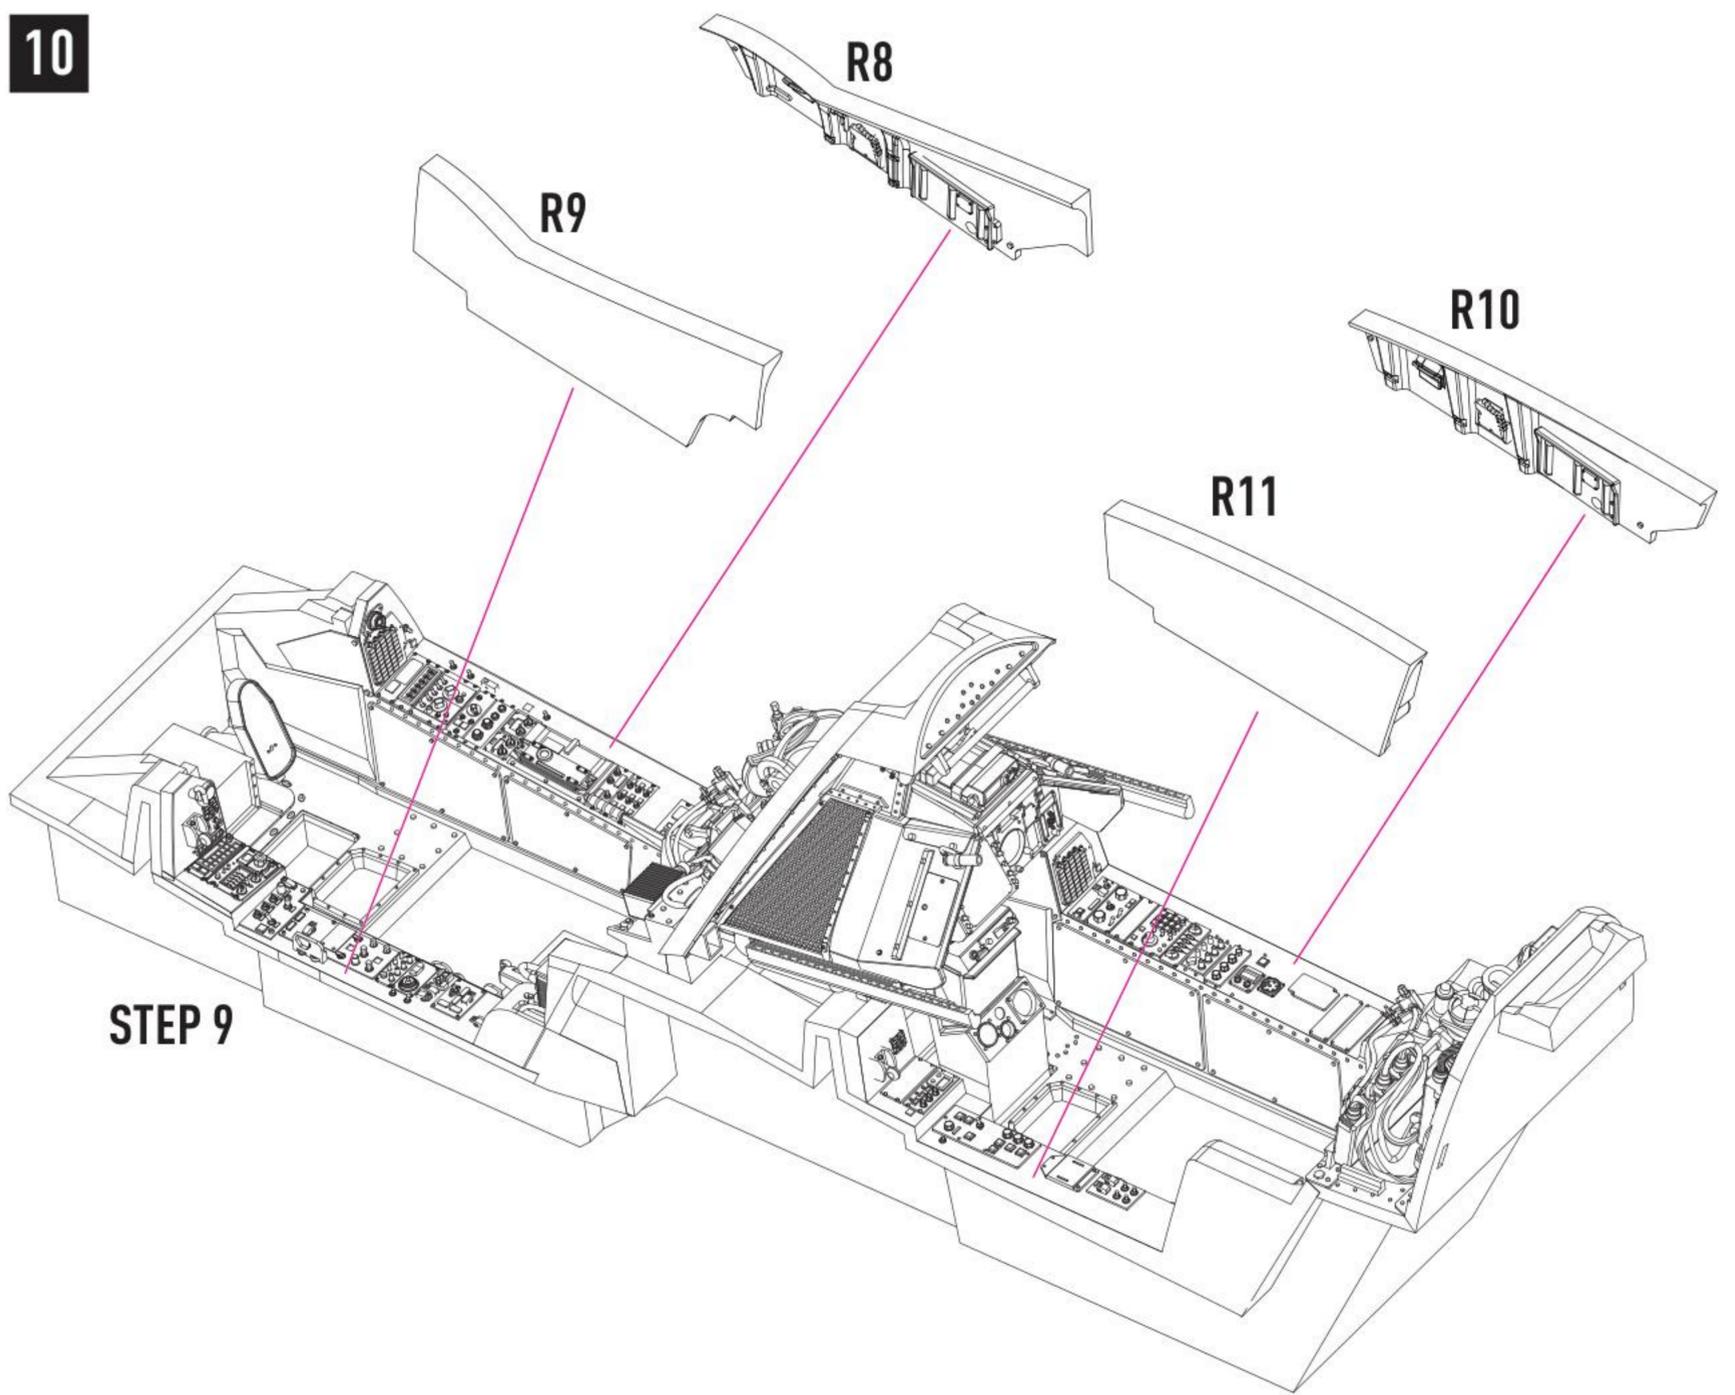


11

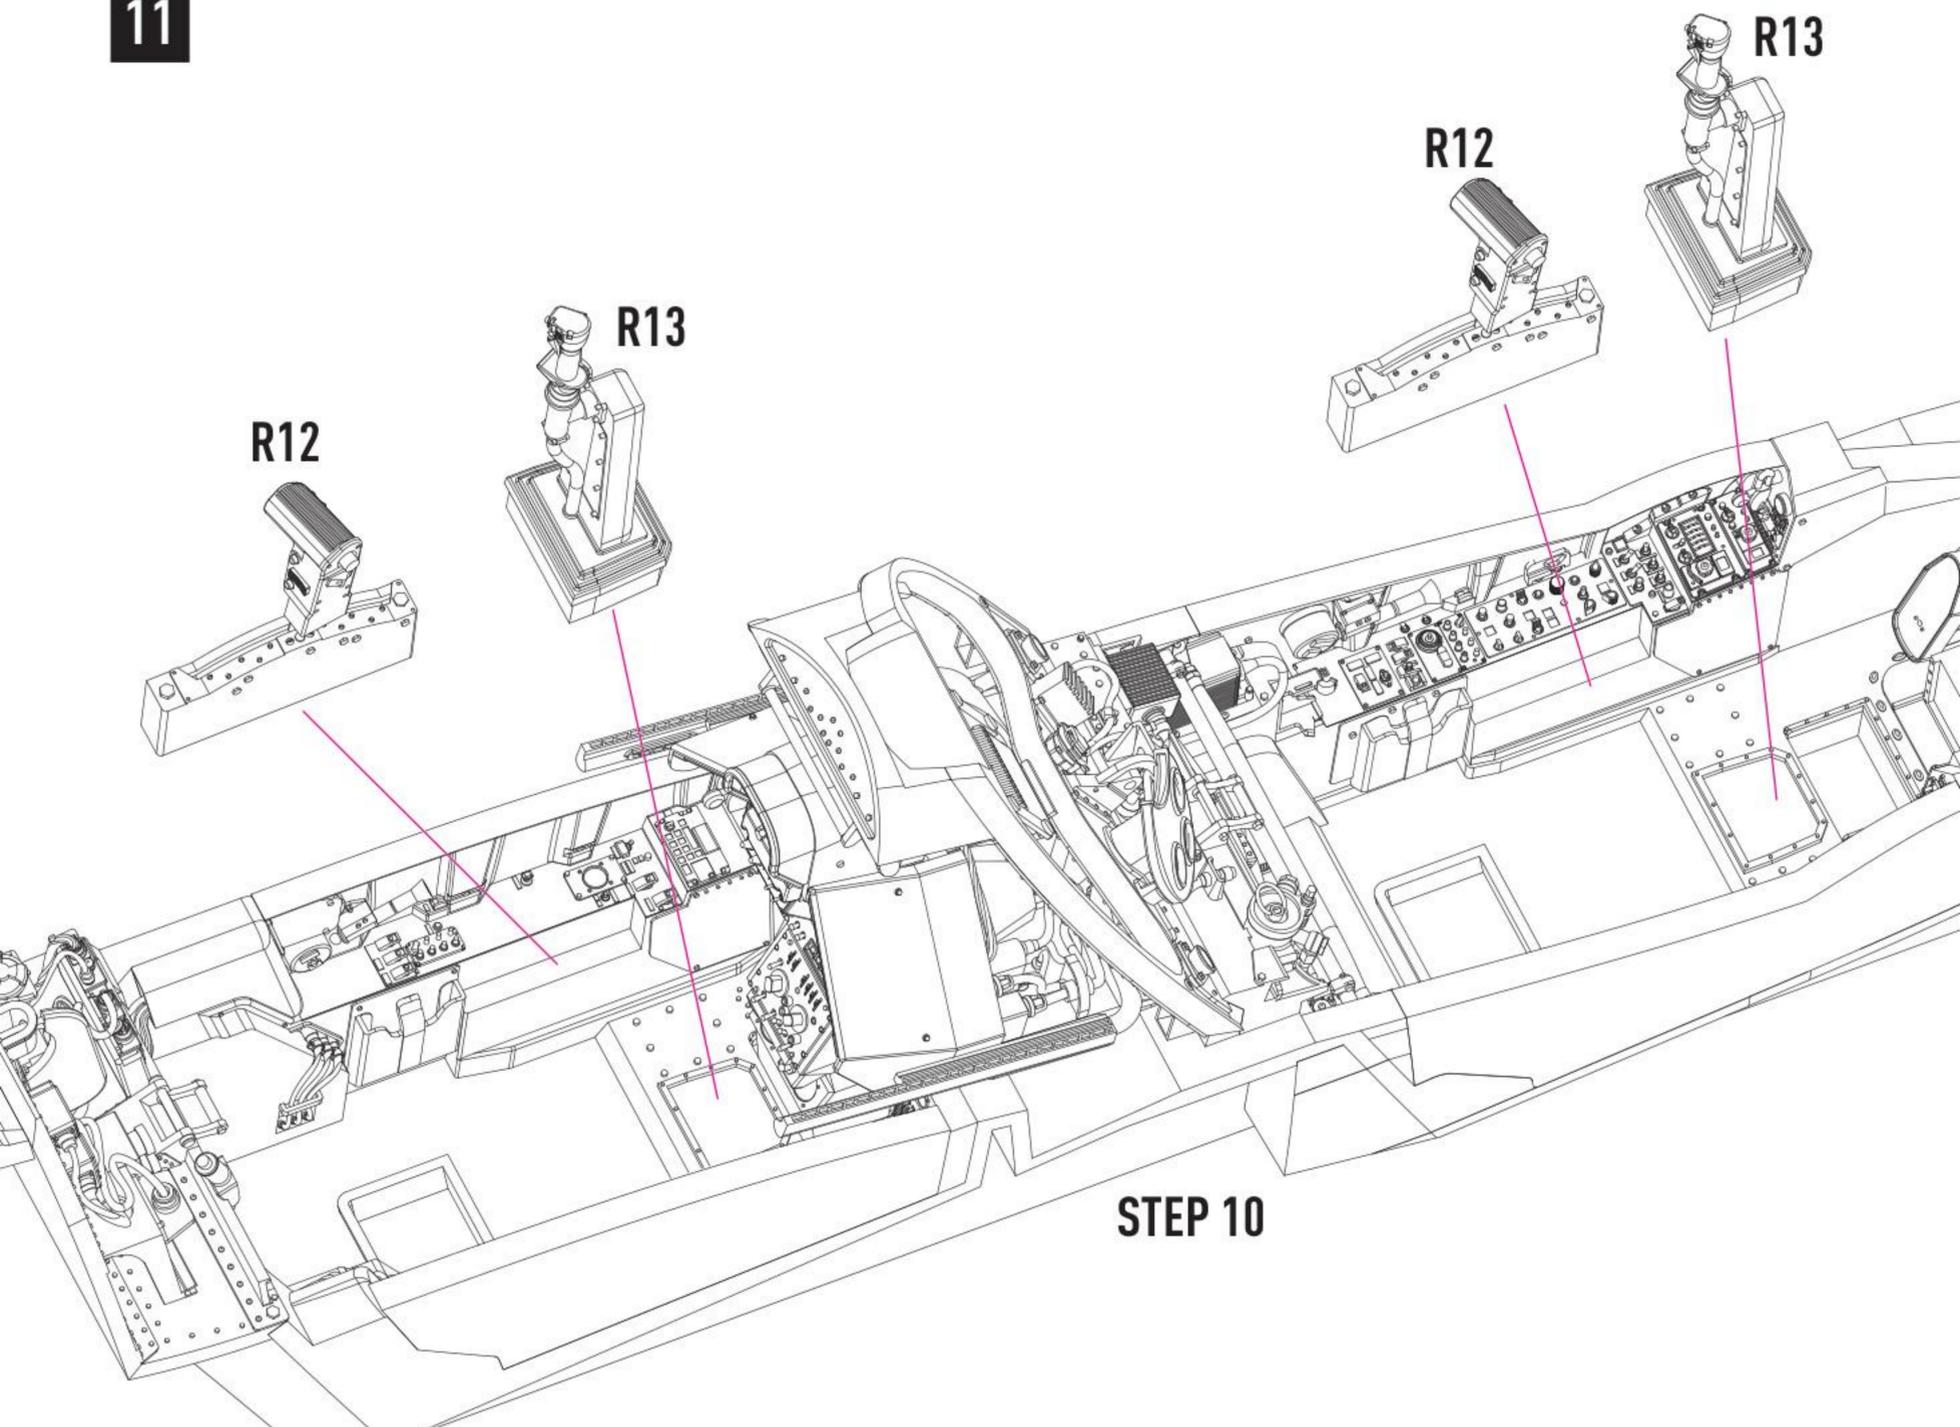


12

PART FROM THE KIT


CUT 2,4 MM

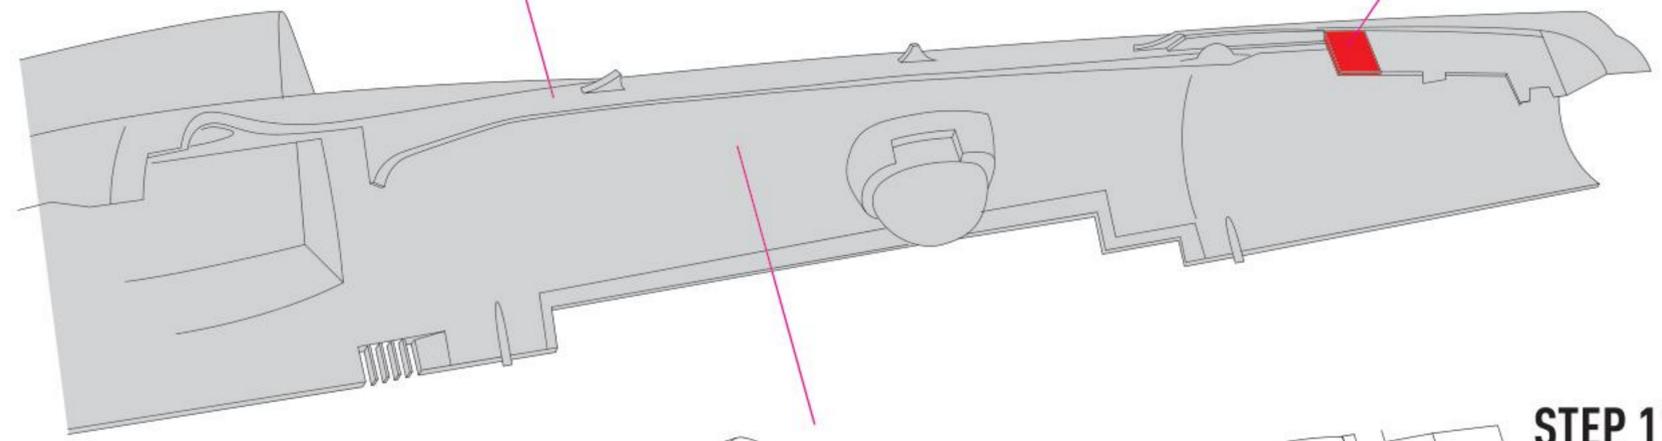


STEP 11

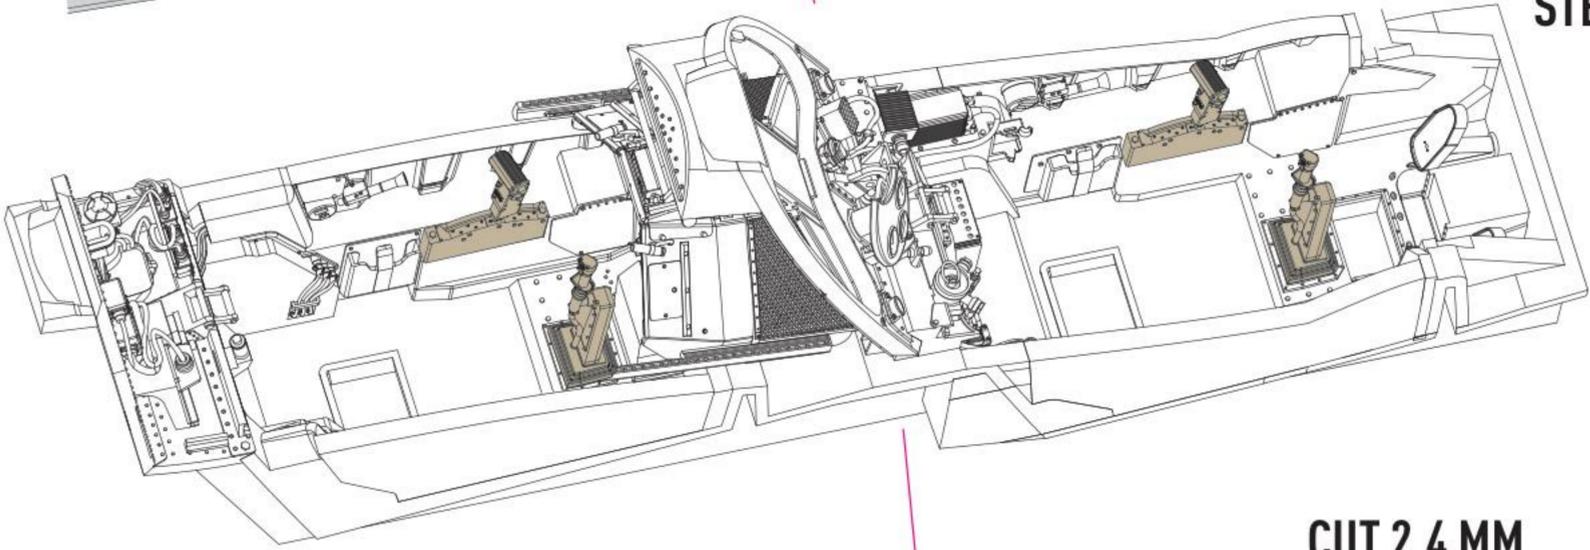


CUT 2,4 MM

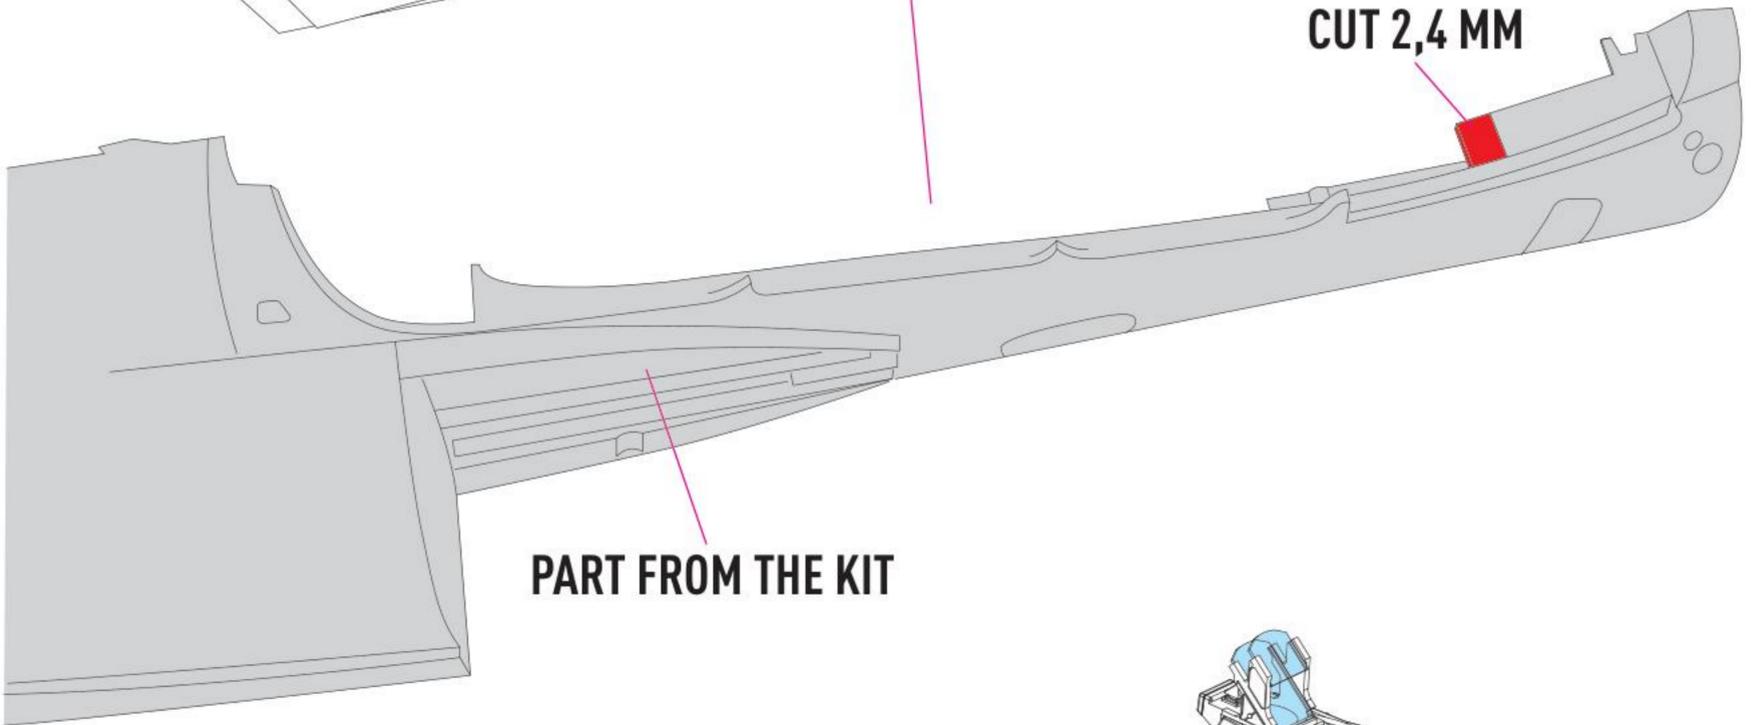


PART FROM THE KIT

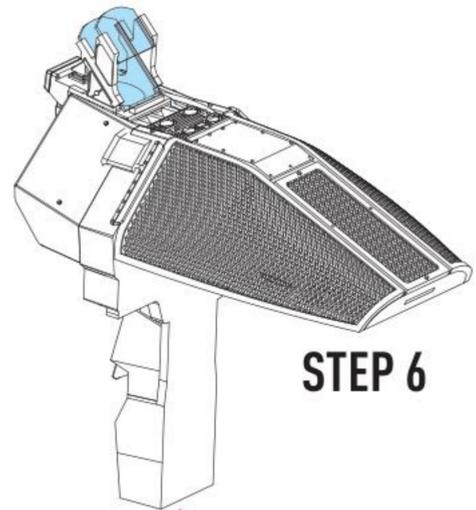


STEP 6

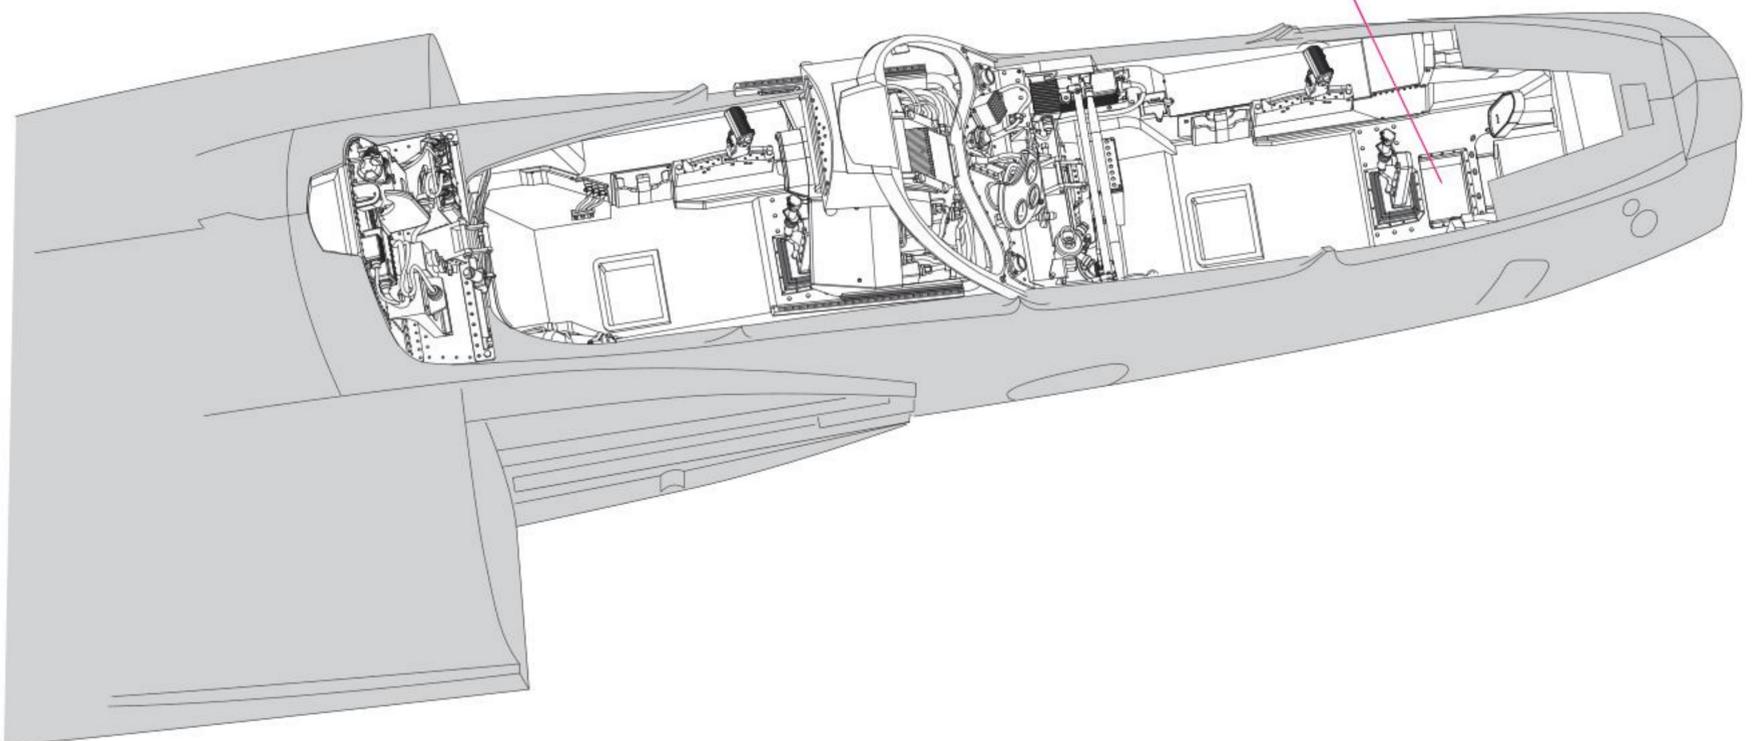

13

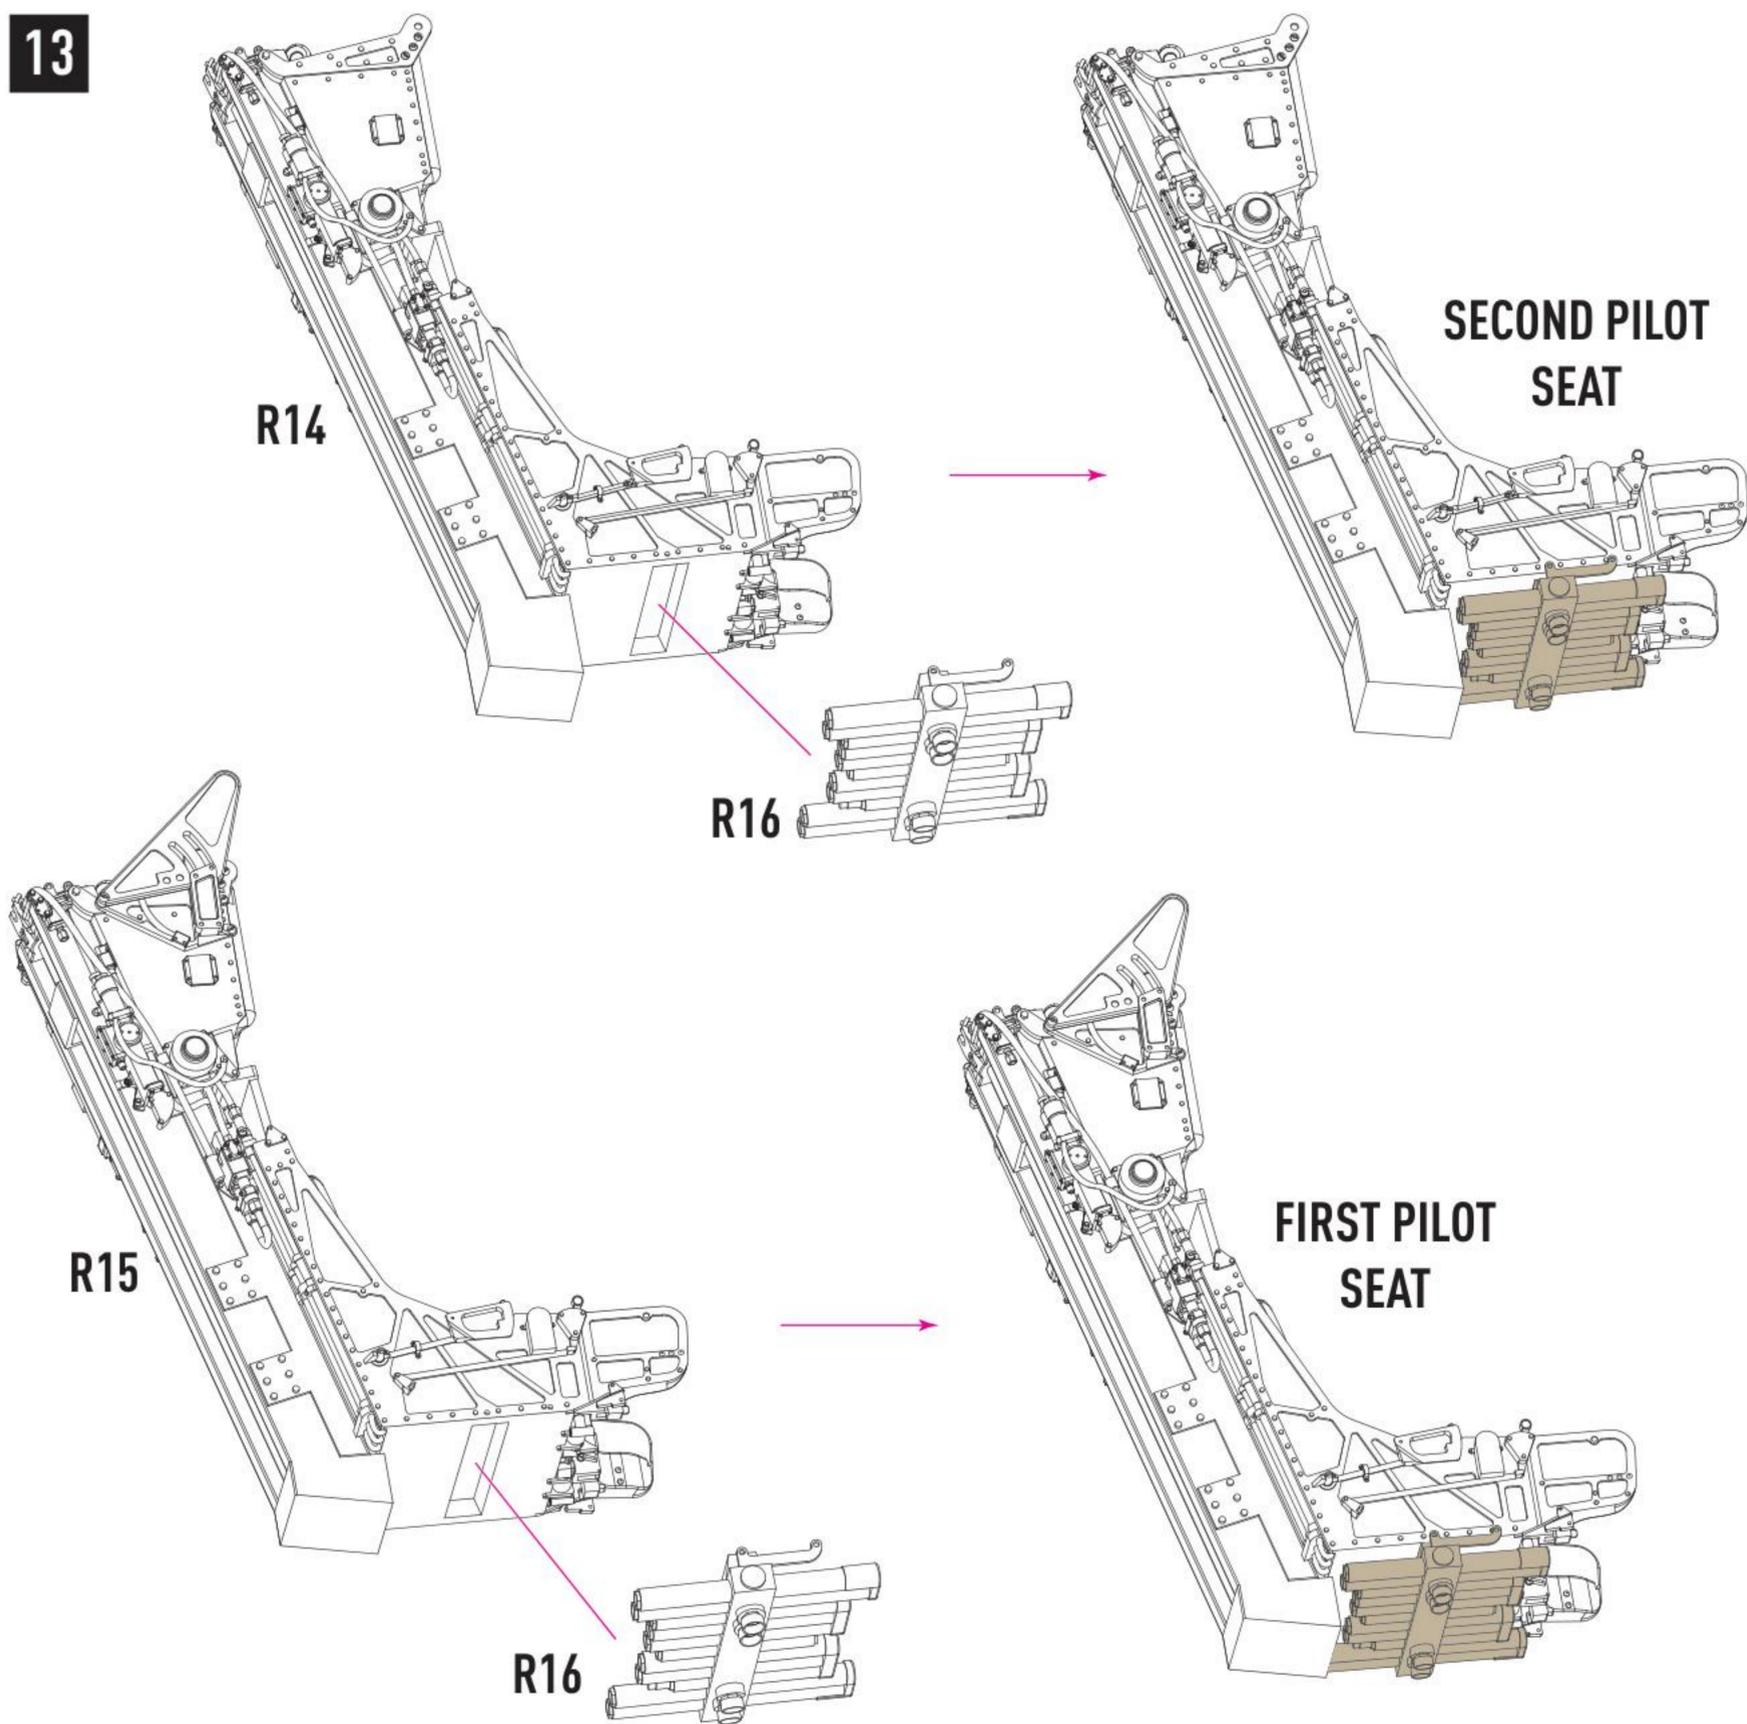


14

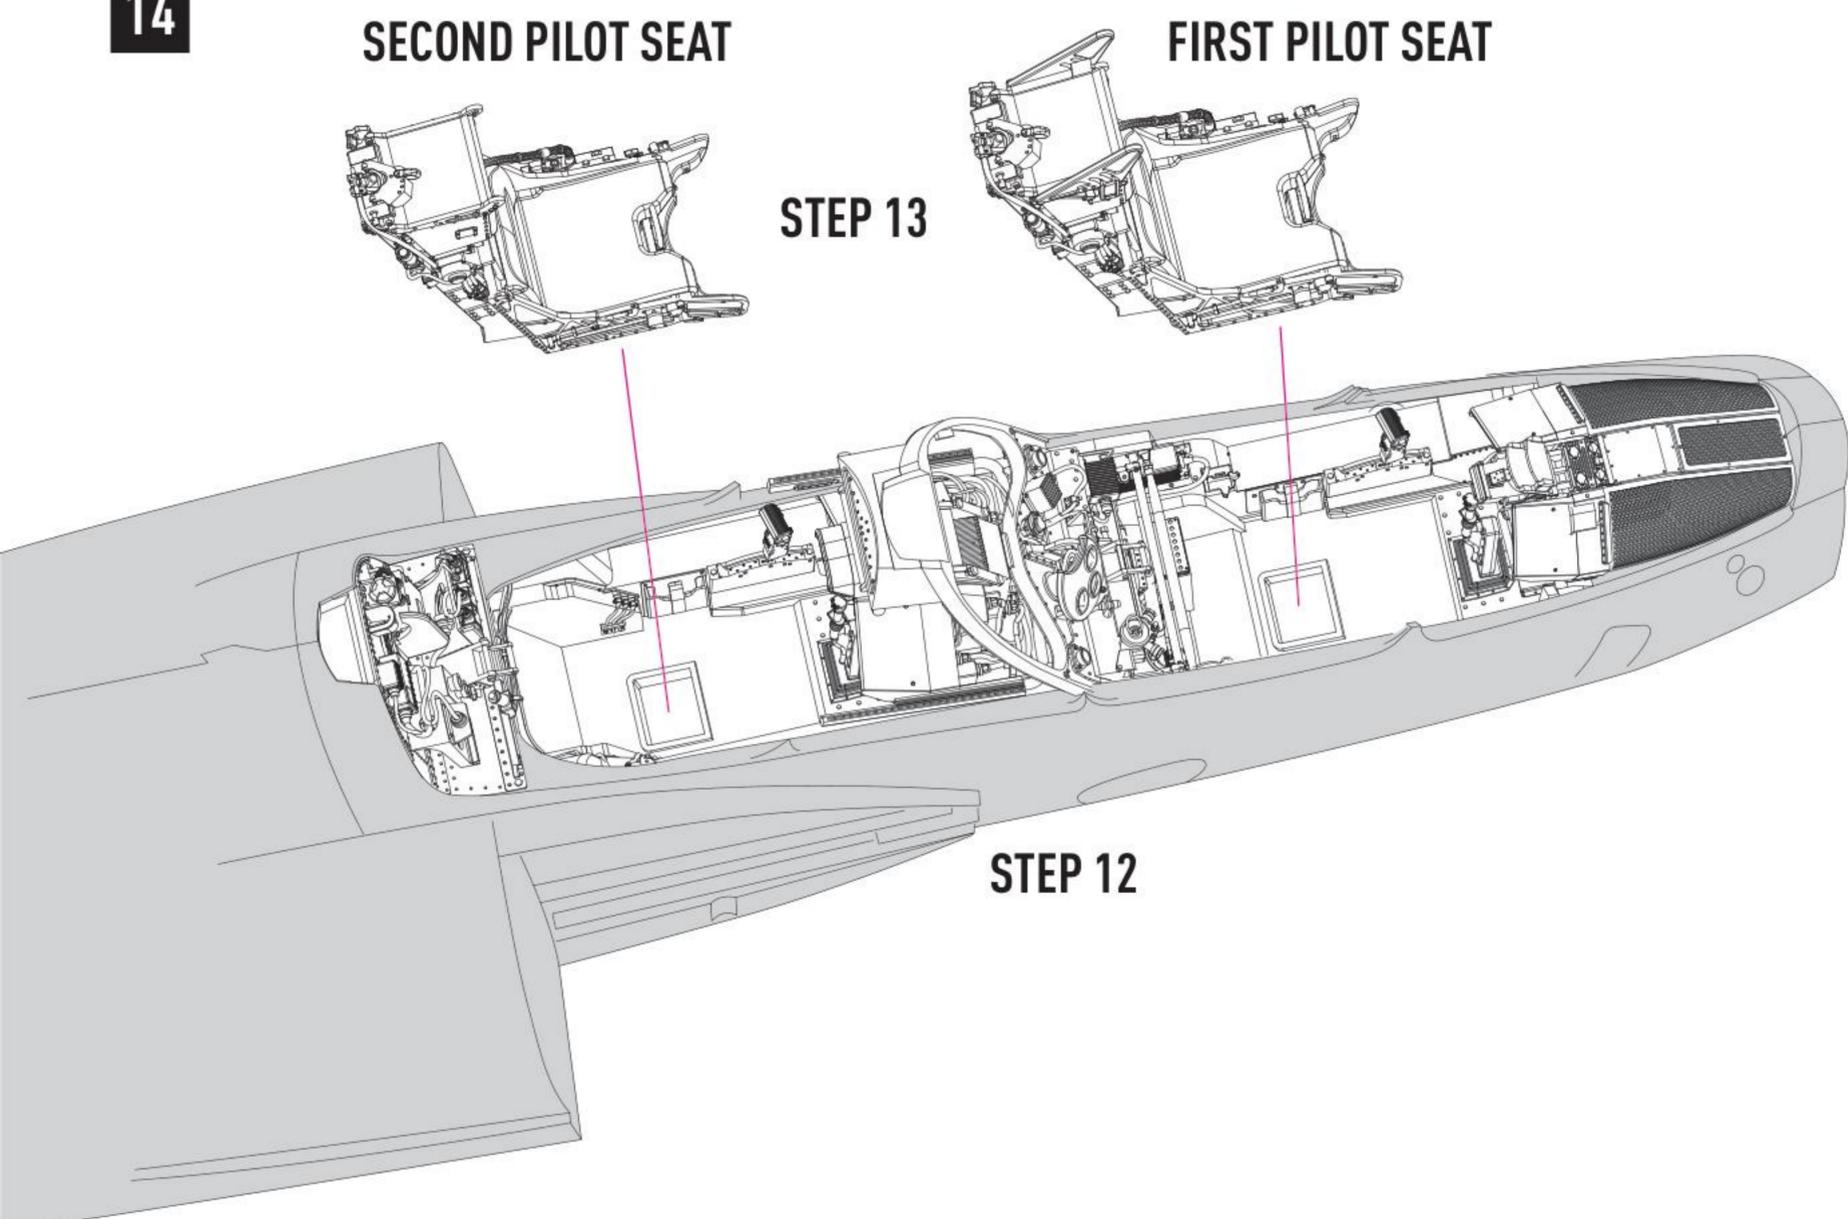

R17
FOR CLOSED
COCKPIT

R18
FOR OPEN
COCKPIT

?

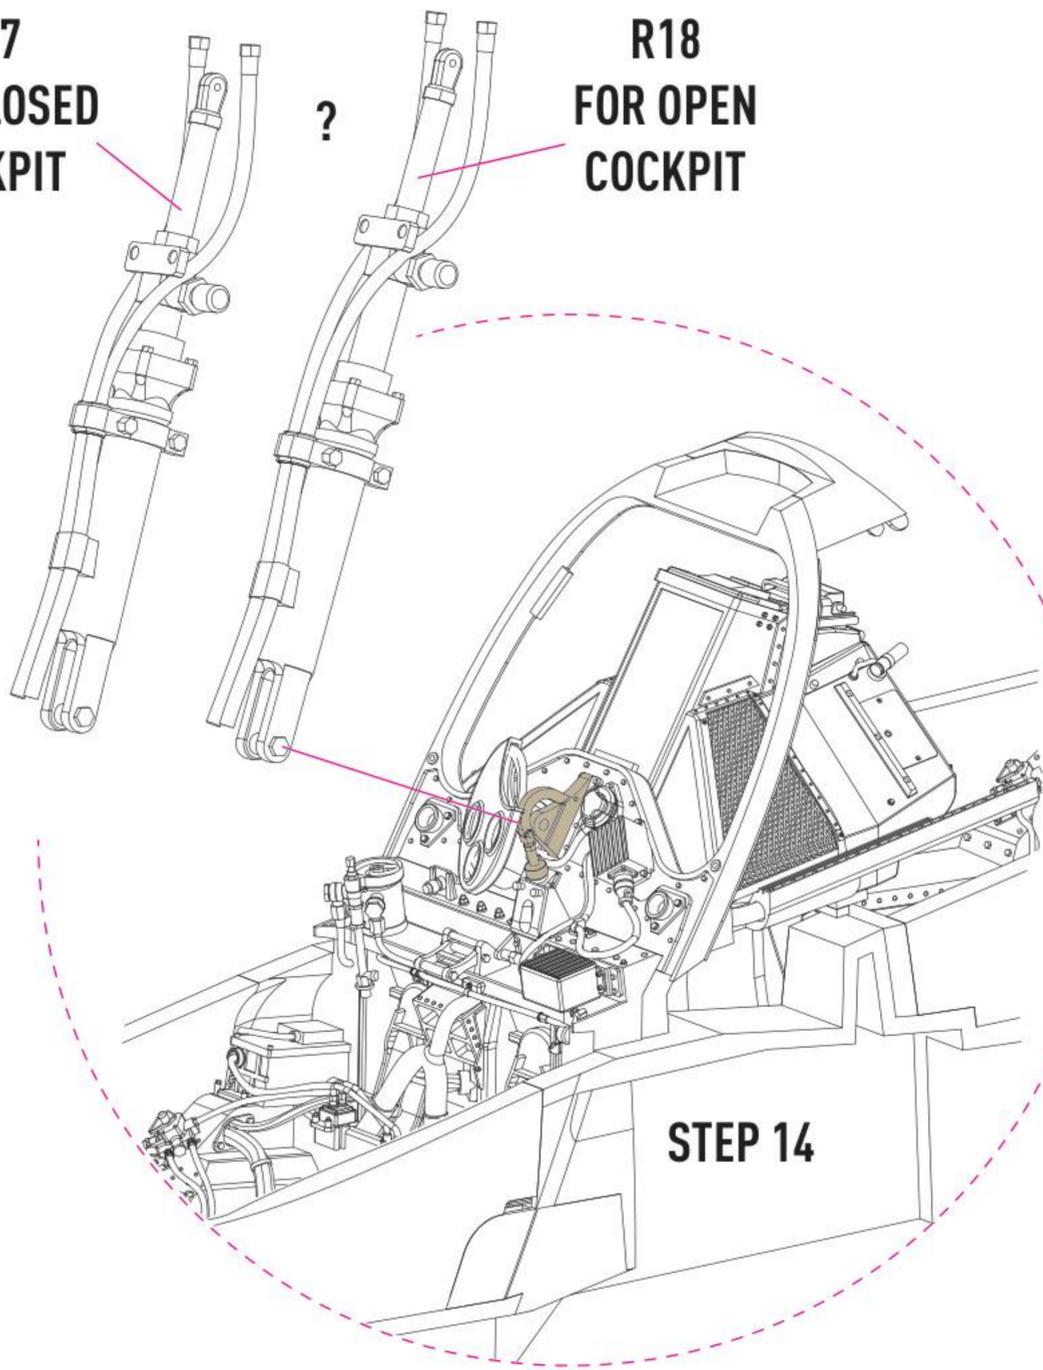


STEP 14

R19
FOR CLOSED
COCKPIT

R20
FOR OPEN
COCKPIT

?

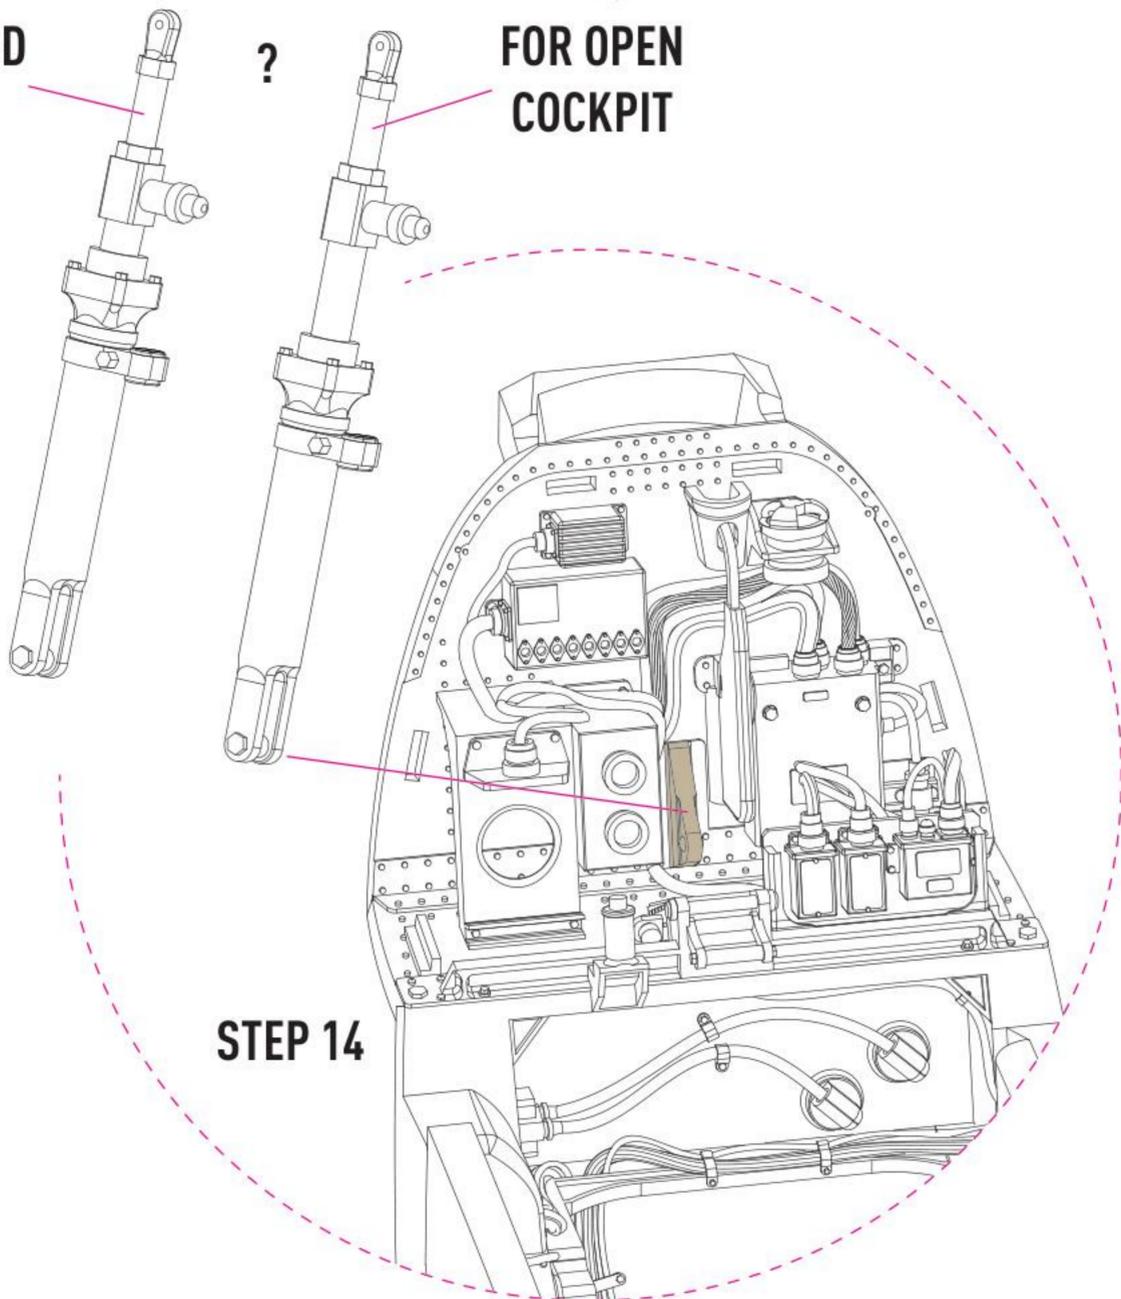


STEP 14




STEP 15

R21

R22

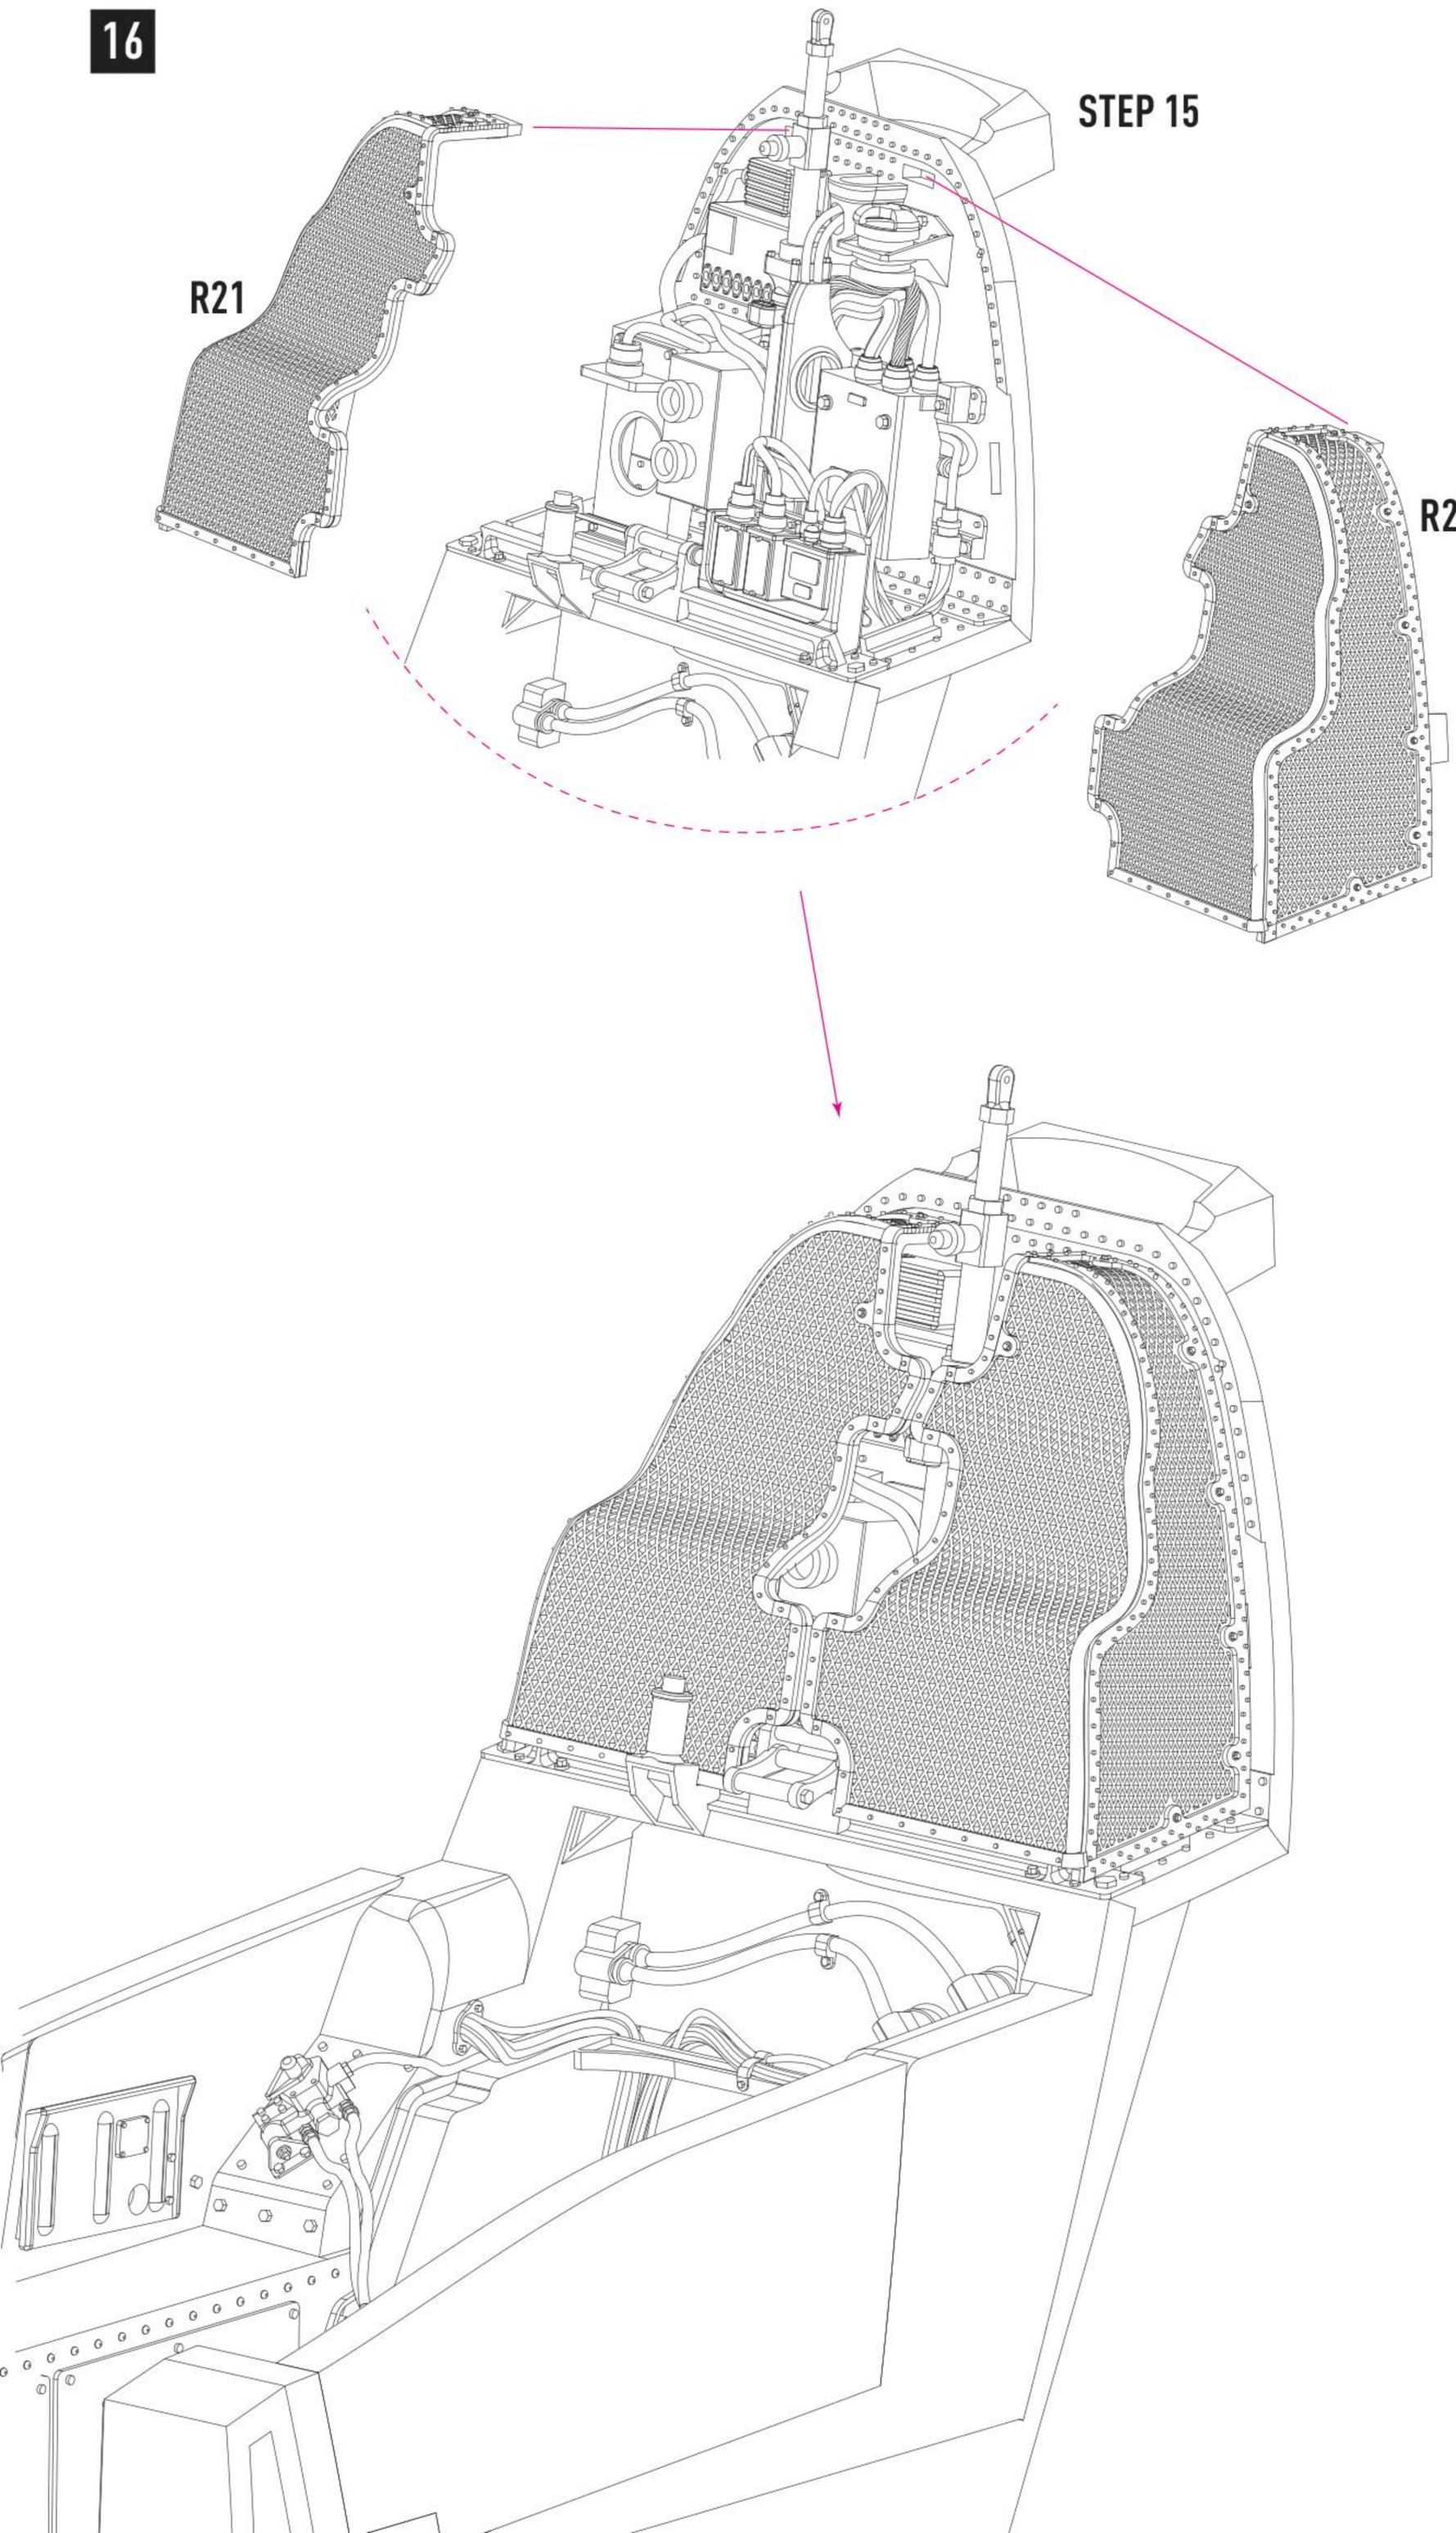

R7

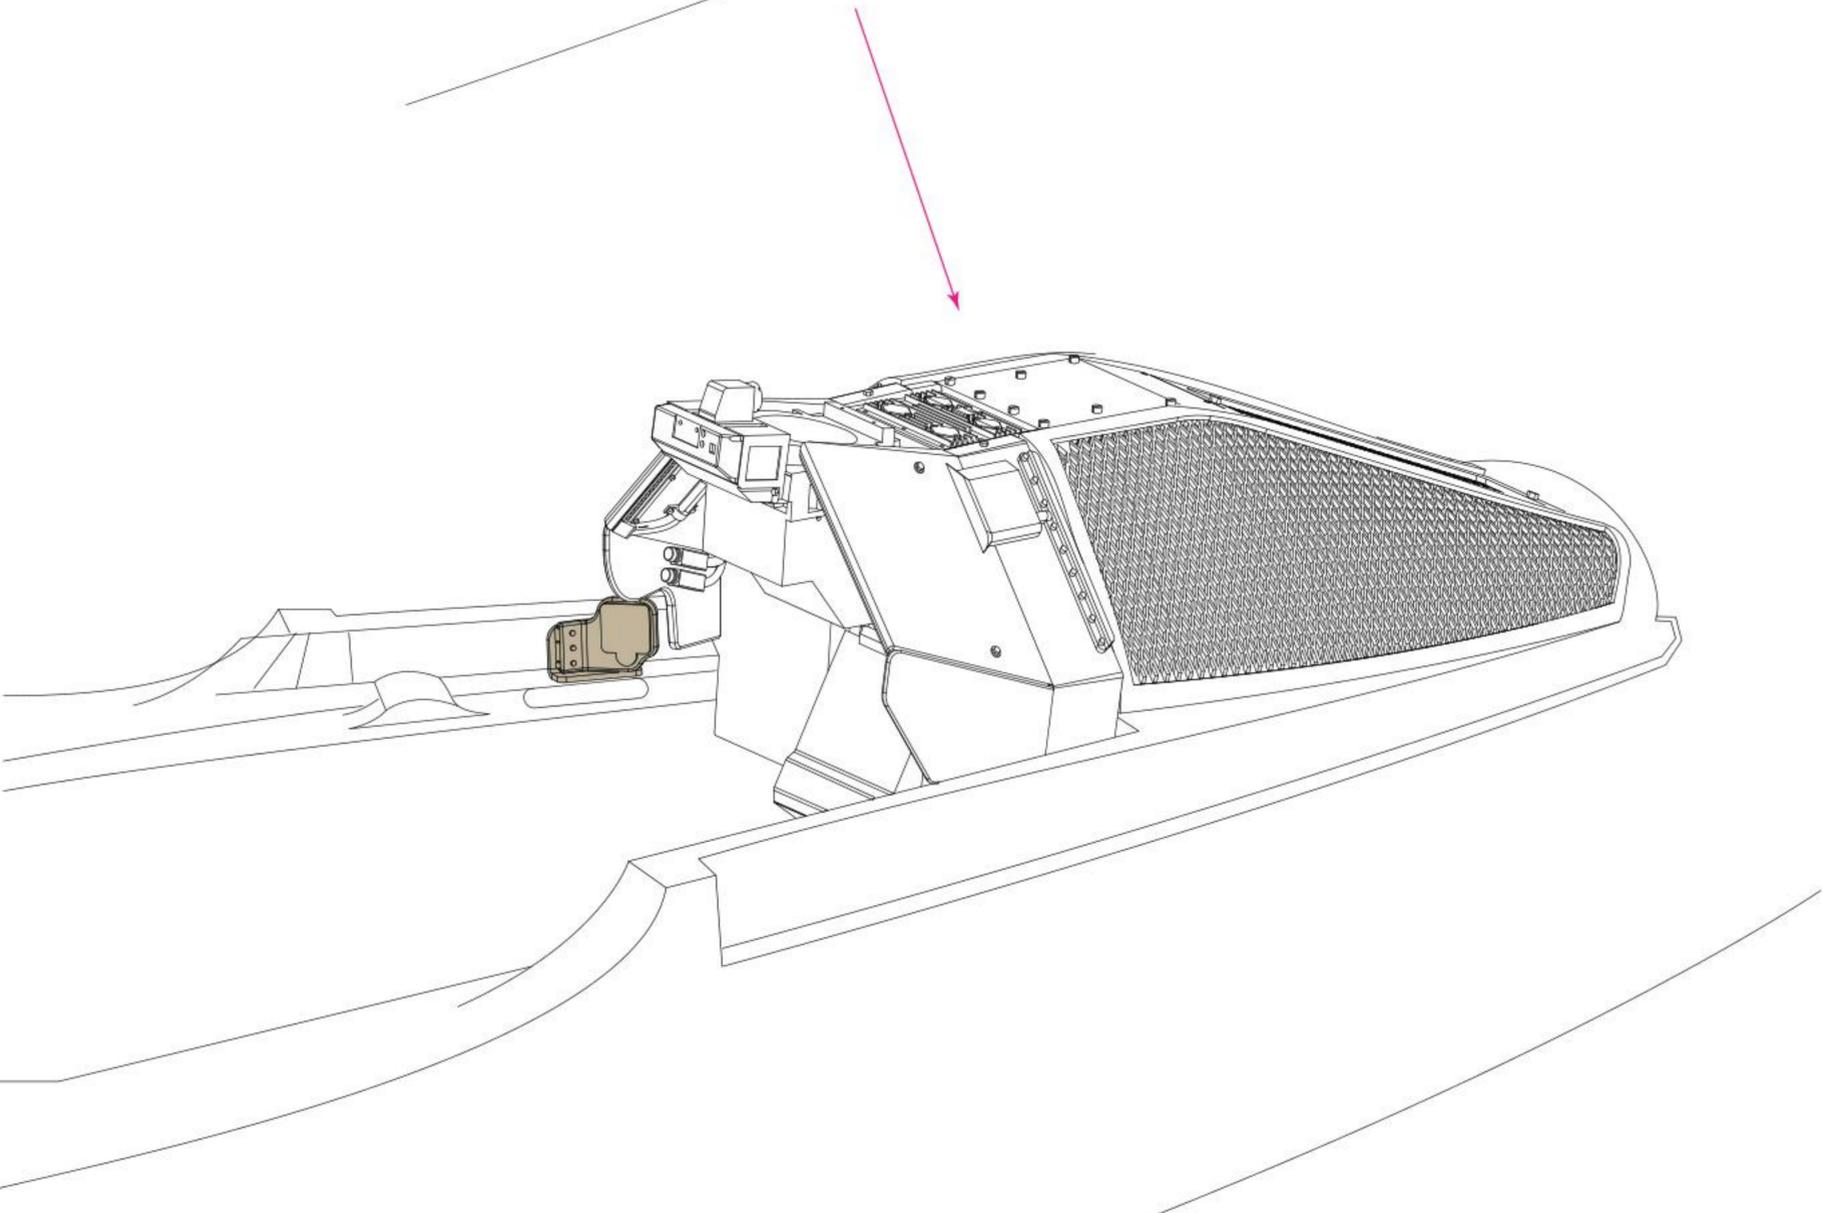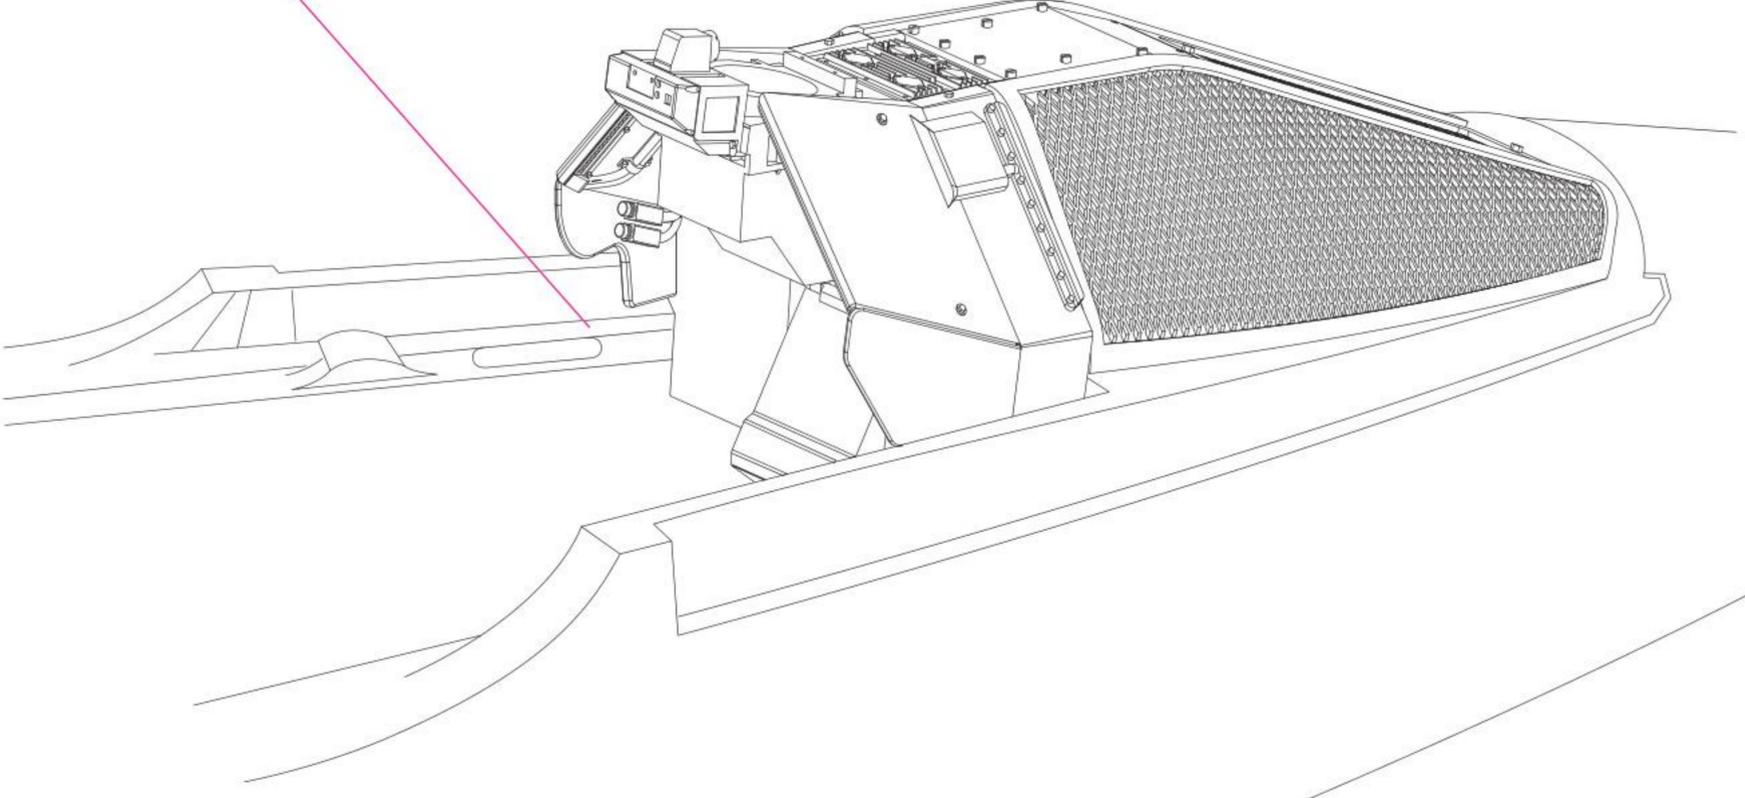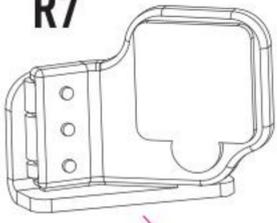

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua