




RESIN PARTS
FOR SCALE PLASTIC KITS

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION **RSU32-0141**

MIRAGE 2000D COCKPIT (DETAILED EDITION) FOR KITTY HAWK / ZIMIMODEL KIT

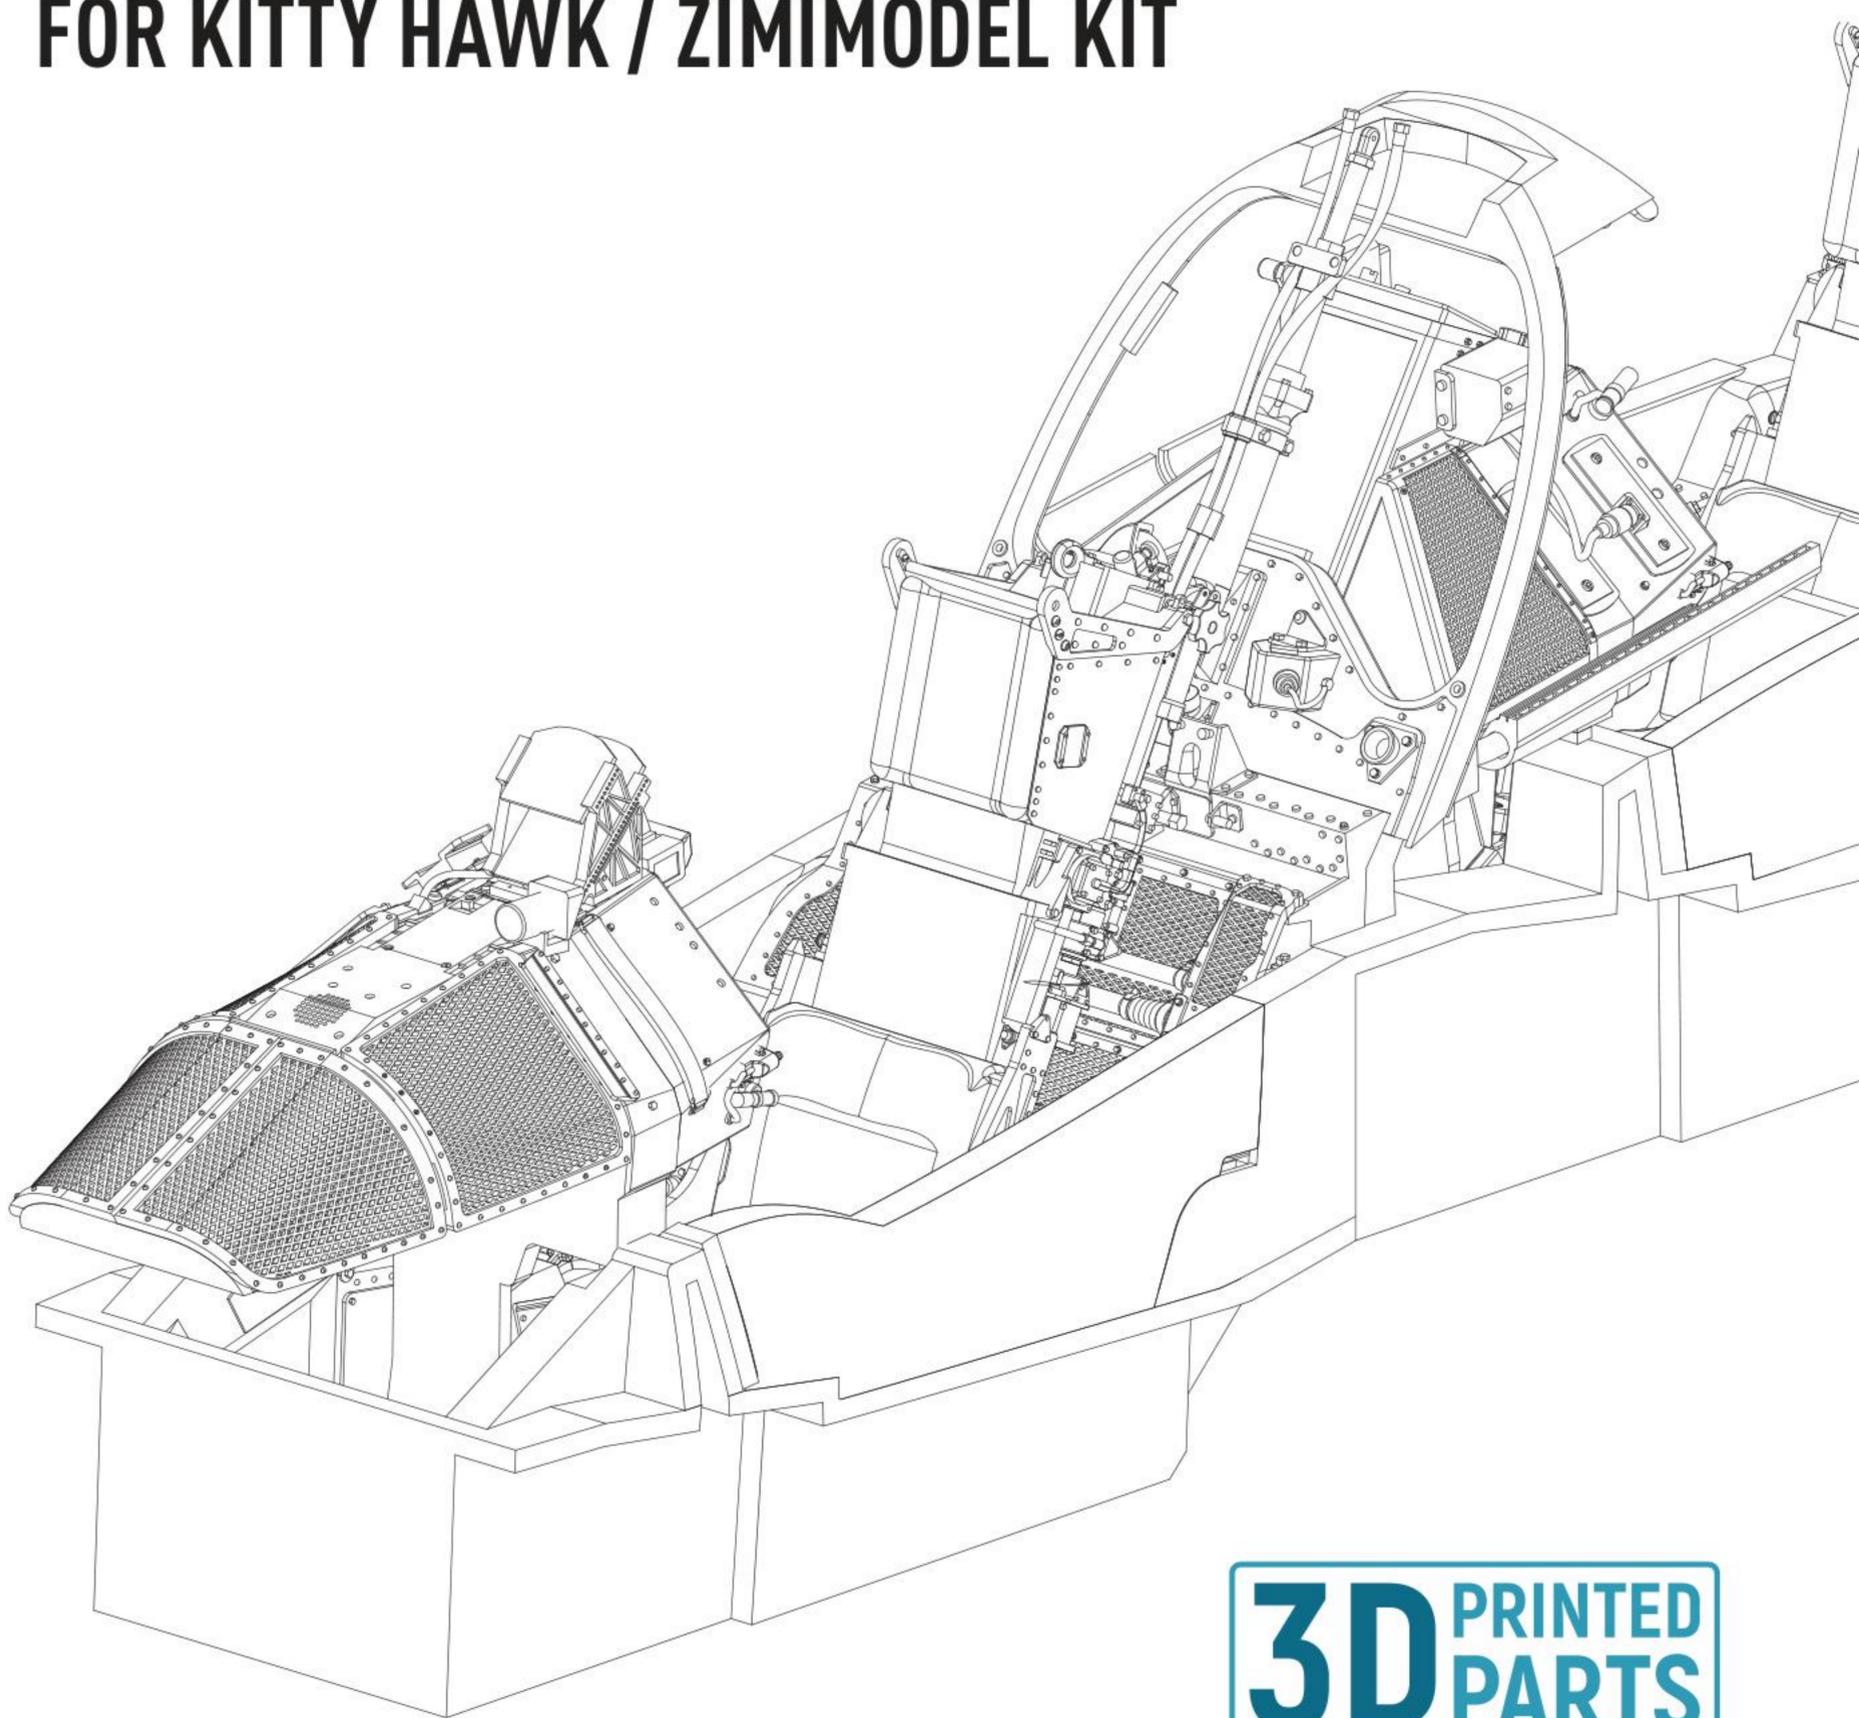

3D PRINTED
PARTS

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua



RESKIT-MODELS.COM

[fb.com/reskit.official](https://www.facebook.com/reskit.official)


[instagram.com/reskit_official](https://www.instagram.com/reskit_official)

[pinterest.com/reskit_official](https://www.pinterest.com/reskit_official)

DECAL INSTRUCTION

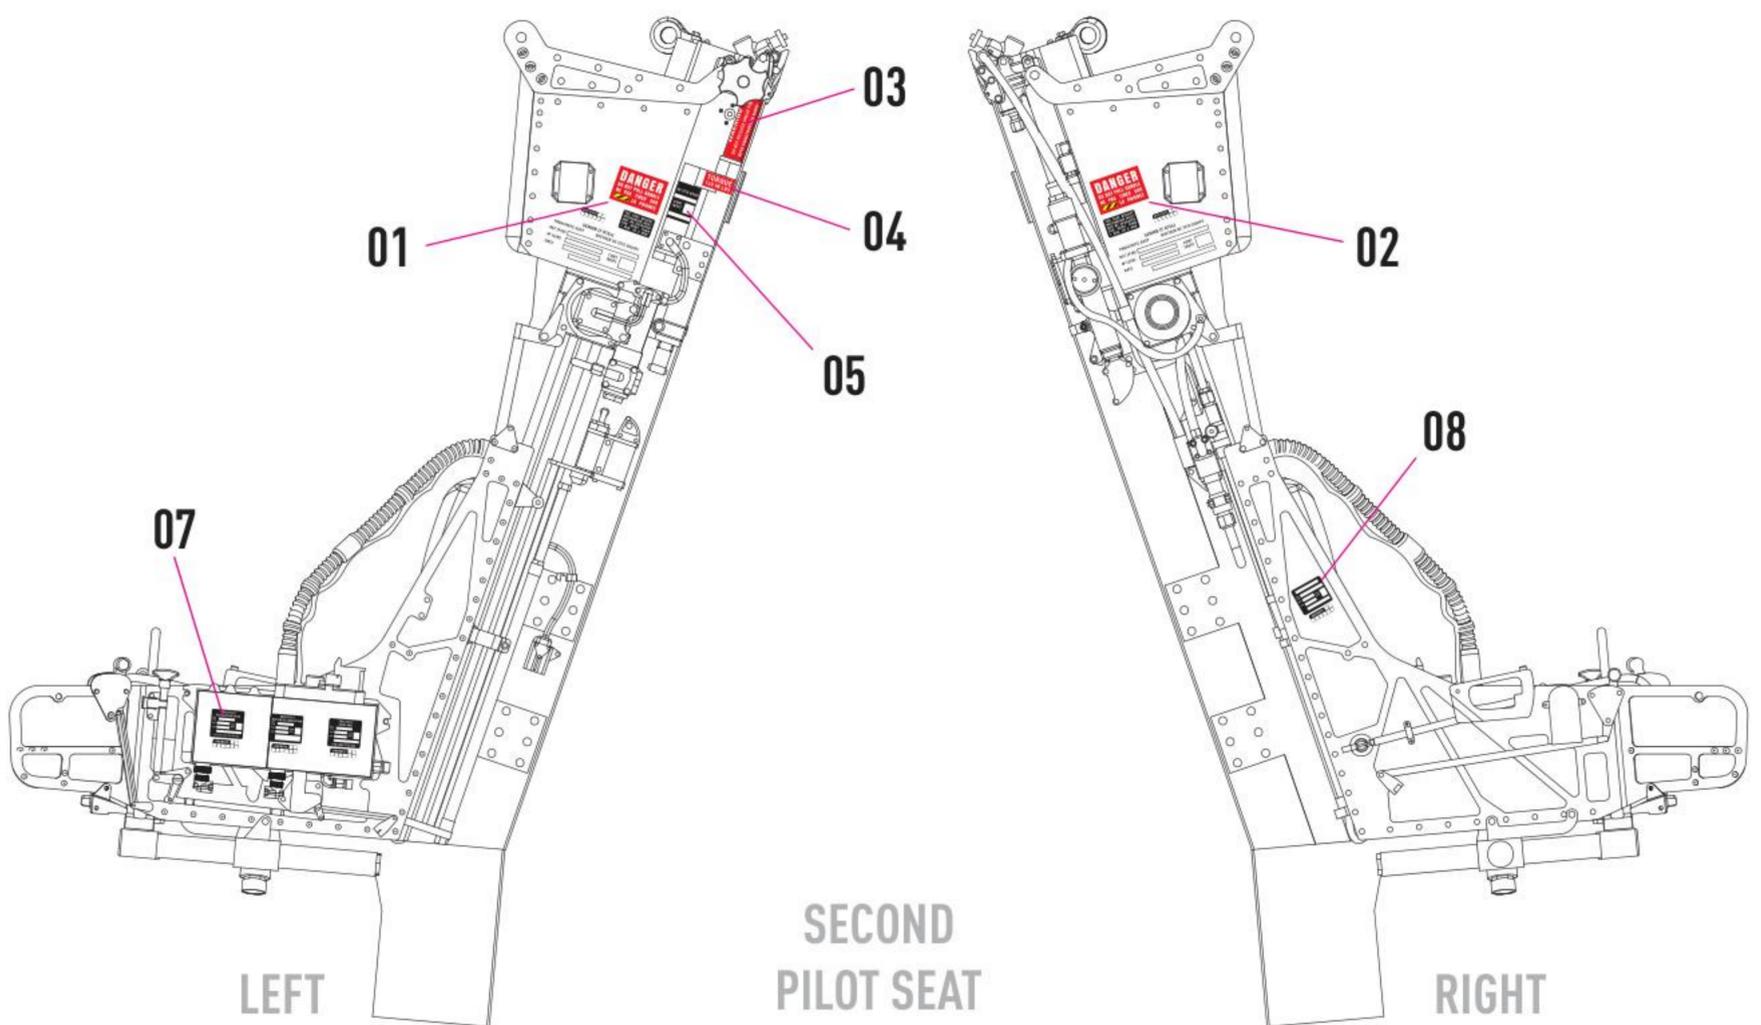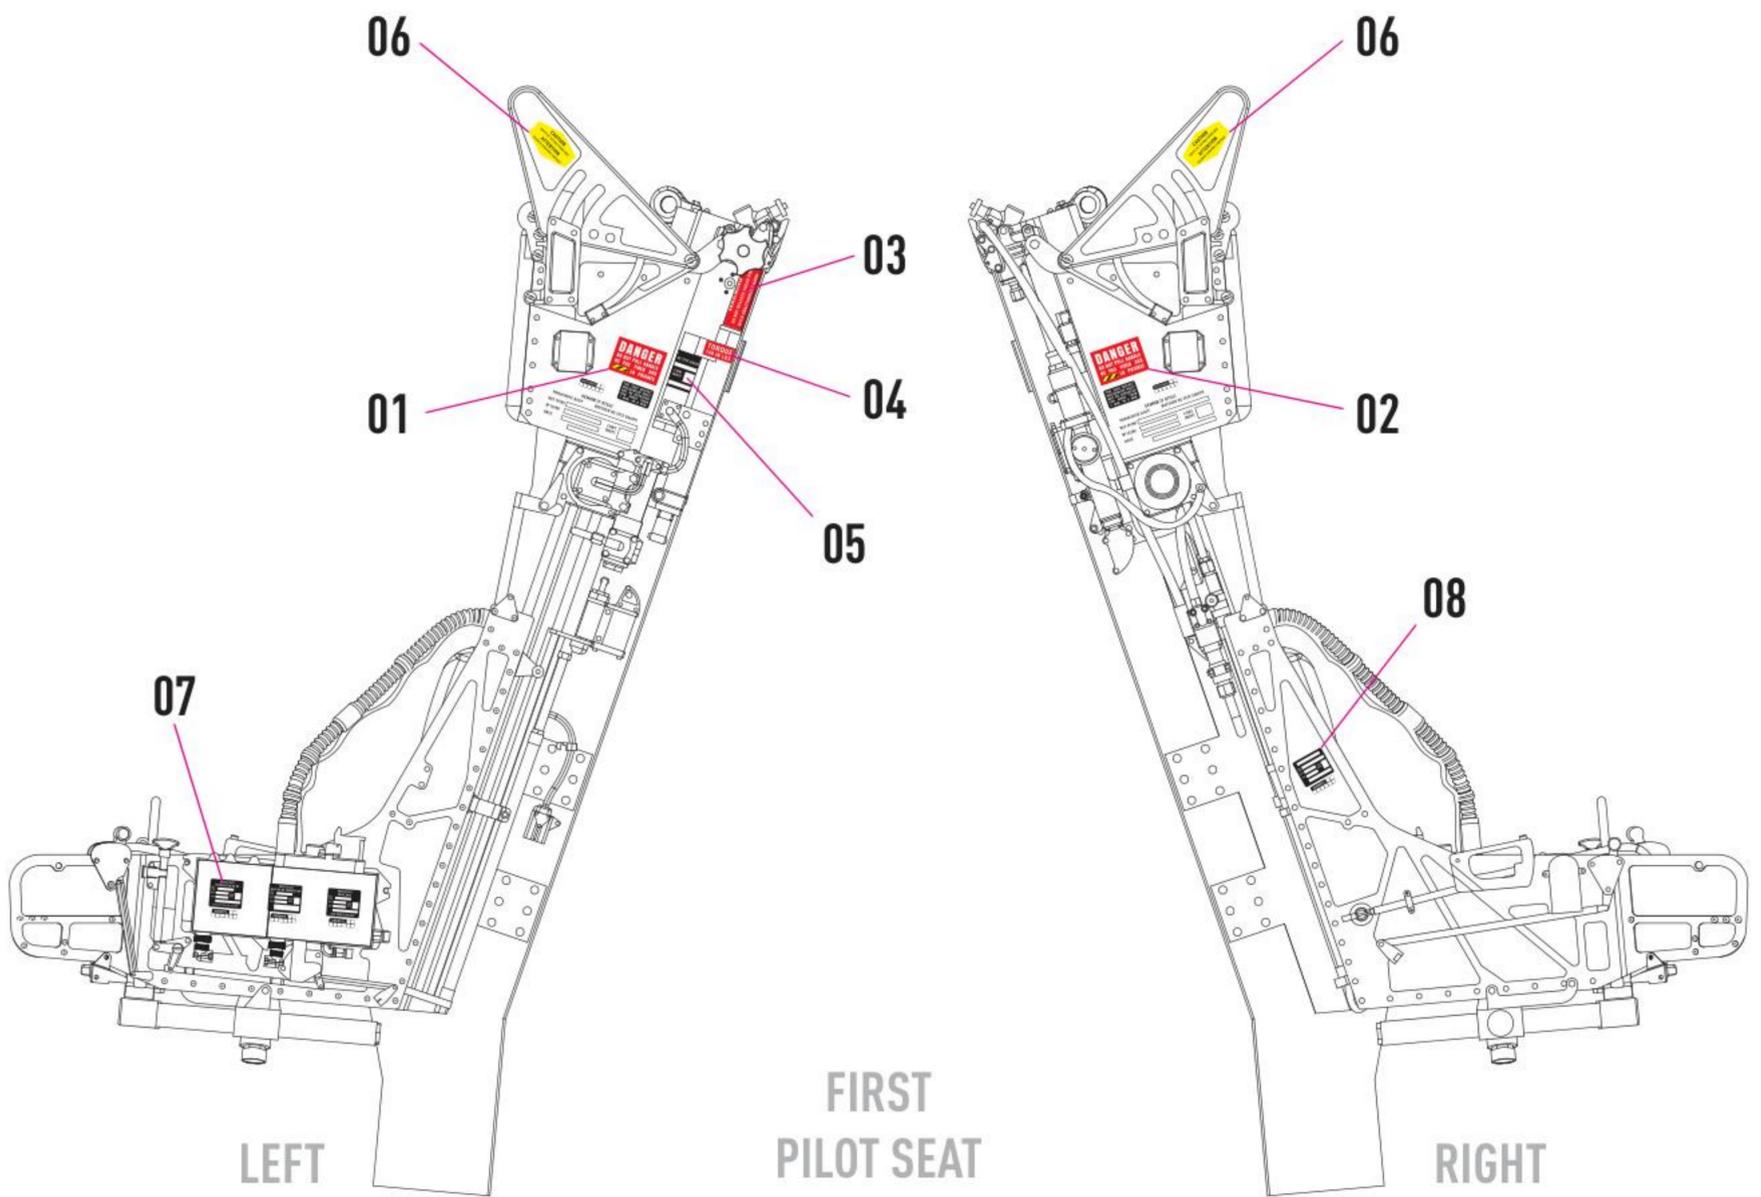


1 FIRST PILOT

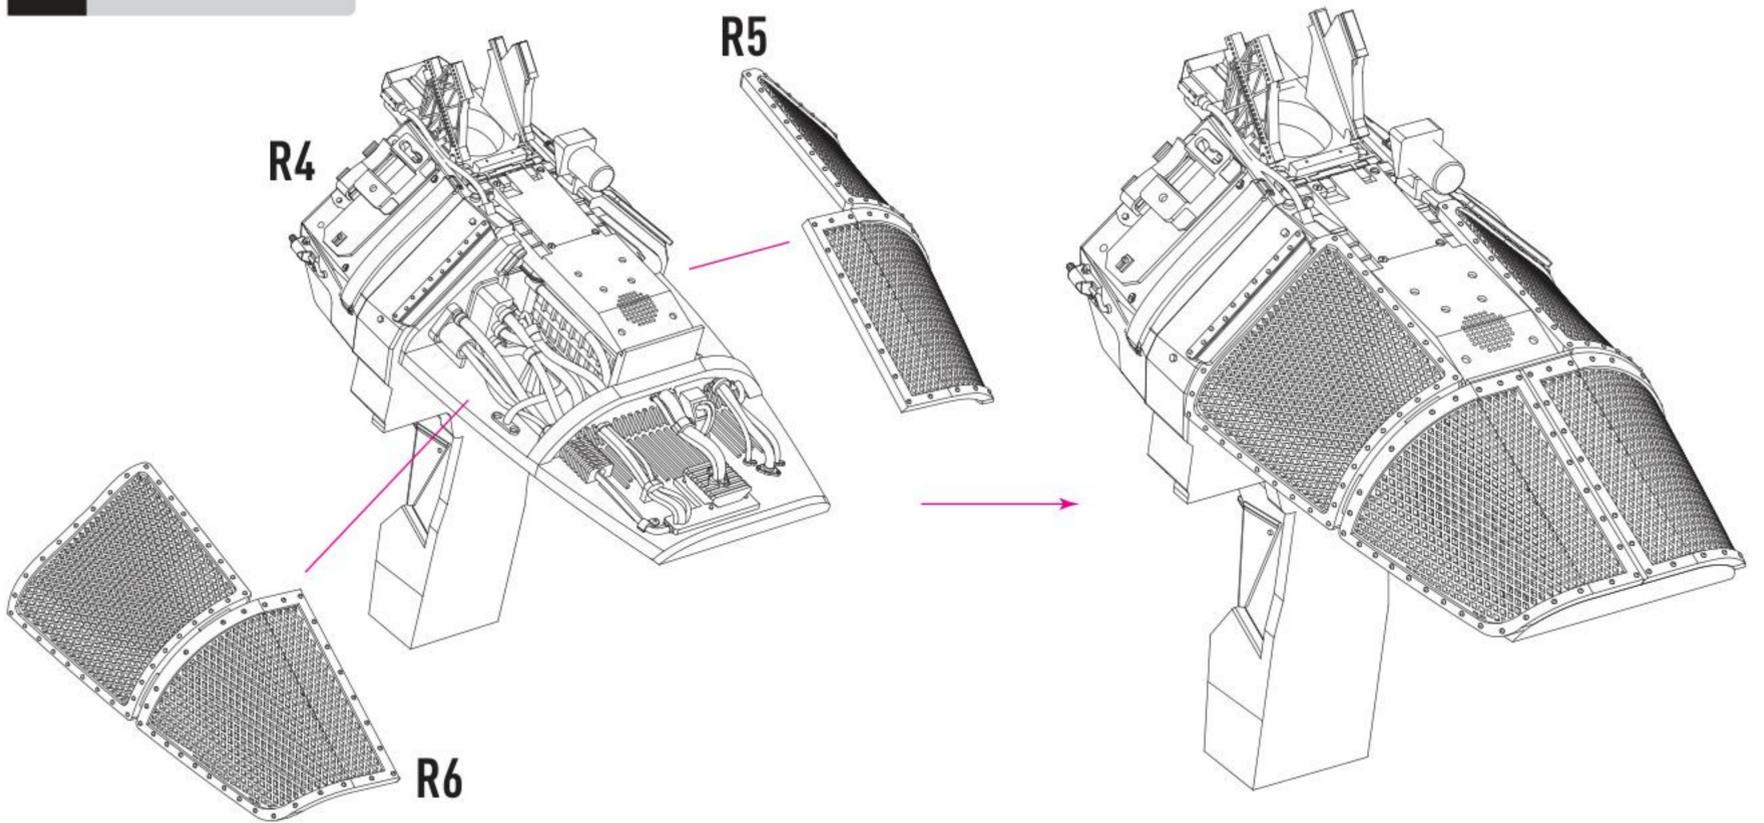


2 FILM ●


PAINT THE PANELS UNDER THE FILMS IN WHITE COLOR

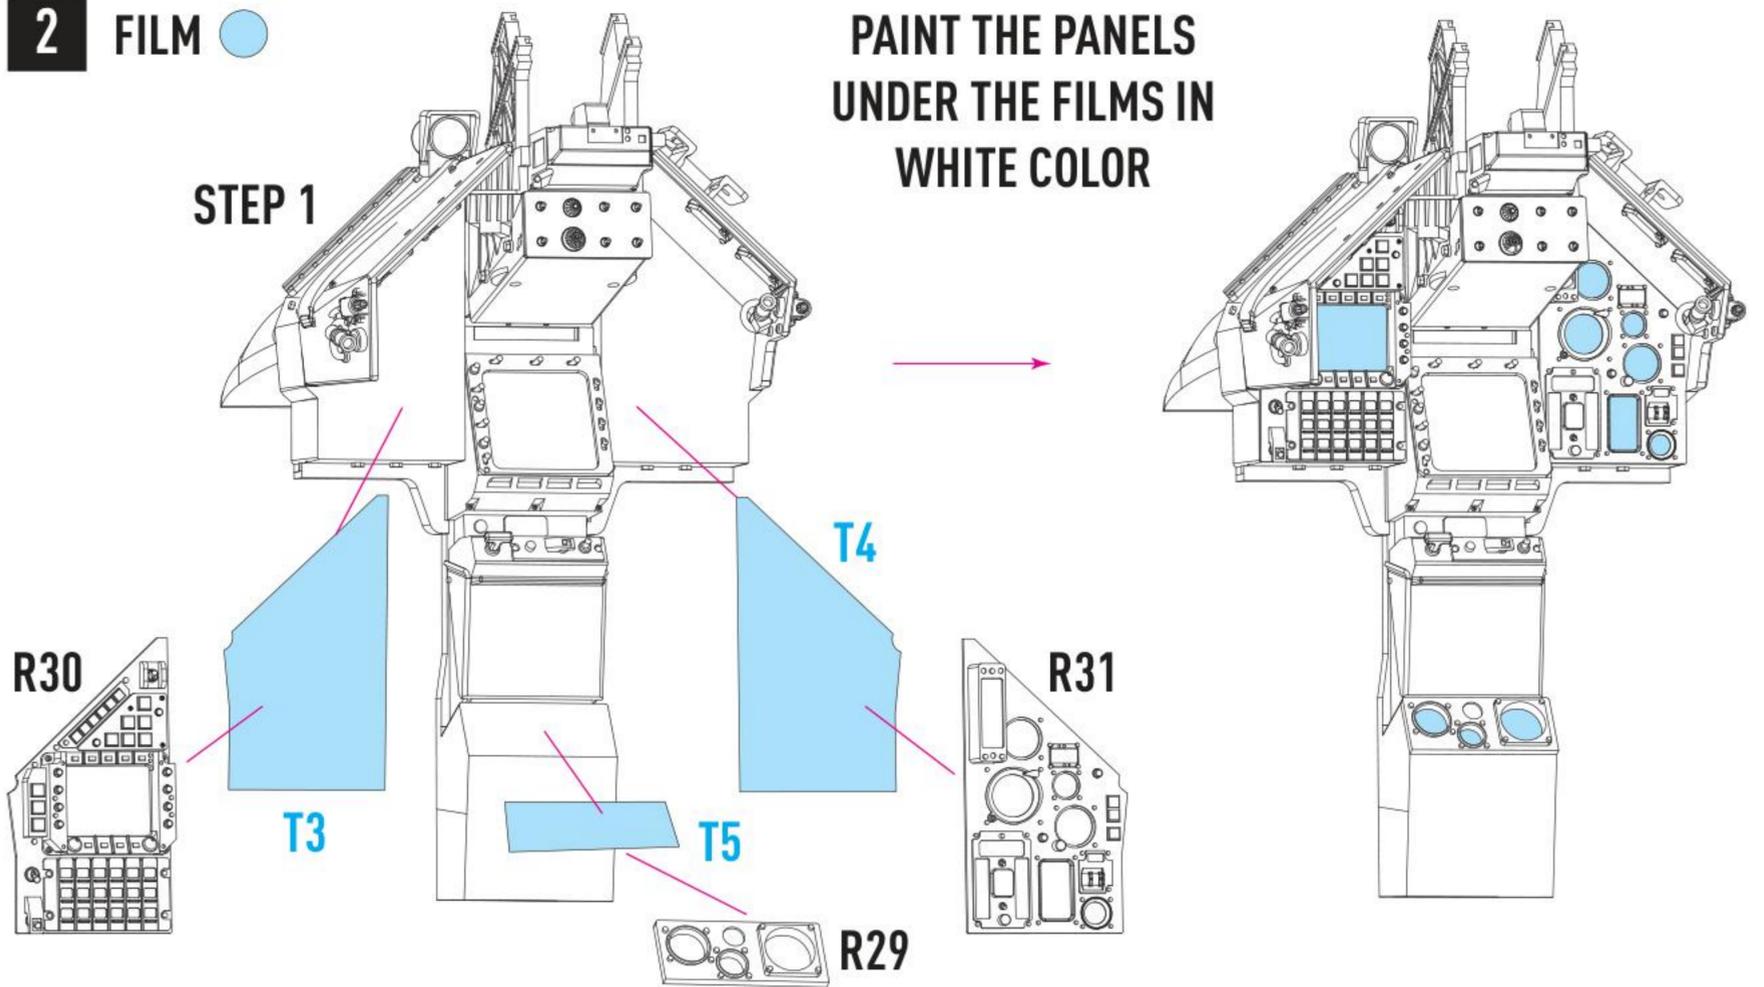


3

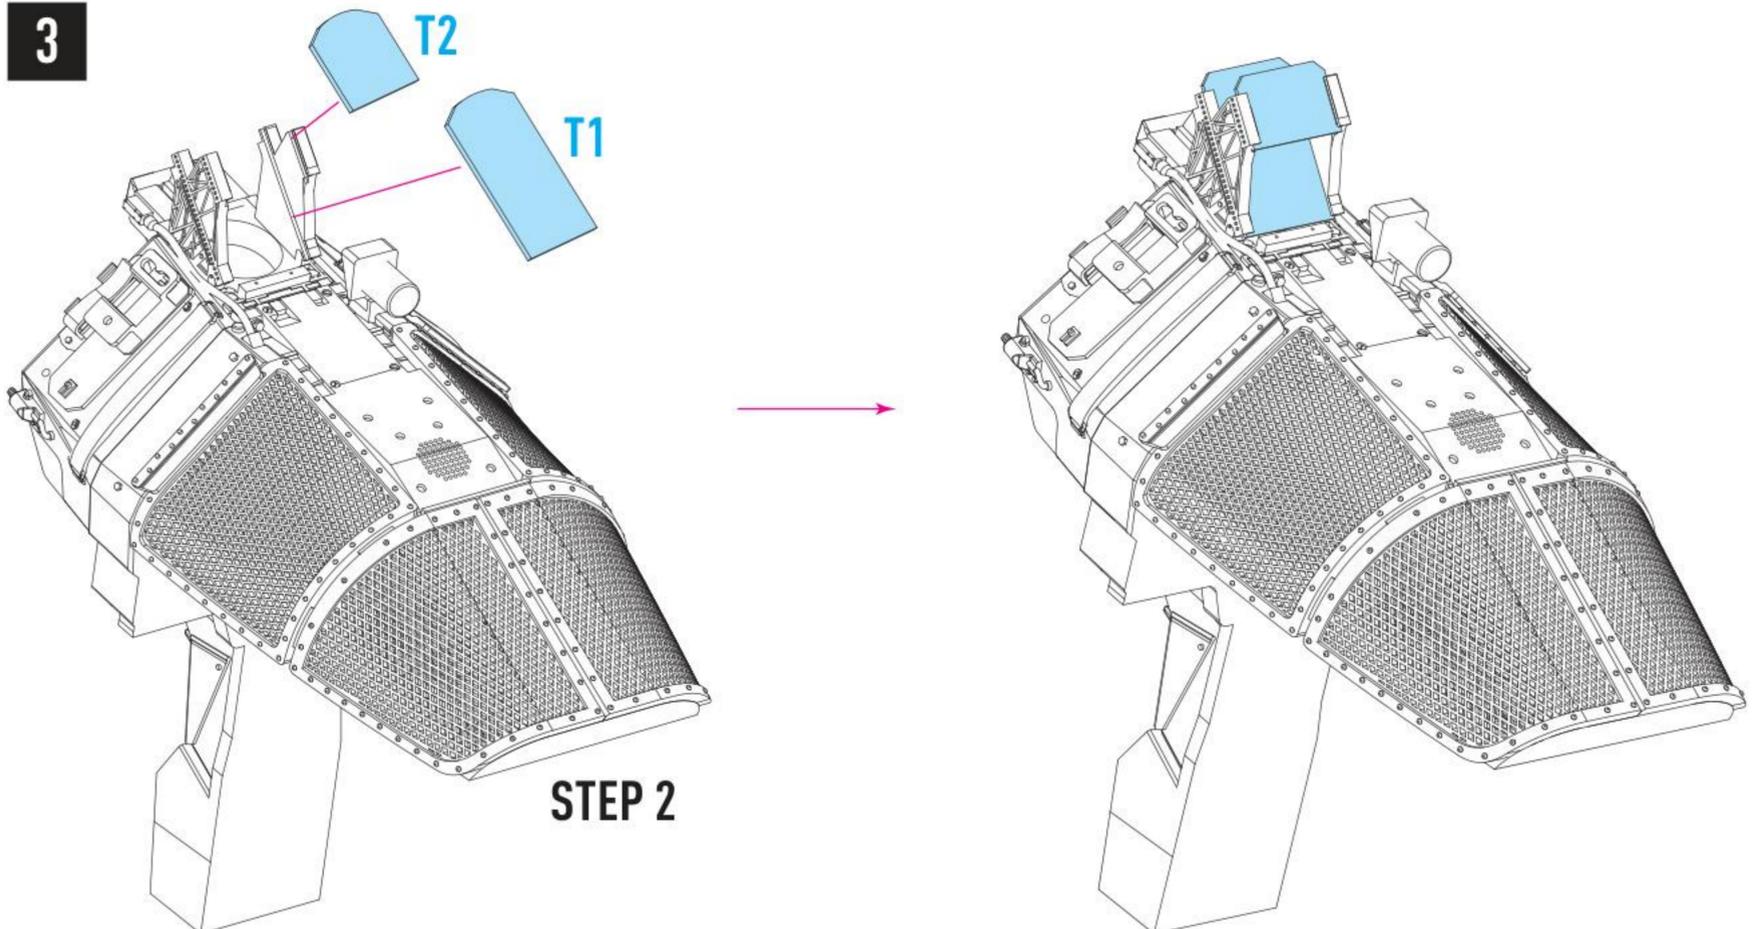

4 SECOND PILOT

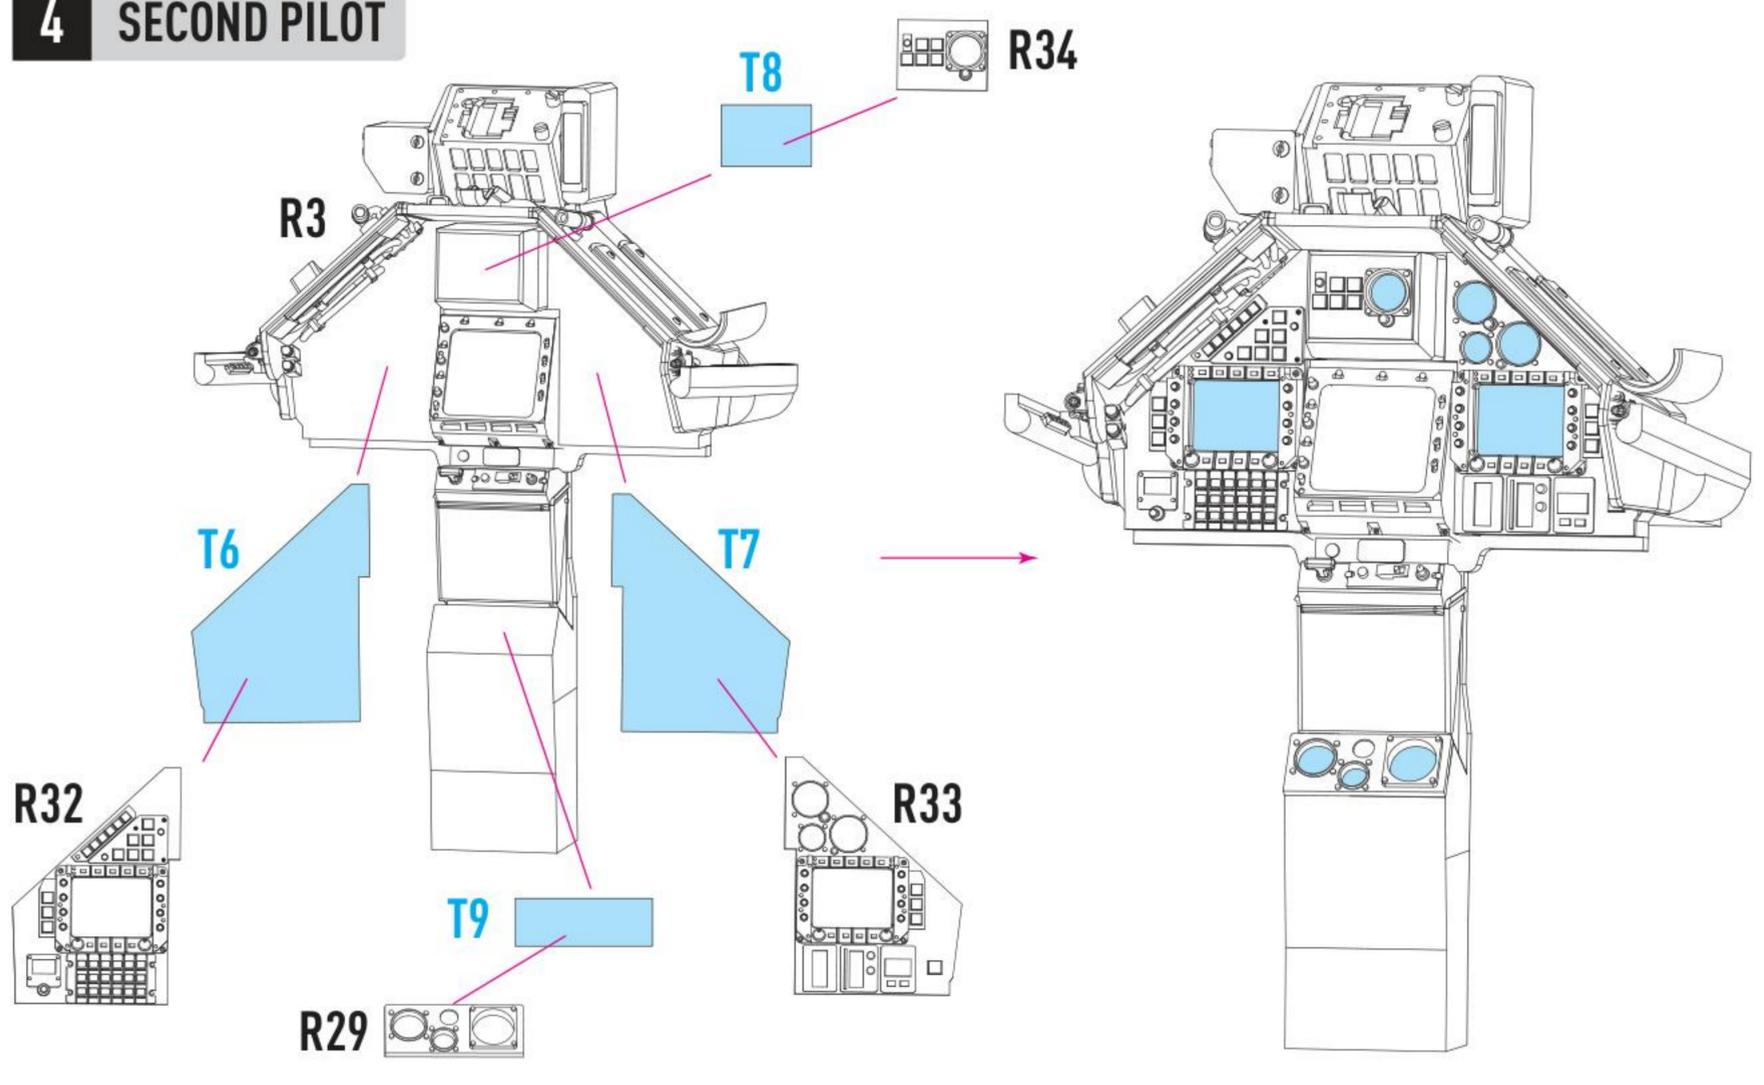


5

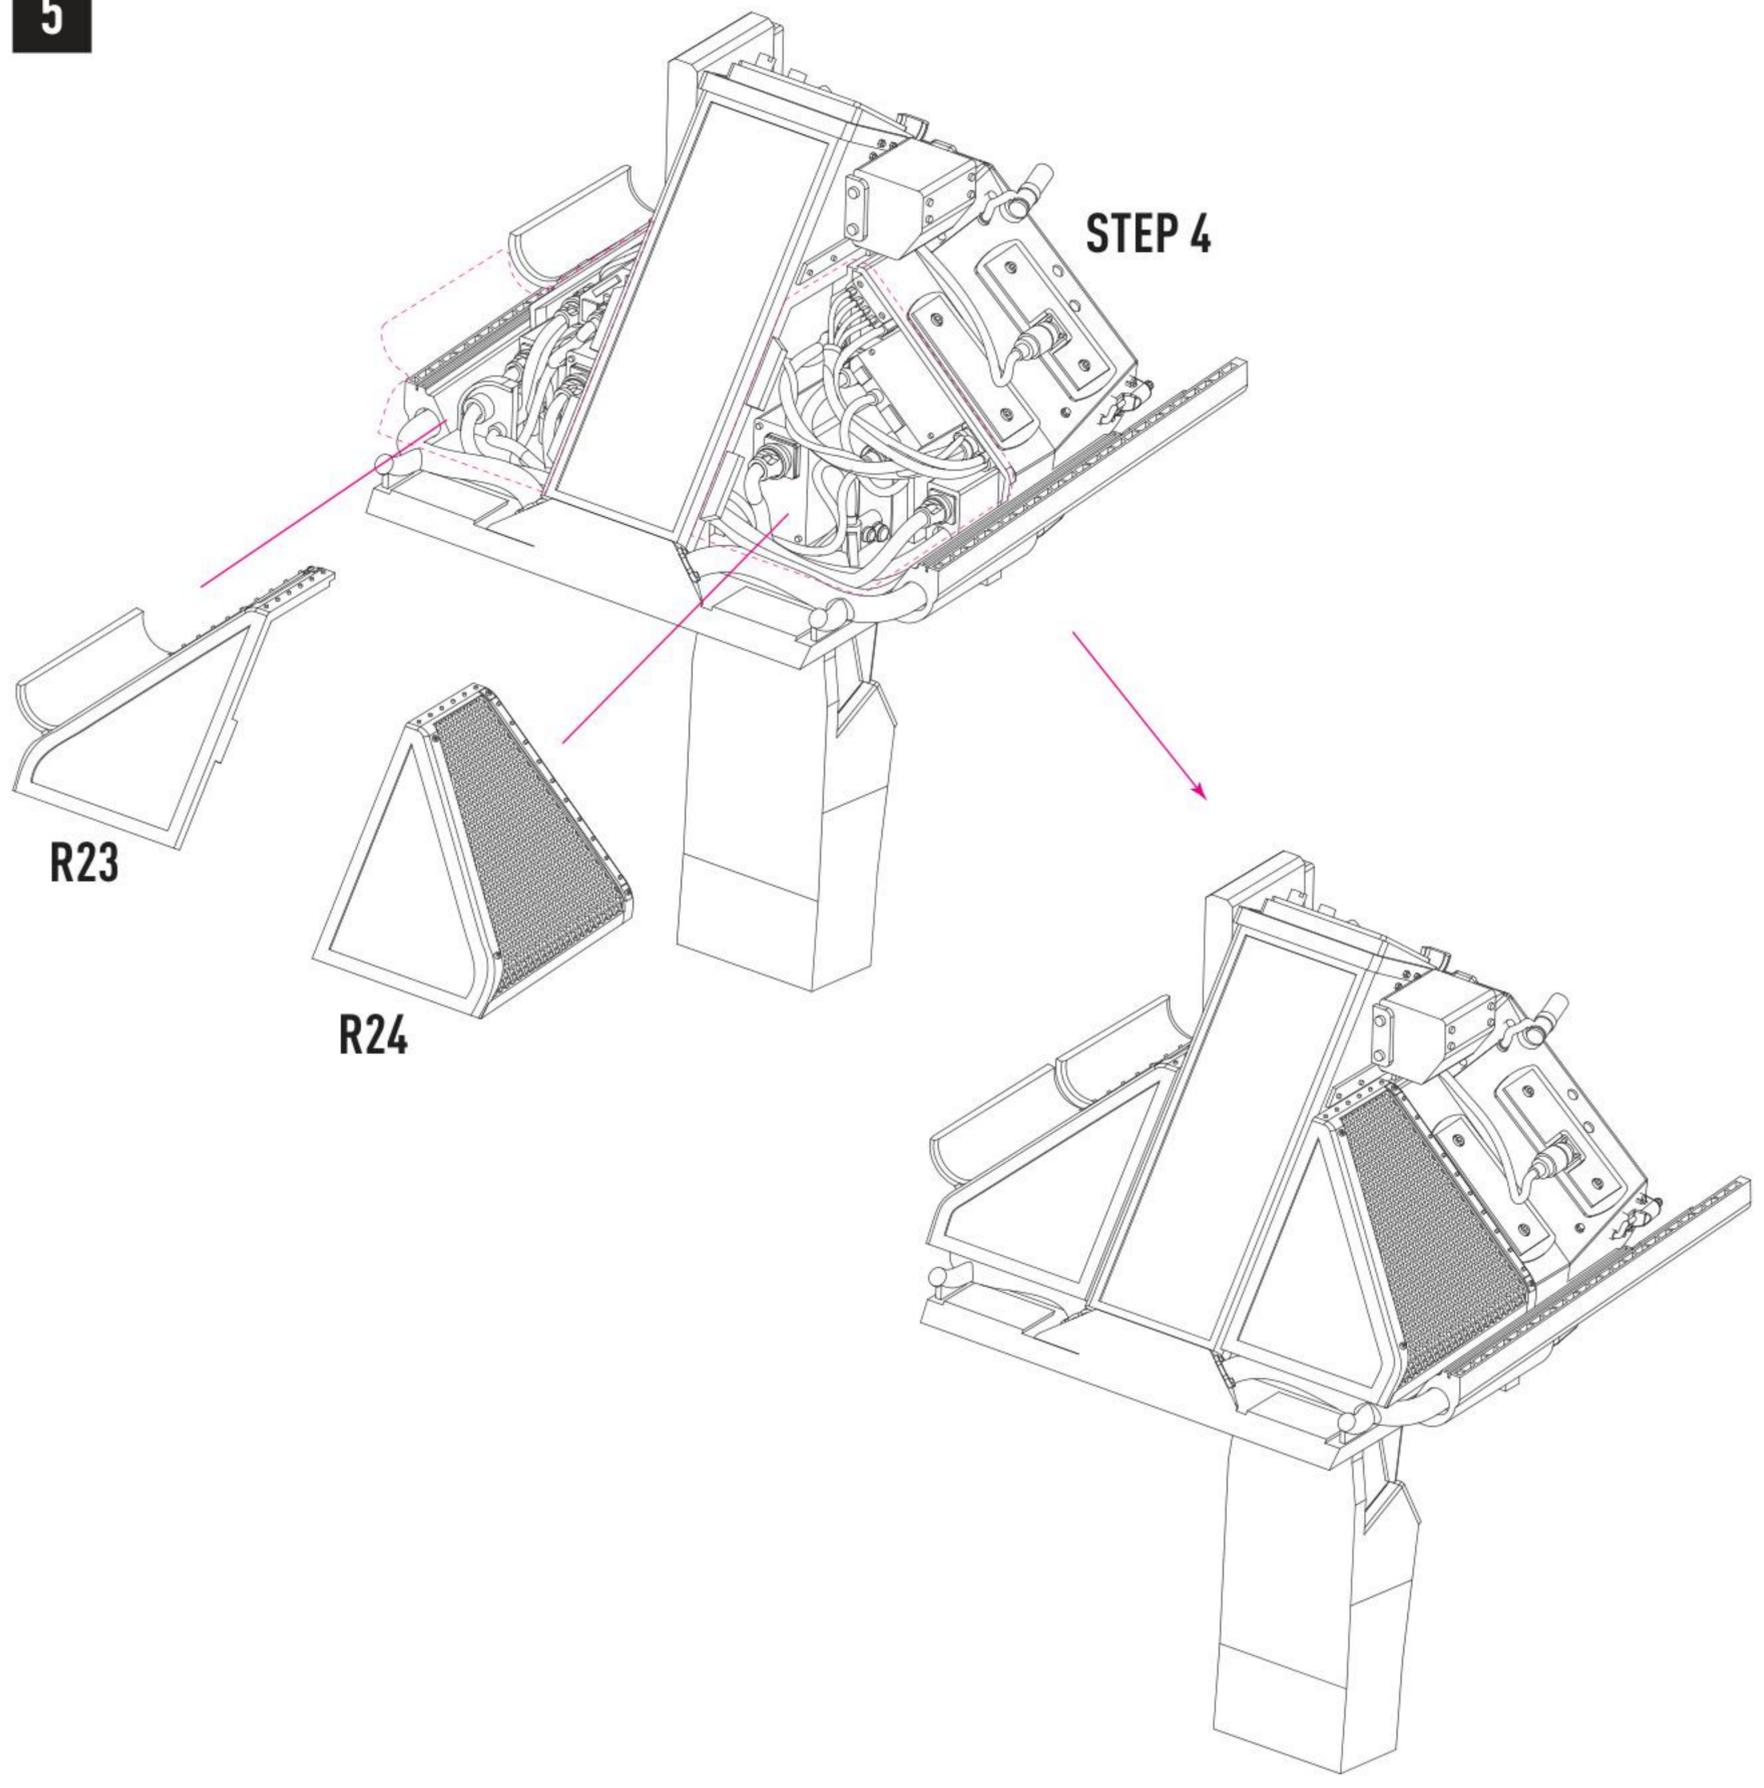


6

STEP 3

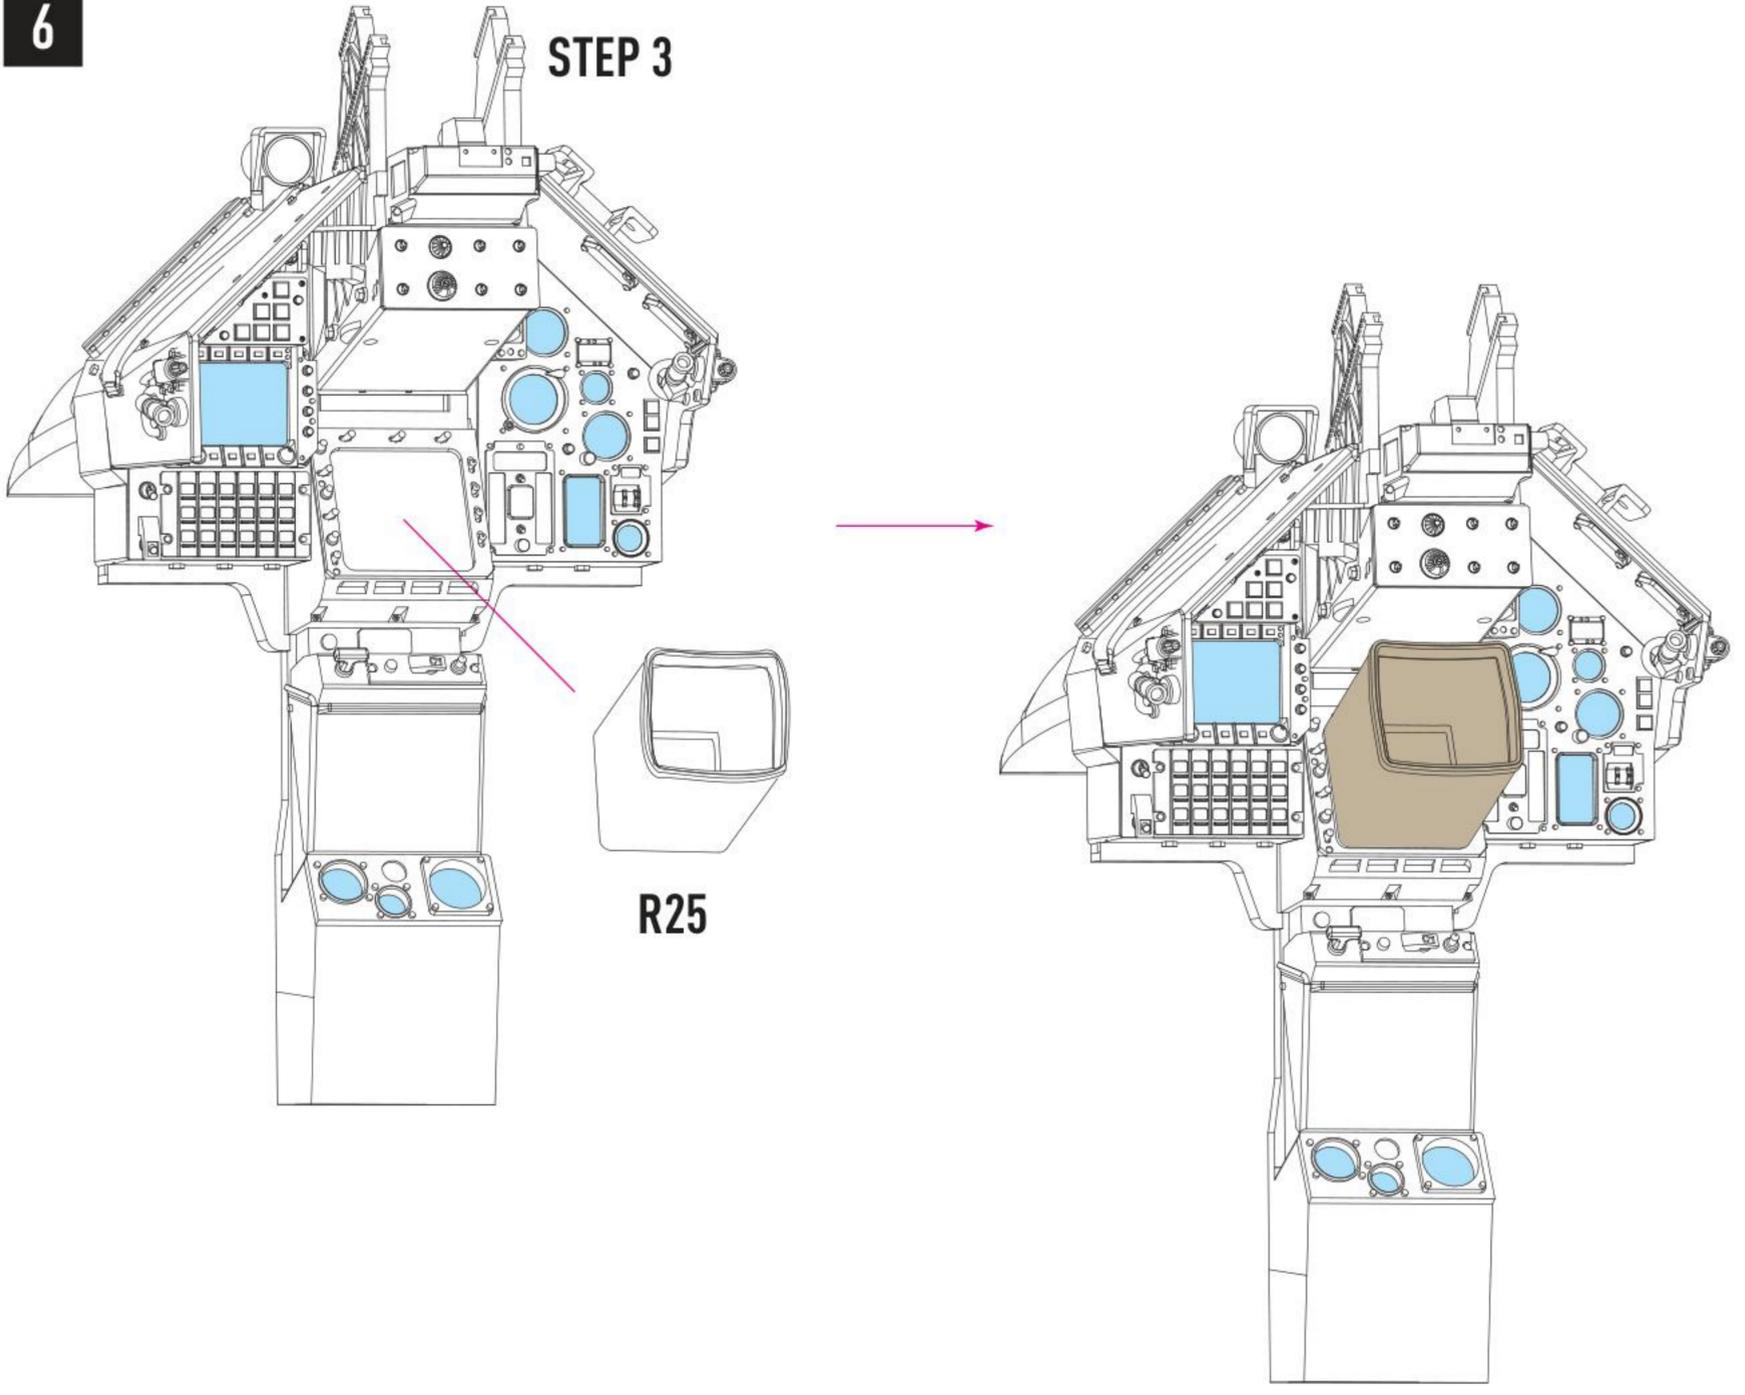


STEP 5

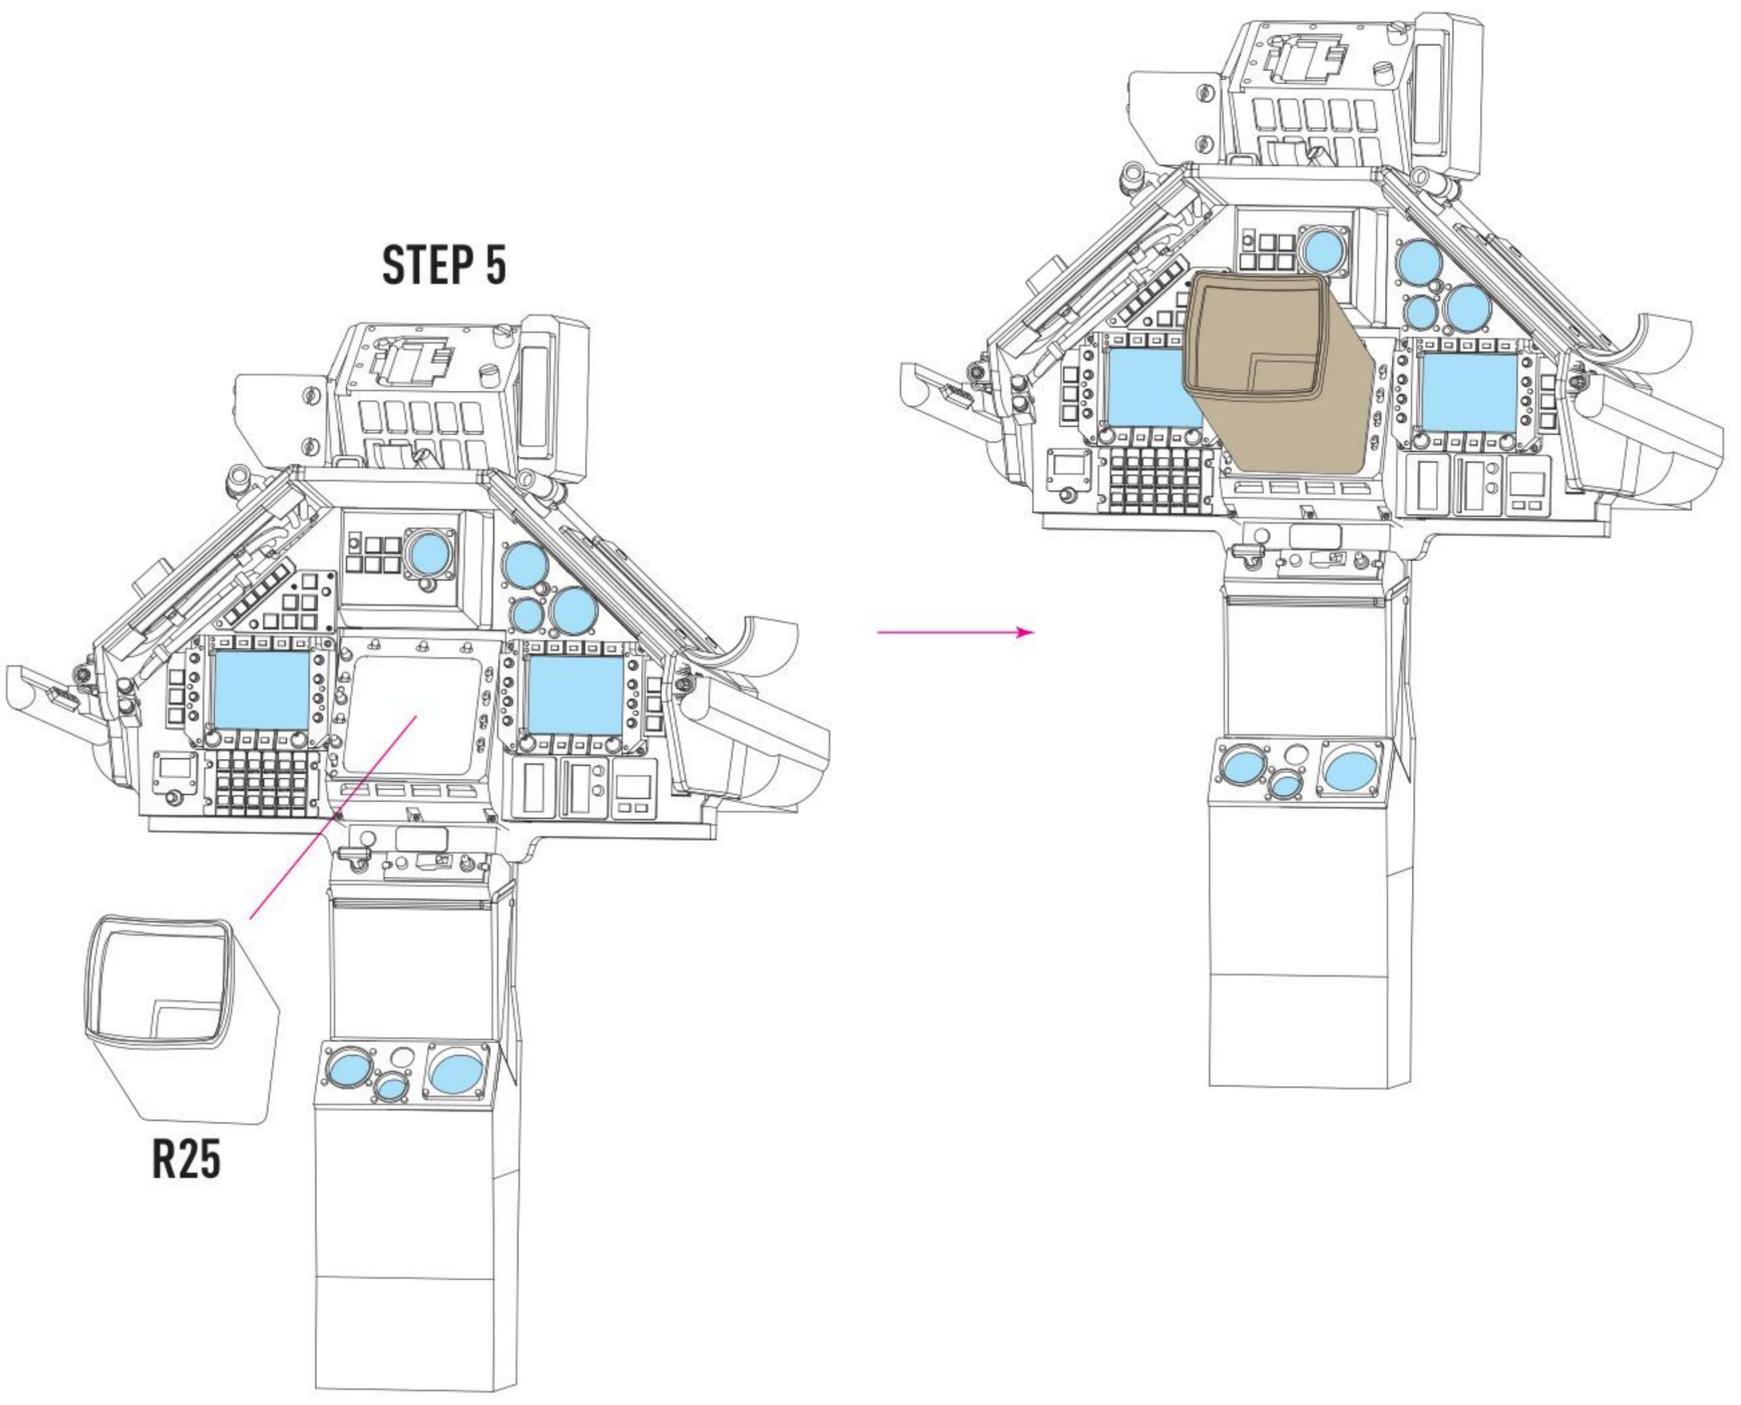


7




PART FROM THE KIT

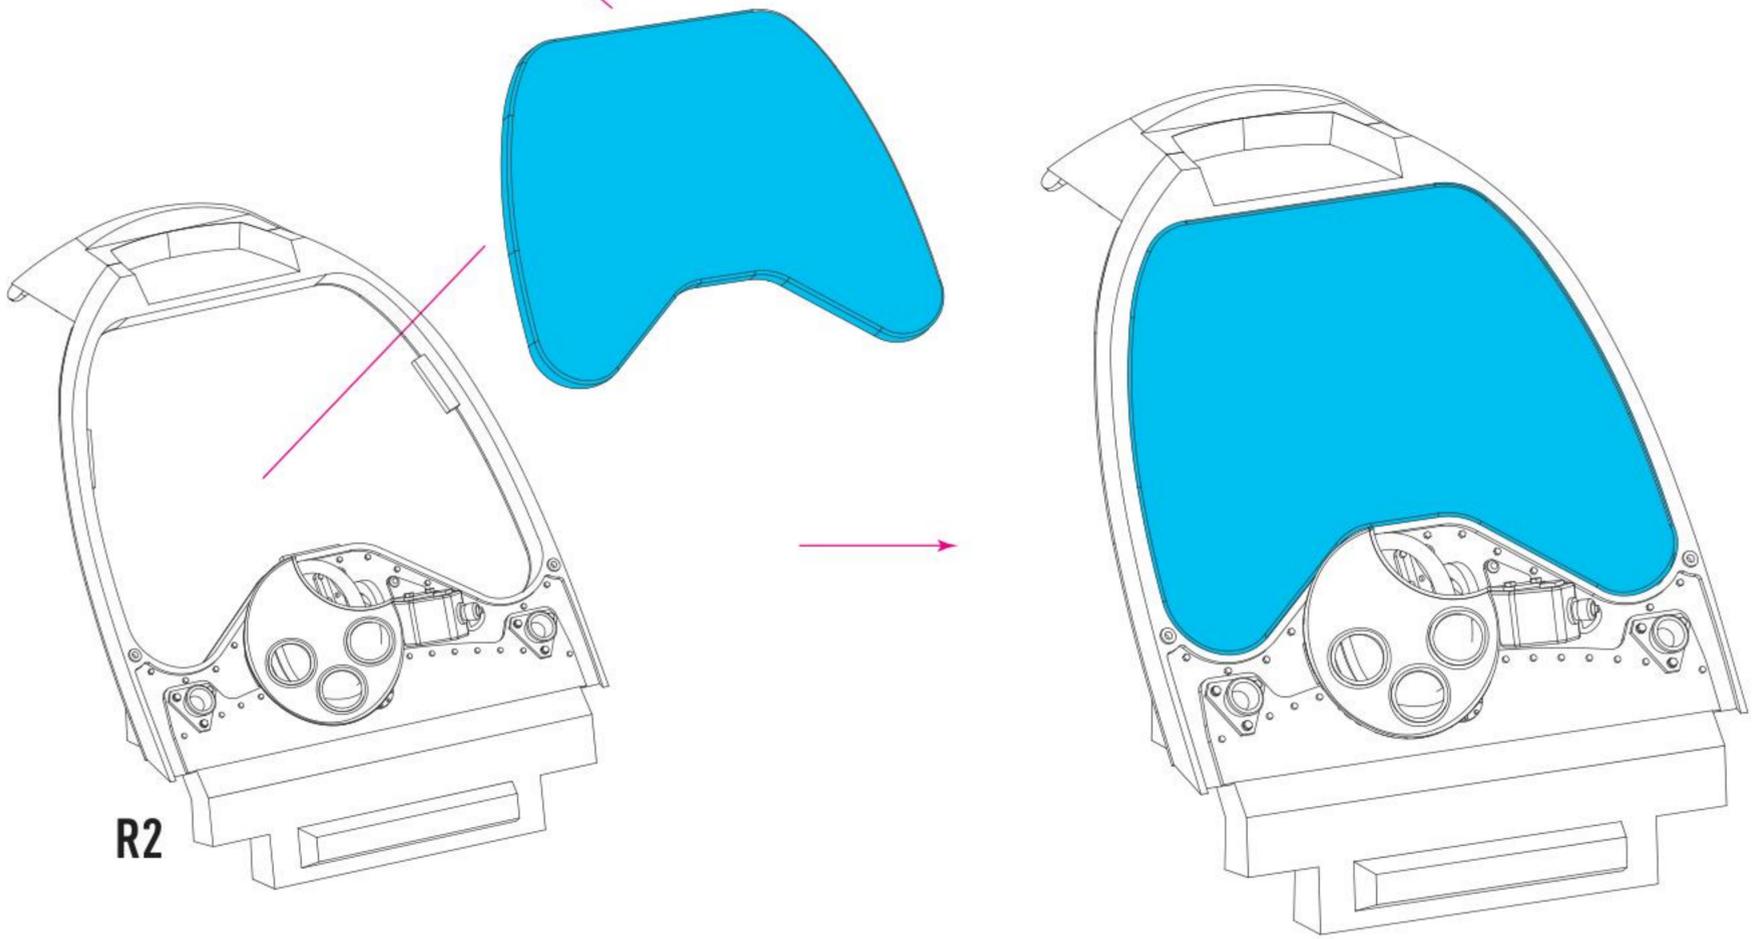


8


STEP 7

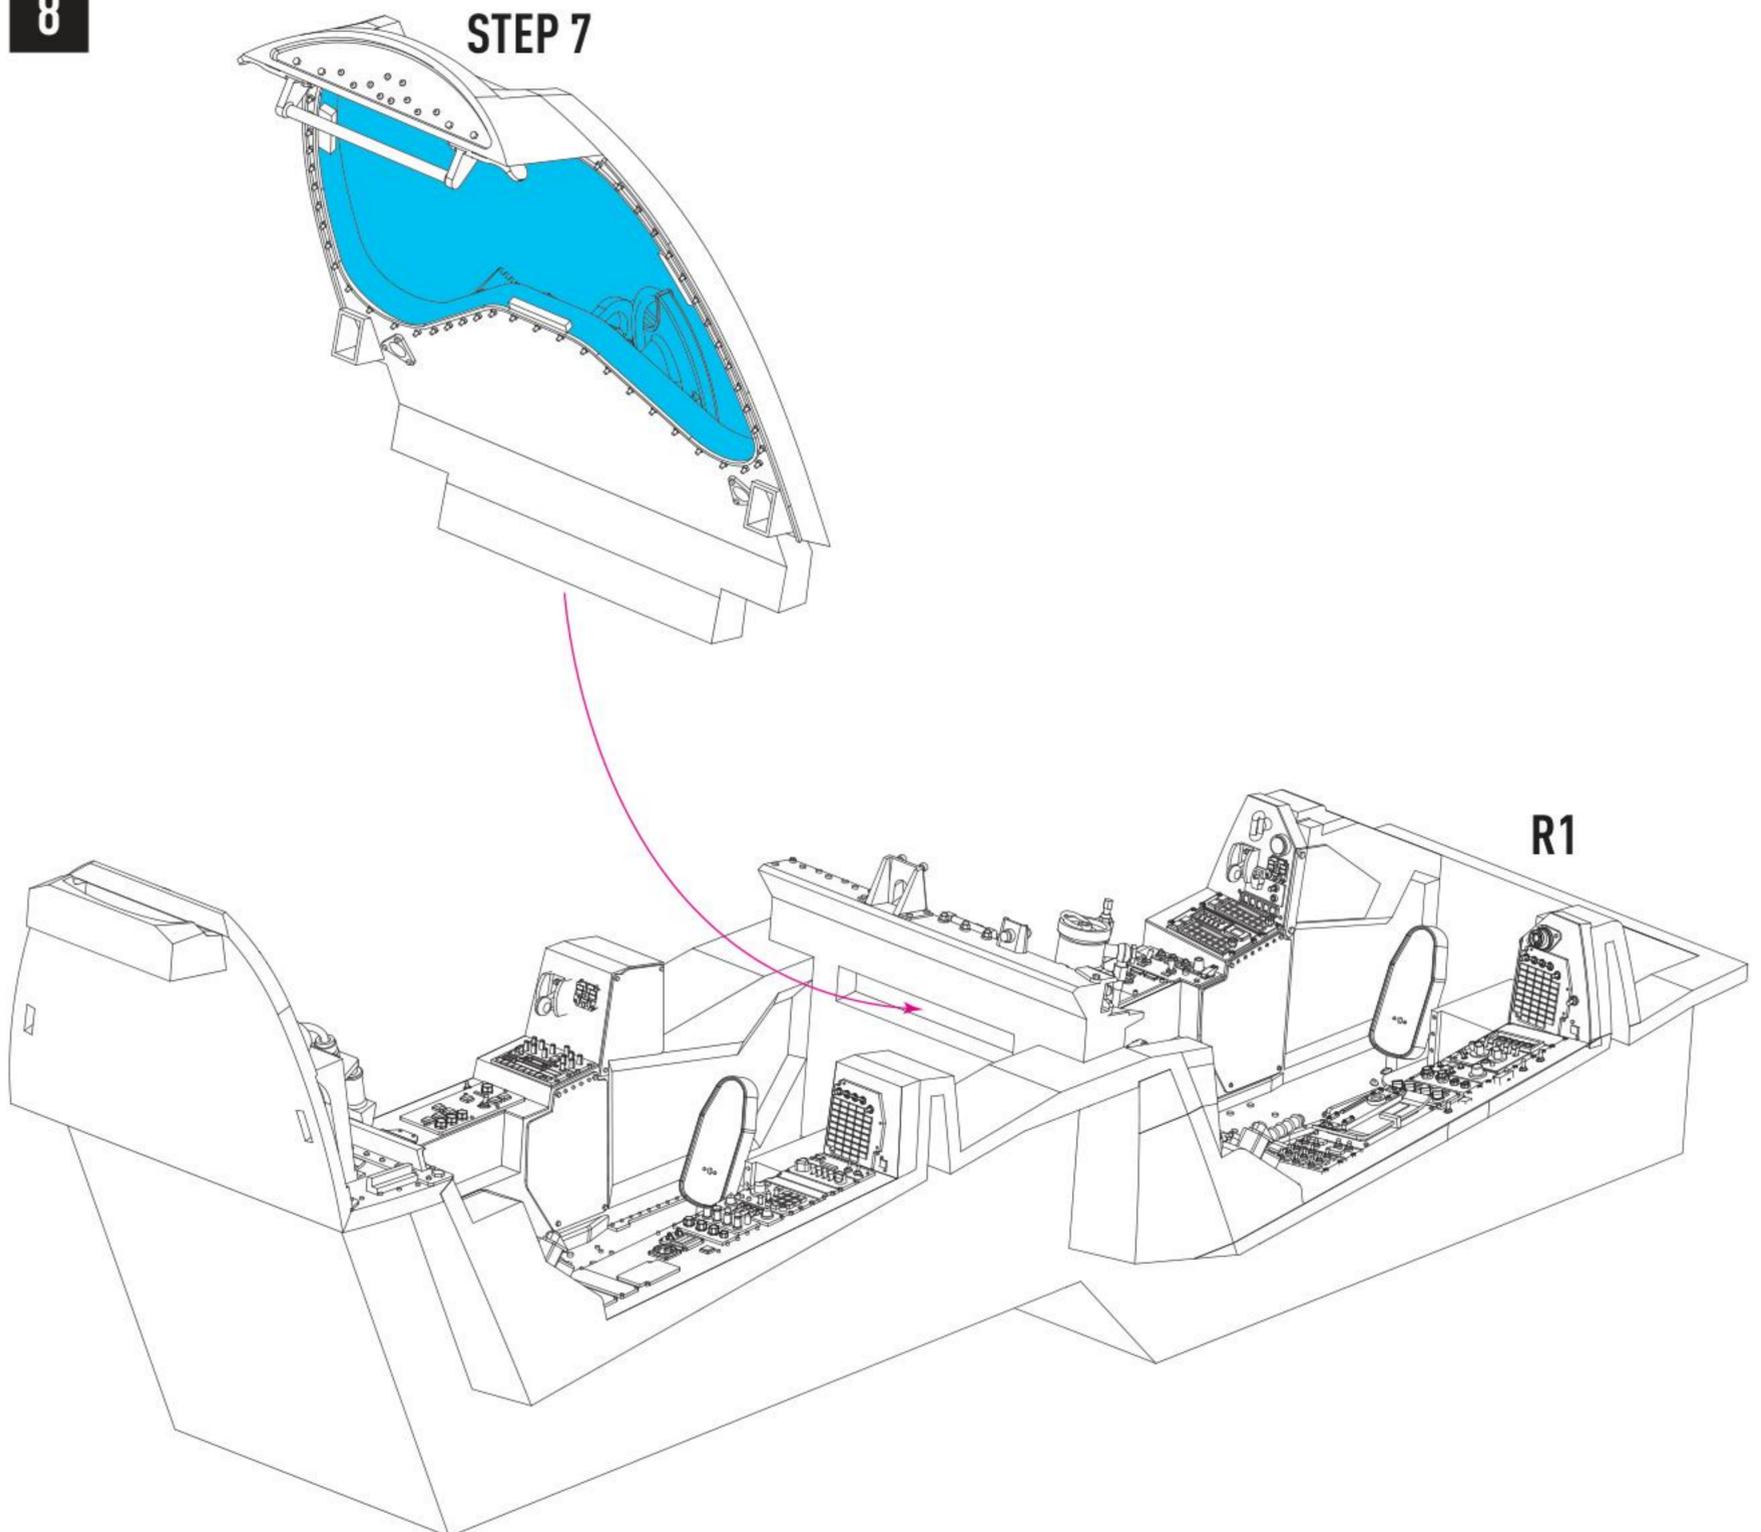

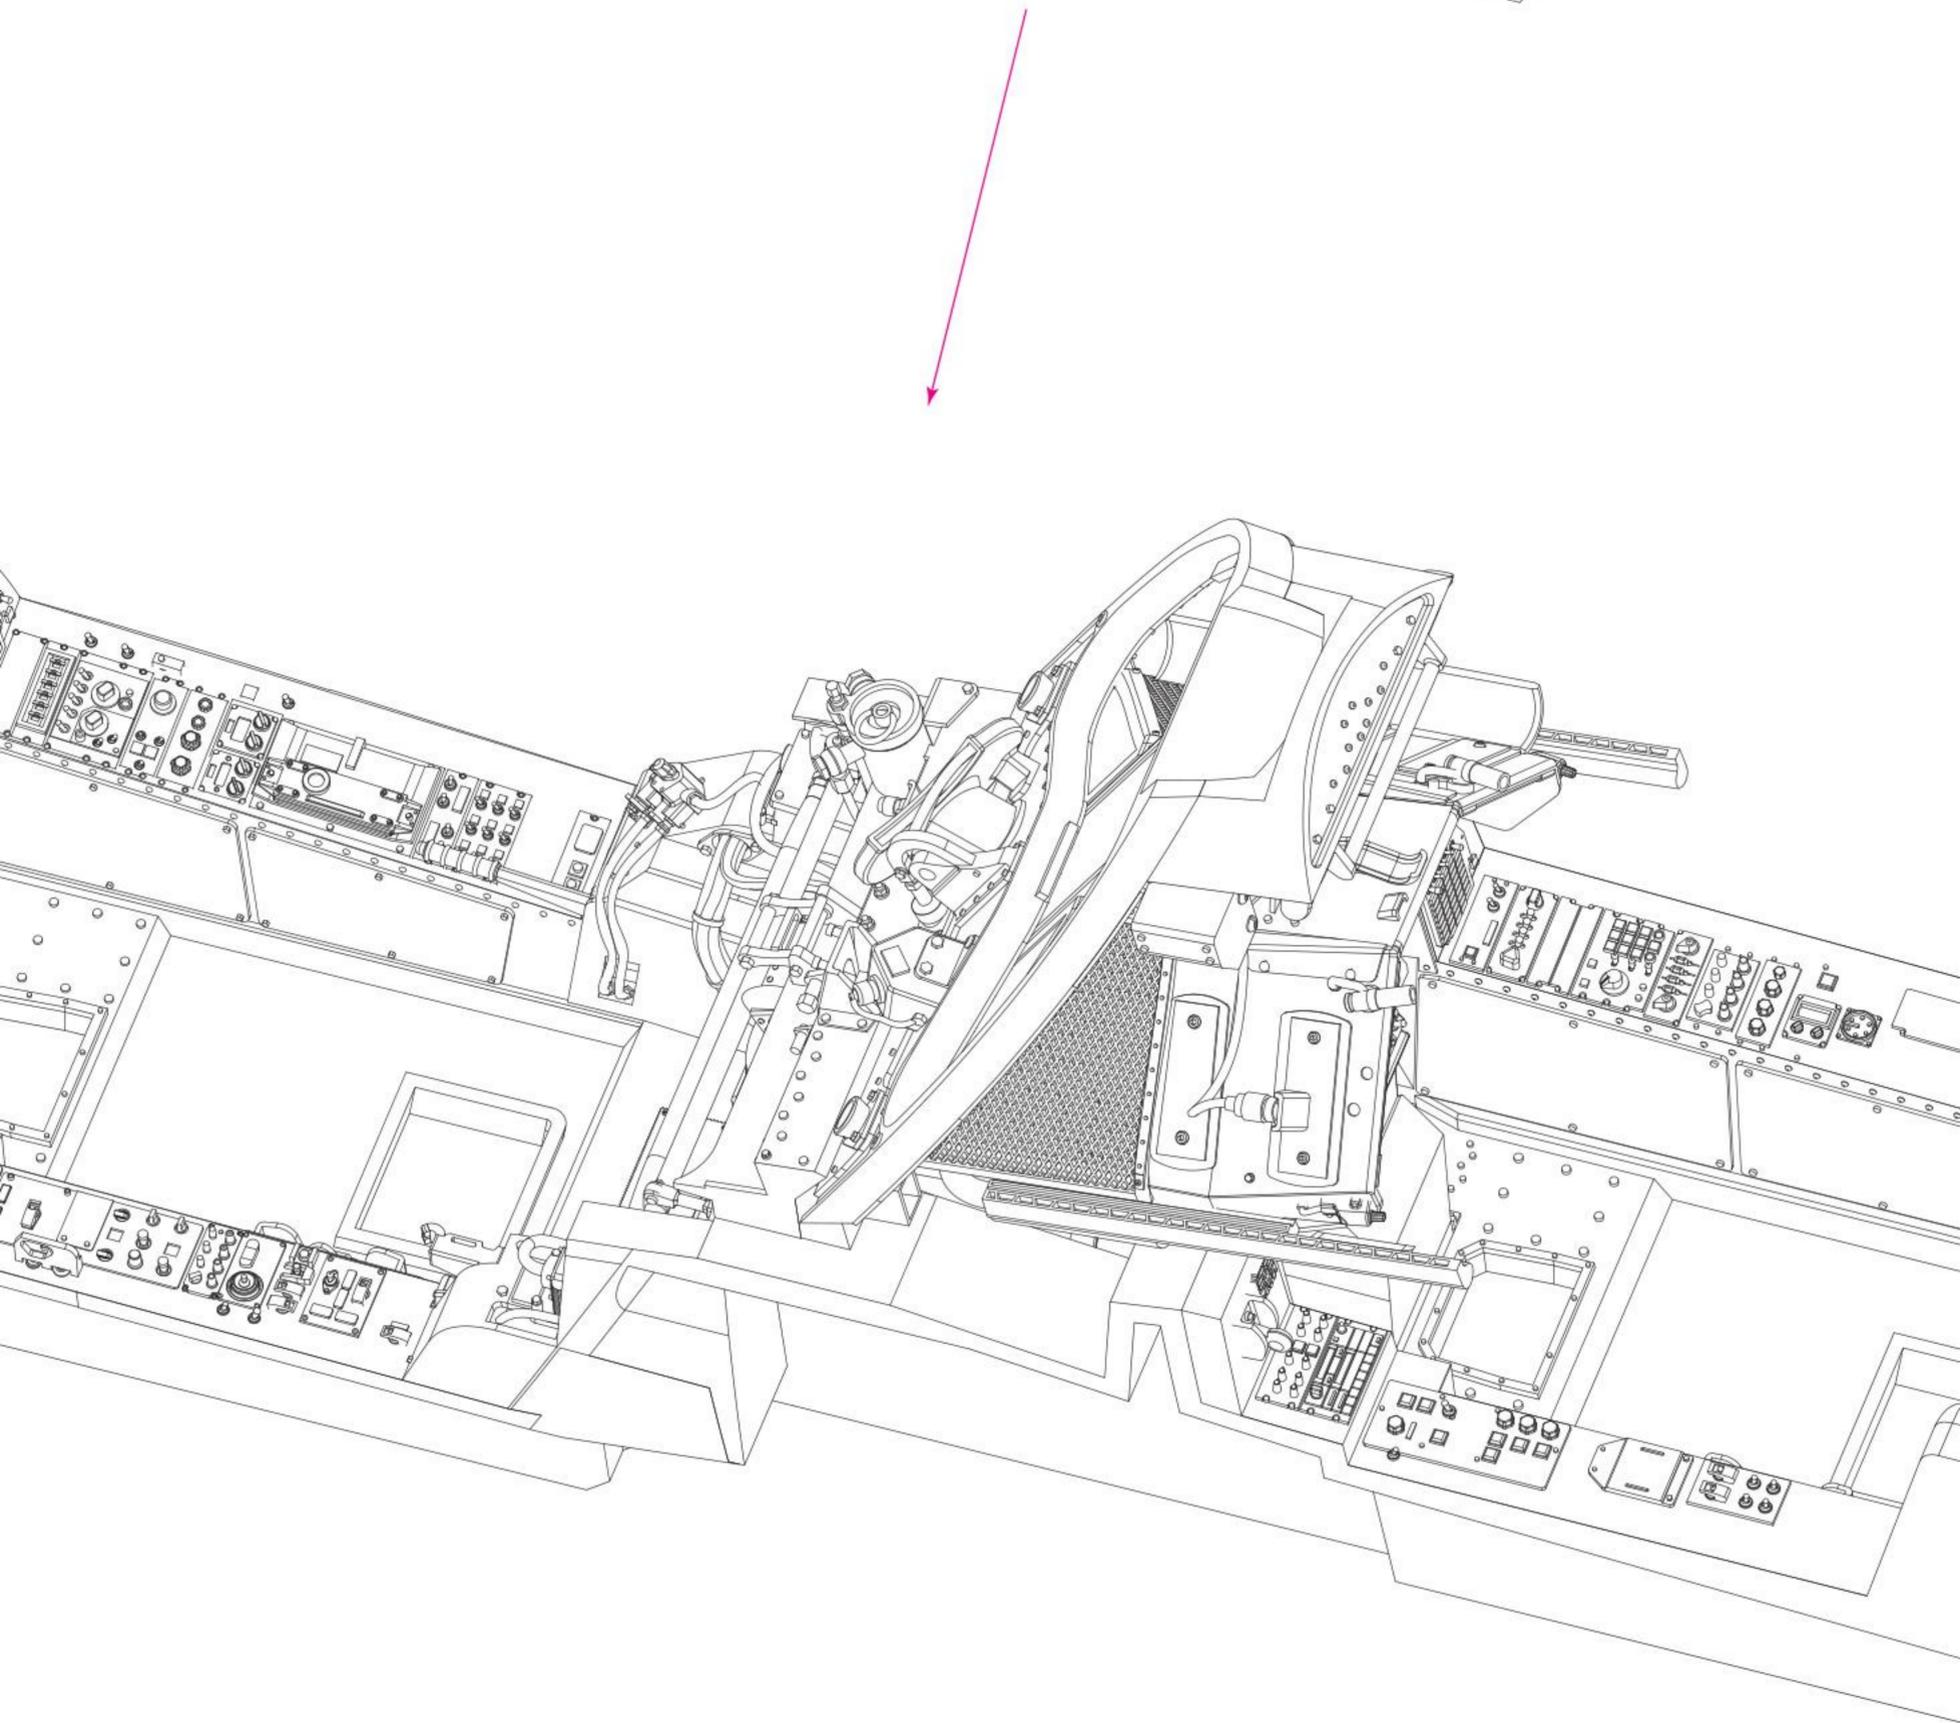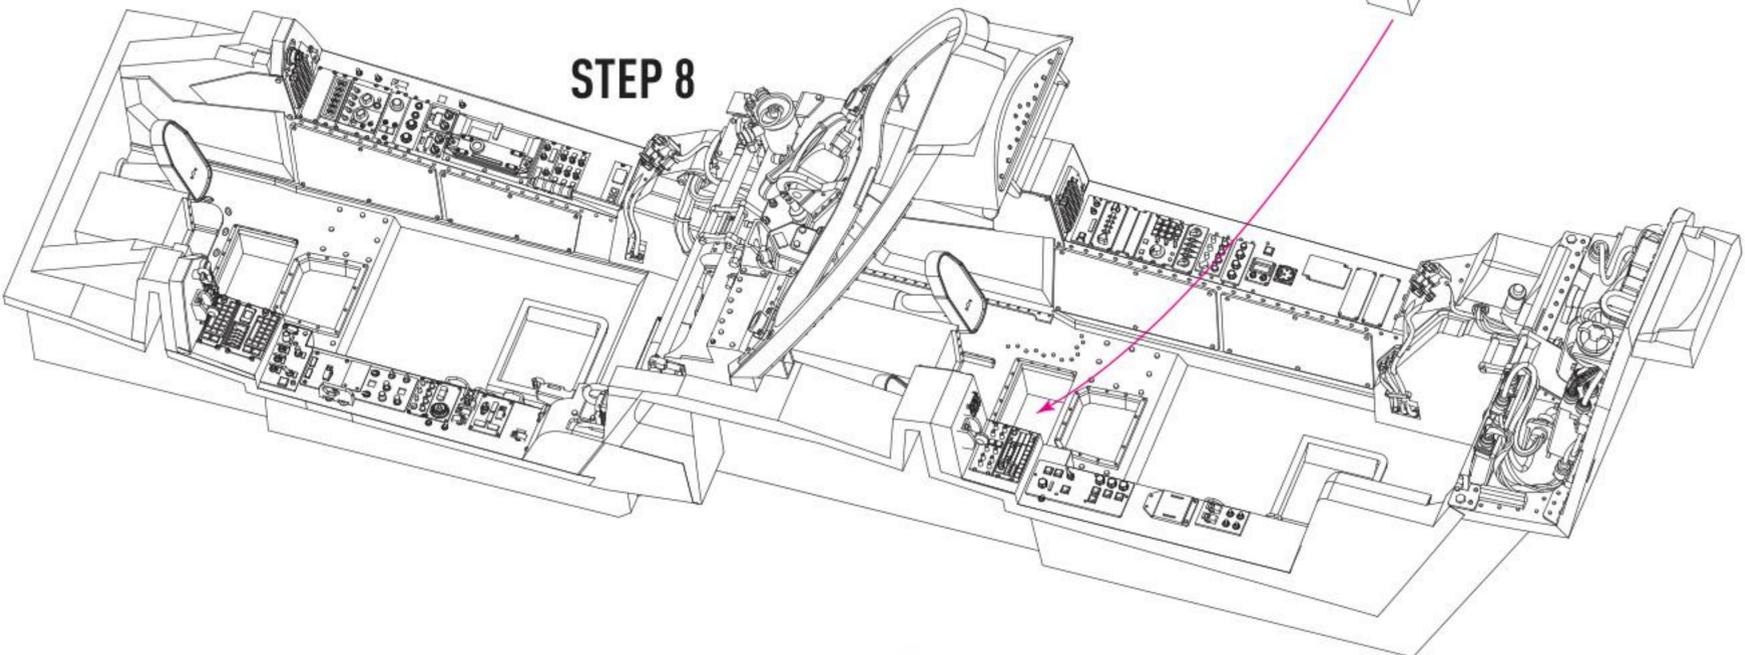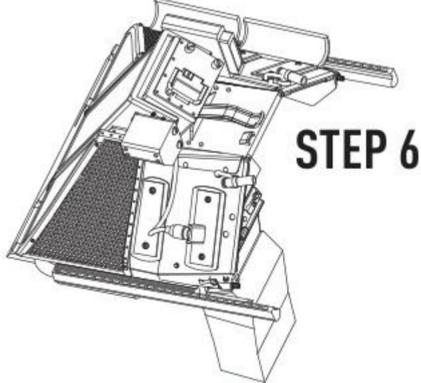


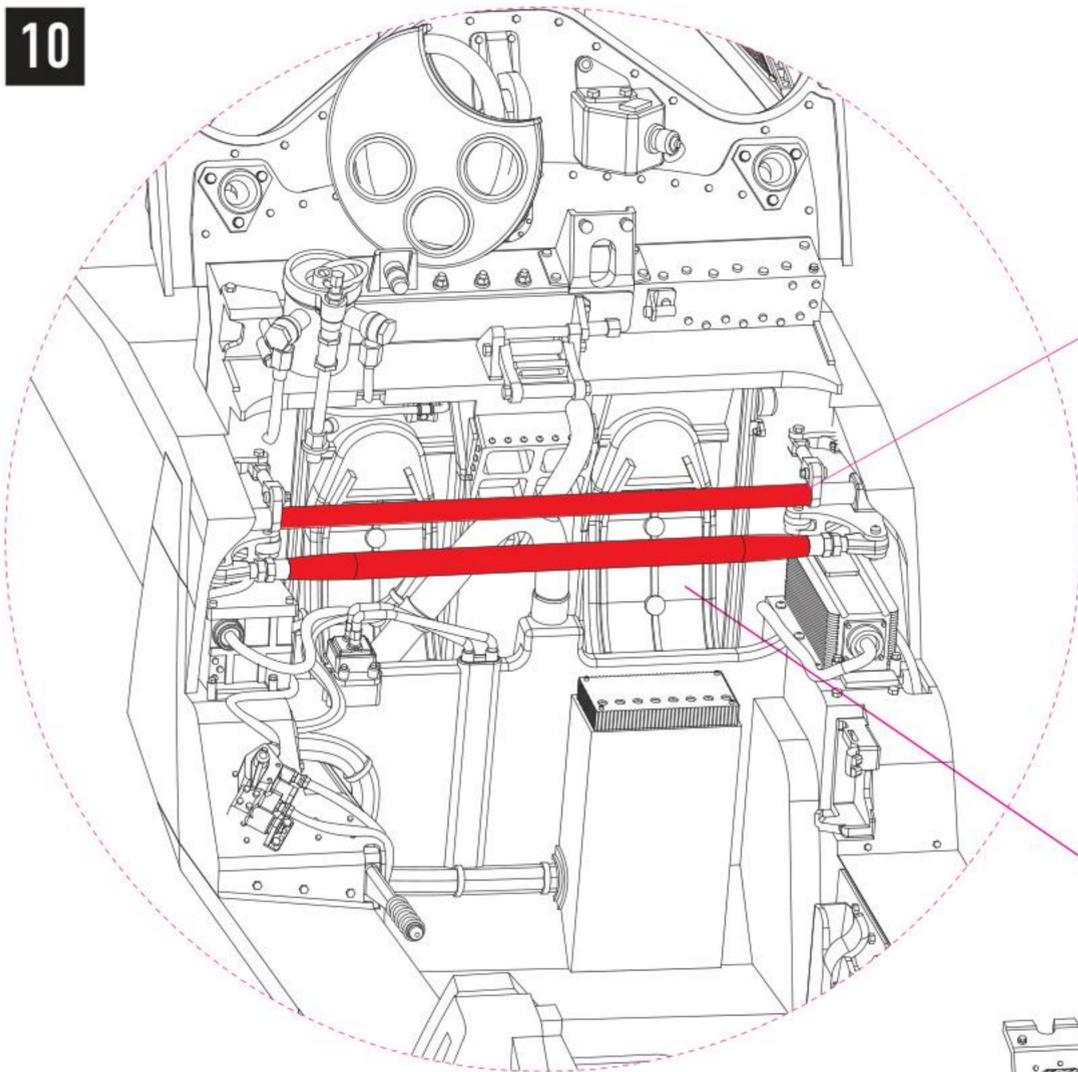


CUT FOR VERSION WITH BARS

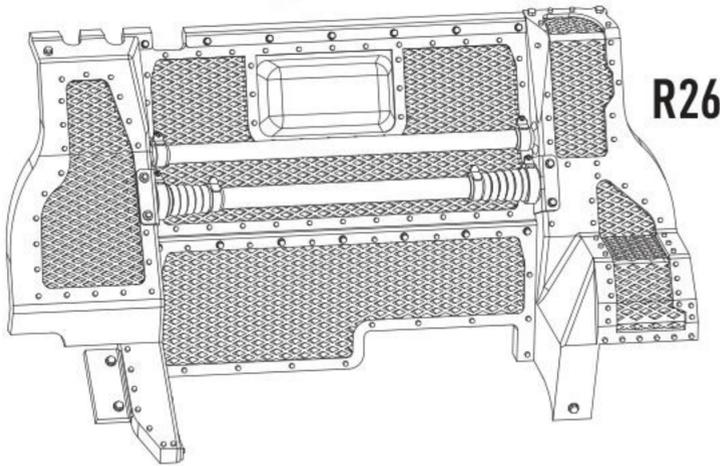


R26

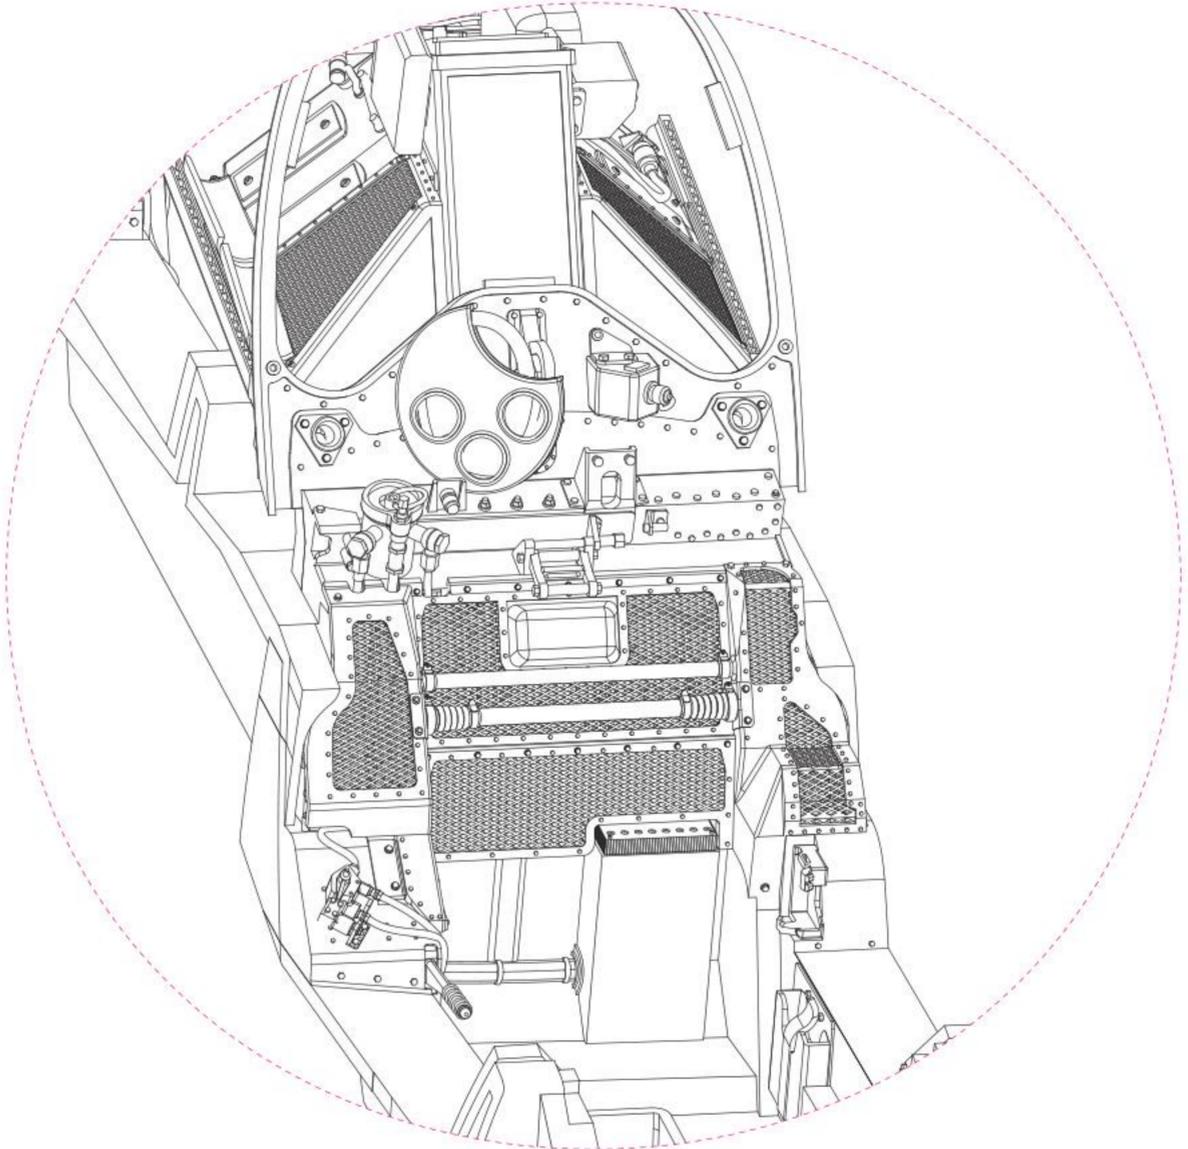

11

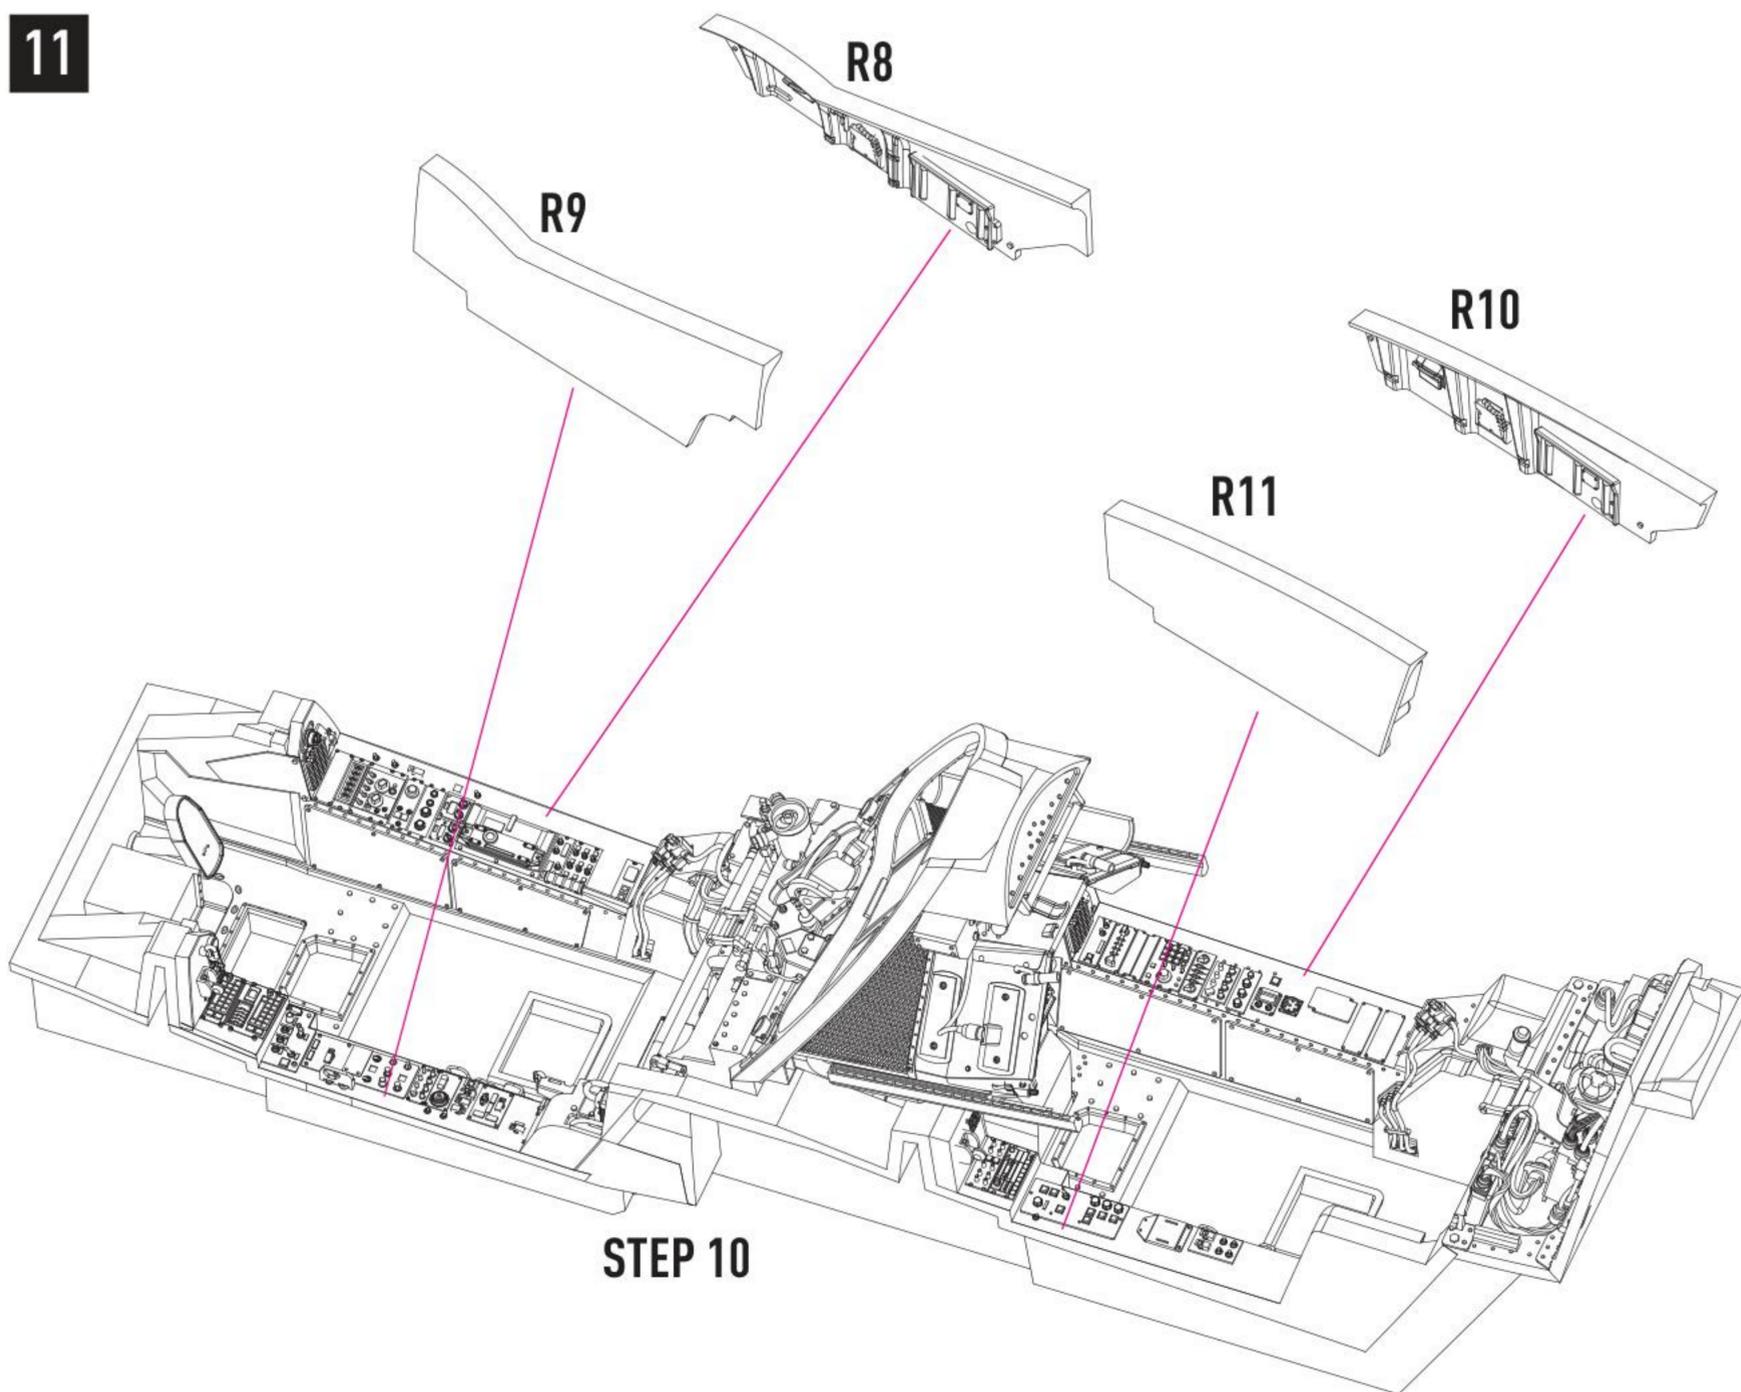


12

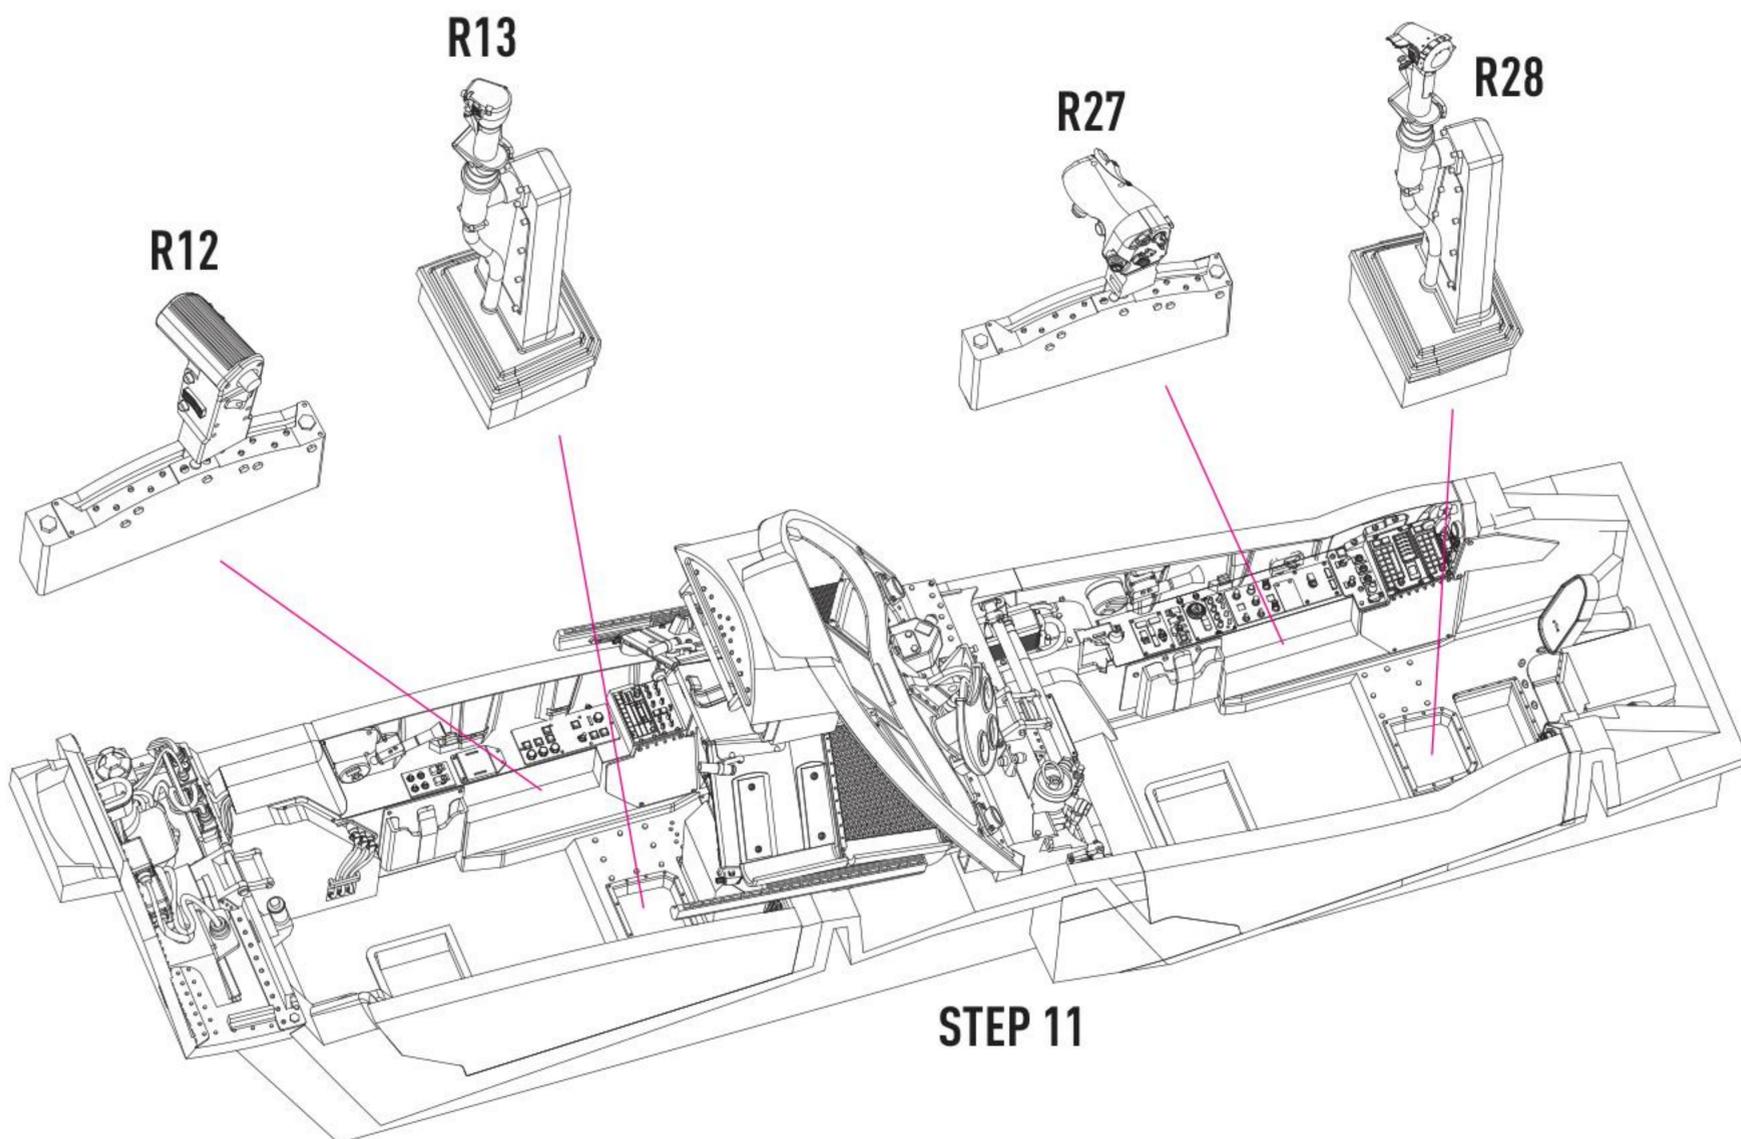


13

PART FROM THE KIT


CUT 2,4 MM

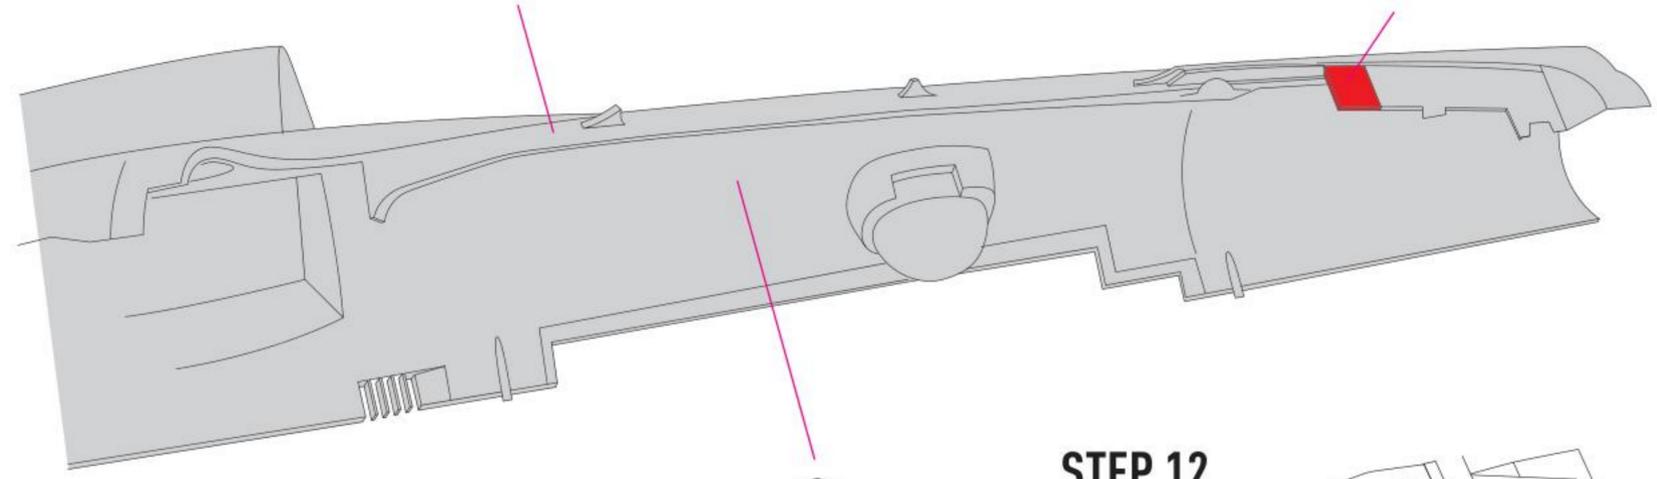


STEP 12

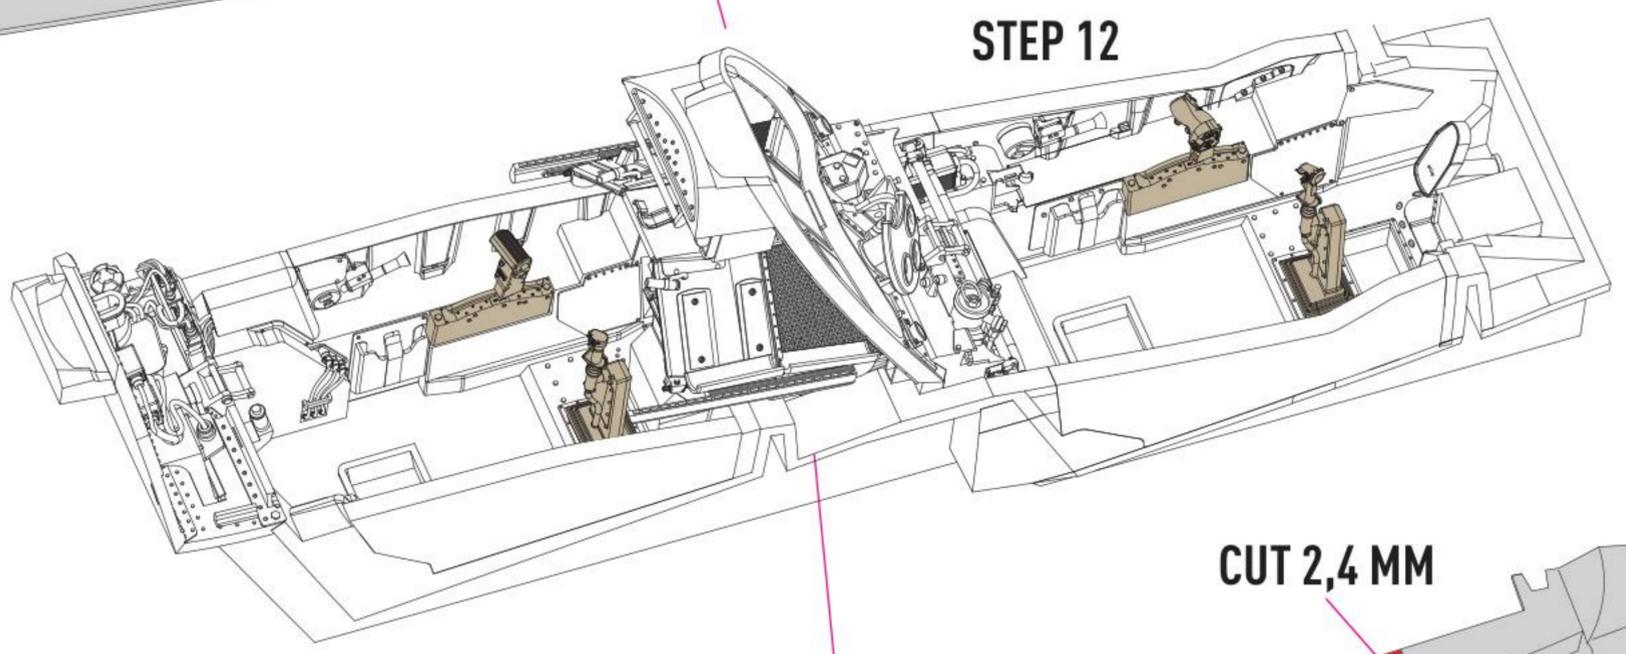


CUT 2,4 MM

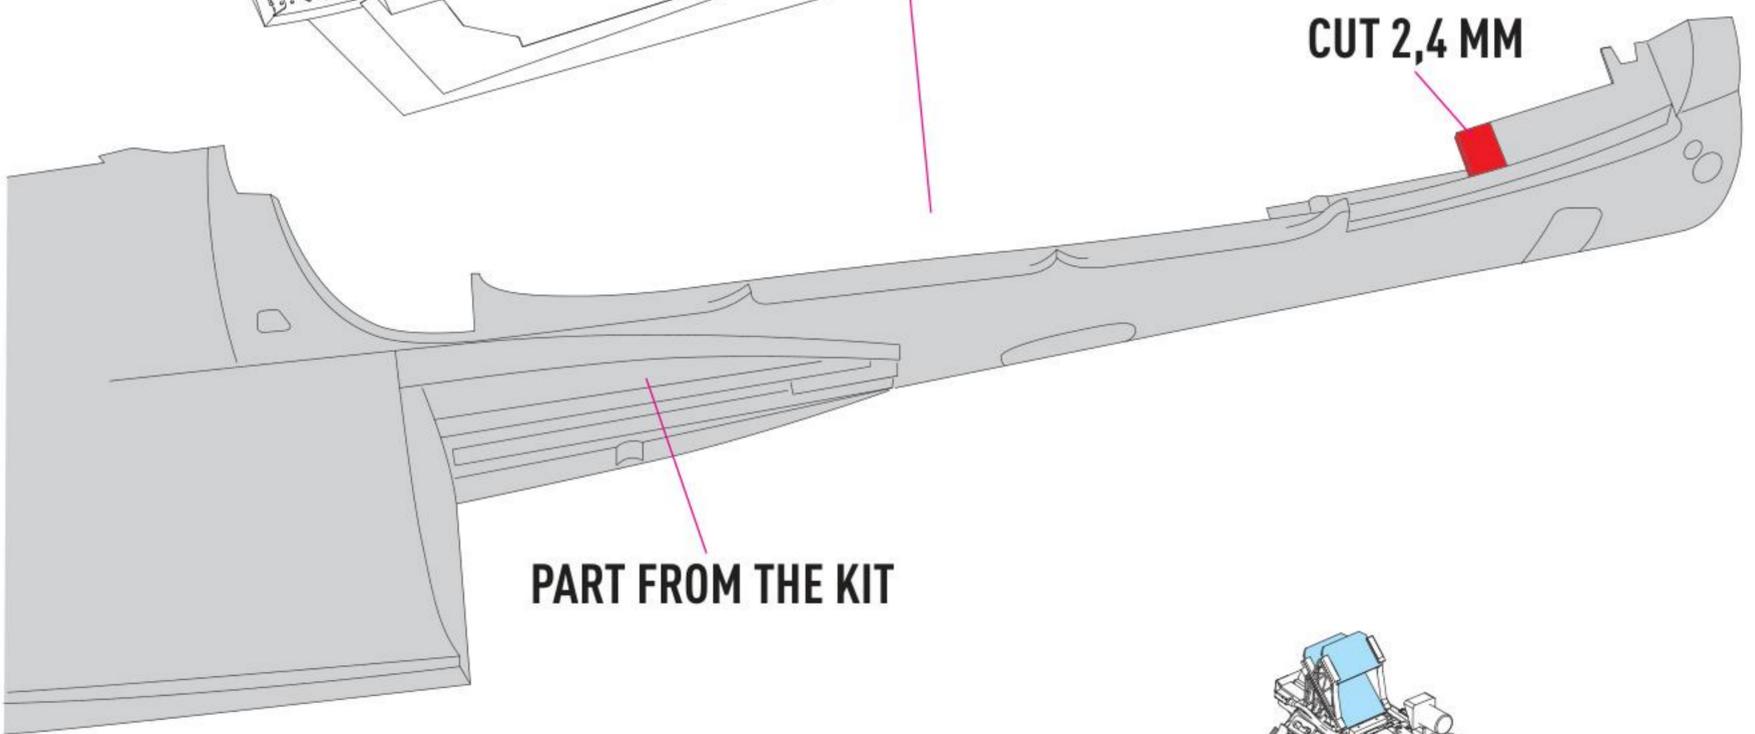


PART FROM THE KIT

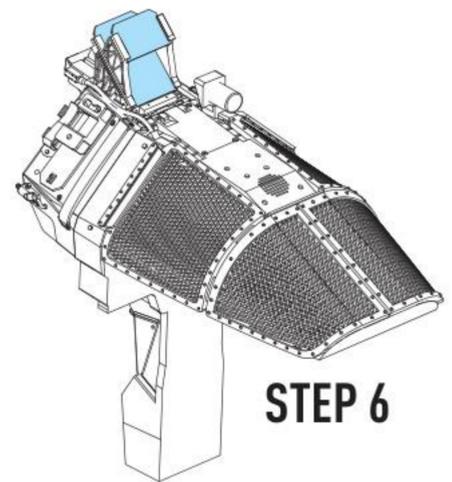


STEP 6

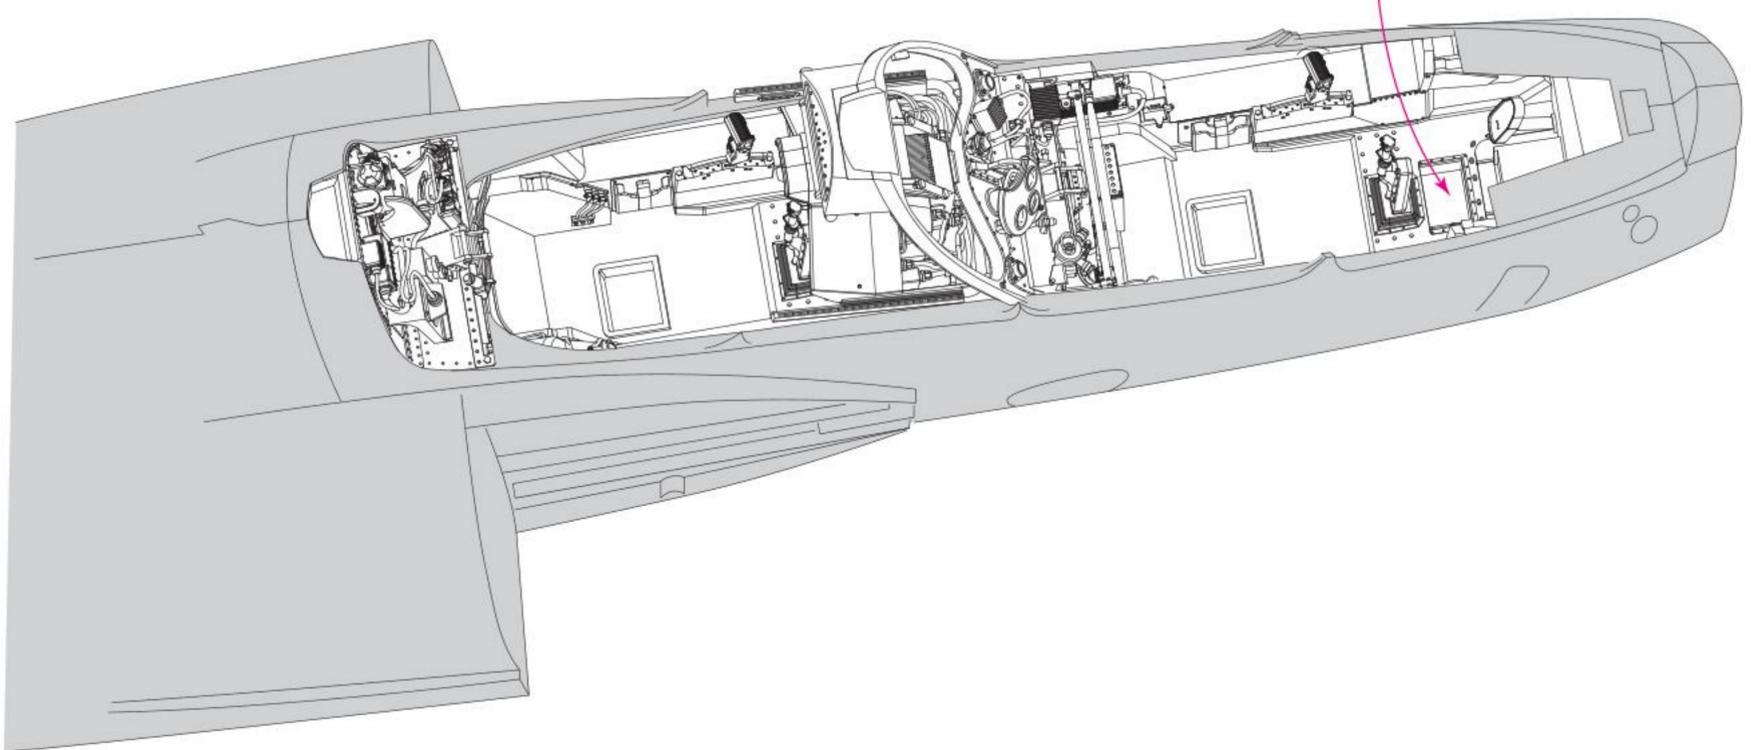

14

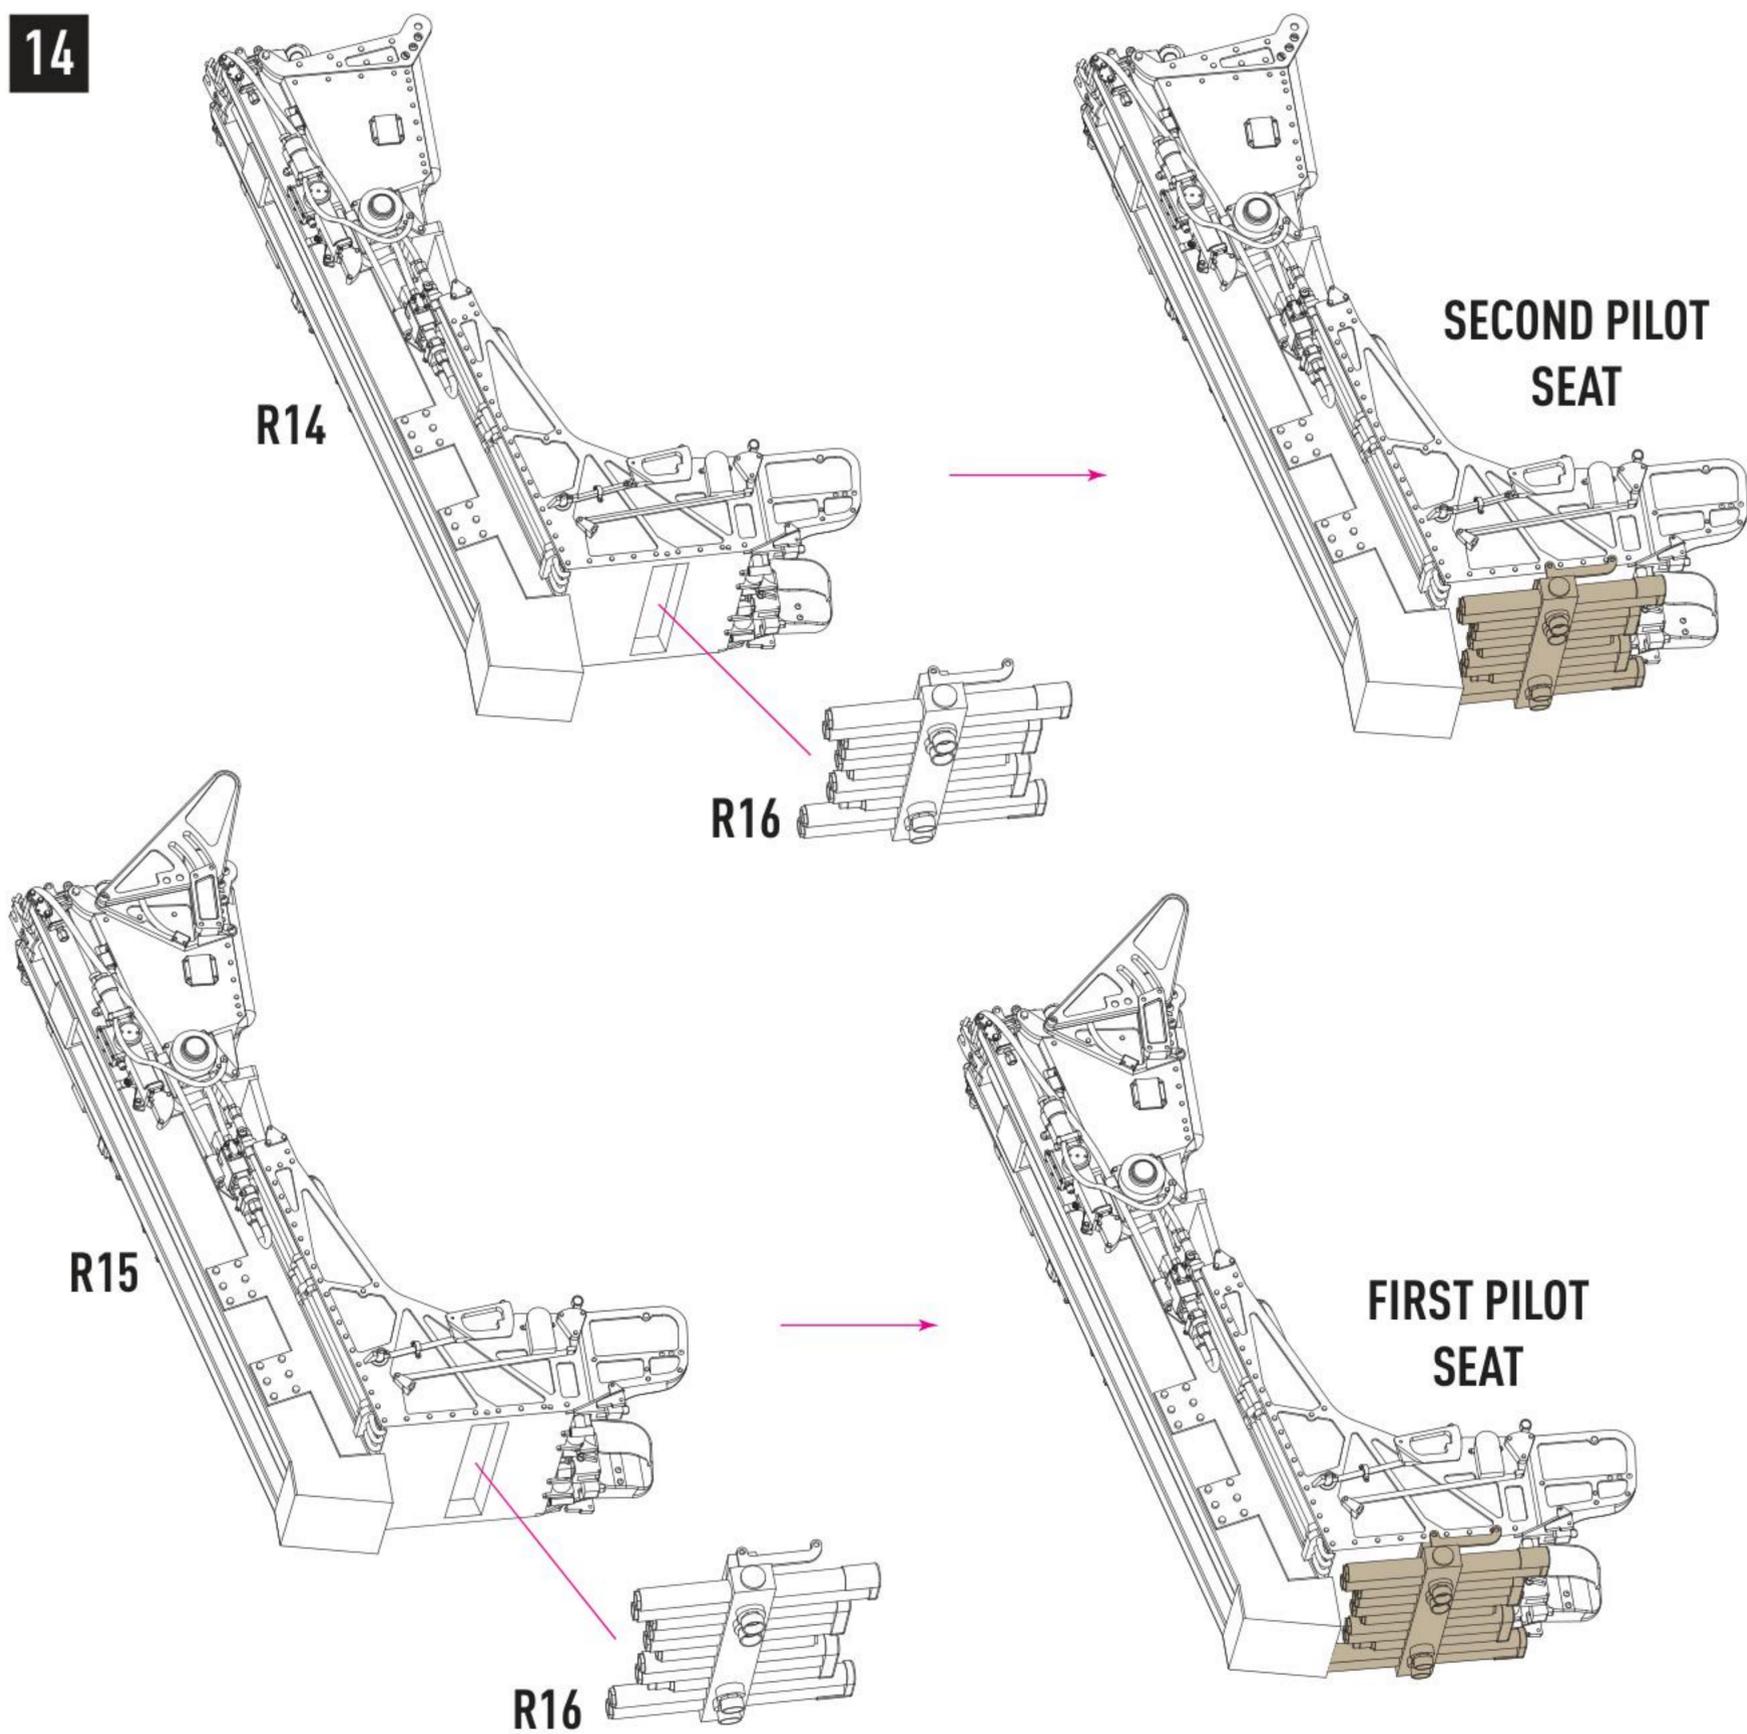


15

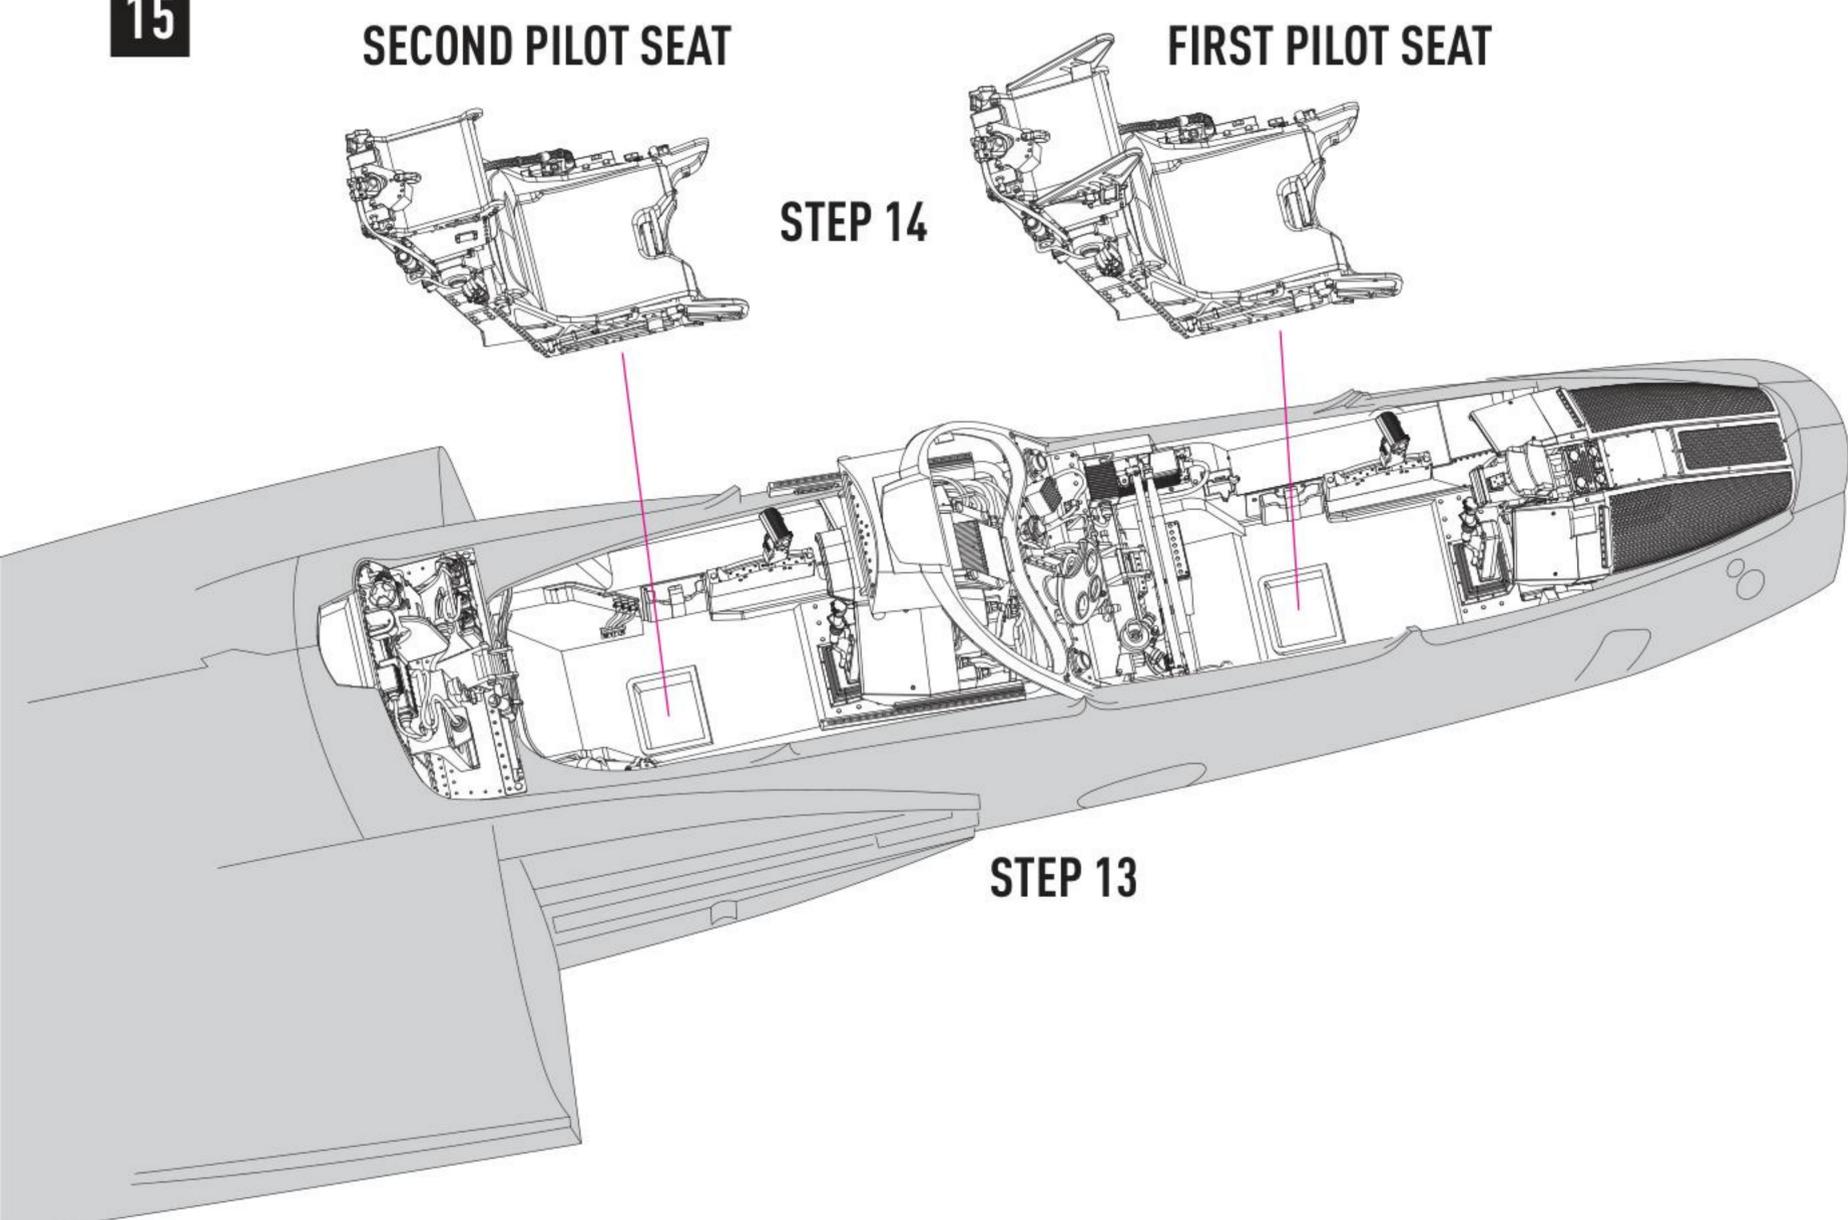

R18
FOR CLOSED
COCKPIT


R17
FOR OPEN
COCKPIT

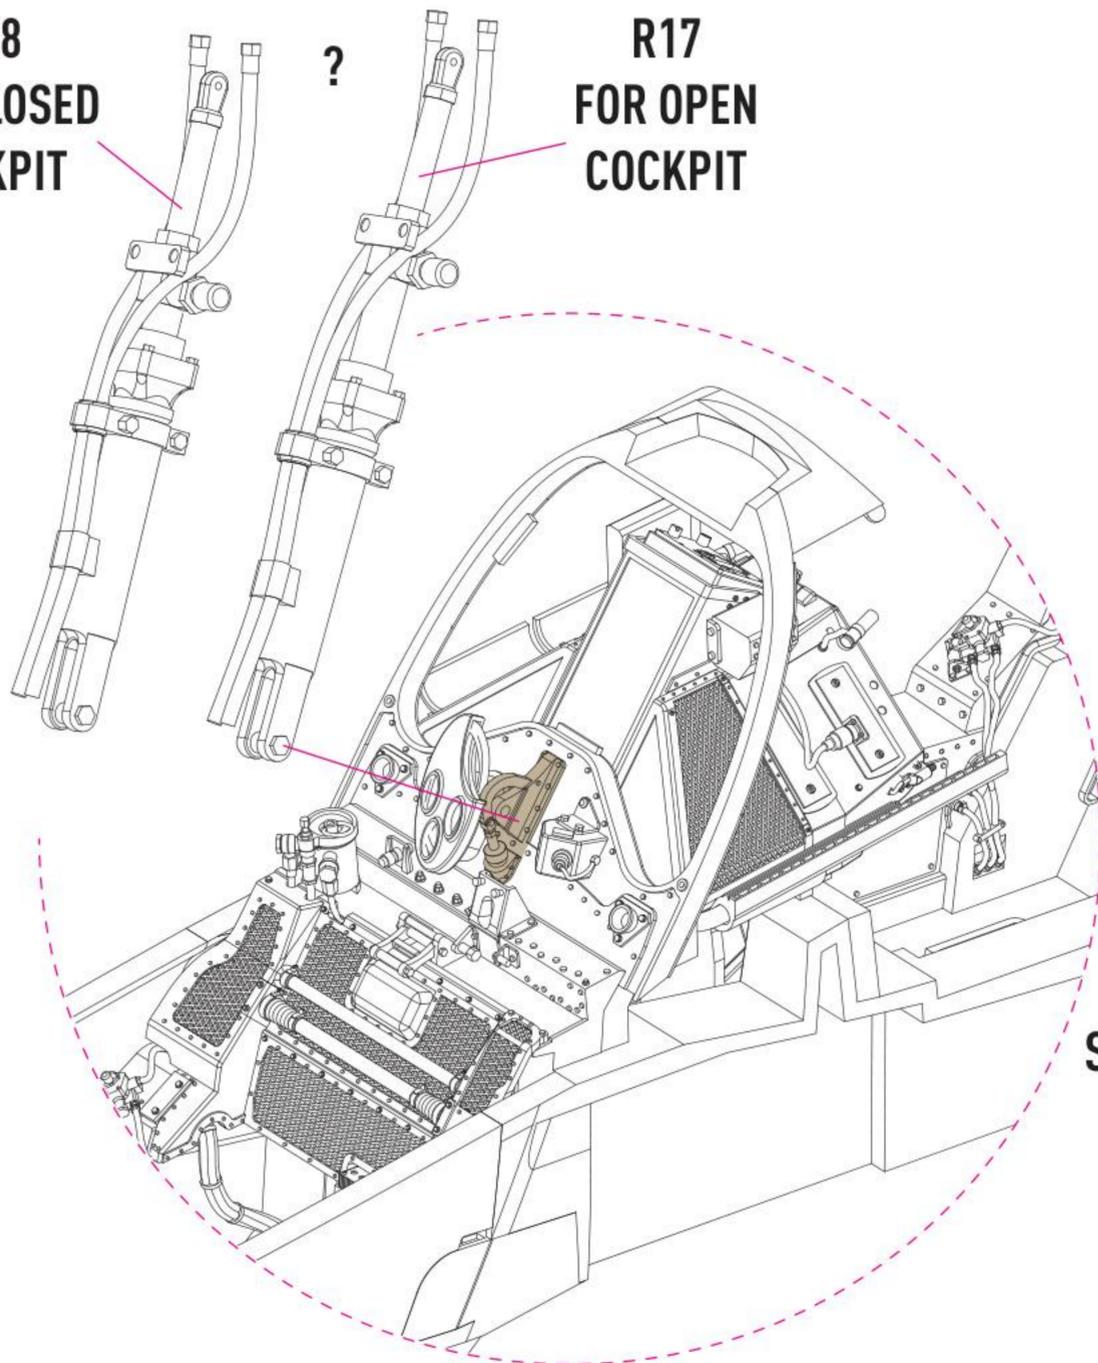

STEP 15

R19
FOR OPEN
COCKPIT

R20
FOR CLOSED
COCKPIT

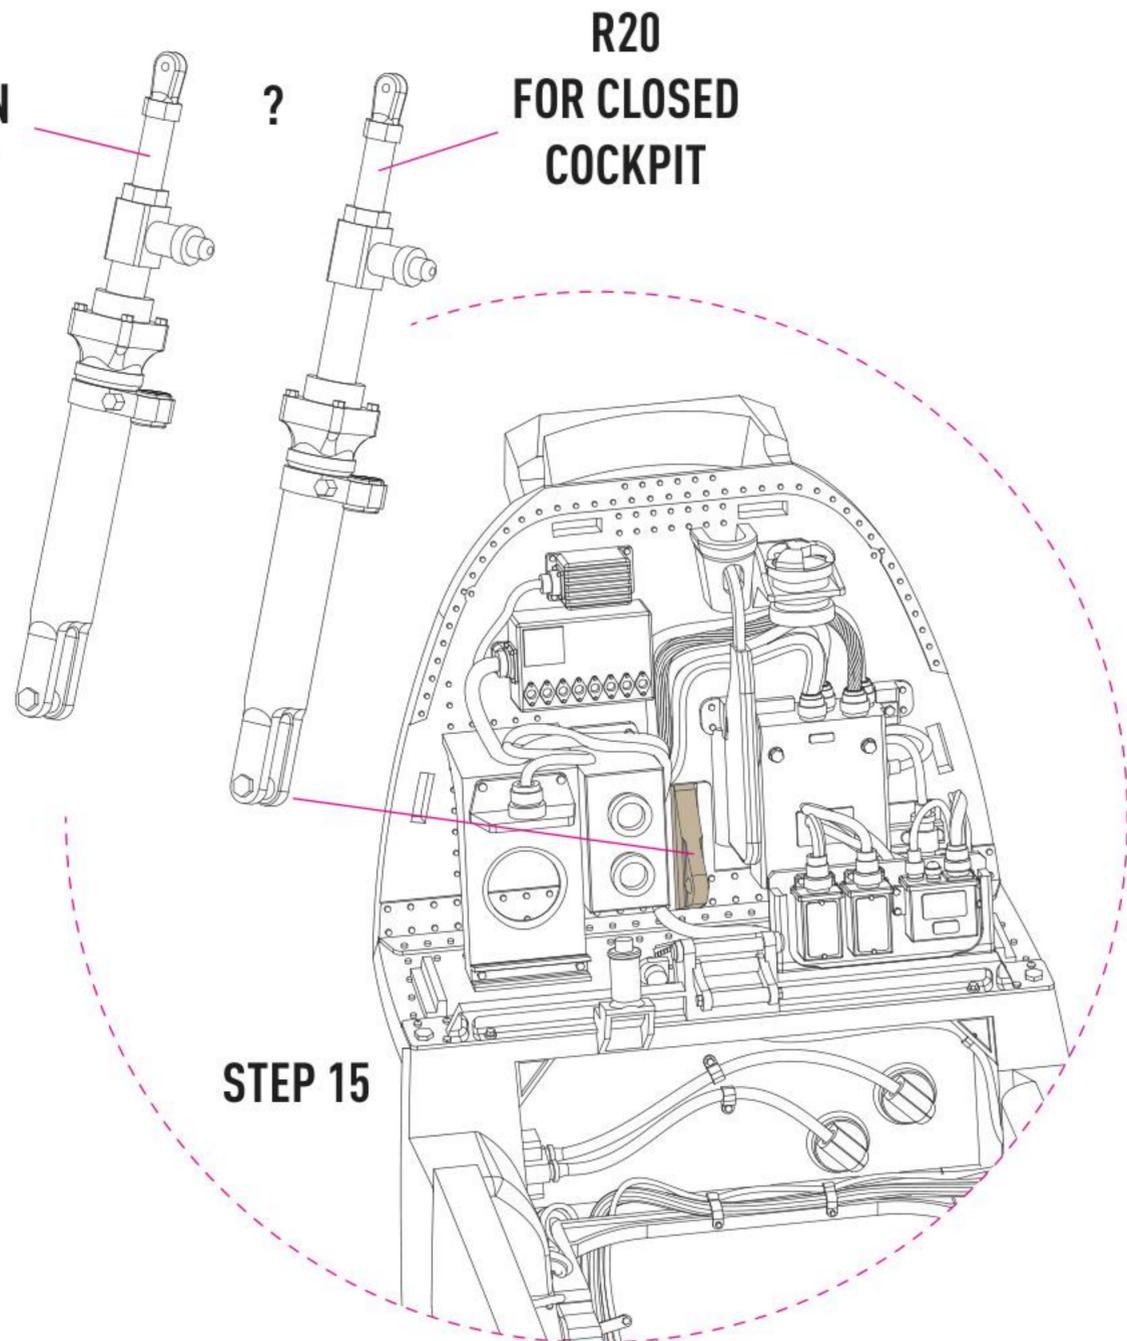


STEP 15

STEP 16




R21

R22

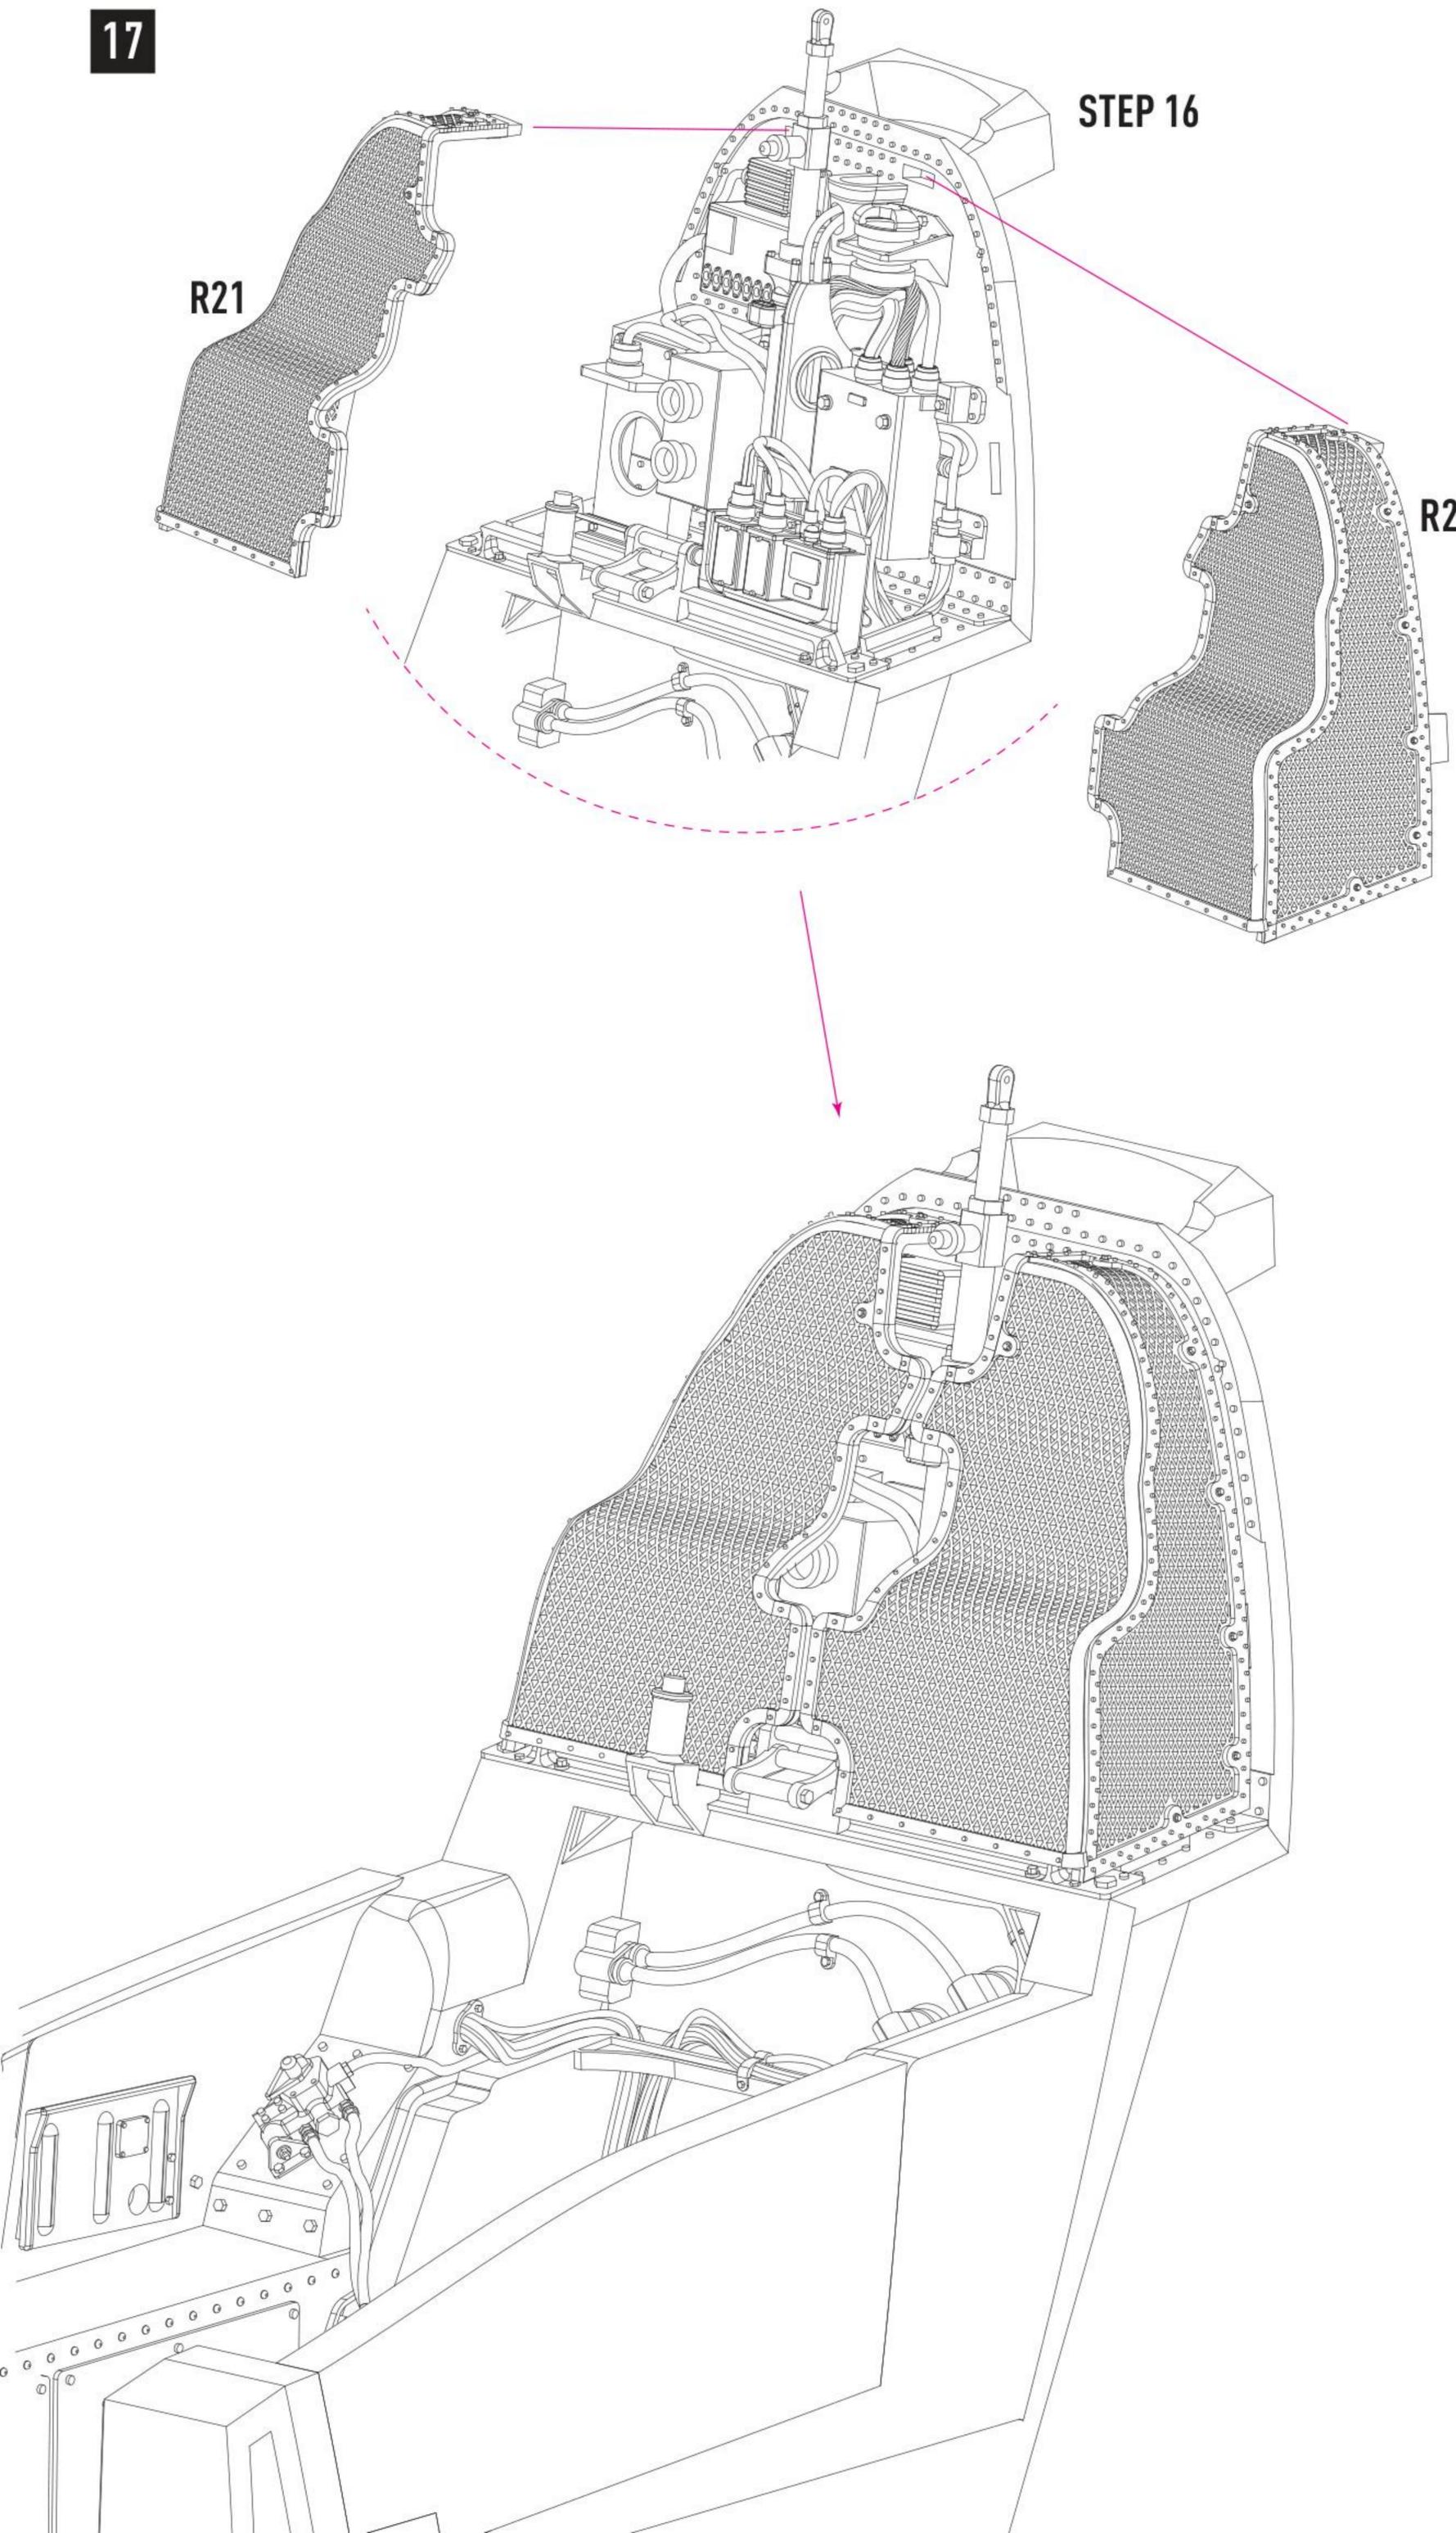

STEP 17

R7

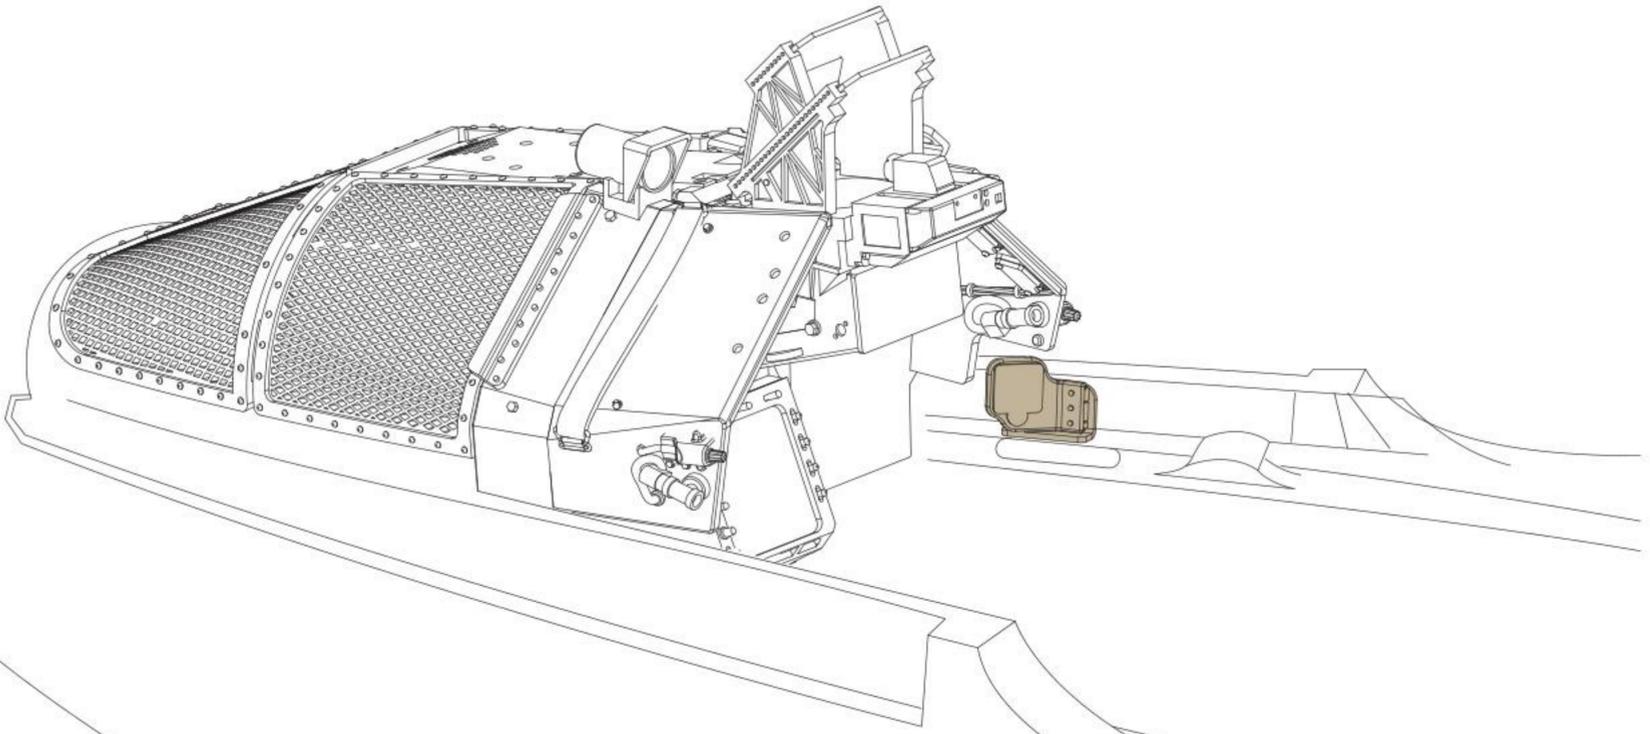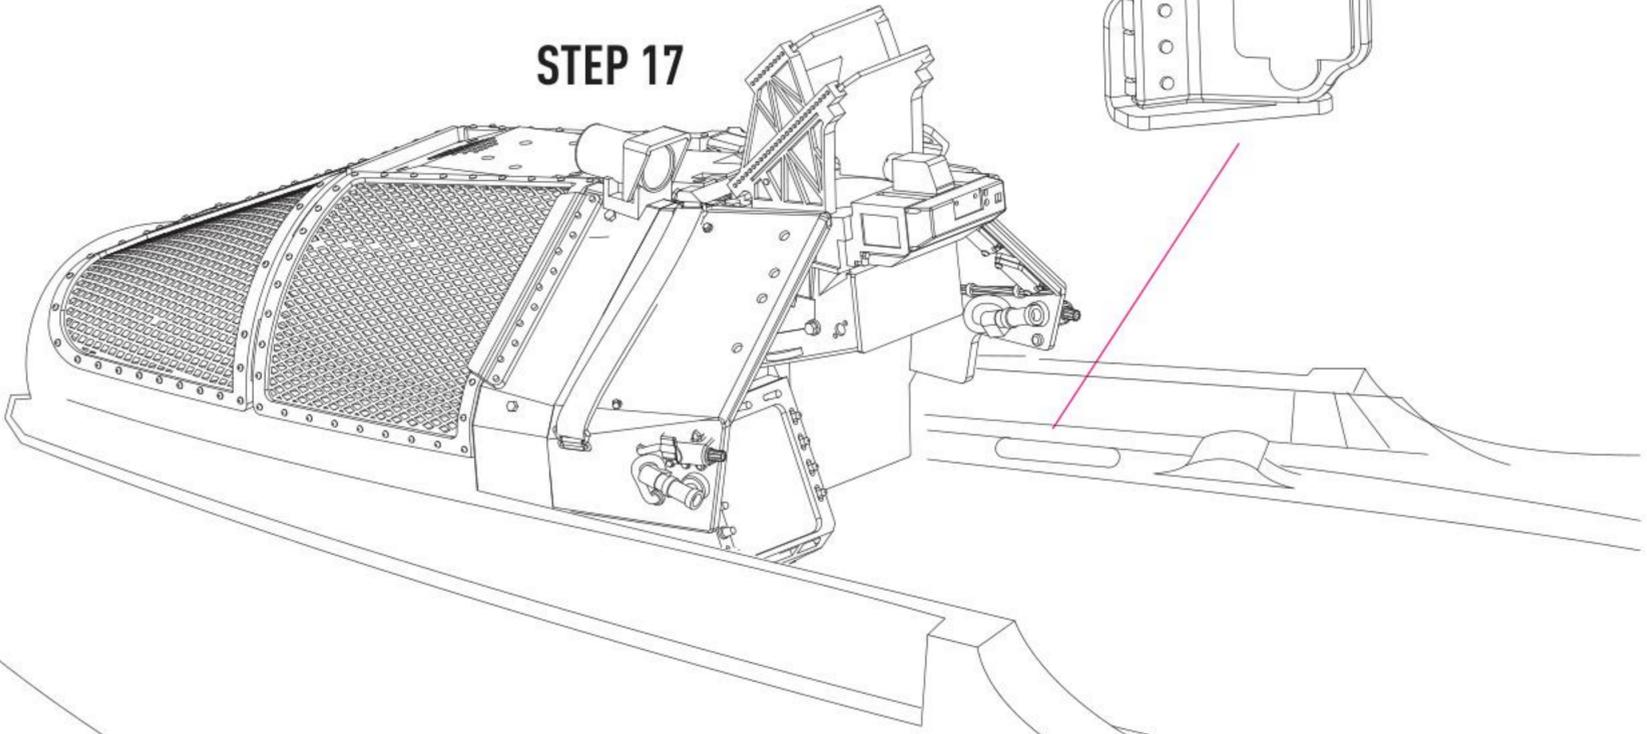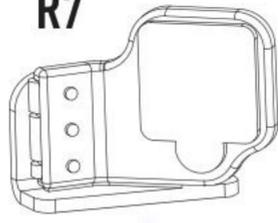

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua