



COLORS	GUNZE / AOEIOUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304
ORANGE-GLOSS		C59

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL
FROM SUPPORTS

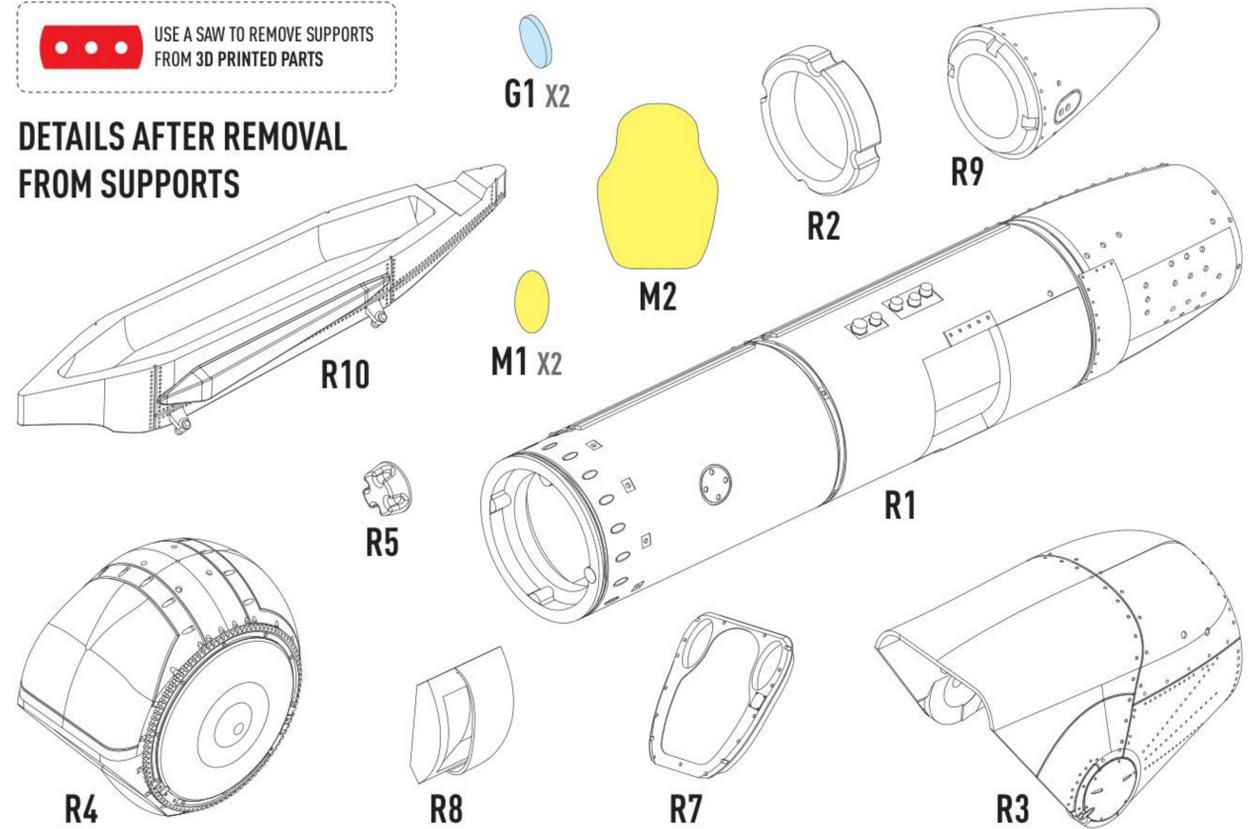

1

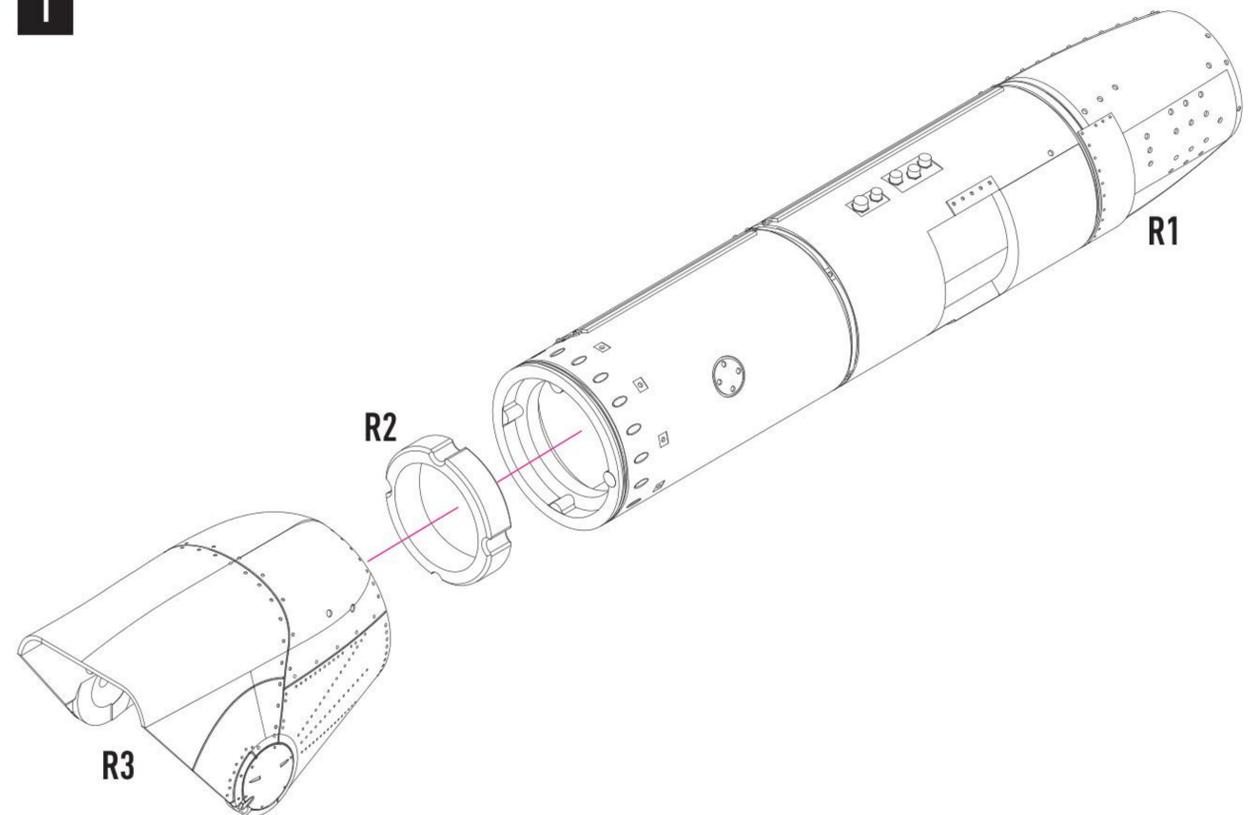

2 BEFORE INSTALLING G1, APPLY CLEAR VARNISH

