




8

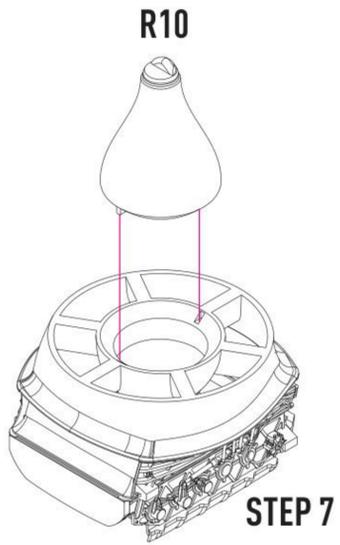


9

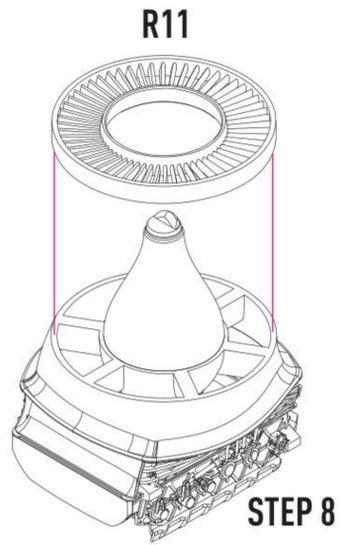


10

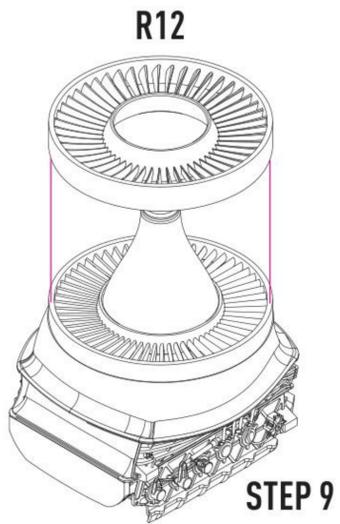


11

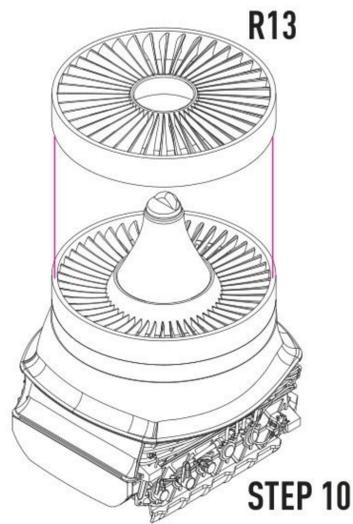

12

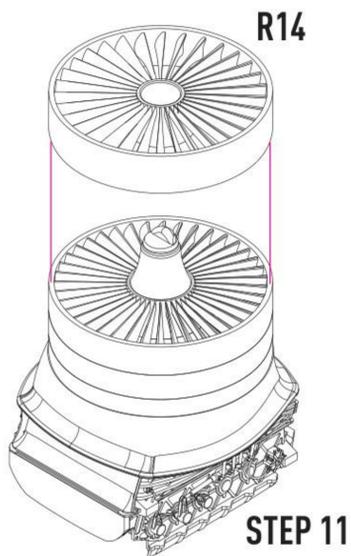














13

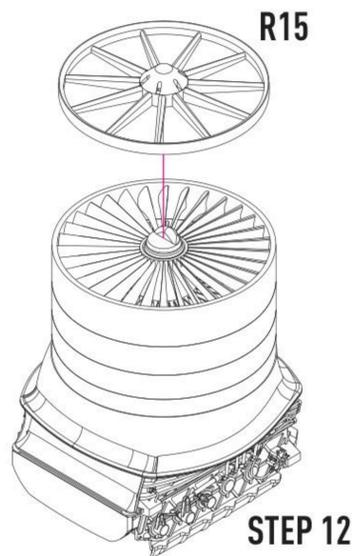


14 ON PAGE 11, STEP 10 OF THE TRUMPETER KIT INSTRUCTION,
REPLACE PARTS W20, W9, W14, W18, W8 WITH STEP 13

DETAIL AFTER REMOVAL
FROM SPRUES



USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

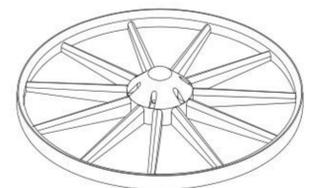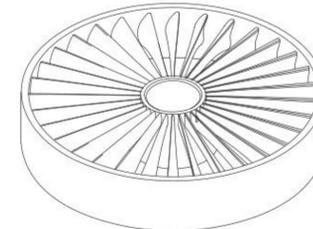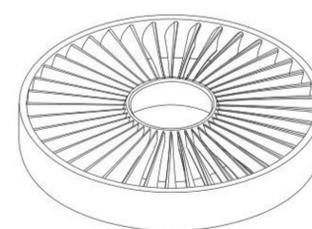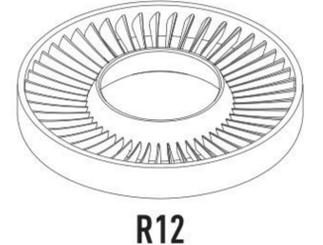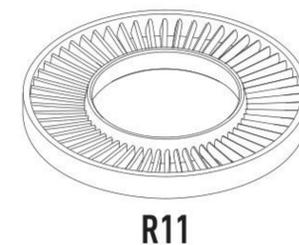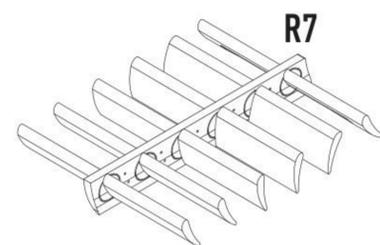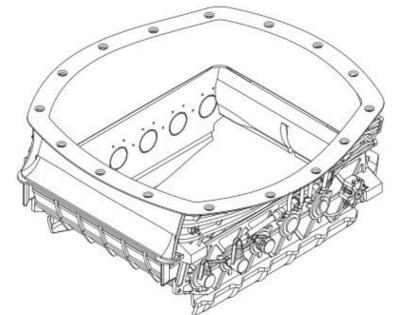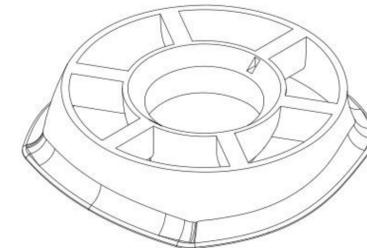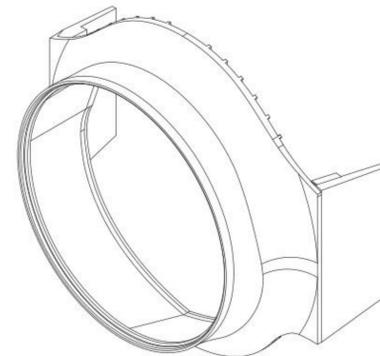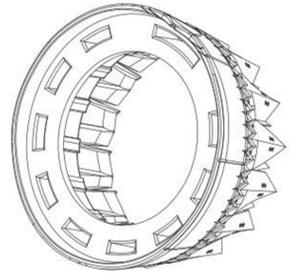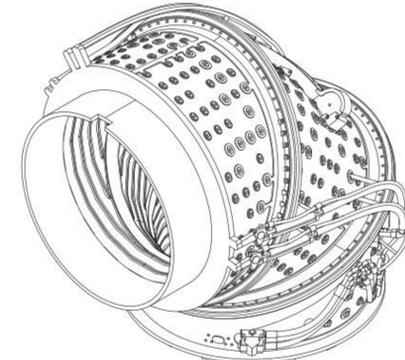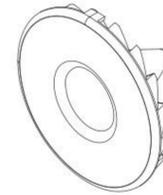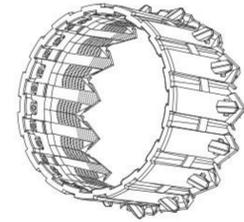

1 ON PAGE 9, STEP 7 IN TRUMPETER INSTRUCTIONS, DO NOT USE PARTS L5, L8, M19, M11. REMOVE MOUNTING TABS FOR PARTS M19. BEFORE INSTALLING R5, REMOVE ELEMENTS ON THE GLUED PARTS V2, V13, V3.

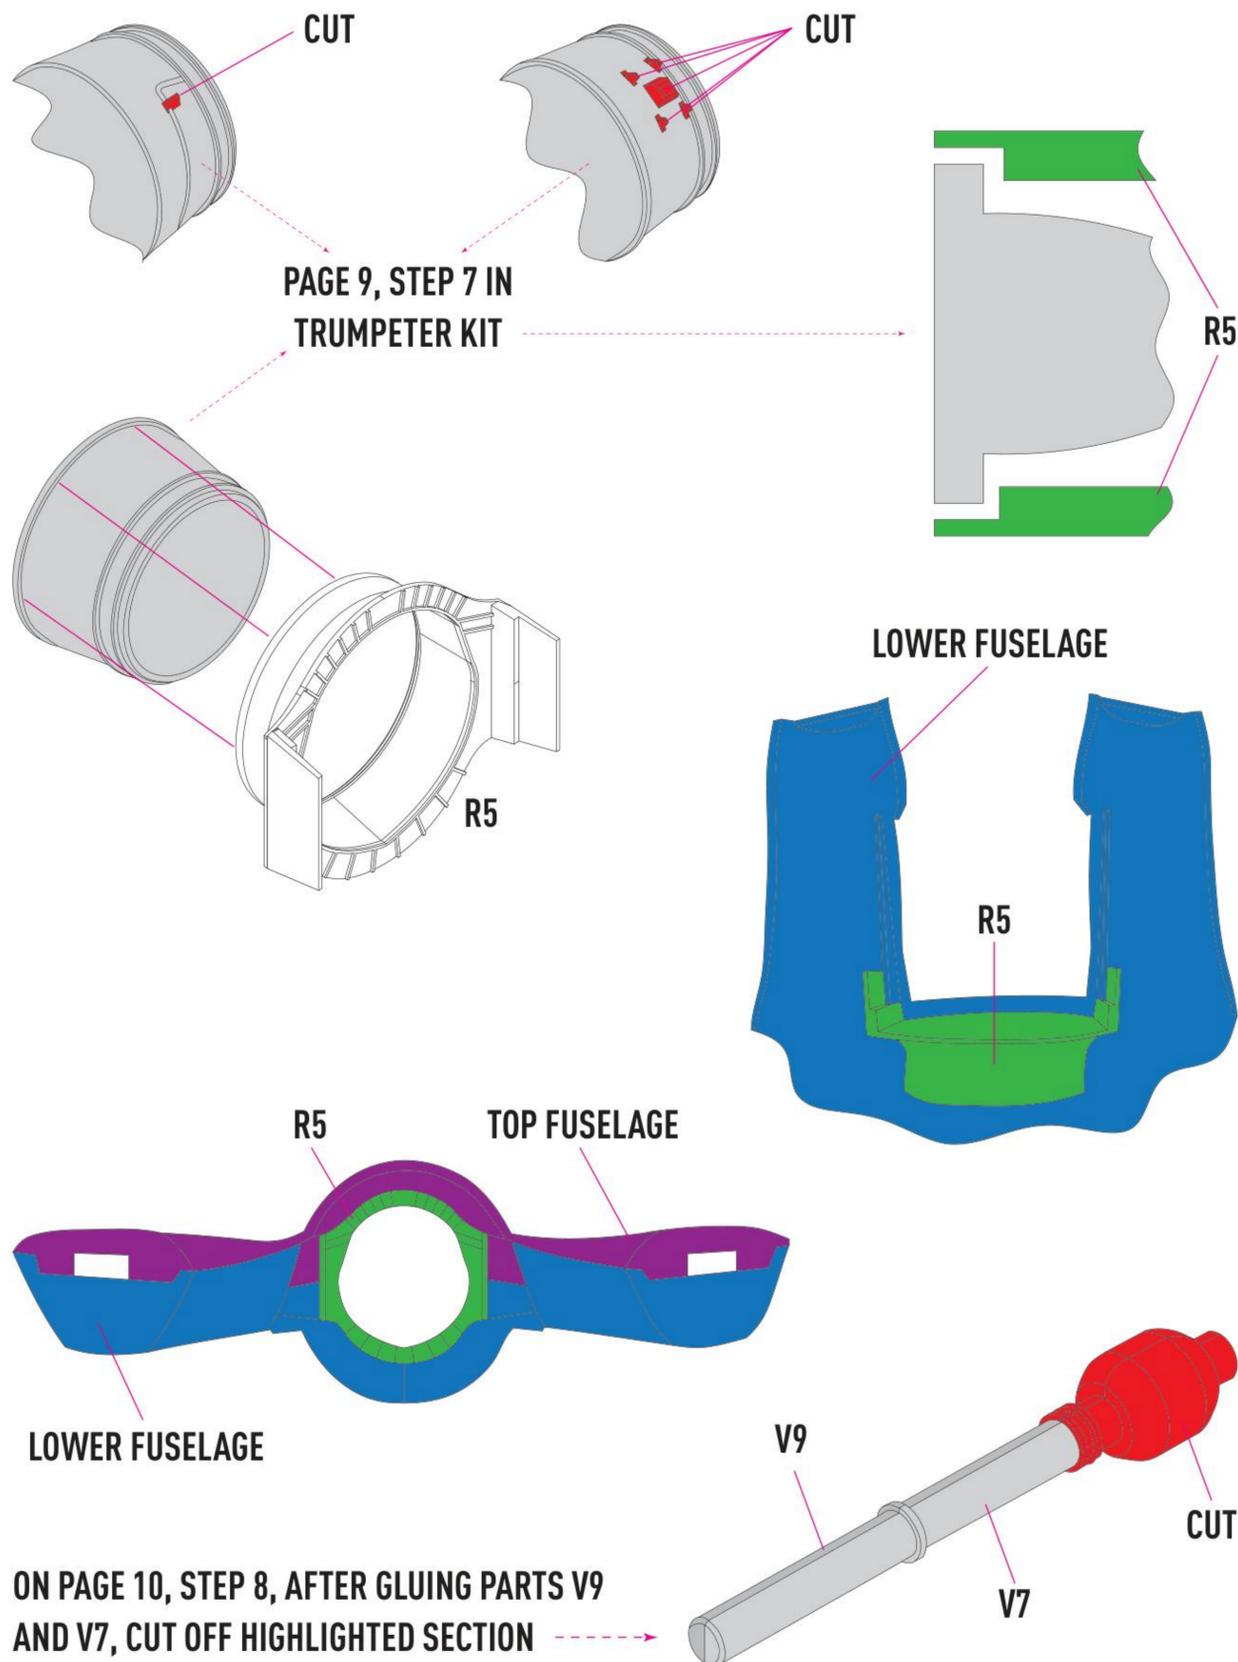

ON PAGE 10, STEP 8, AFTER GLUING PARTS V9 AND V7, CUT OFF HIGHLIGHTED SECTION

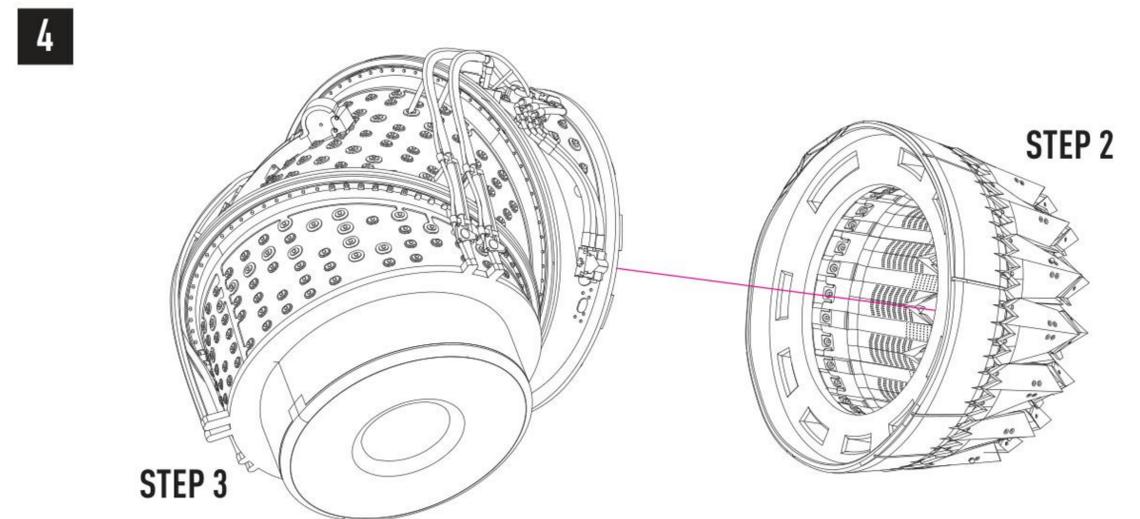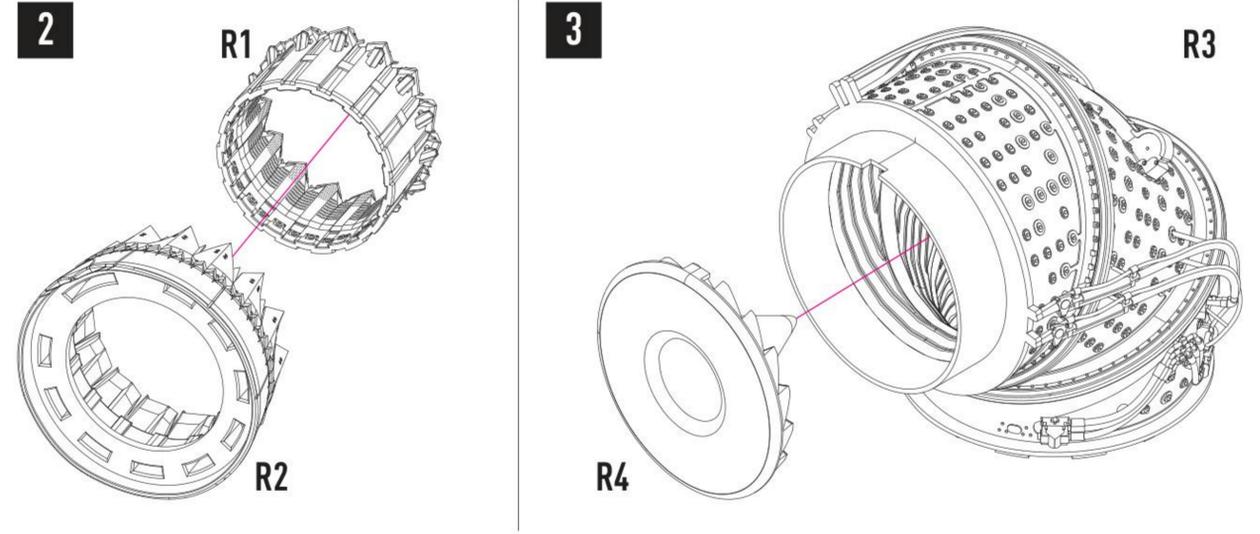

5 ON PAGE 10, STEP 8 OF THE TRUMPETER KIT INSTRUCTION, REPLACE PARTS M13X6, L12, W11, G2, W1, V6, V11, V12 WITH STEP 4

