


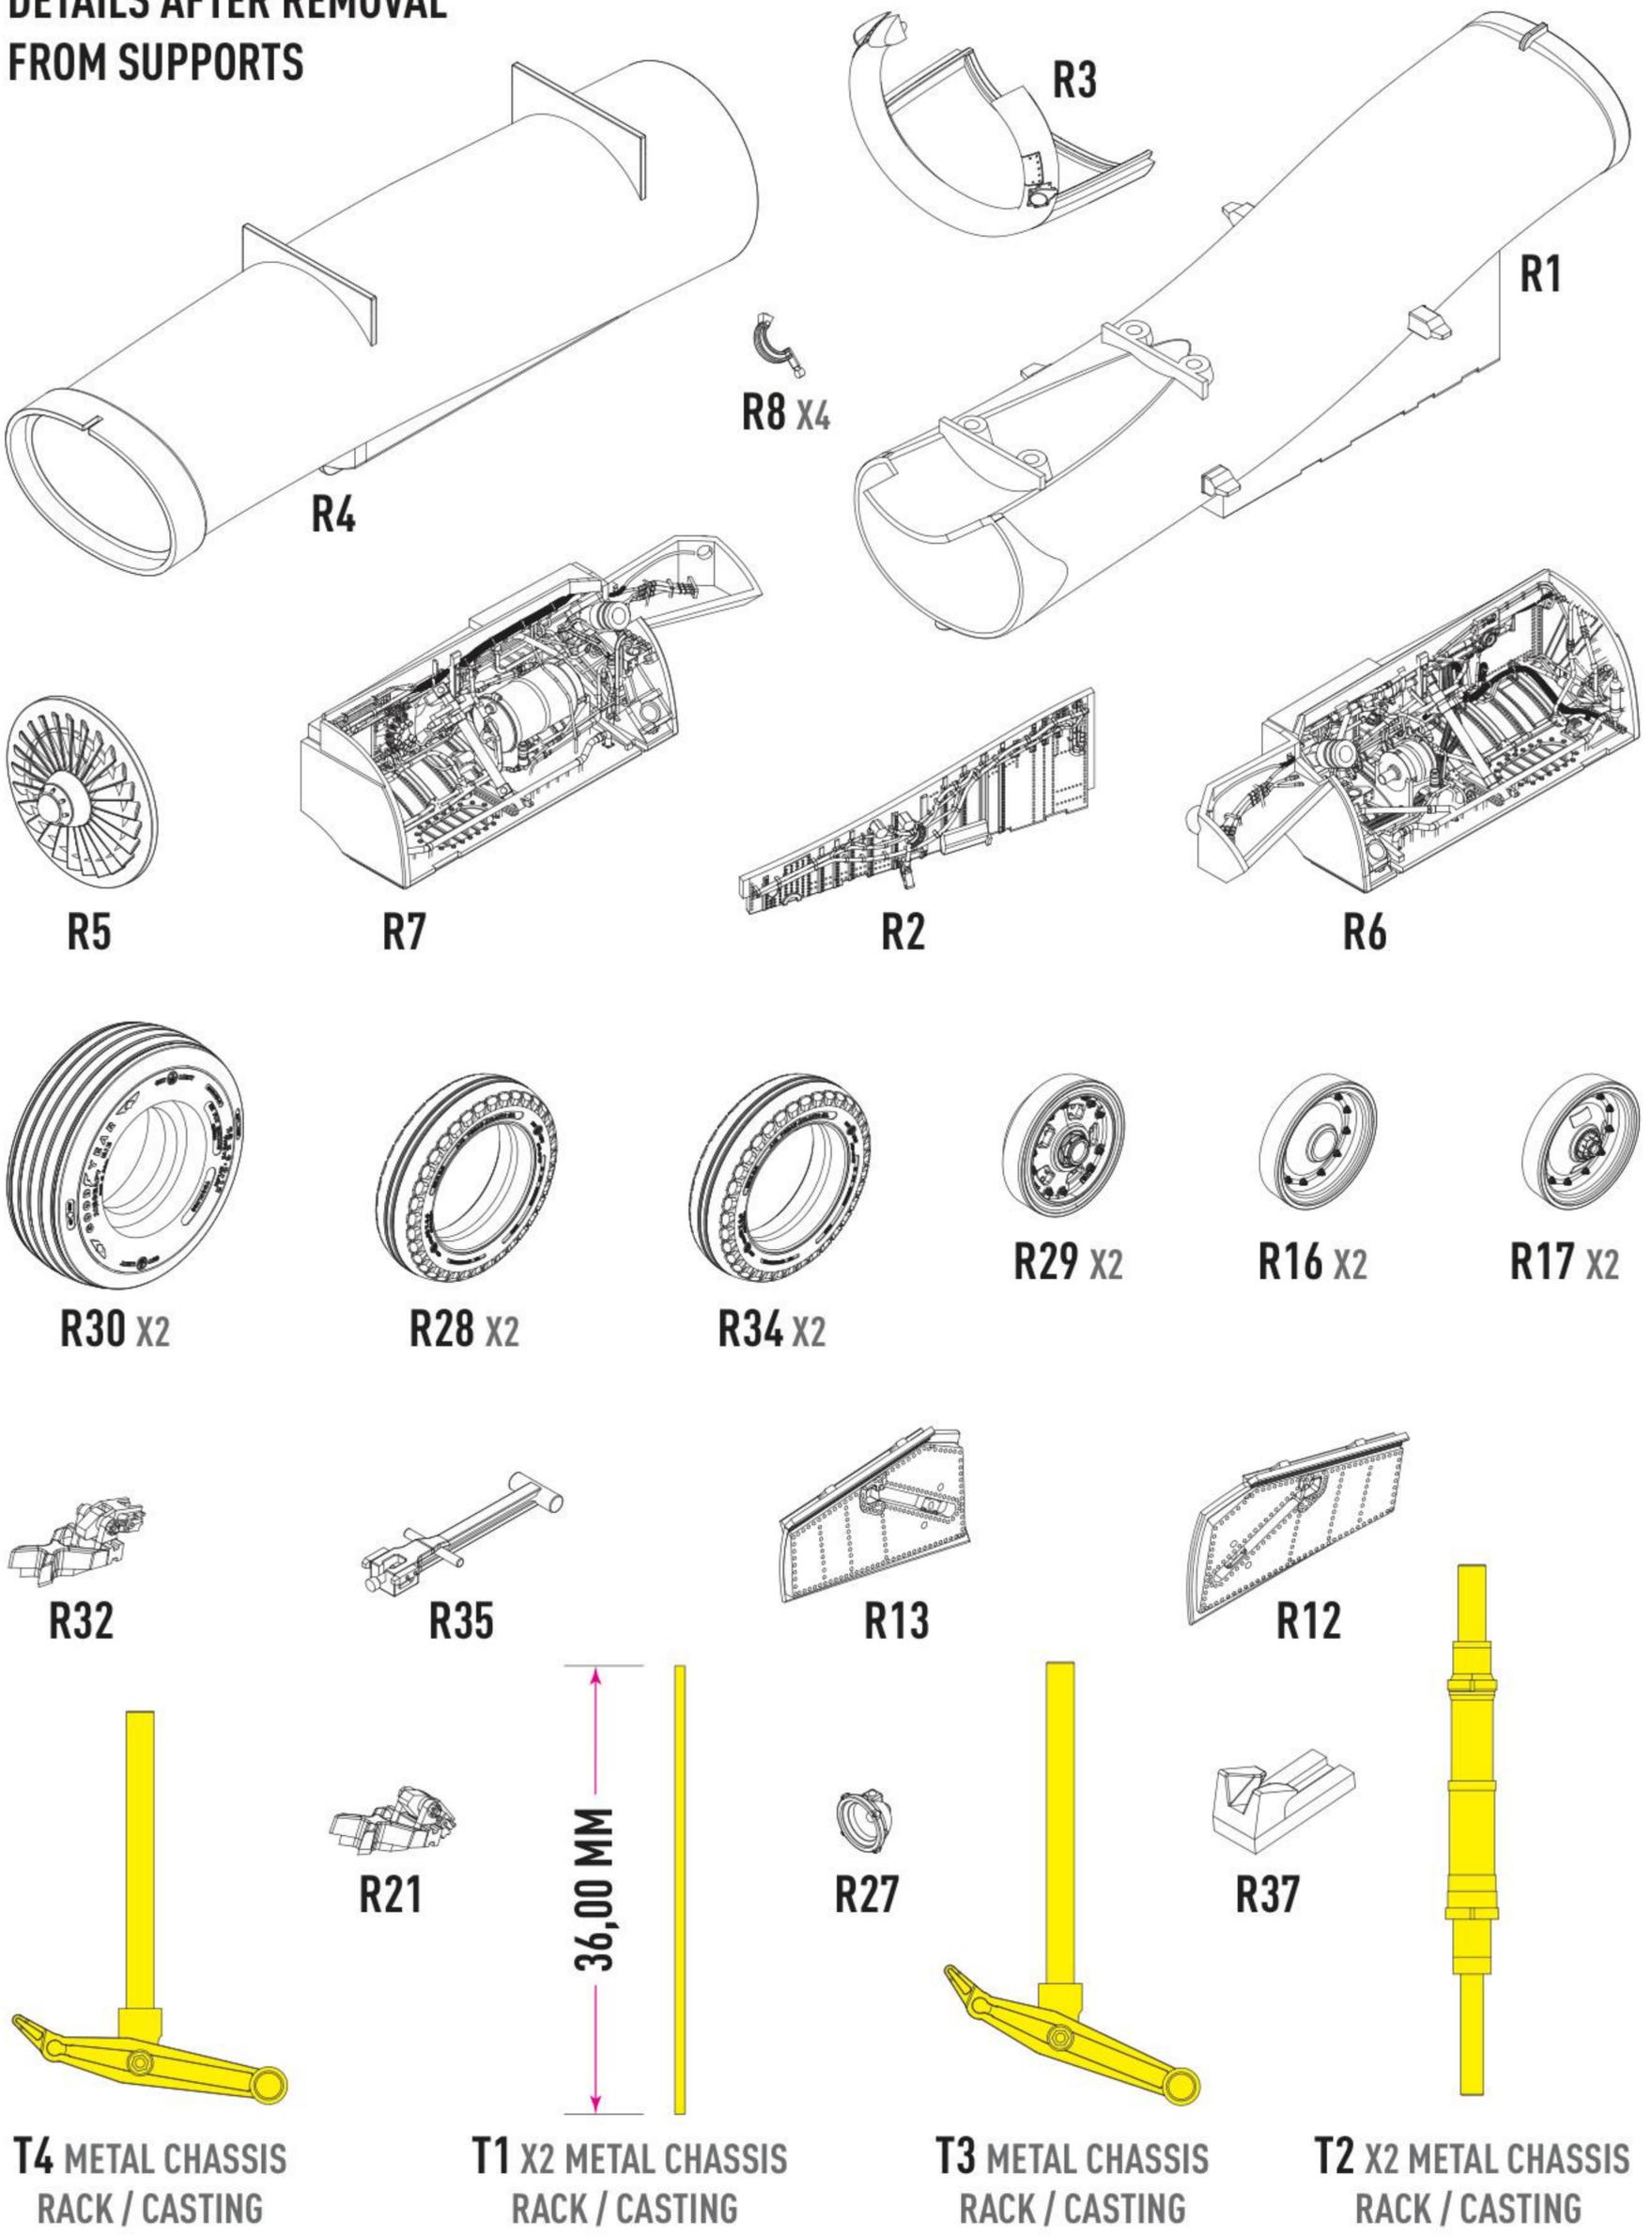
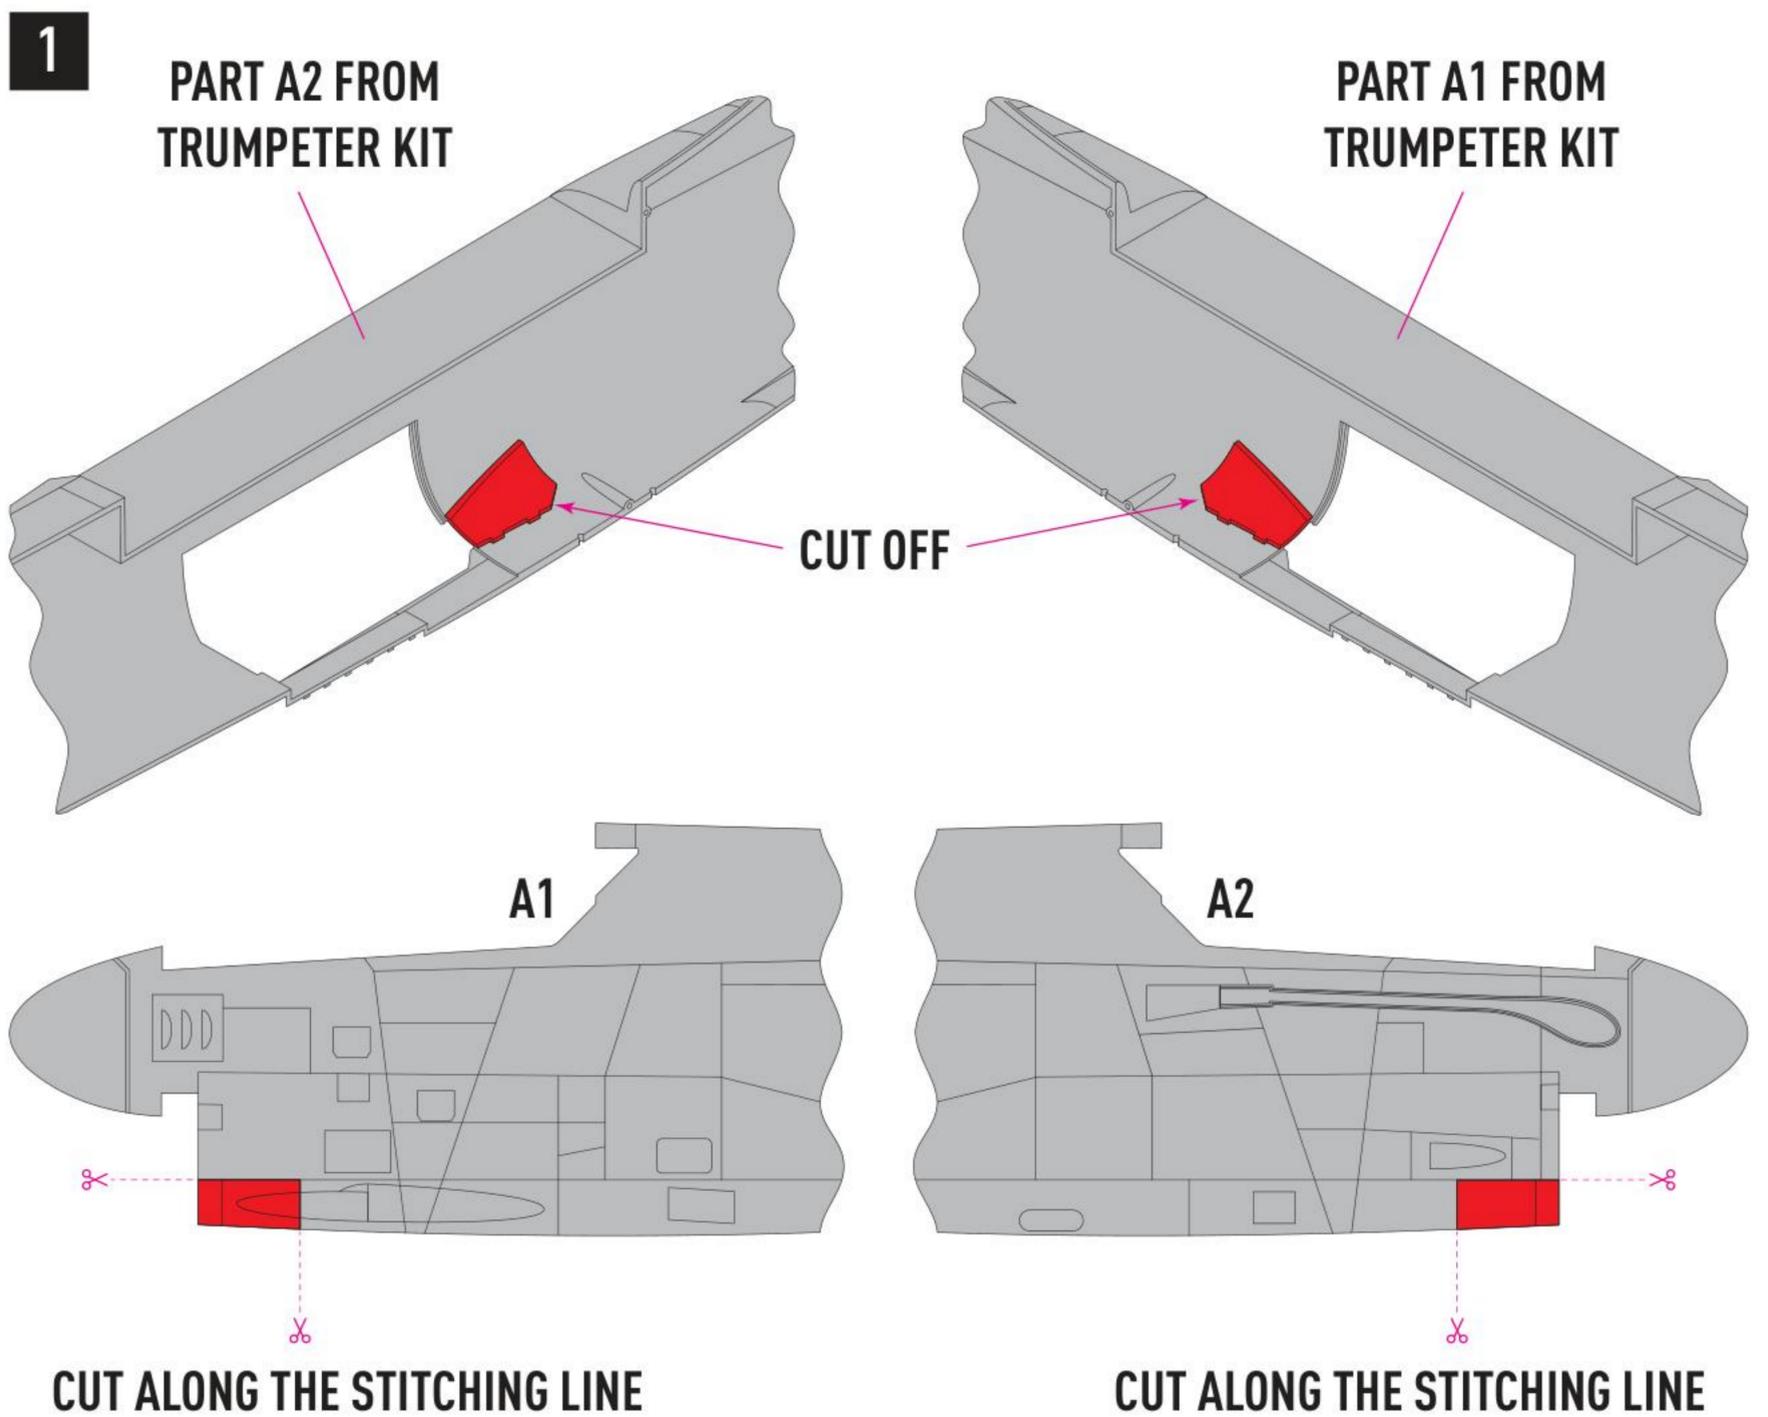
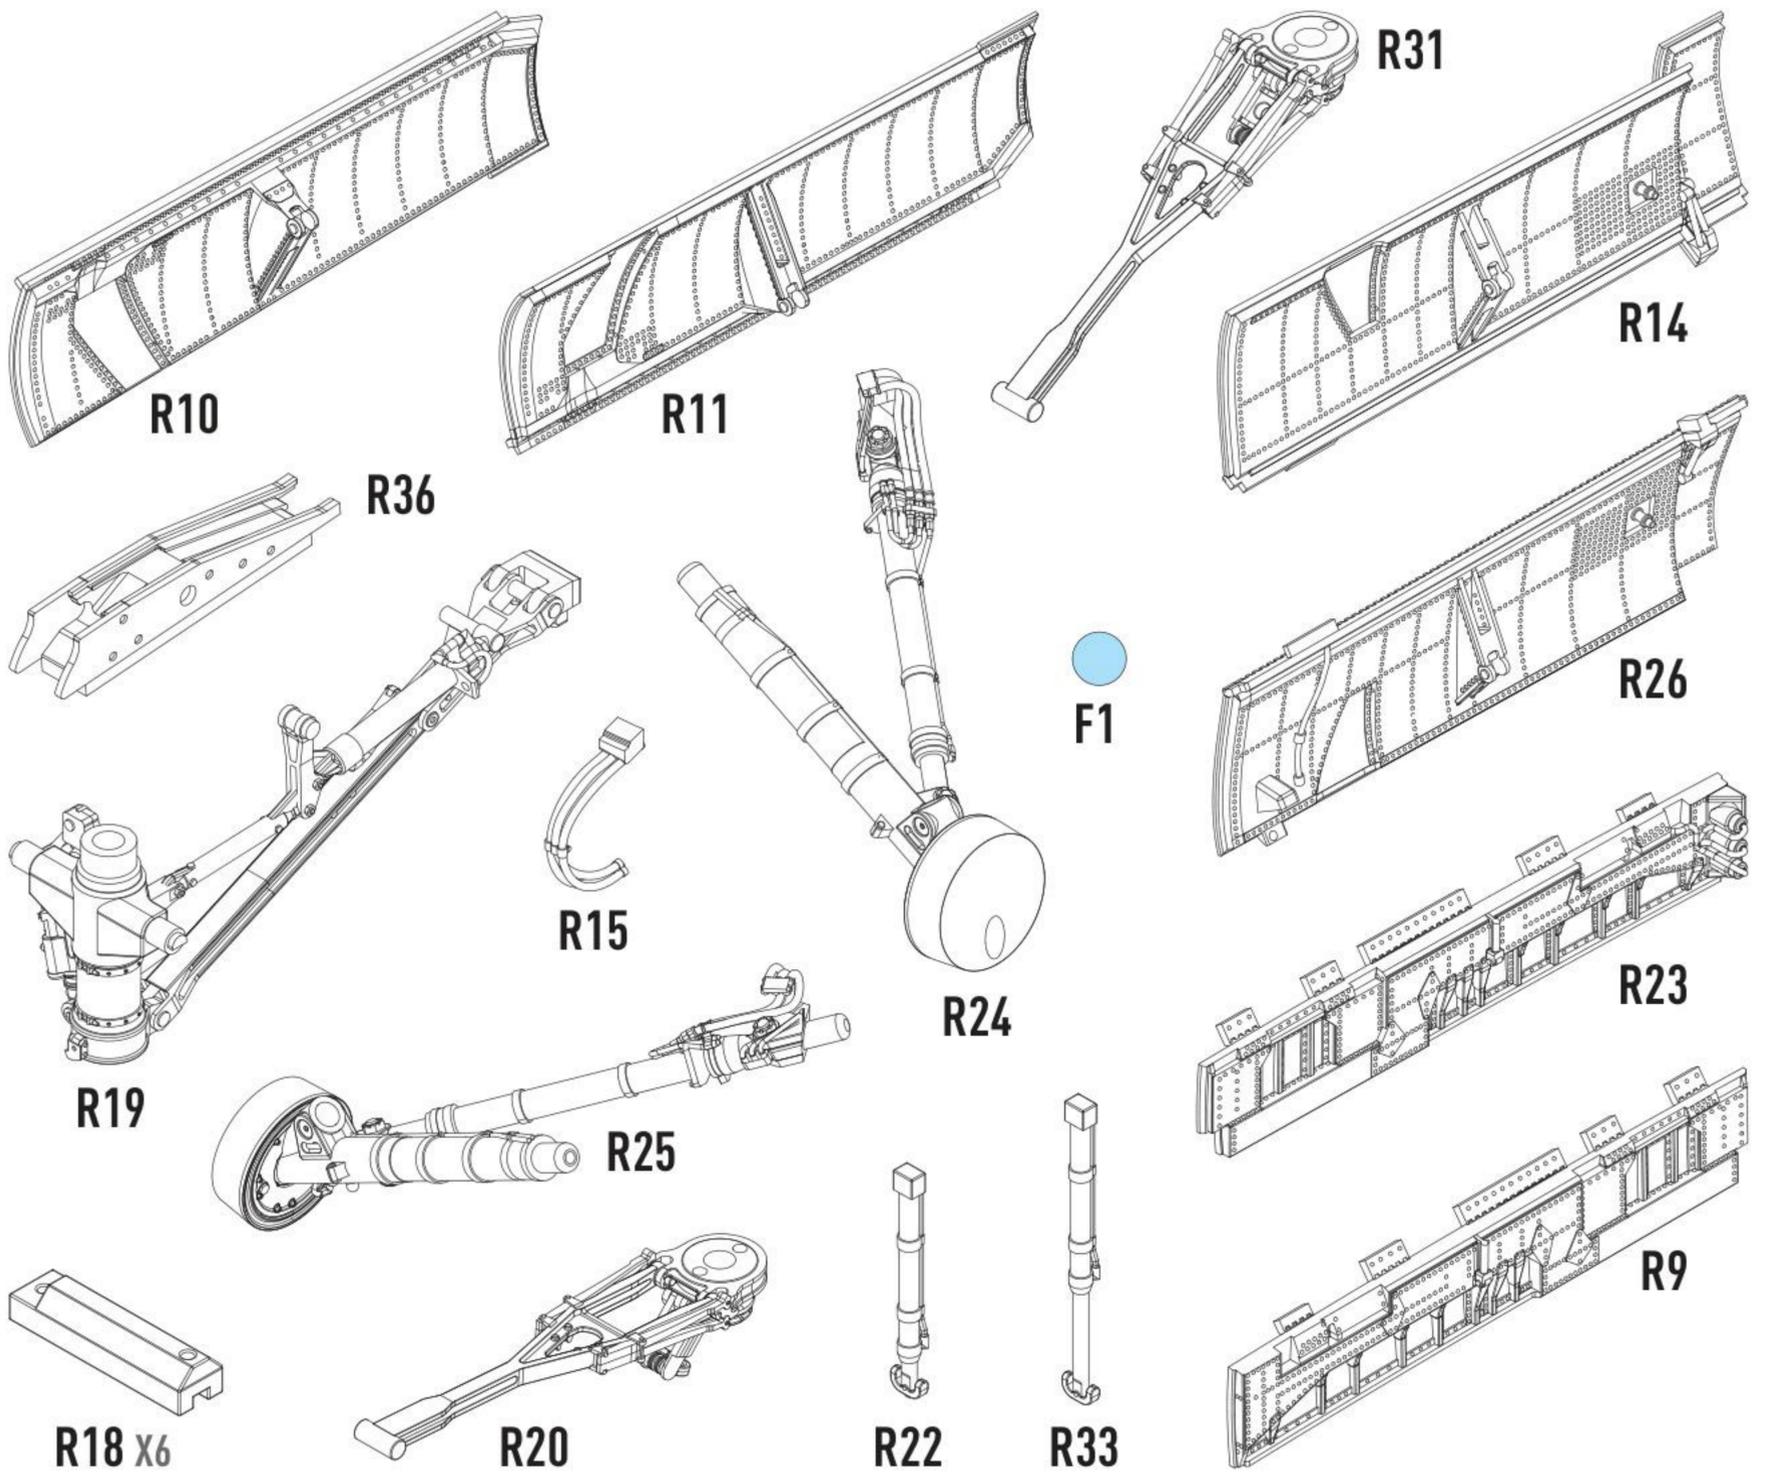



**DETAILS AFTER REMOVAL
 FROM SUPPORTS**

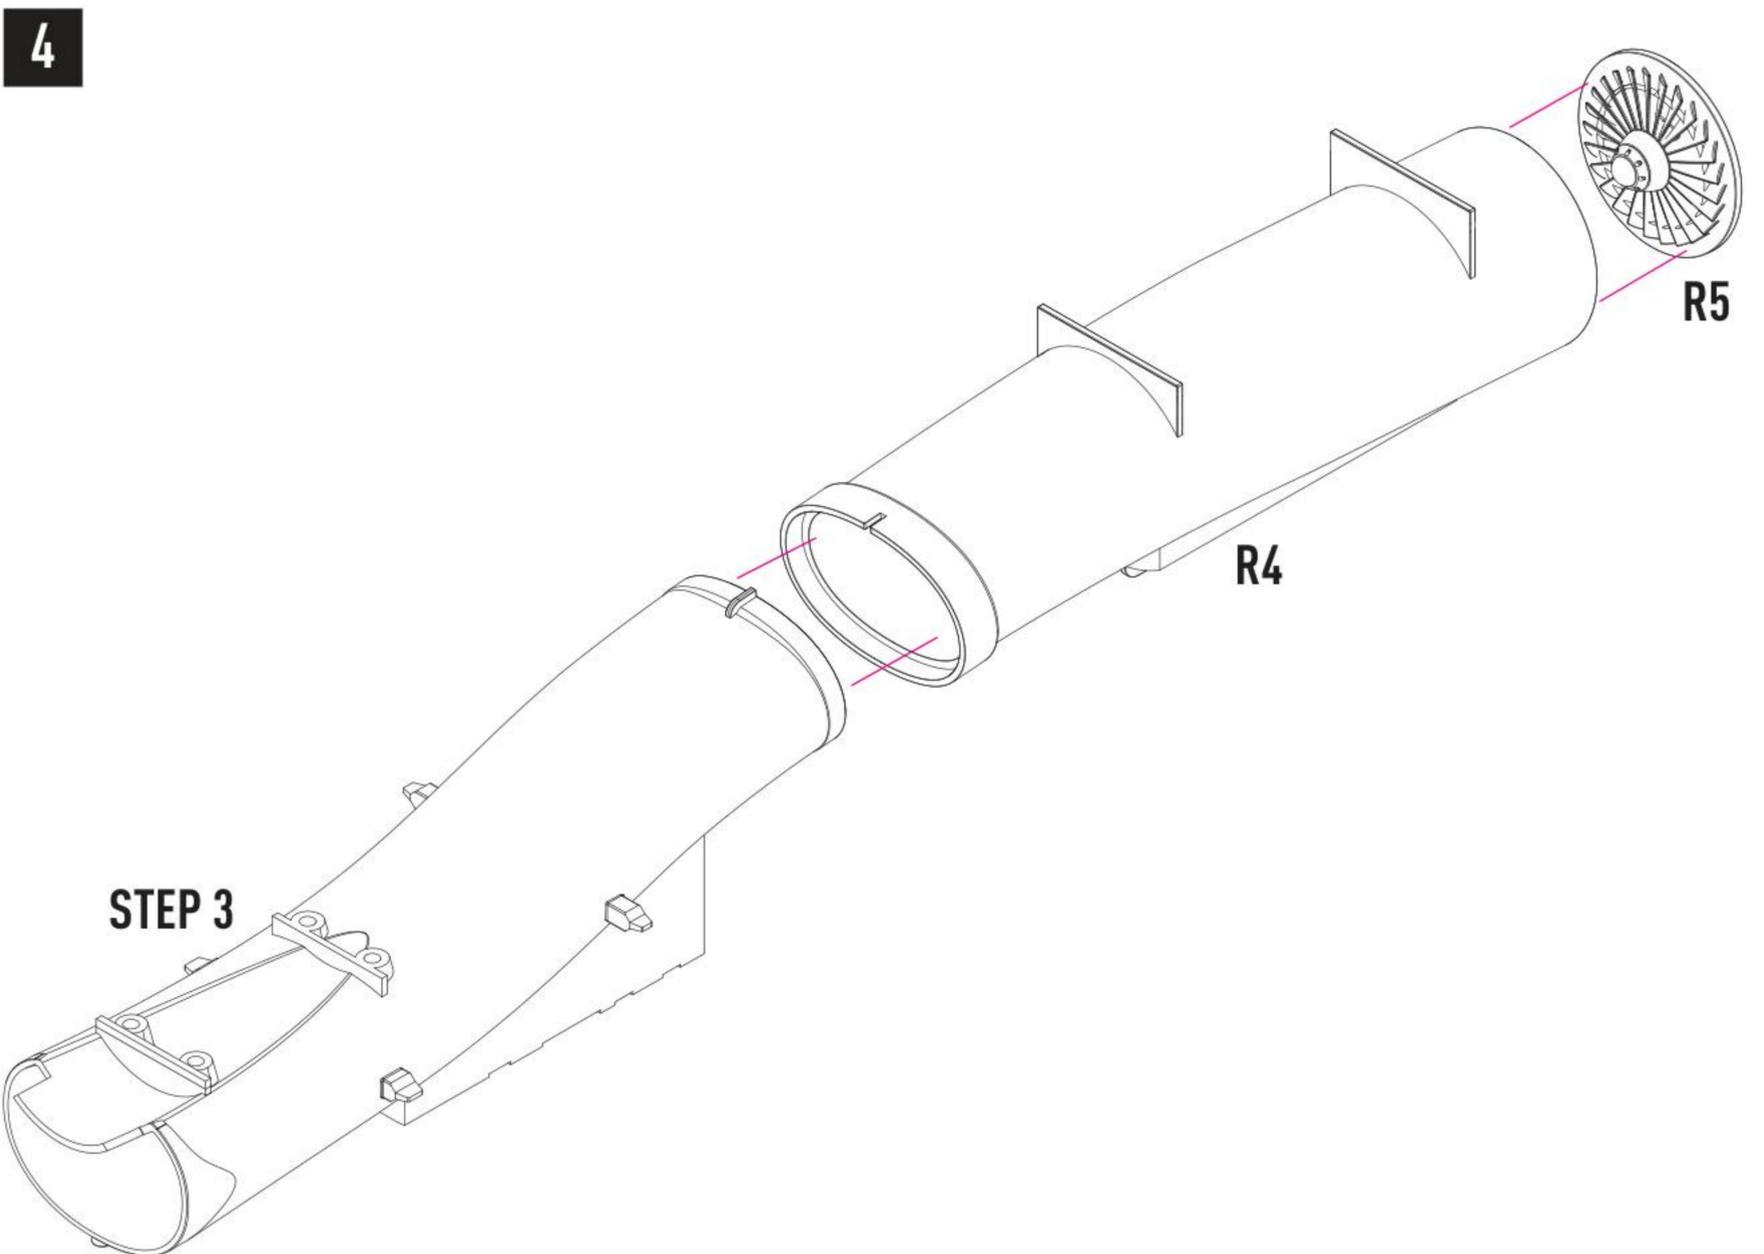

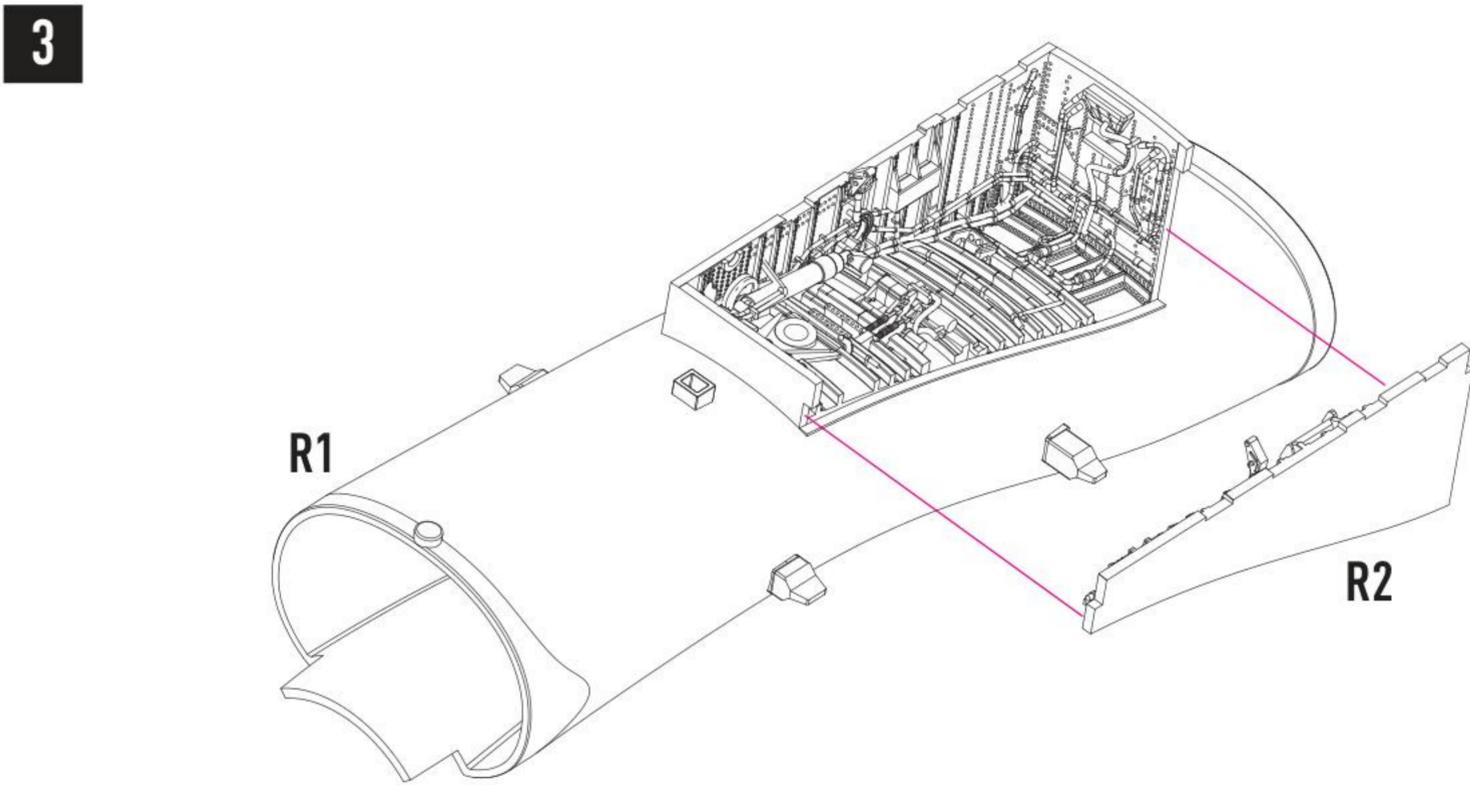


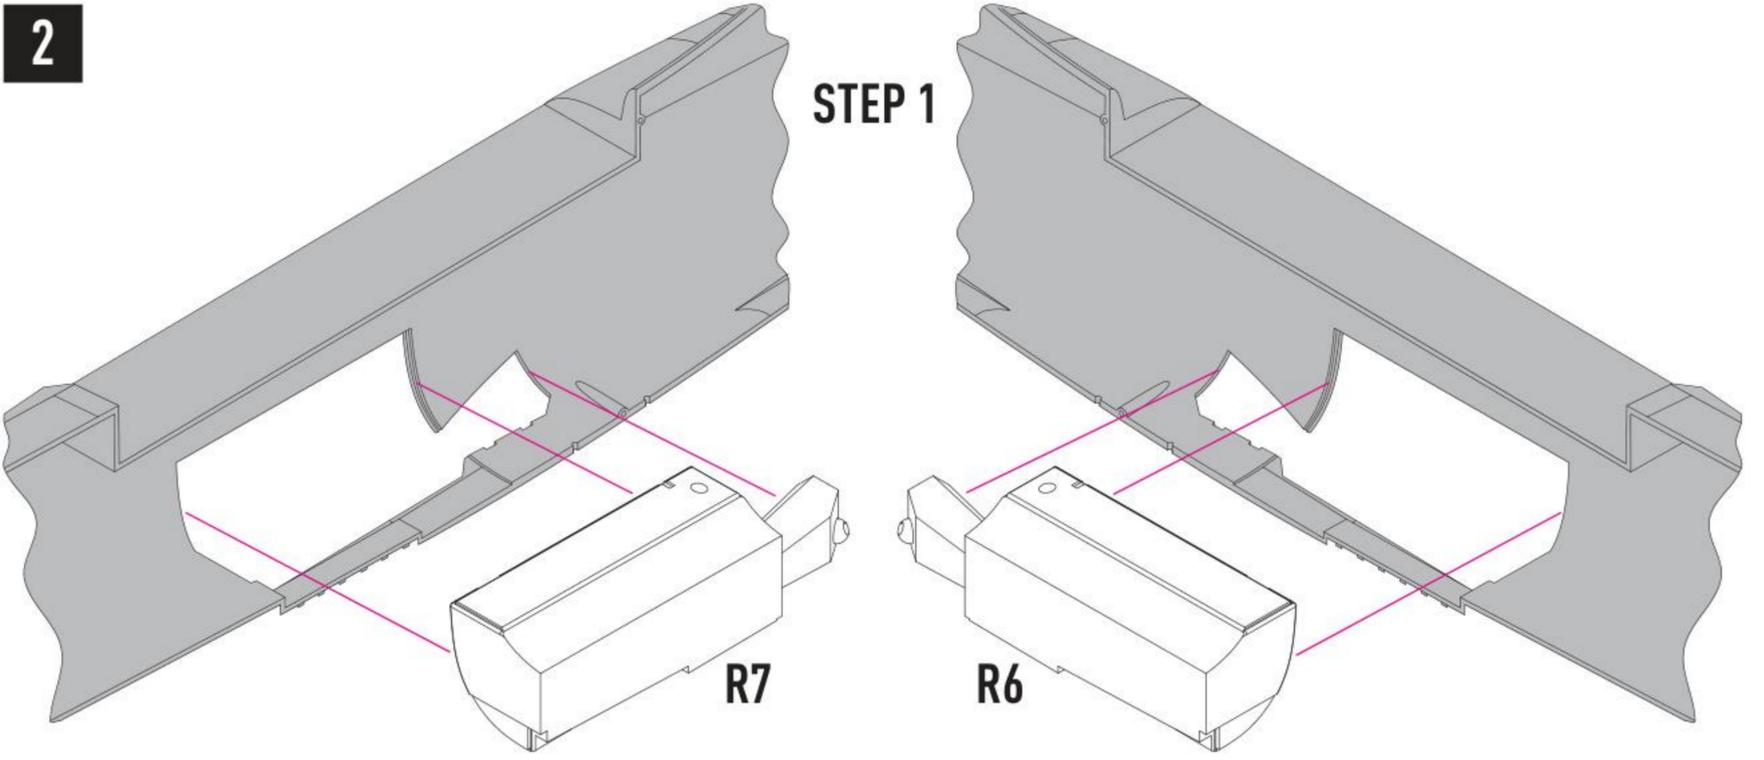


5 ASSEMBLING NOSE LANDING GEAR IN THE NORMAL POSITION

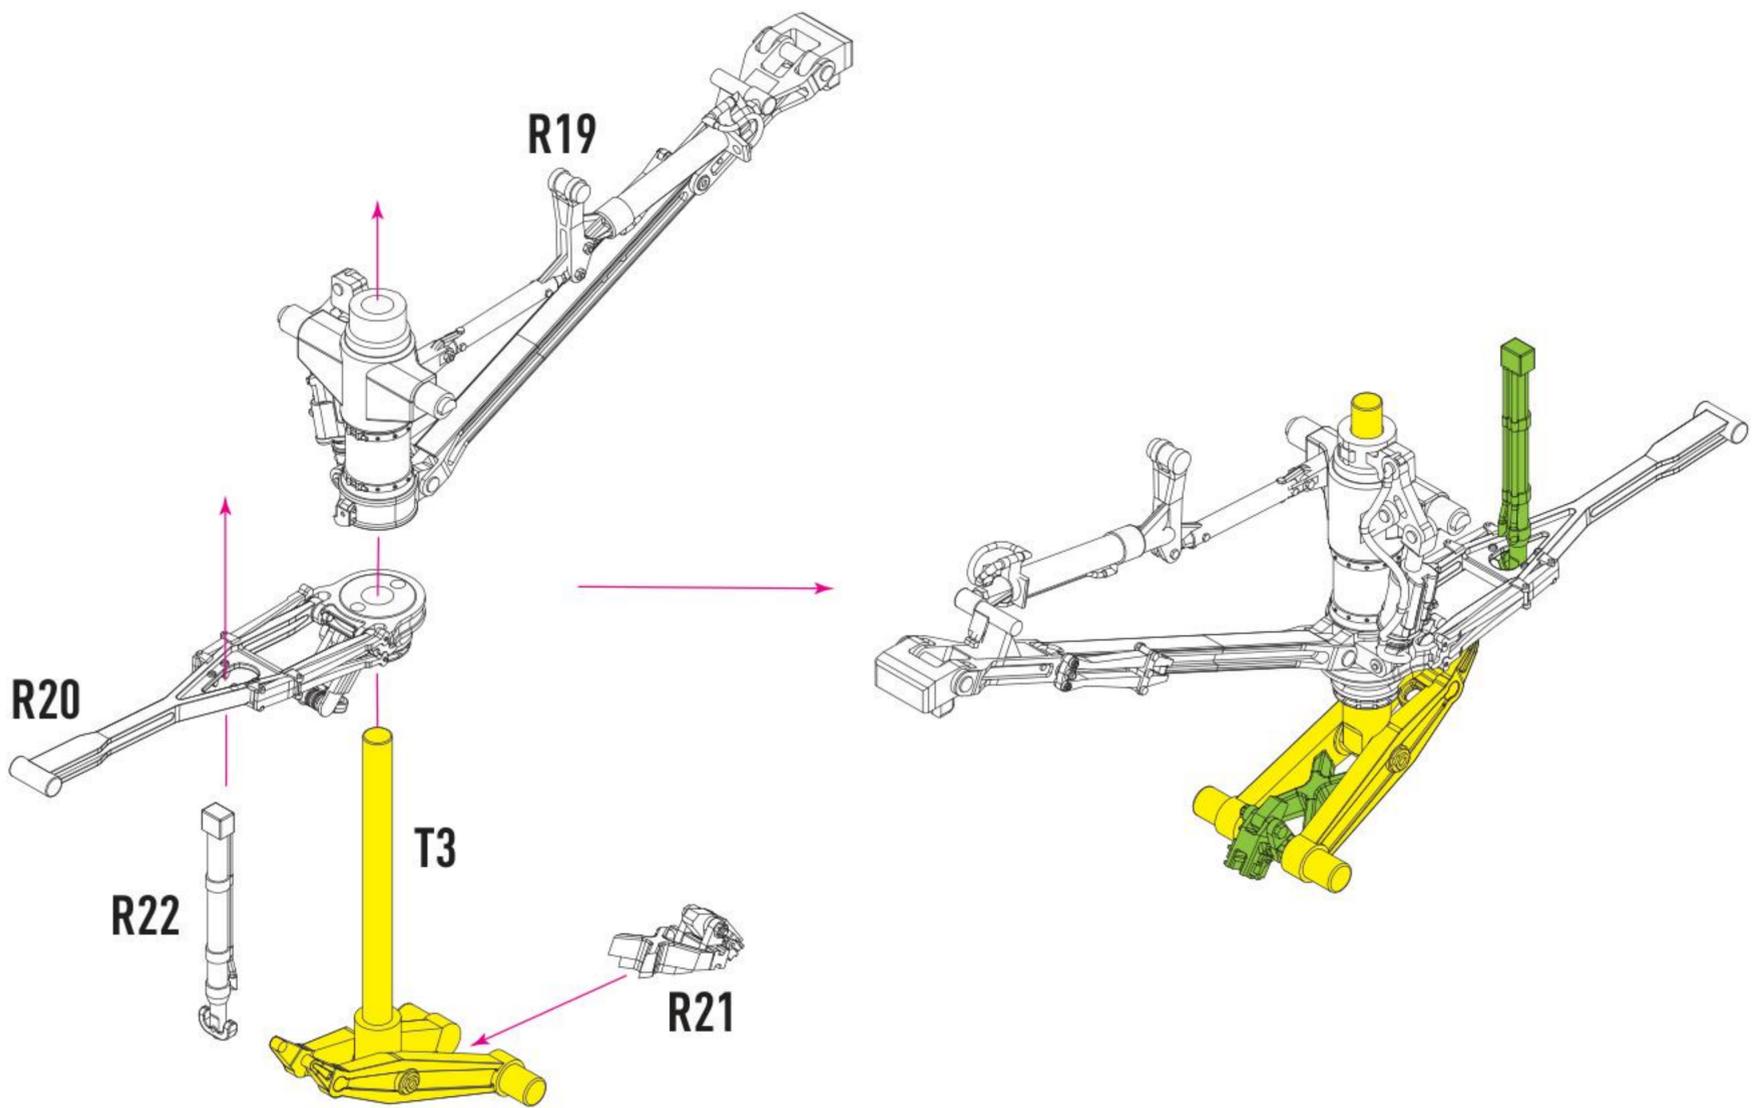


6

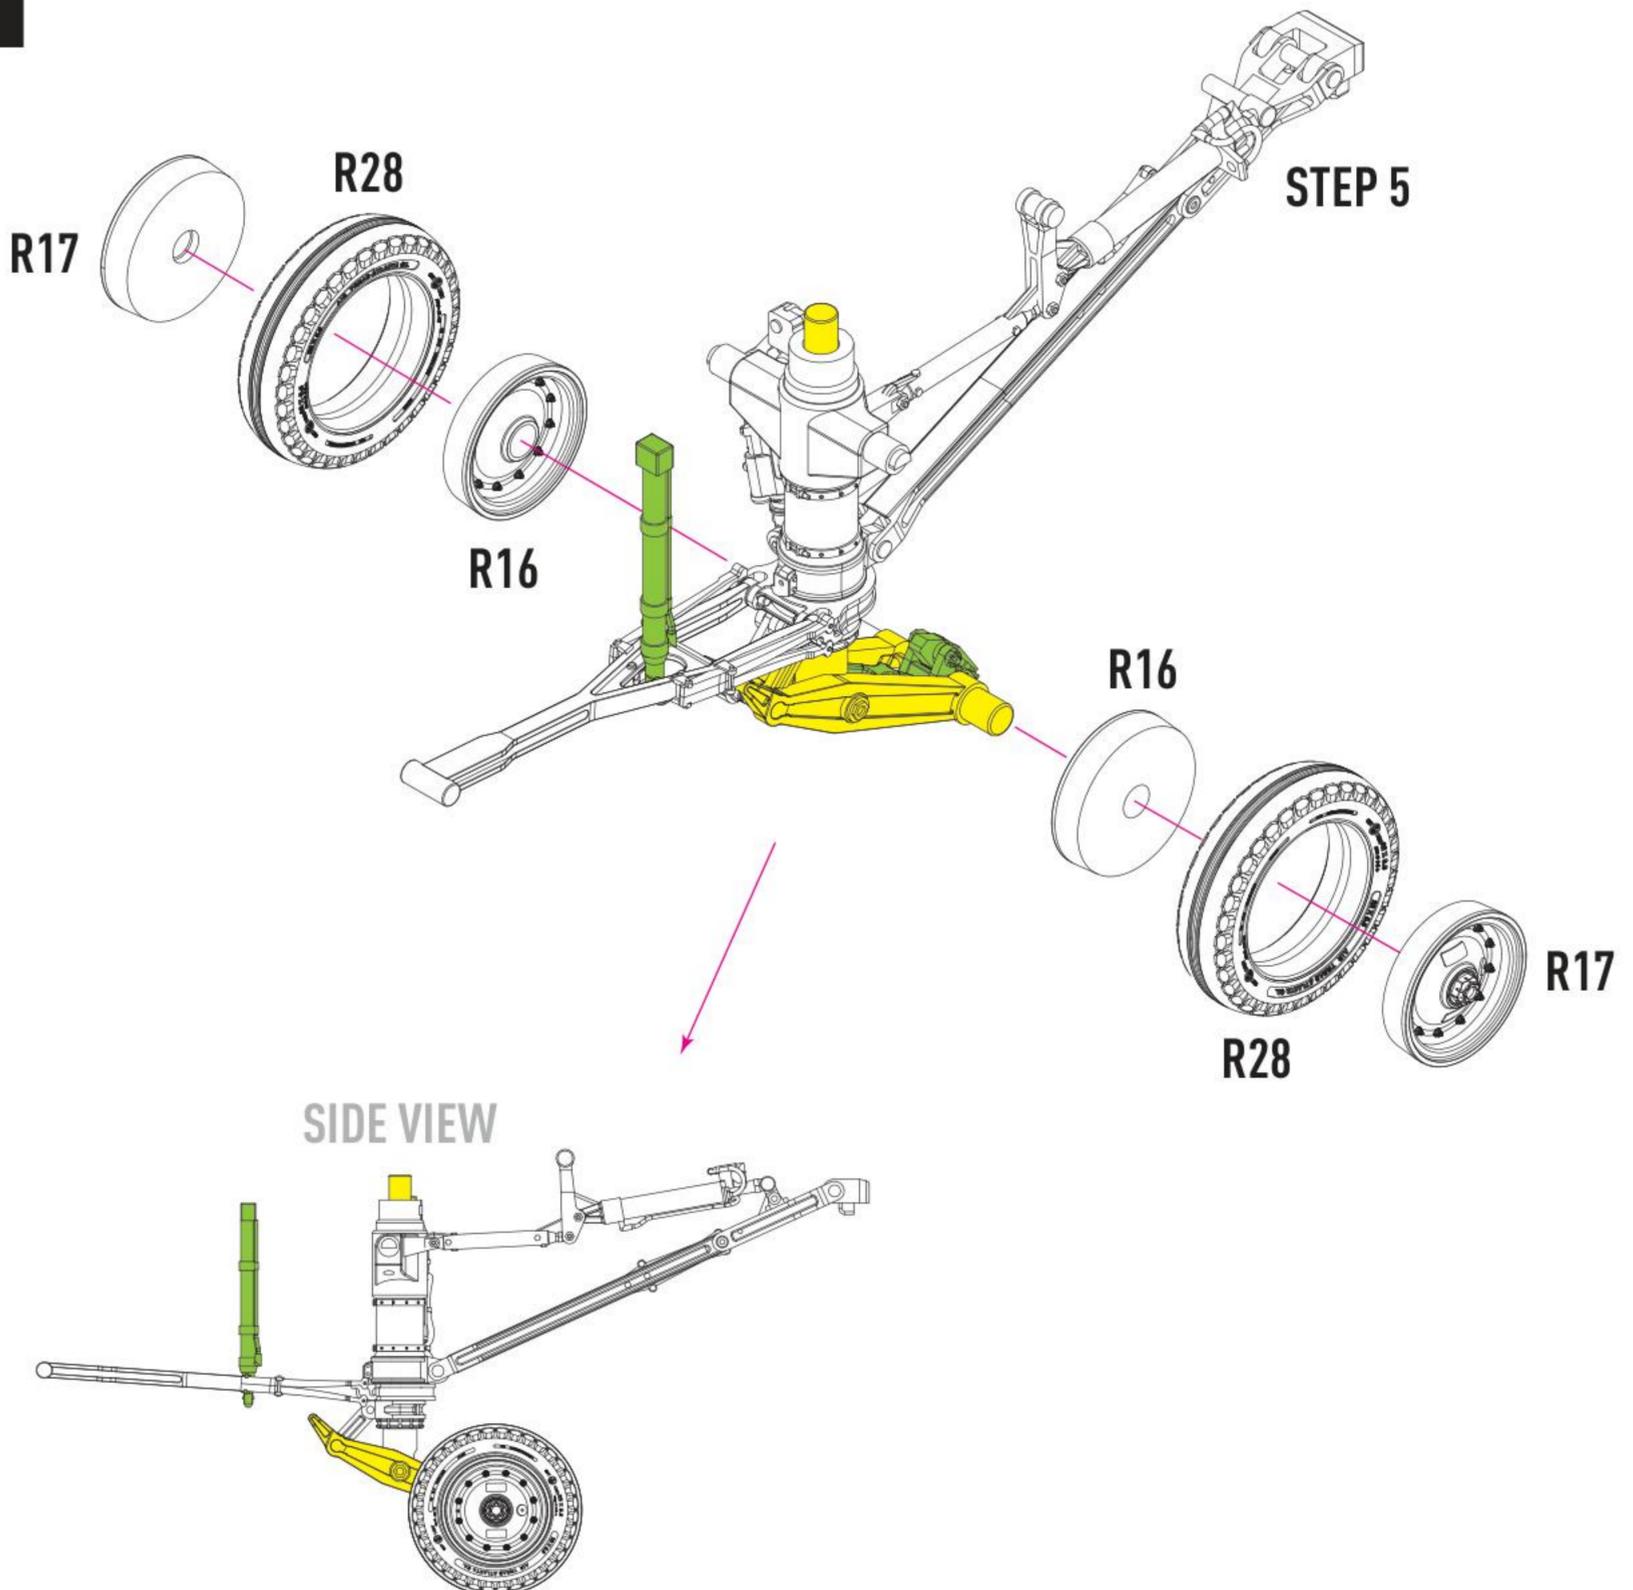


7 ASSEMBLING NOSE LANDING GEAR FOR INSTALLATION IN THE CATAPULT

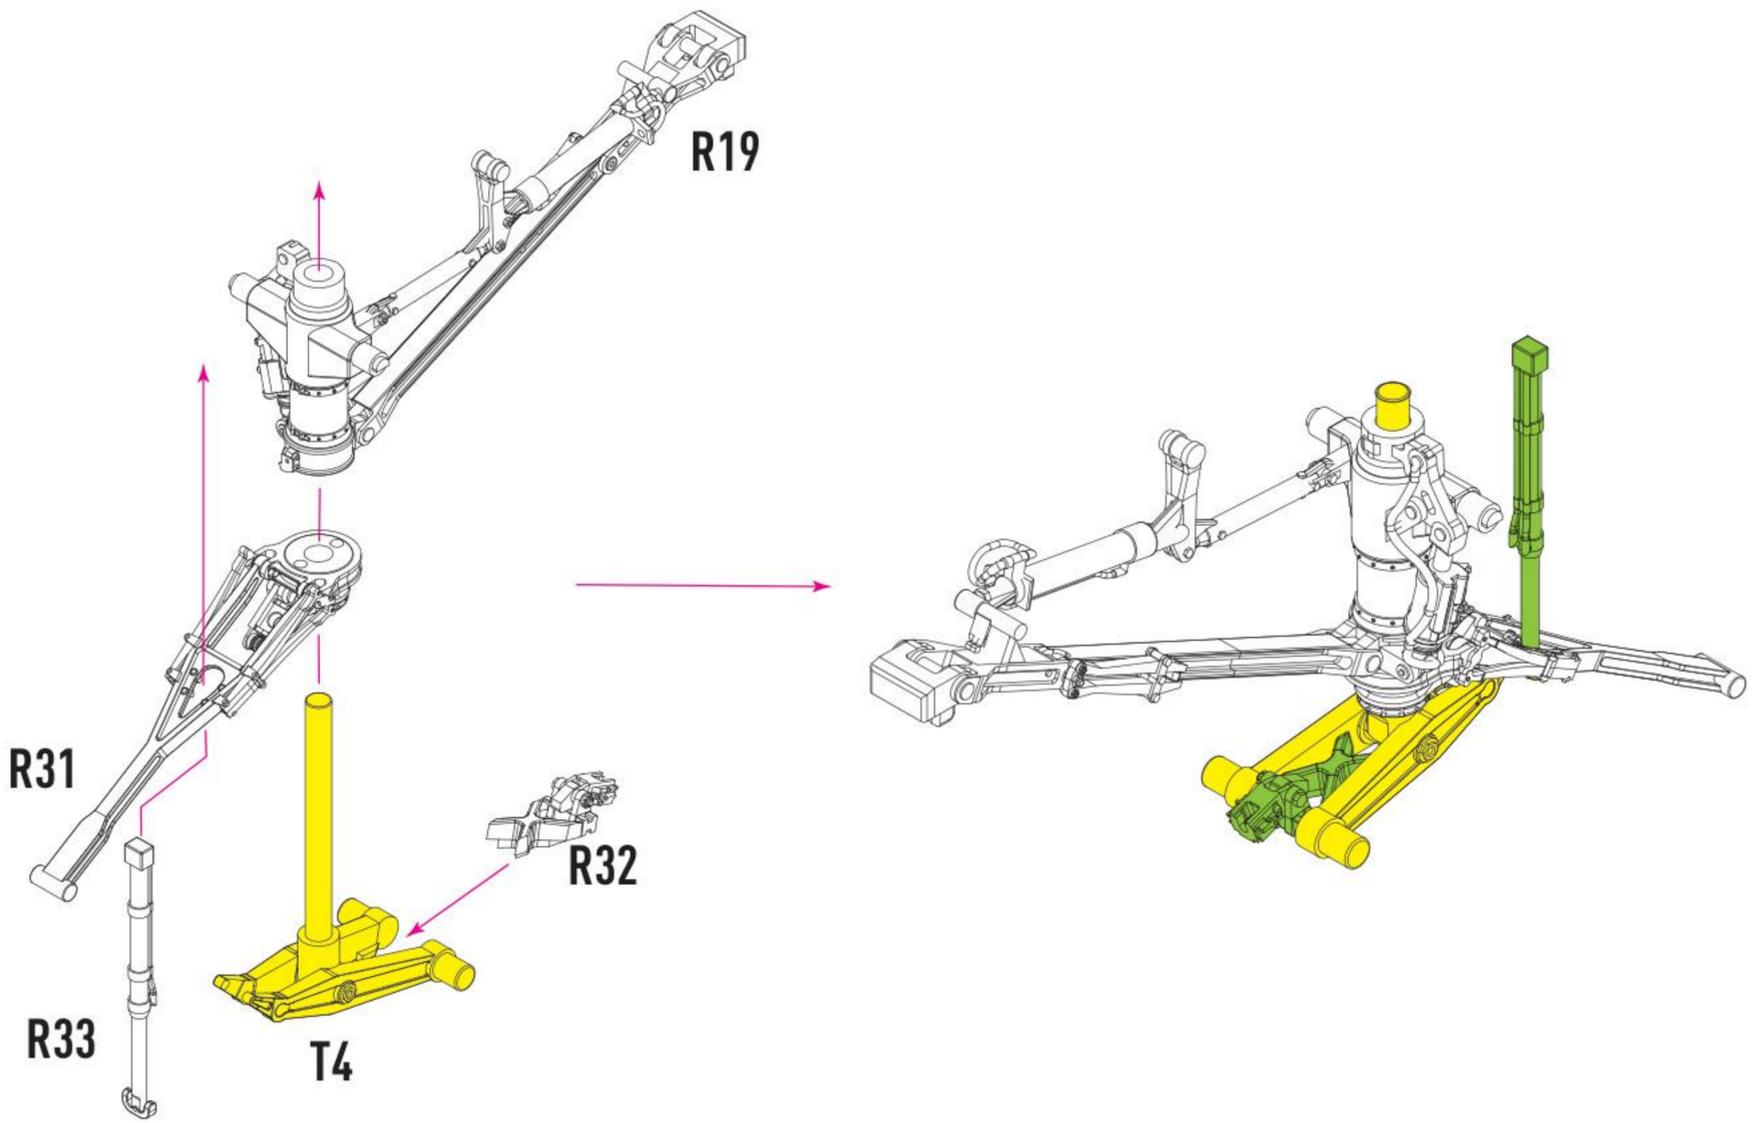



8

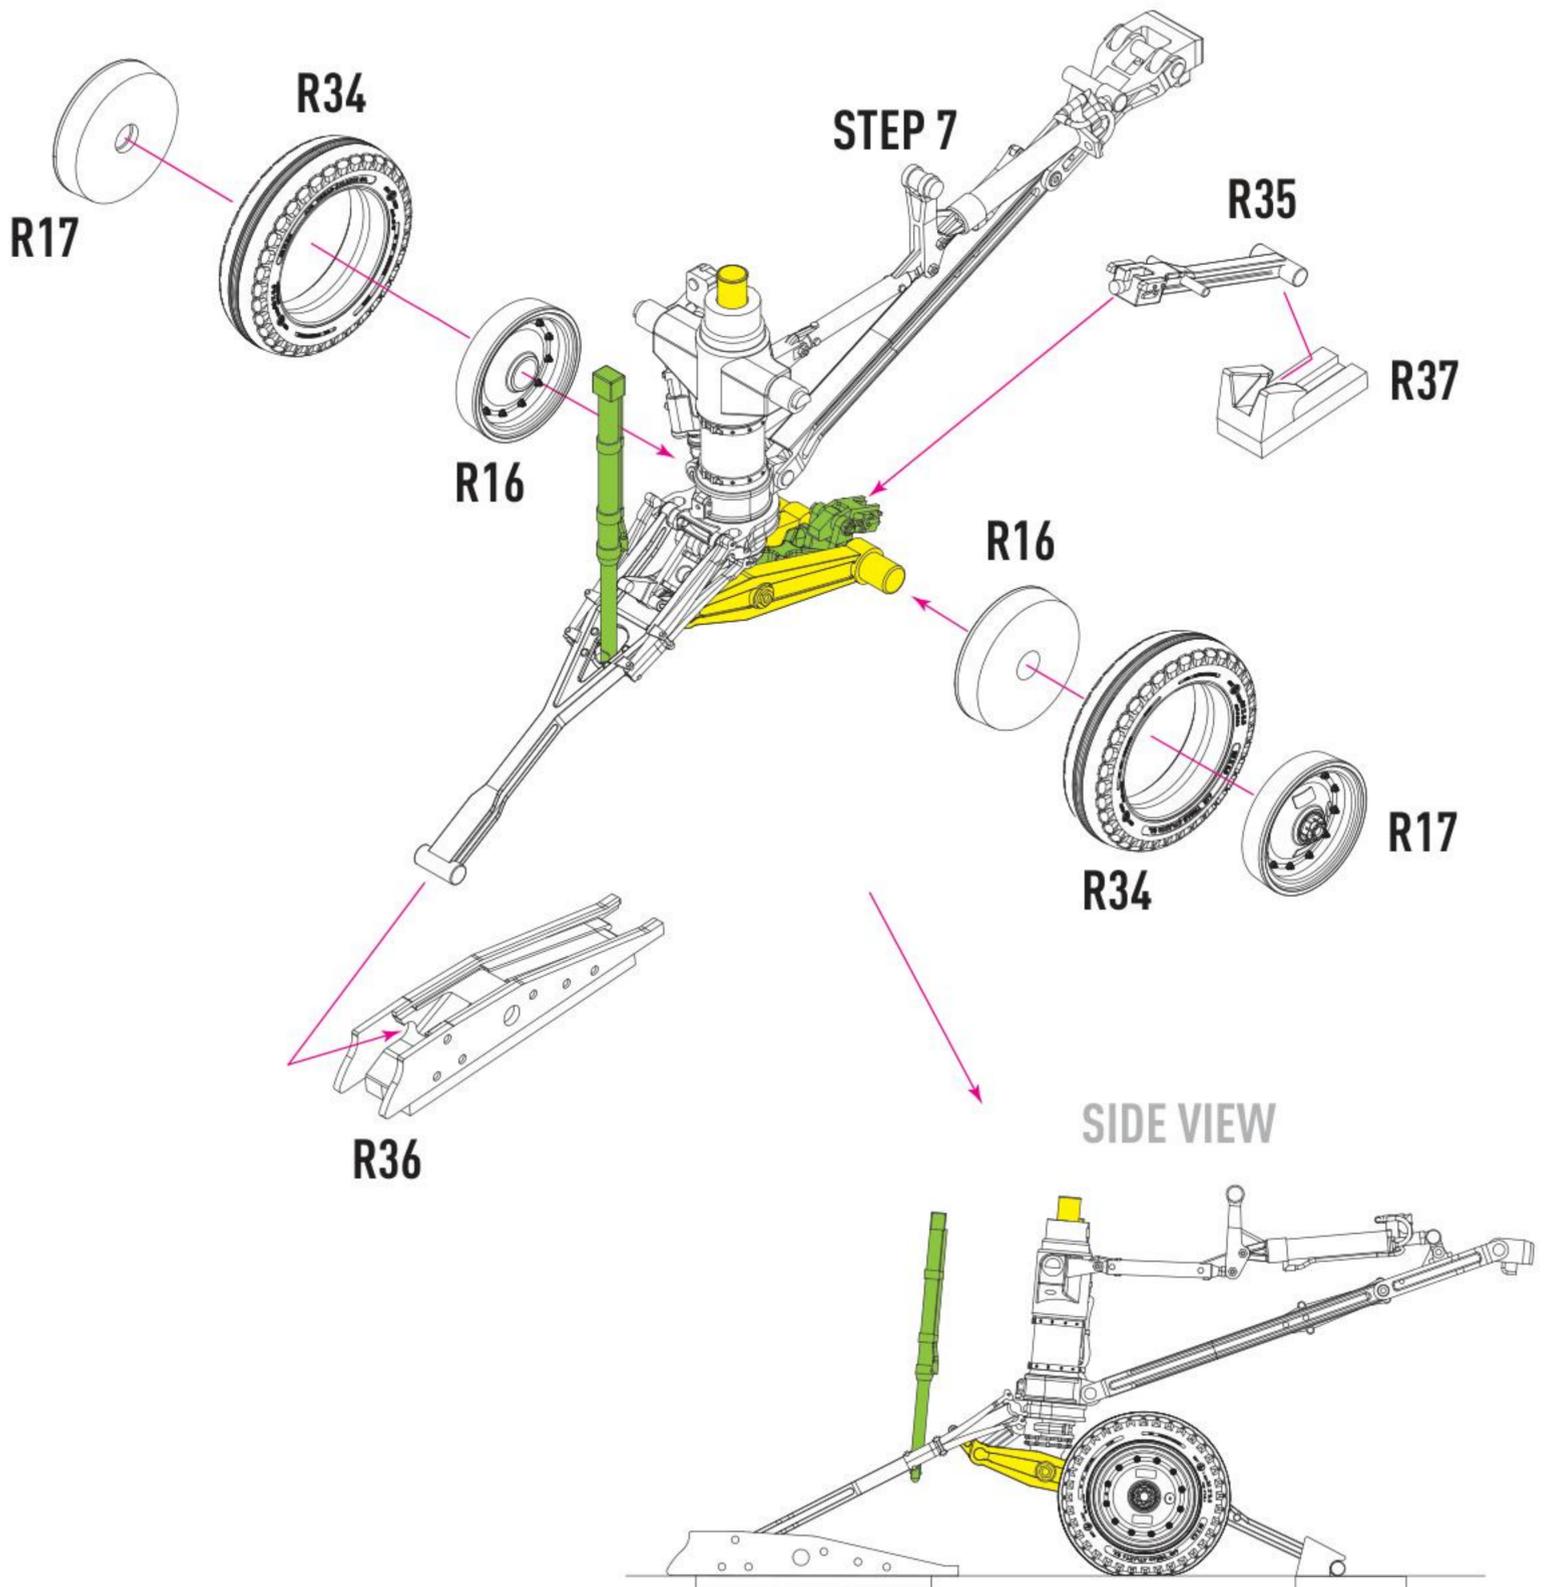

STEP 6

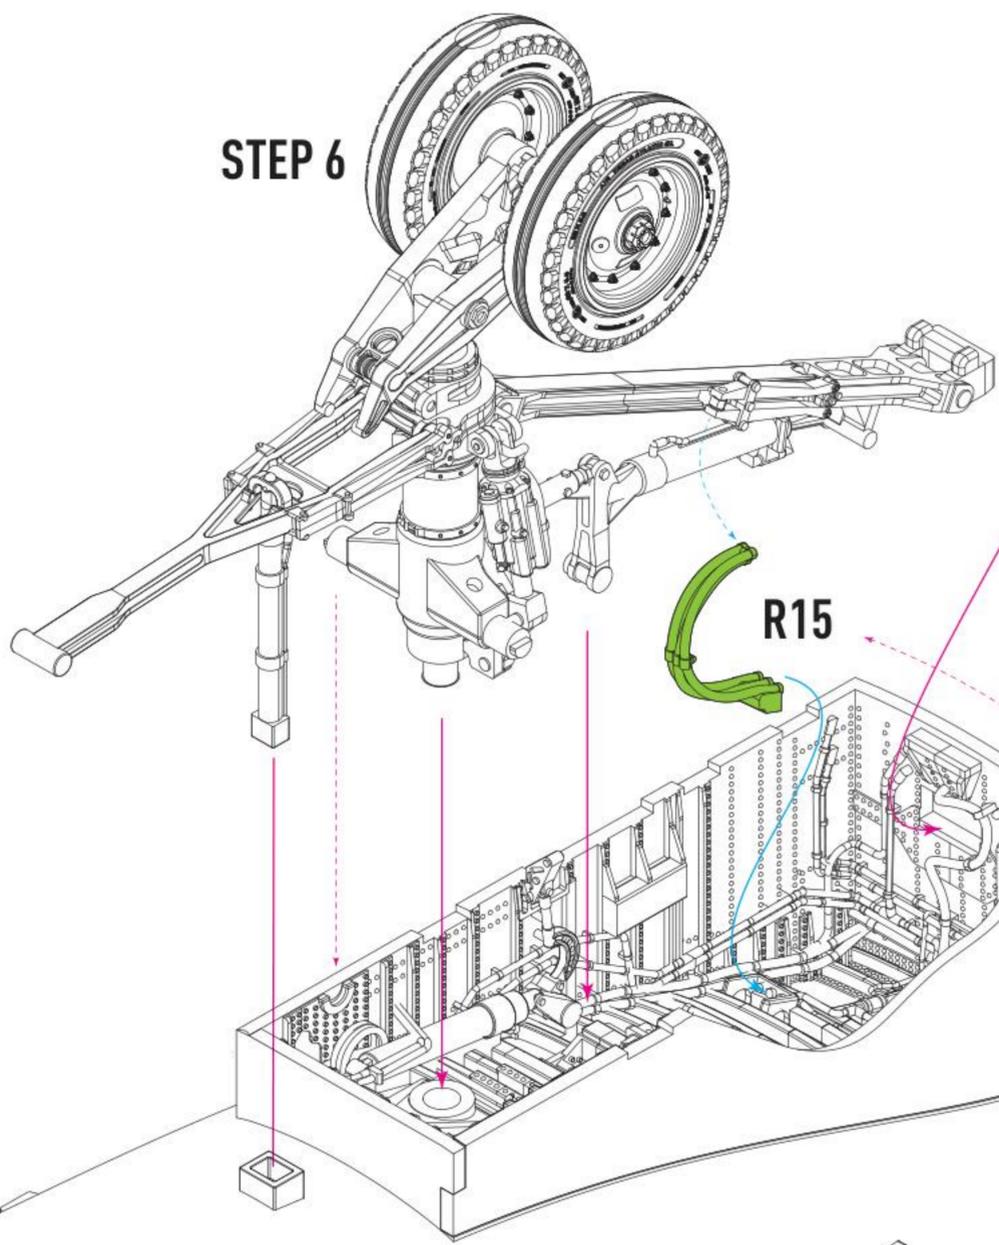


STEP 4

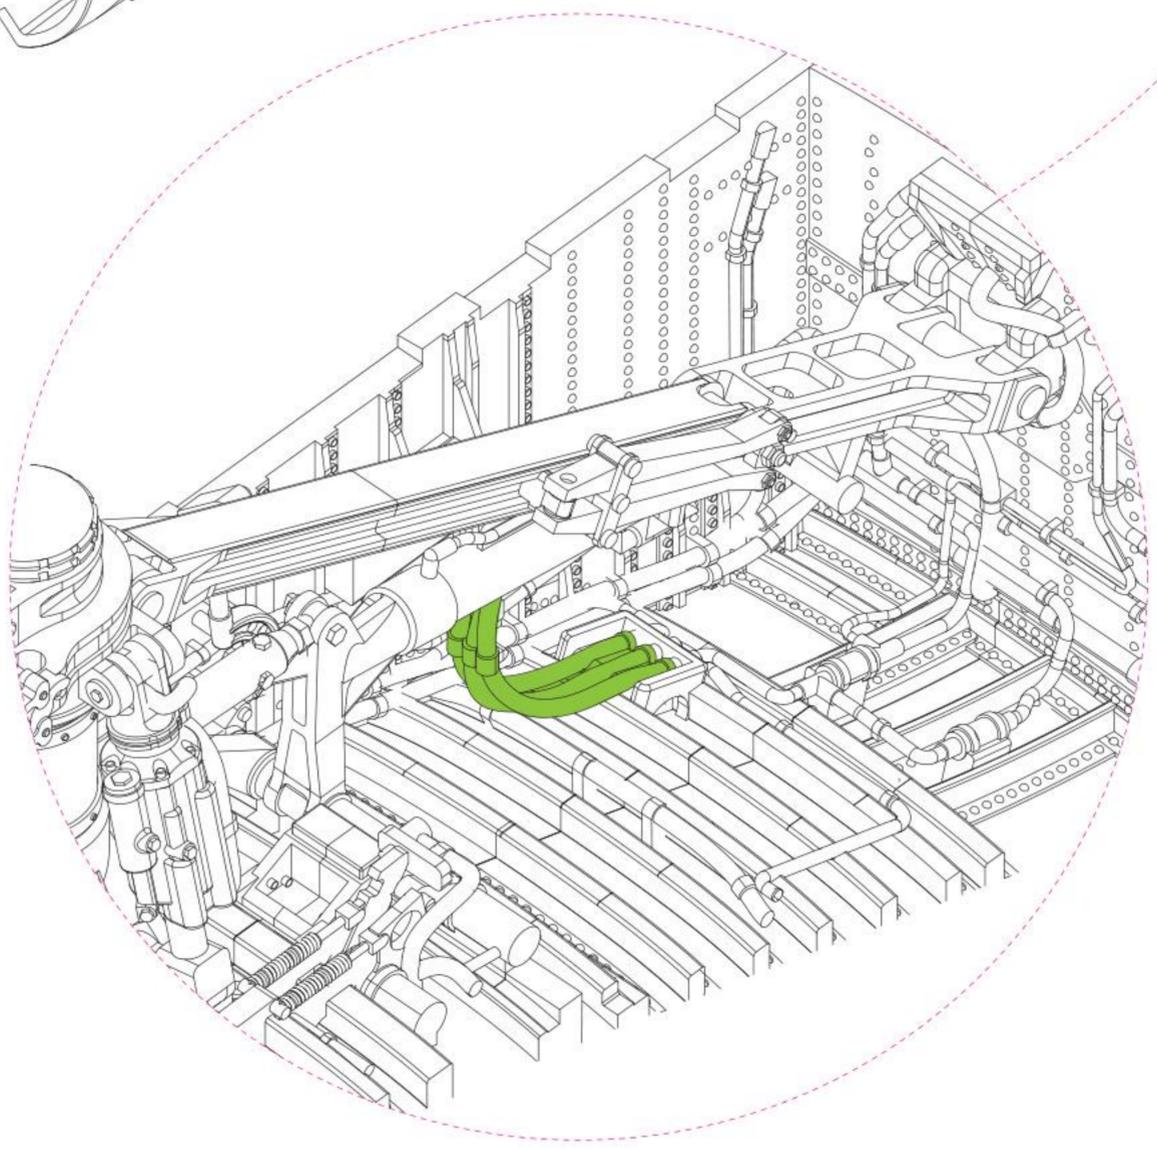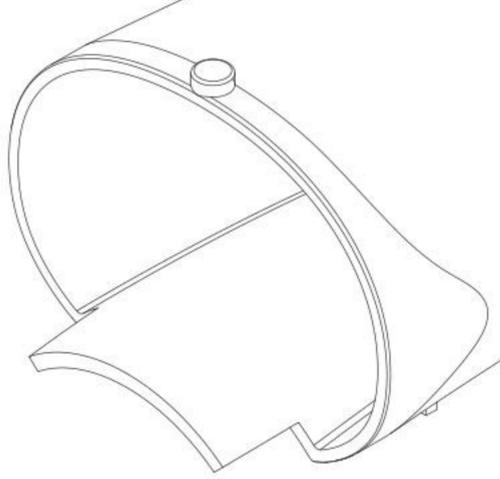


10 DO NOT GLUE

**STEP 2 FROM TRUMPETER KIT
COCKPIT ASSEMBLY**

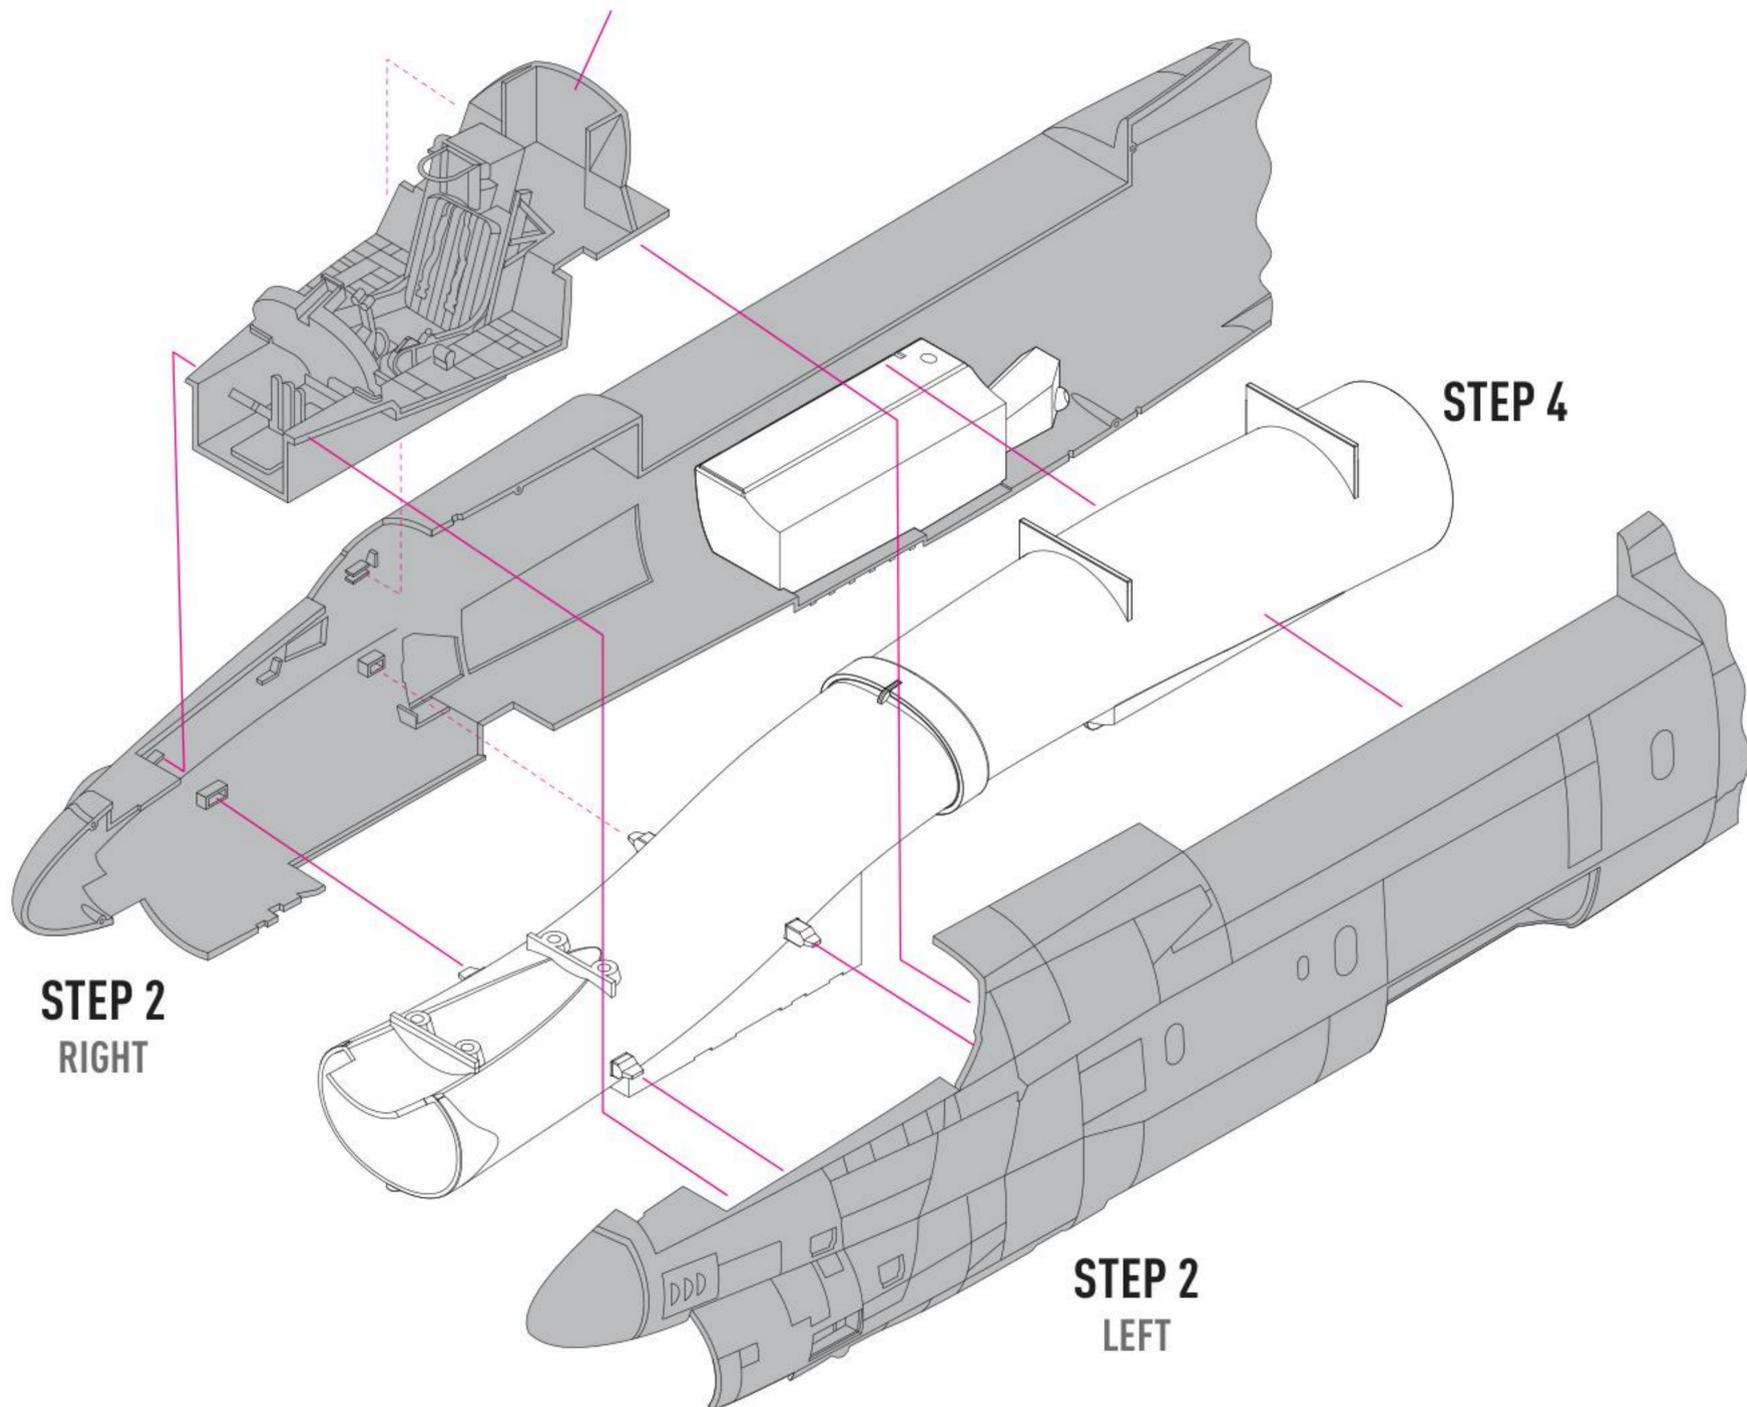

11

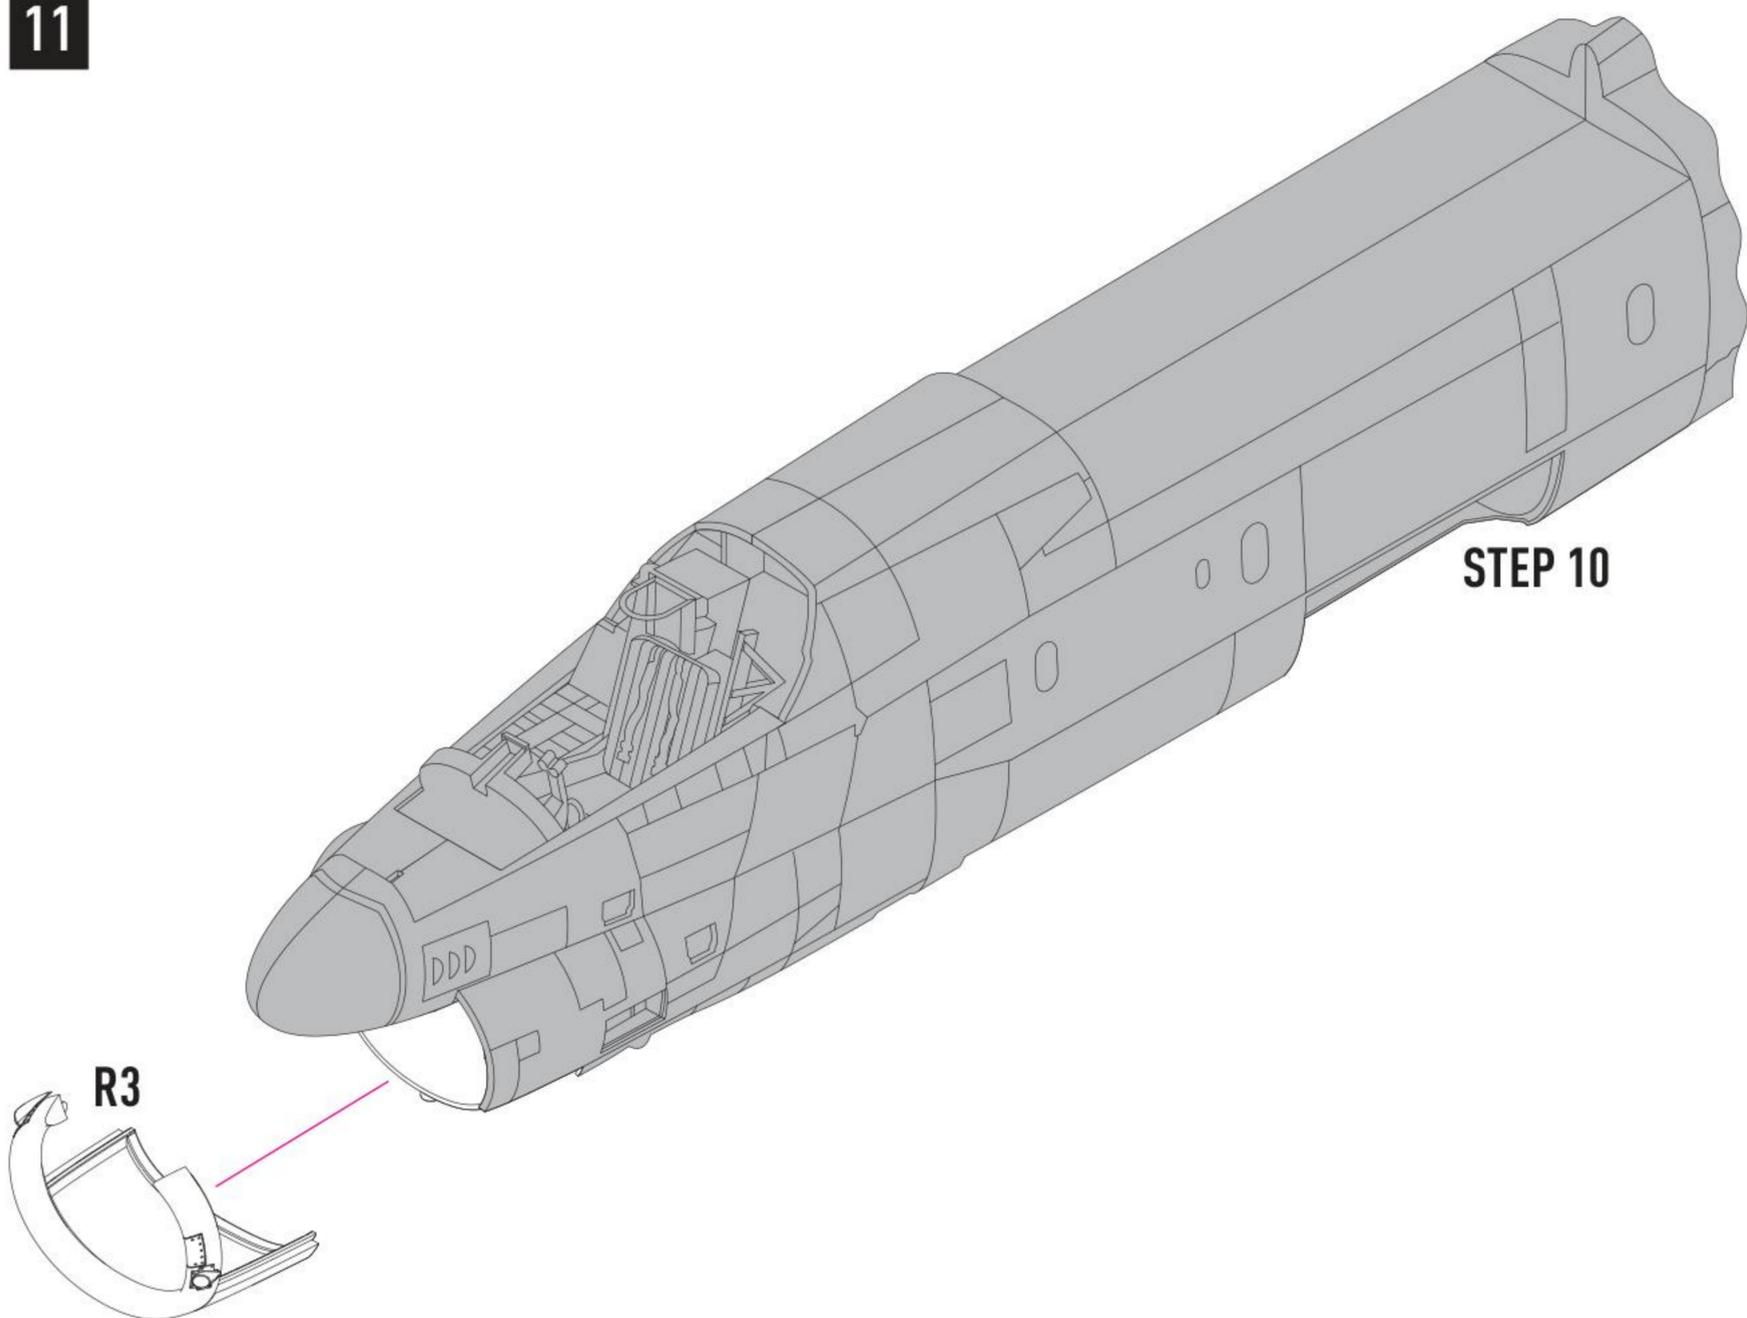

LIGHTS
POSITION


UP




DOWN

R23


R9

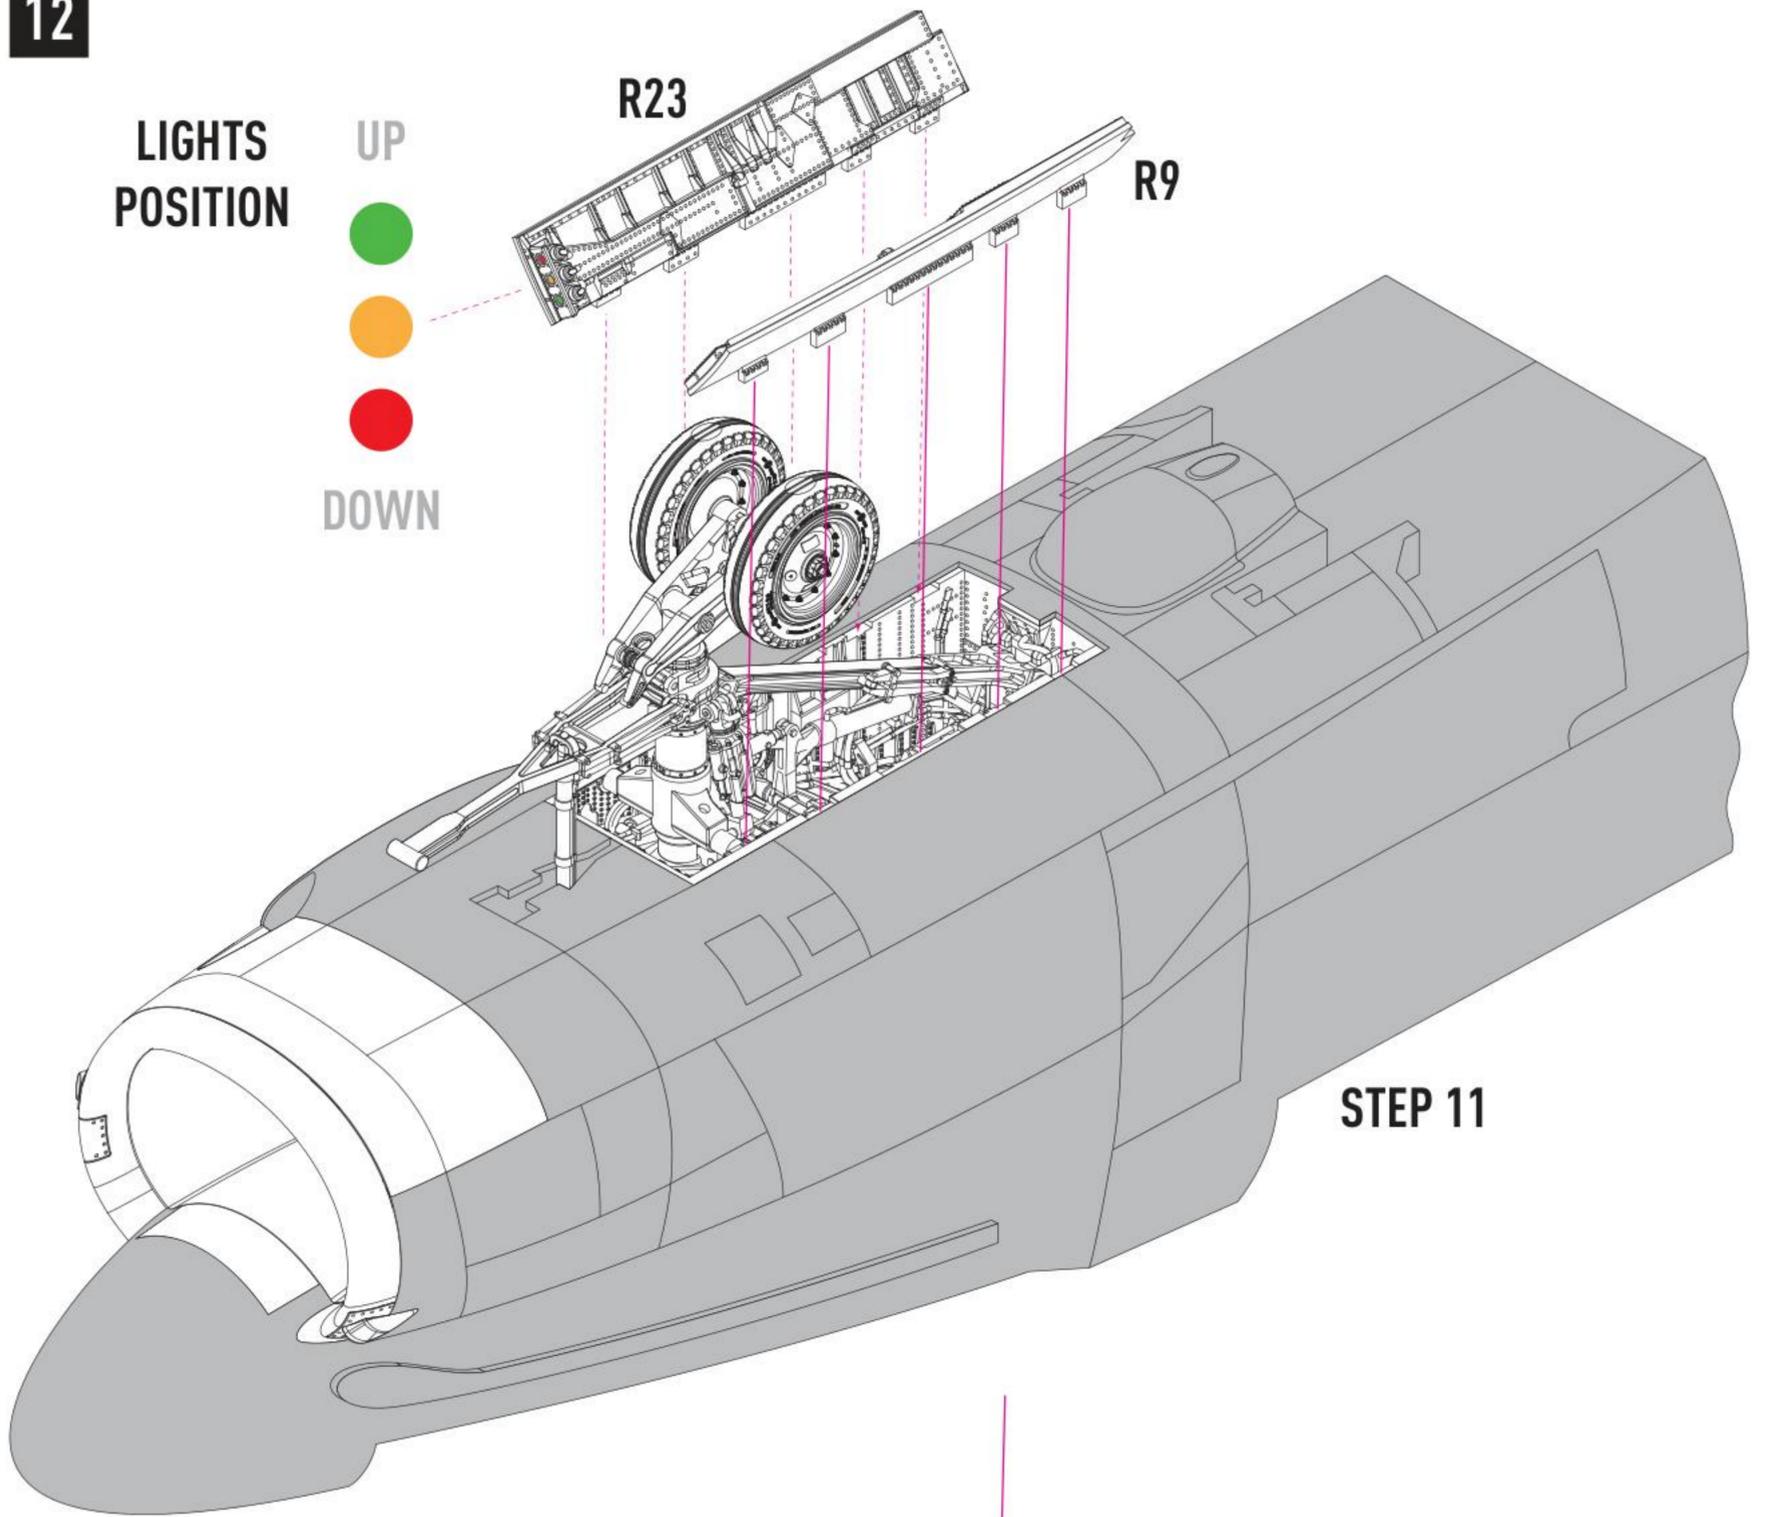


STEP 11

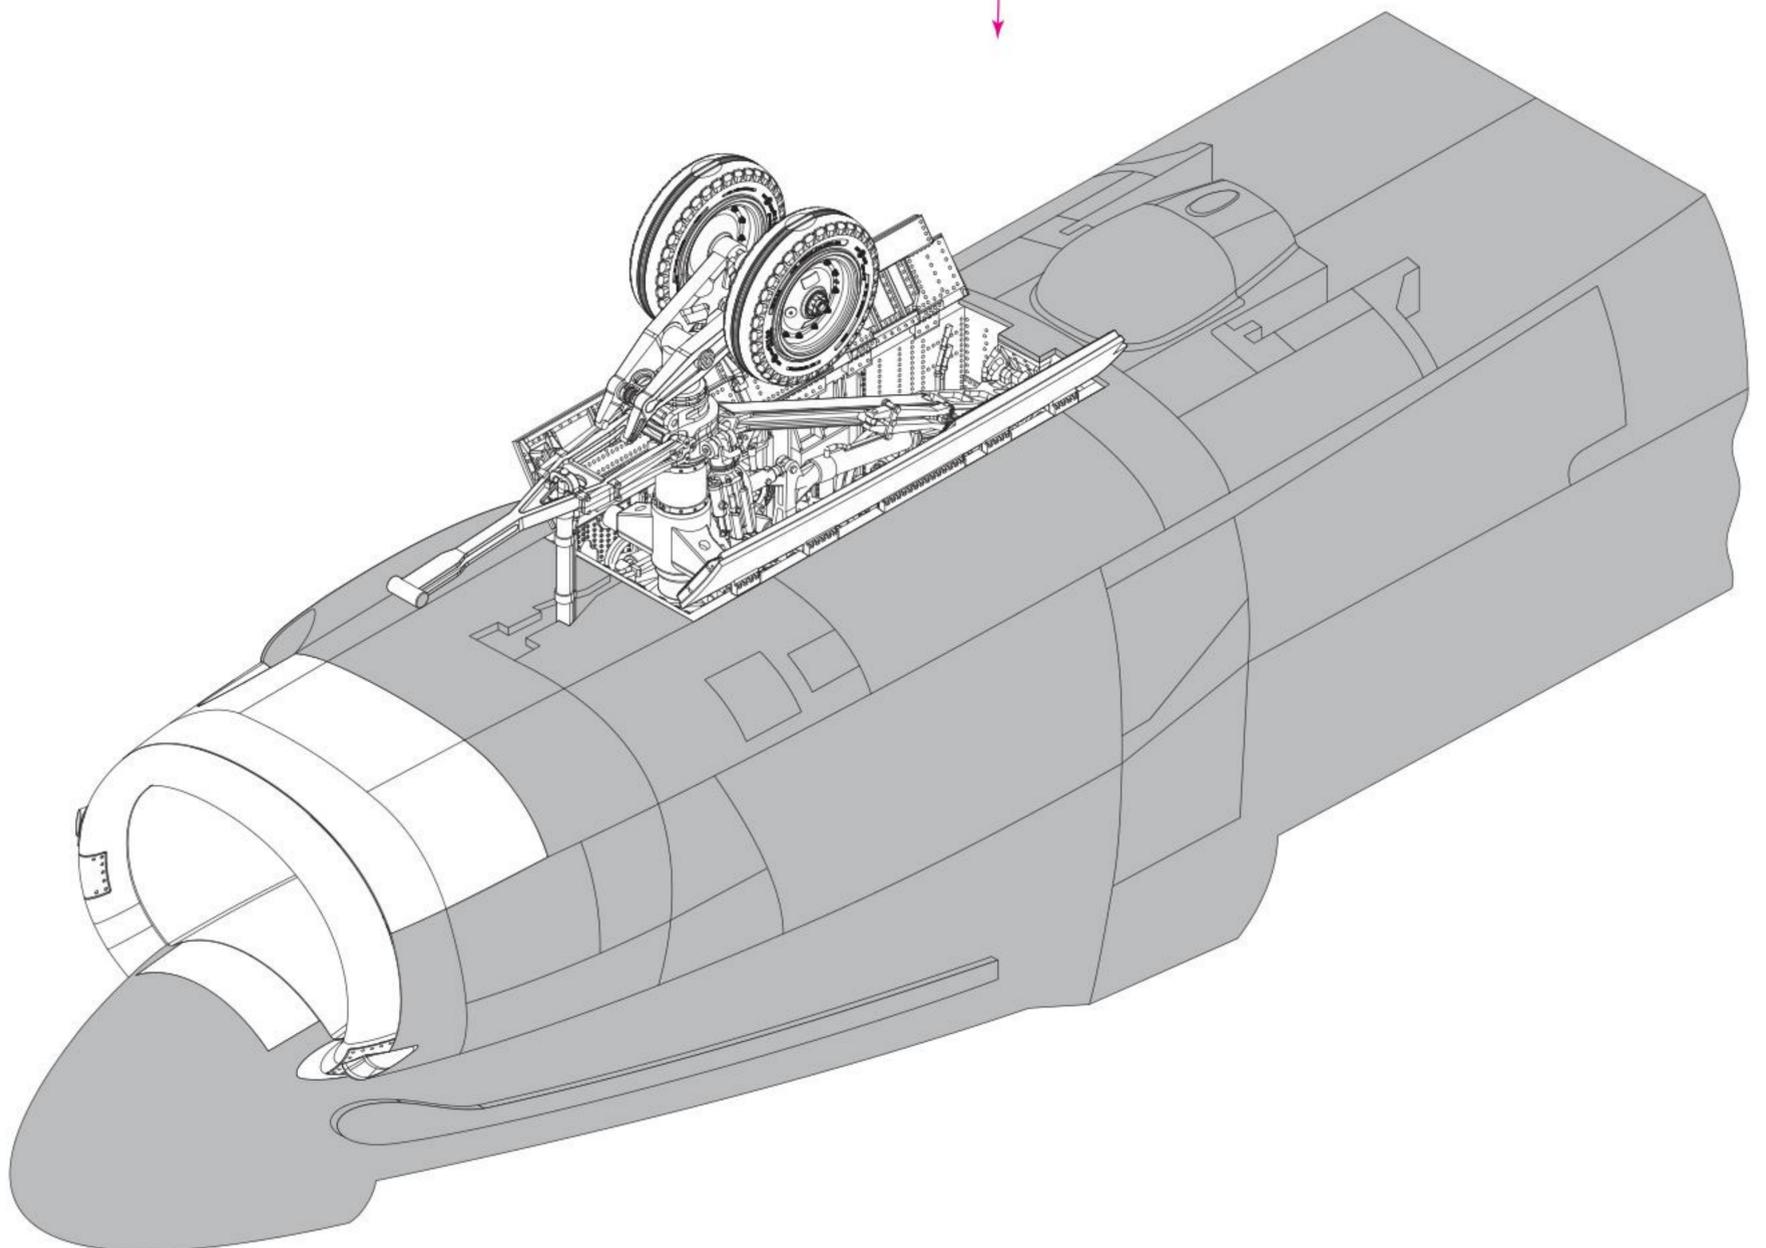


13 MAIN LANDING GEAR

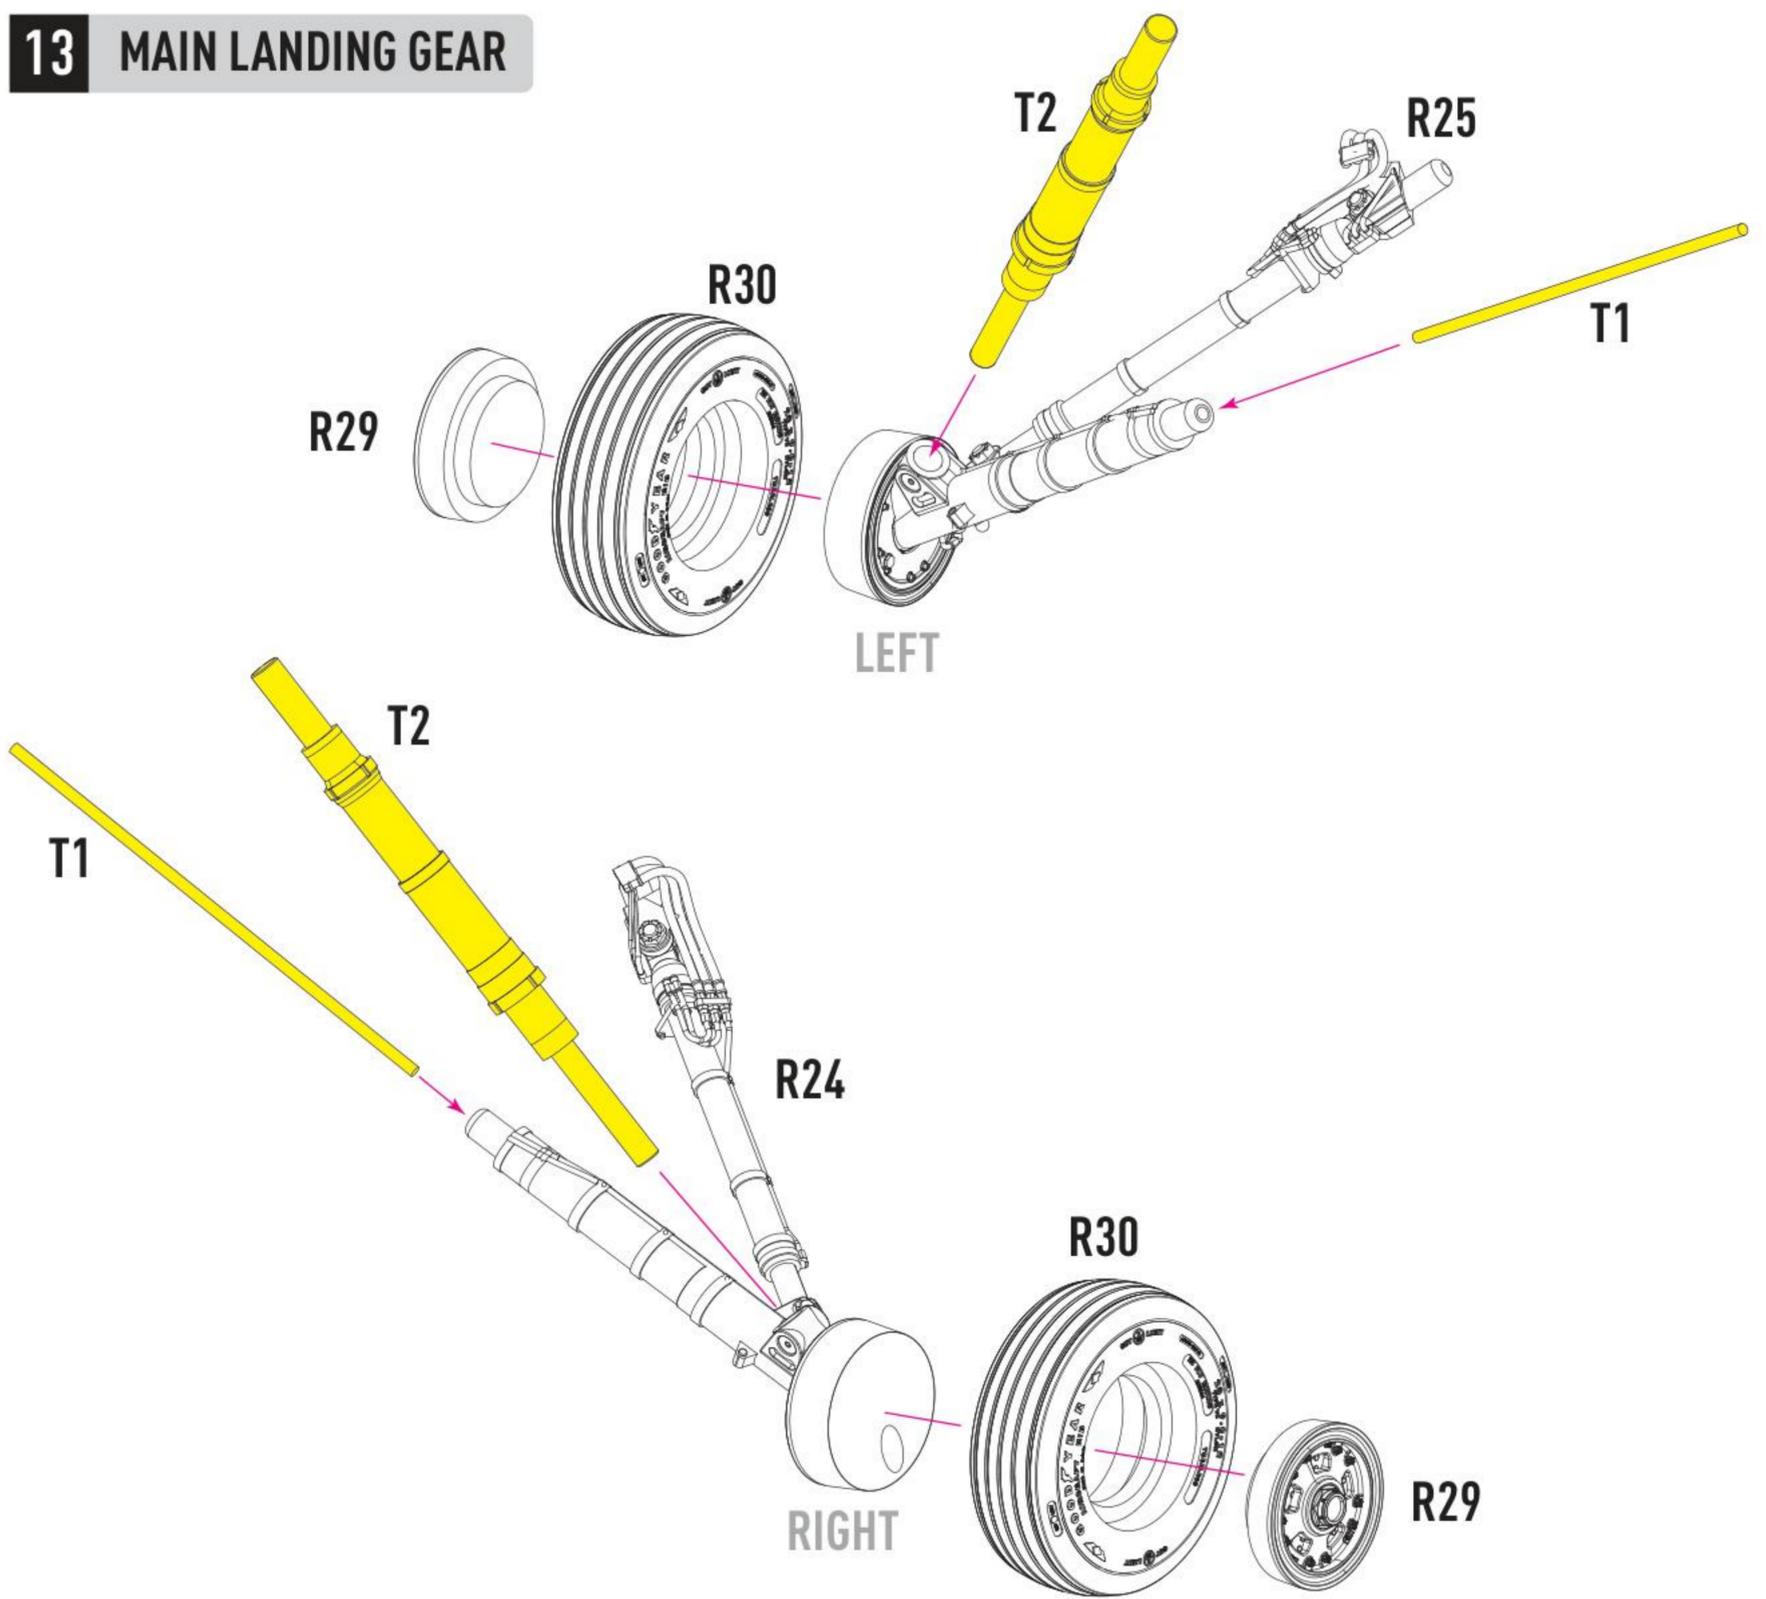


14

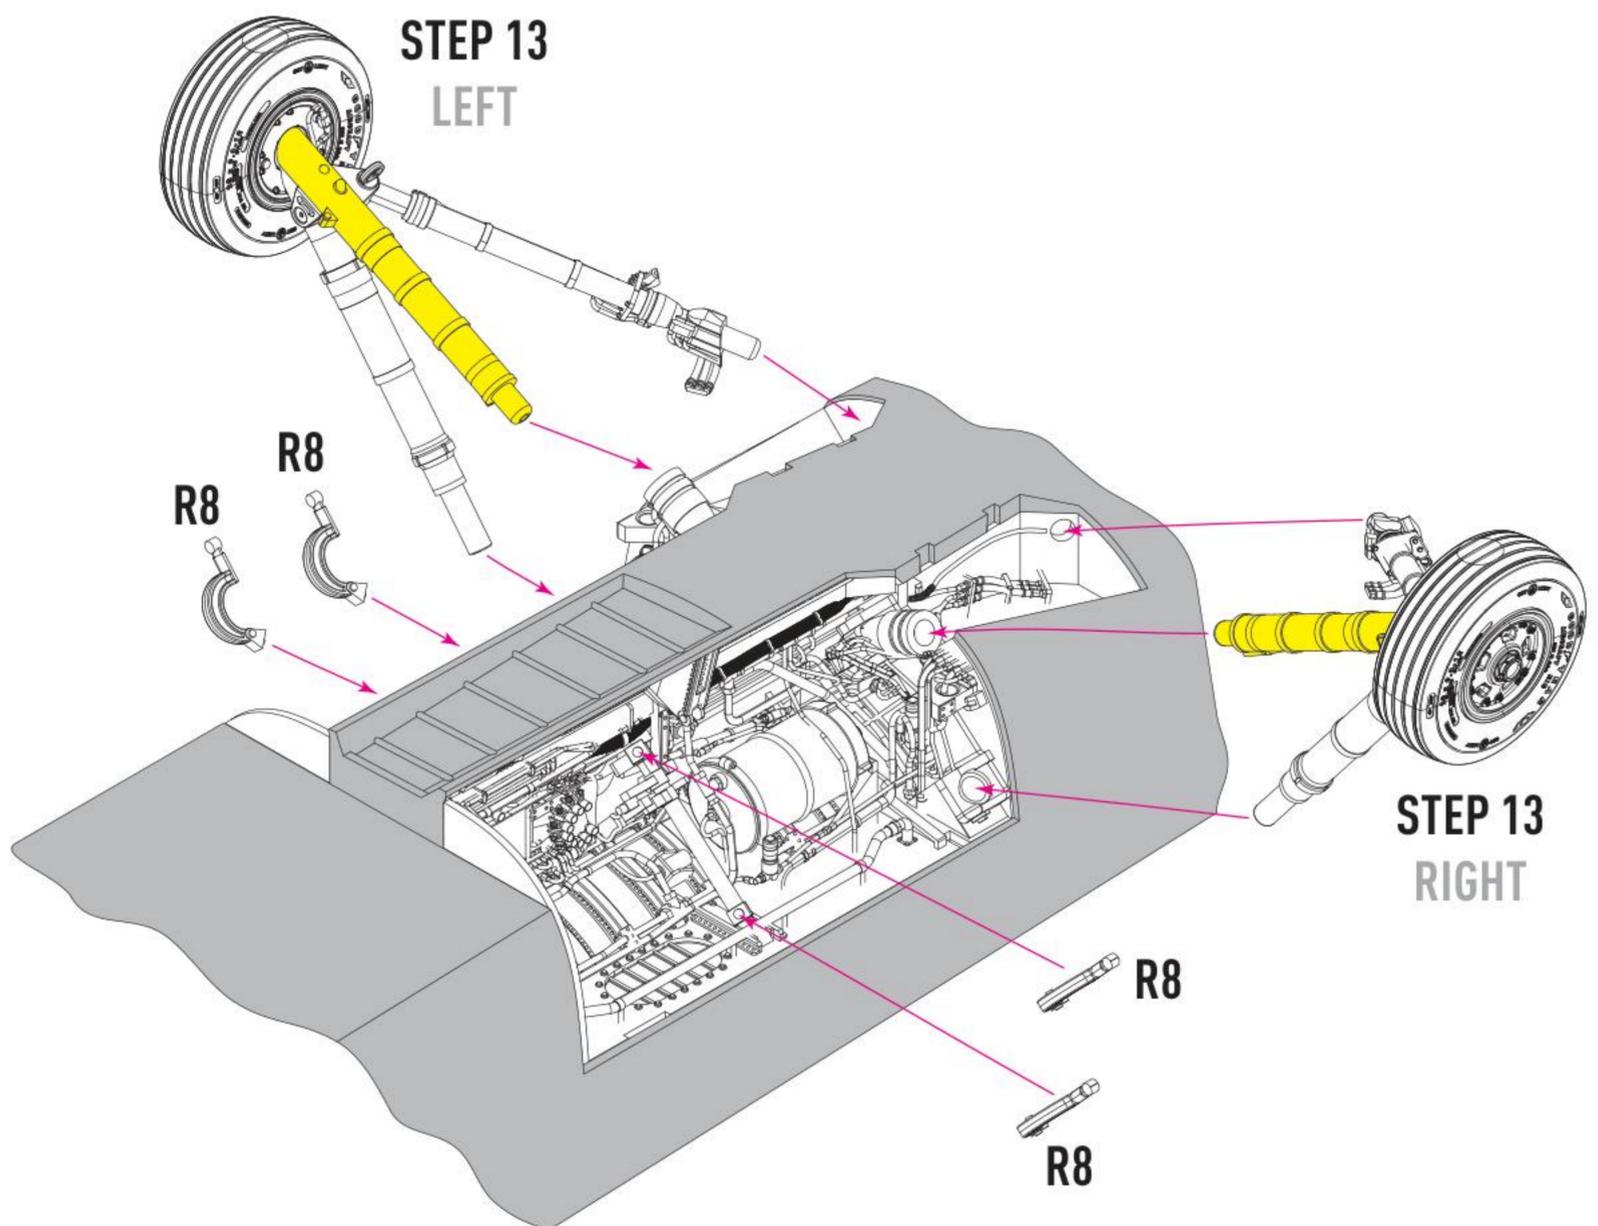


15

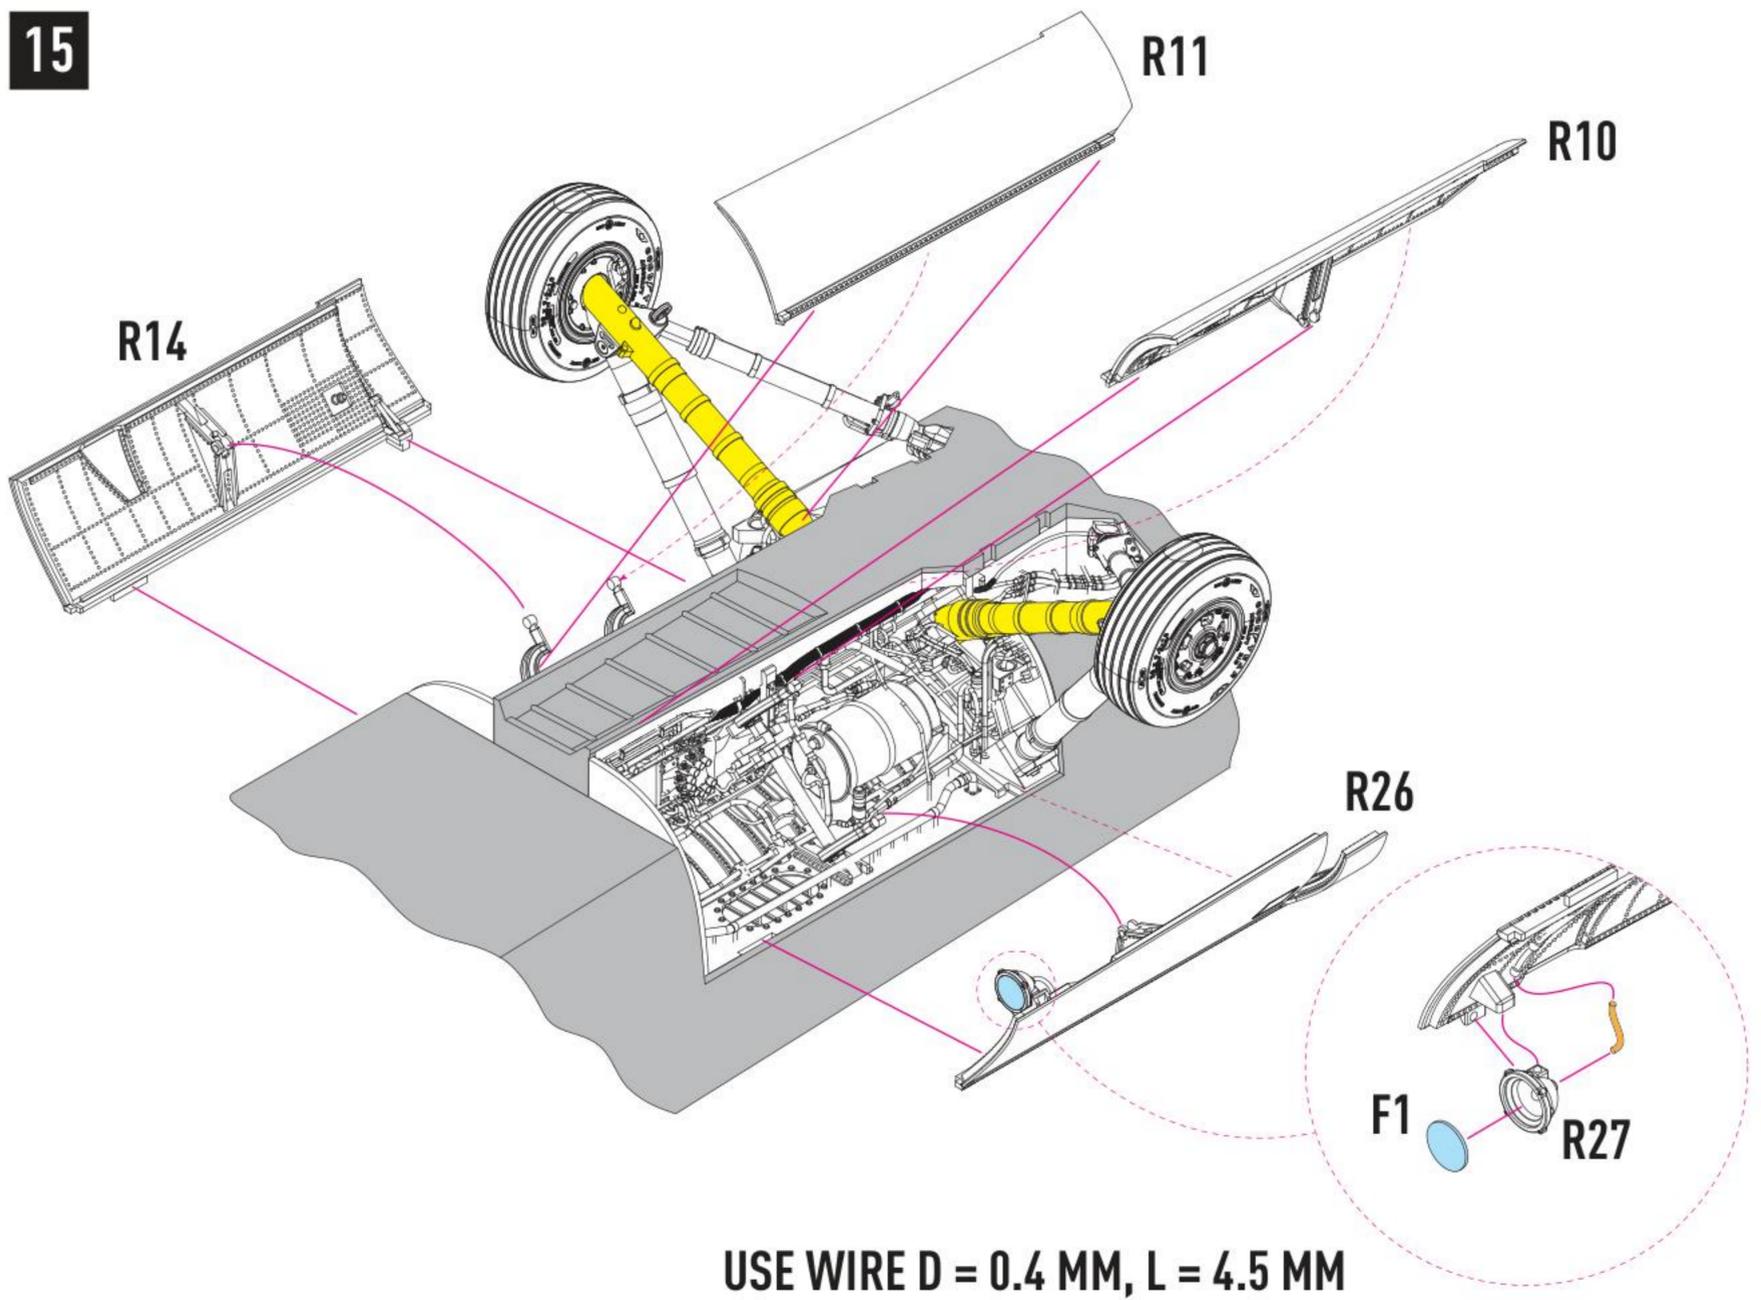


16

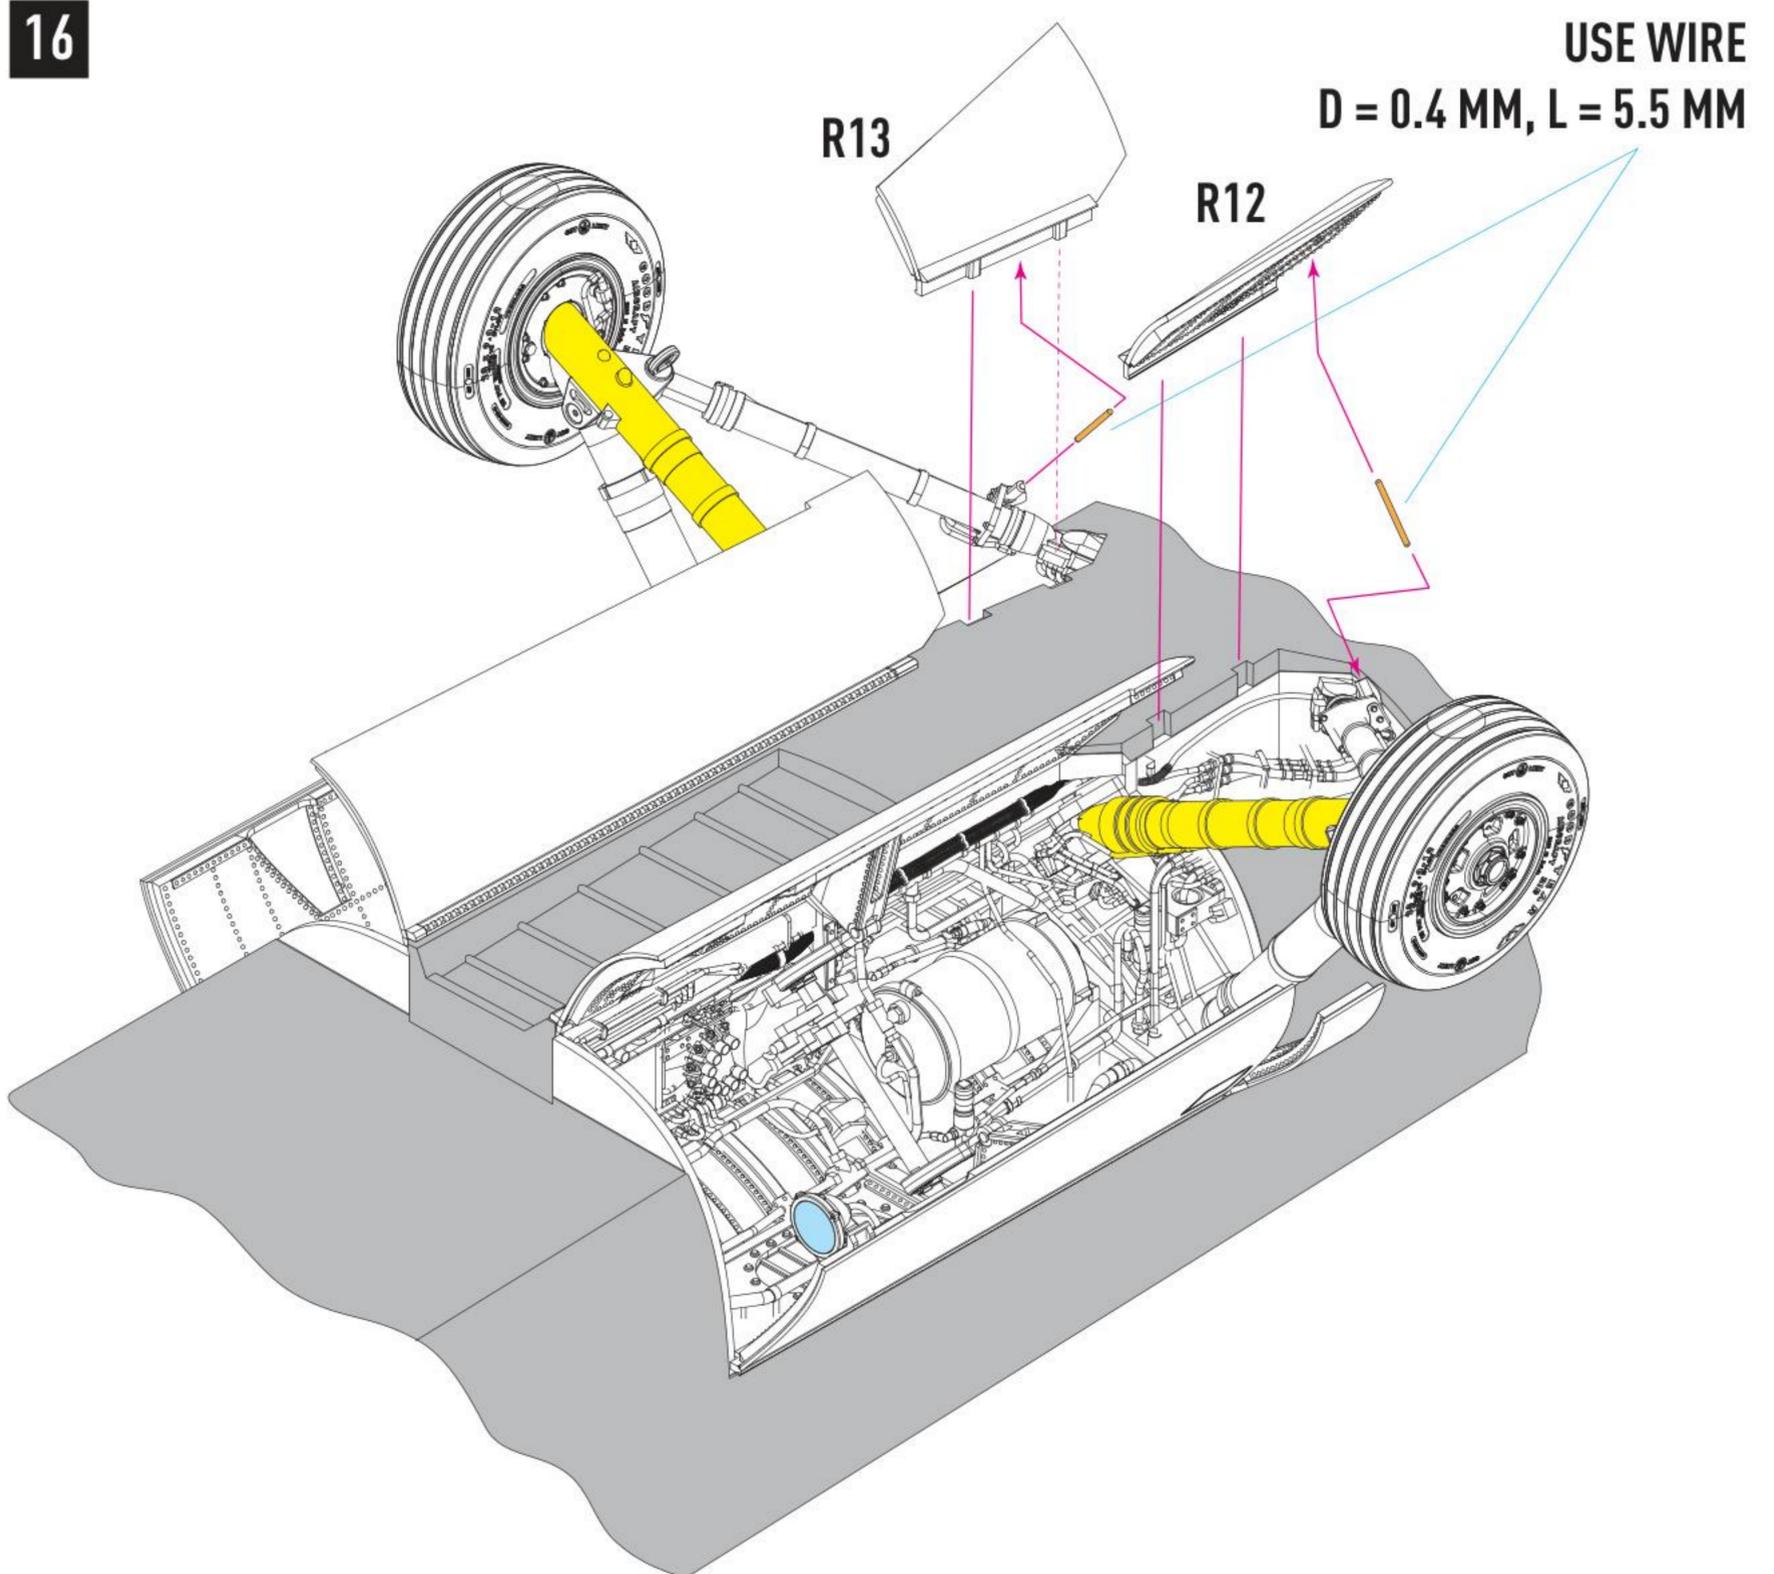



BACK VIEW

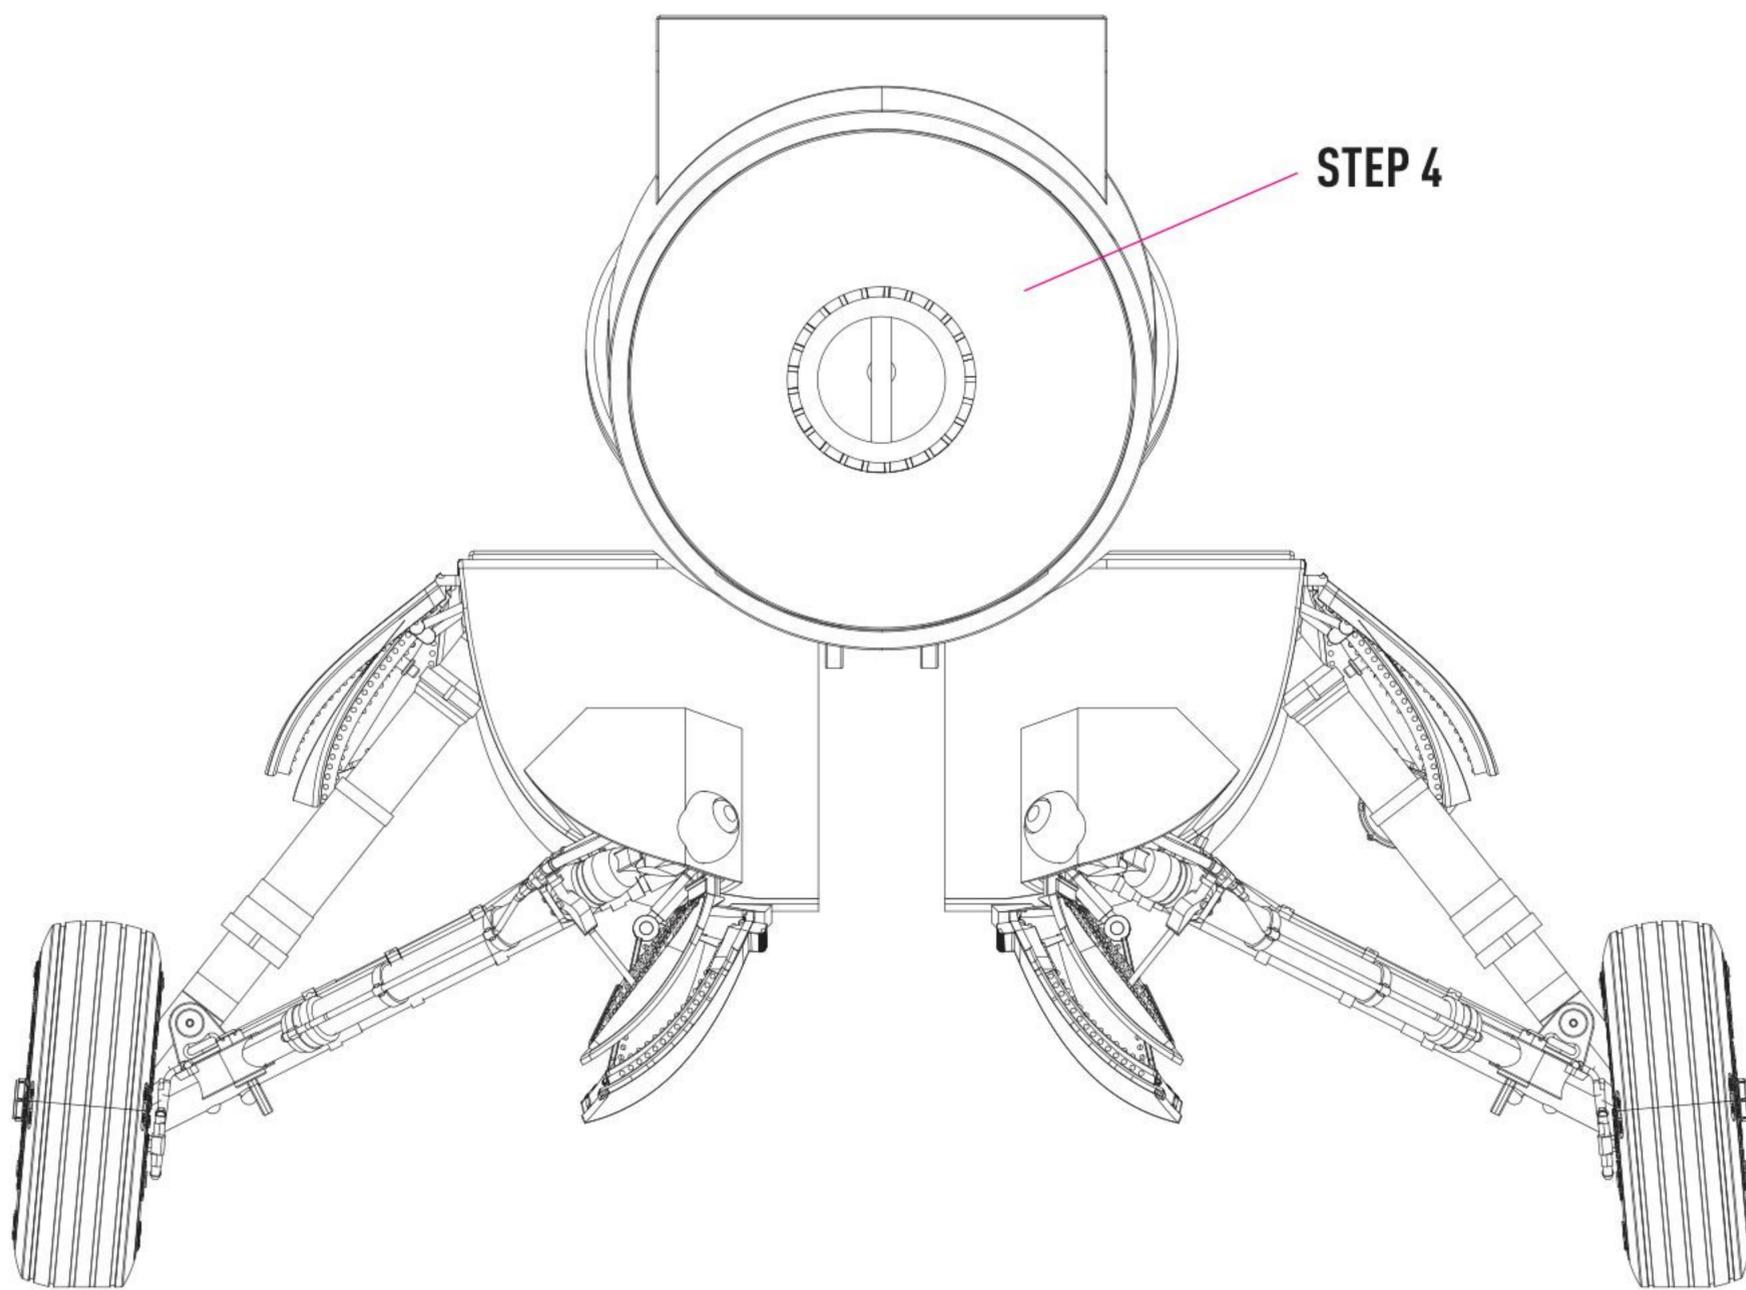

17 X3 ASSEMBLY AND INSTALLATION OF CHOCKS

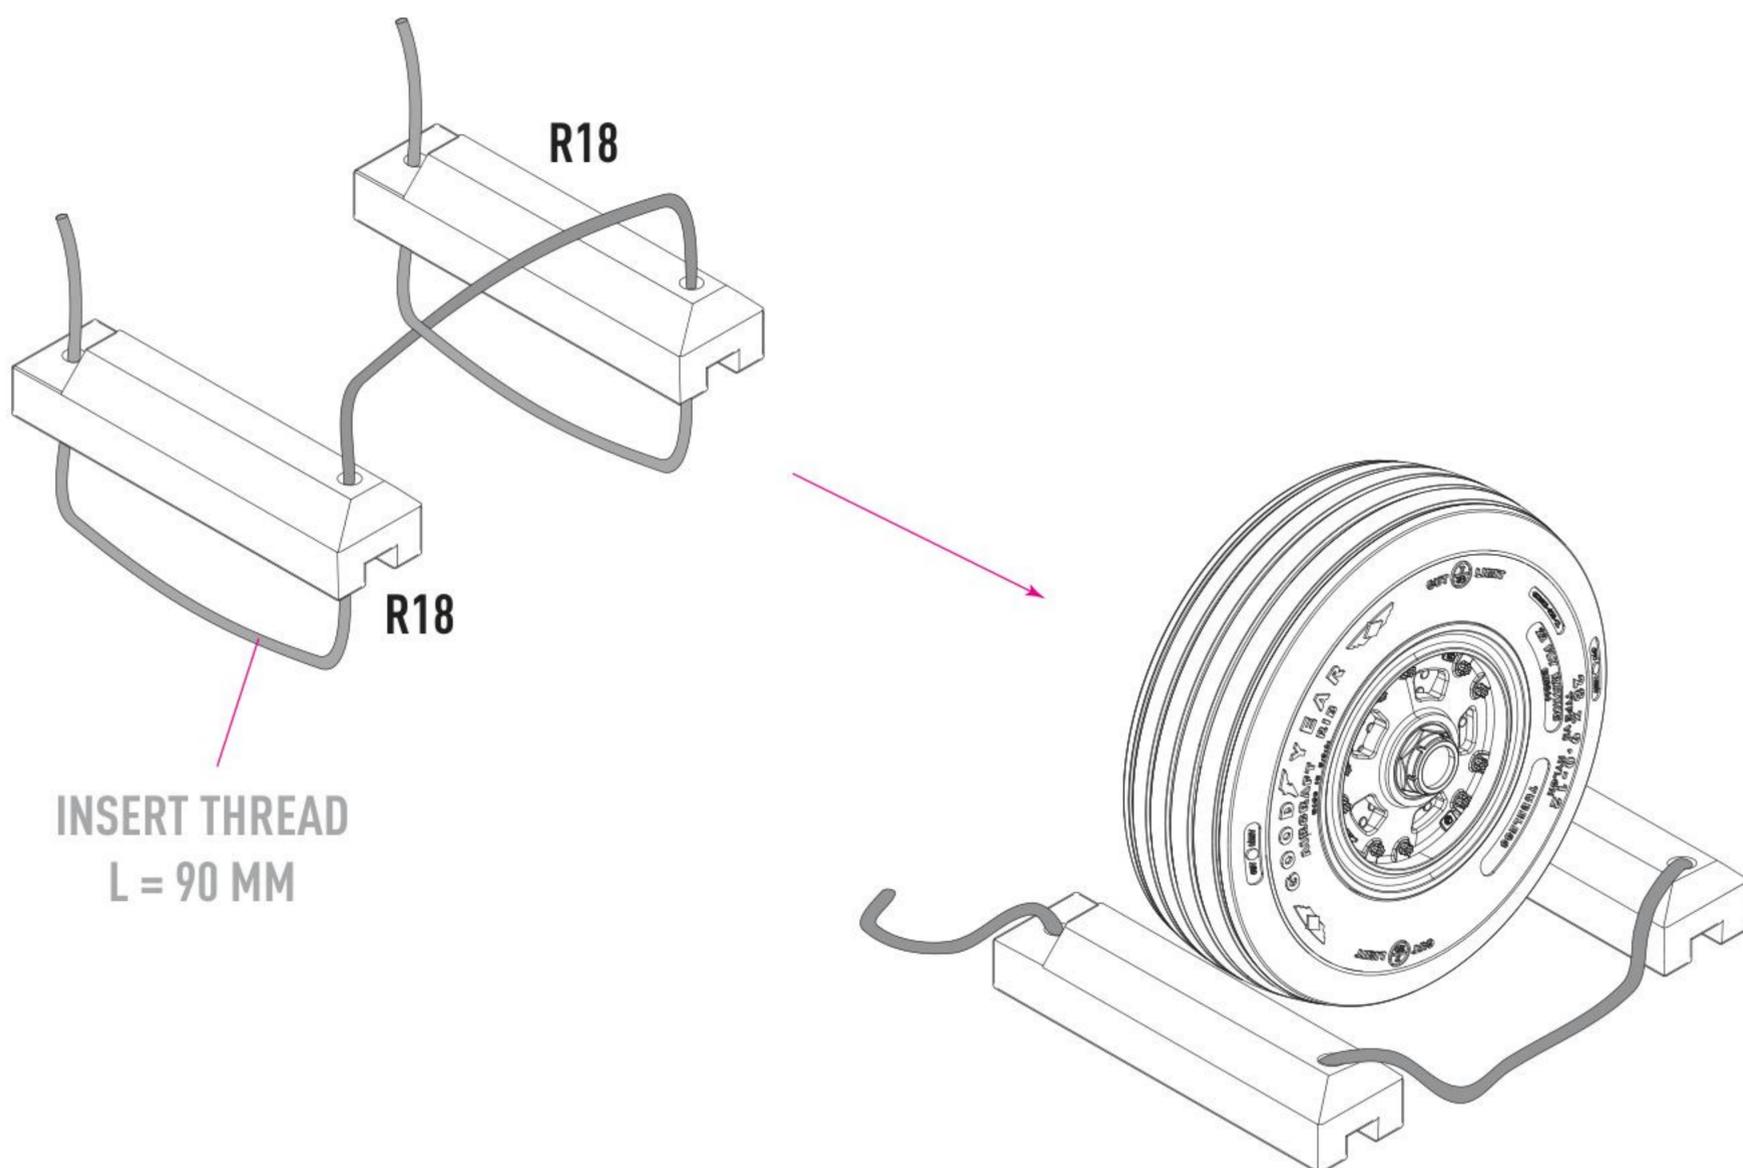


DECAL INSTRUCTION

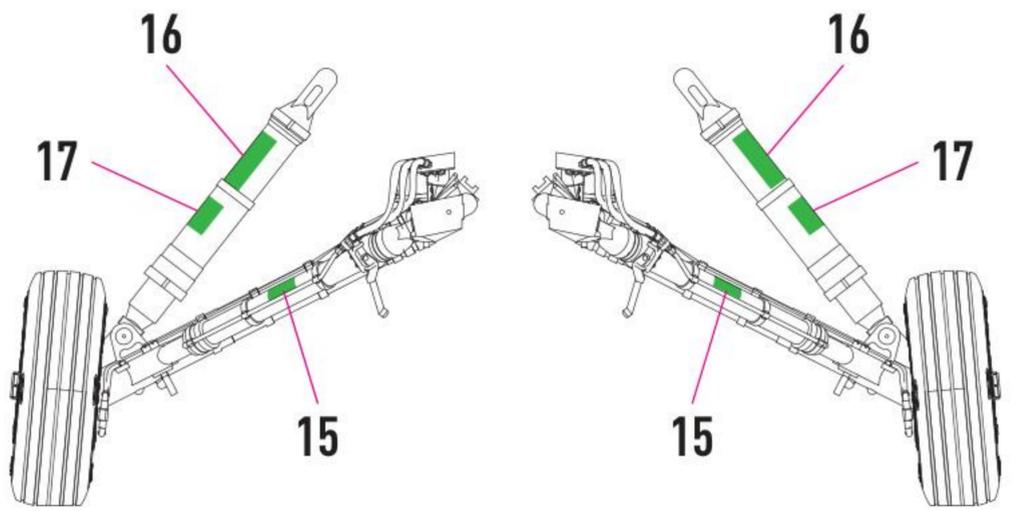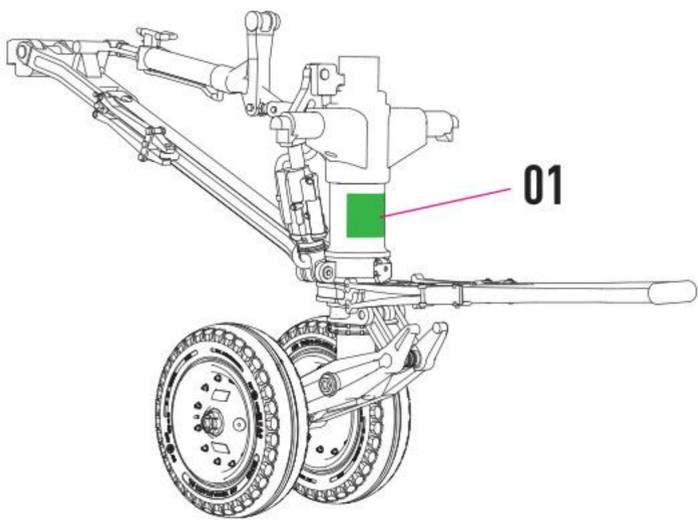


LEFT

RIGHT

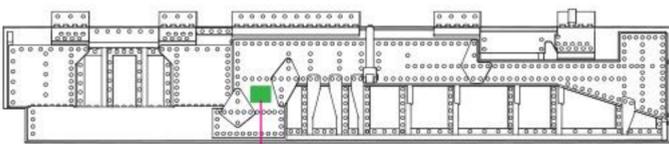


NOSE WHEEL BAY DOOR

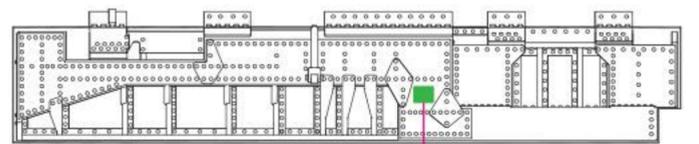


02

02

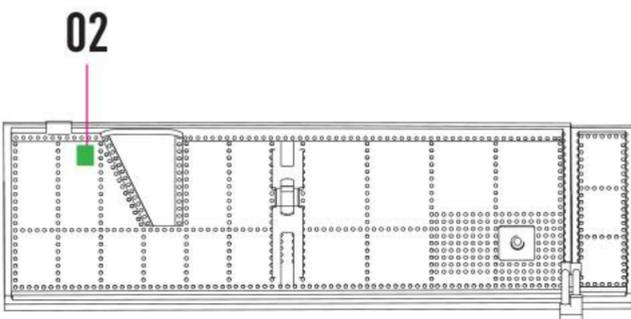


UPPER MAIN WHEEL BAY DOOR

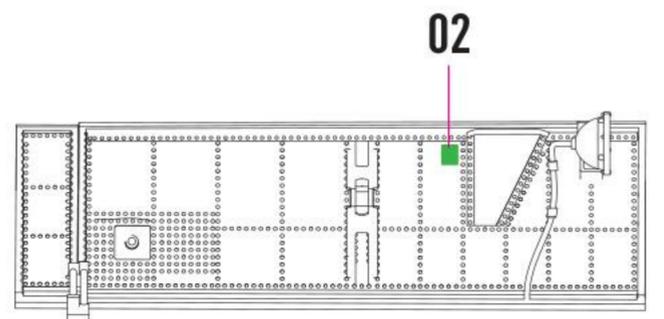


02

02

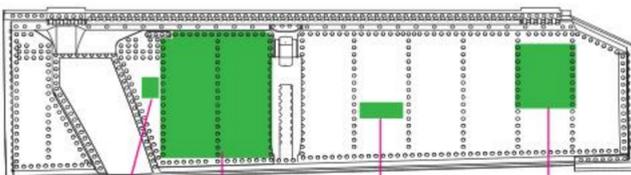

LOWER MAIN WHEEL BAY DOOR

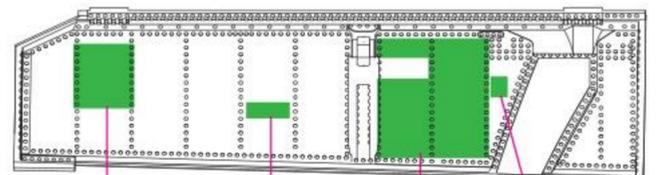

02

06

04

05

05


04

07

02

03

03

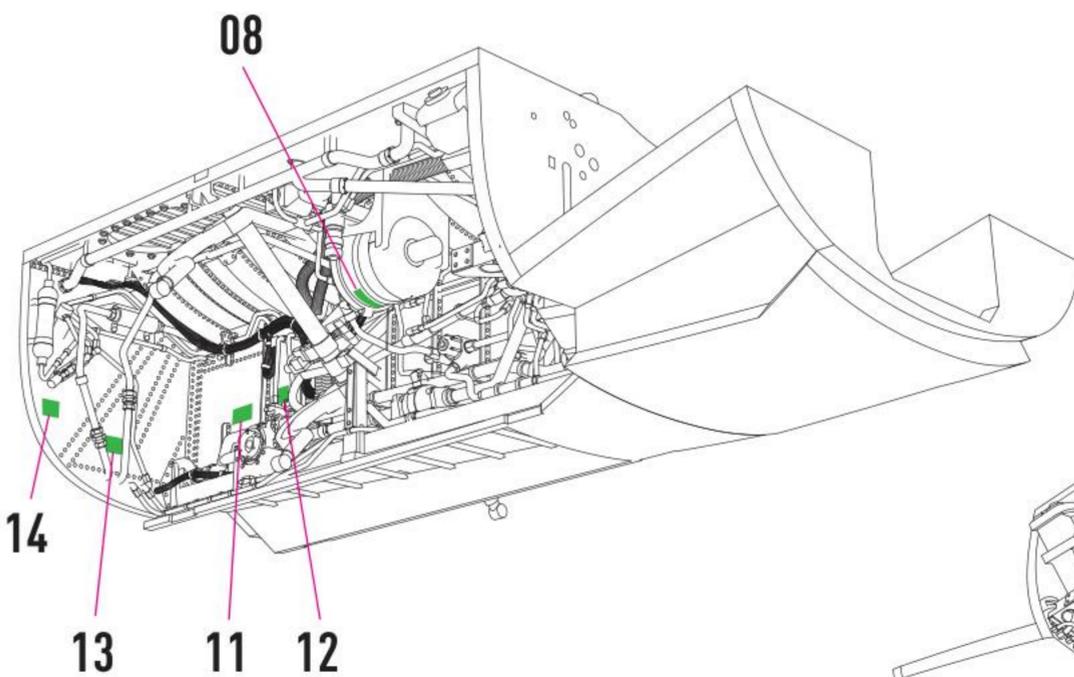


14

13

11

12

08

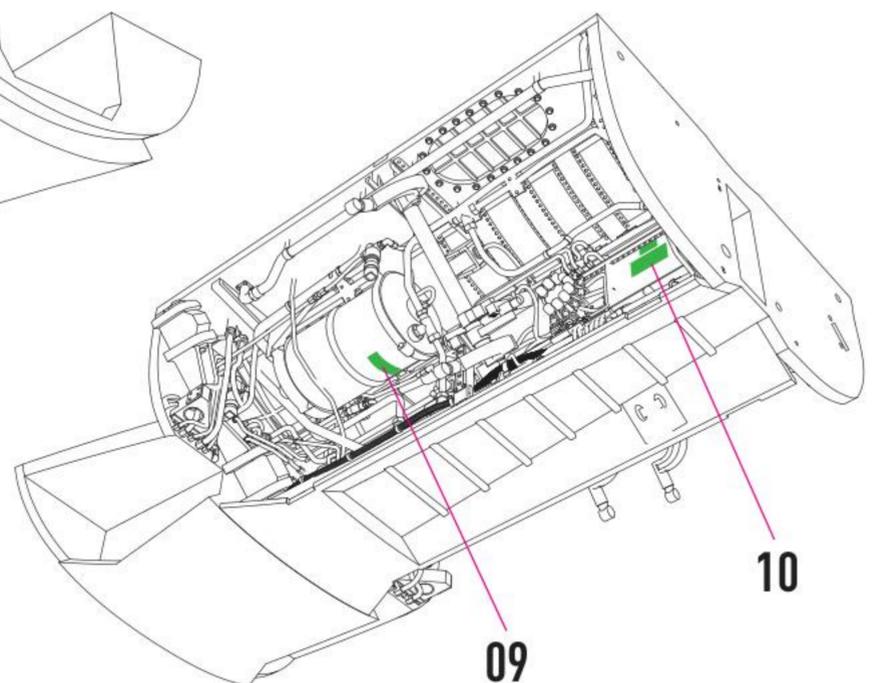

09

10