




USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
 FROM SUPPORTS**

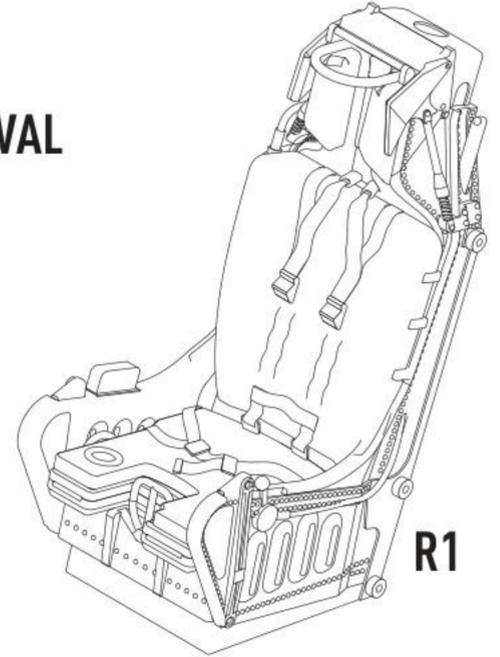

LTV A-7 CORSAIR II


In this 148-page book, we present a complete overview of the A-7 Corsair II, a compact fighter capable of carrying an enormous load of weapons. It was developed to replace the A-4 Skyhawk.

DUKEHAWKINS.COM


MORE DETAILED PHOTOS FOR BUILDING THE MODEL CAN BE FOUND IN THE BOOK DUKE HAWKINS

1

**PART D1 FROM
 TRUMPETER KIT**

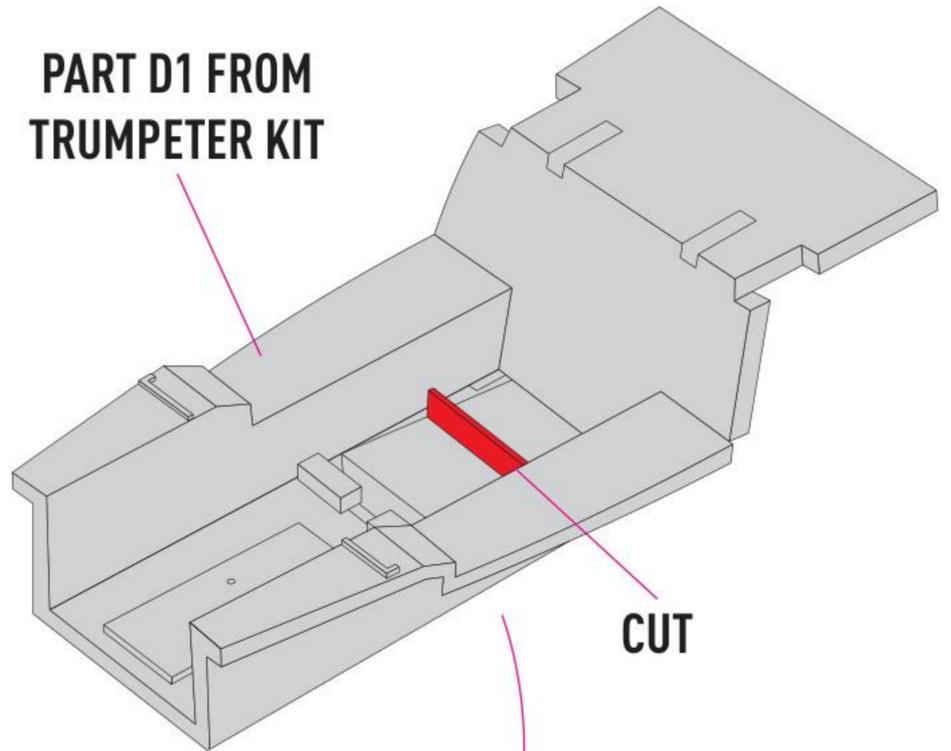


R1

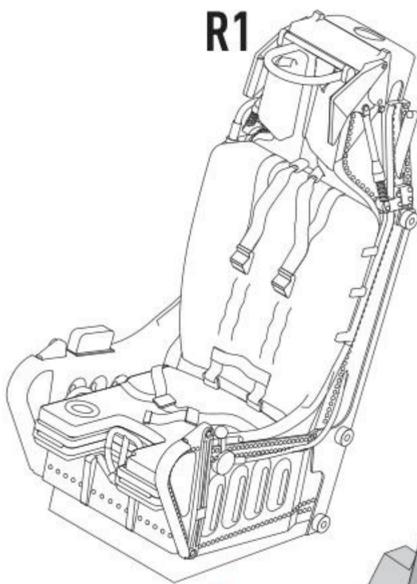






CUT

**PART D26 FROM
 TRUMPETER KIT**

**PART D27 FROM
 TRUMPETER KIT**

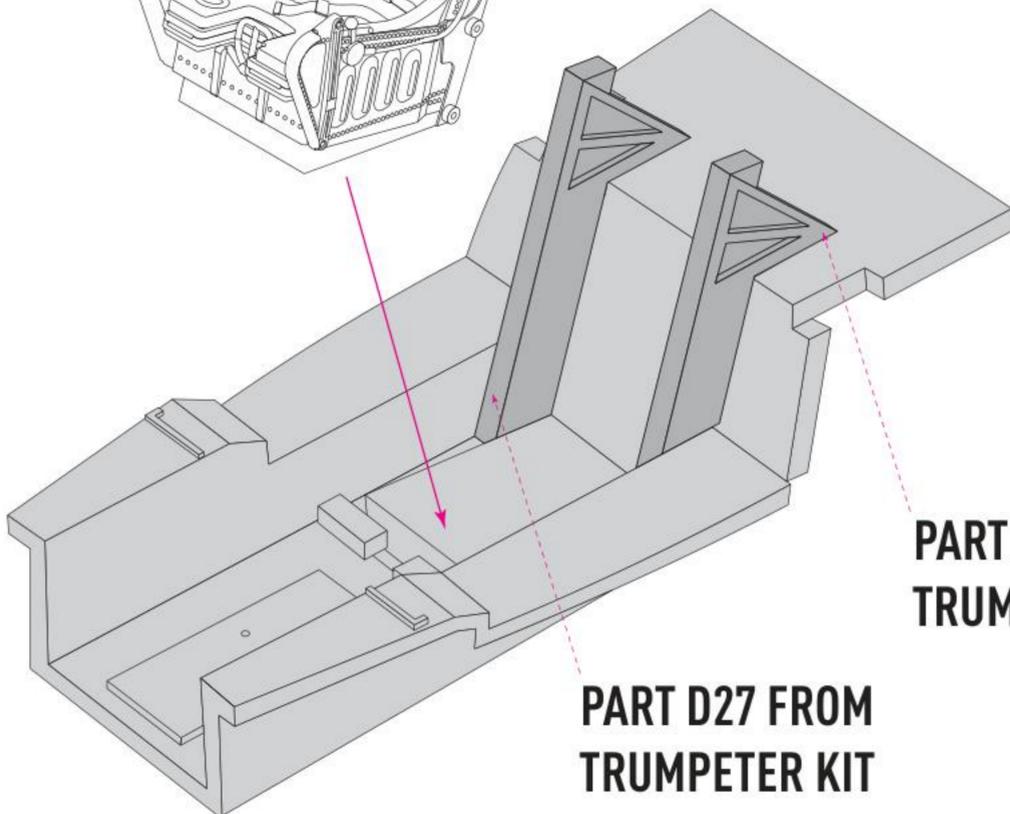

DECAL INSTRUCTION

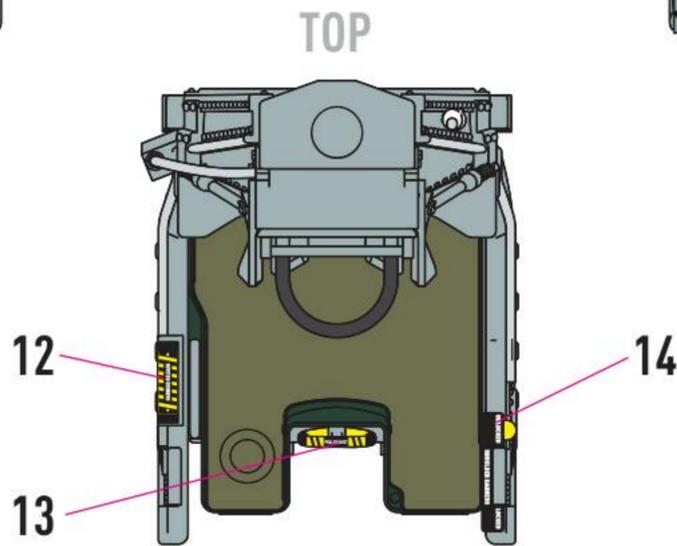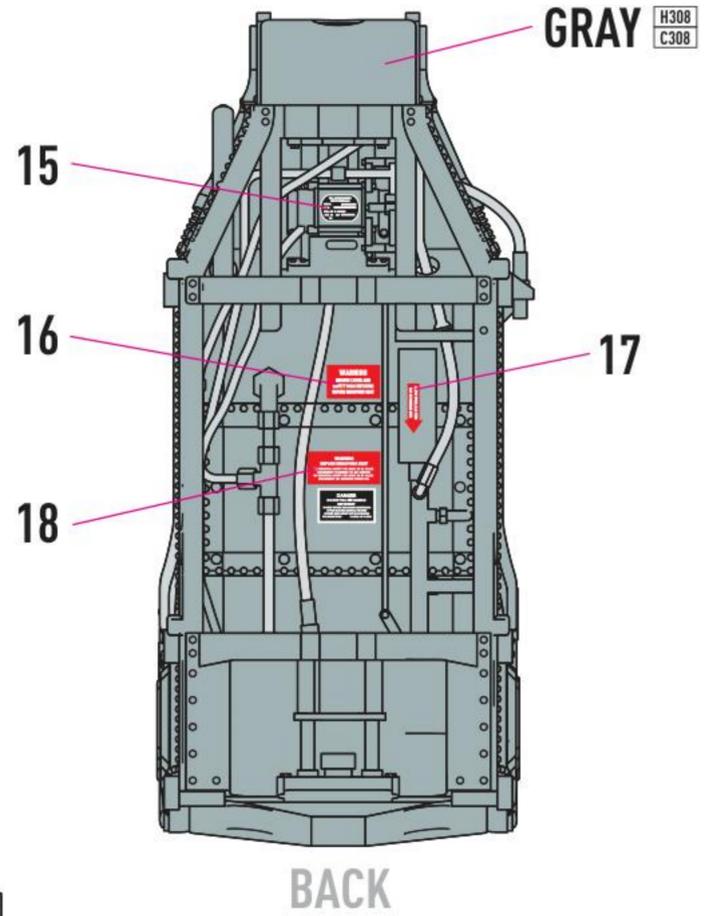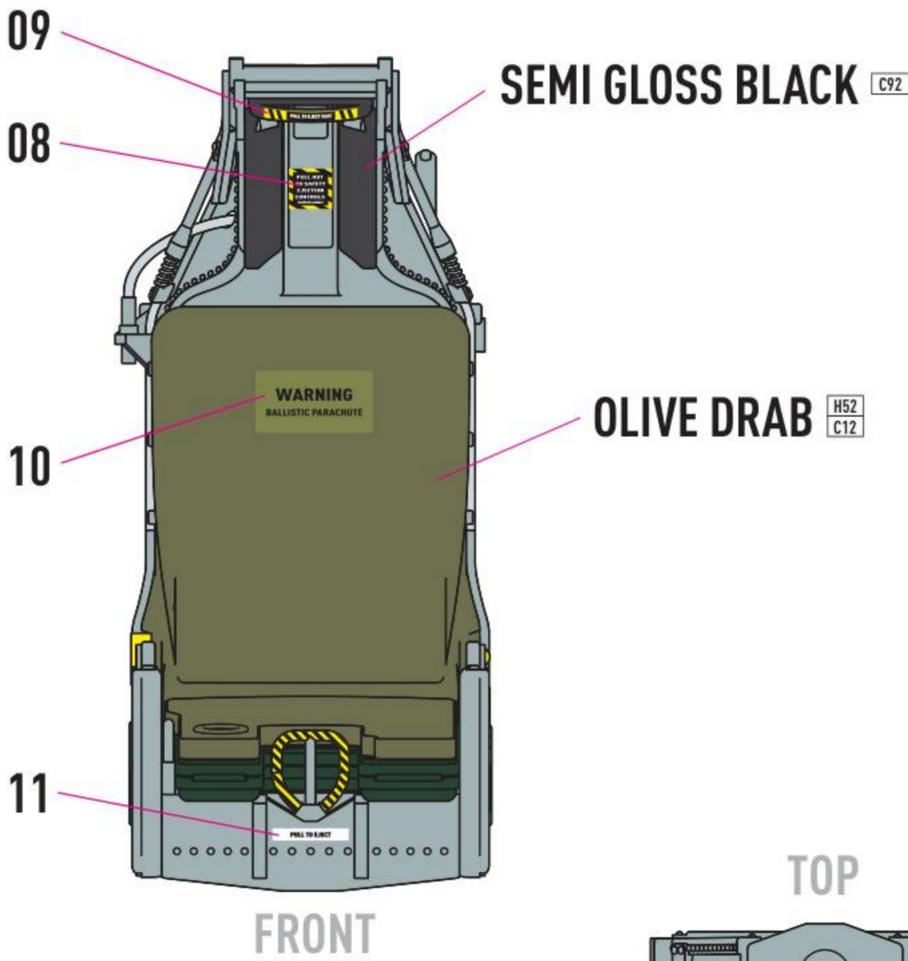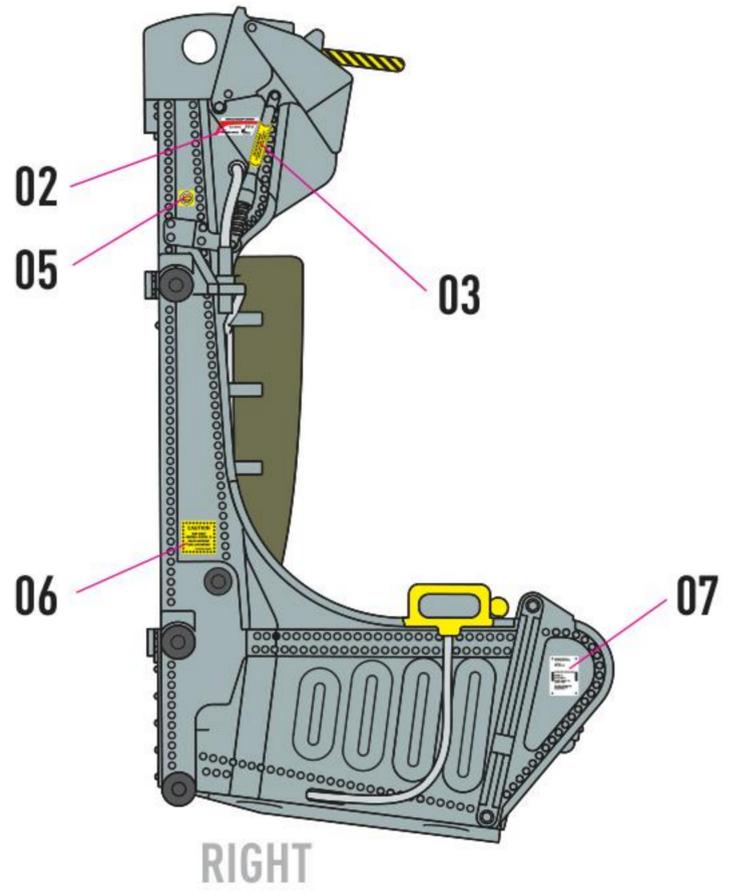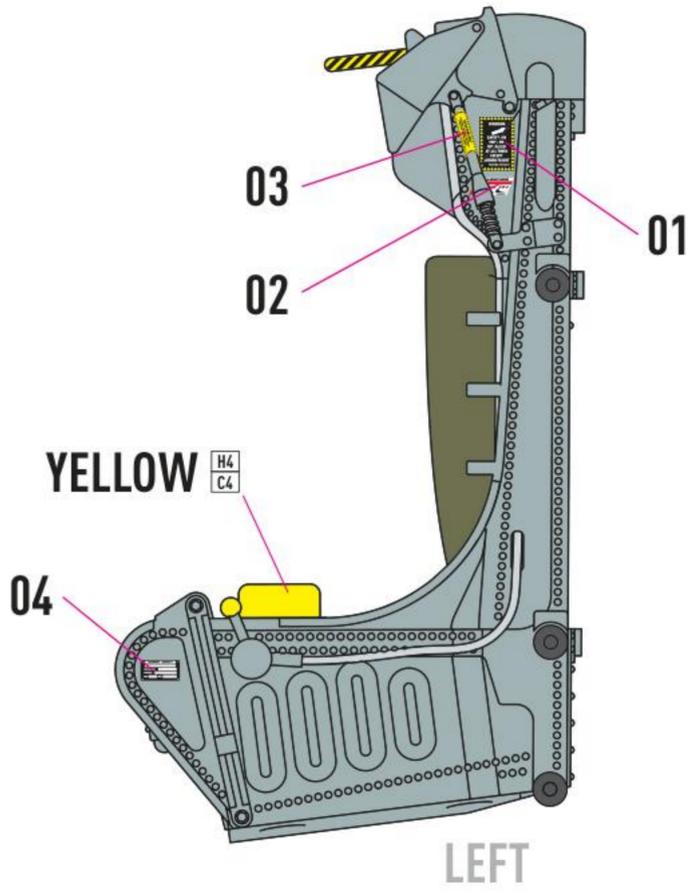

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H52	C12
YELLOW	H4	C4

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308
SEMI GLOSS BLACK		C92