




RESIN PARTS
FOR SCALE PLASTIC KITS

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE




INSTRUCTION **RSU32-0189**

A-7E CORSAIR II EARLY COCKPIT HYPERDETAILED EDITION

3D PRINTED
PARTS

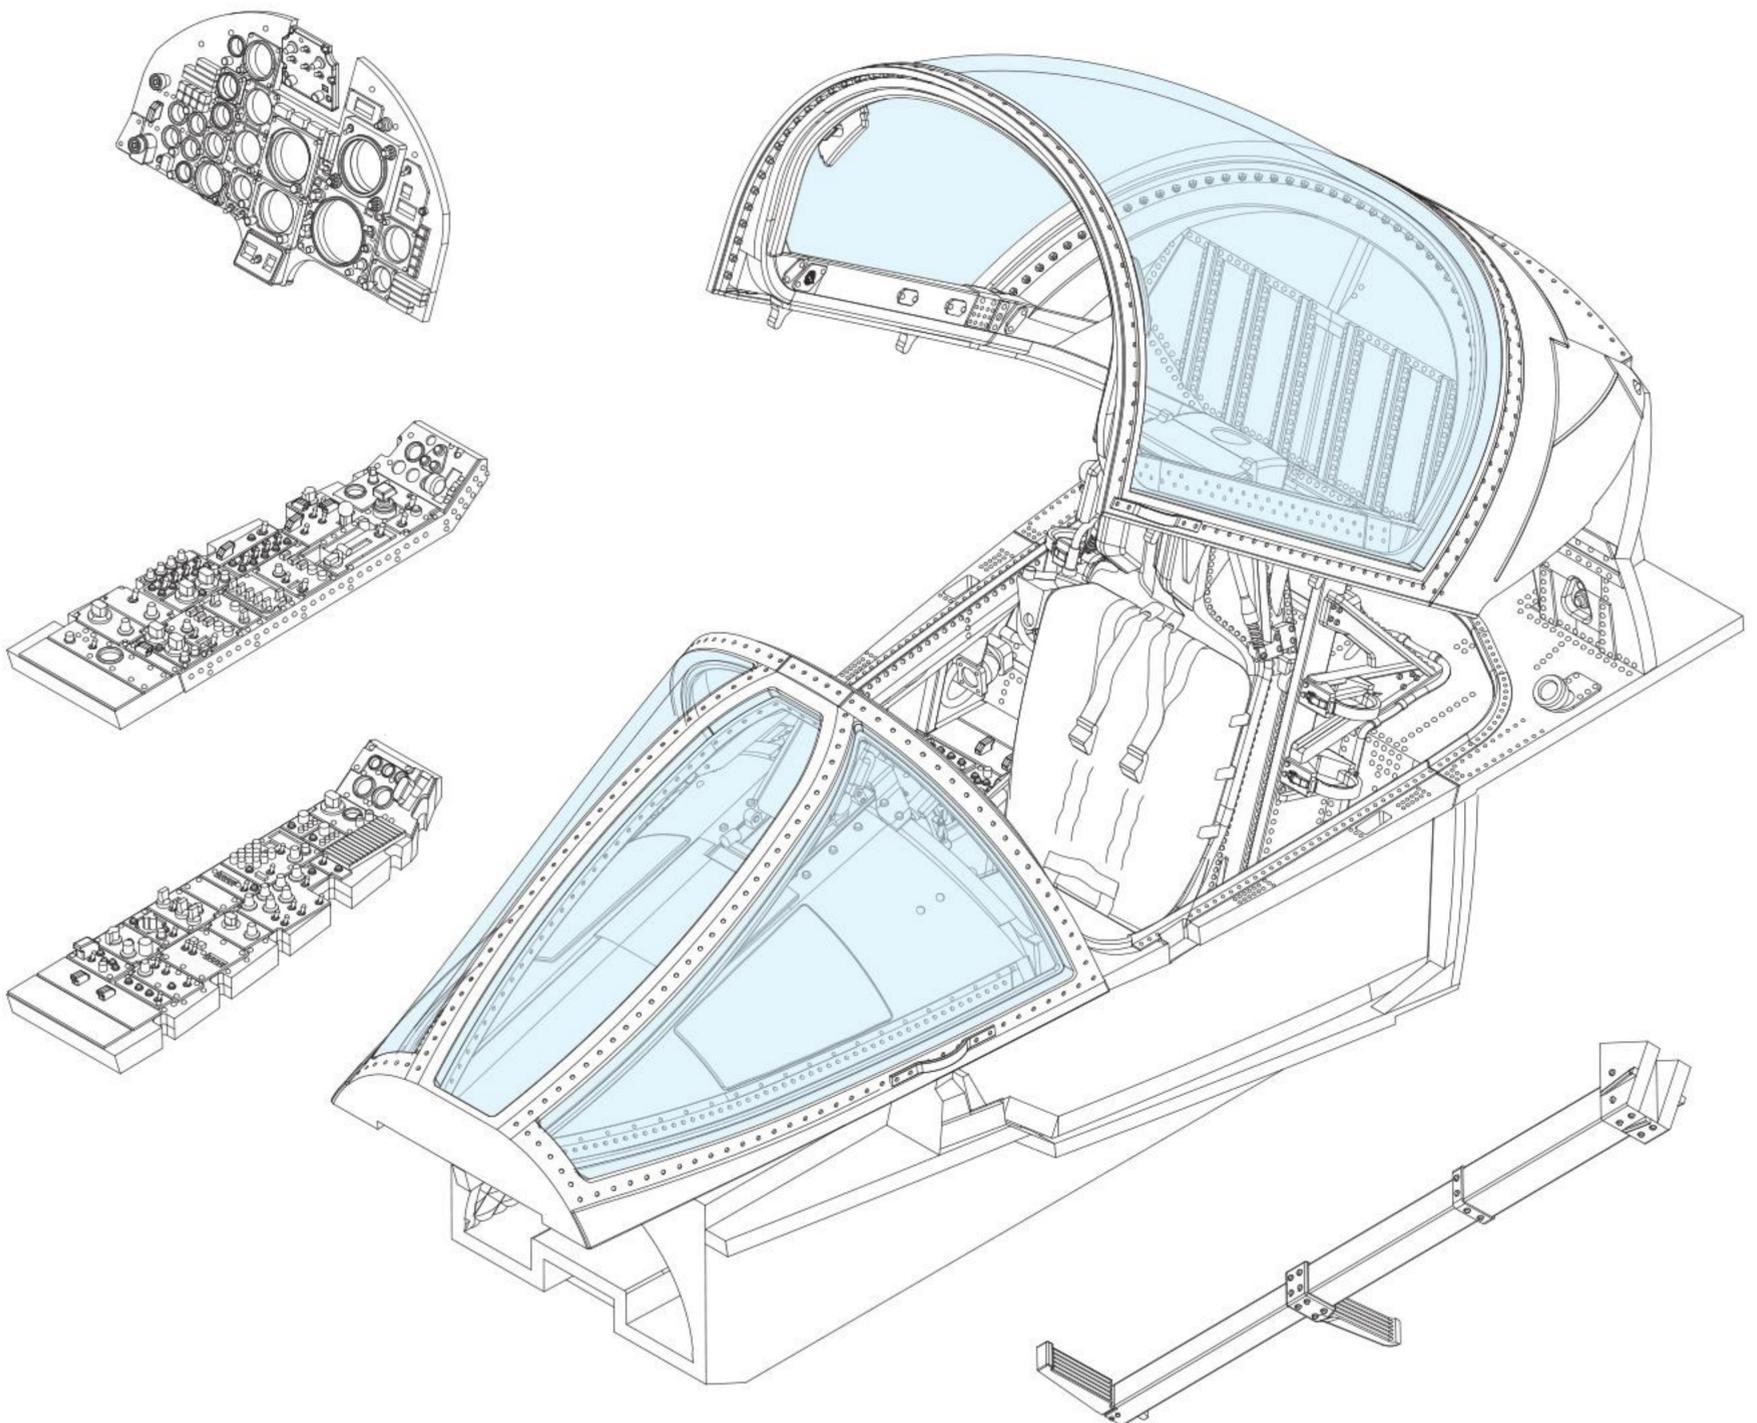


FOR TRUMPETER KIT

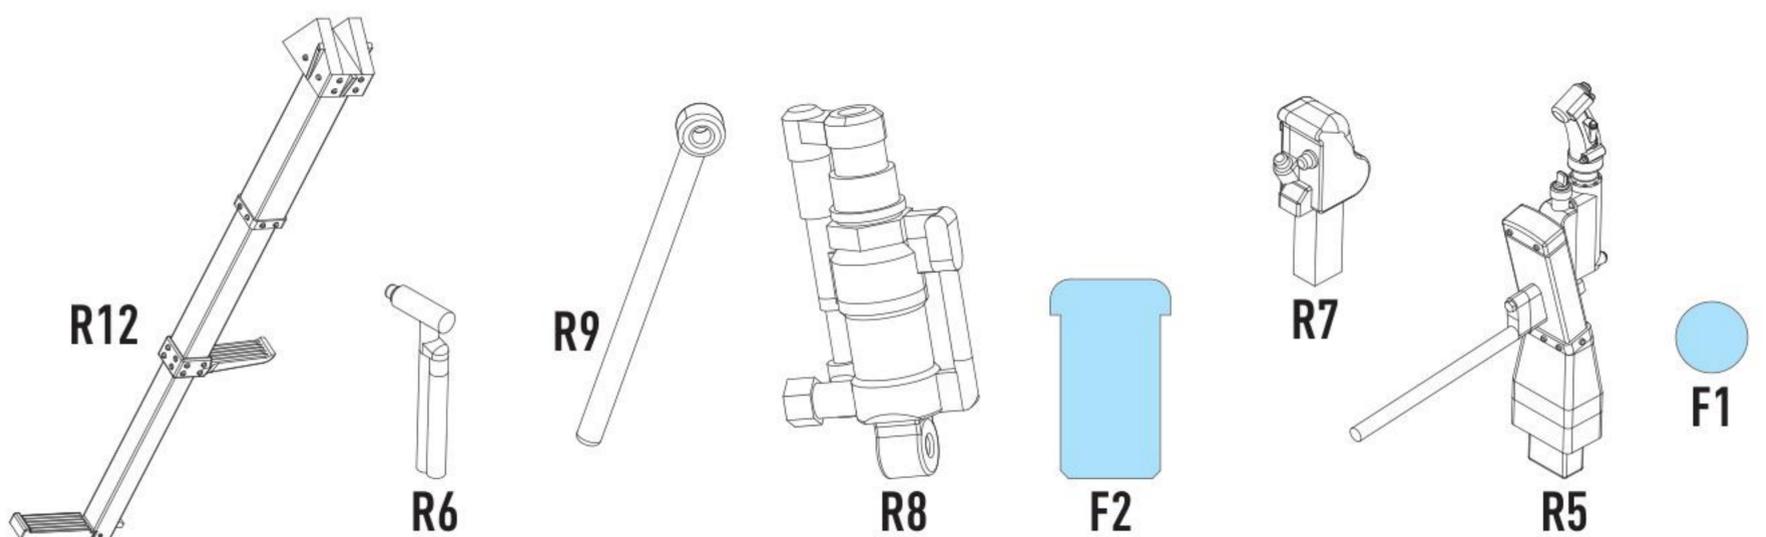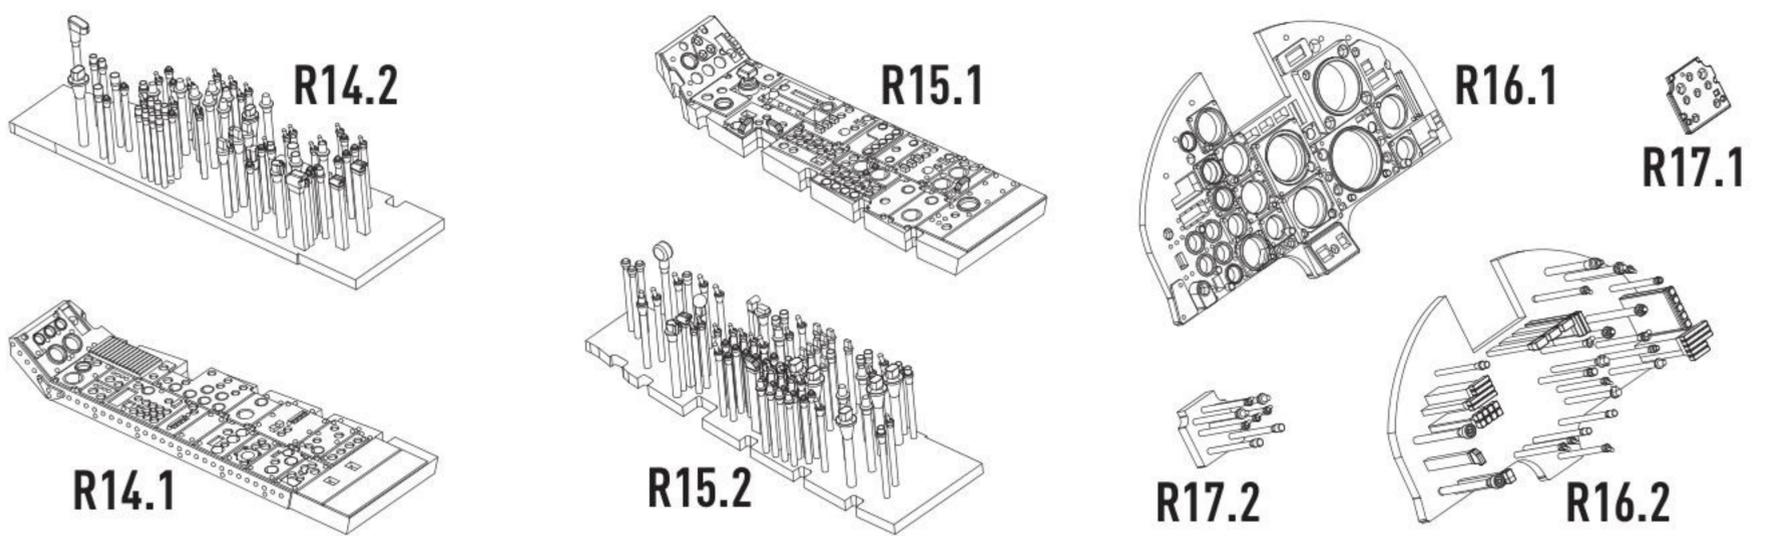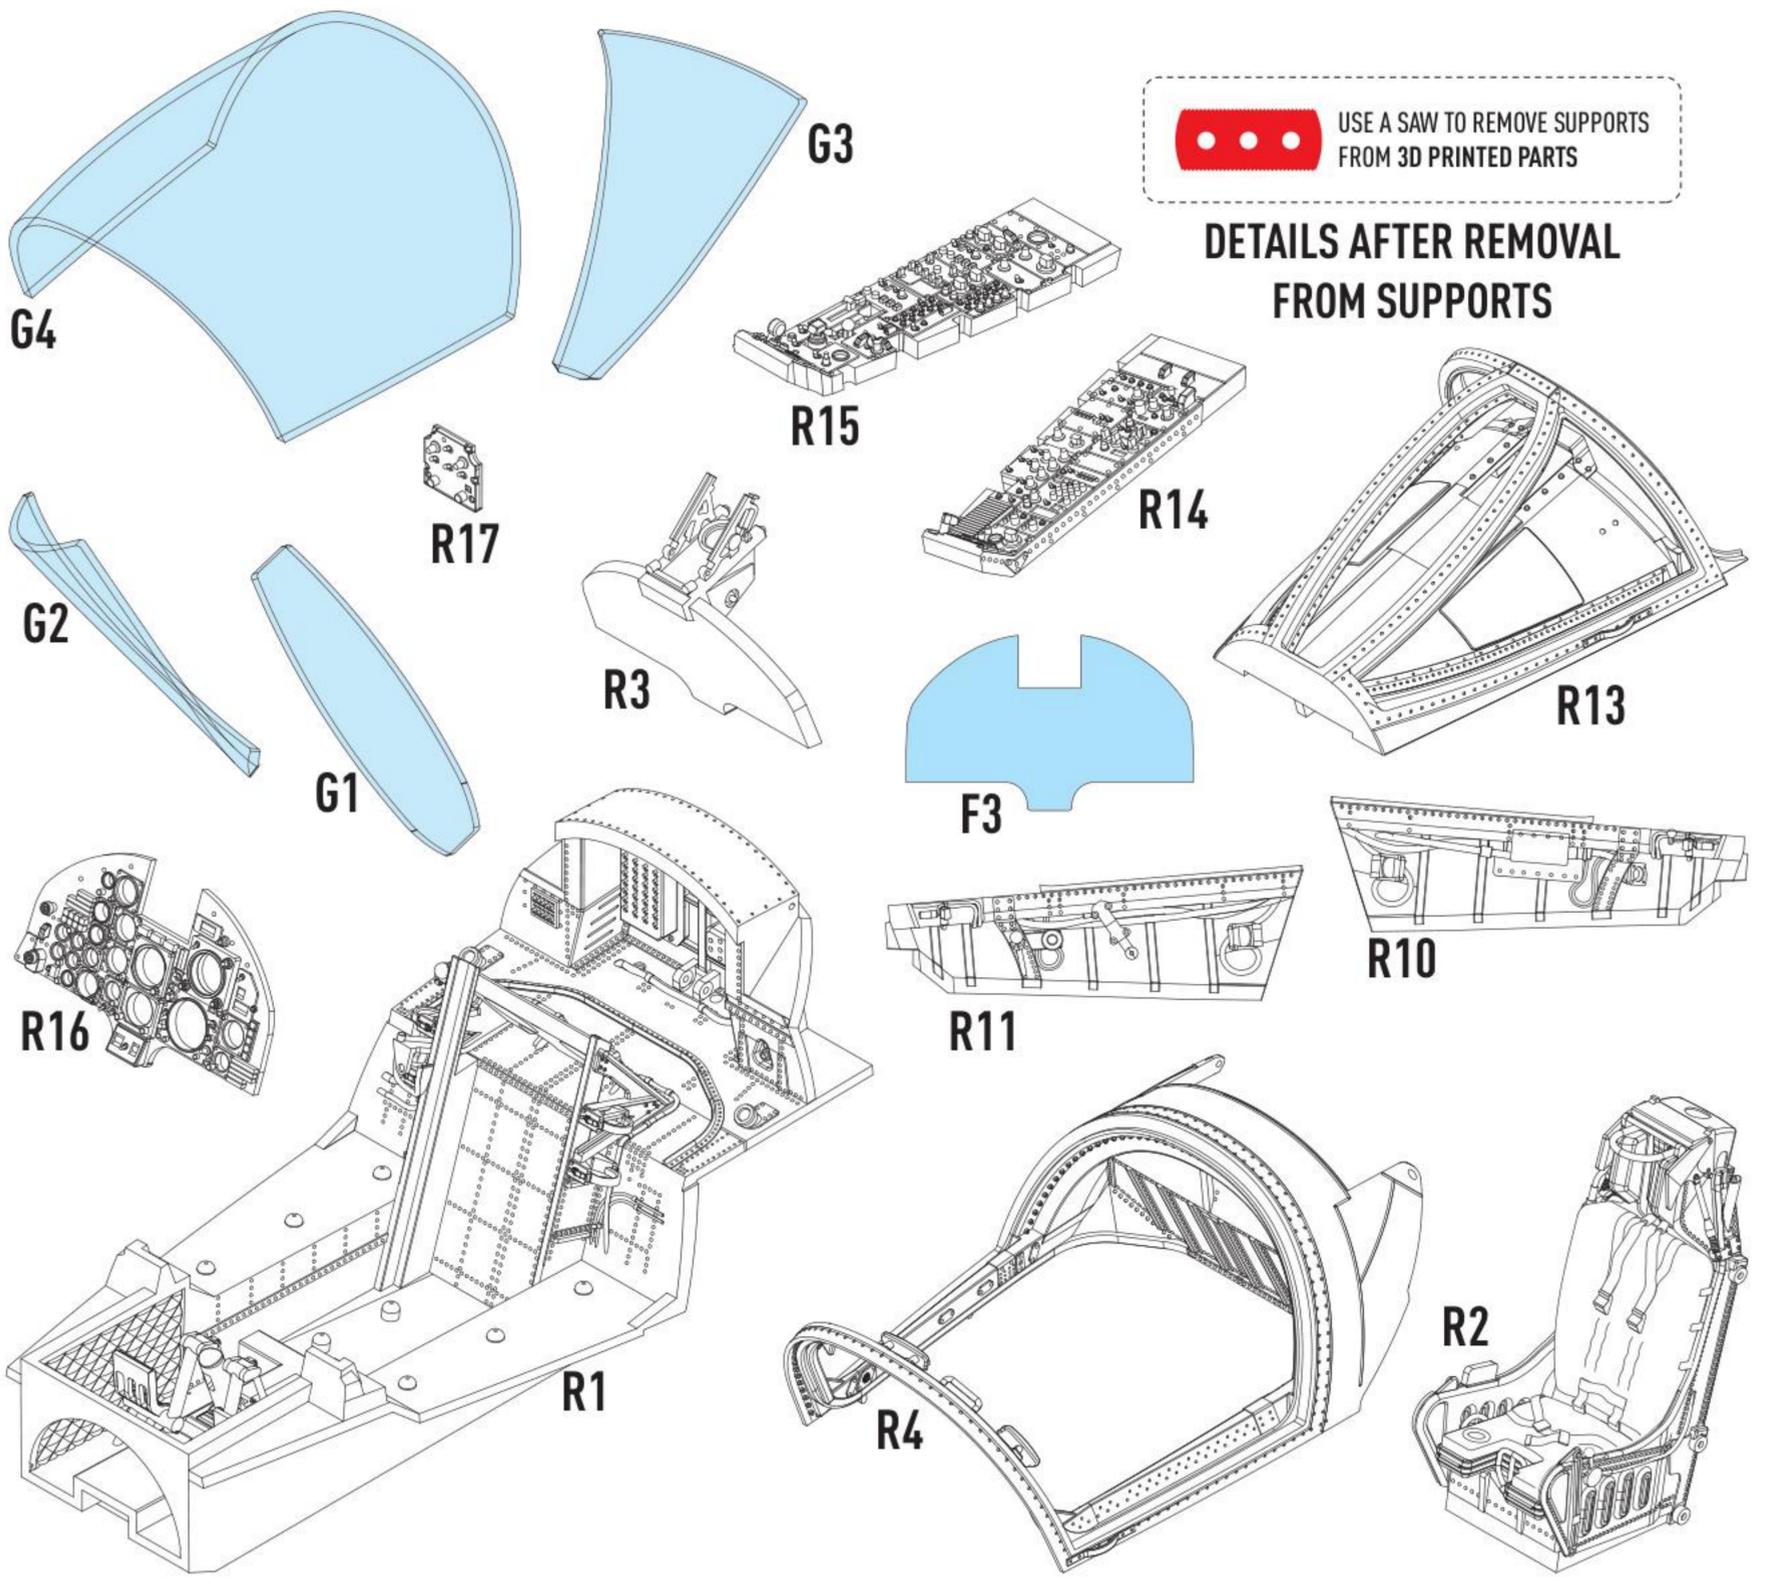


1 HYPER DETAILED EDITION


ASSEMBLY

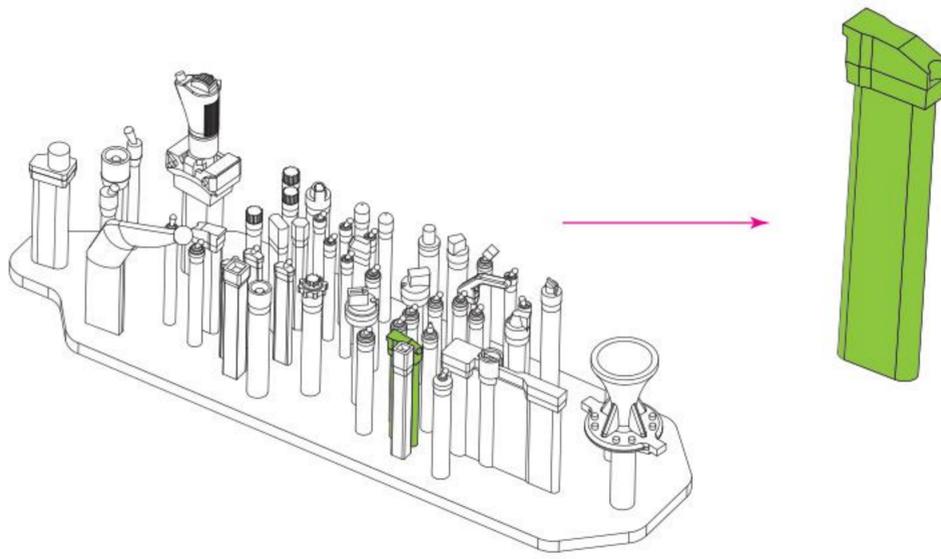

REMOVE PART FROM THE PANEL WITH ELEMENTS

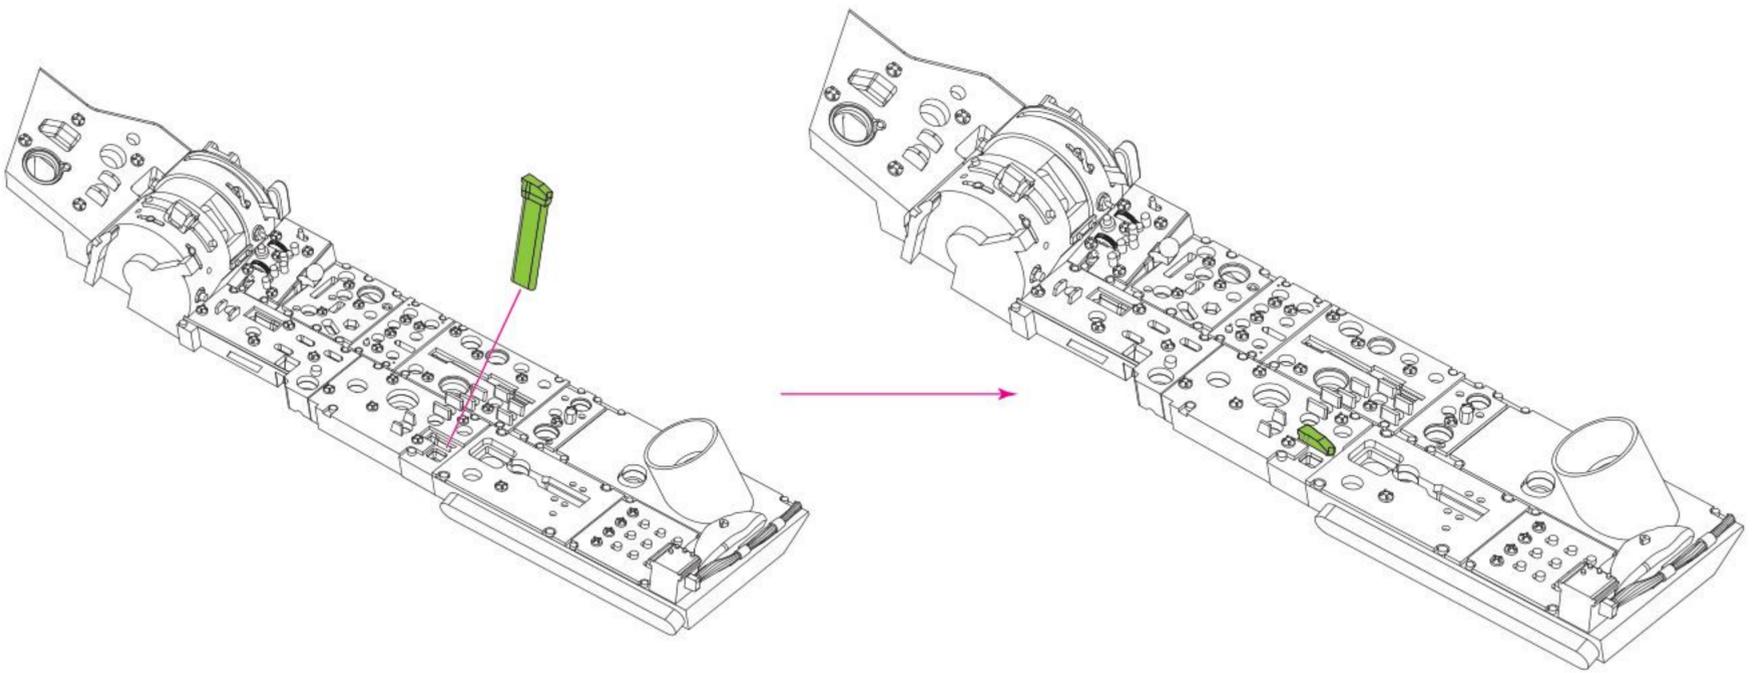


INSERT PART INTO THE PANEL WITH HOLES

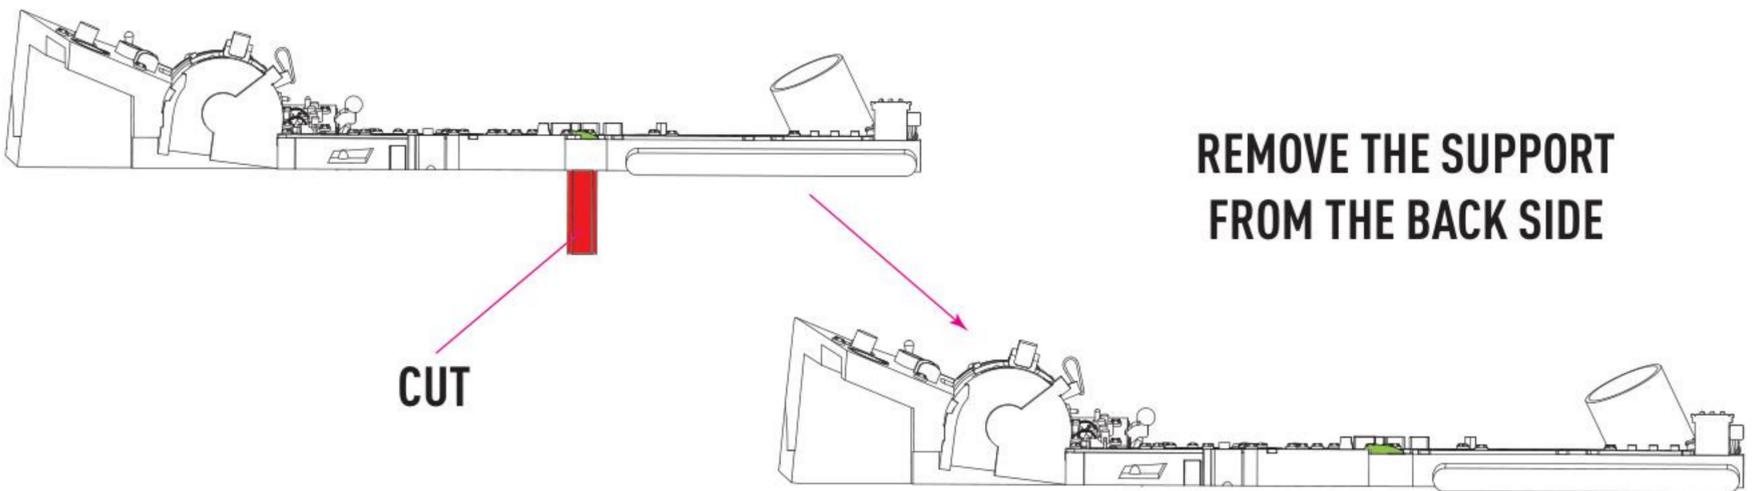

REMOVE THE SUPPORT FROM THE BACK SIDE


2

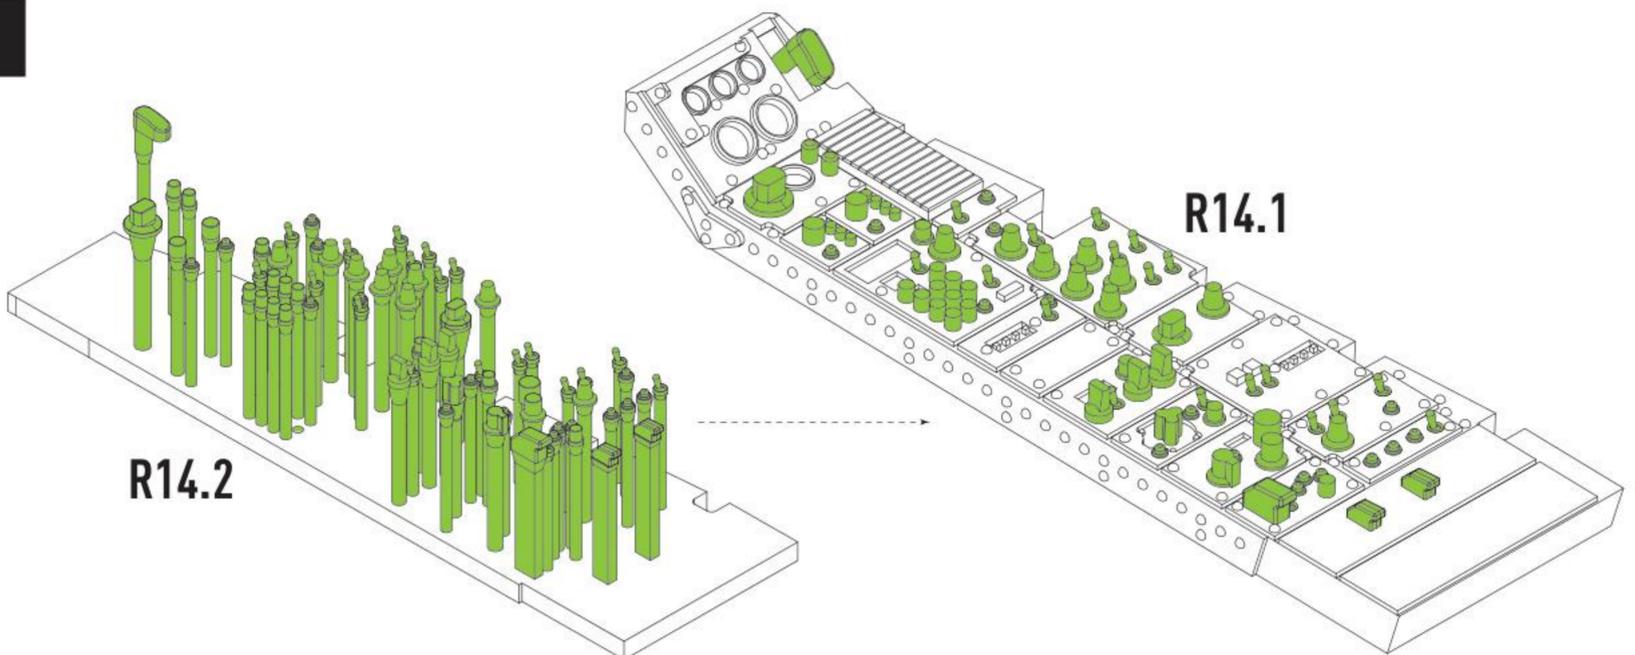


R14.2

R14.1


3

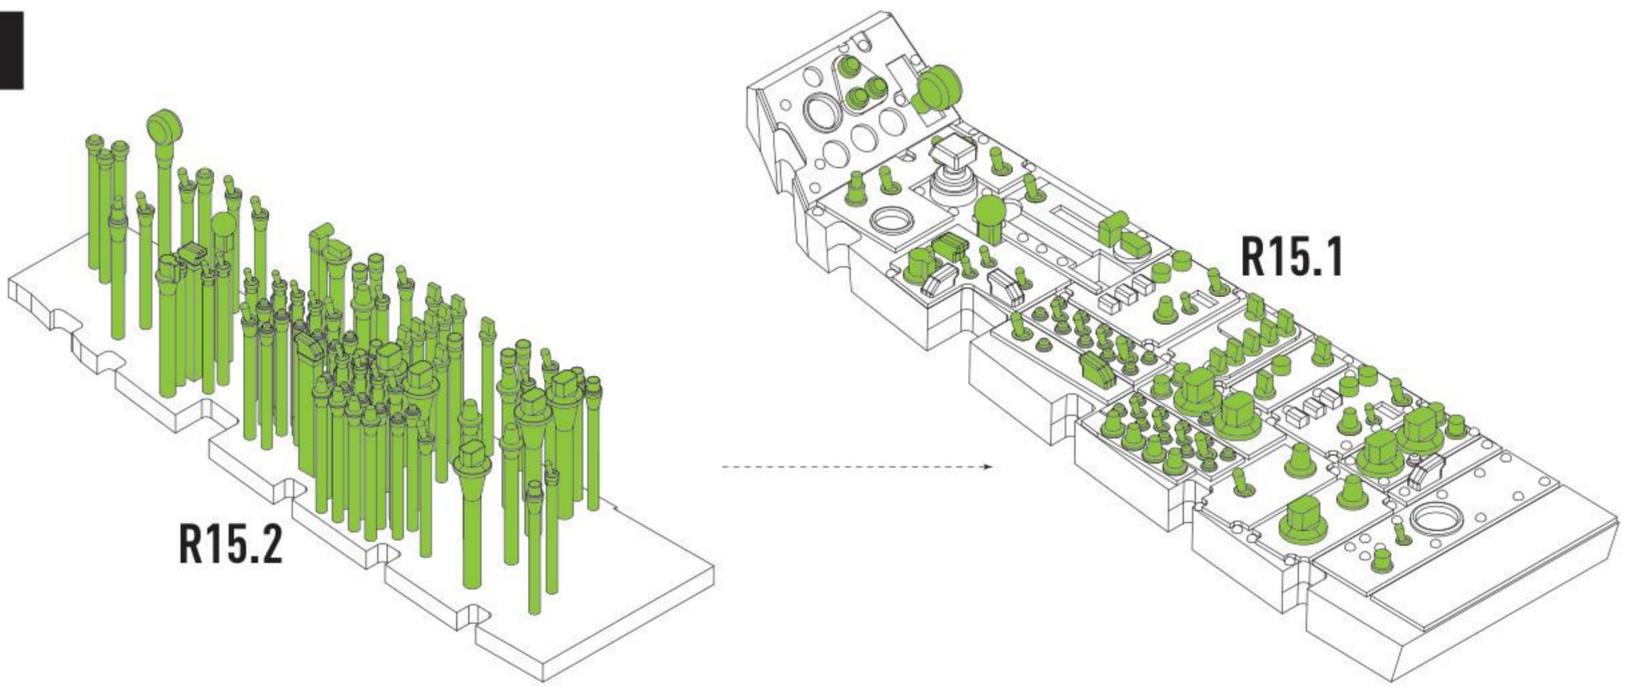


4

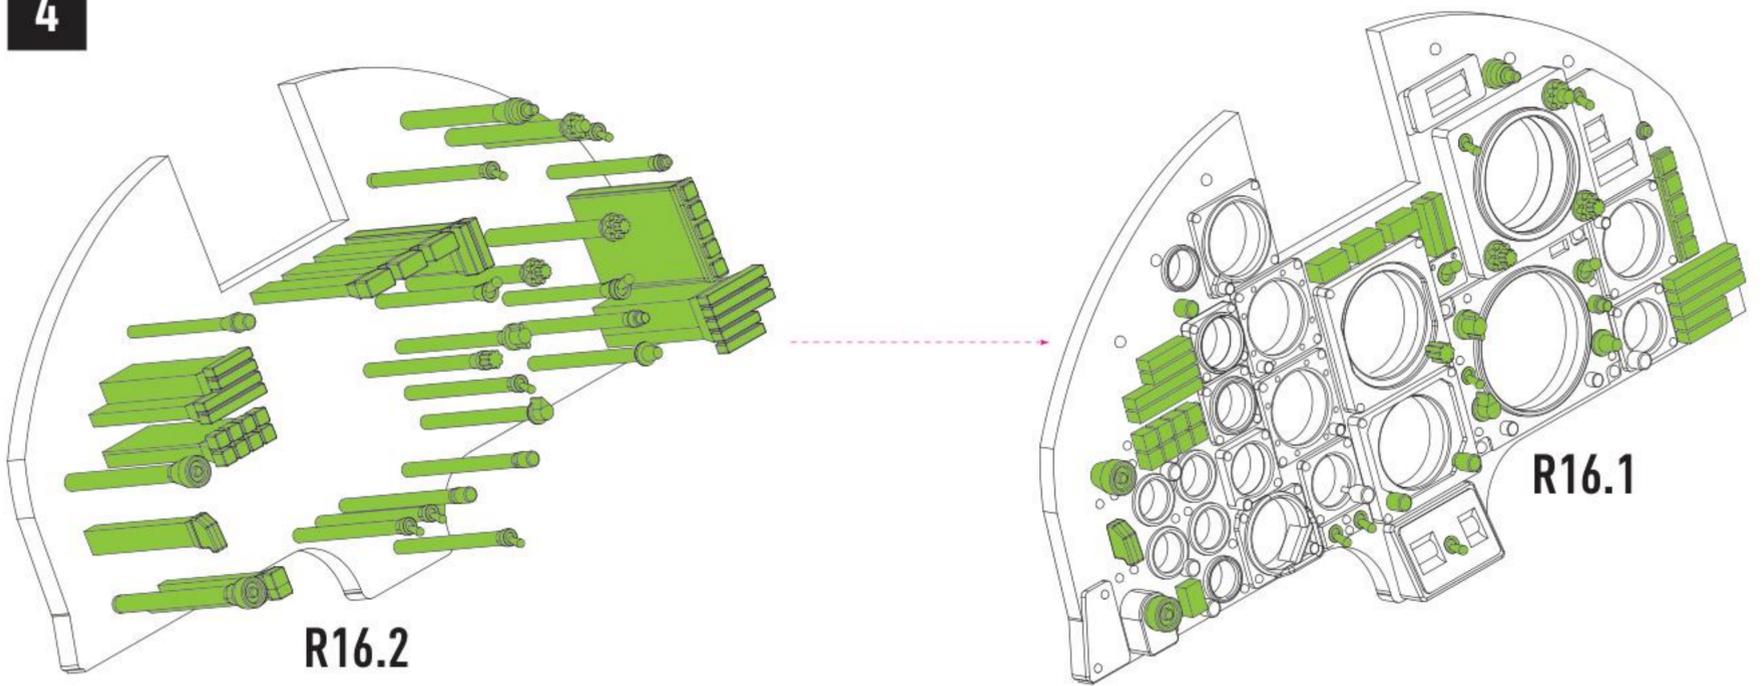


5

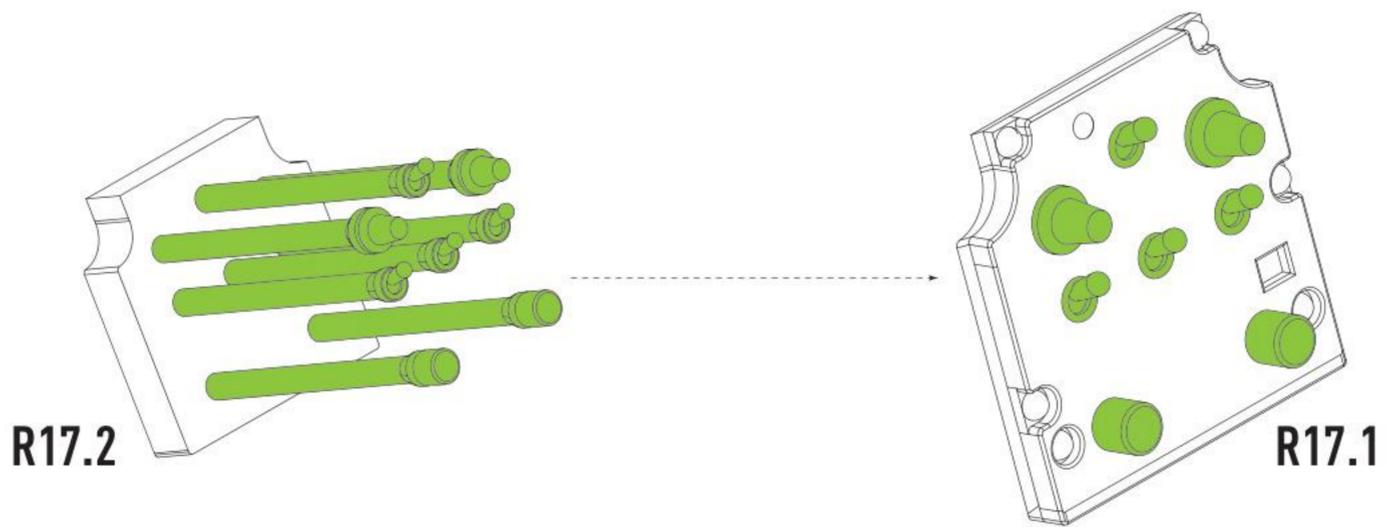


6 APPLY TRANSPARENT FILM ON PART R3 ONLY AFTER TRANSFERRING ALL ELEMENTS FROM THE PANEL

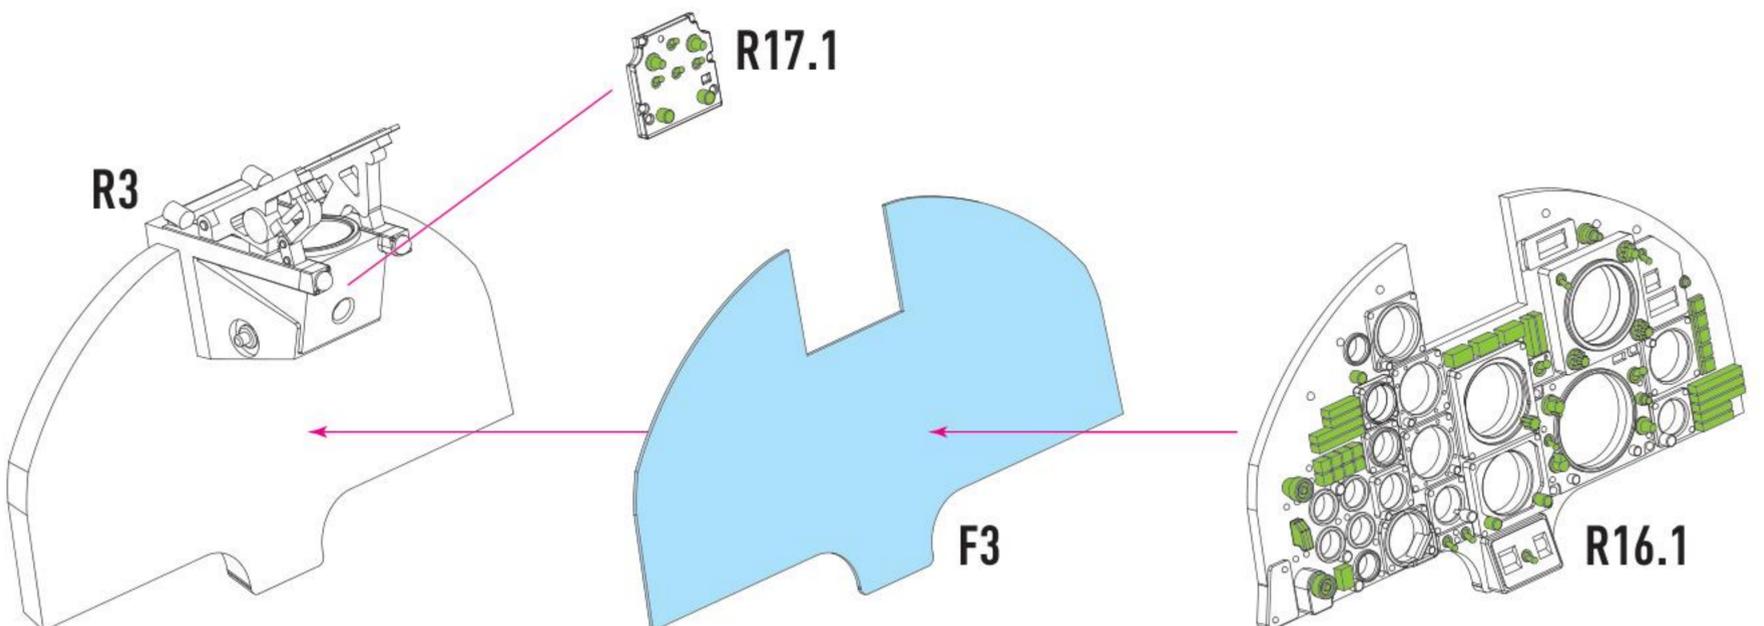


7

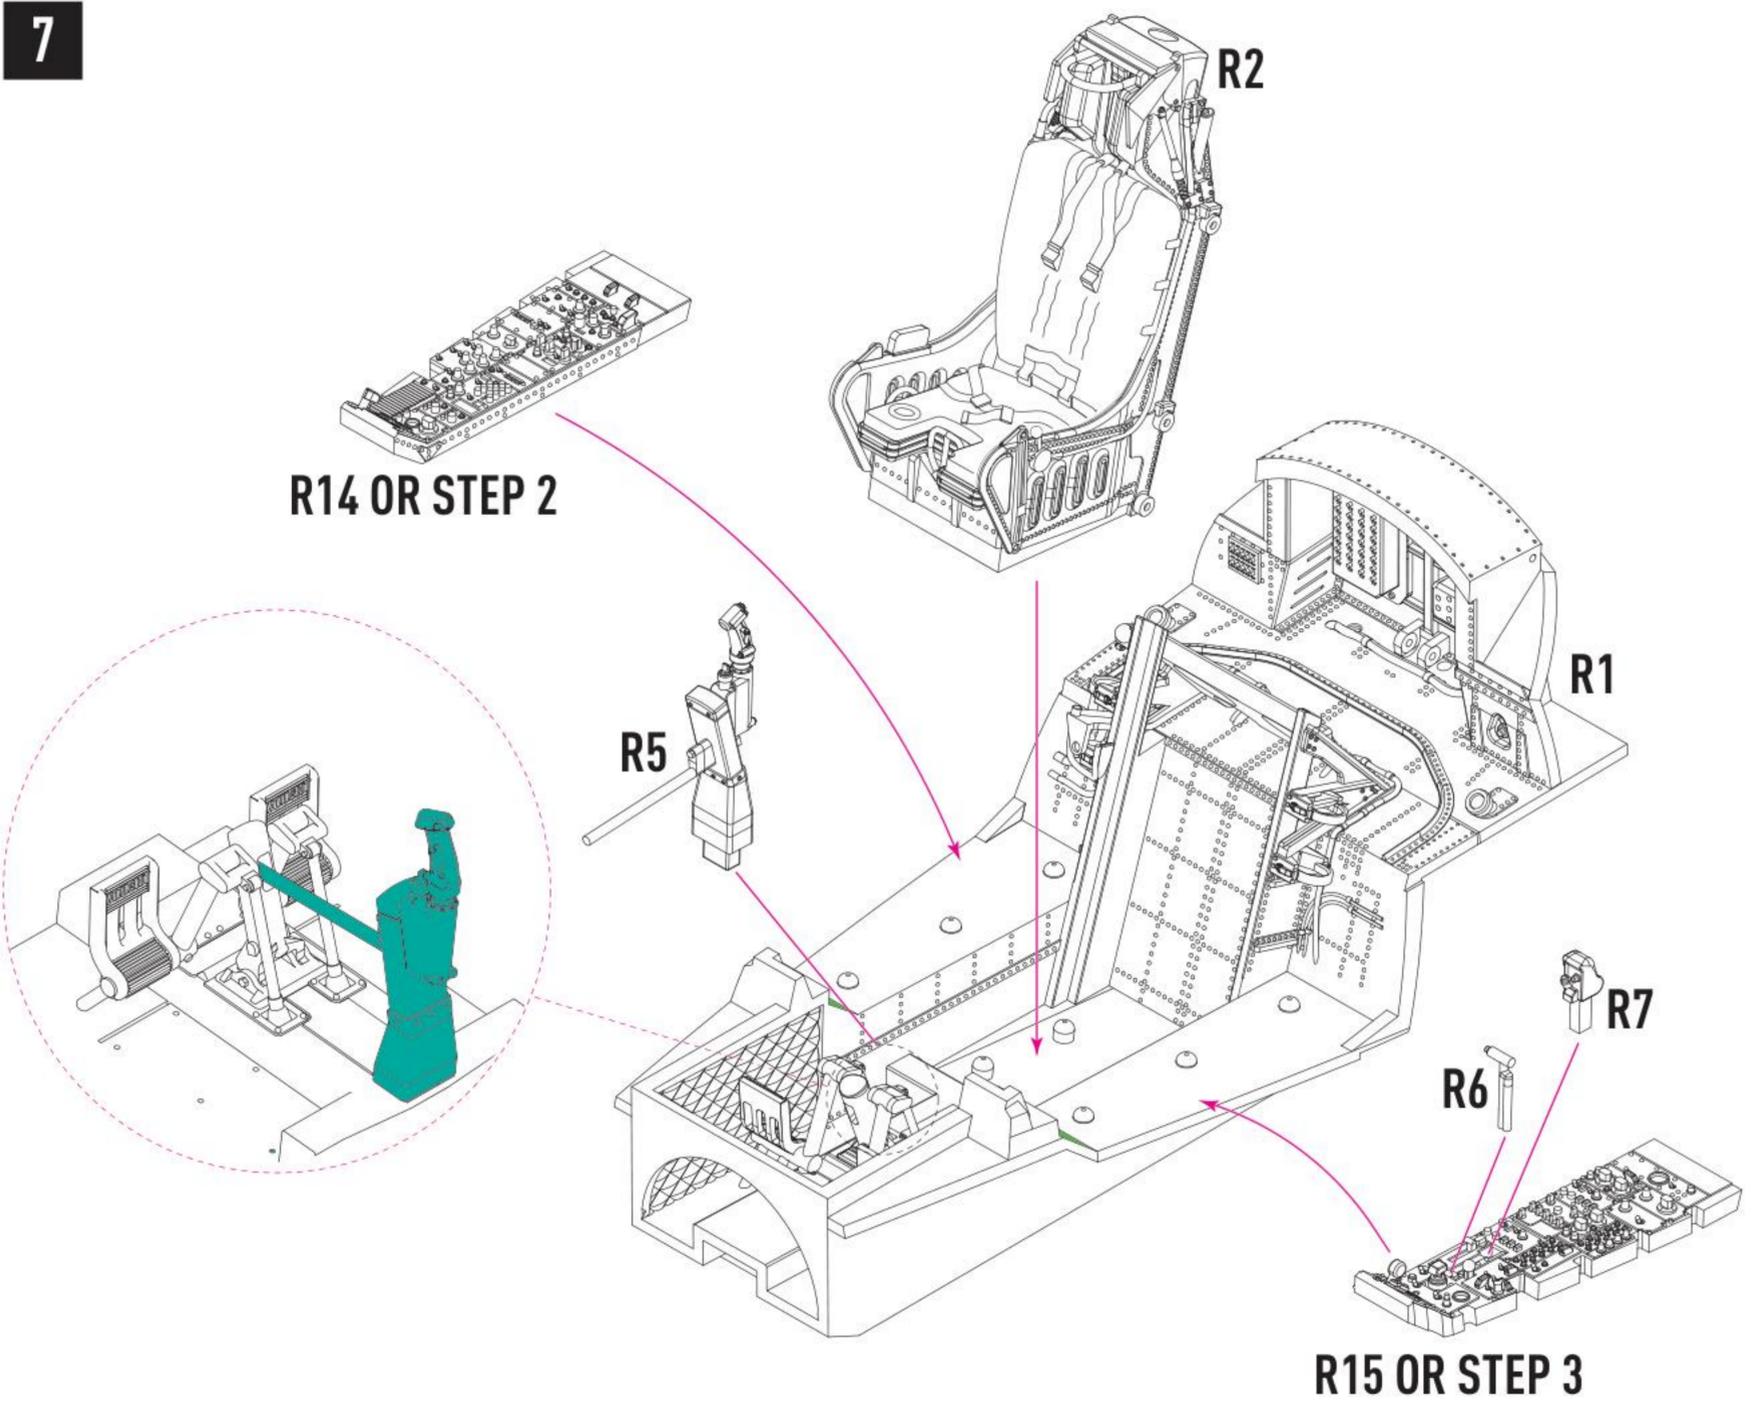


8


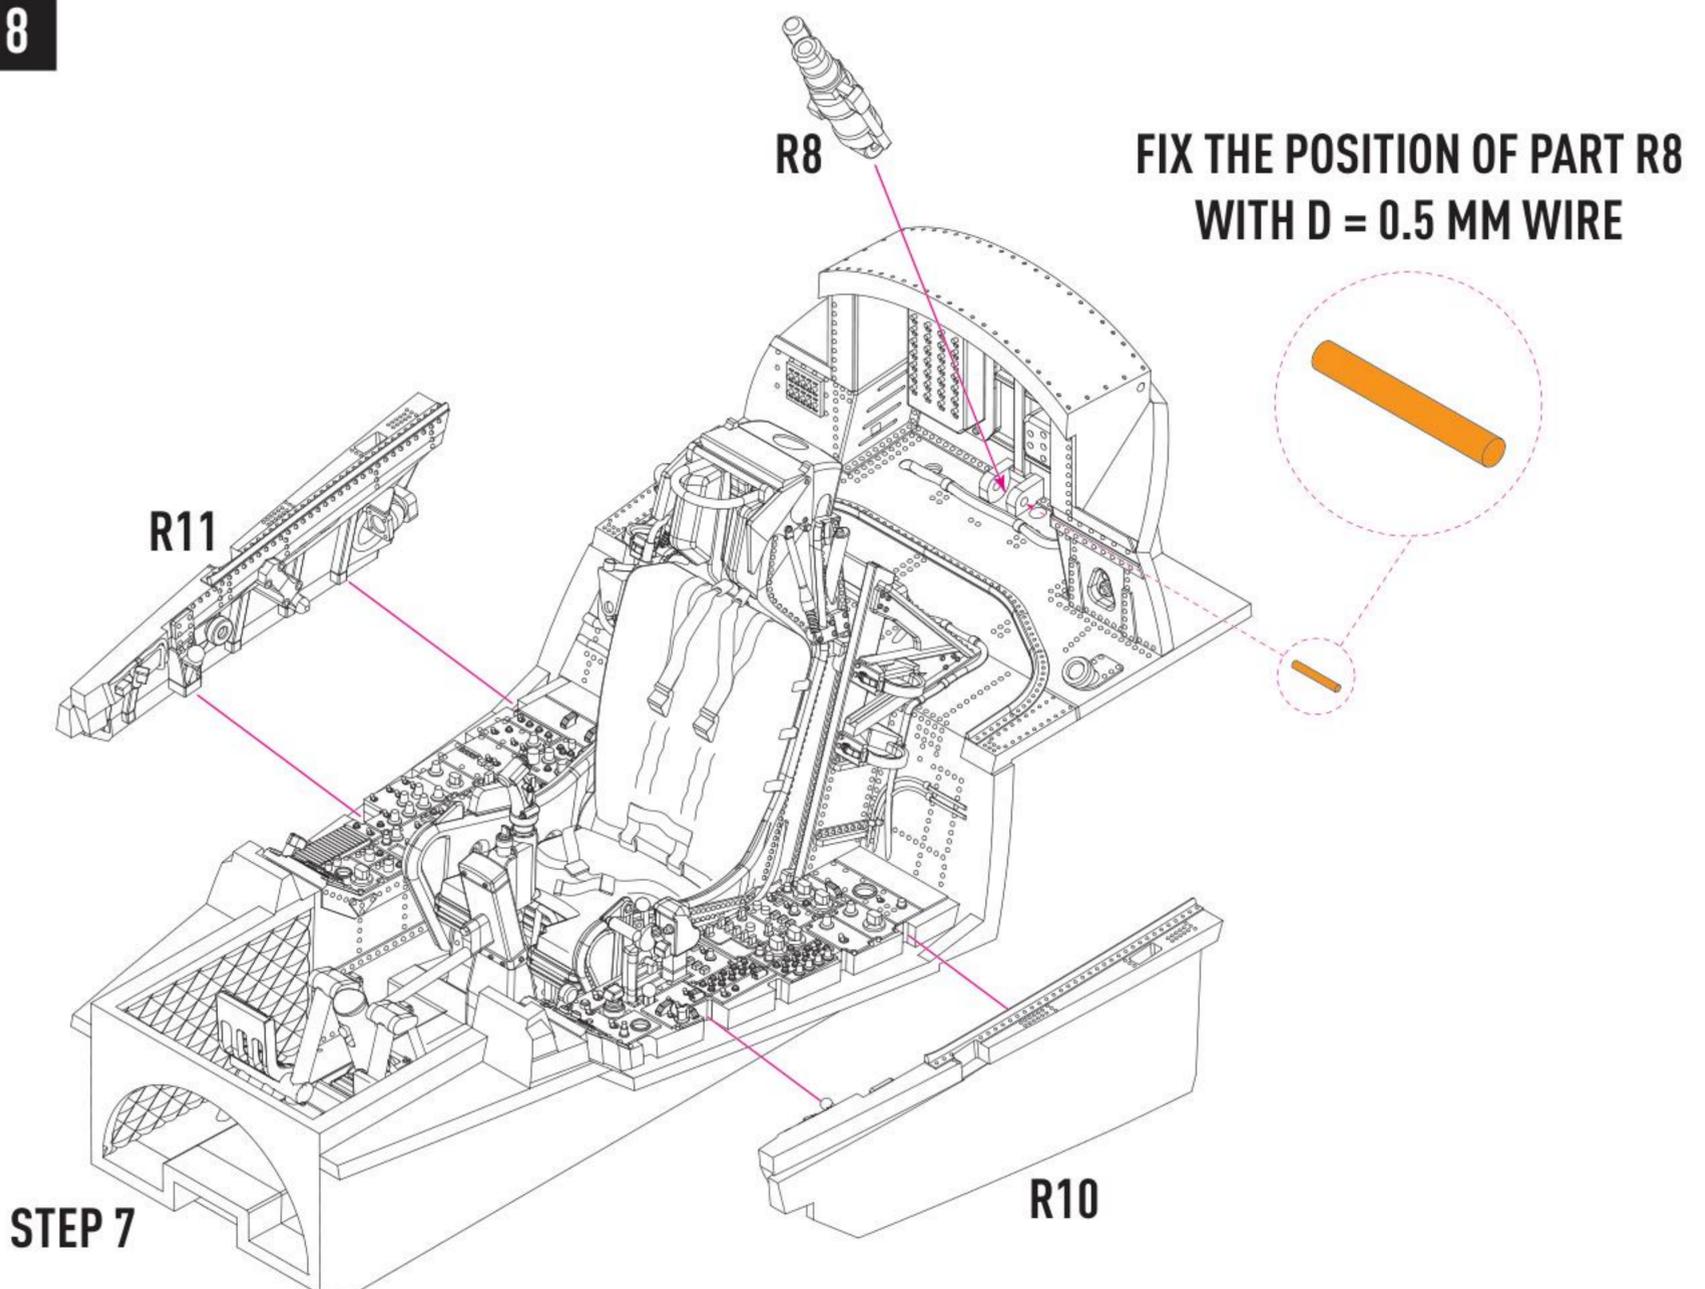


9

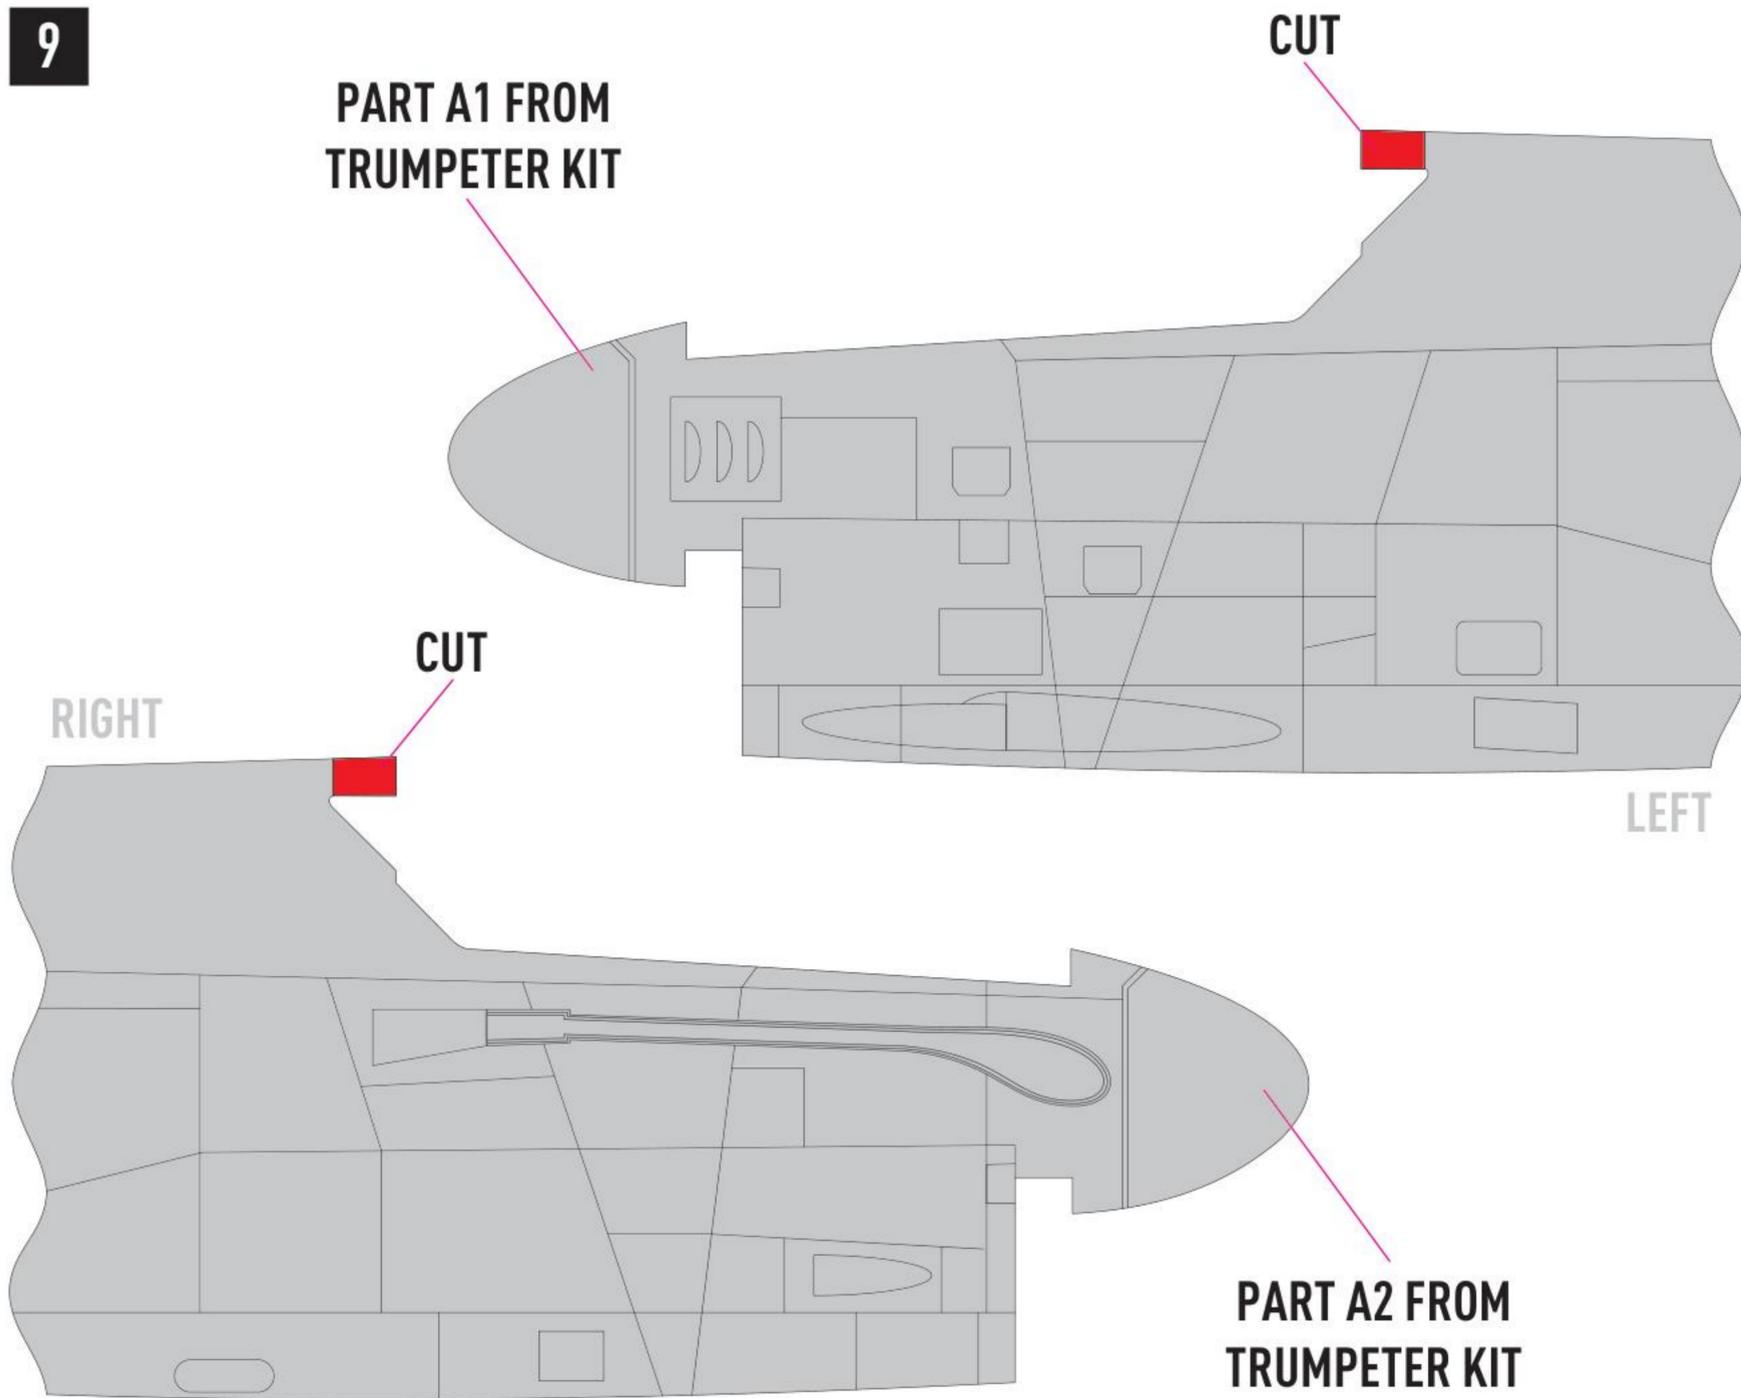


10

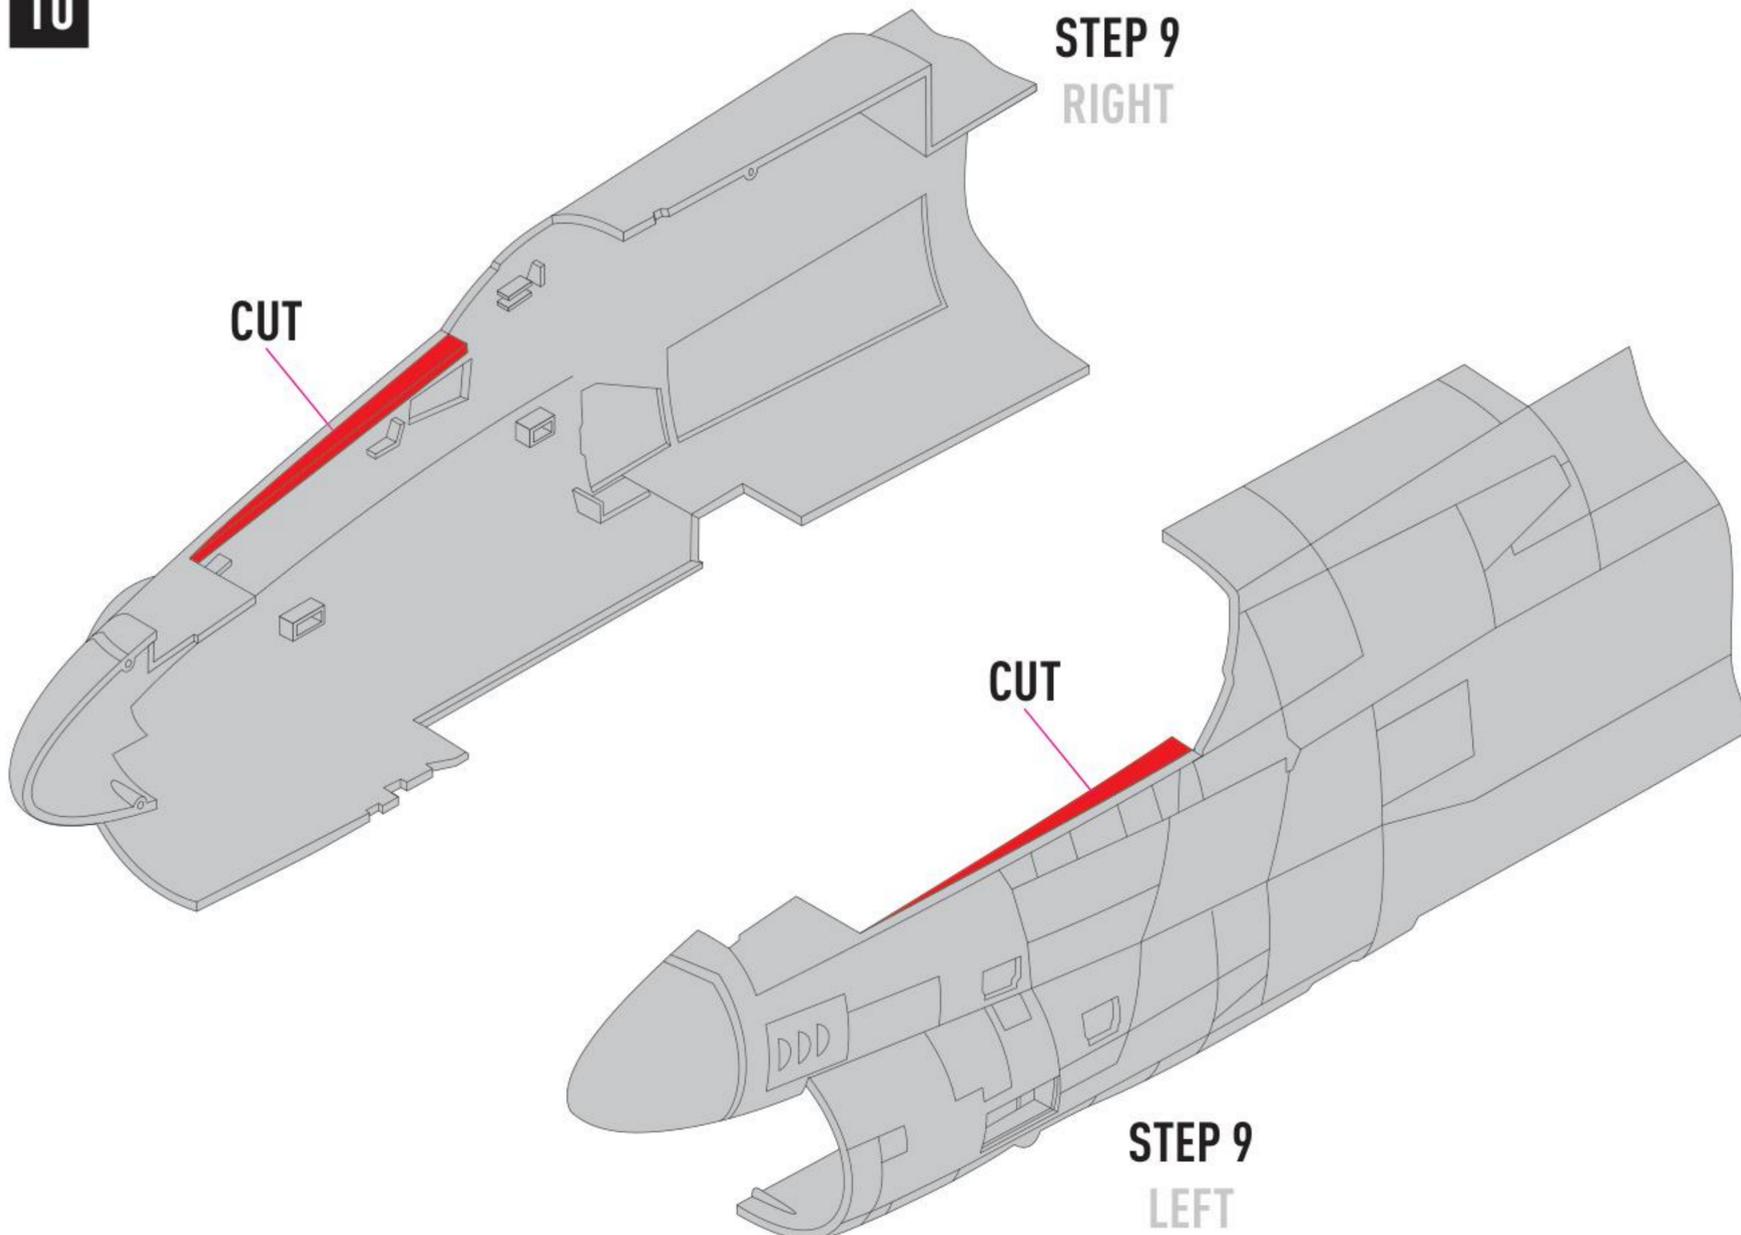


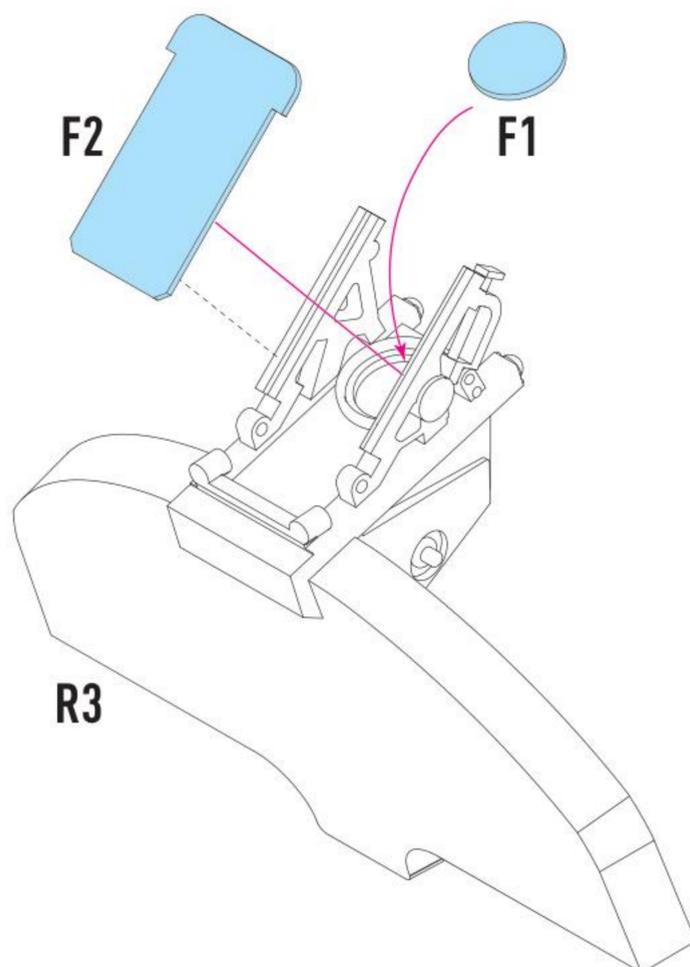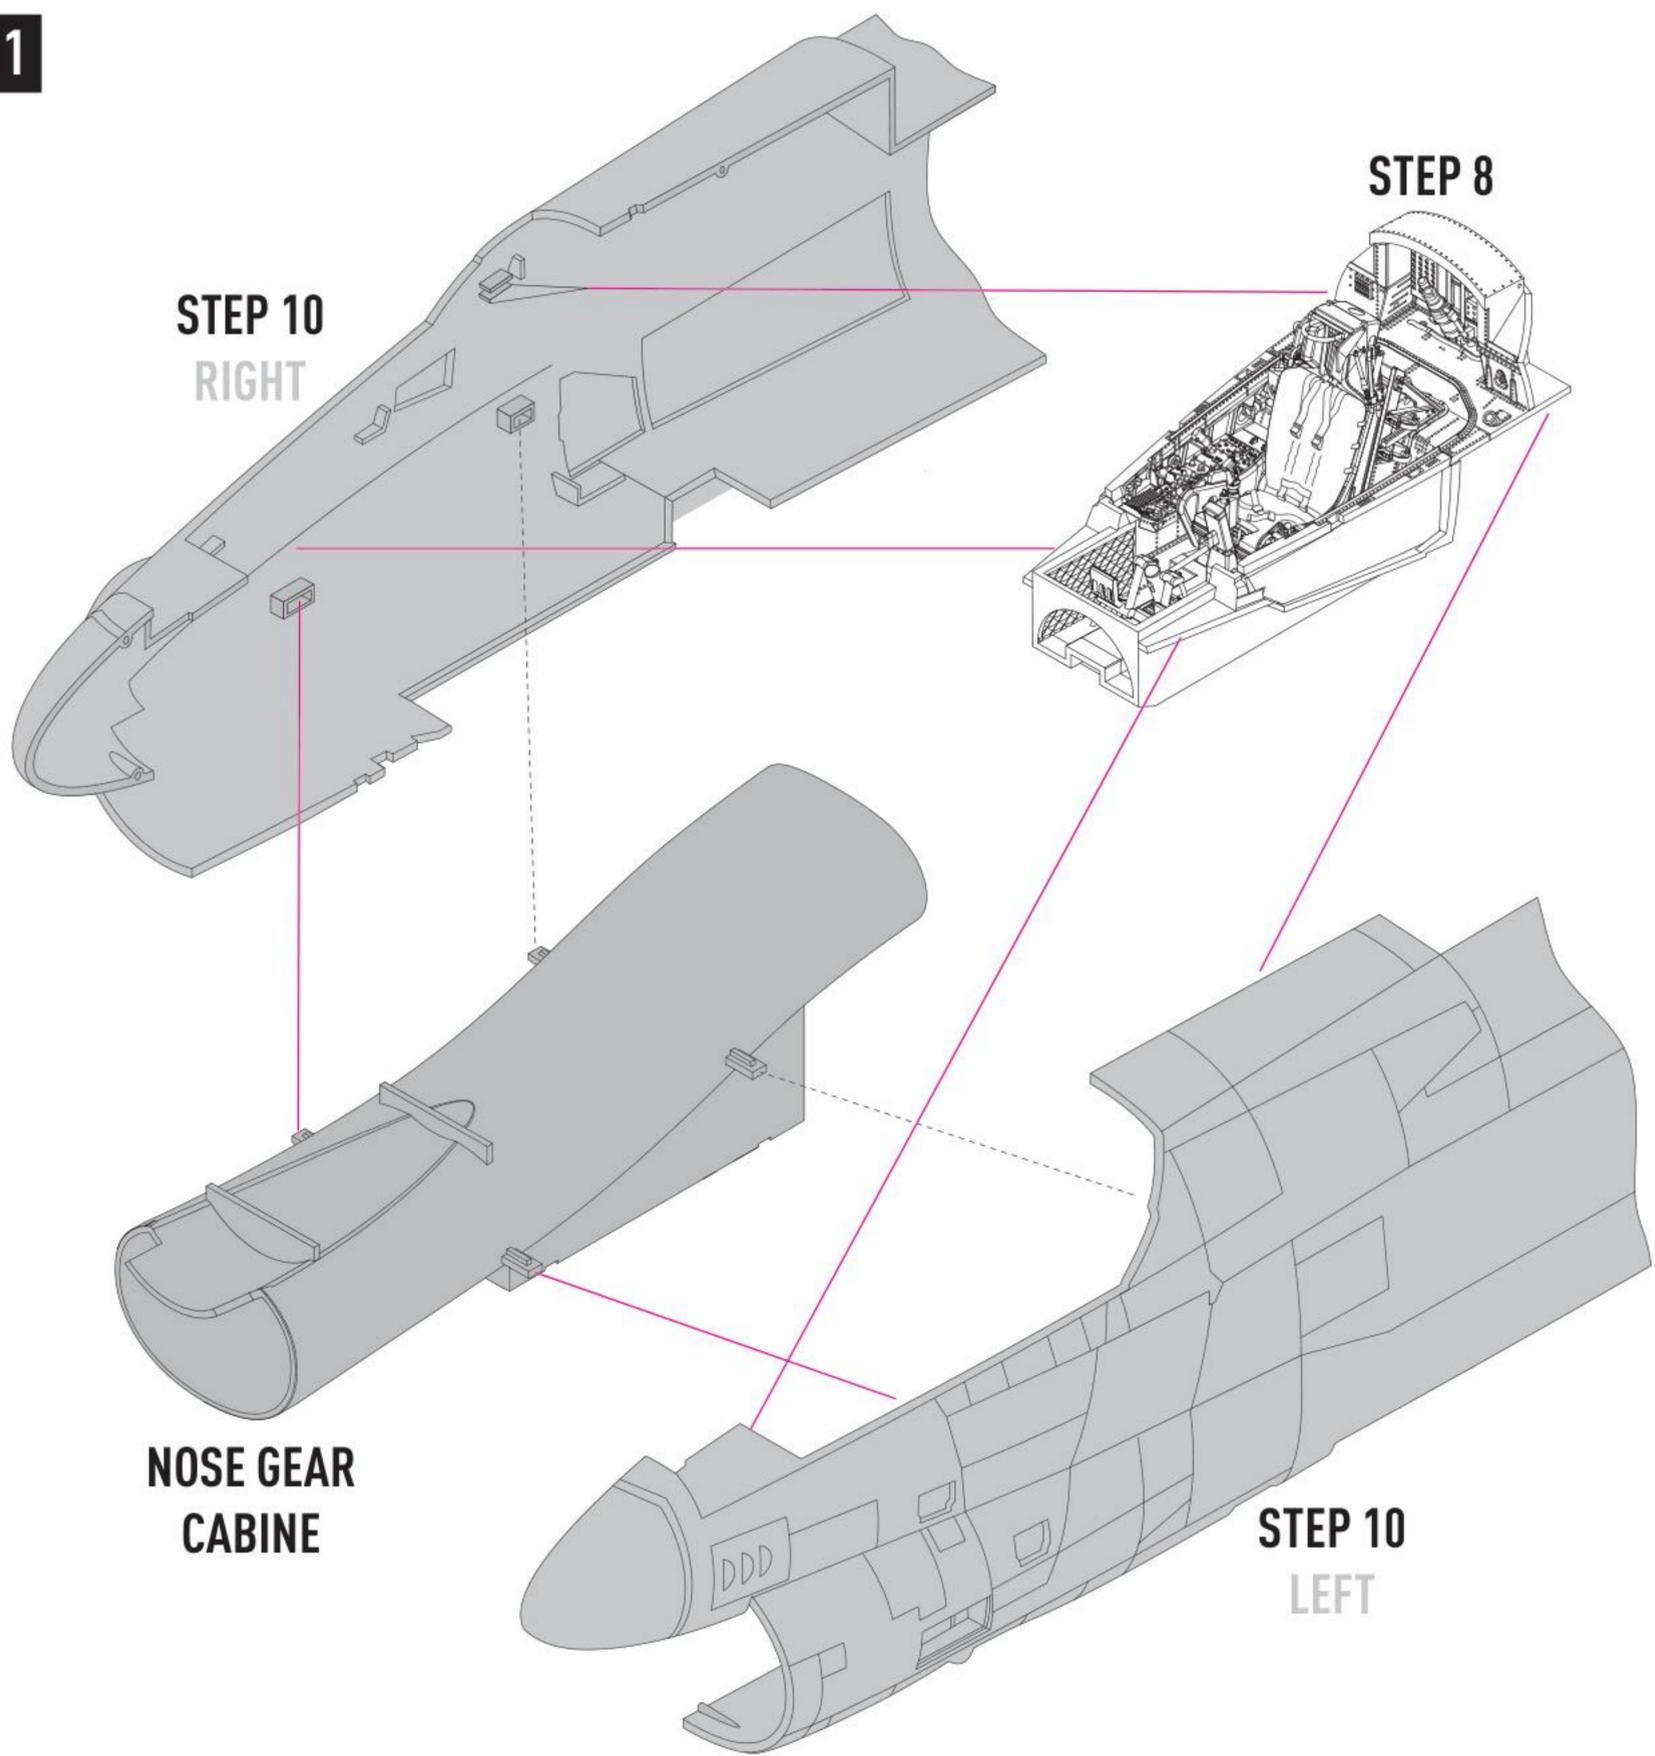


13

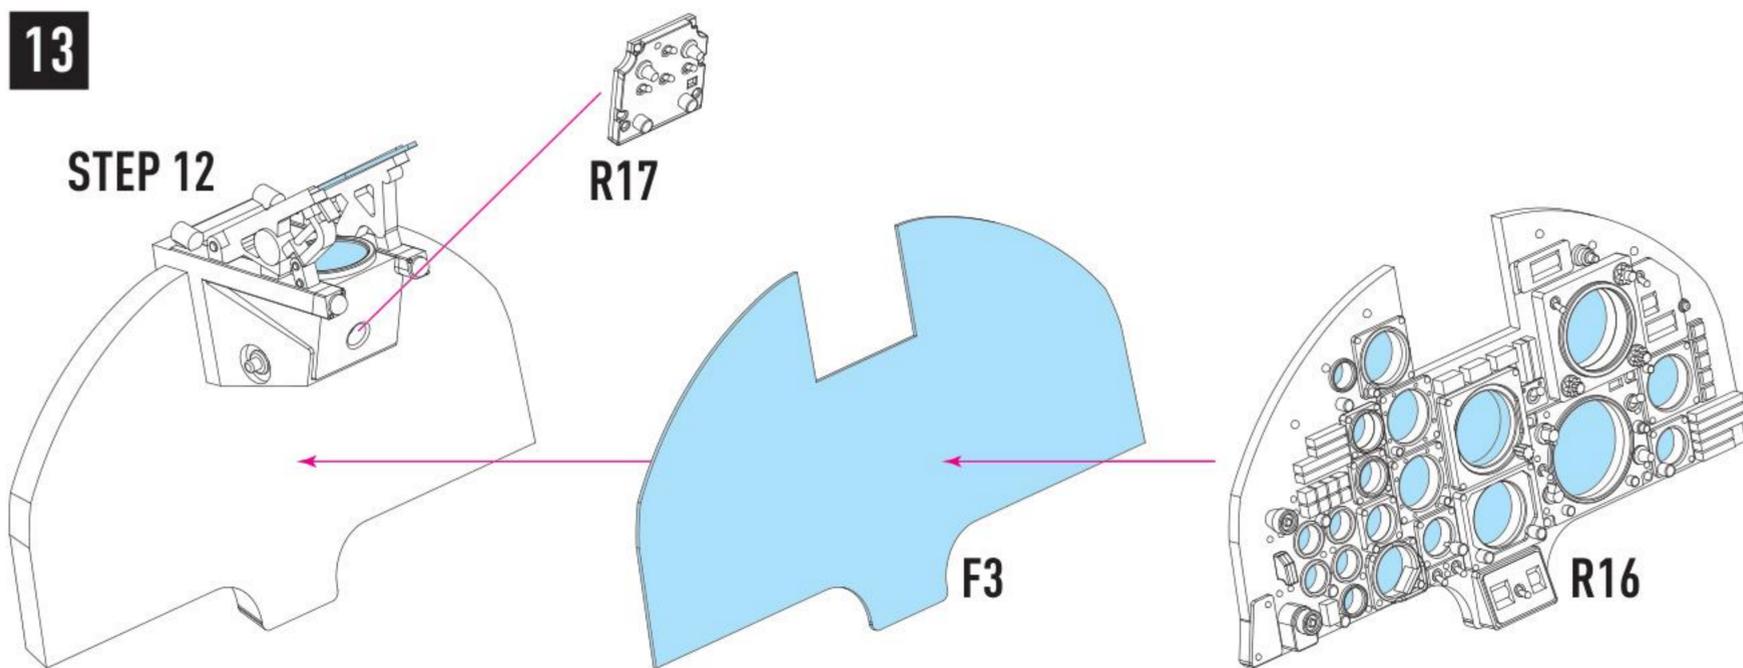


14

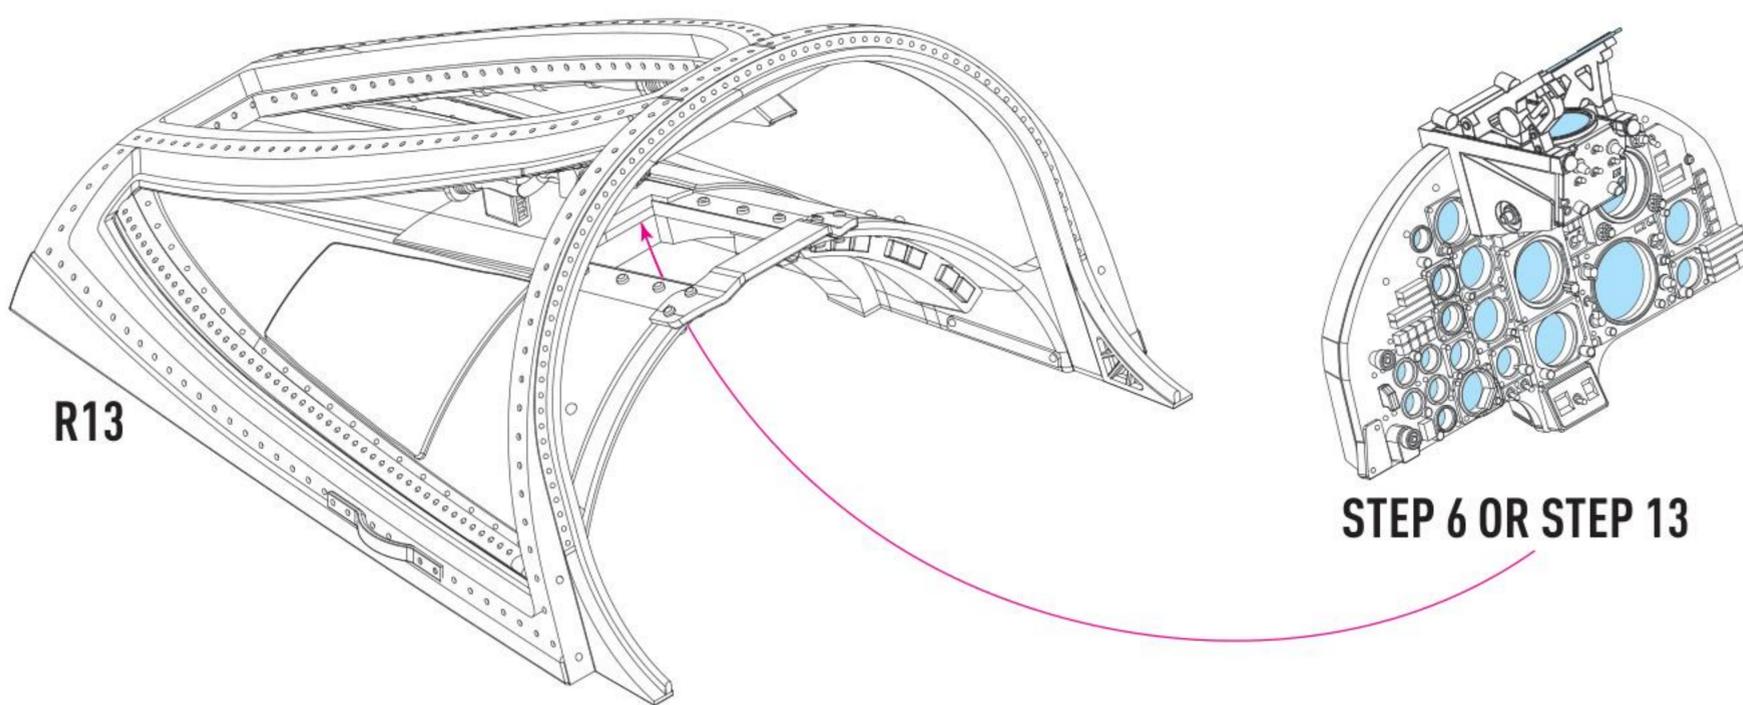



15

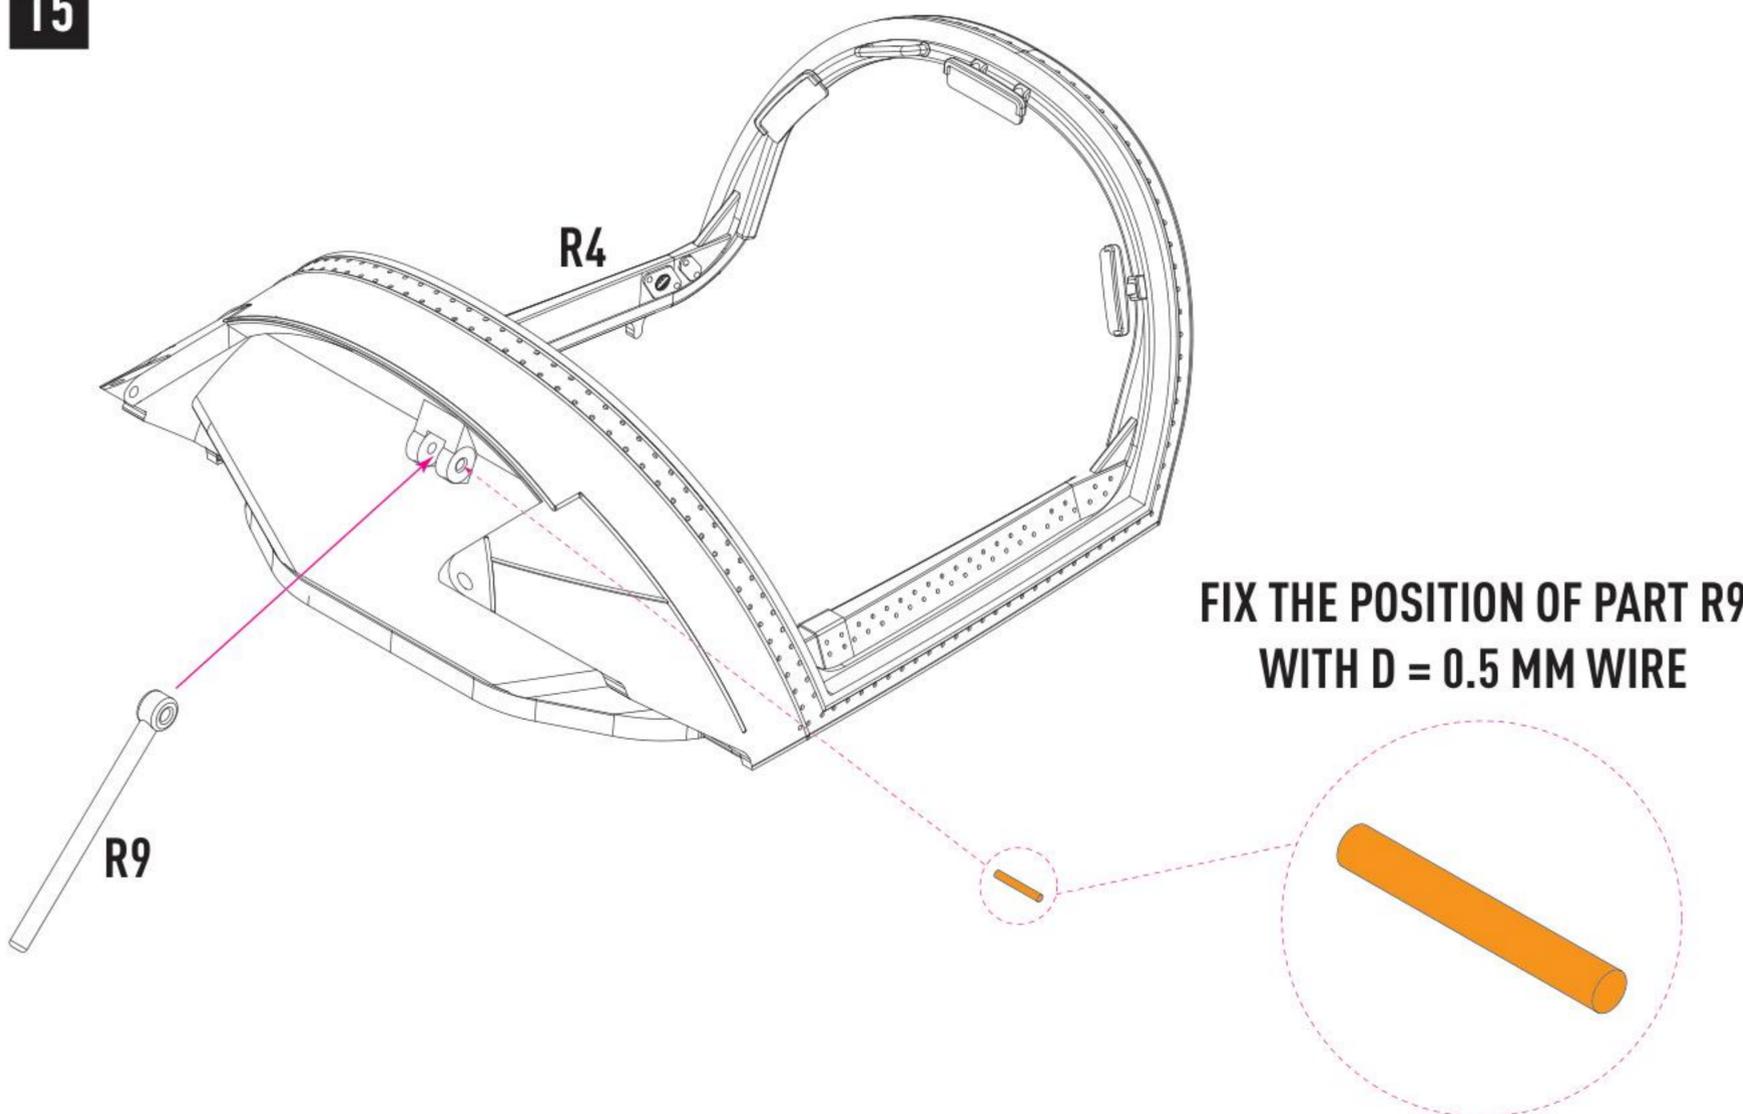


STEP 15

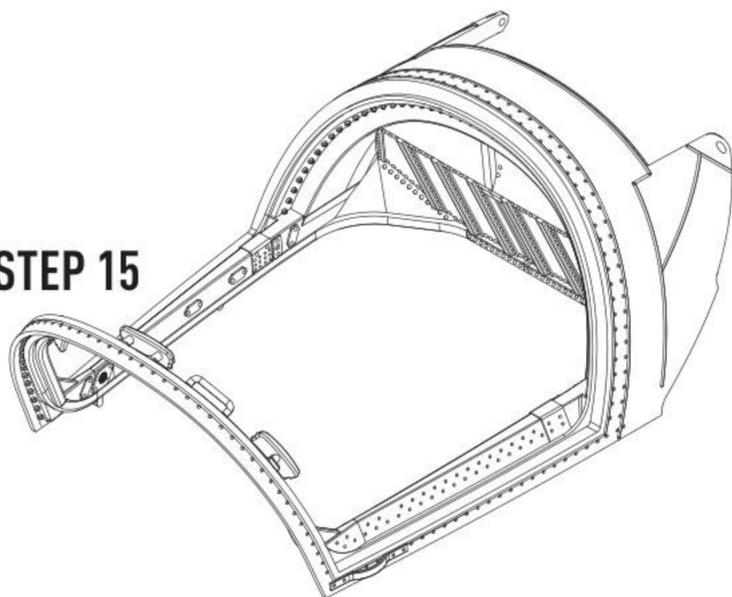

STEP 14

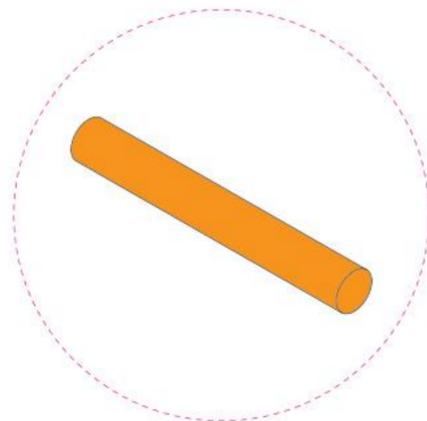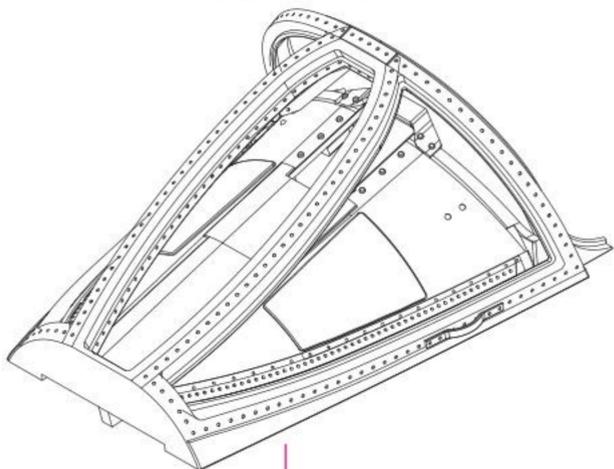


USE FOR FIX POSITION
D = 0.5 MM WIRE

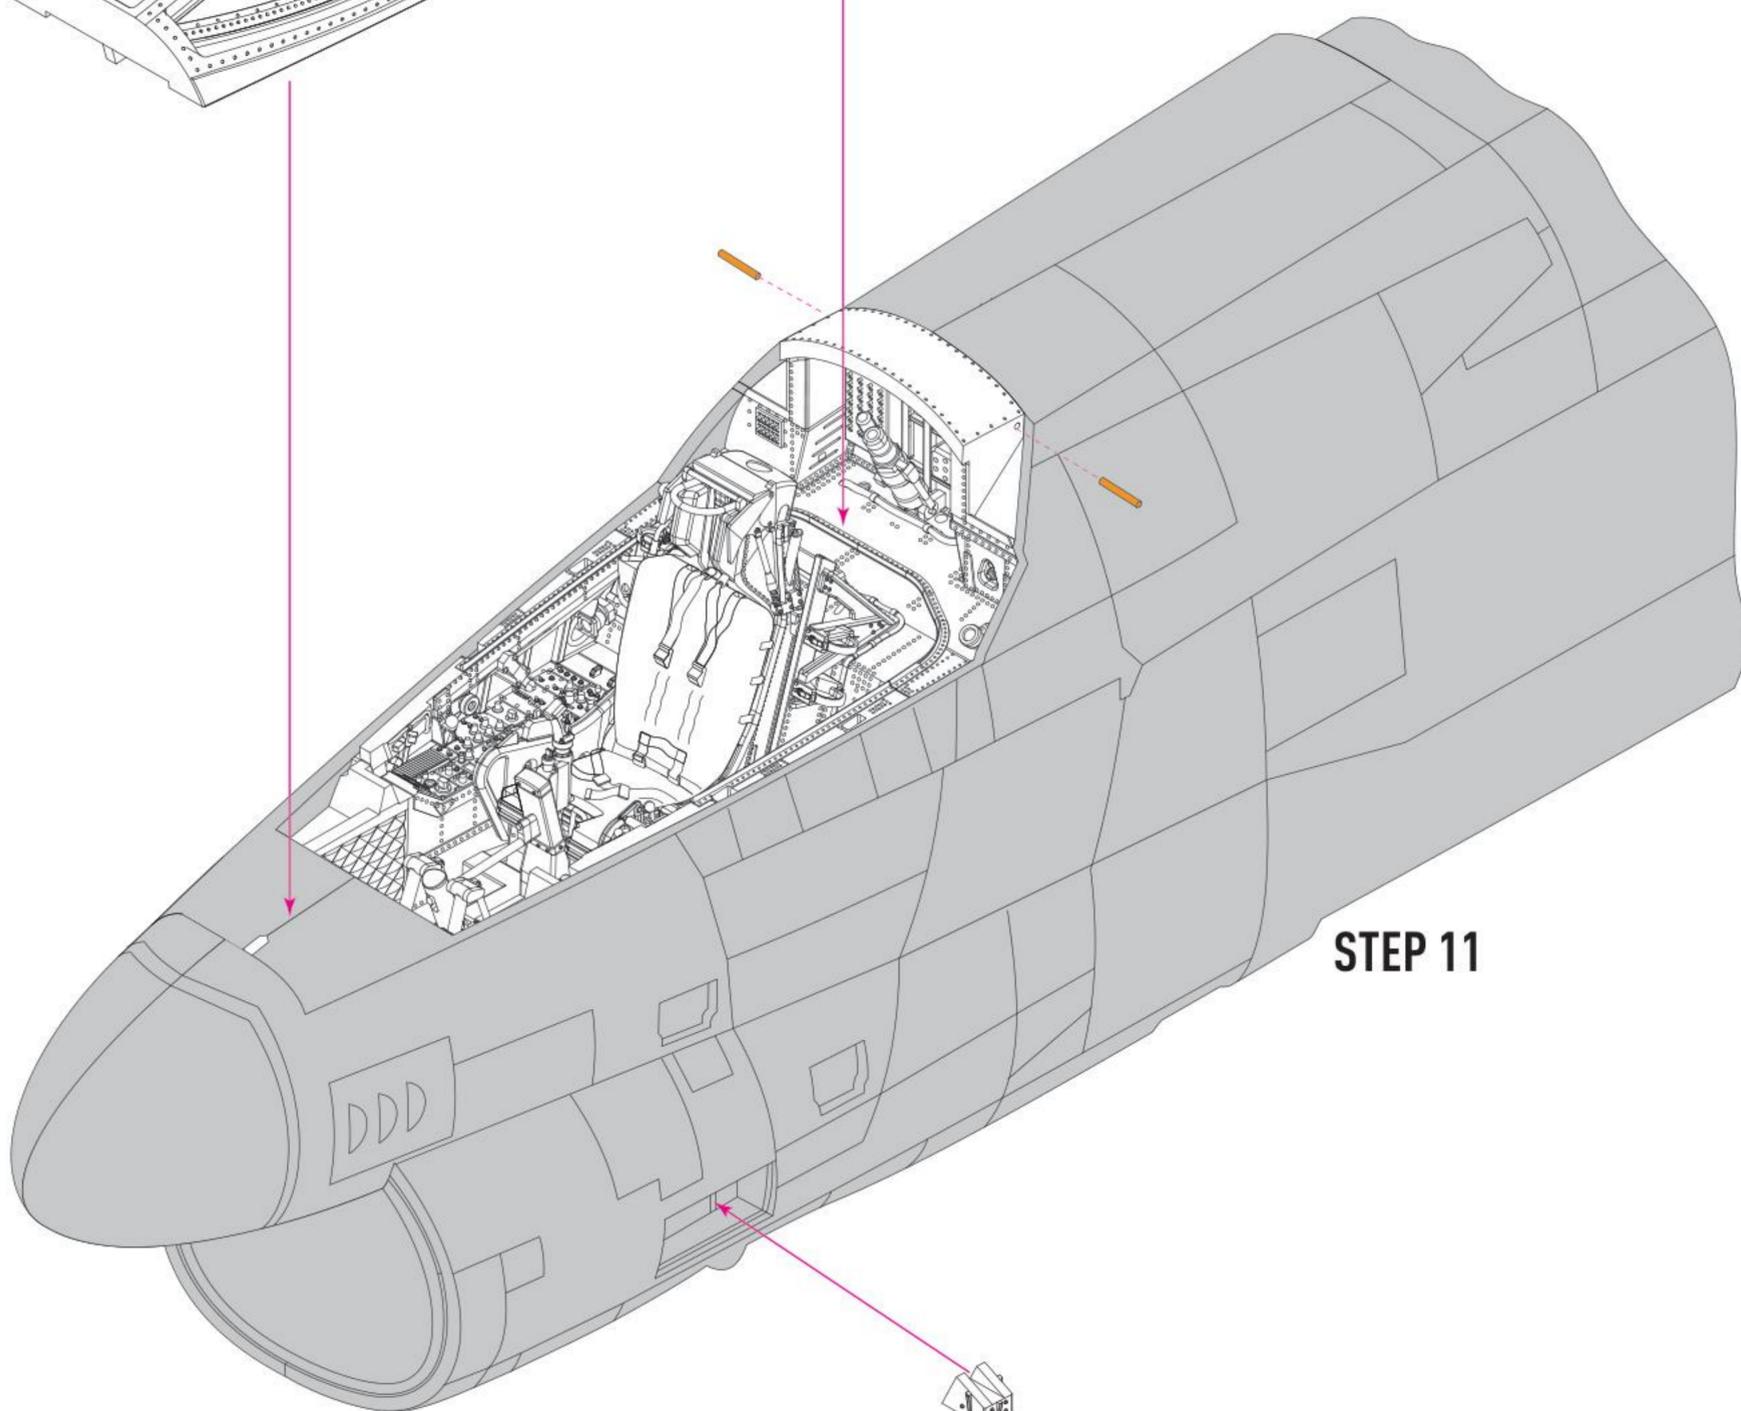


STEP 11

R12




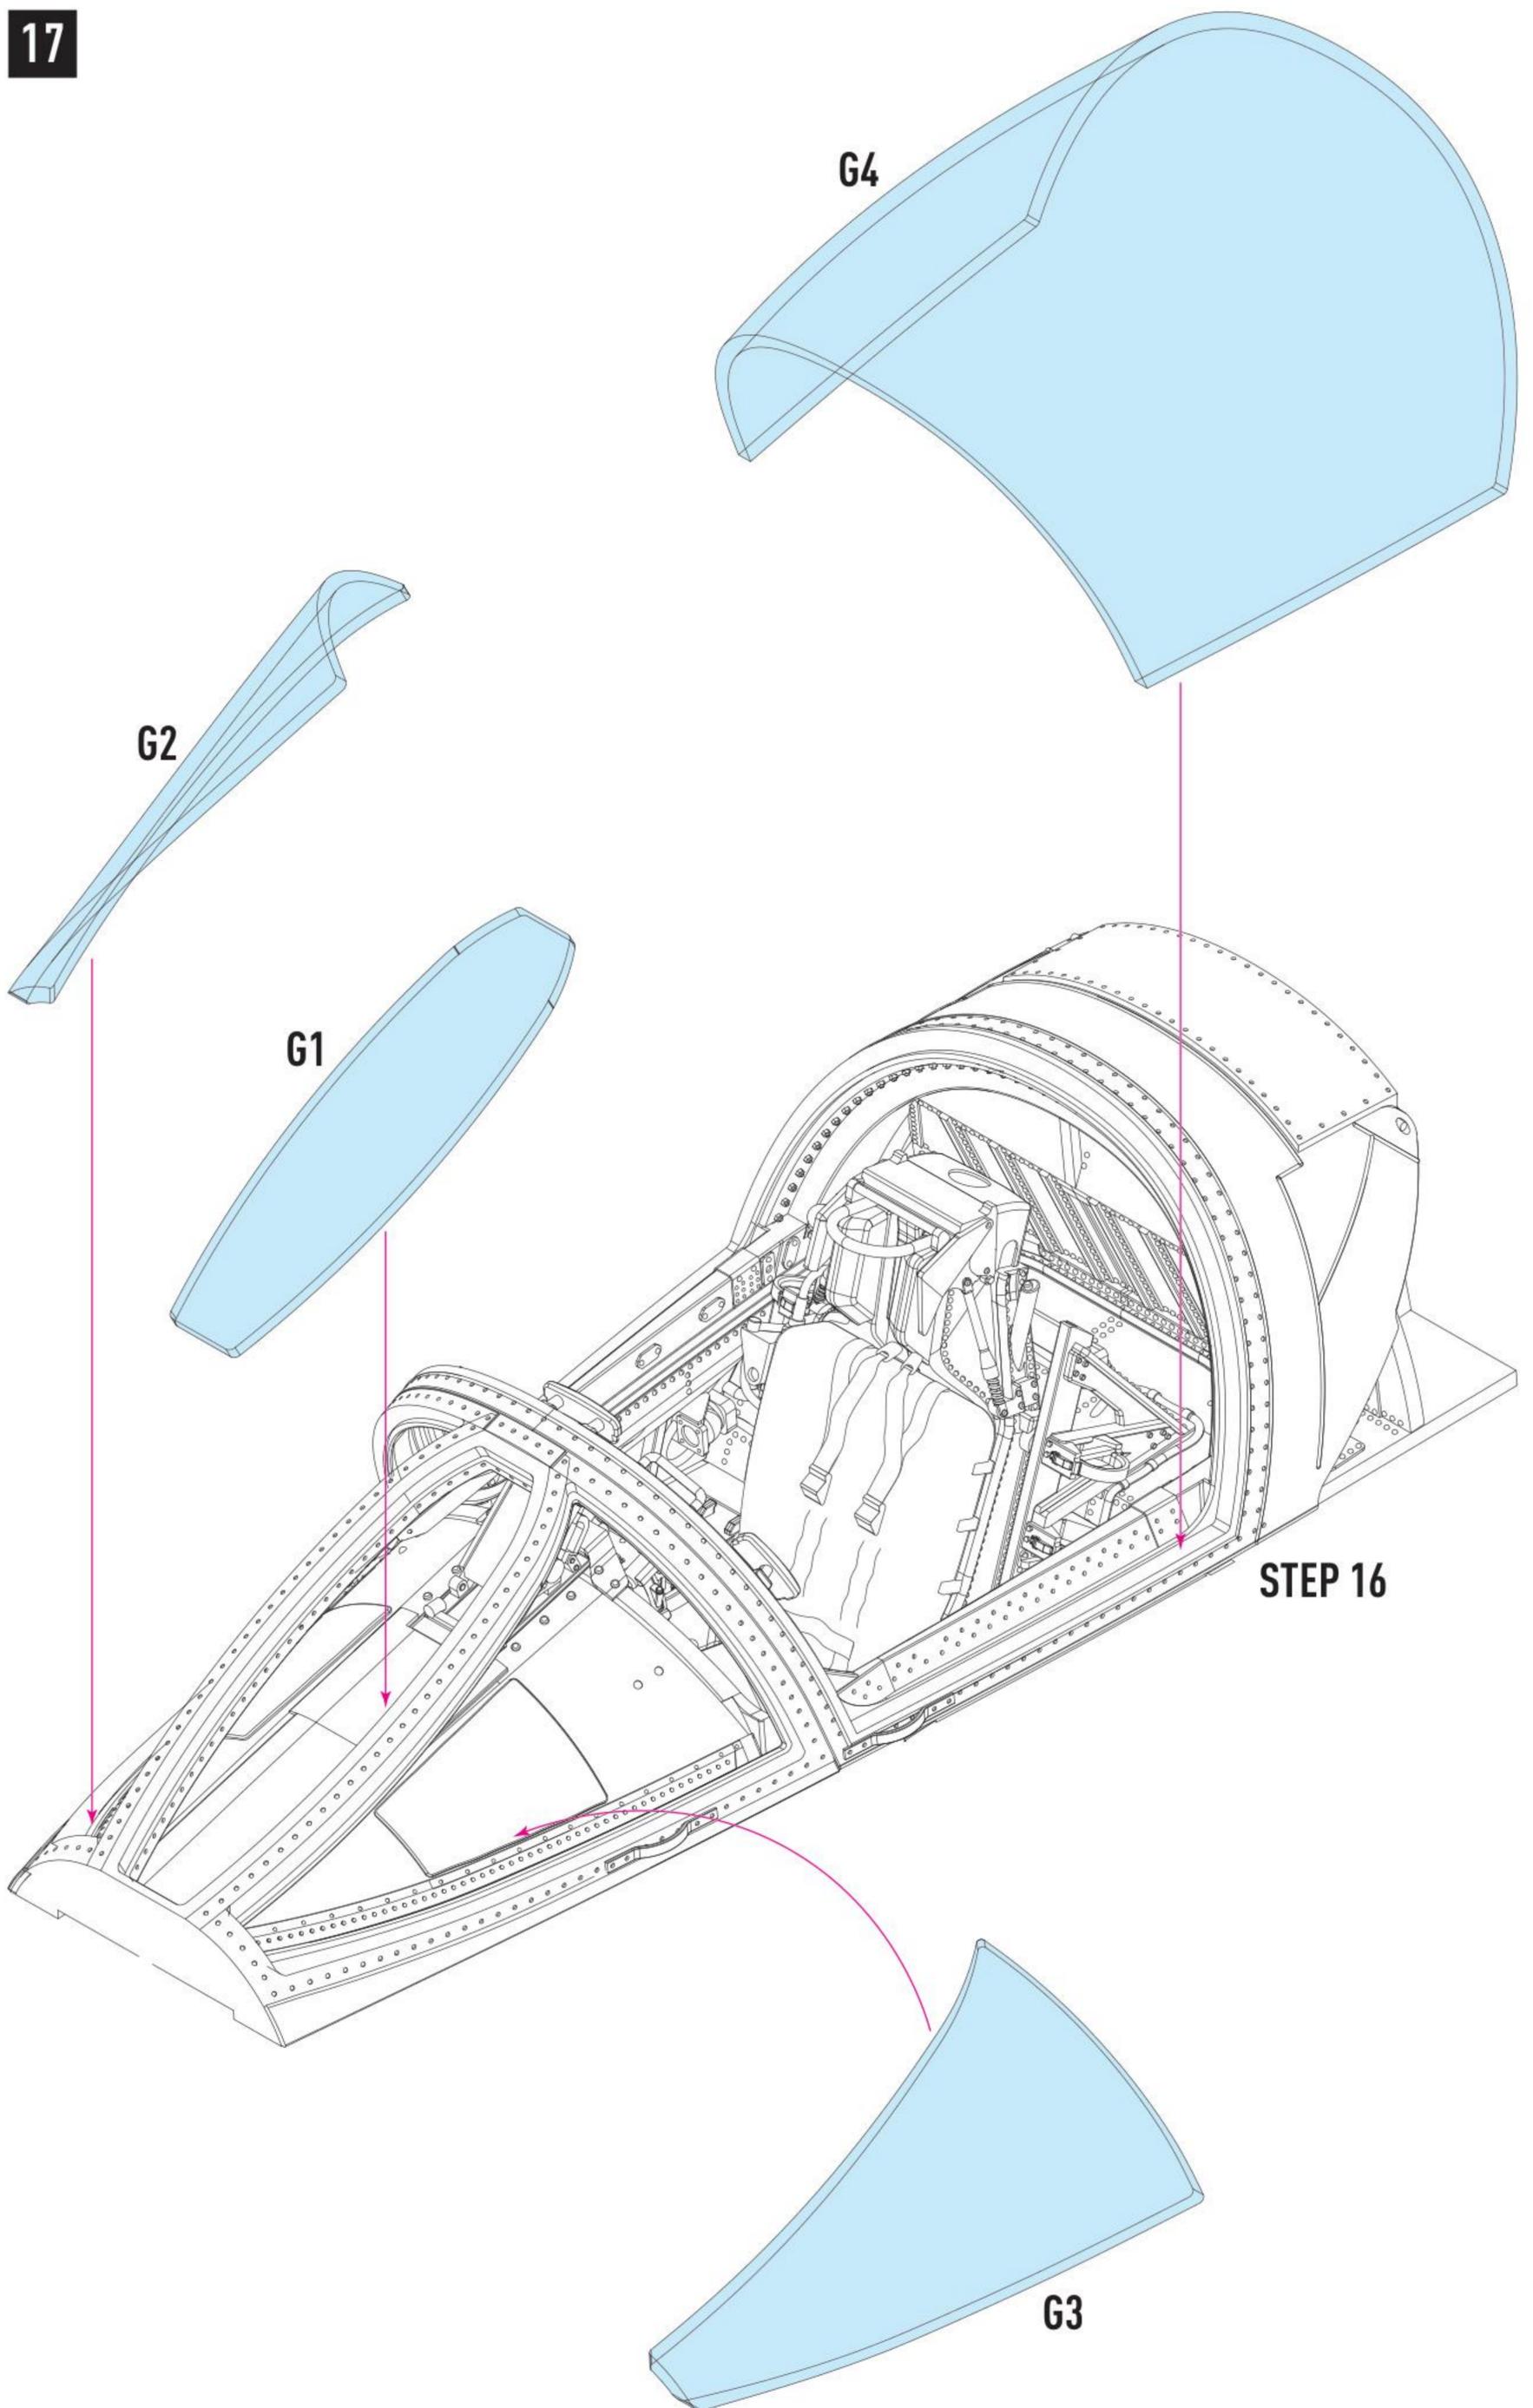

18 FOR CLOSE CANOPY

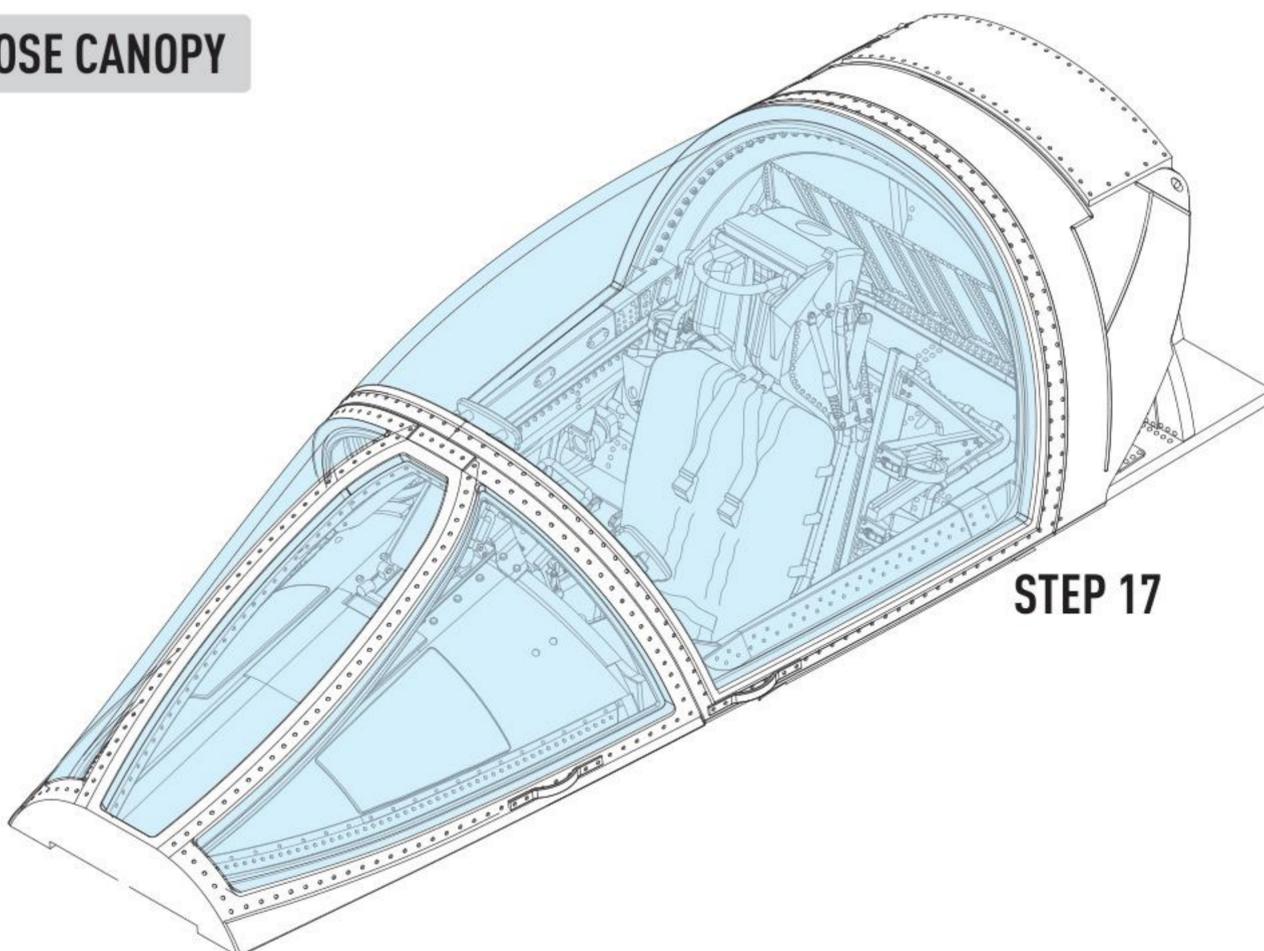

19 FOR OPEN CANOPY

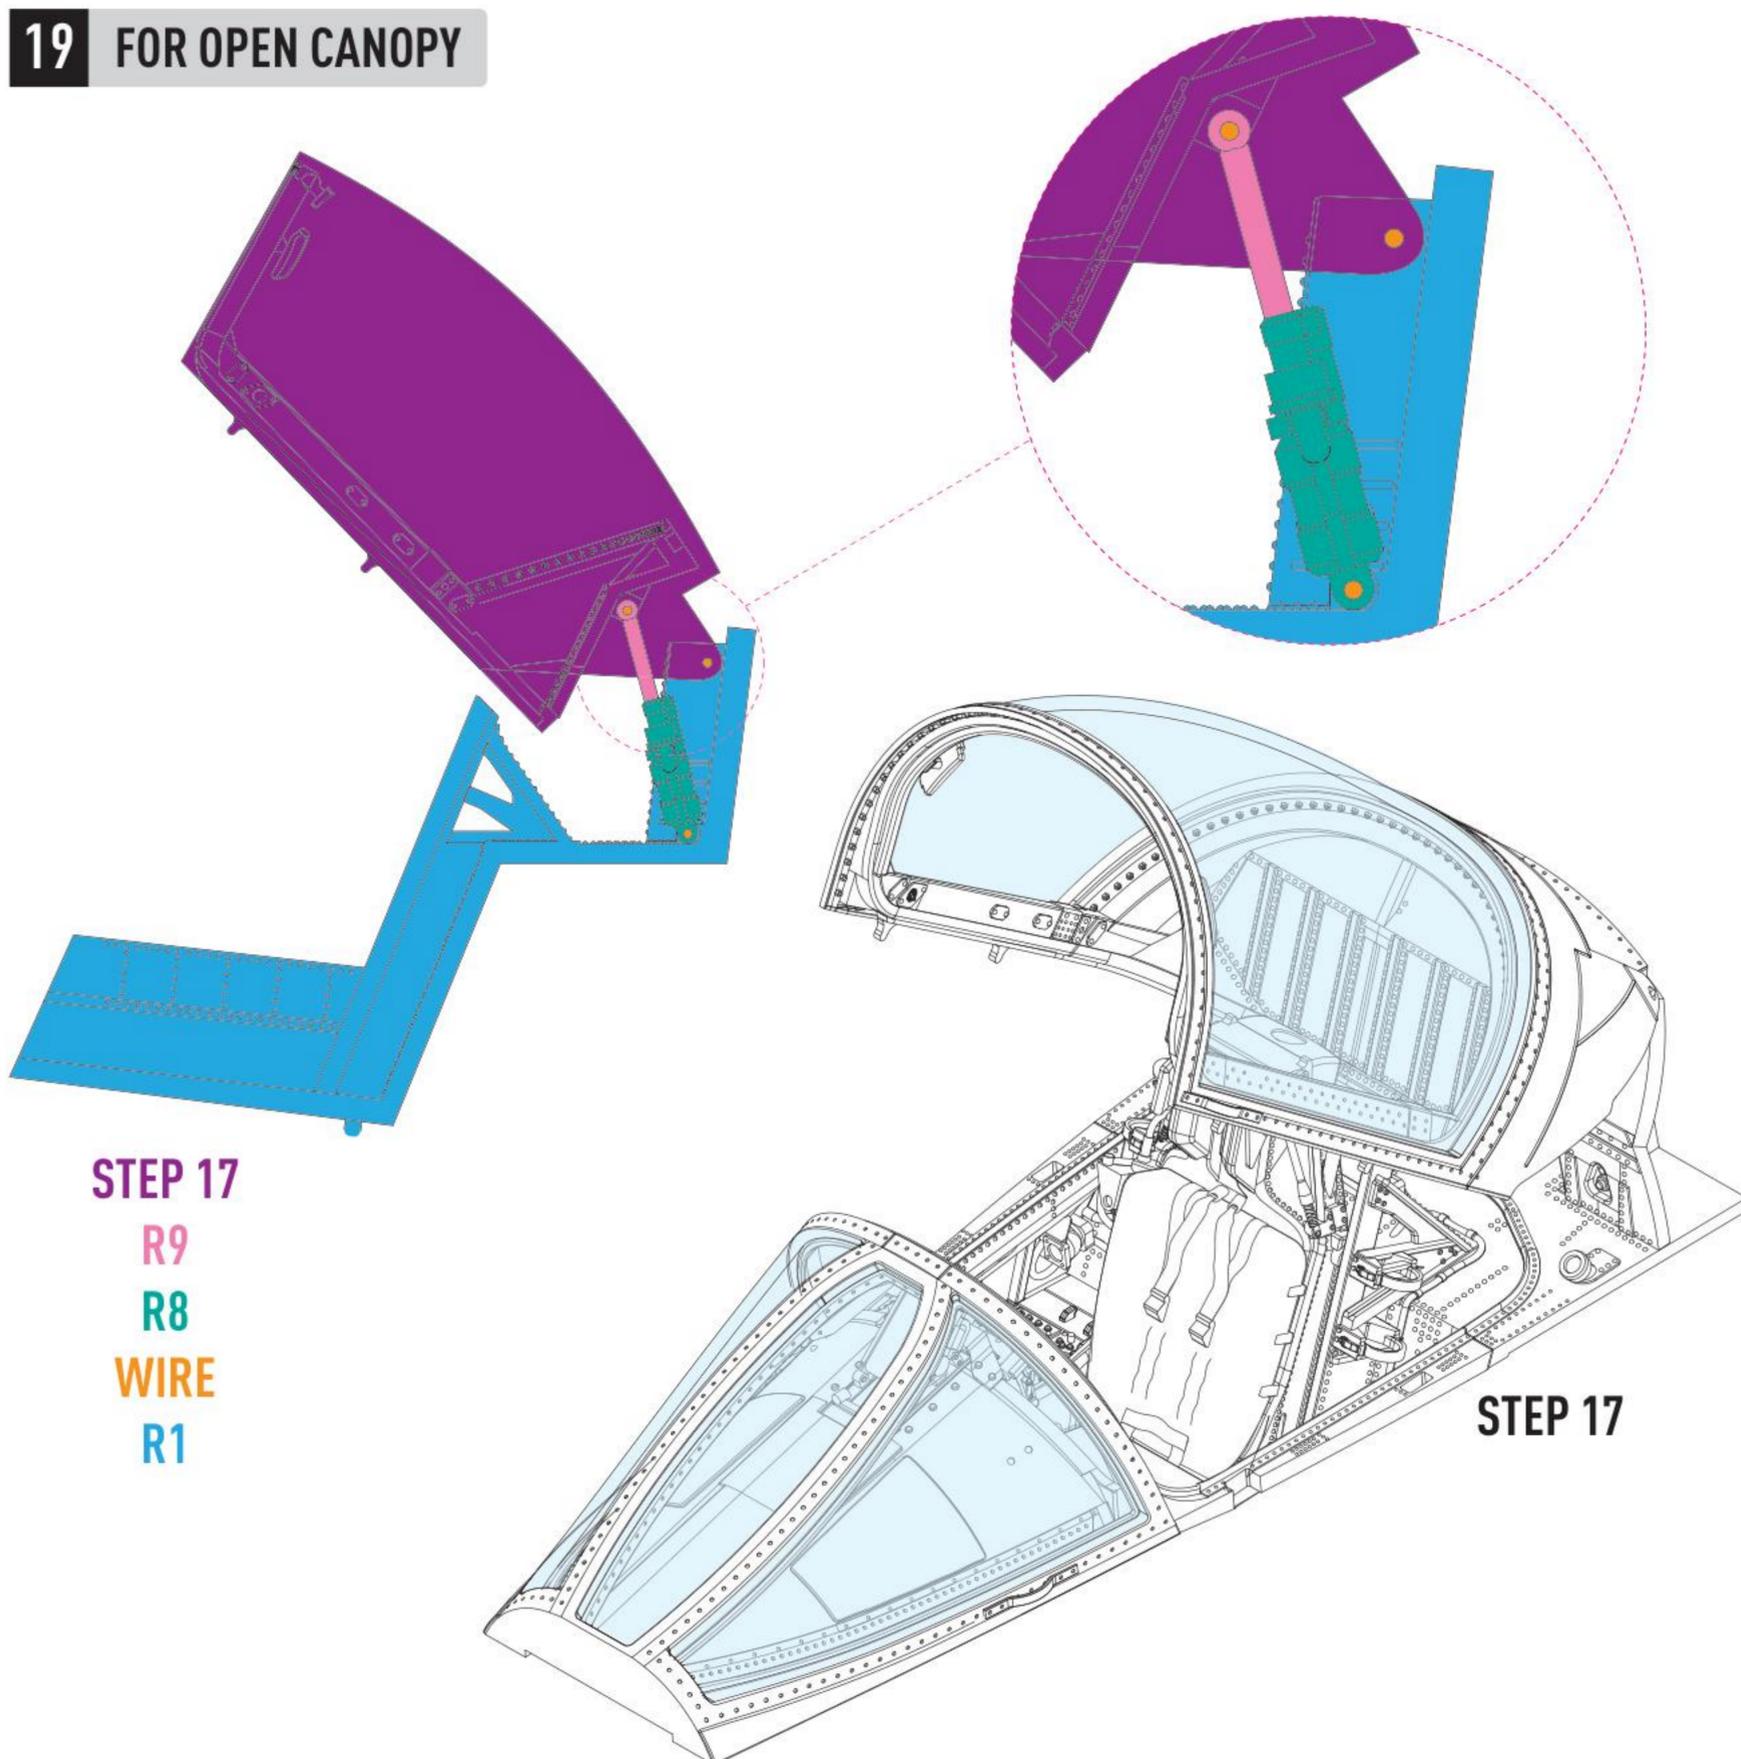

STEP 17




R9

R8



WIRE

R1

DECAL INSTRUCTION

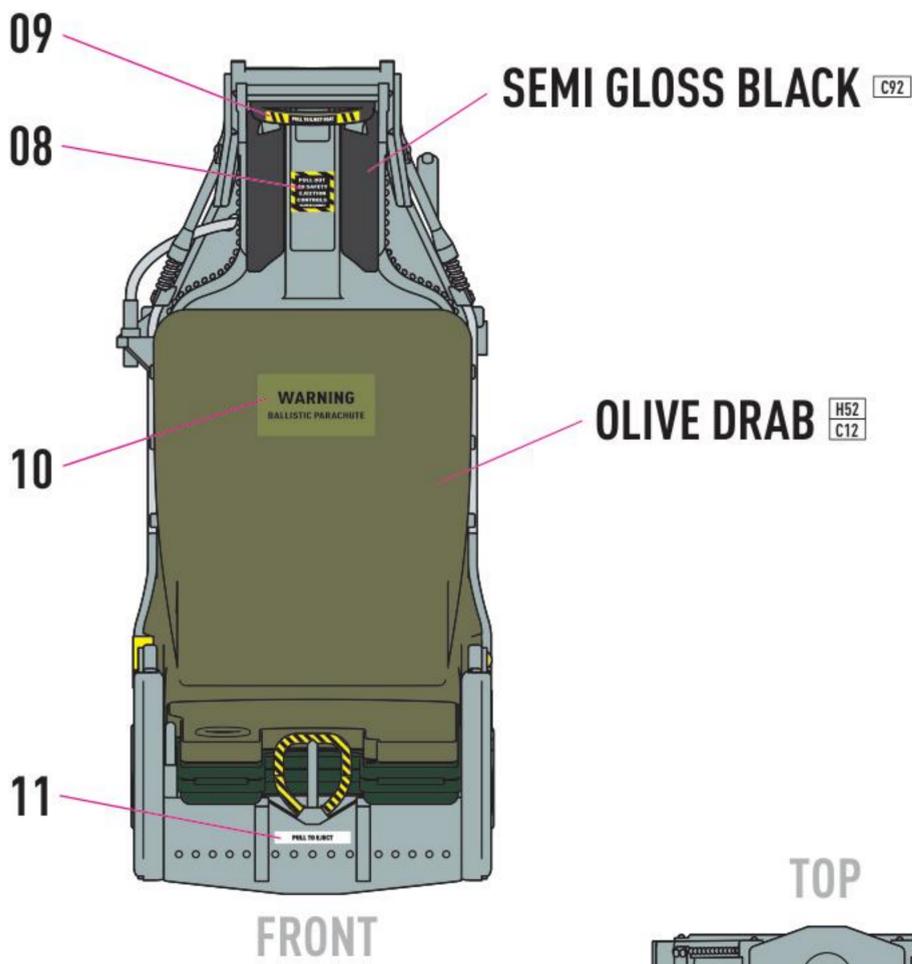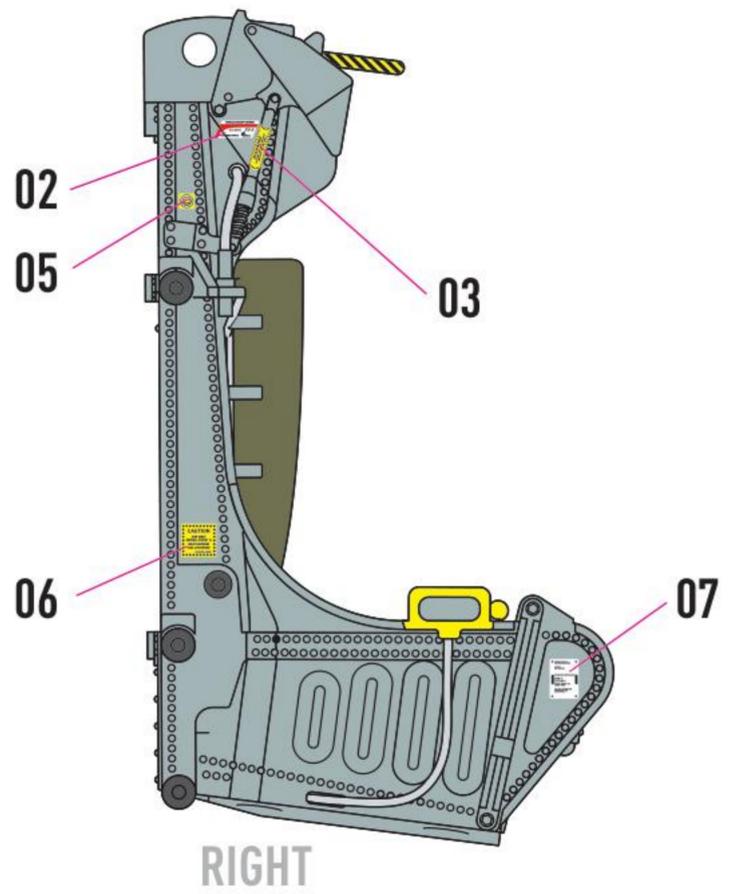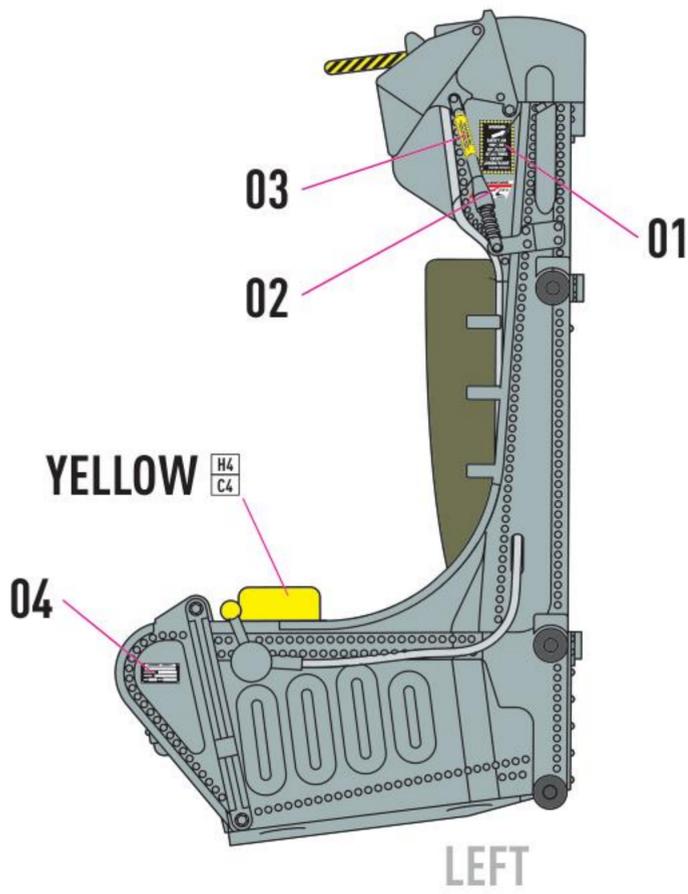

TOP

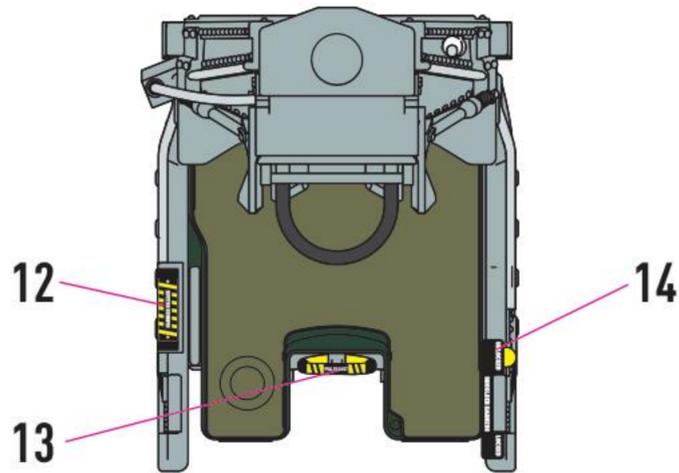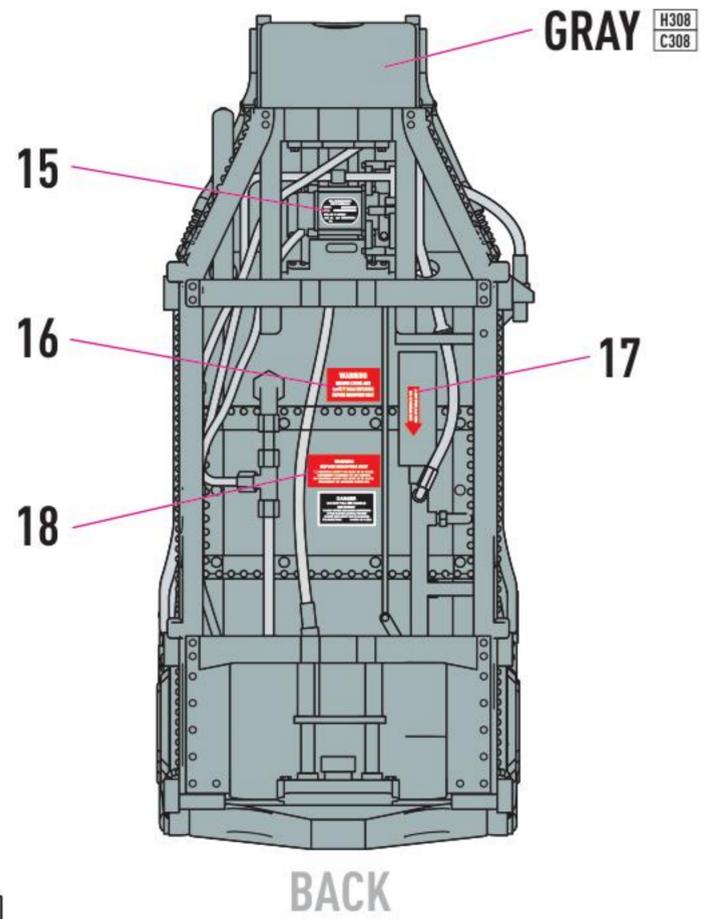

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H52	C12
YELLOW	H4	C4

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308
SEMI GLOSS BLACK		C92

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit_official](https://www.instagram.com/reskit_official)

[youtube.com/@reskit-usmd](https://www.youtube.com/@reskit-usmd)