



RESIN PARTS  
FOR SCALE PLASTIC KITS


YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE

INSTRUCTION **RSU32-0191**


# A-7E CORSAIR II LATE COCKPIT

## HYPERDETAILED EDITION

**3D** PRINTED  
PARTS


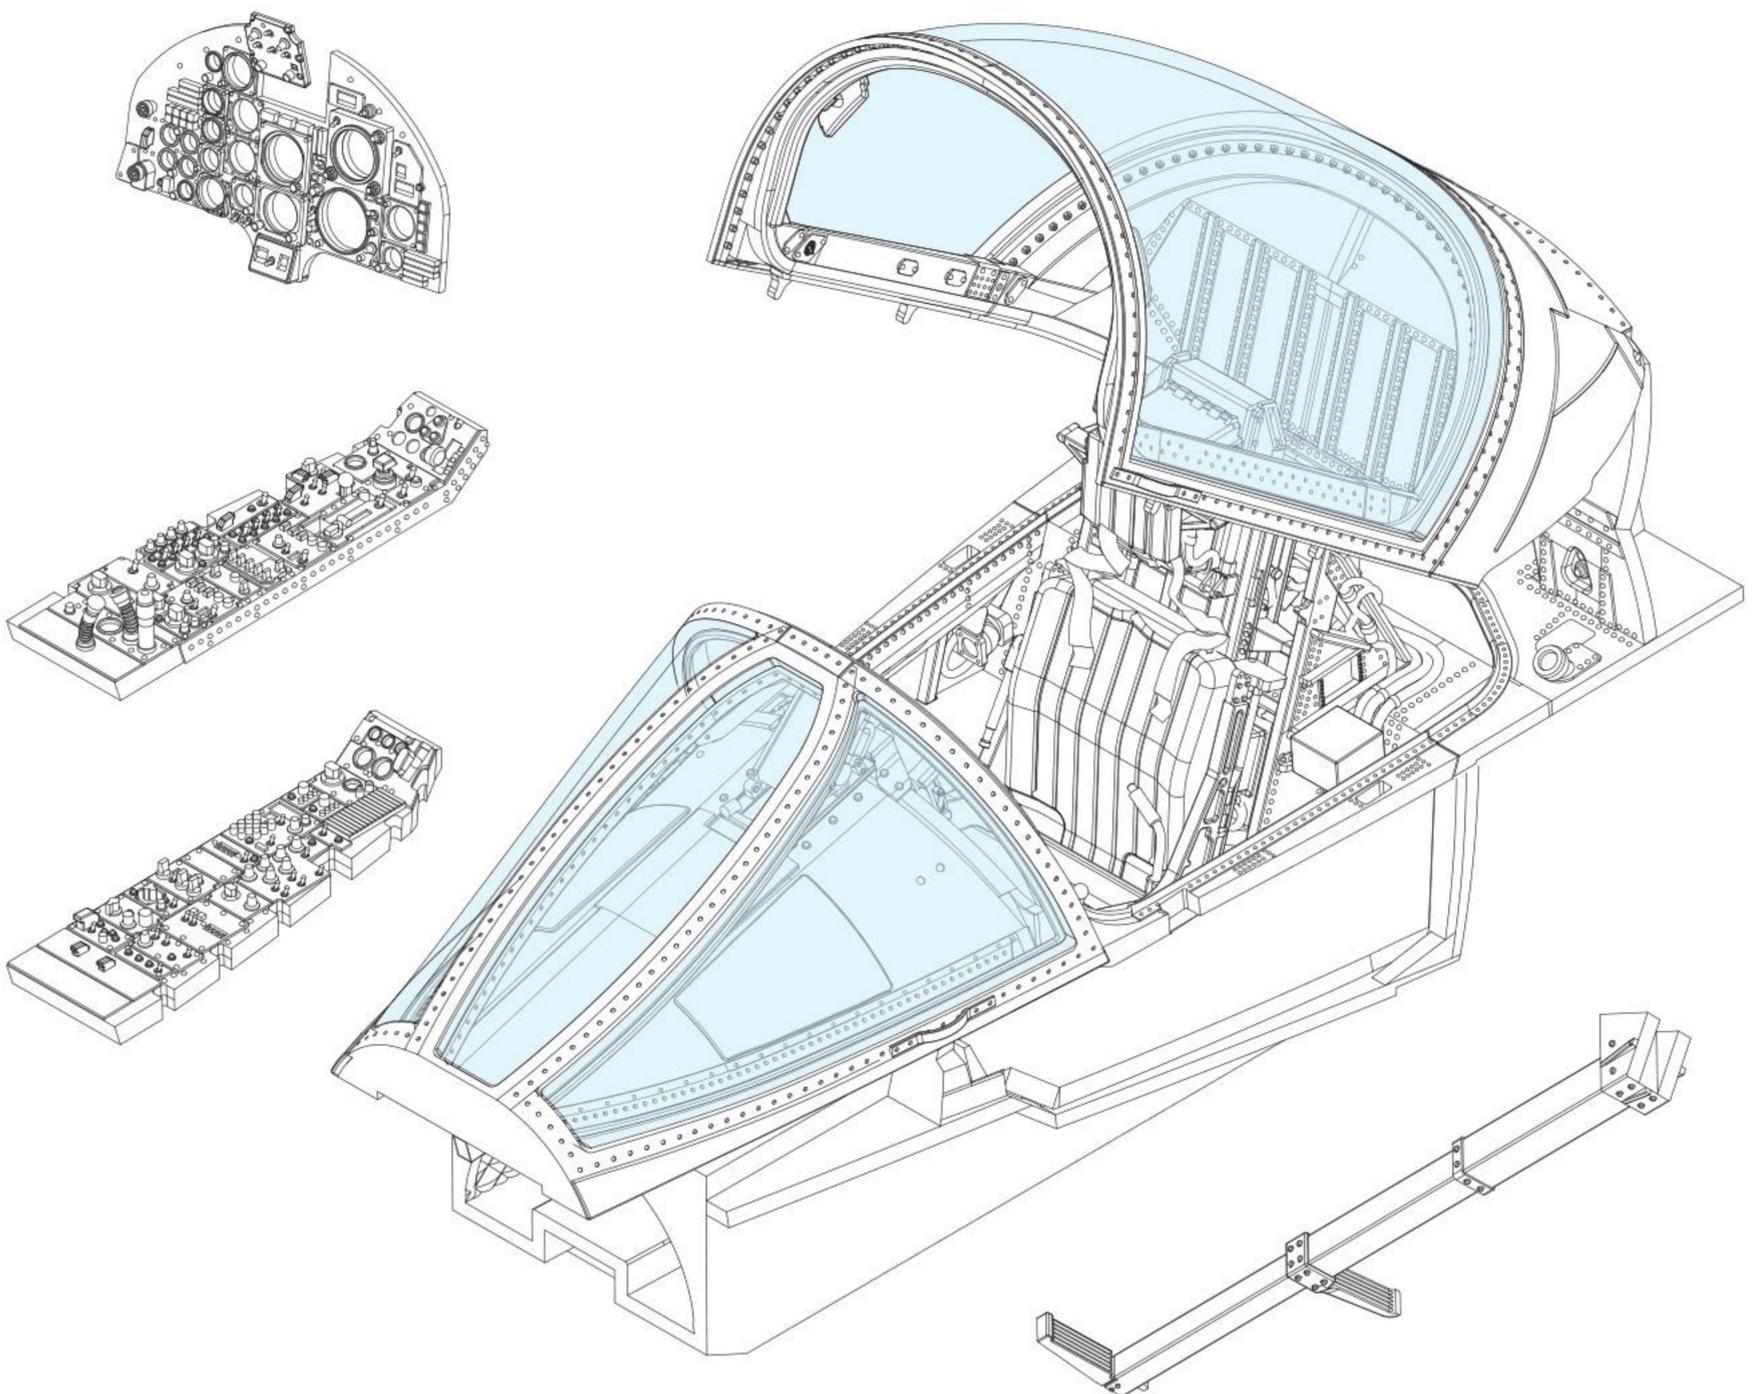


**FOR TRUMPETER KIT**

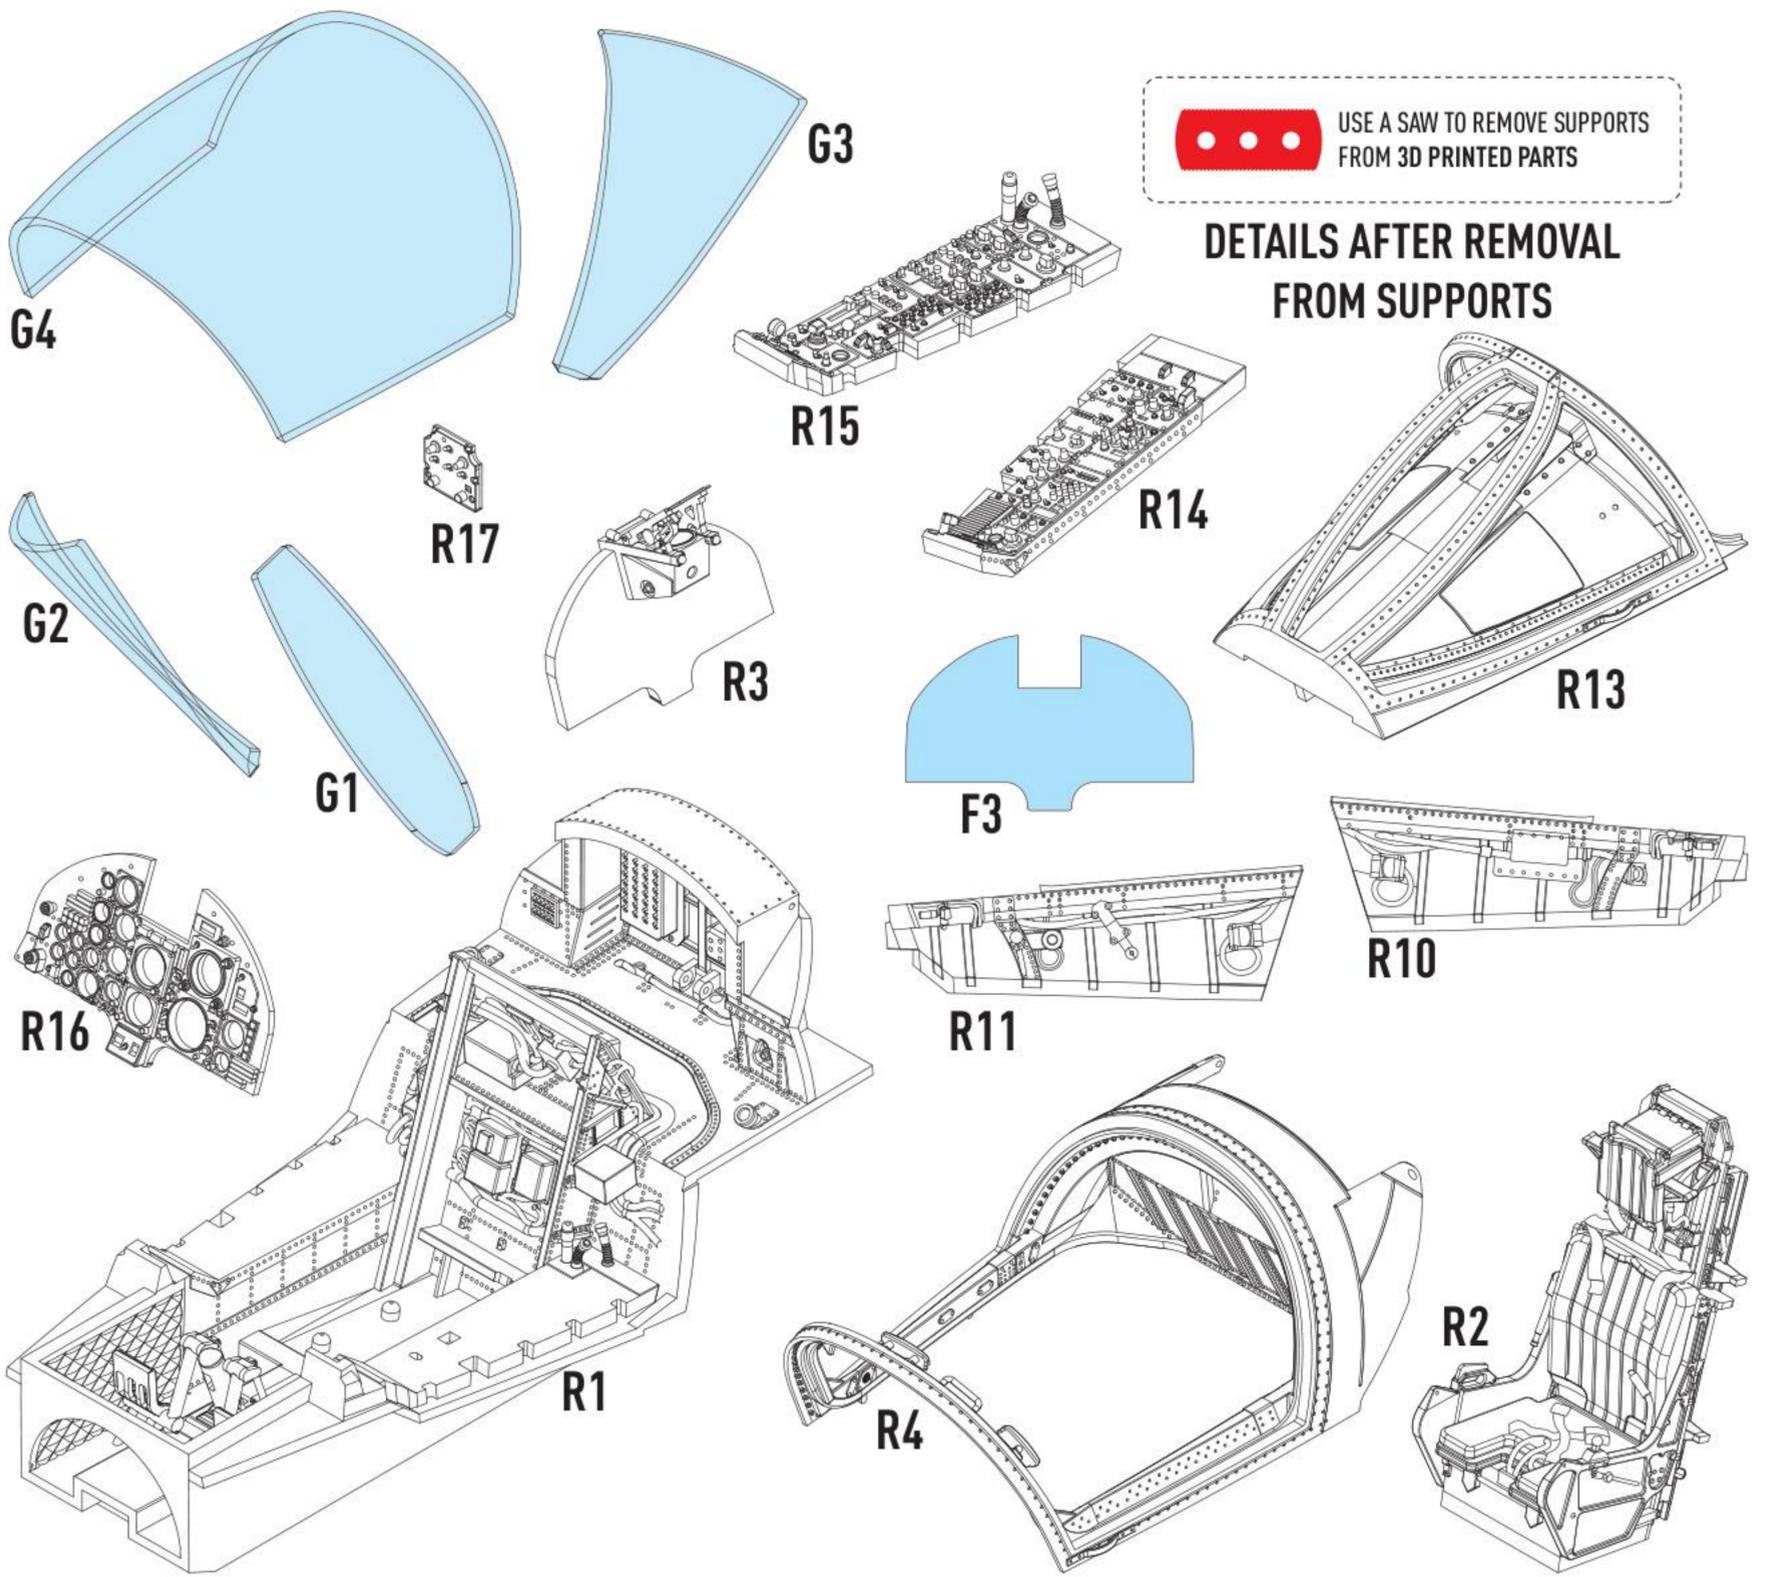


 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL FROM SUPPORTS**

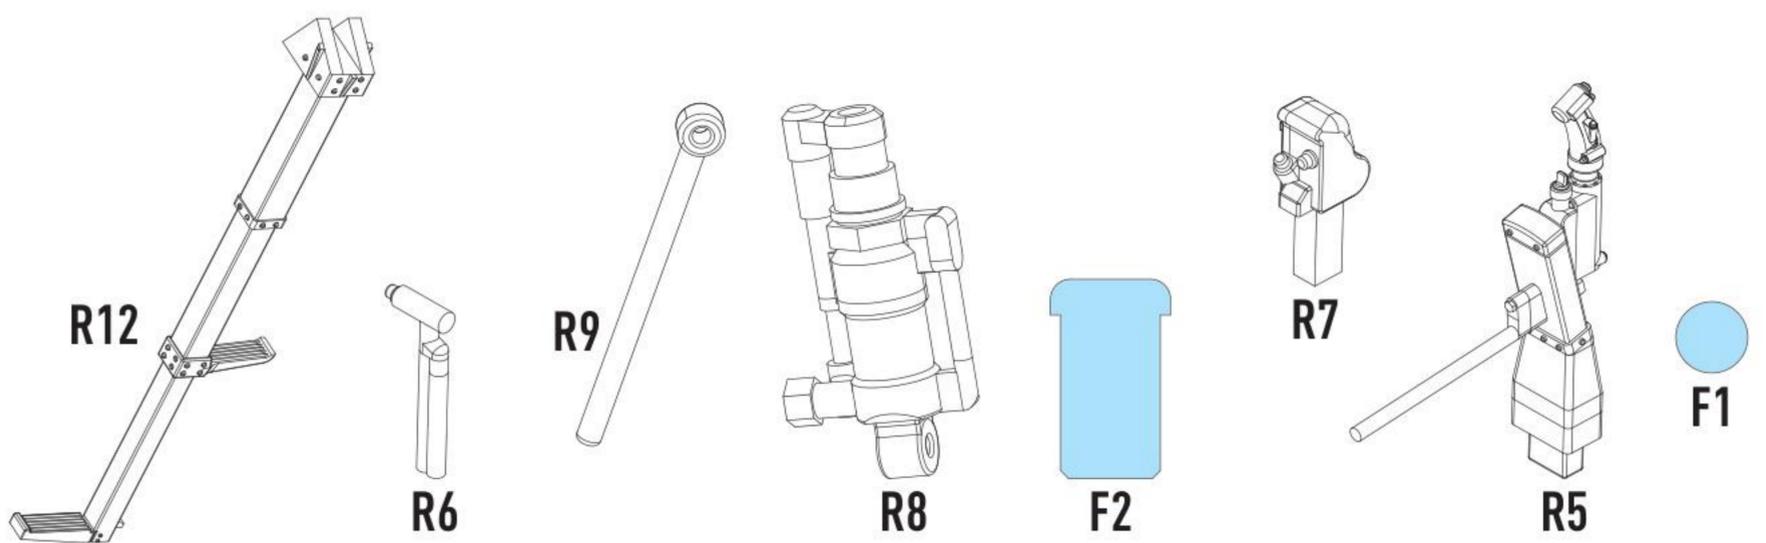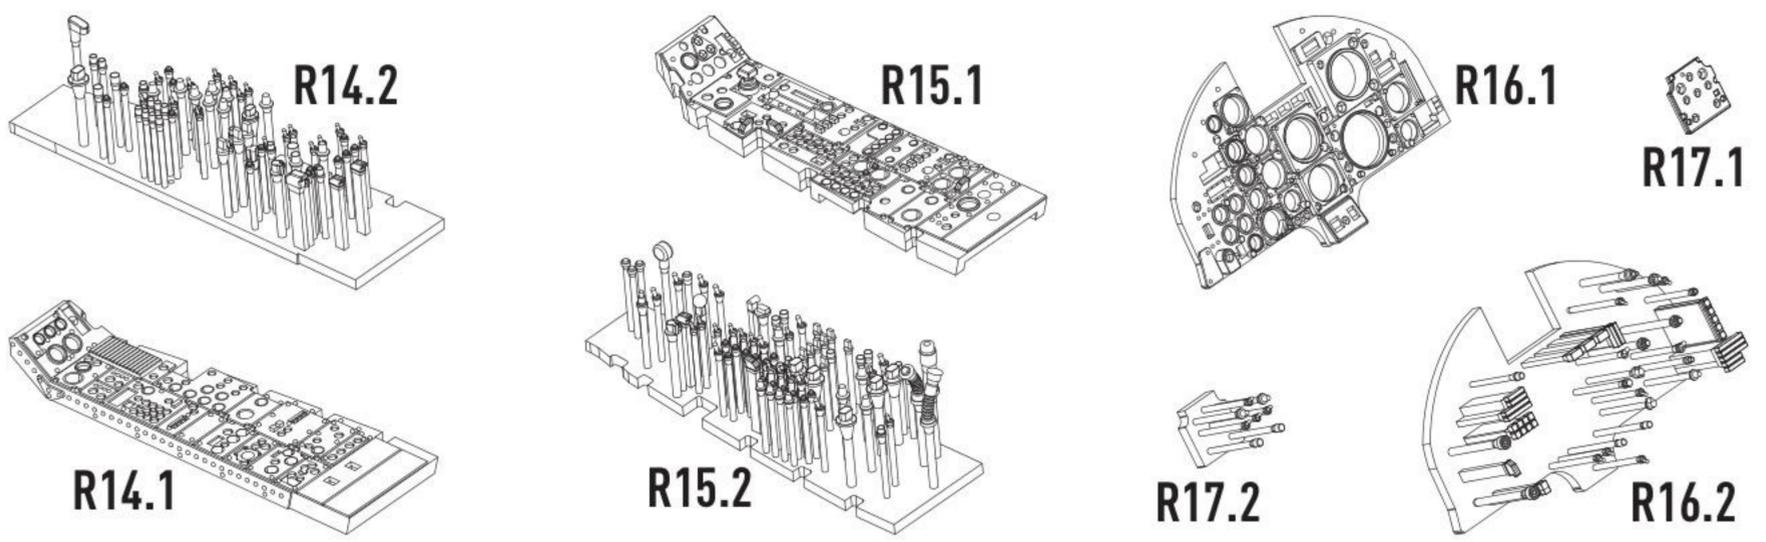


**1** HYPER DETAILED EDITION


**ASSEMBLY**

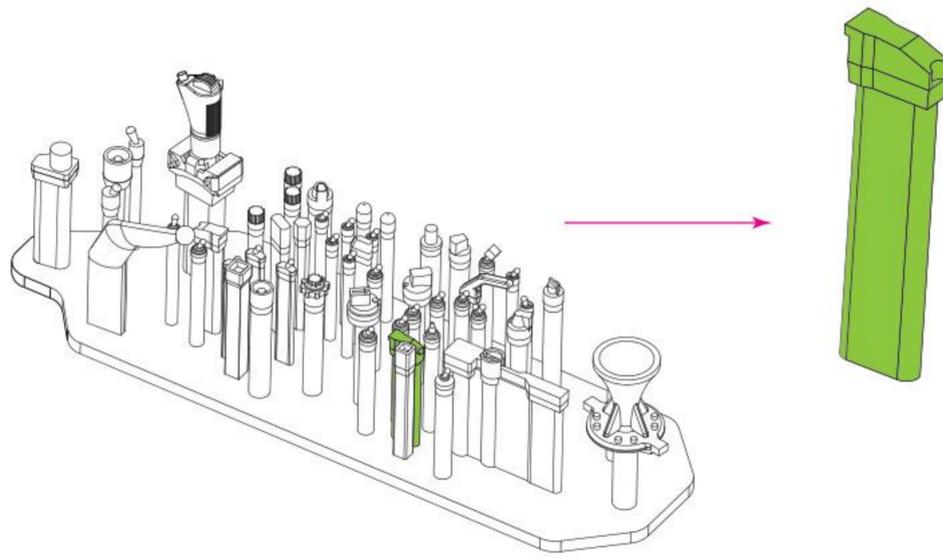

**REMOVE PART FROM THE PANEL WITH ELEMENTS**

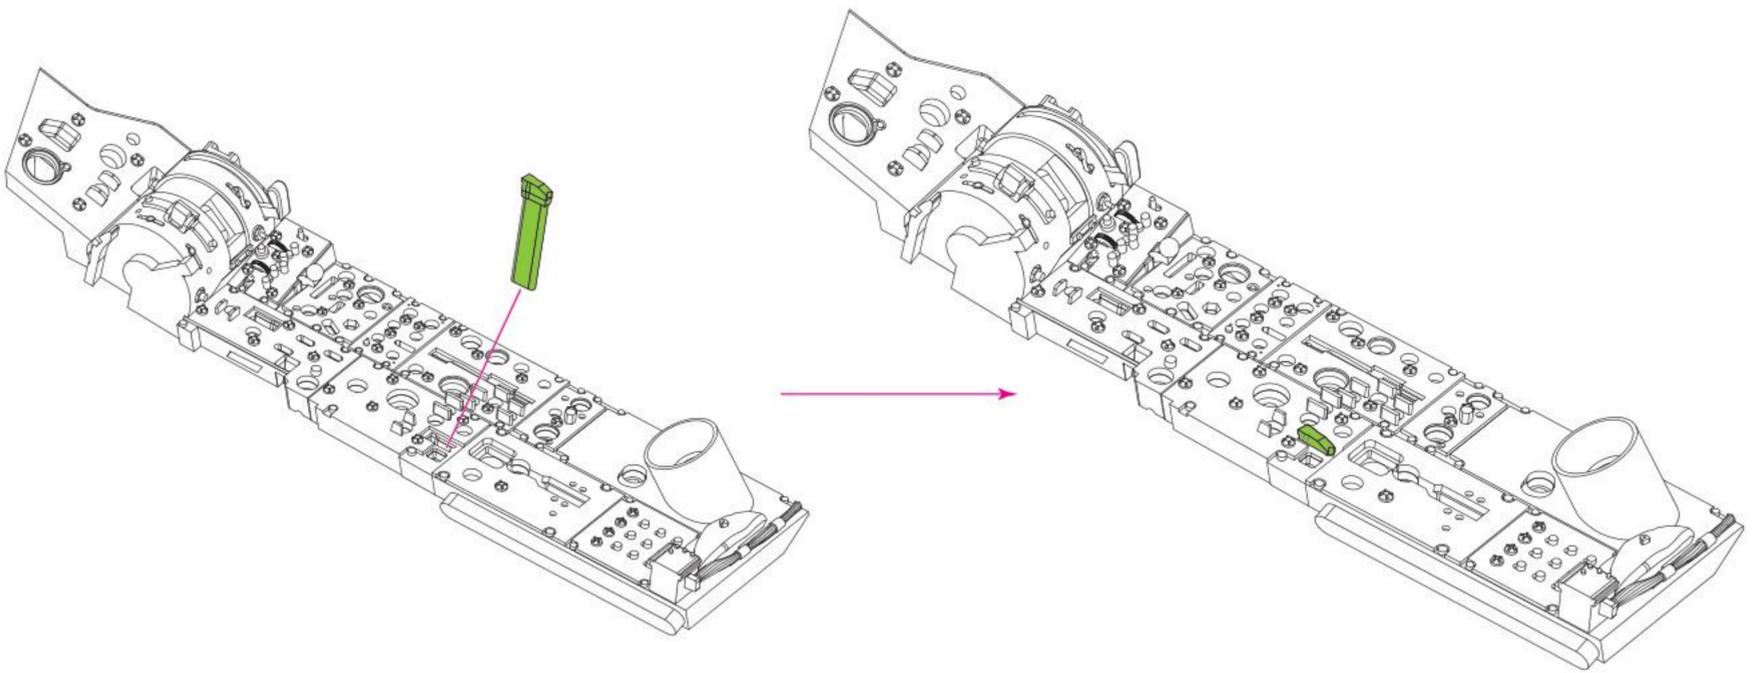


**INSERT PART INTO THE PANEL WITH HOLES**

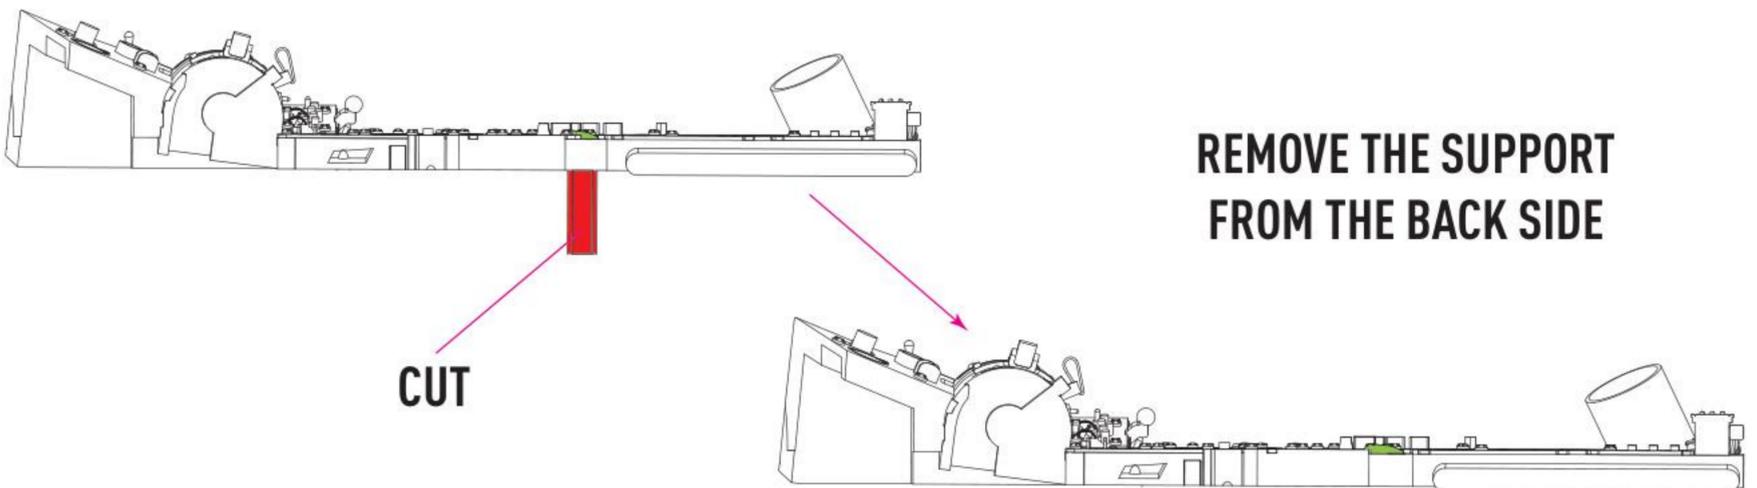

**REMOVE THE SUPPORT FROM THE BACK SIDE**


**2**

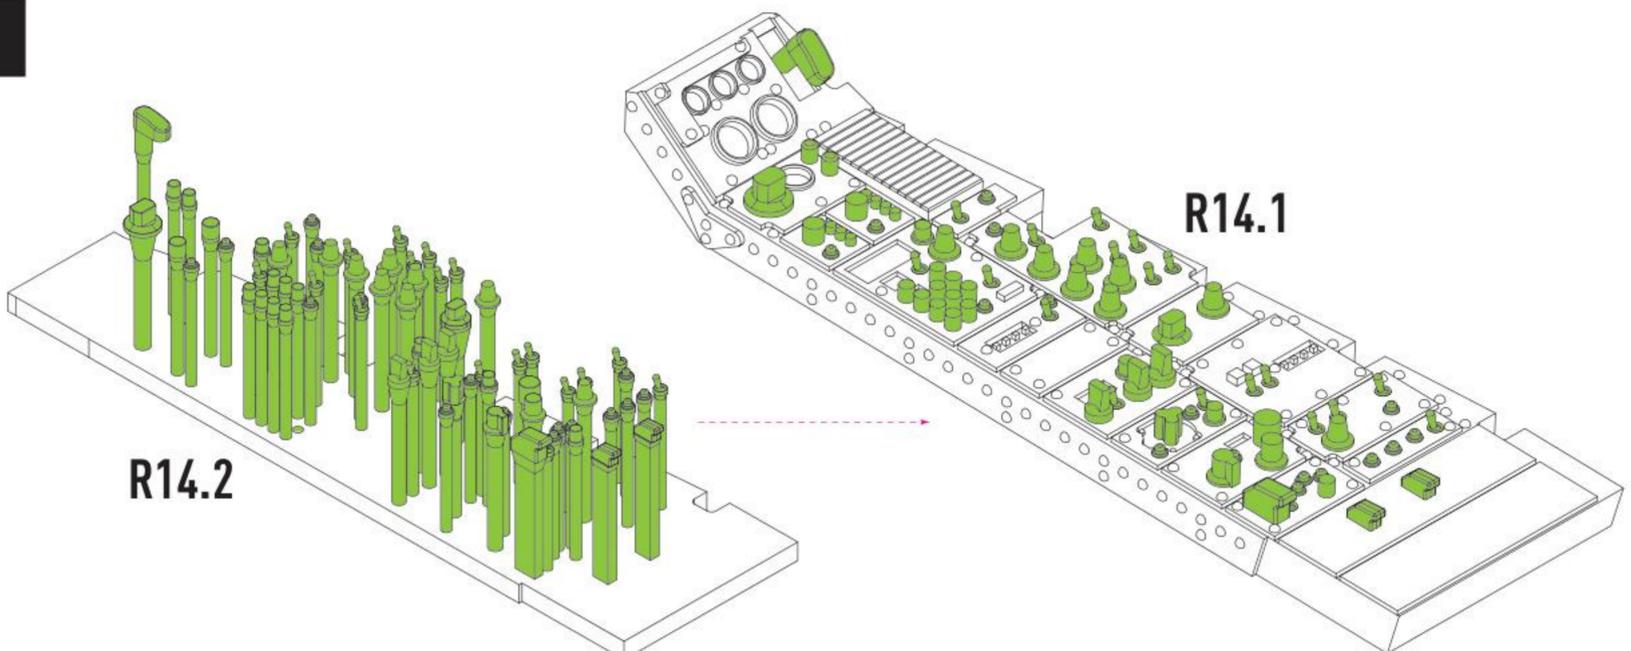


**R14.2**

**R14.1**


**3**

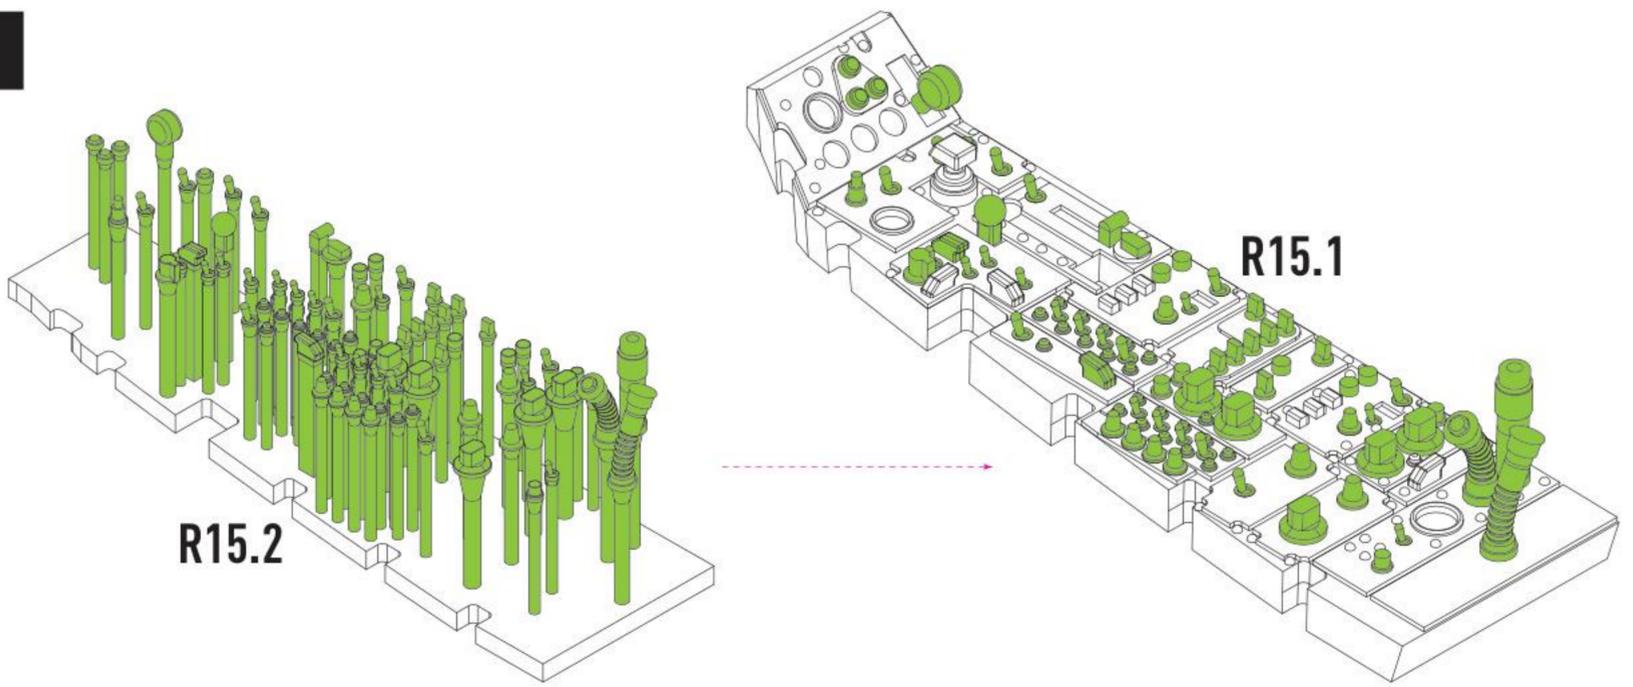

**4**

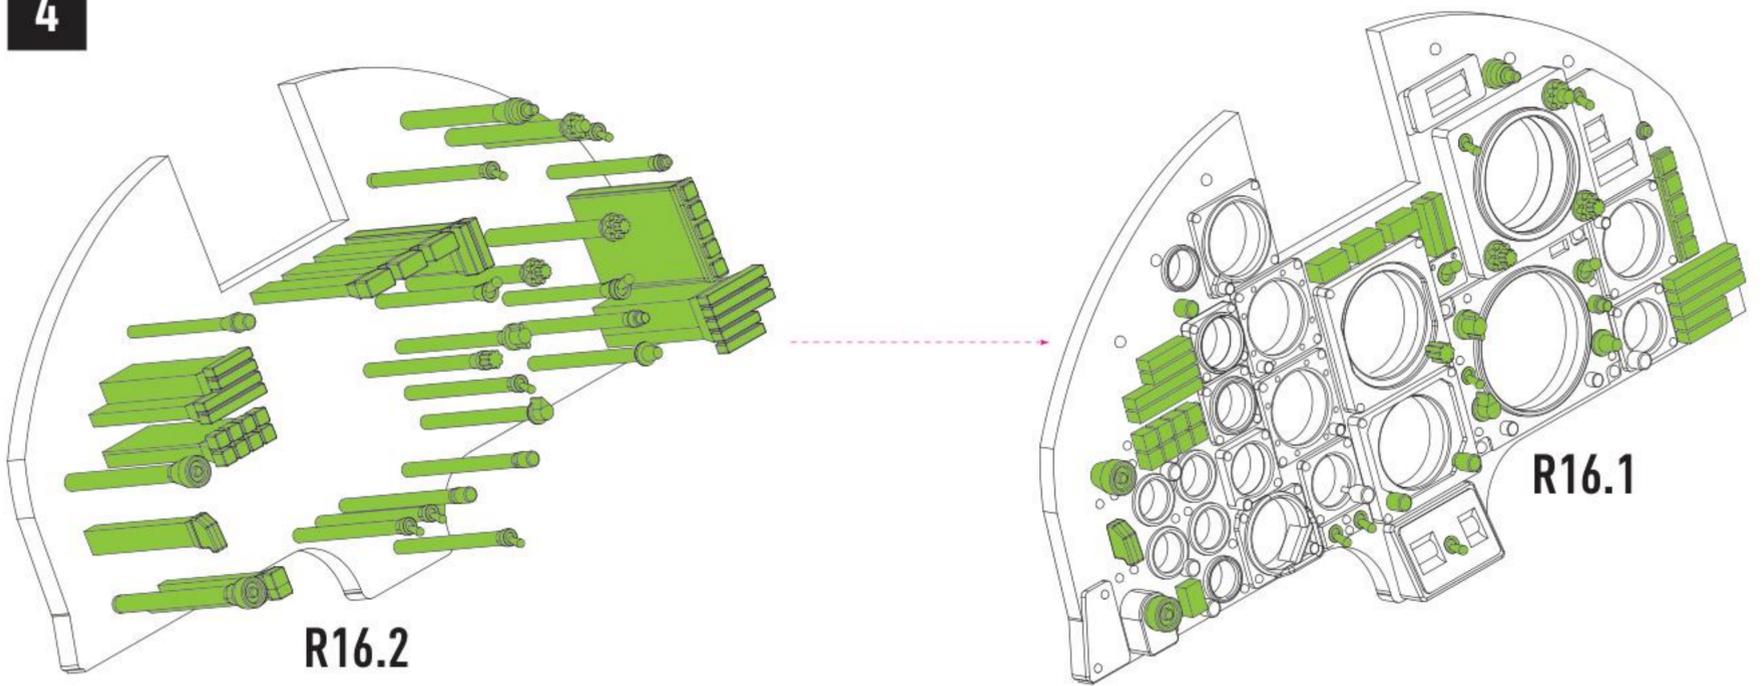


**5**

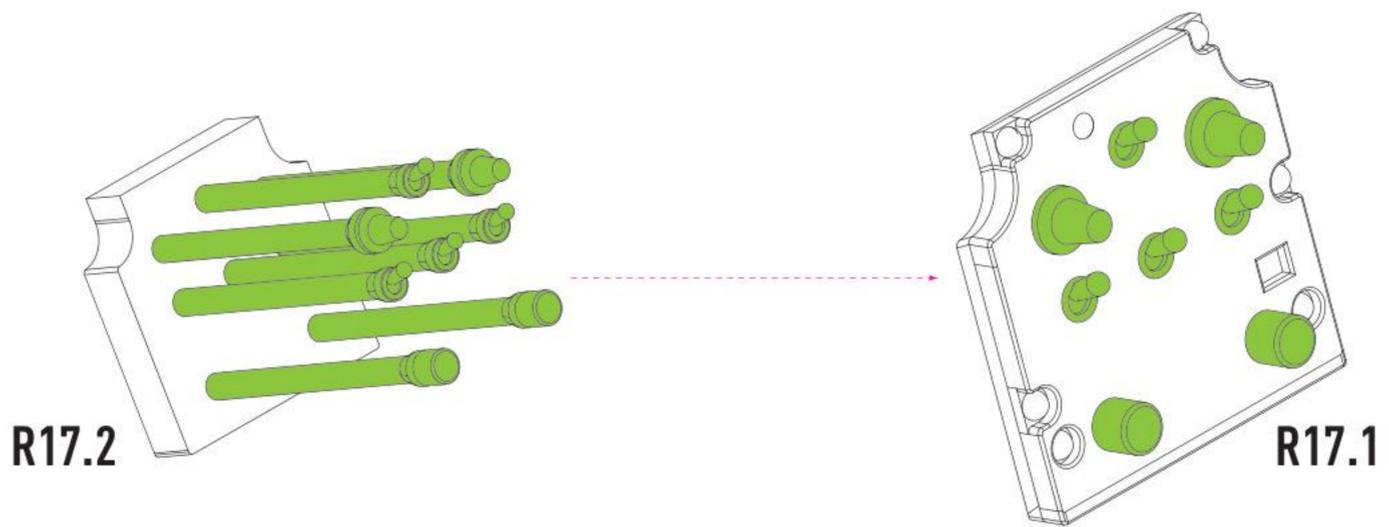


**6**


**APPLY TRANSPARENT FILM FOR R16.1 AND R17.1 PARTS ONLY AFTER TRANSFERRING ALL ELEMENTS FROM THE PANEL**

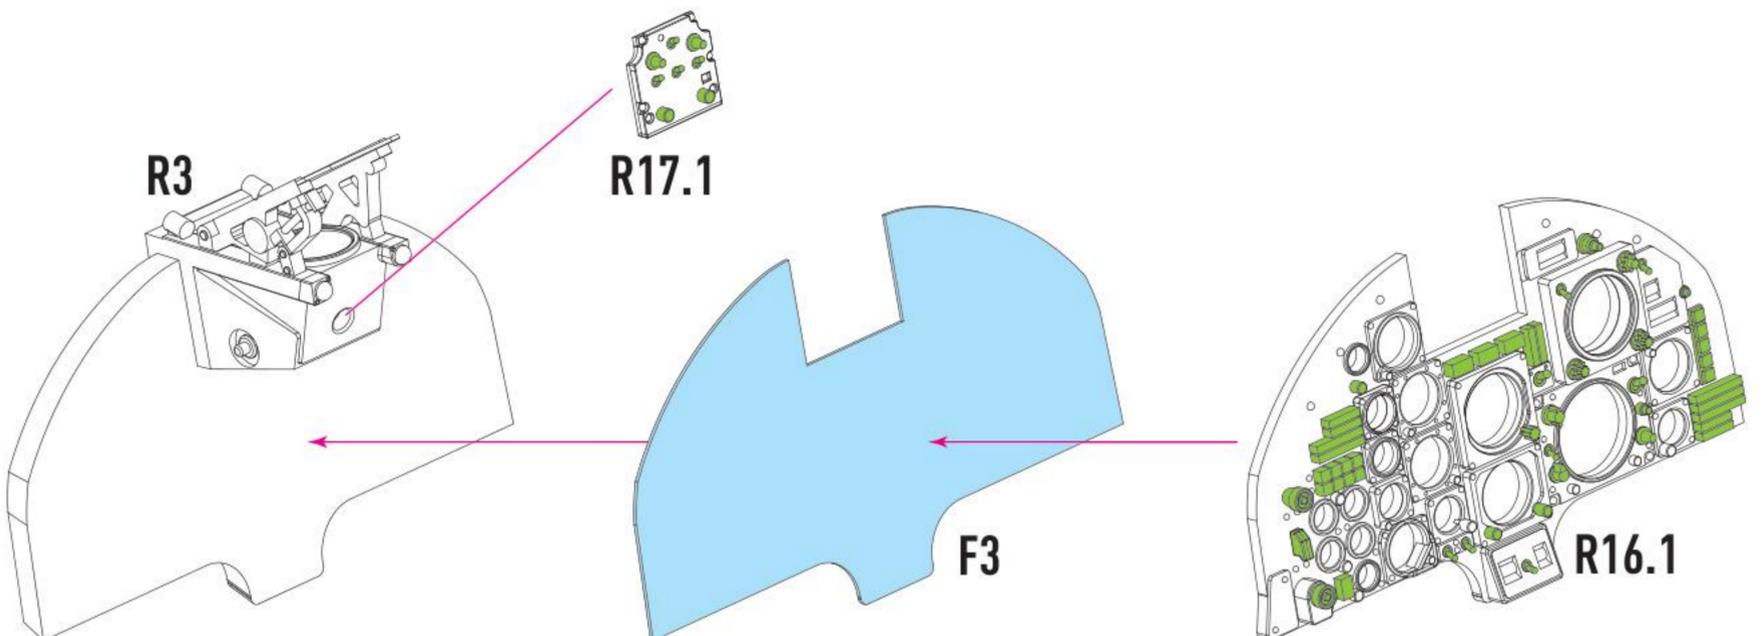


7

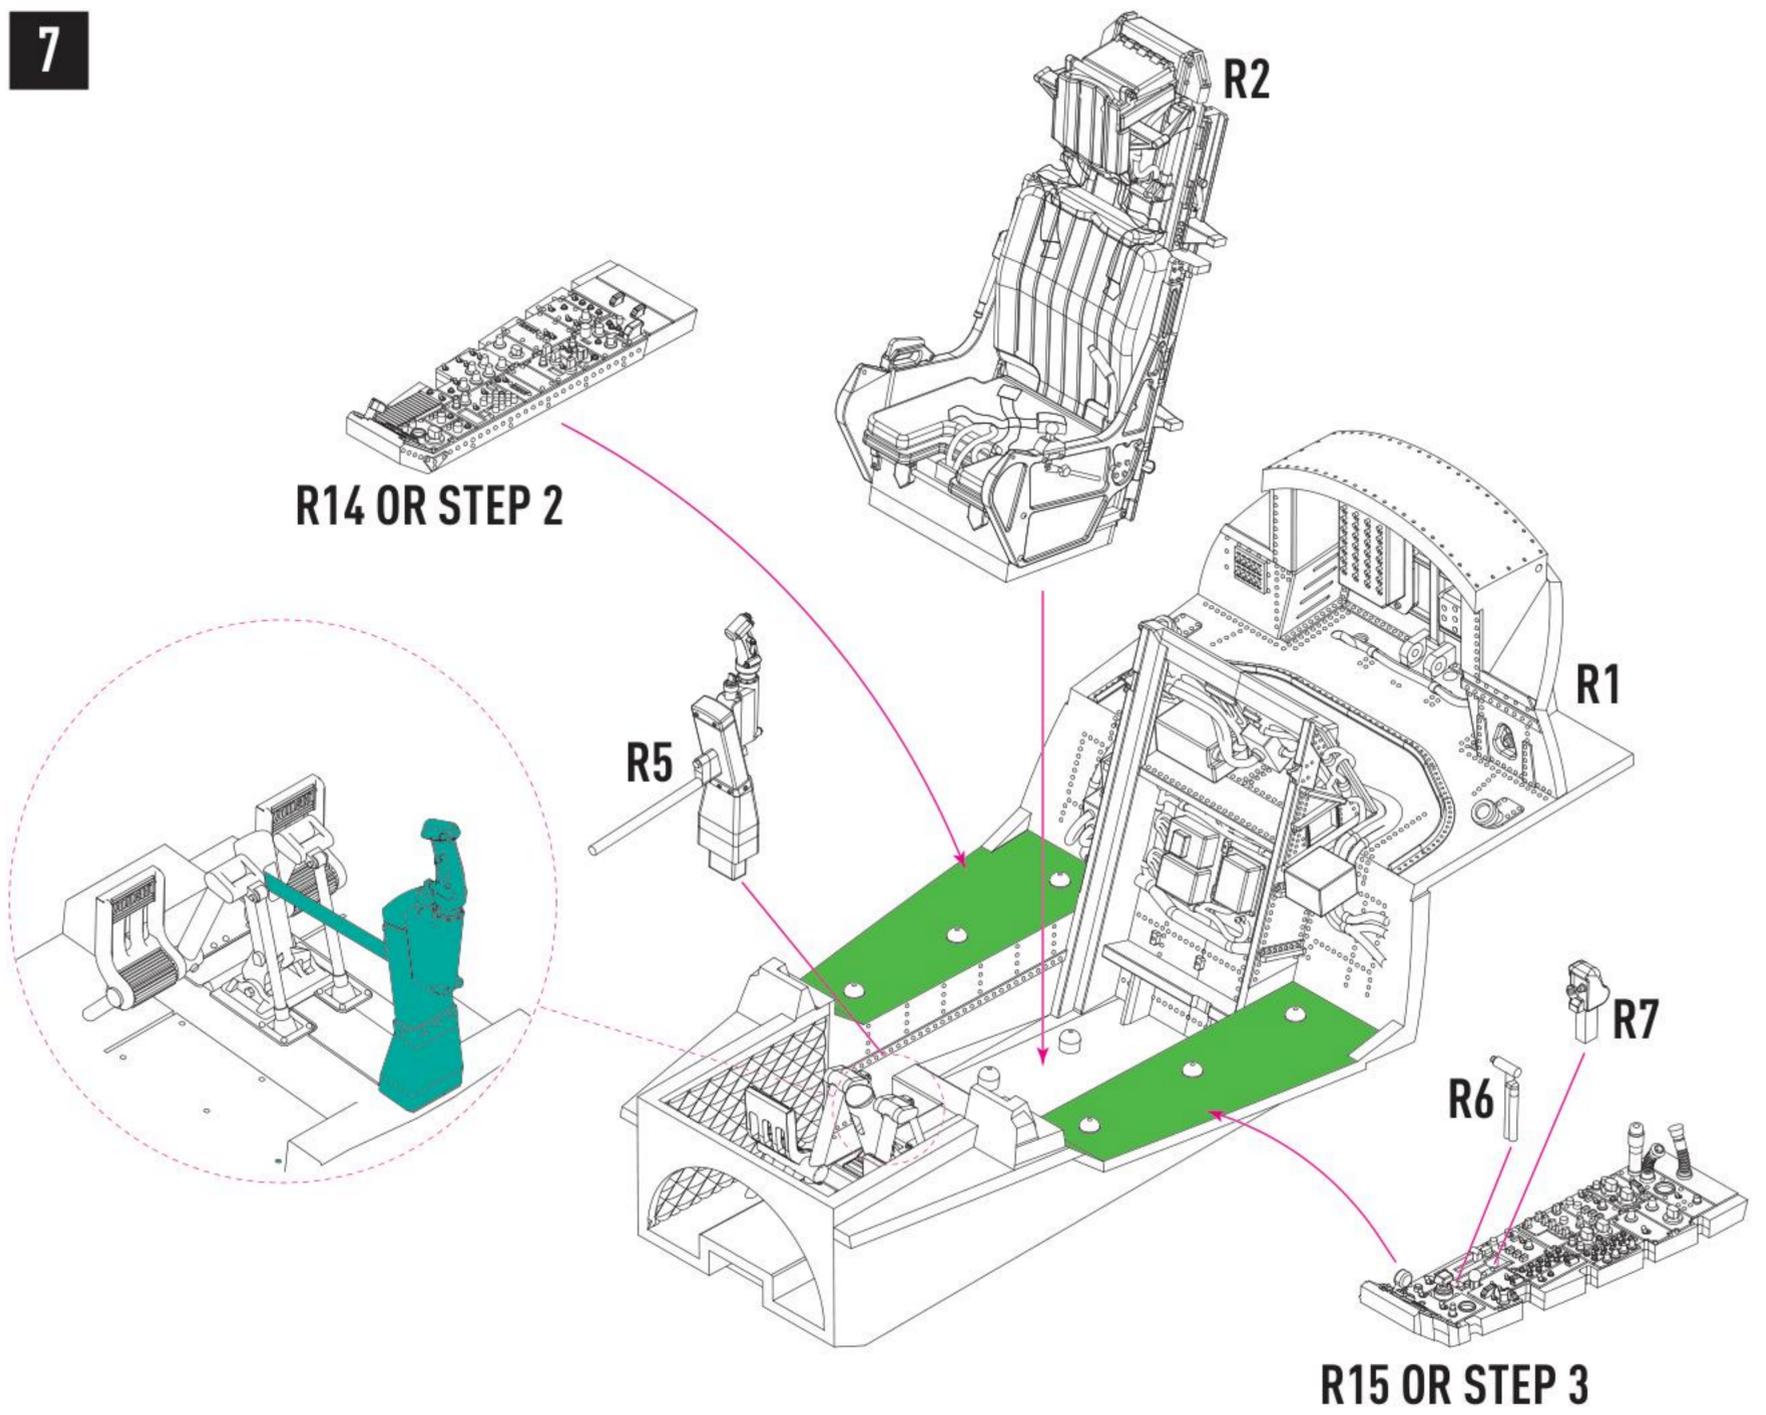


8


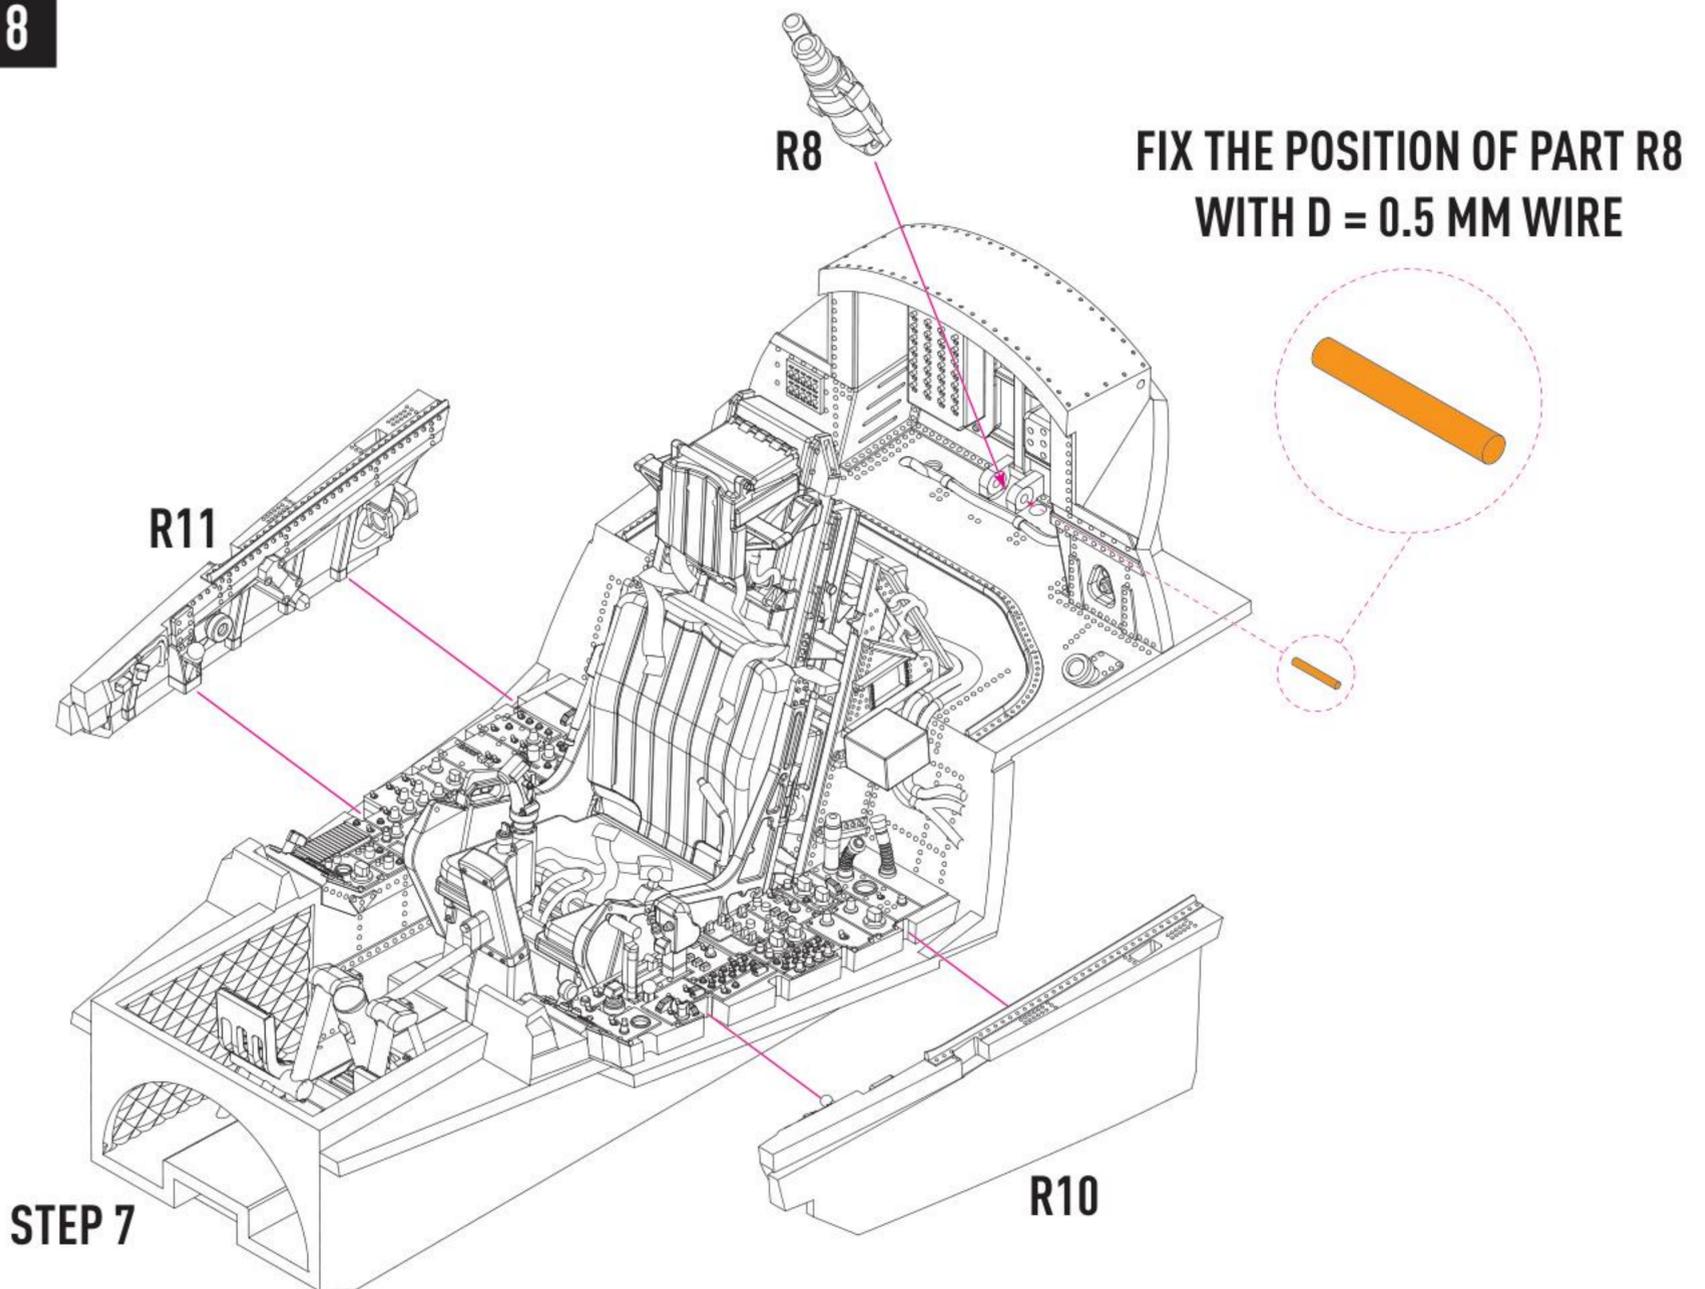


9

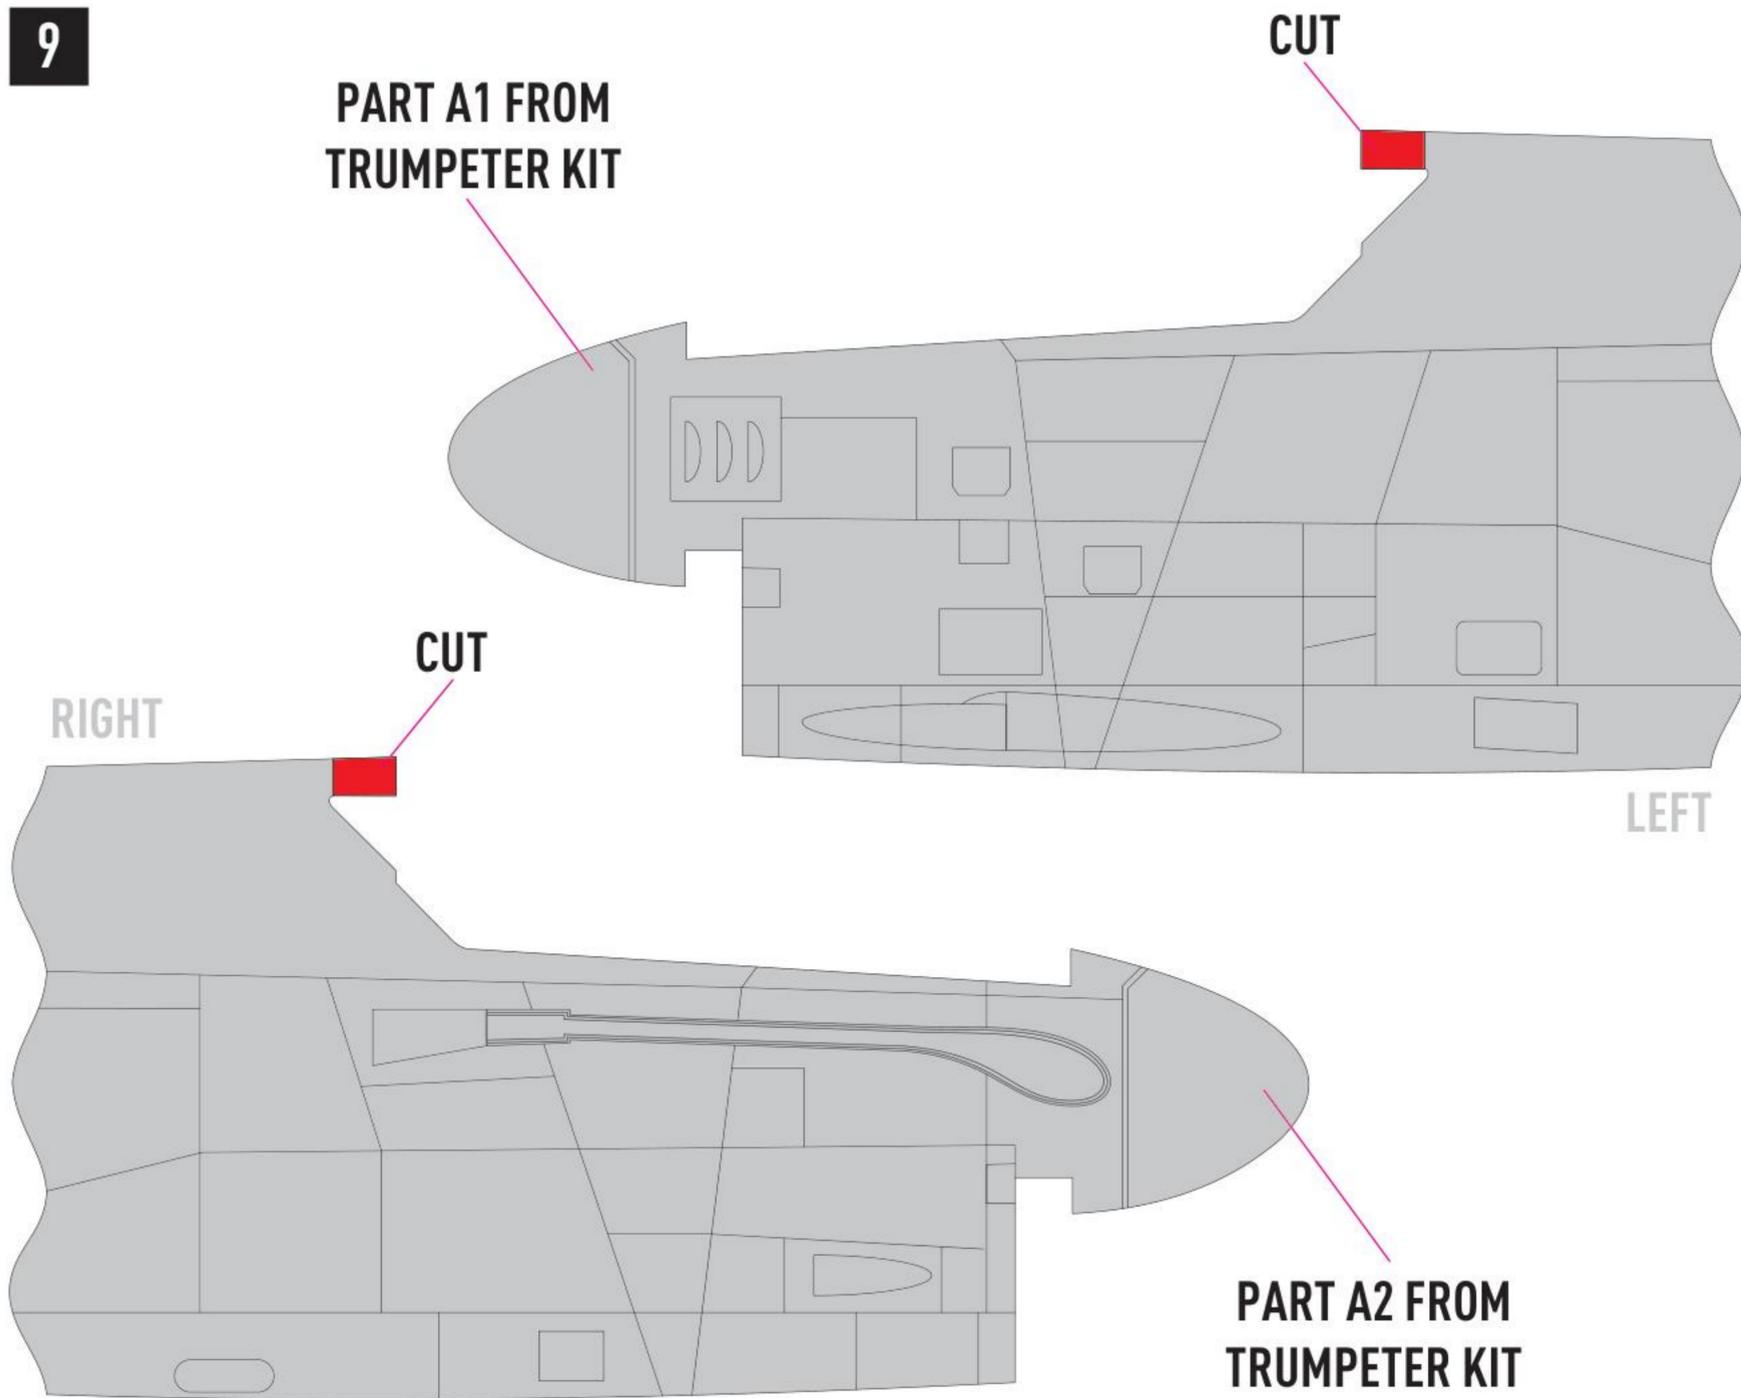


10

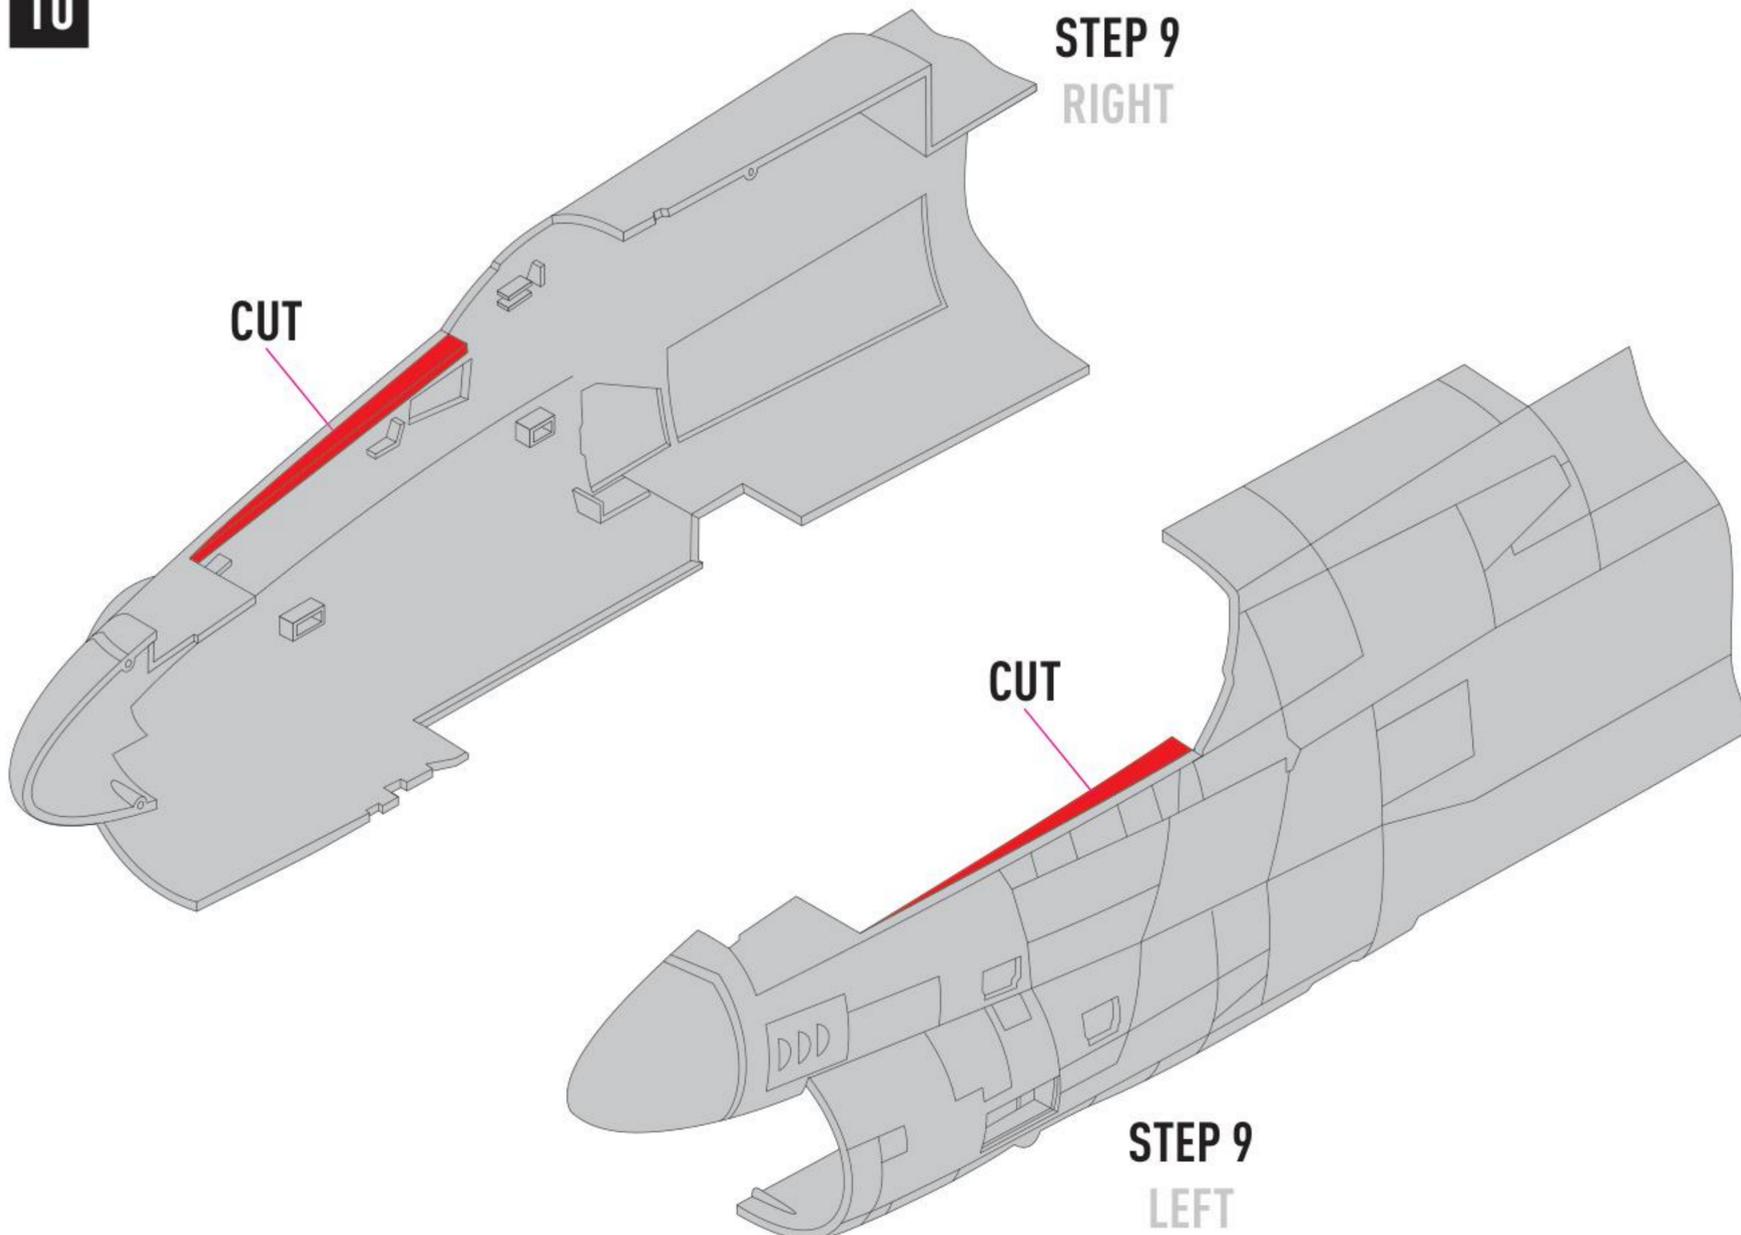


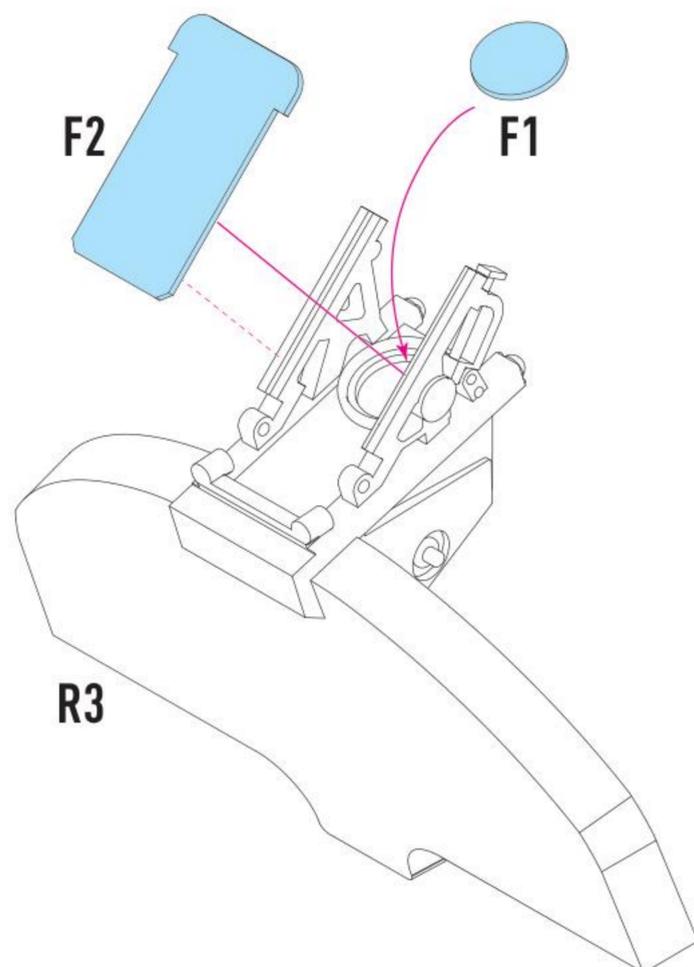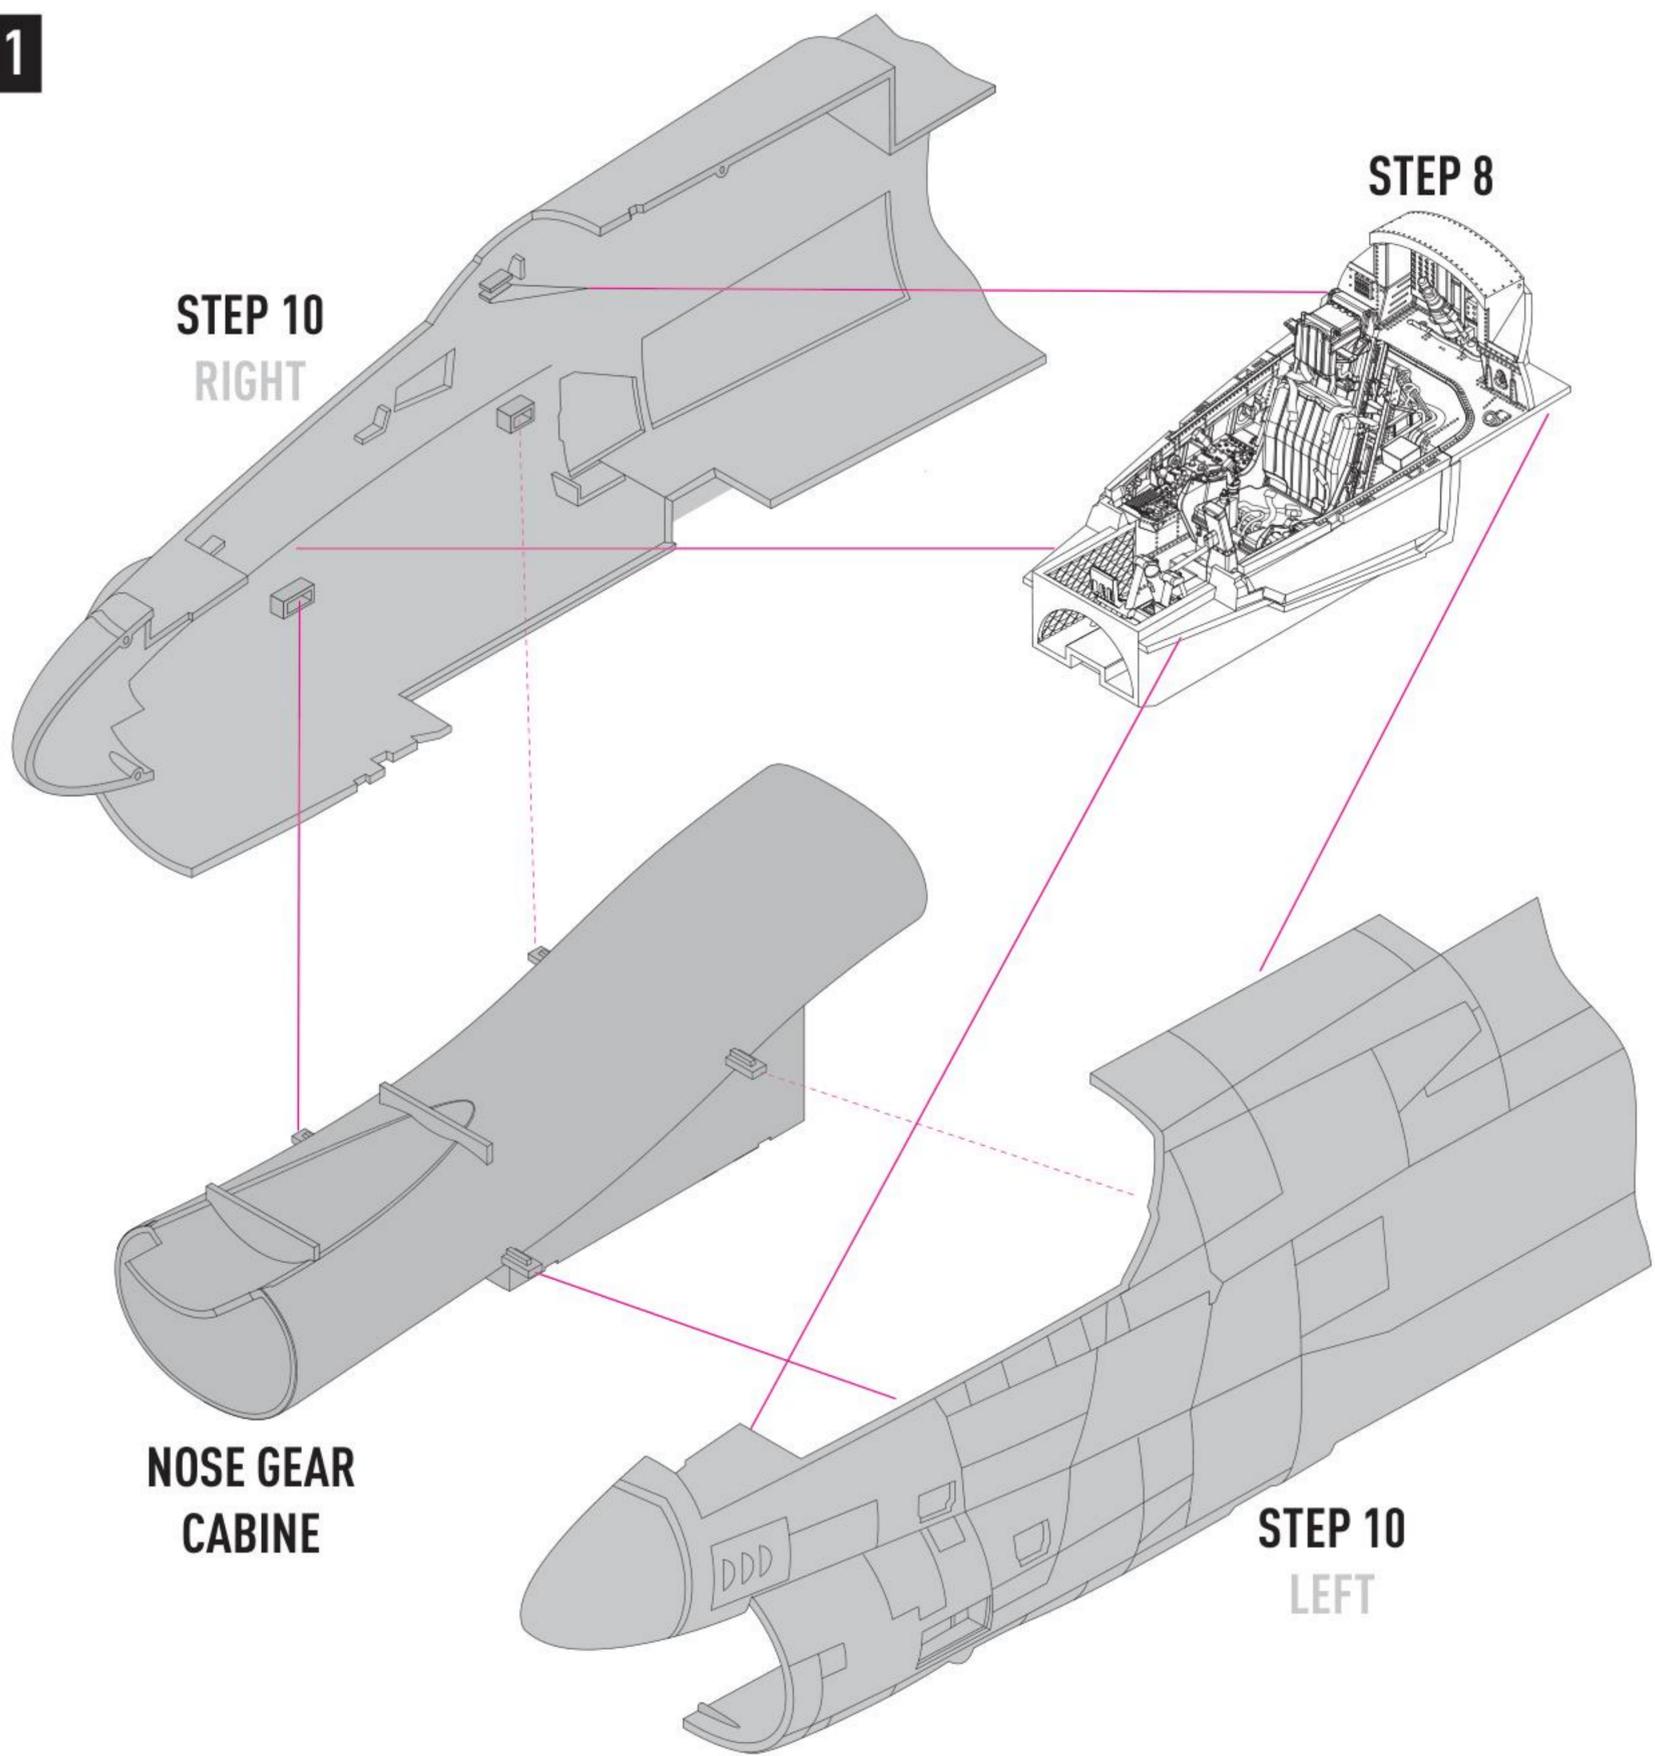


**13**

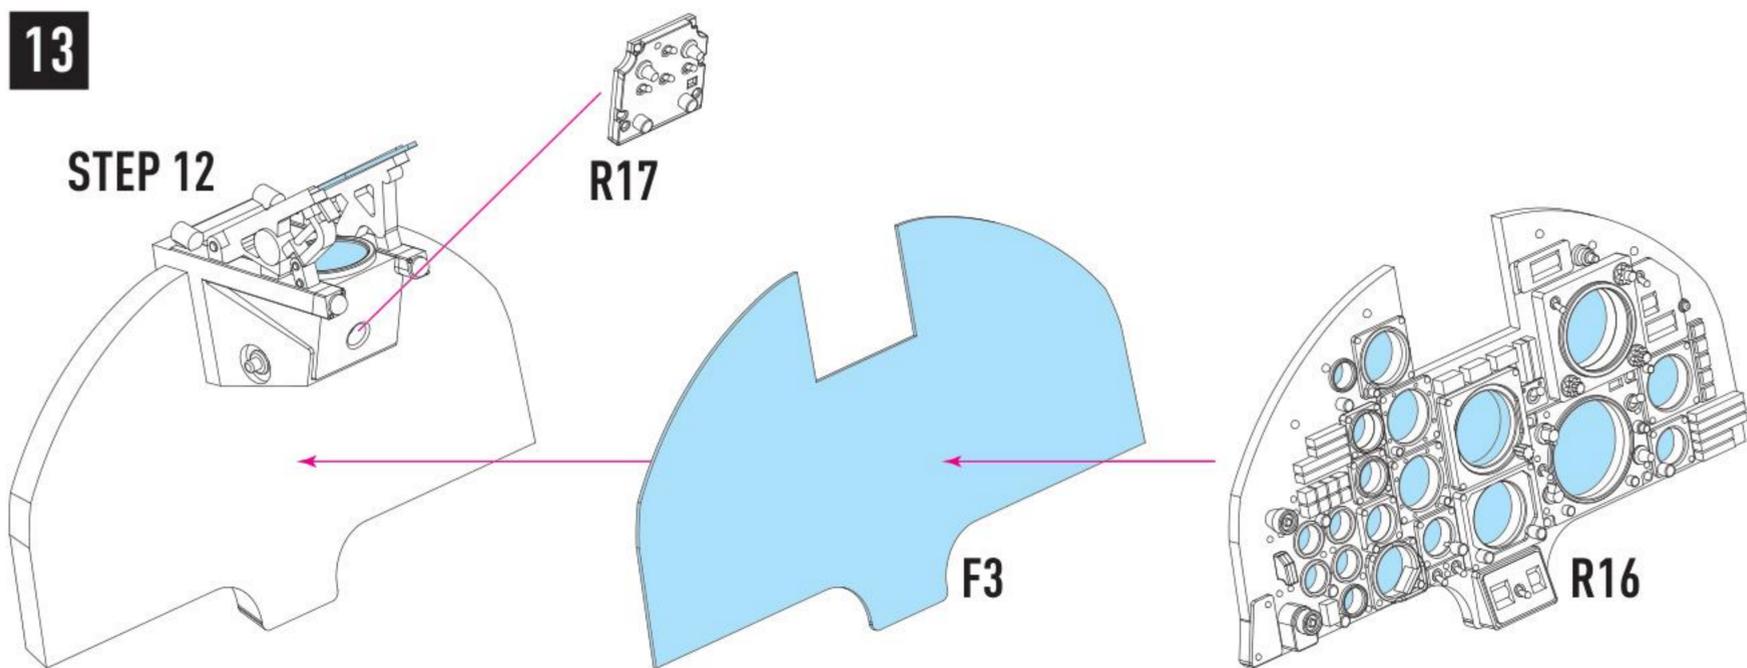


**14**

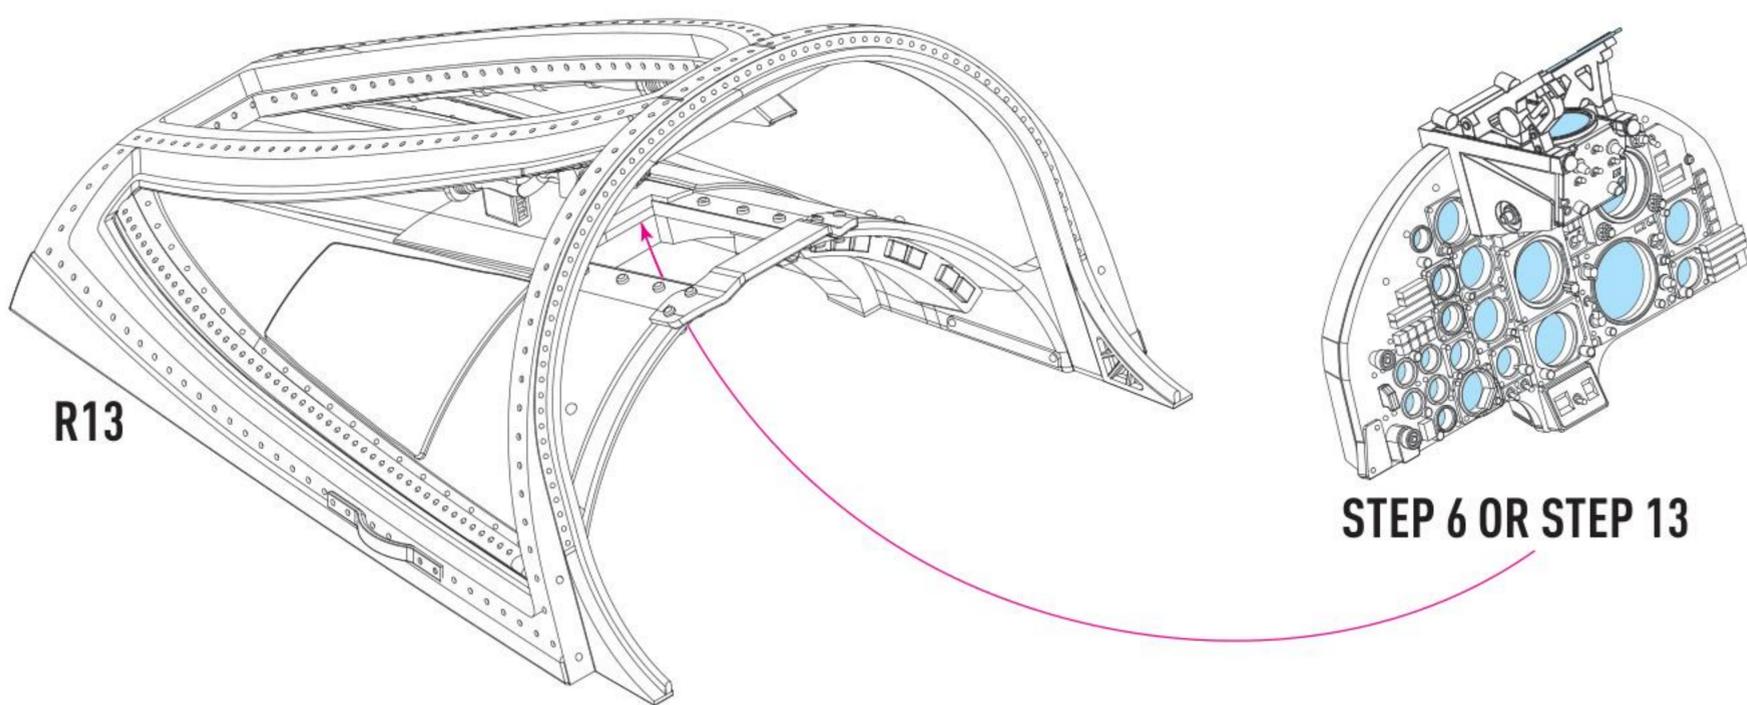



**15**

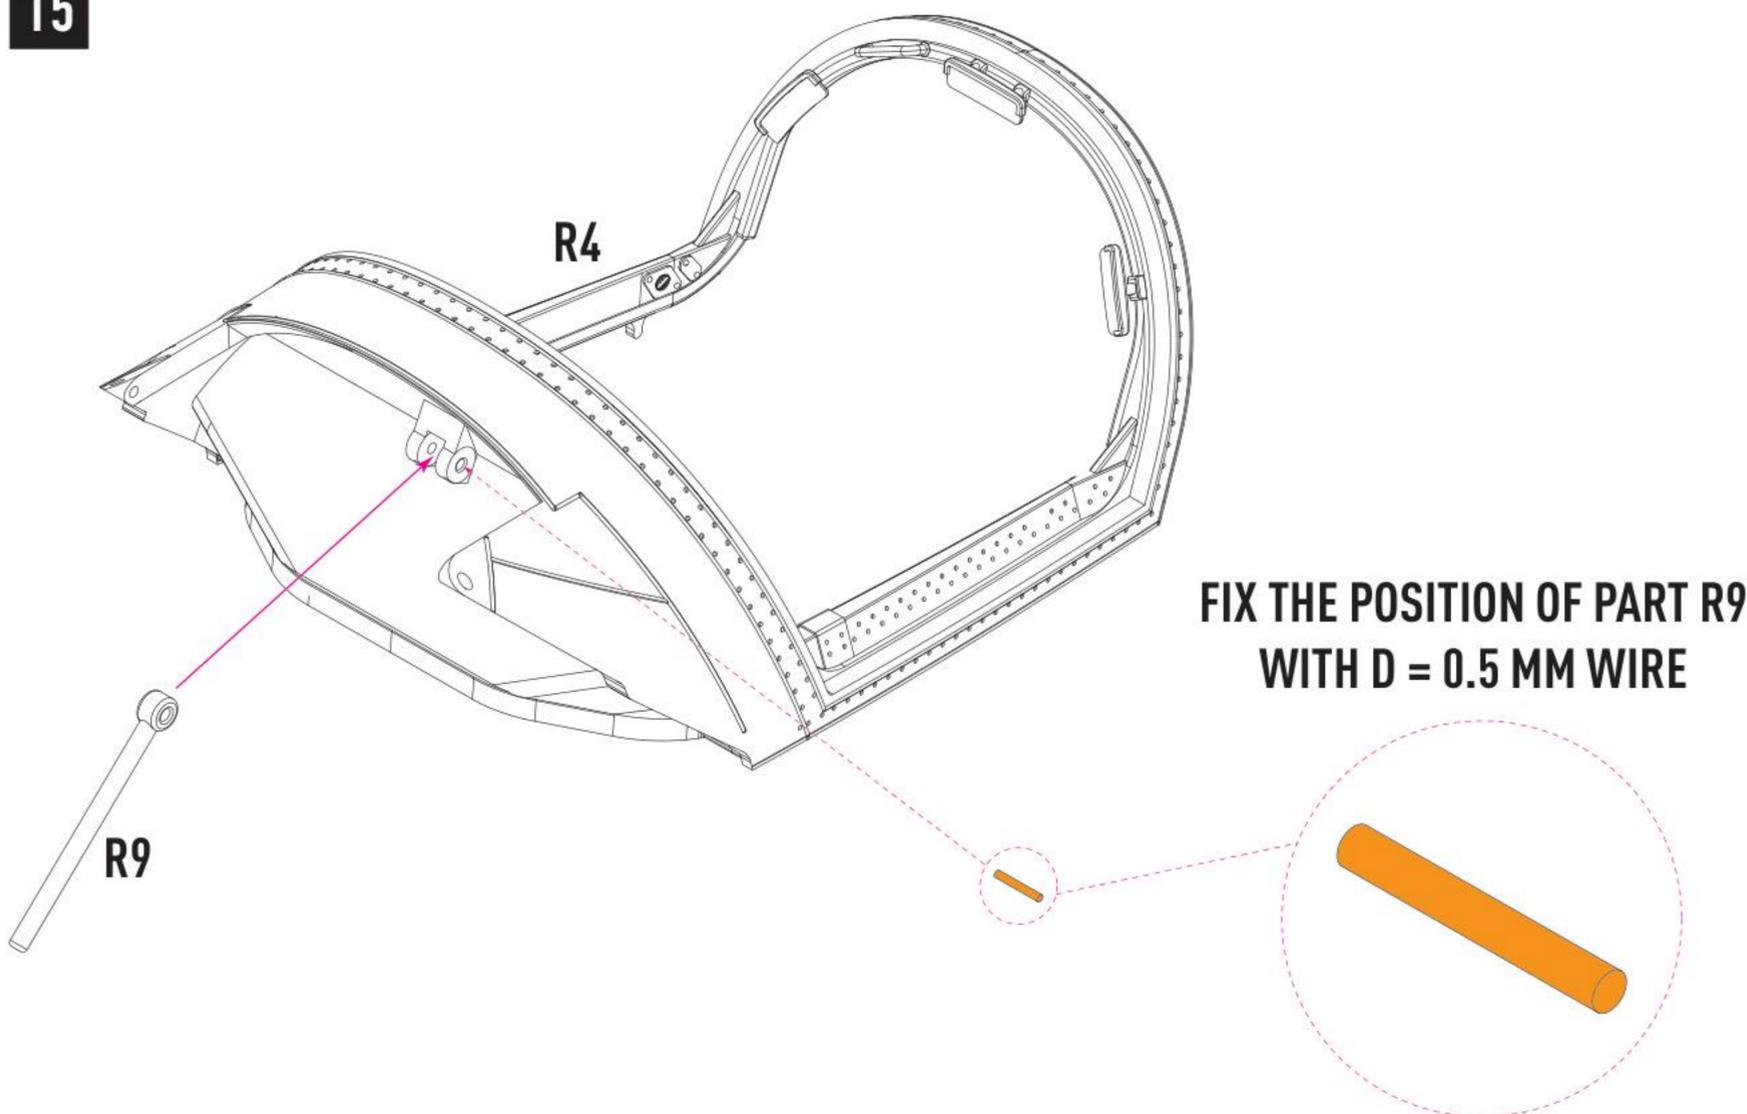


STEP 15

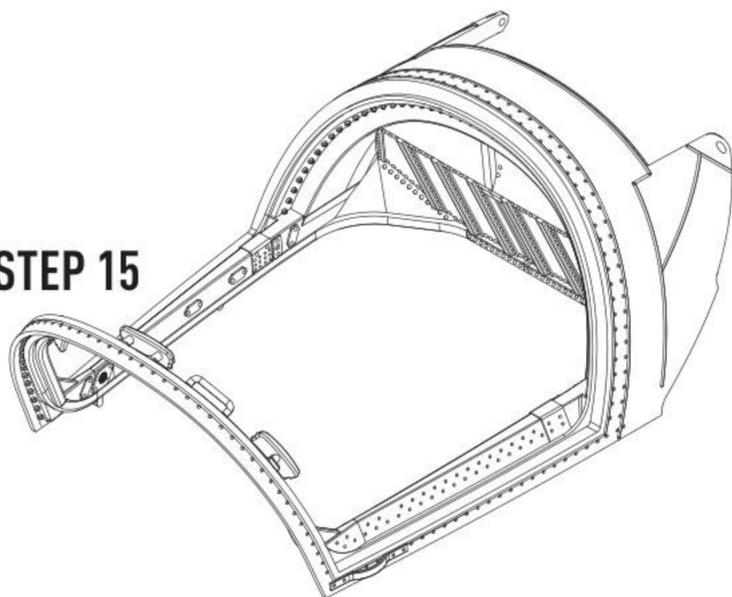

STEP 14

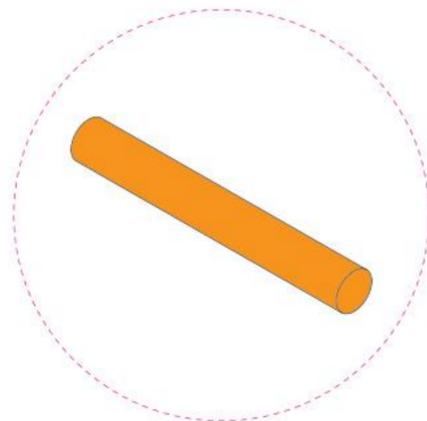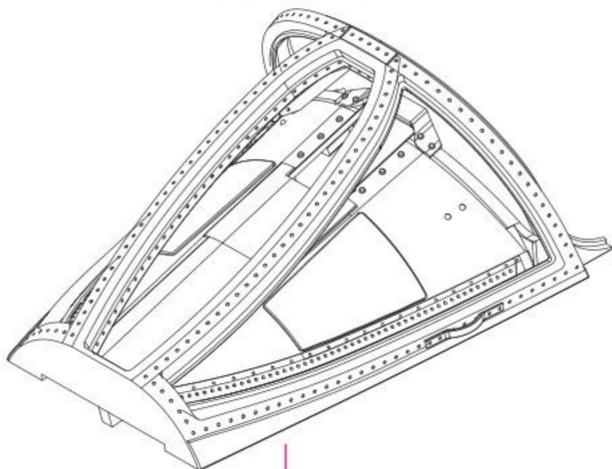


USE FOR FIX POSITION  
D = 0.5 MM WIRE

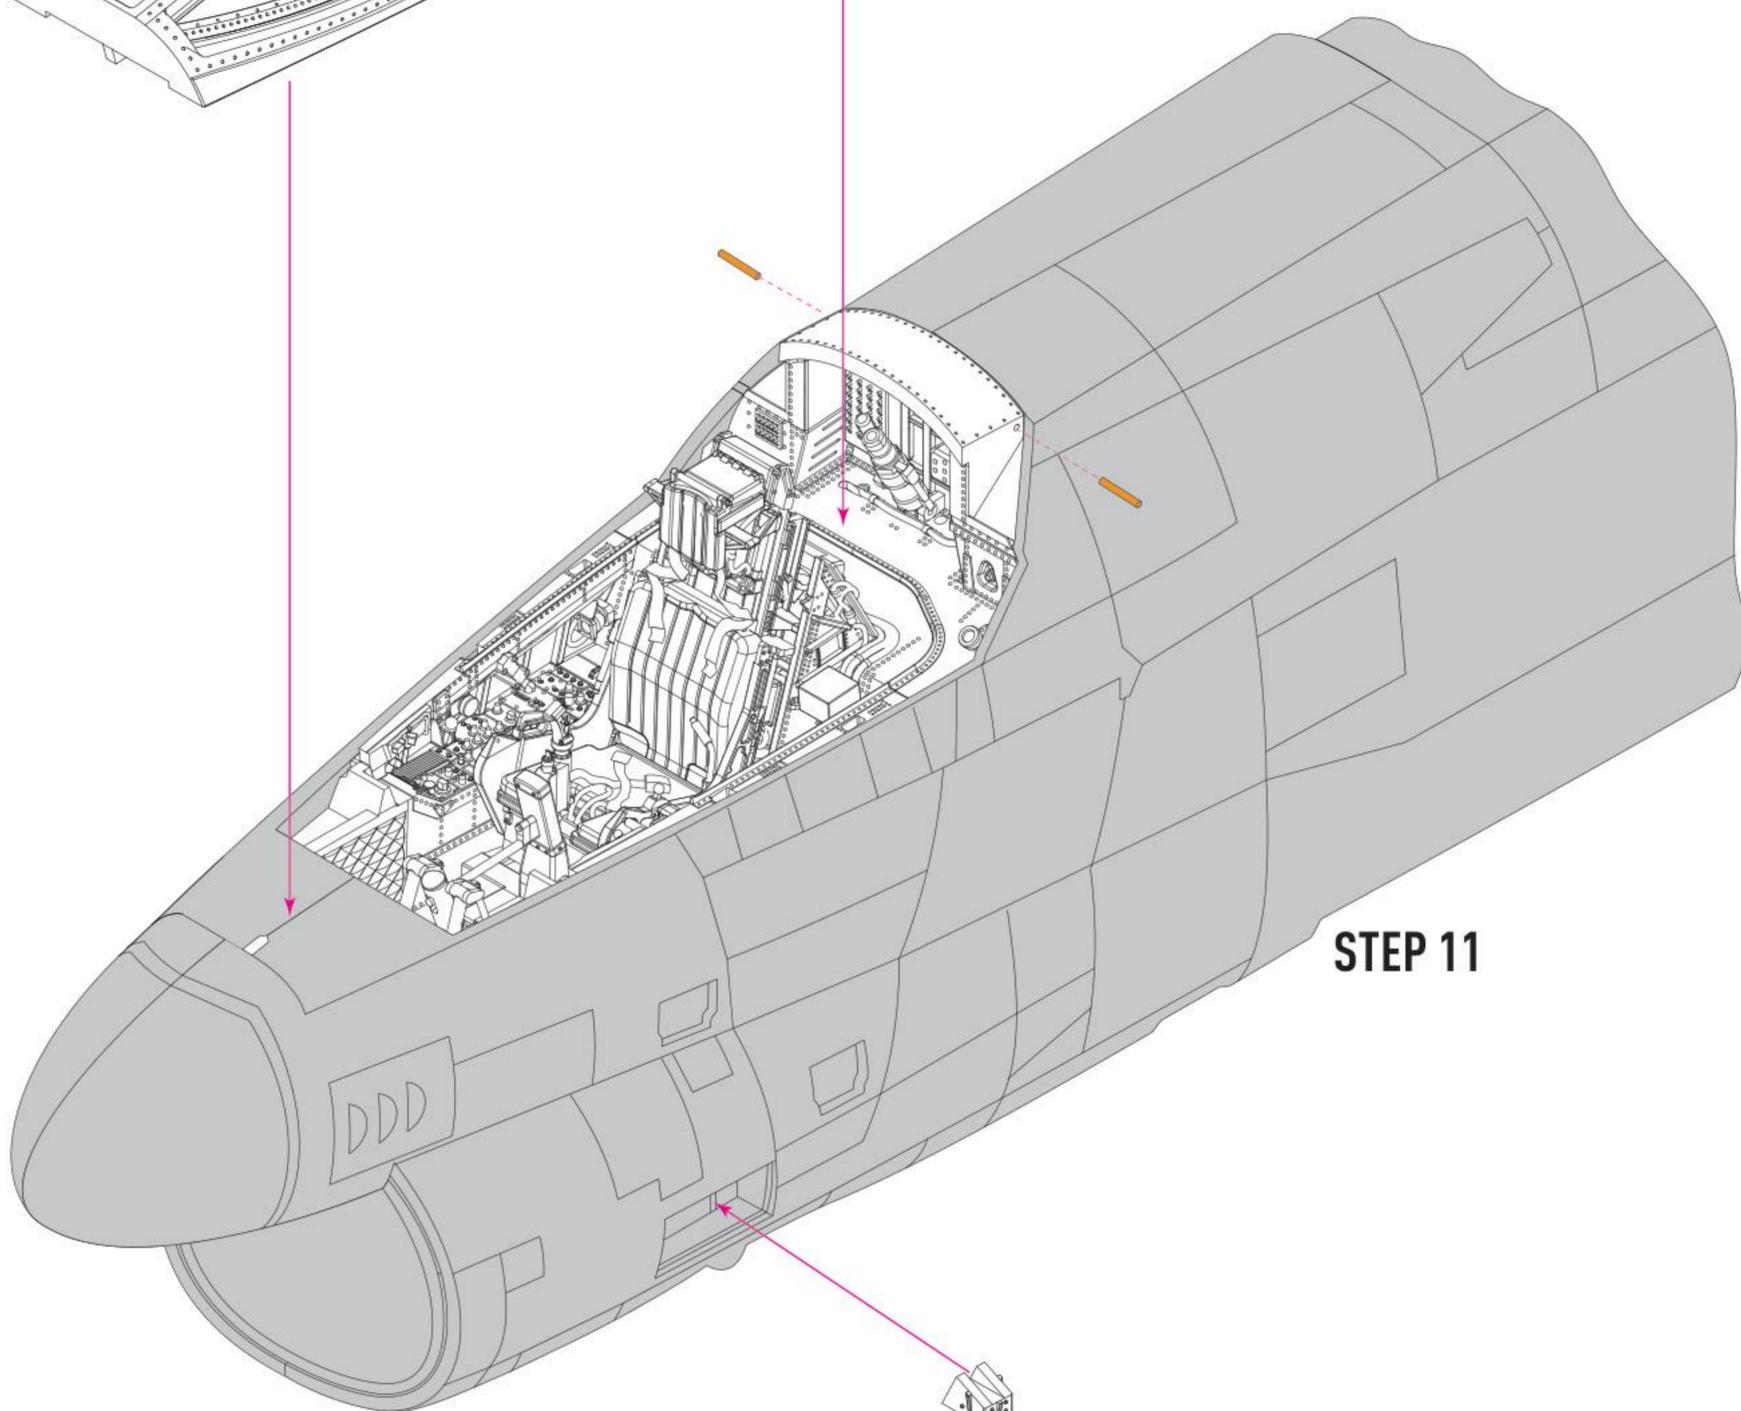


STEP 11

R12




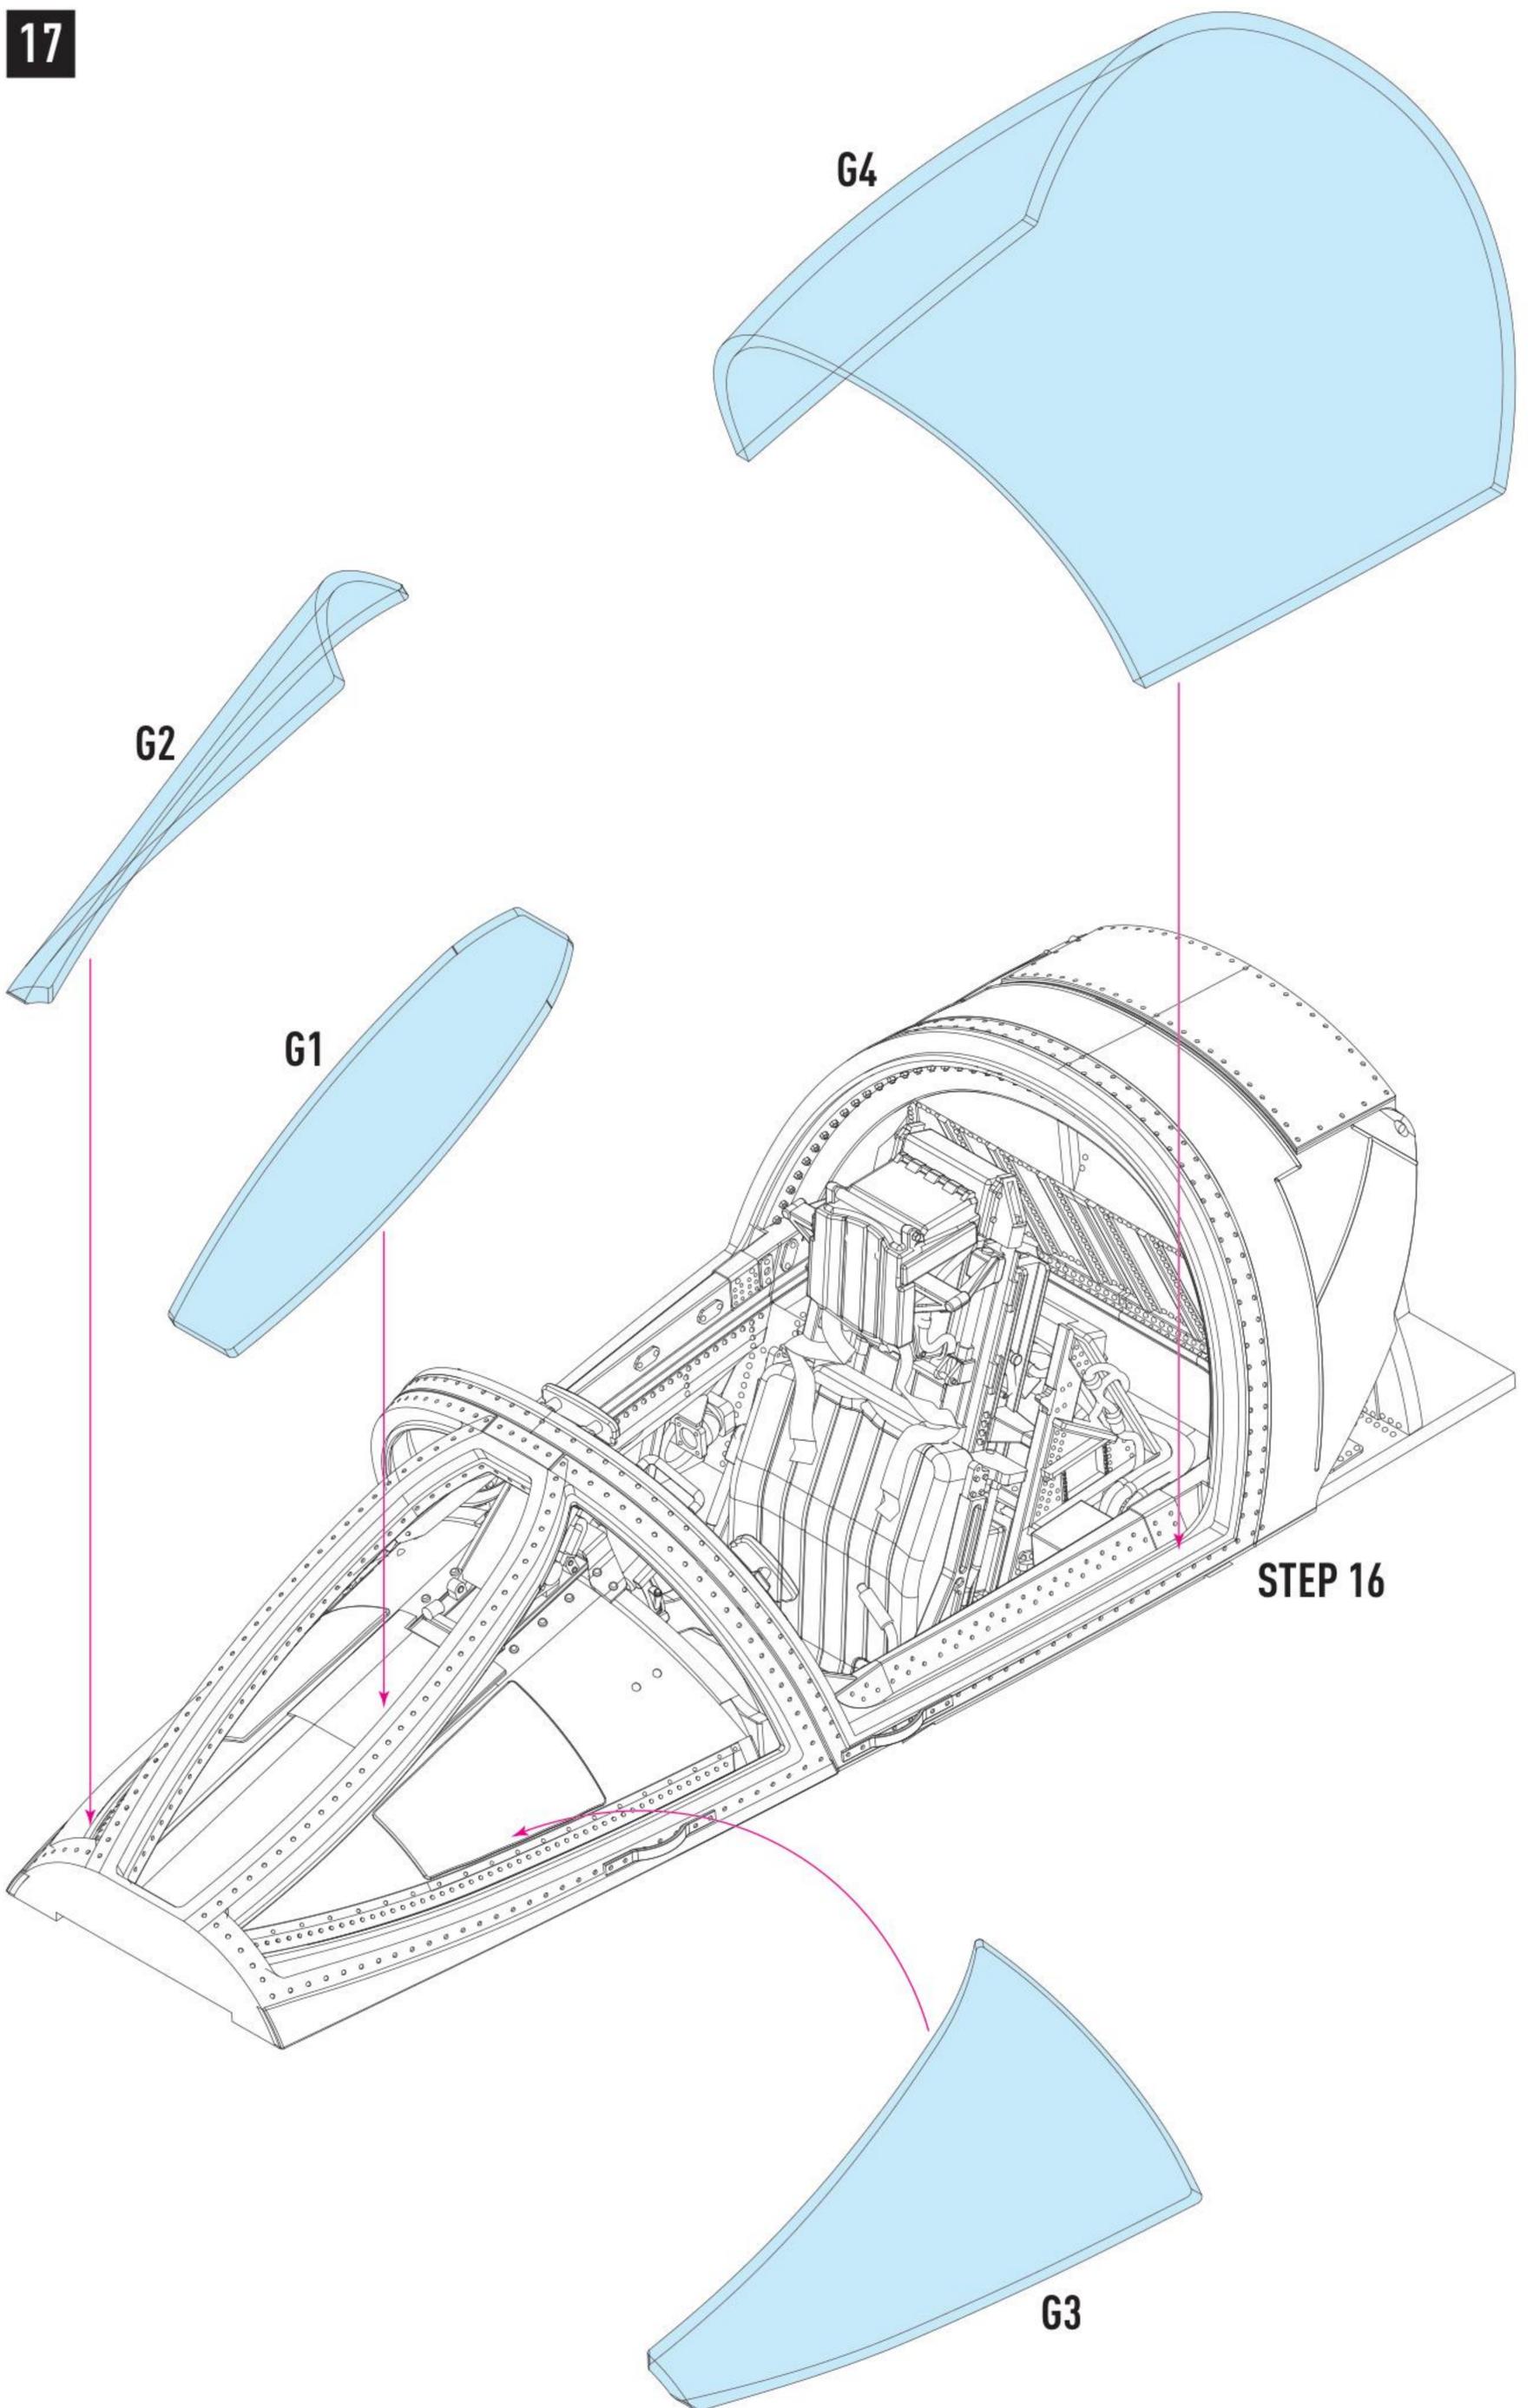


**18 FOR CLOSE CANOPY**

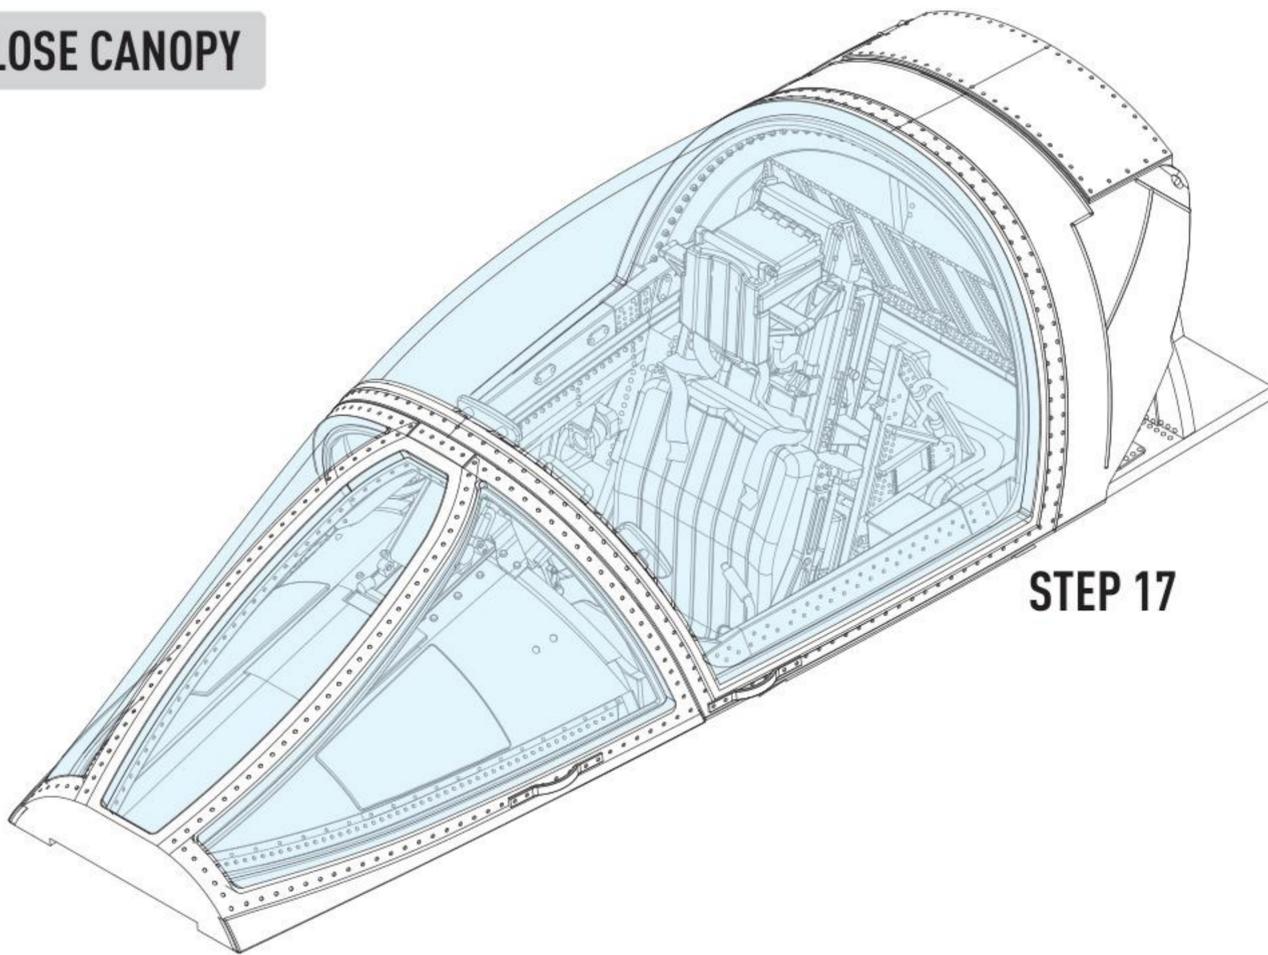

**19 FOR OPEN CANOPY**

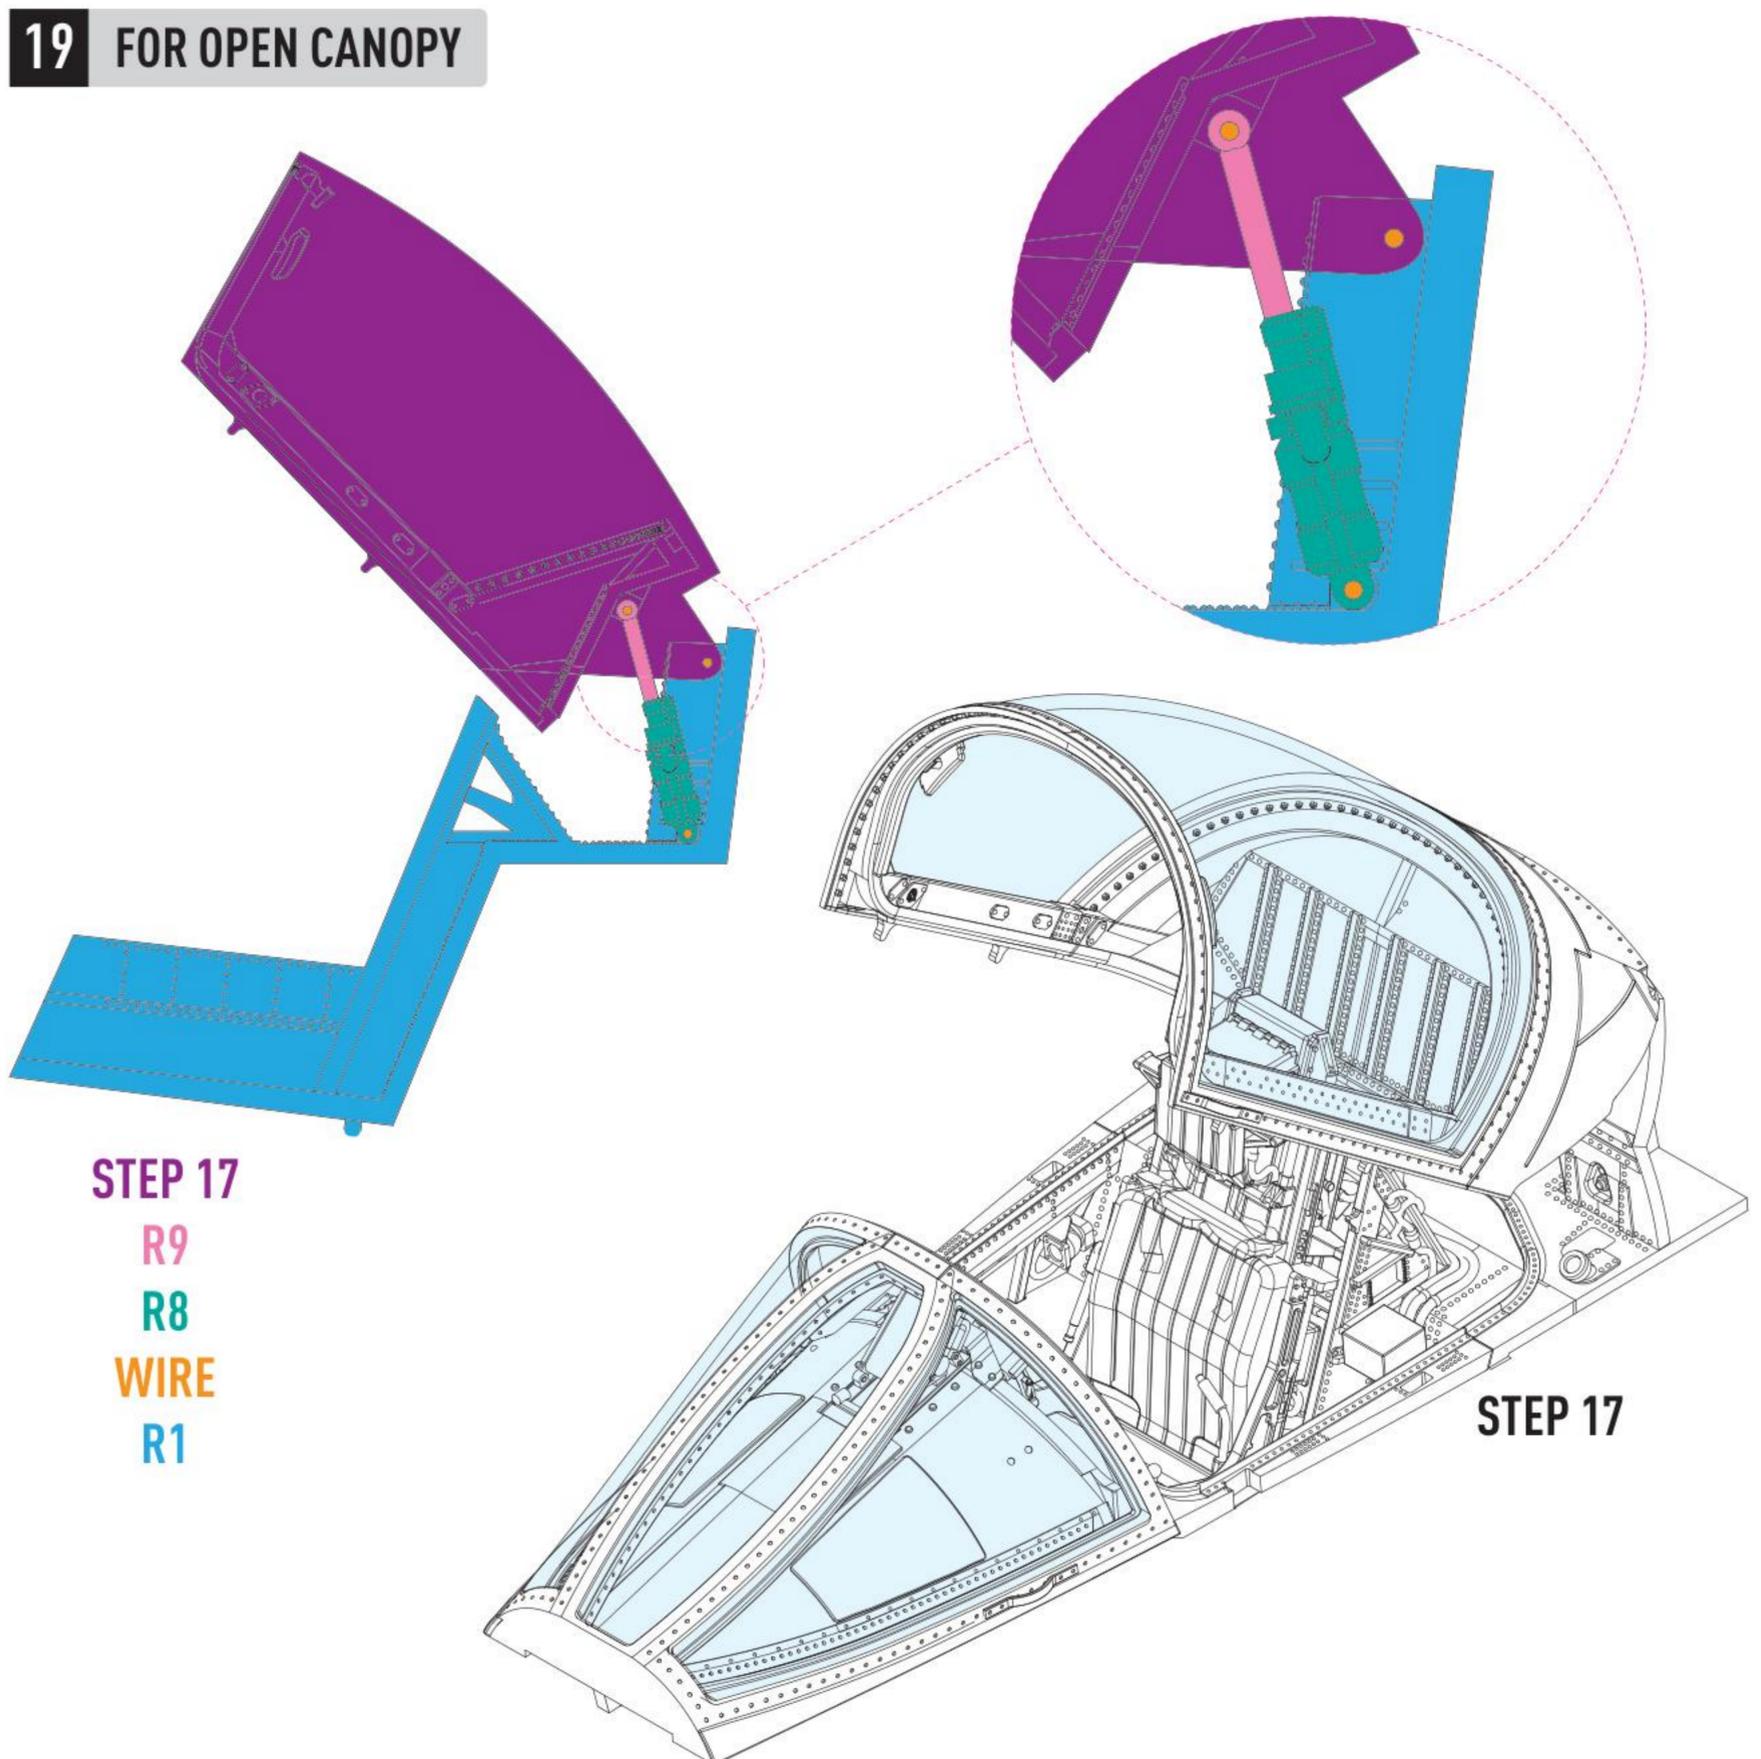


# DECAL INSTRUCTION

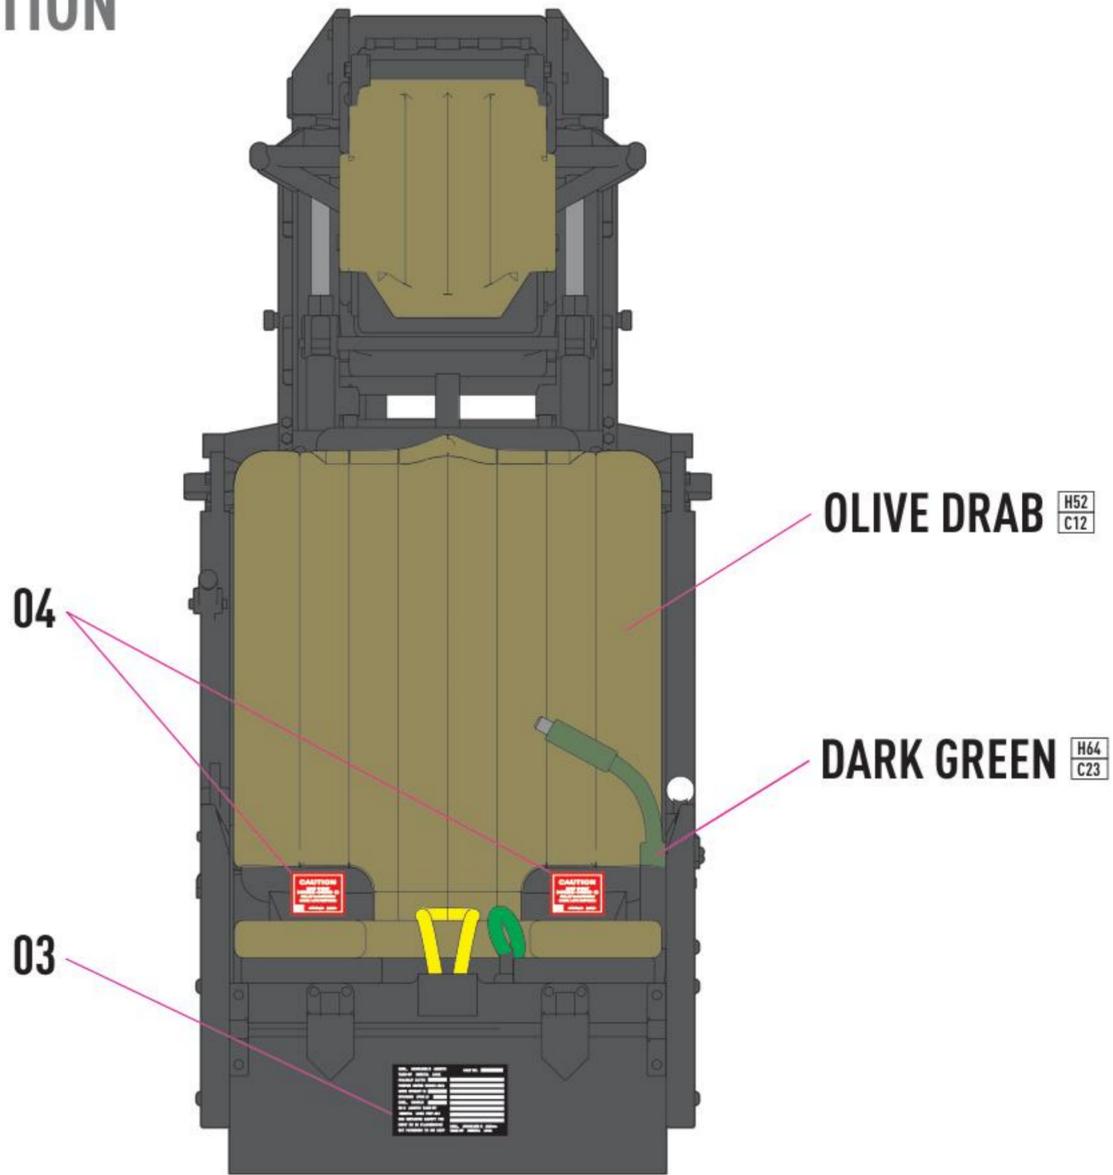


FRONT

DECAL 5 USE FOR CANOPY

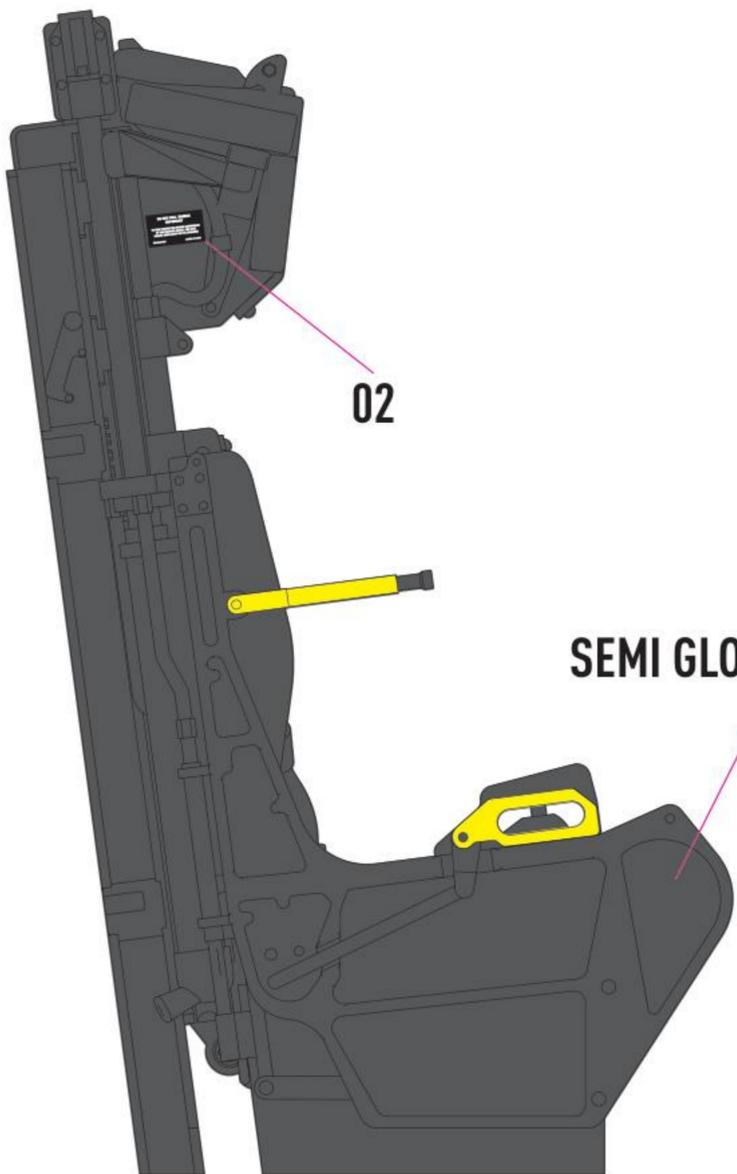

RIGHT

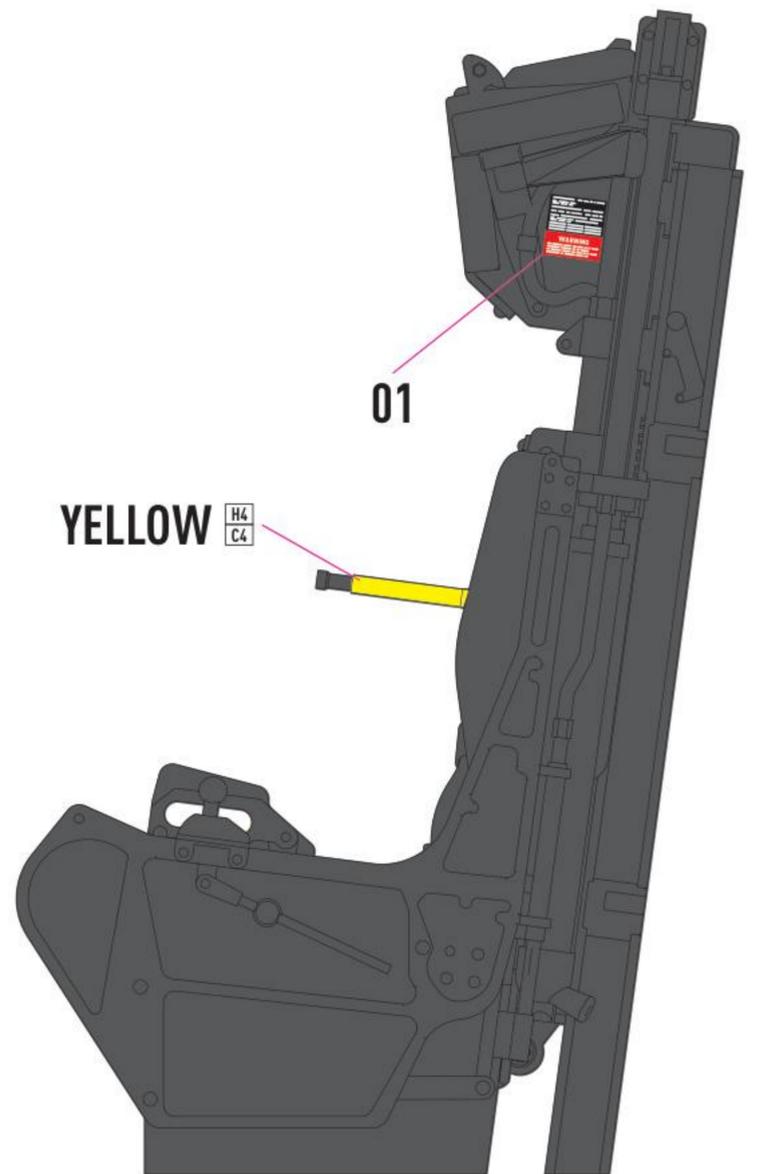

LEFT

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H52	C12
YELLOW	H4	C4

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
DARK GREEN	H64	C23
SEMI GLOSS BLACK		C92

general Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua) / claim resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)

**RESKIT-MODELS.COM**

[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit\\_official](https://www.instagram.com/reskit_official)

[youtube.com/@reskit-usmd](https://www.youtube.com/@reskit-usmd)