

YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE


RESKIT-MODELS.COM

General Issues: info@reskit.com.ua


Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua


BEFORE USING RESKIT NOZZLES, CUT OFF THE MARKED AREAS FROM
LOWER FUSELAGE PART AND J41, J42 SIDE PANELS IN REVELL KIT

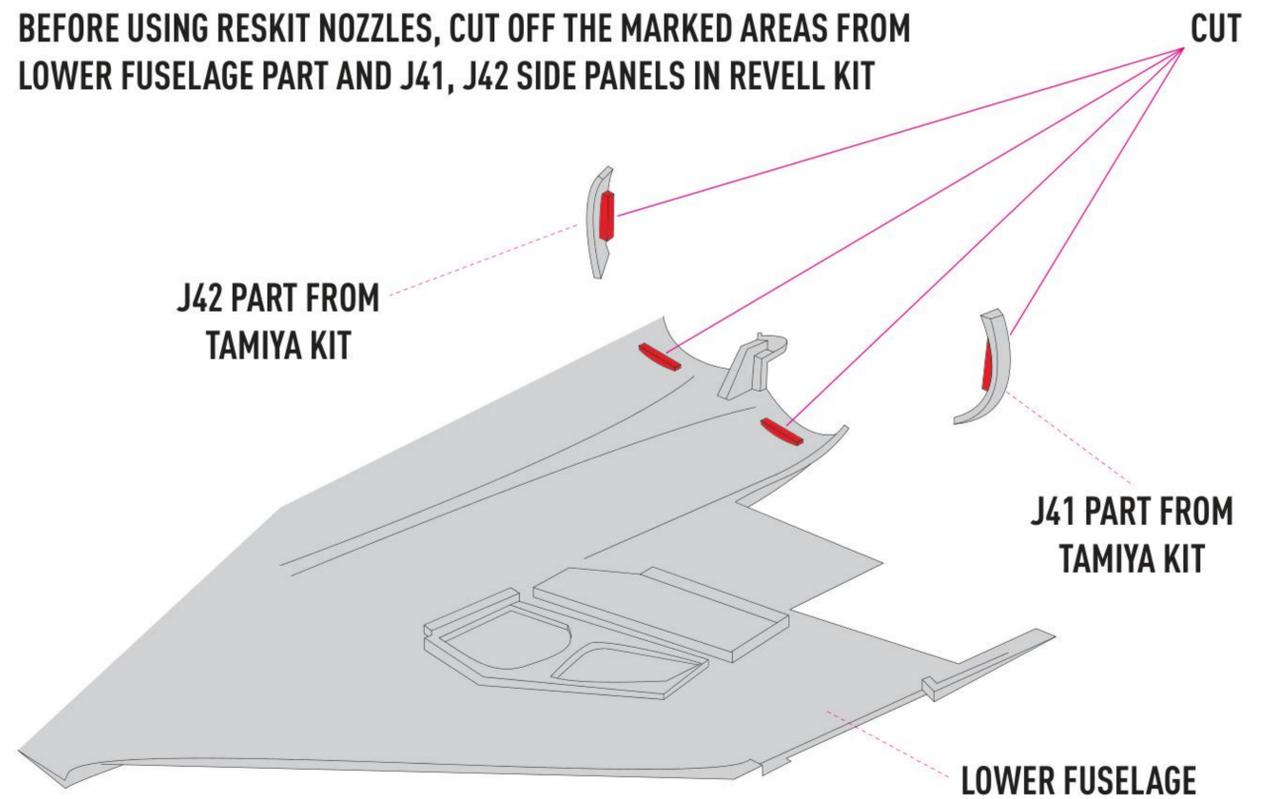


DETAILS AFTER REMOVAL FROM SUPPORTS

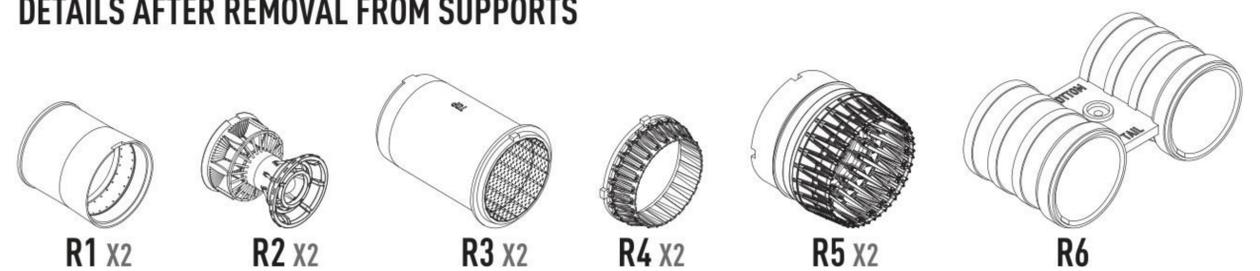


1 X2

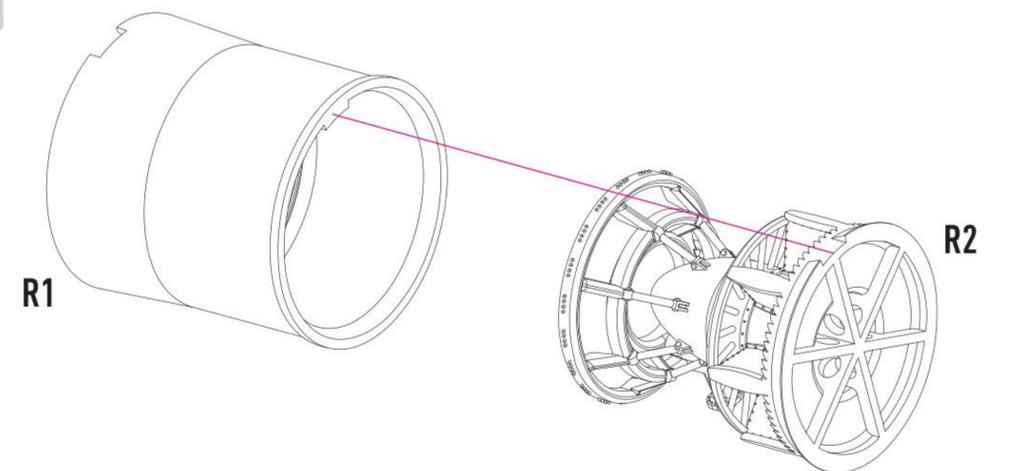


2 X2

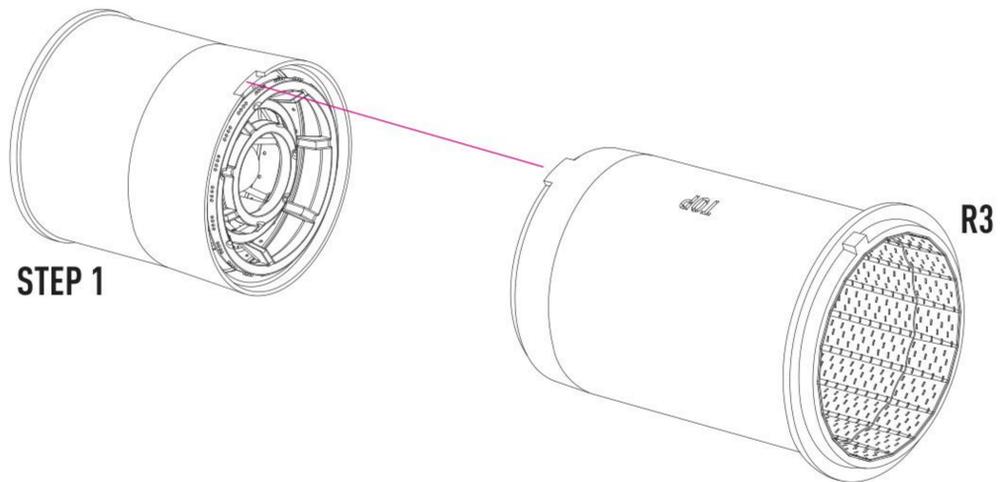


3 X2

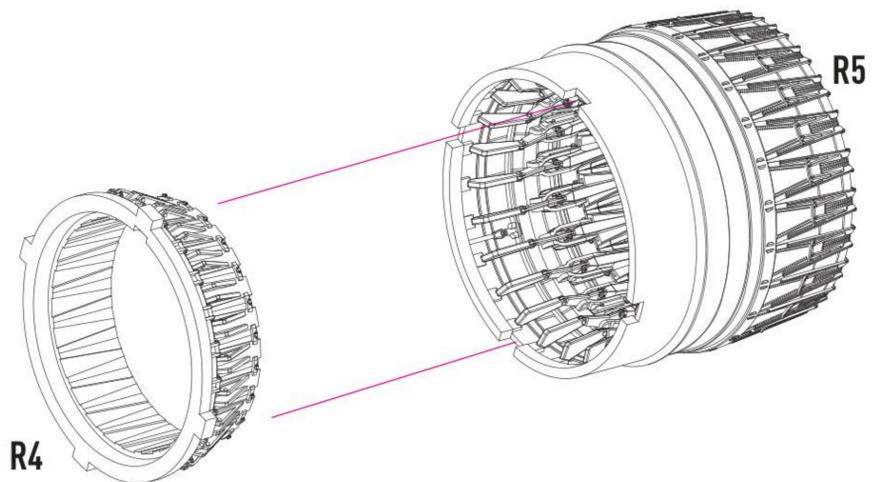

4 X2

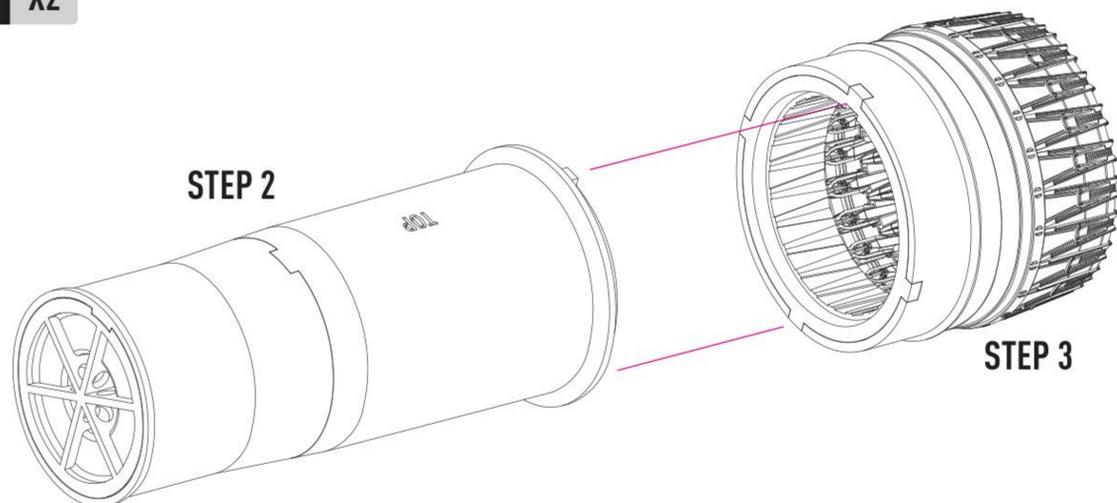


5

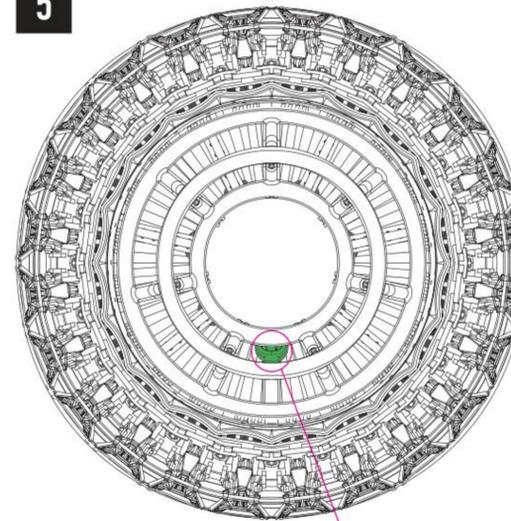

NOTE CORRECT POSITION OF R6
PART INSIDE THE FUSELAGE

AIRCRAFT TOP

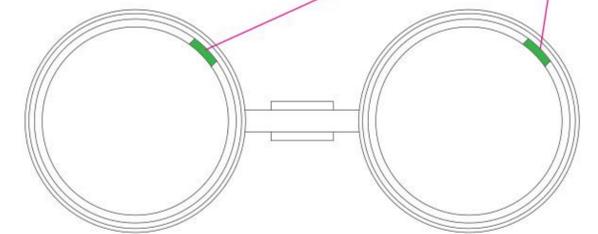


AIRCRAFT
BOTTOM

FOR PROPER NOZZLE ORIENTATION USE THIS ELEMENT
IT HAS TO BE POSITIONED VERTICALLY DOWN

6

USE R6 PART INSTEAD TAMIYA PLASTIC KIT PARTS C1, C2, C3
(ENGINE AFTERBURN CHAMBER) ON STEP 7 TAMIYA INSTRUCTION

INSTALL THE NOZZLES AFTER
FUSELAGE COMPETION

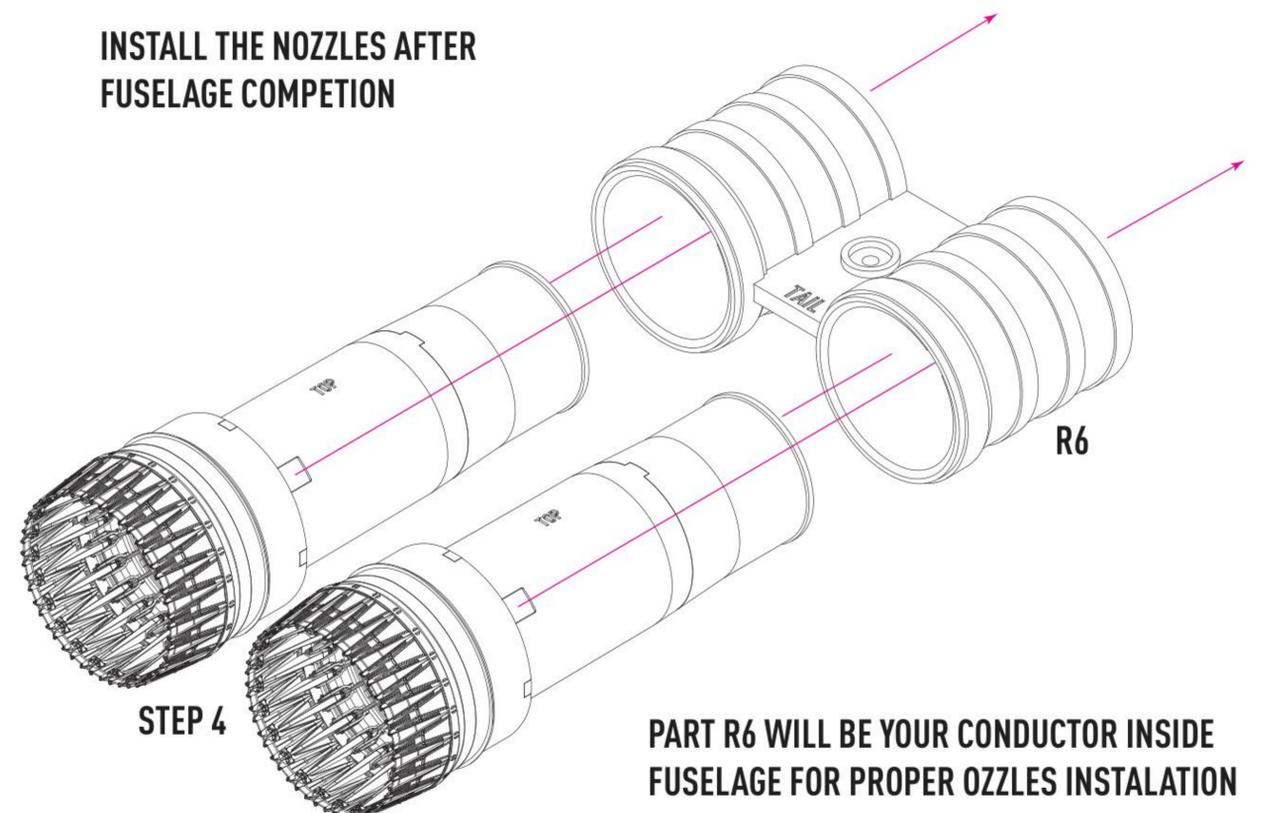

PART R6 WILL BE YOUR CONDUCTOR INSIDE
FUSELAGE FOR PROPER OZZLES INSTALATION