


YOU CAN FIND INSTRUCTIONS  
IN PDF FORMAT ON THE WEBSITE


**RESKIT-MODELS.COM**

General Issues: [info@reskit.com.ua](mailto:info@reskit.com.ua)  
Wholesales: [sales@reskit.com.ua](mailto:sales@reskit.com.ua)  
Claim Resolution: [claims@reskit.com.ua](mailto:claims@reskit.com.ua)


BEFORE USING RESKIT NOZZLES, CUT OFF THE MARKED AREAS FROM  
LOWER FUSELAGE PART AND J41, J42 SIDE PANELS IN REVELL KIT

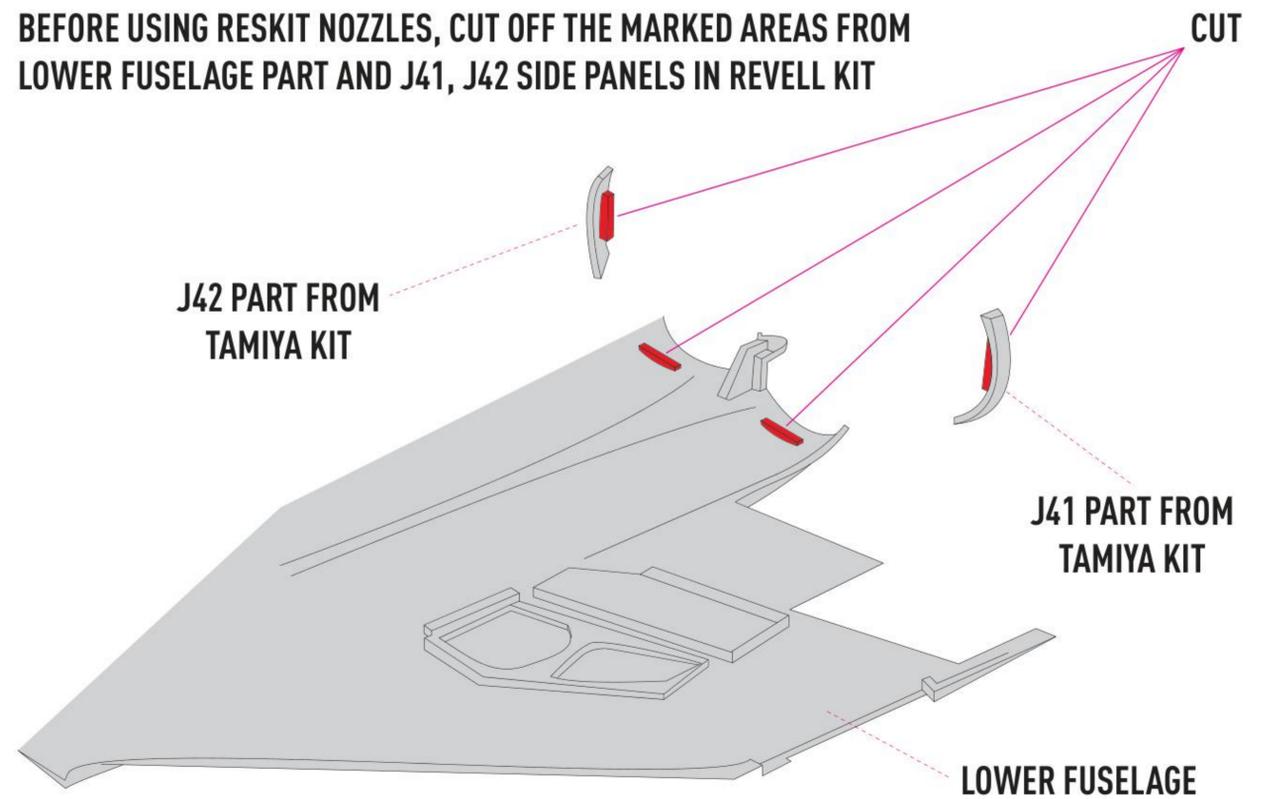


DETAILS AFTER REMOVAL FROM SUPPORTS

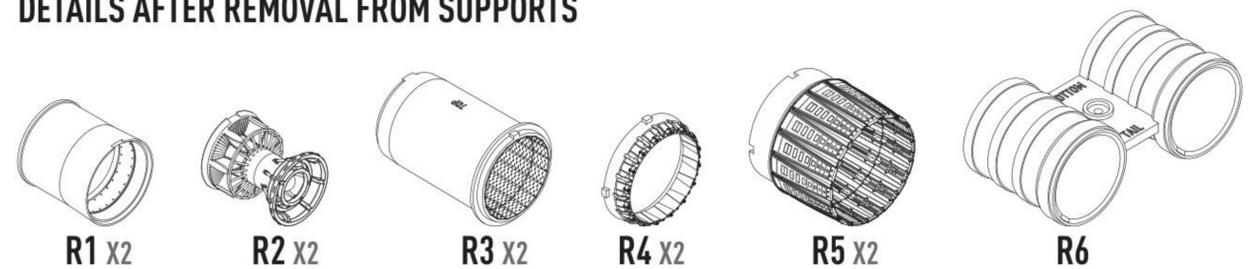


**1** X2

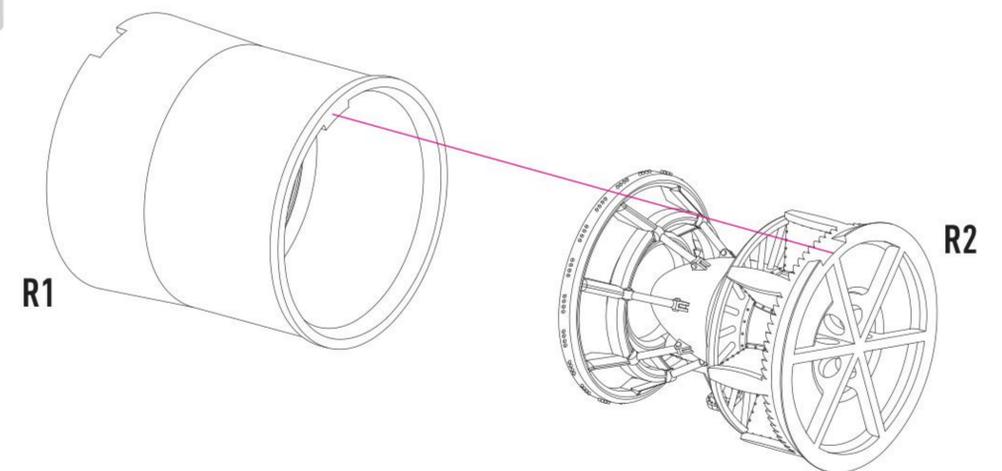


**2** X2

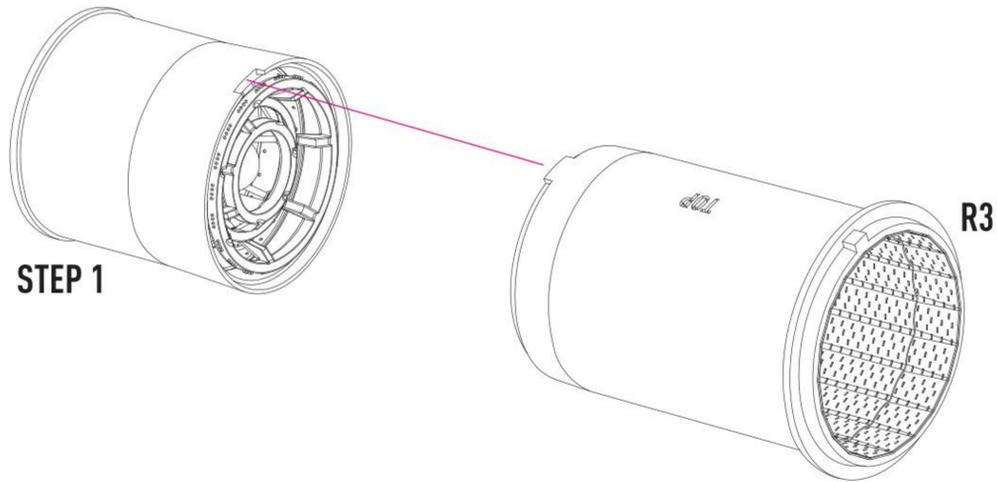



**3** X2

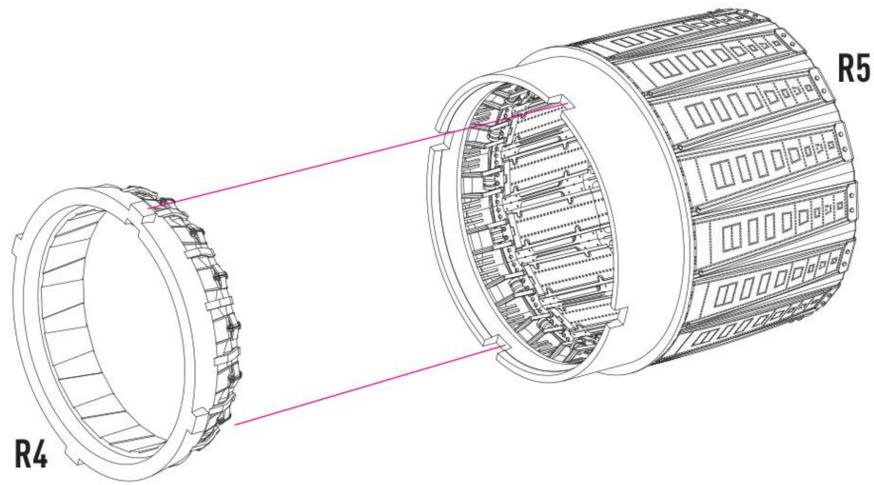

**4** X2

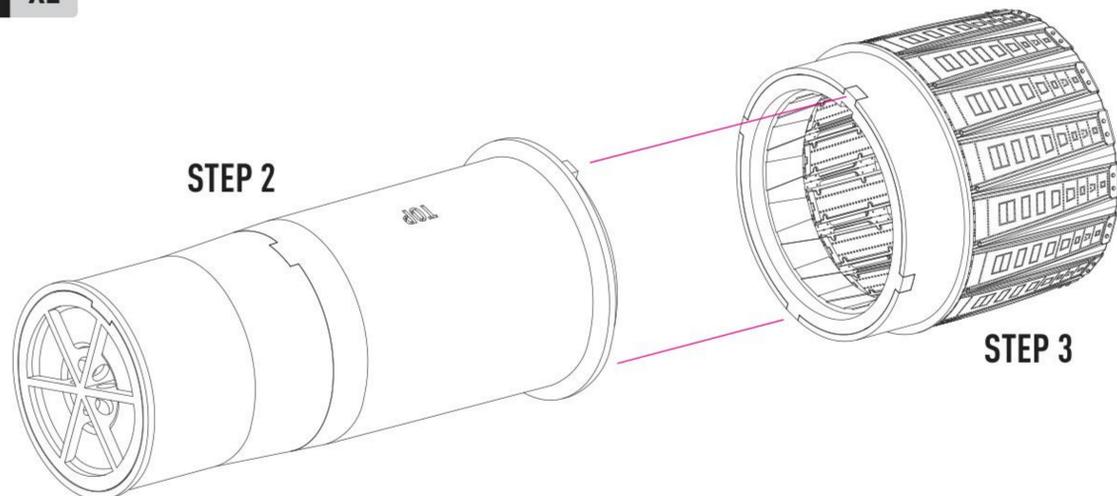


**5**

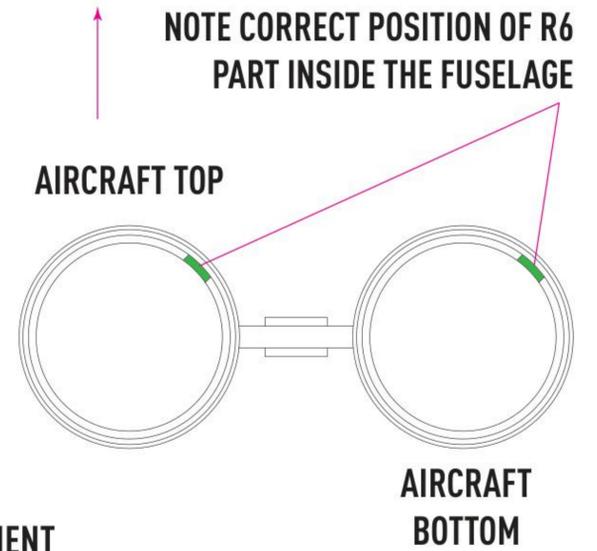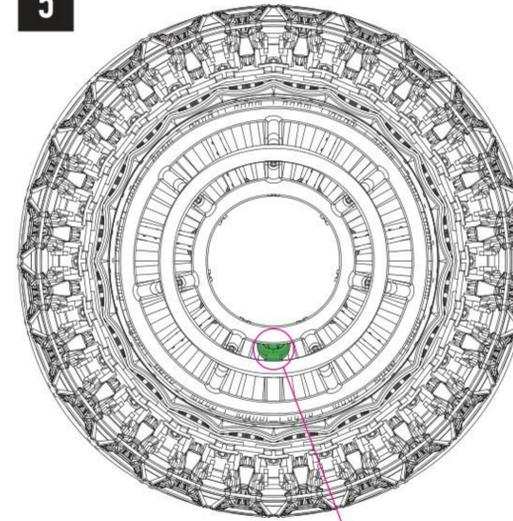

**FOR PROPER NOZZLE ORIENTATION USE THIS ELEMENT IT HAS TO BE POSITIONED VERTICALLY DOWN**

**6** USE R6 PART INSTEAD TAMIYA PLASTIC KIT PARTS C1, C2, C3 (ENGINE AFTERBURN CHAMBER) ON STEP 7 TAMIYA INSTRUCTION

**INSTALL THE NOZZLES AFTER FUSELAGE COMPETION**

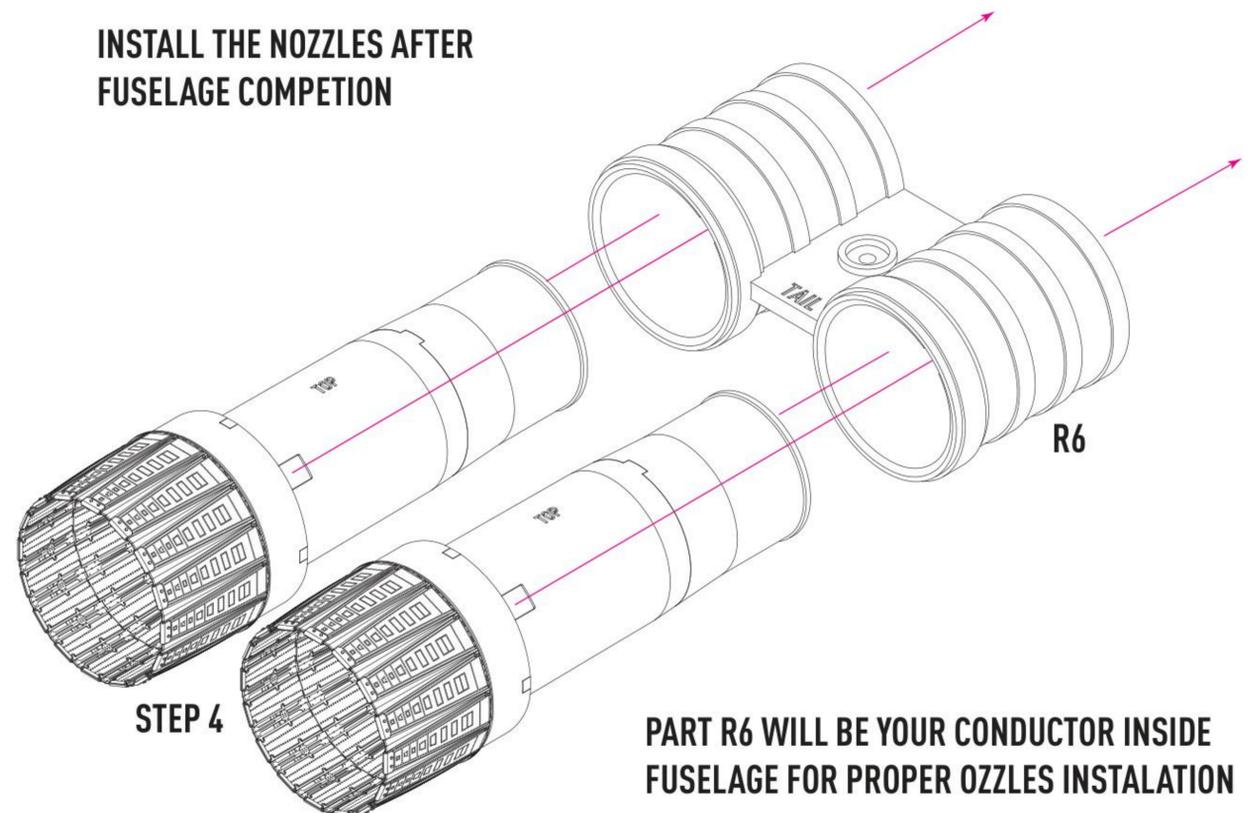

**PART R6 WILL BE YOUR CONDUCTOR INSIDE FUSELAGE FOR PROPER NOZZLES INSTALATION**