




### DETAILS AFTER REMOVAL FROM SUPPORTS

 USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

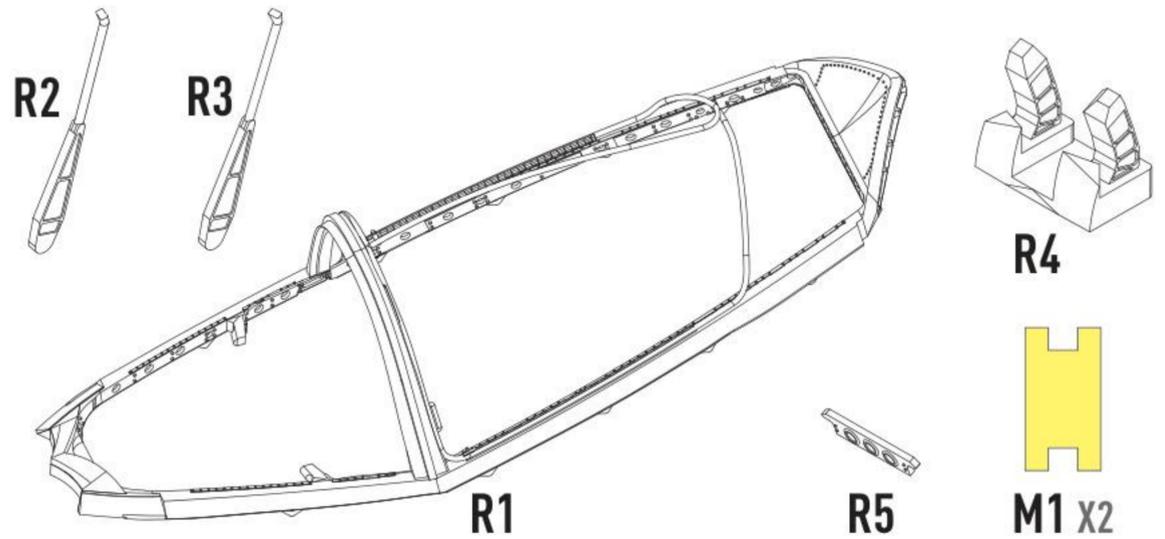


**1** IN ITALERI KIT INSTRUCTIONS ON PAGE 6, STEP 4, REPLACE PARTS 37G WITH PART R4

**2** BEFORE STARTING STEP 42 ON PAGE 37, YOU NEED TO INSTALL PART R5 WITH PART R4

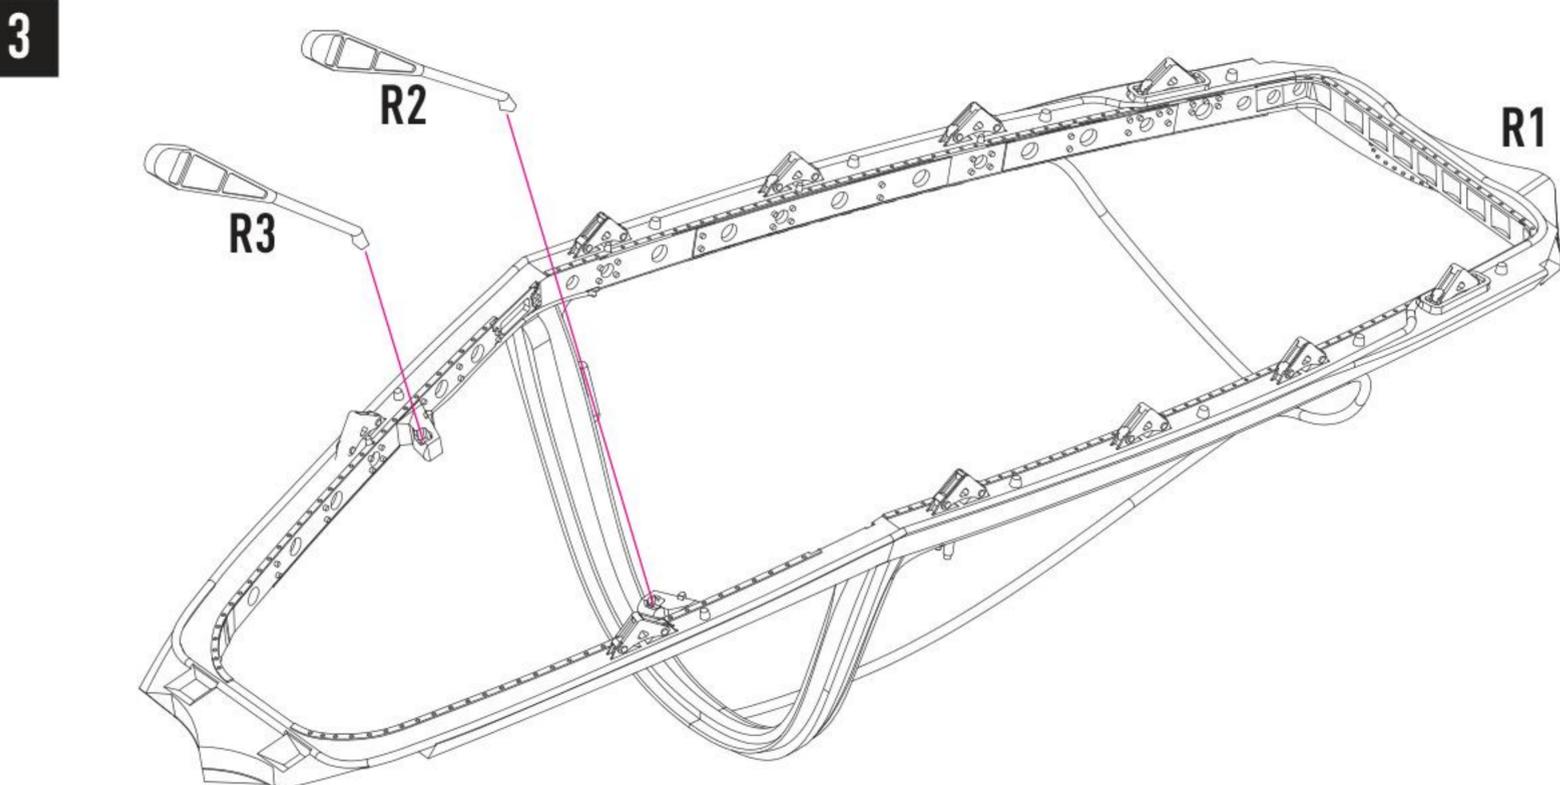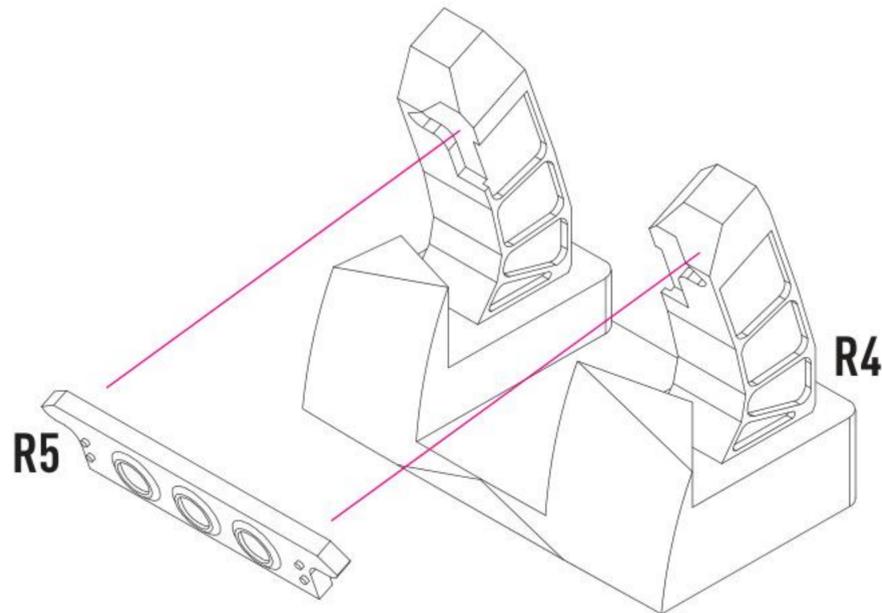


**4**

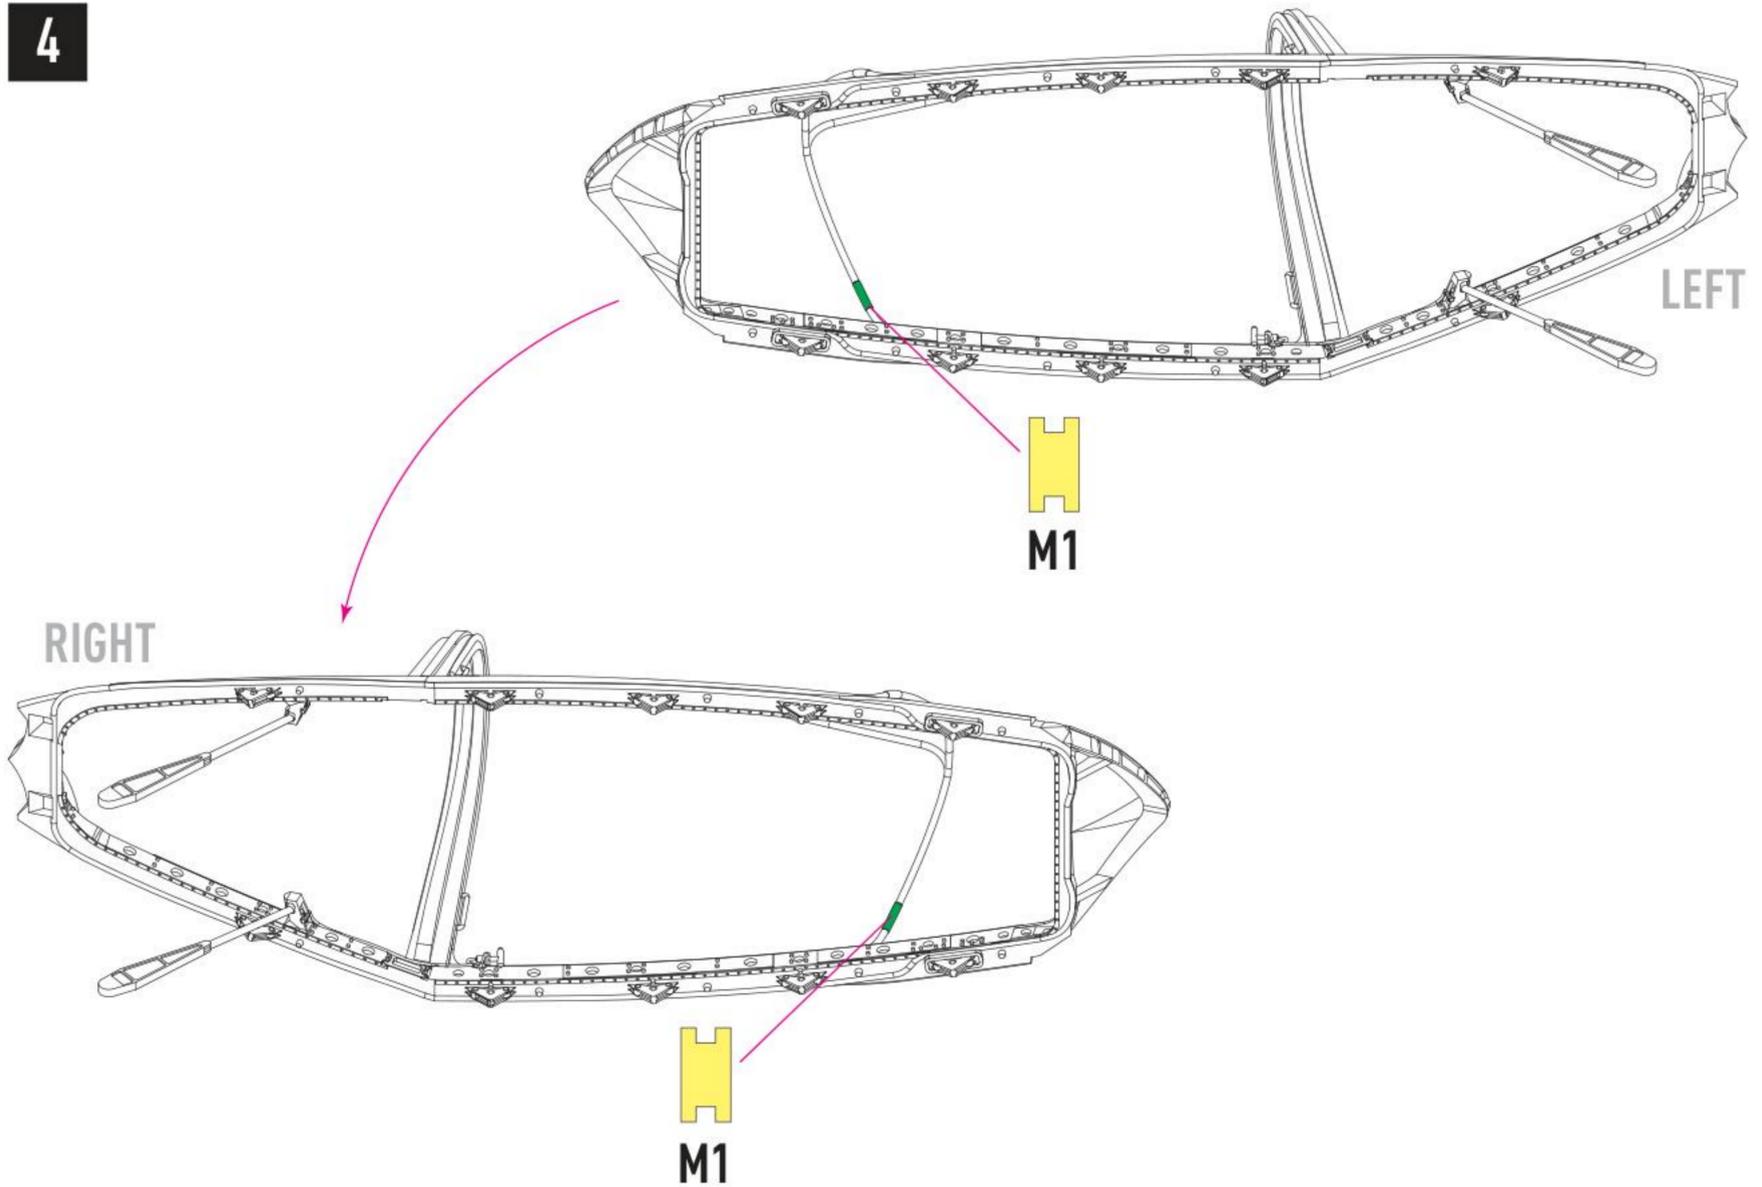

**5** IN ITALERI KIT INSTRUCTIONS ON PAGE 38, ON THE INNER SIDE OF THE STEP 43, PART 1H GRIND OFF AND POLISH

PART 1H FROM  
ITALERI KIT

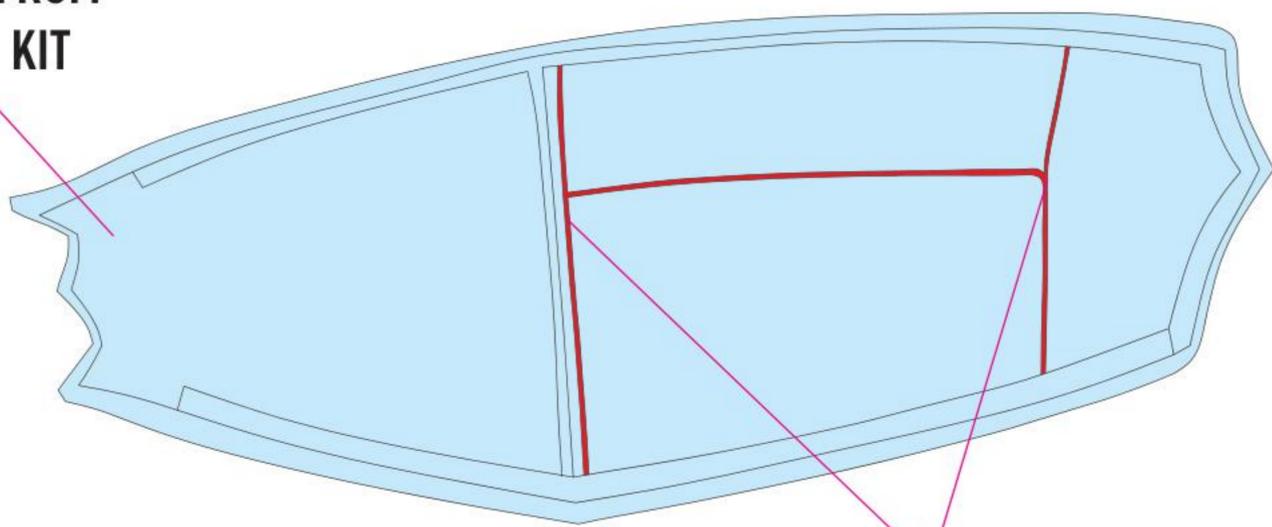

GRIND OFF AND POLISH

**6** IN ITALERI KIT INSTRUCTIONS ON PAGE 38, STEP 43 DO NOT USE PART 7PE, REPLACE PARTS 12F, 17PE, 11F, 41F, 48F, 6F, 19F, 20F ON STEP 4