


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

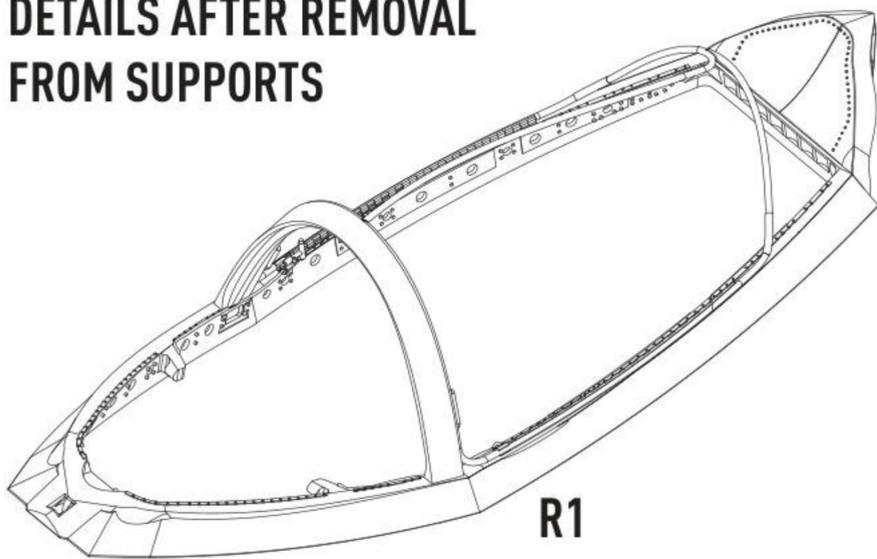

 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




R1

R2

R3

M1 X4

1 IF YOU USE THE CABIN FROM THE TRUMPETER SET, PARTS R2 AND R3 NEED TO BE ADJUSTED. IF YOU USE THE CABIN FROM THE RESKIT RSU32-109 AND RSU32-110 SETS, PARTS R2 AND R3 ARE USED IN FULL

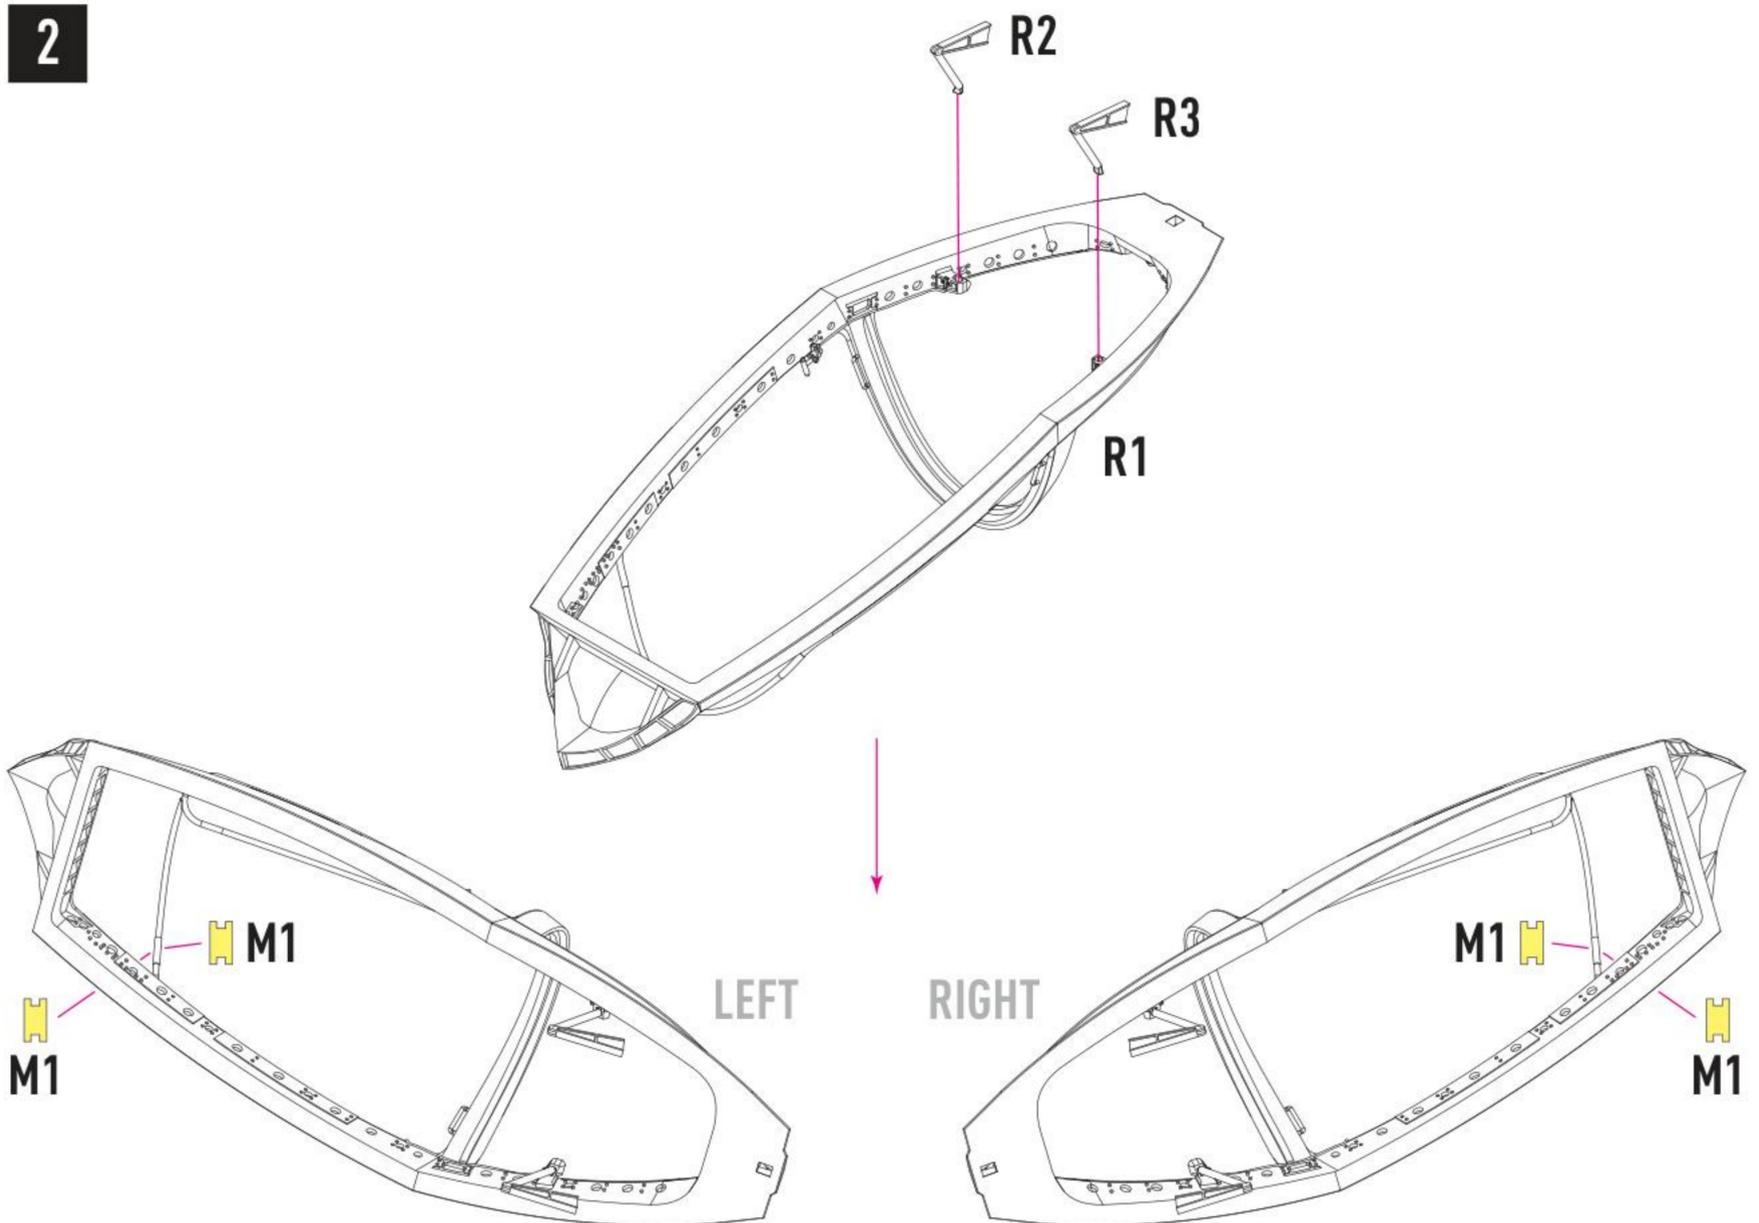

3 IN TRUMPETER KIT INSTRUCTIONS ON PAGE 23, STEP 27, REPLACE PARTS G15, G19, G16