






USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
 FROM SUPPORTS**

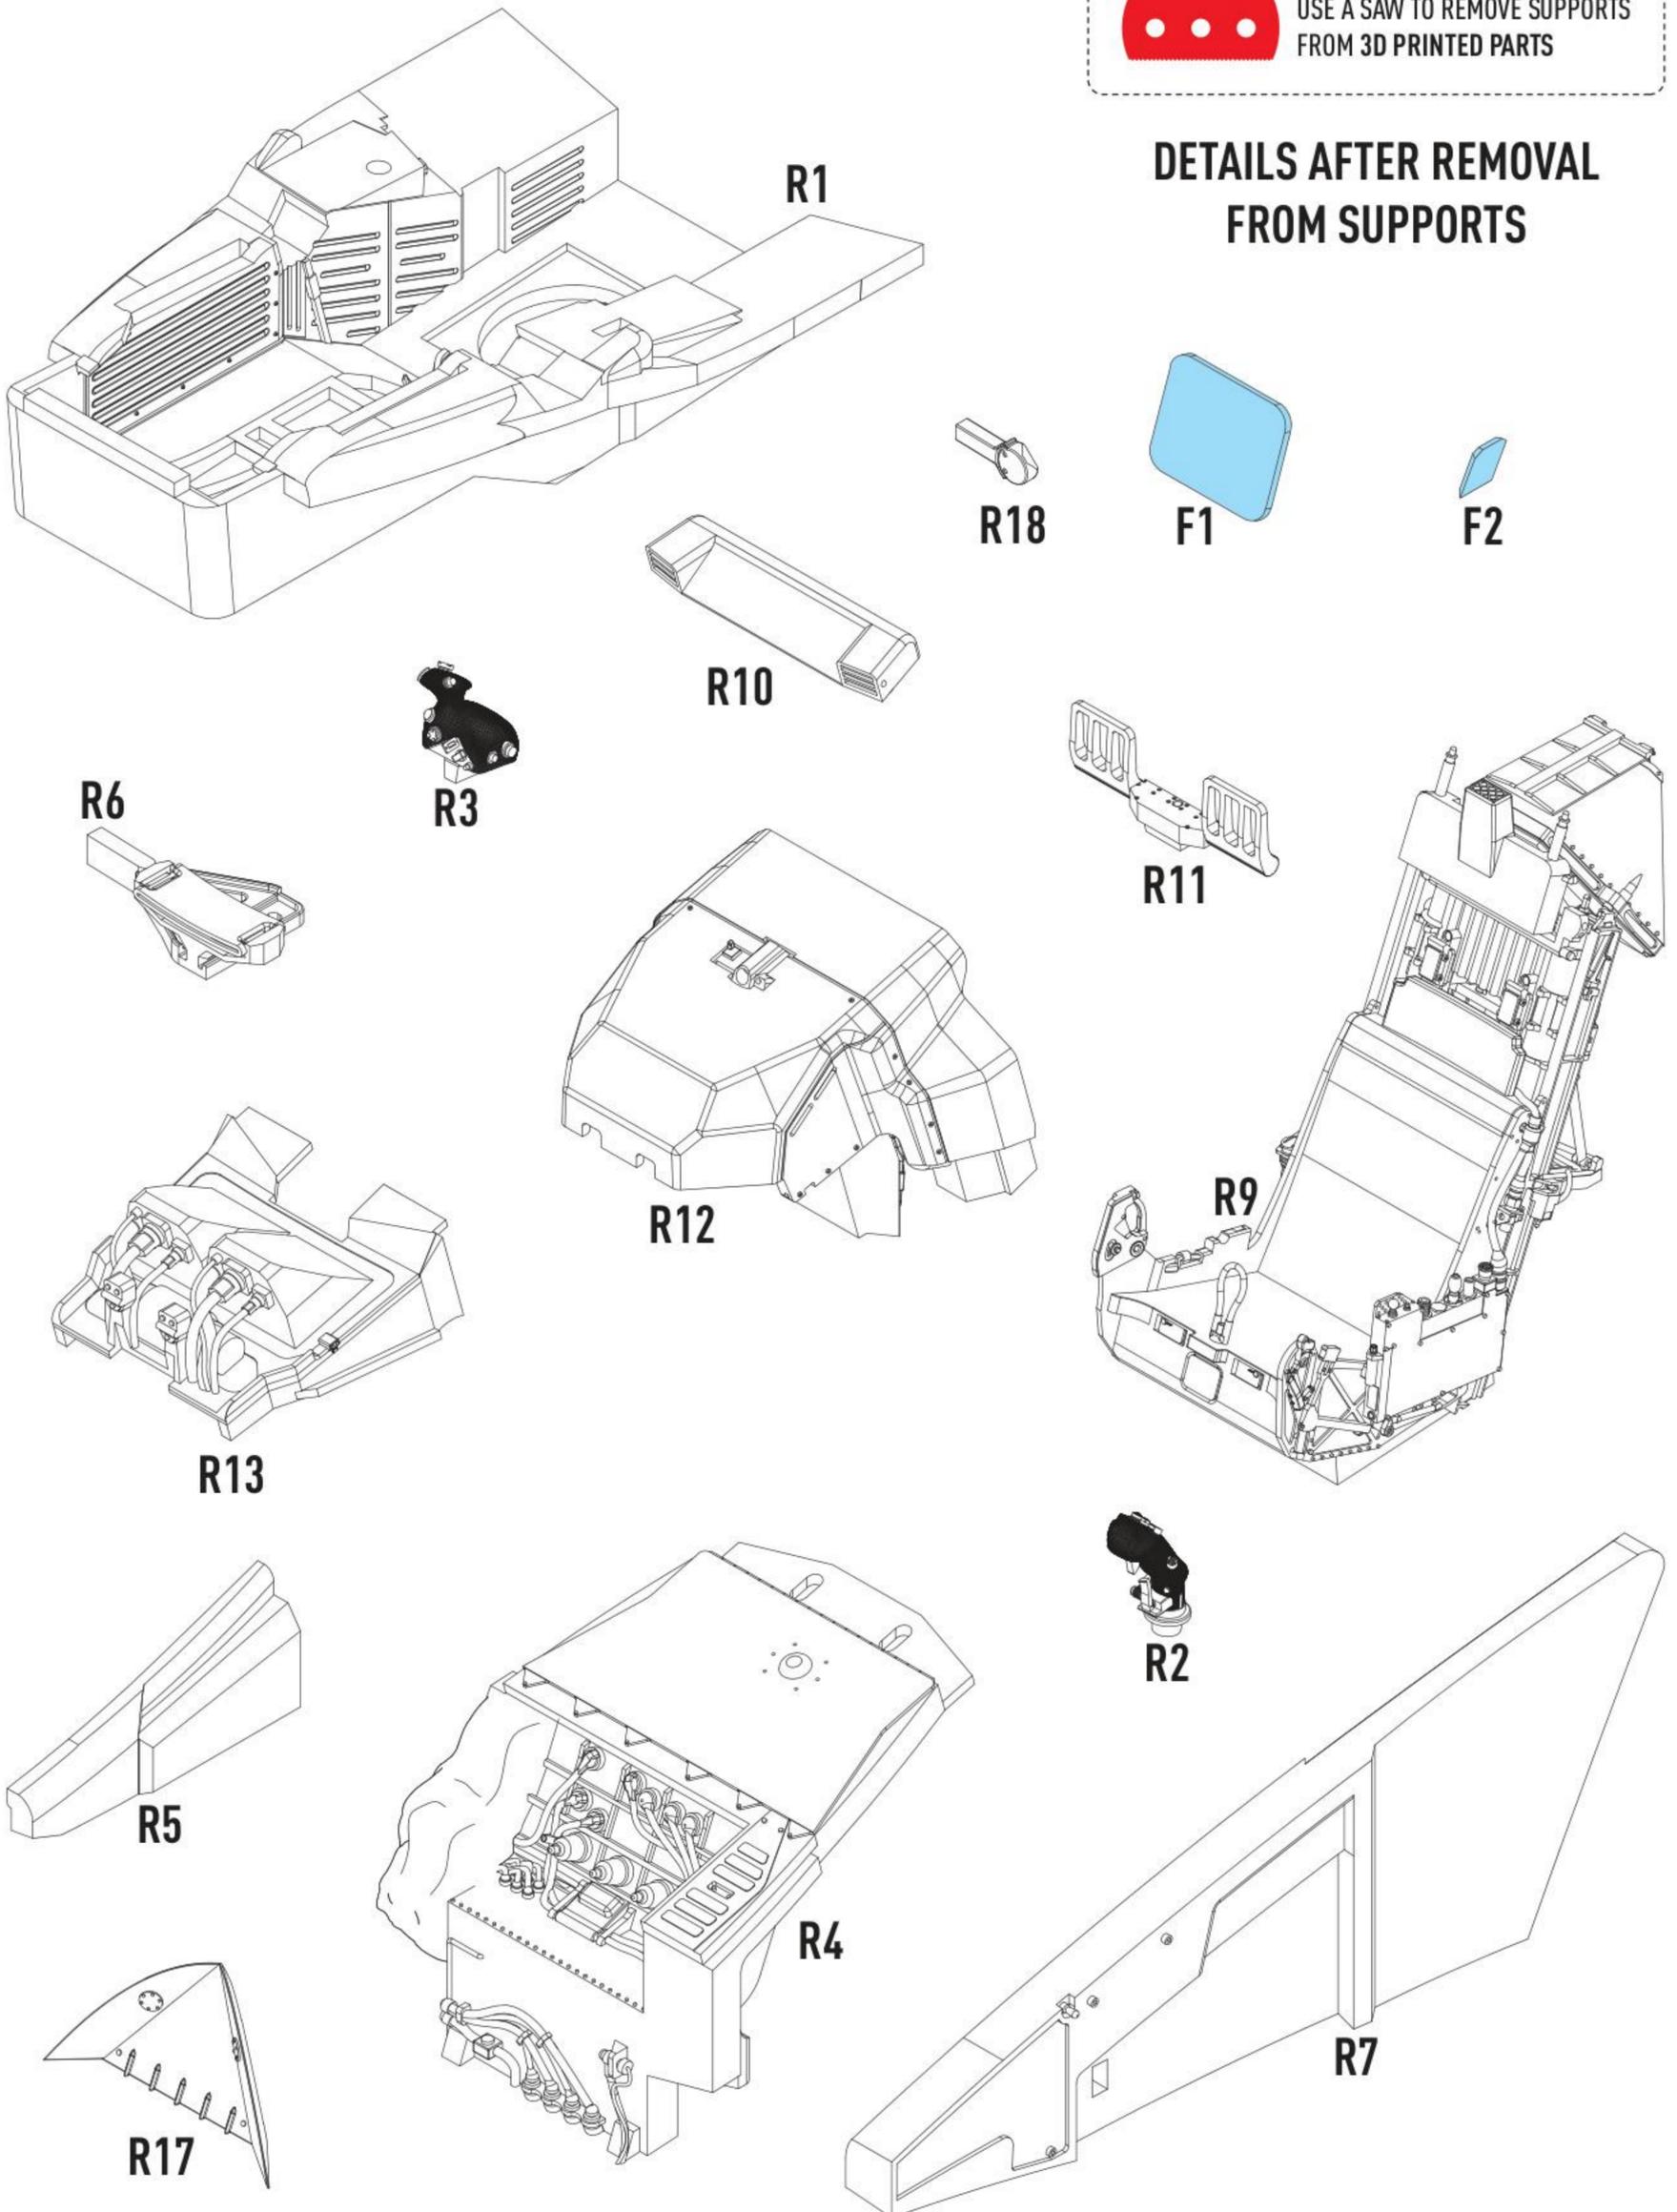


3D-DECAL INSTRUCTION

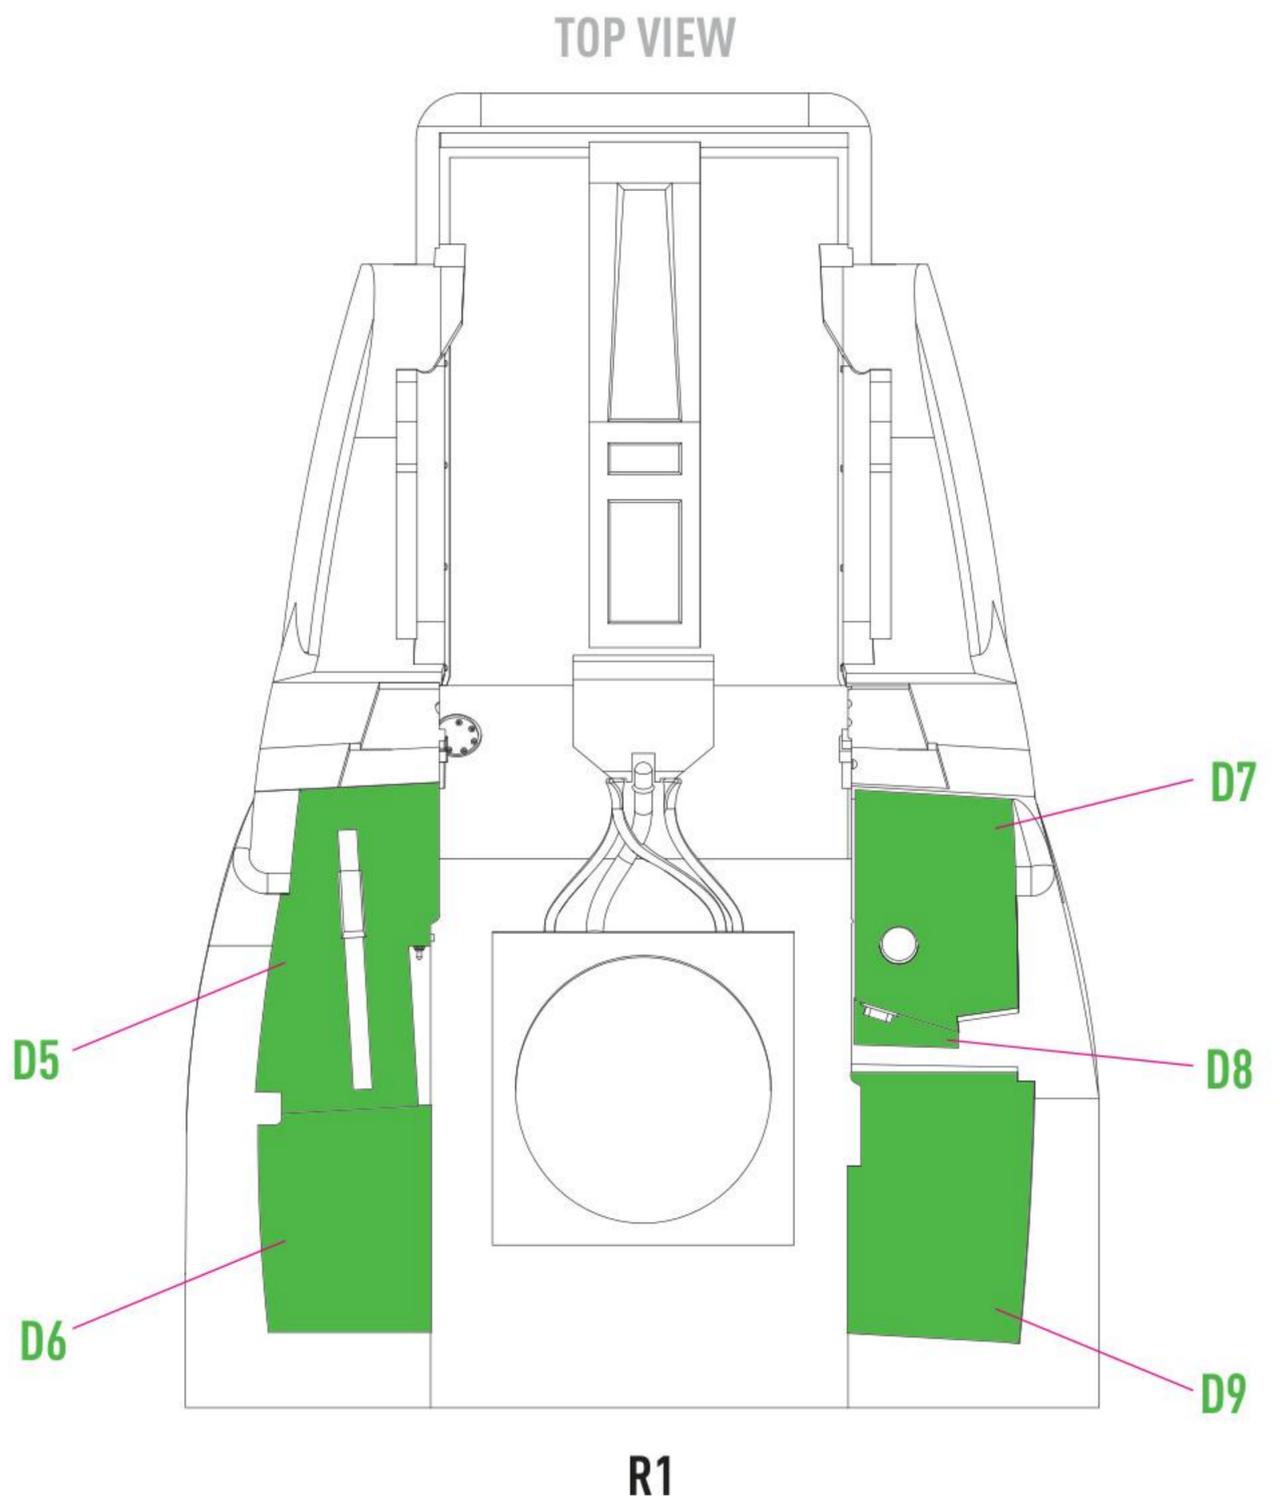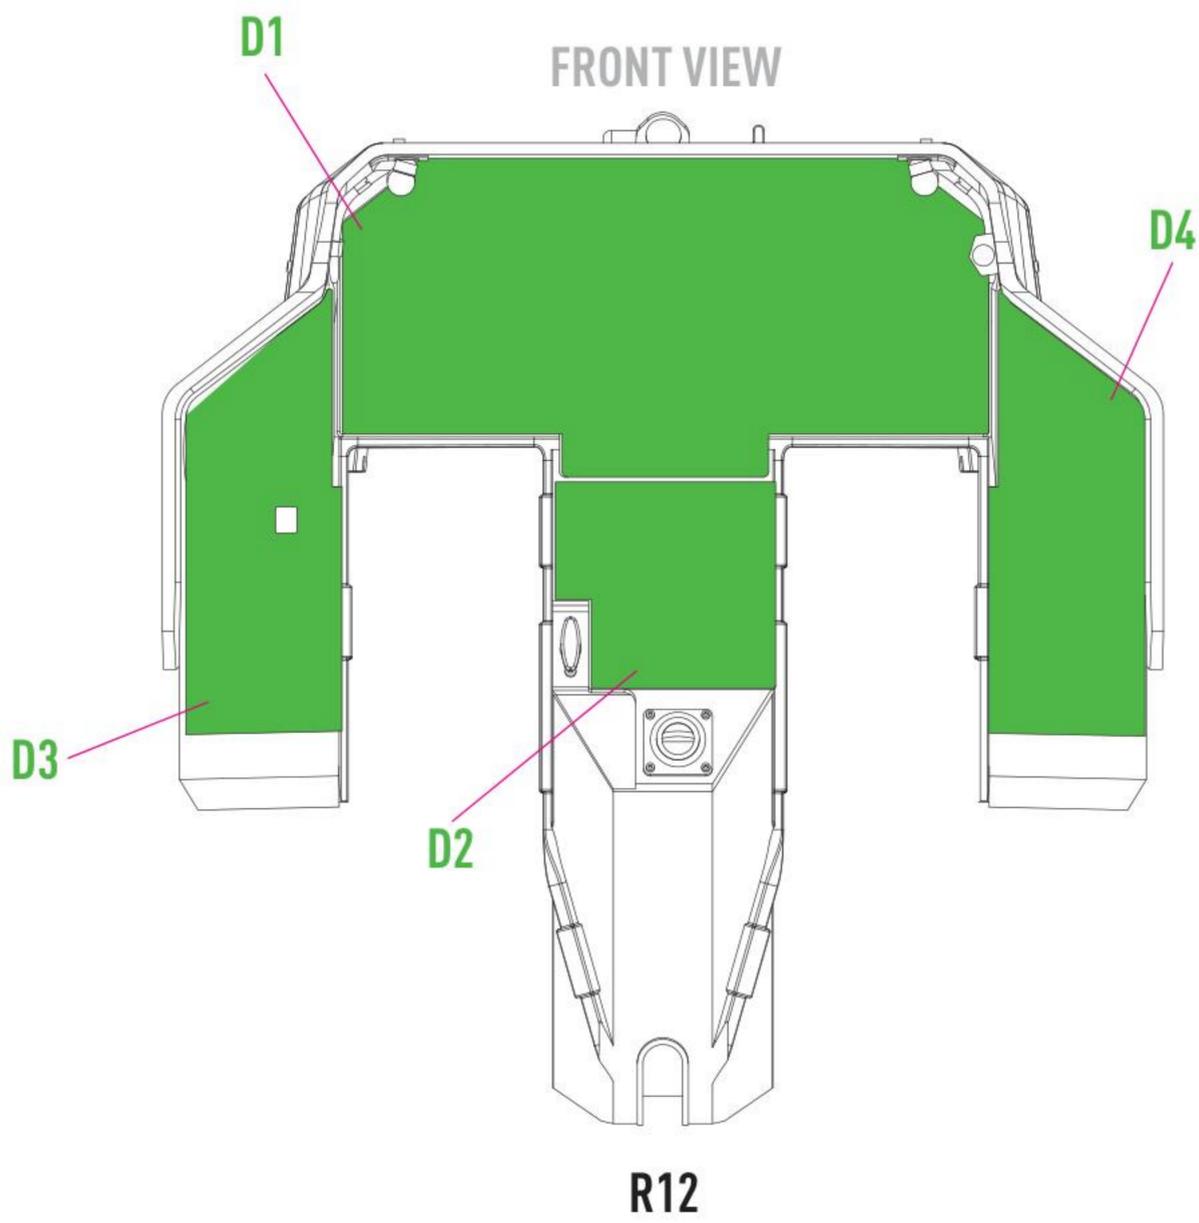


1

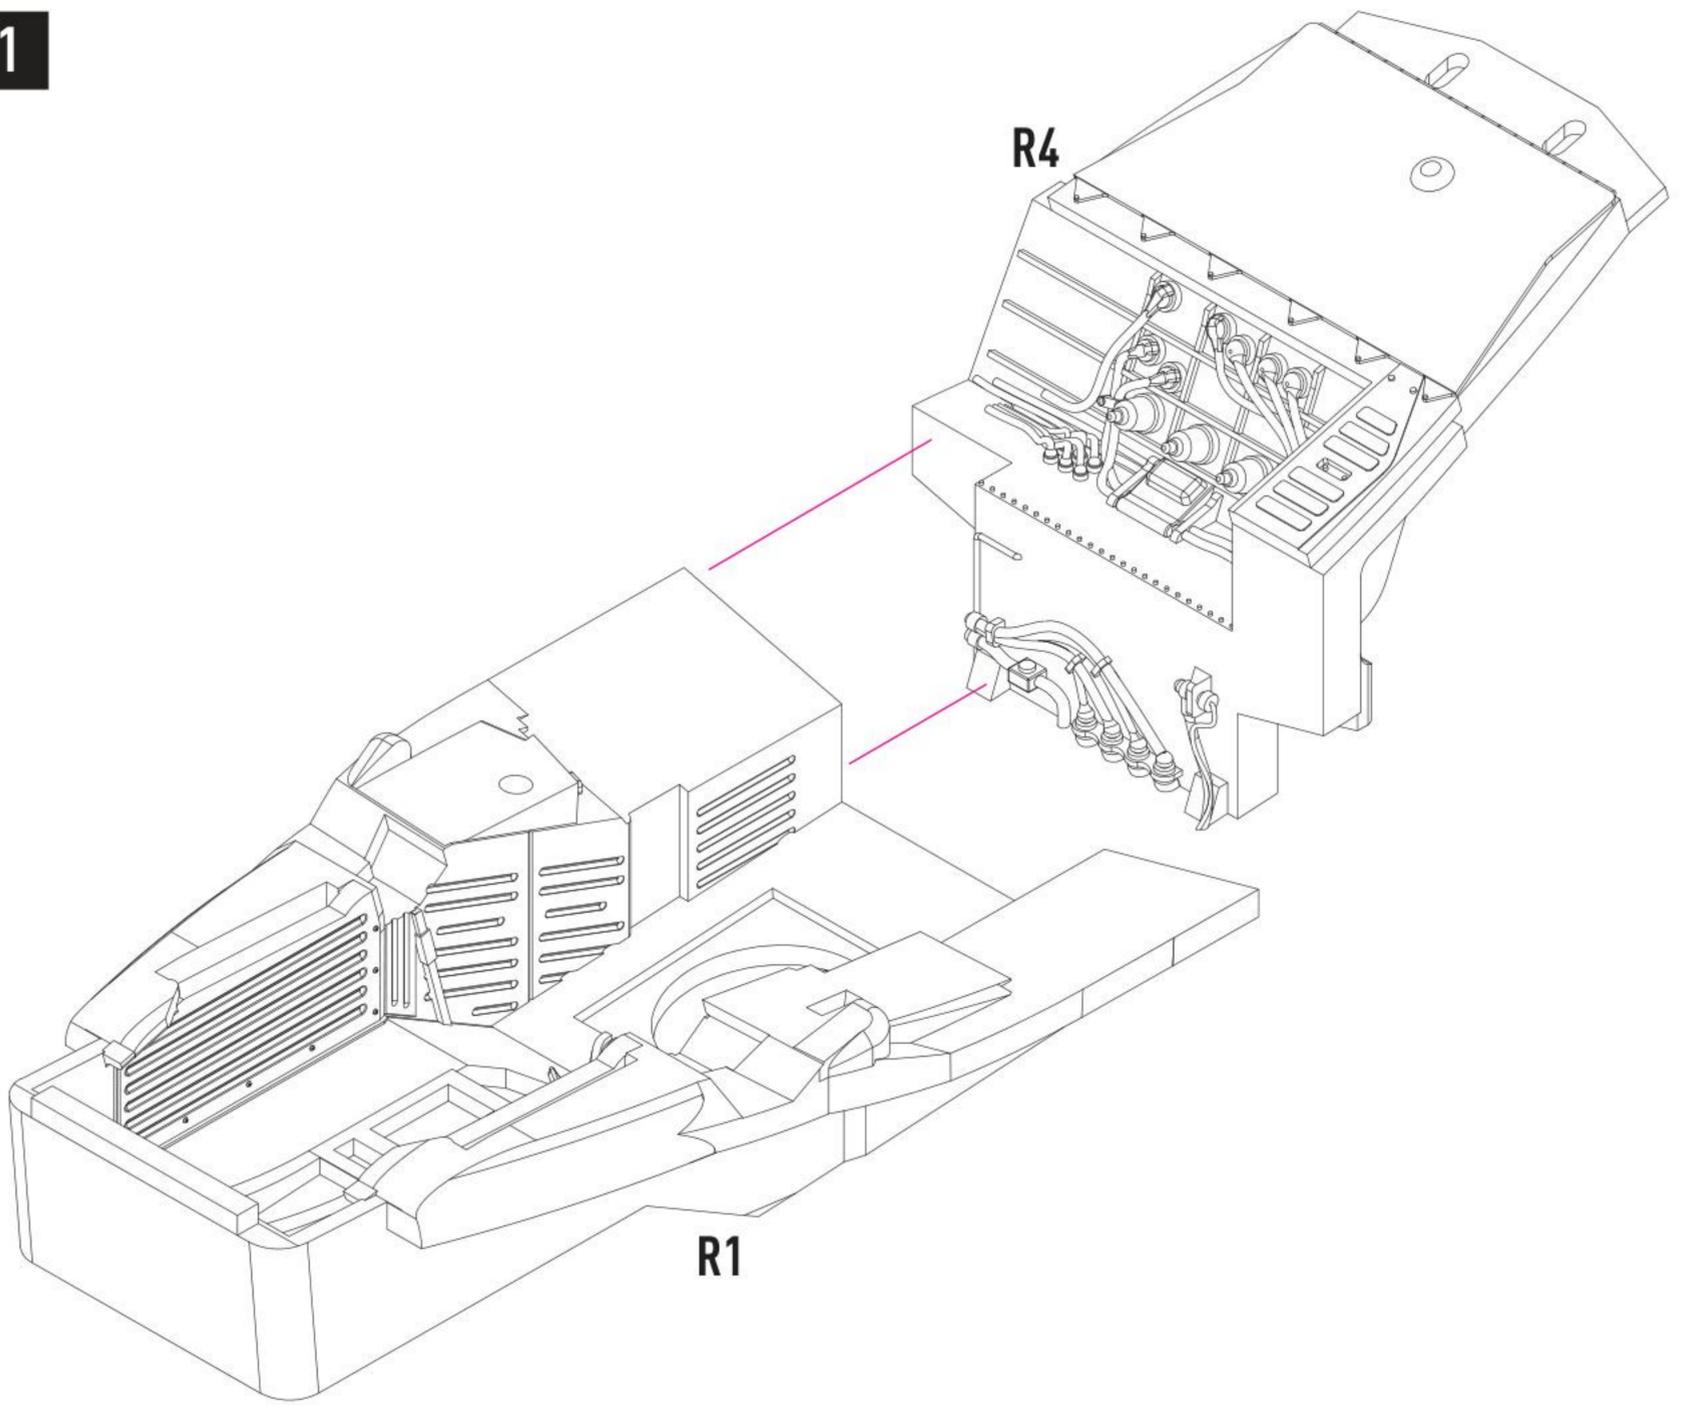


2

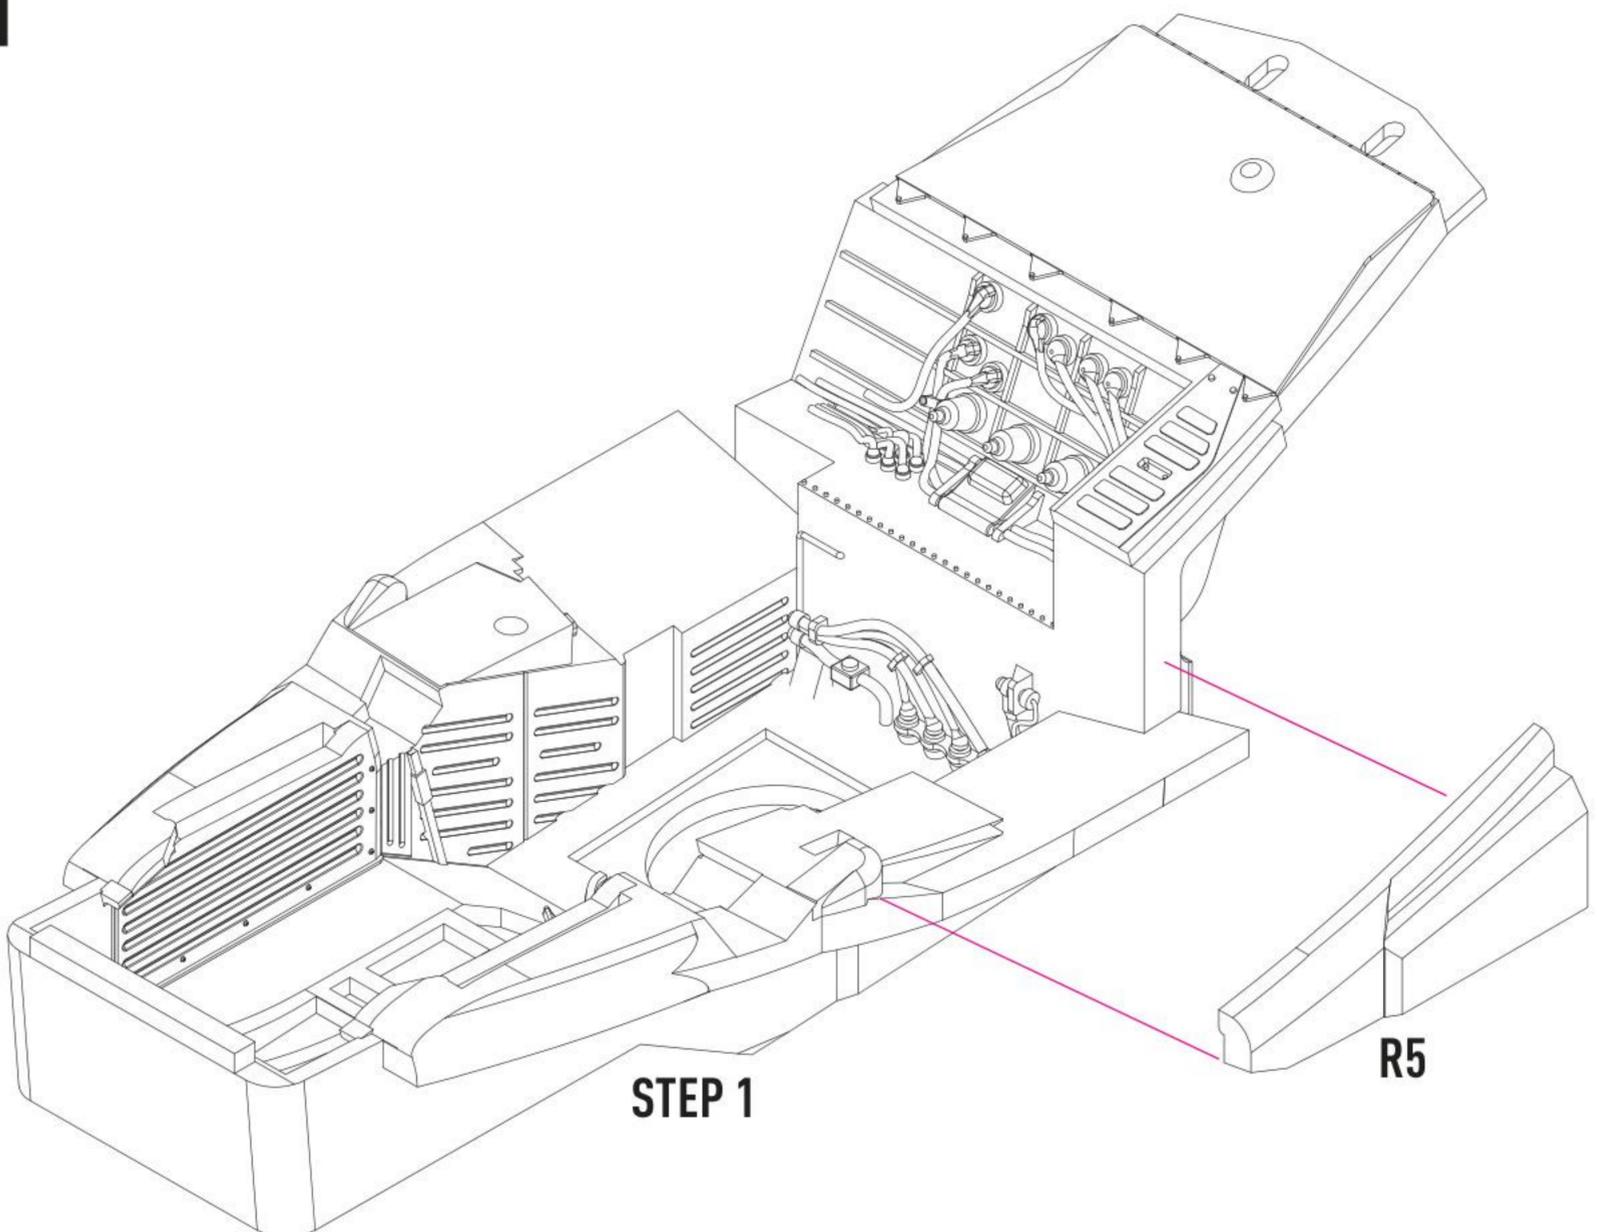


3

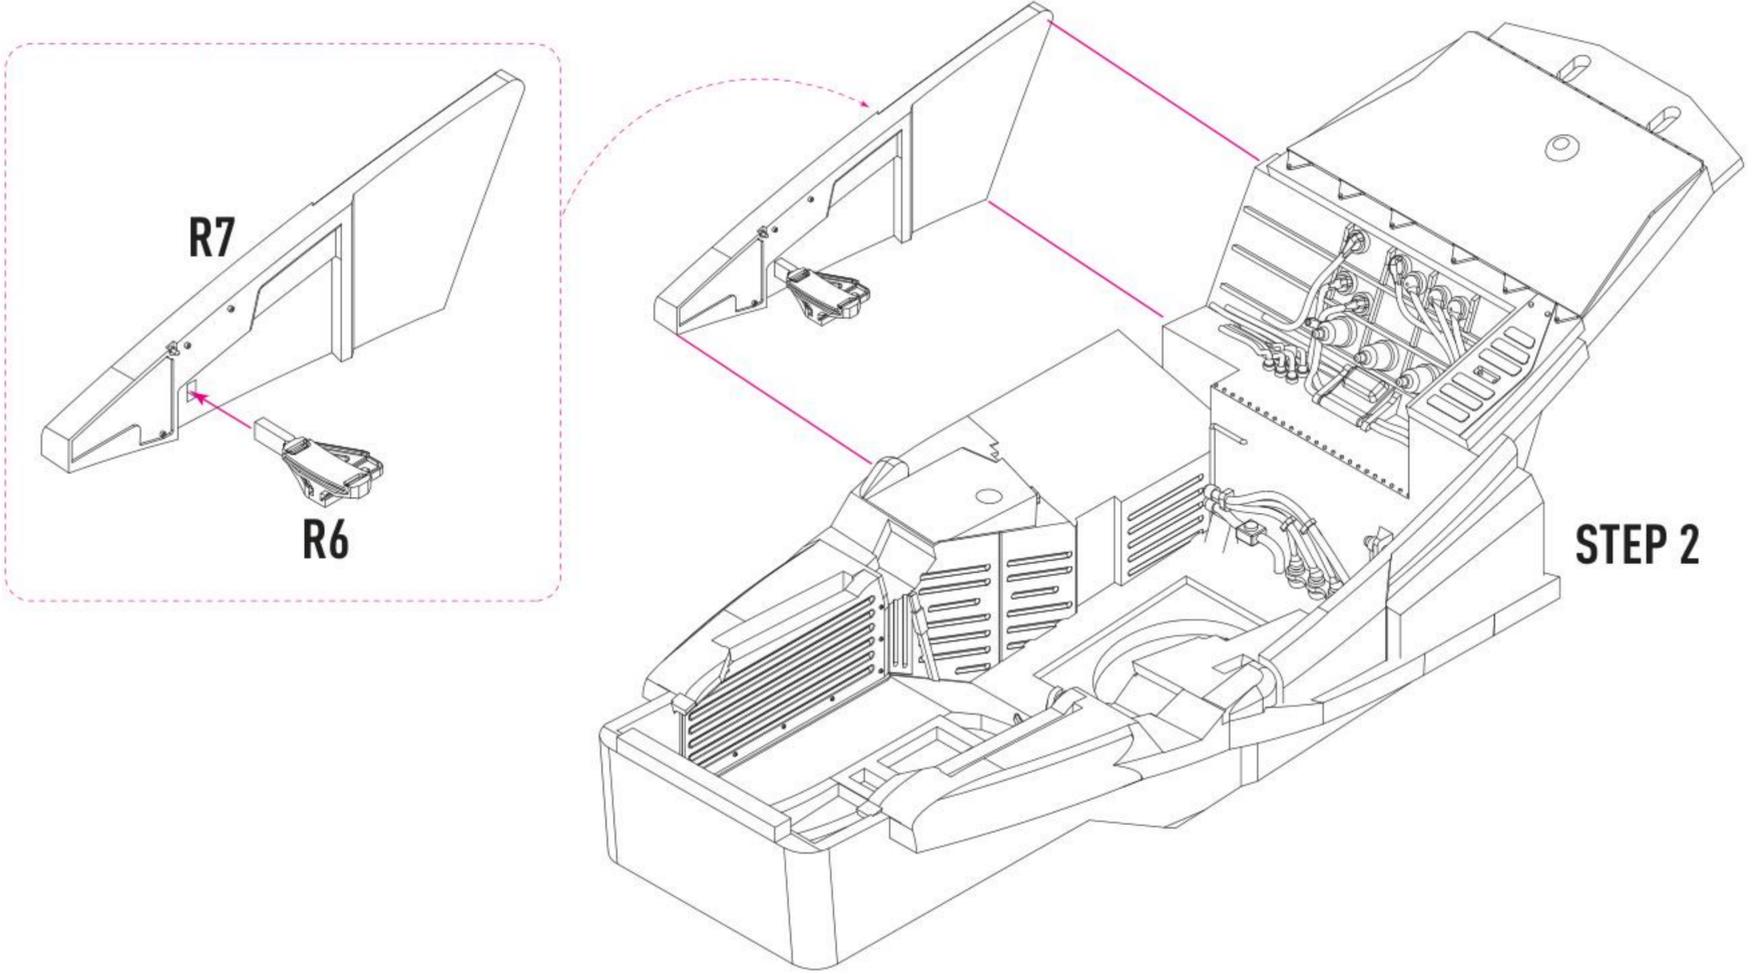


4

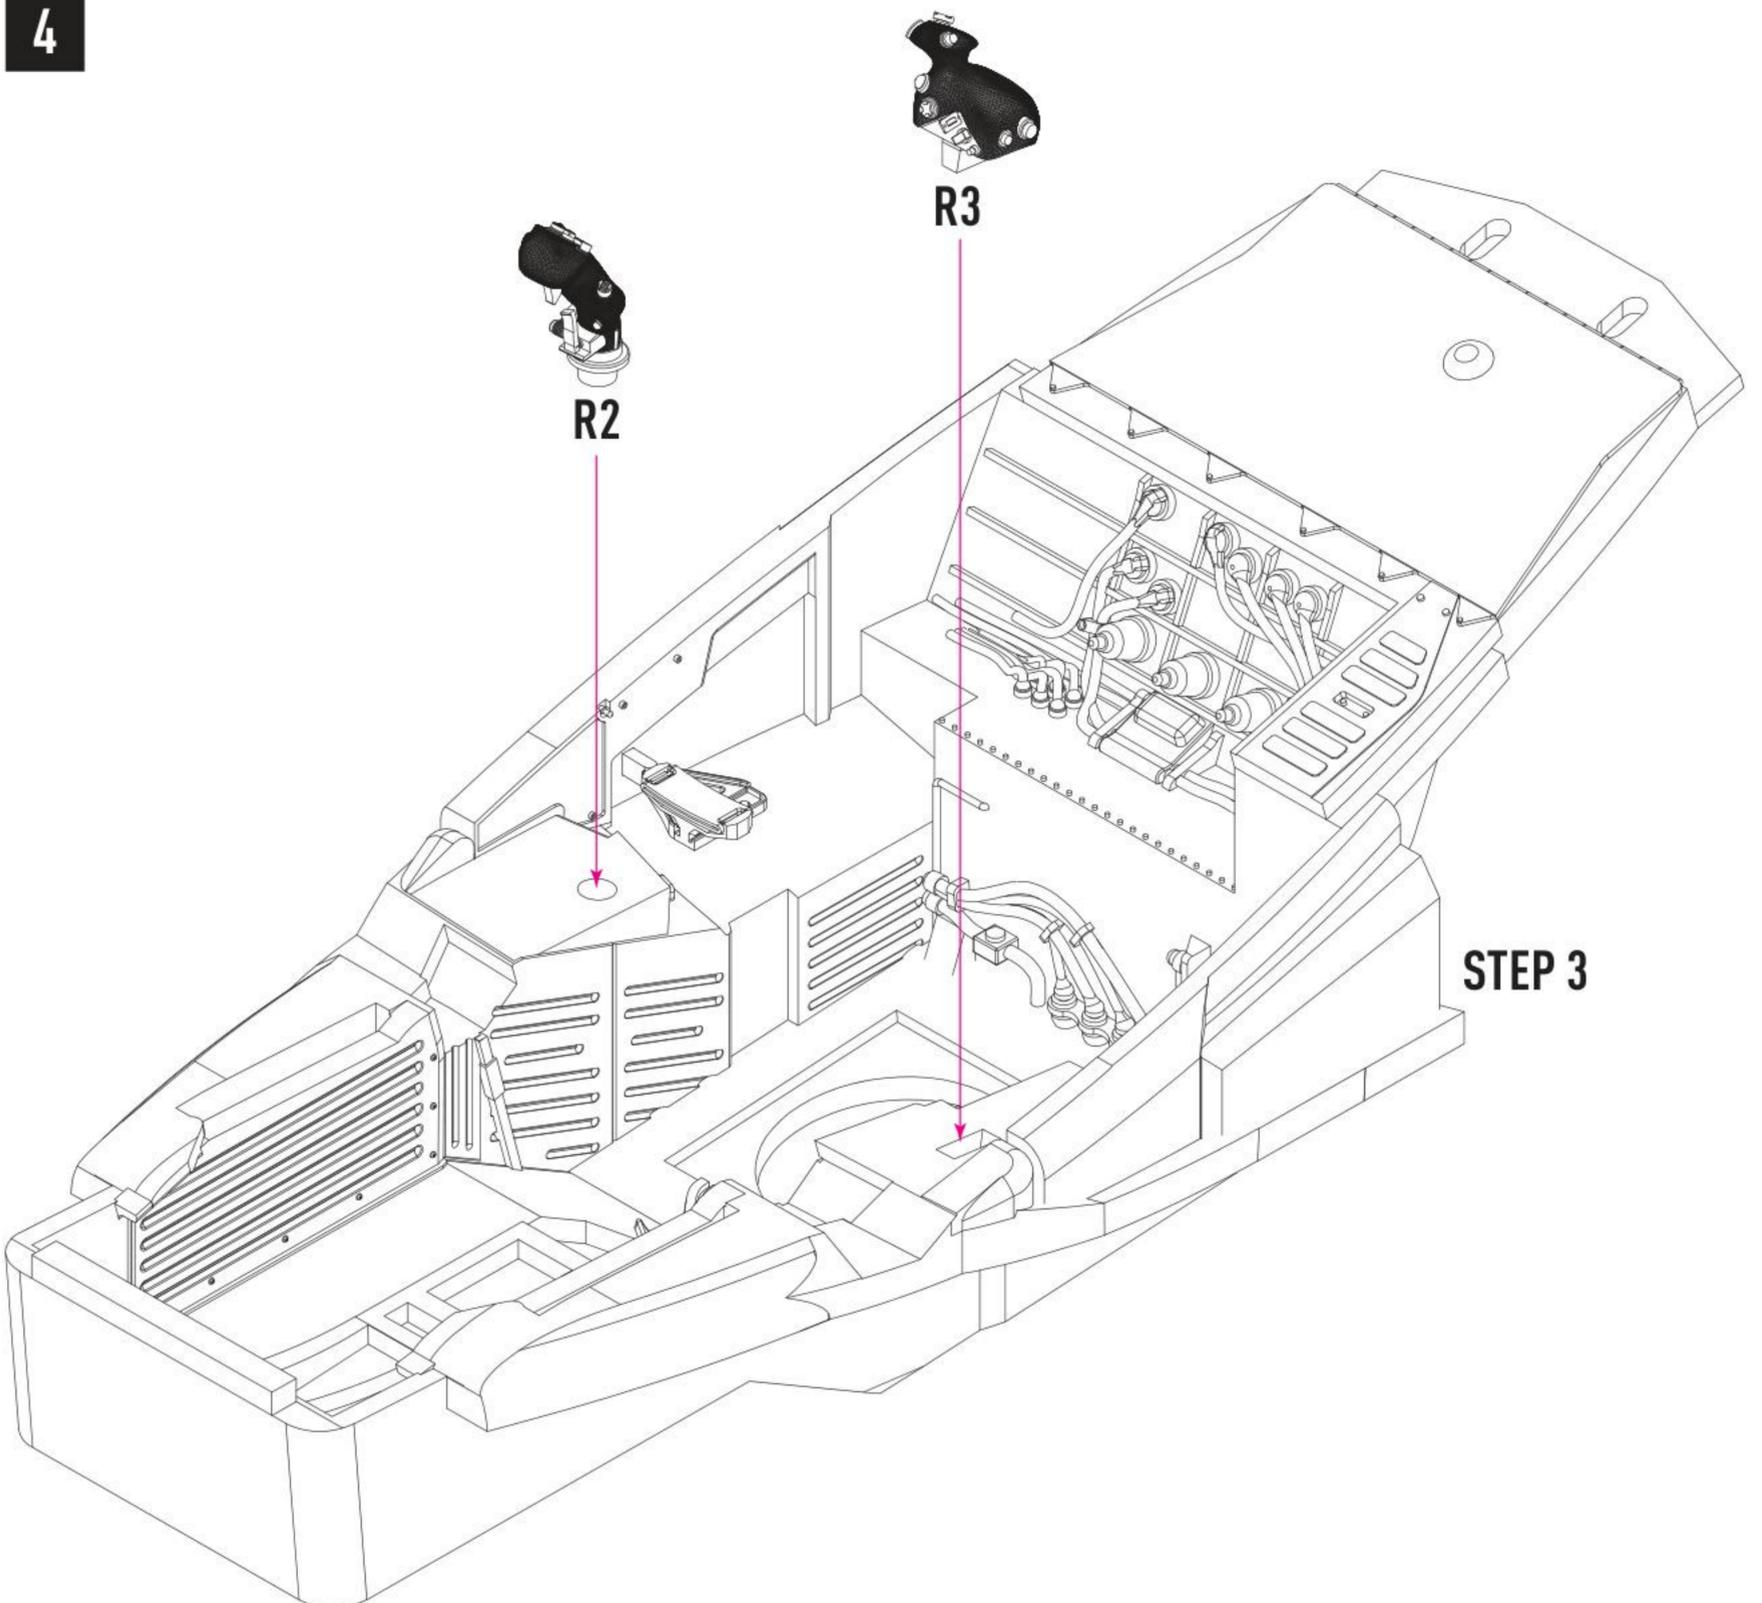


5

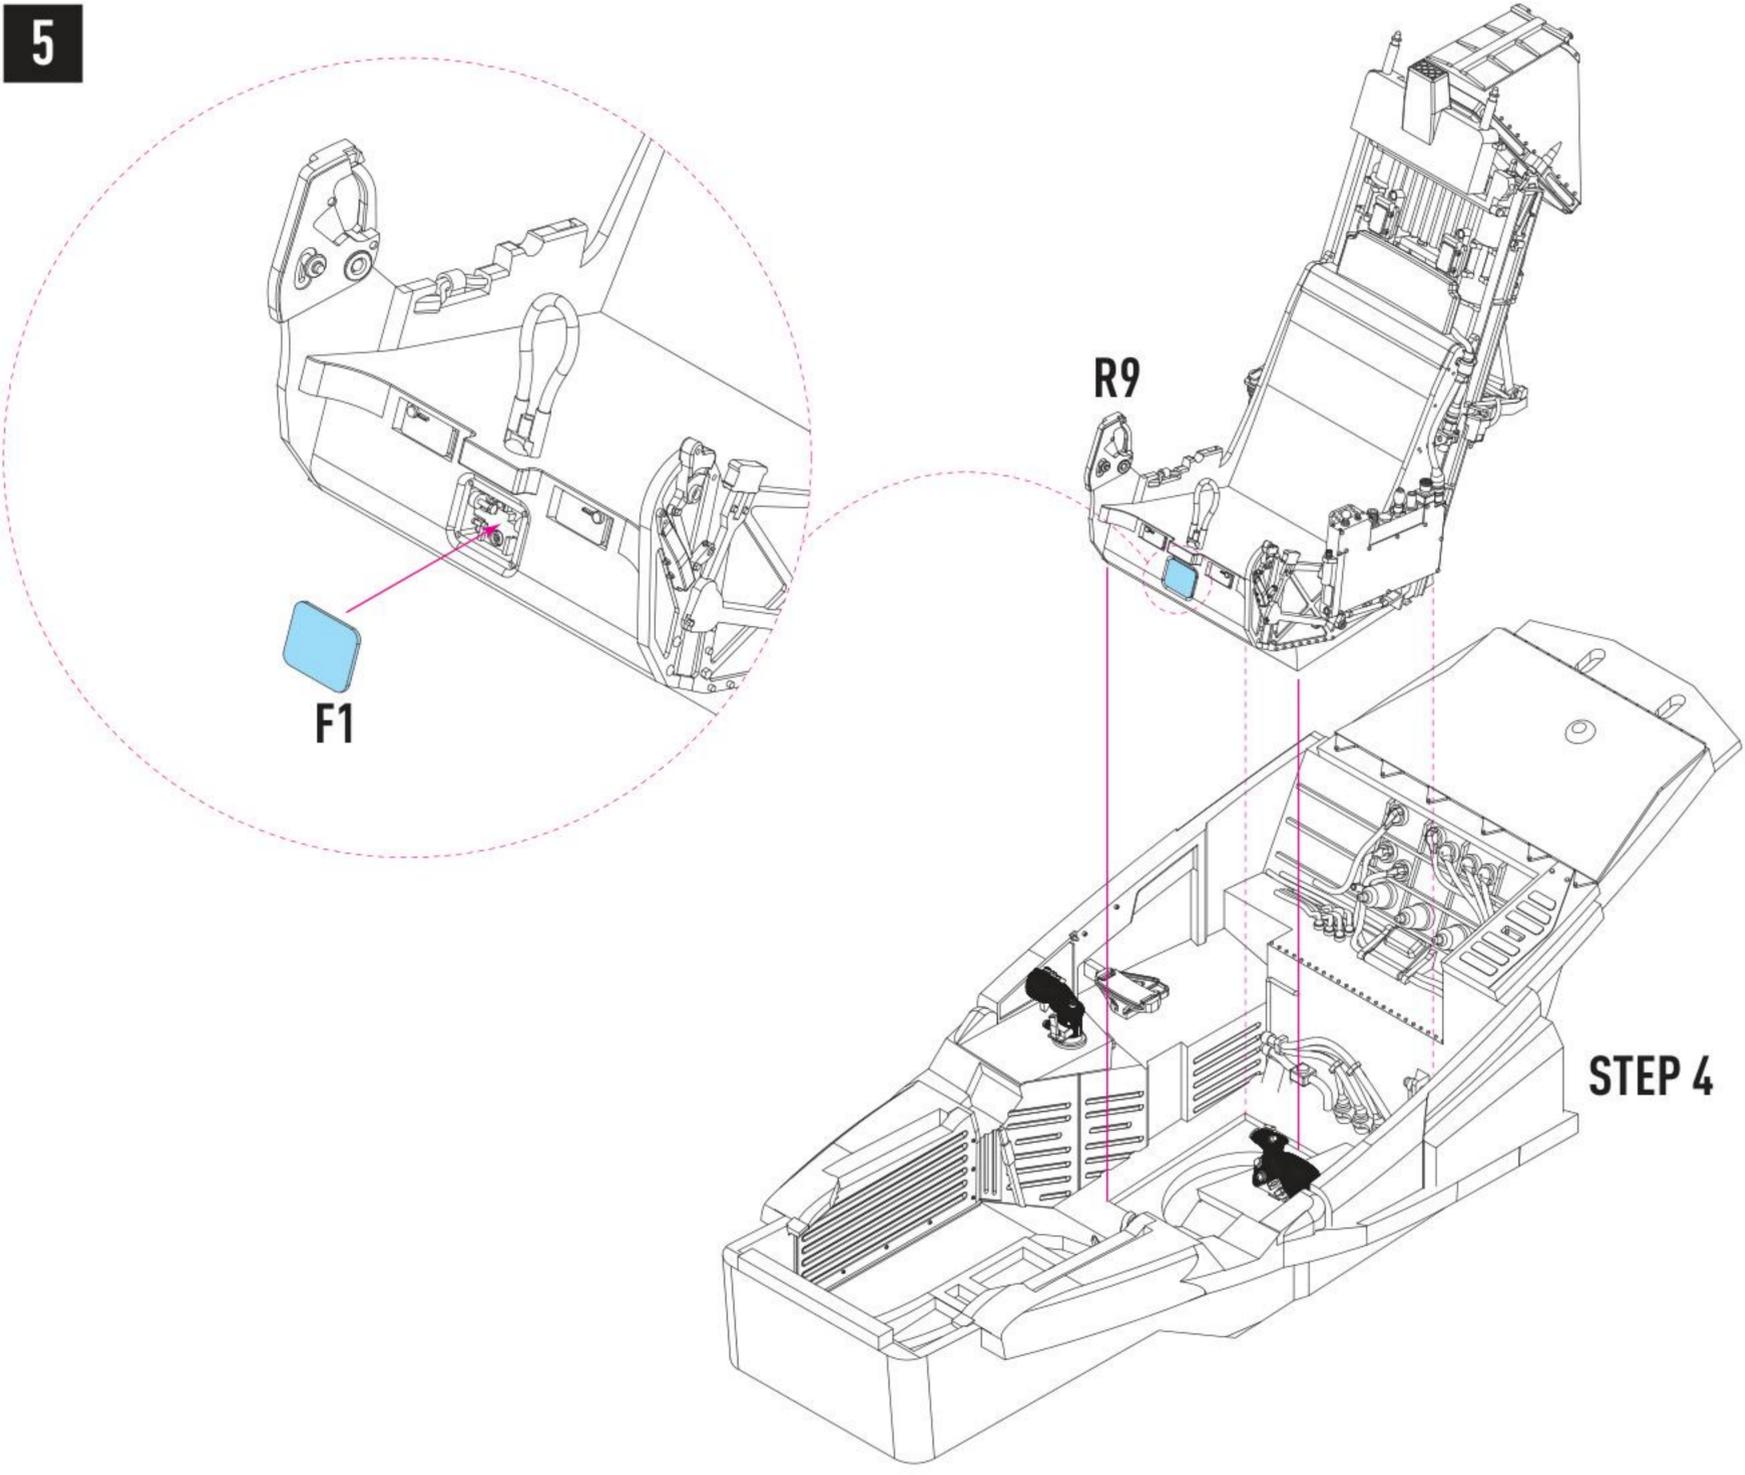


6

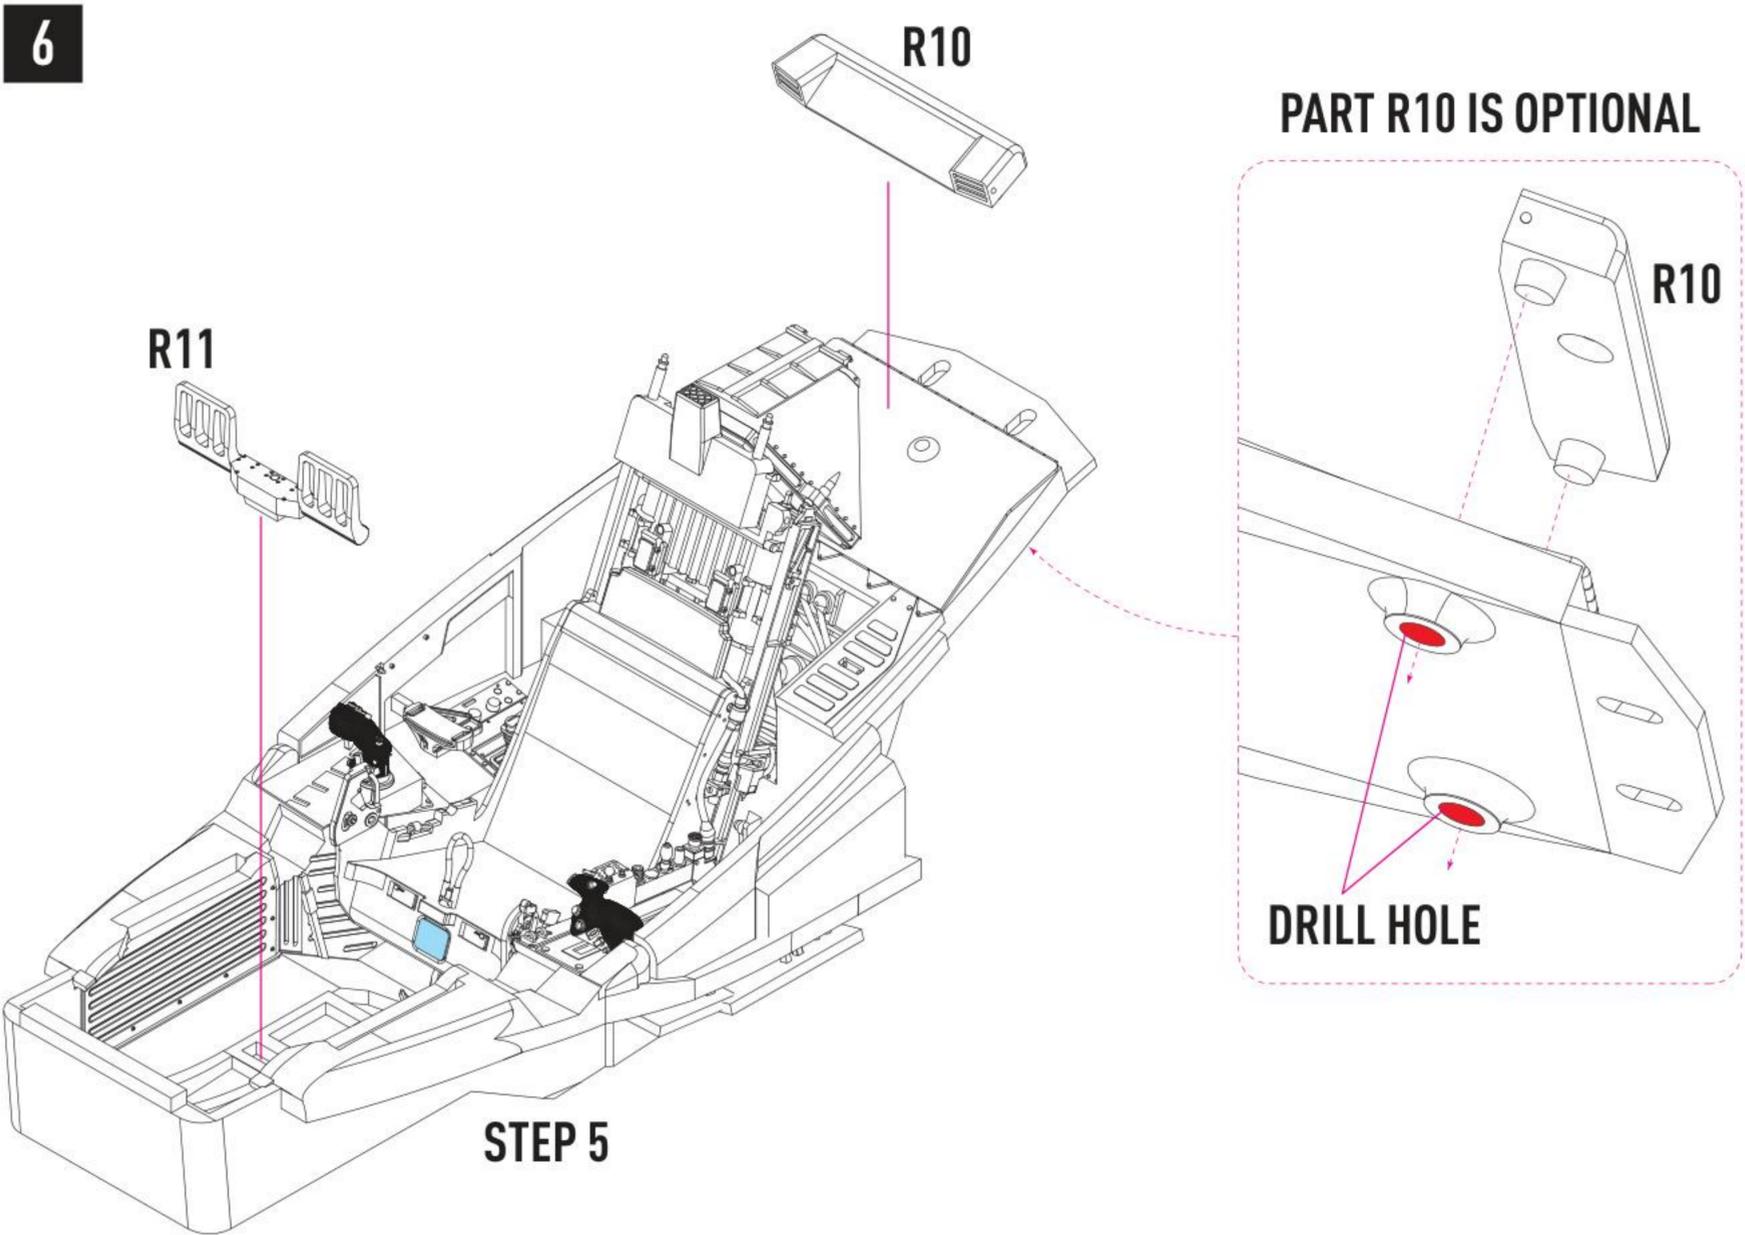


7

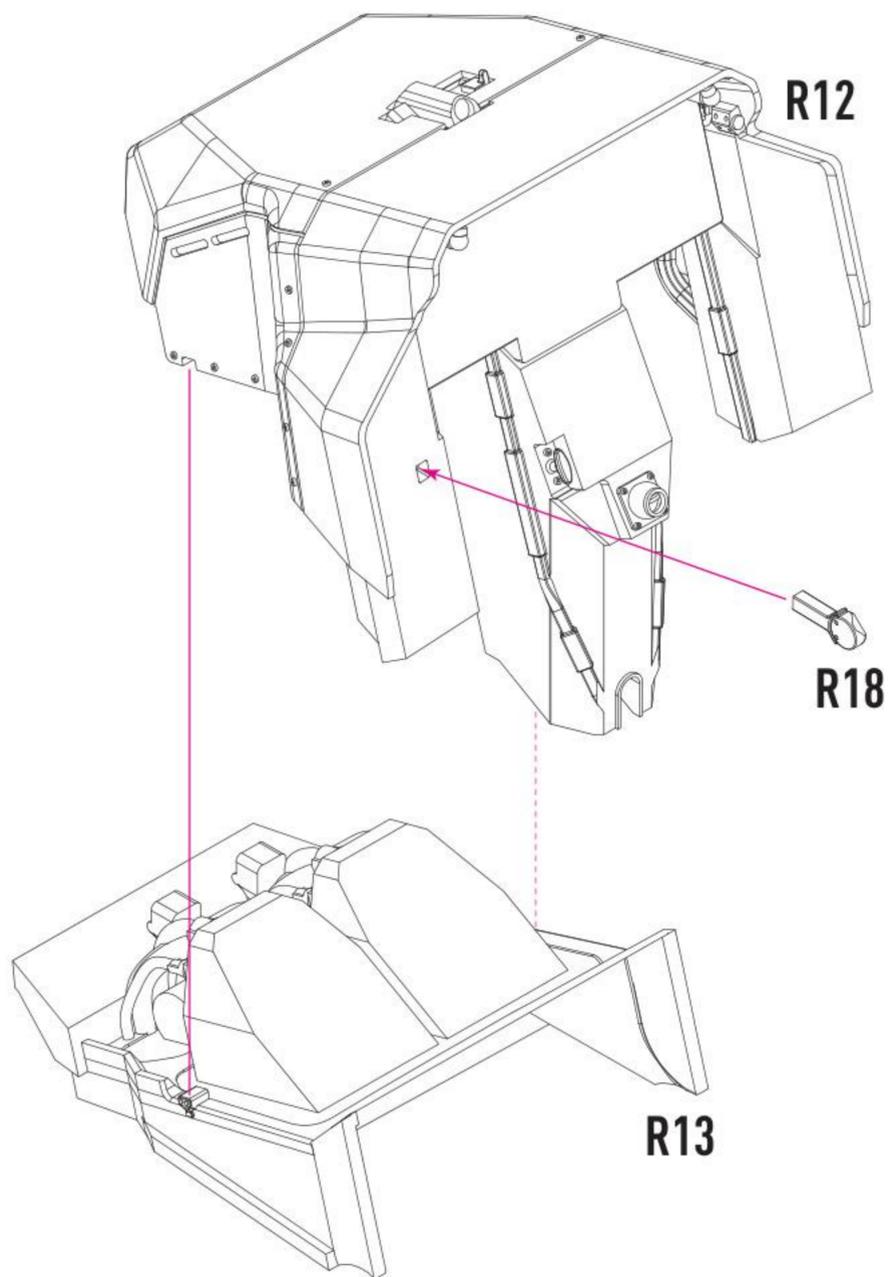


8

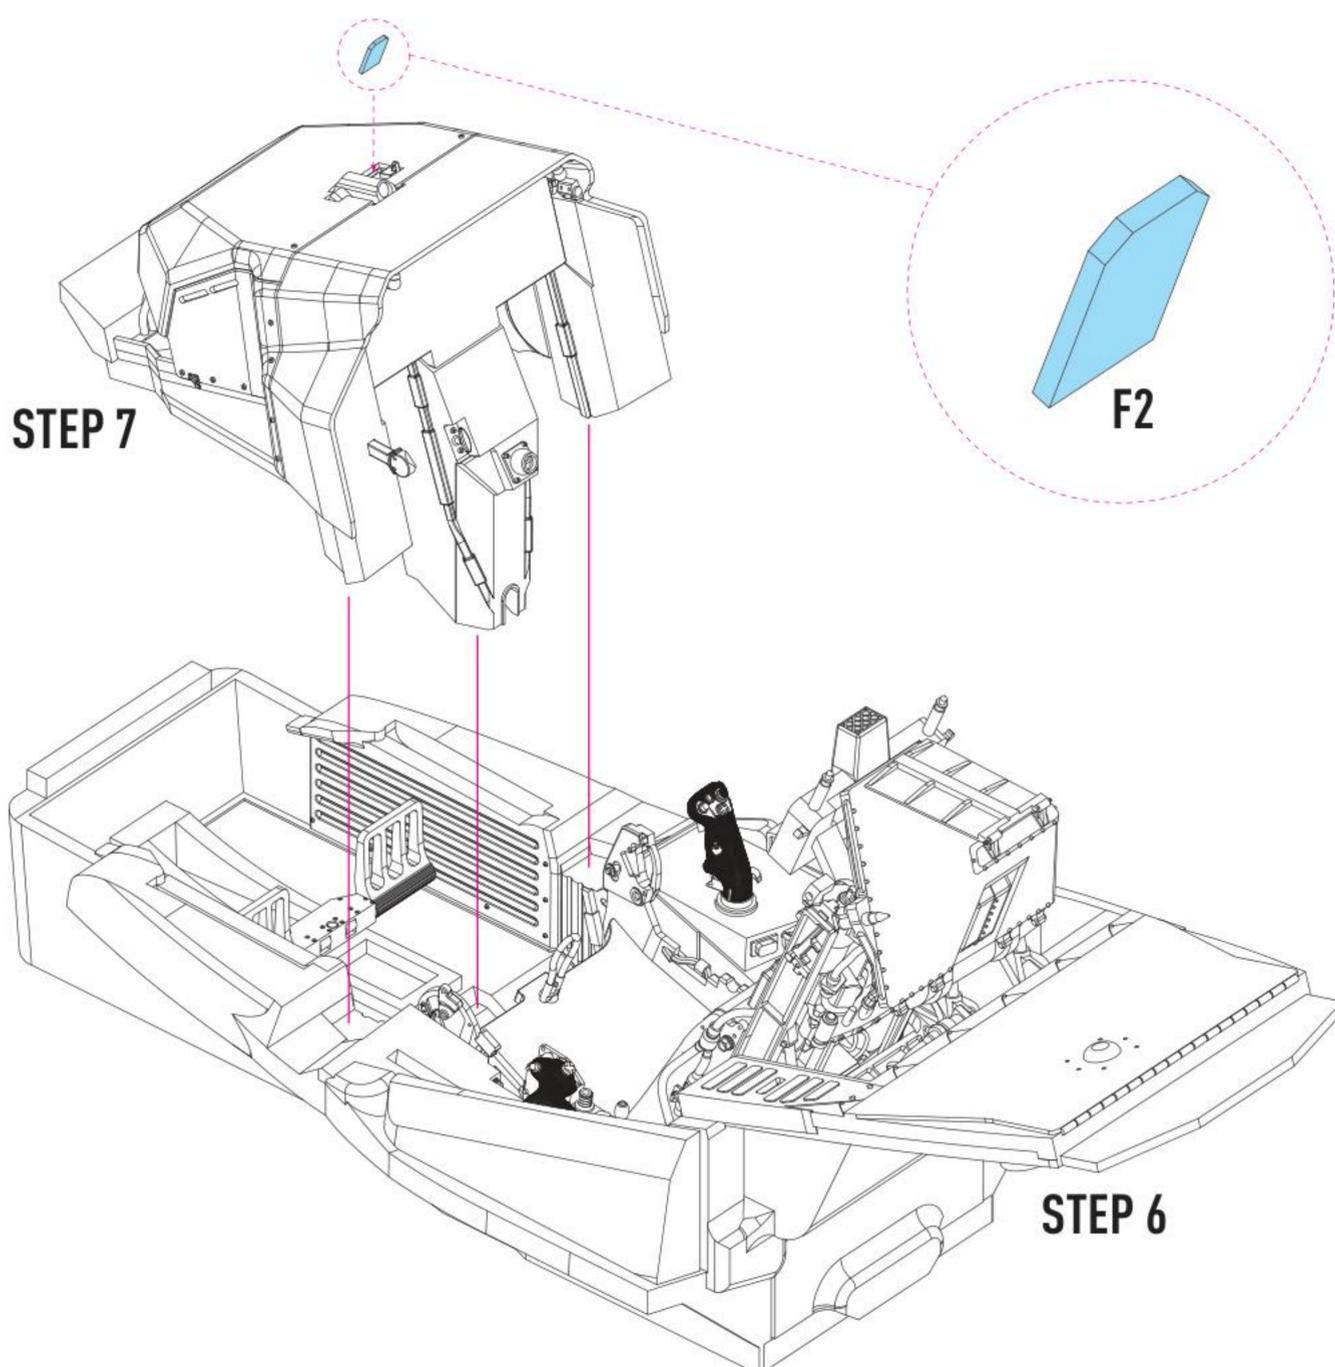


9 IN TRUMPETER INSTRUCTIONS ON PAGE 3, STEP 1, REMOVE ALL USED PARTS AND REPLACE WITH RESKIT KIT PARTS FROM STEP 17

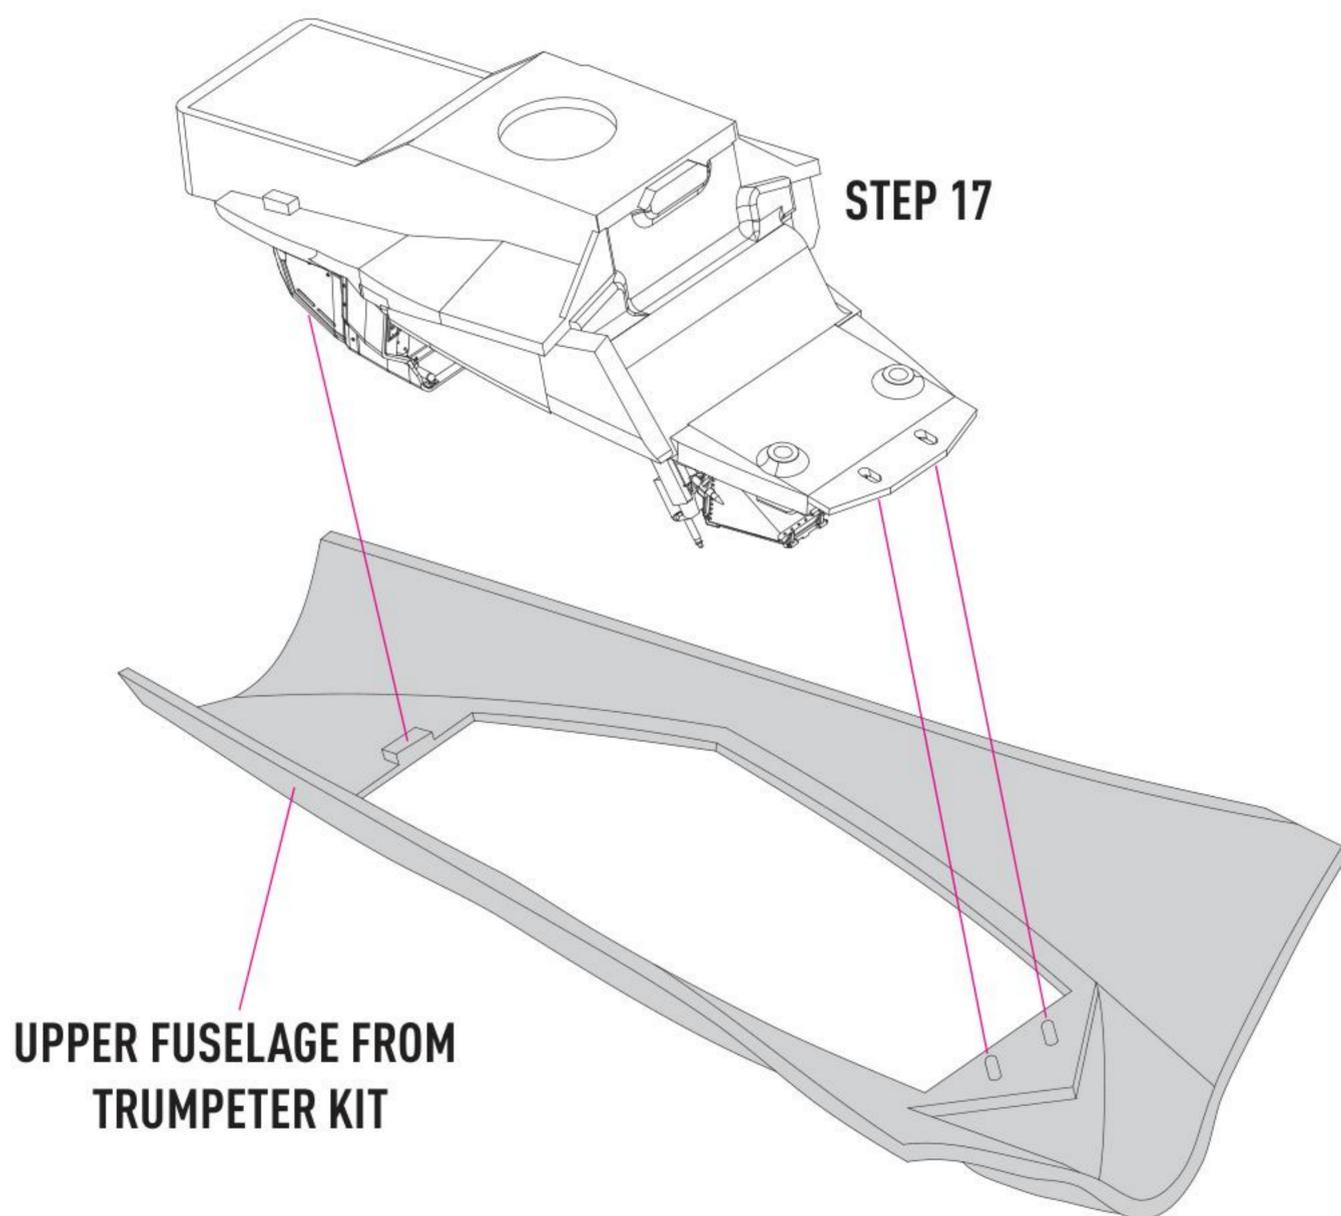


10 IN TRUMPETER INSTRUCTIONS ON PAGE 4, STEP 2, REPLACE PART G28 WITH RESKIT KIT PART R17

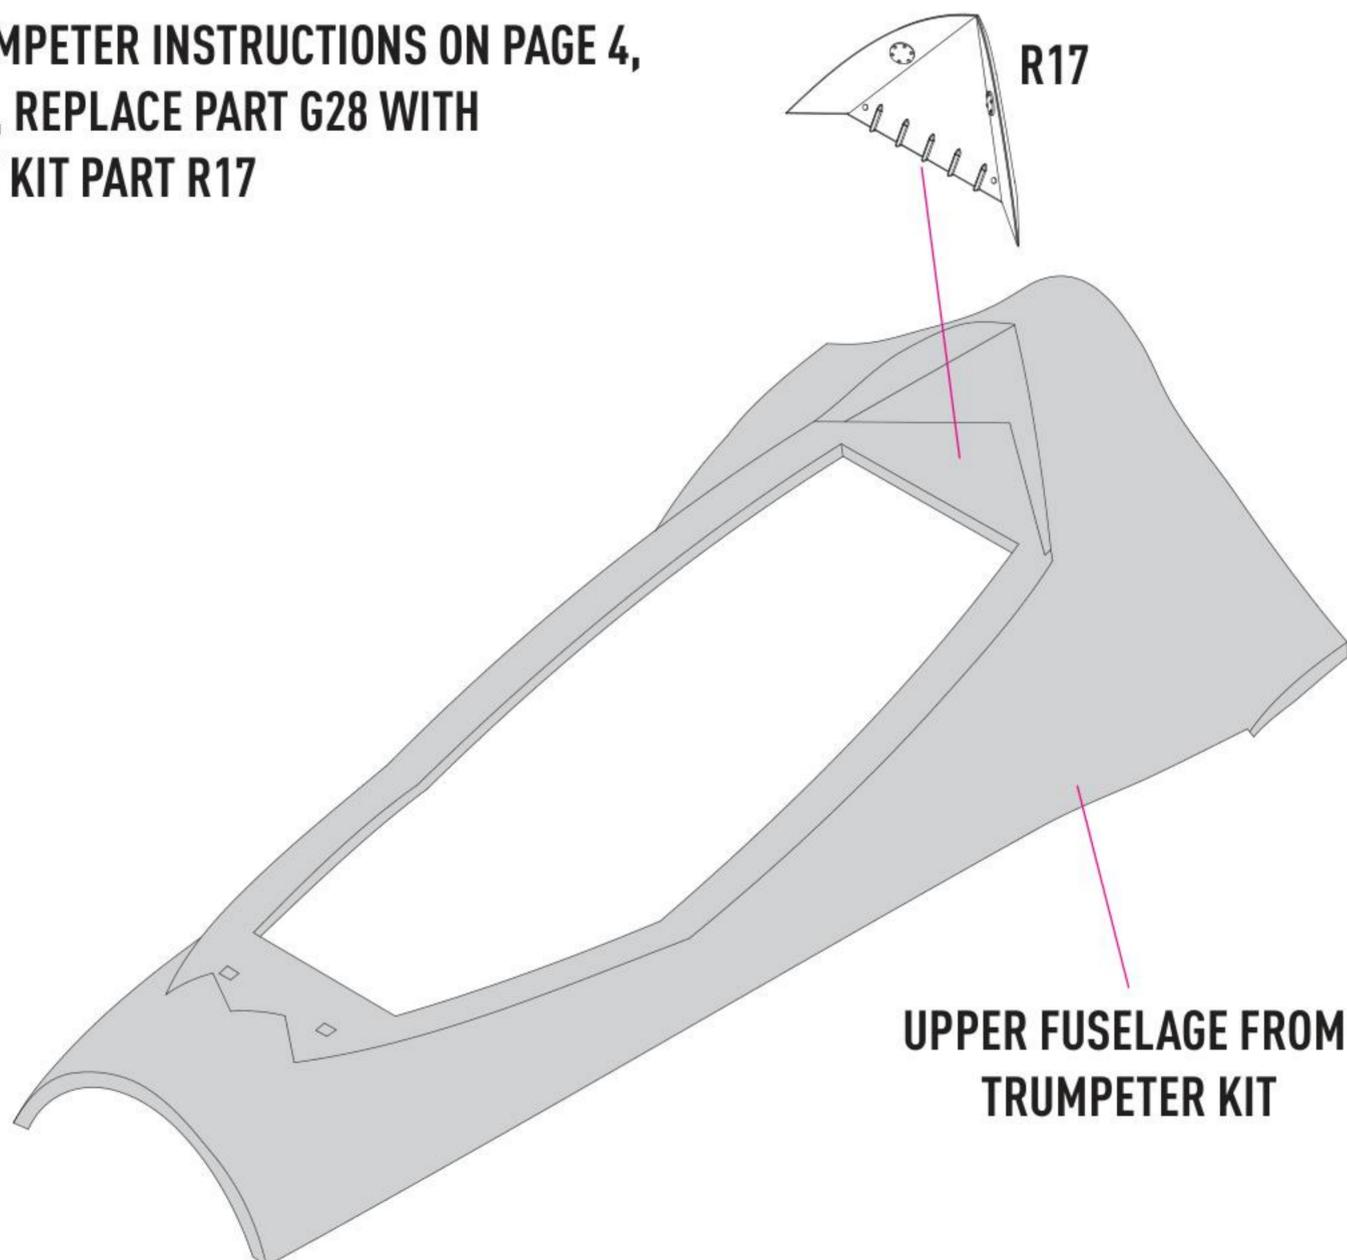

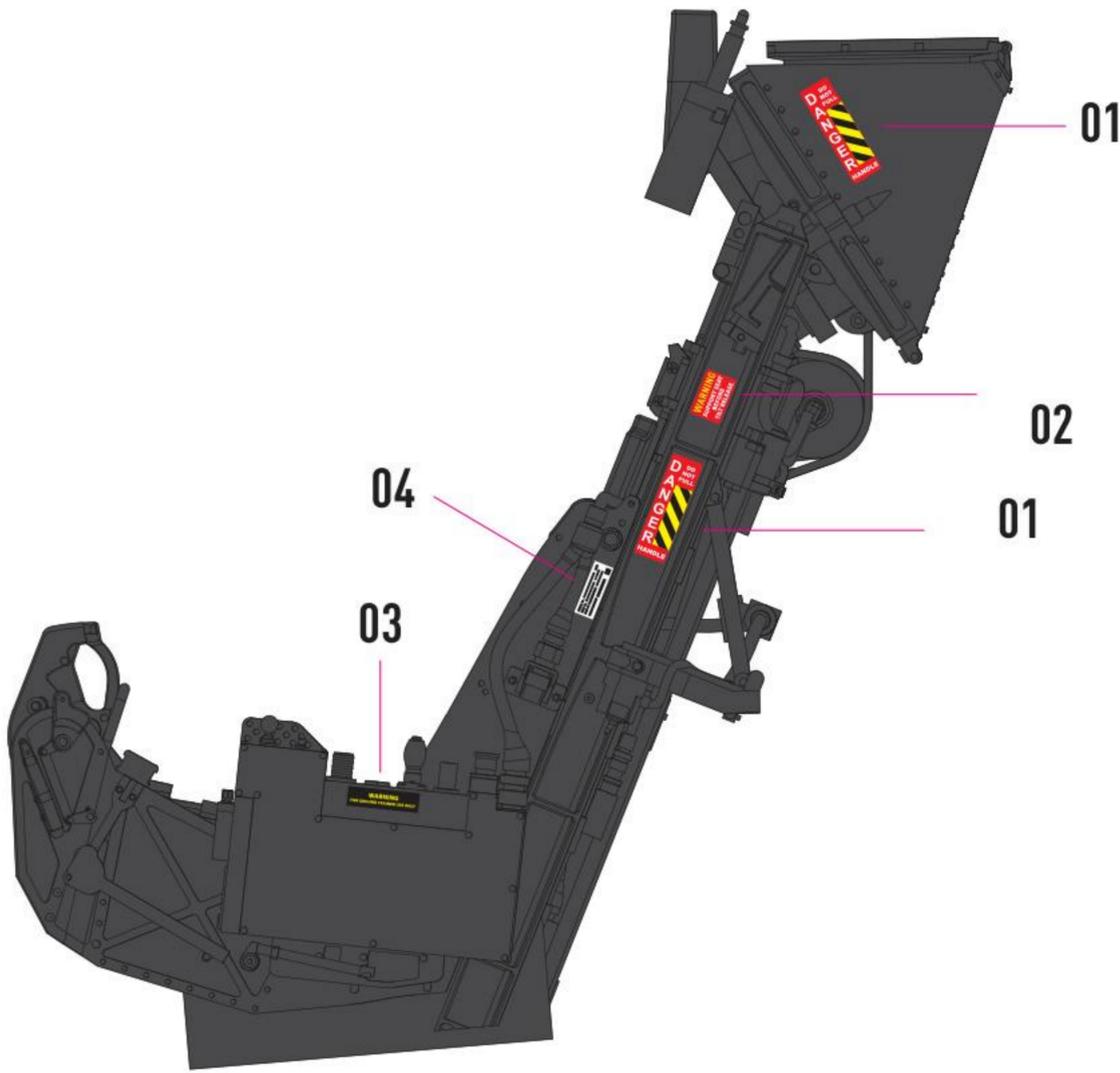

LEFT

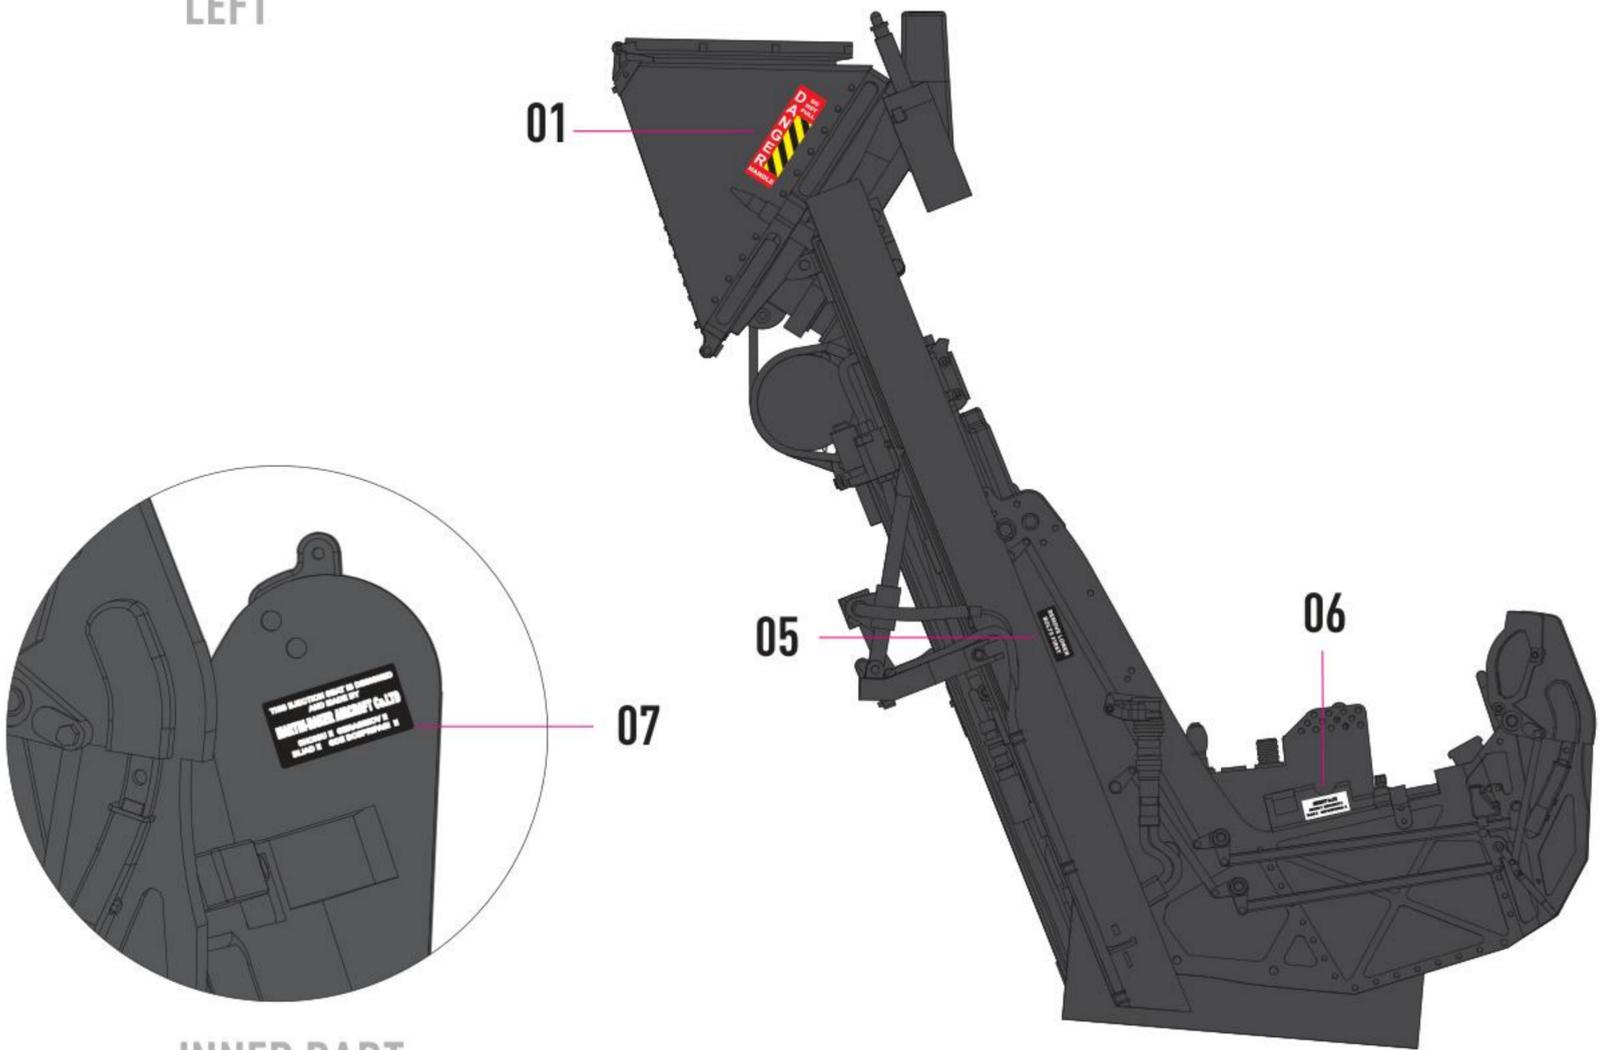

INNER PART

RIGHT