



**1 HYPER DETAILED EDITION**

**ASSEMBLY**

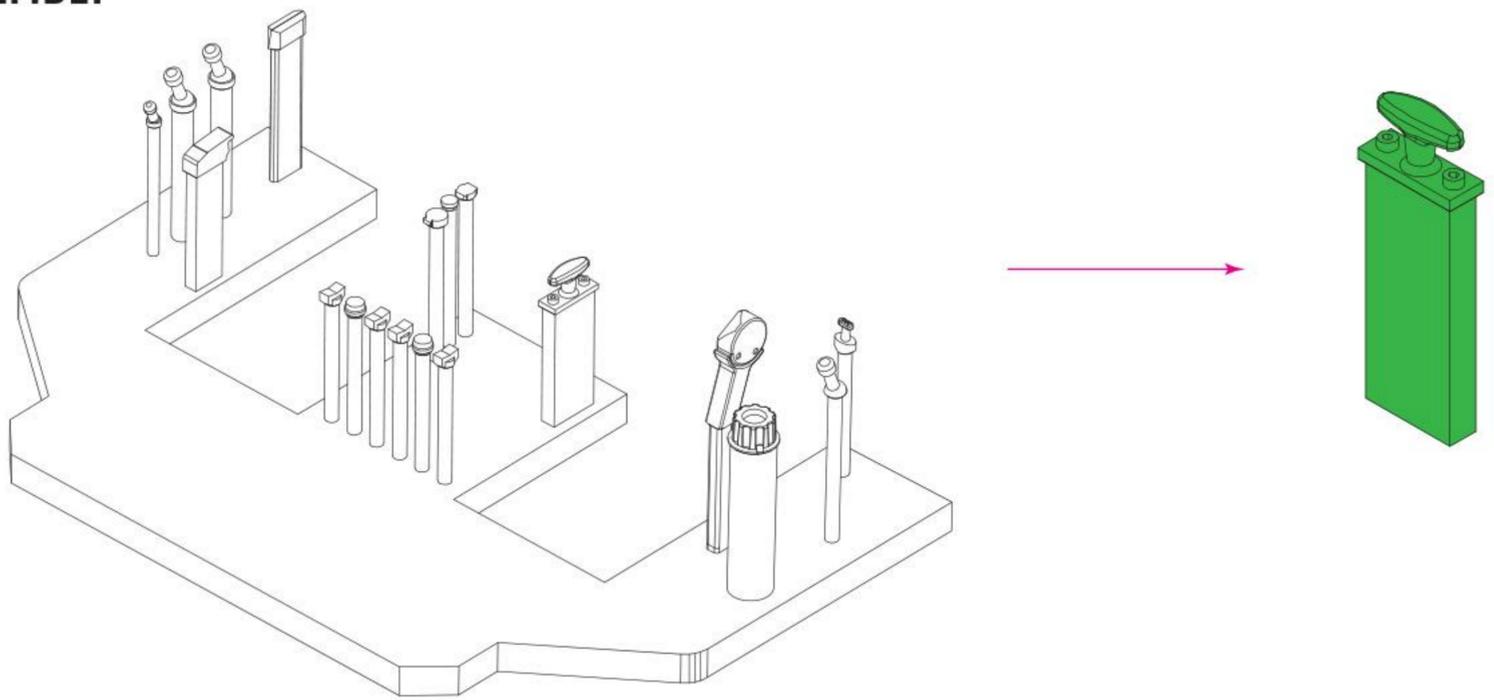


**REMOVE PART FROM THE PANEL WITH ELEMENTS**

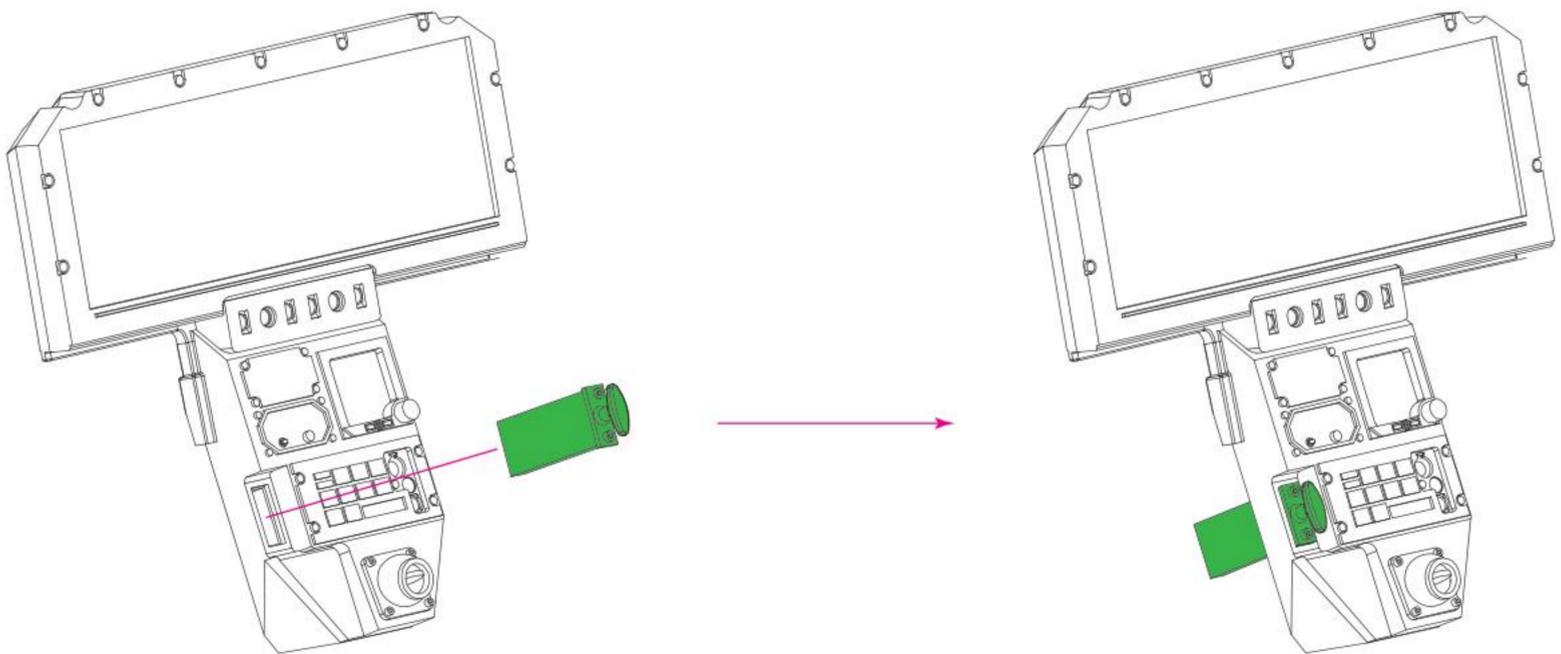


**INSERT PART INTO THE PANEL WITH HOLES**

**REMOVE THE SUPPORT  
FROM THE BACK SIDE**


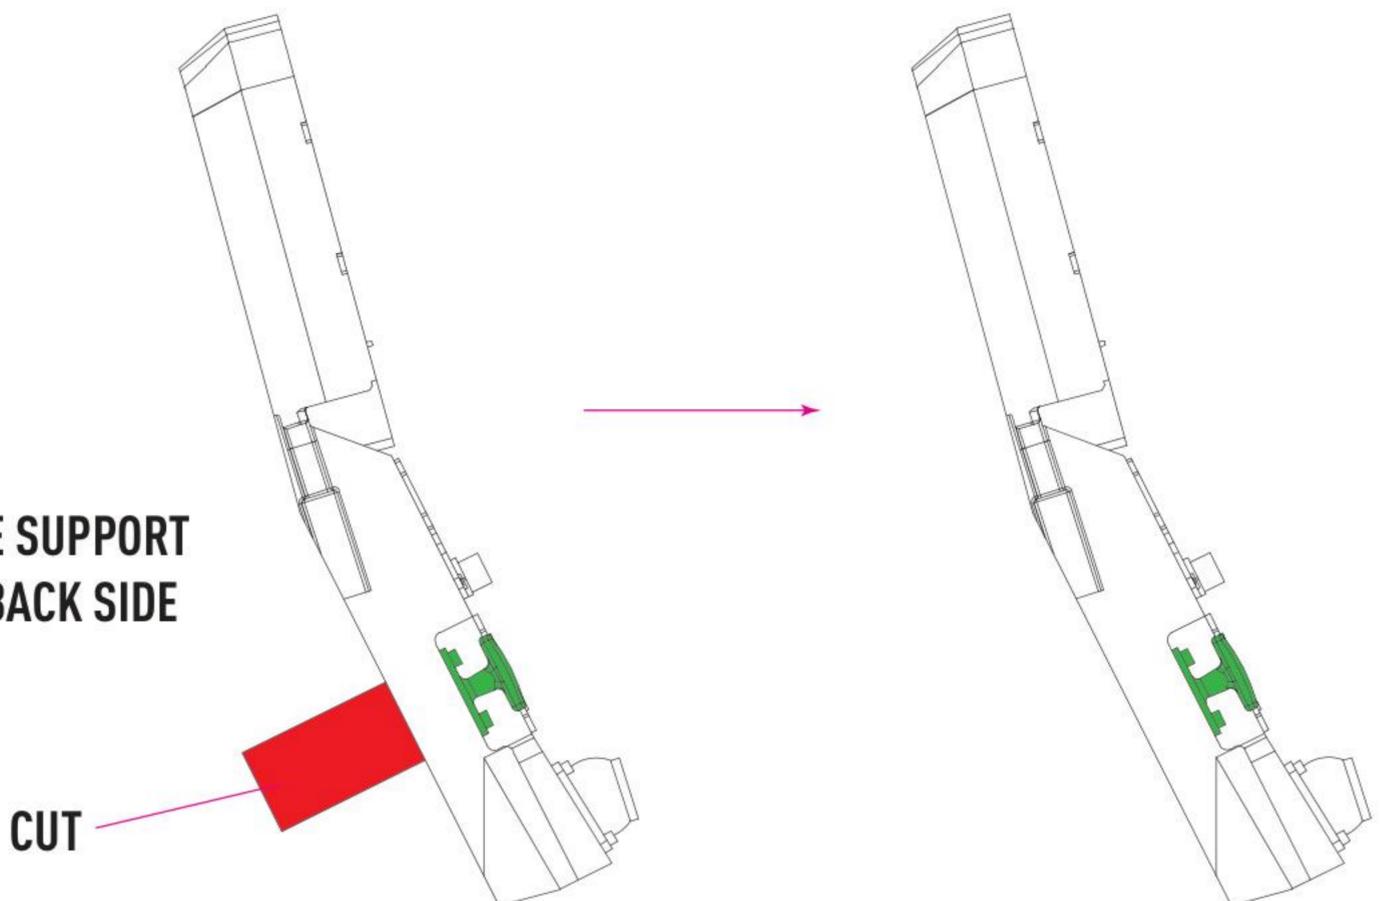


2



R1

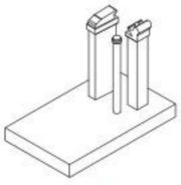



R1.3

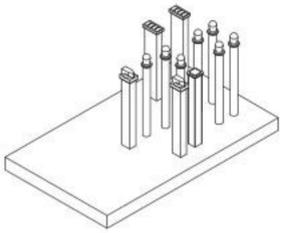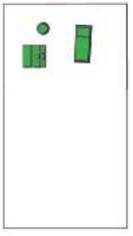


R1.2

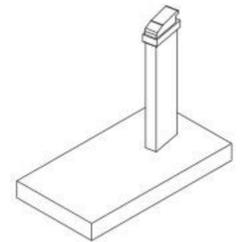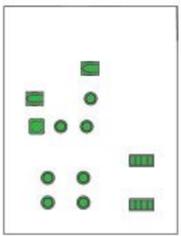


R1.1

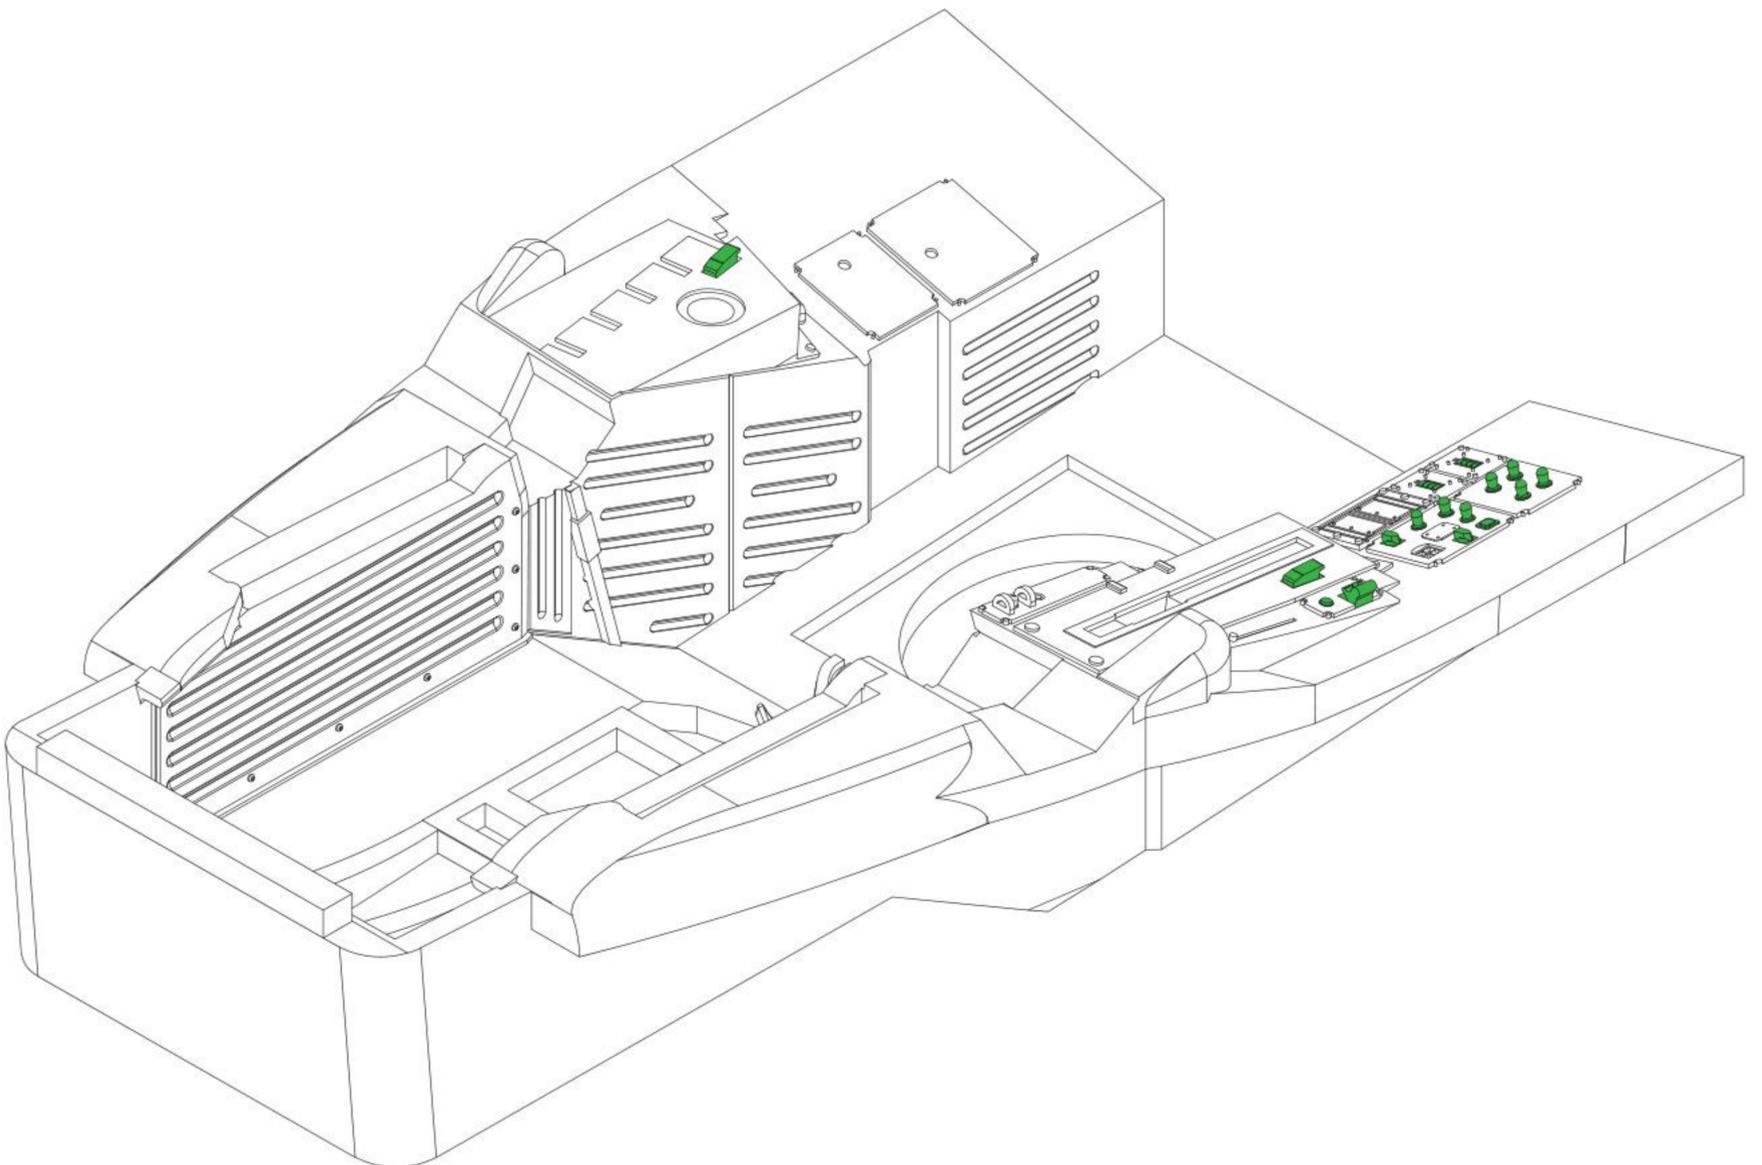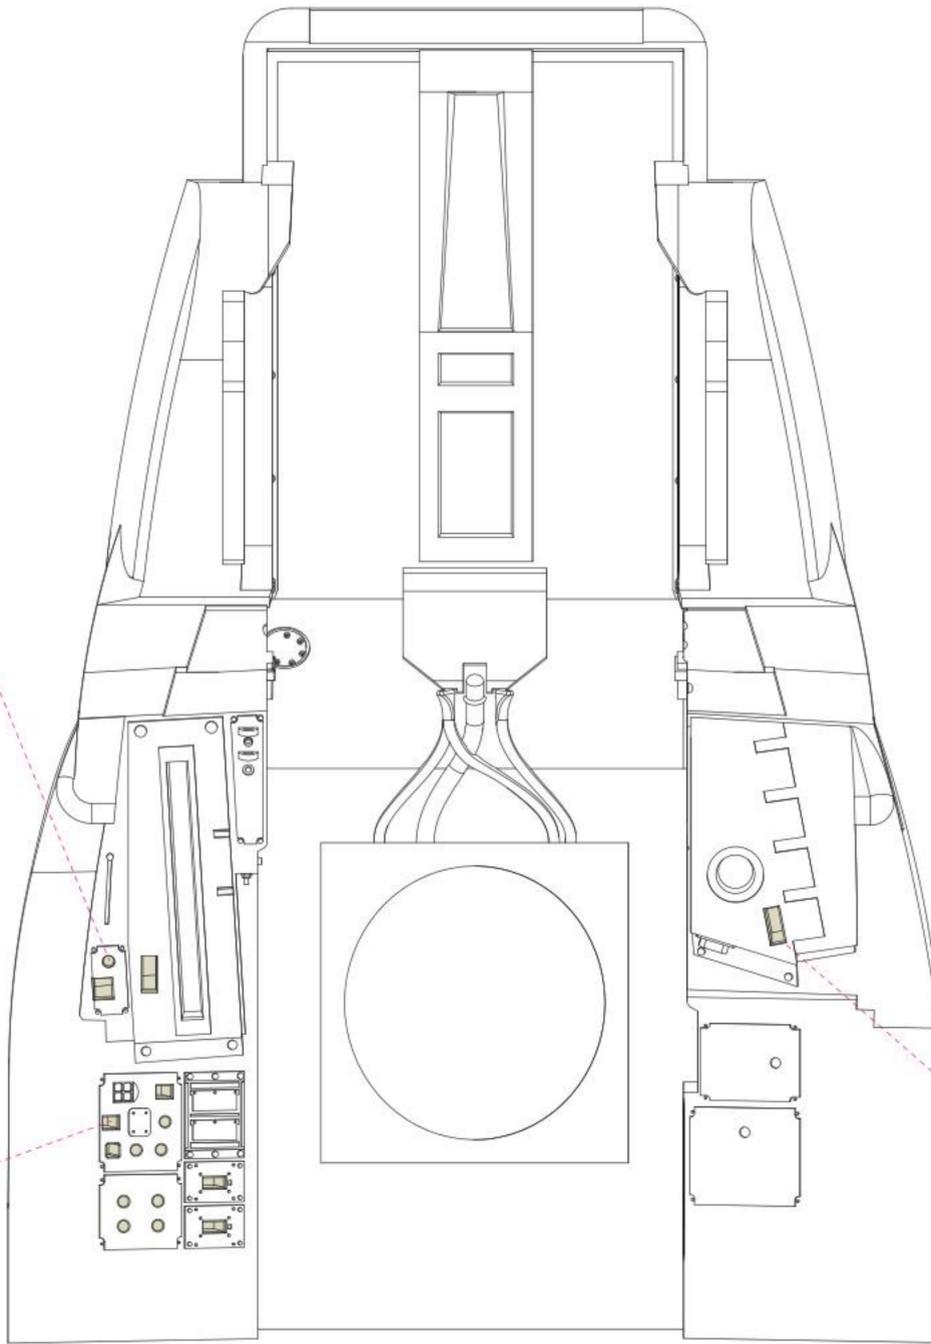


**3**

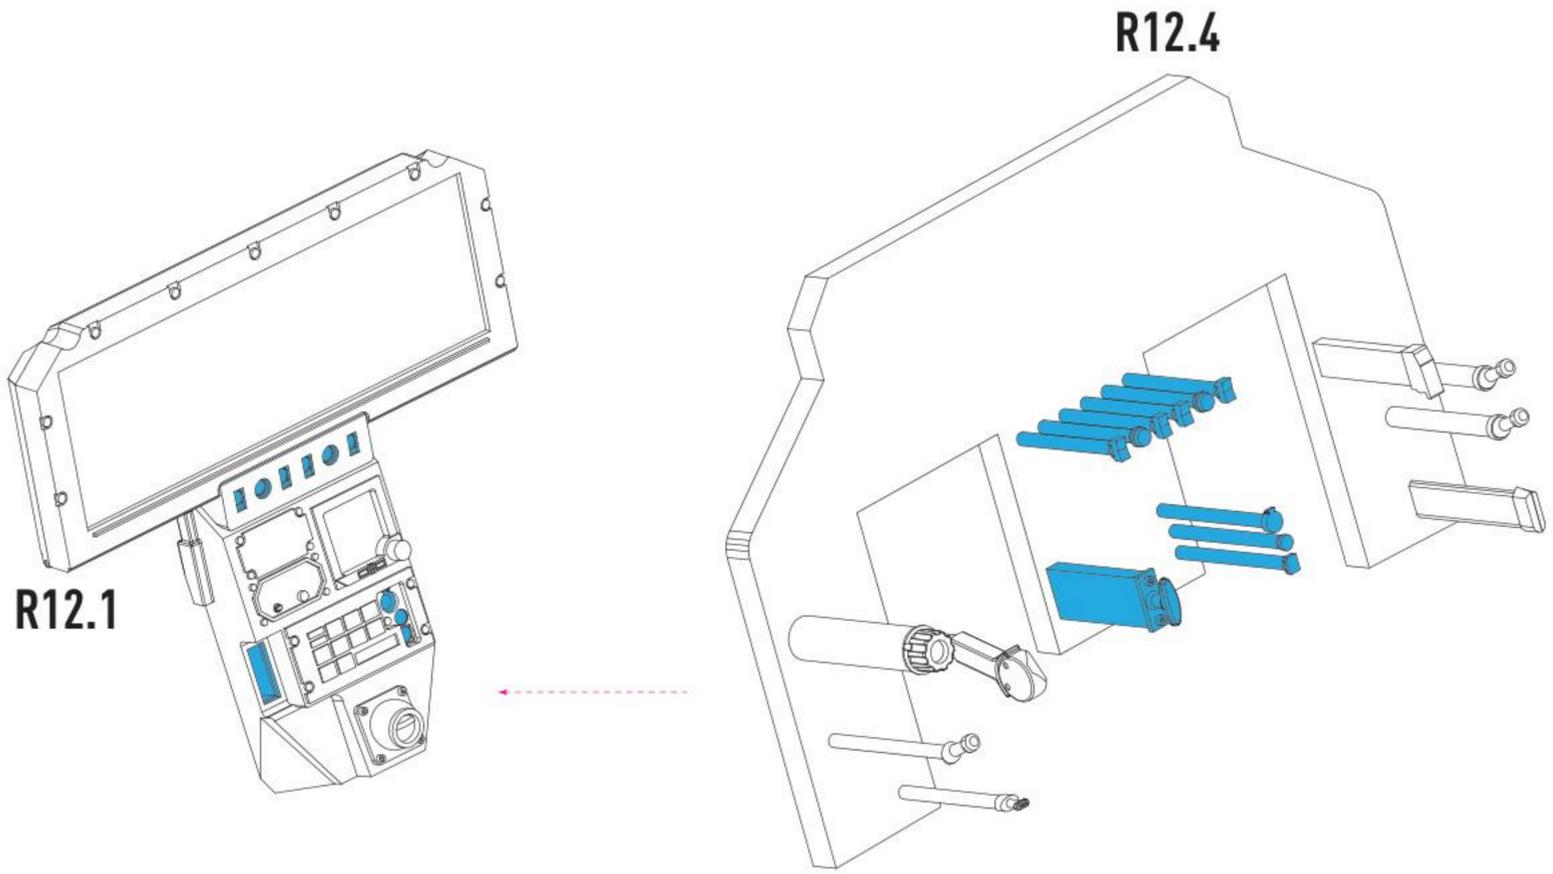


**4**

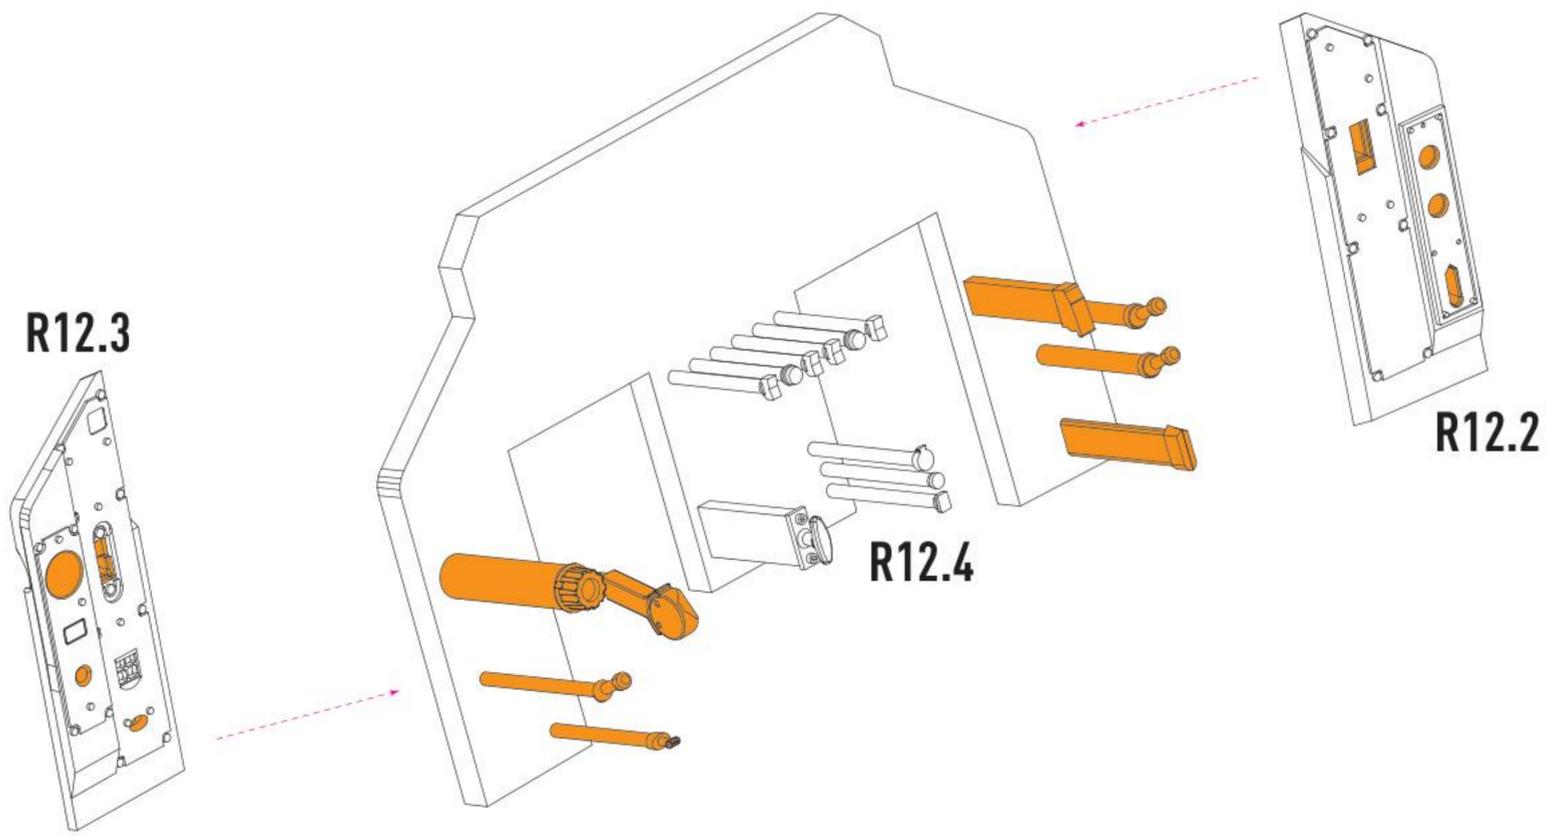


**5**

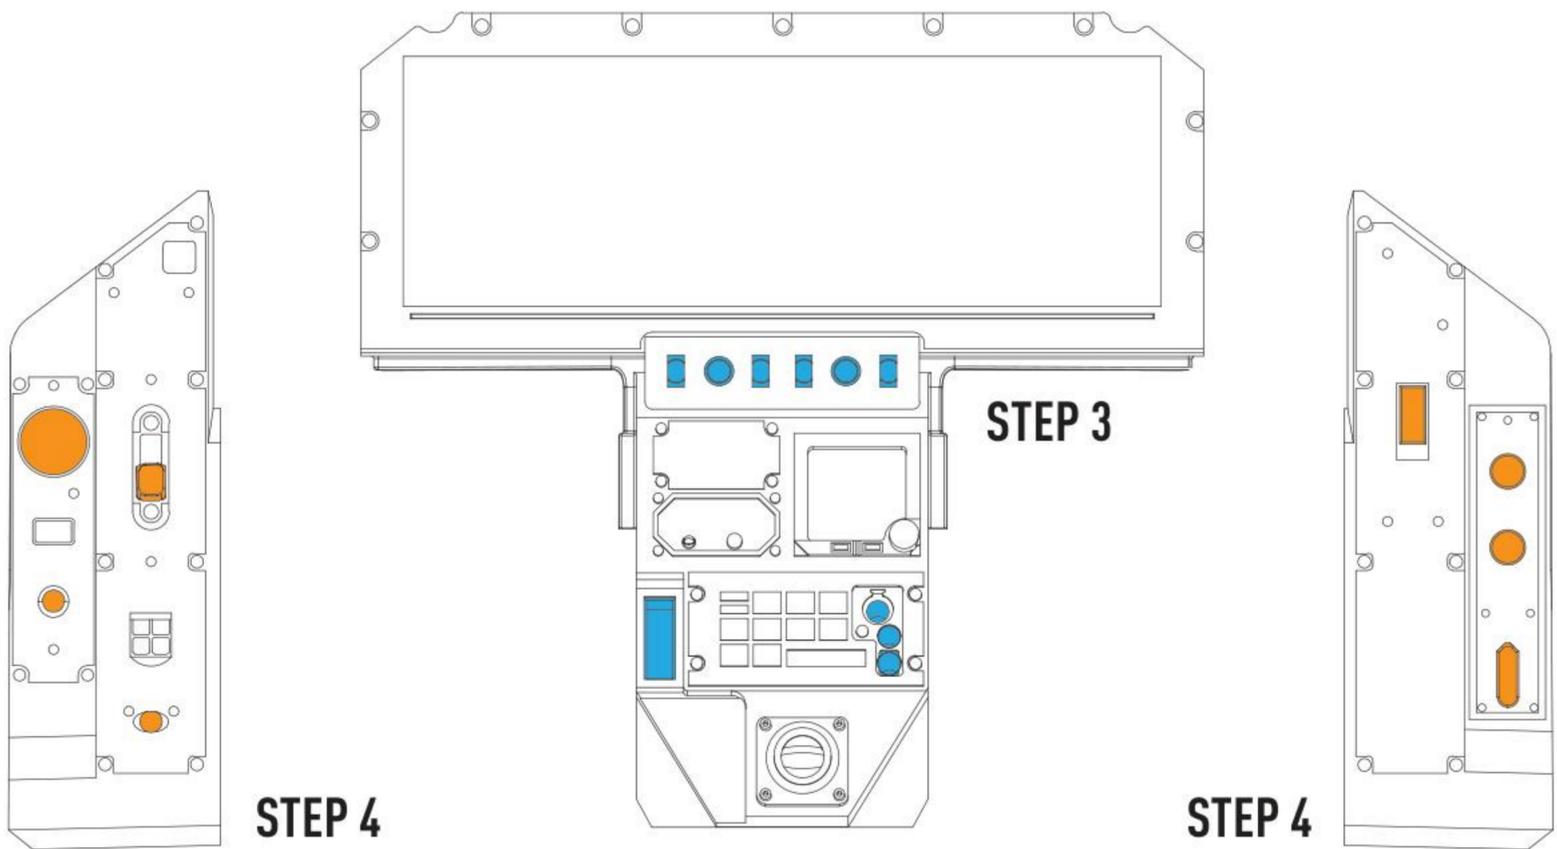


6

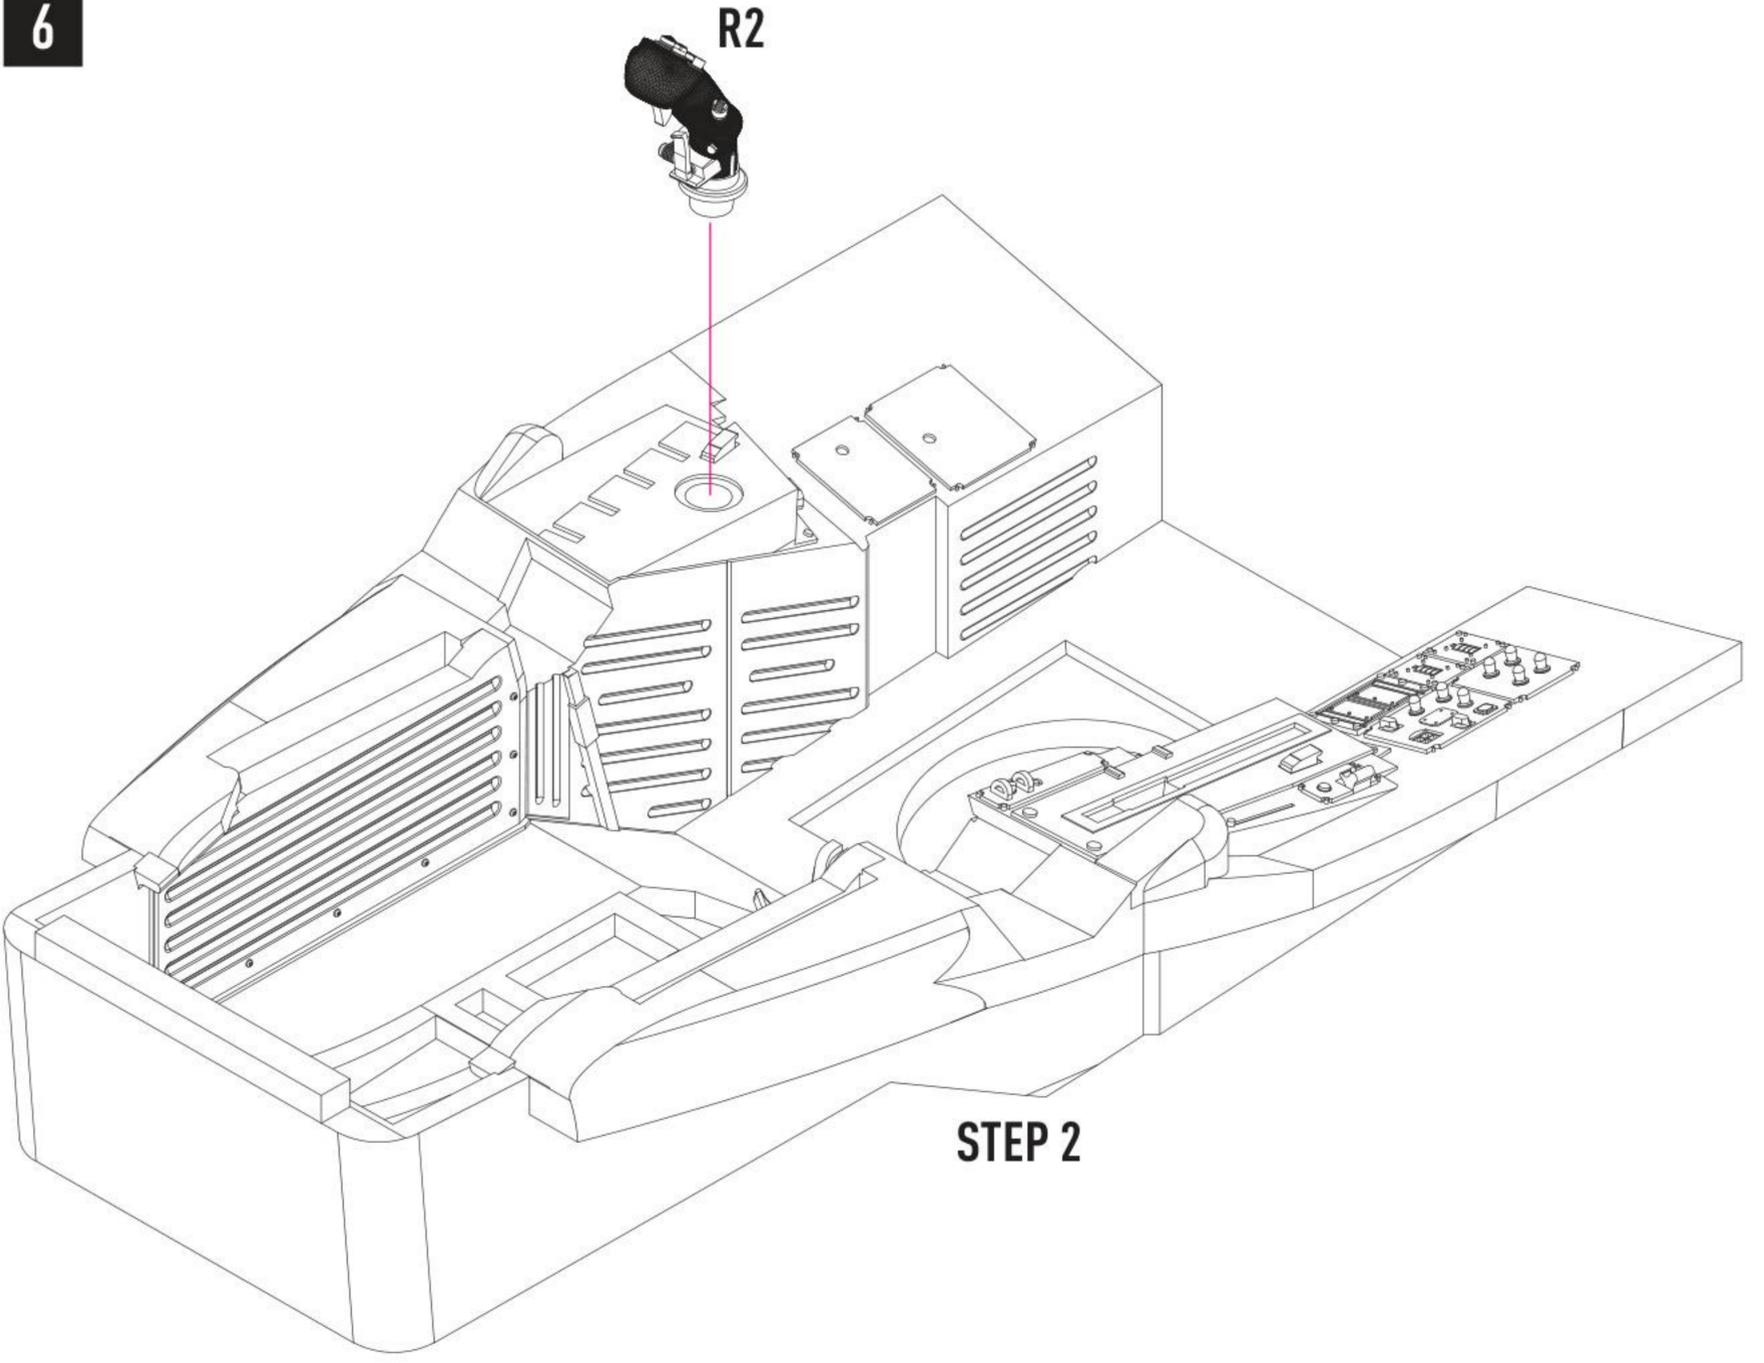


7

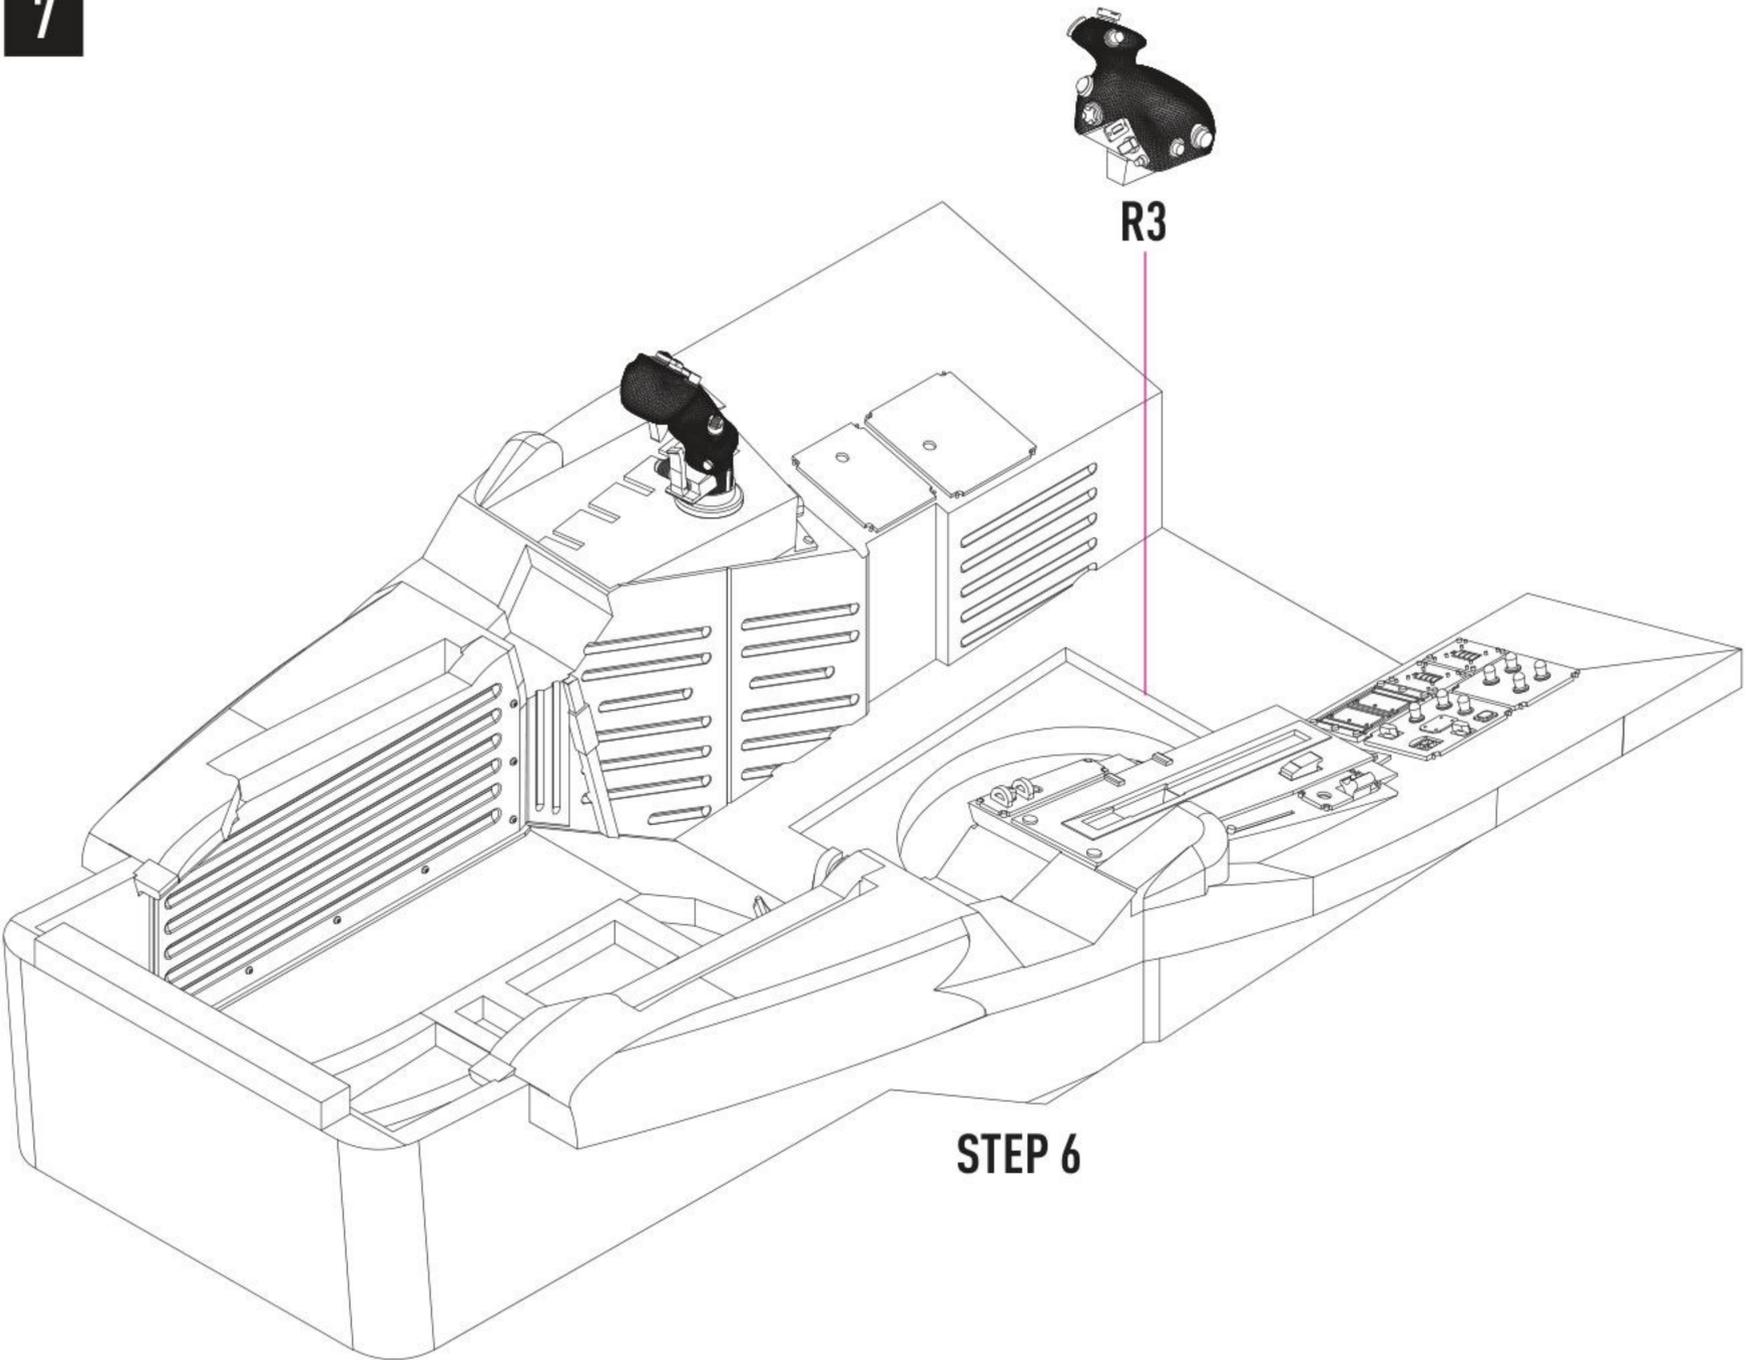



8

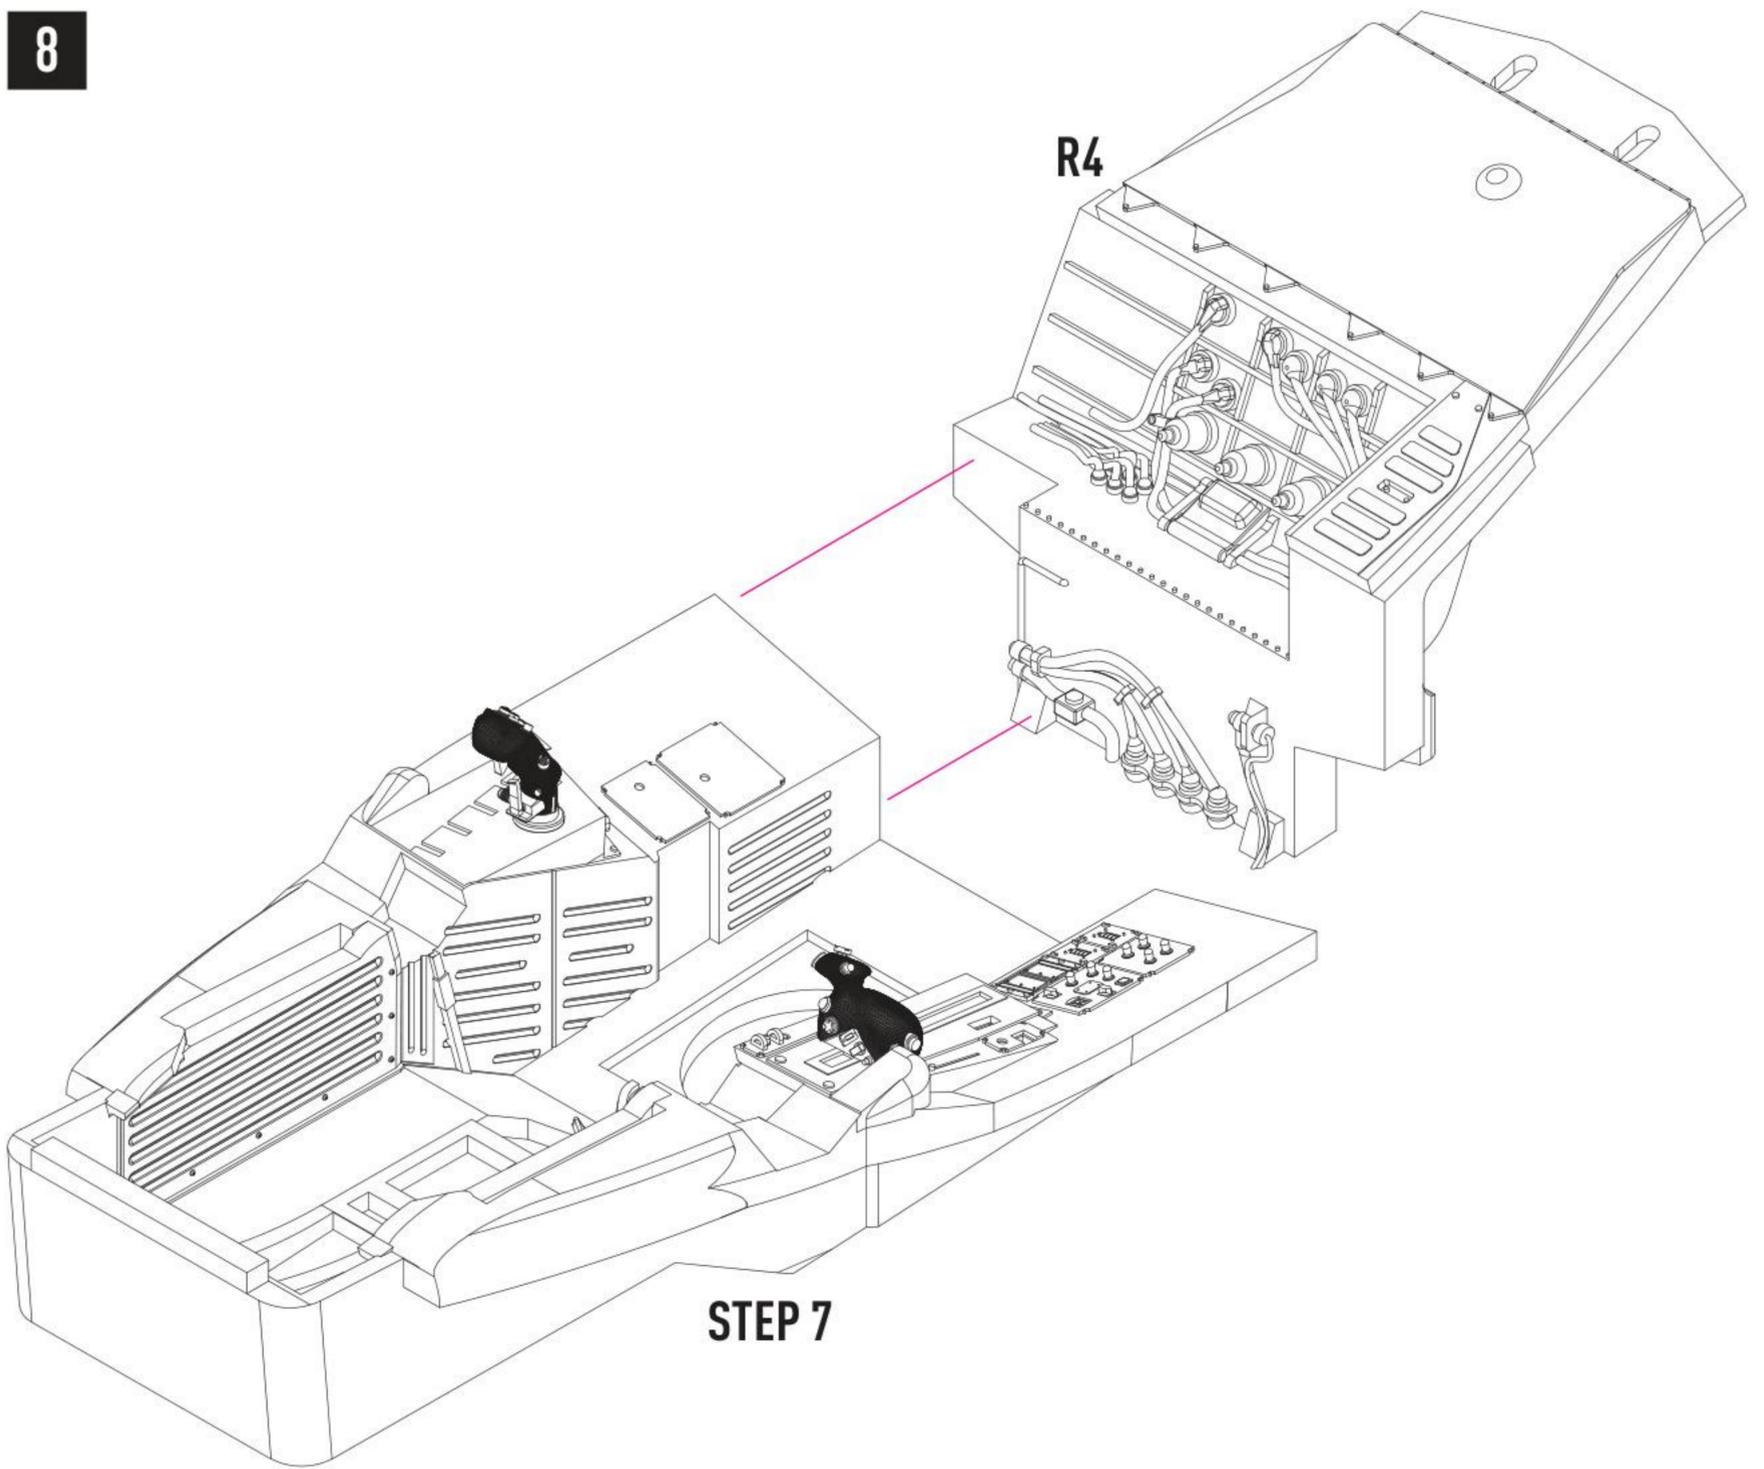



9

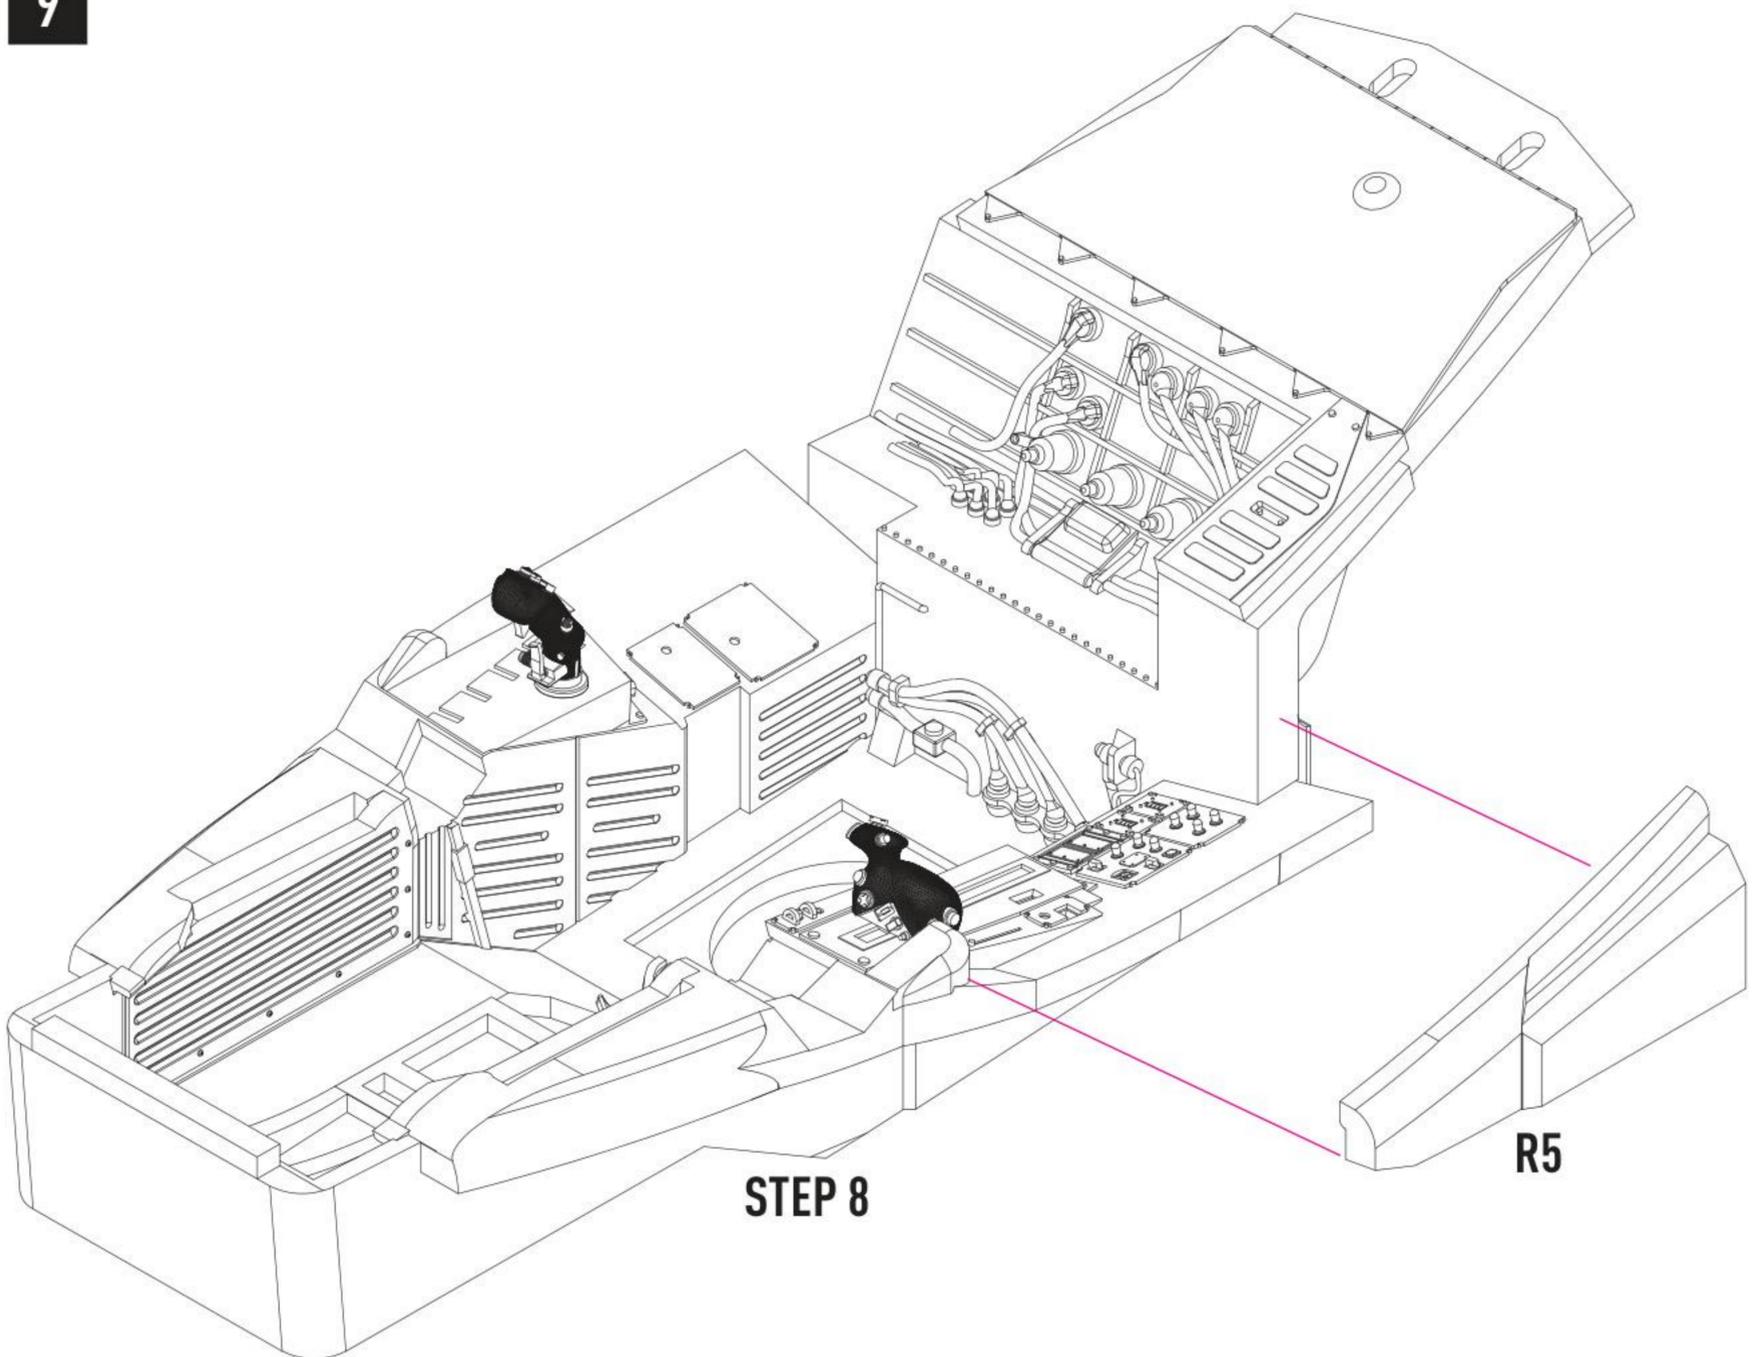


10

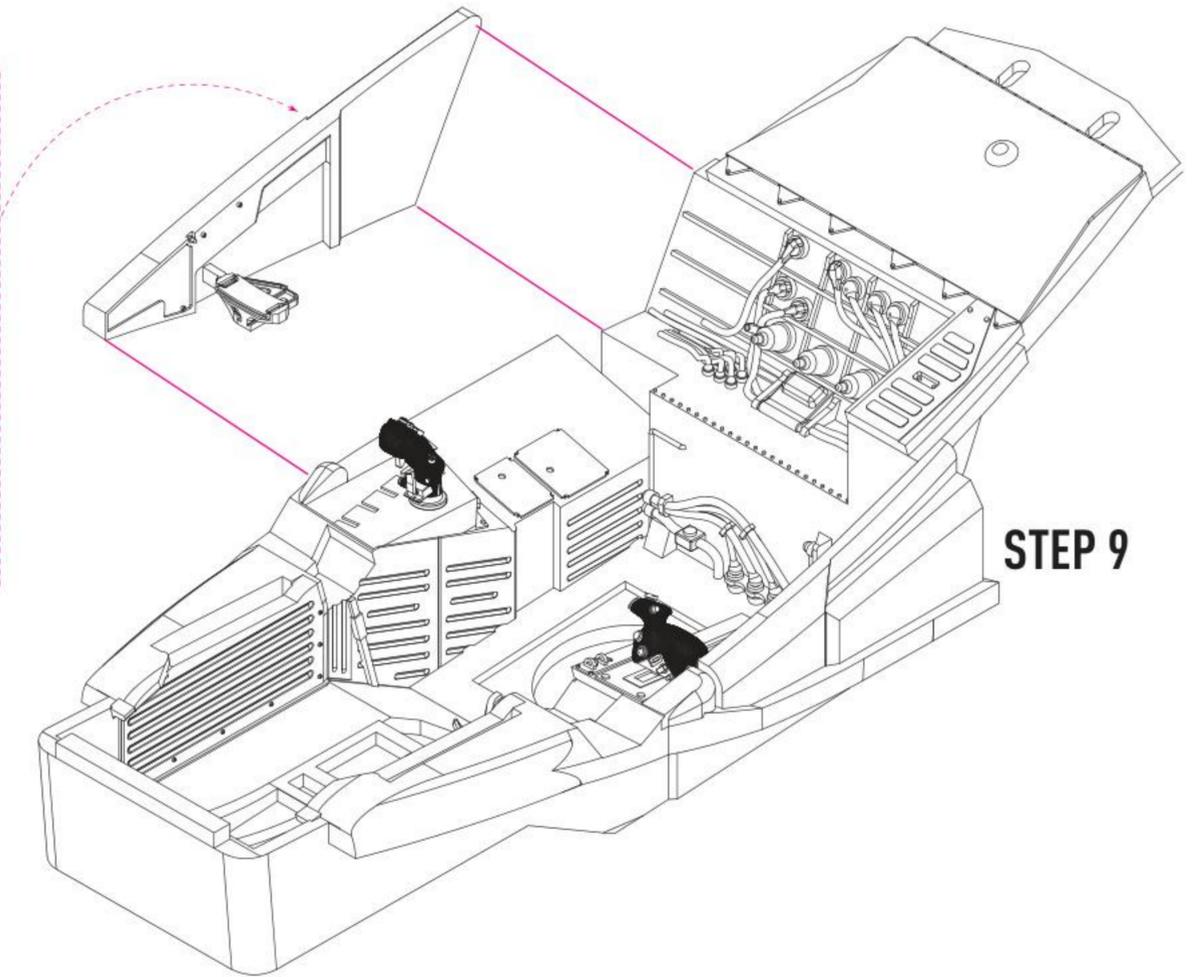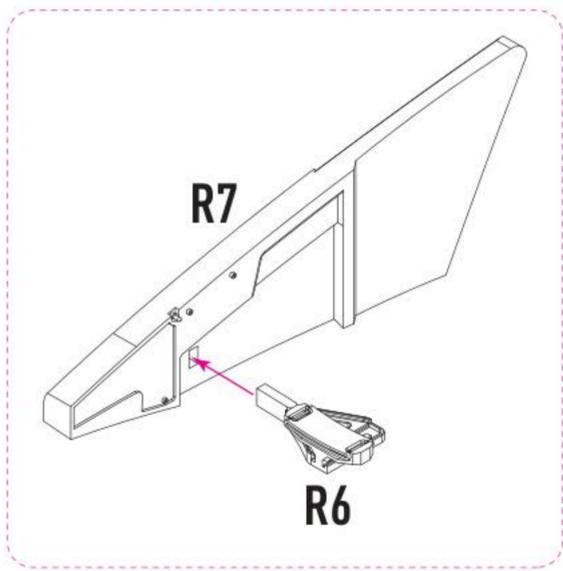


11

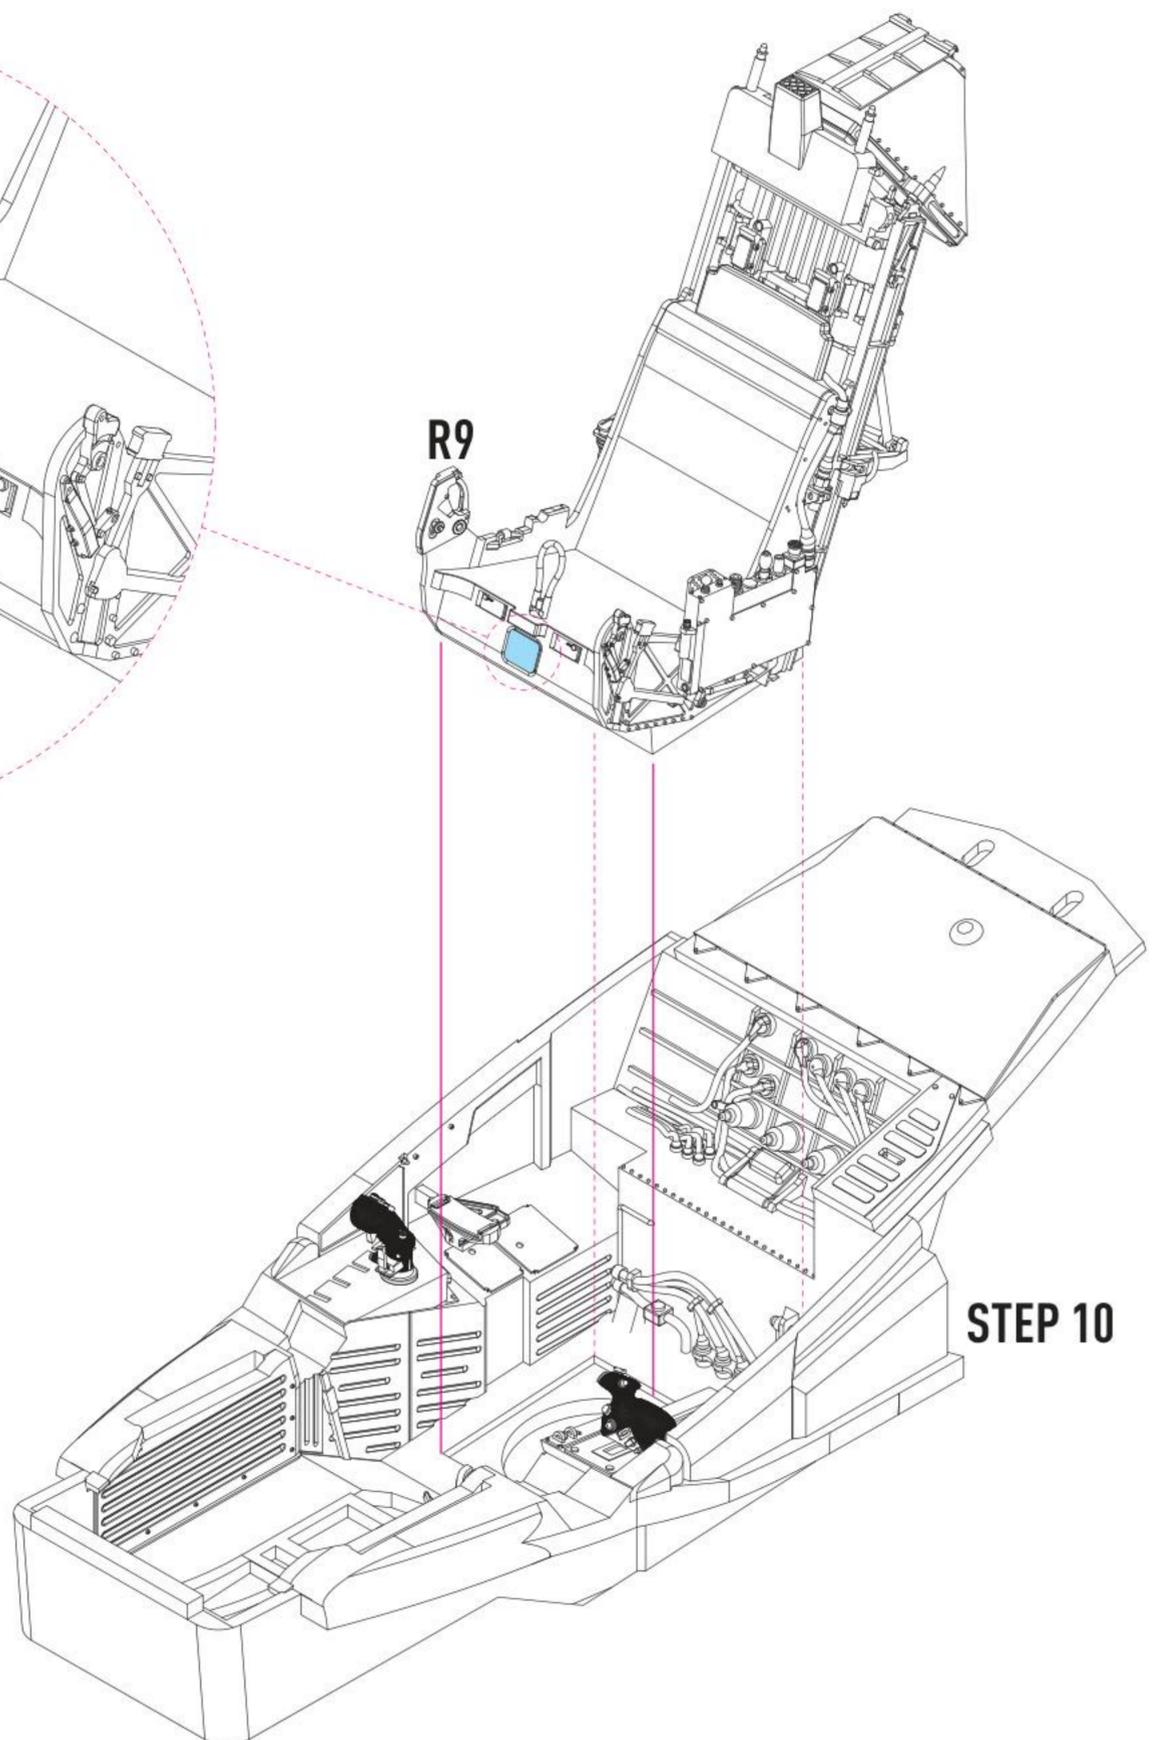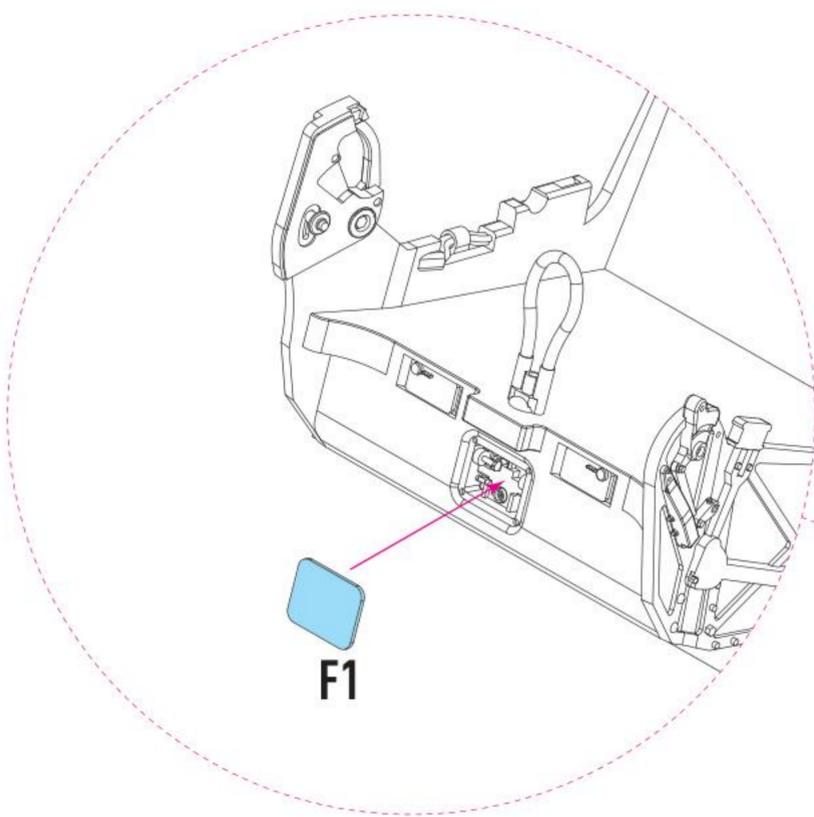


PART R10 IS OPTIONAL

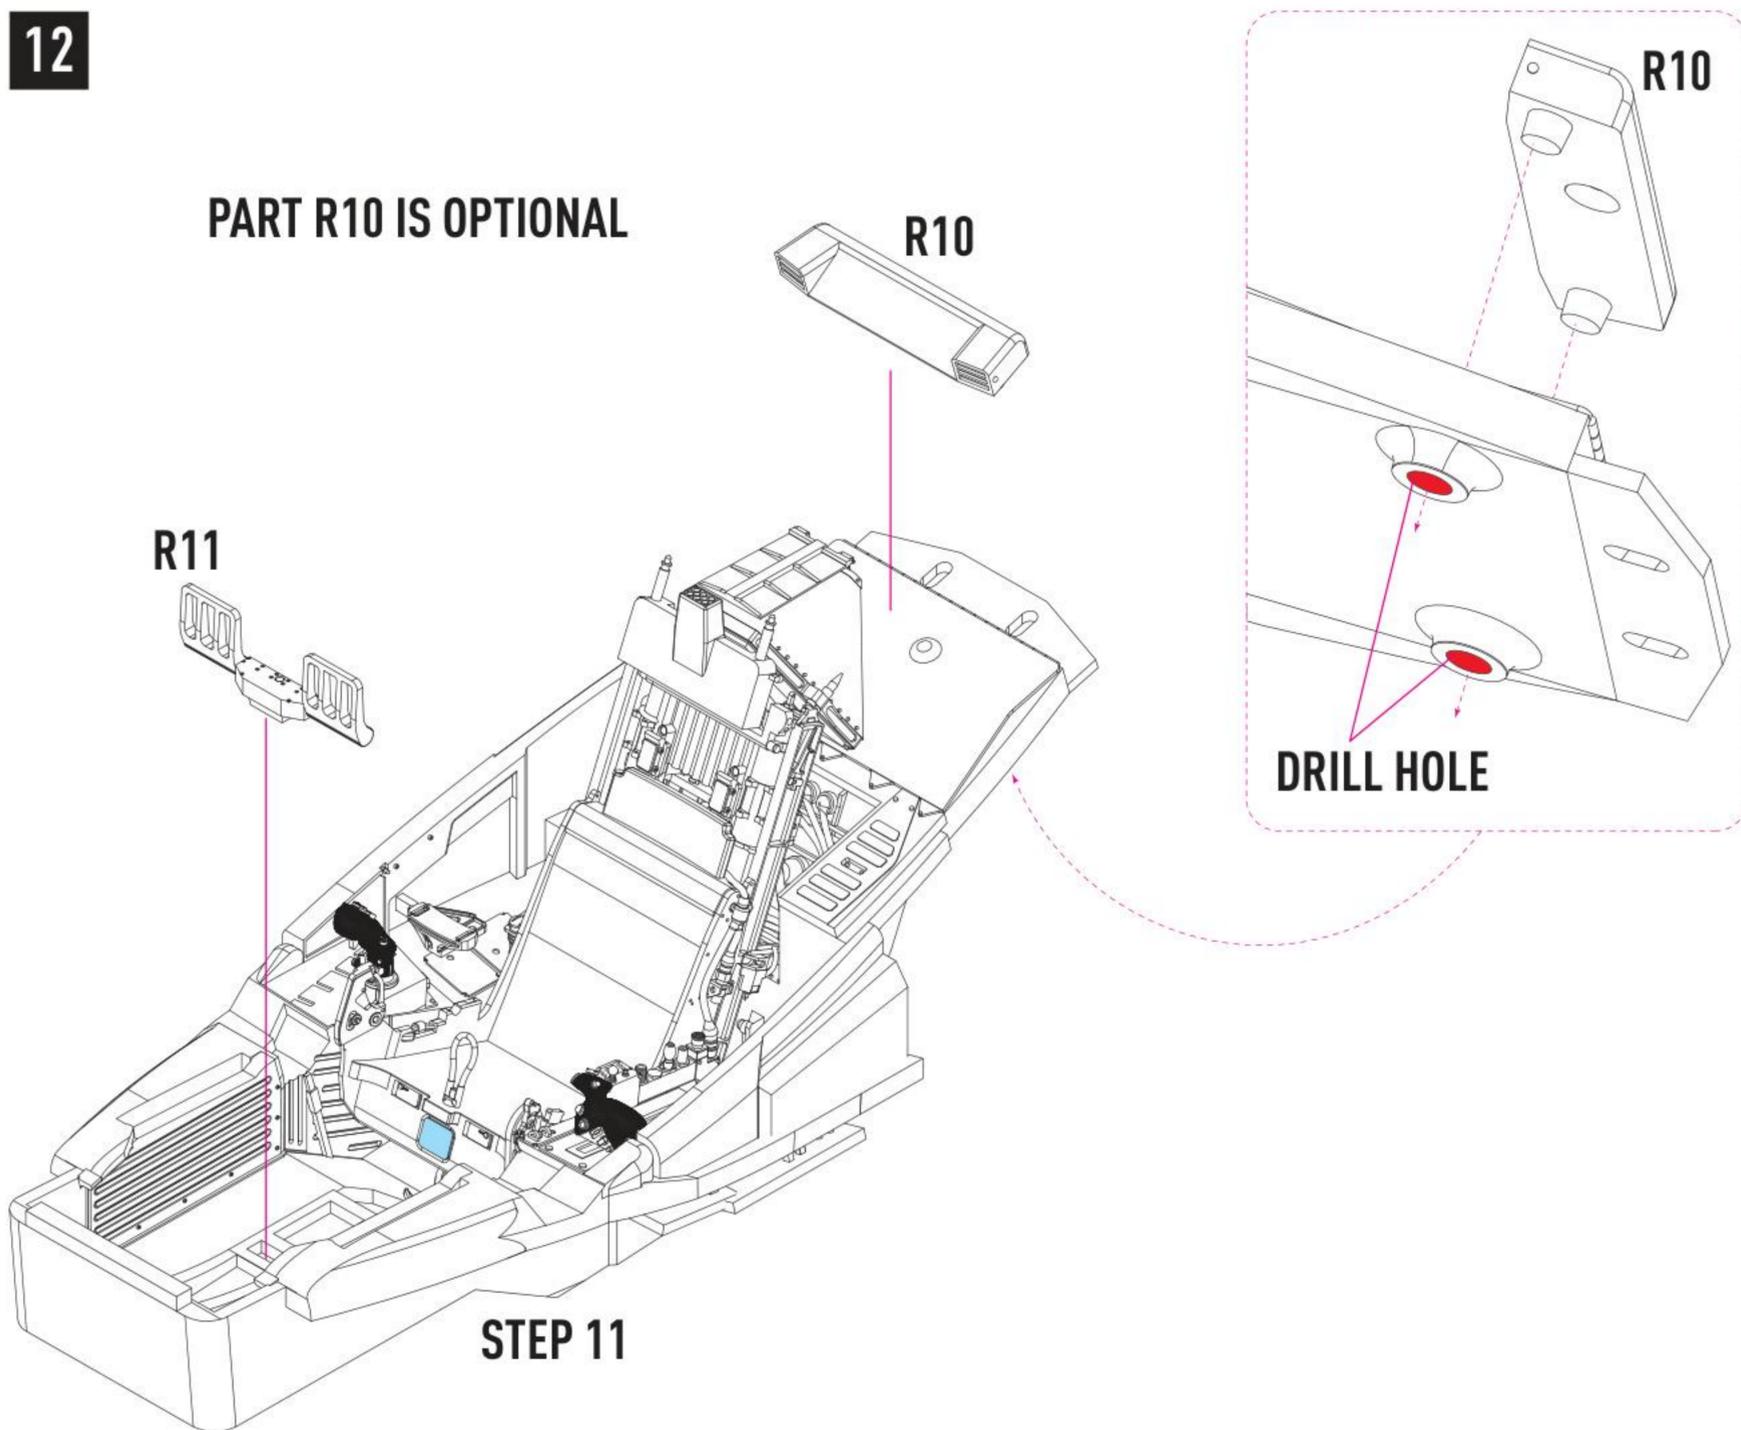


13 GLUE PART 12 WITH PARTS FROM STEP 5 OR USE READY PARTS R14, R15, R16

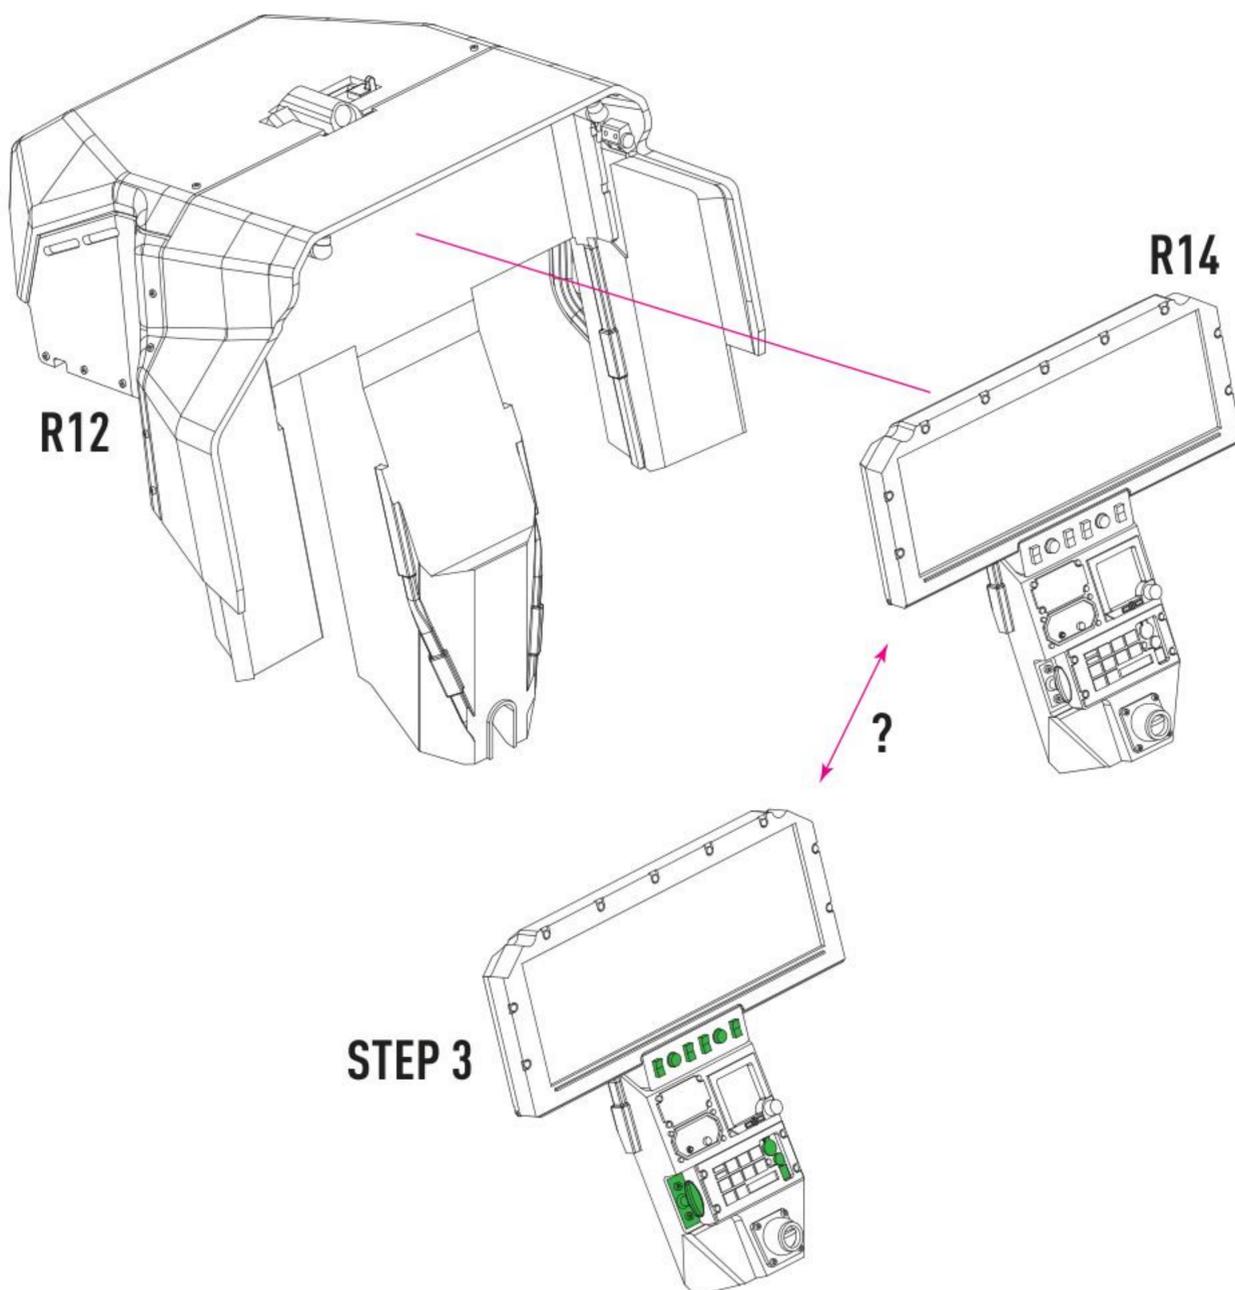


STEP 13

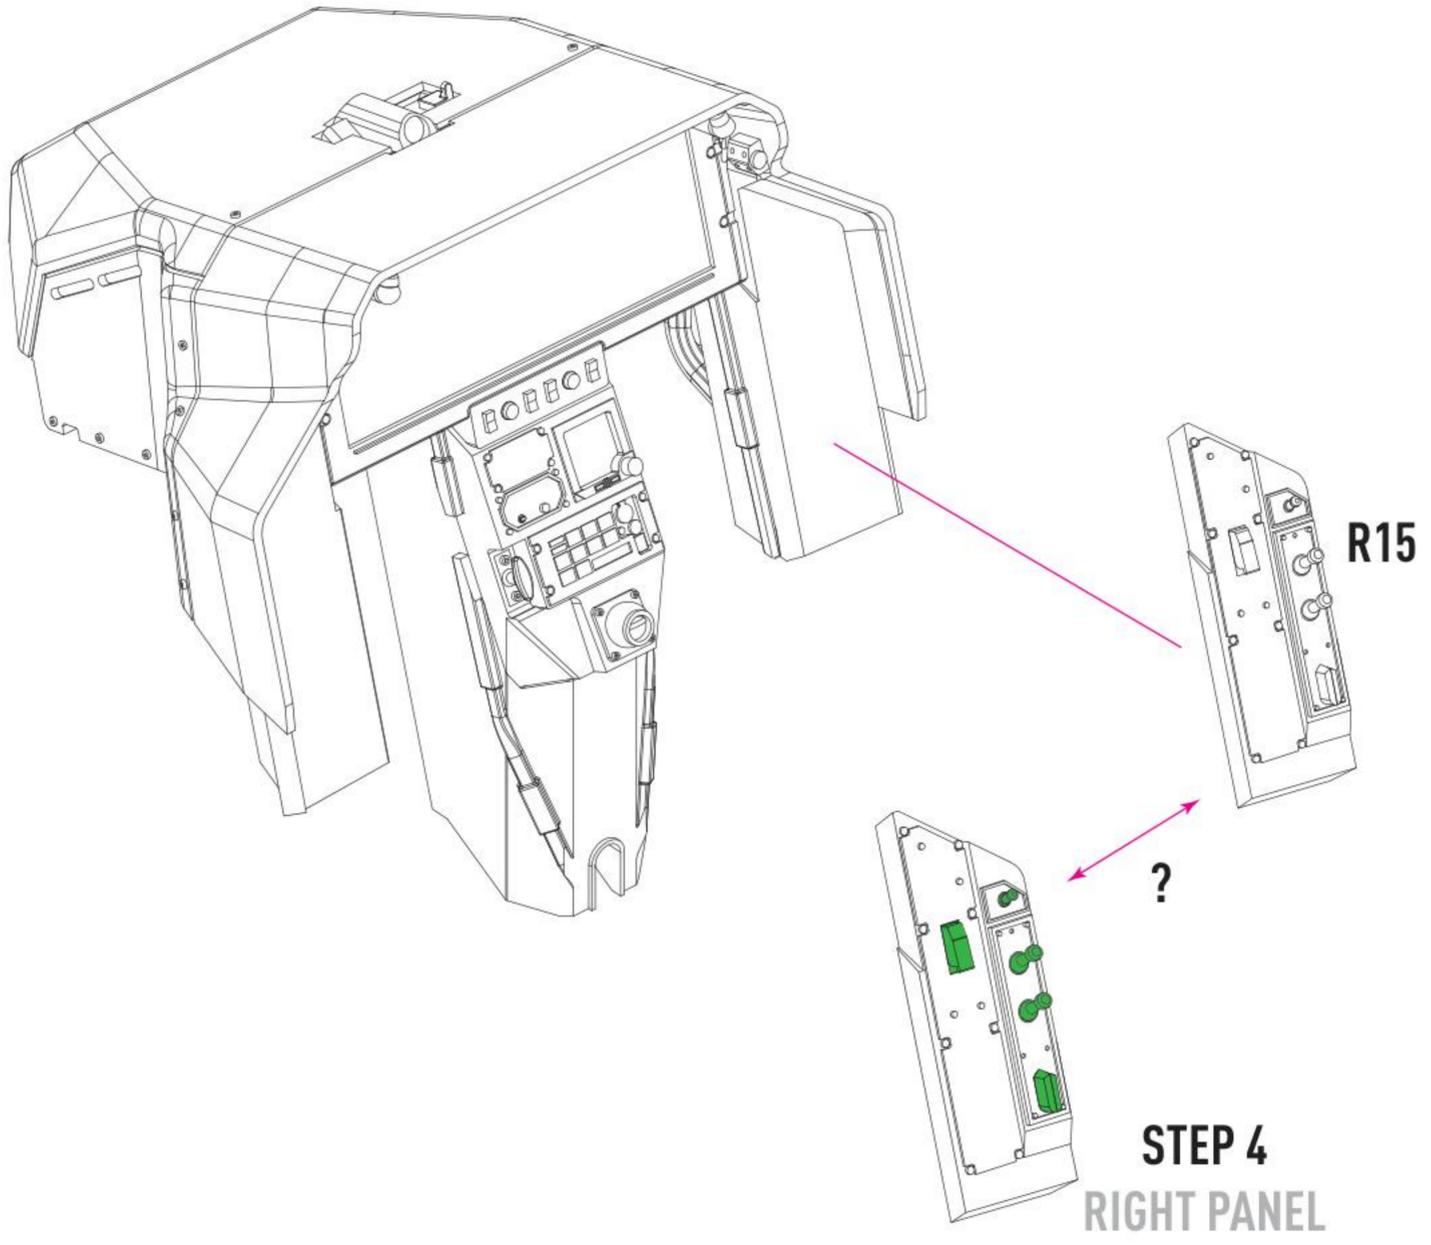


STEP 14

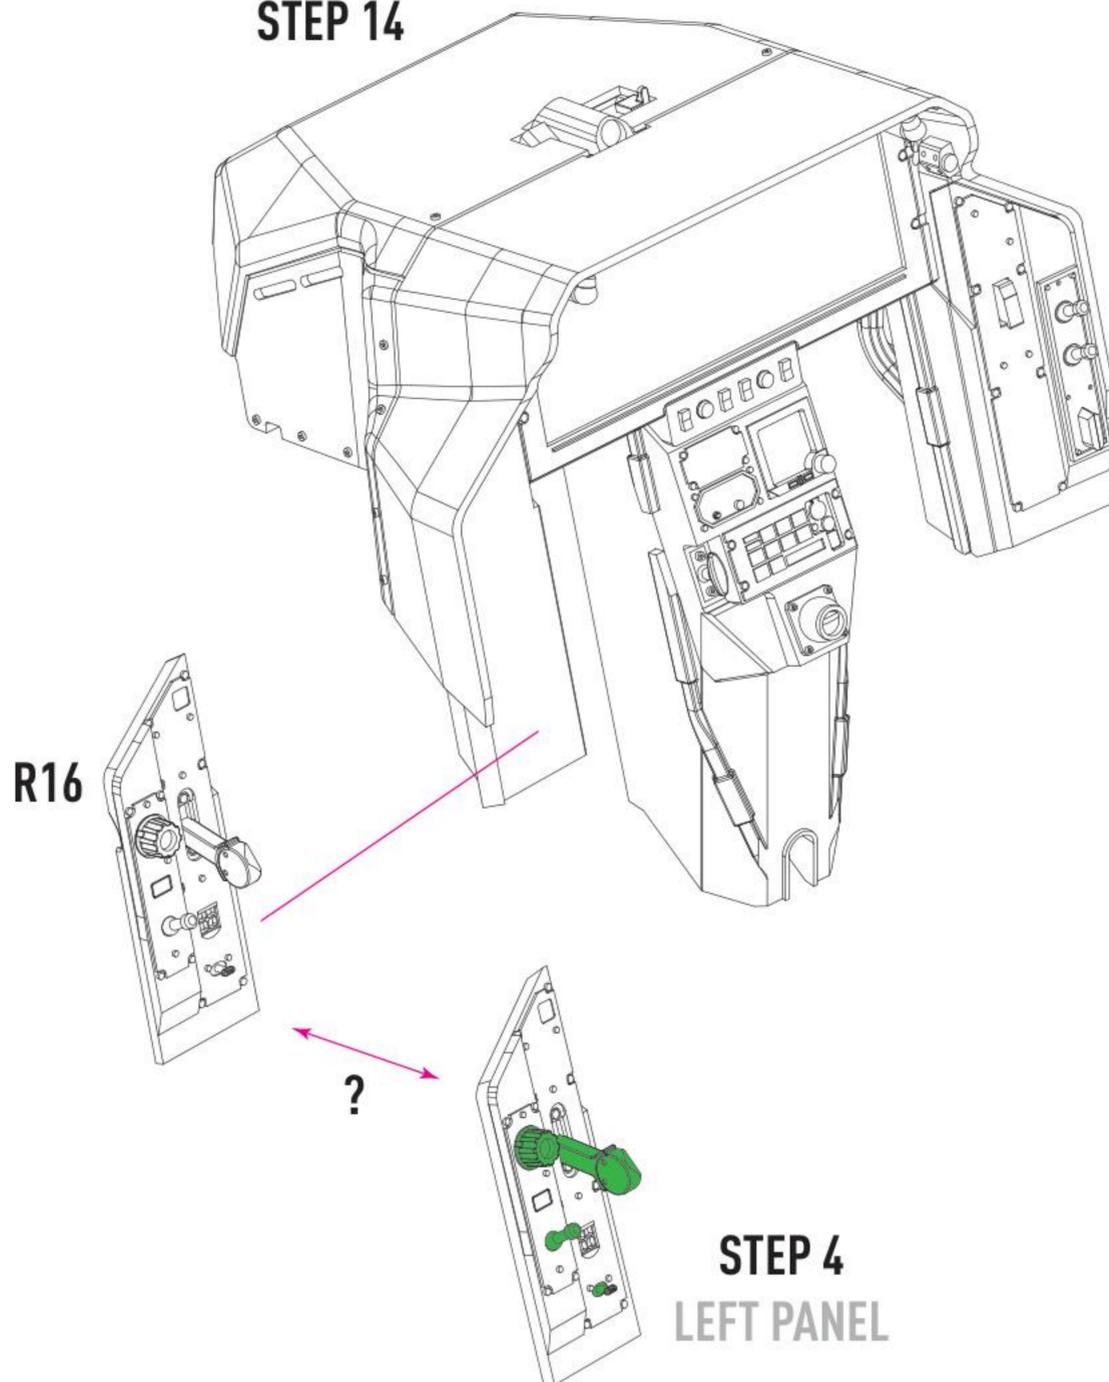


STEP 15

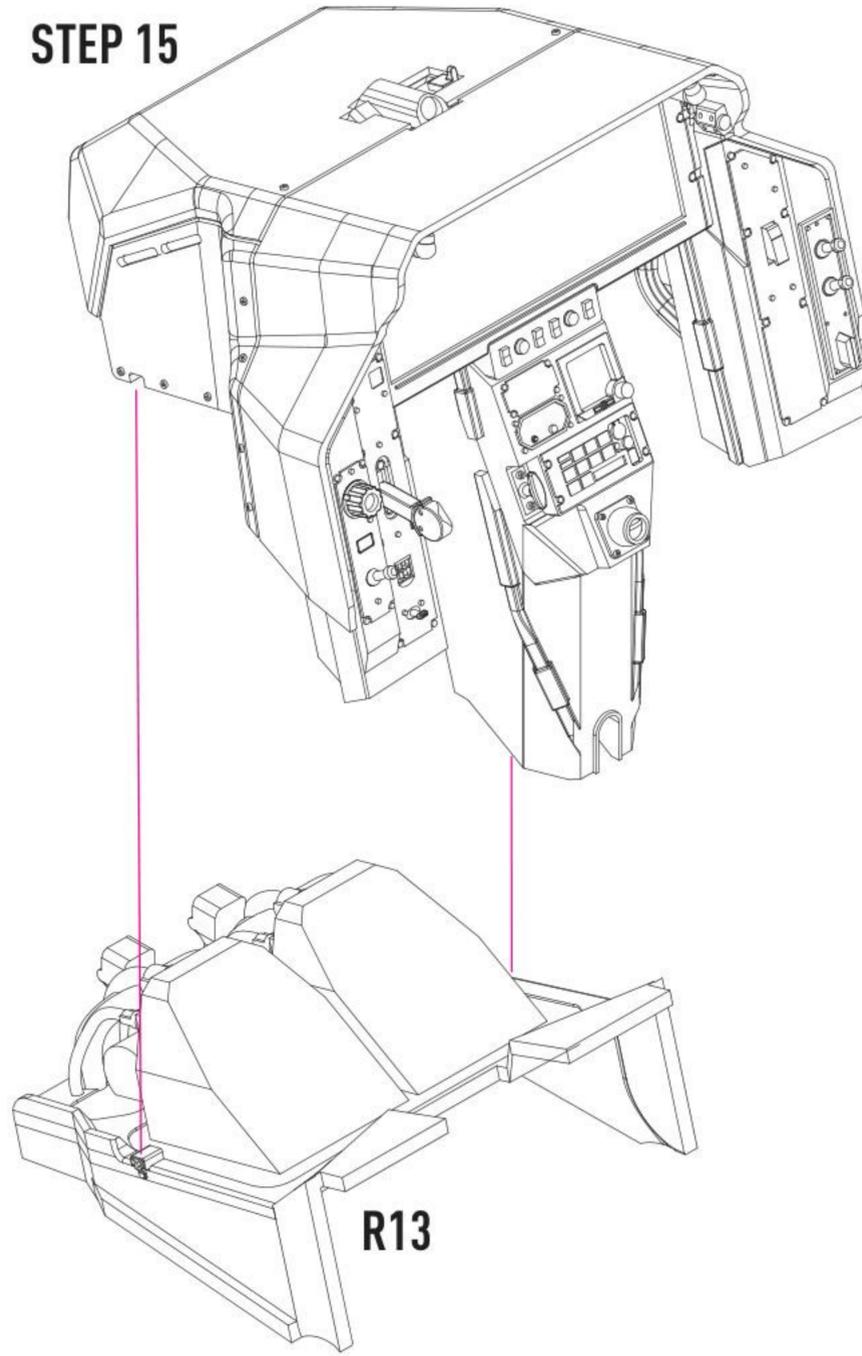


STEP 16

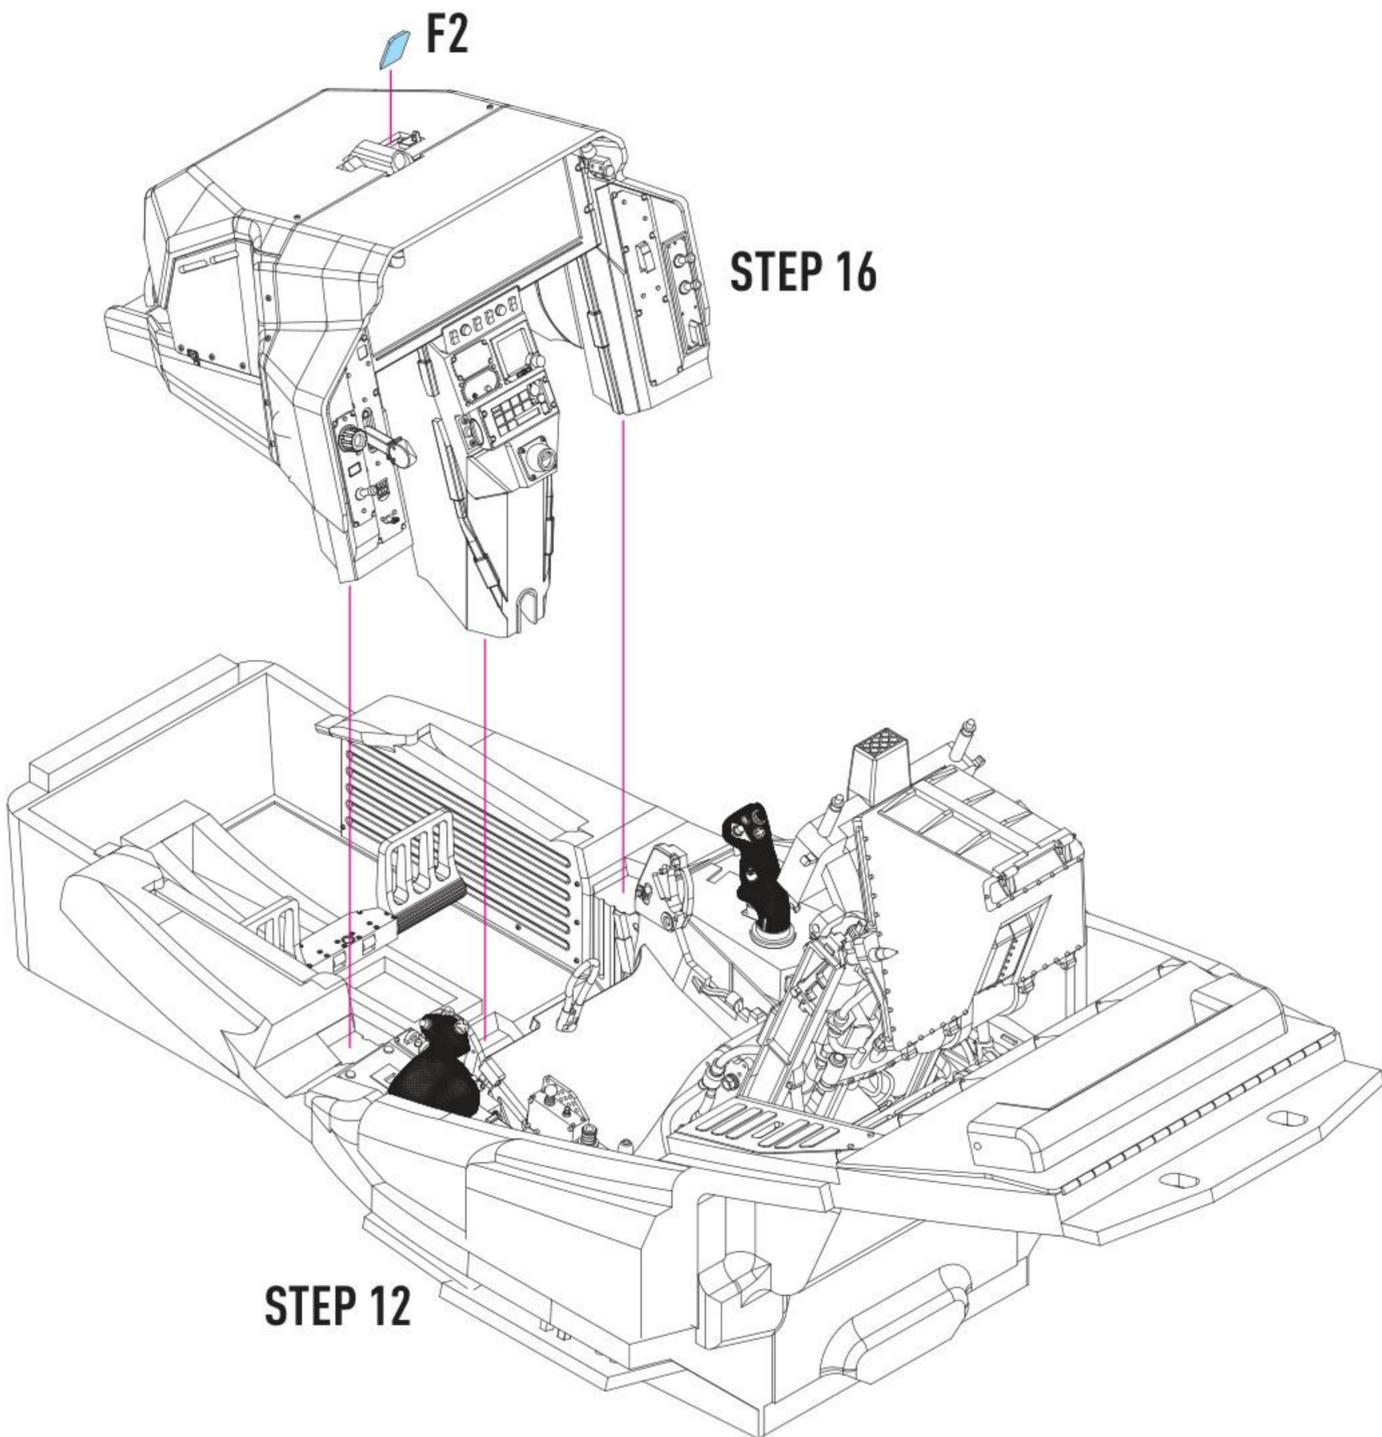


**18** IN TRUMPETER INSTRUCTIONS ON PAGE 3, STEP 1, REMOVE ALL USED PARTS AND REPLACE WITH RESKIT KIT PARTS FROM STEP 17

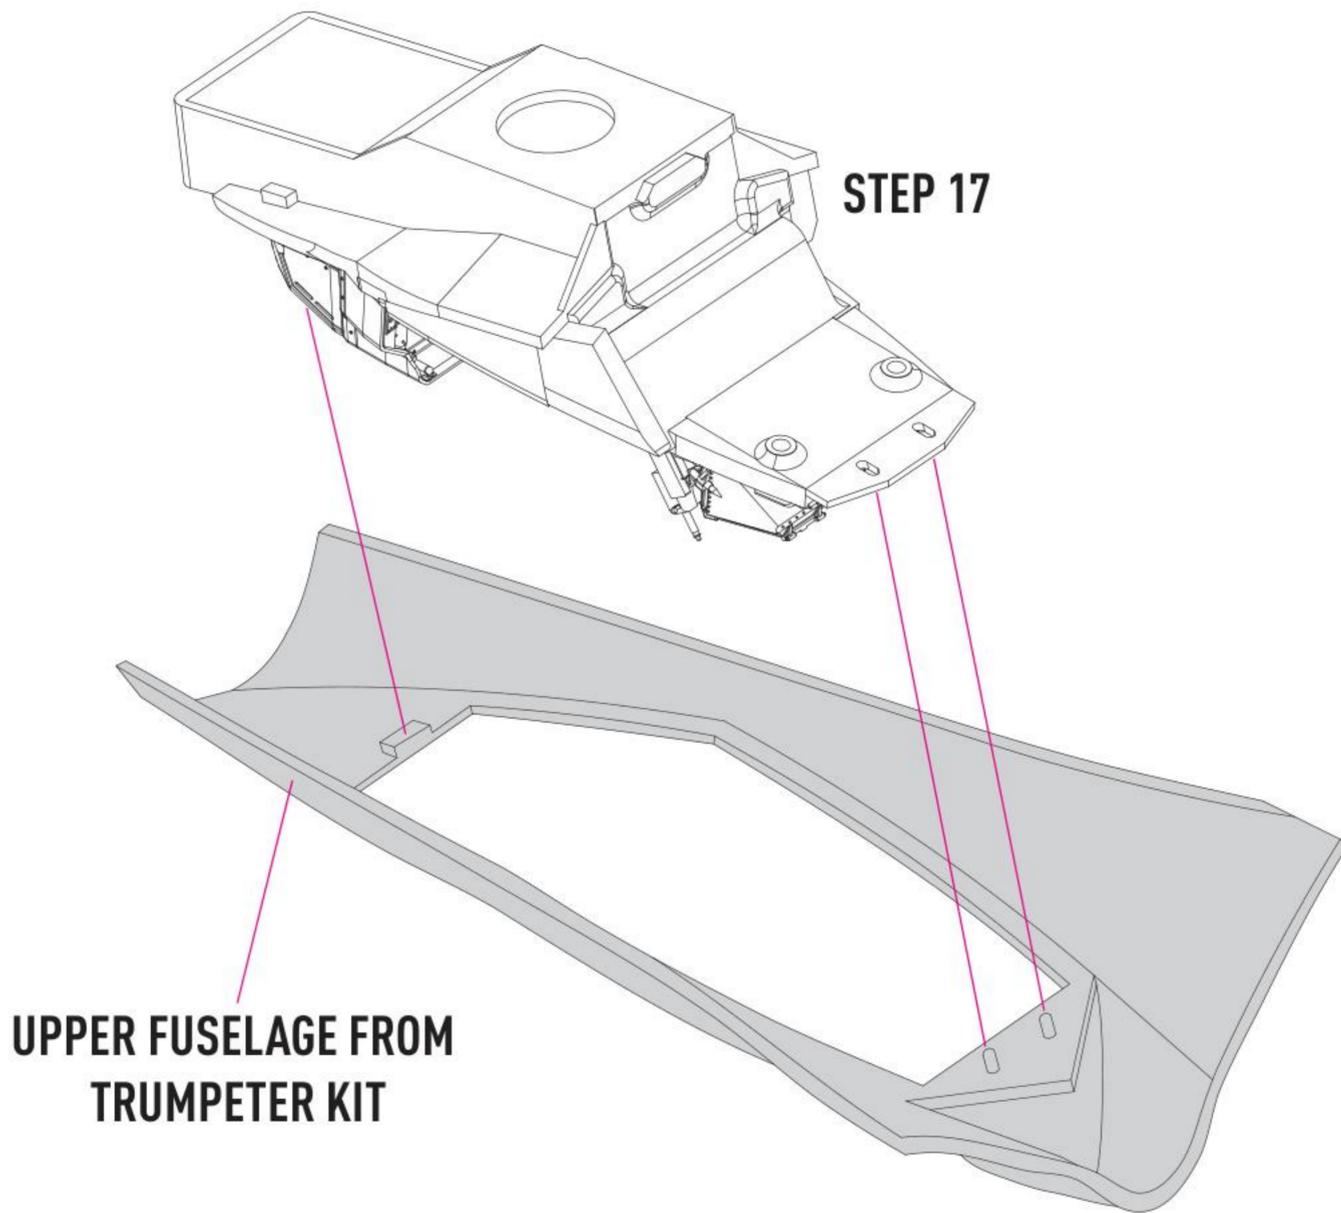


**19** IN TRUMPETER INSTRUCTIONS ON PAGE 4, STEP 2, REPLACE PART G28 WITH RESKIT KIT PART R17

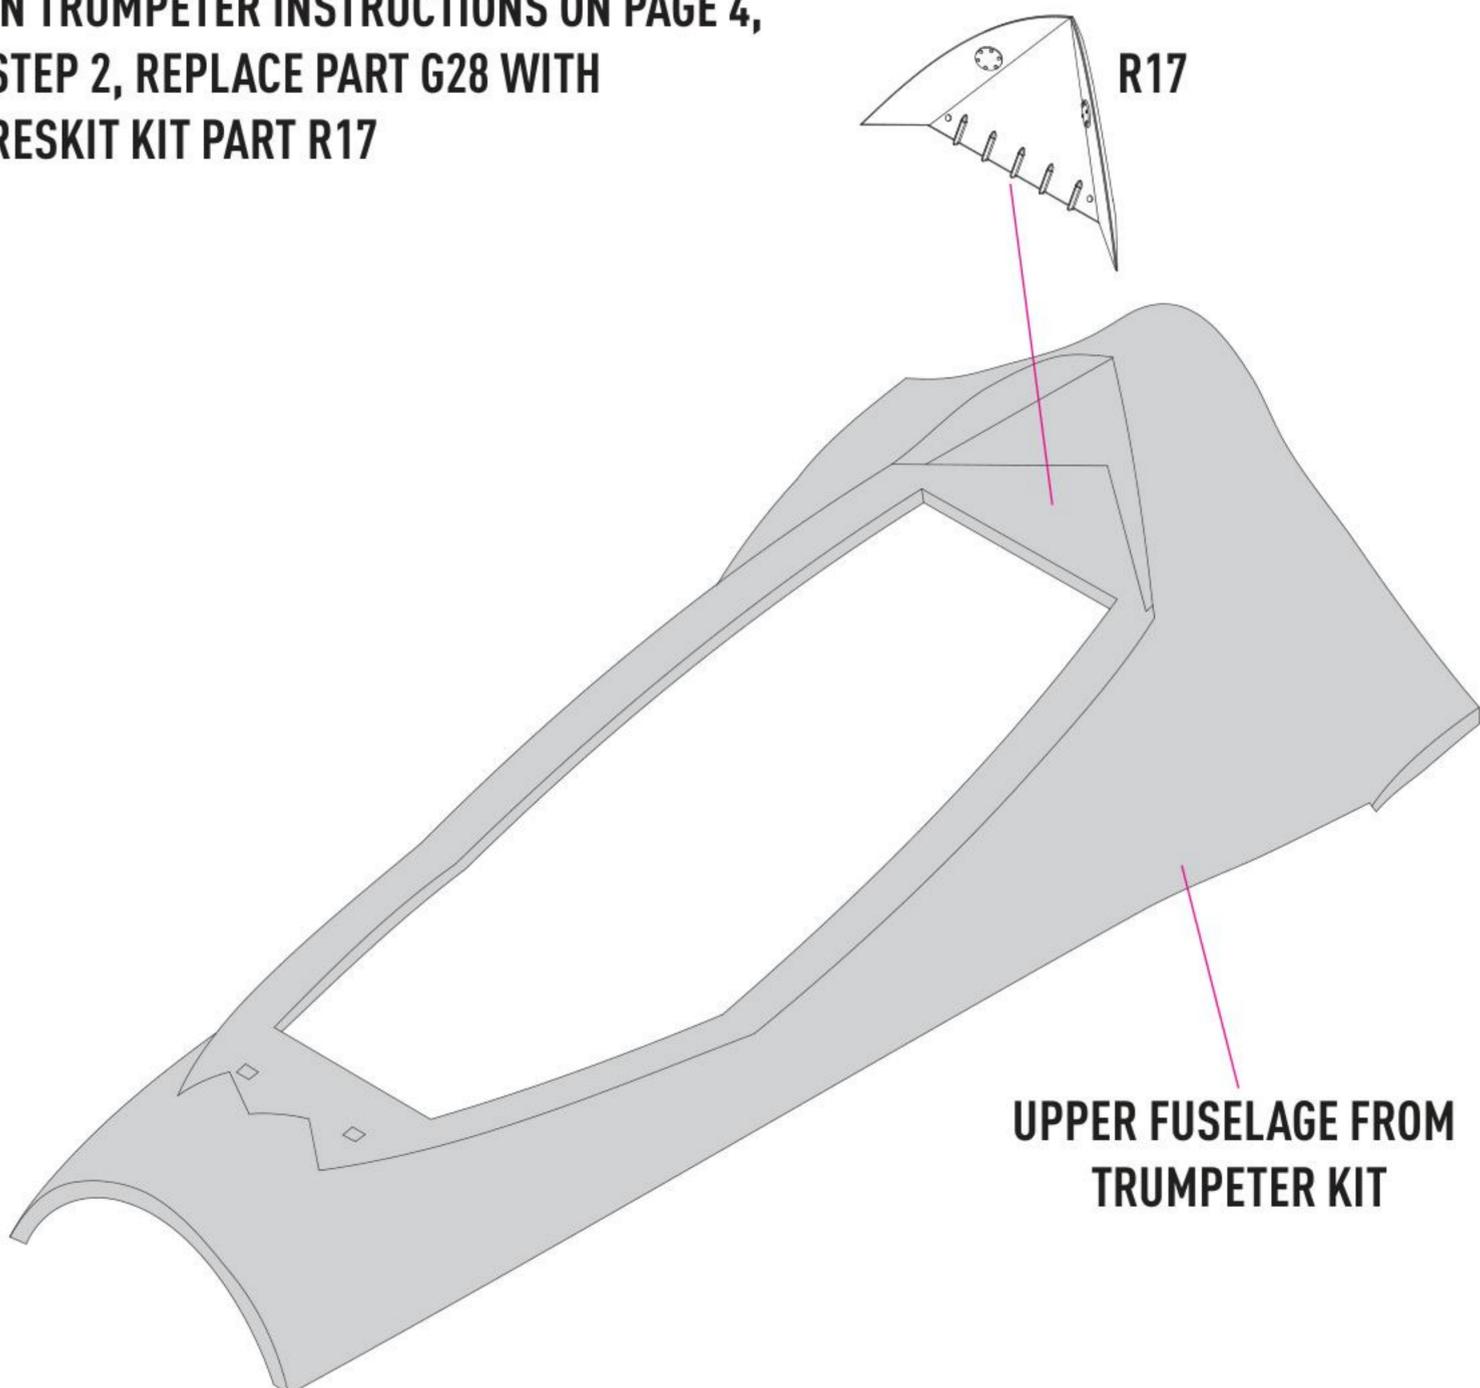

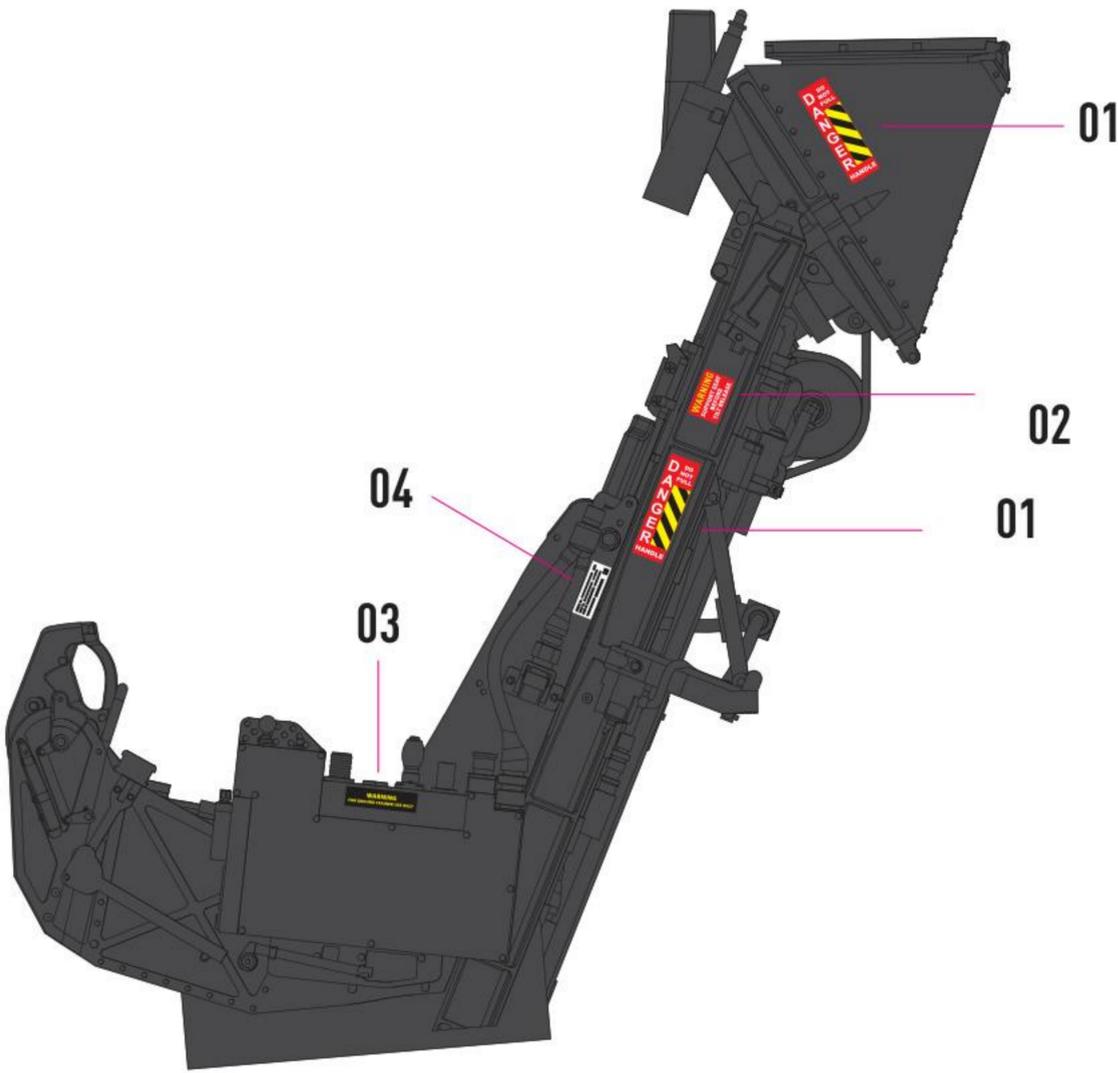

LEFT

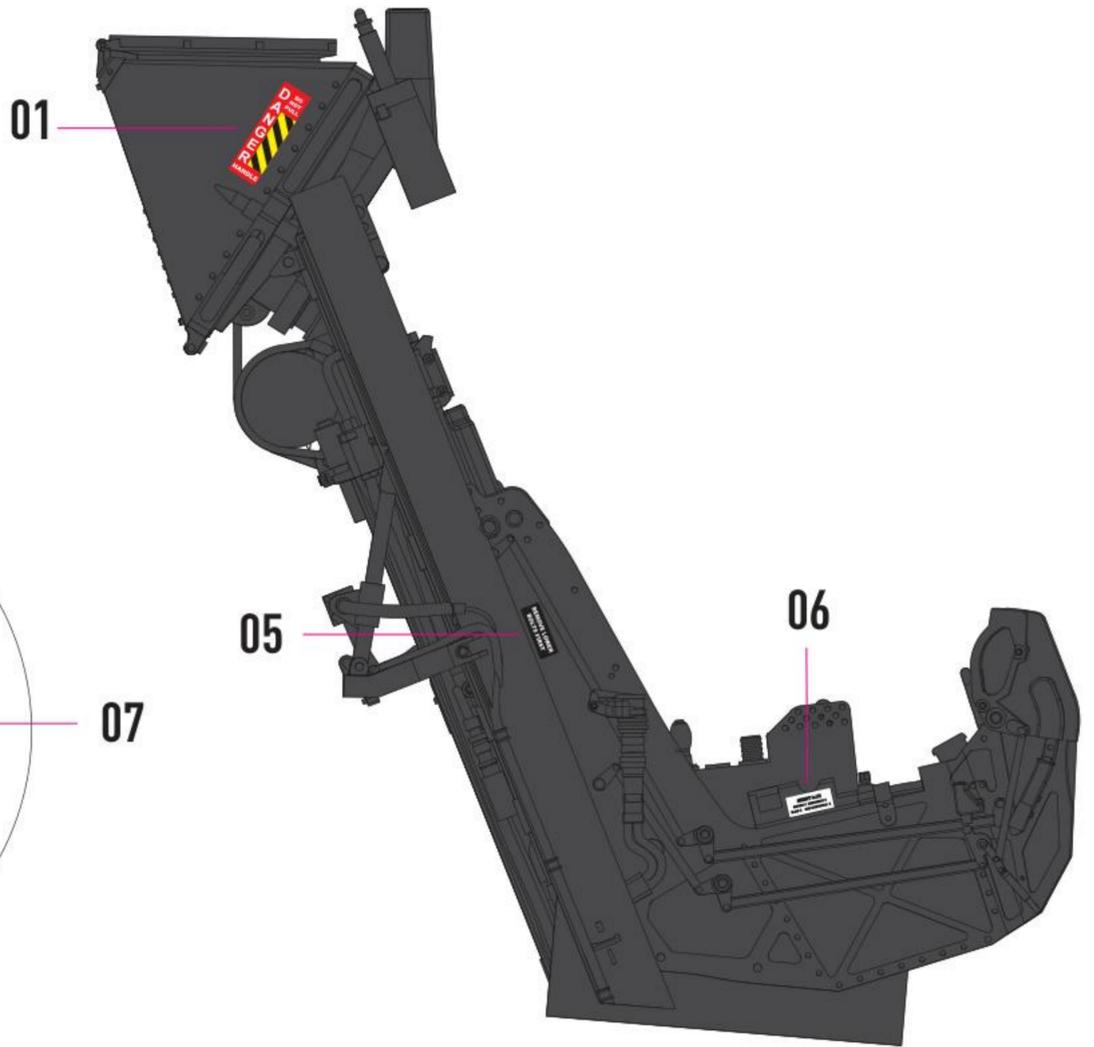

INNER PART

RIGHT