





**DETAILS AFTER REMOVAL
 FROM SUPPORTS**

 USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS

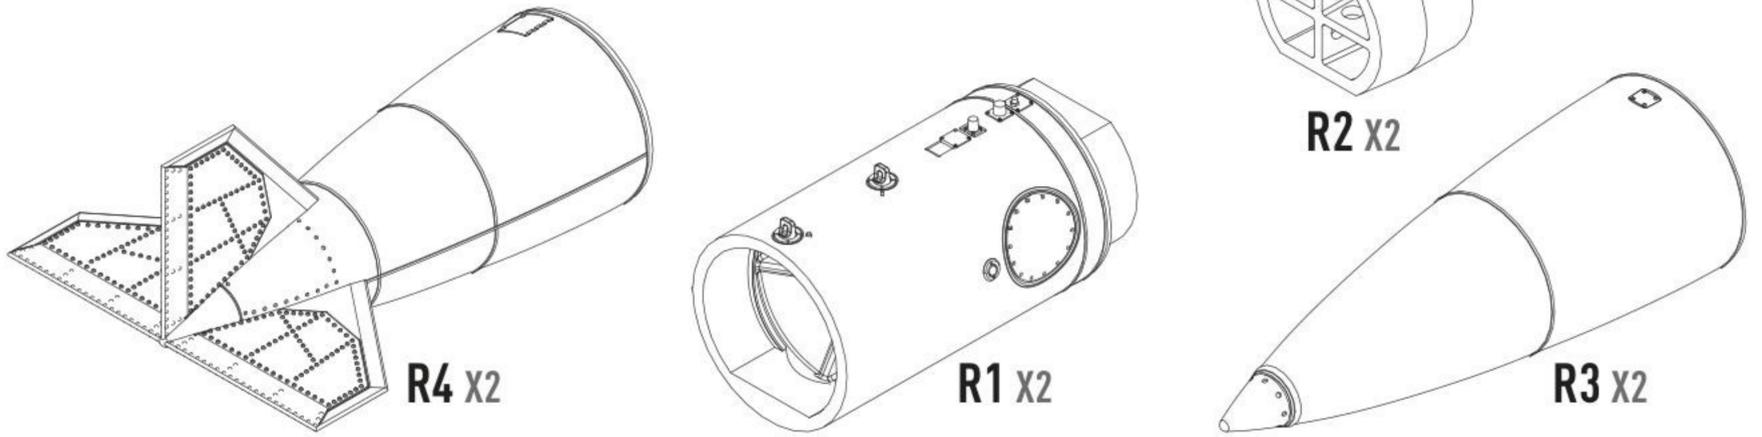

1 X2

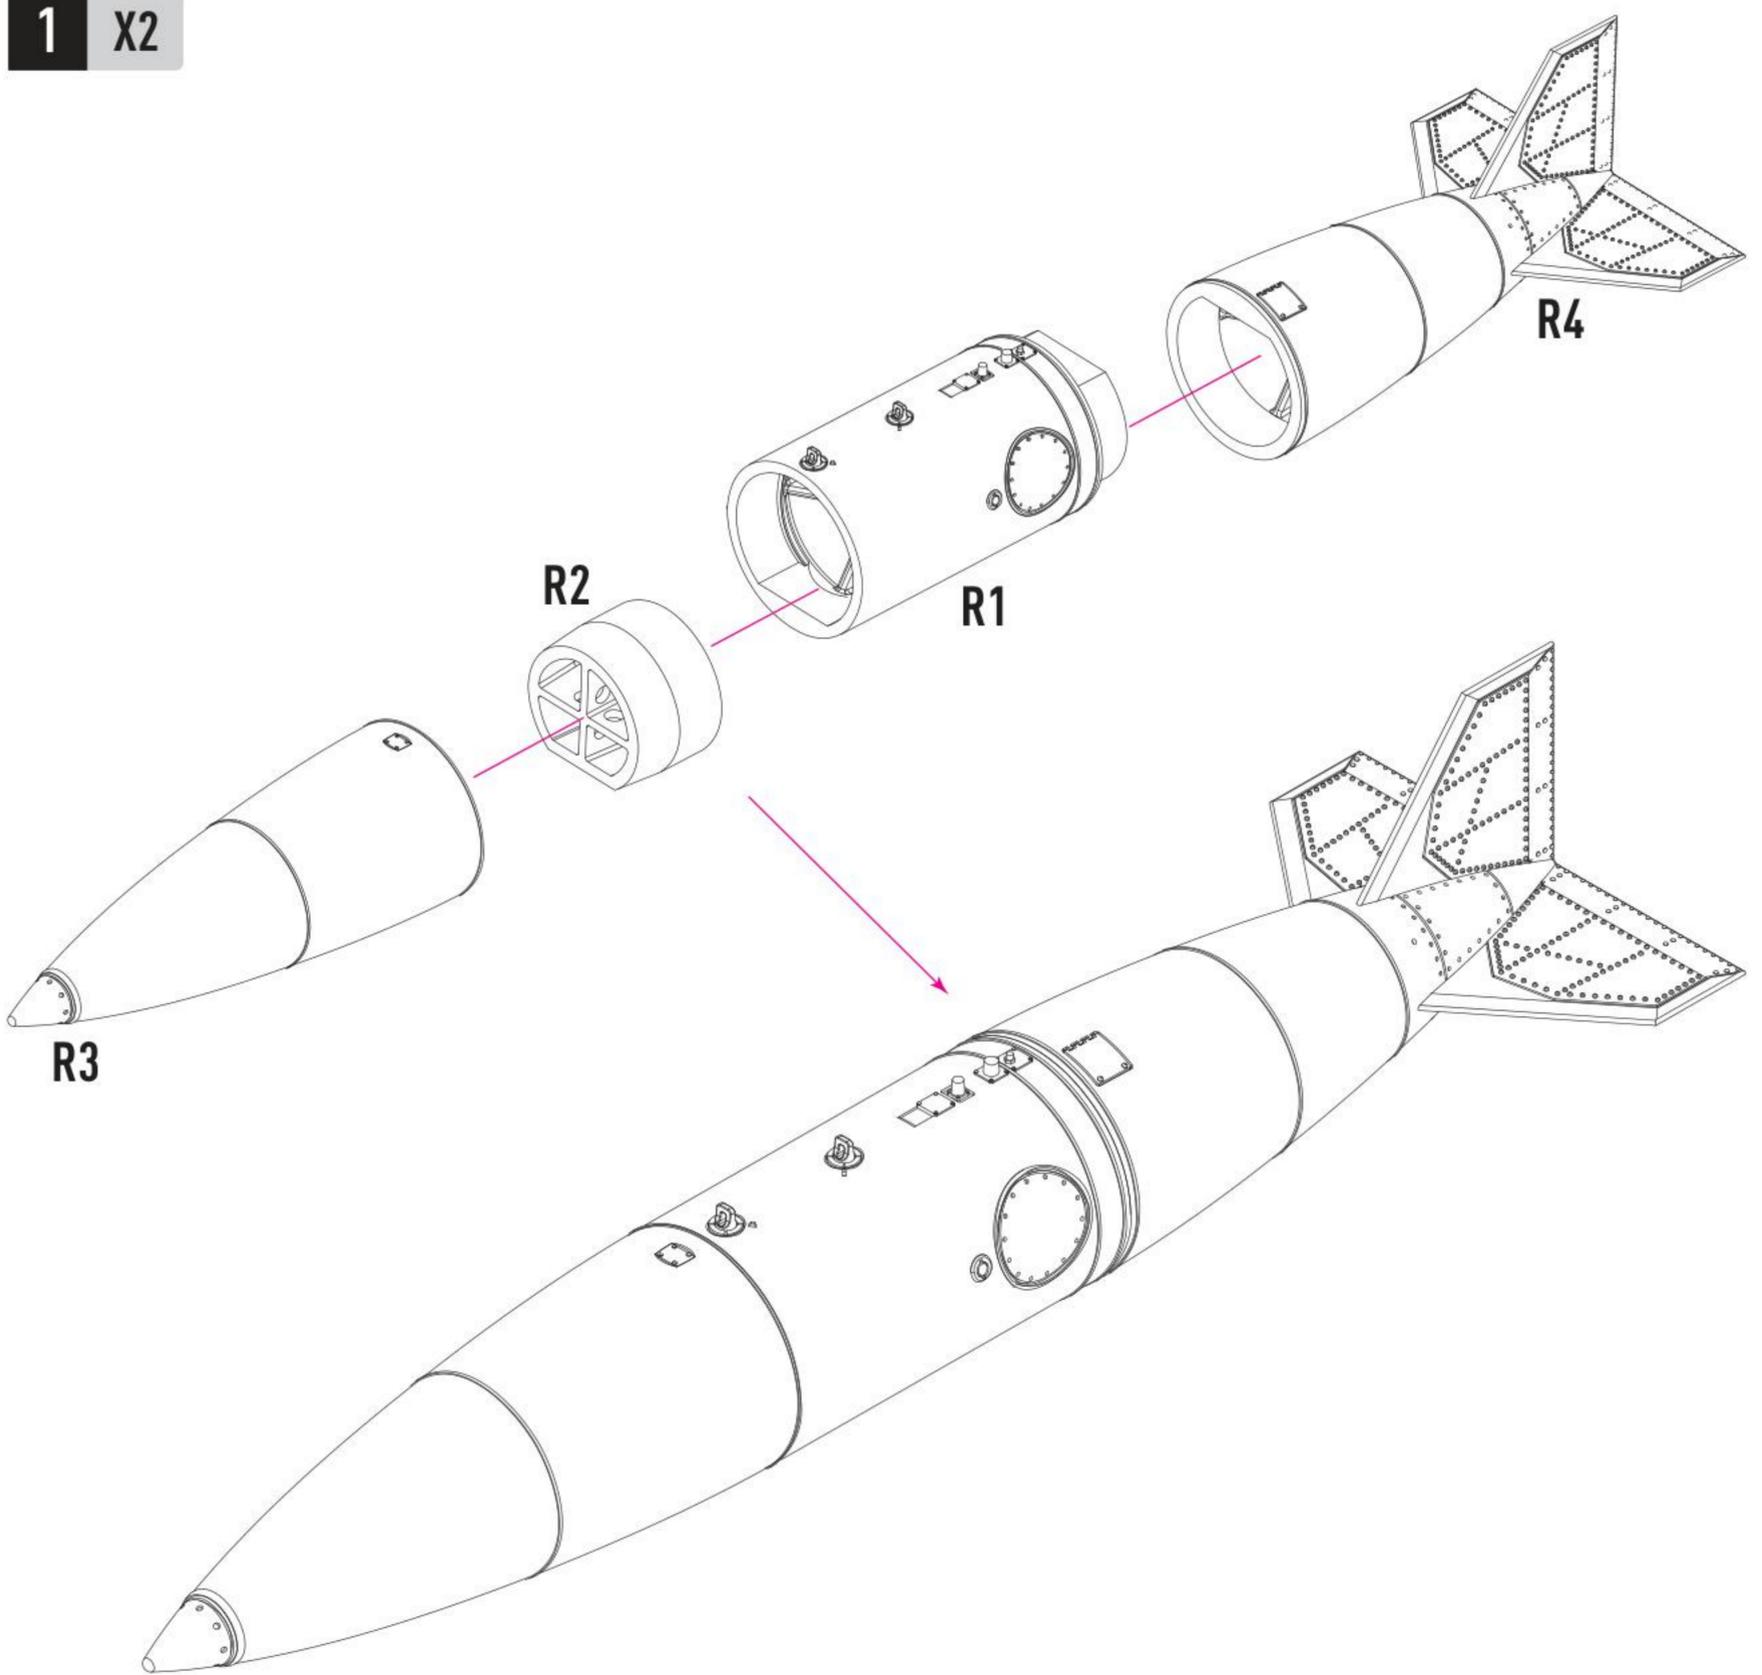

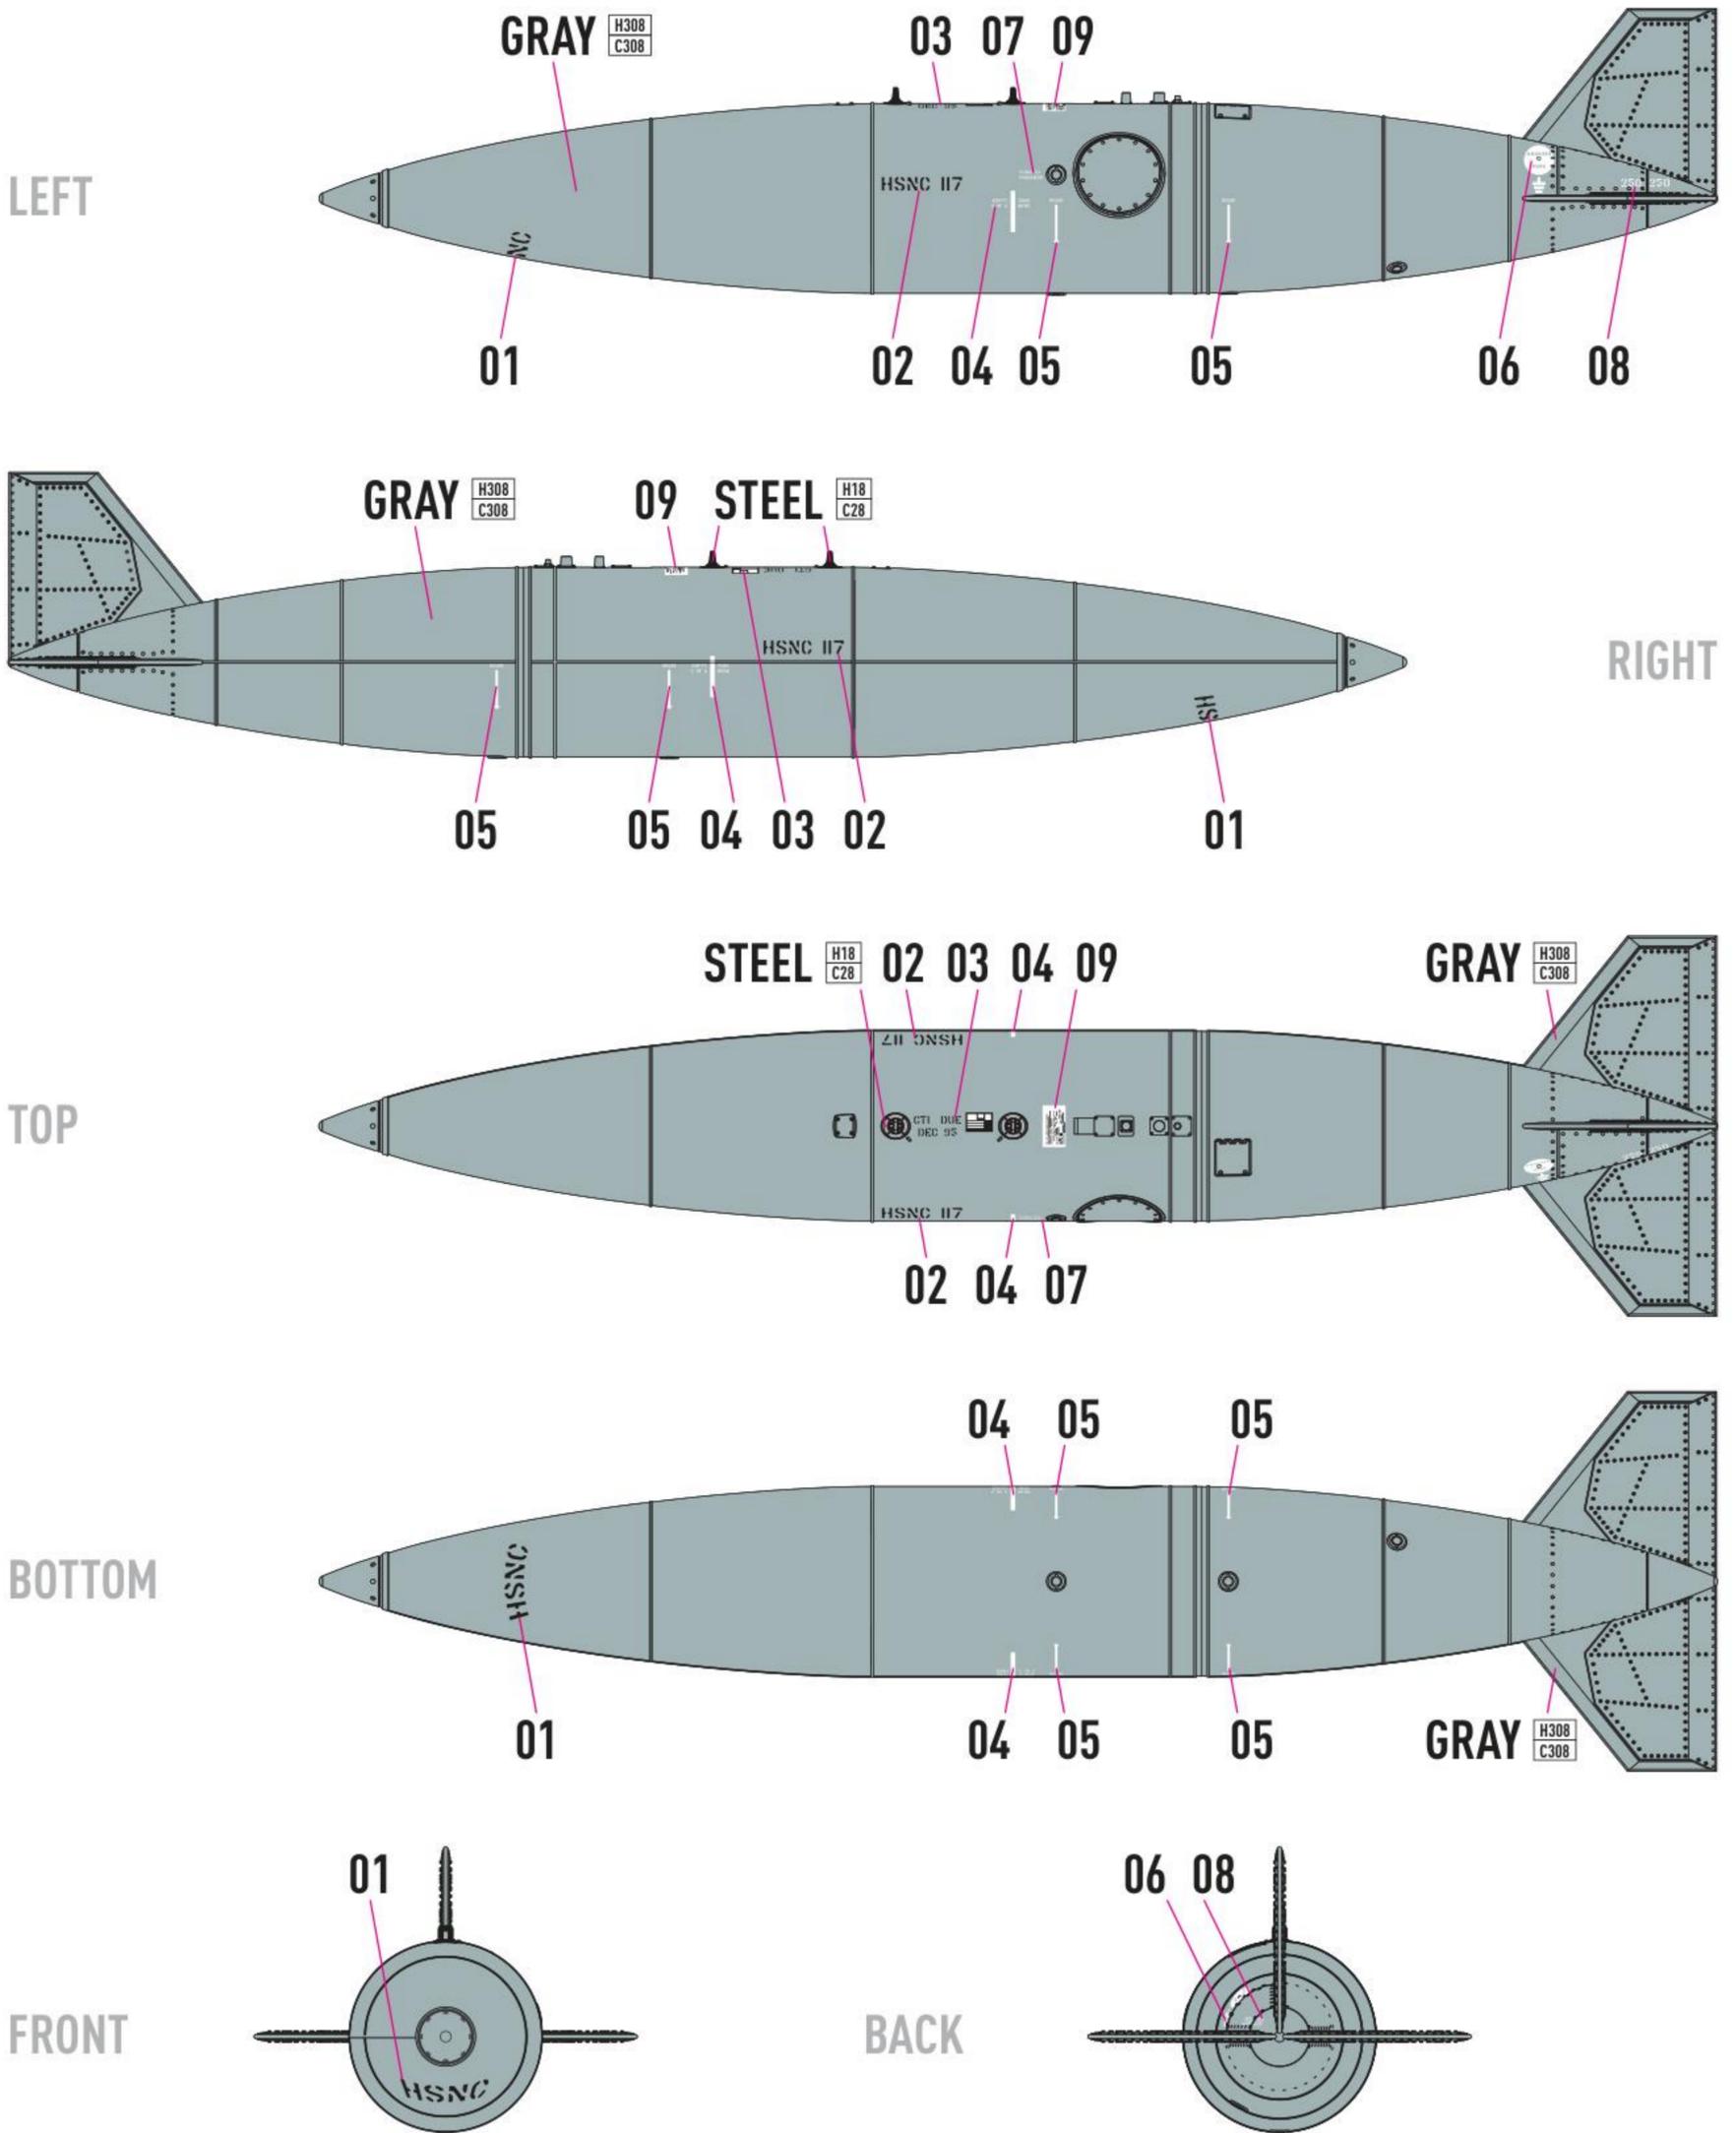

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
STEEL	H18	C28