





USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

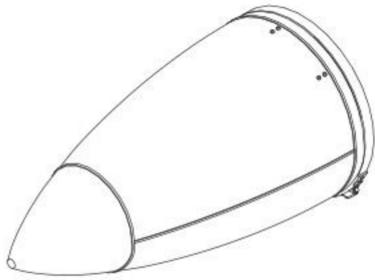


R3

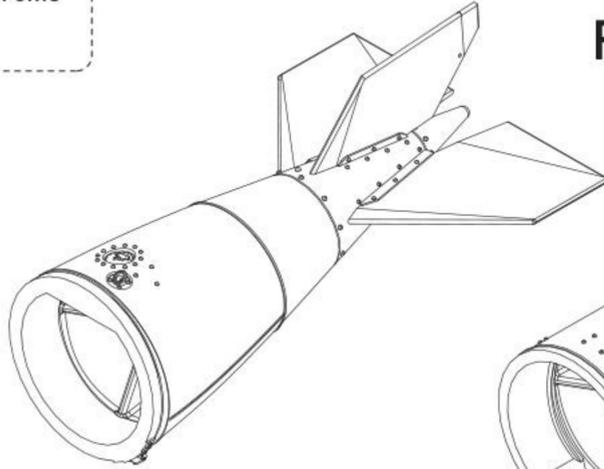

R4

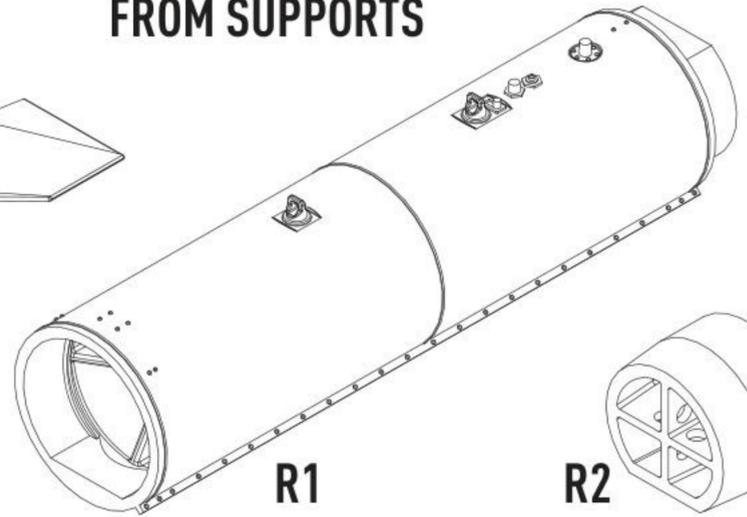



R1

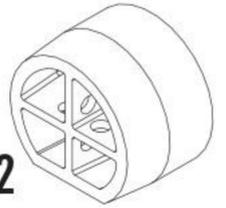

R2

1

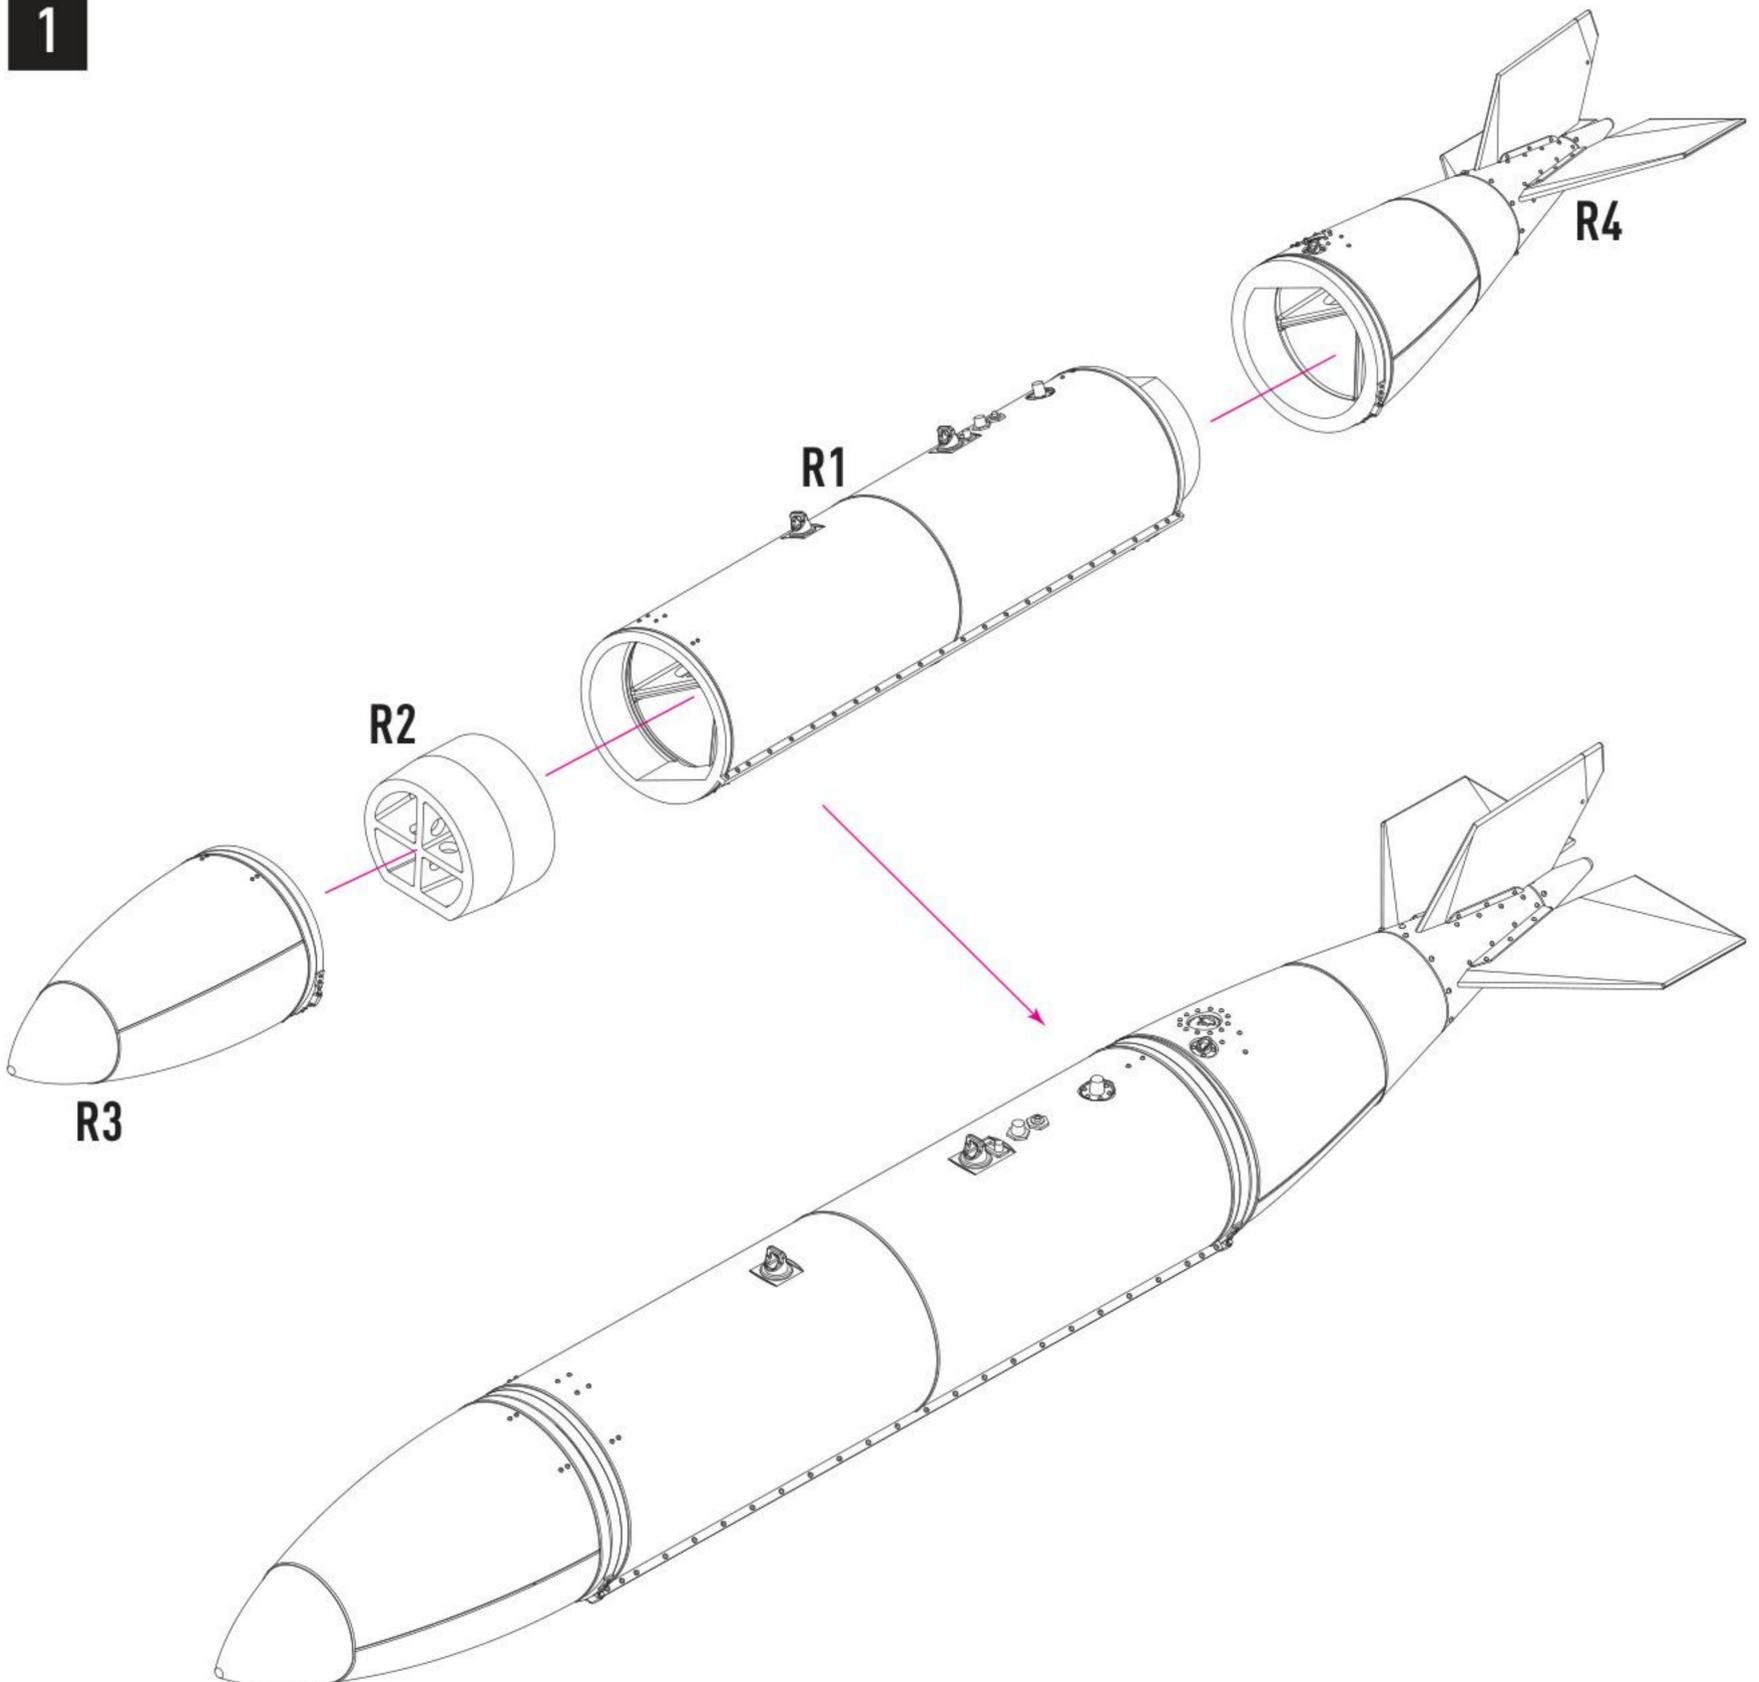

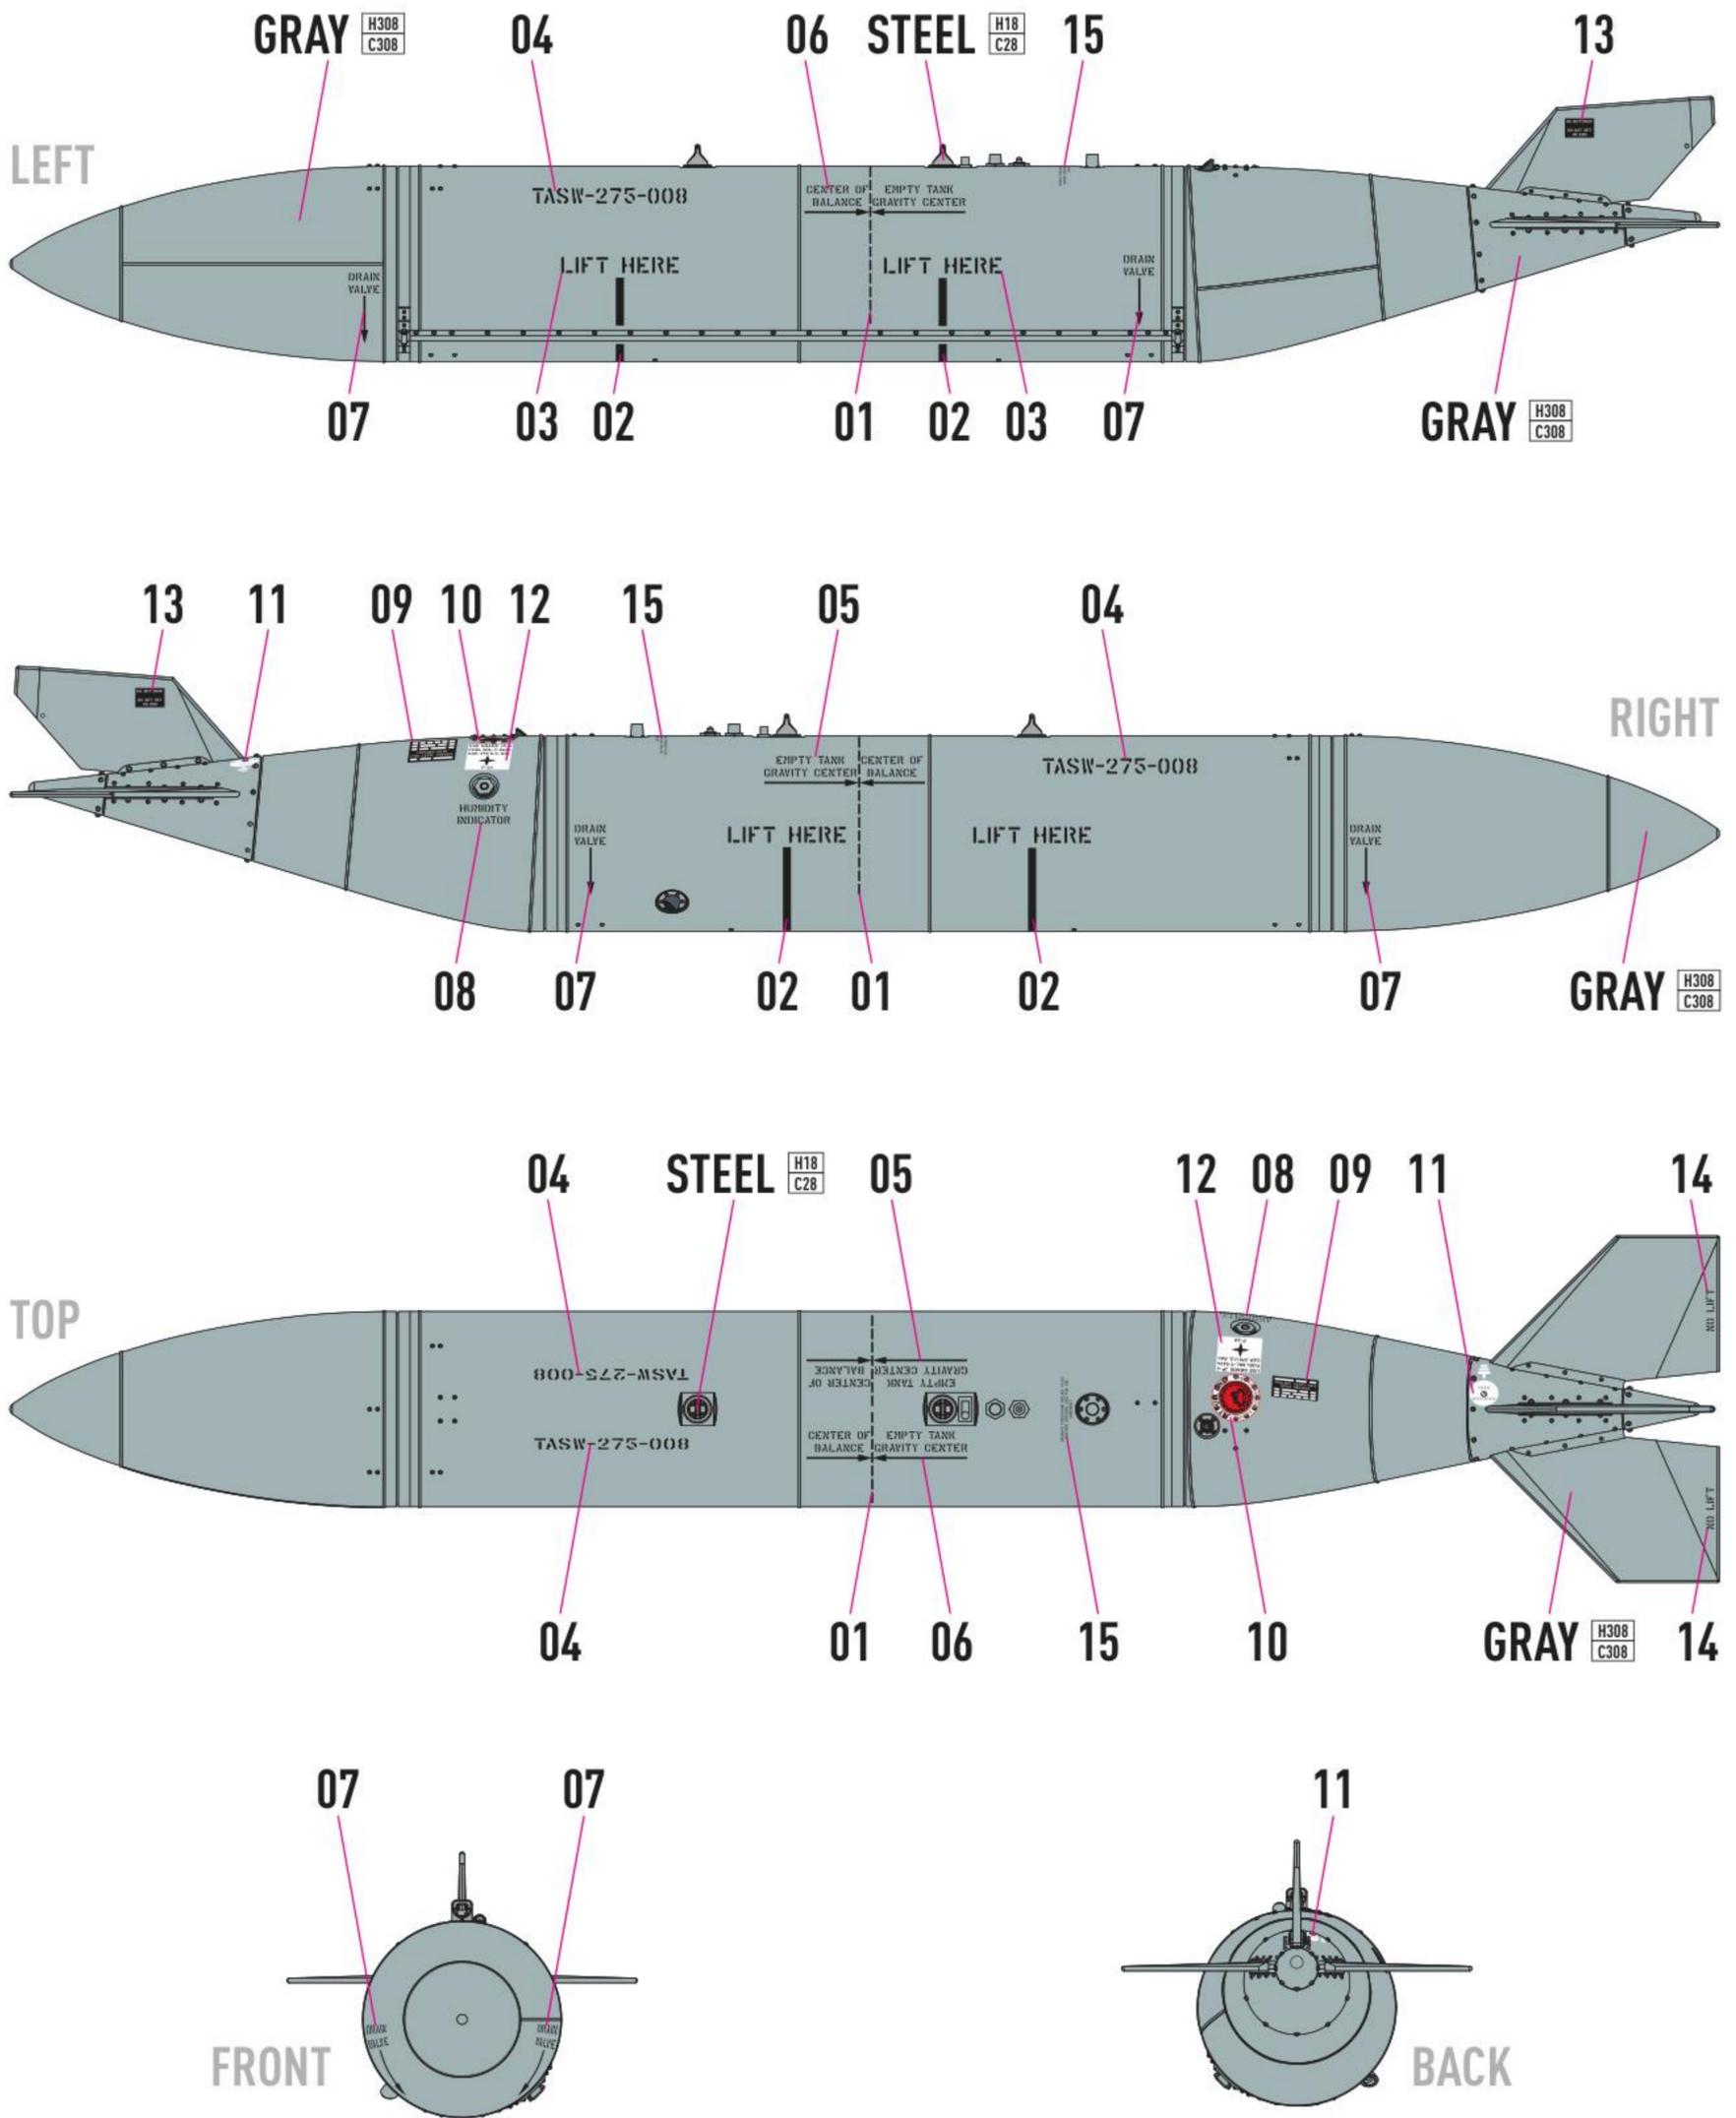

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
STEEL	H18	C28