





USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

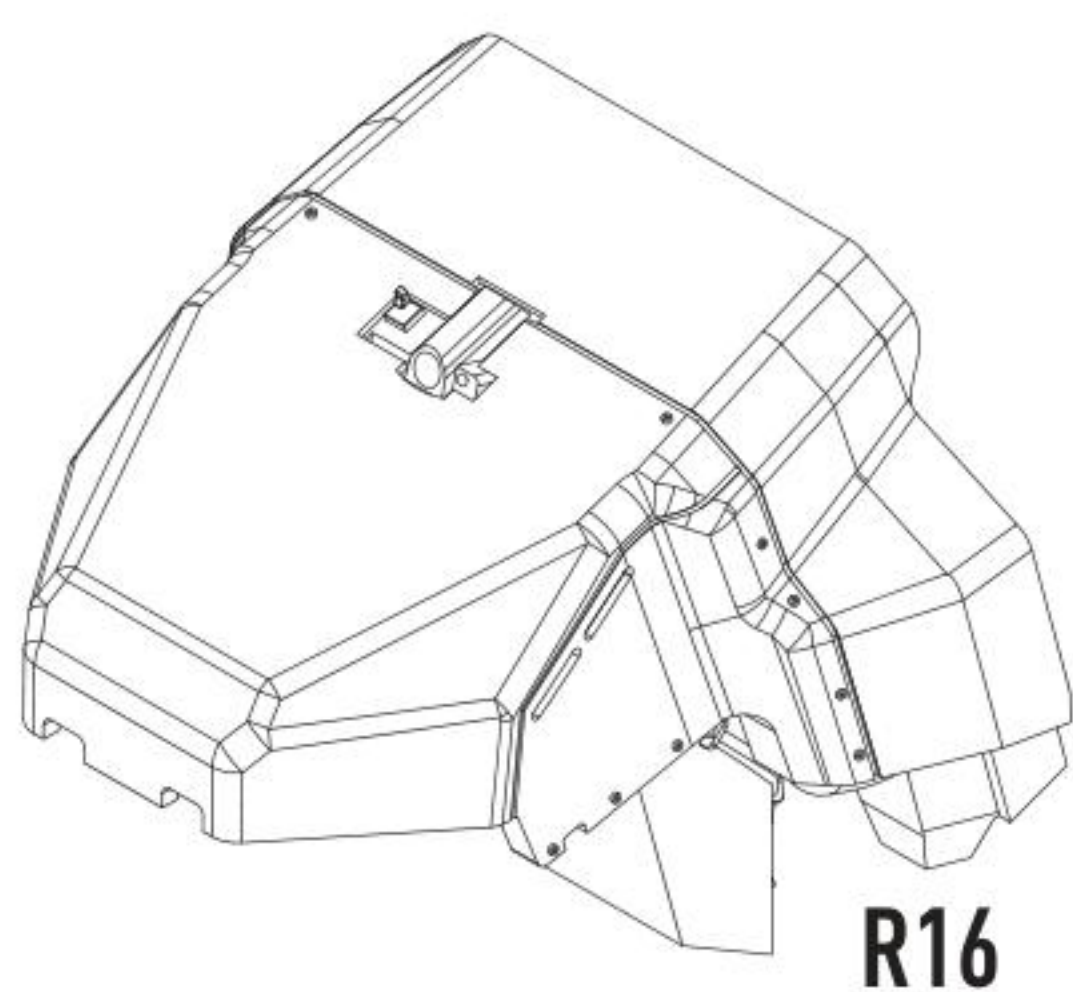


R16

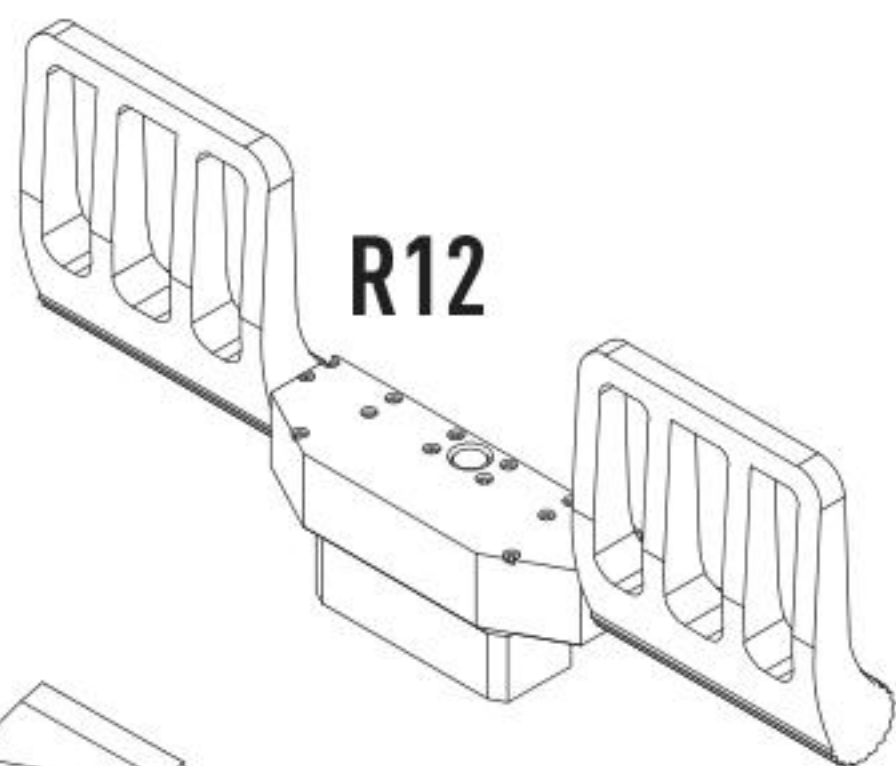


R12

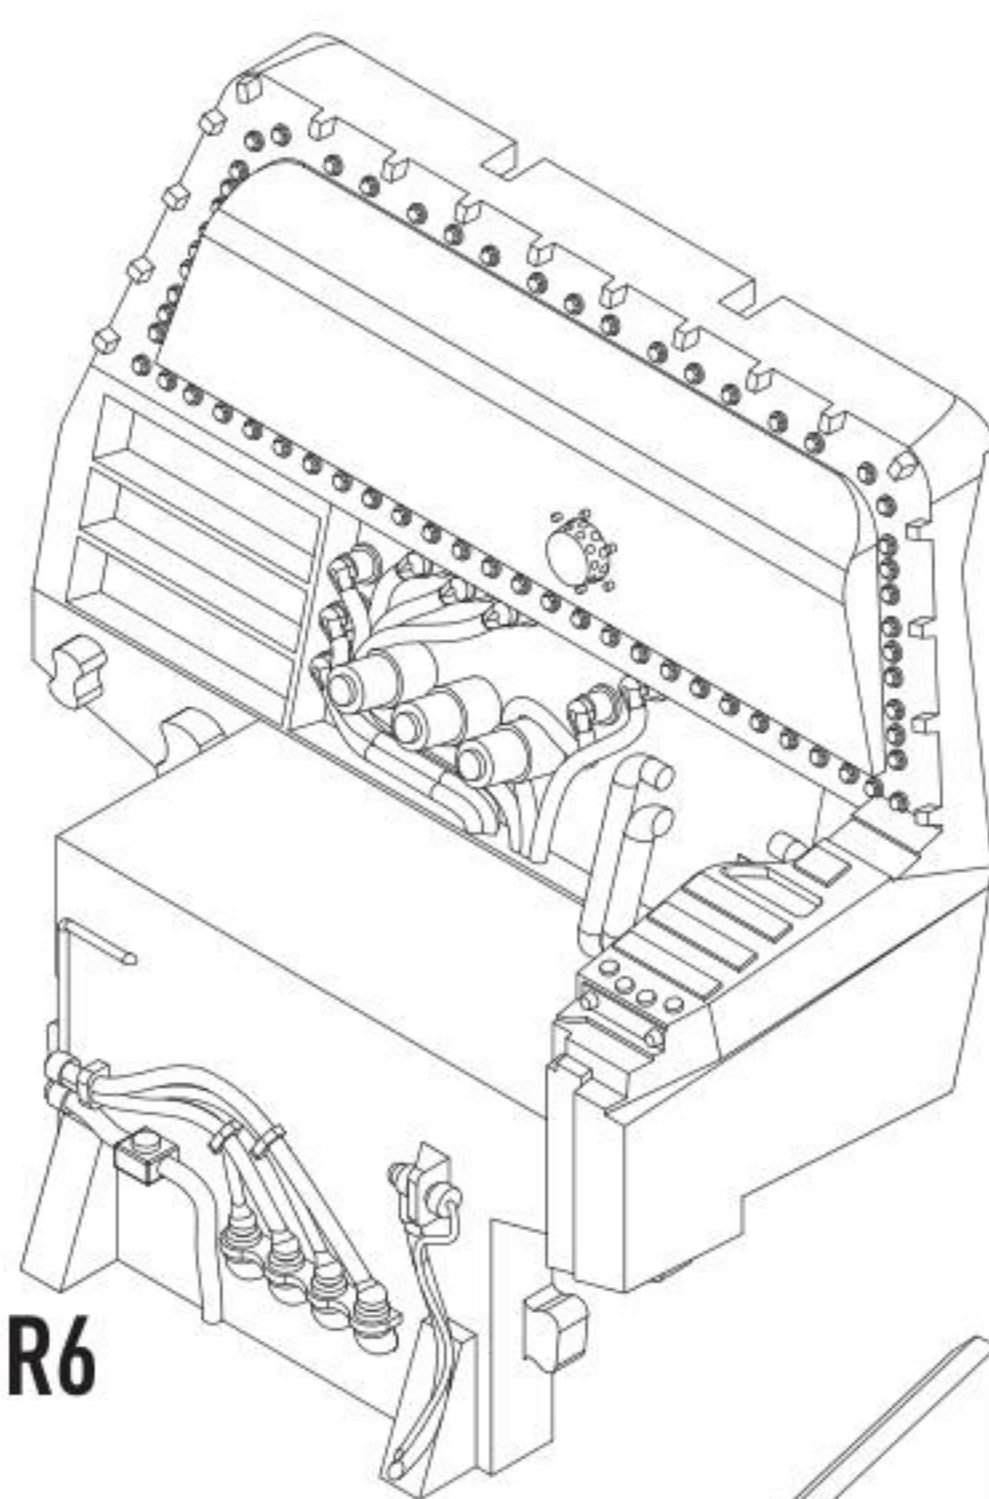


R6

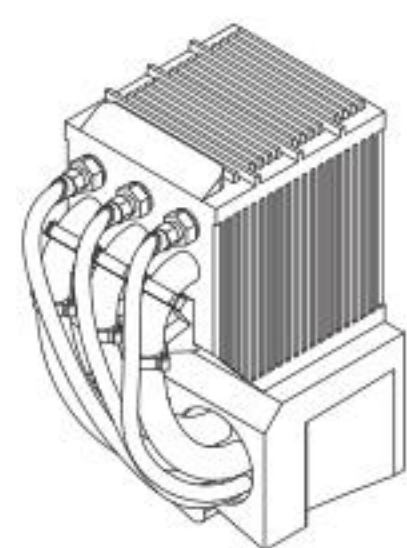


R7

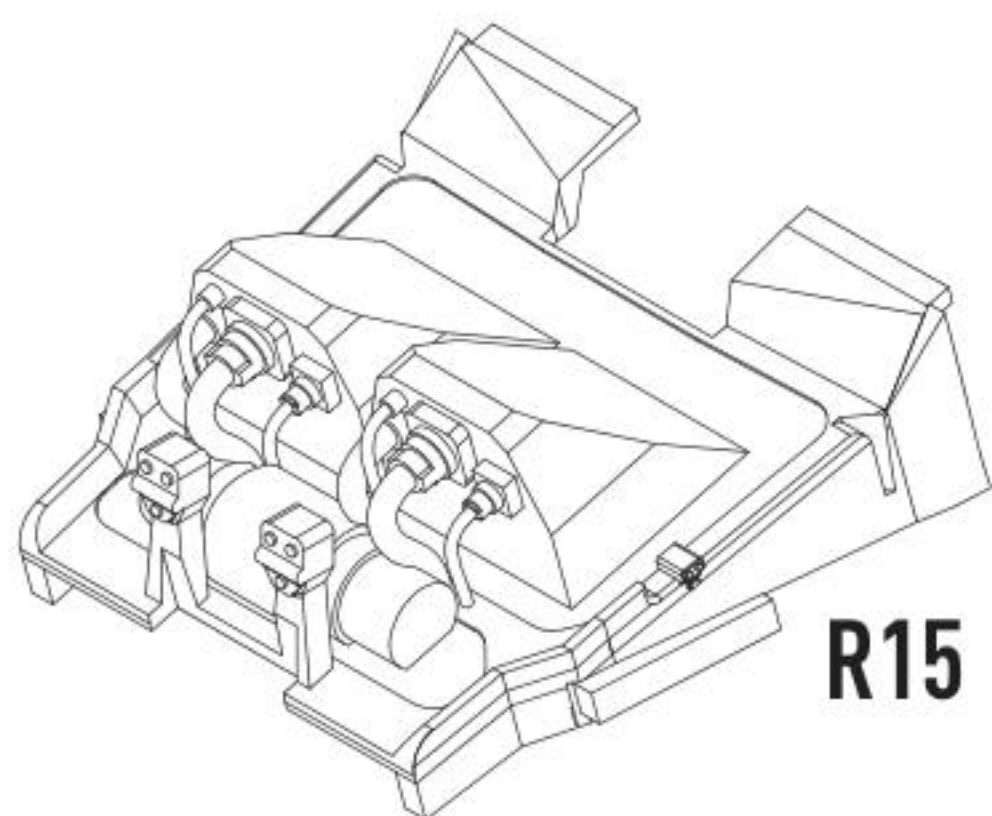


R15

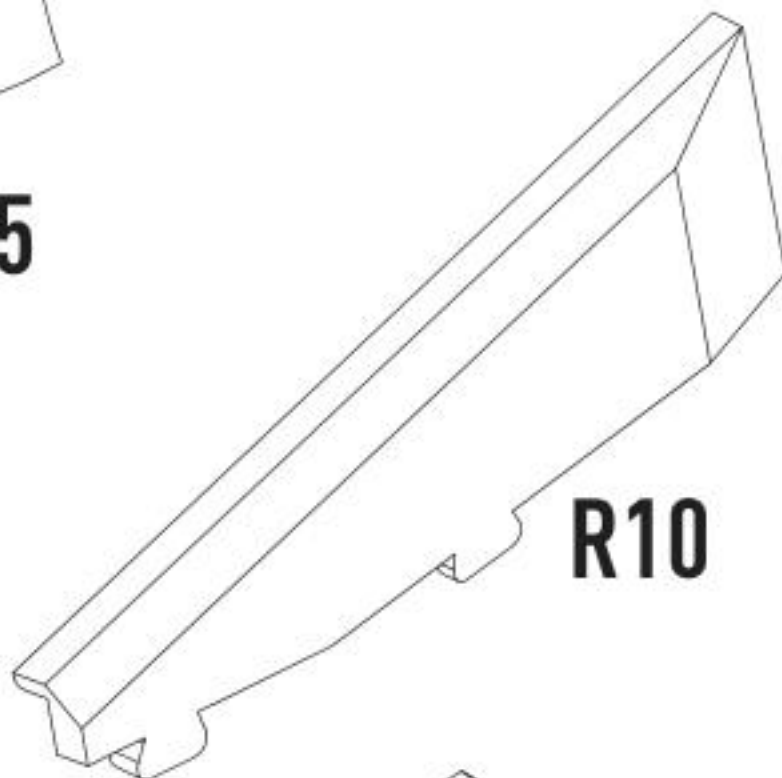


R10

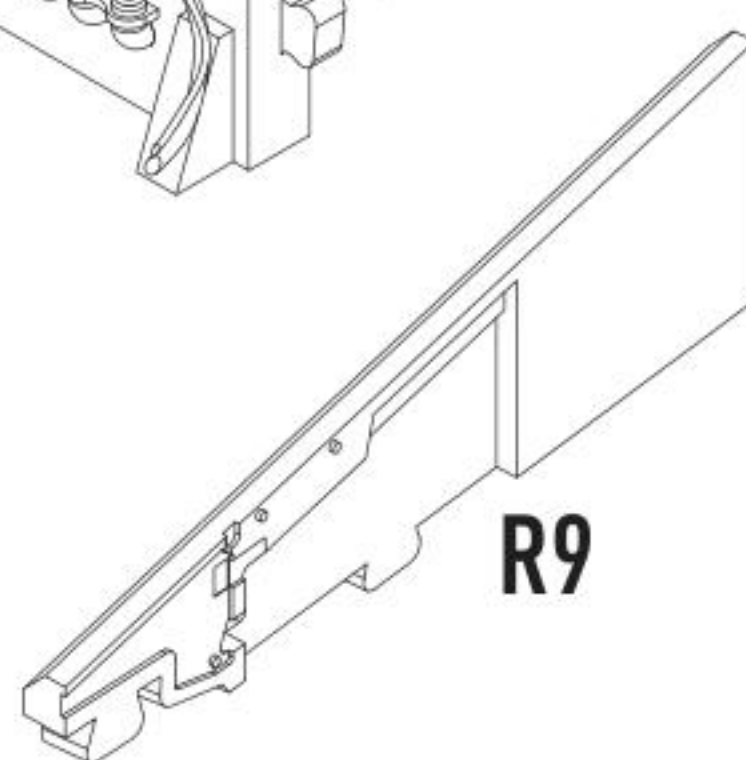


R9

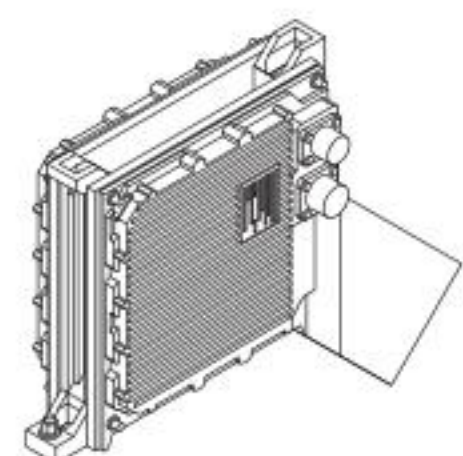


R8

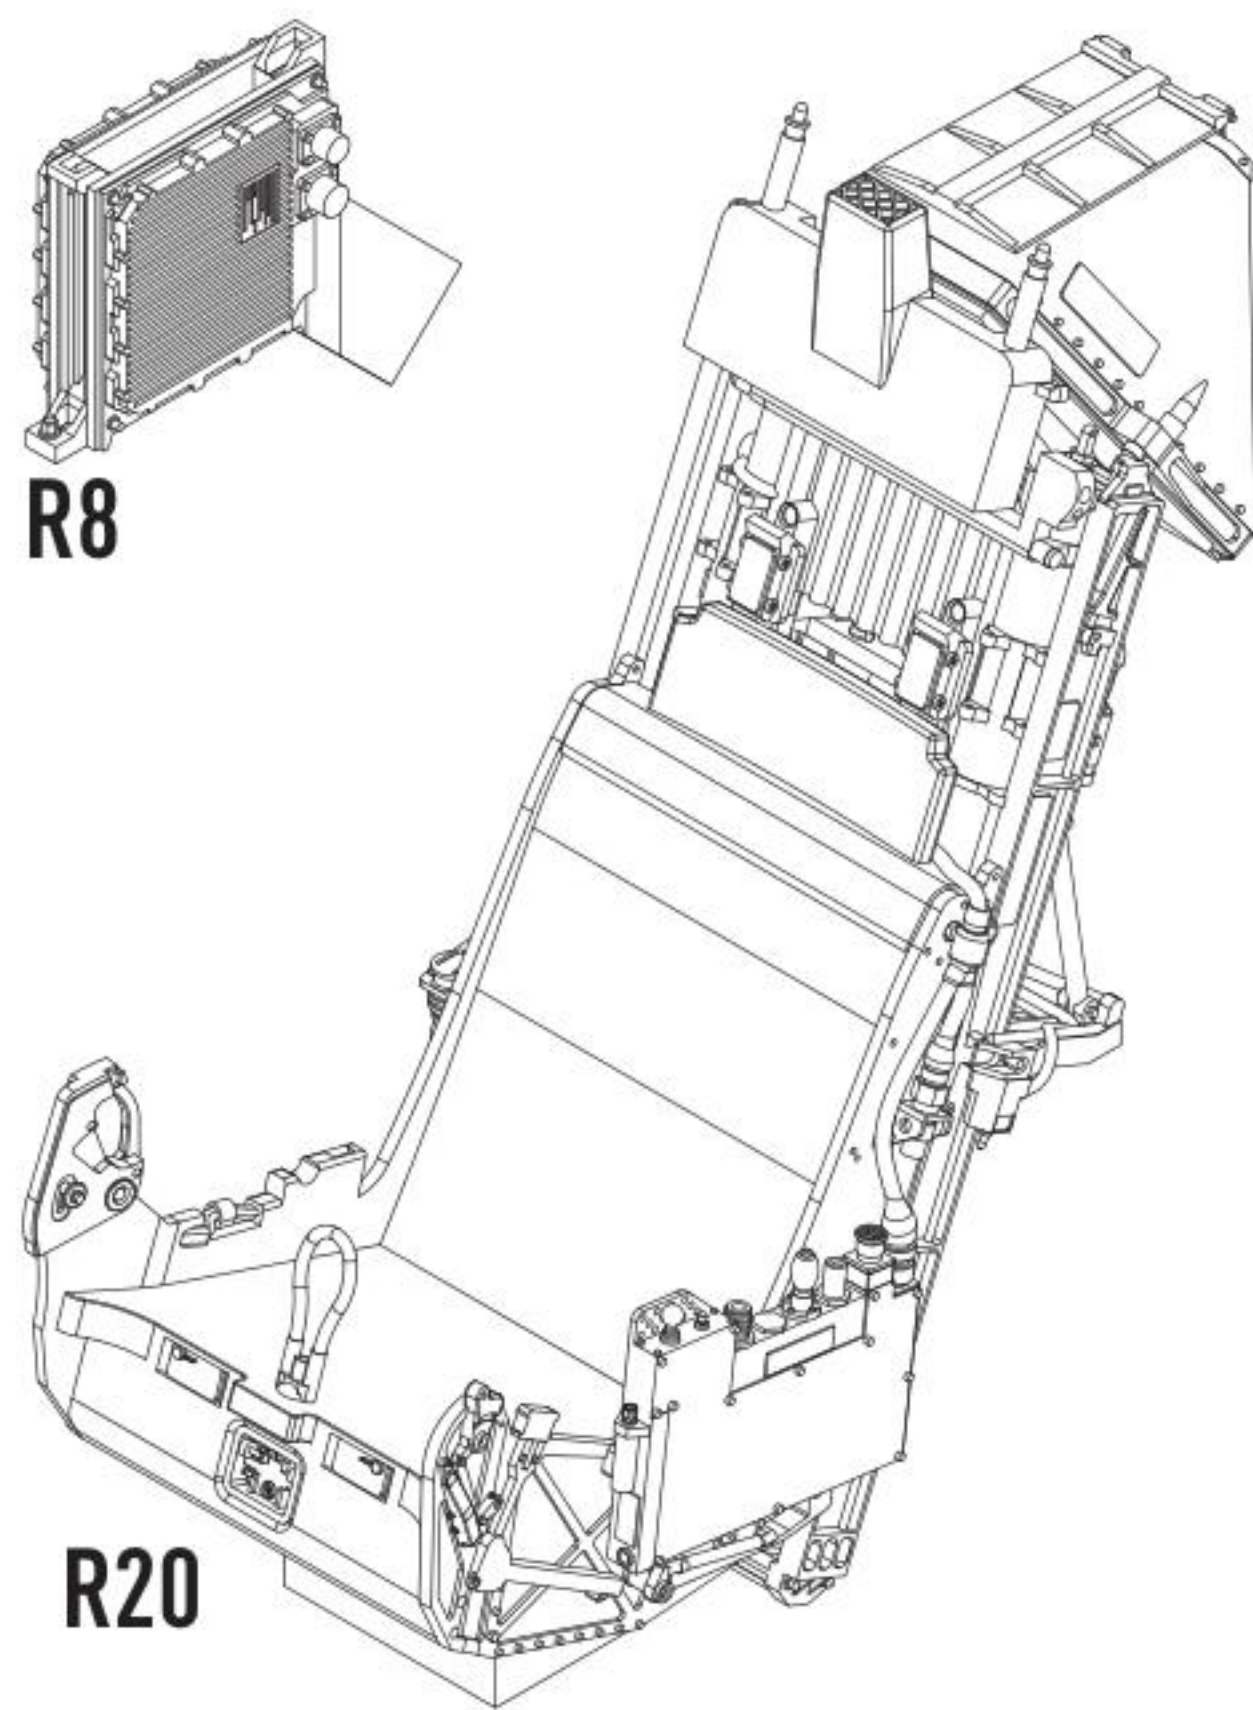


R20

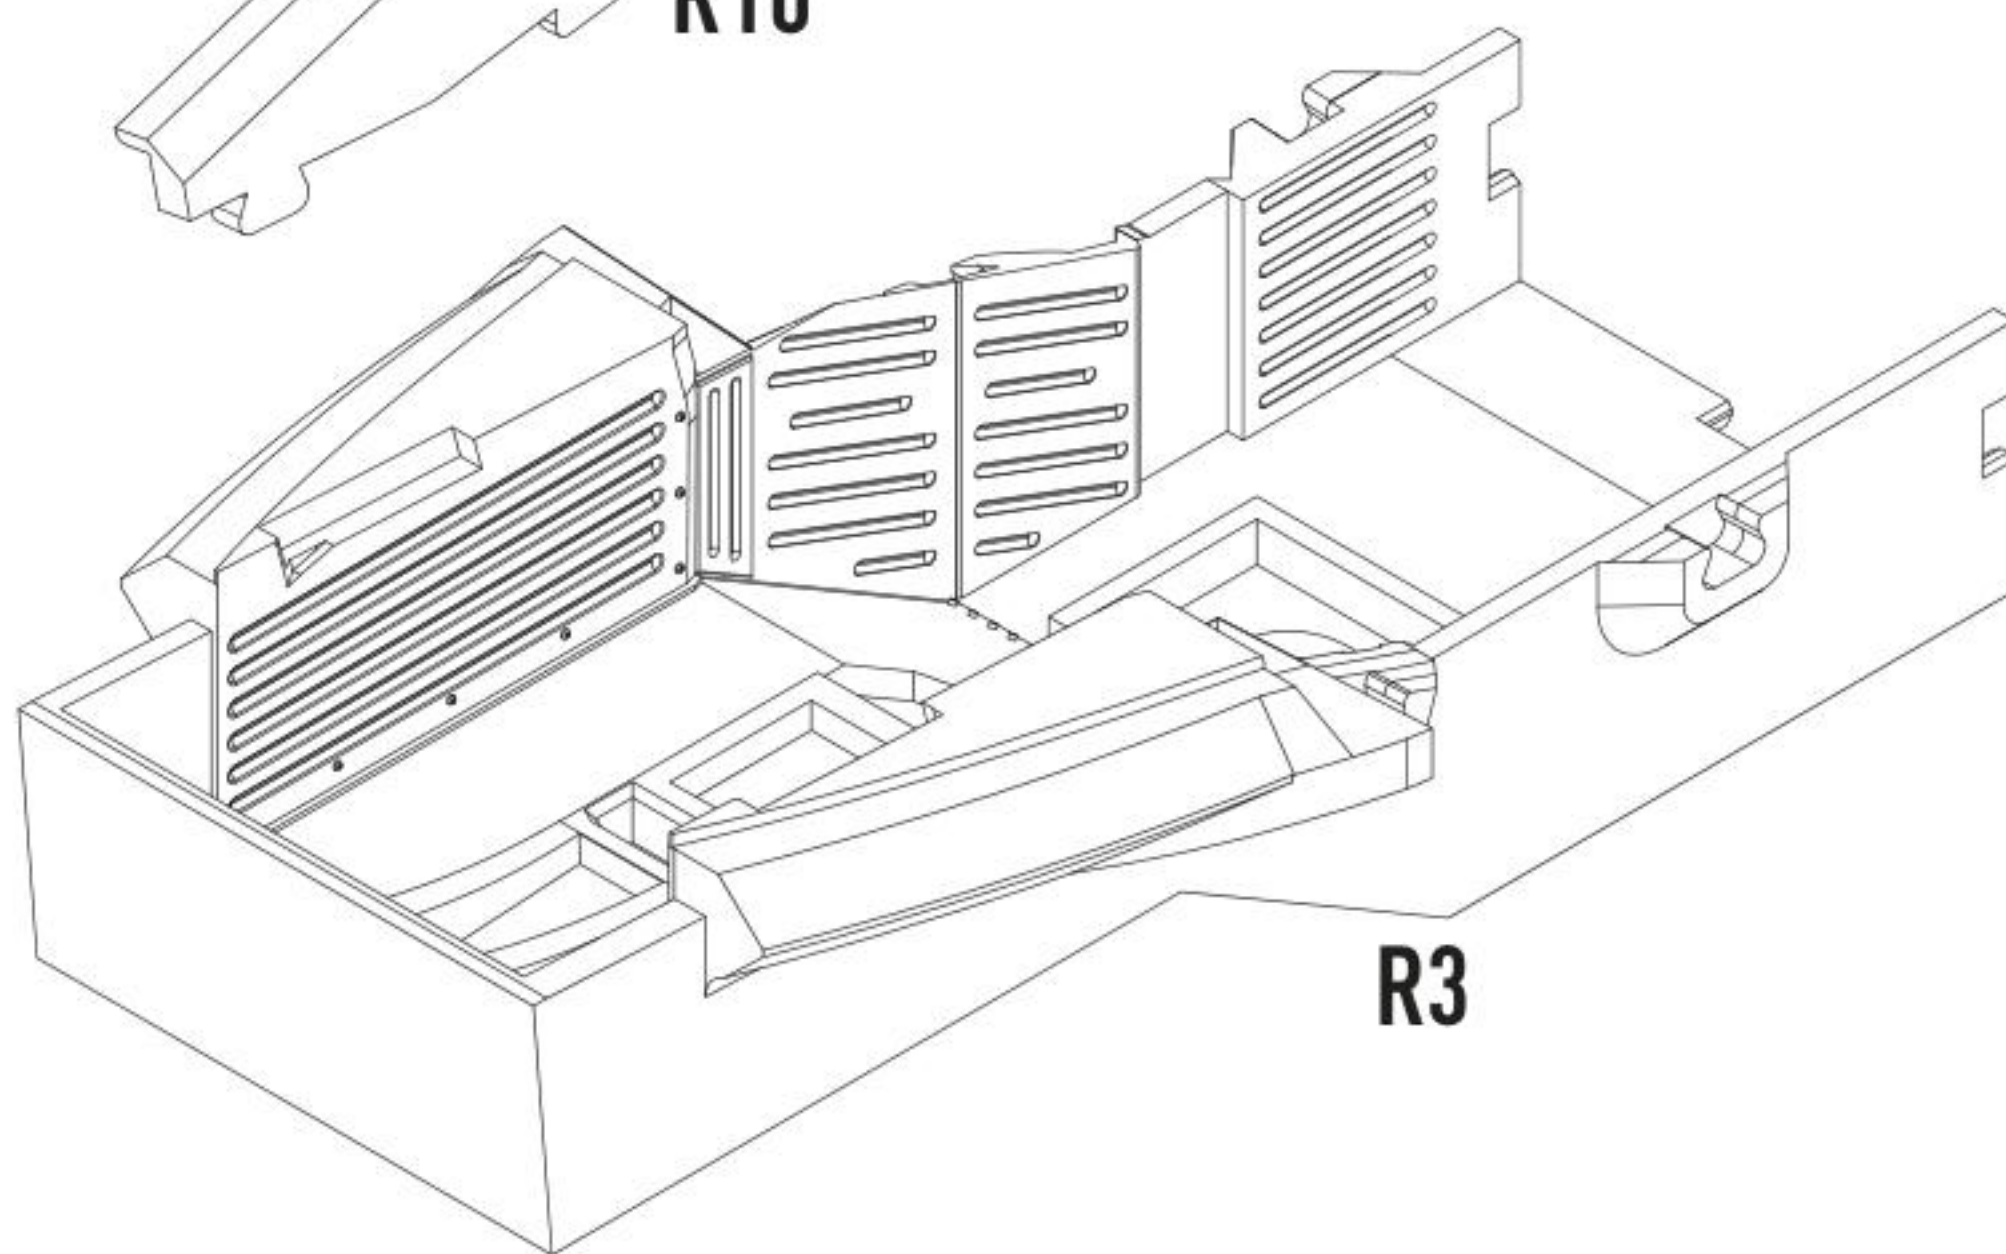


R3

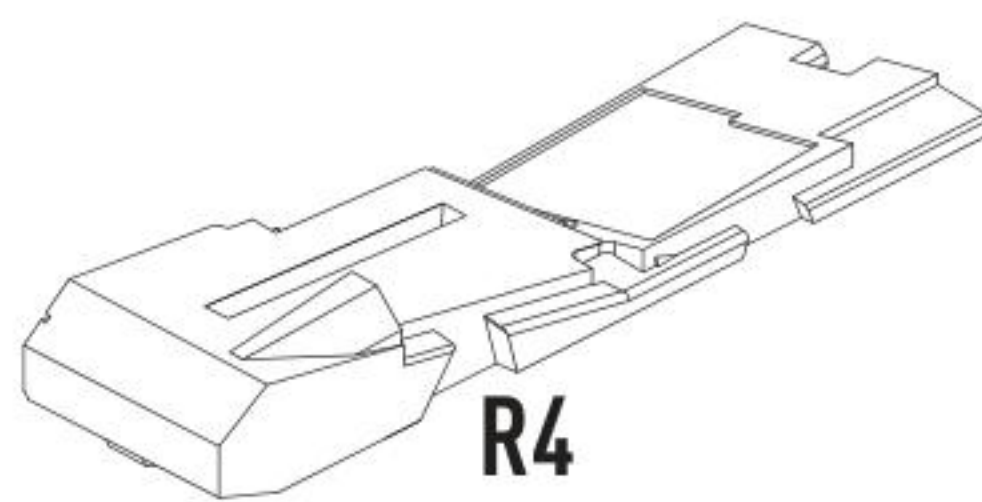


R4

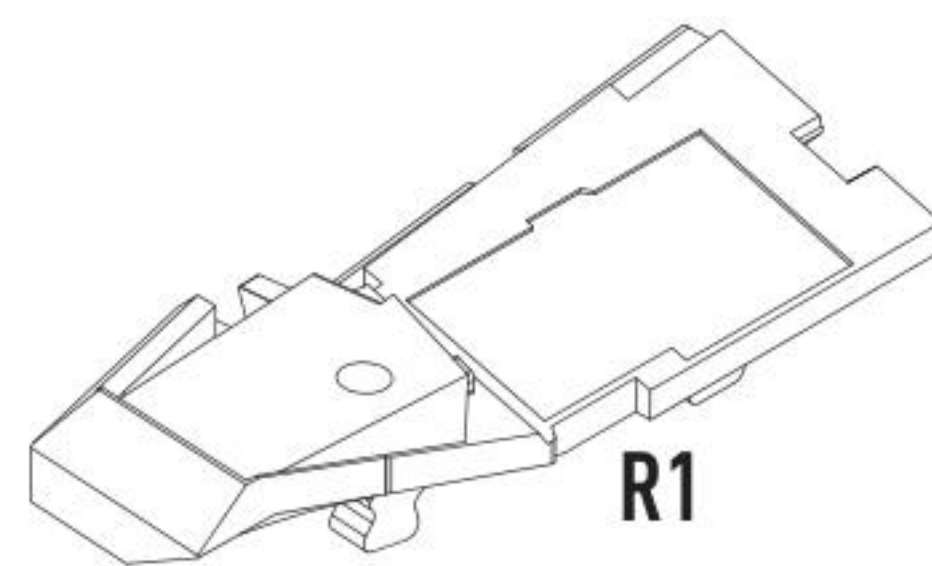

R1

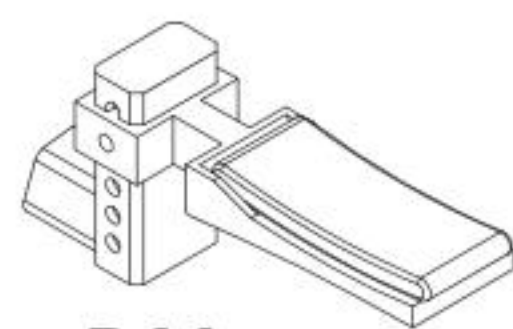

R11

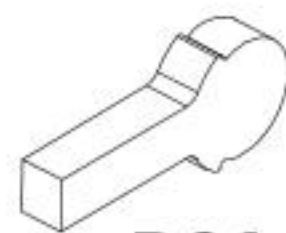

R21



R14



R13




F1




F2


3D-DECAL INSTRUCTION

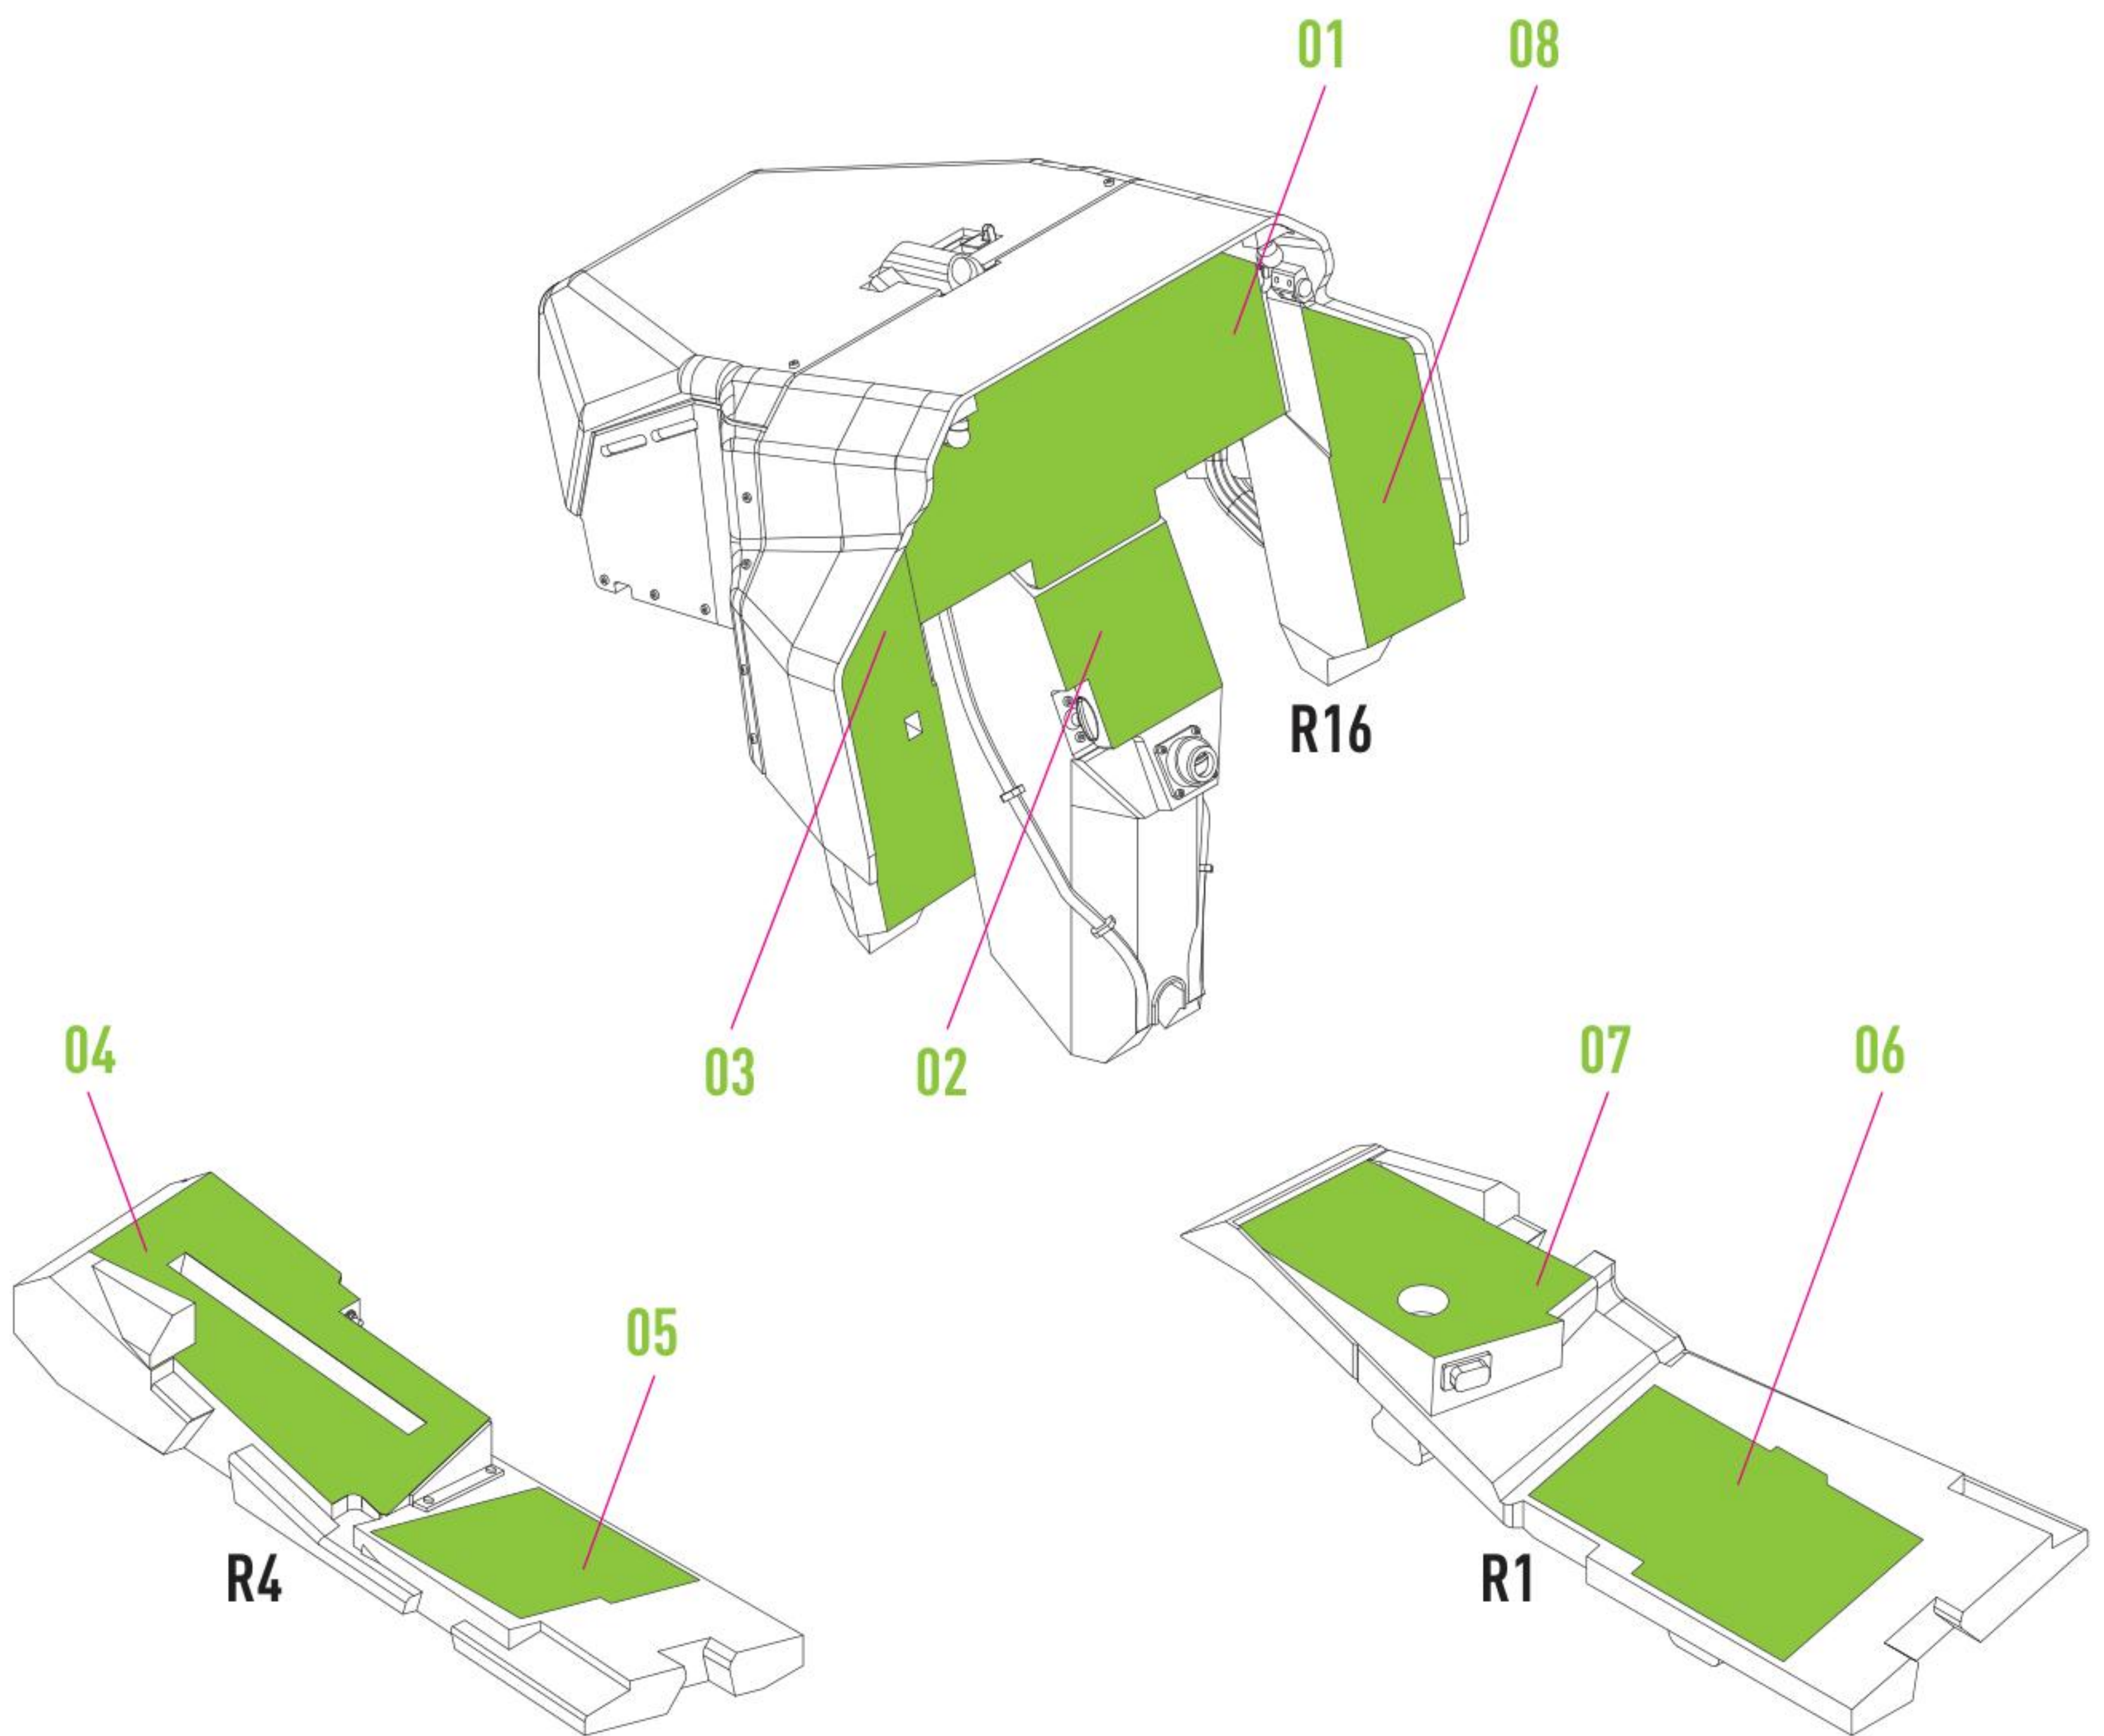


1

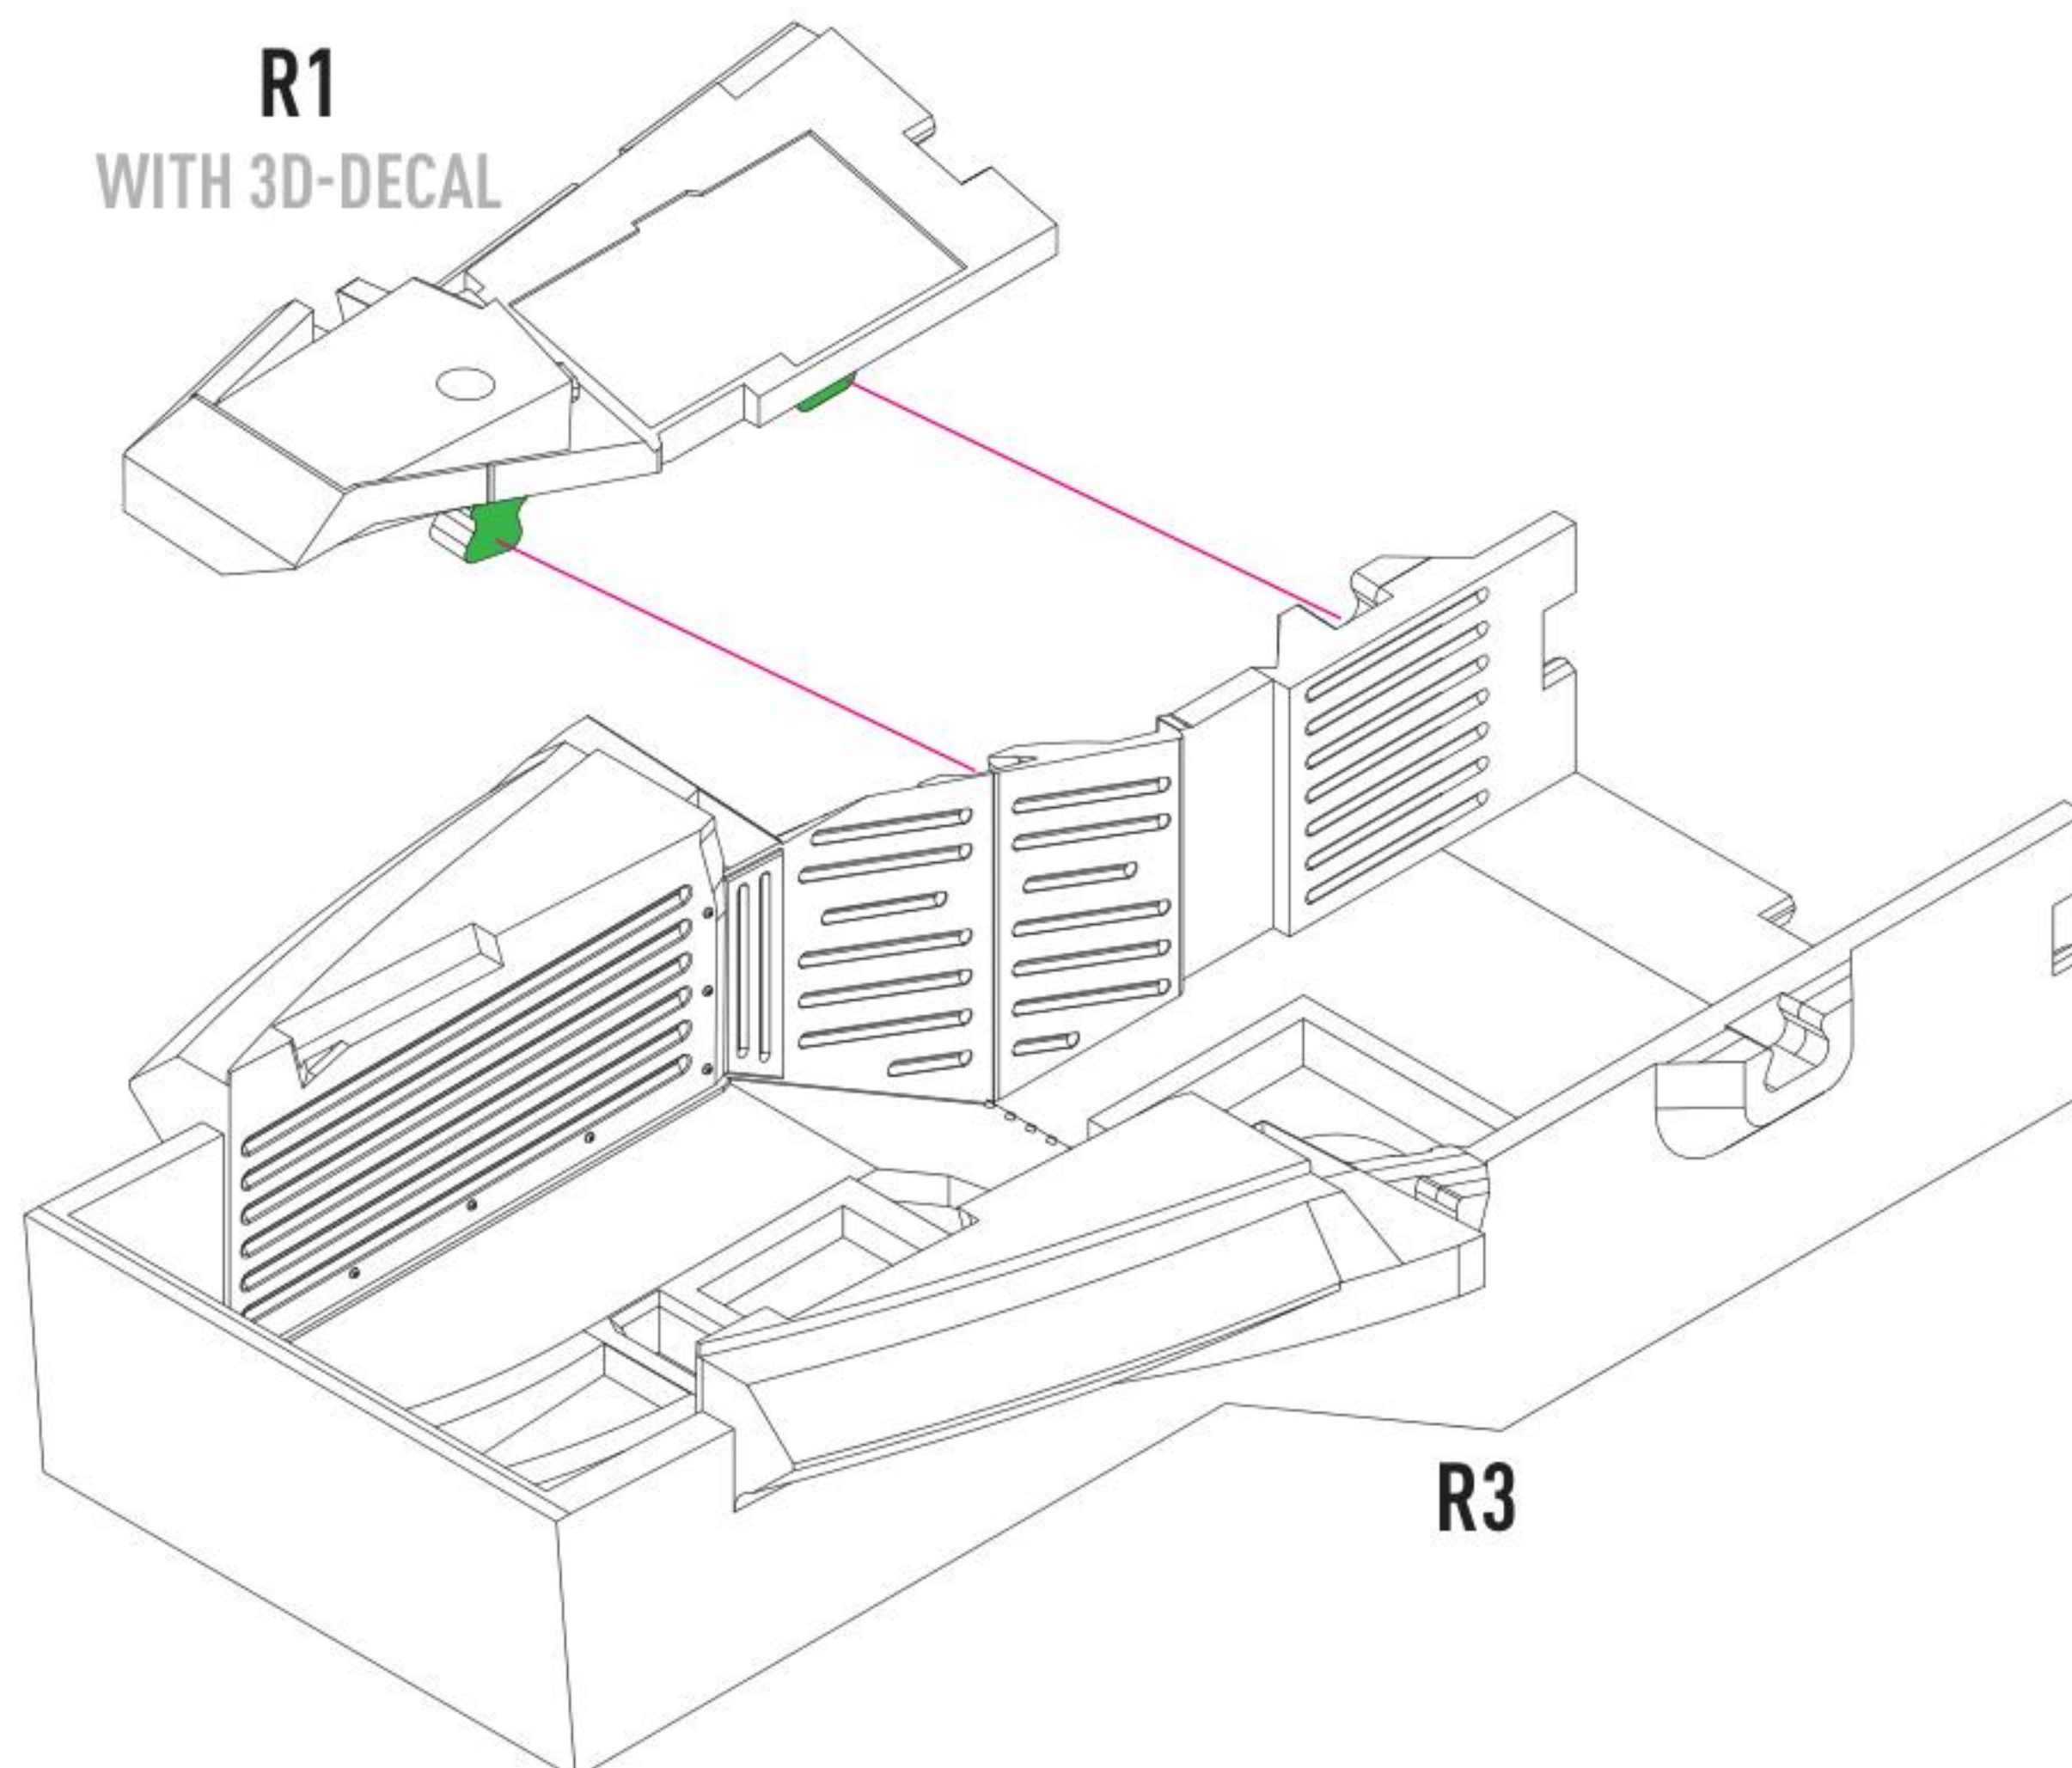


2

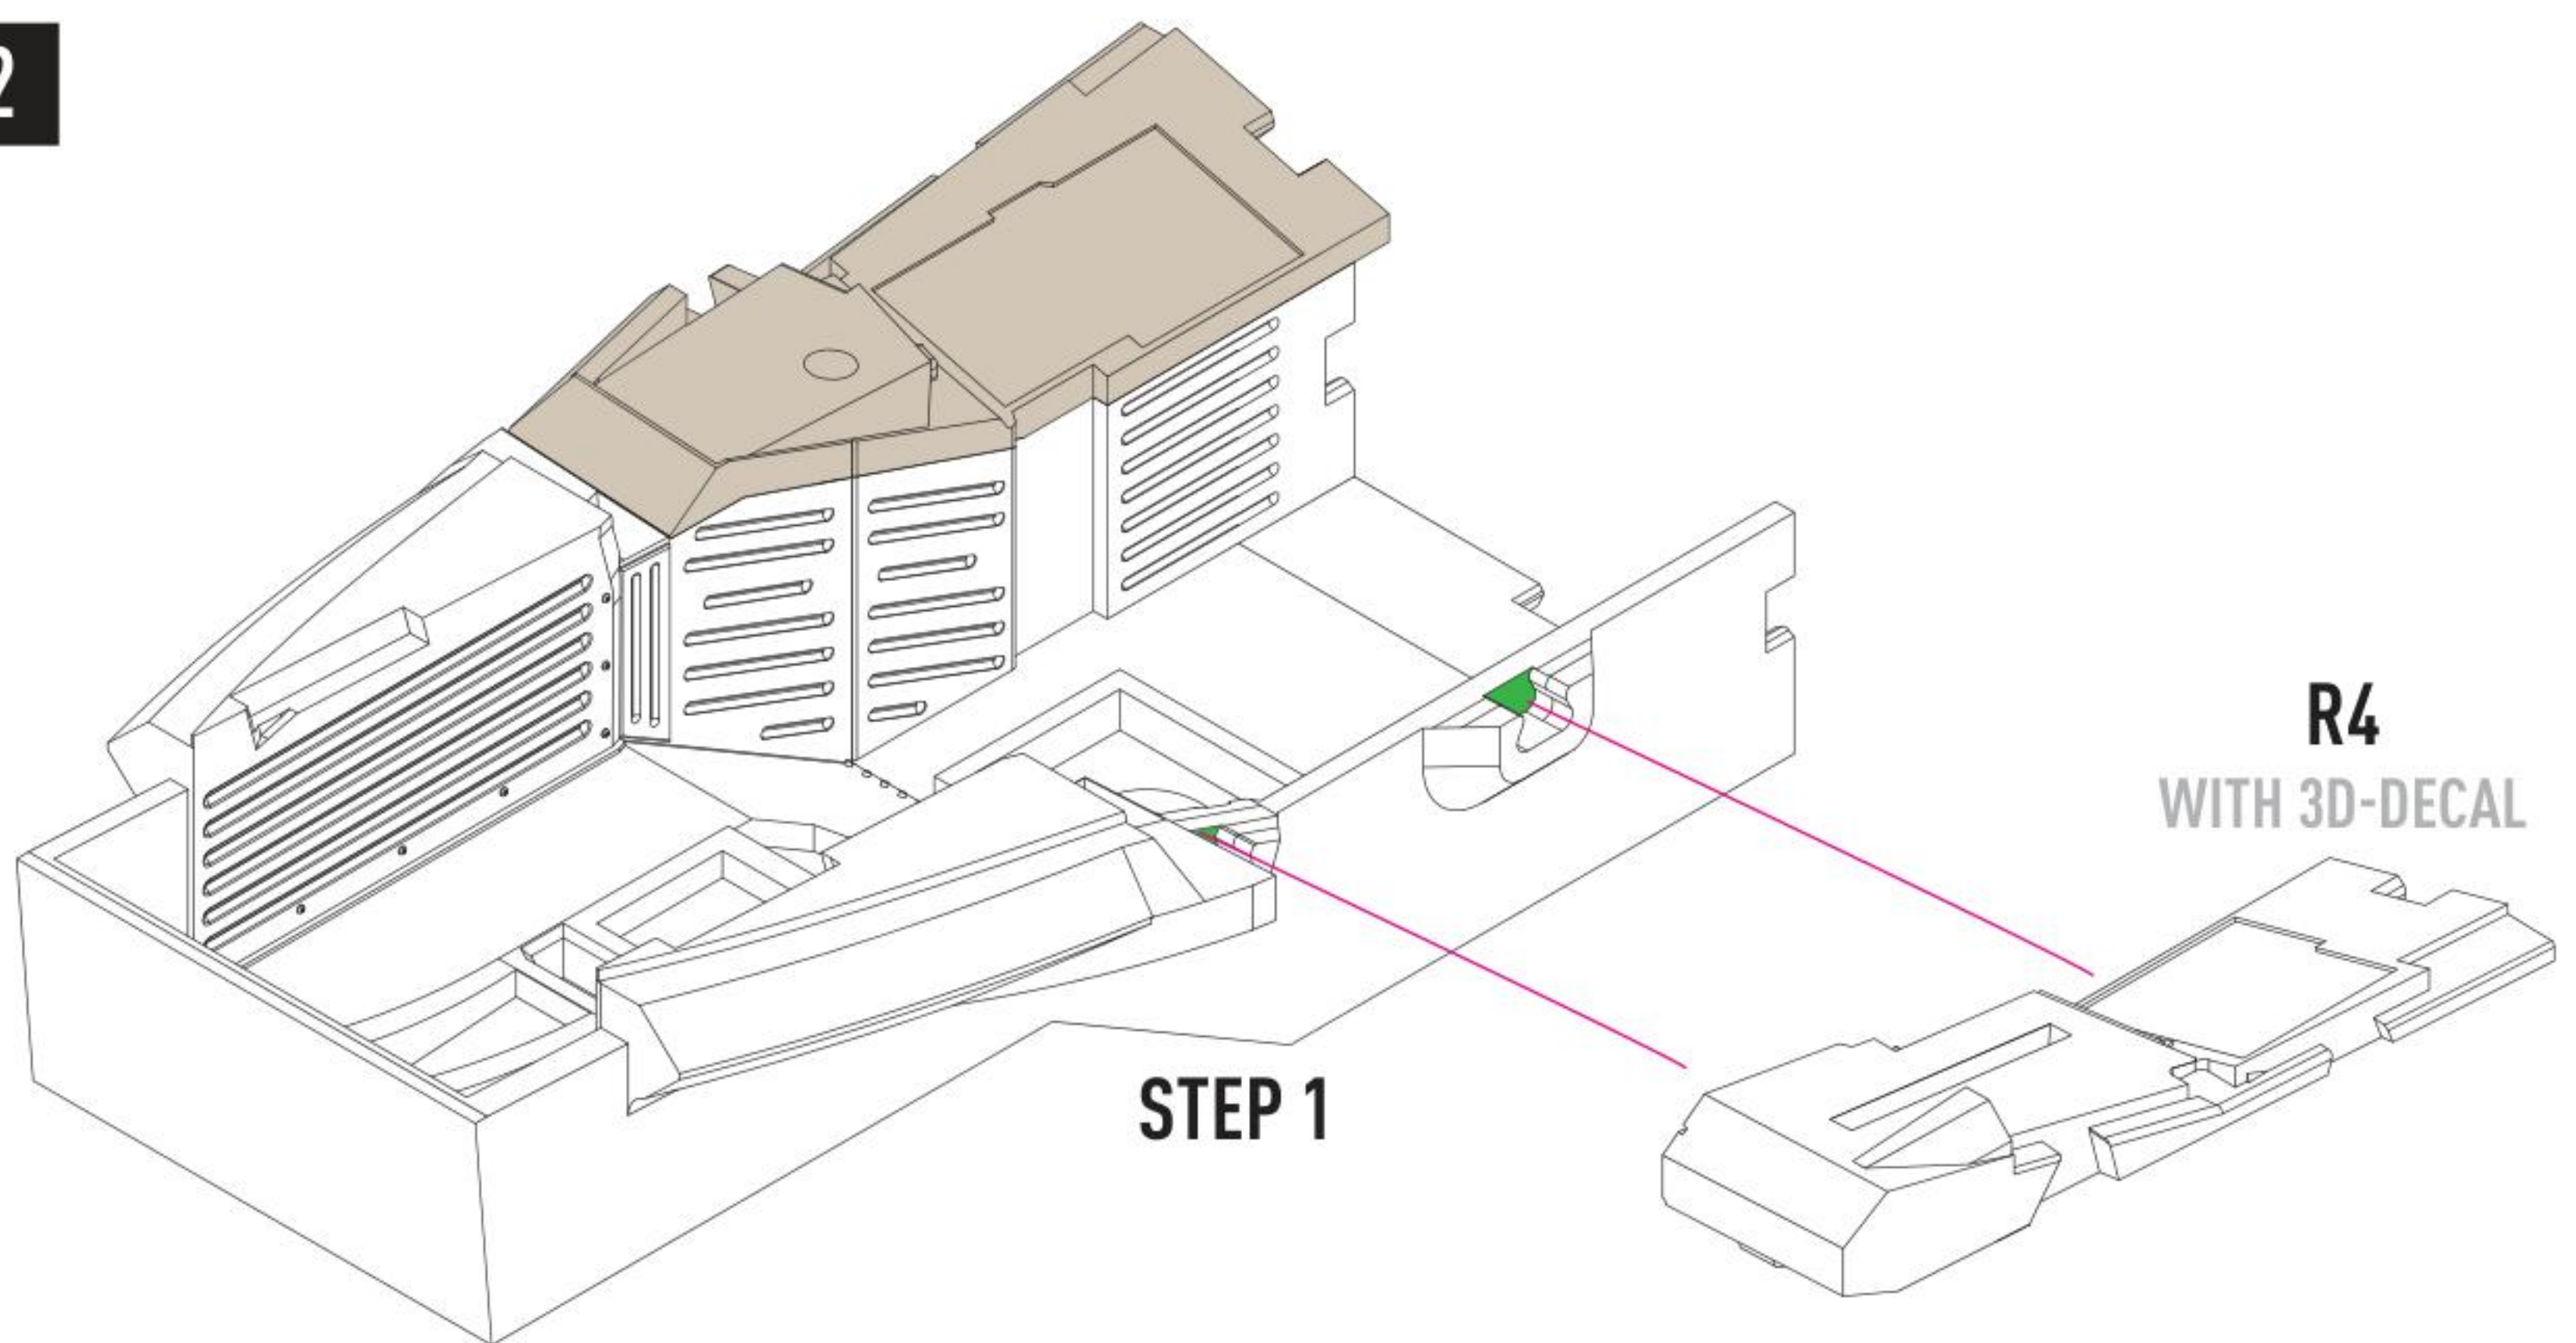


3

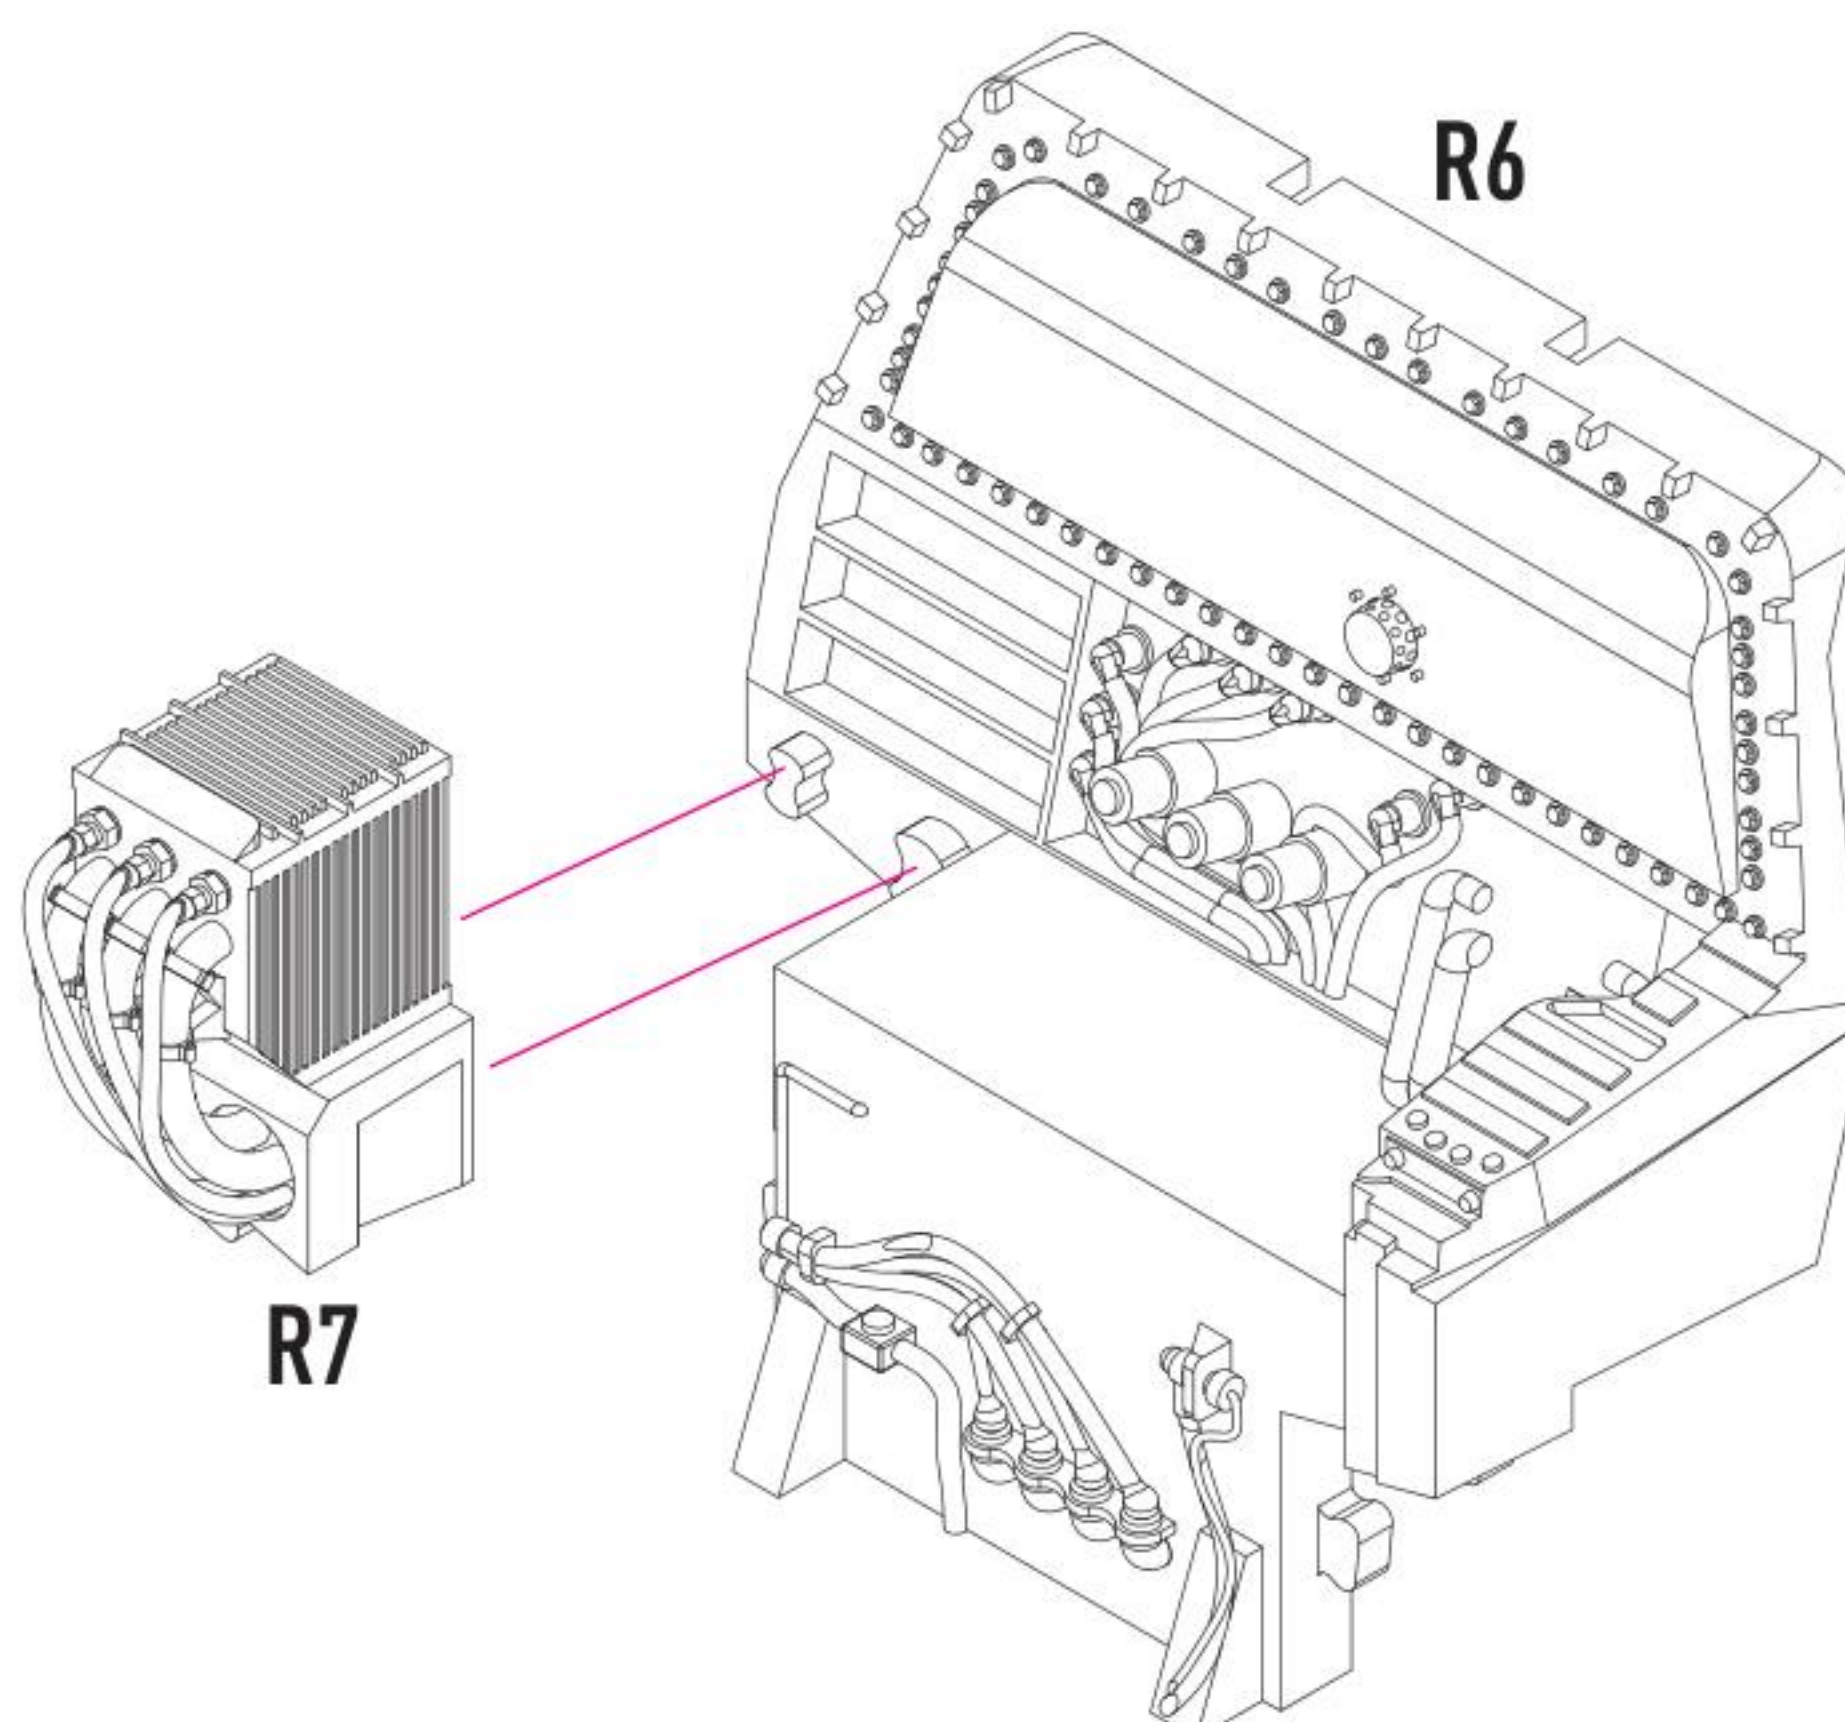


4

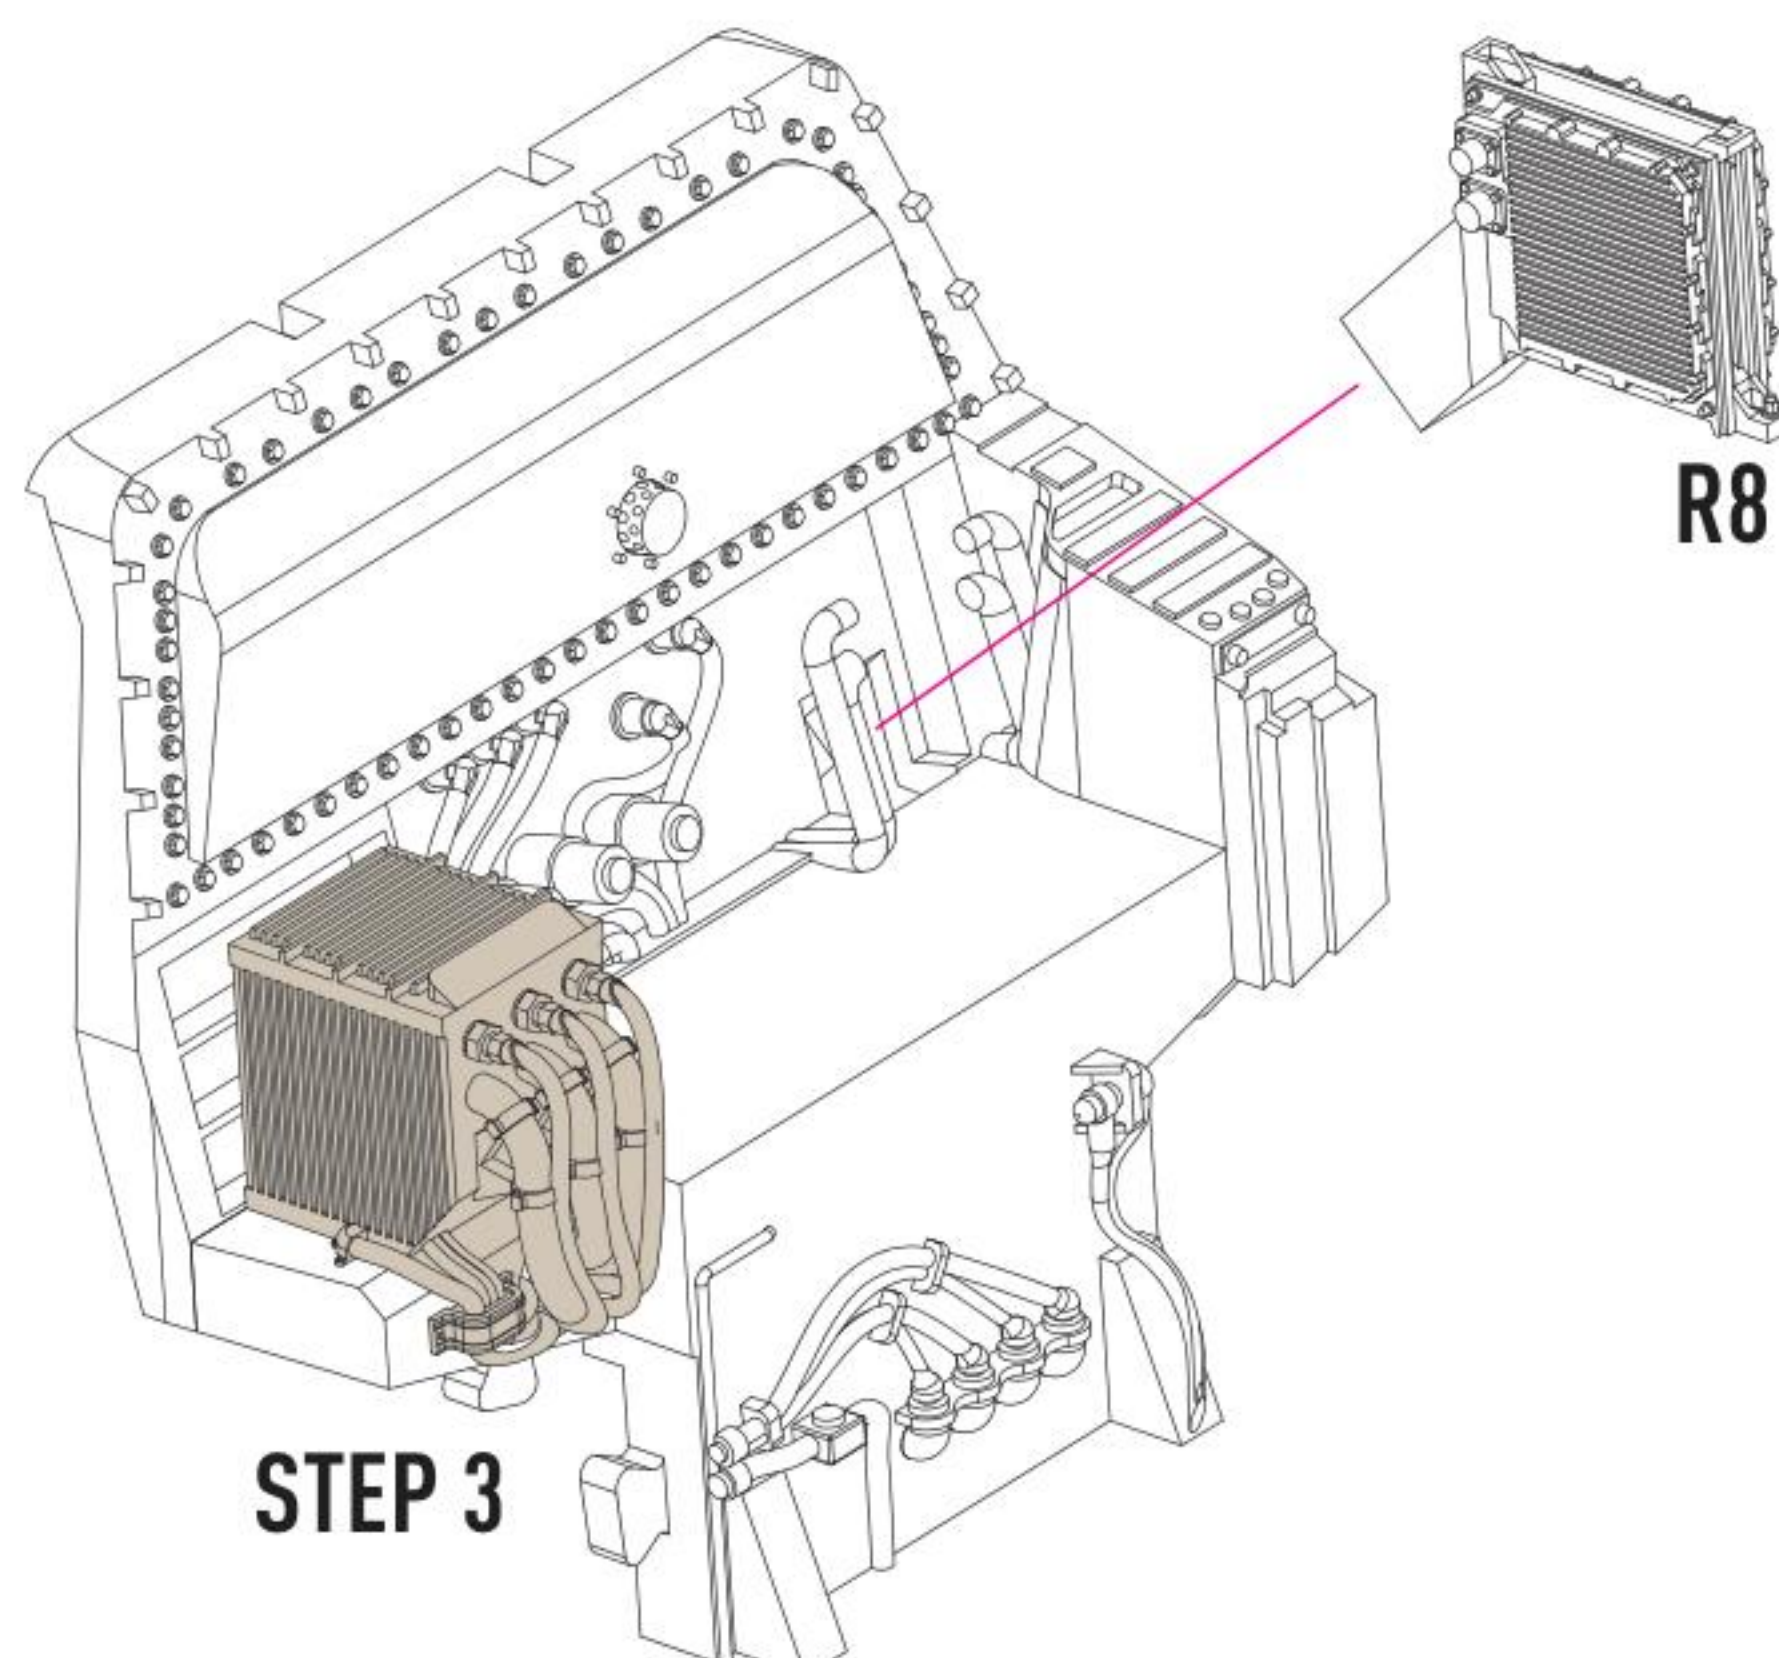


5


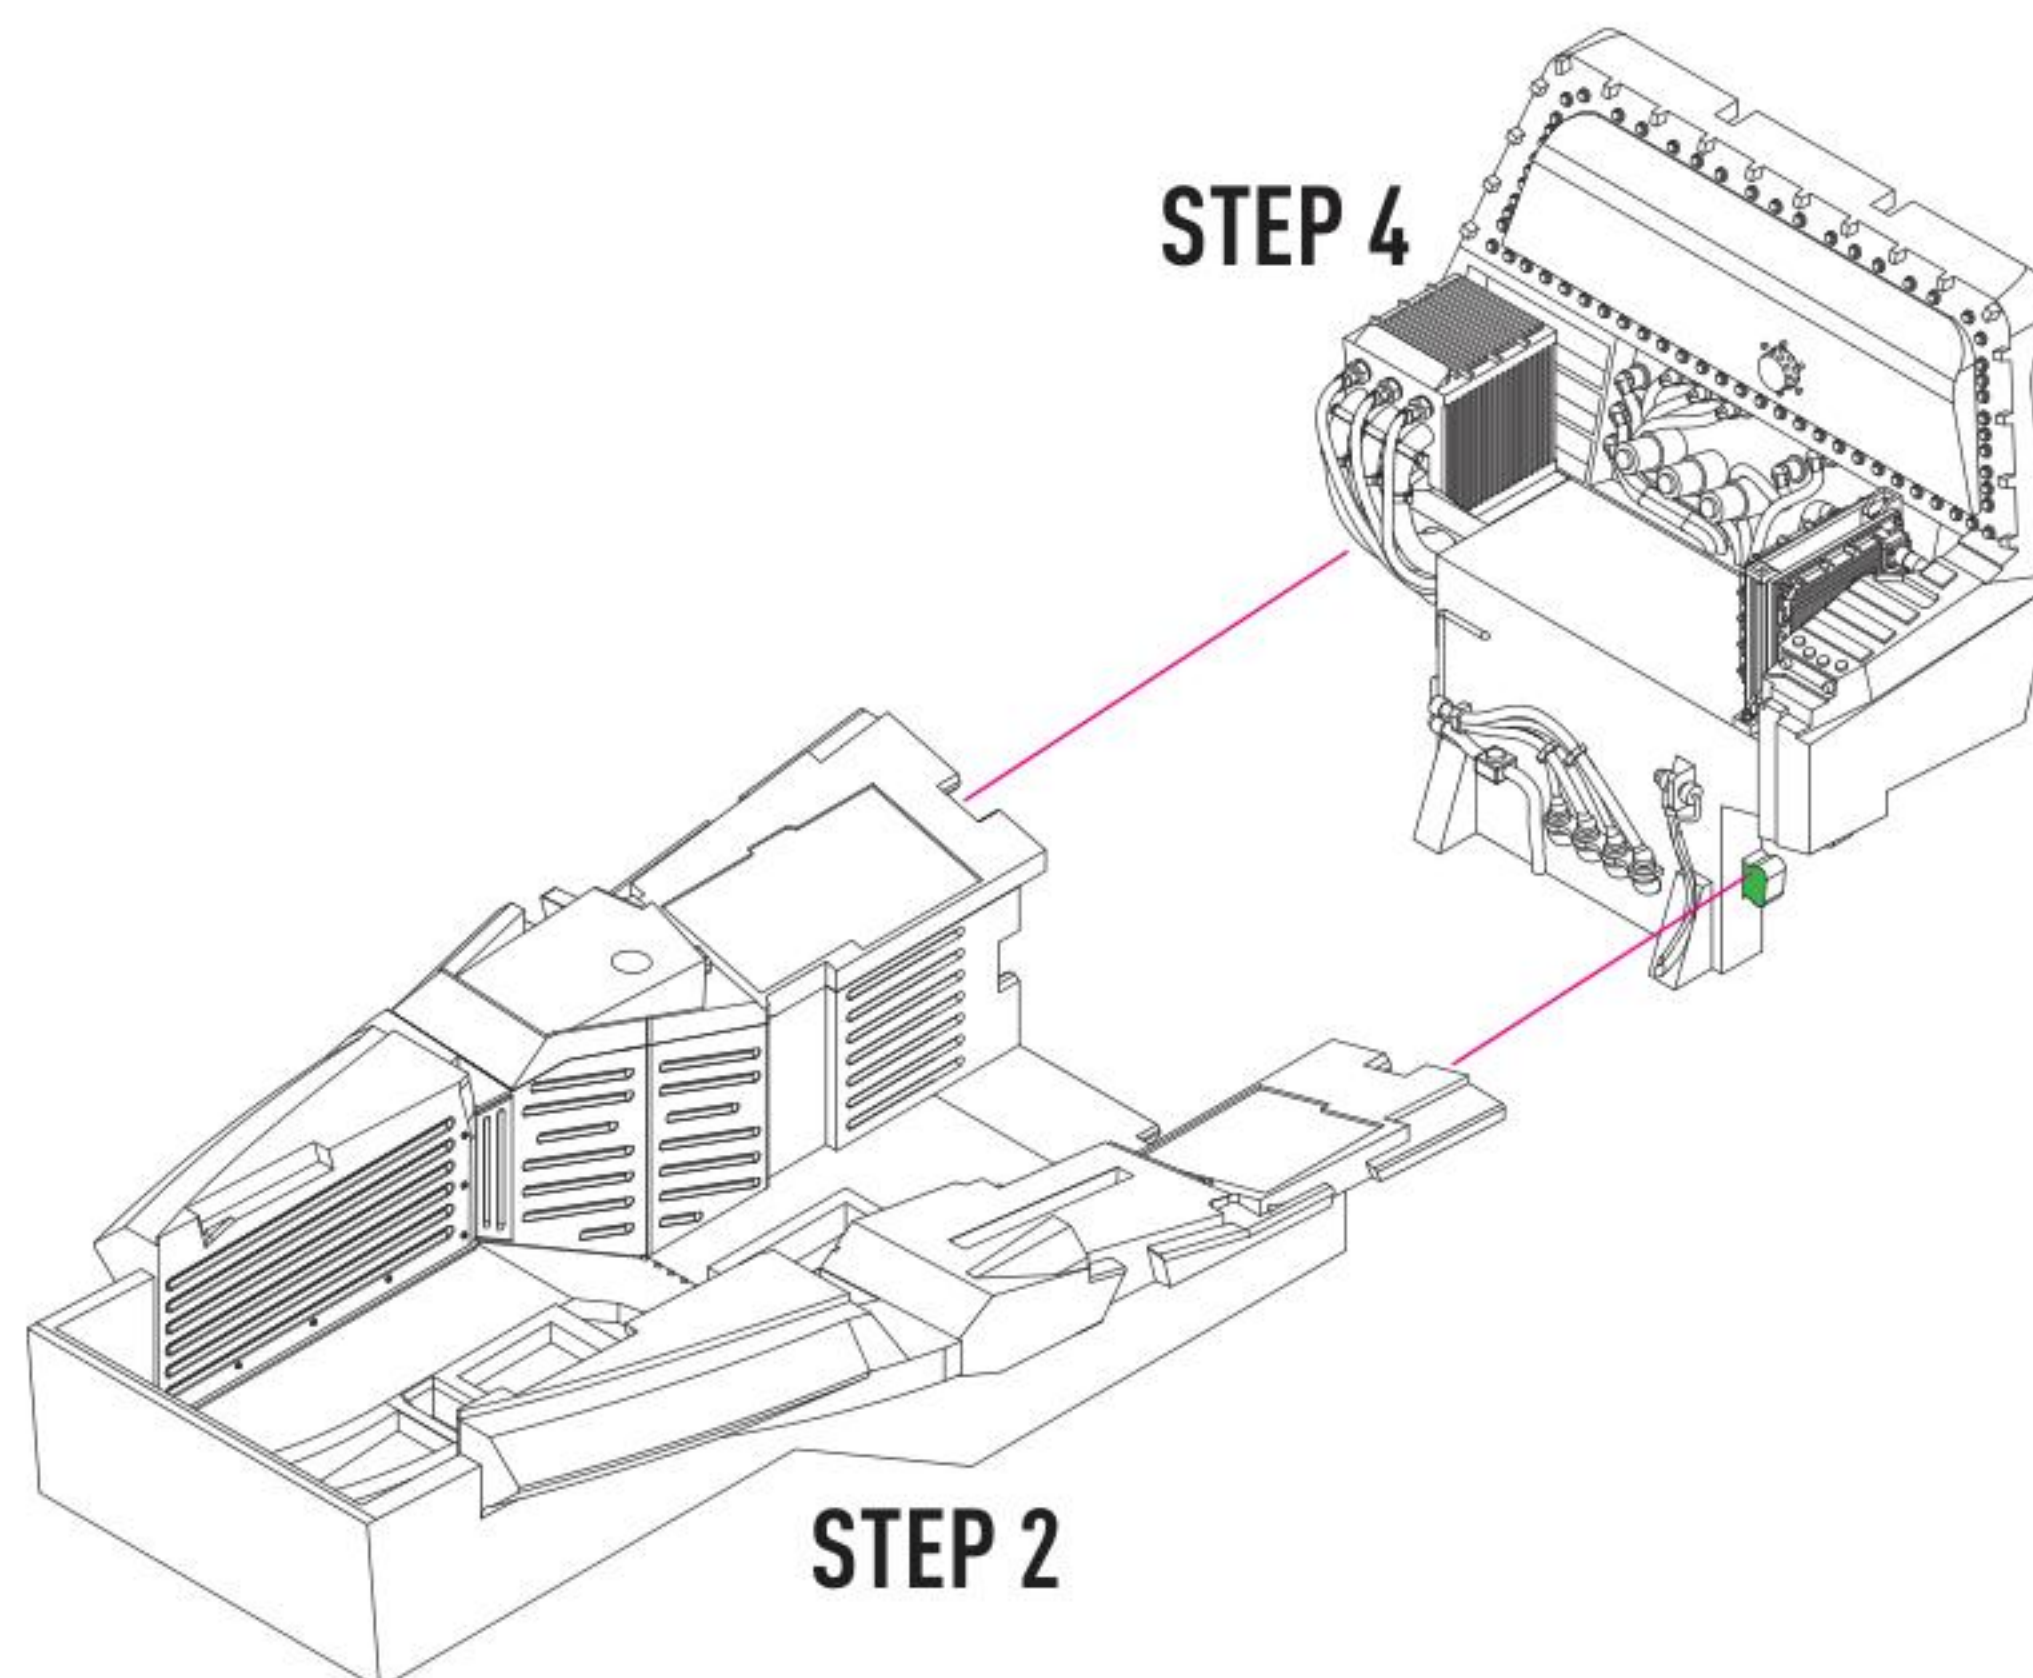


6

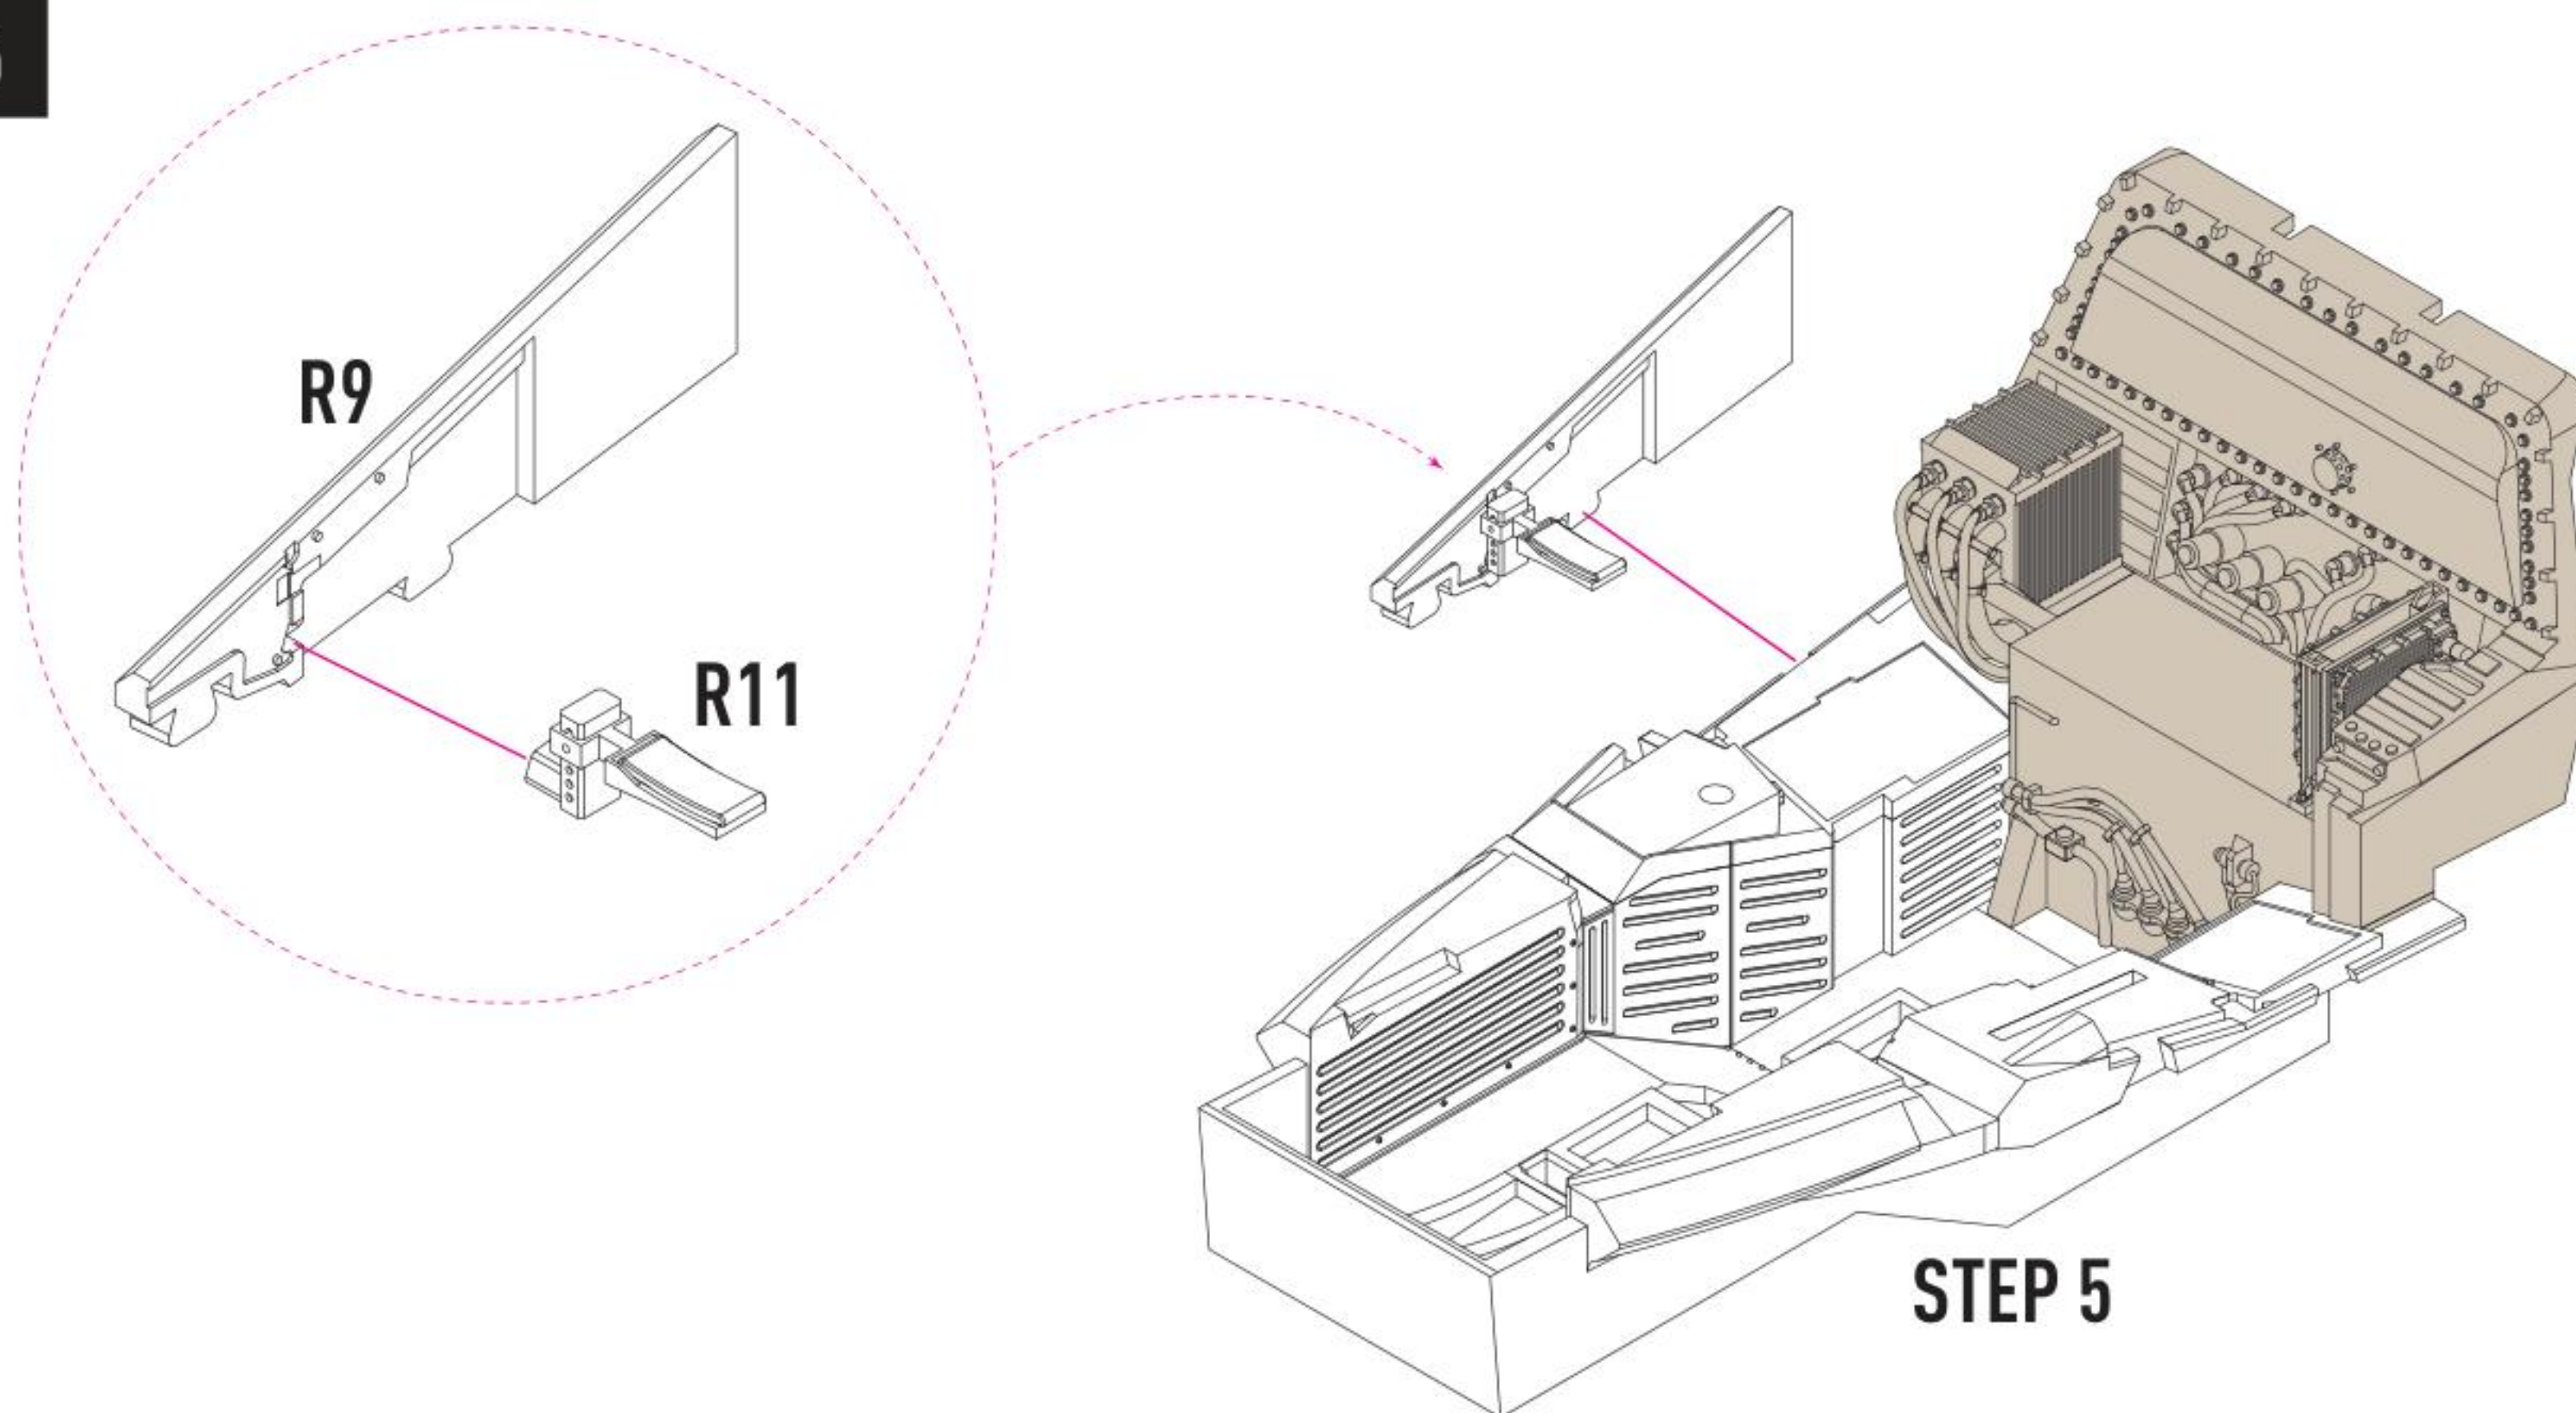


7

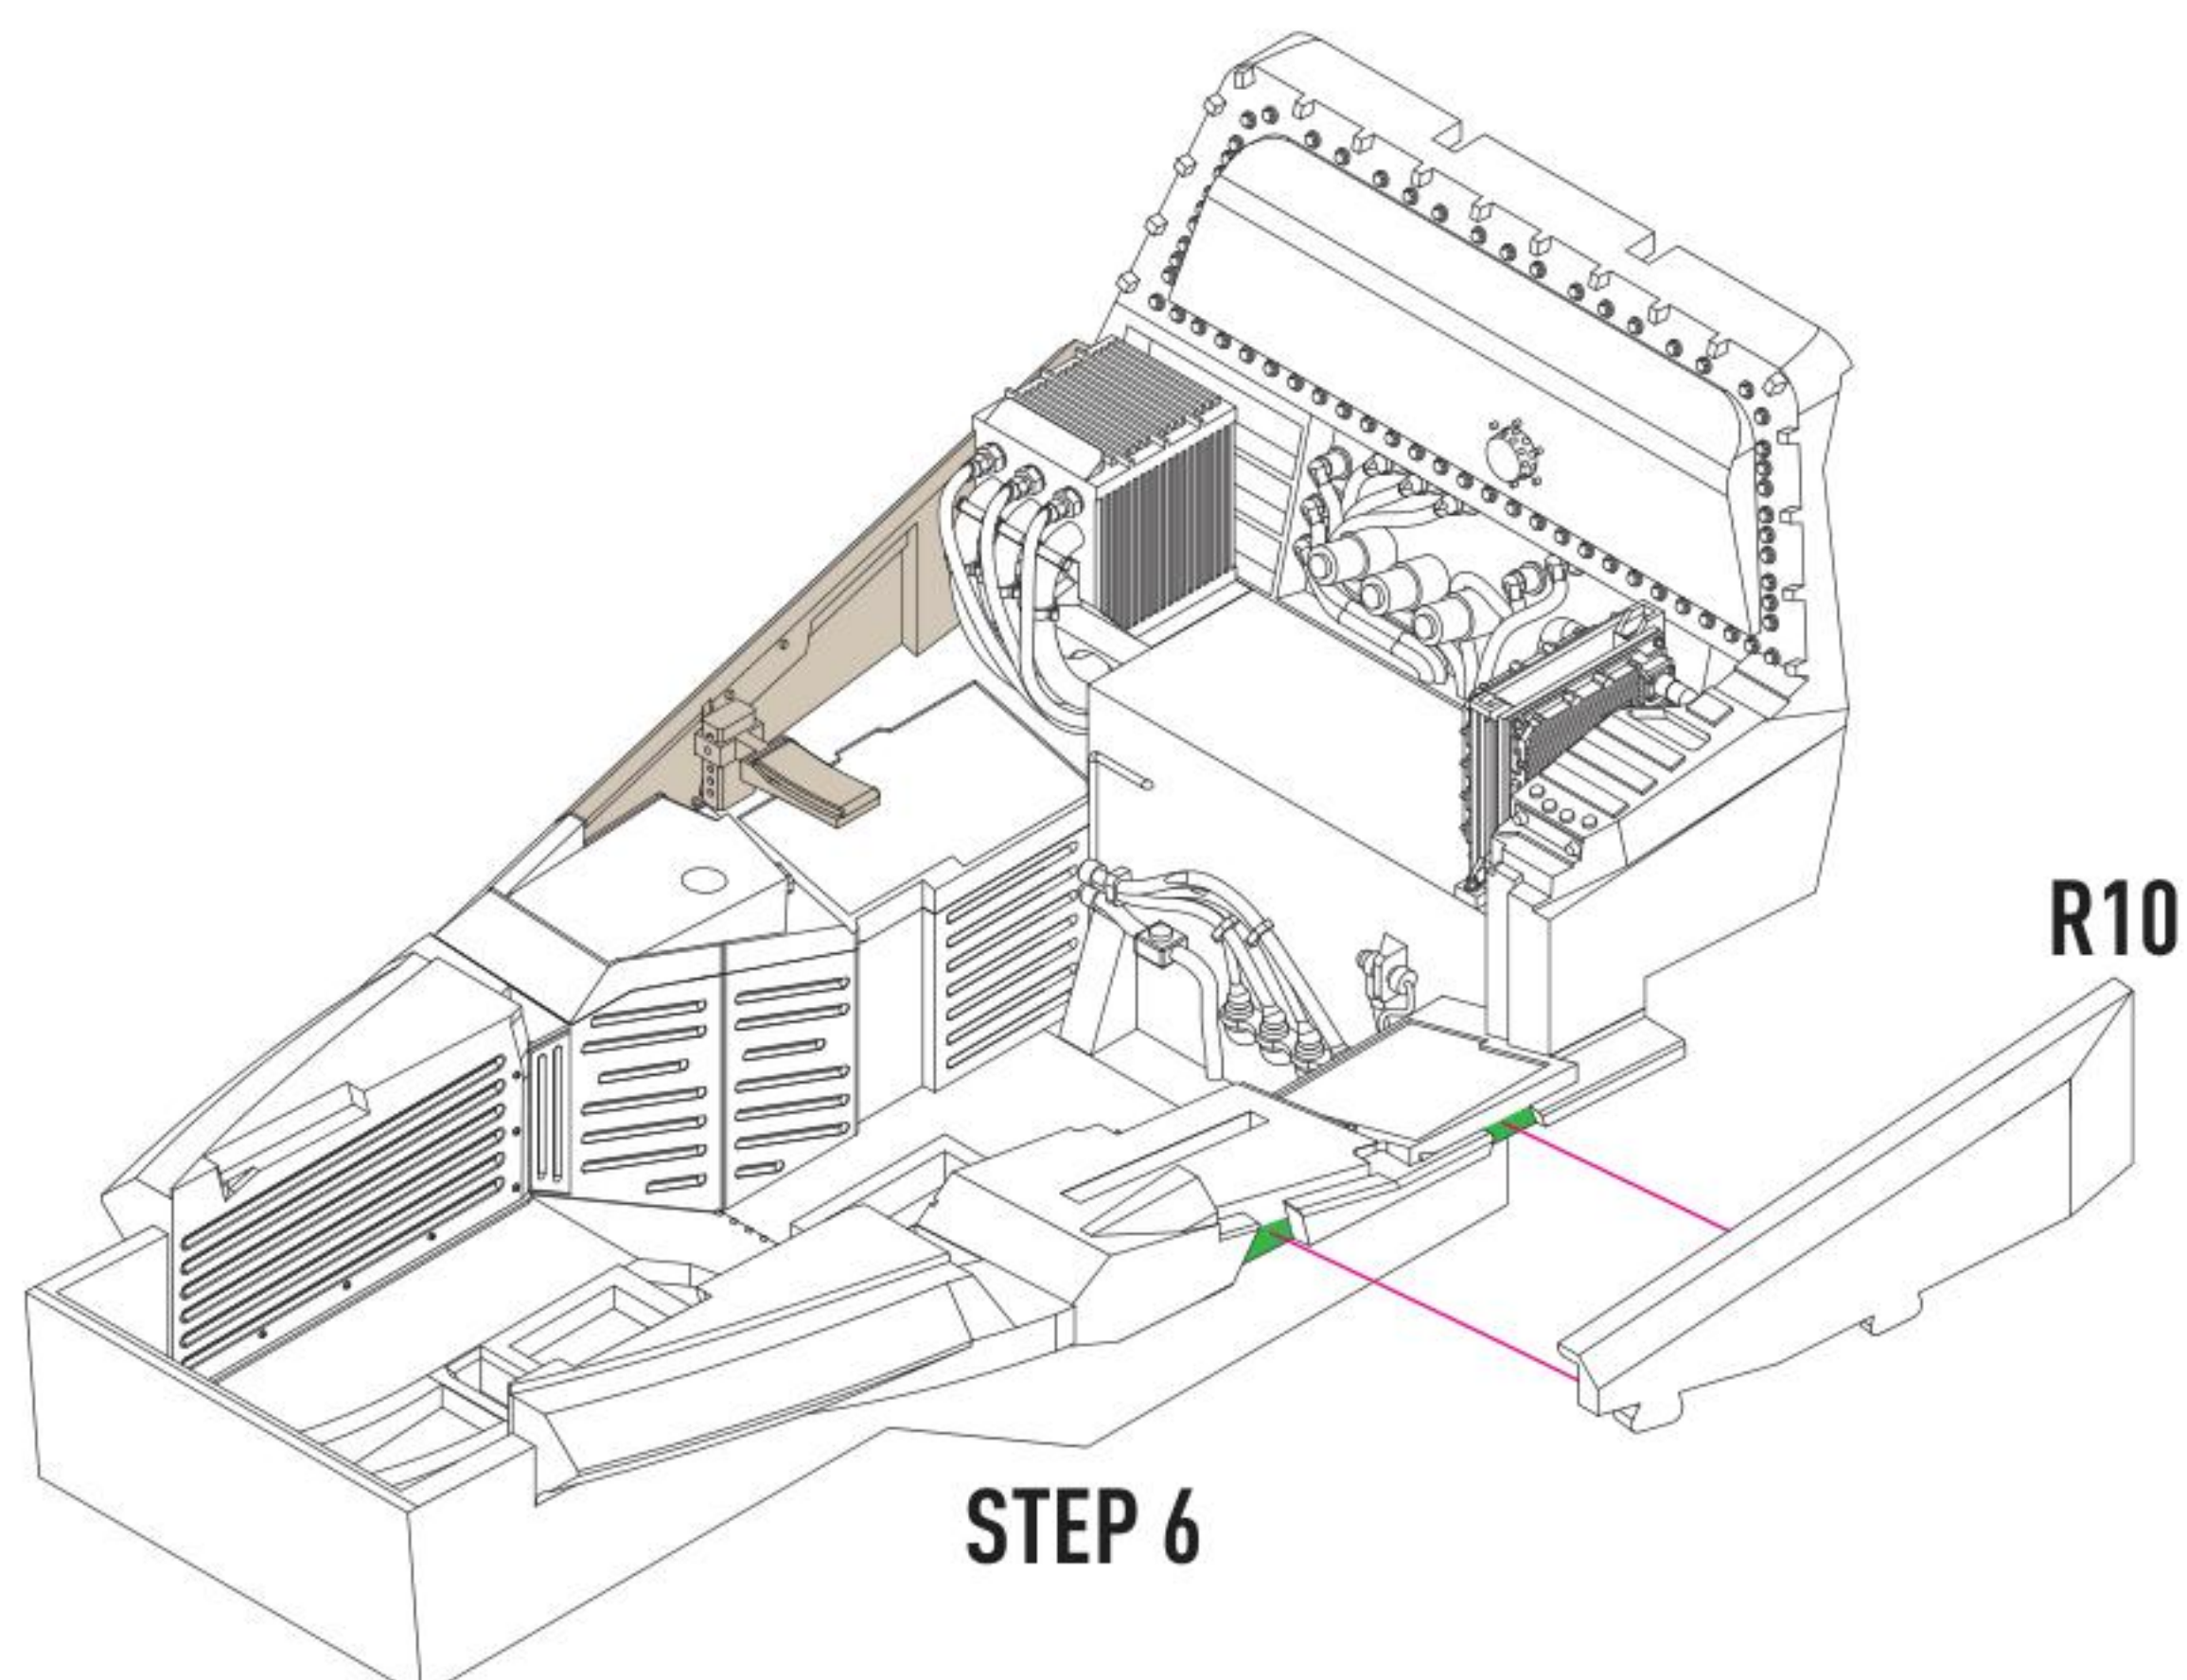


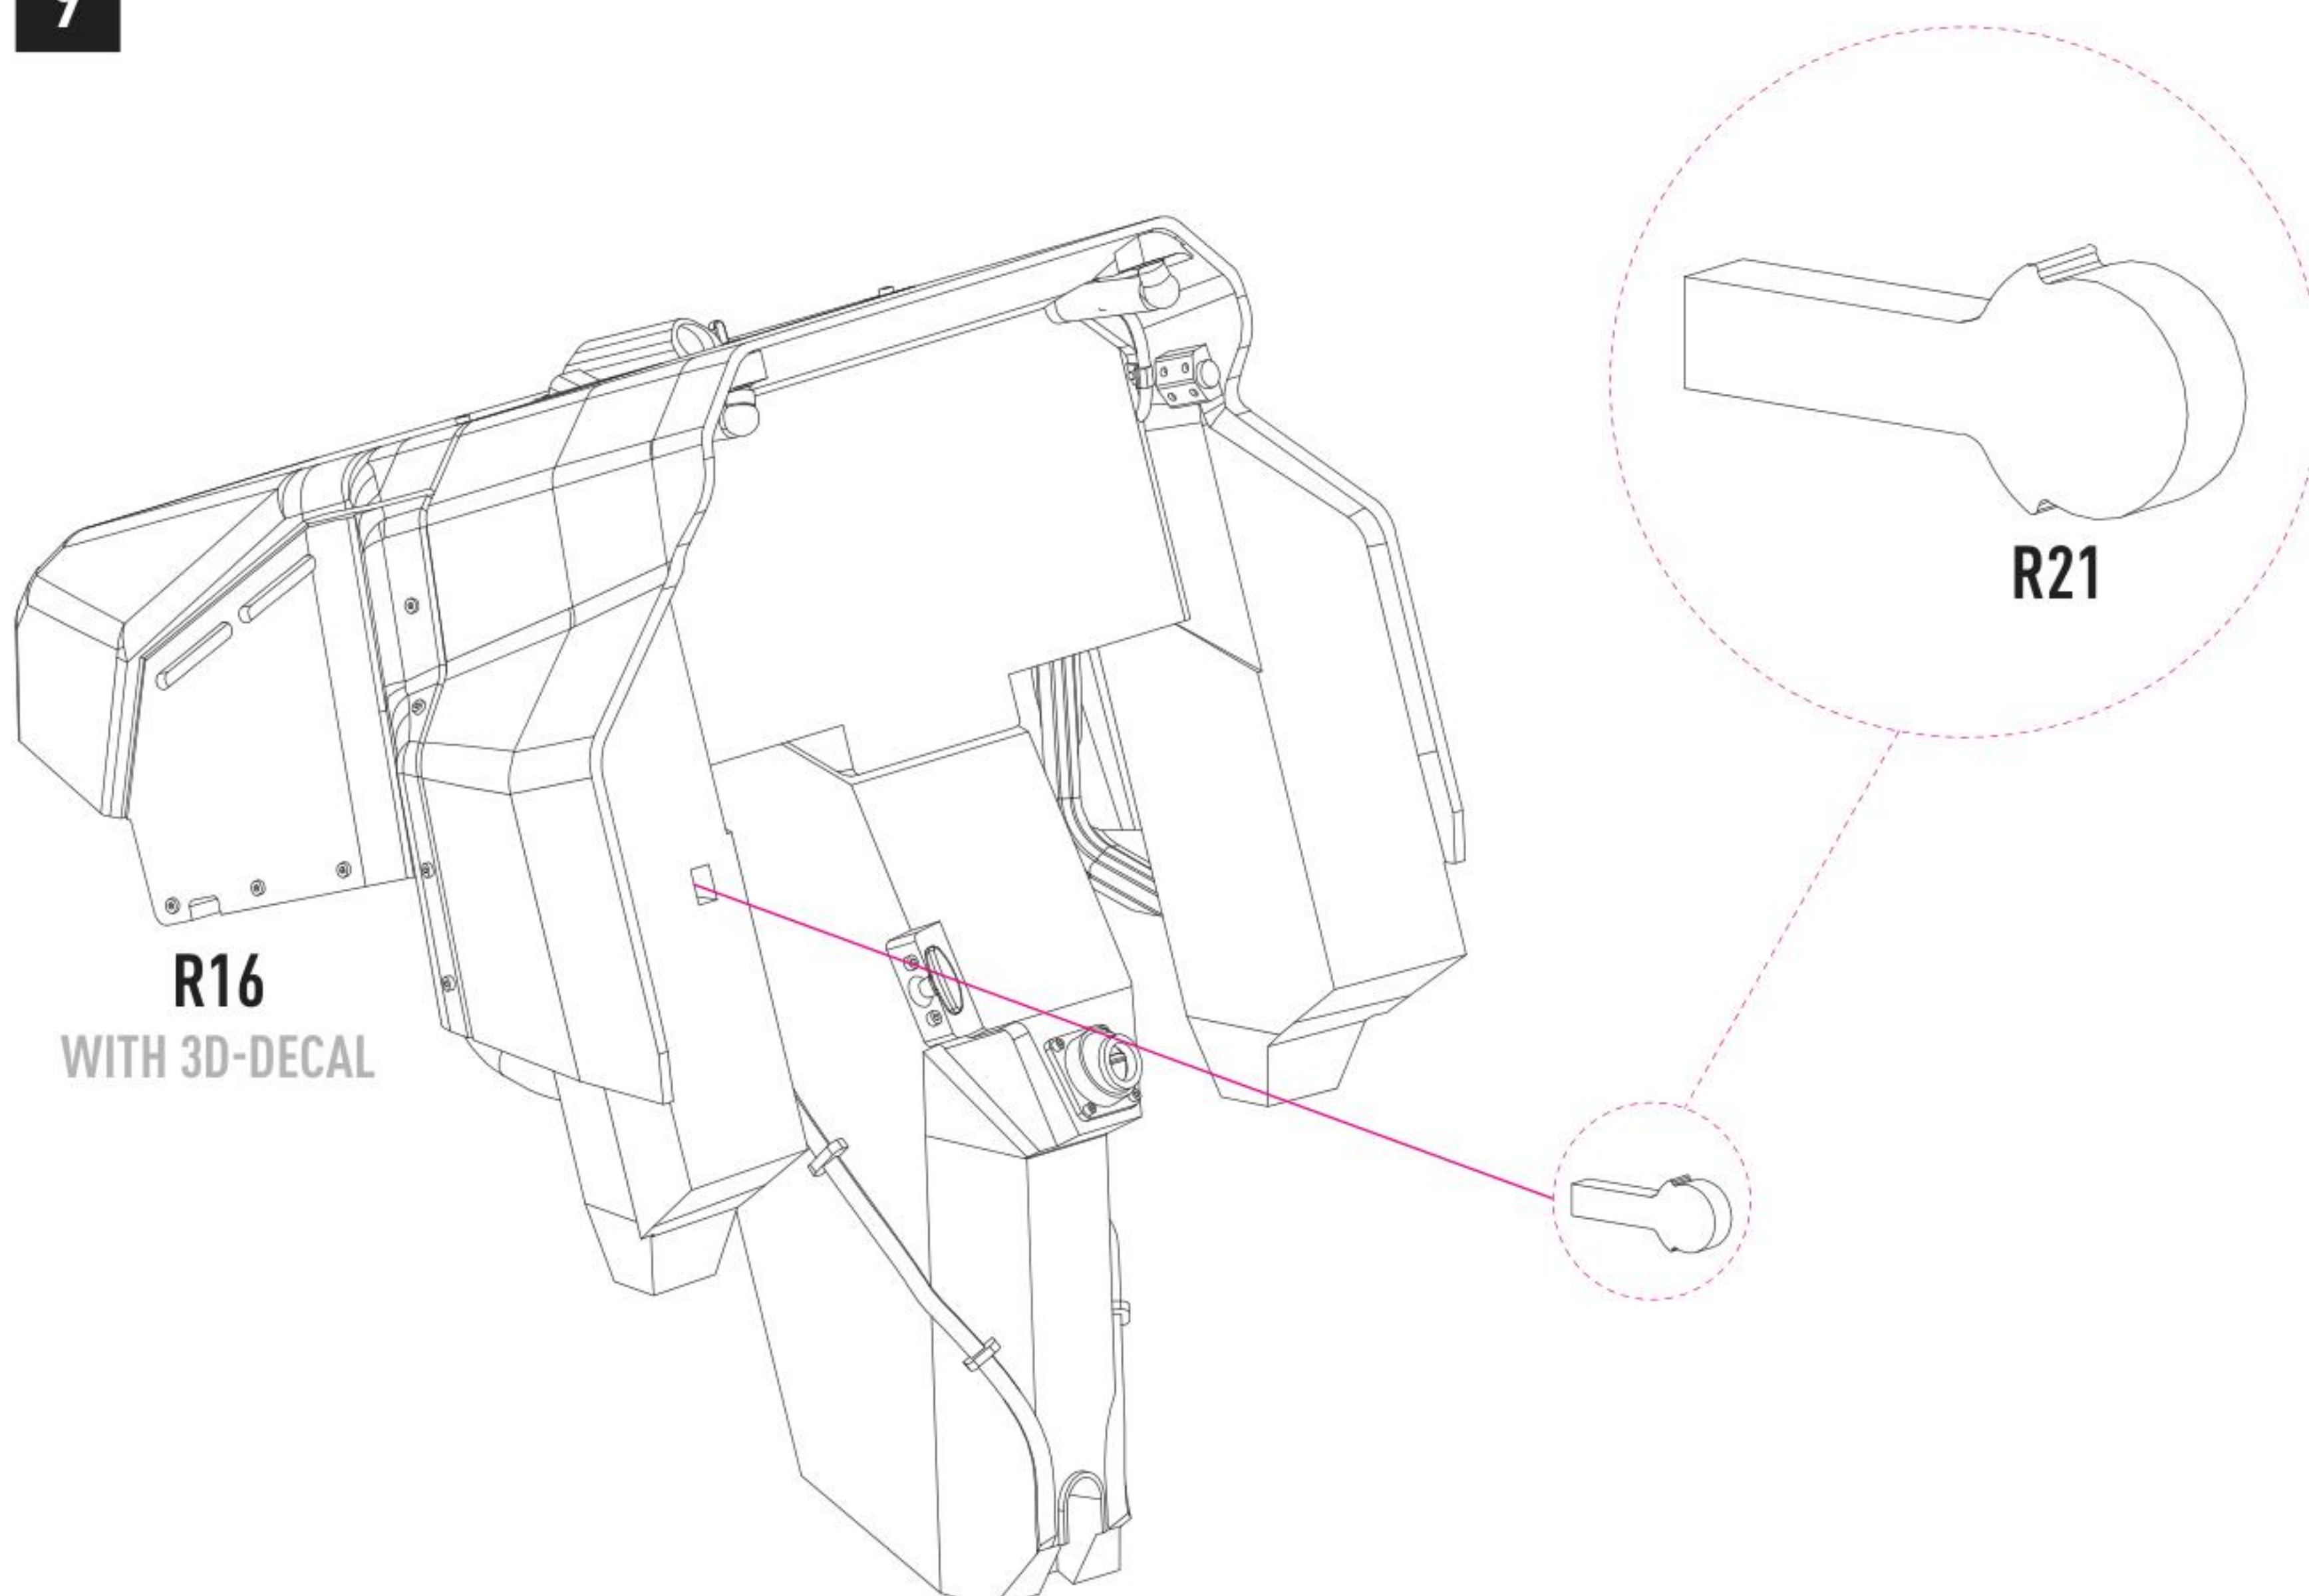
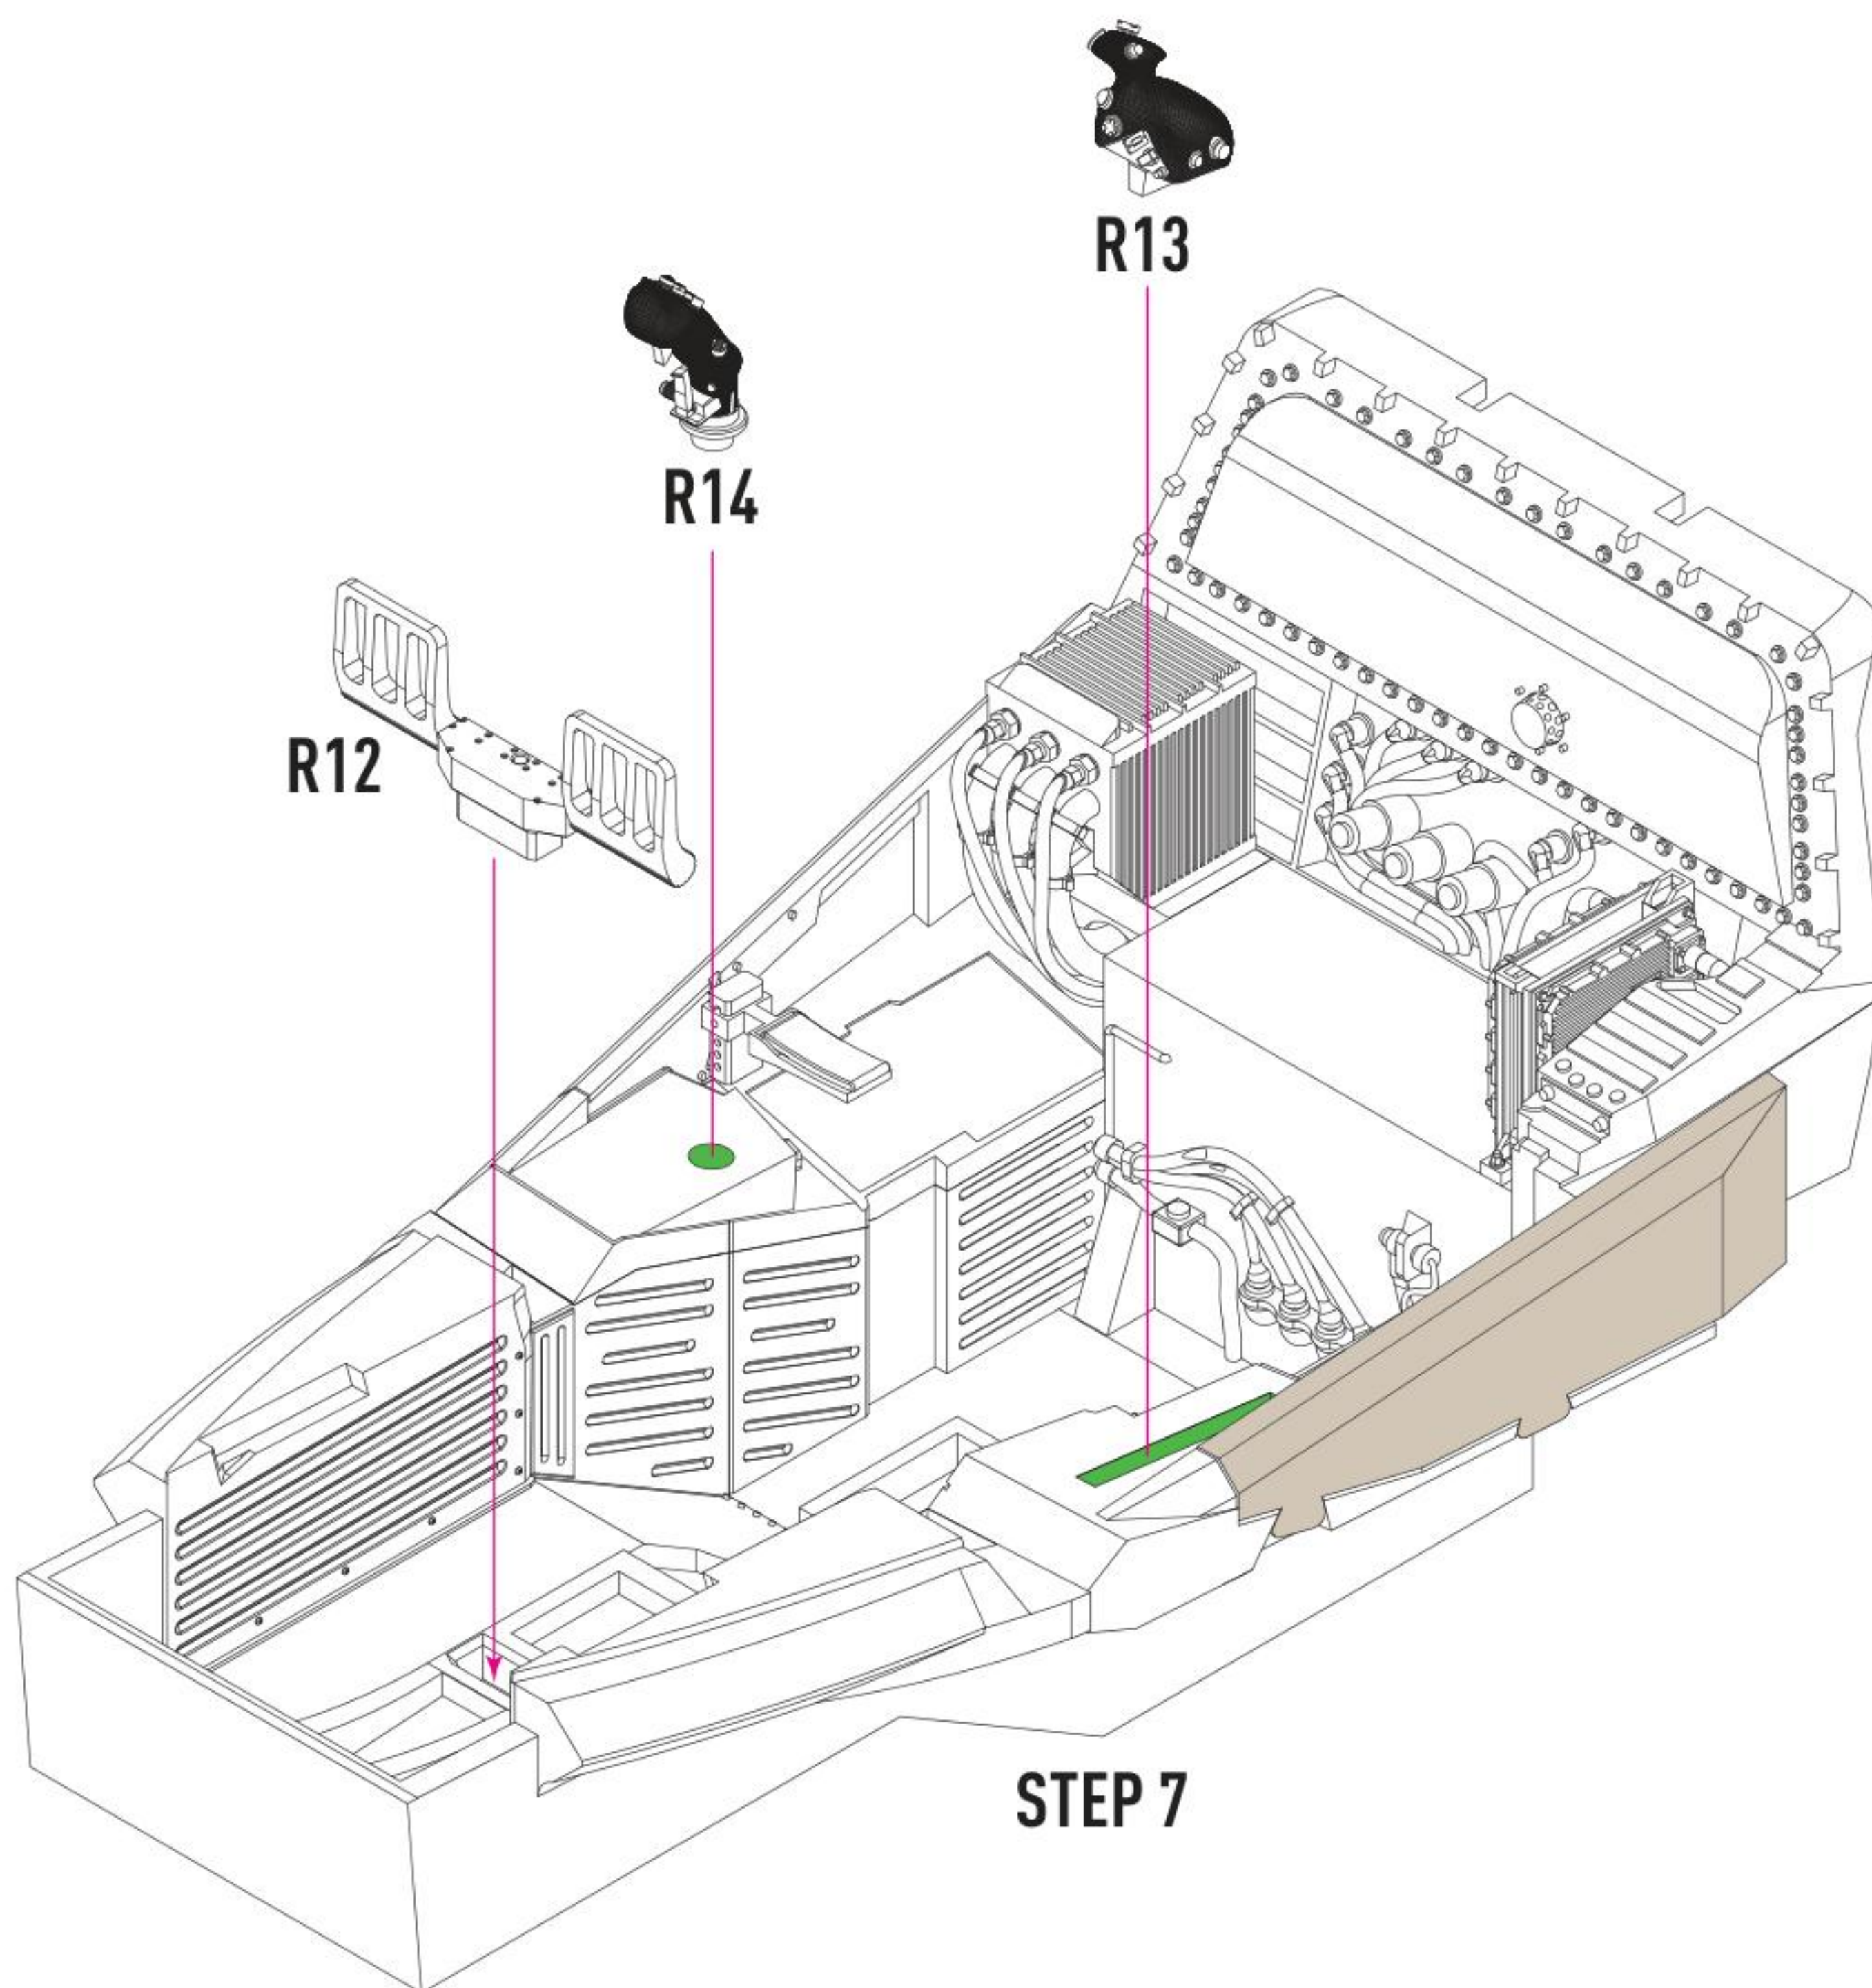


10

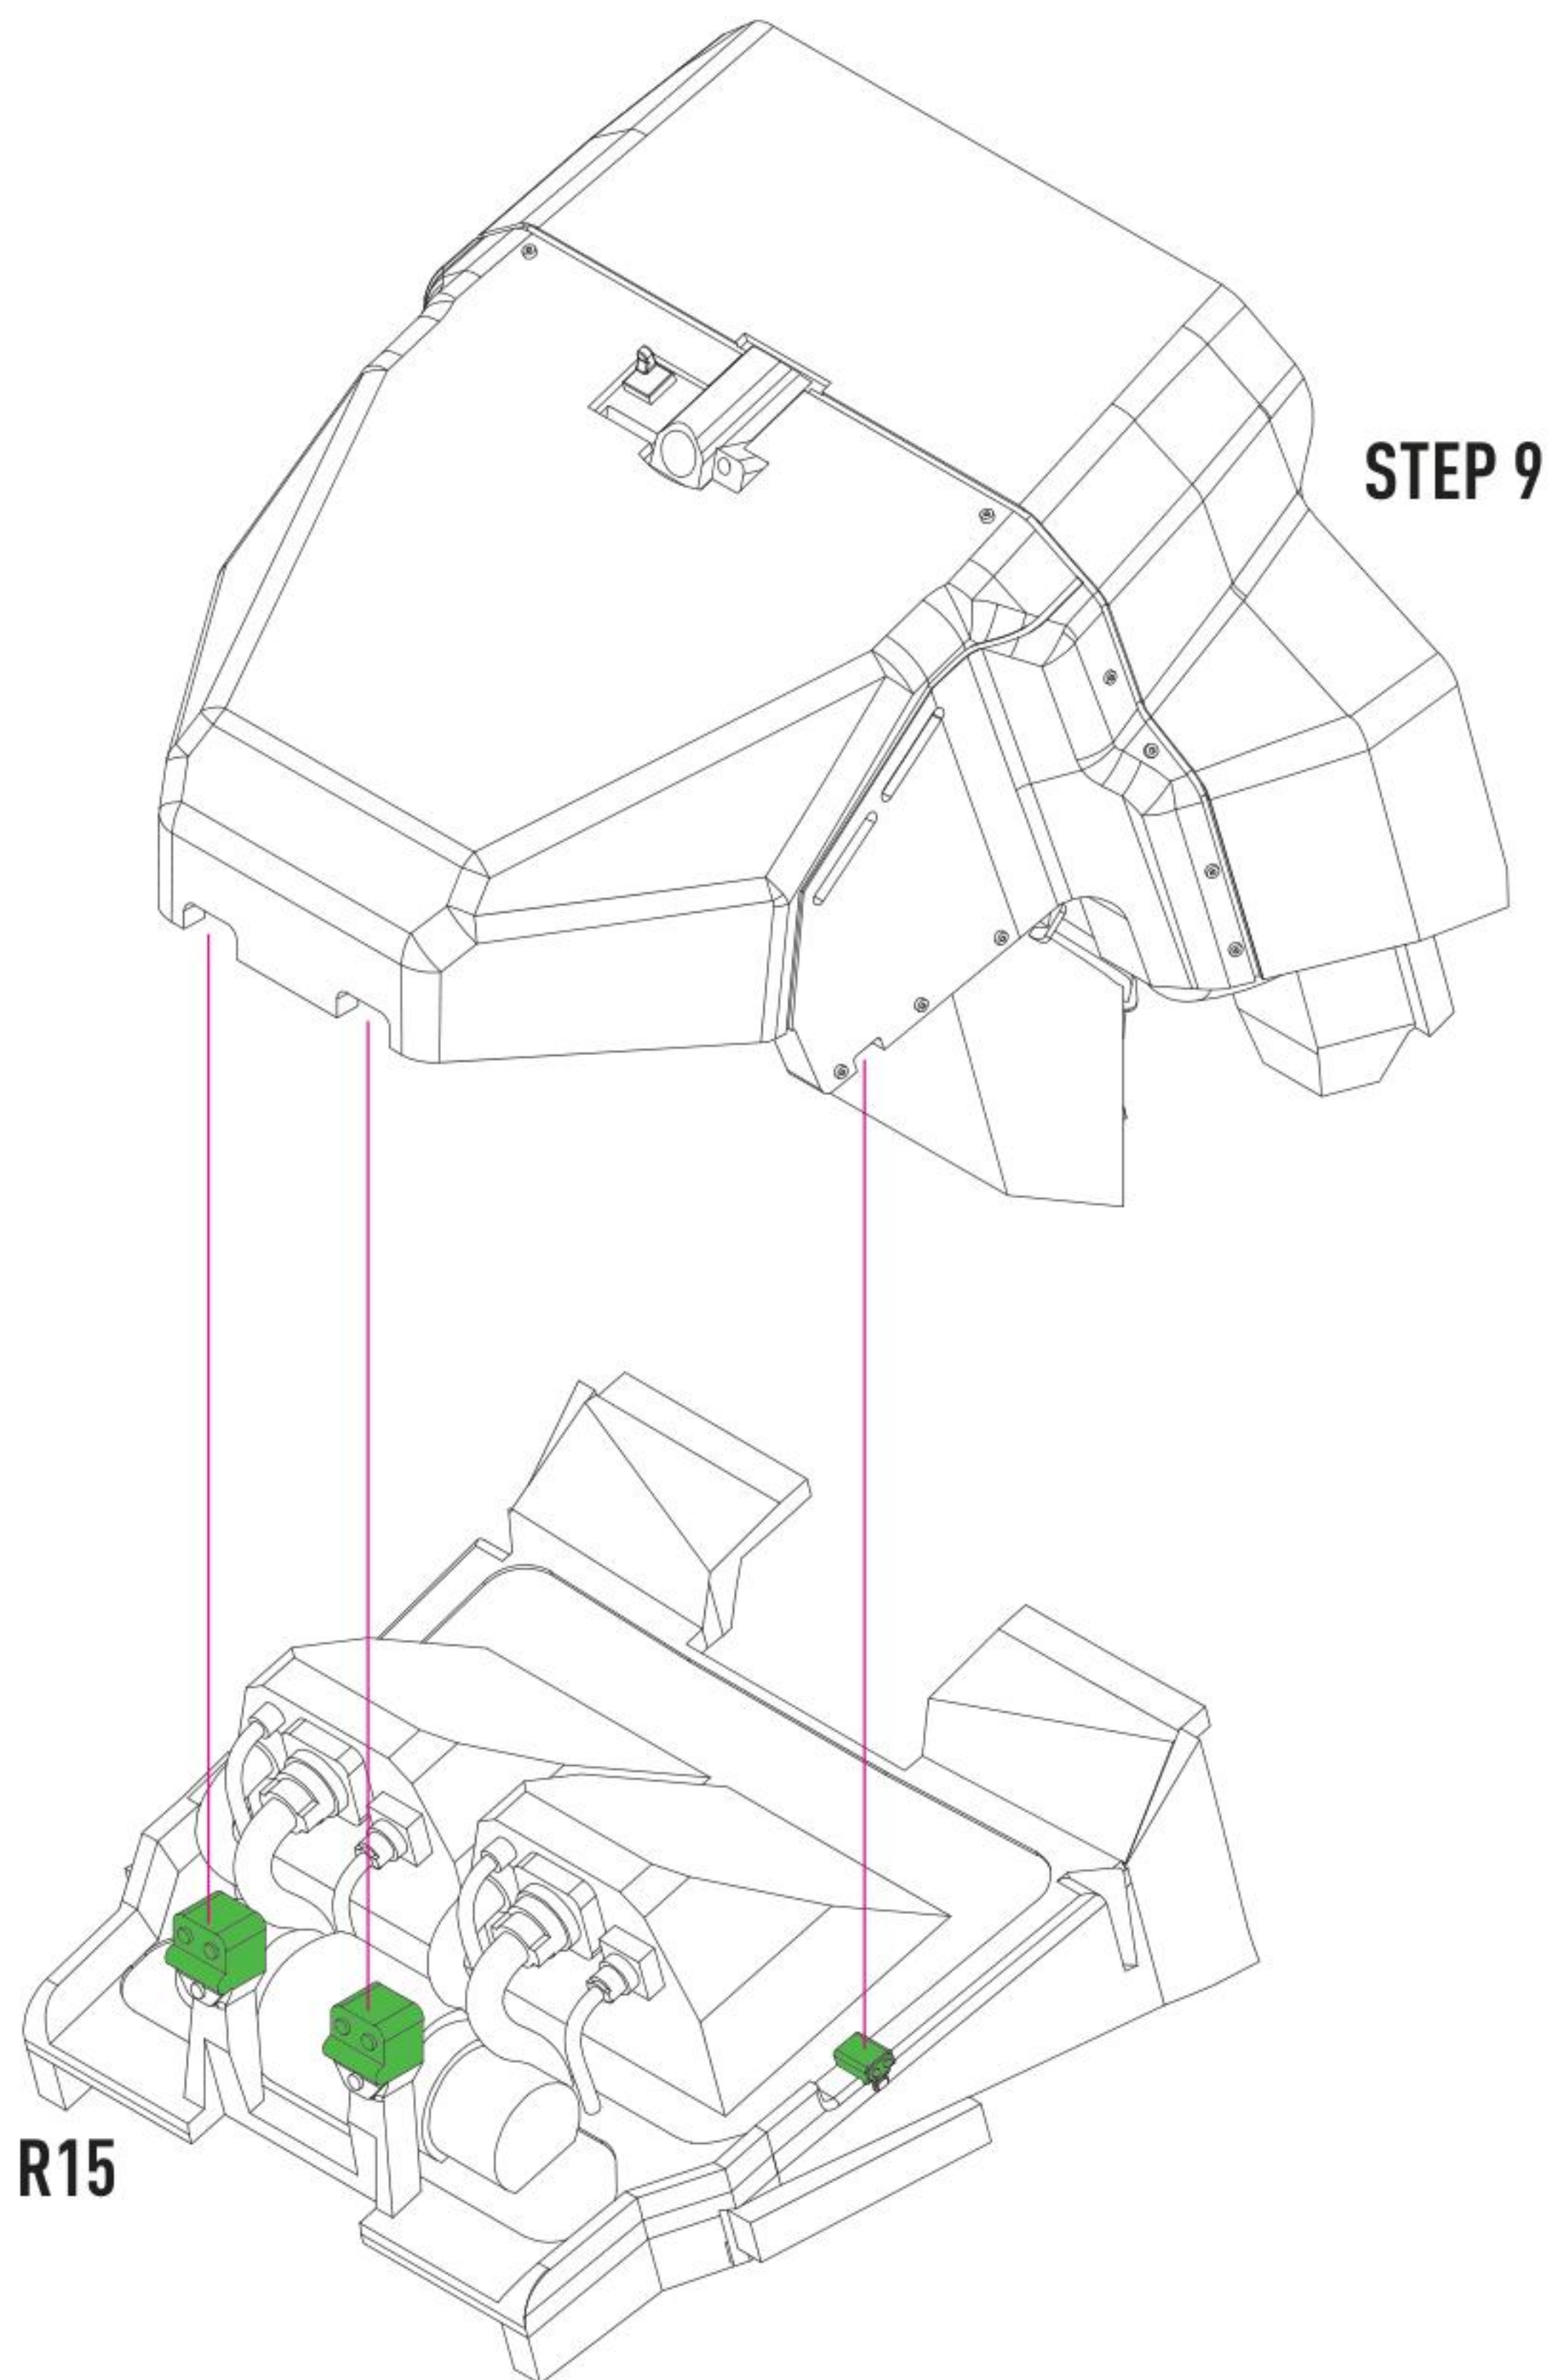

11

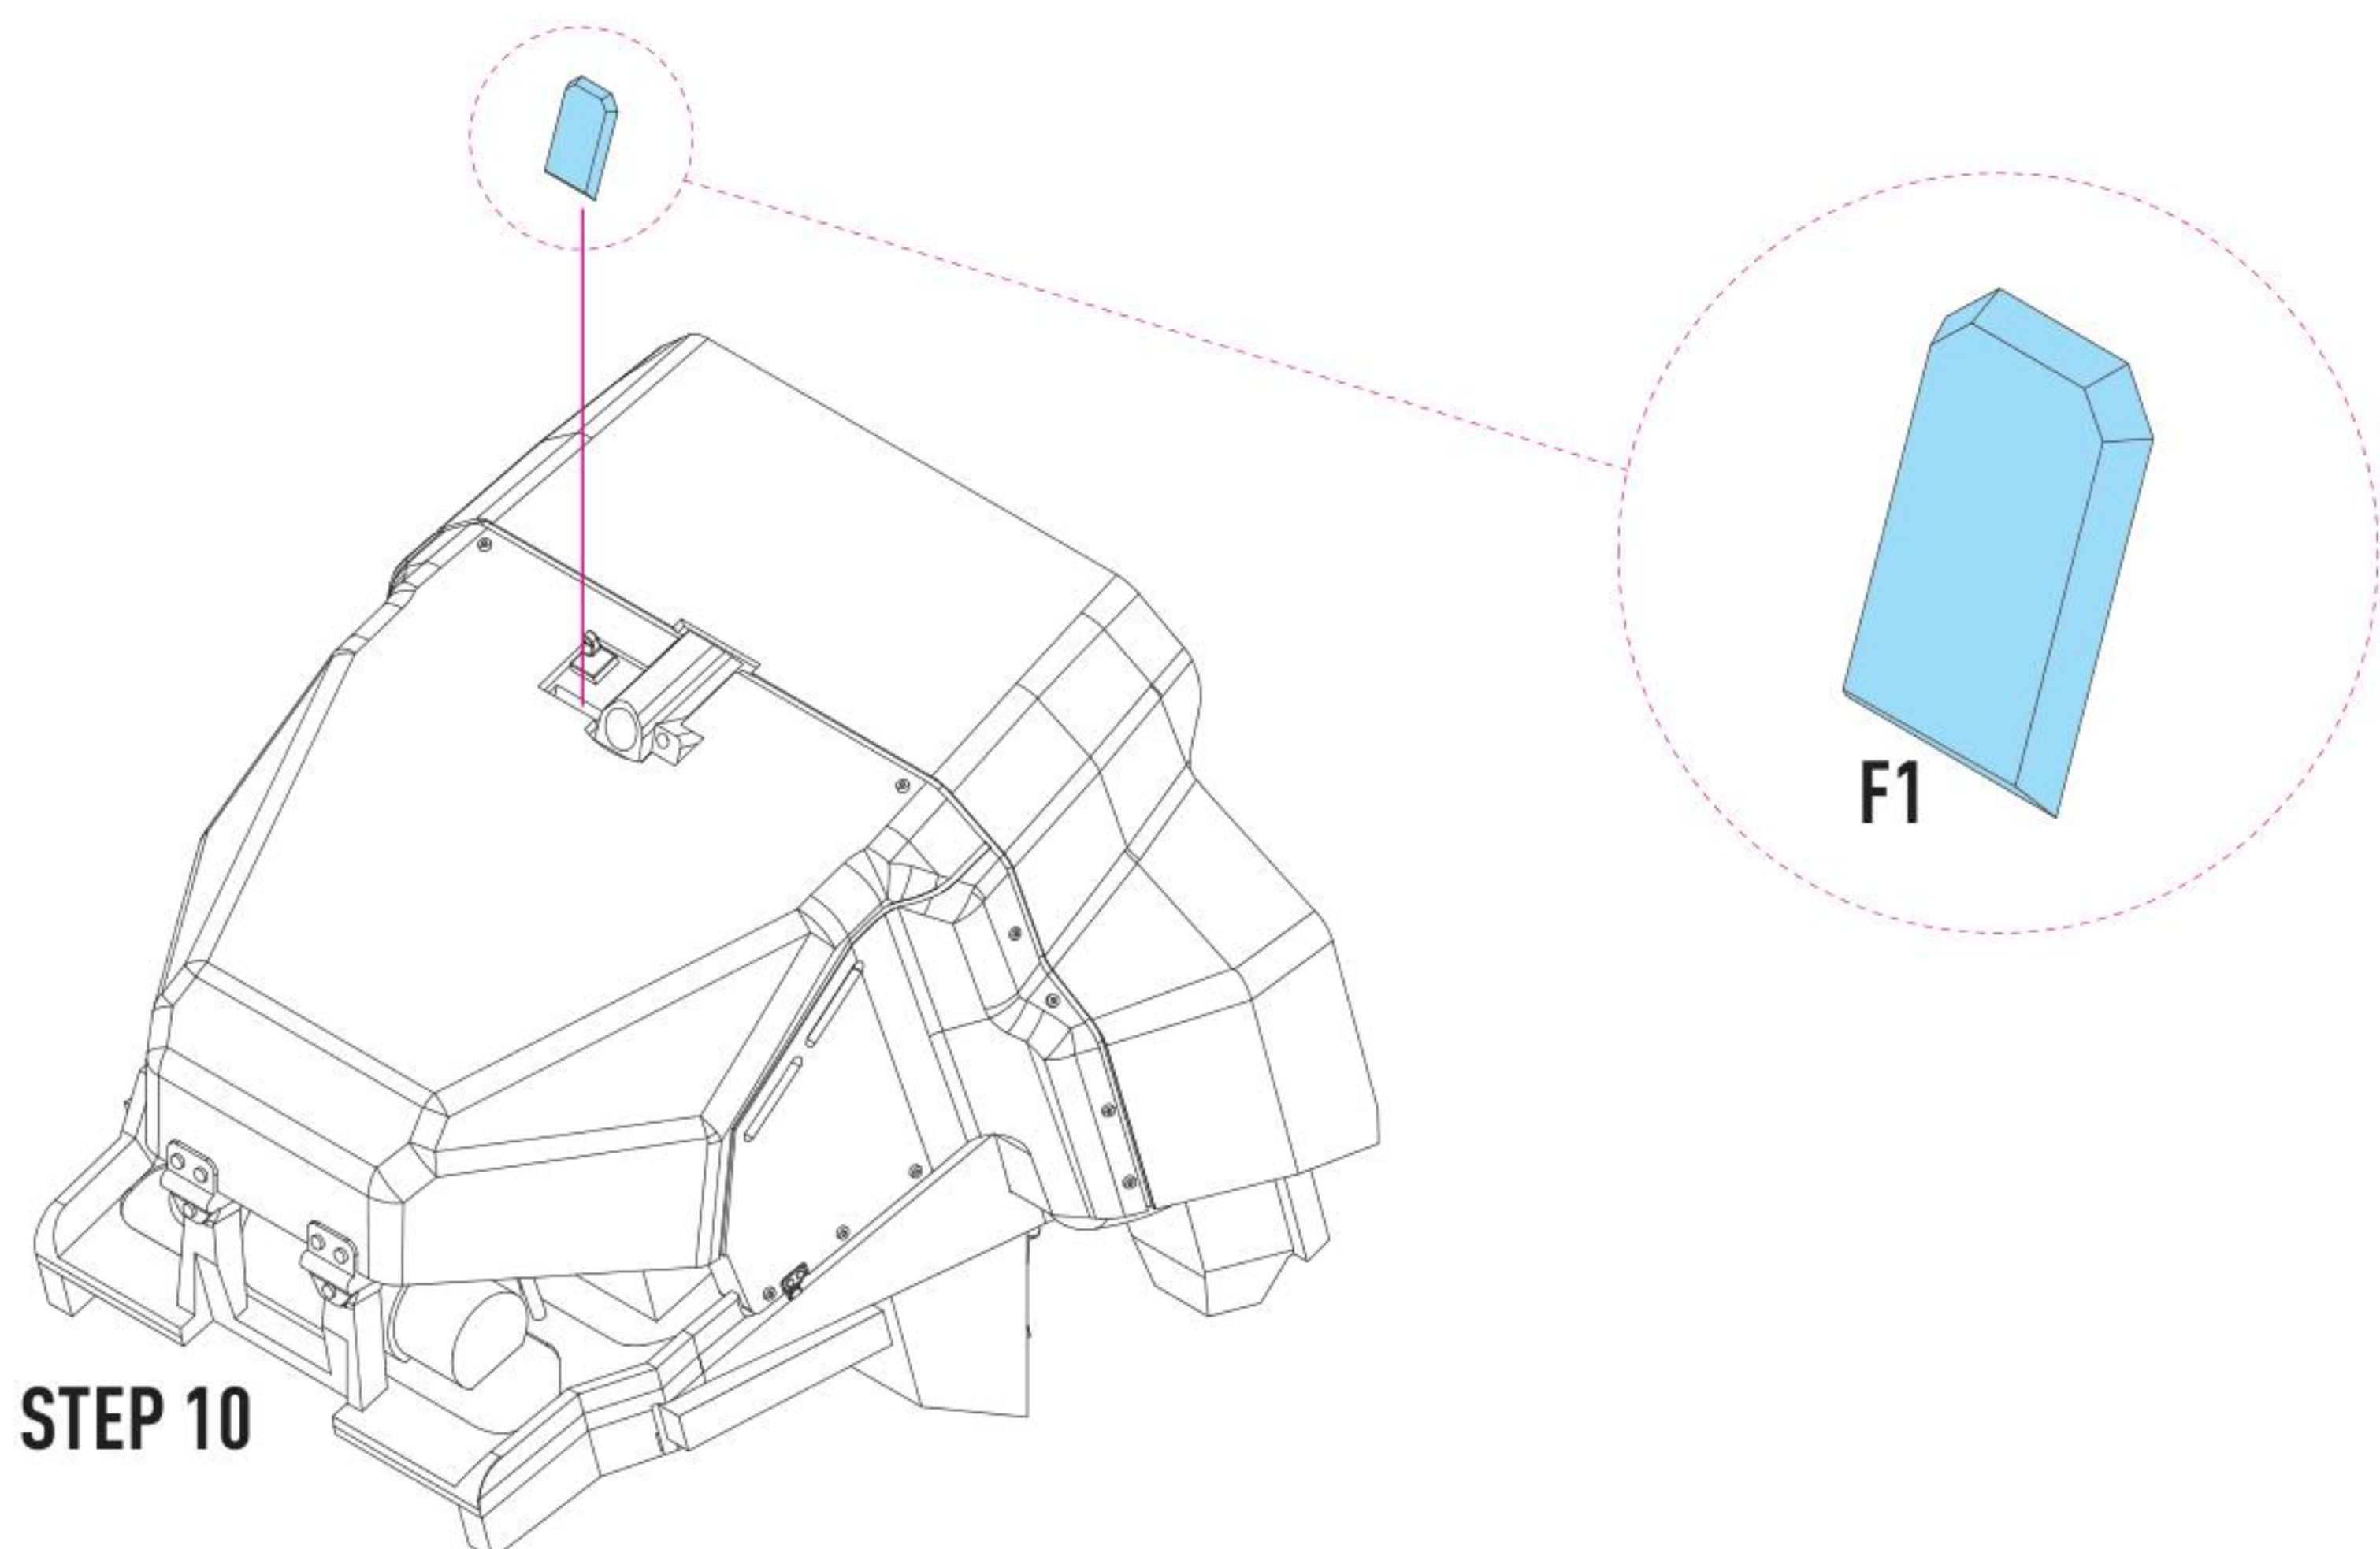

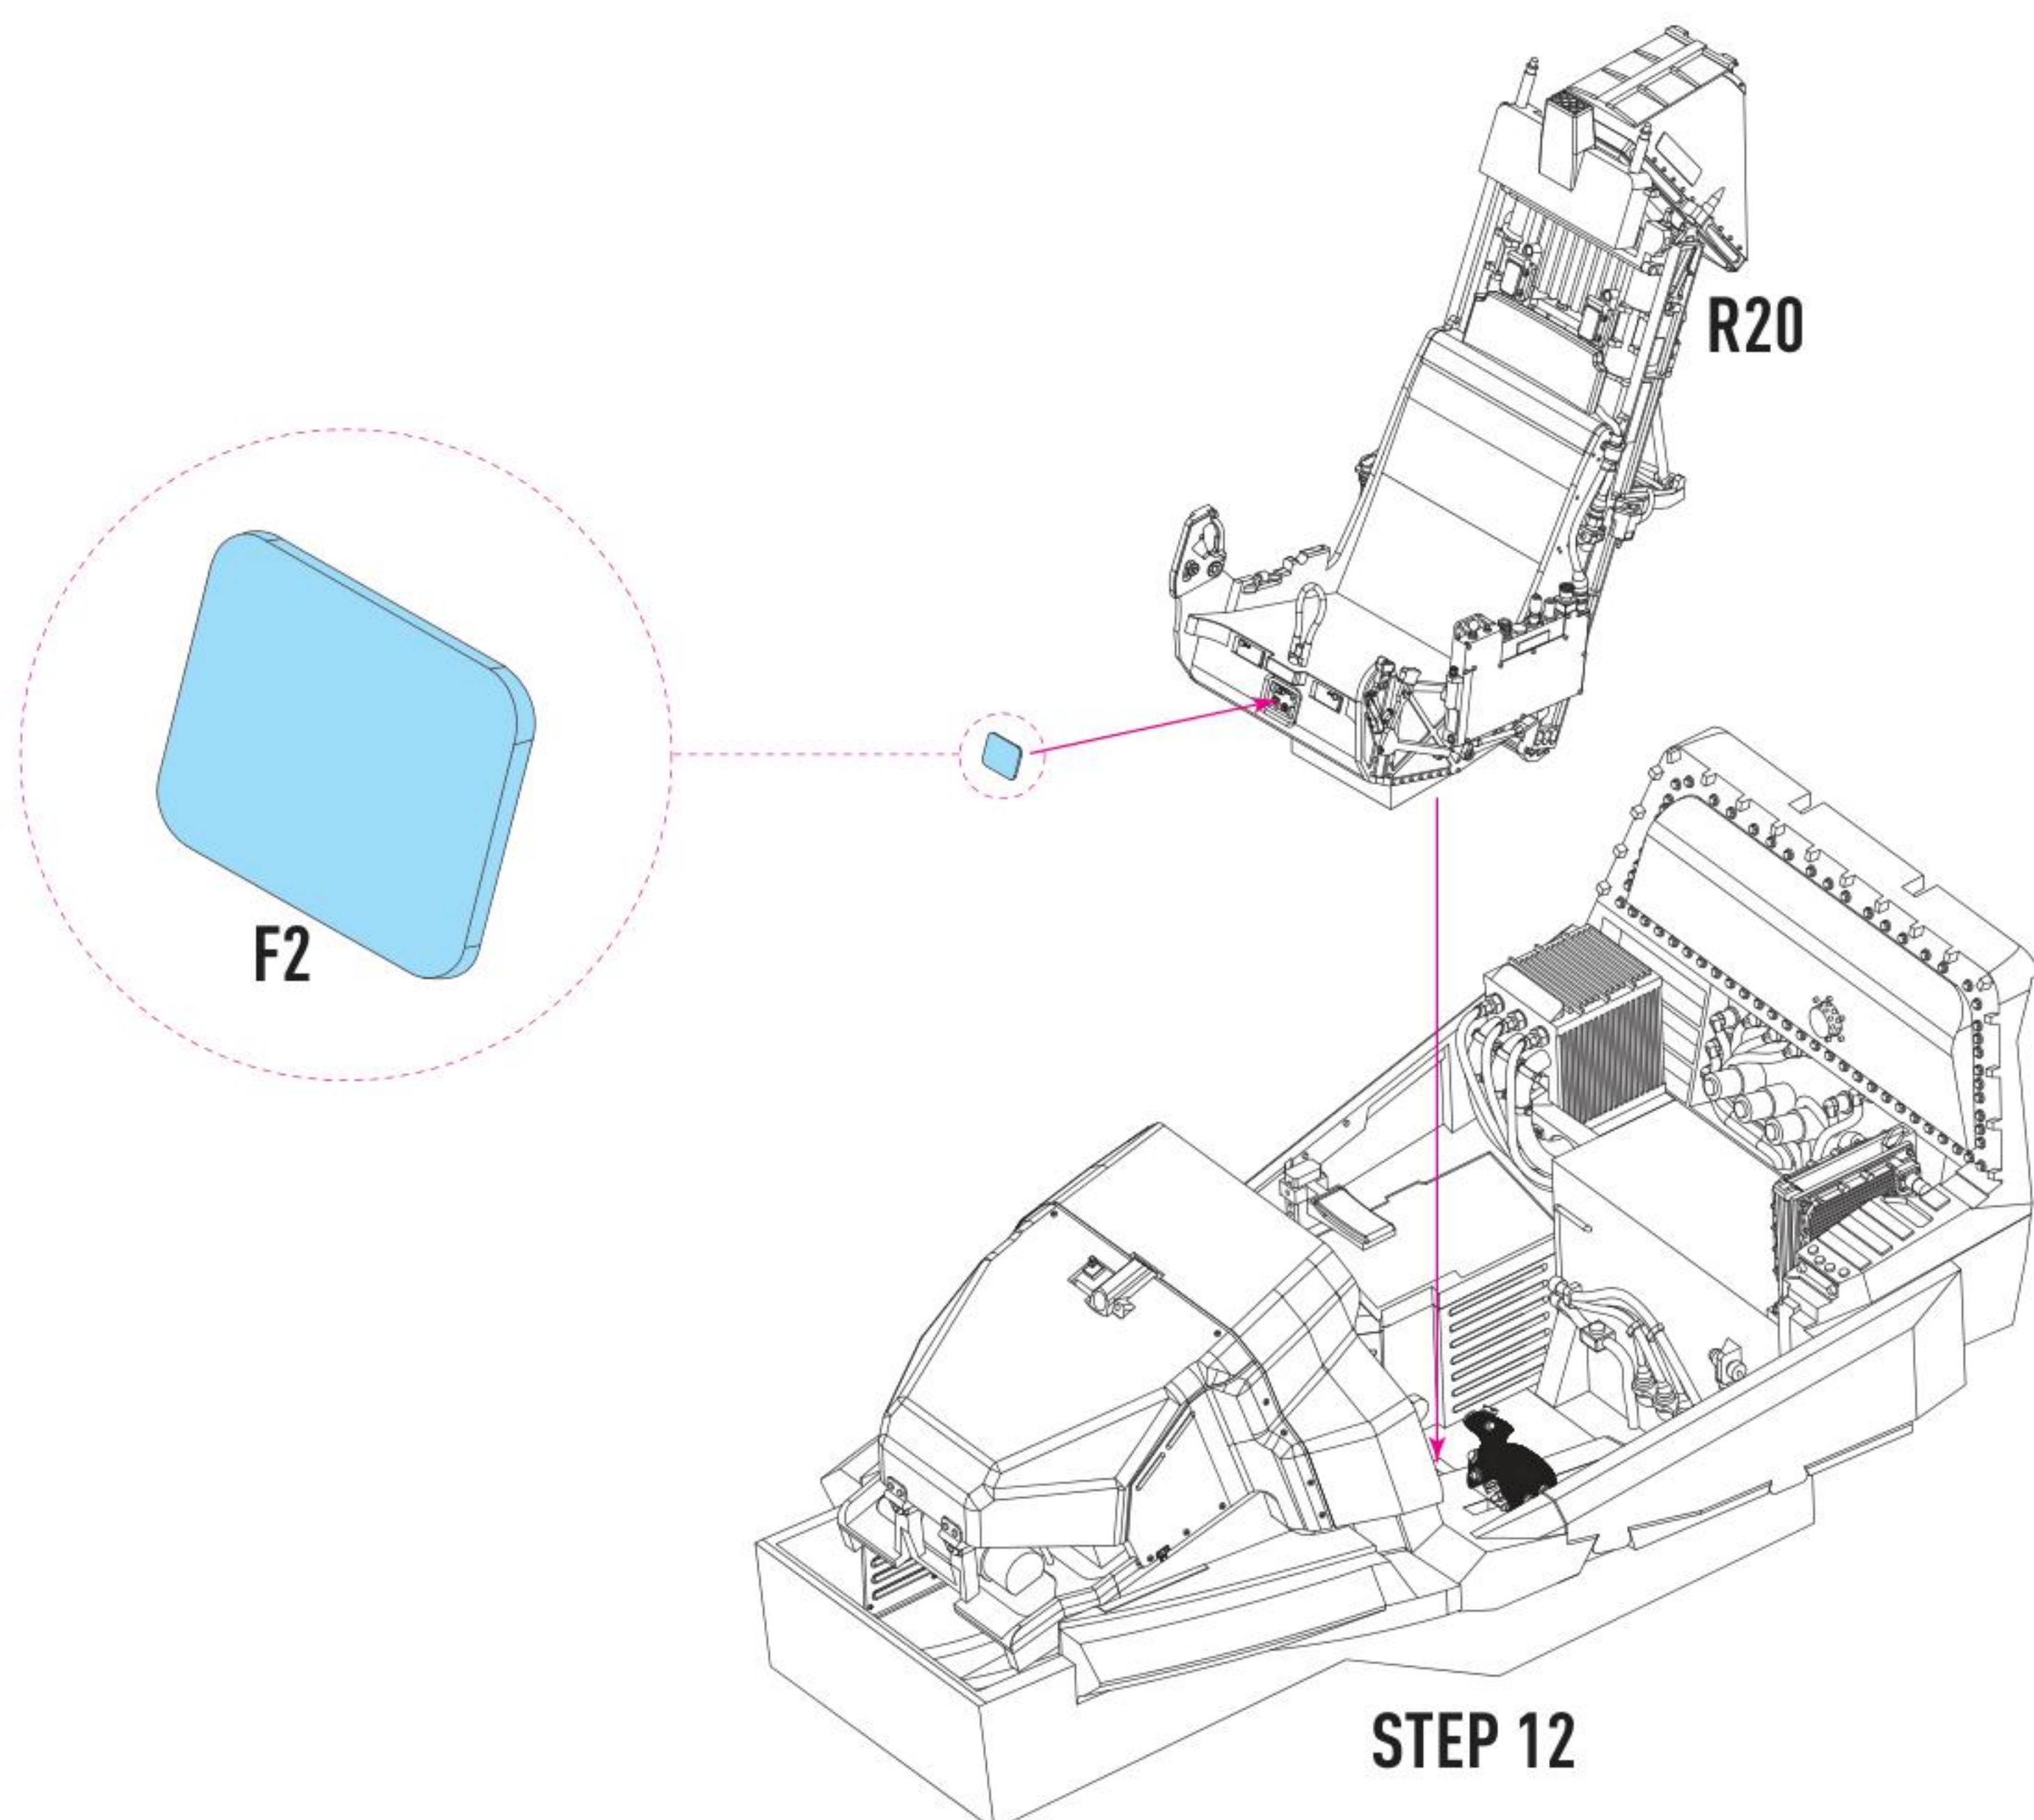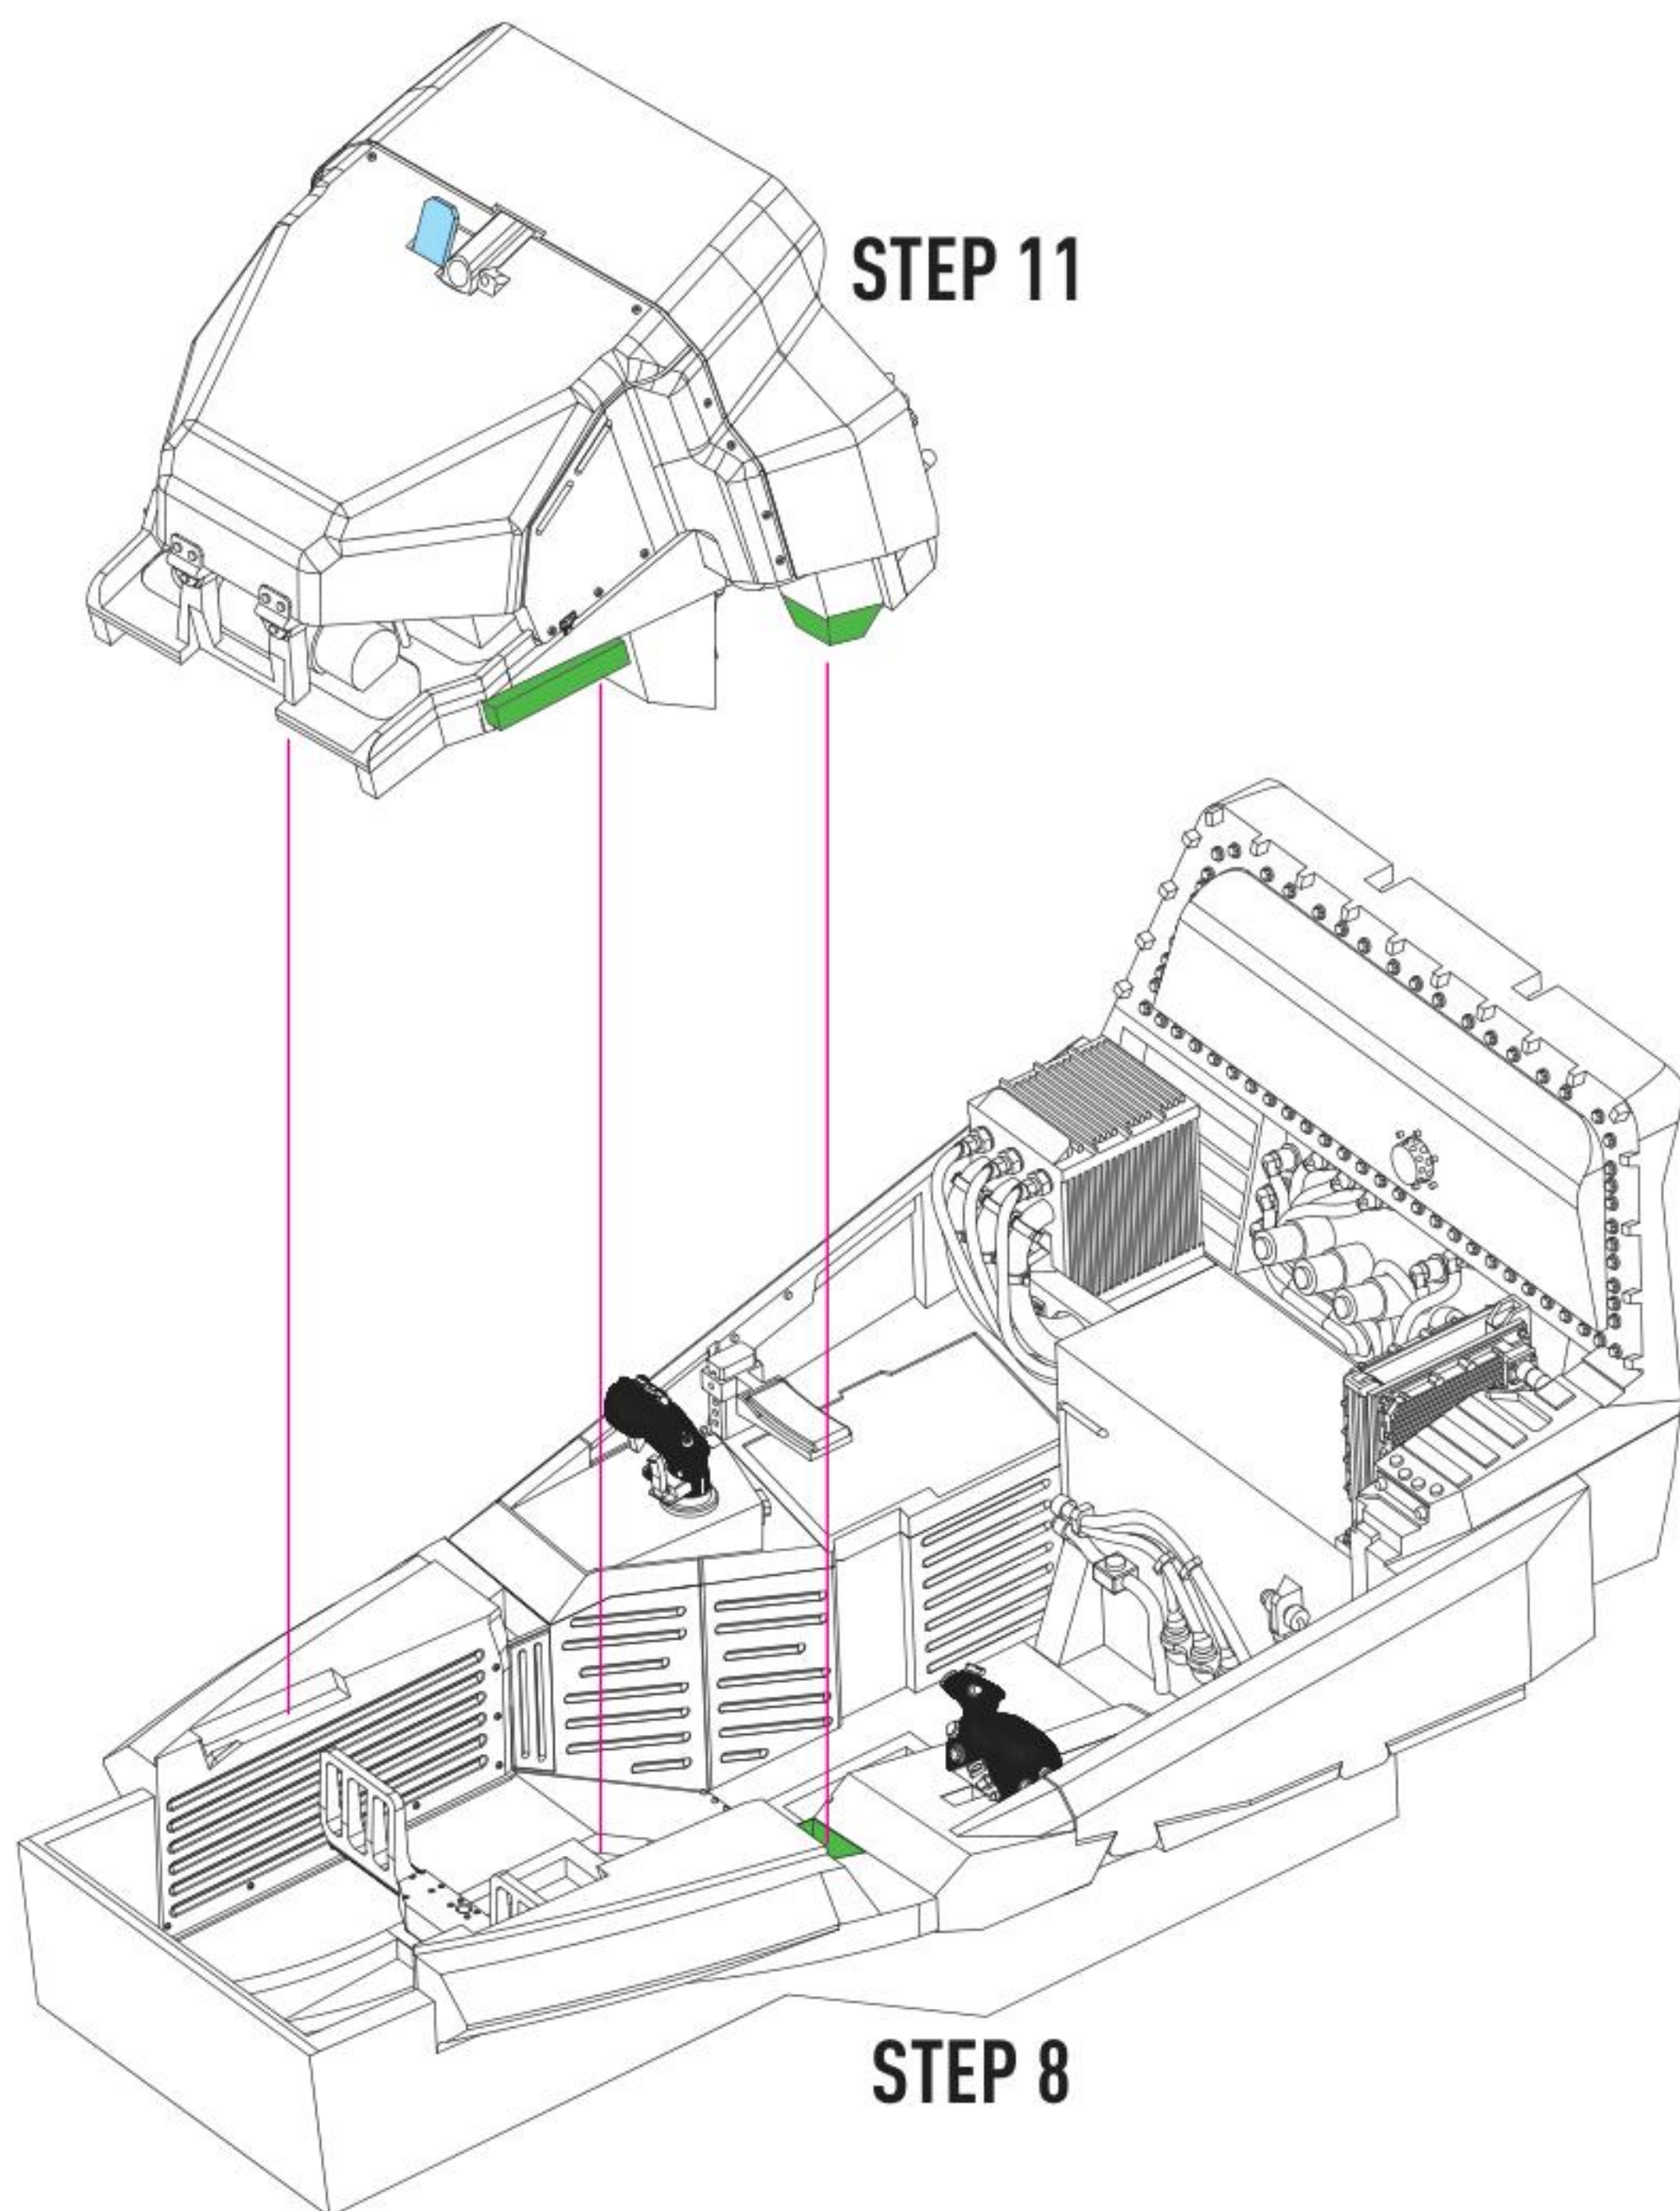

DECAL INSTRUCTION

