





USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL  
FROM SUPPORTS**

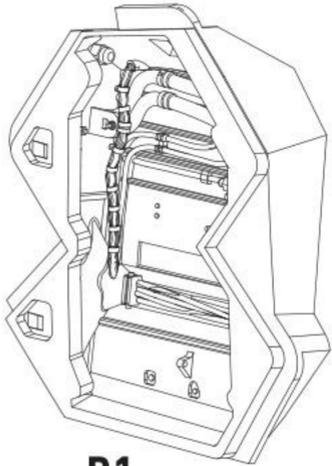

**R1**

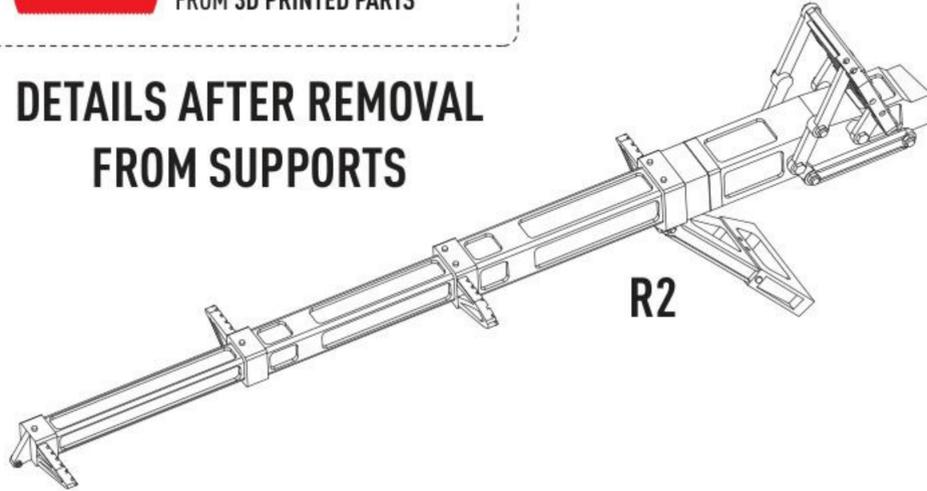


**R2**

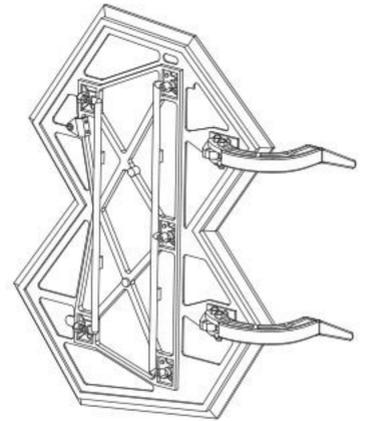

**R3**


**1**

**MAKE HOLE**

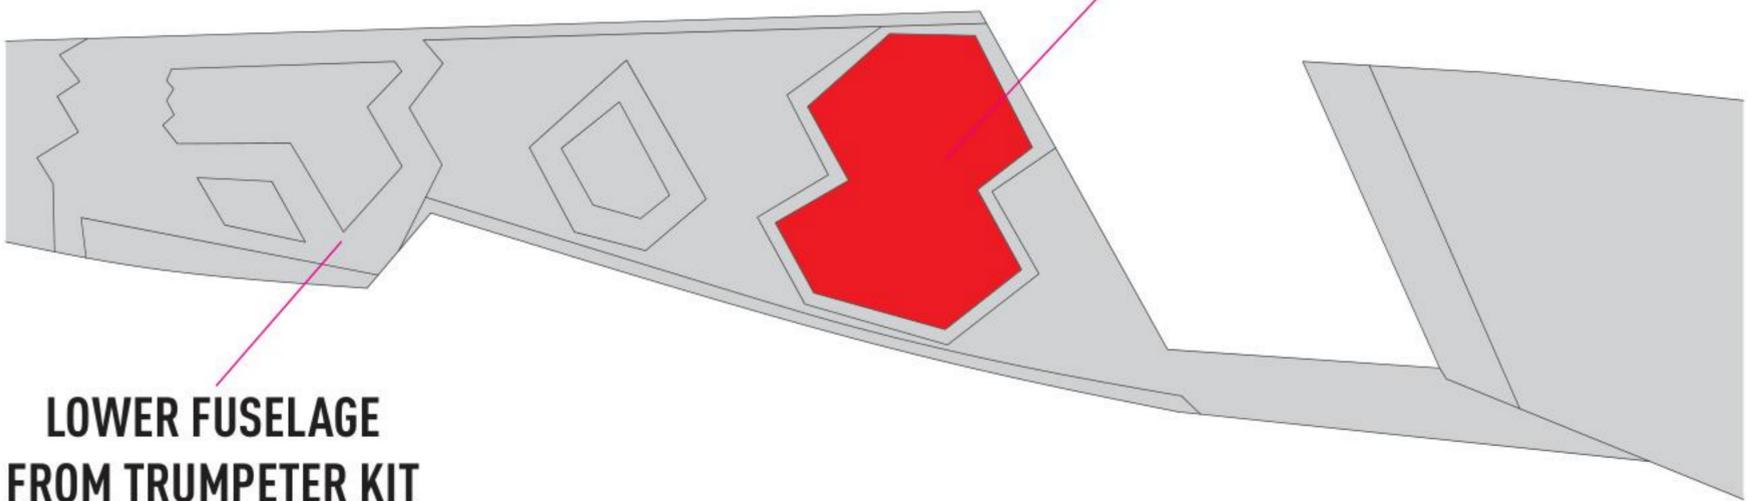

**LOWER FUSELAGE  
FROM TRUMPETER KIT**

**2**

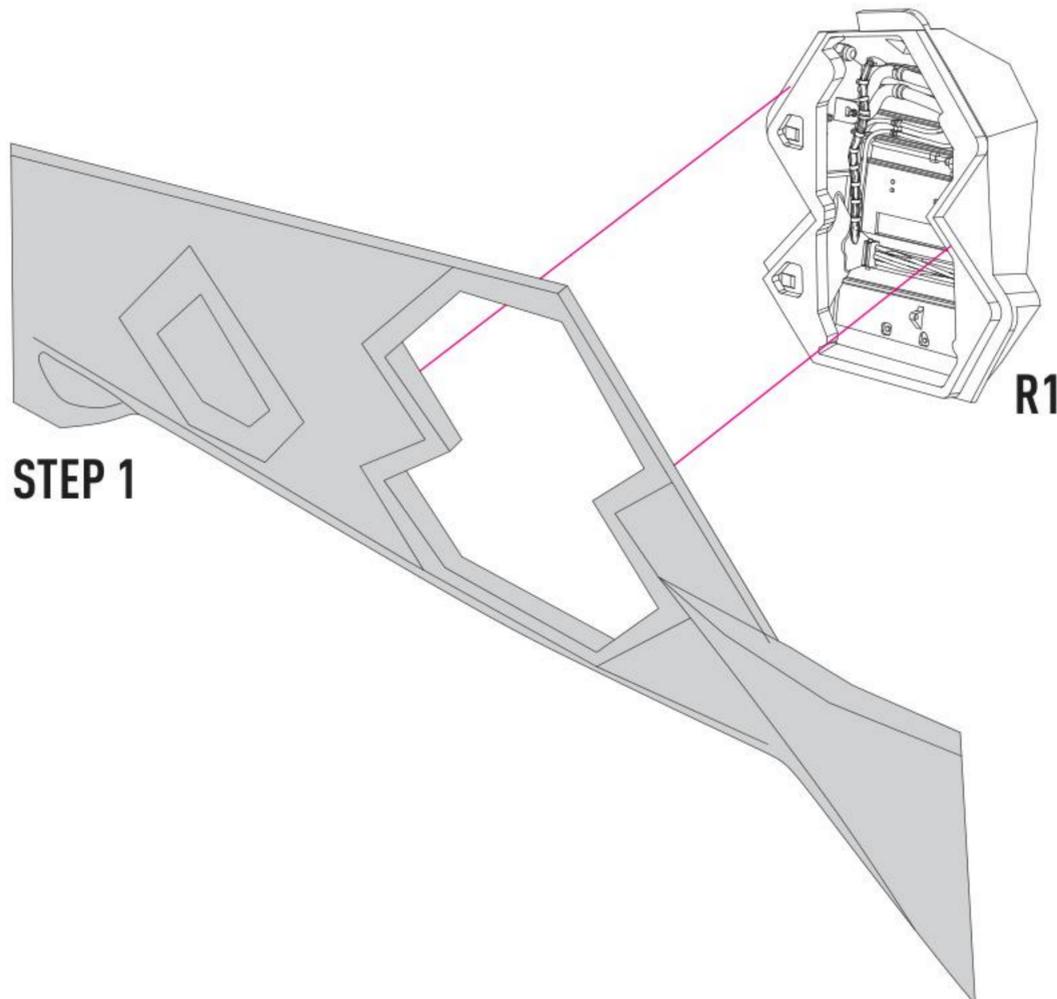

**STEP 1**

**R1**

