


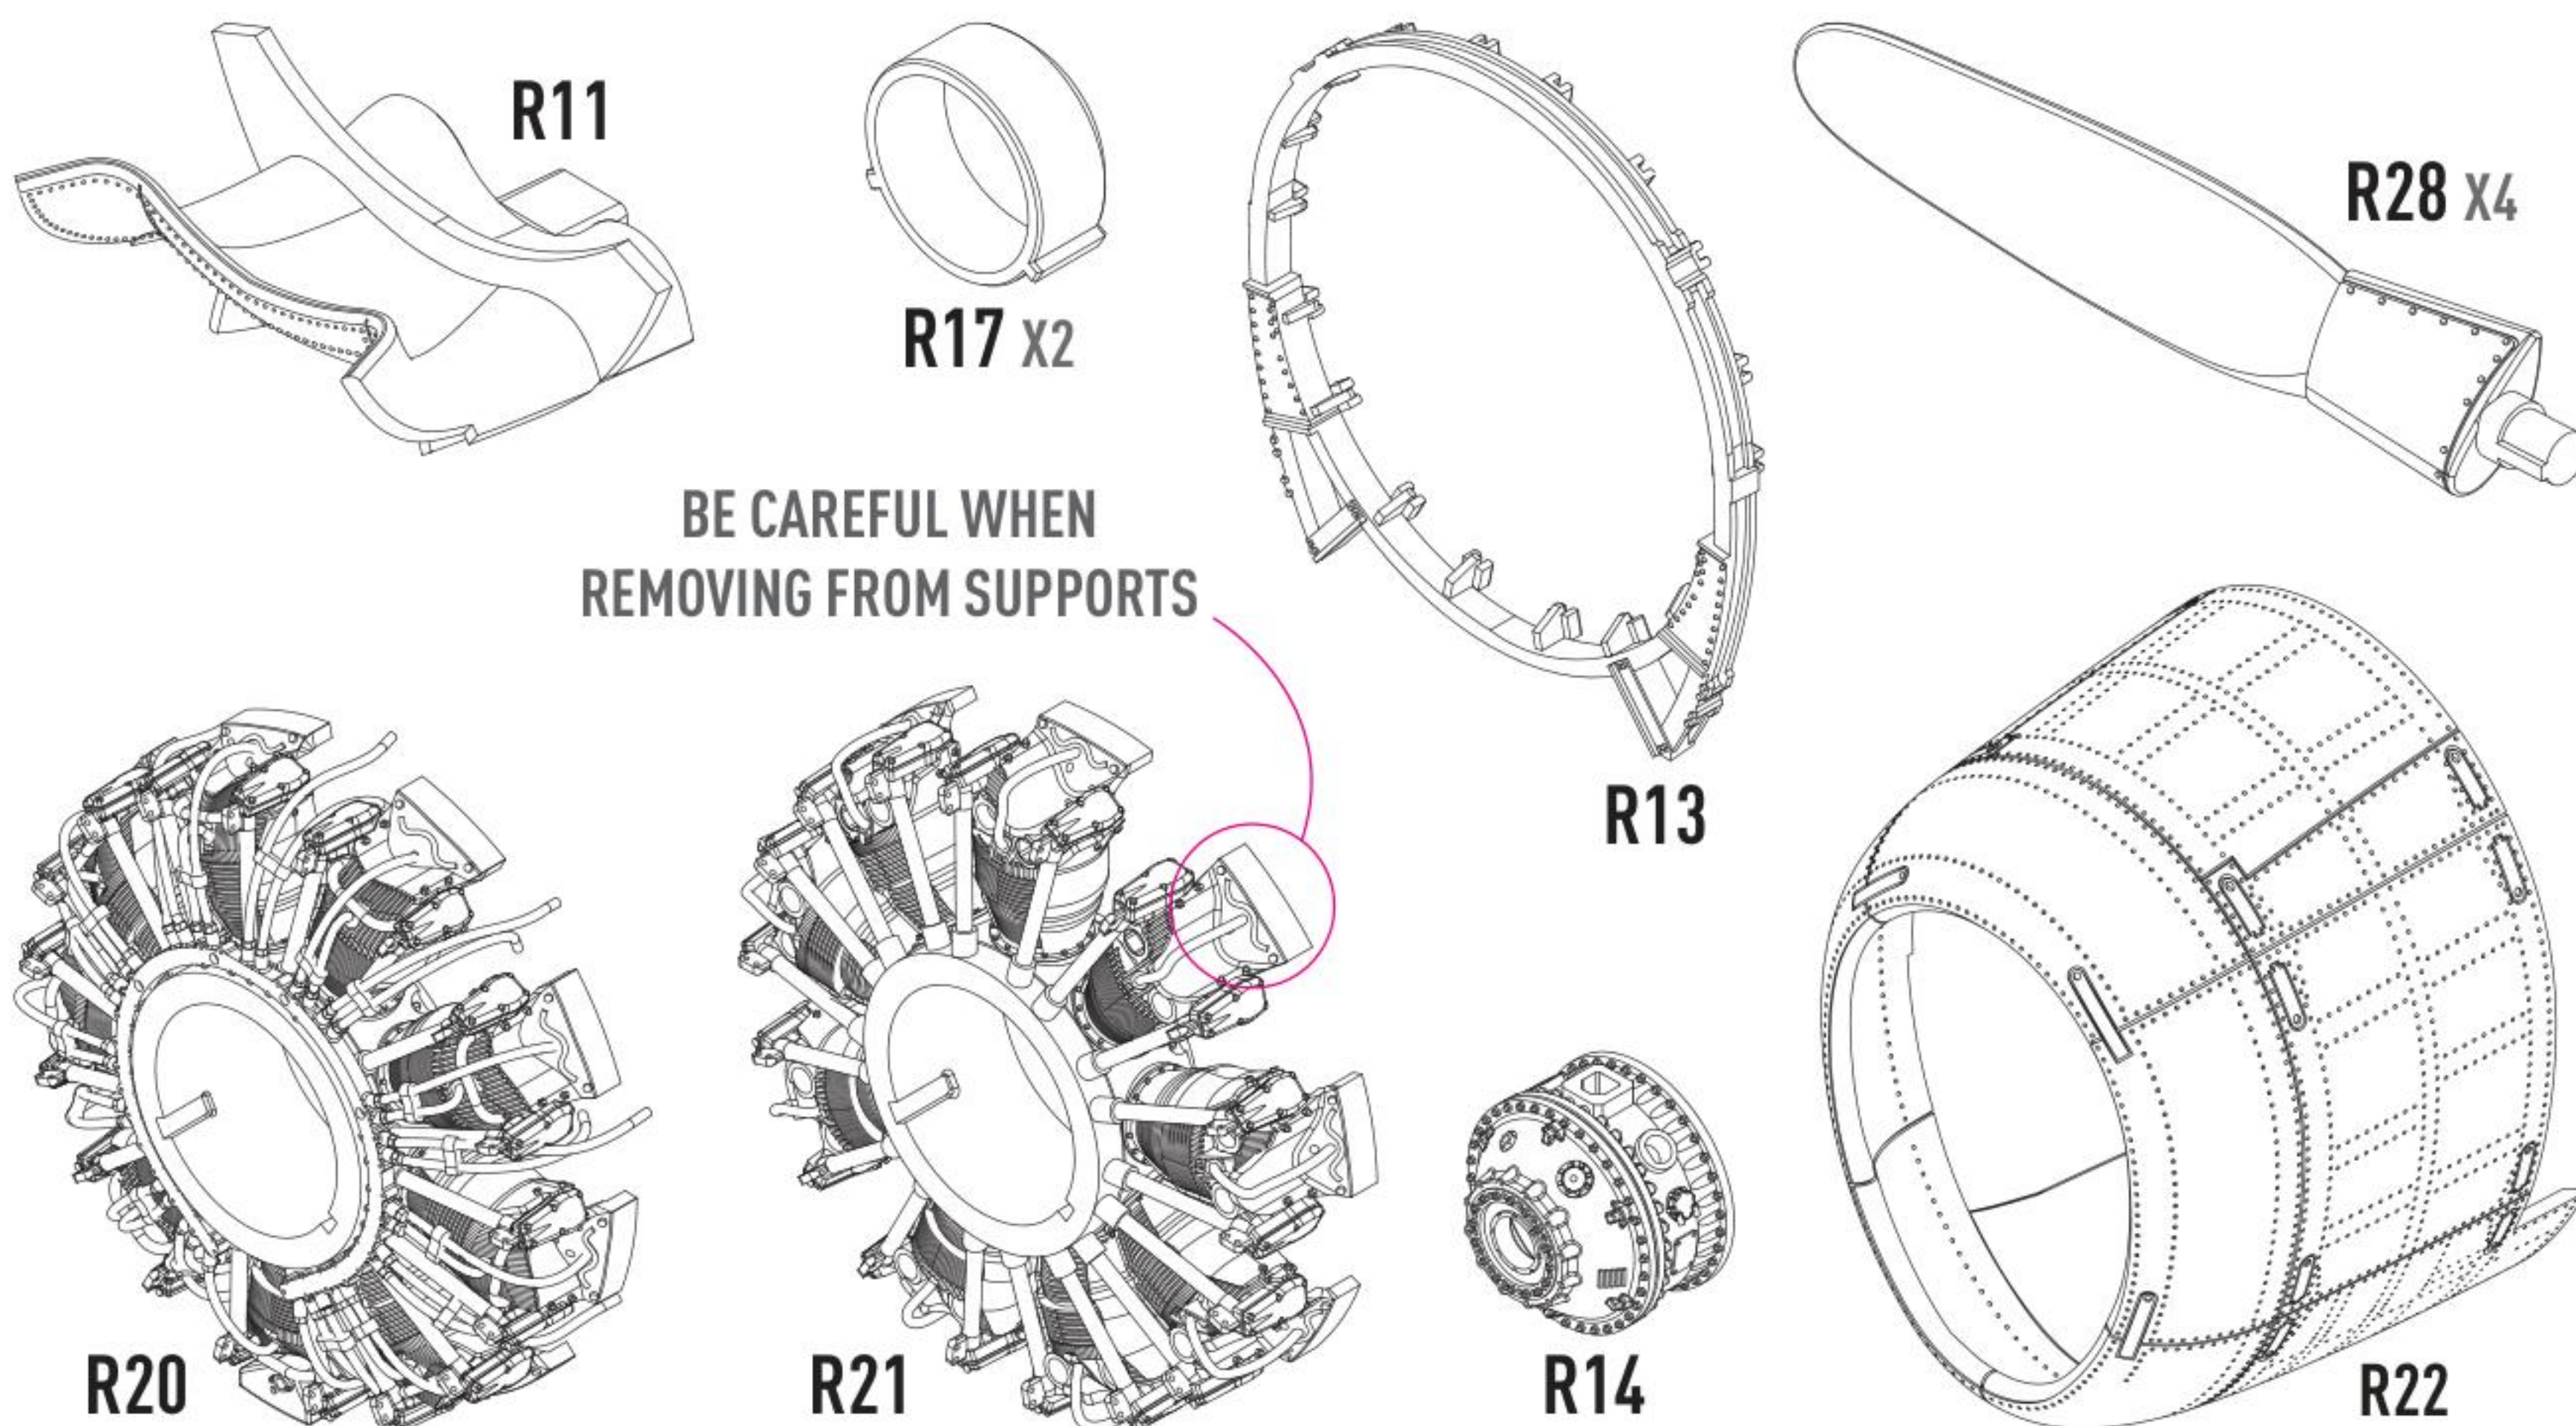
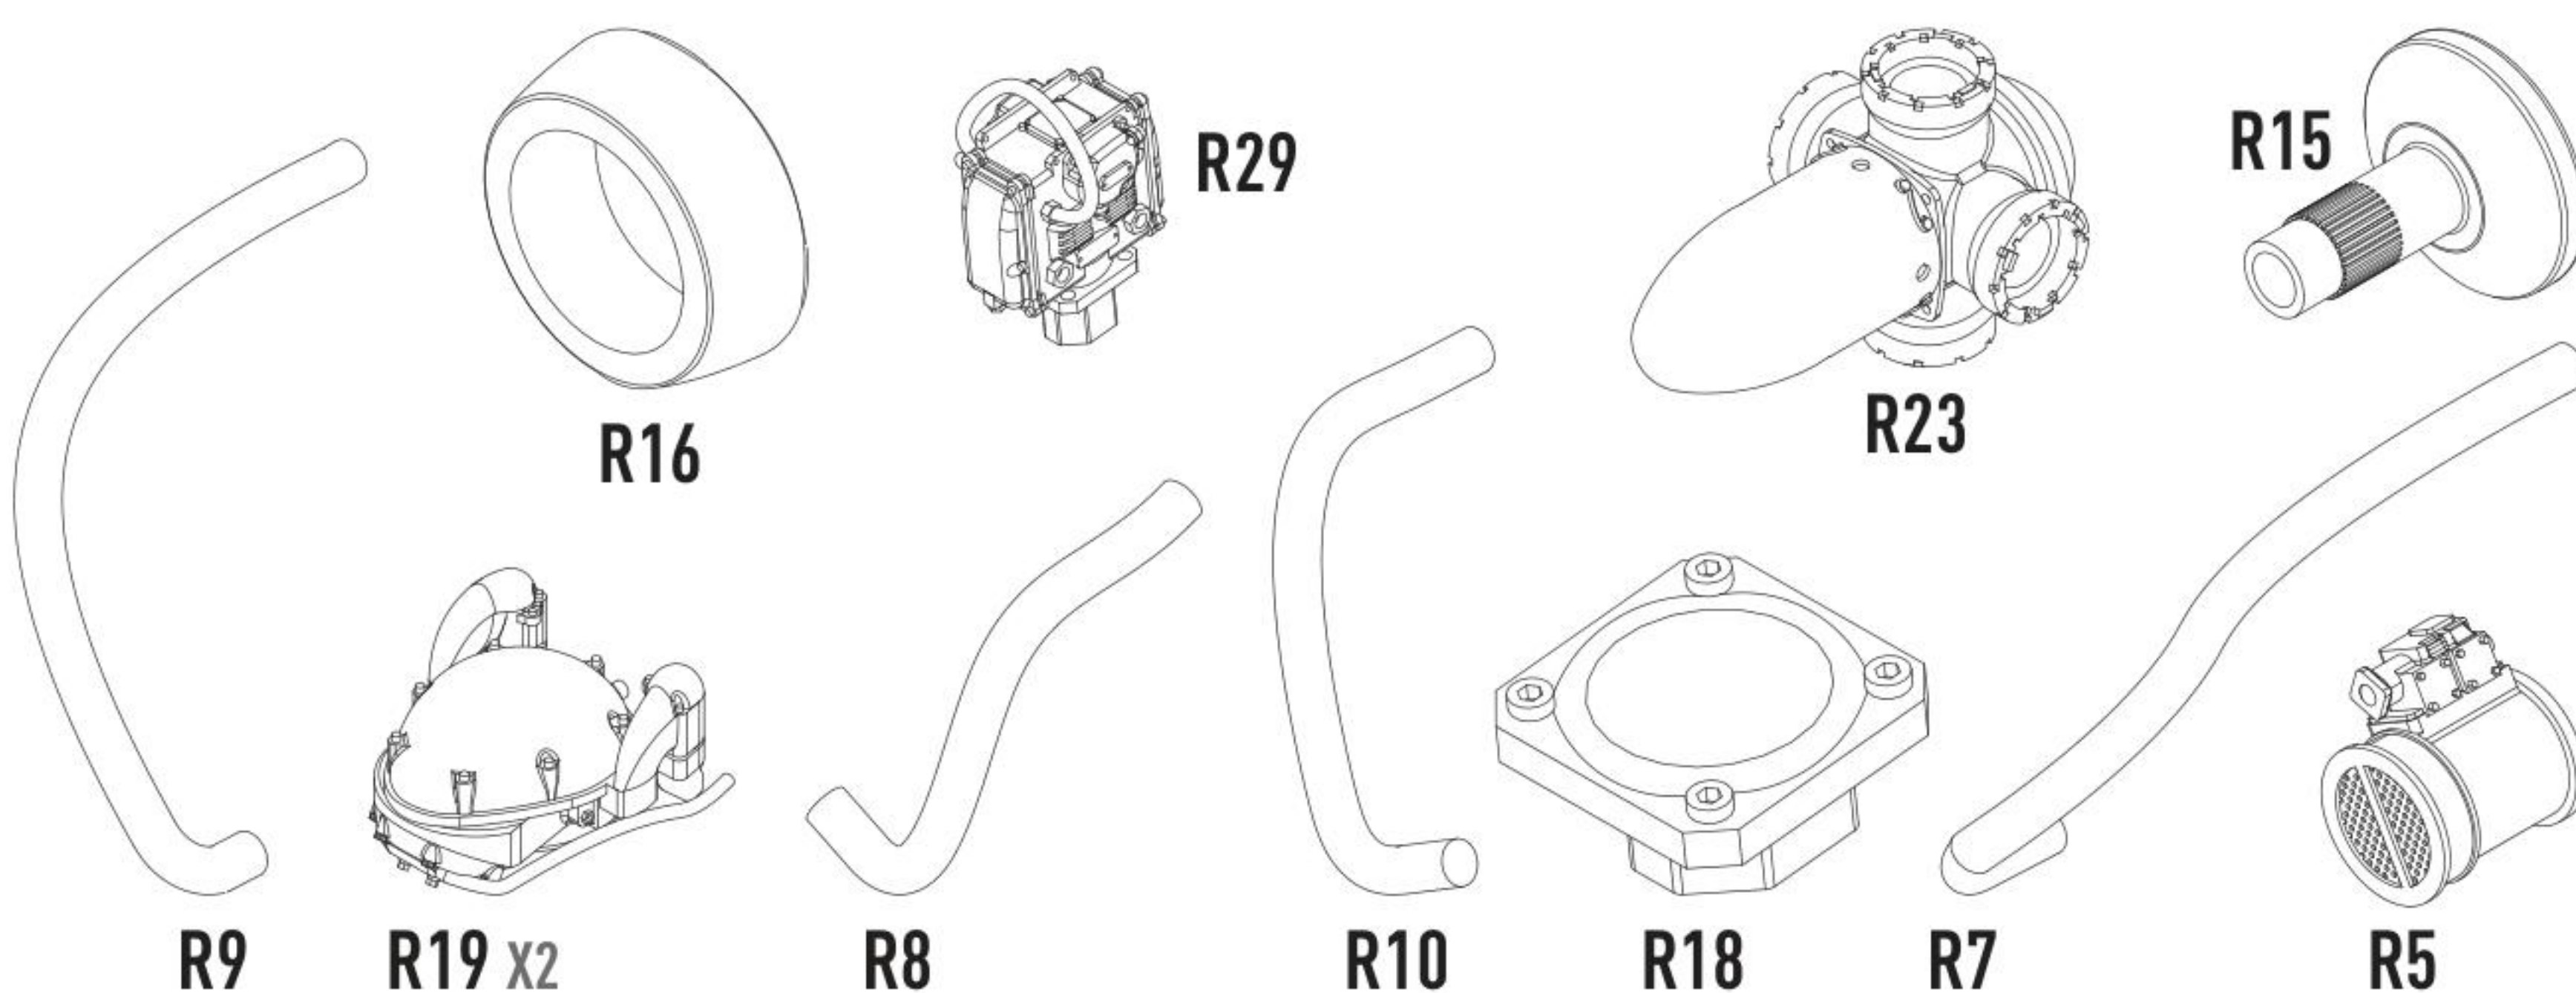


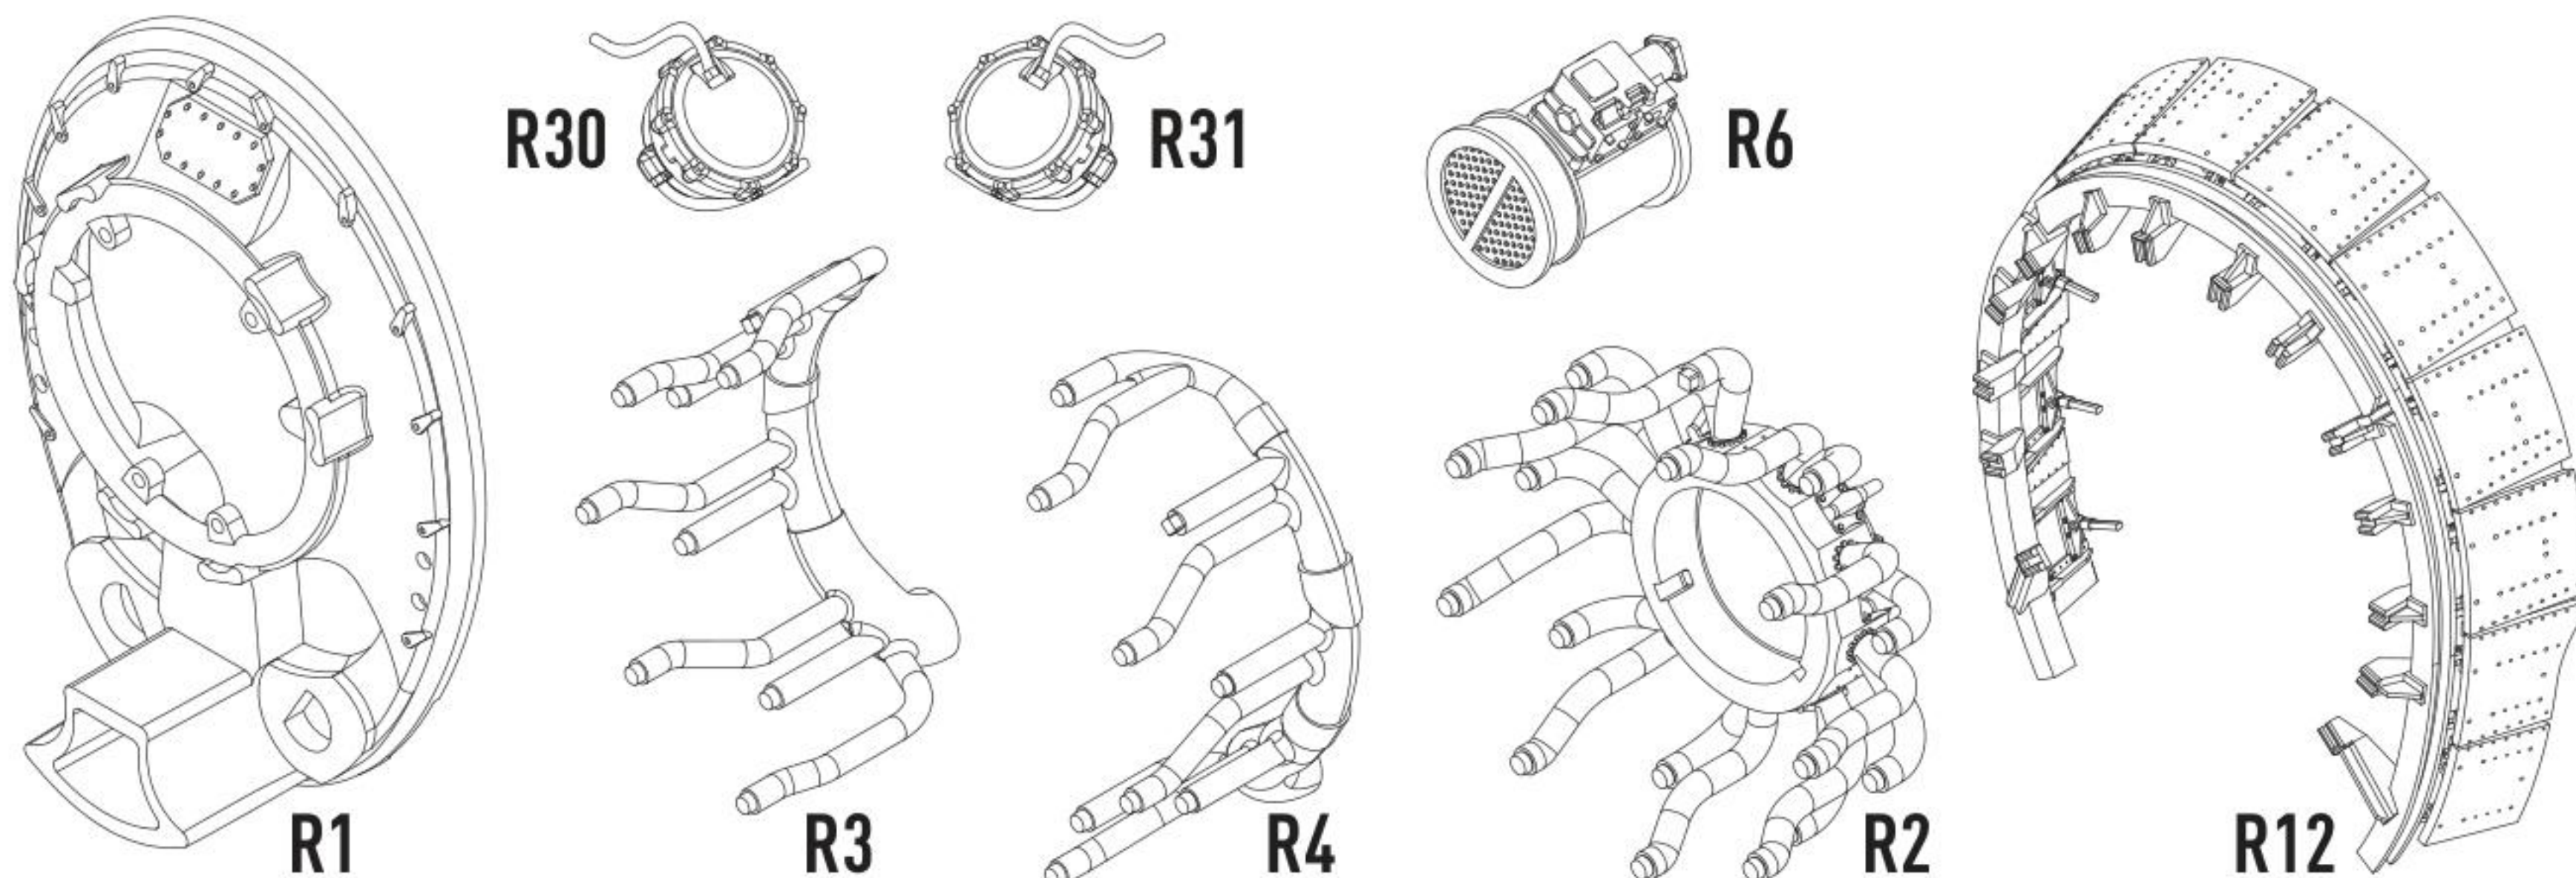


1

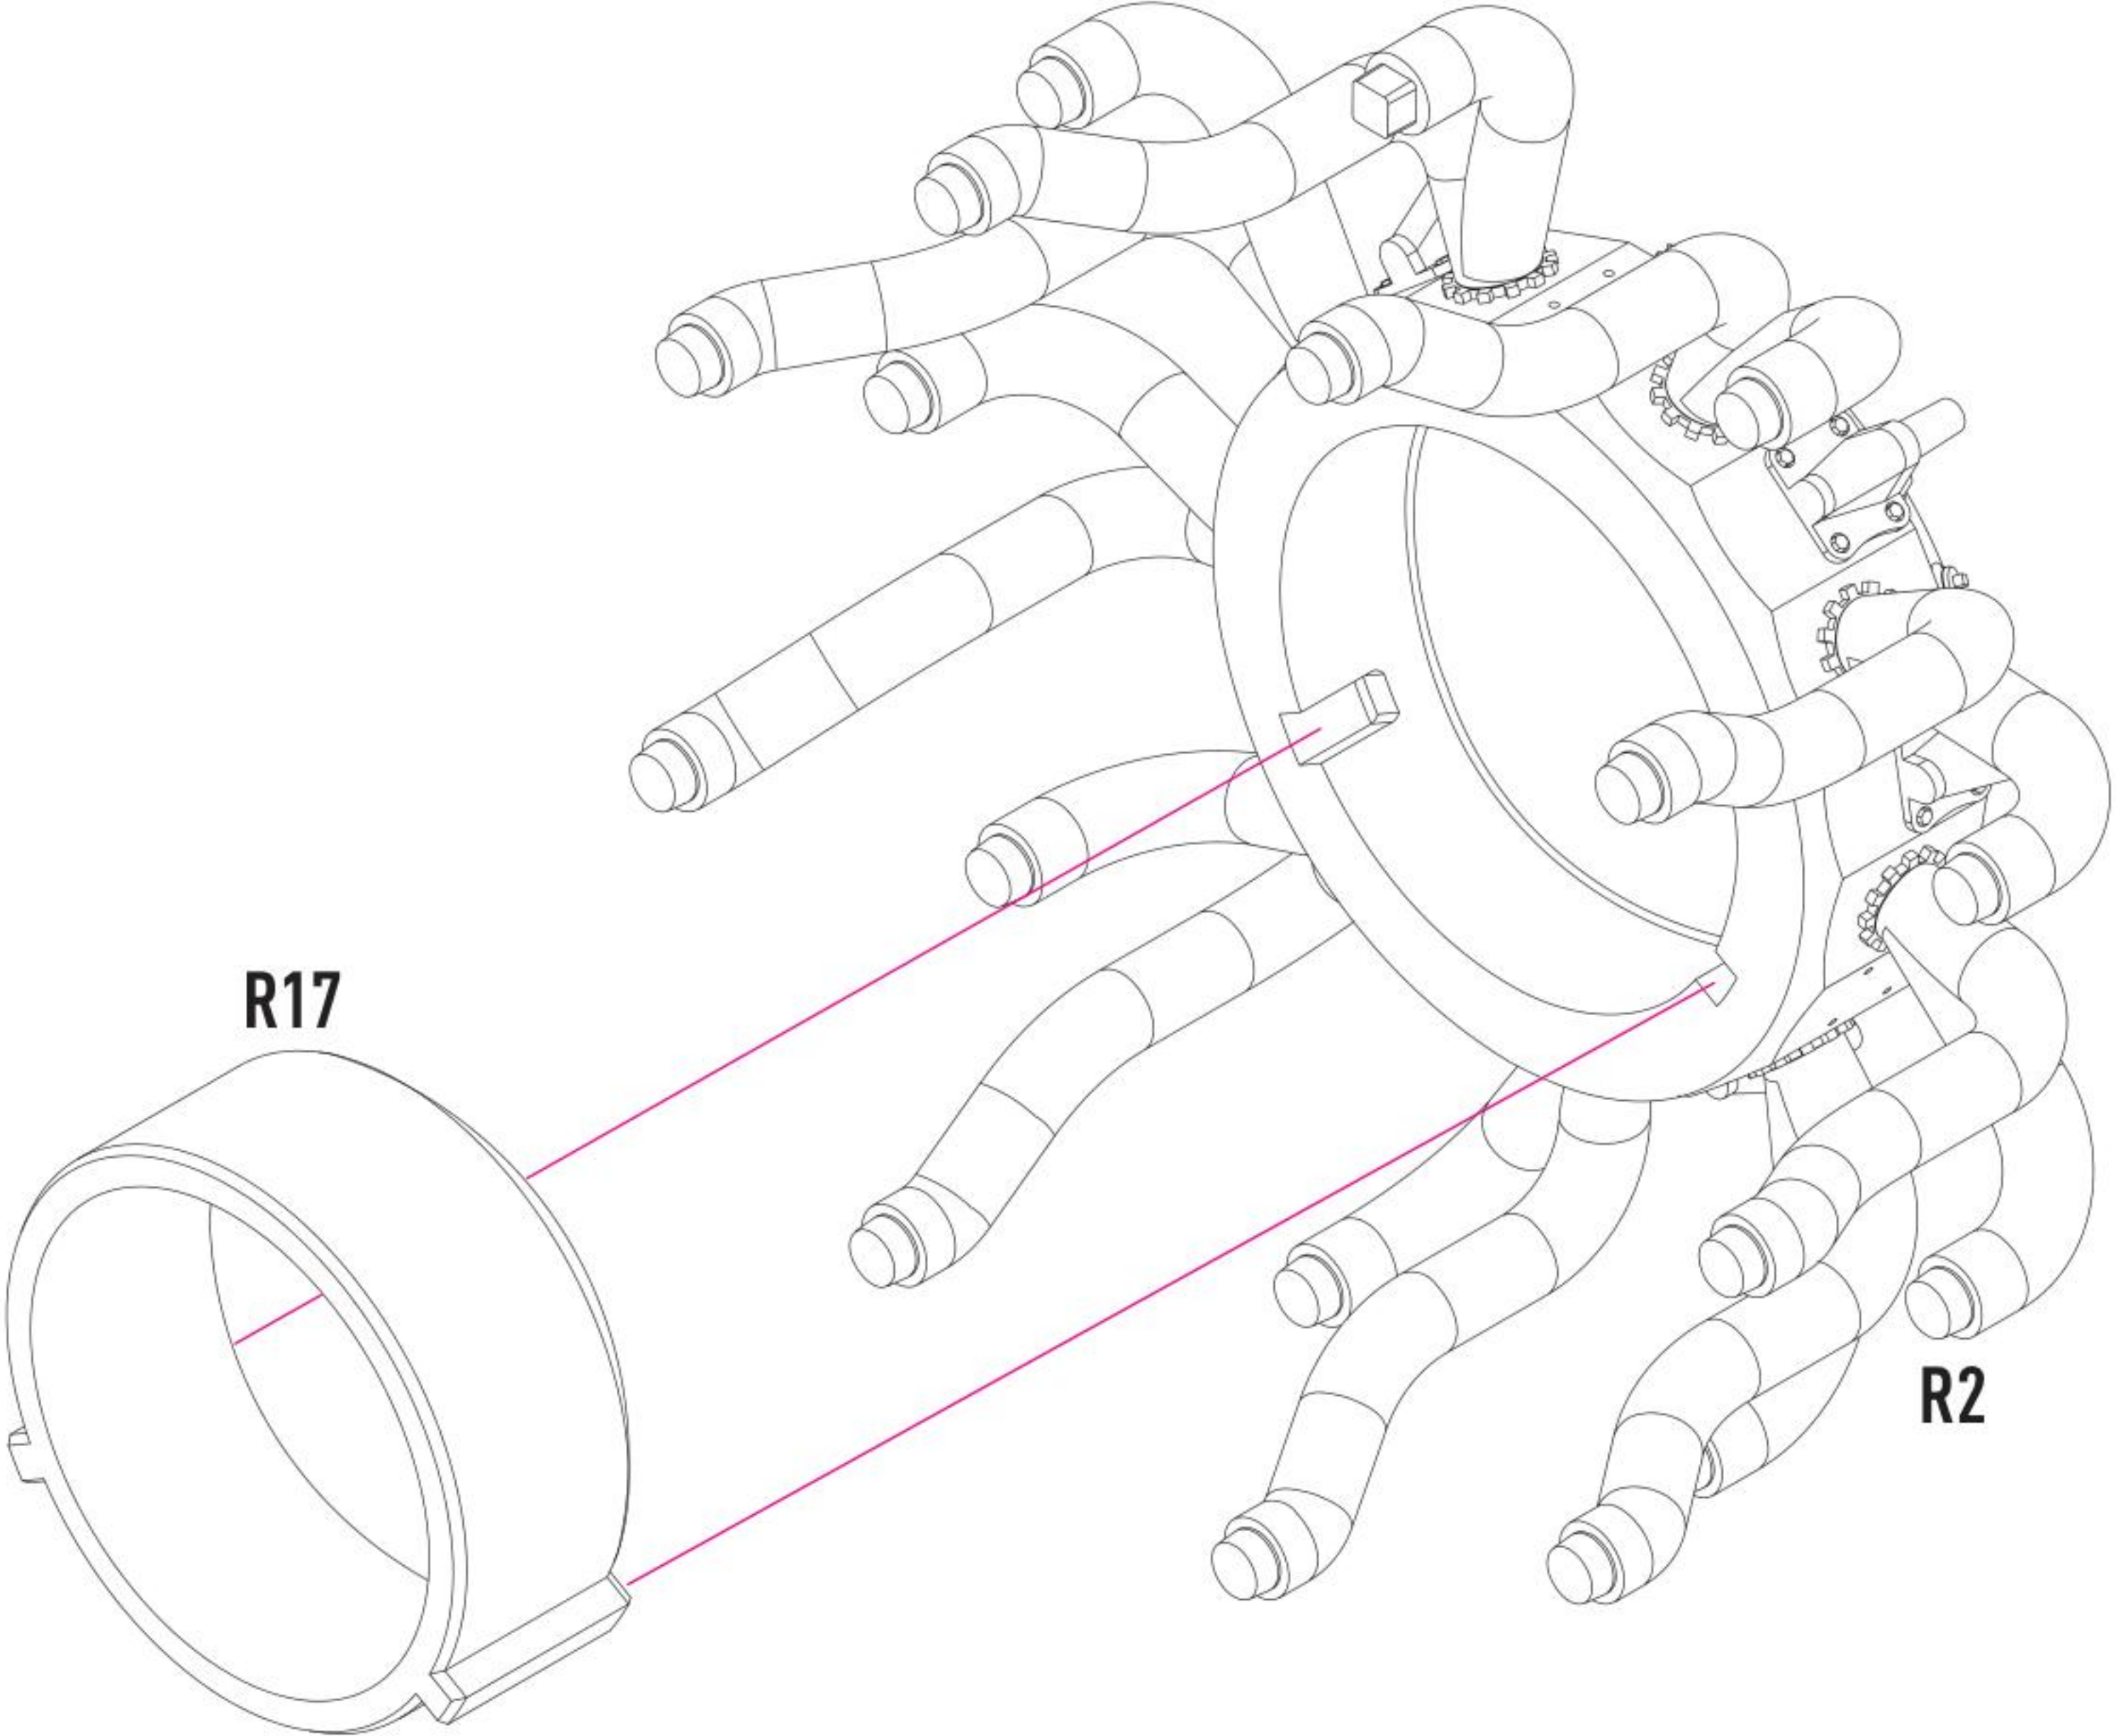


2

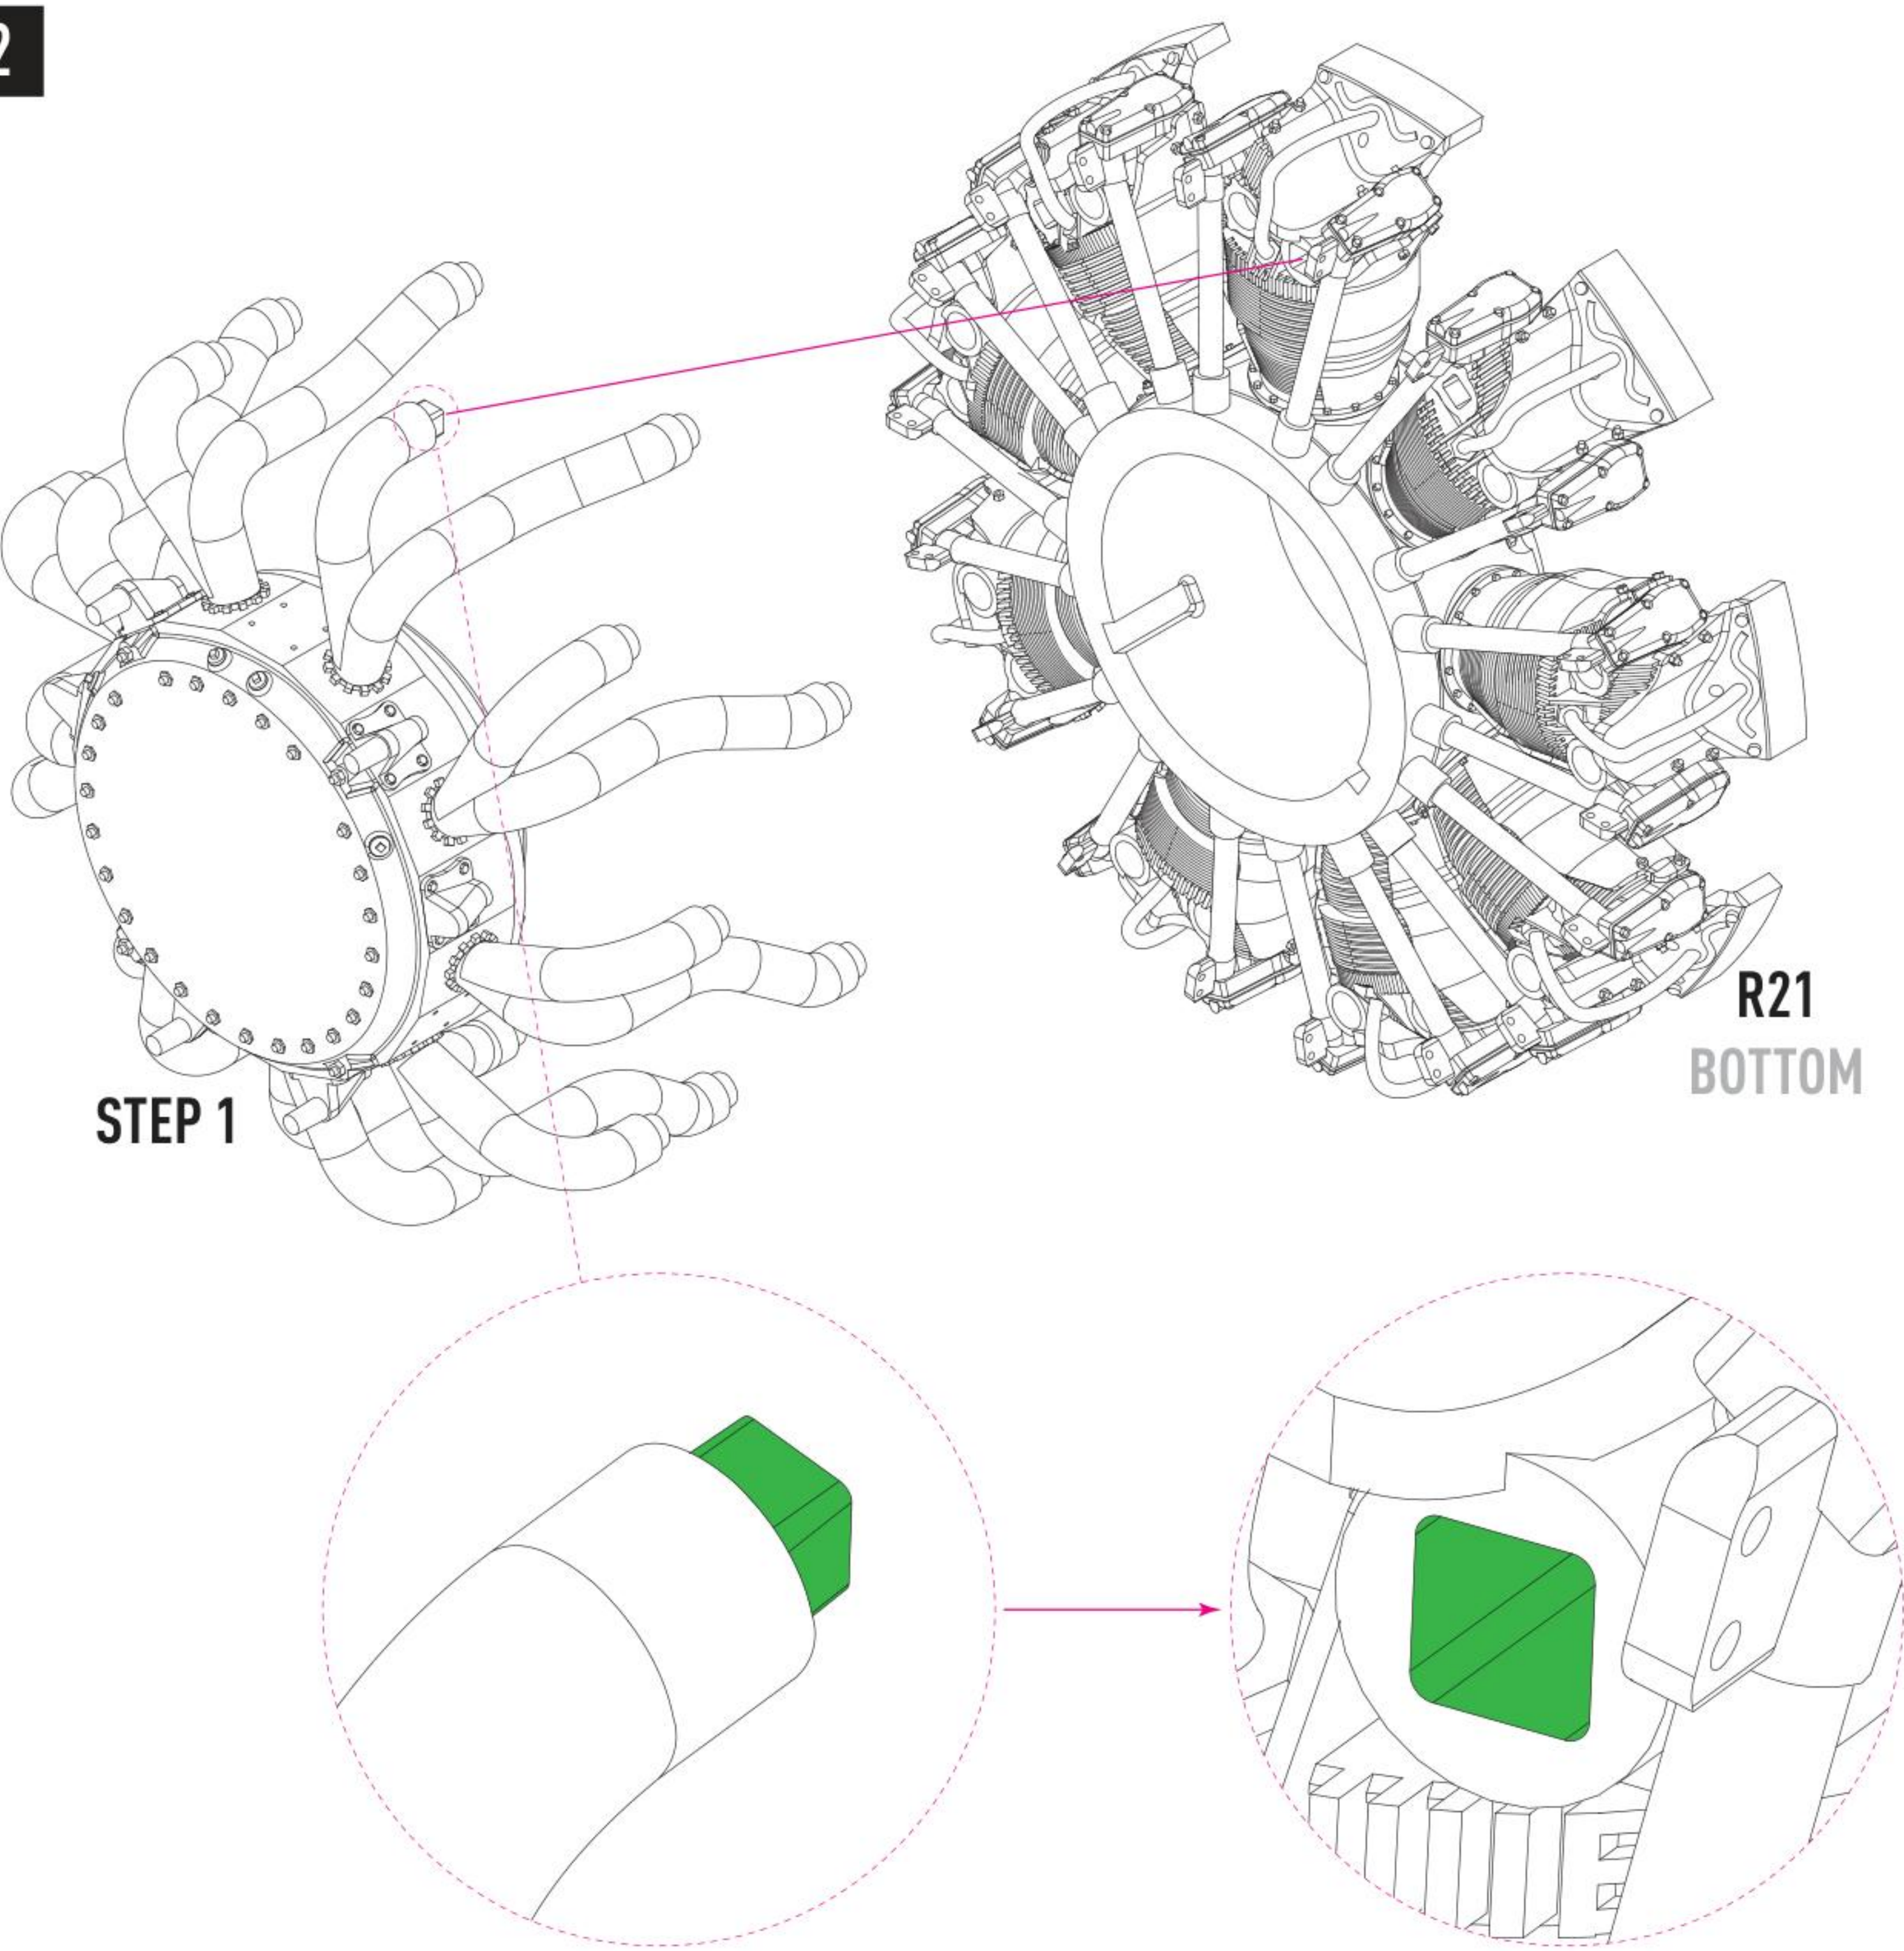


3

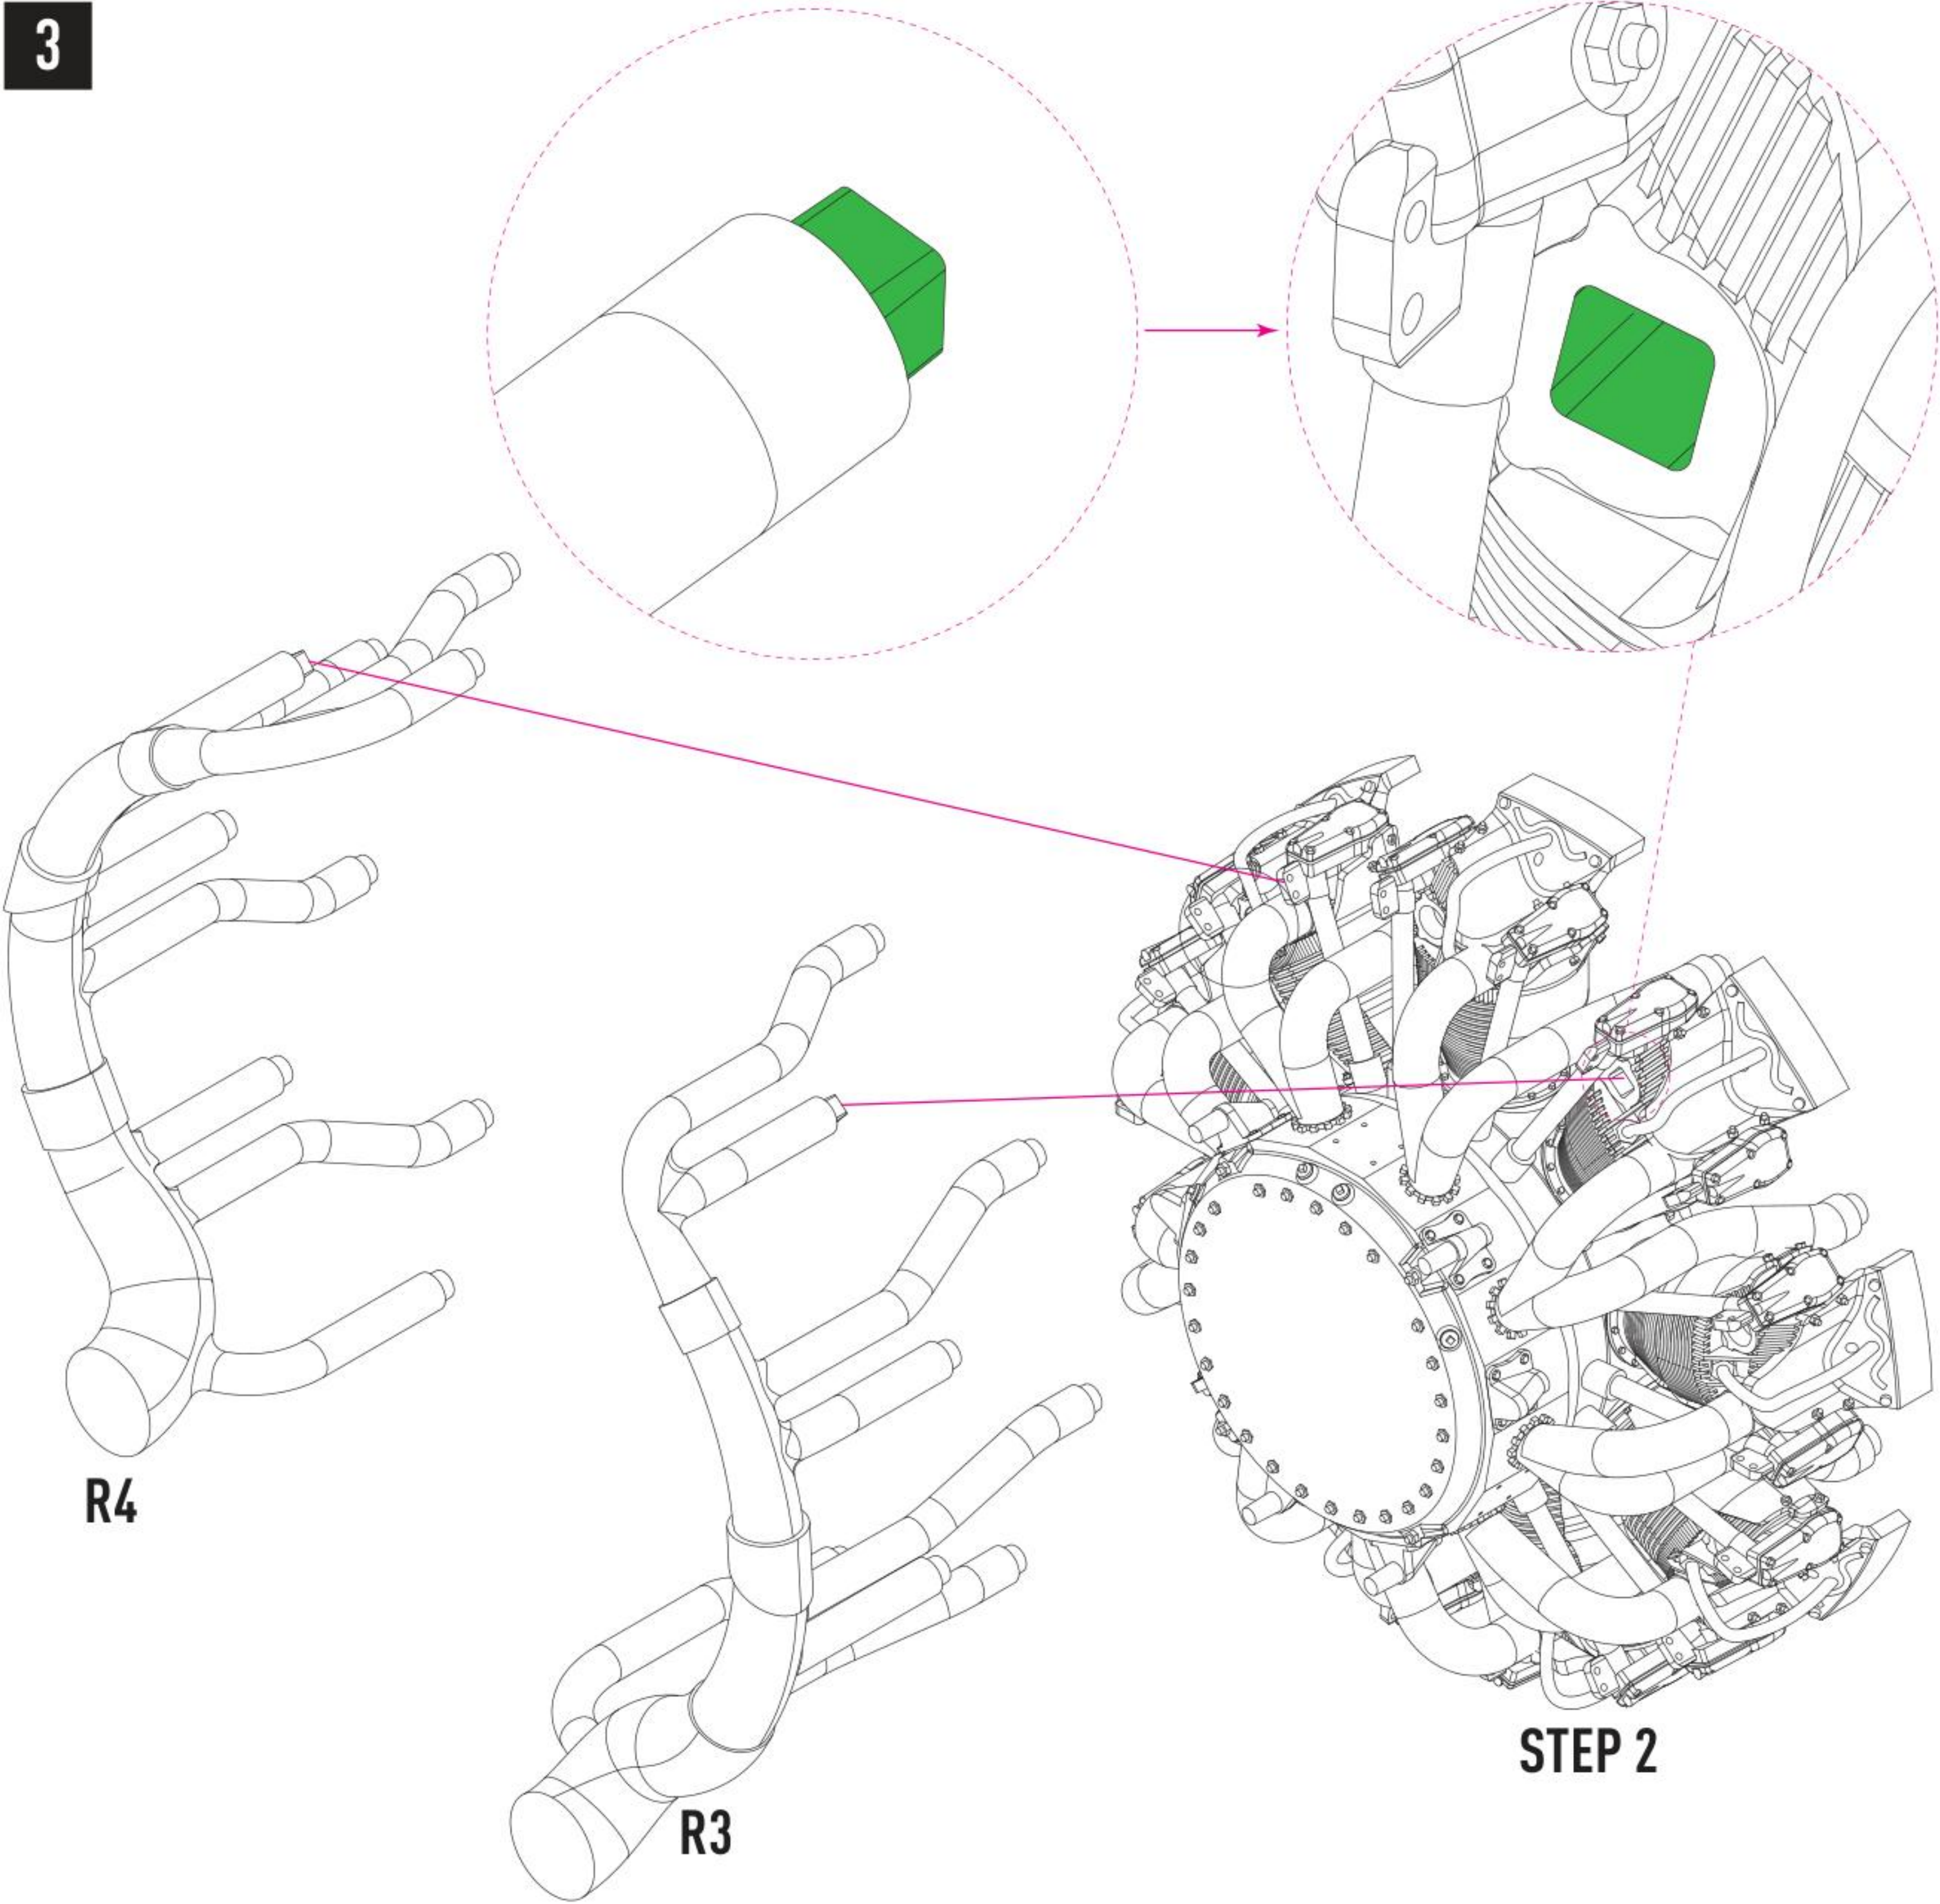


4

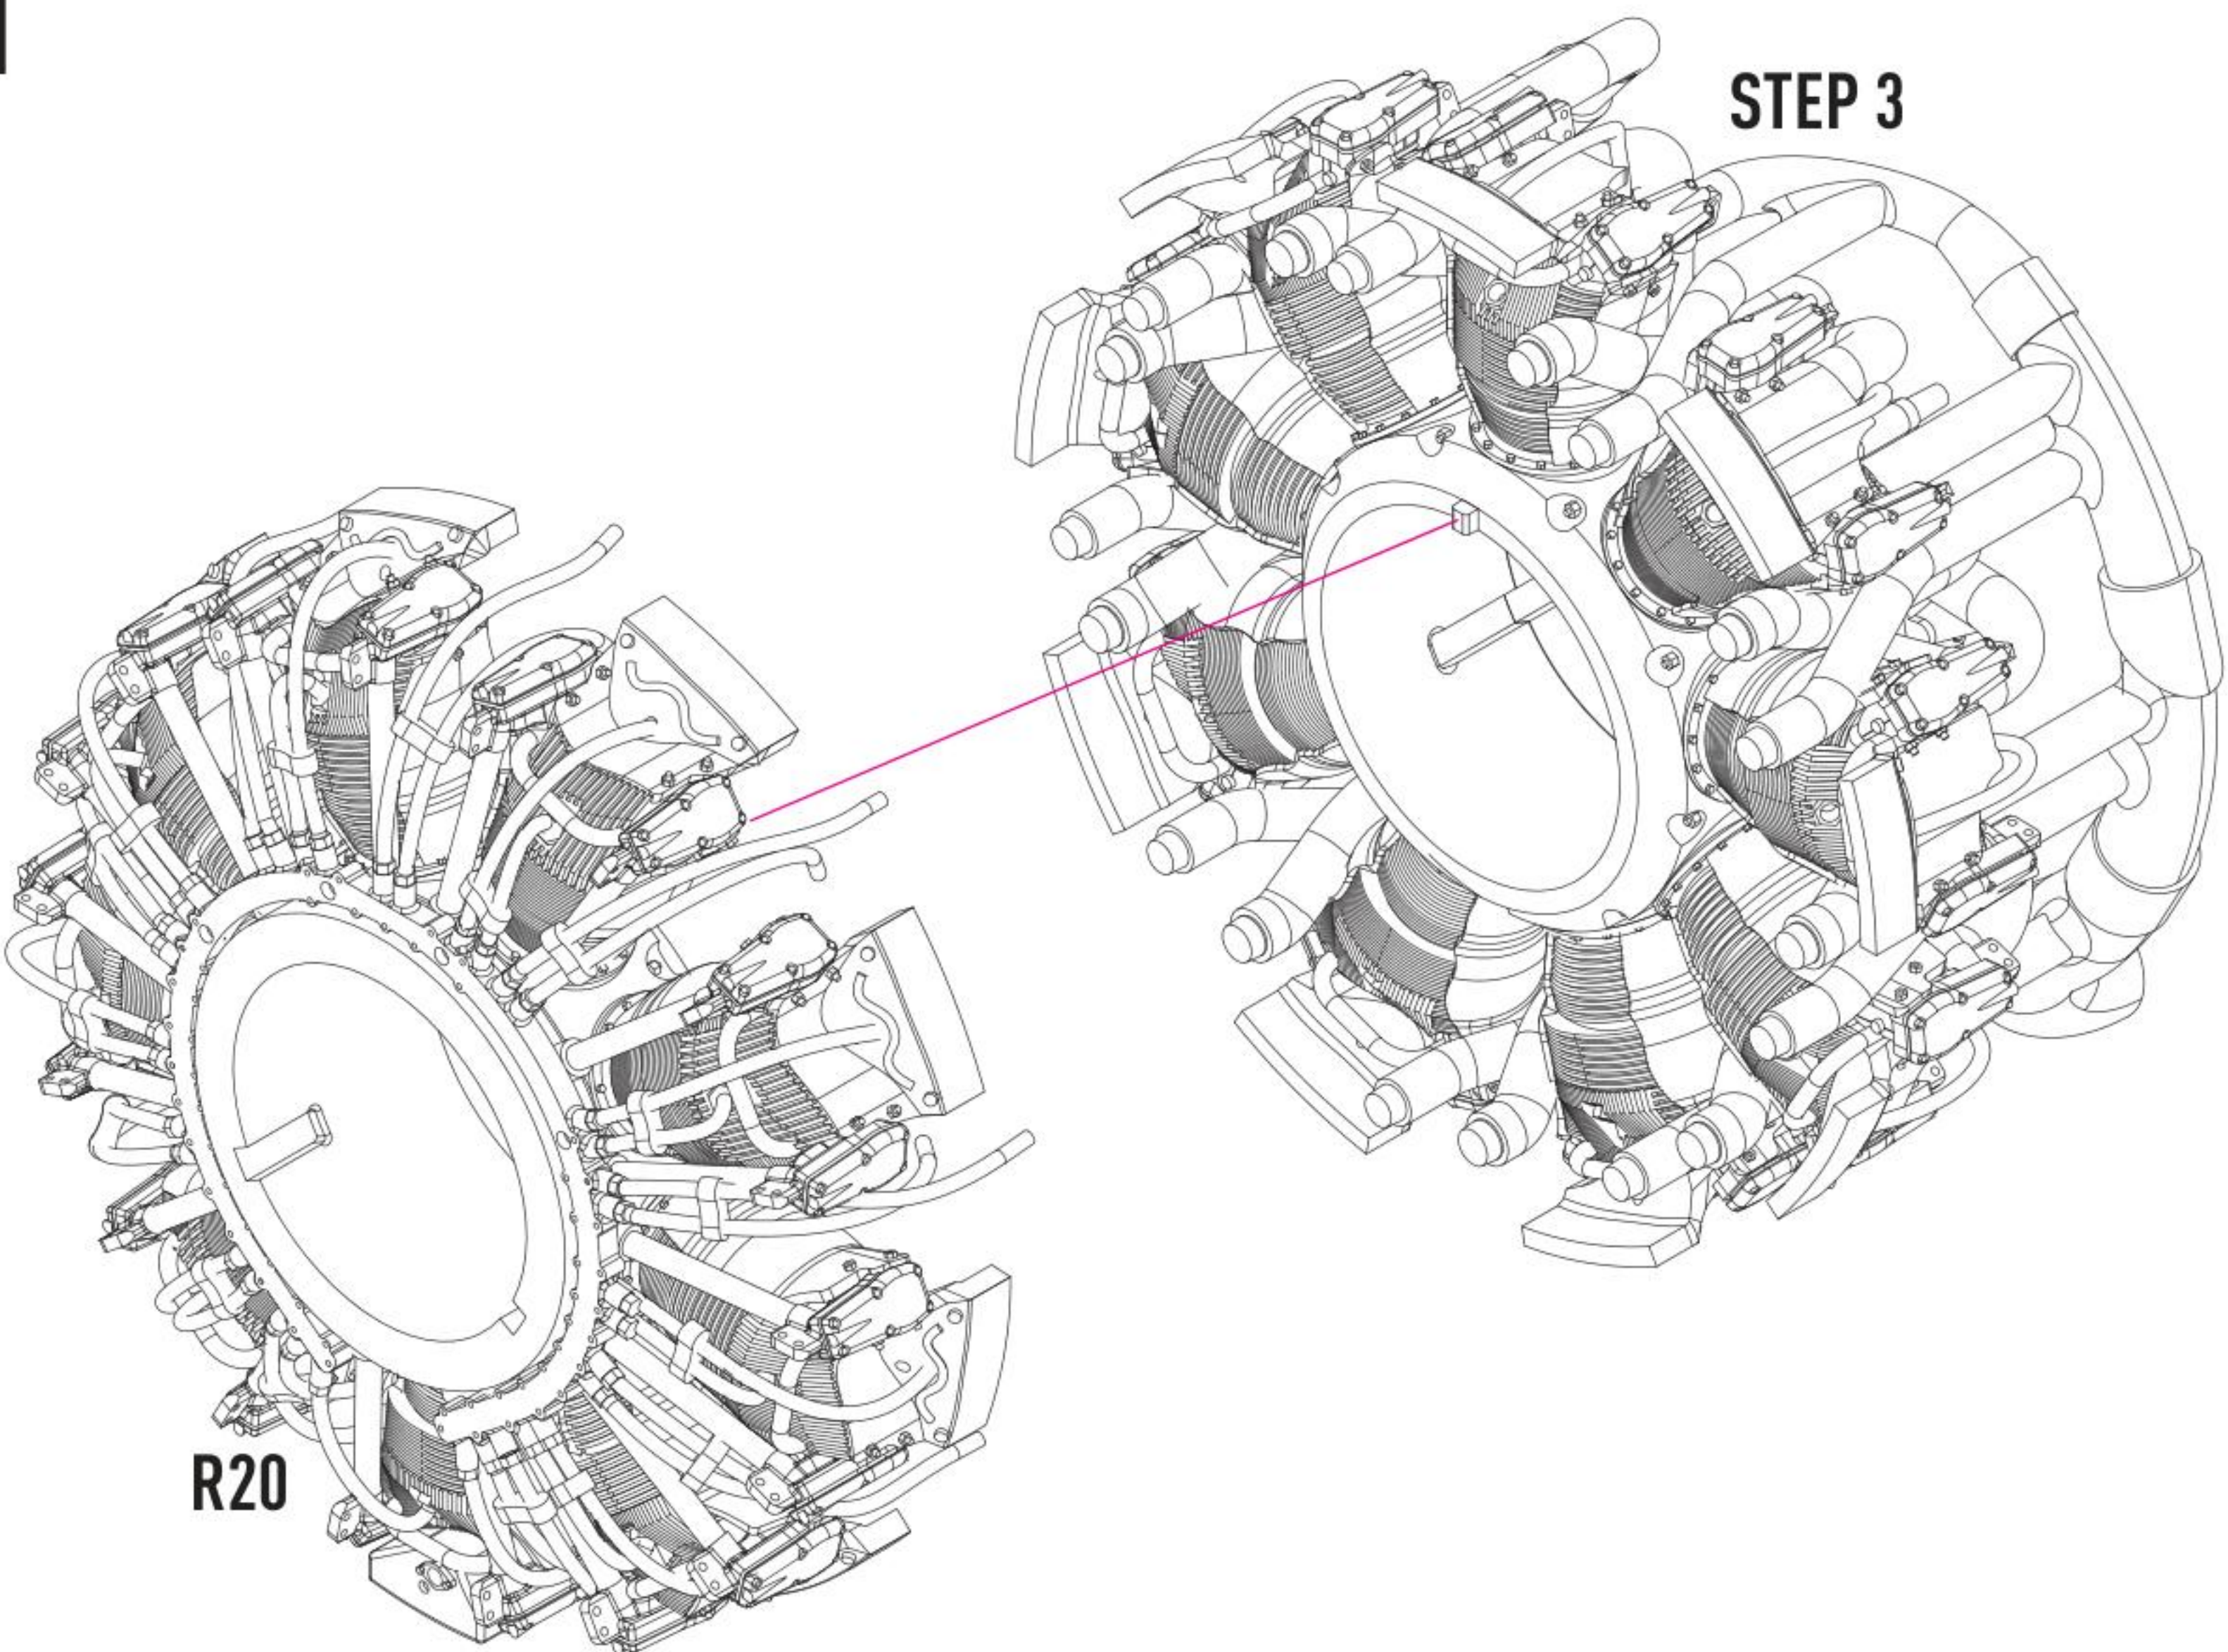


5

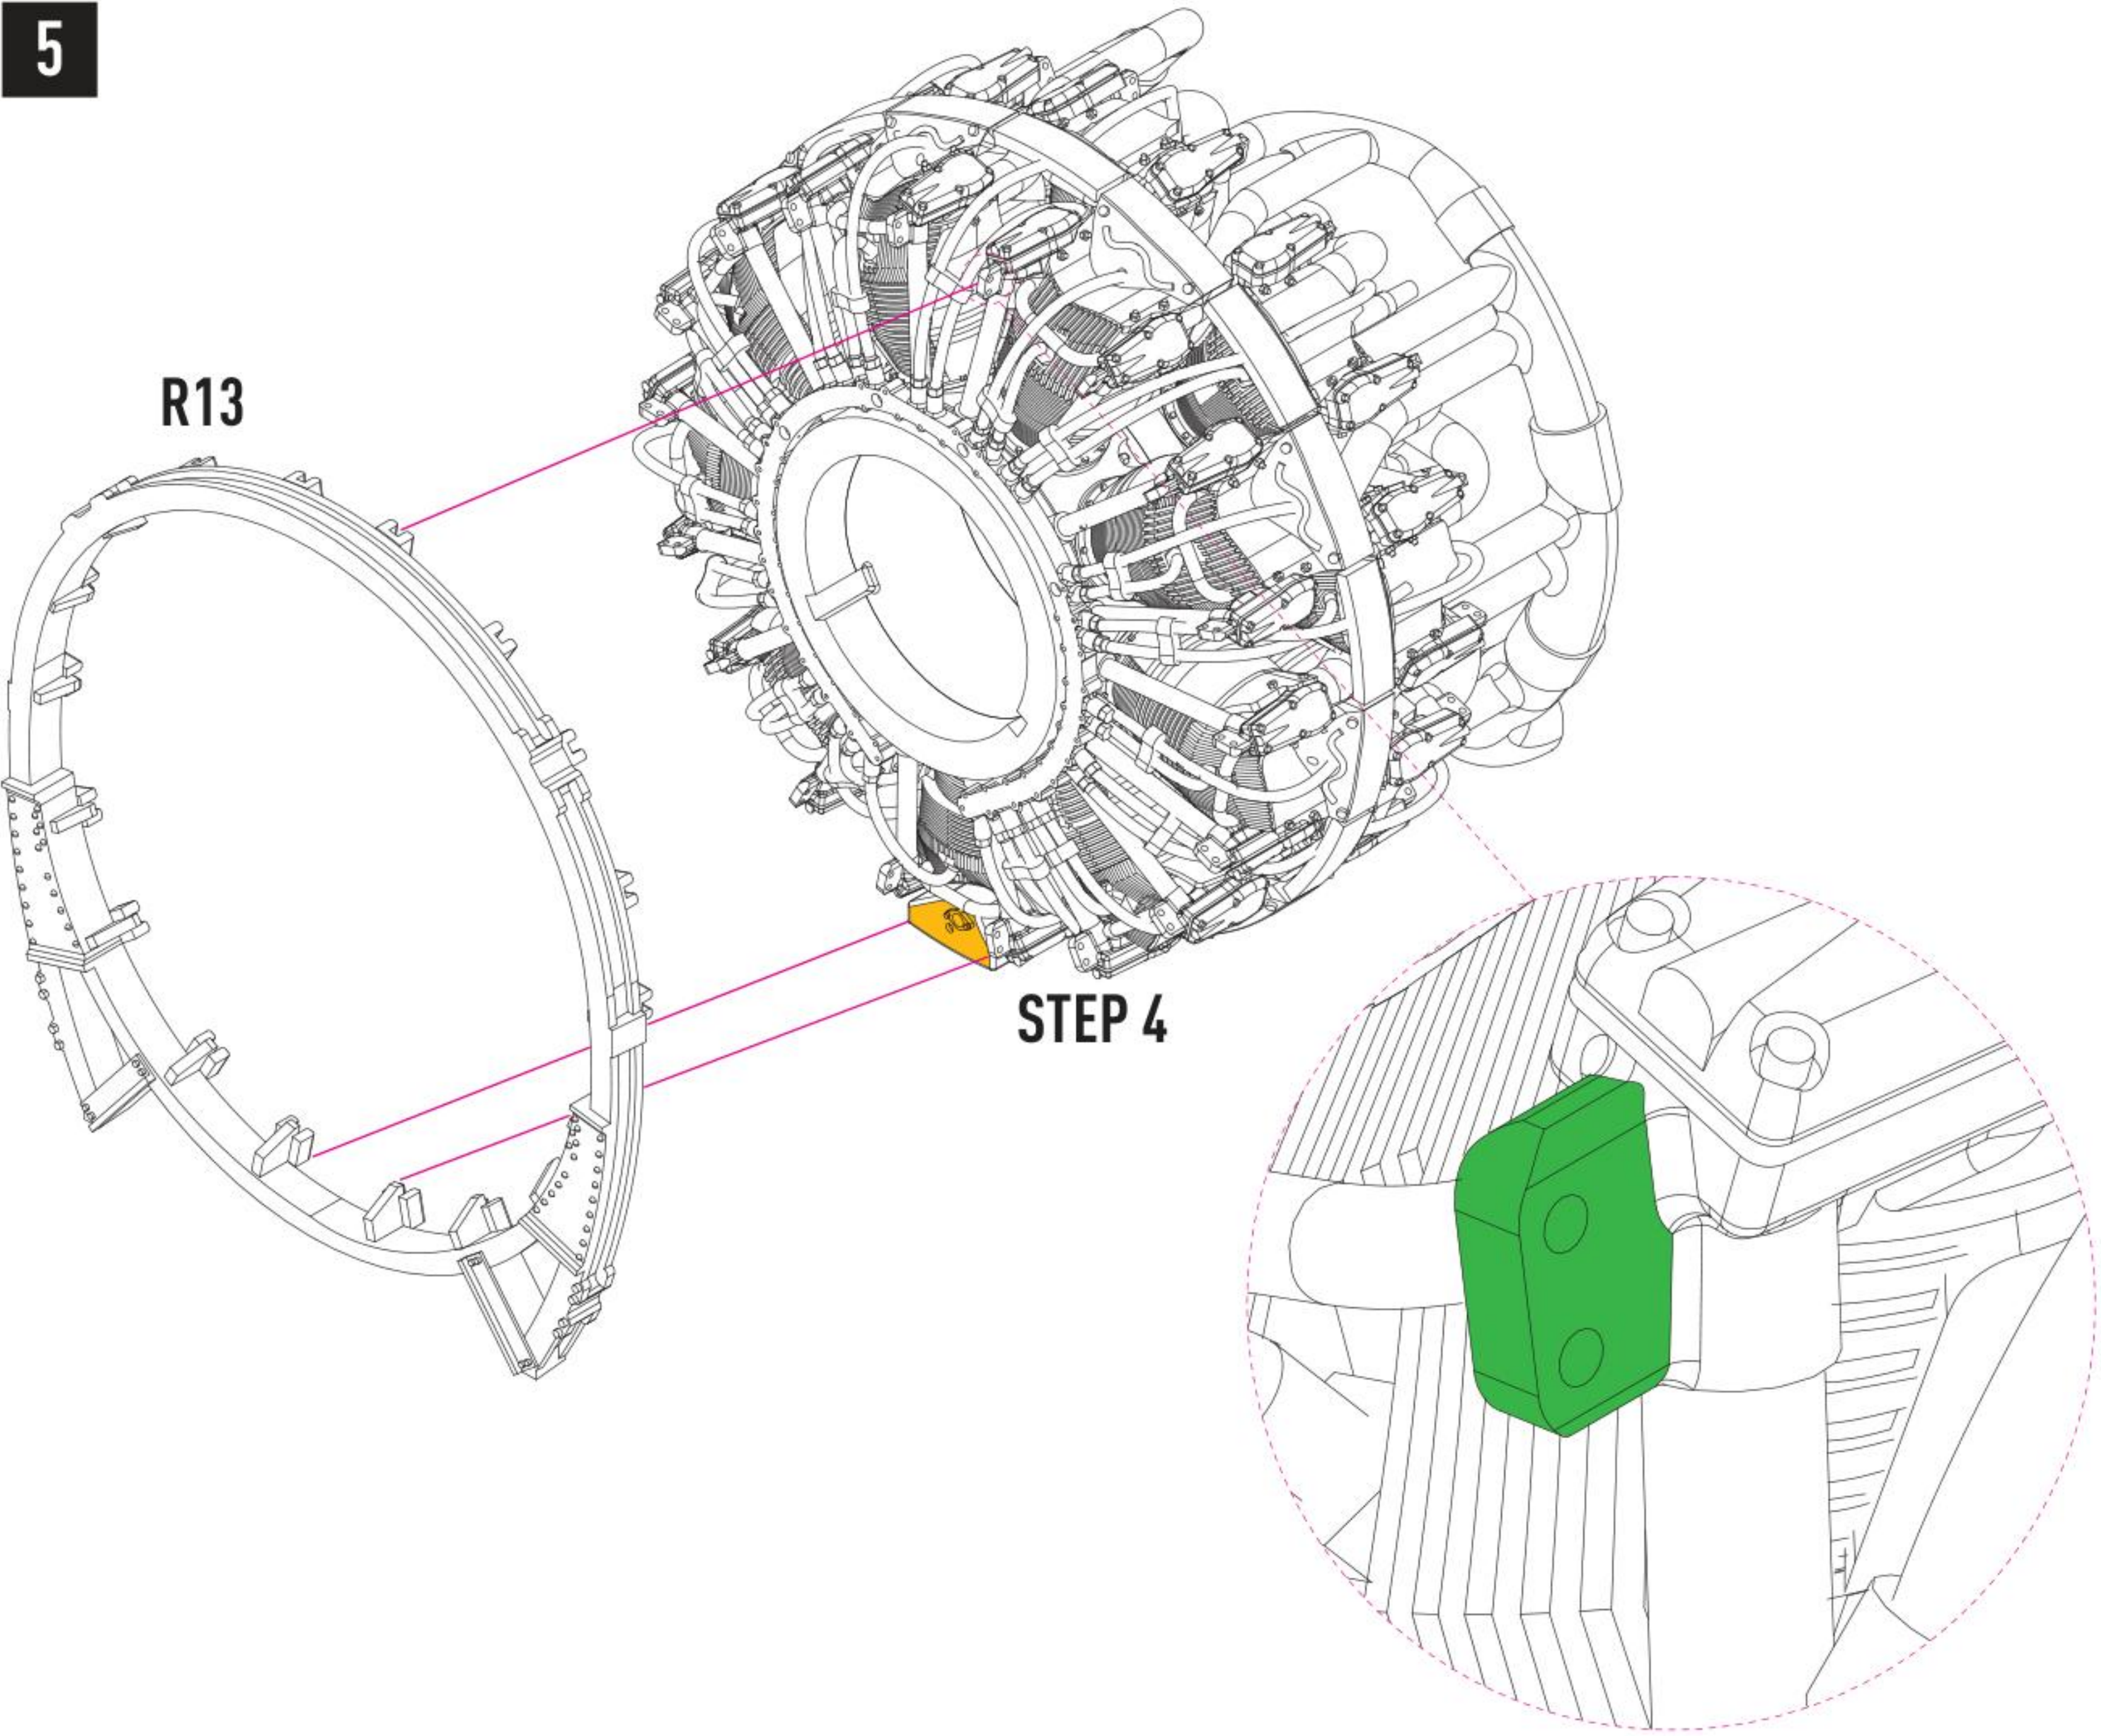


6

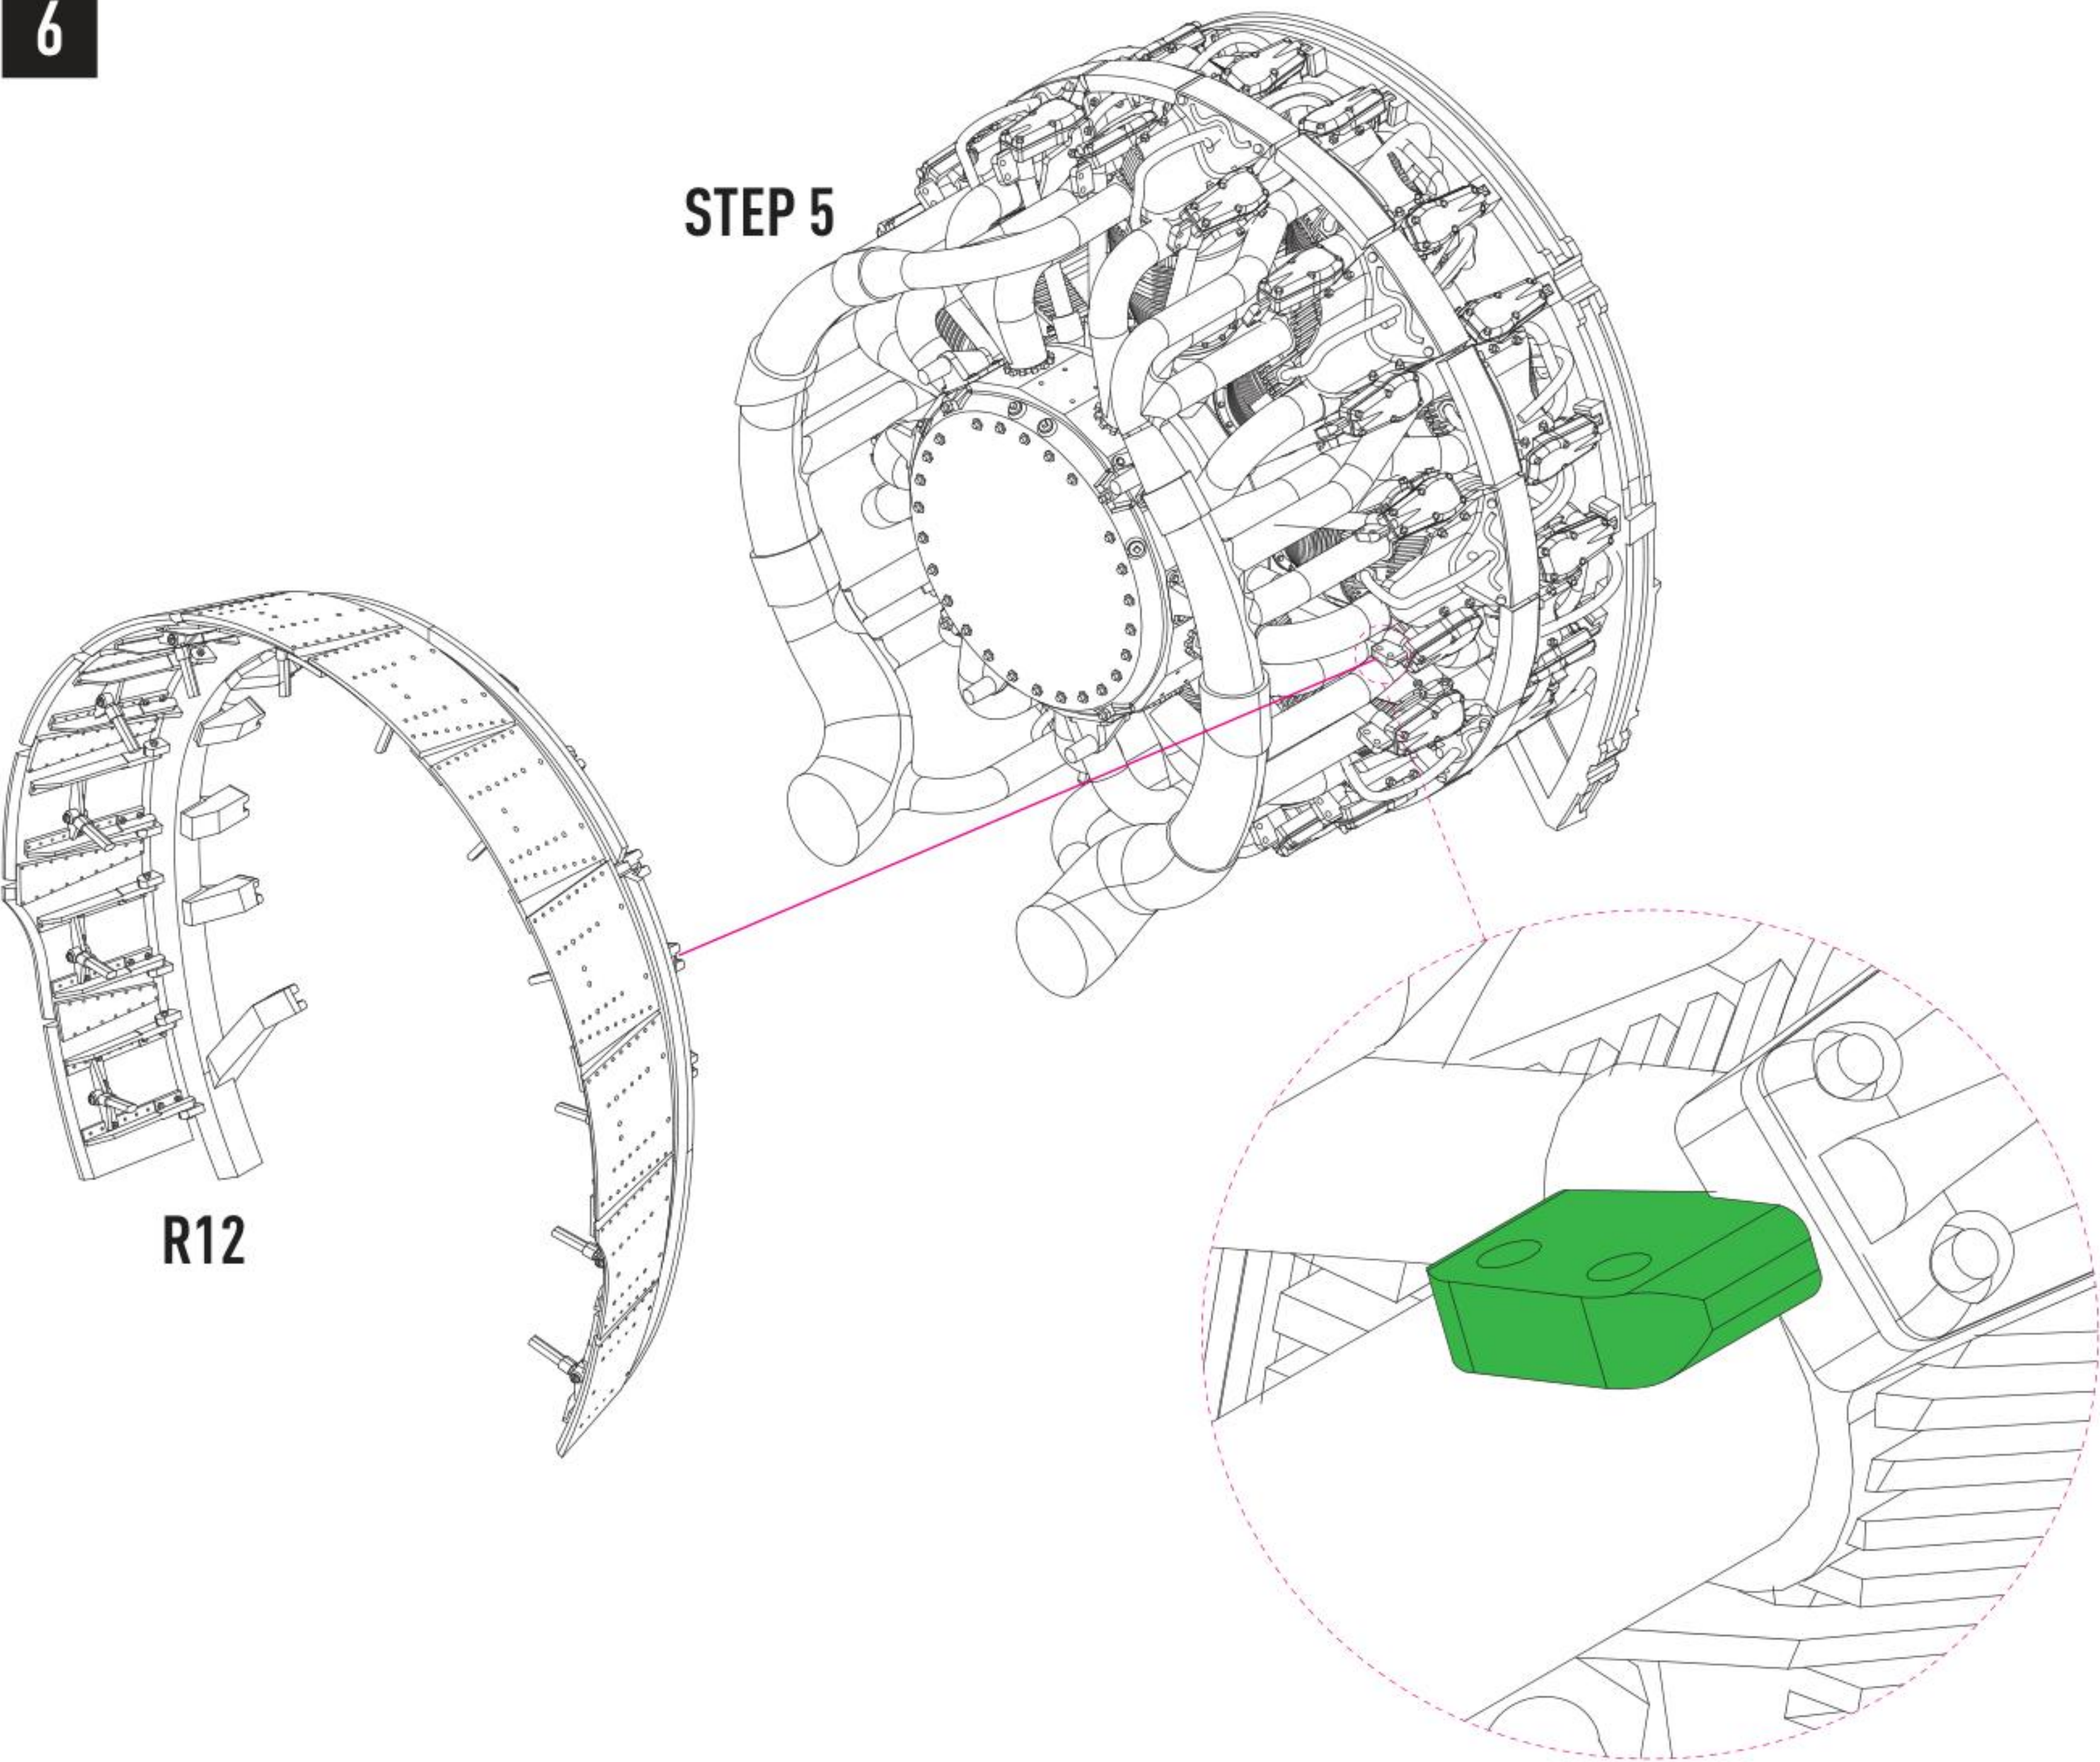


7

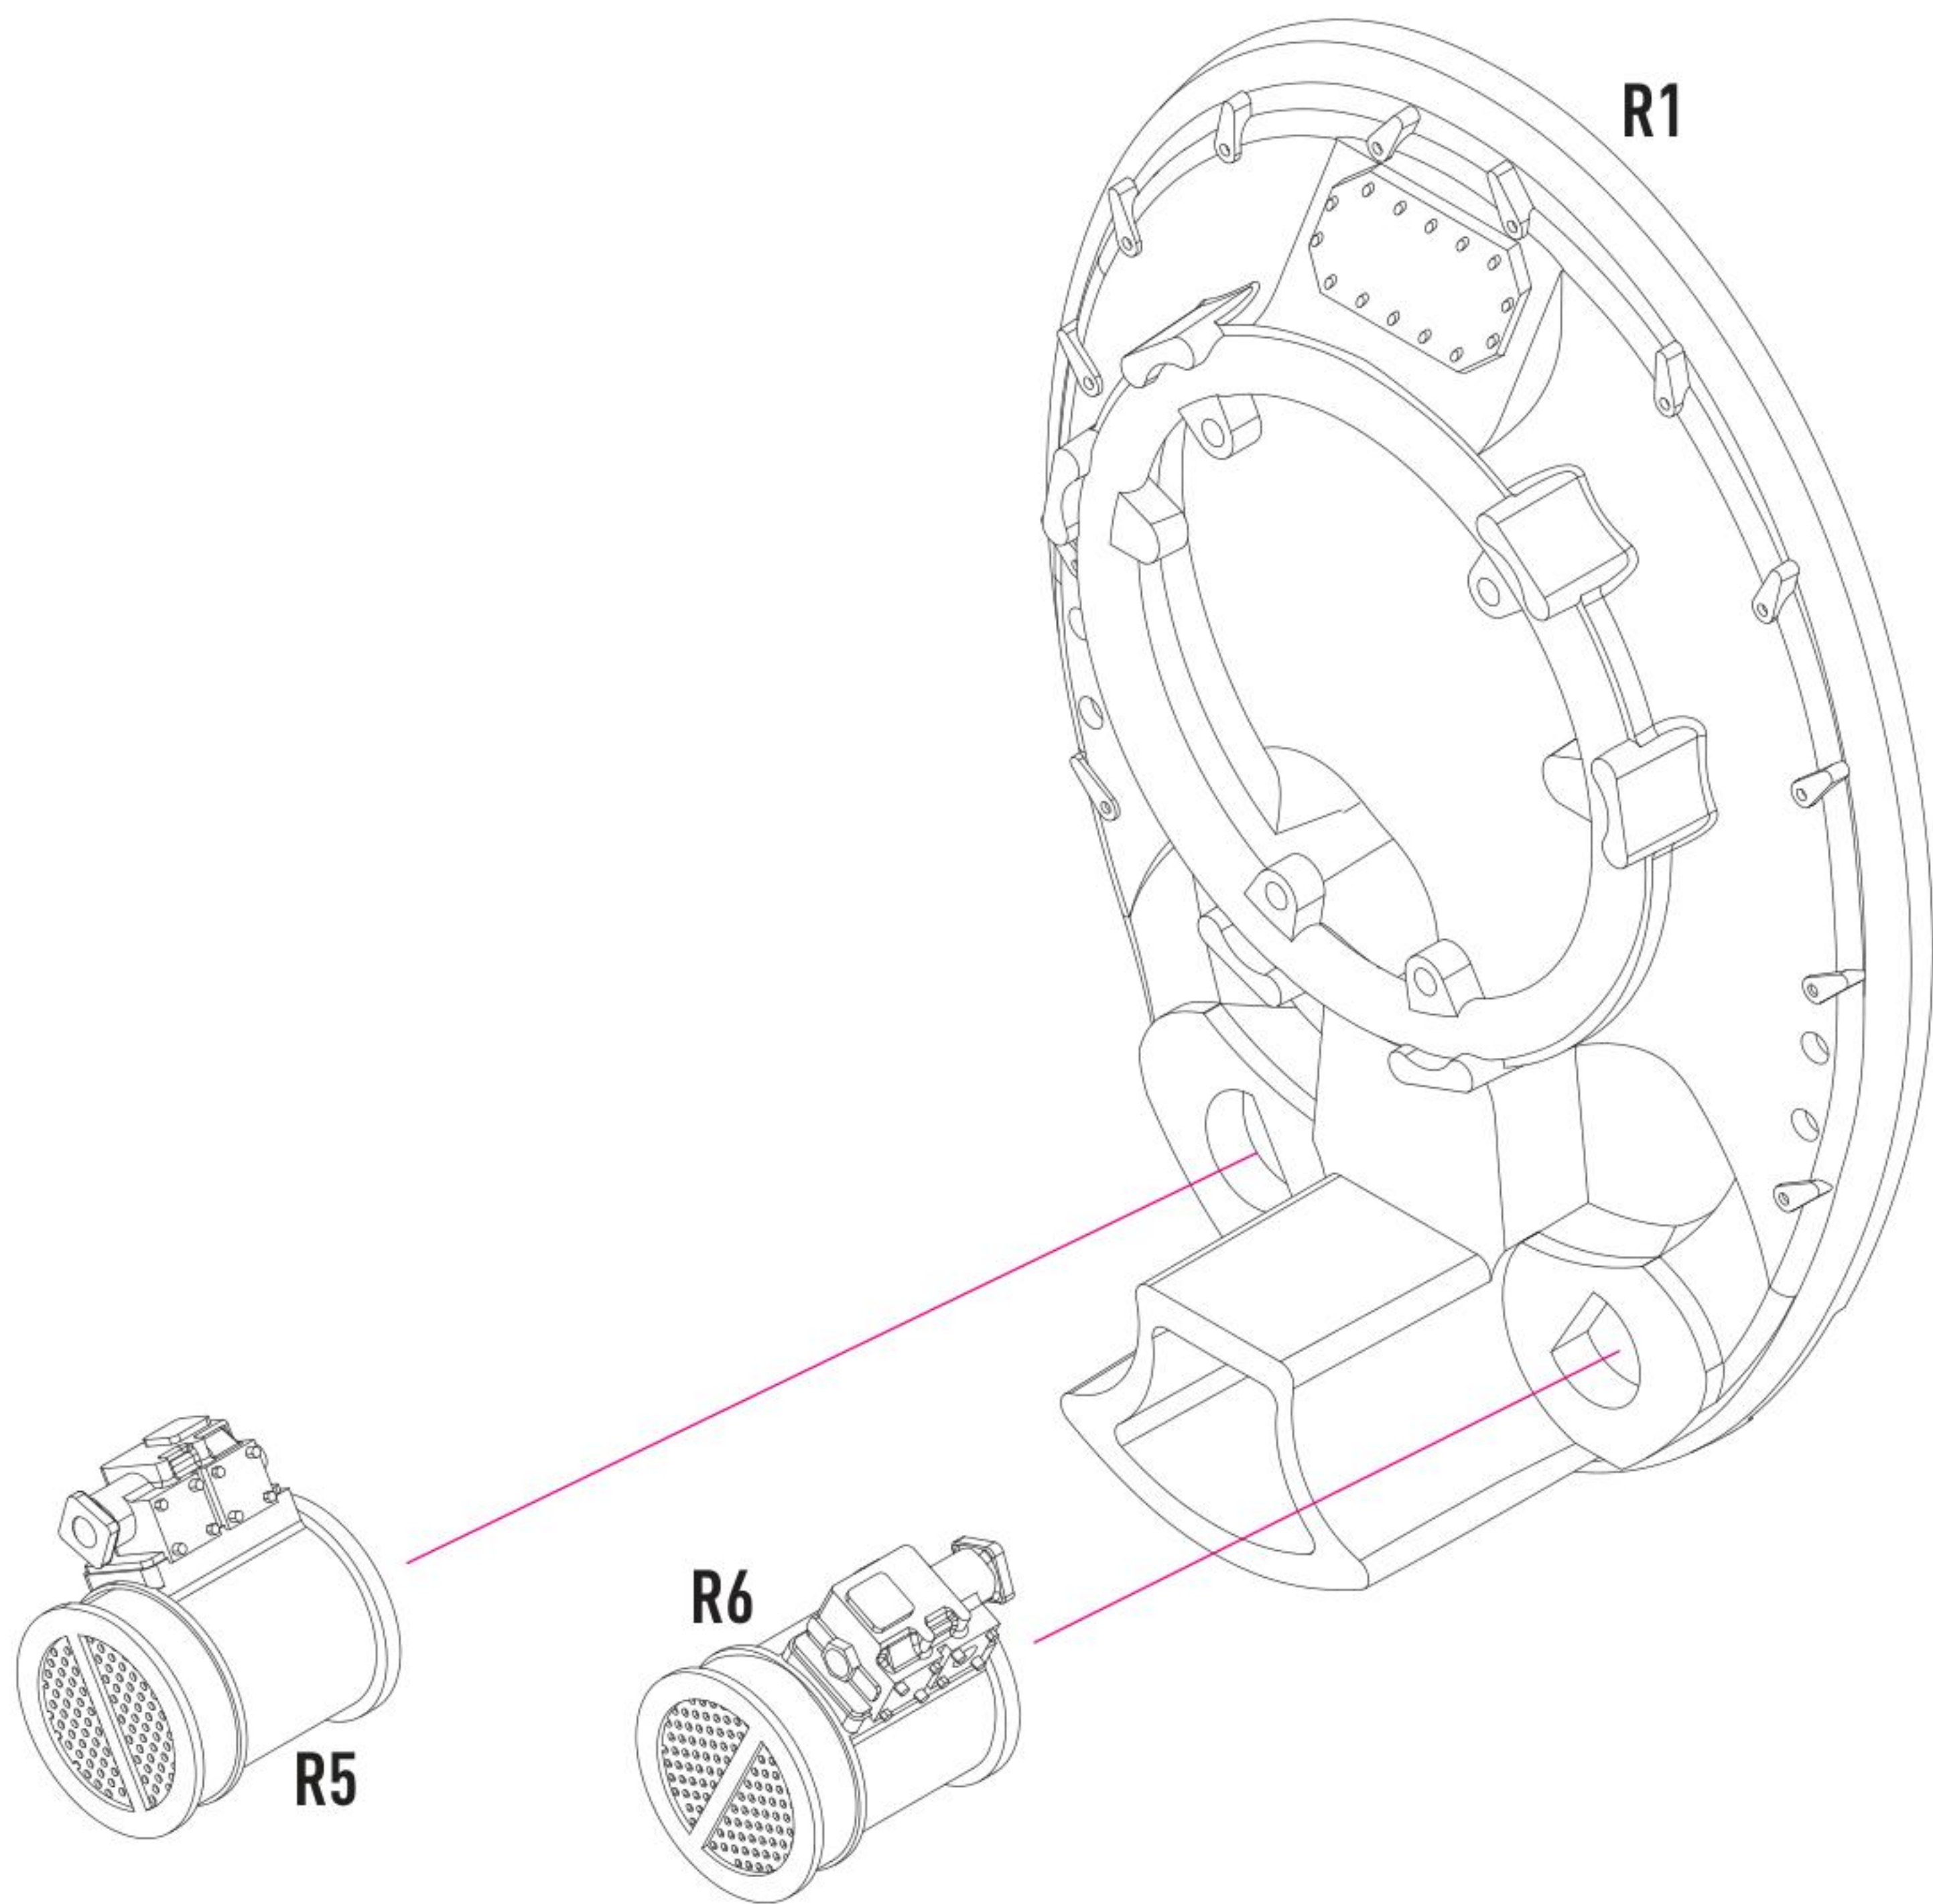


8

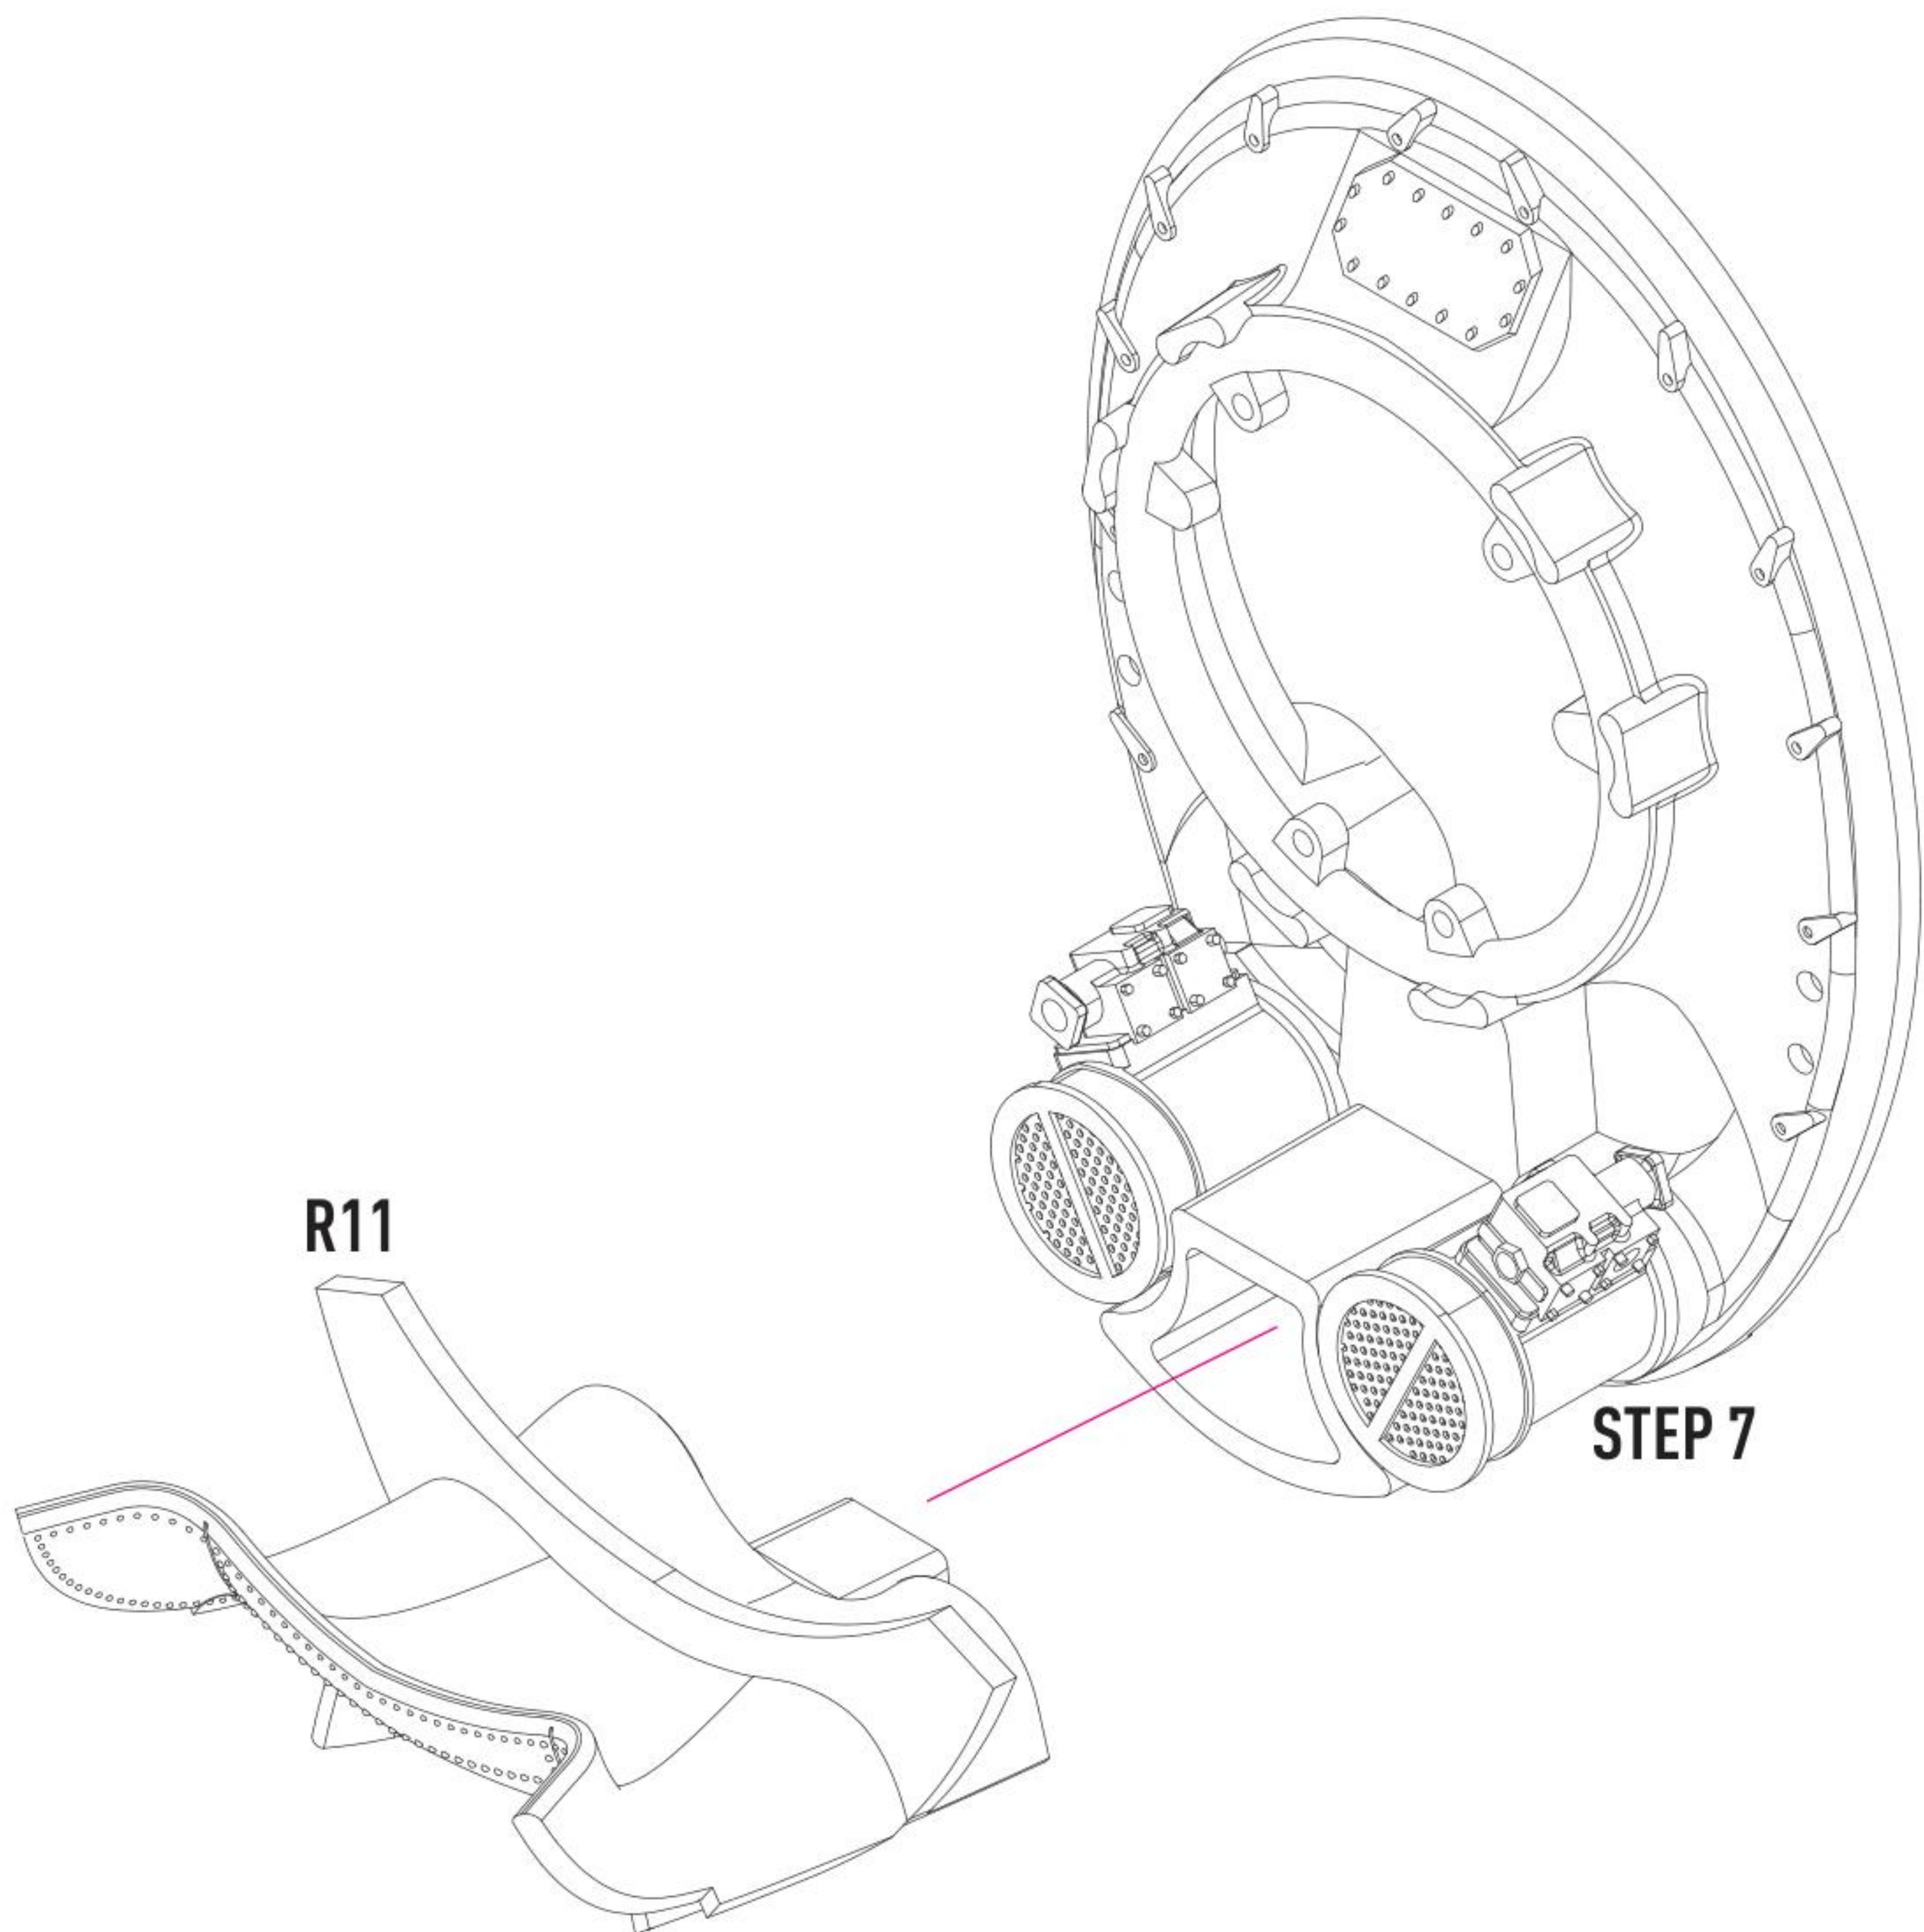


9

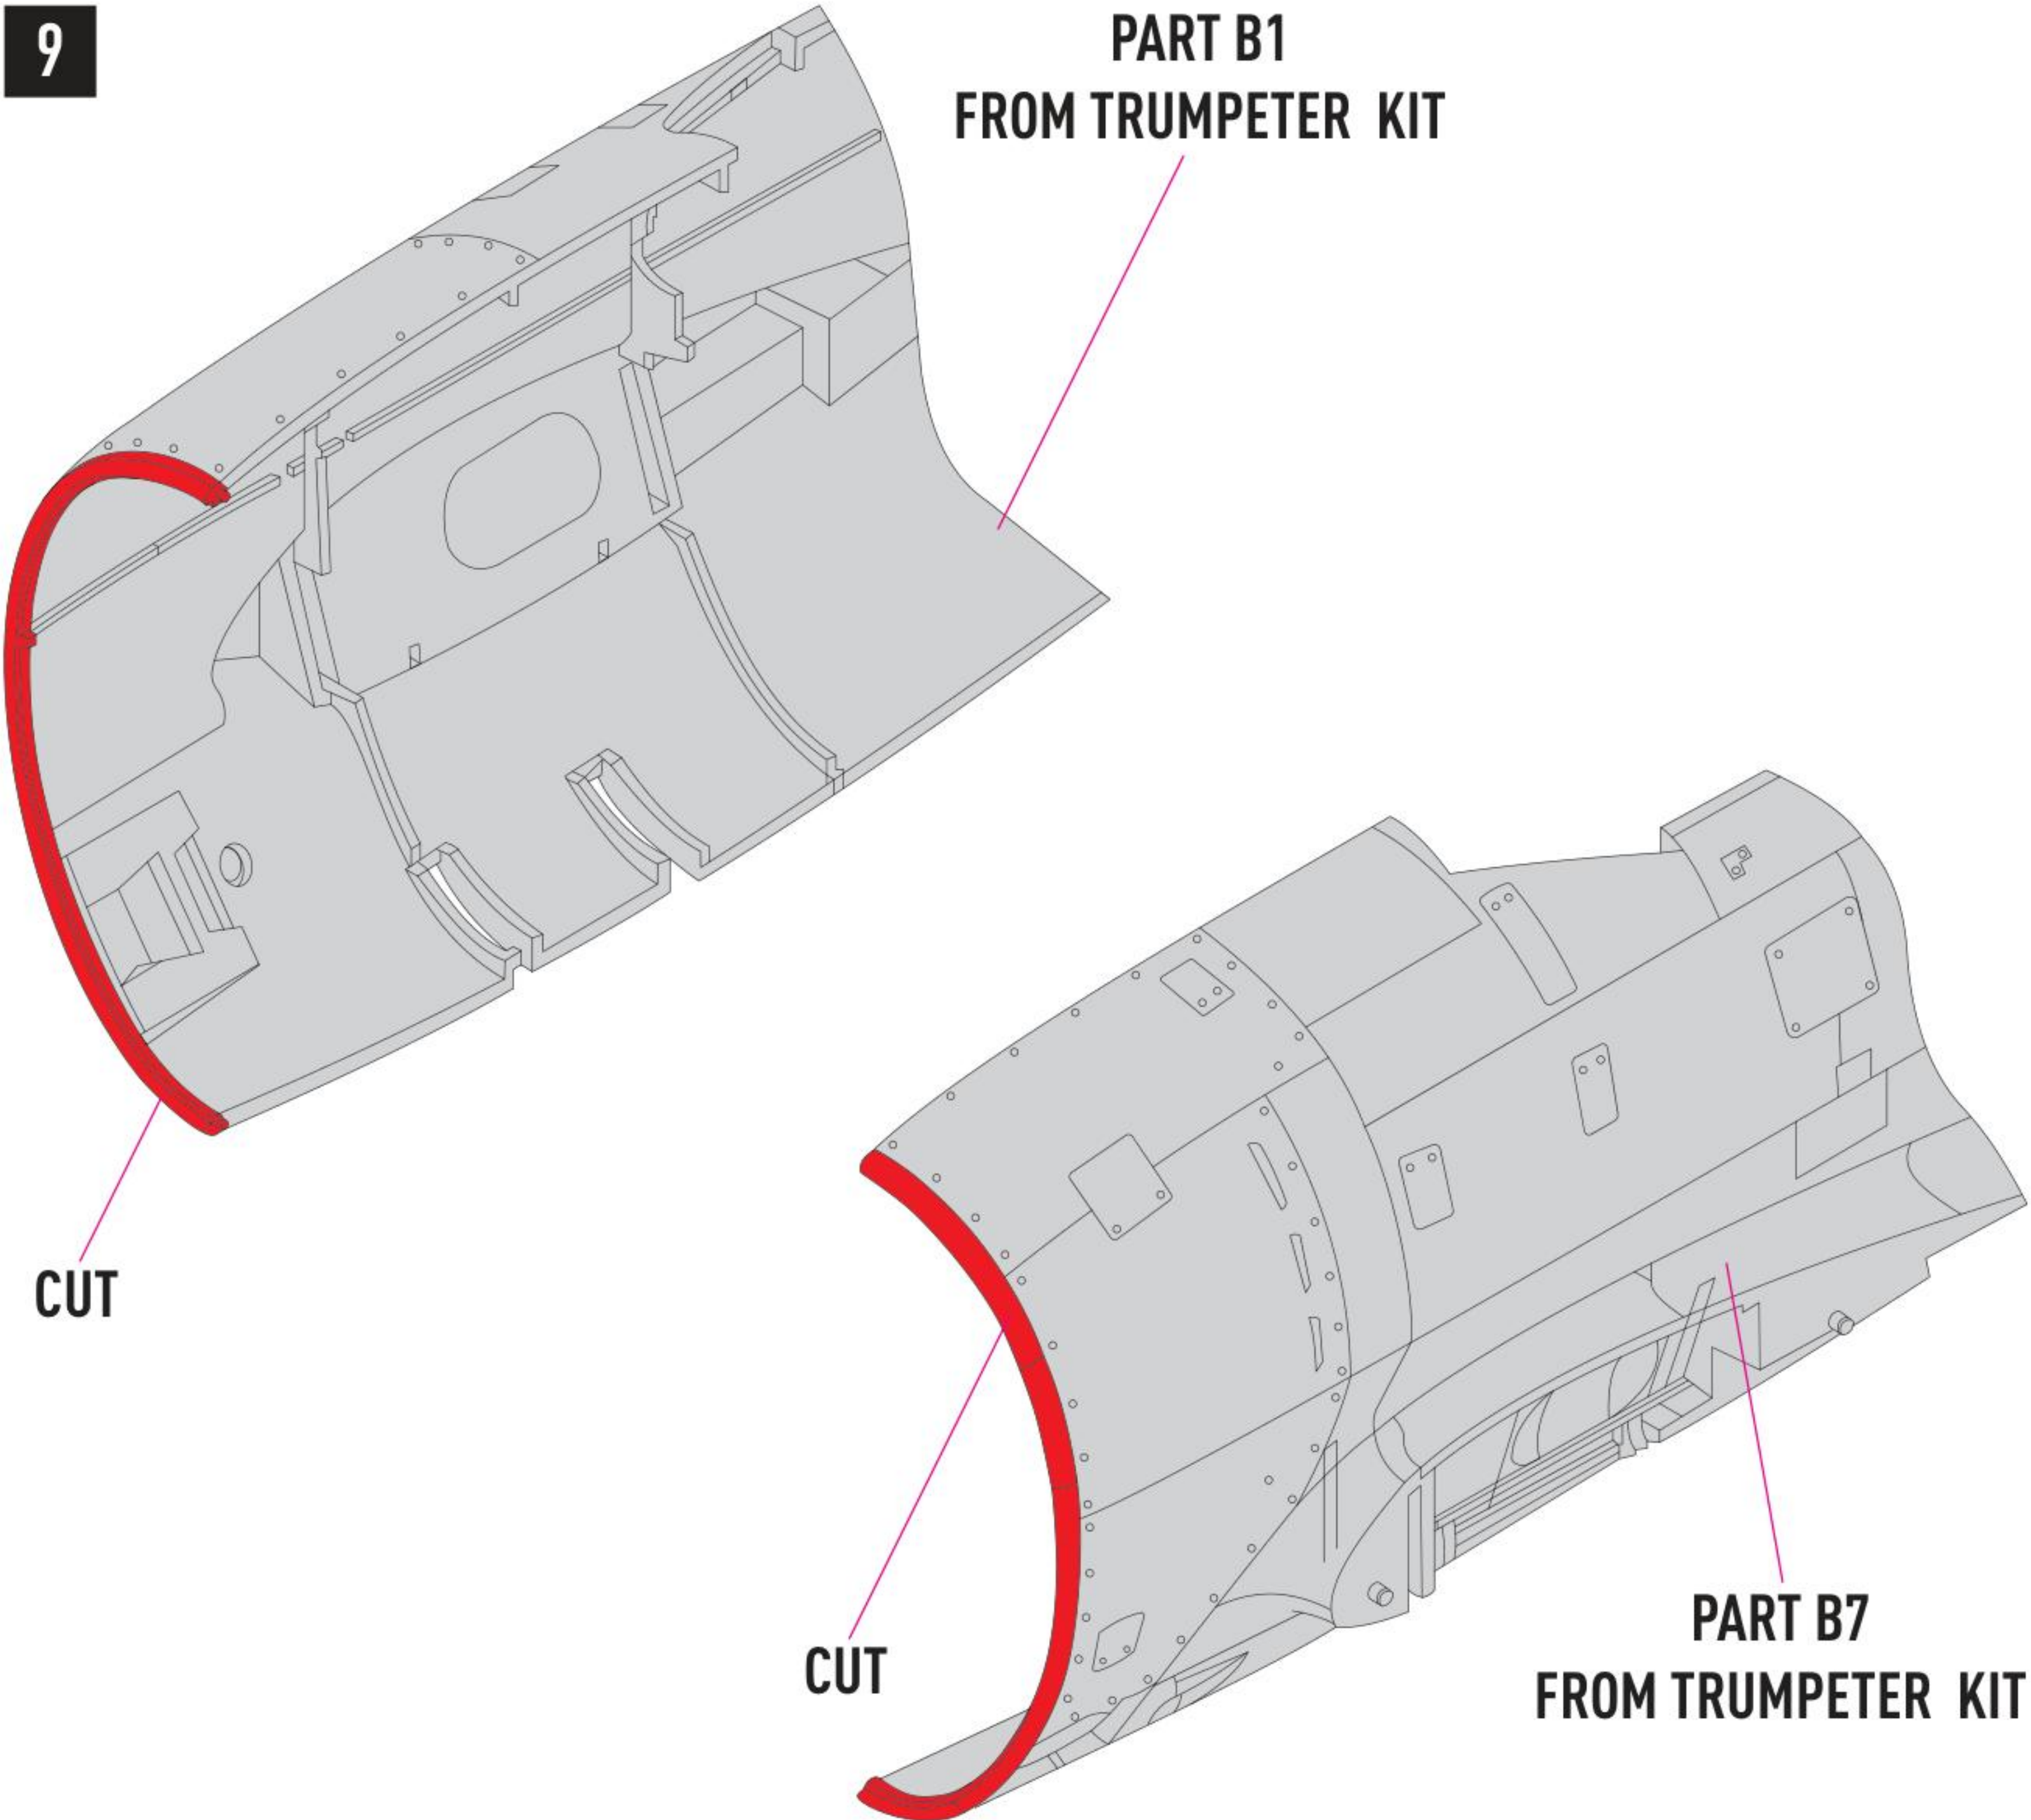

10

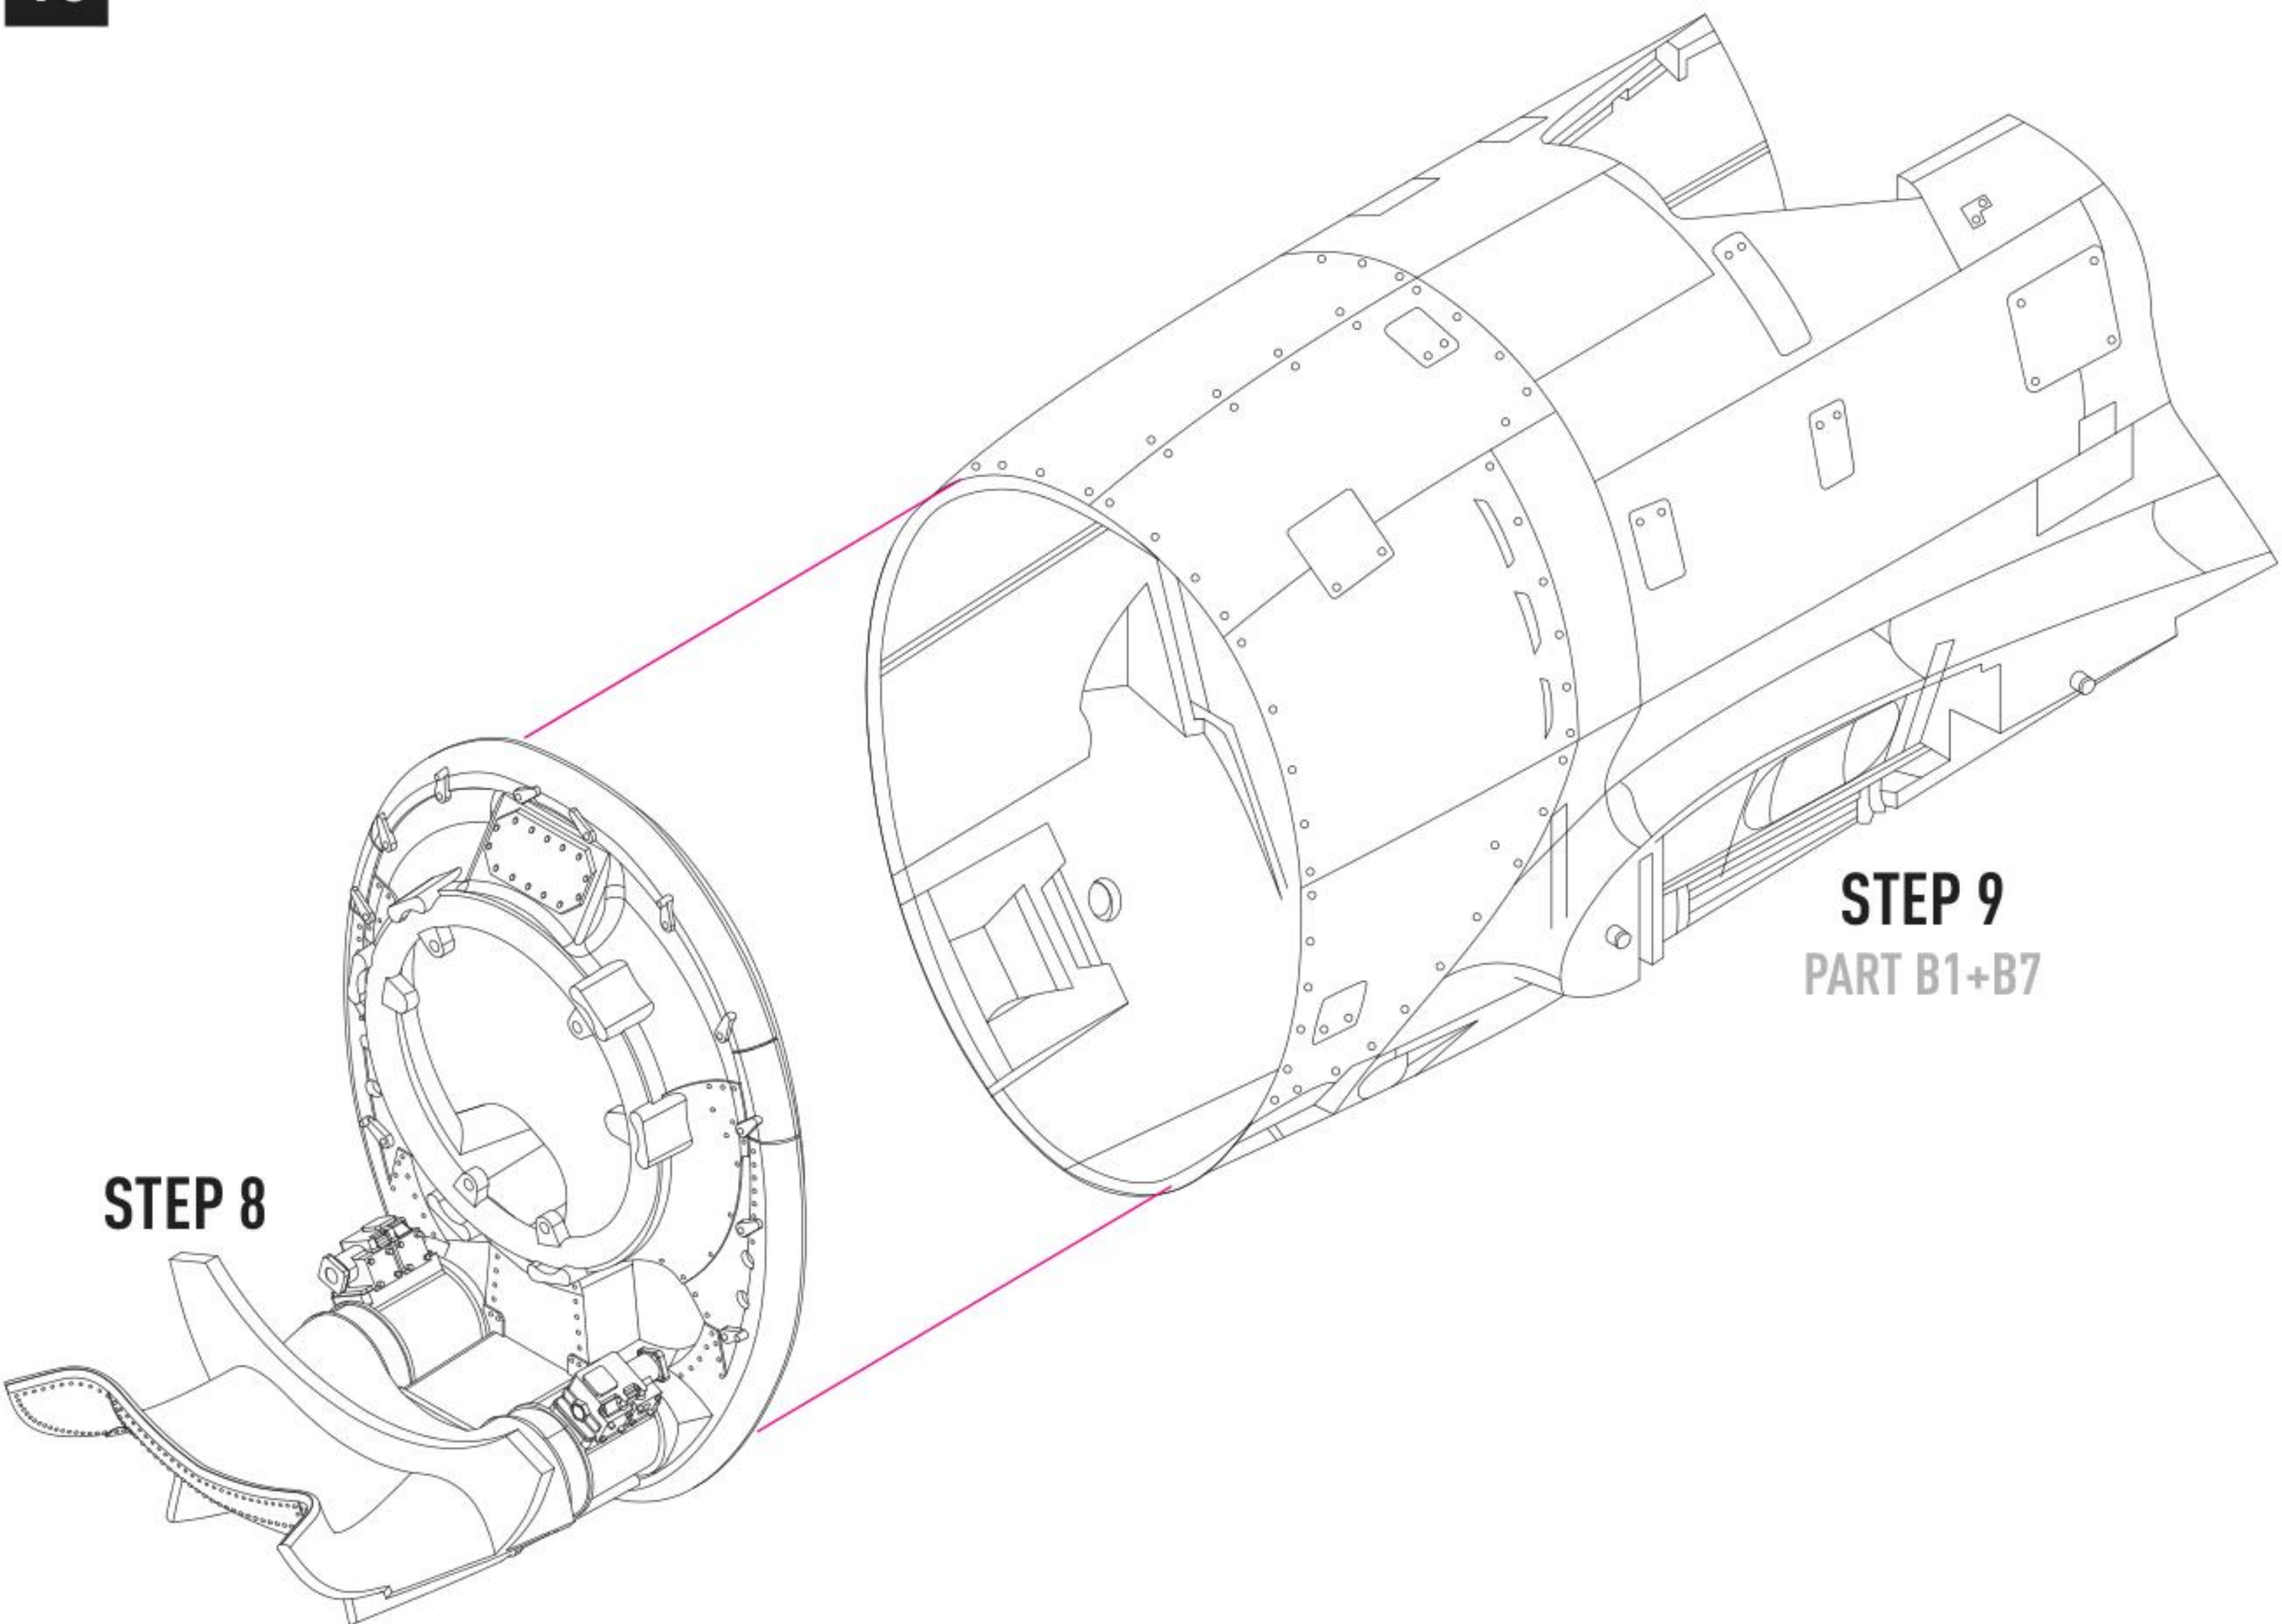


11 FUSELAGE ARE NOT SHOWN

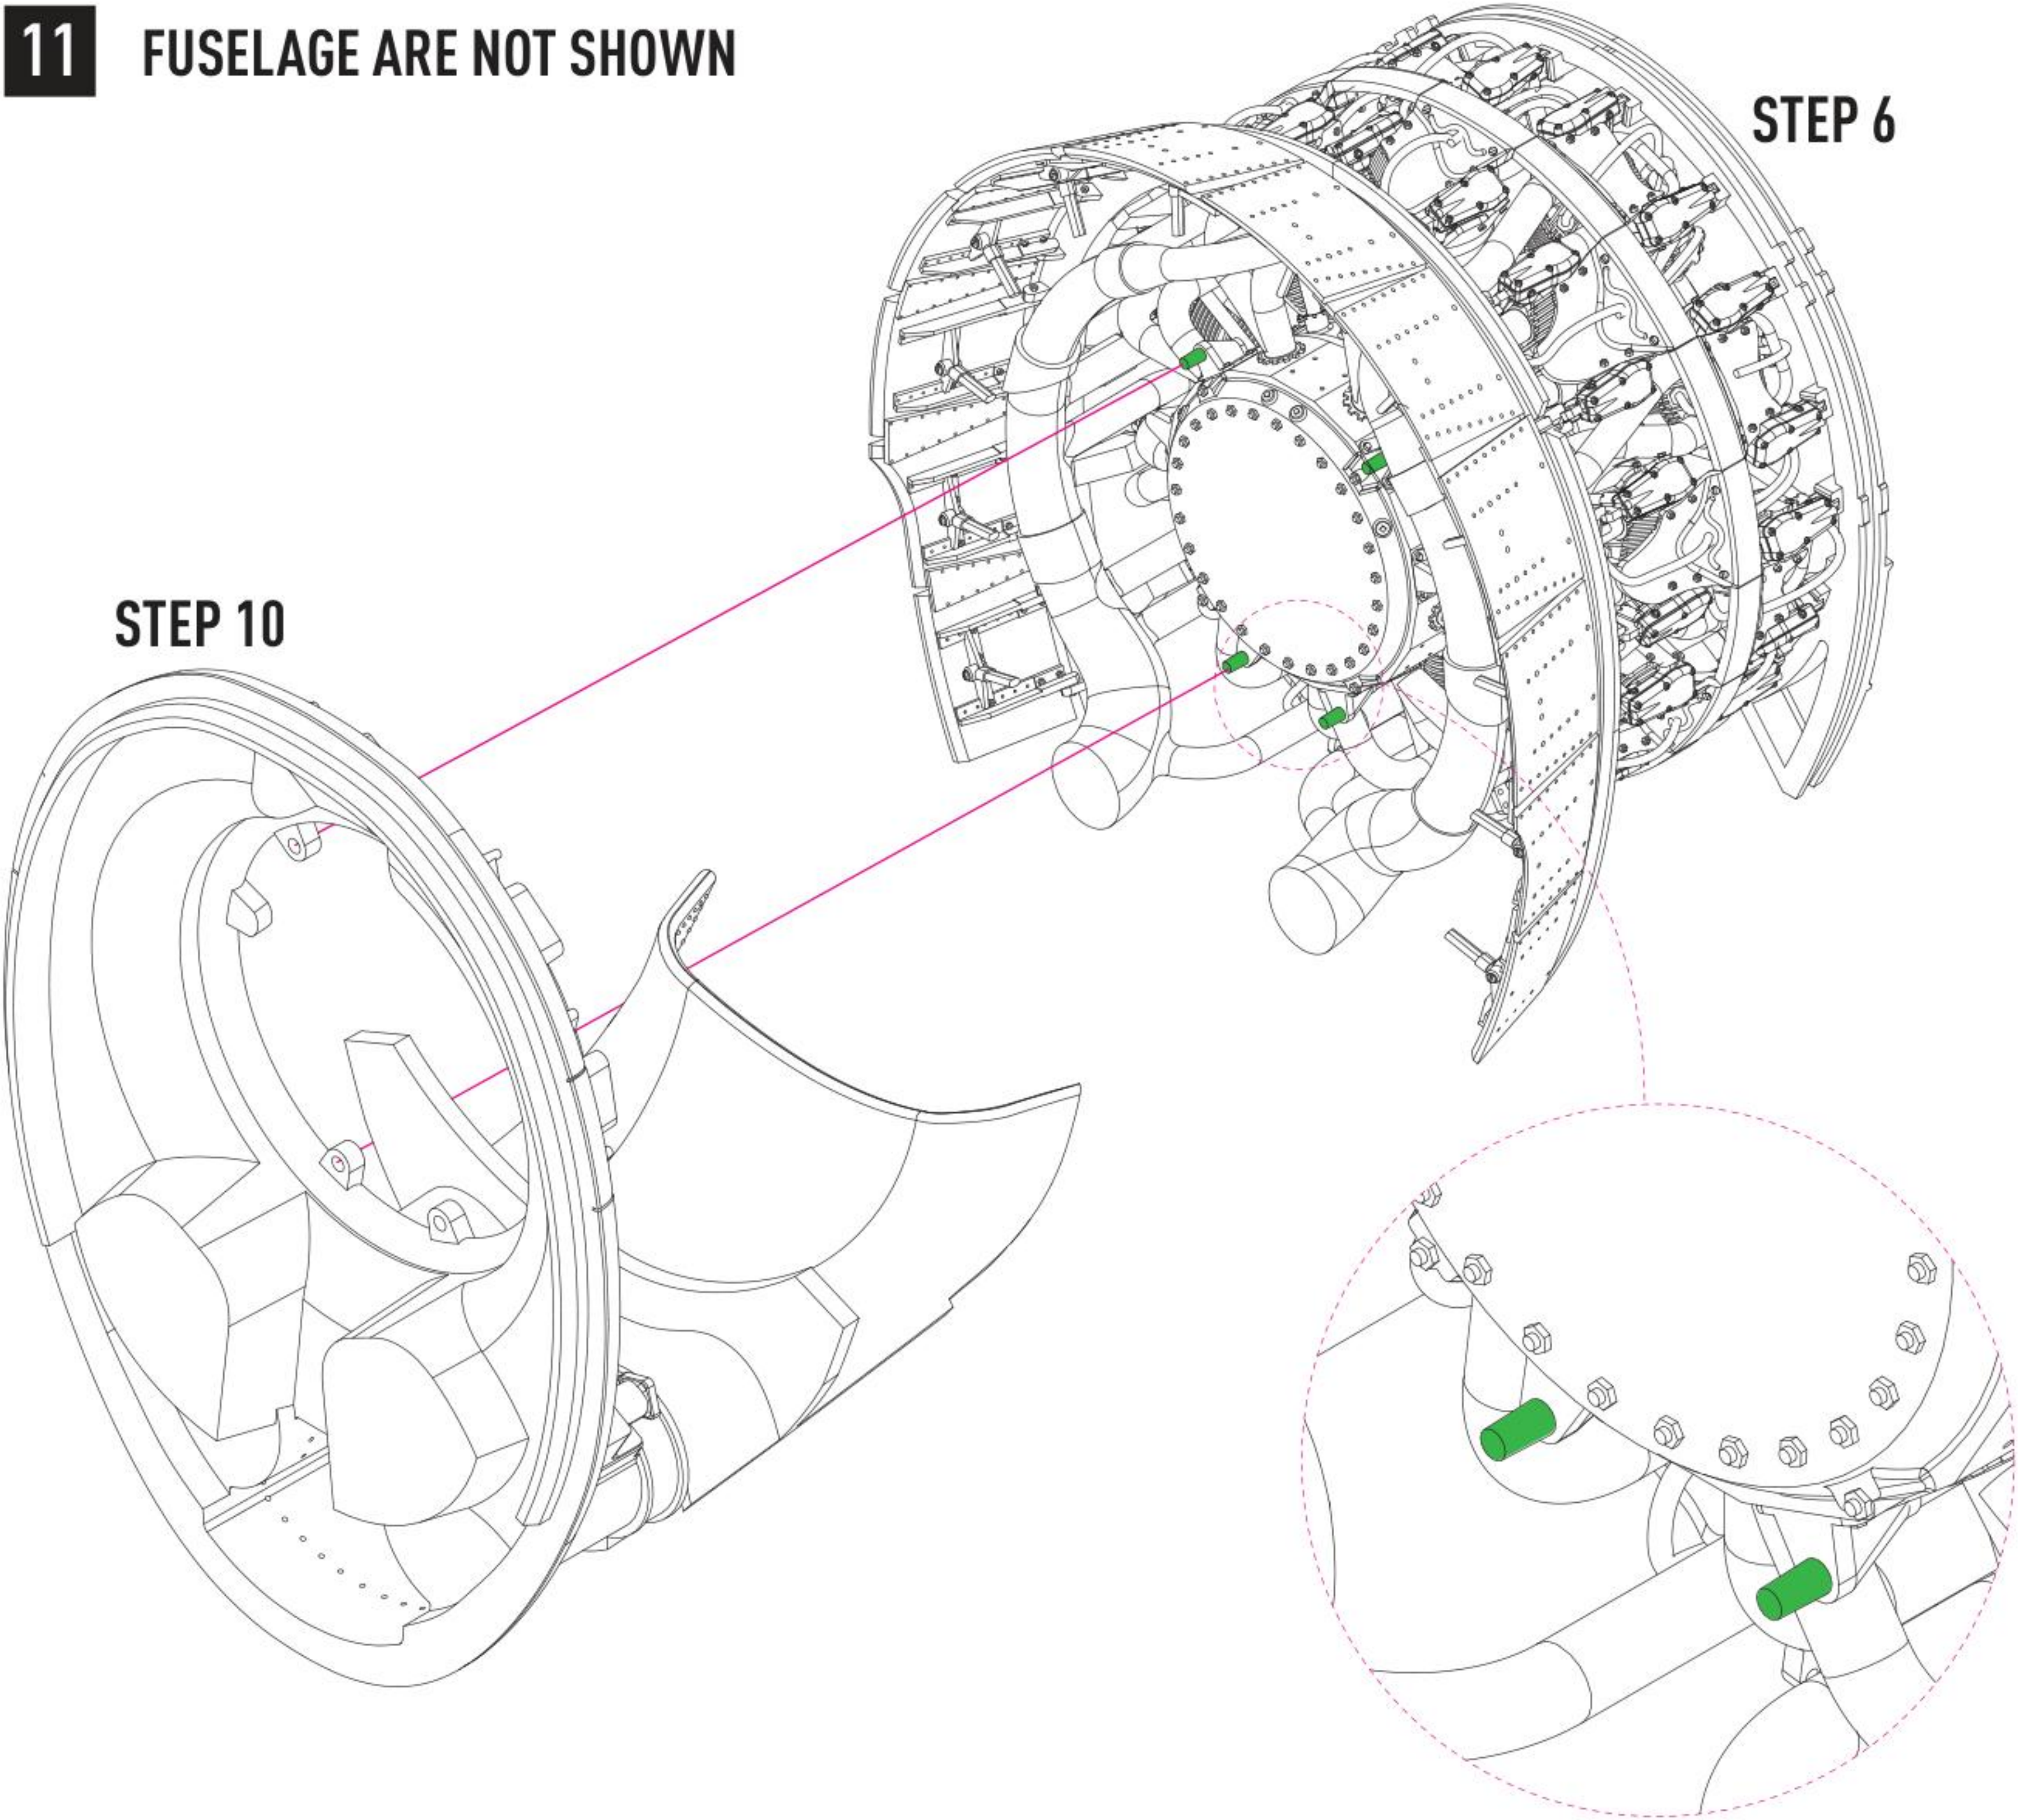


12


**R15 - DO NOT GLUE
INSERT ALL THE WAY IN**

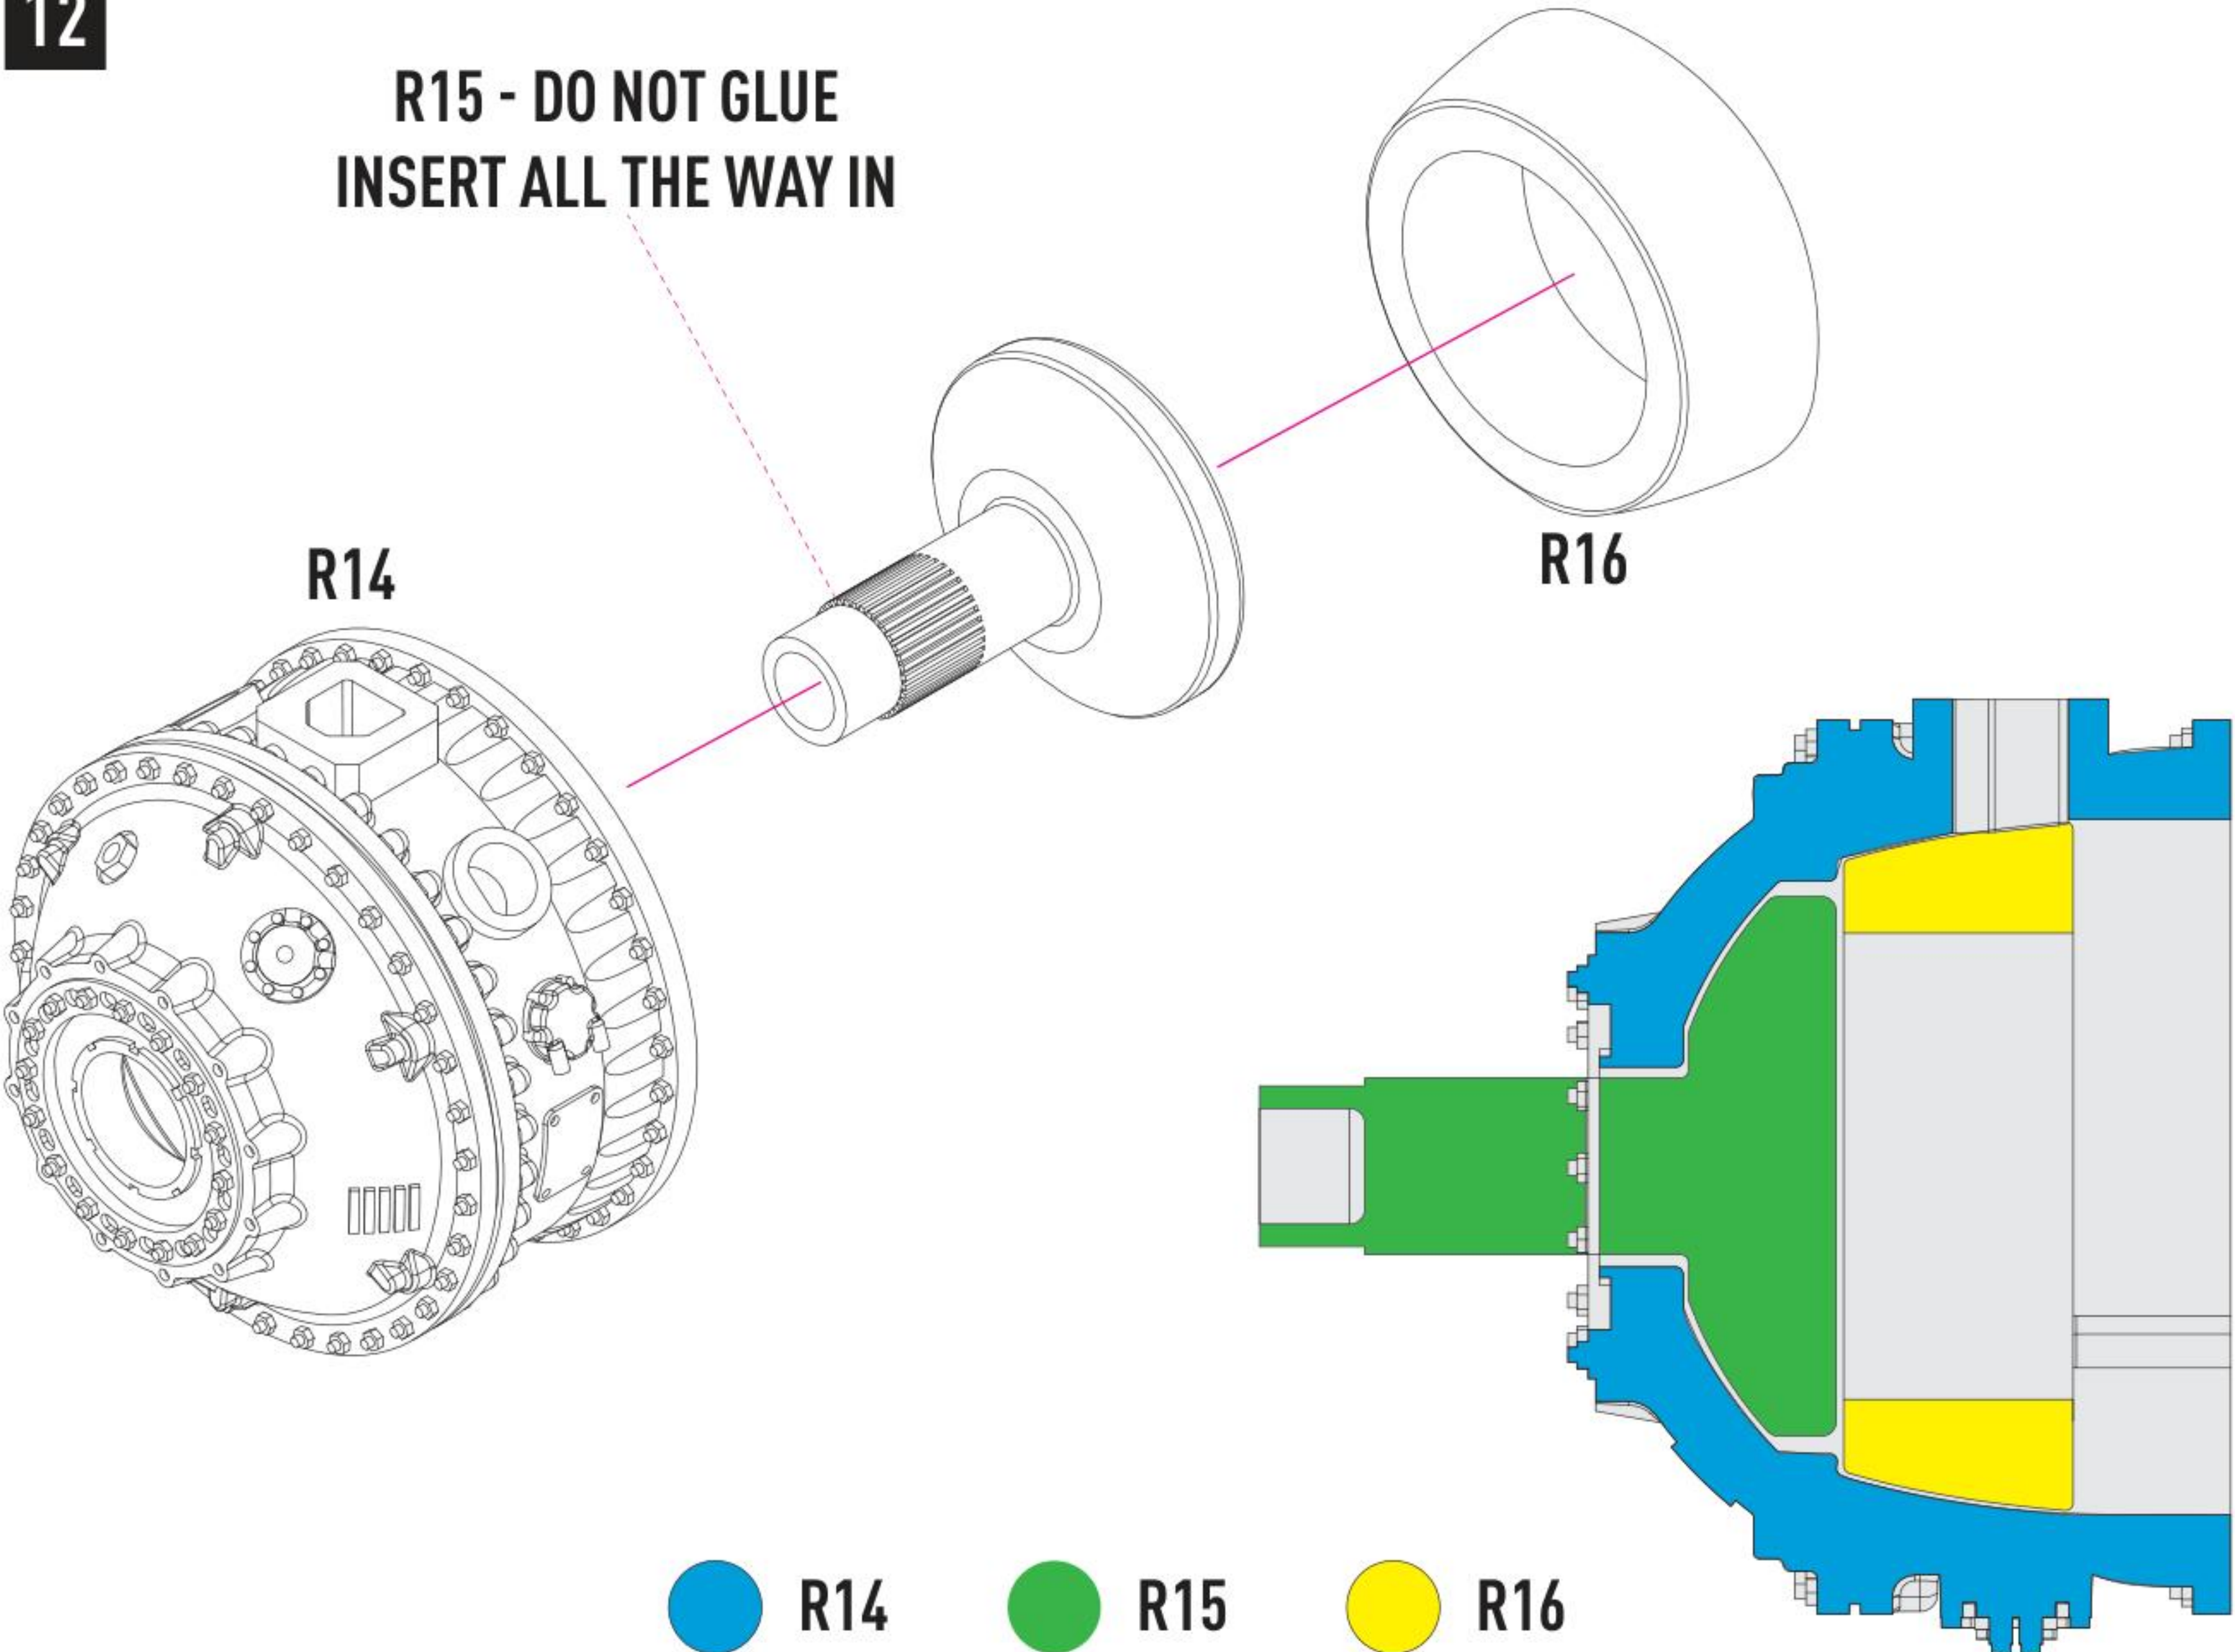


13

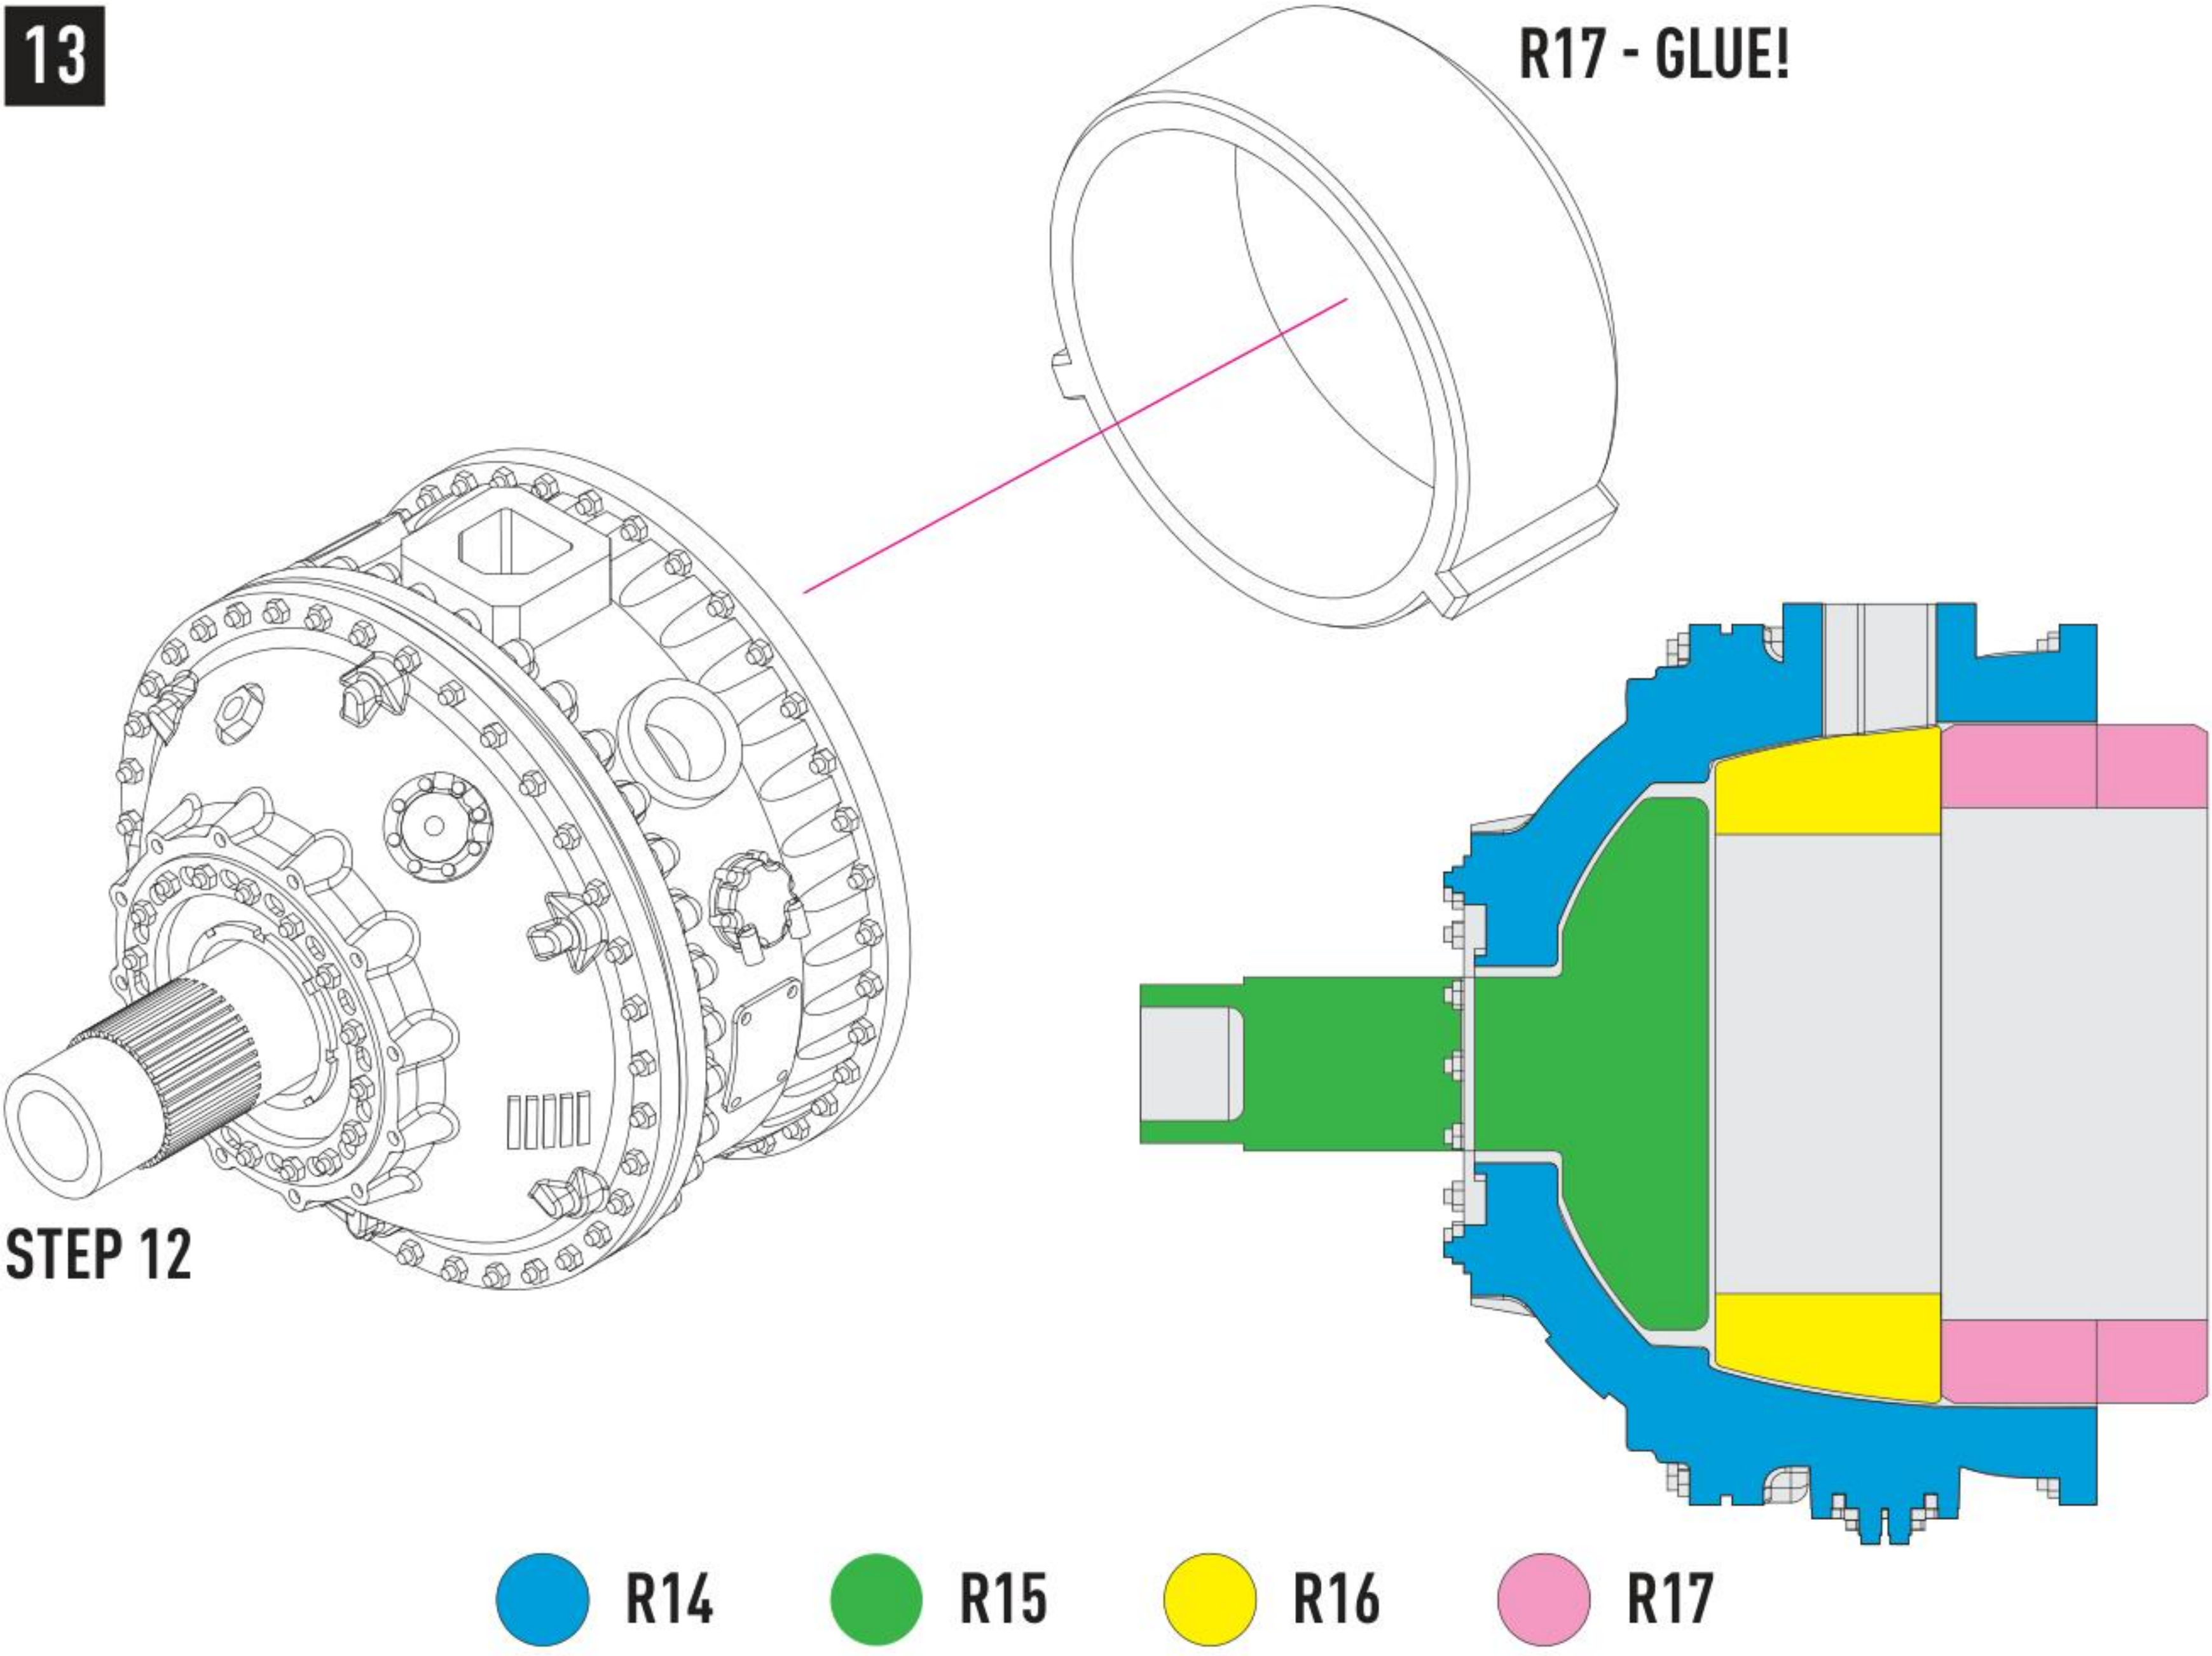


14



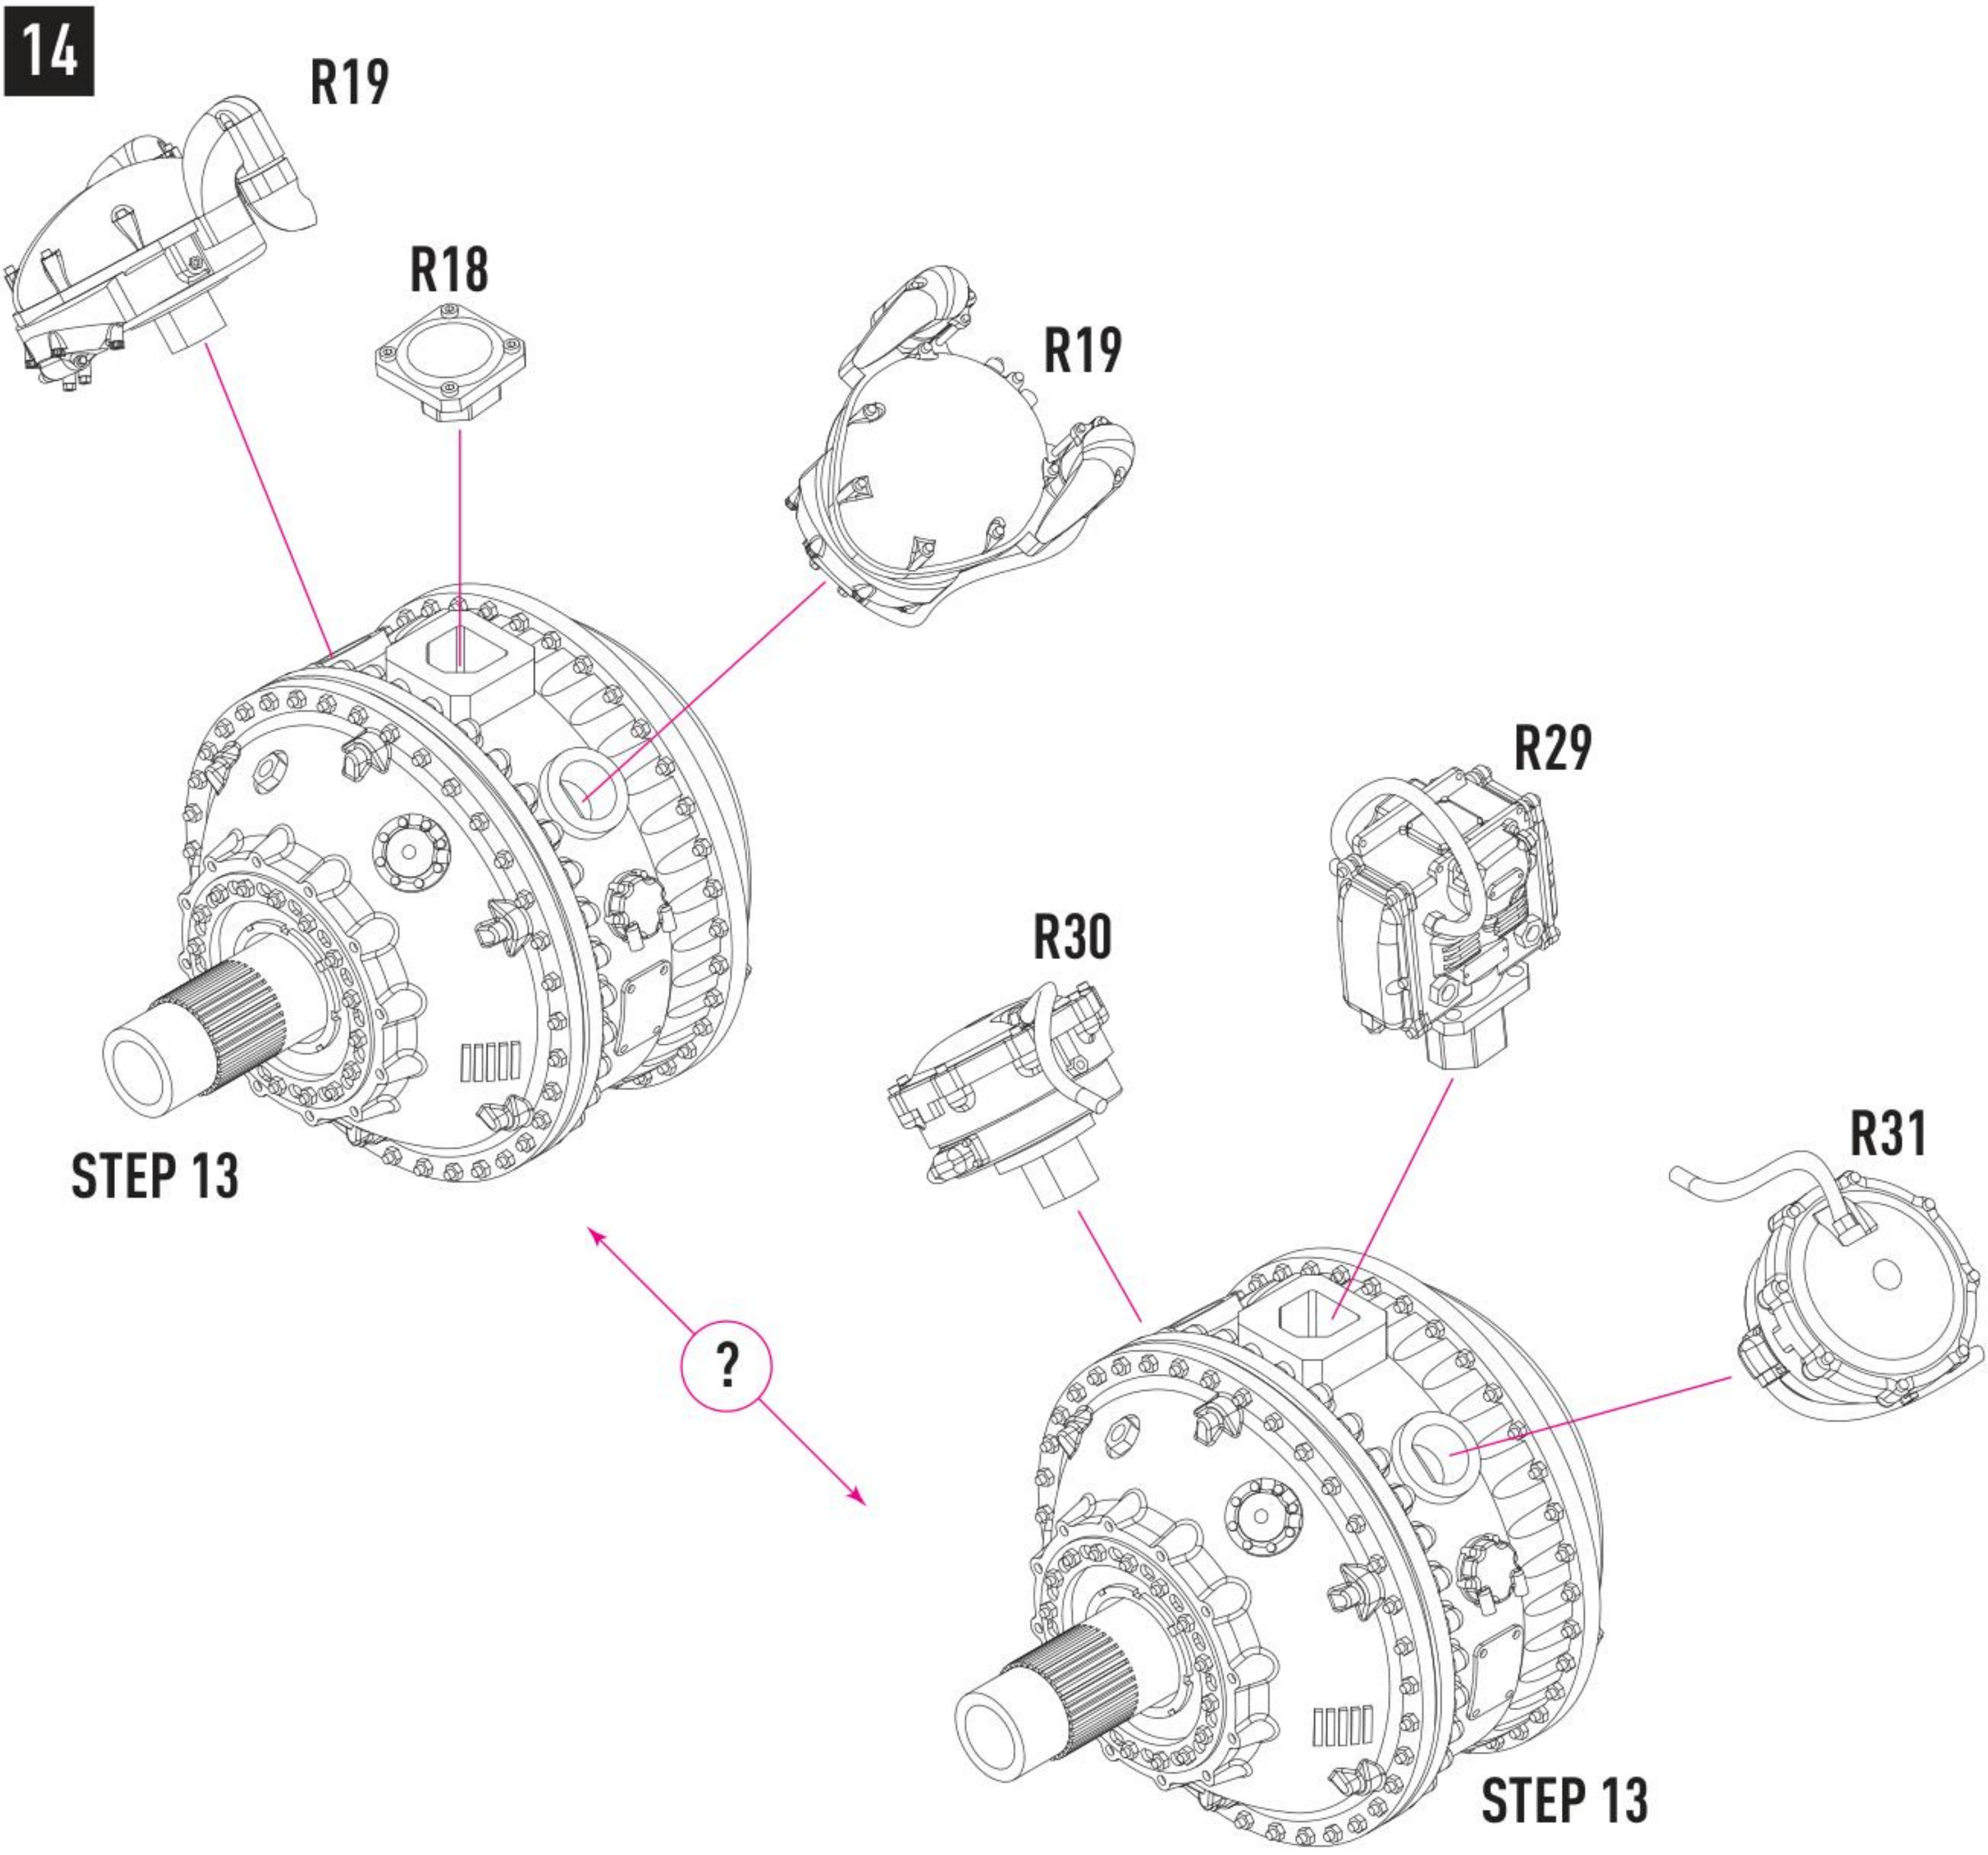


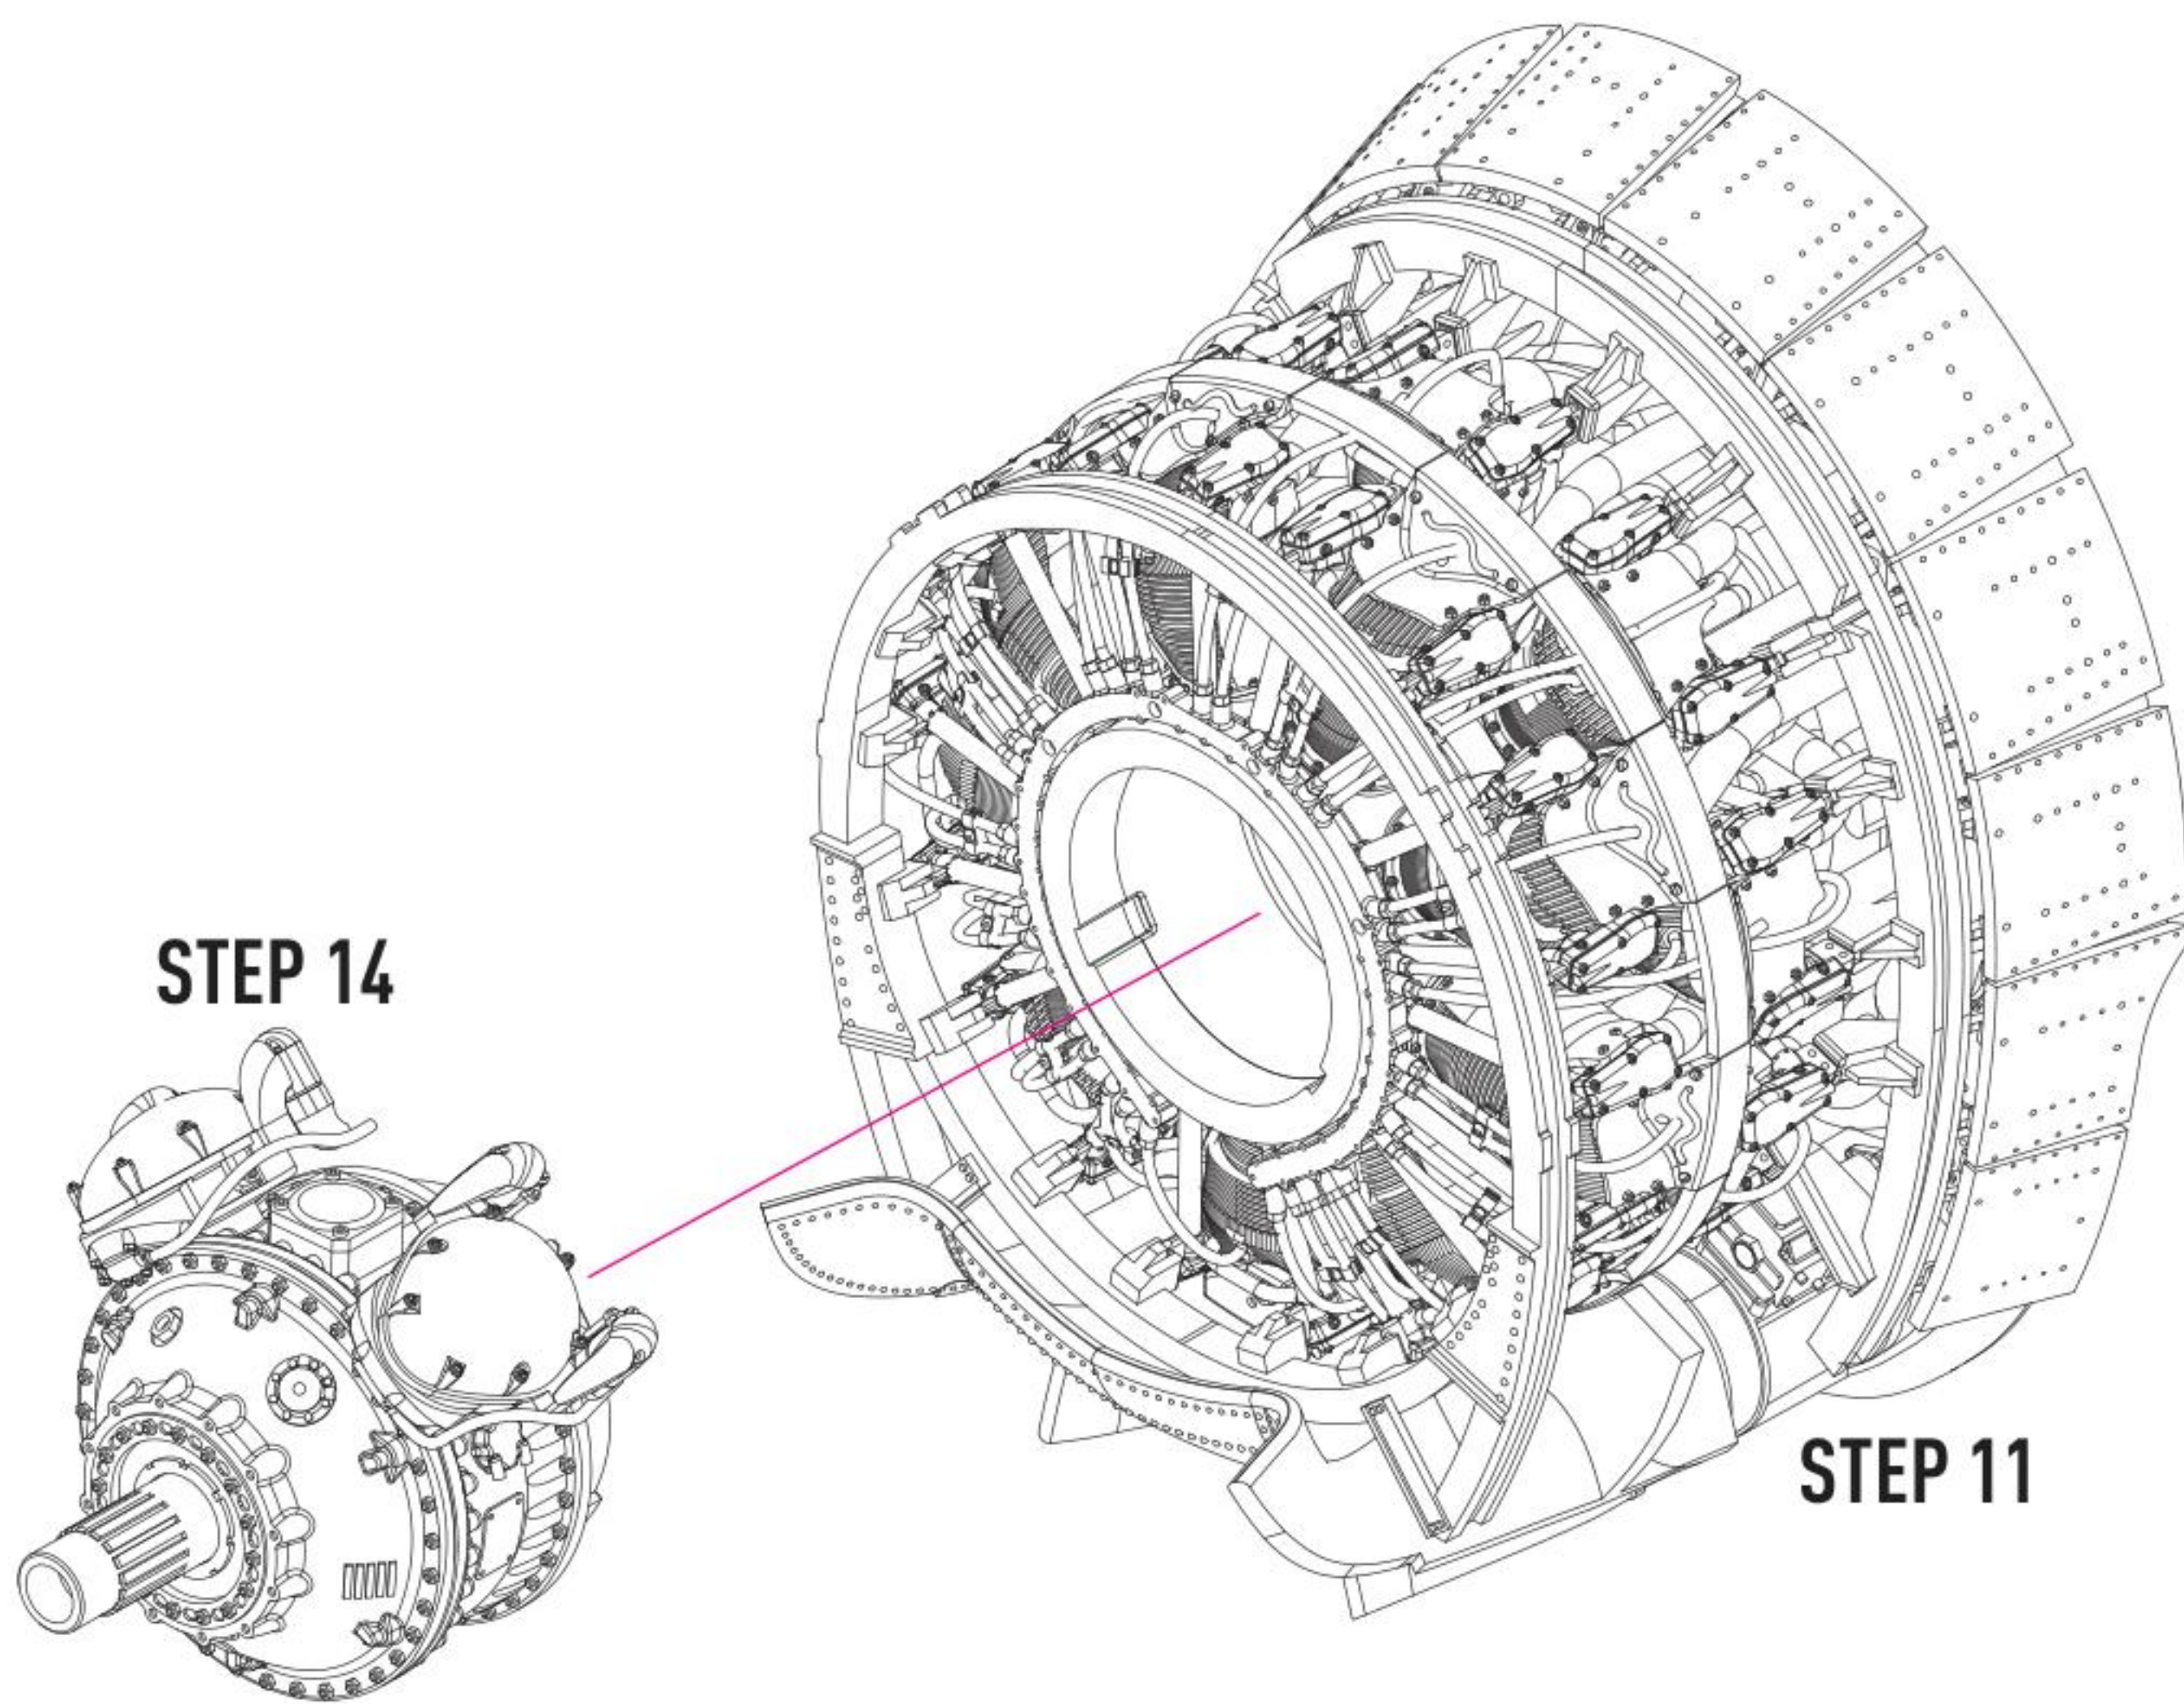


16 PART 12 ARE NOT SHOWN IN THIS STEP


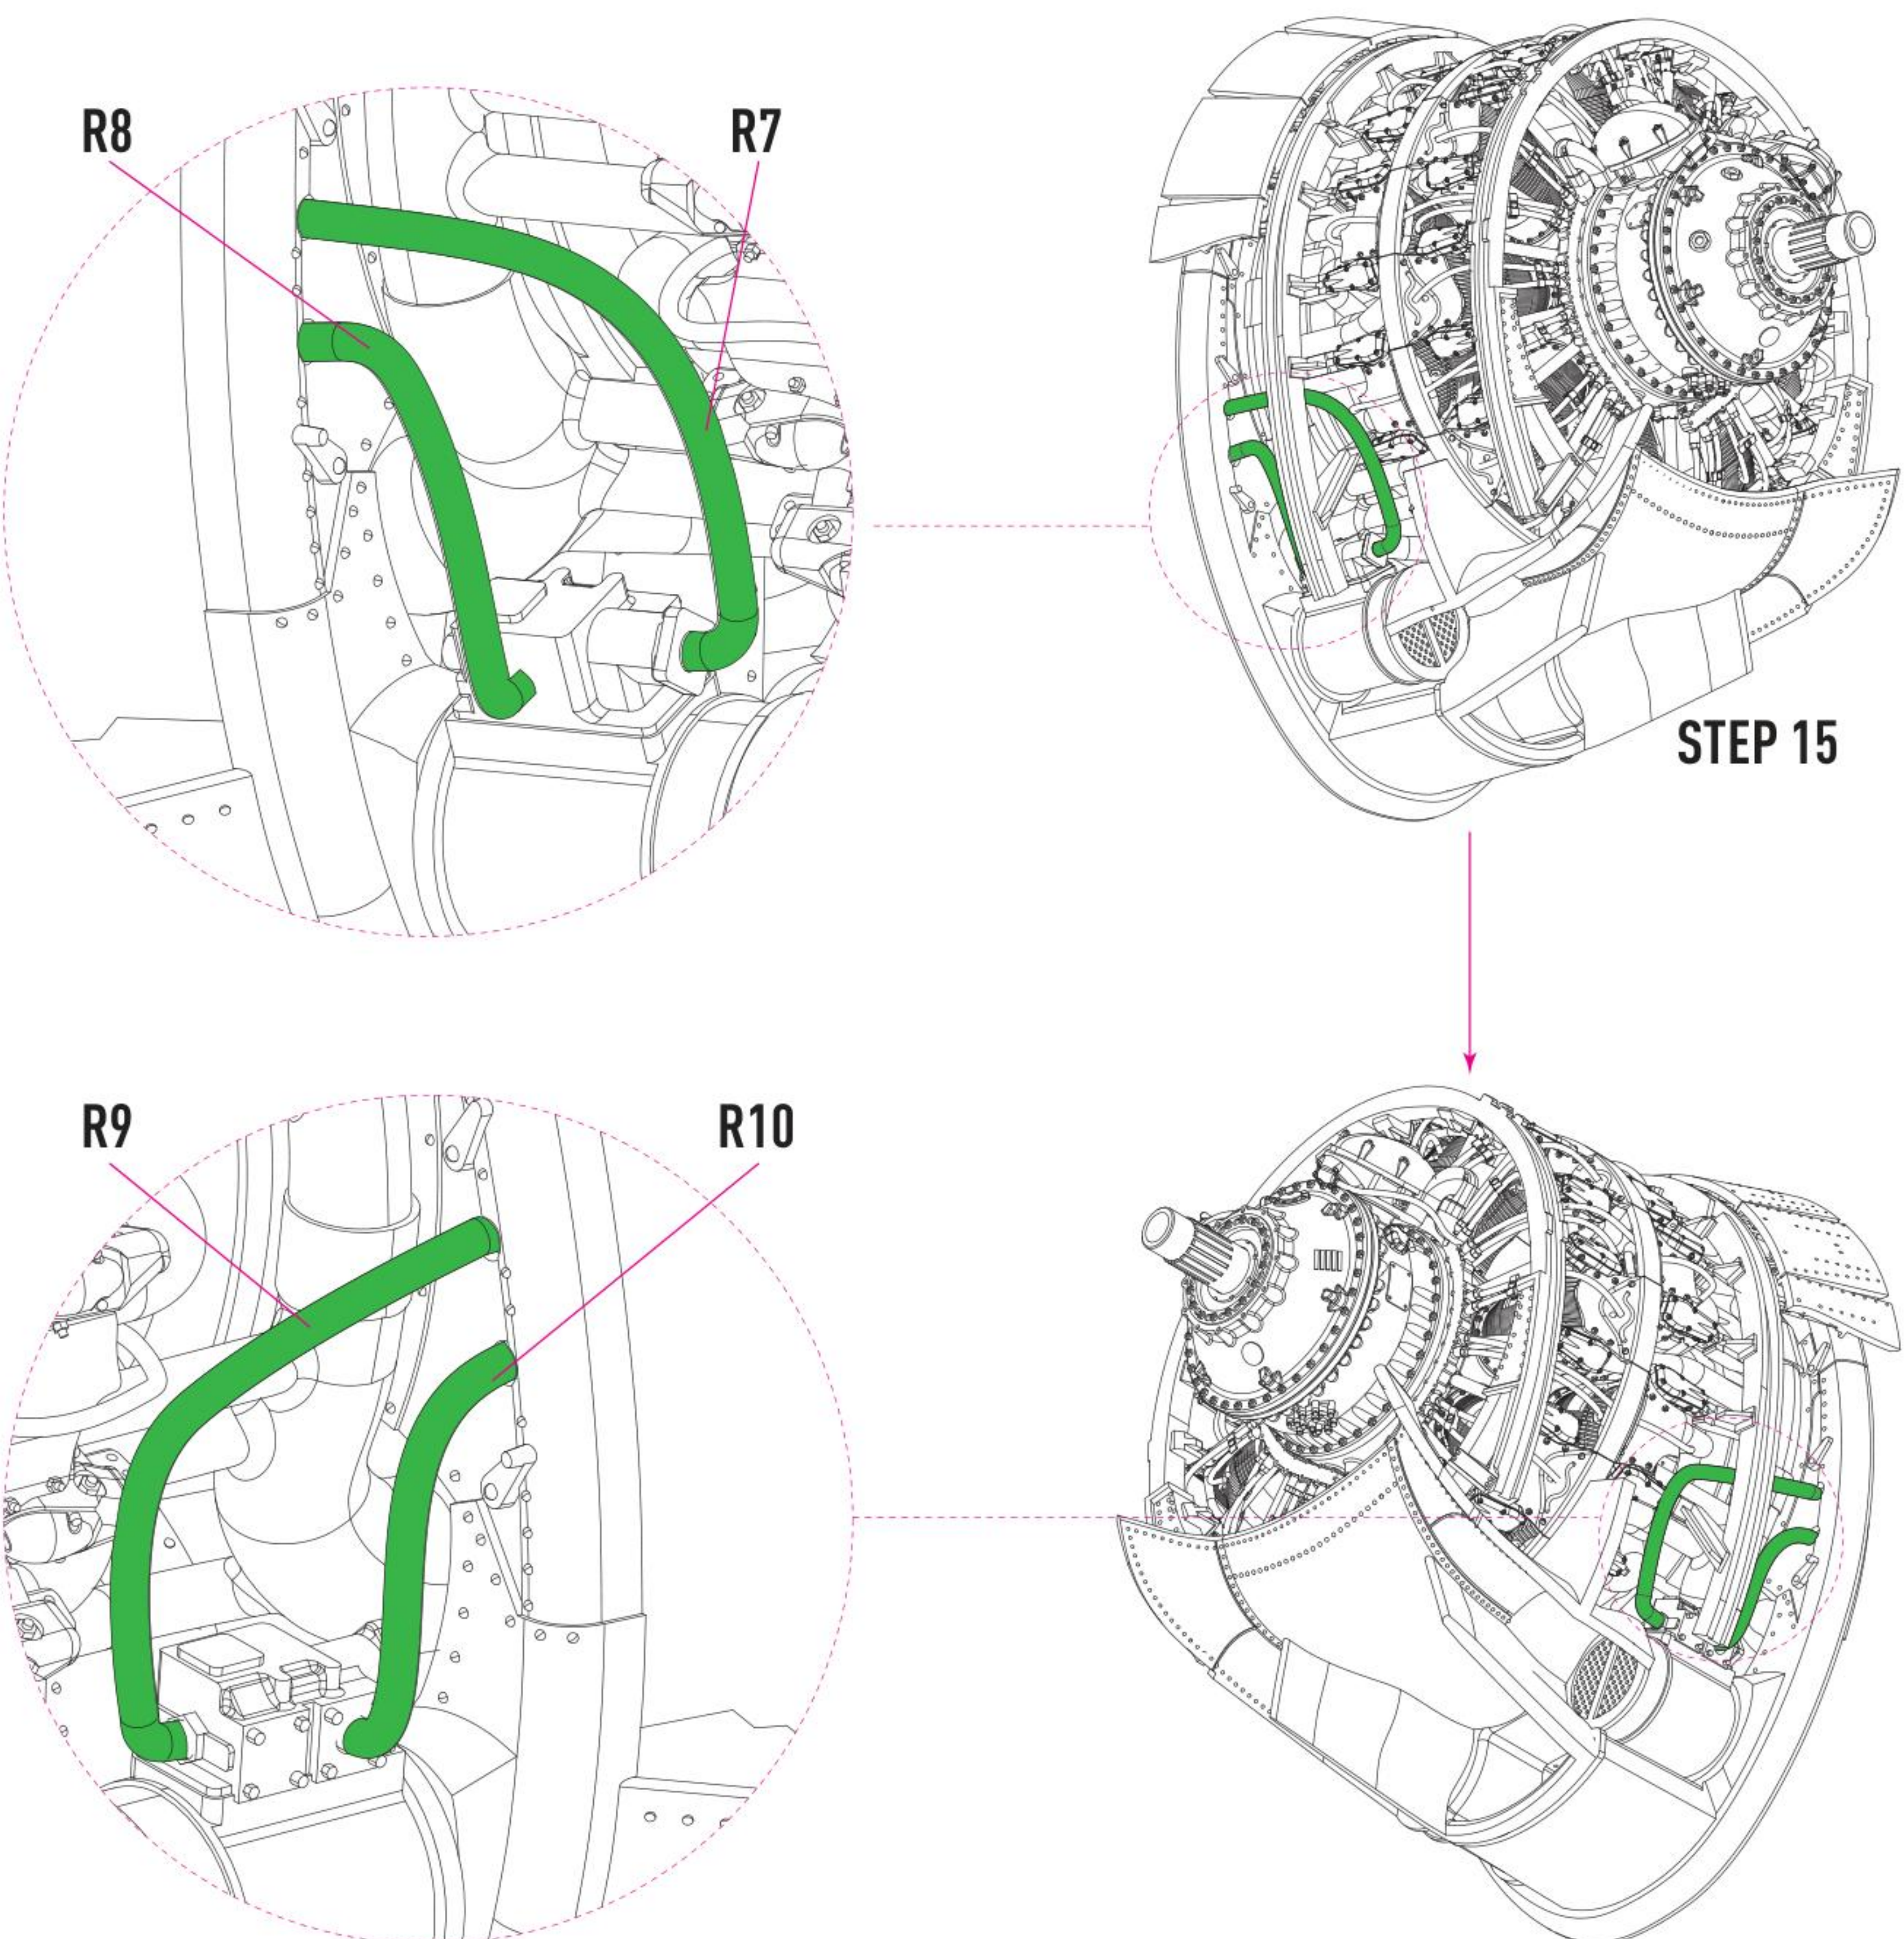


USE WIRE
D=0.3-0.4 MM

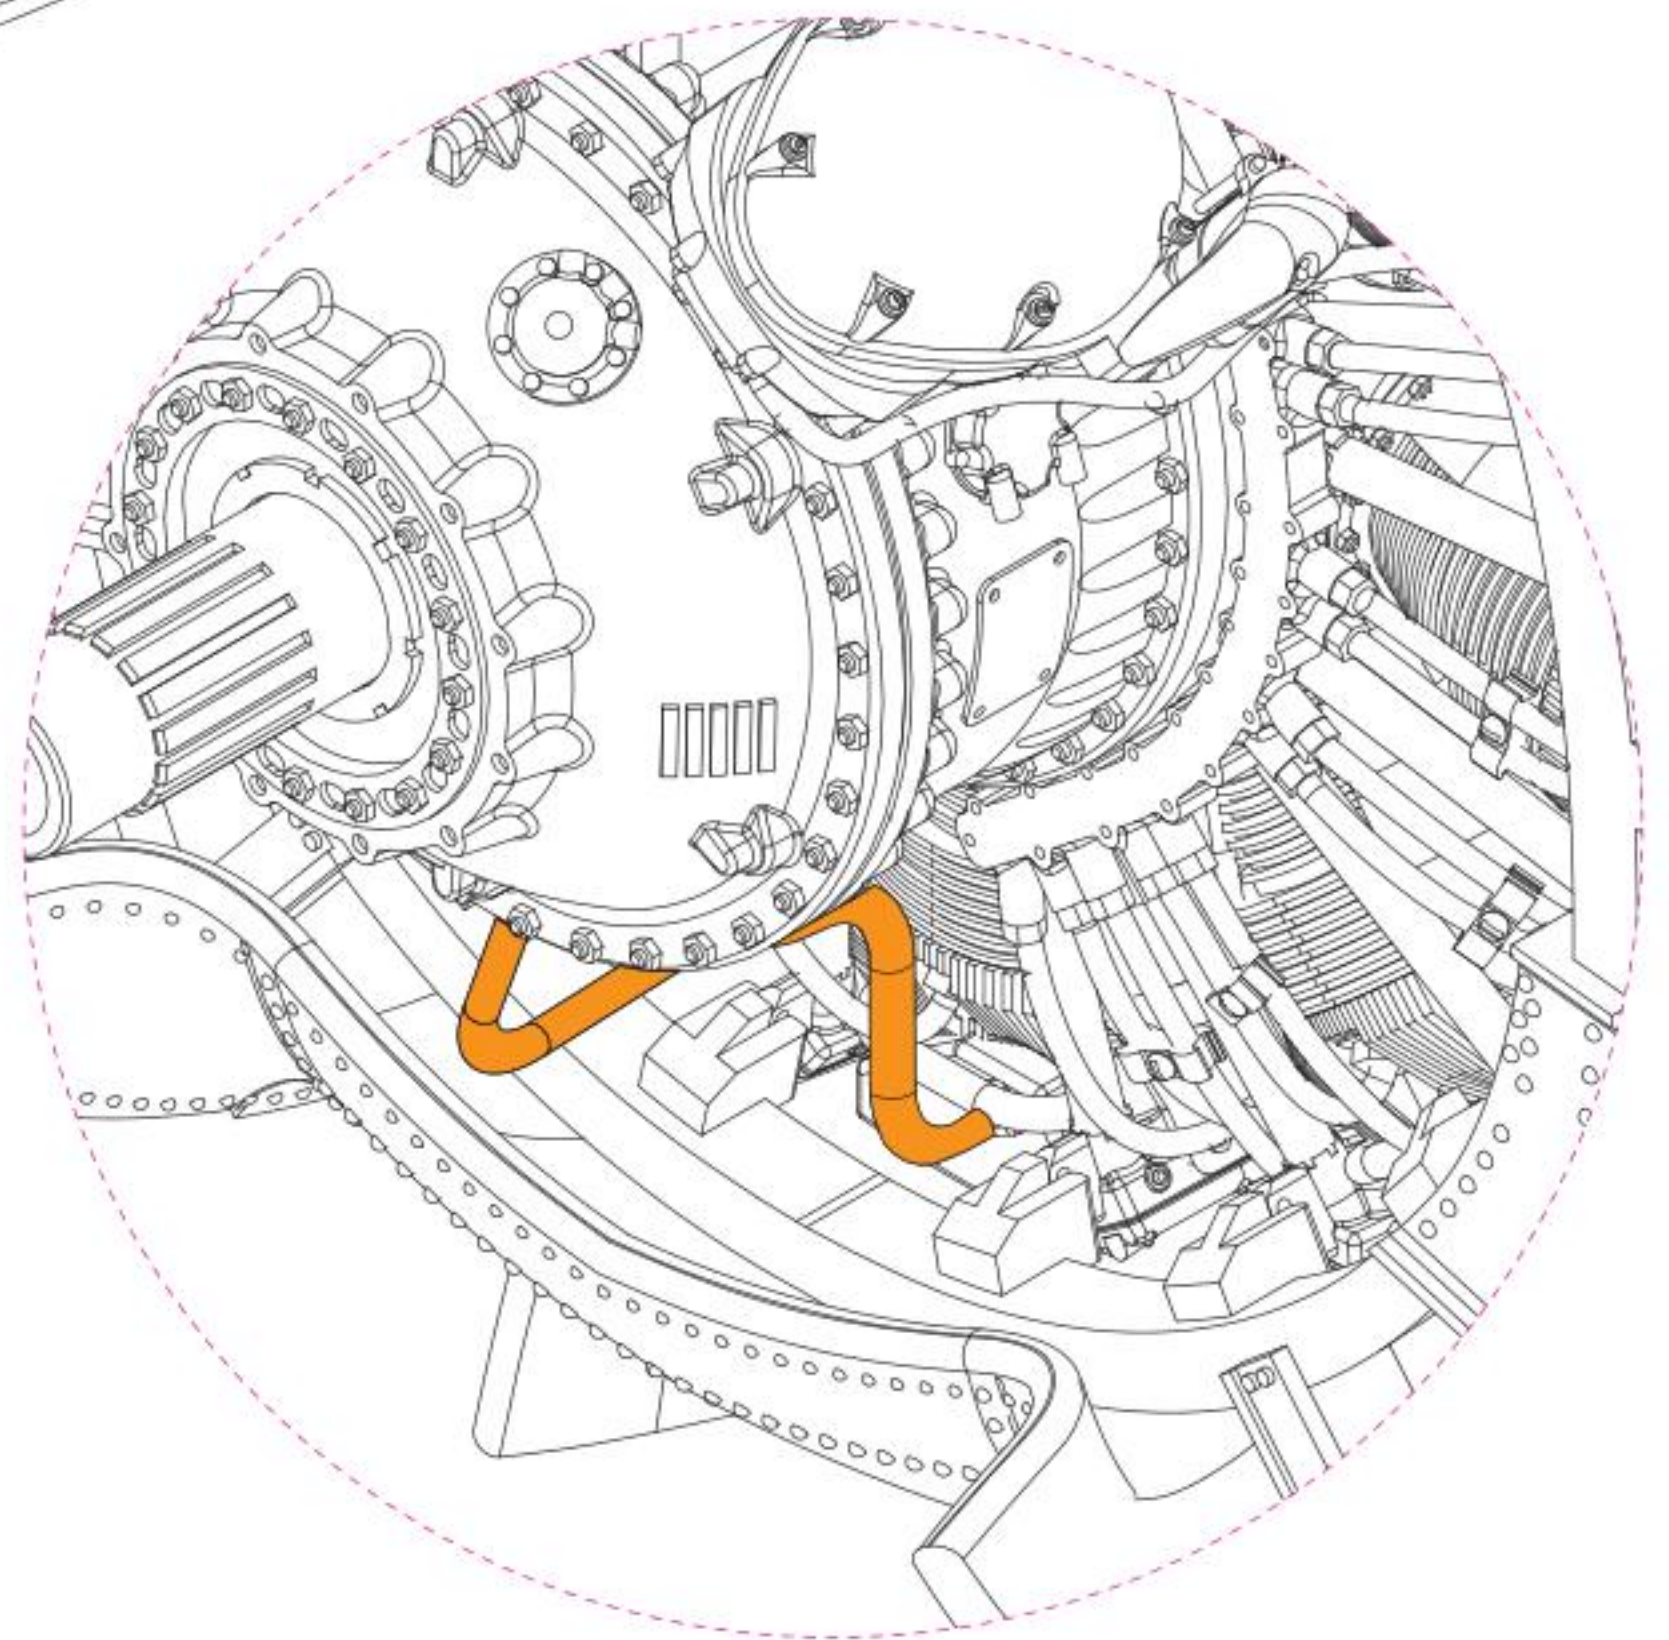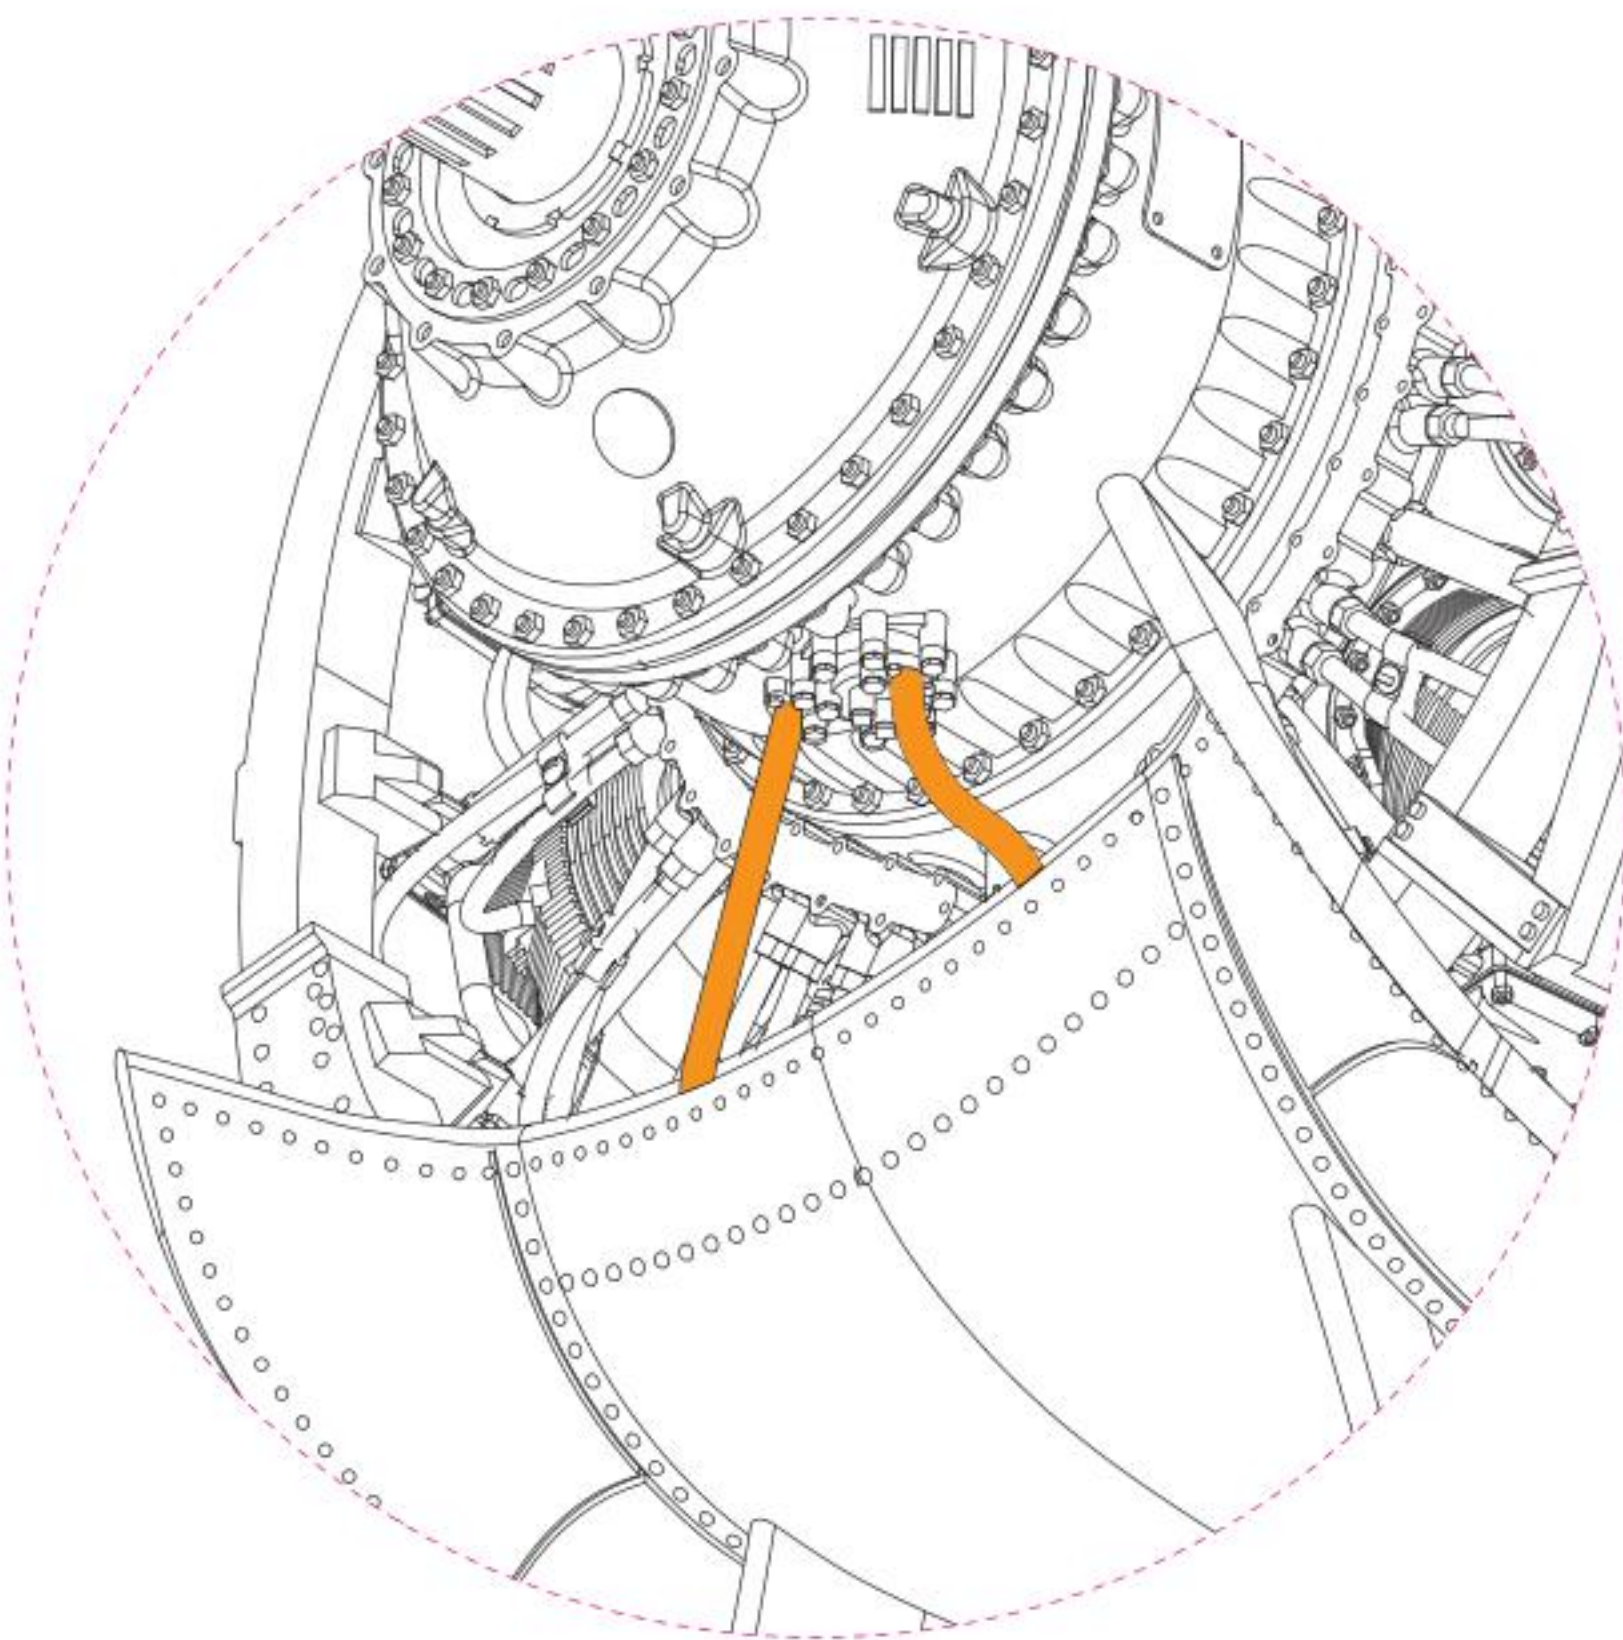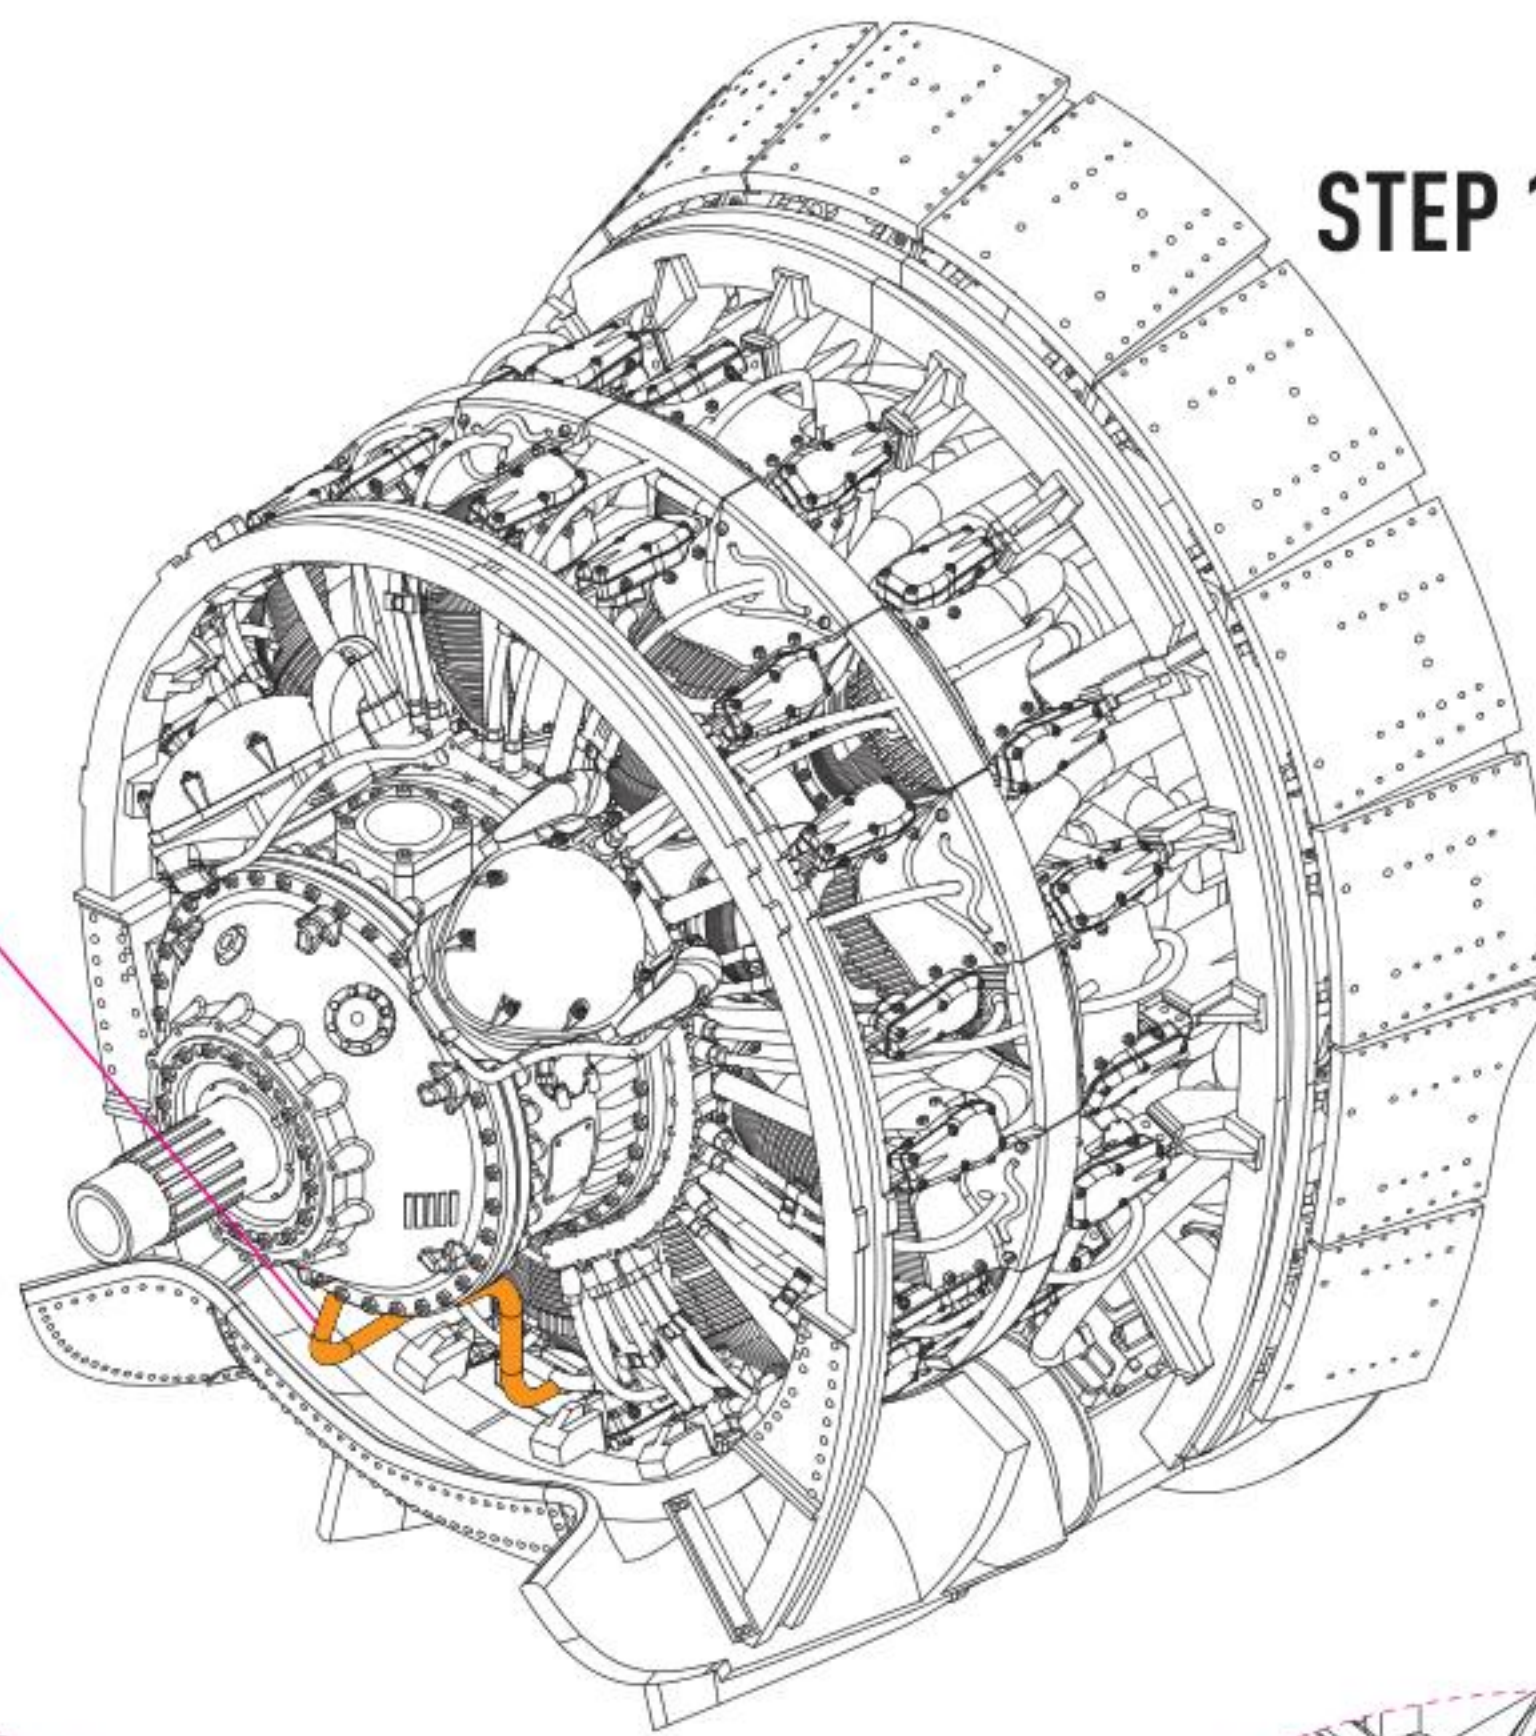


R22

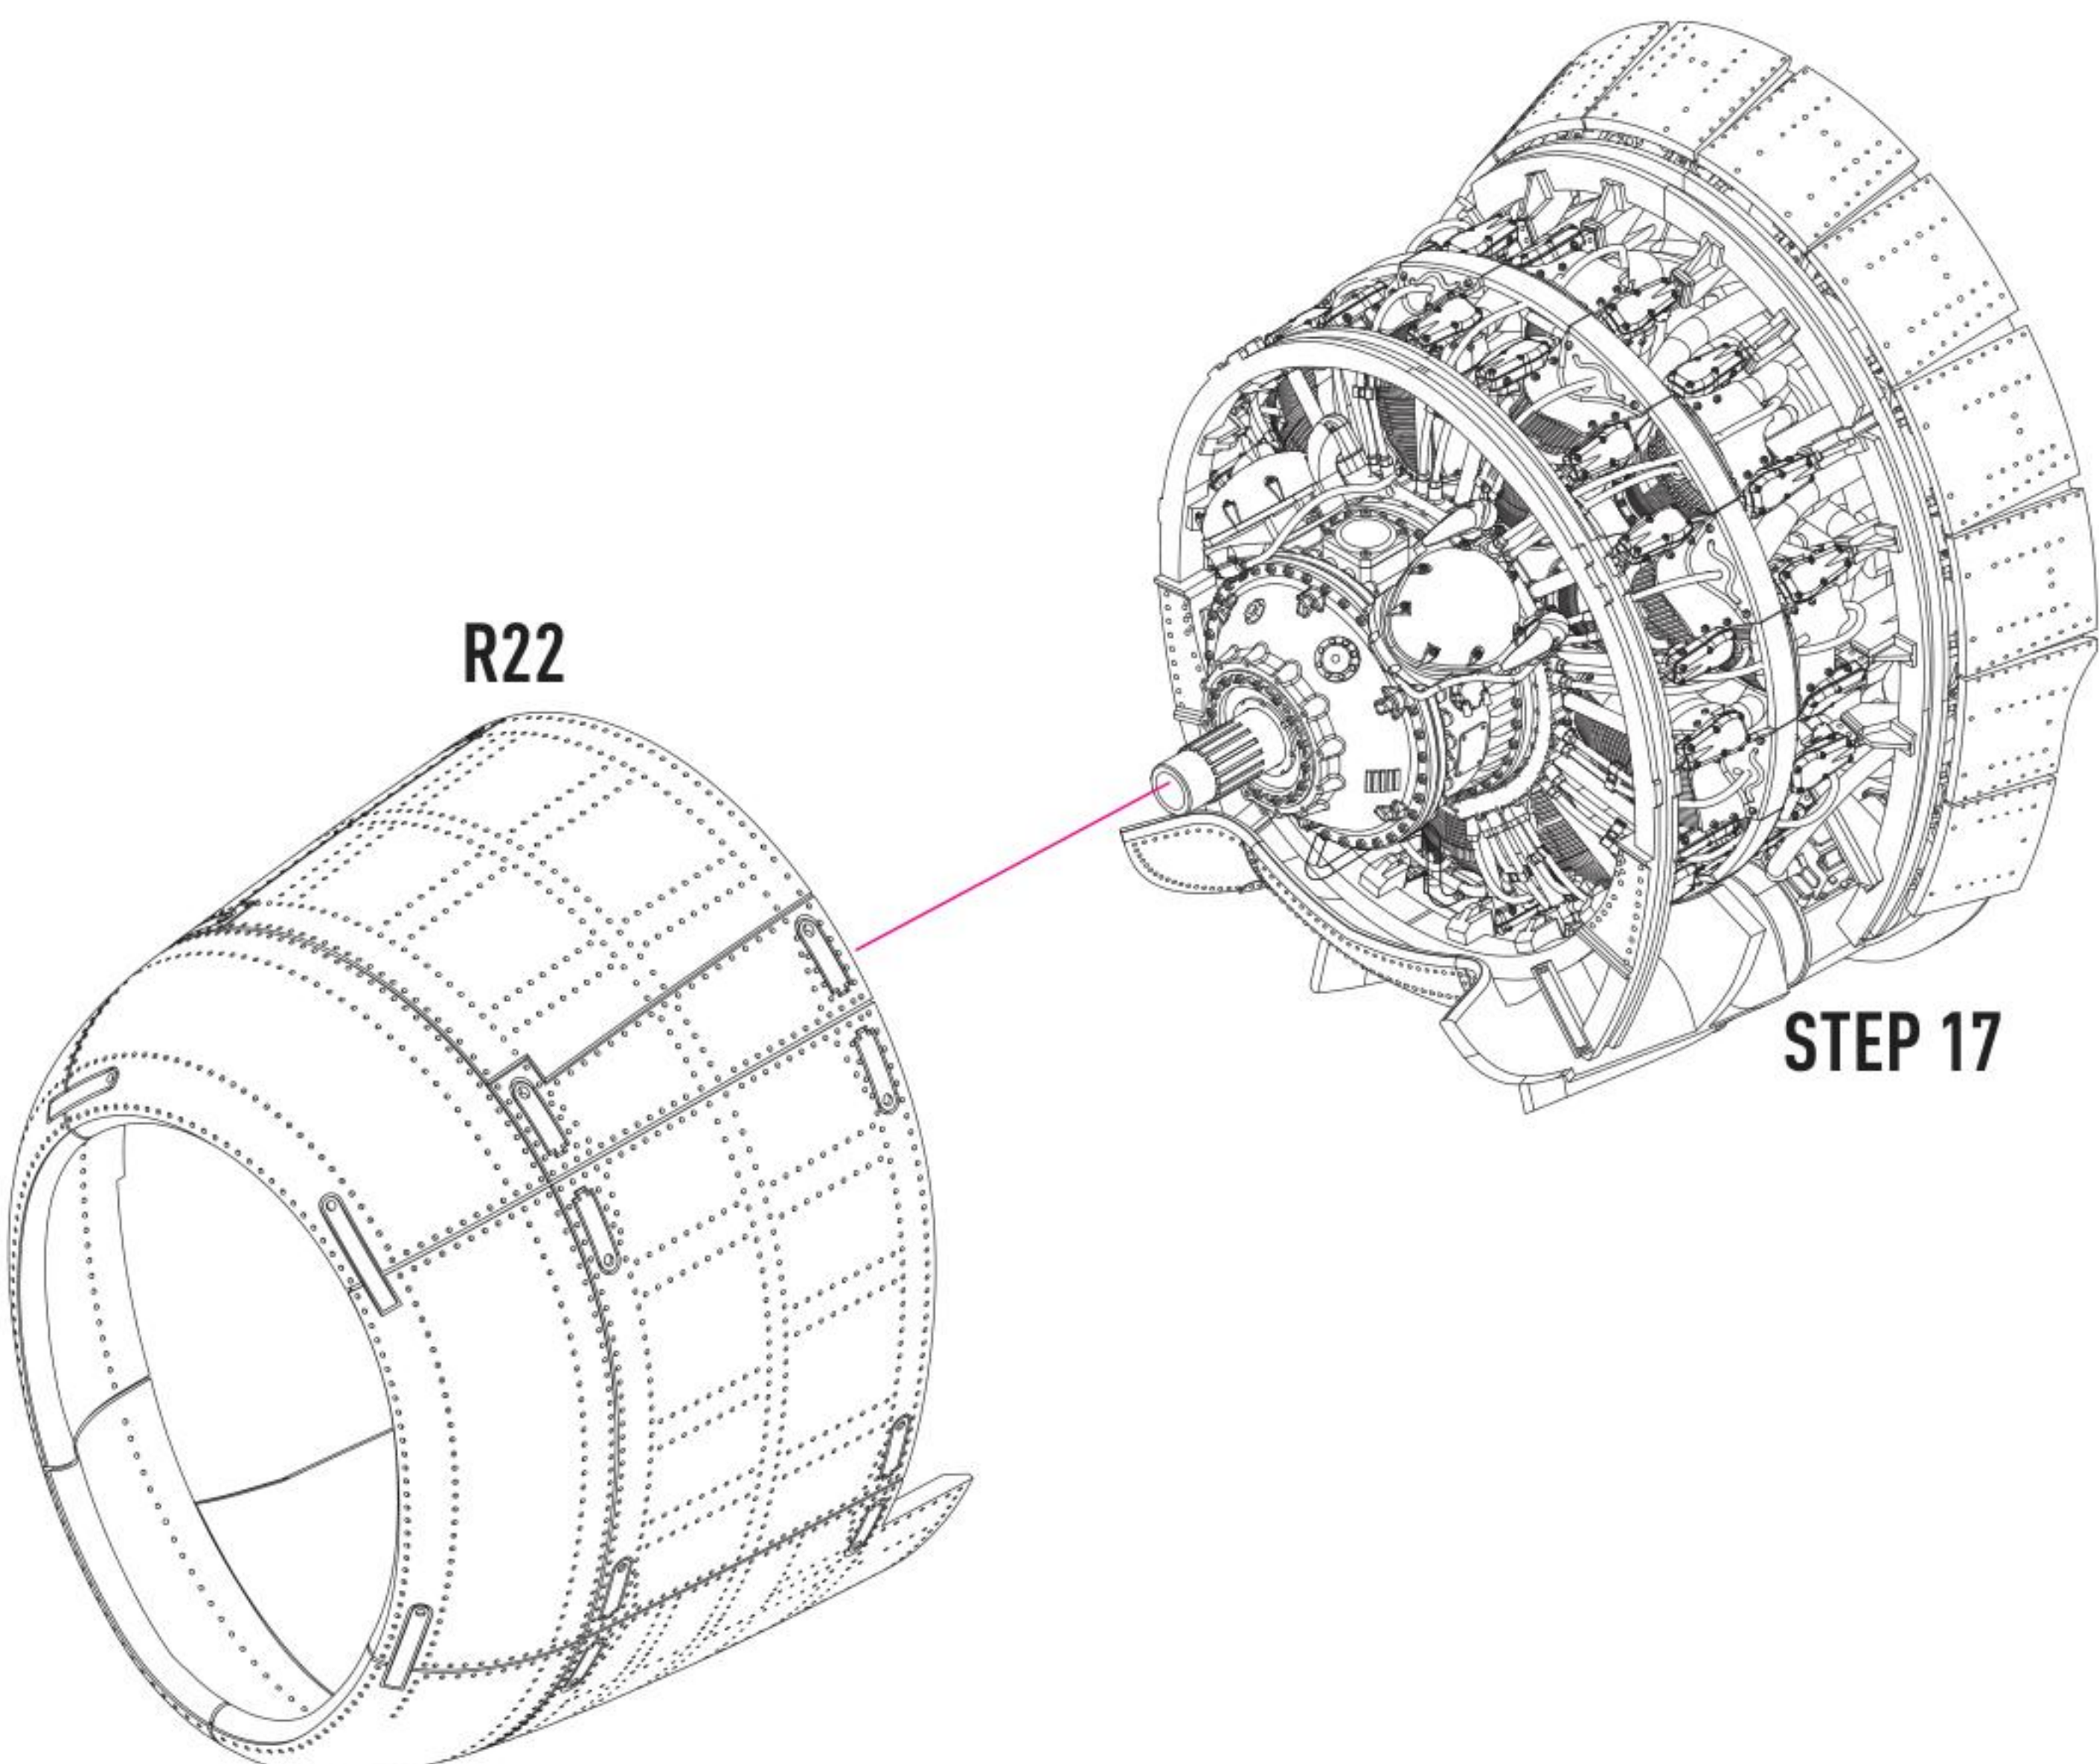

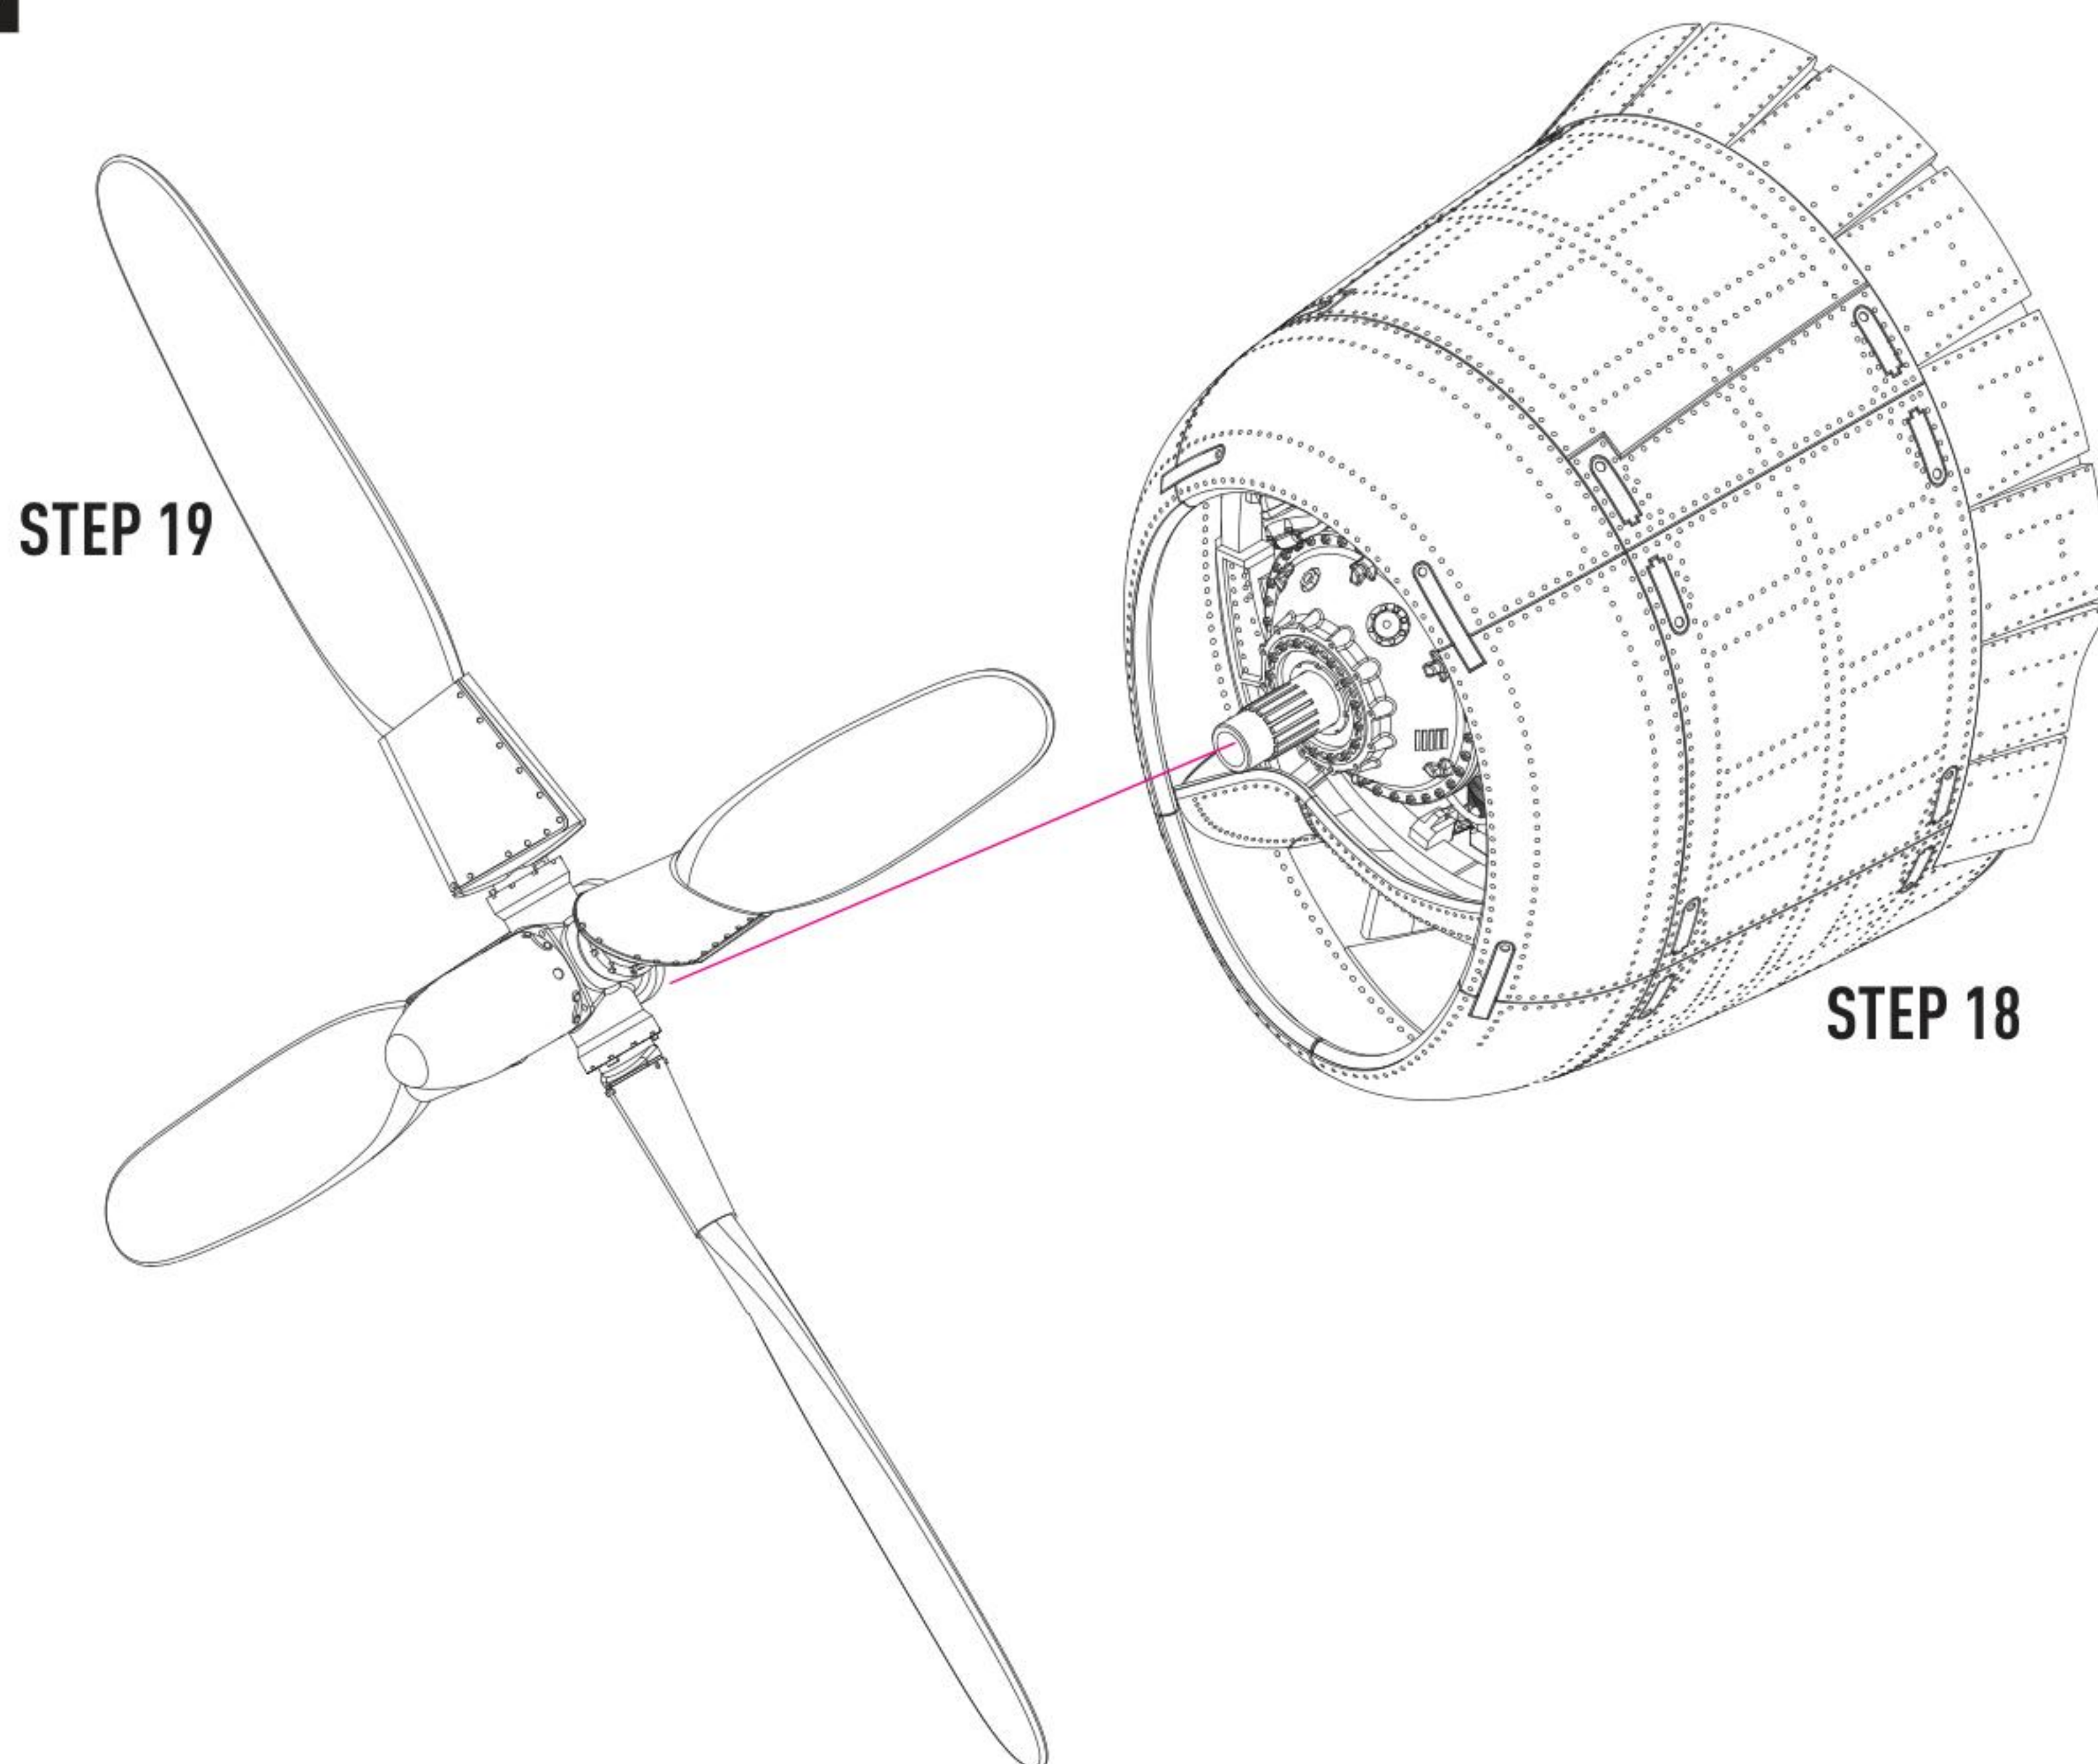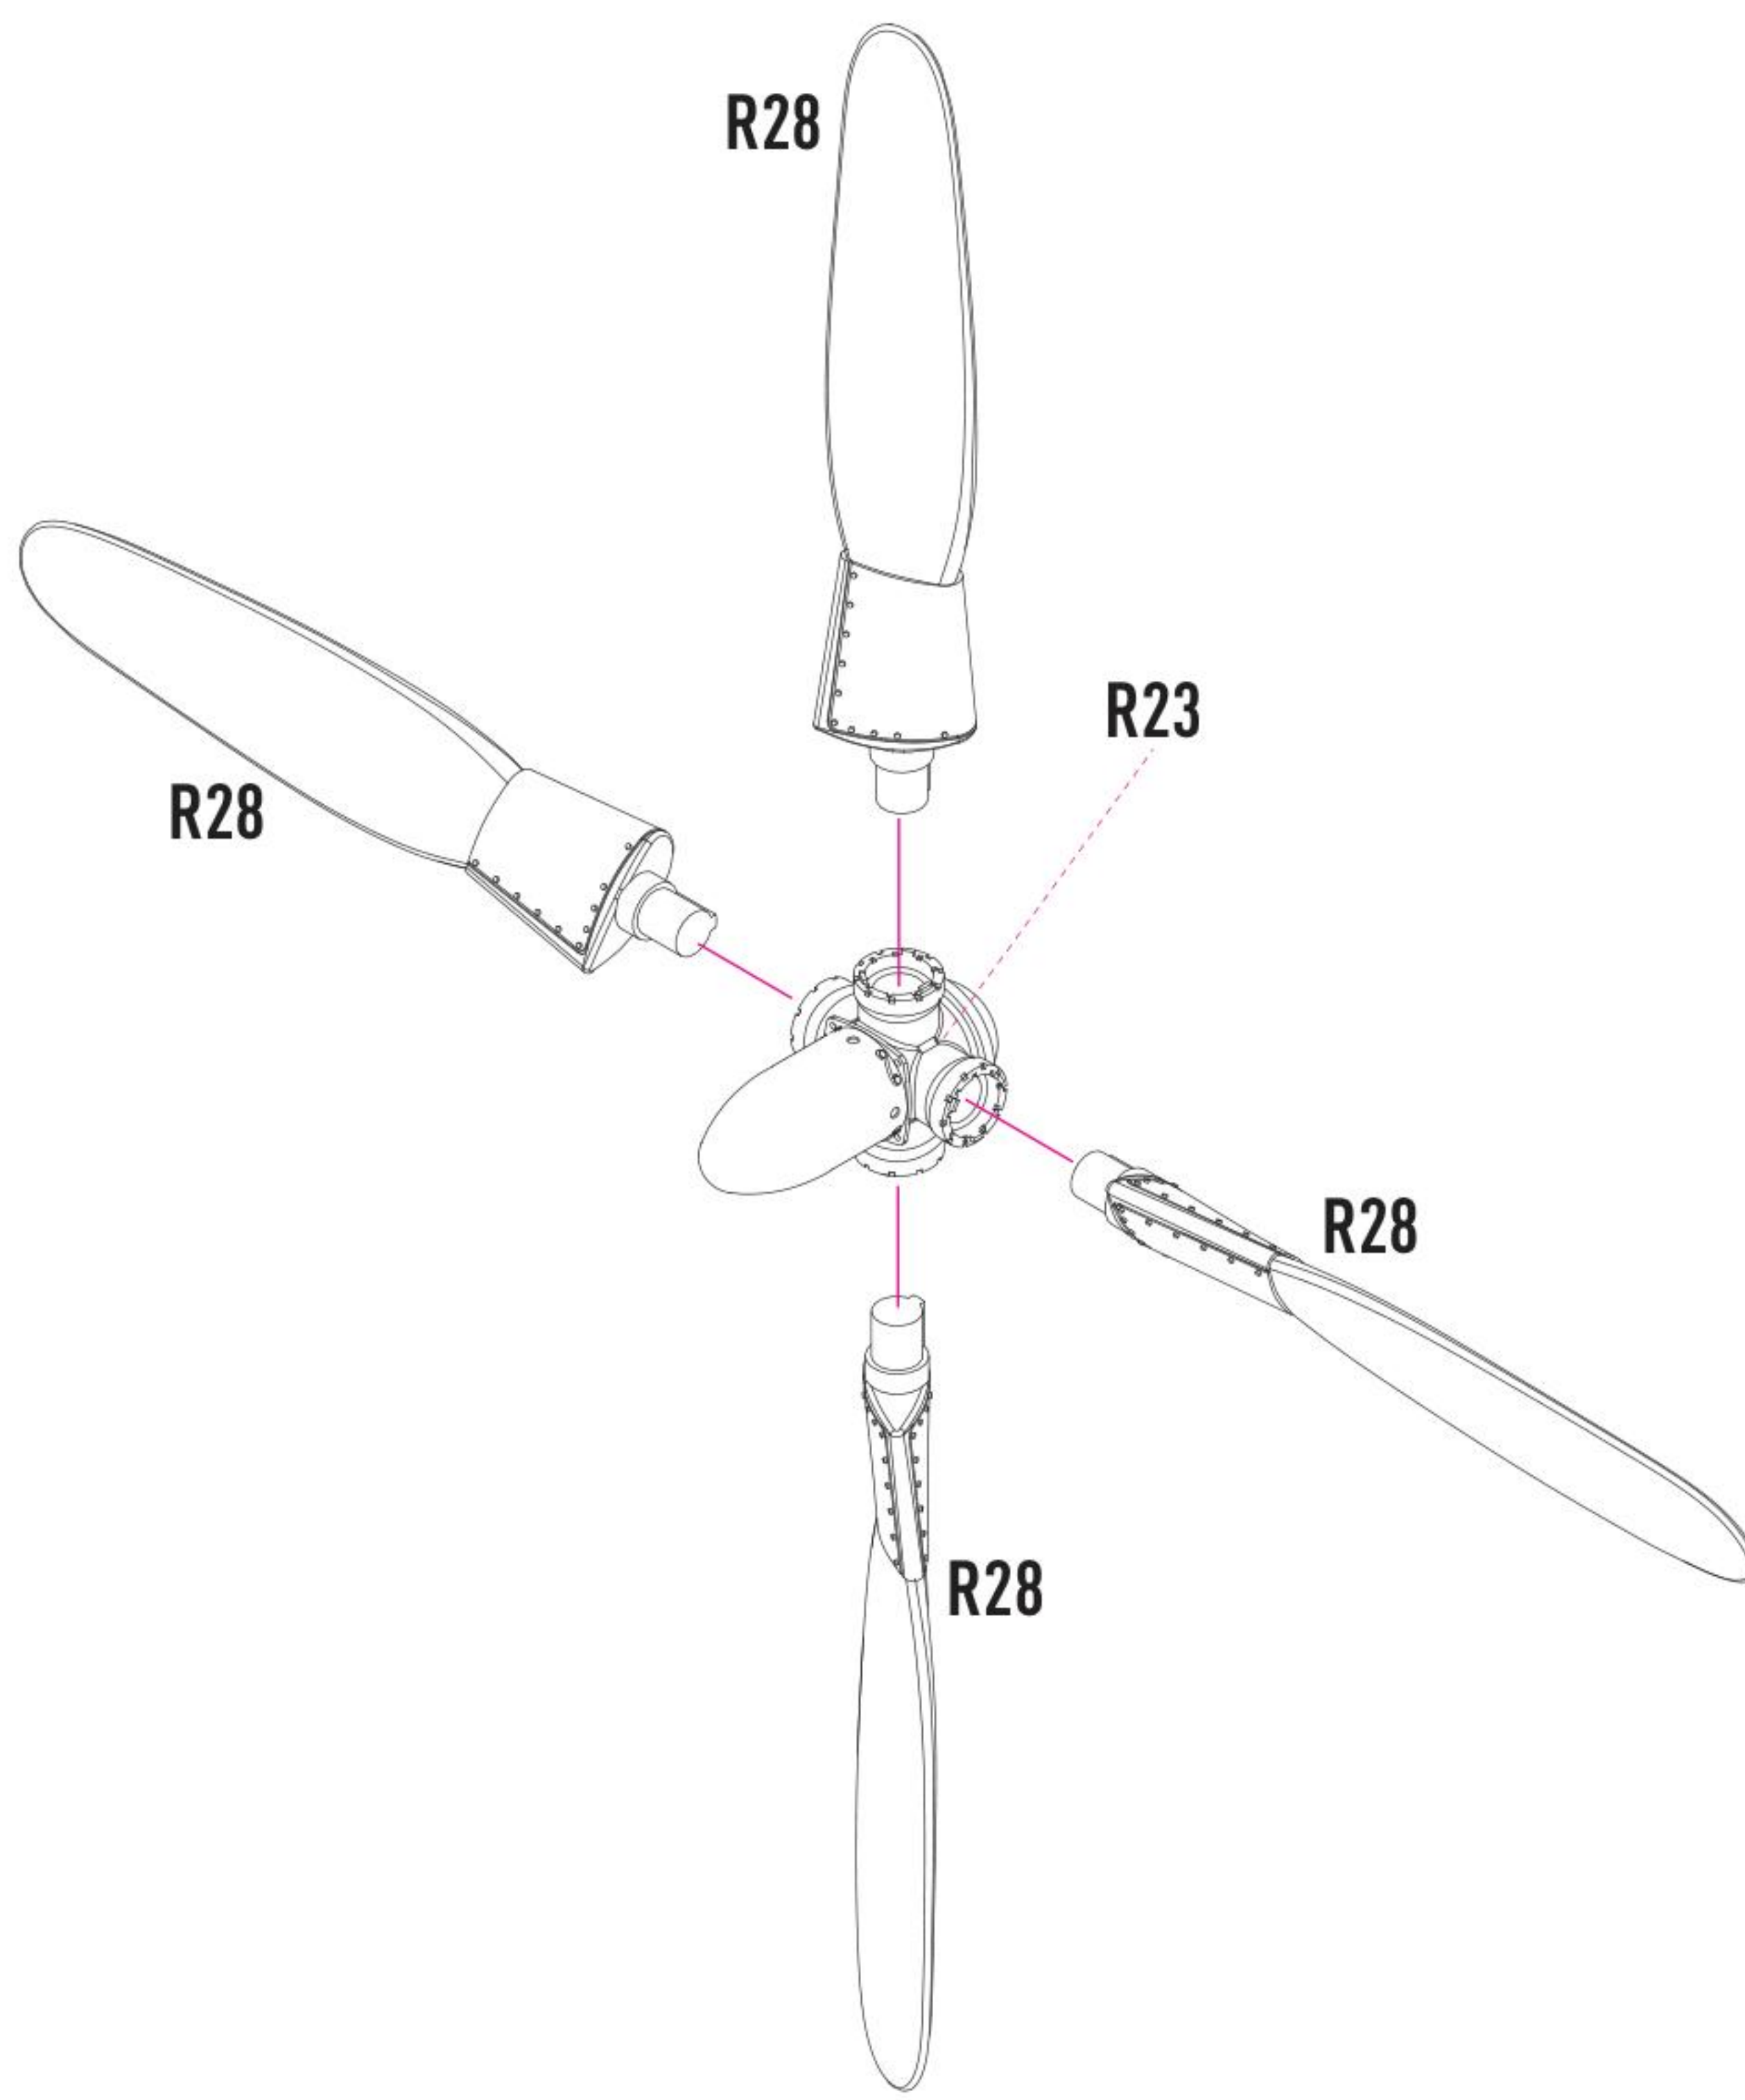

DECALS INSTRUCTION

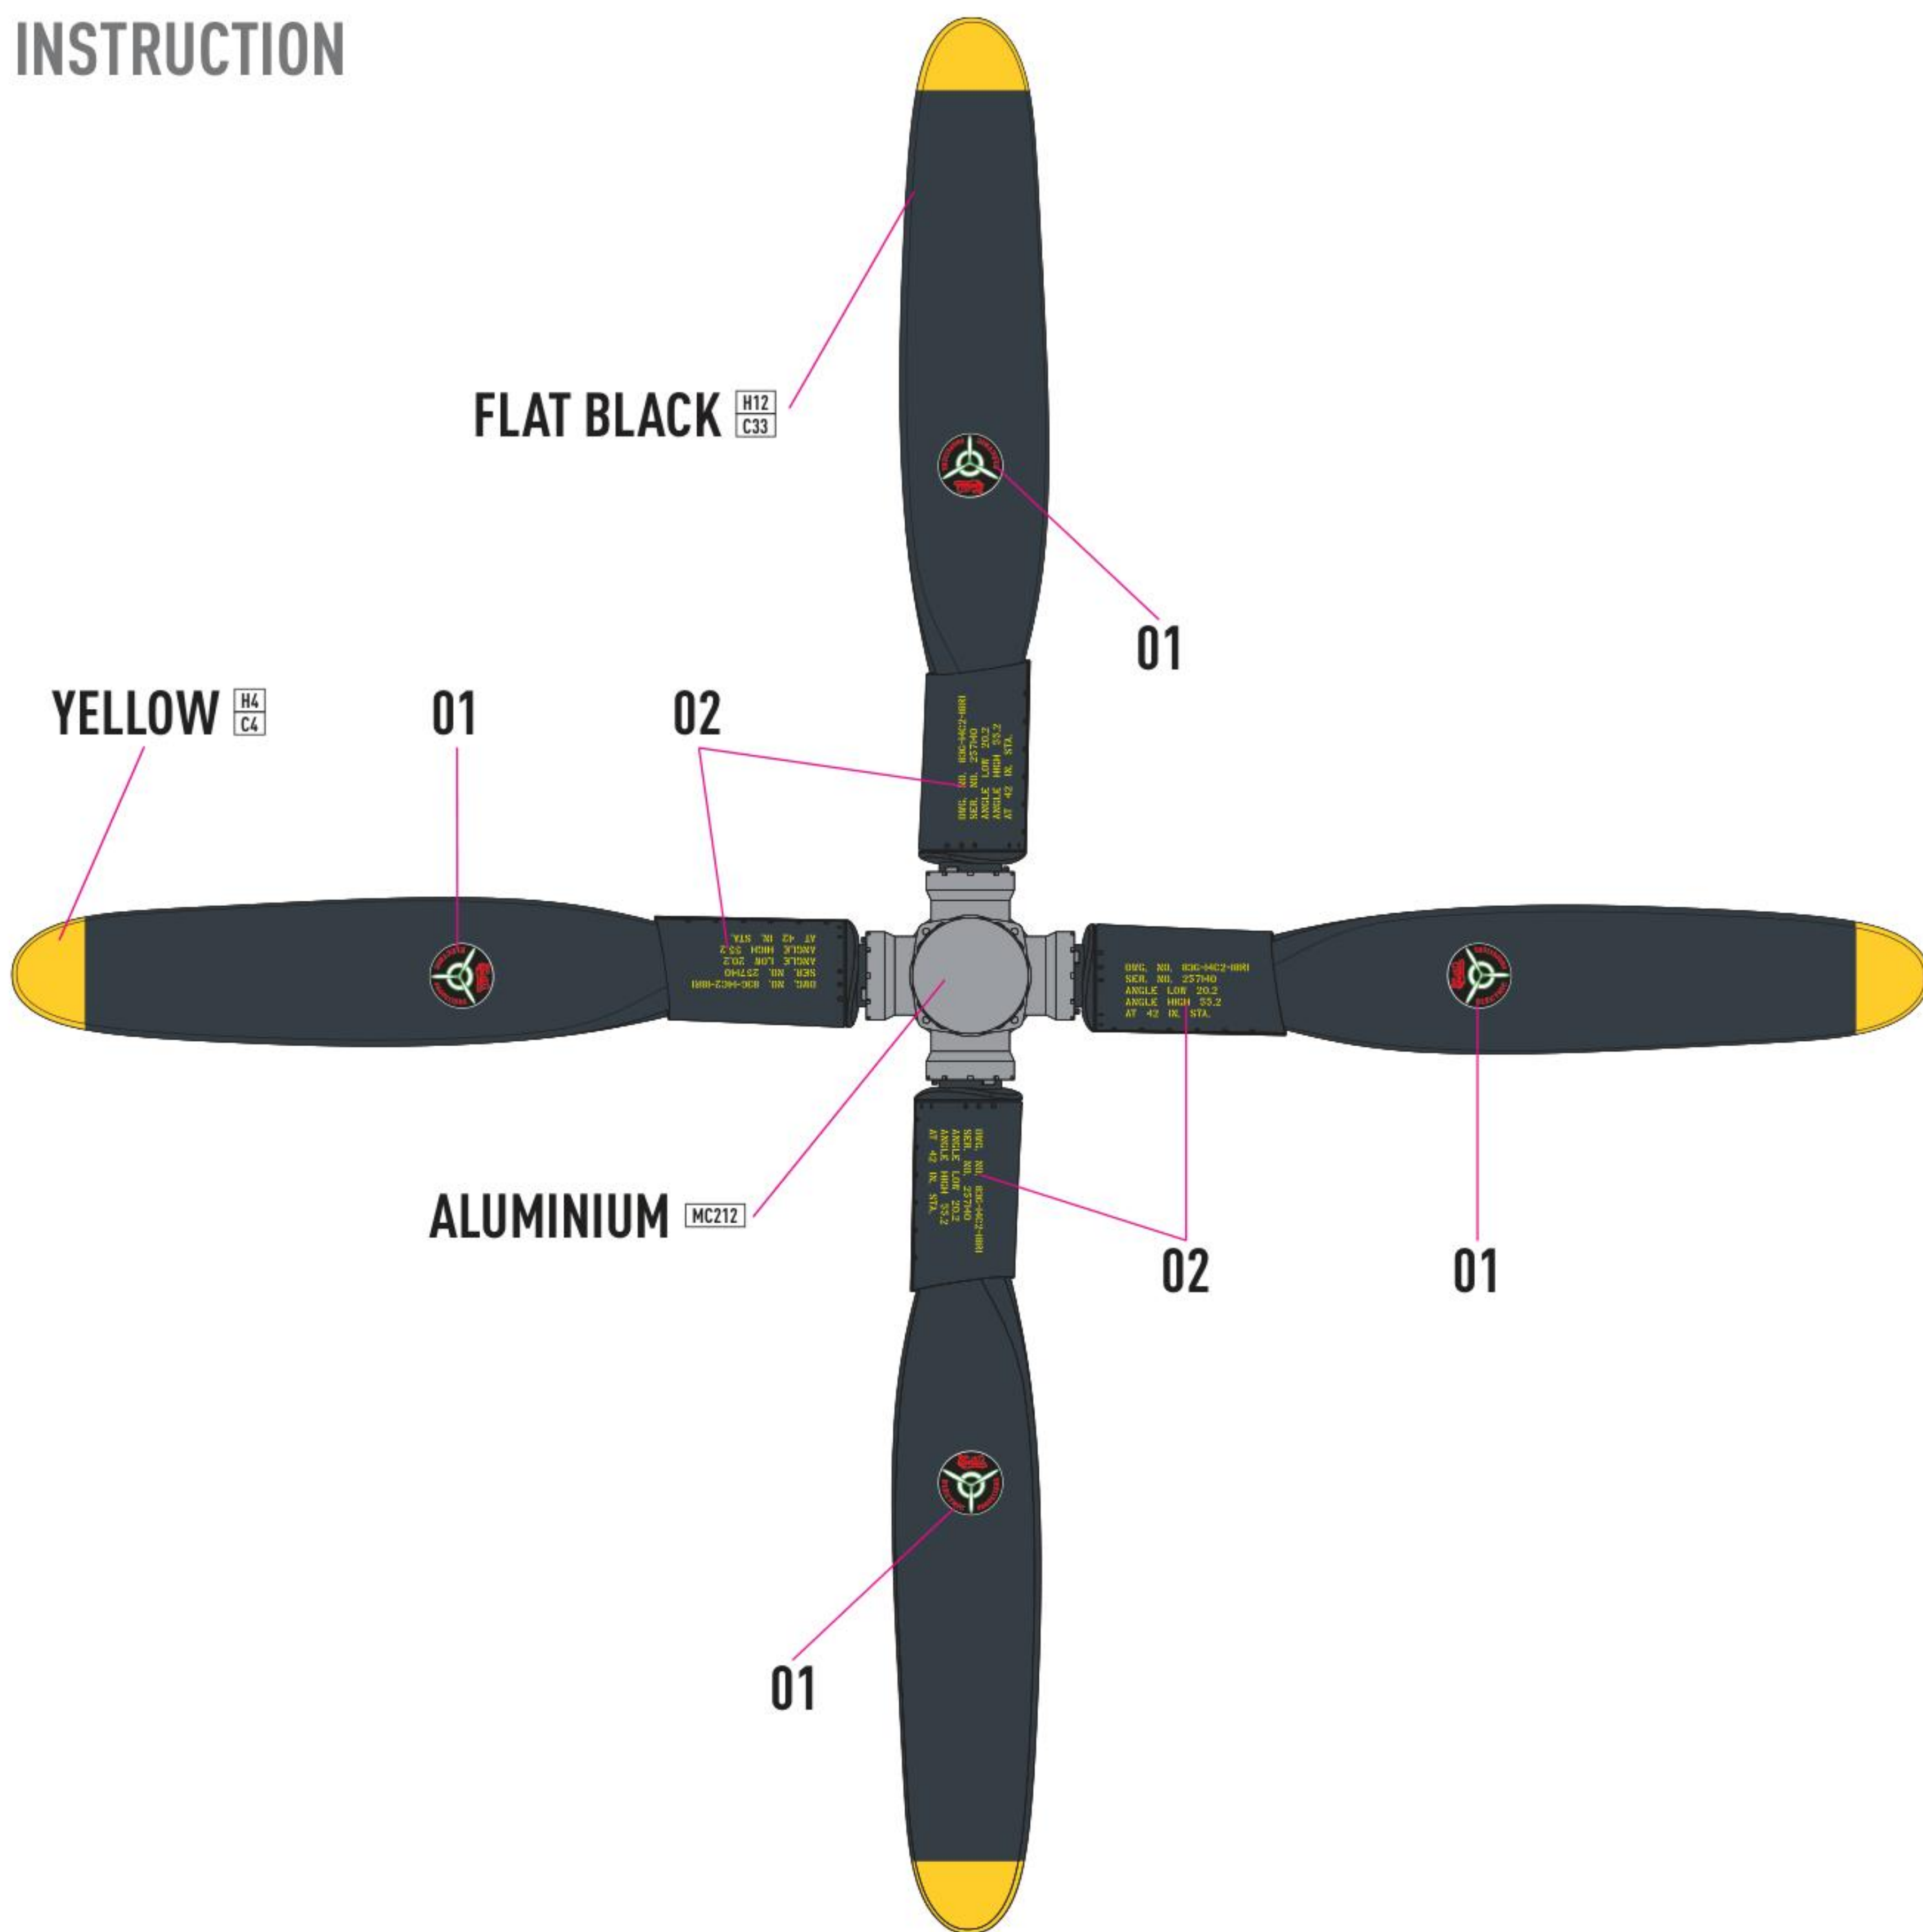

	COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
	ALUMINIUM		MC212
	YELLOW	H4	C4

	COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
	FLAT BLACK	H12	C33
	ENGINE GRAY	H339	C339

