

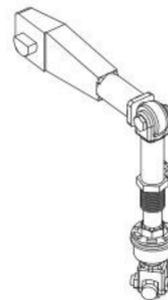
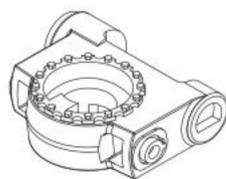
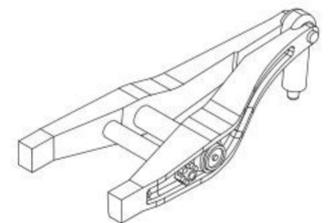

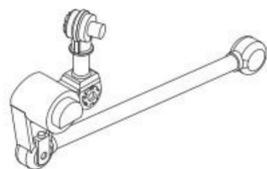
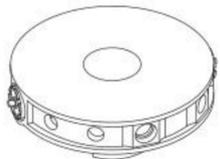
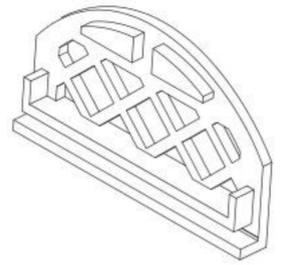
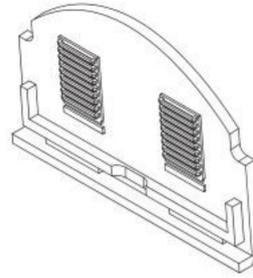
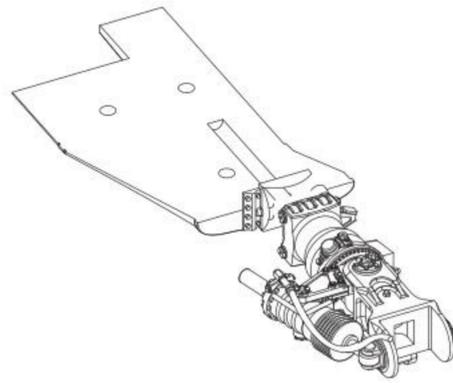

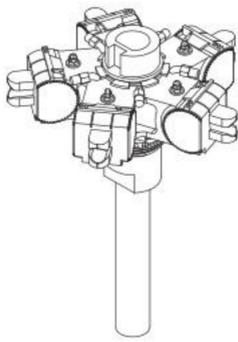
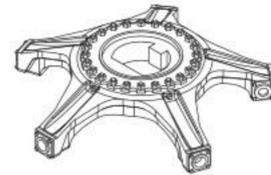
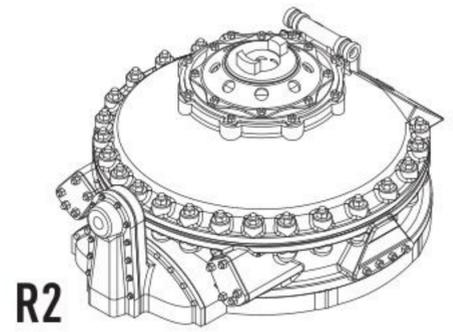
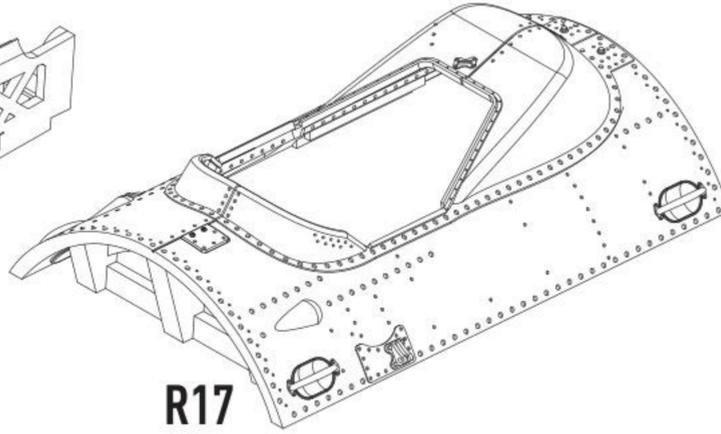



DETAILS AFTER REMOVAL FROM SUPPORTS

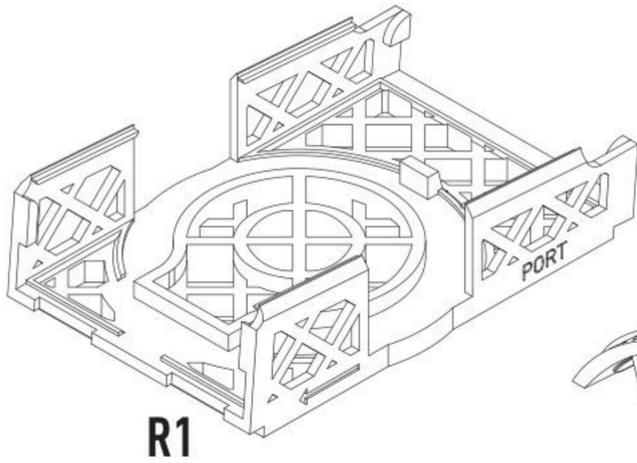


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

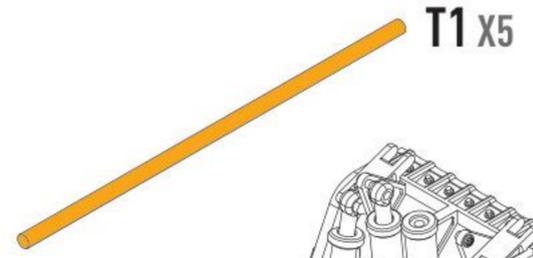


1

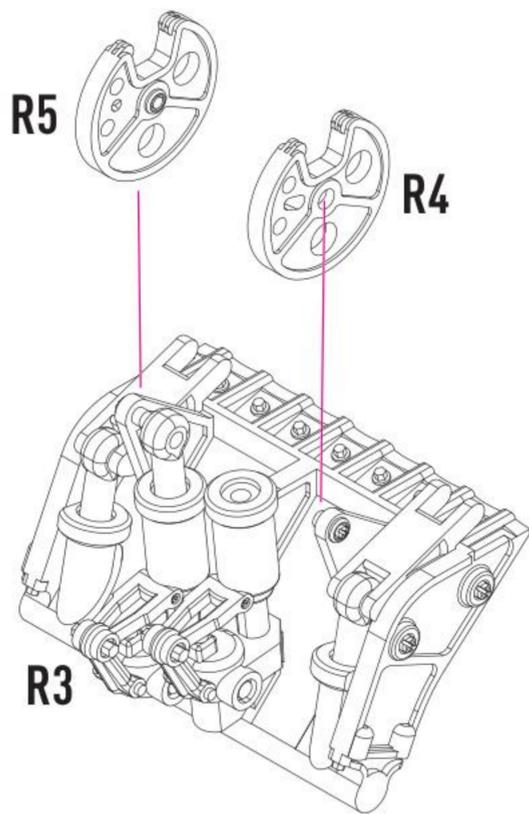


2

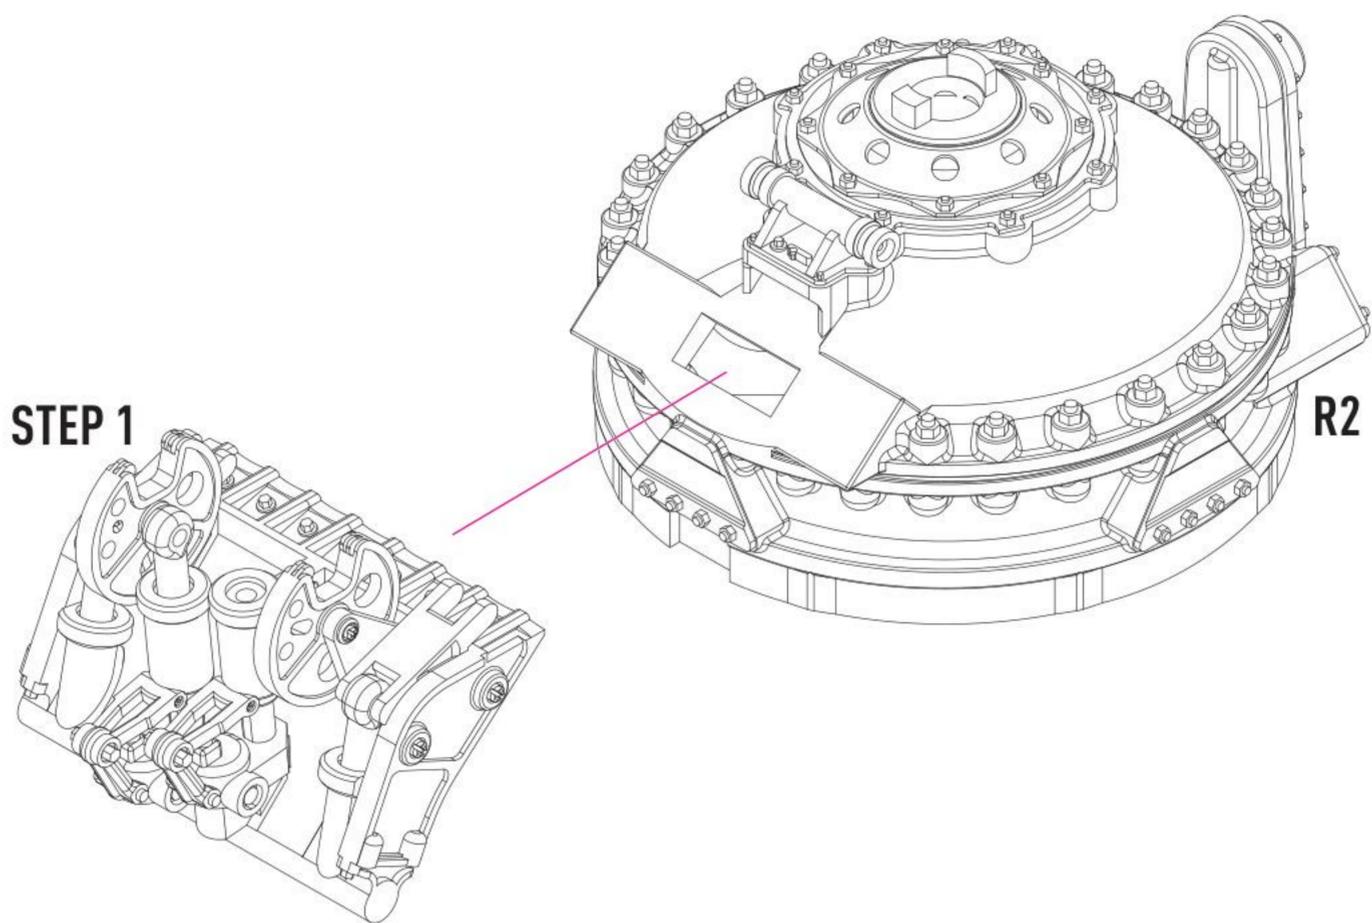


3

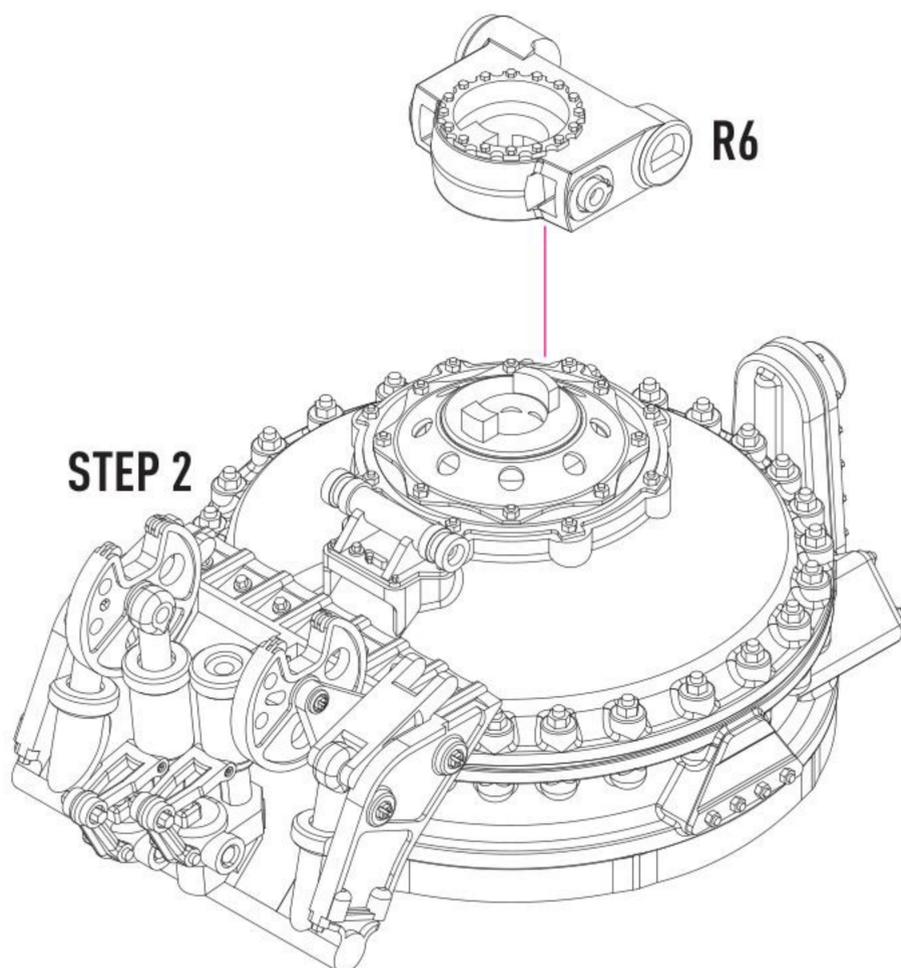

4

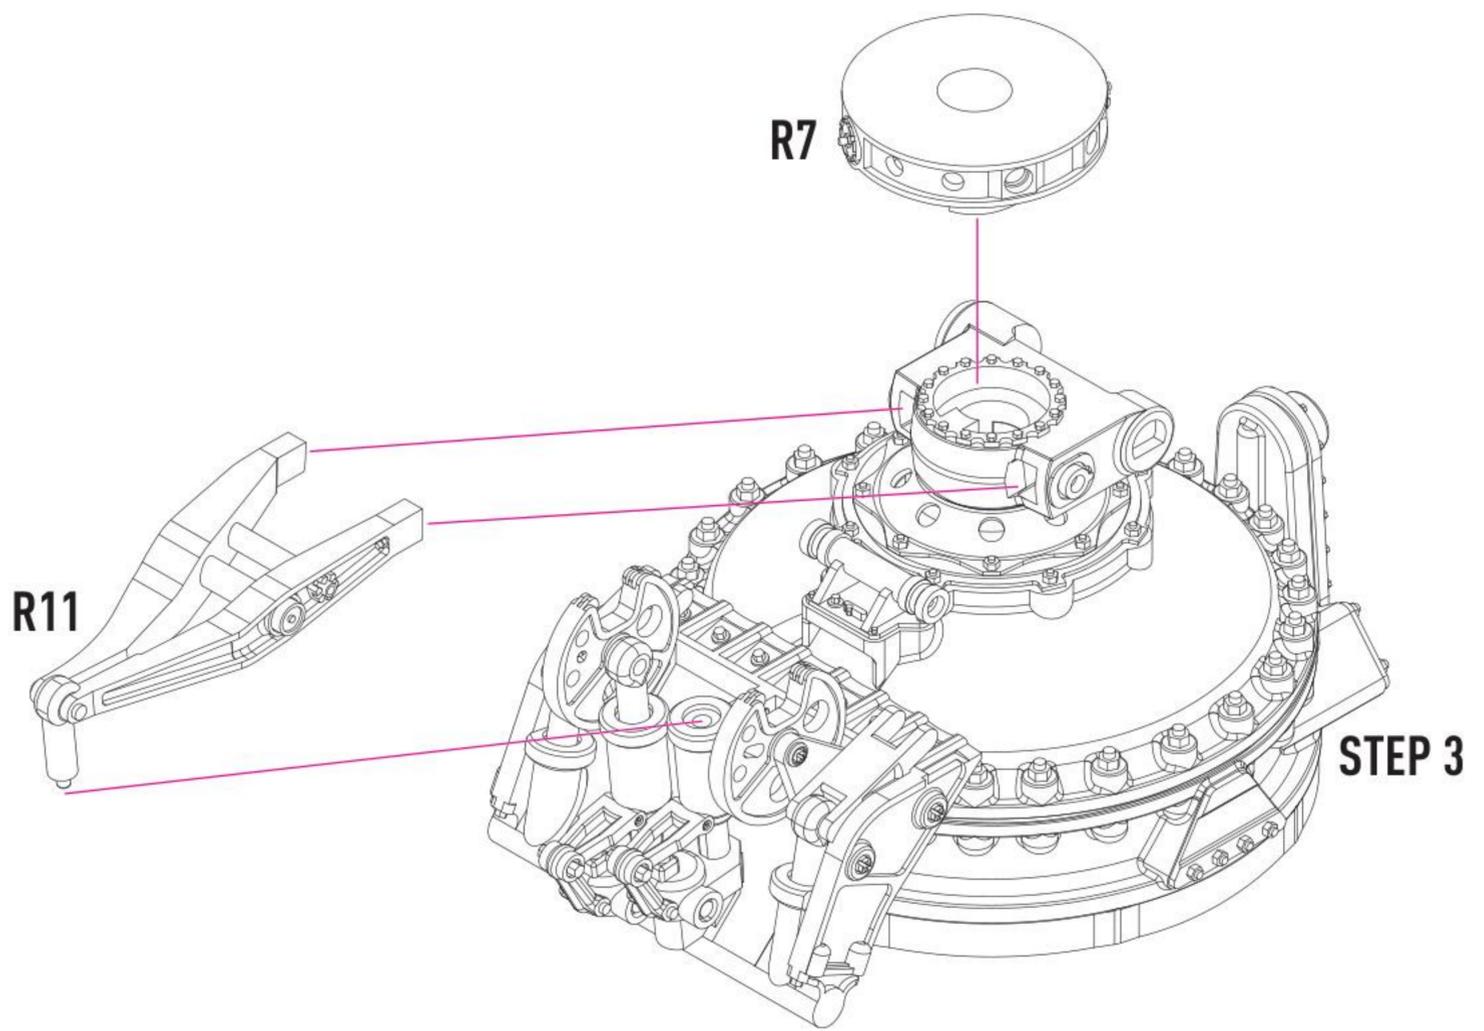


5

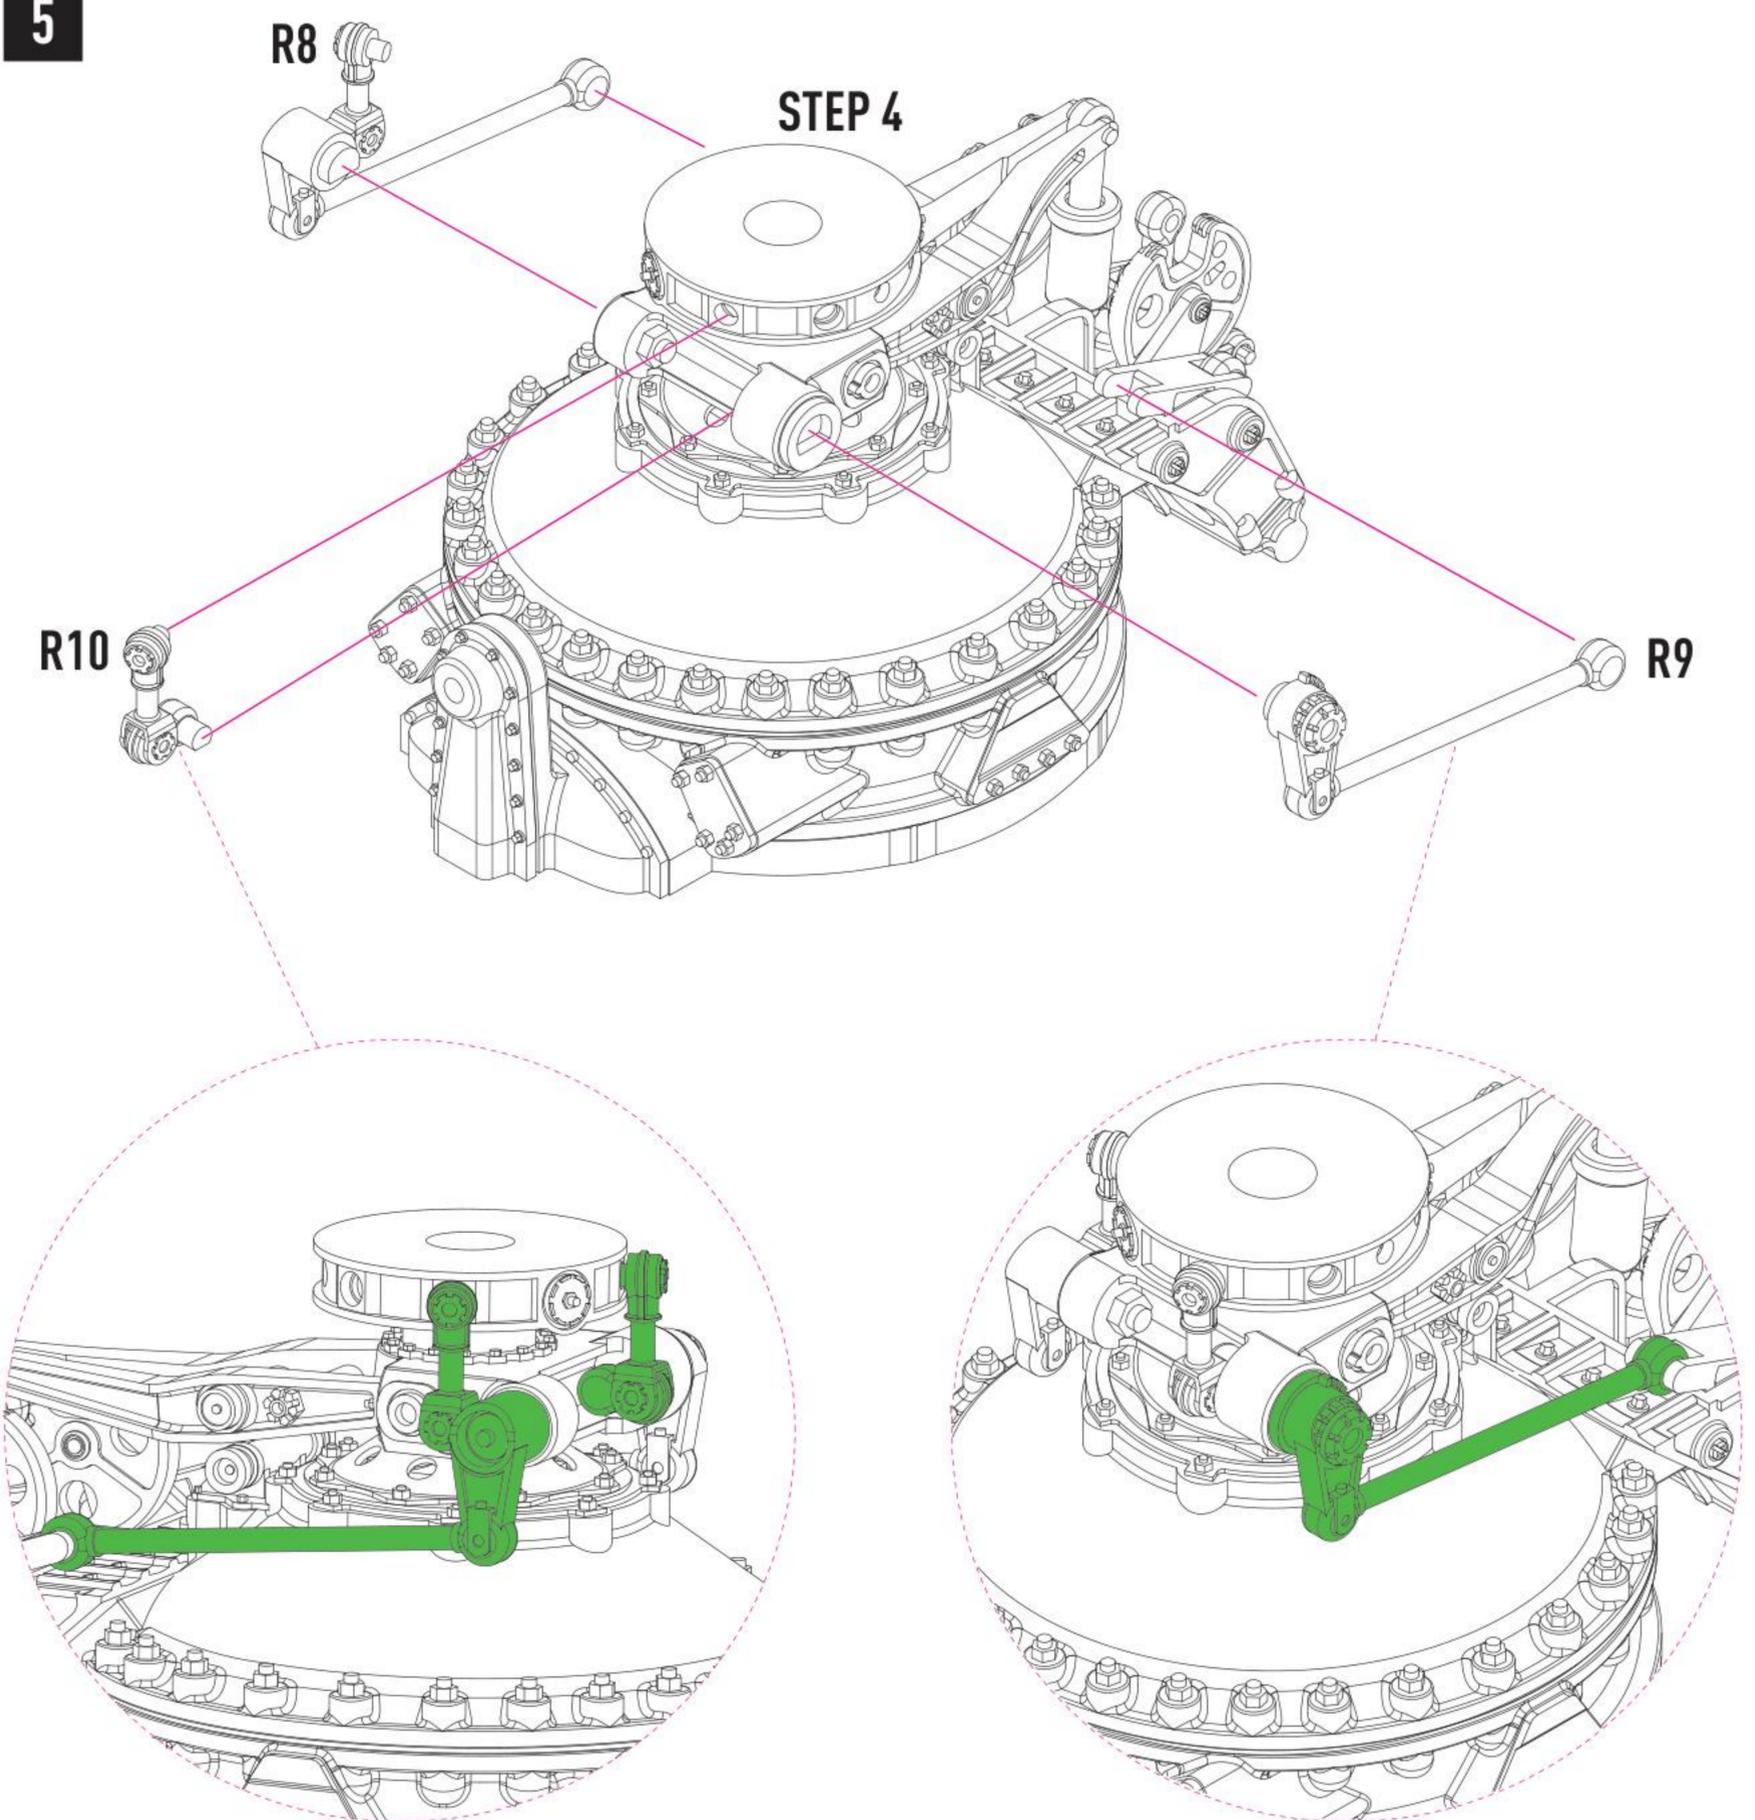




6

STEP 5

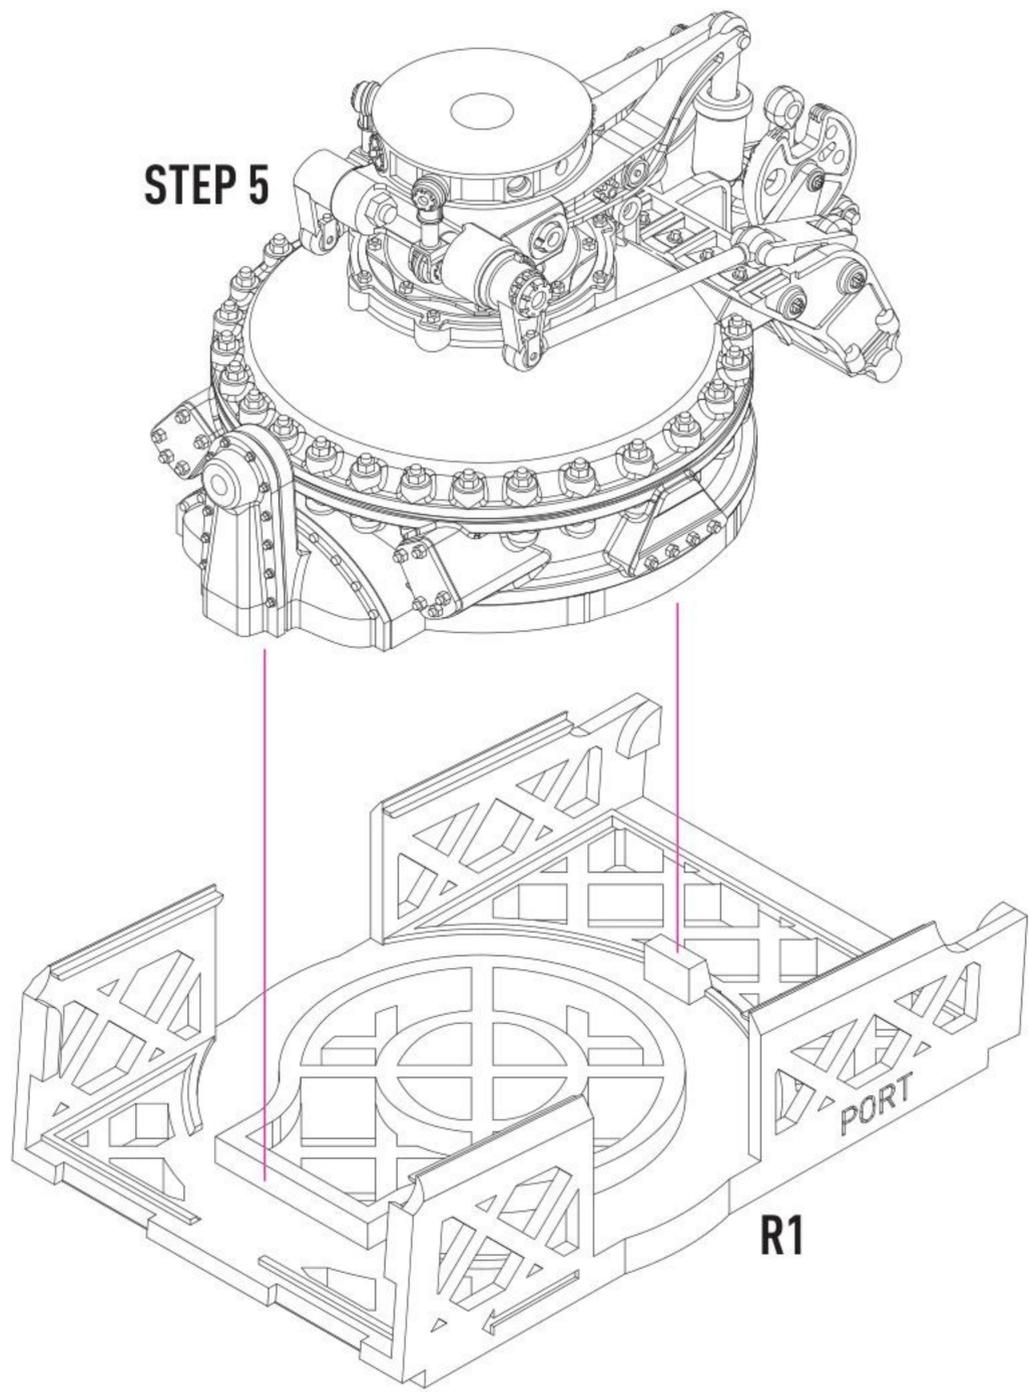


7

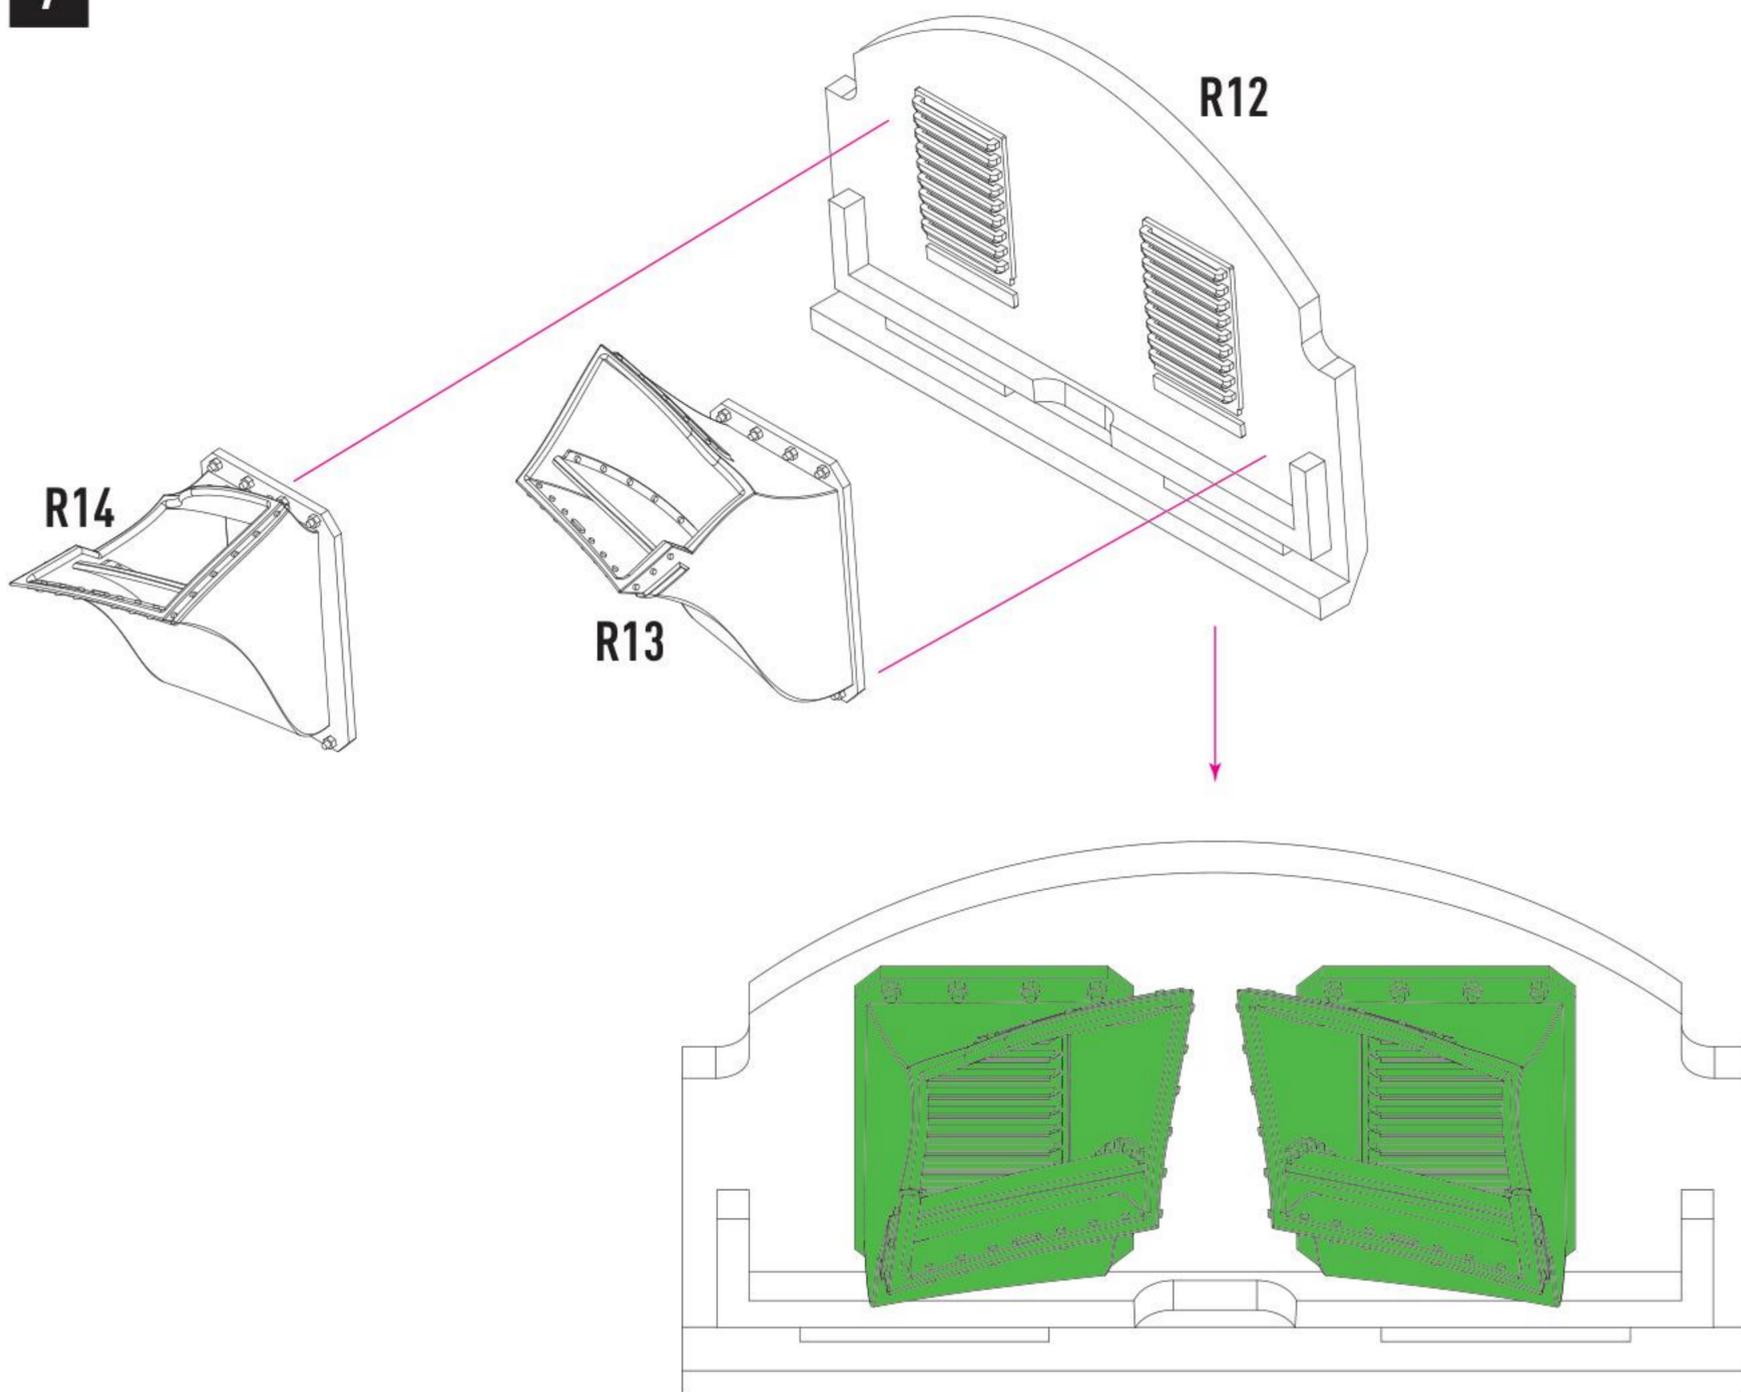


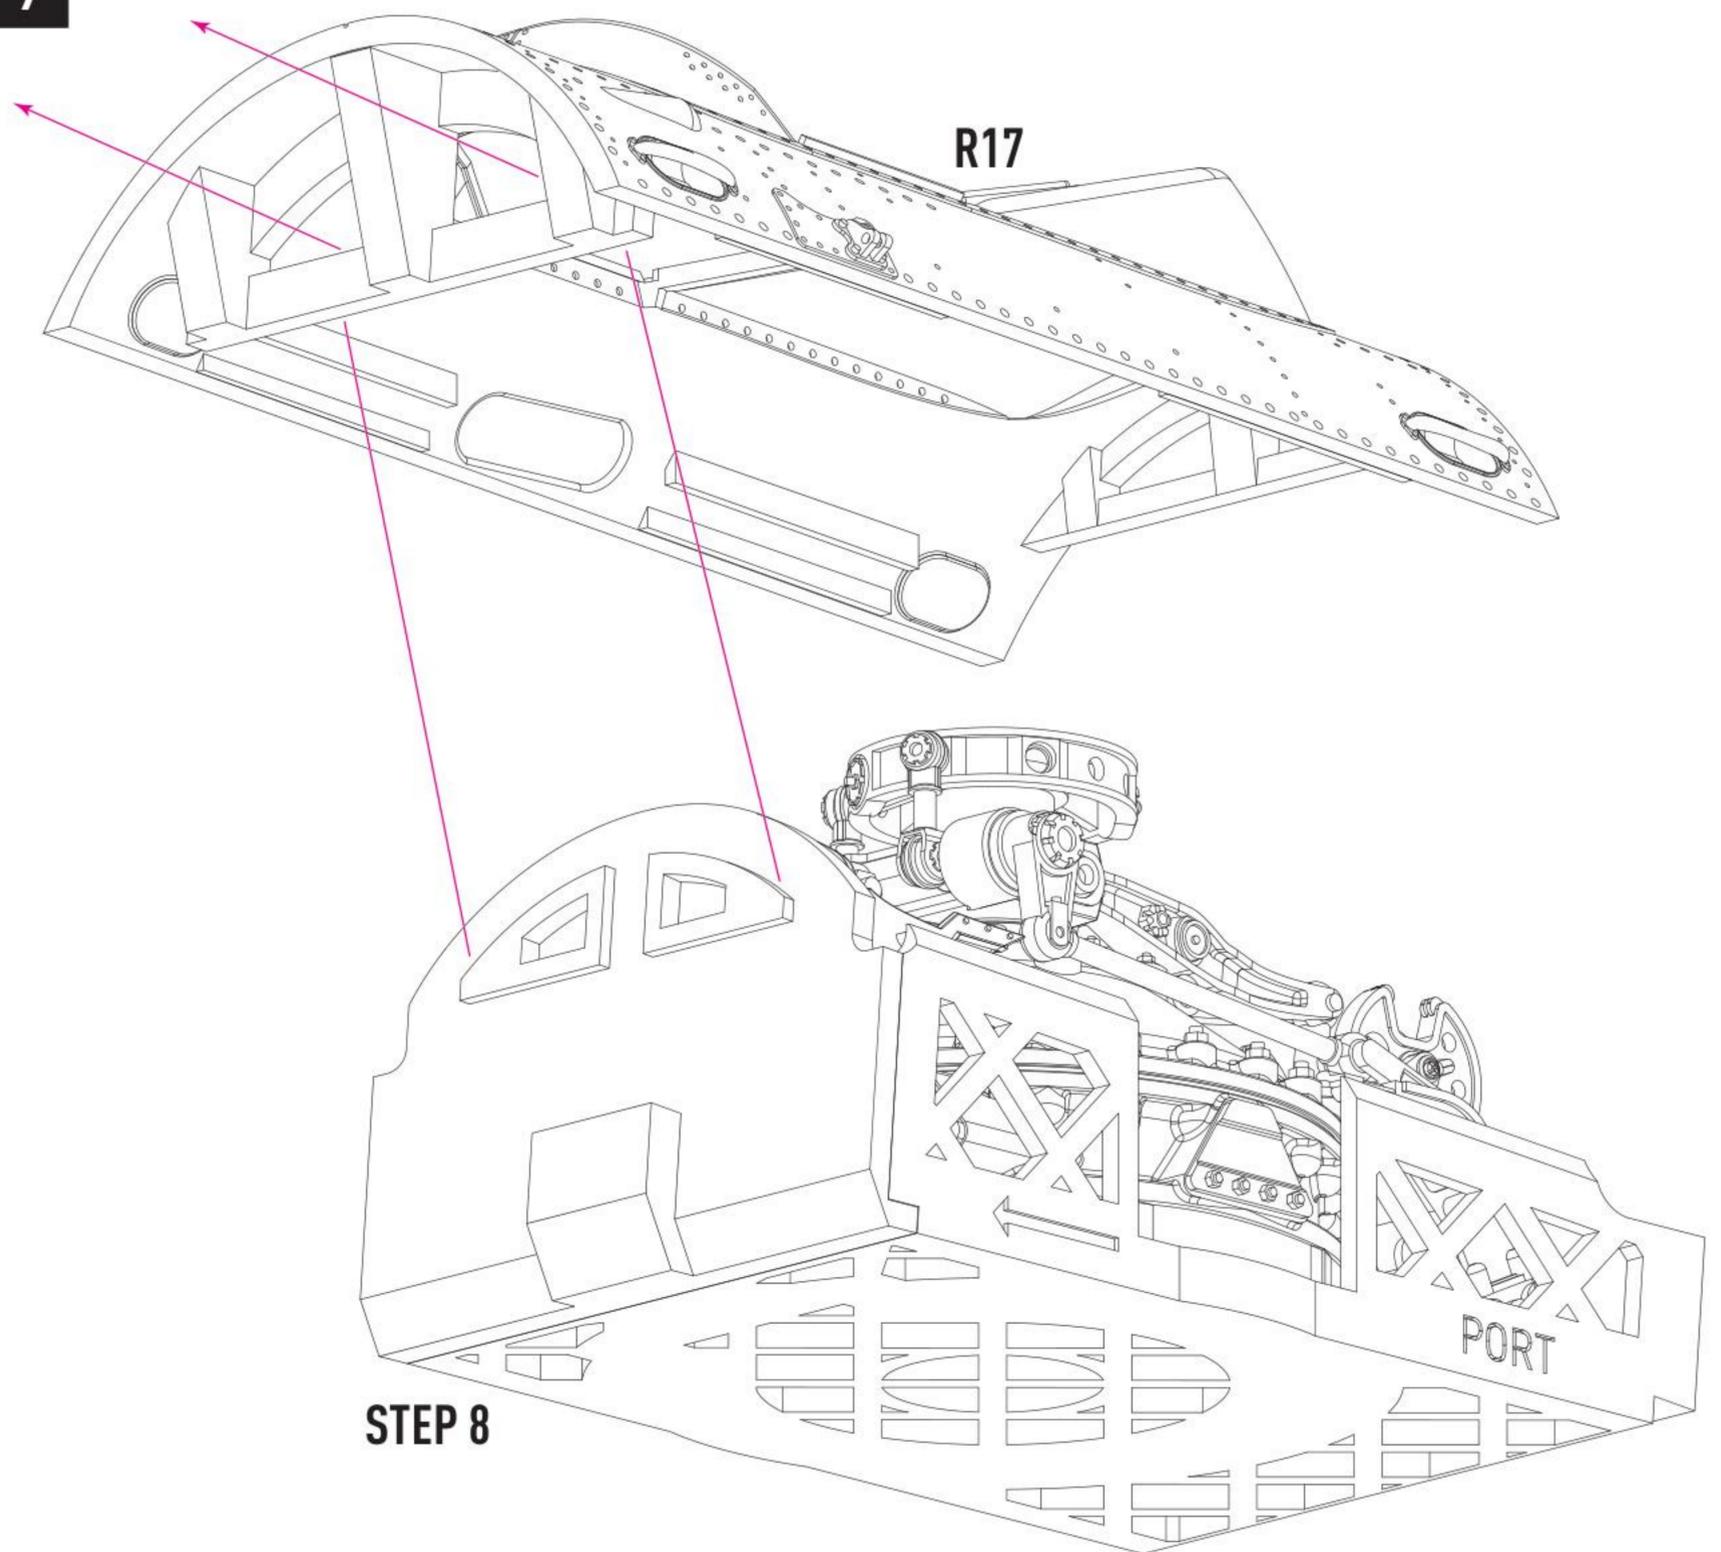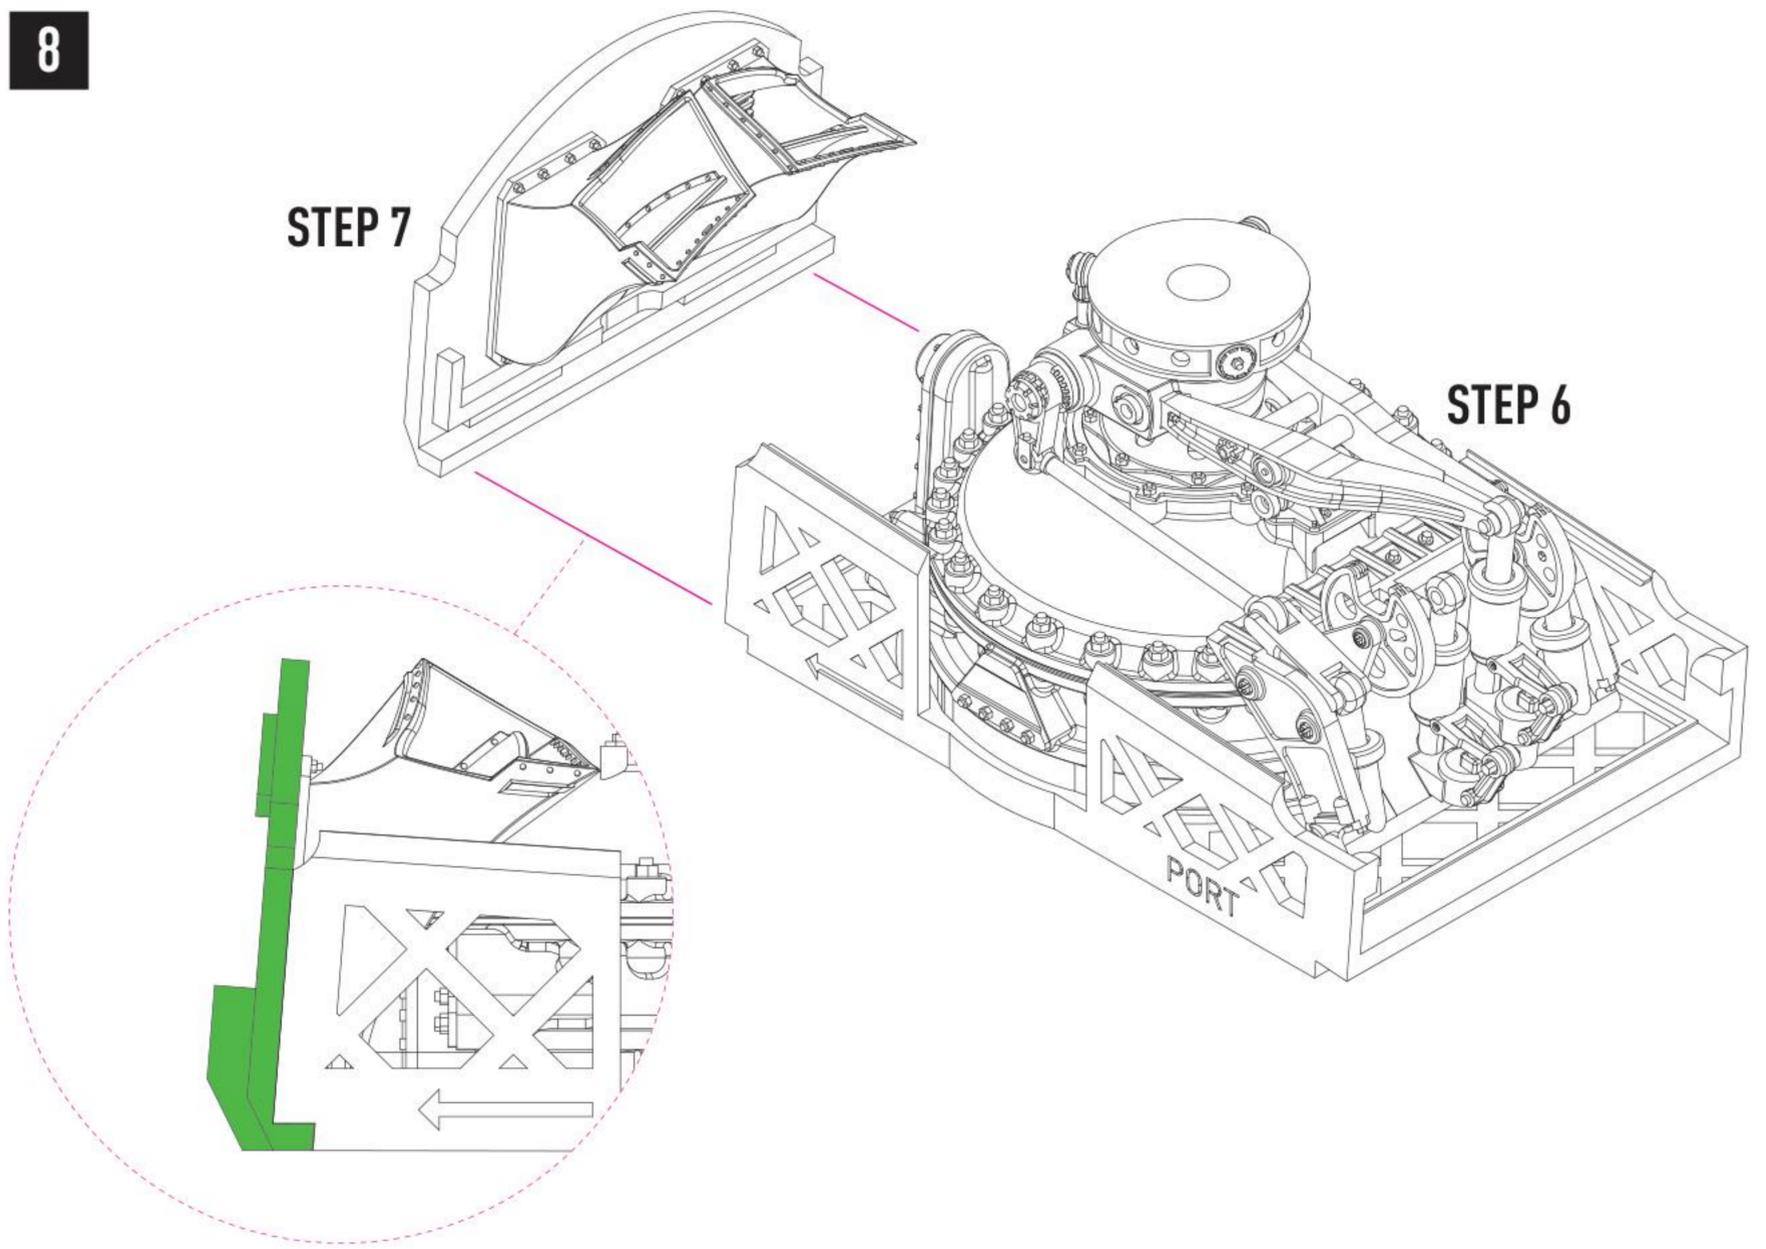


10

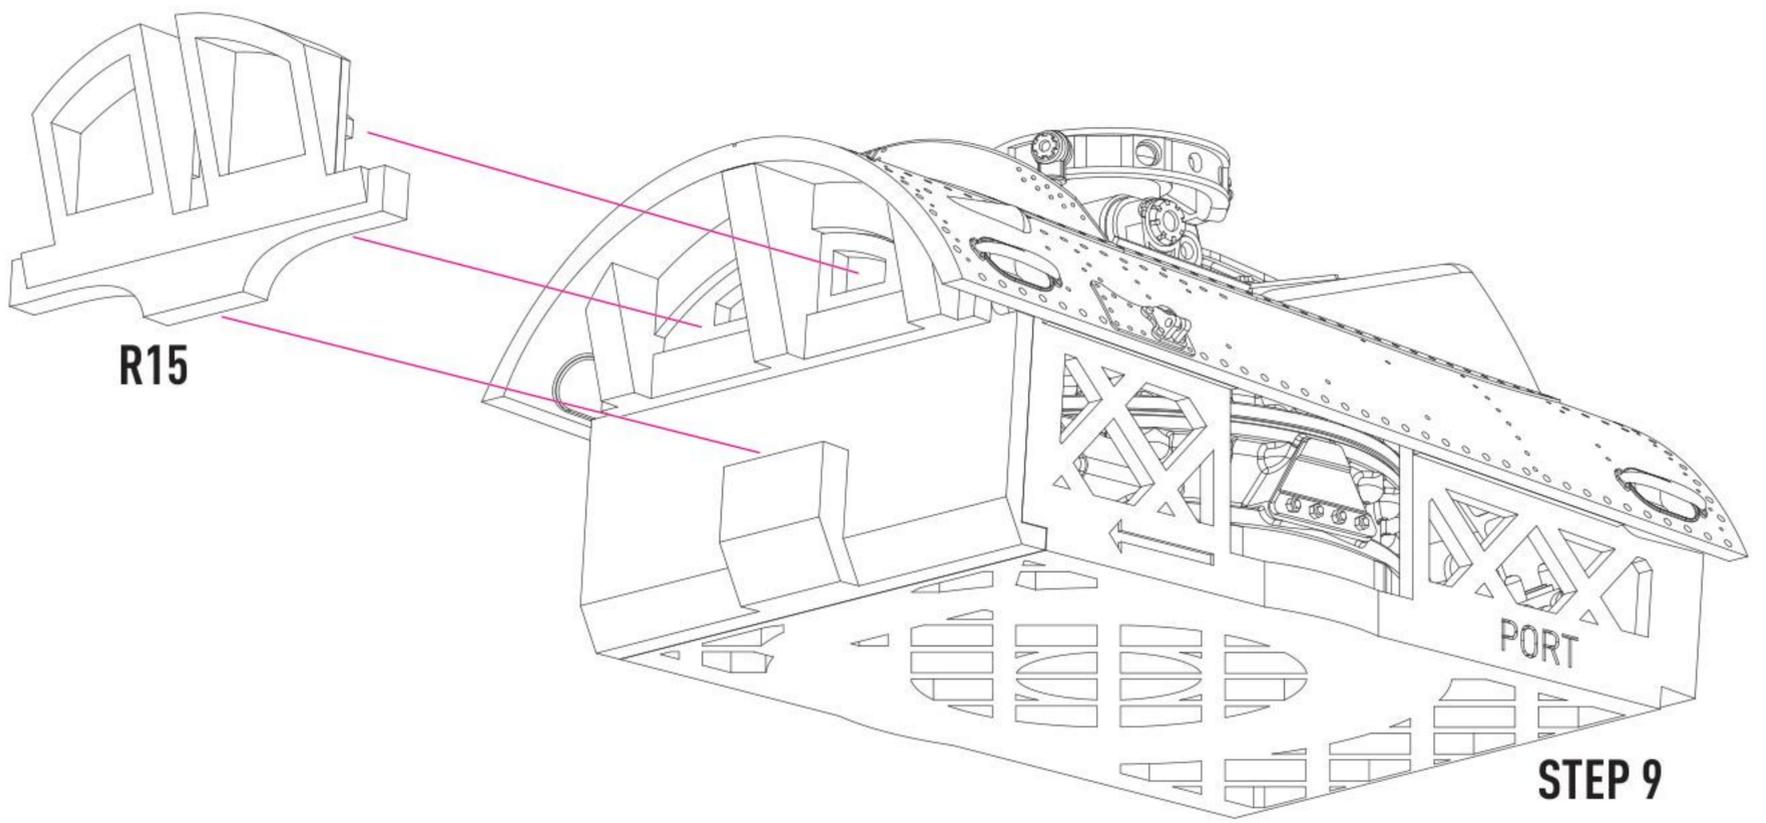


11

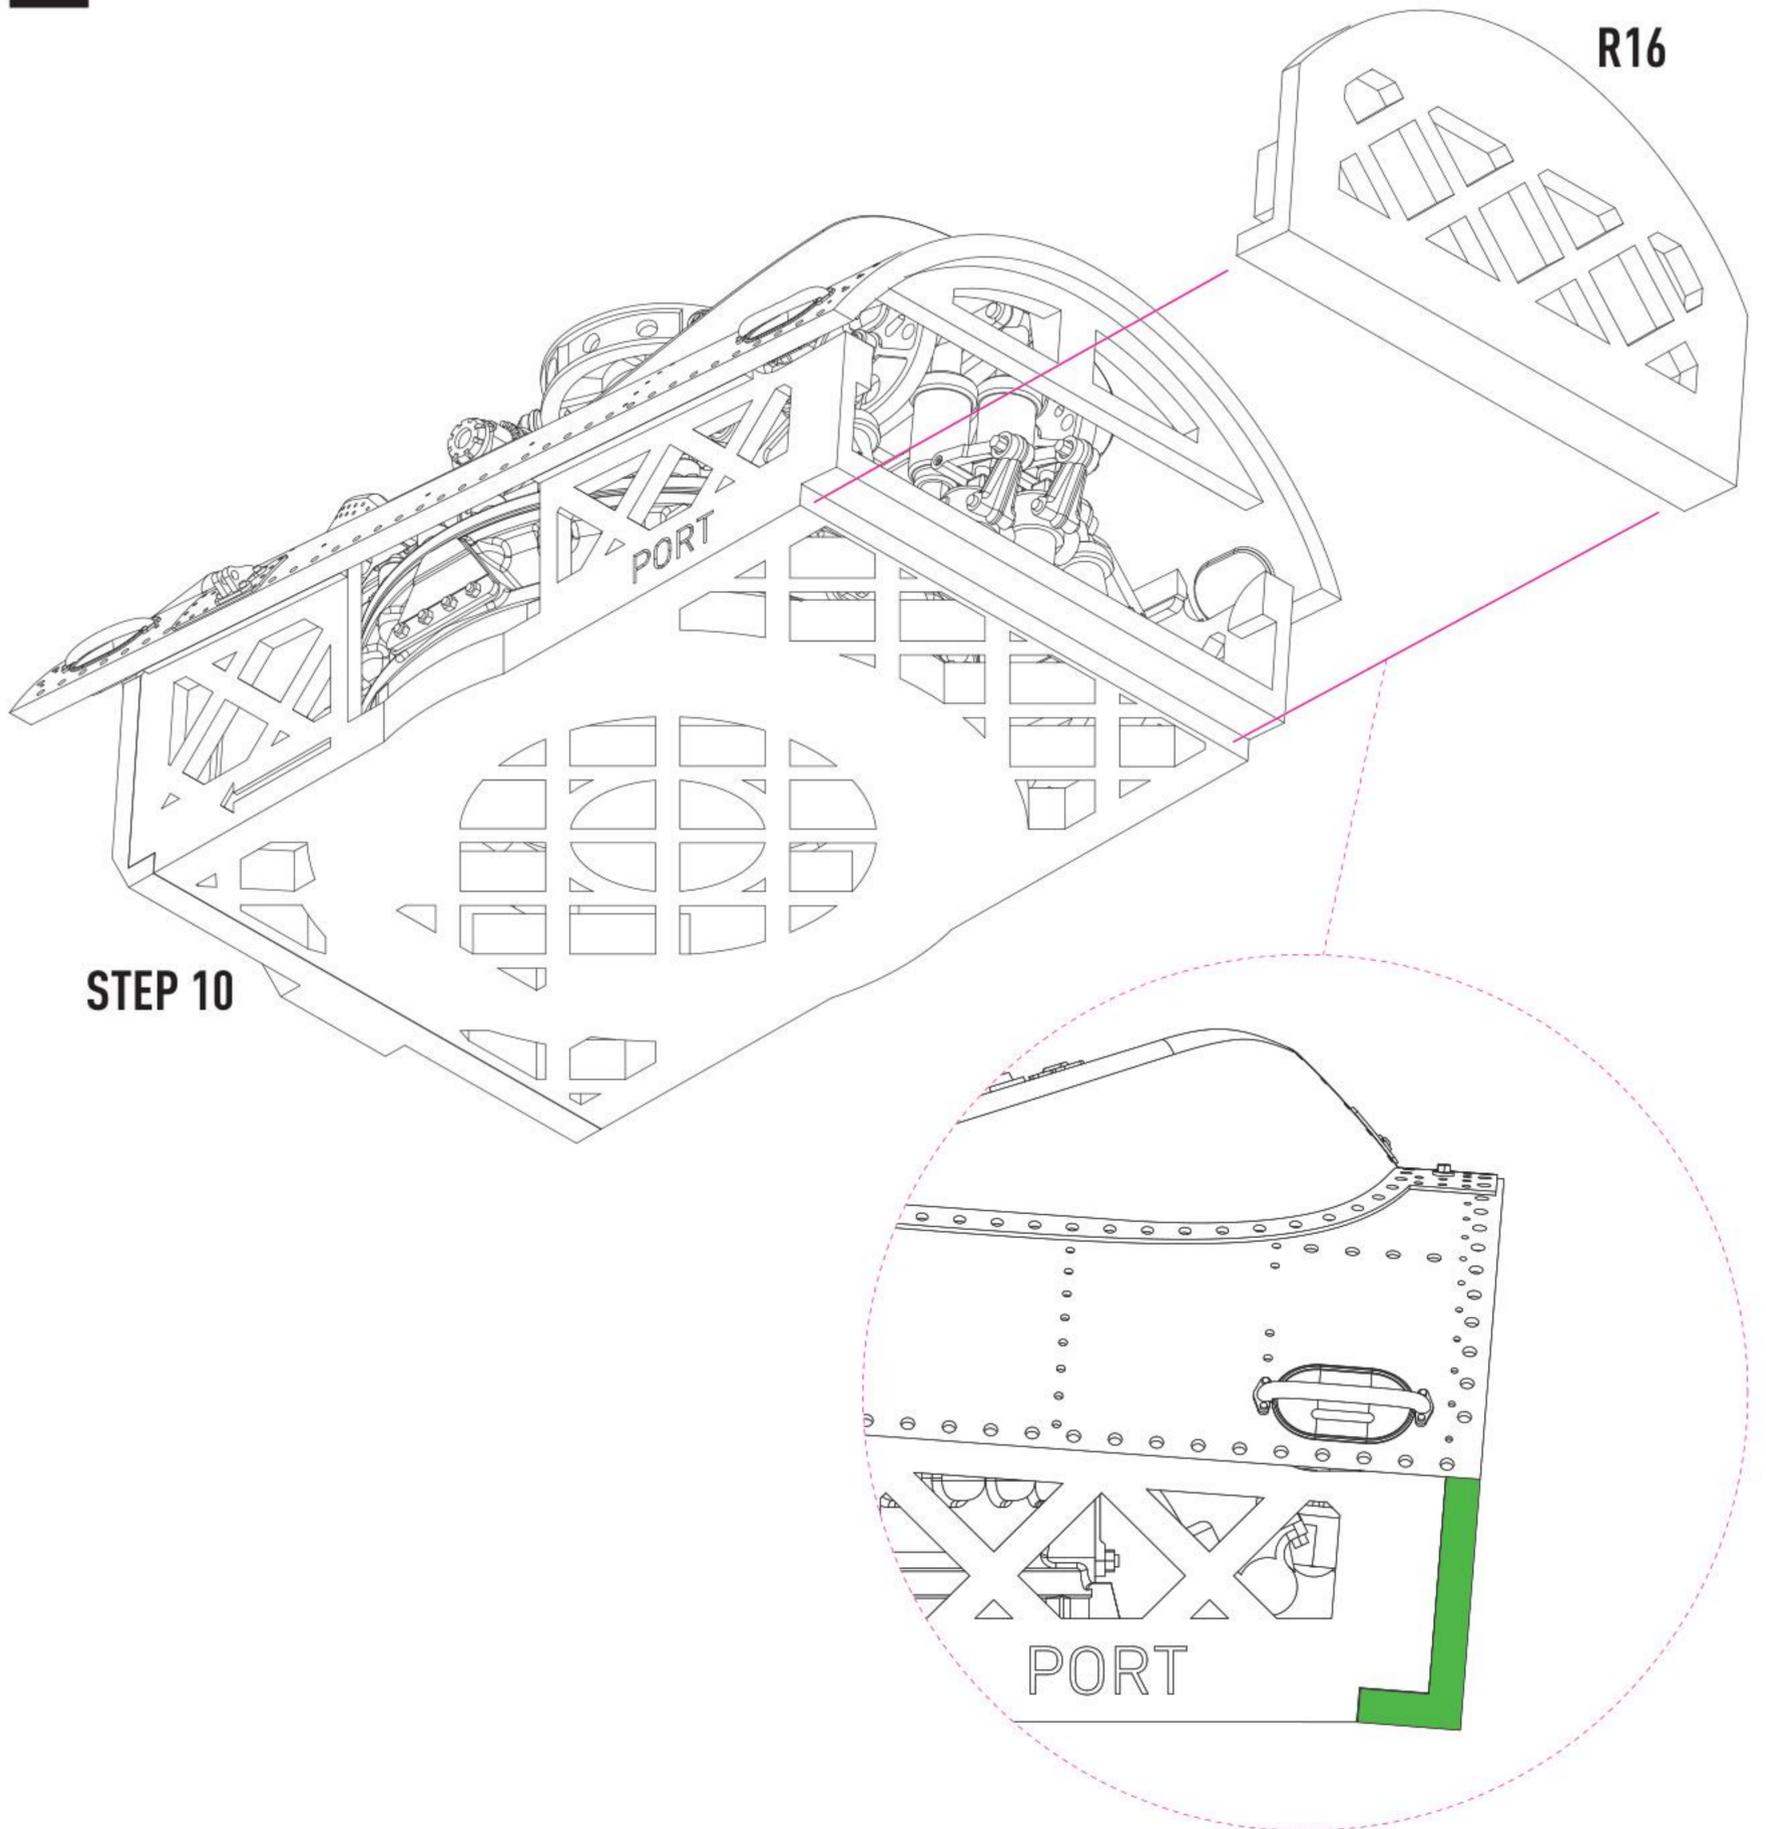

12

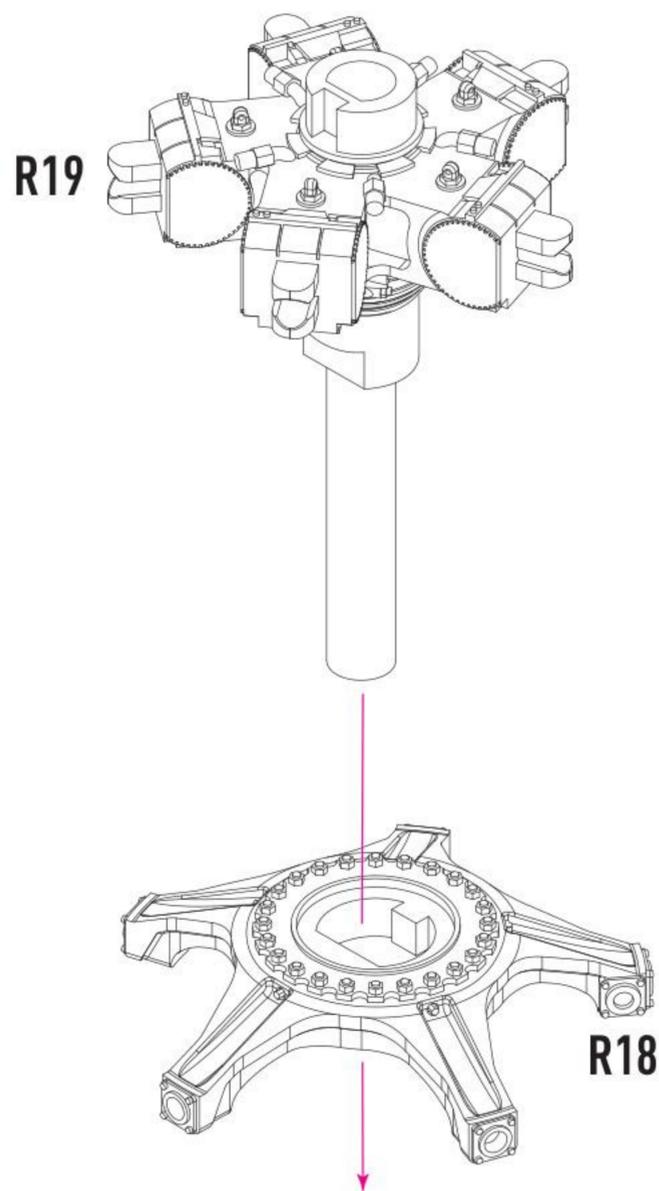

13

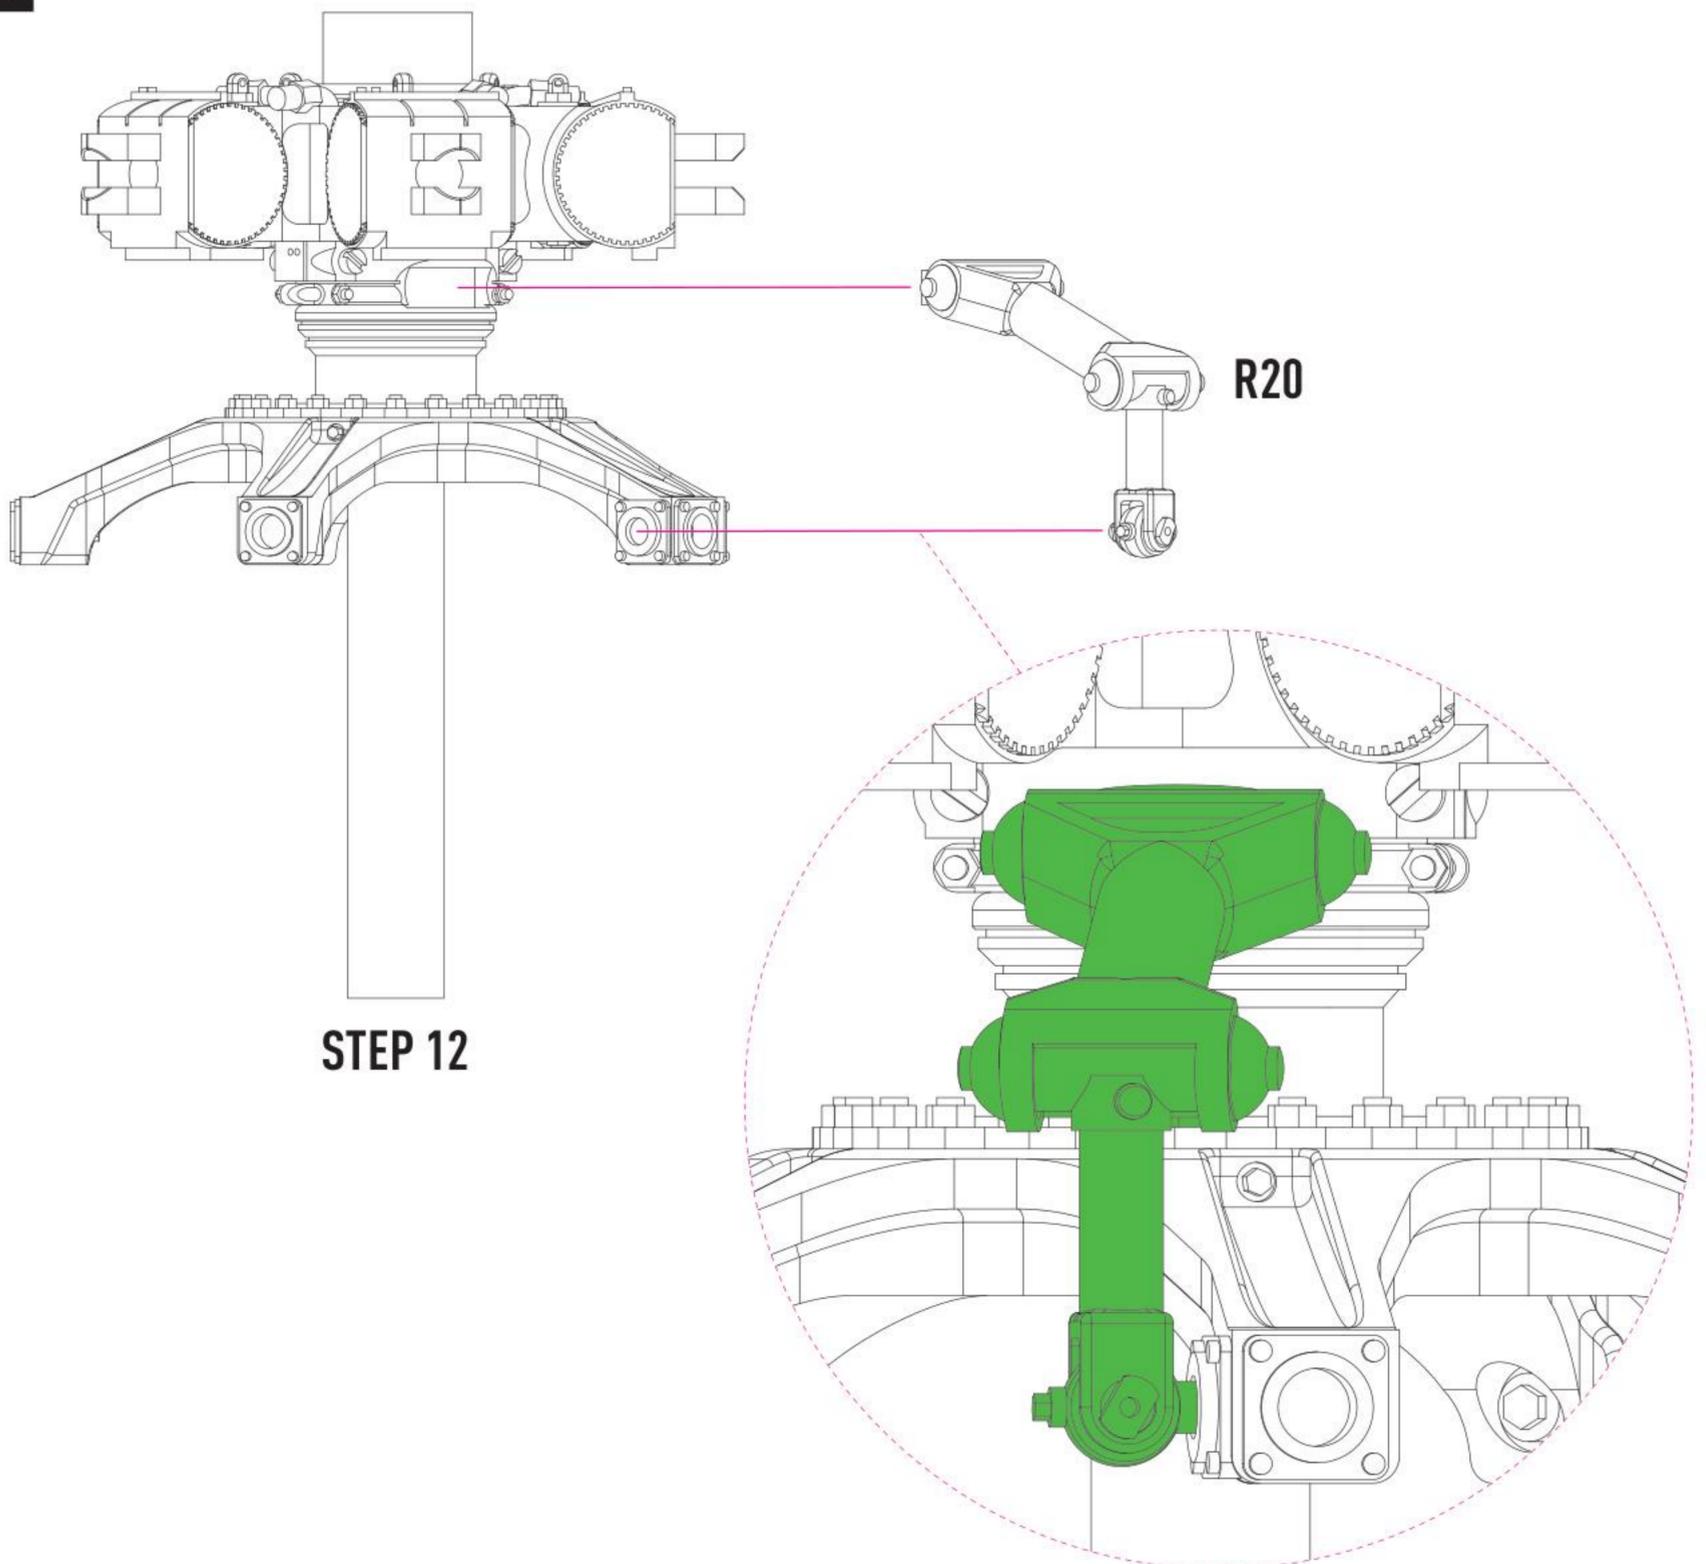


14

USE STEEL ROD
D=1.2MM, L=40MM

T1

STEP 13


R21
REPEAT 5 TIMES

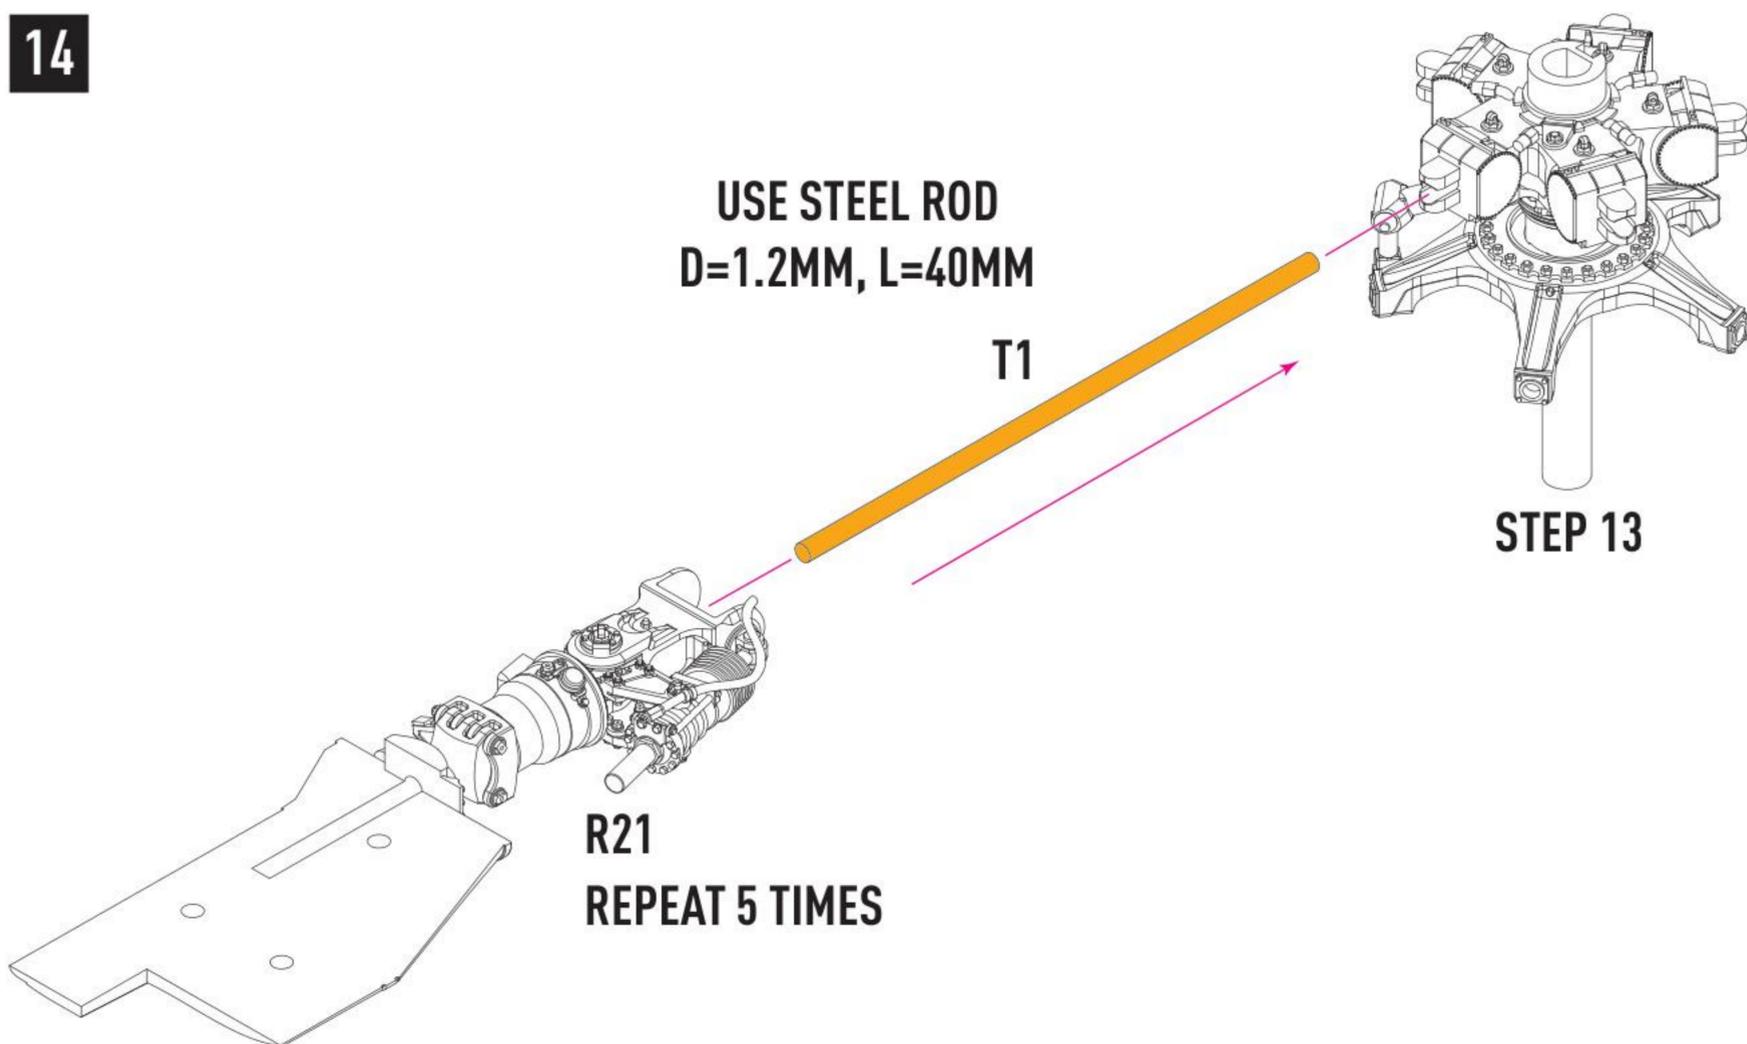


15

REPEAT 5 TIMES
R22


STEP 14

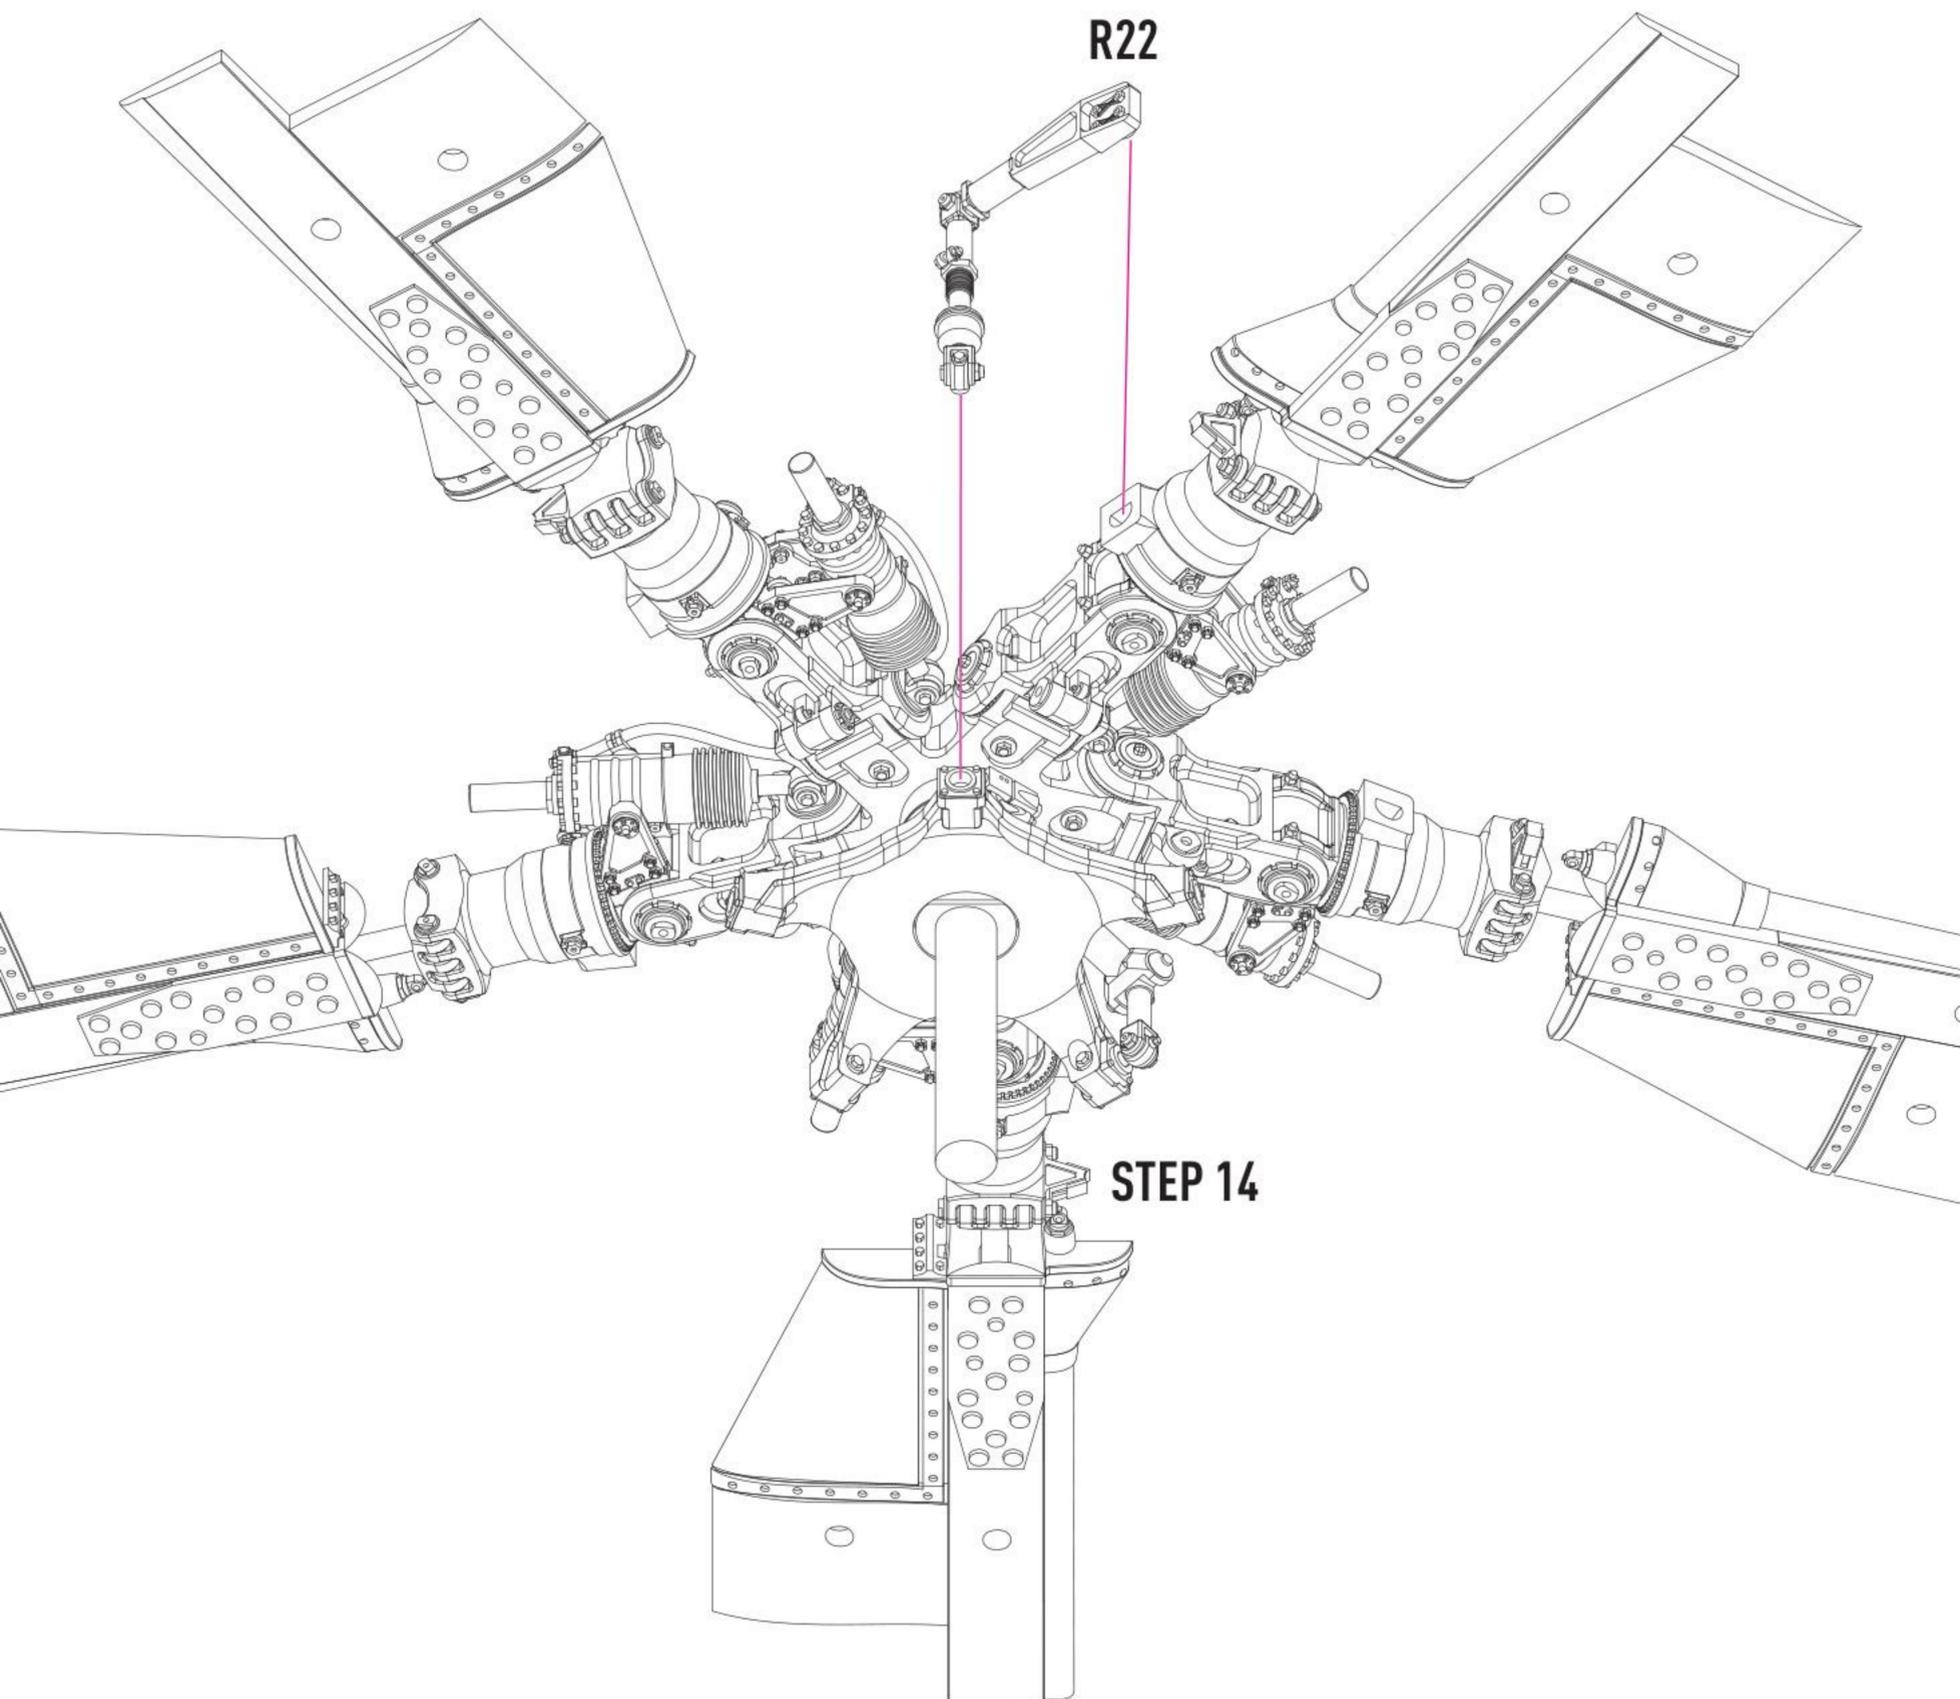


16

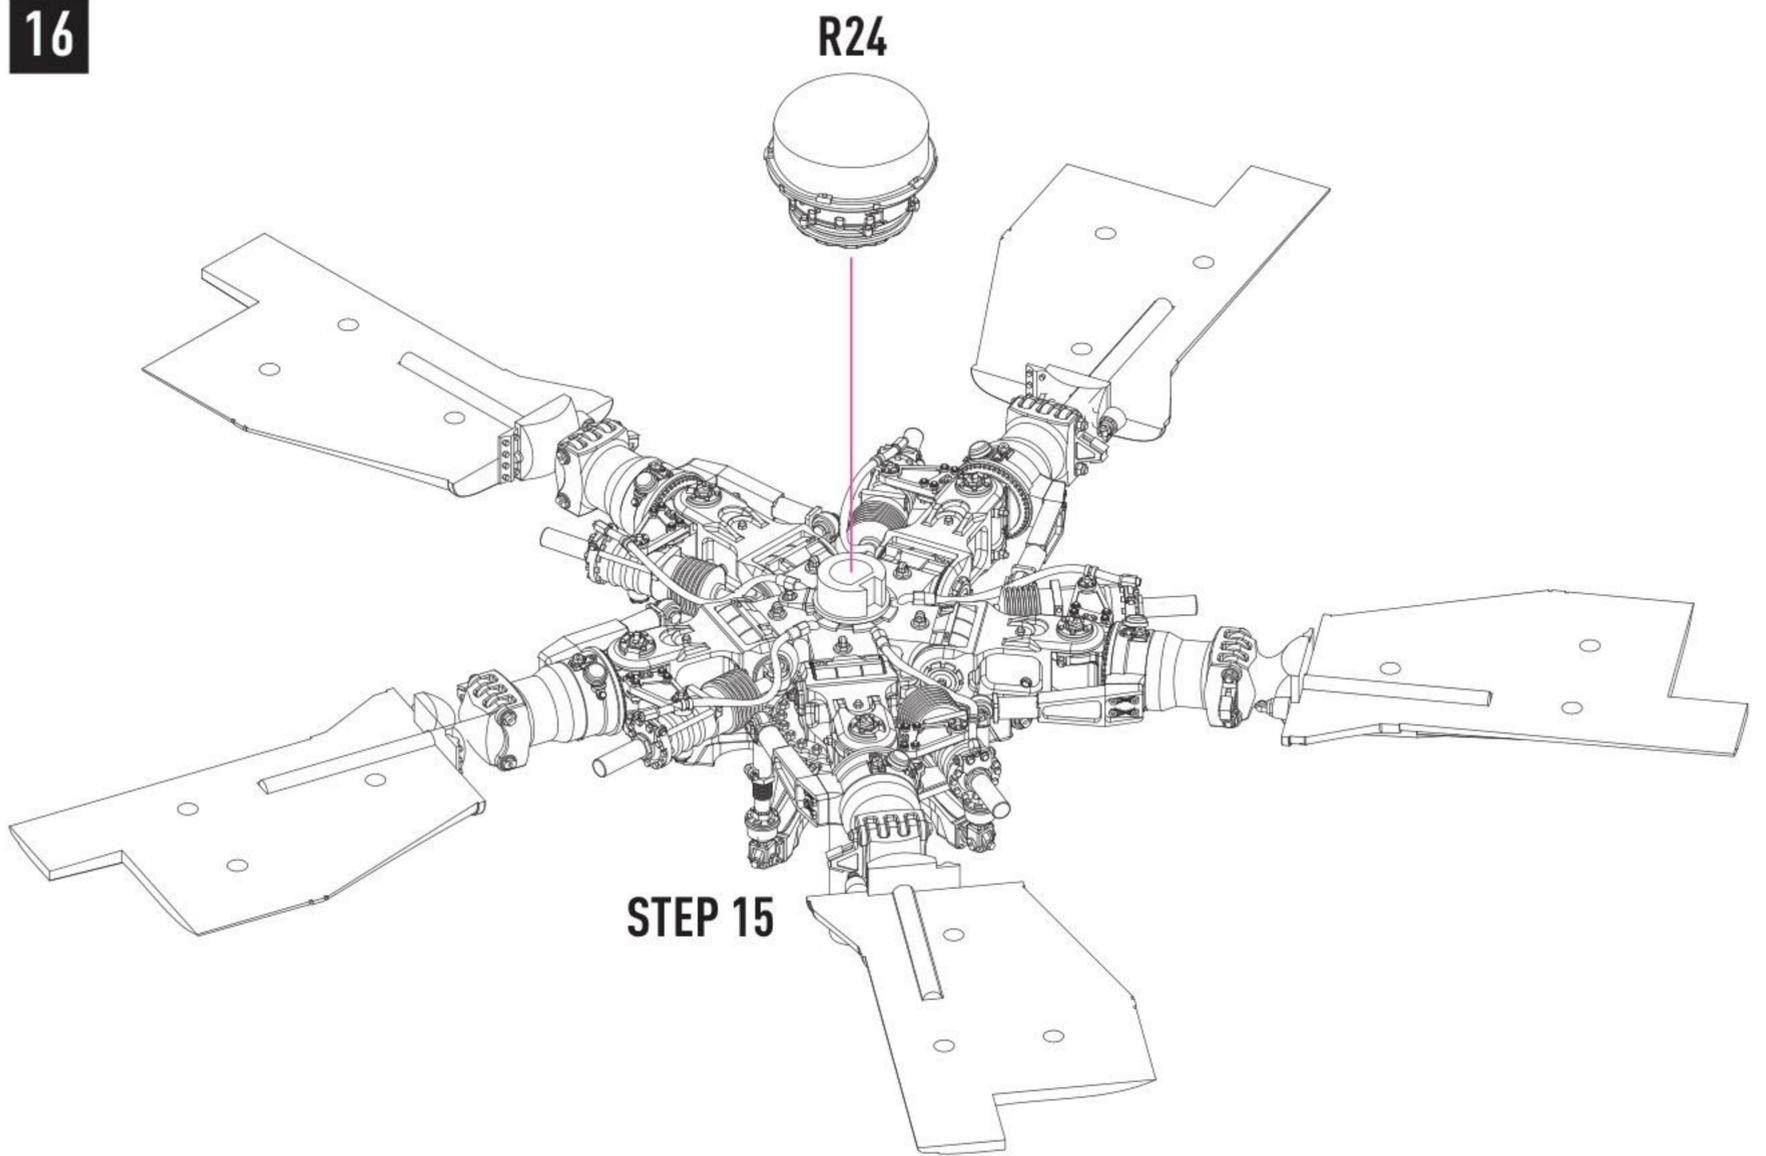


17

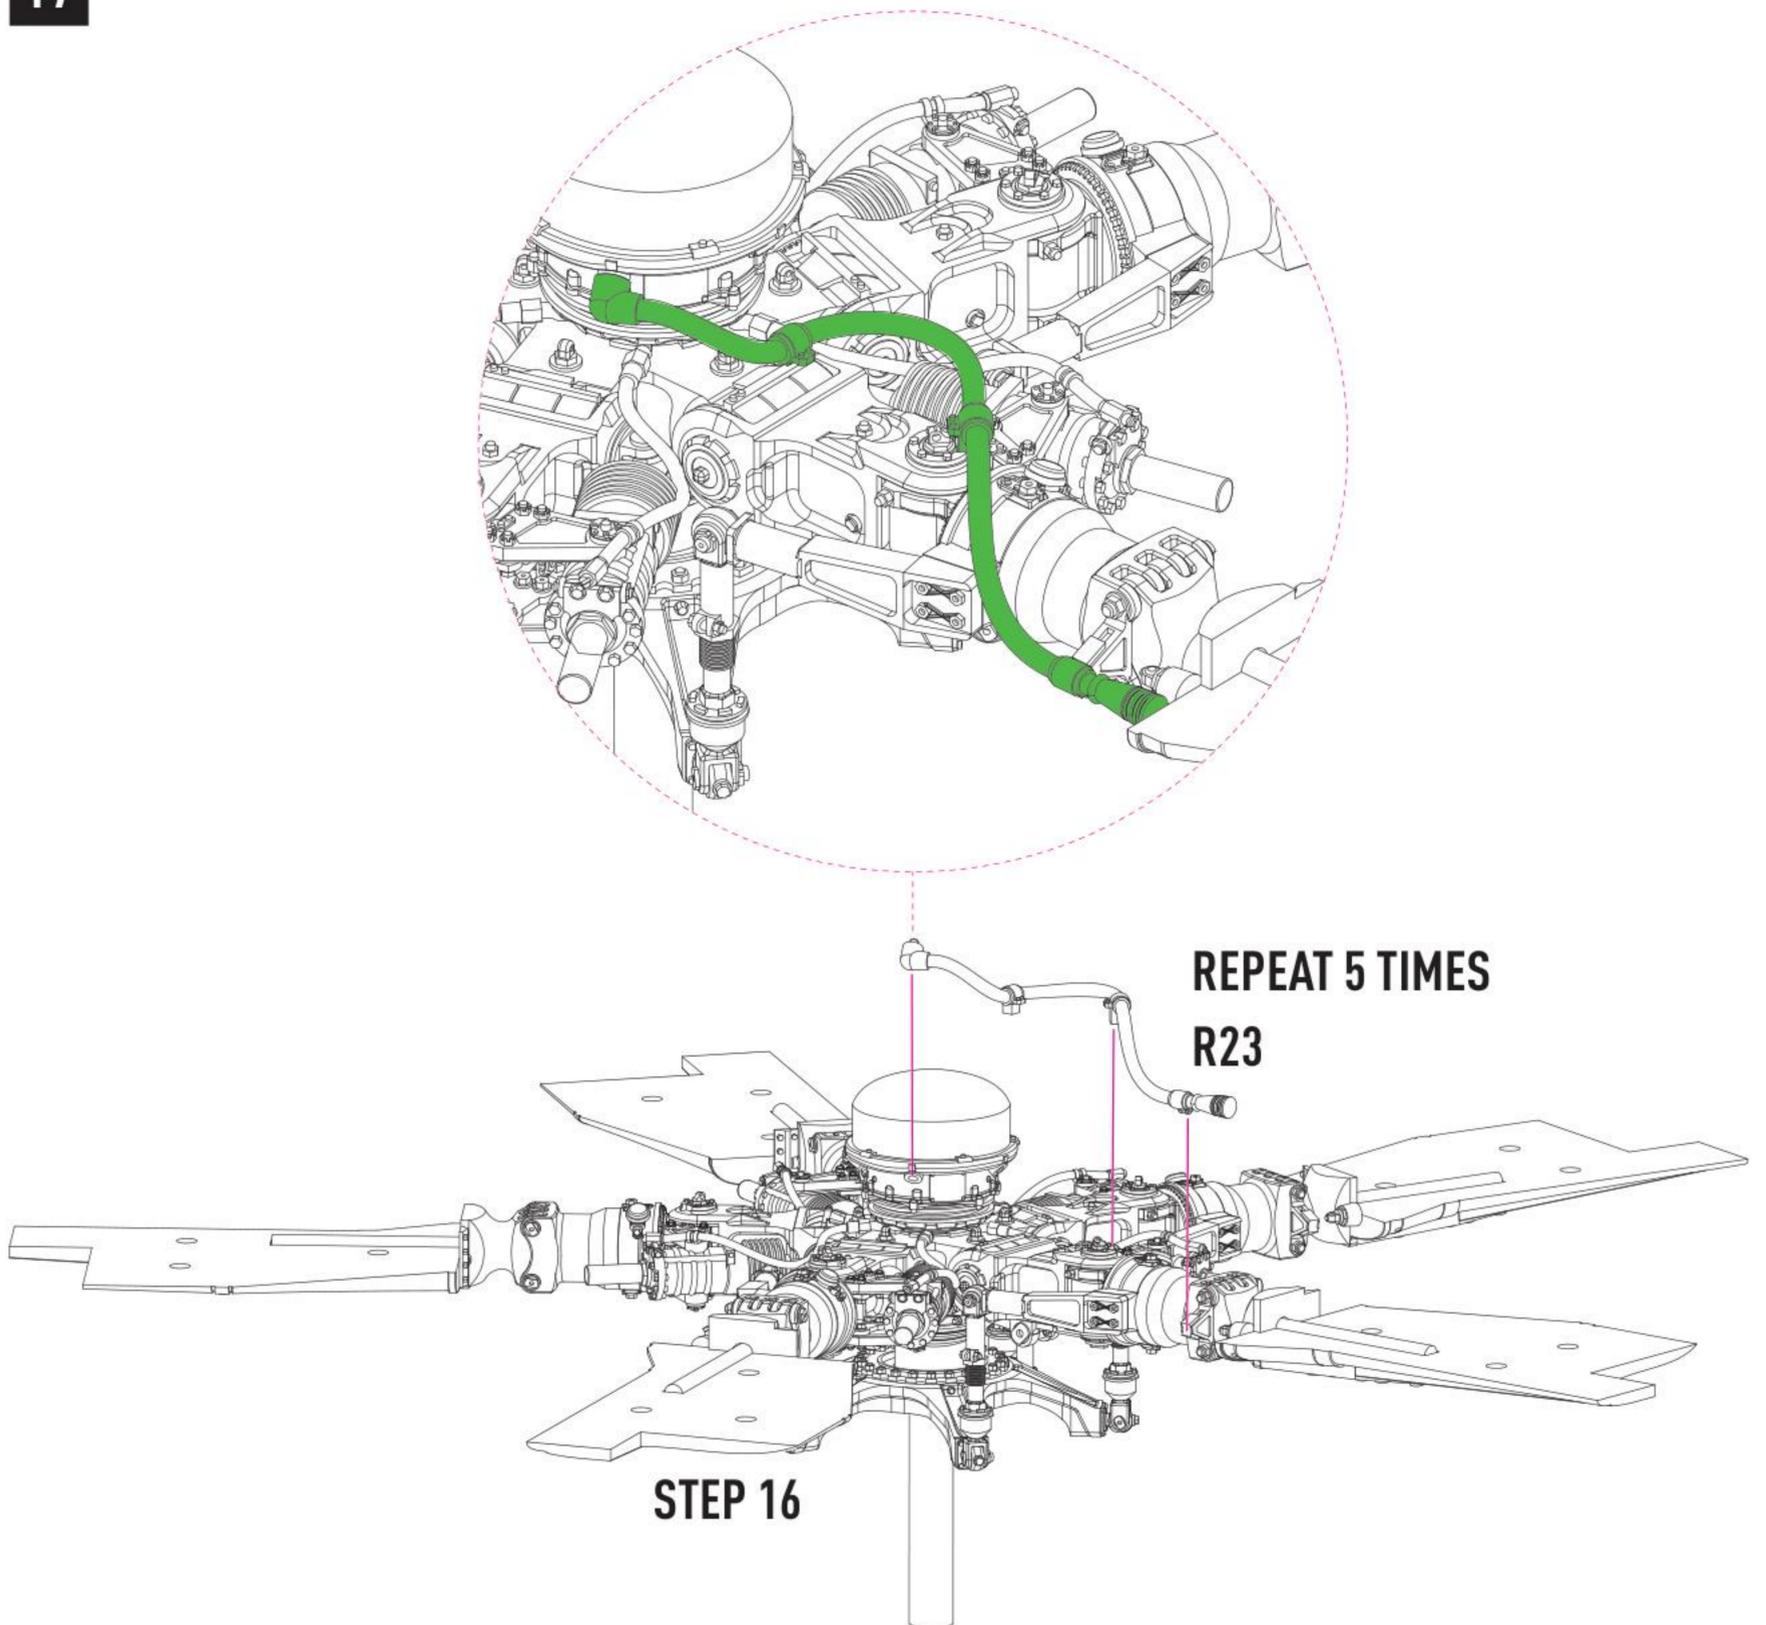

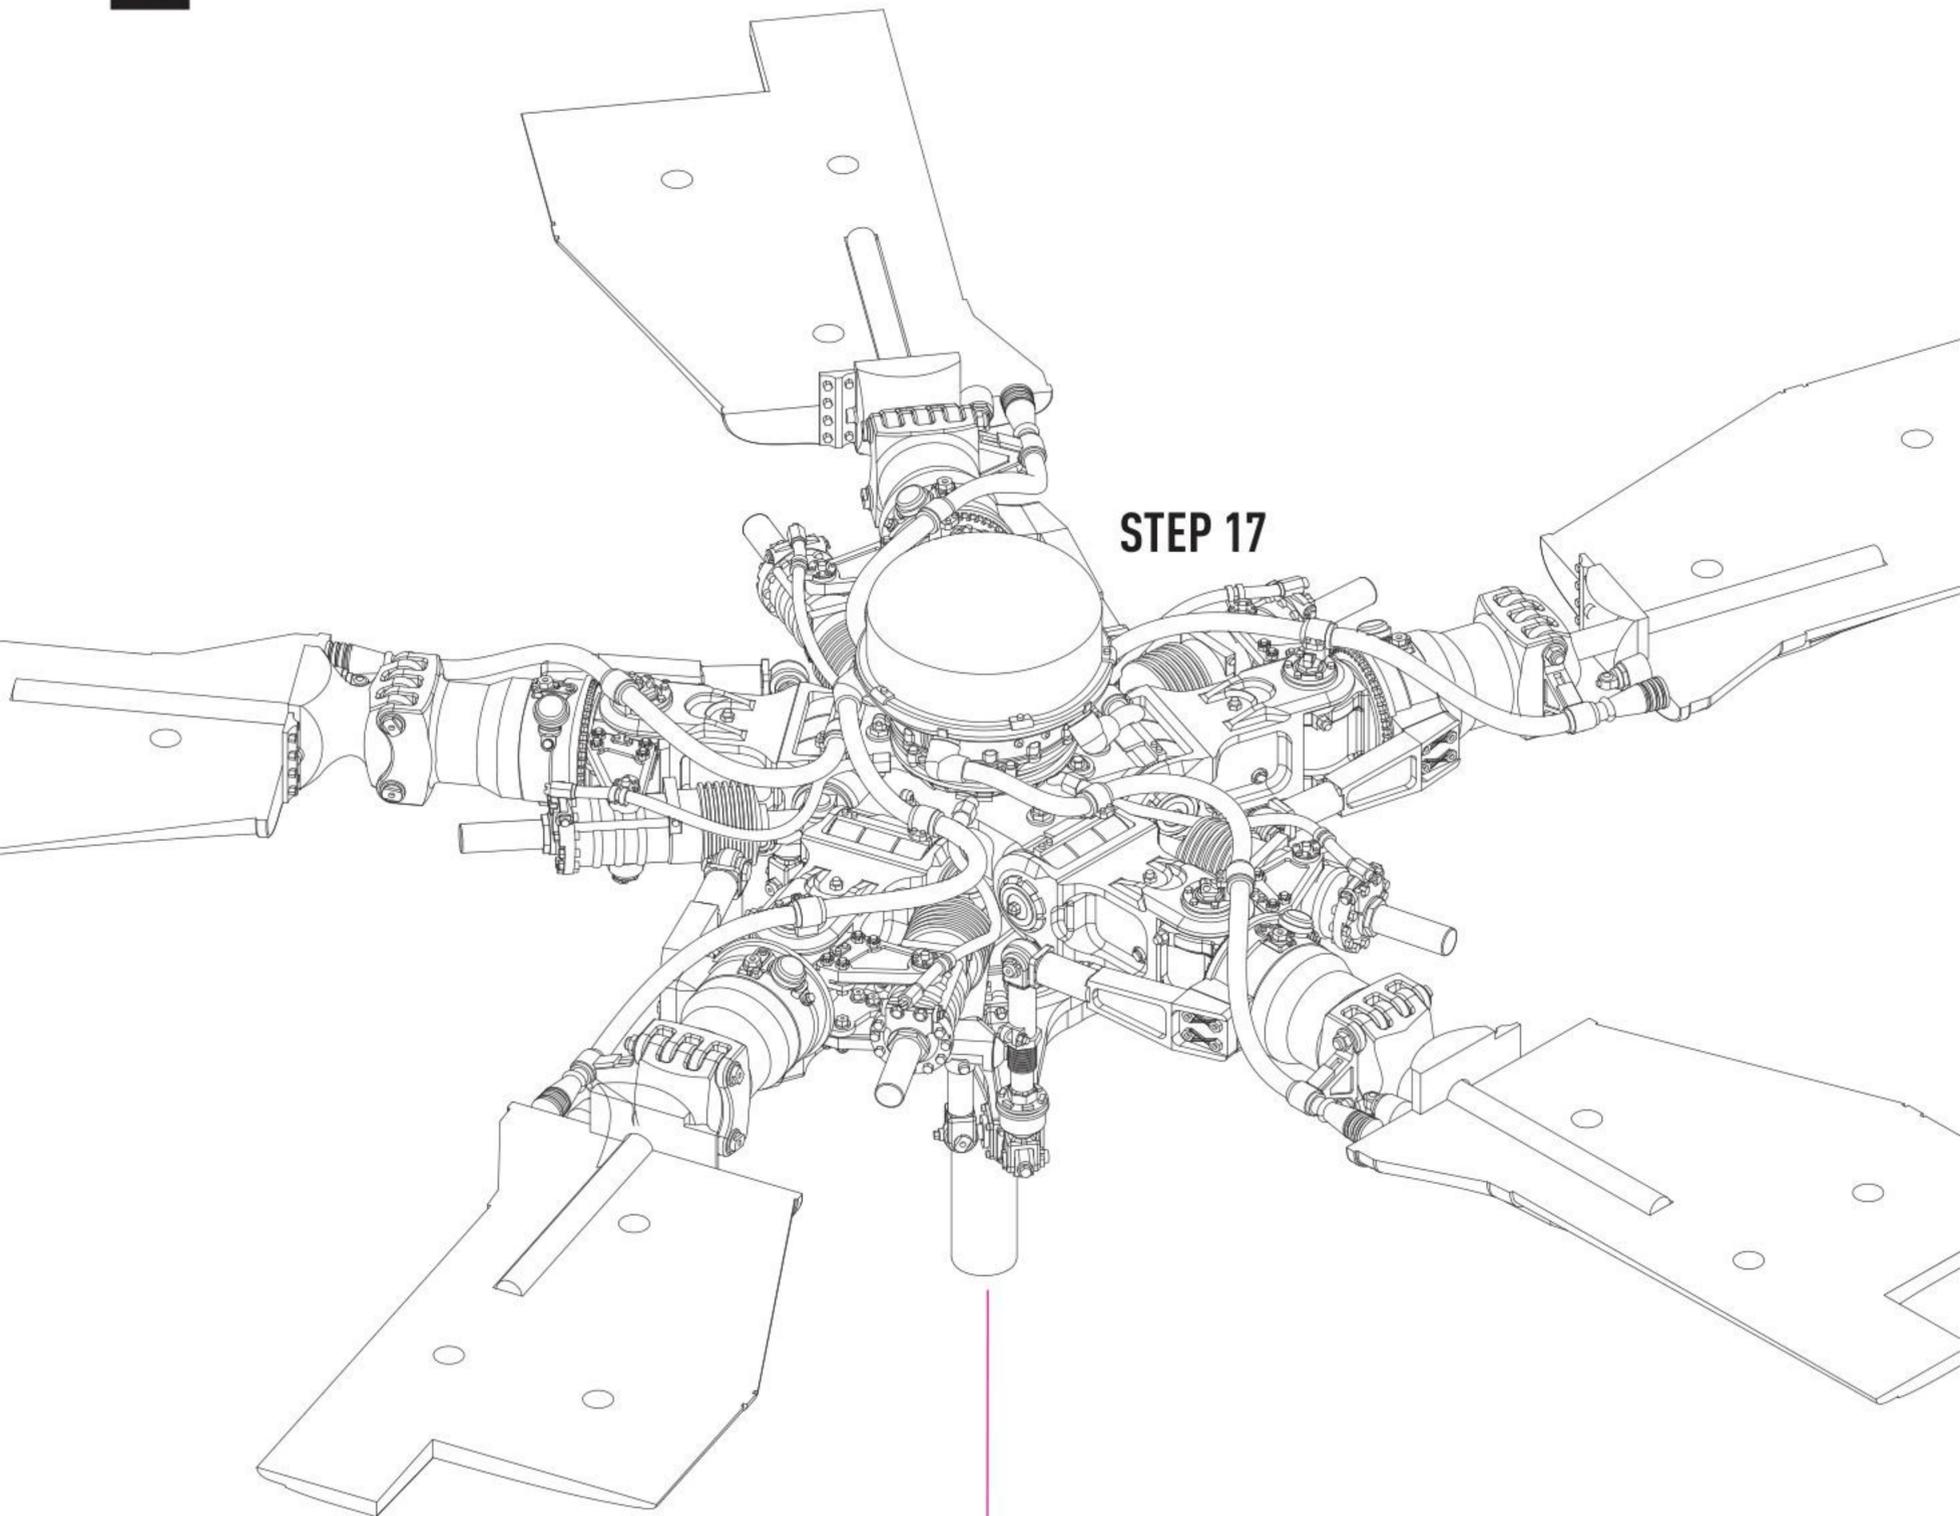


STEP 17

**DO NOT
GLUE**

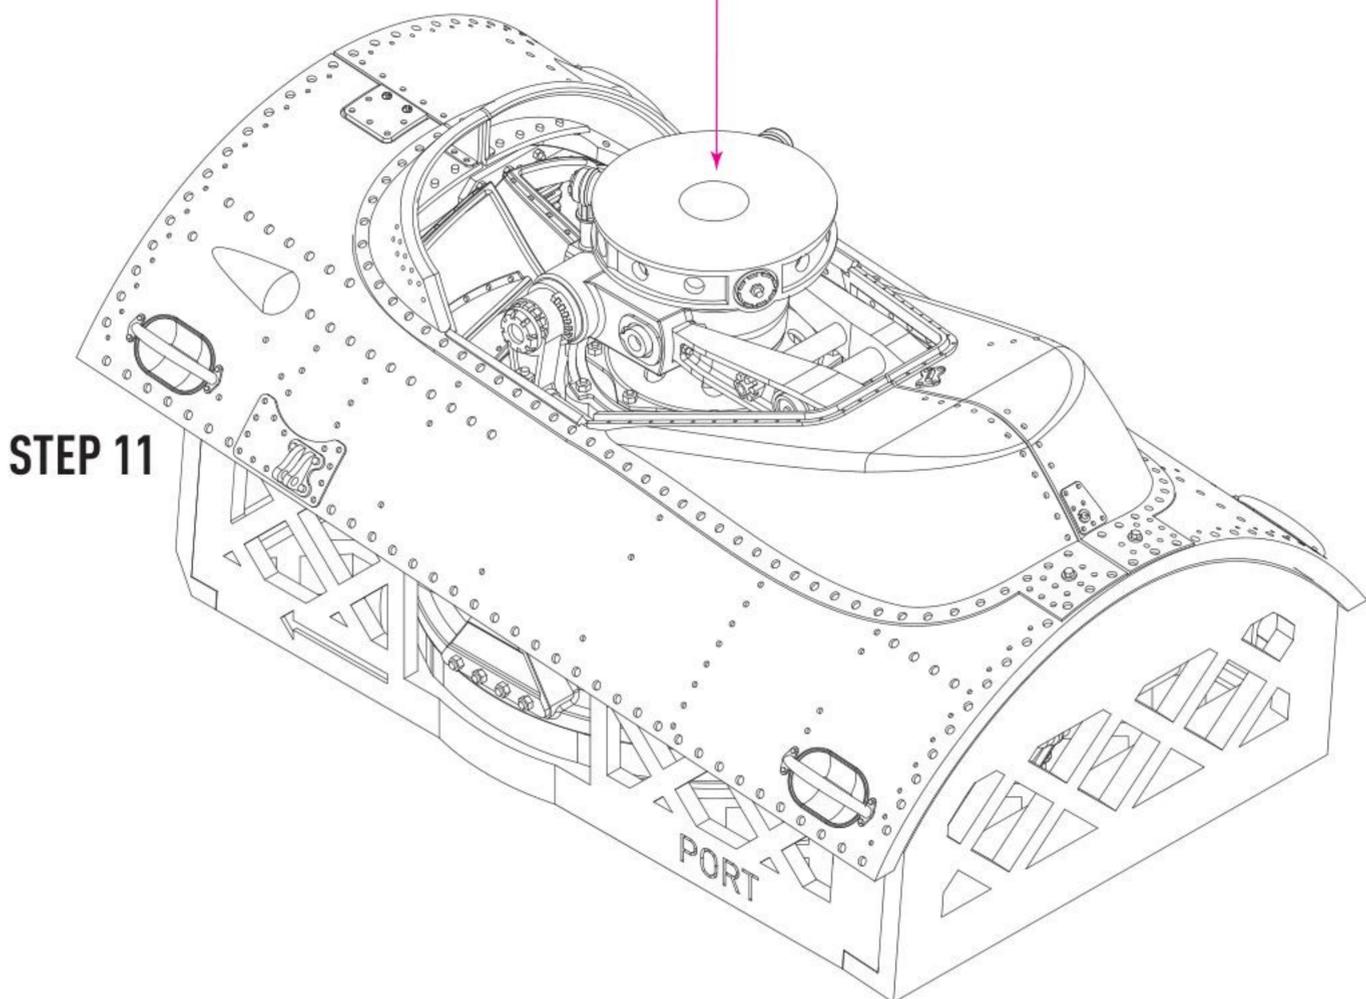


STEP 11

PORT

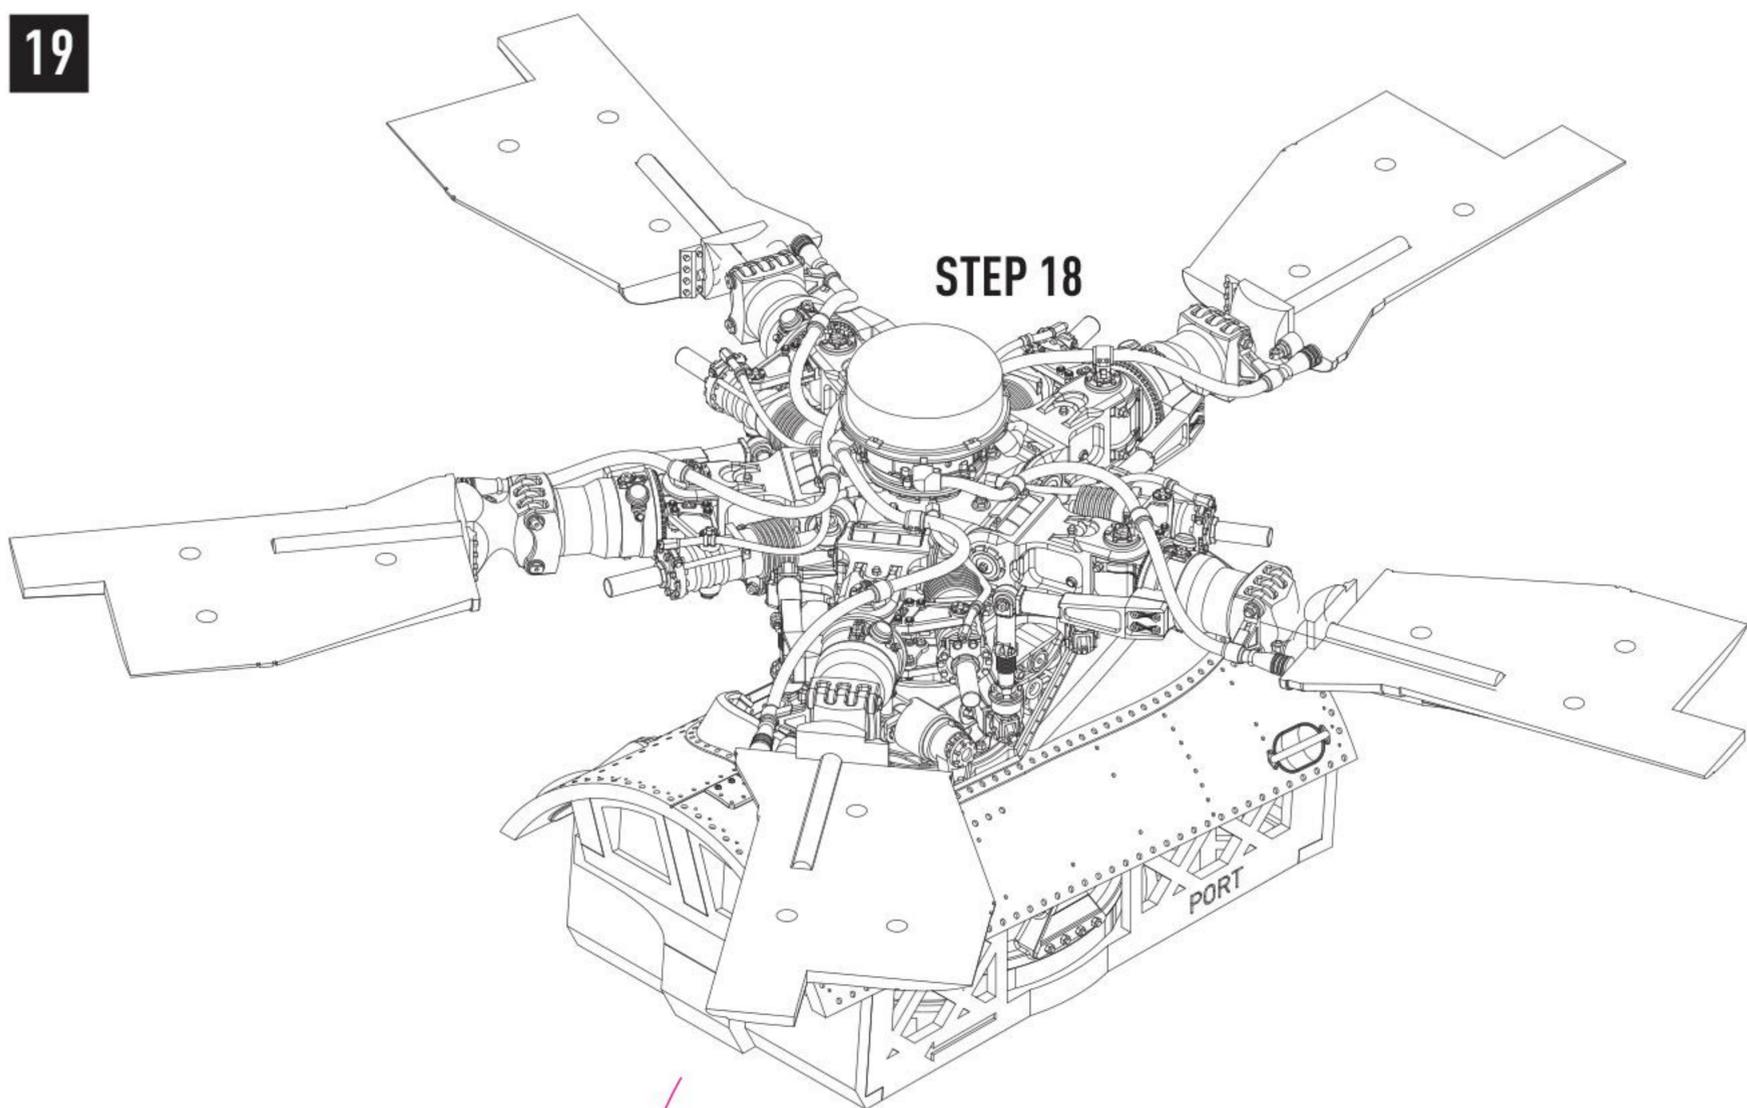

IN ORDER TO USE RESKIT KIT, CUT OFF INDICATED PART FROM TRUMPETER PLASTIC KIT FUSELAGE PARTS. USE PANEL LINES AS YOUR REFERENCE.

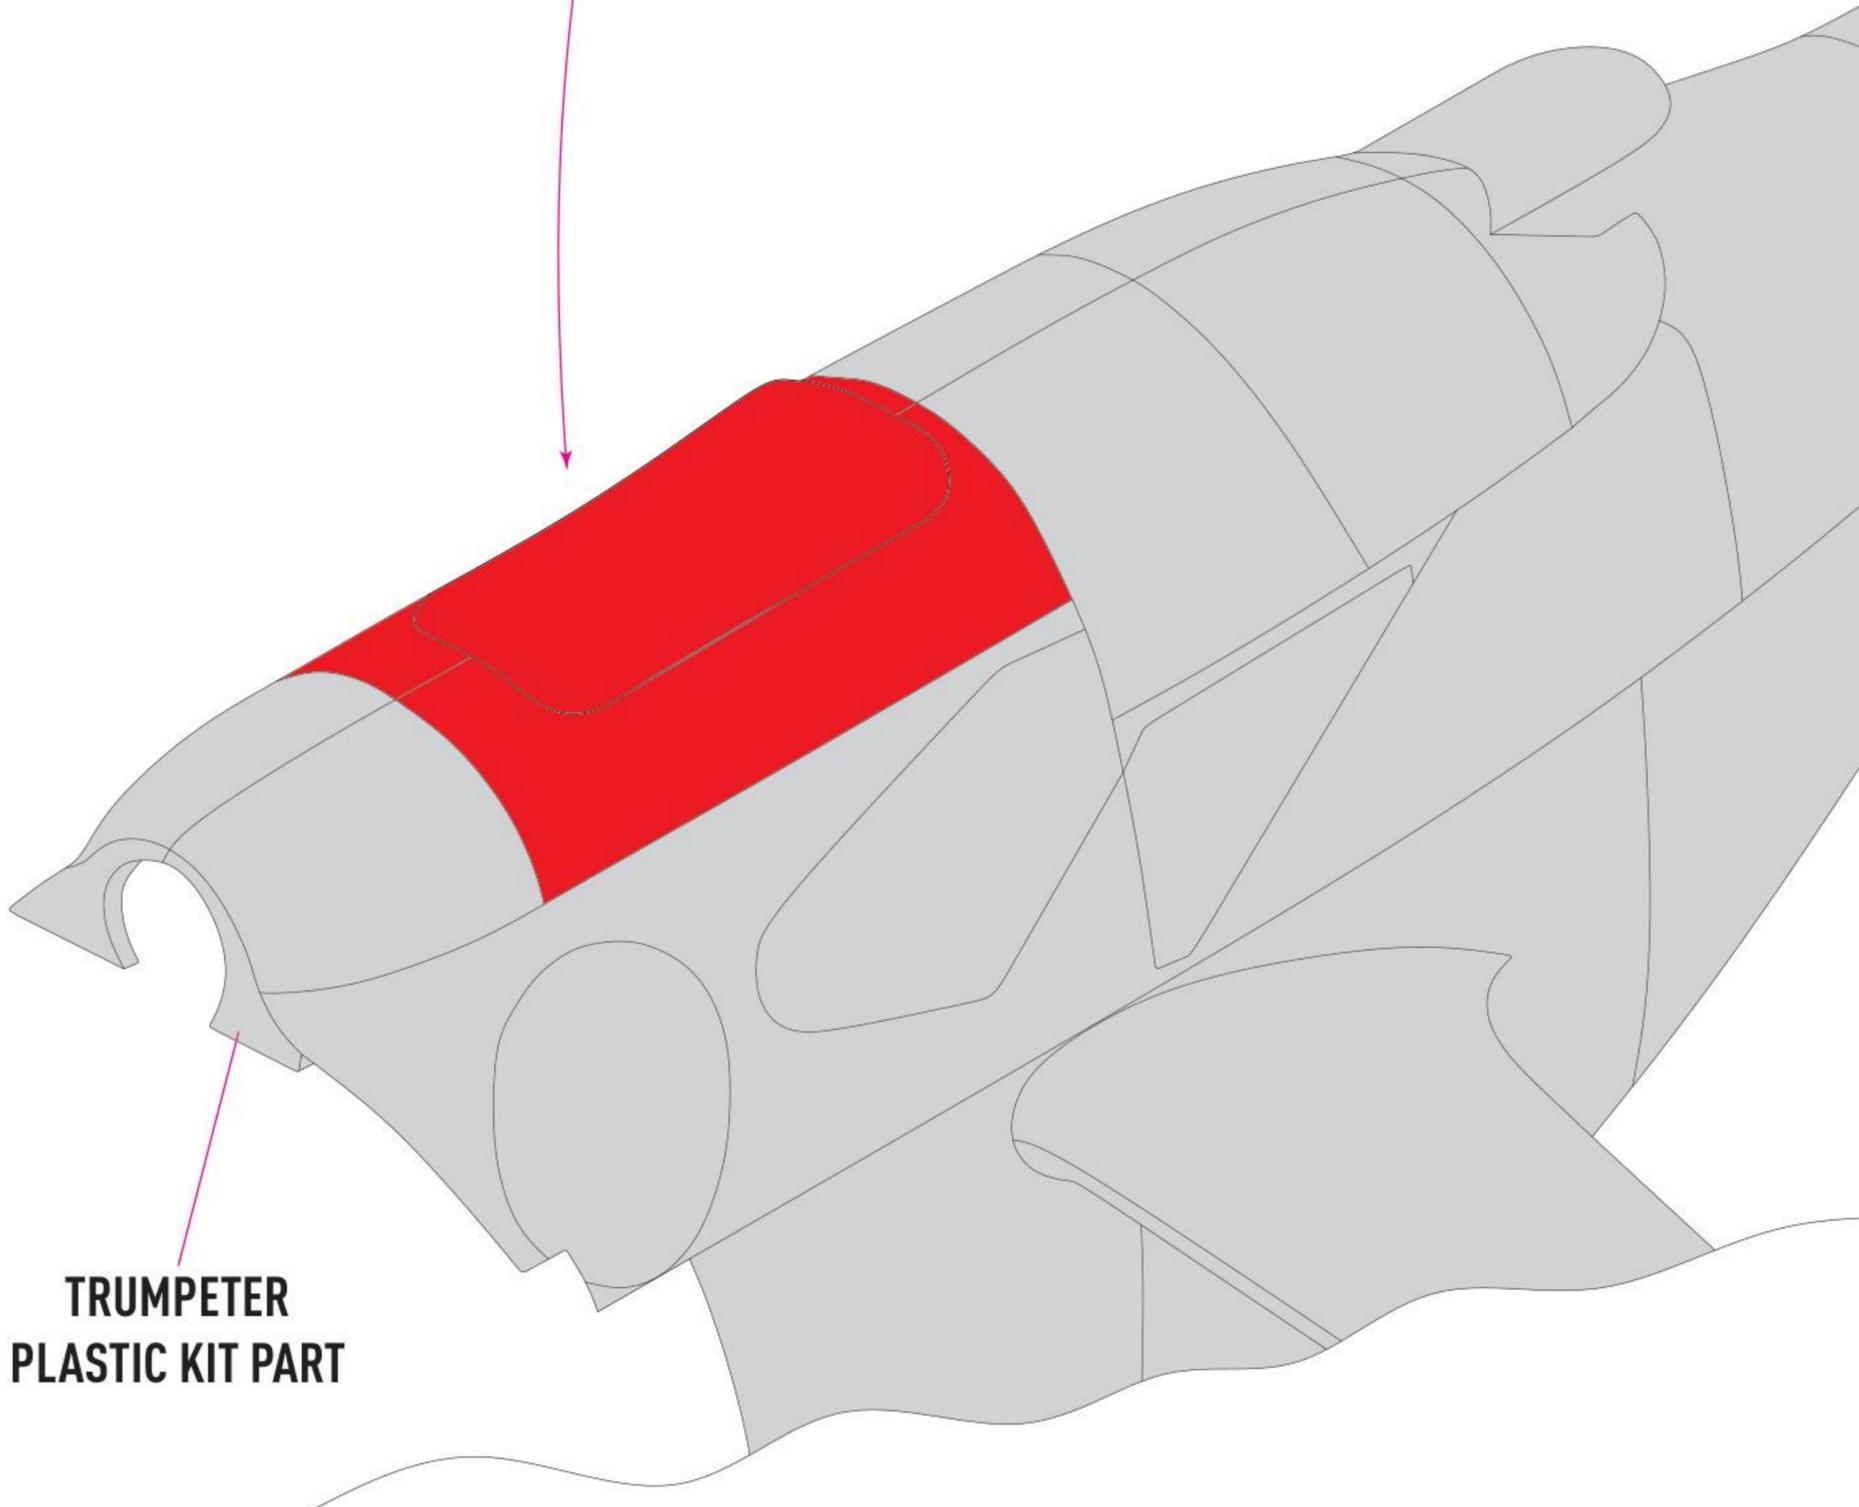

TRUMPETER PLASTIC KIT PART

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua