



**DETAILS AFTER REMOVAL
 FROM SUPPORTS**


USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS

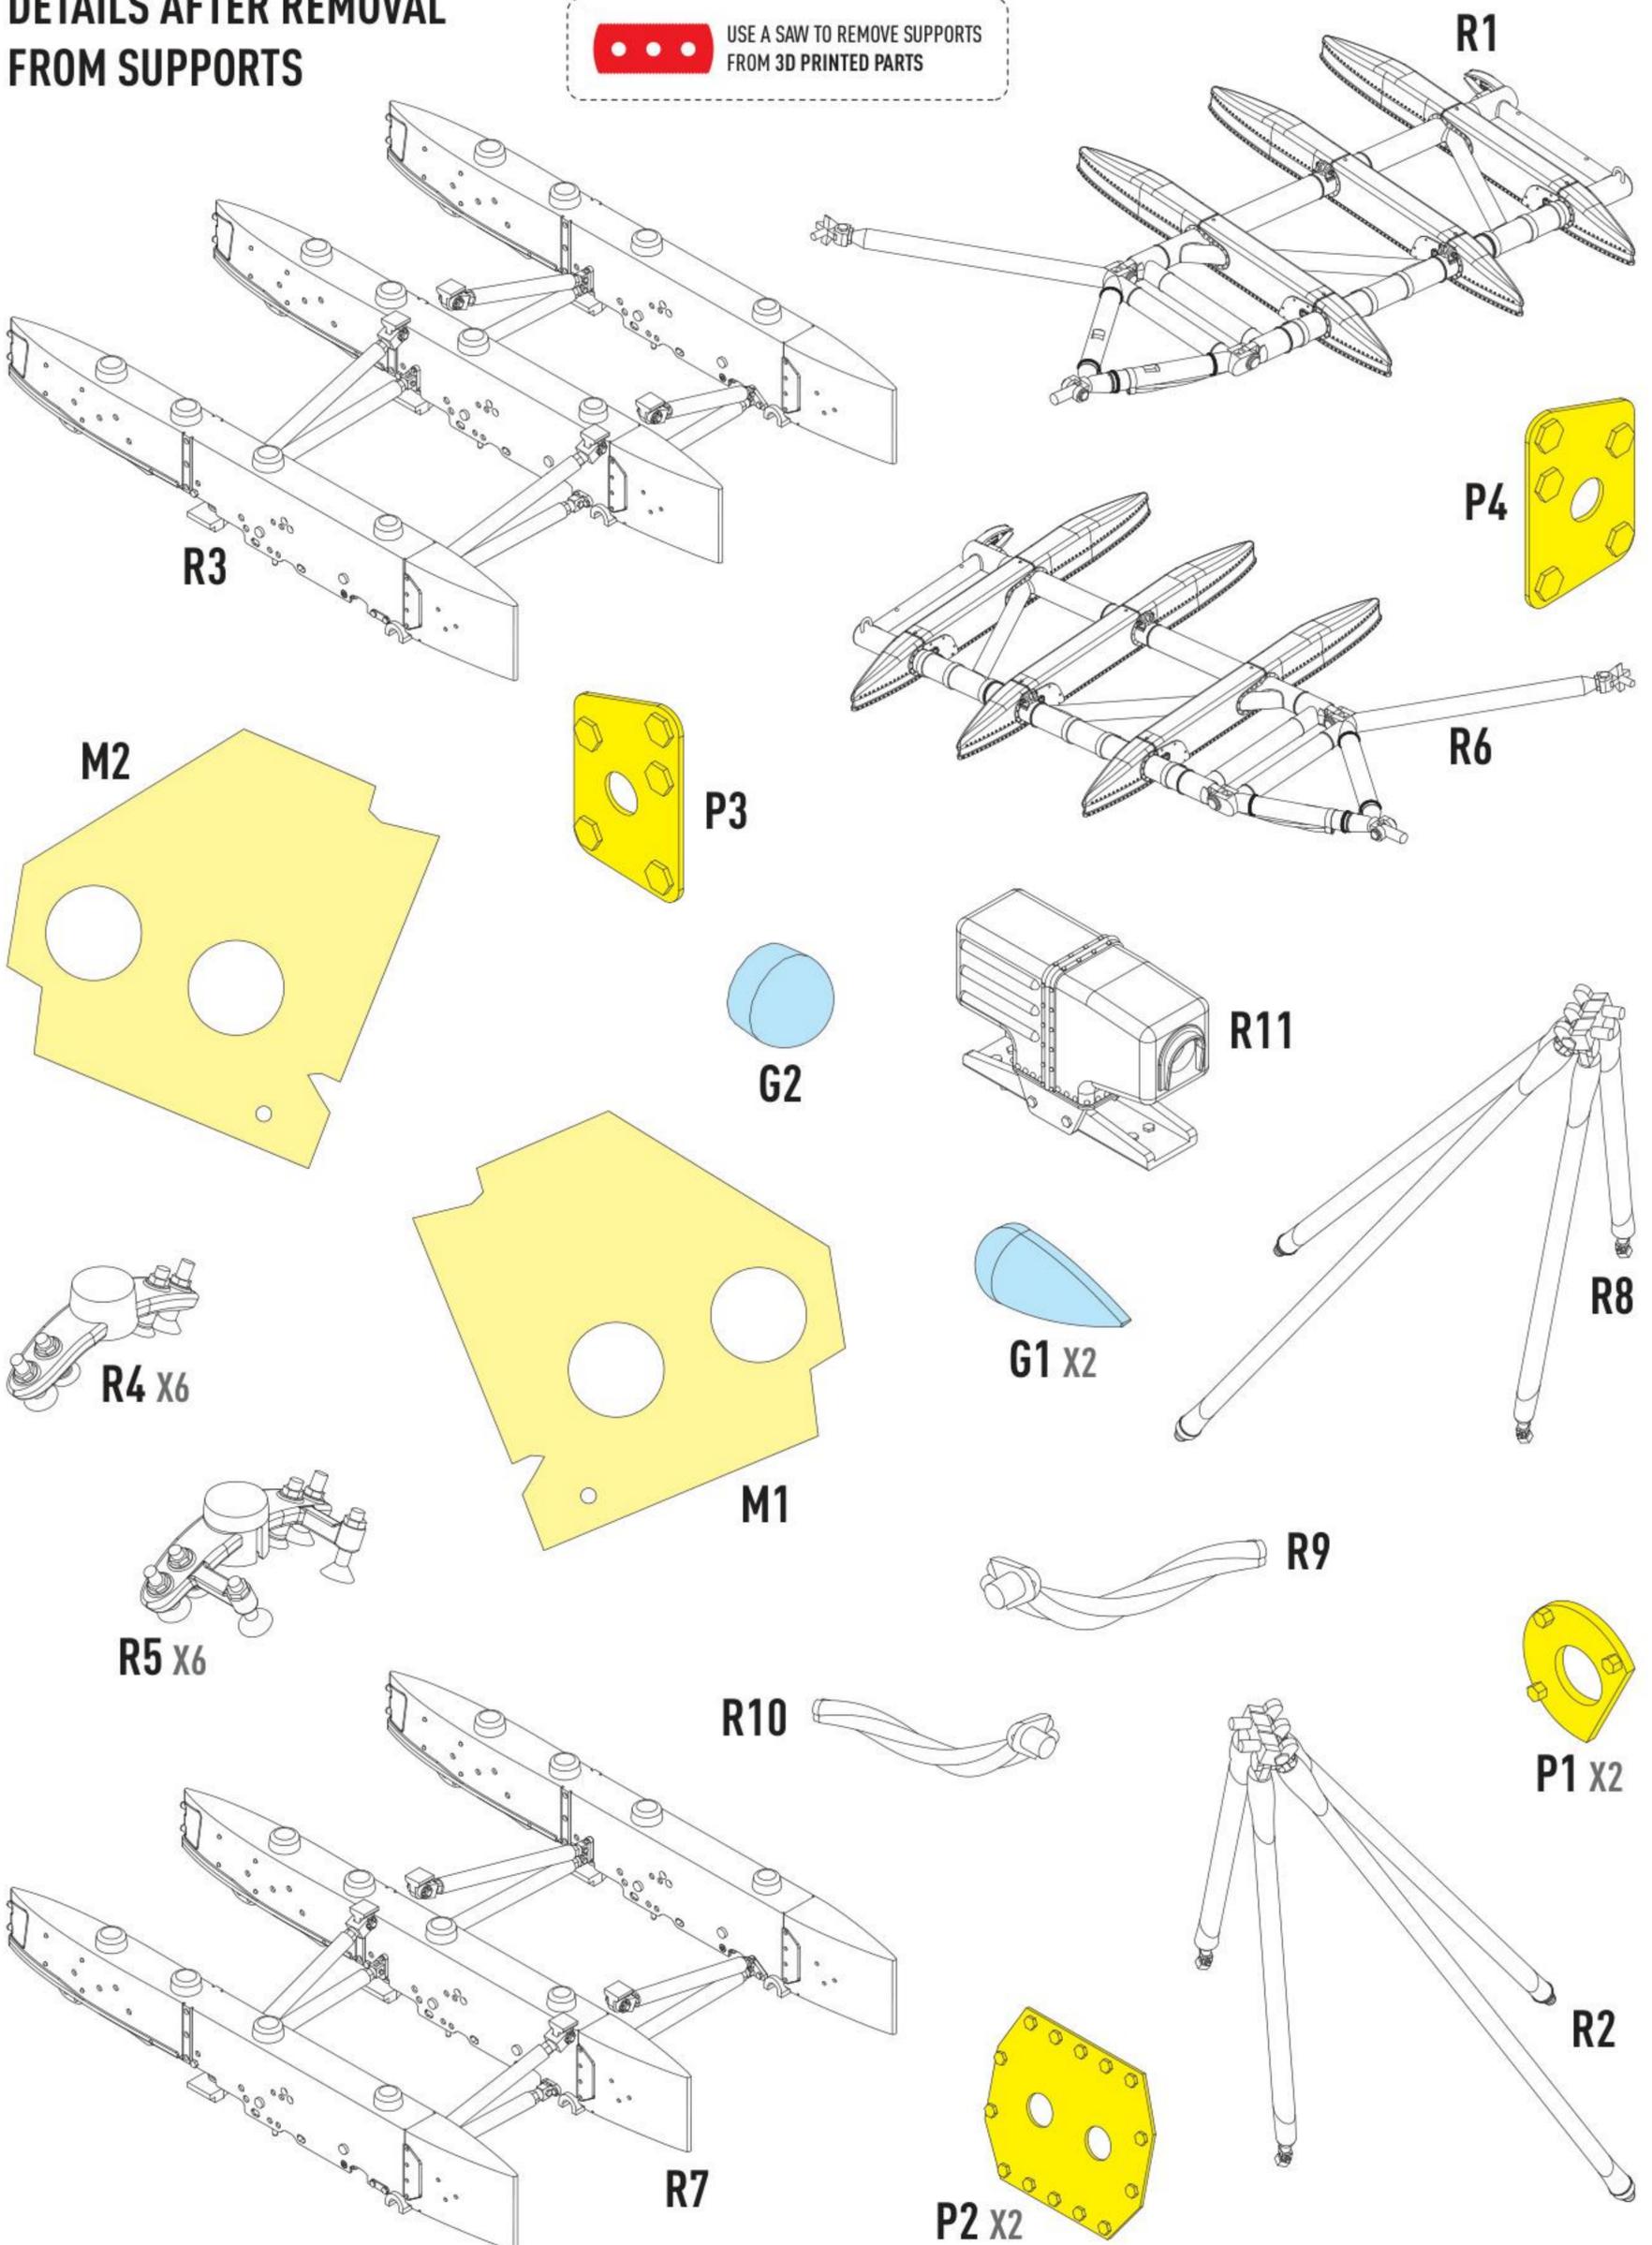

1 LEFT SIDE

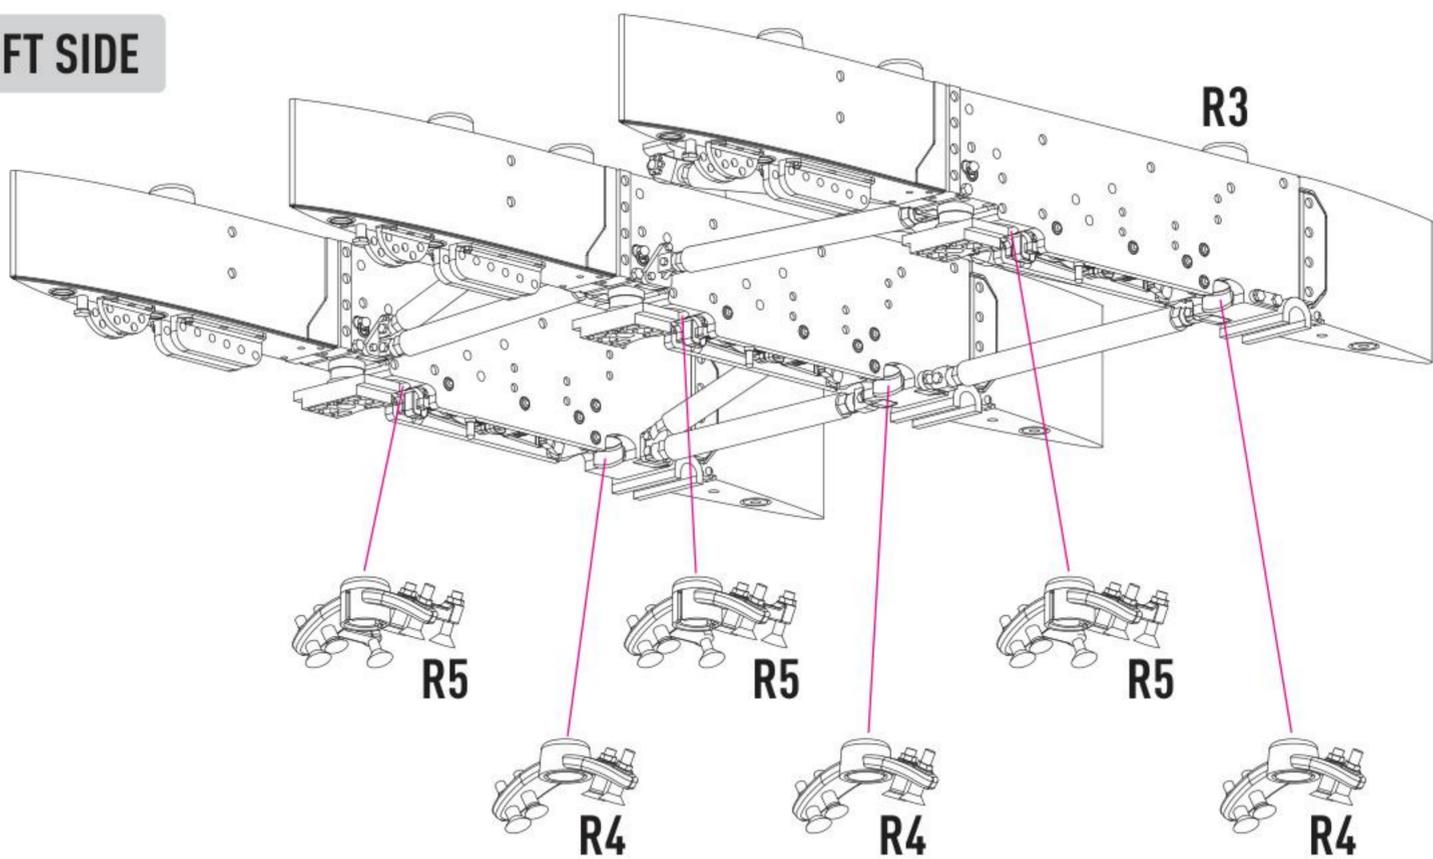


2

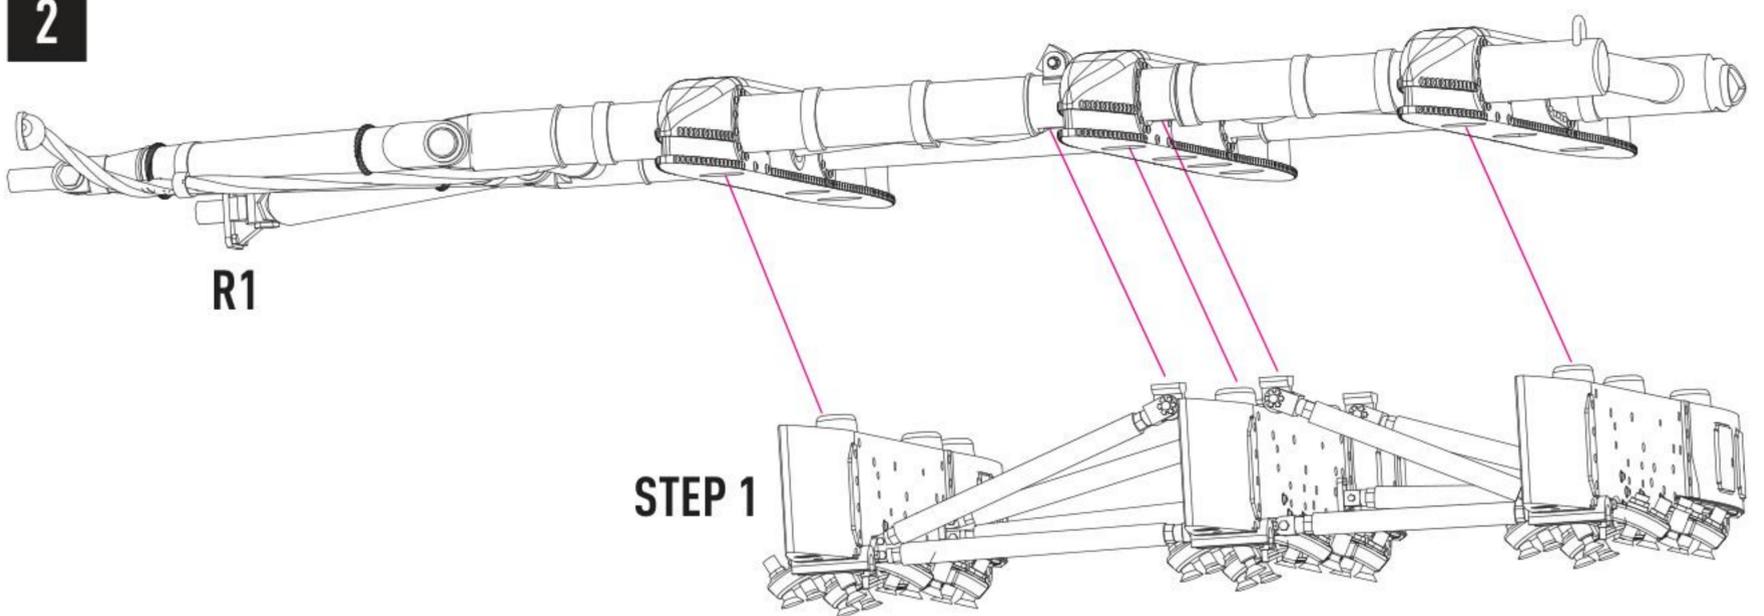


3


BEFORE INSTALLATION, APPLY GLOSS VARNISH ON TRANSPARENT PART

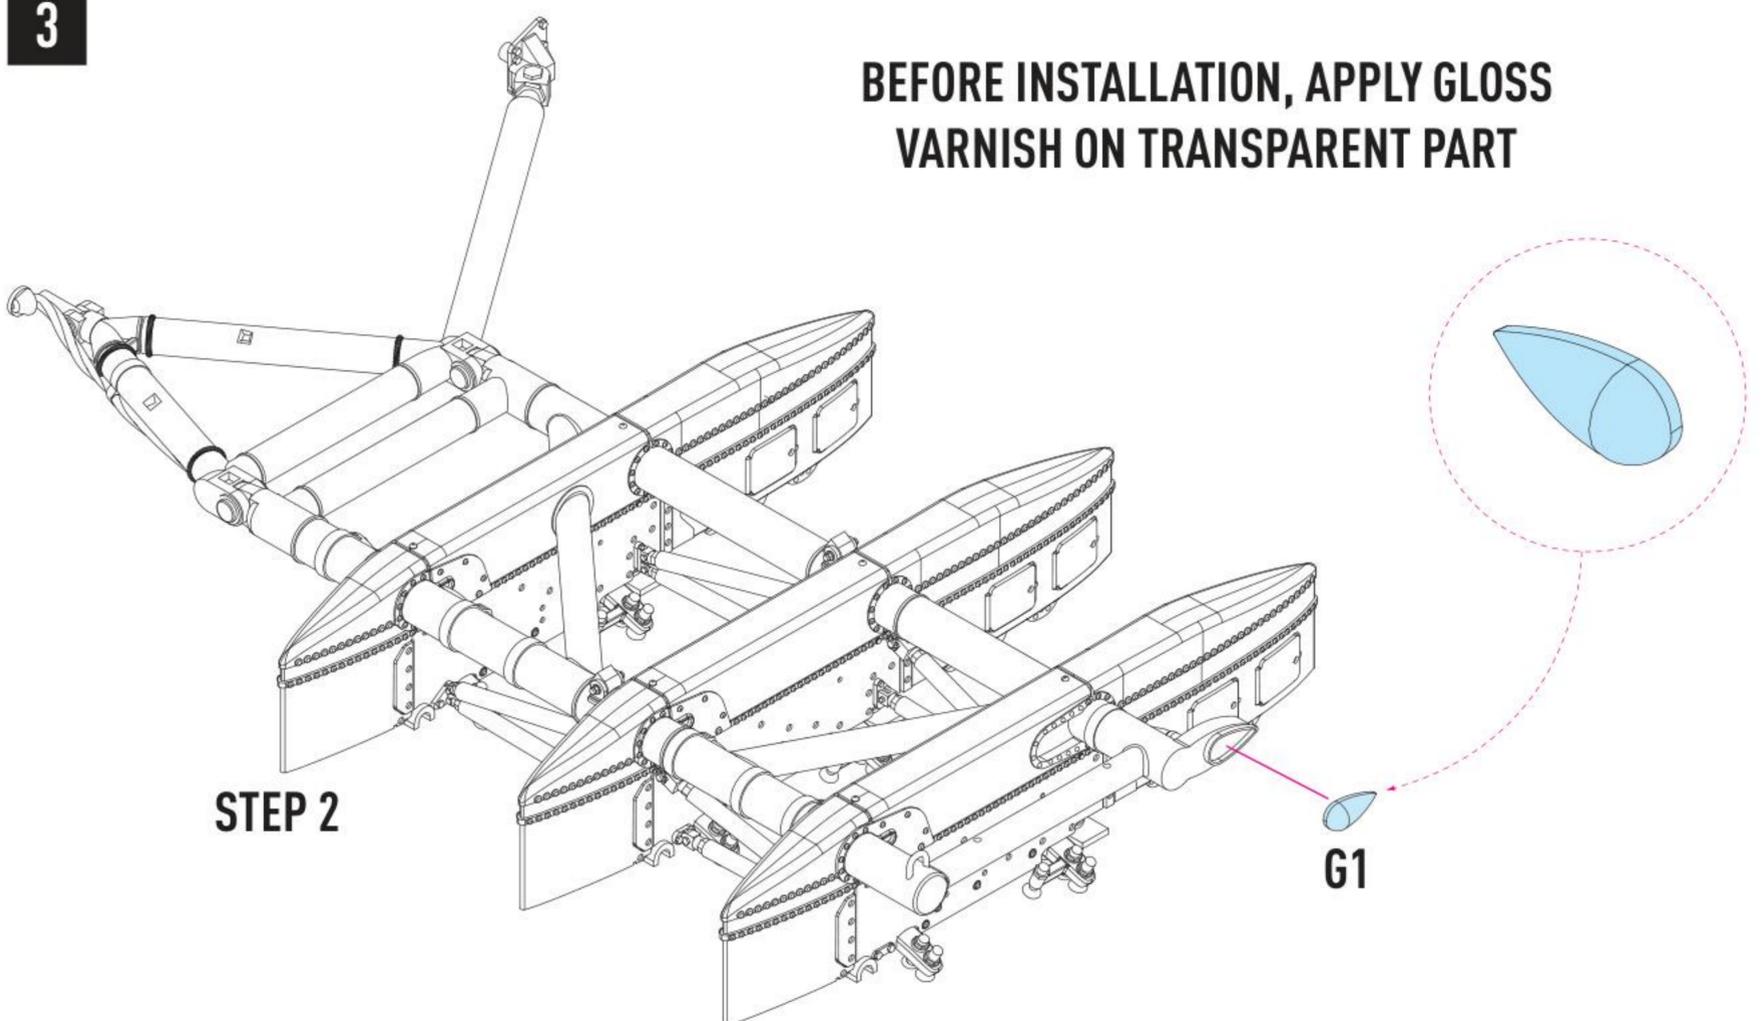

4

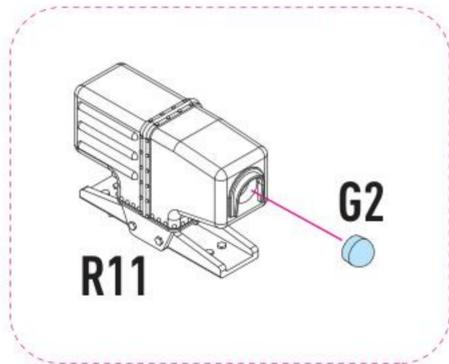


USE PART G2 OR APPLY
A DROP OF UV-GLUE

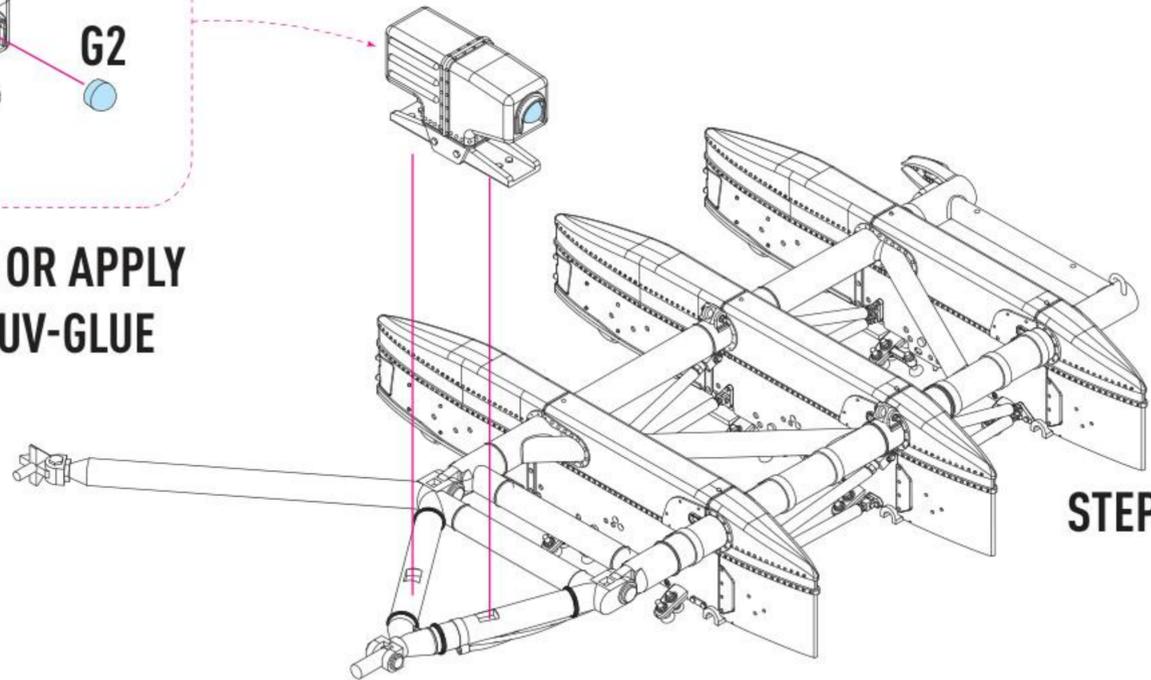

STEP 3

5

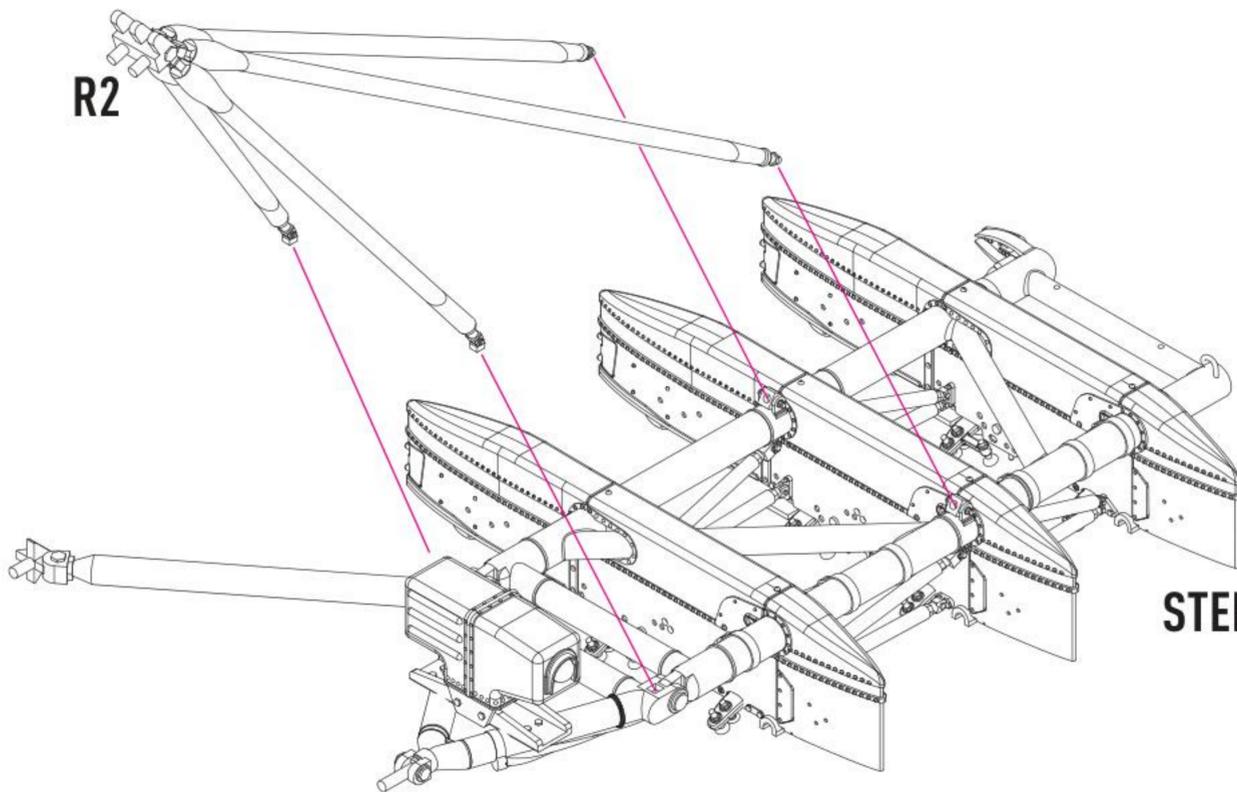


STEP 4


6

PART FROM
TRUMPETER KIT


GLUE M1 MASK
(GUIDED BY THE WINDOWS)

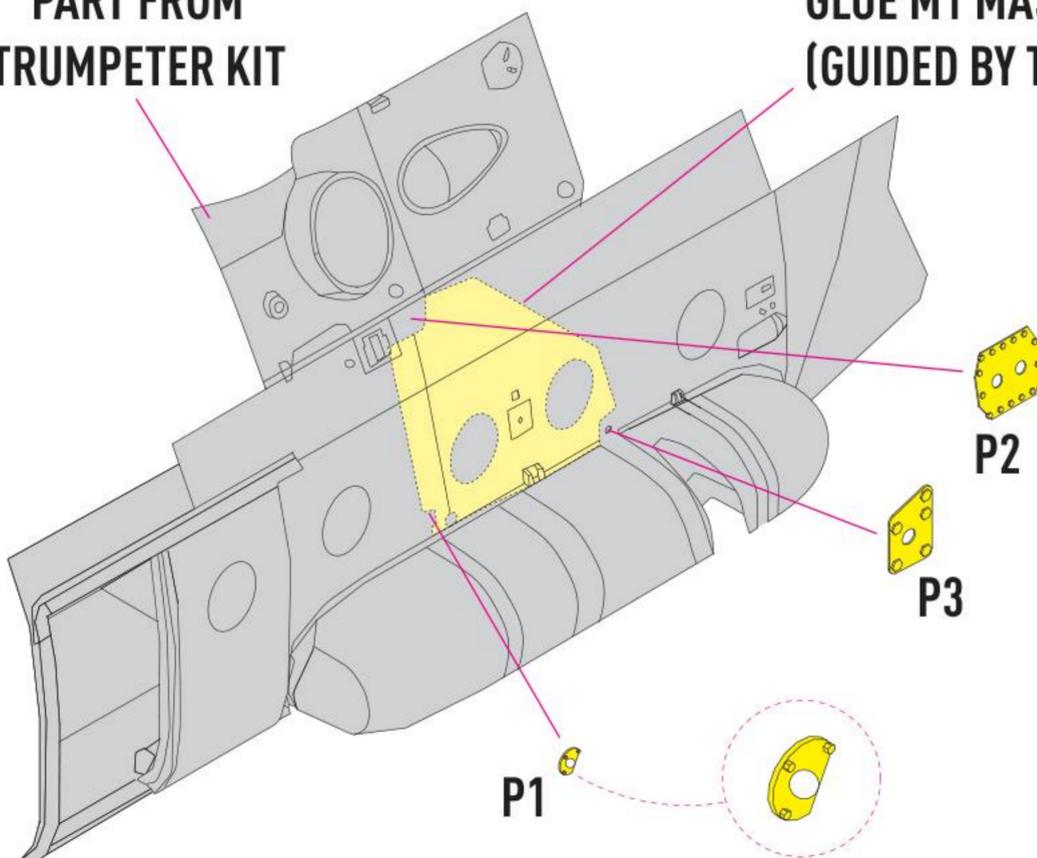


7

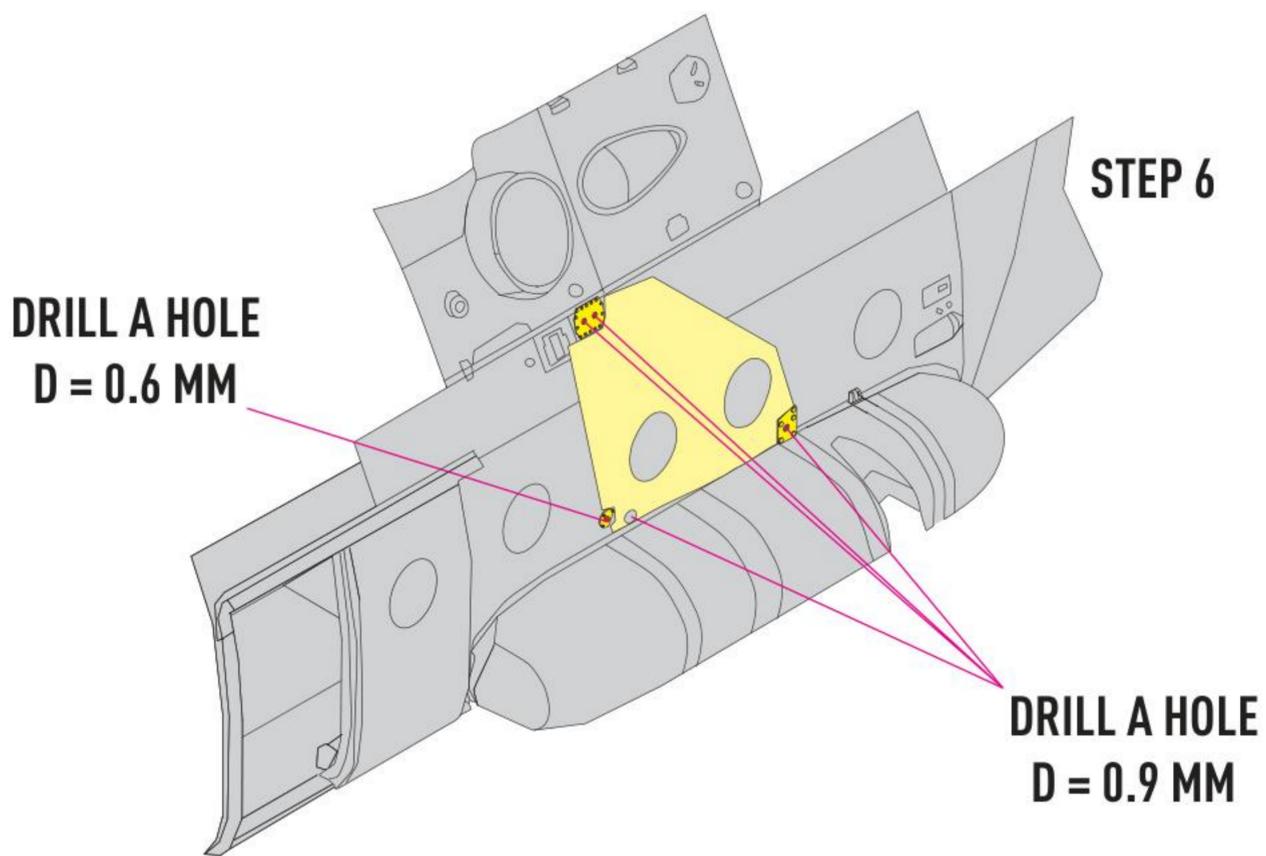



8 REMOVE MASK

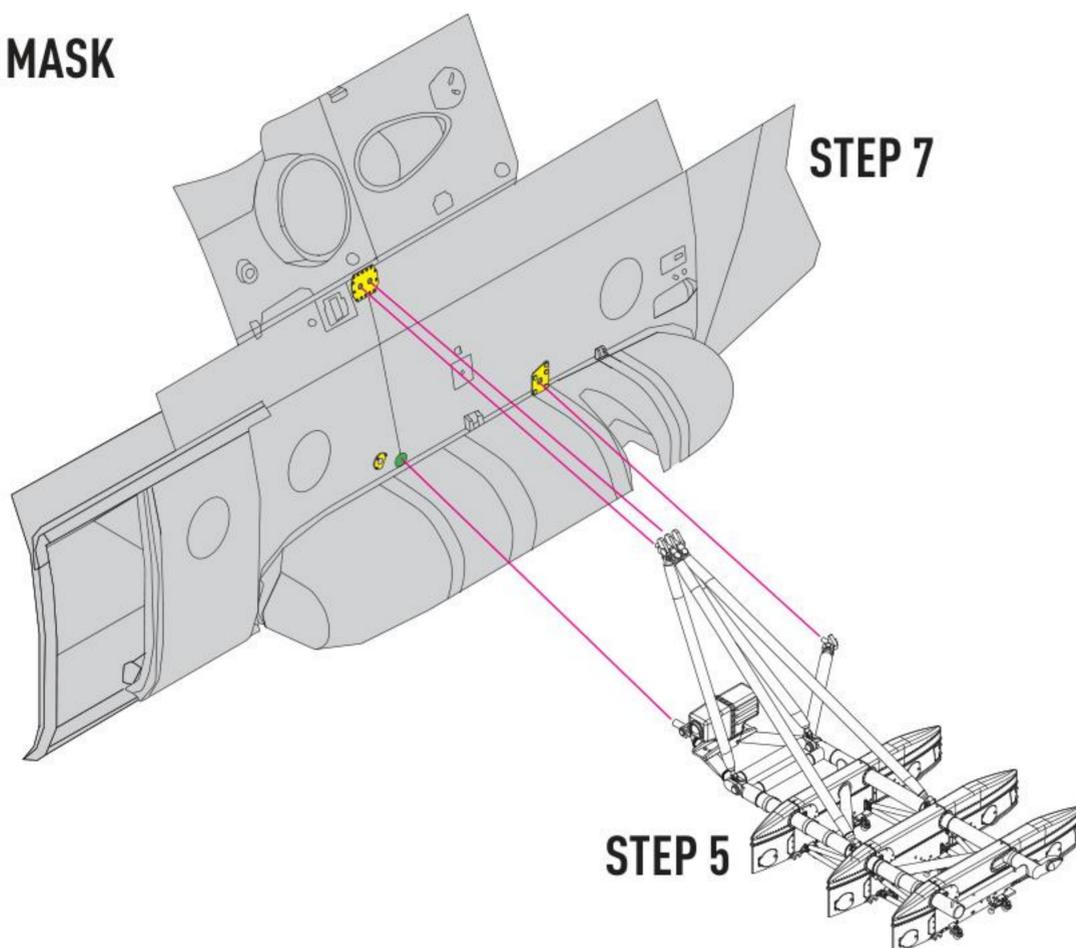


9

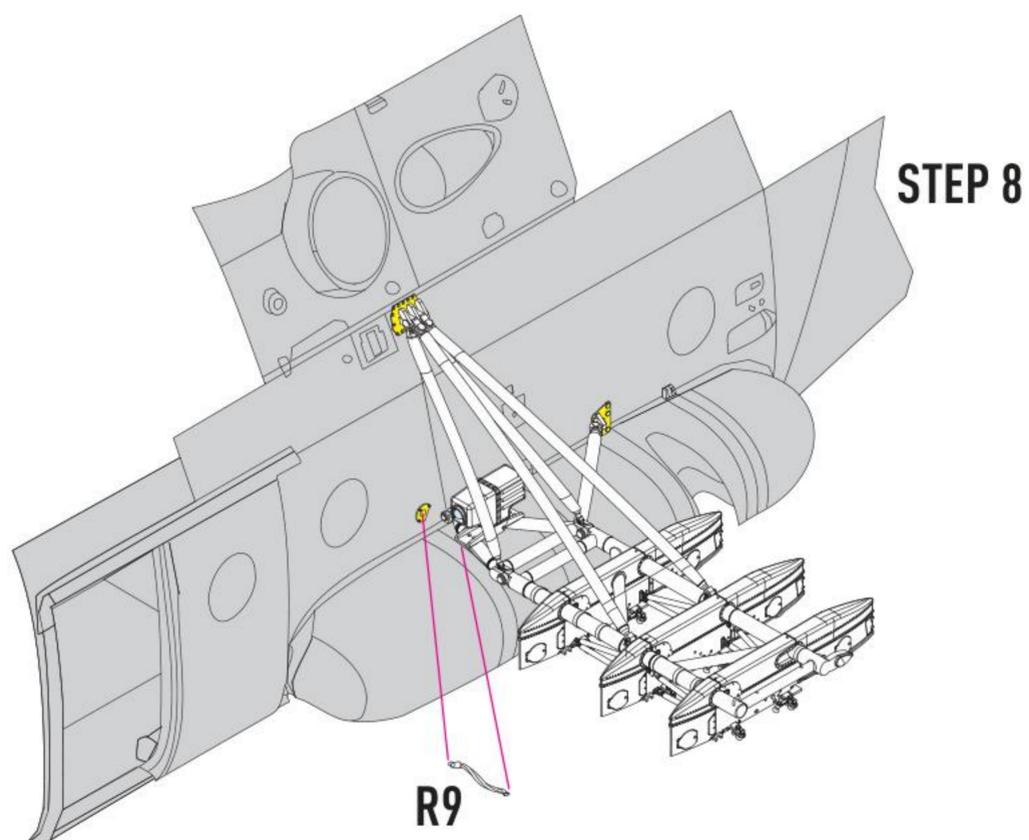


10 RIGHT SIDE

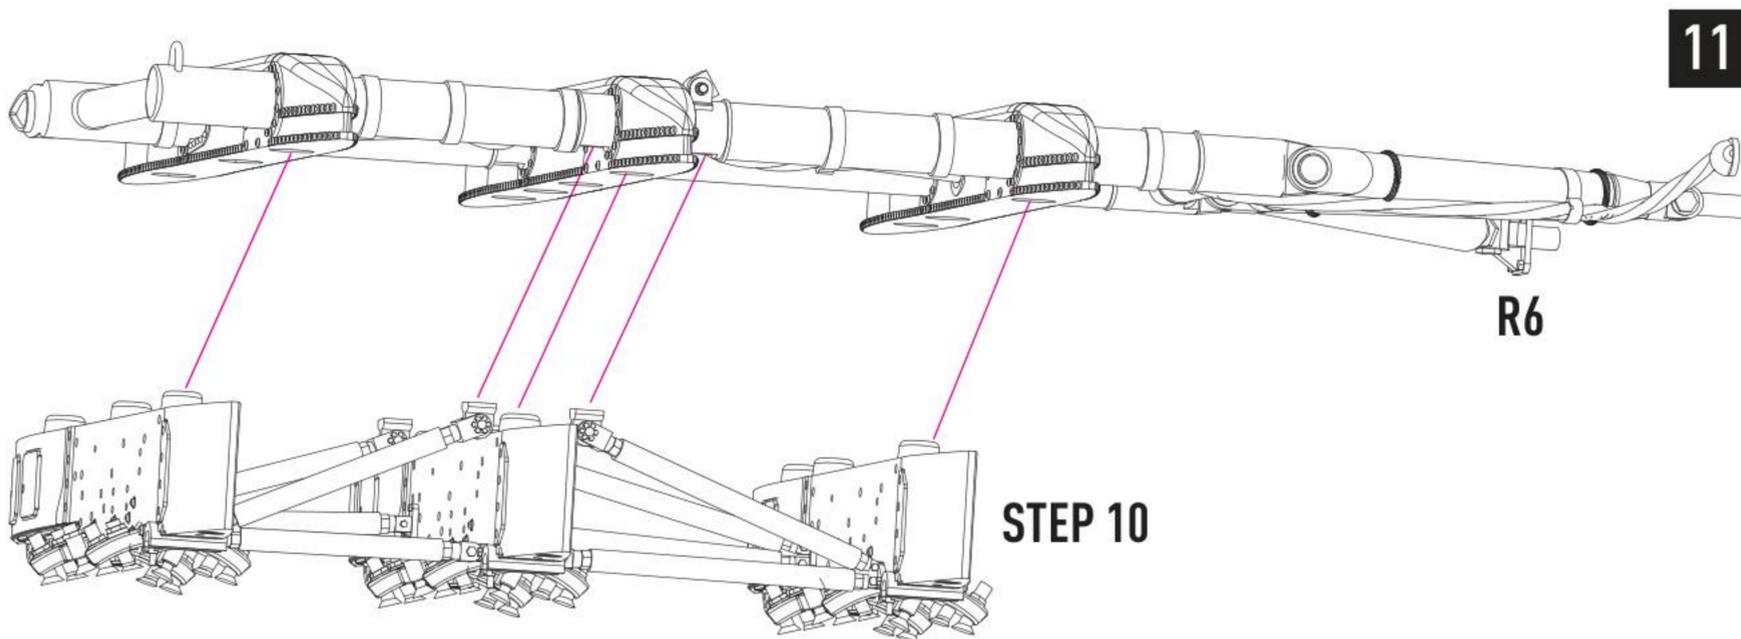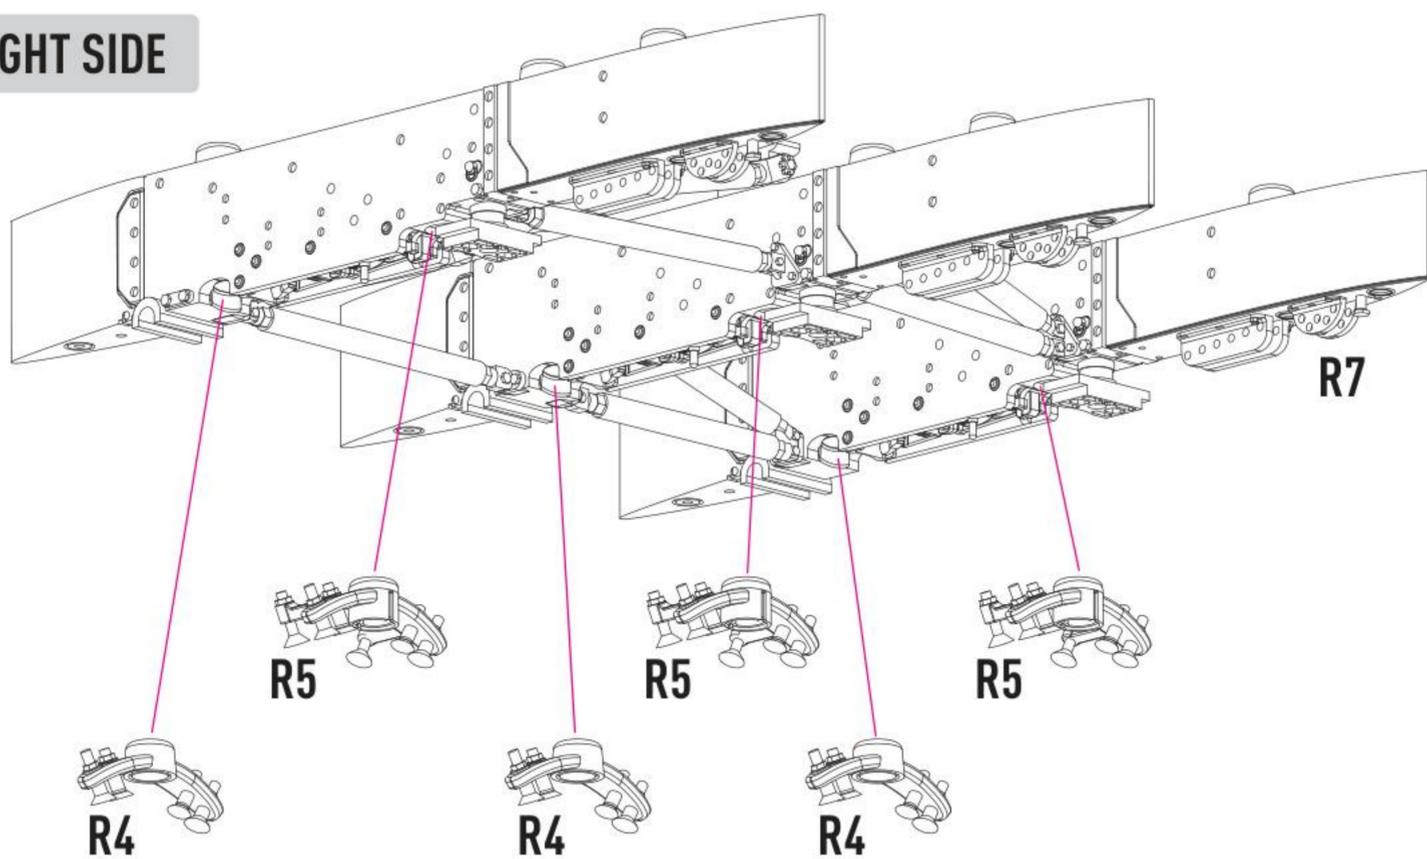


12
BEFORE INSTALLATION, APPLY GLOSS VARNISH ON TRANSPARENT PART

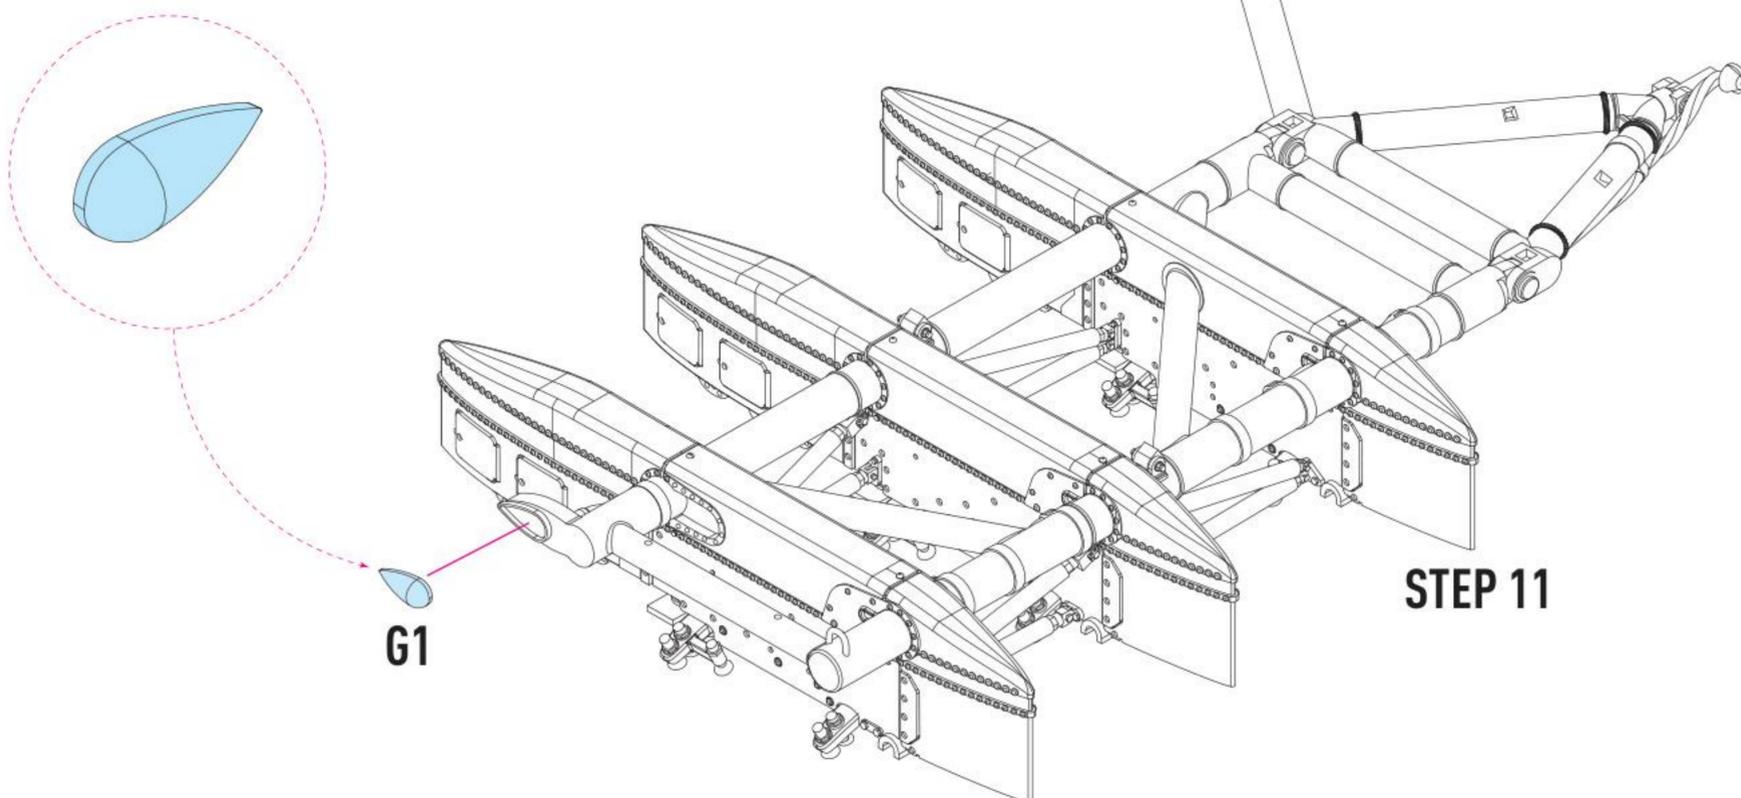

13

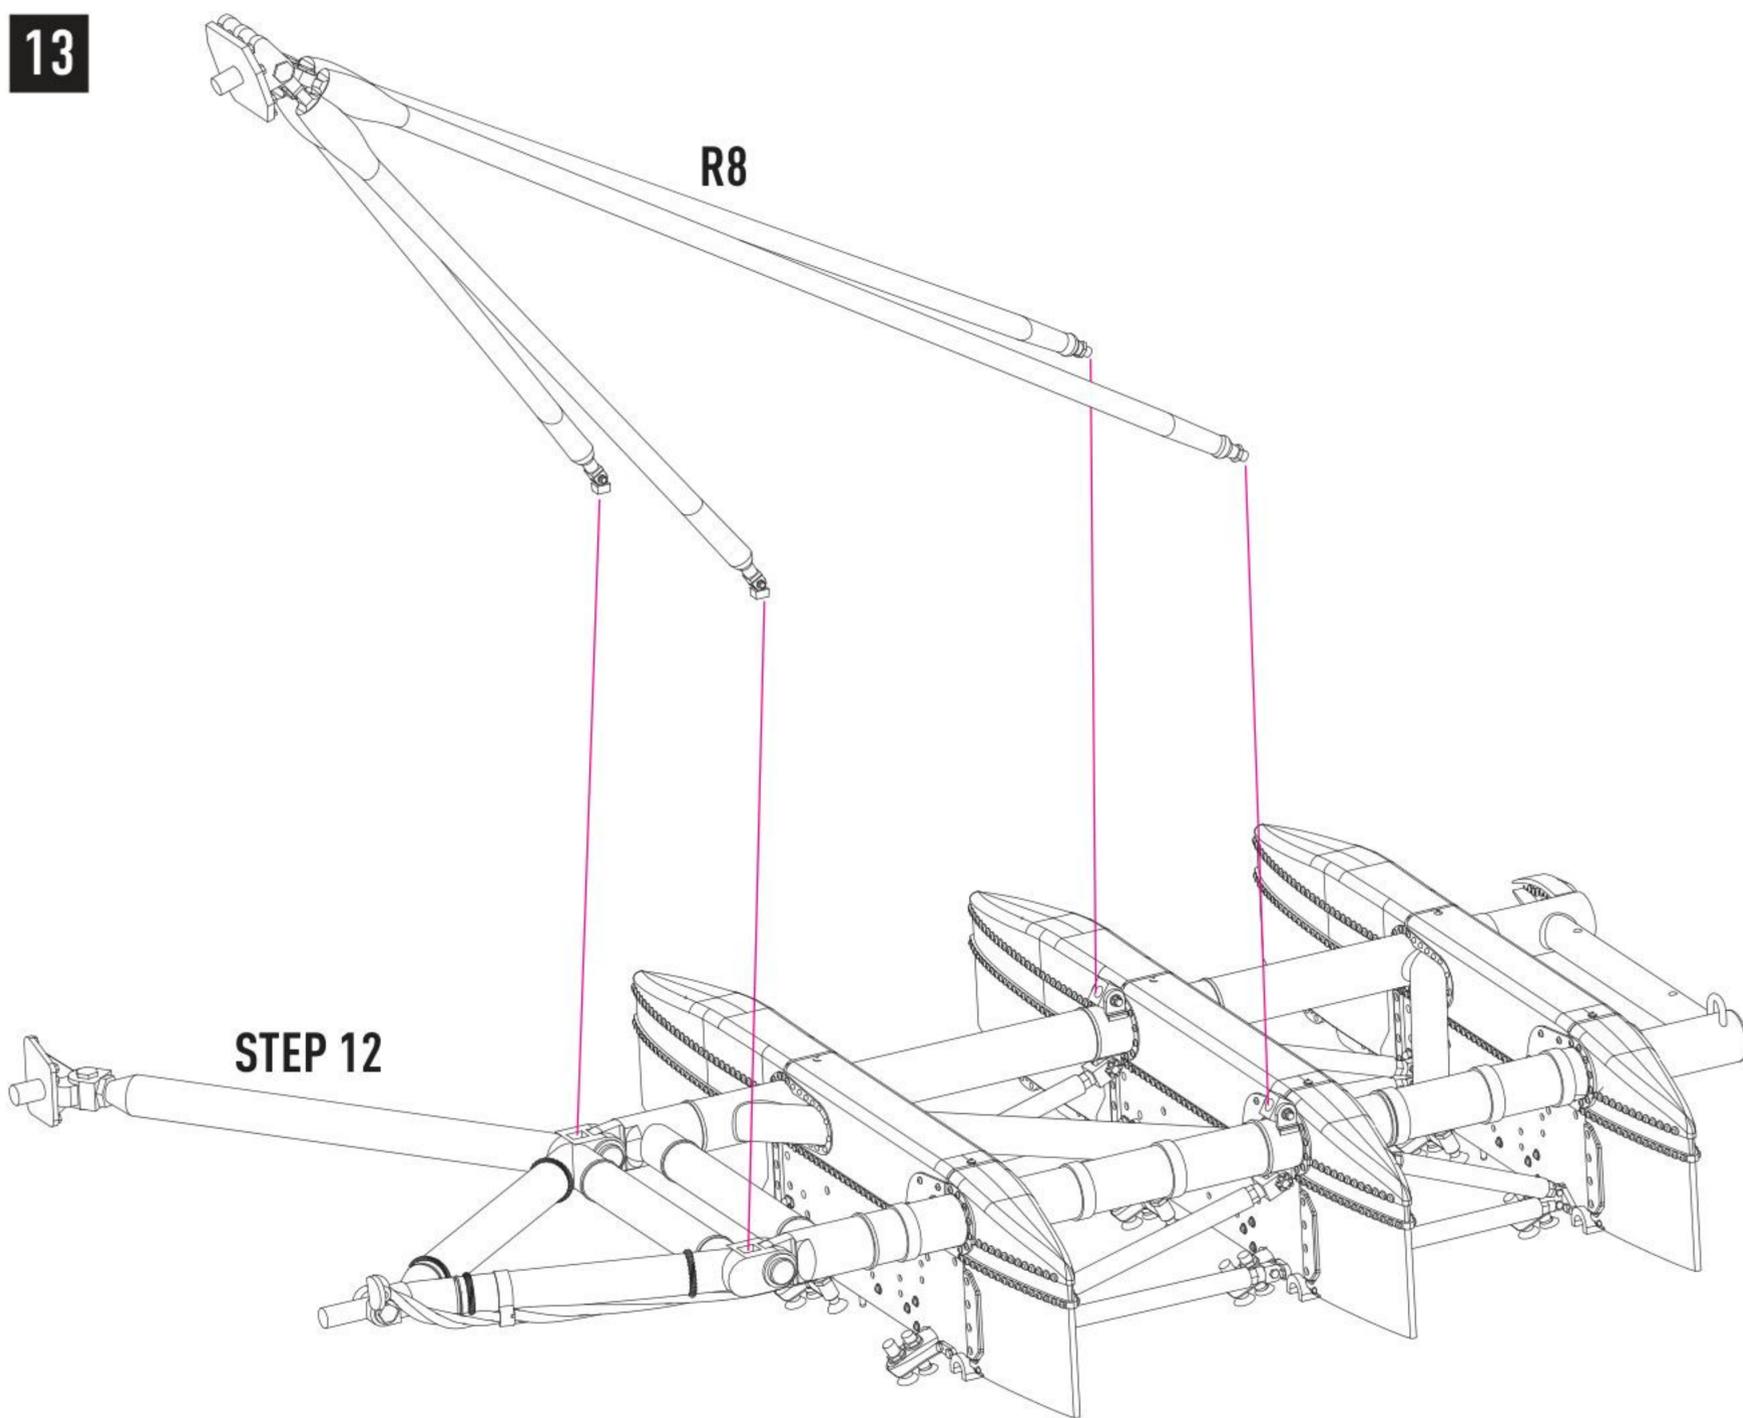


14

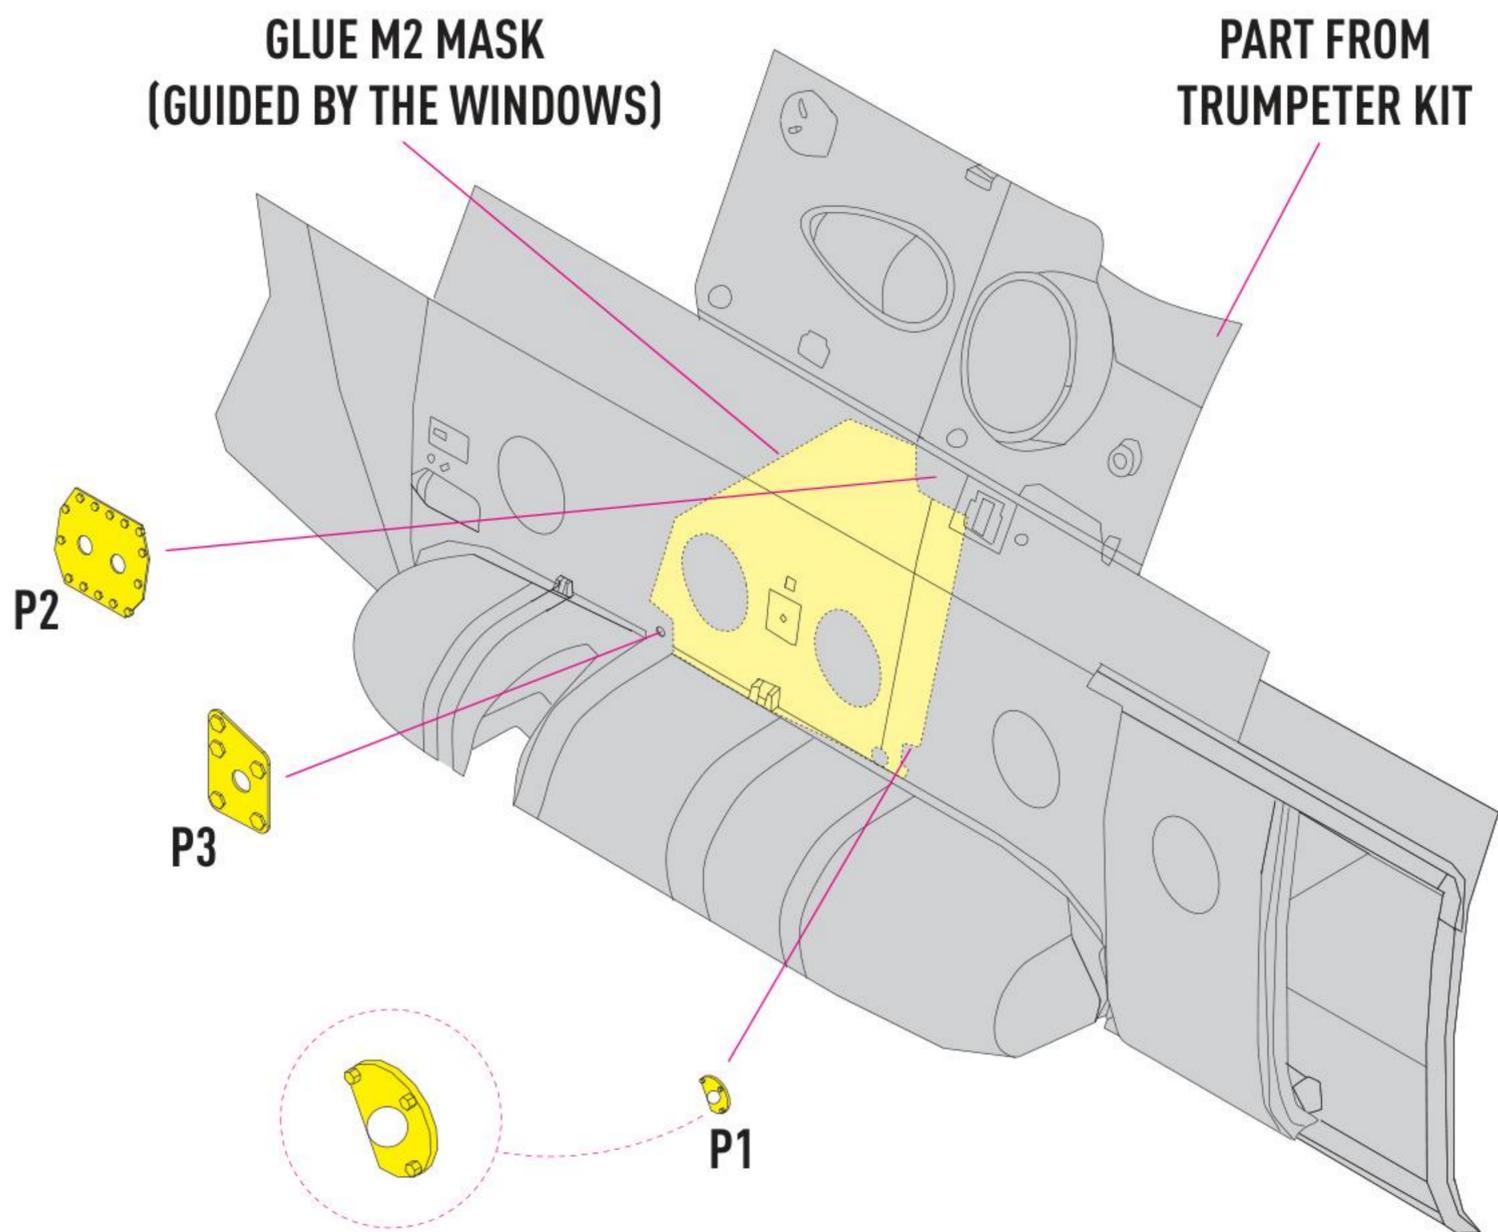


15

STEP 14

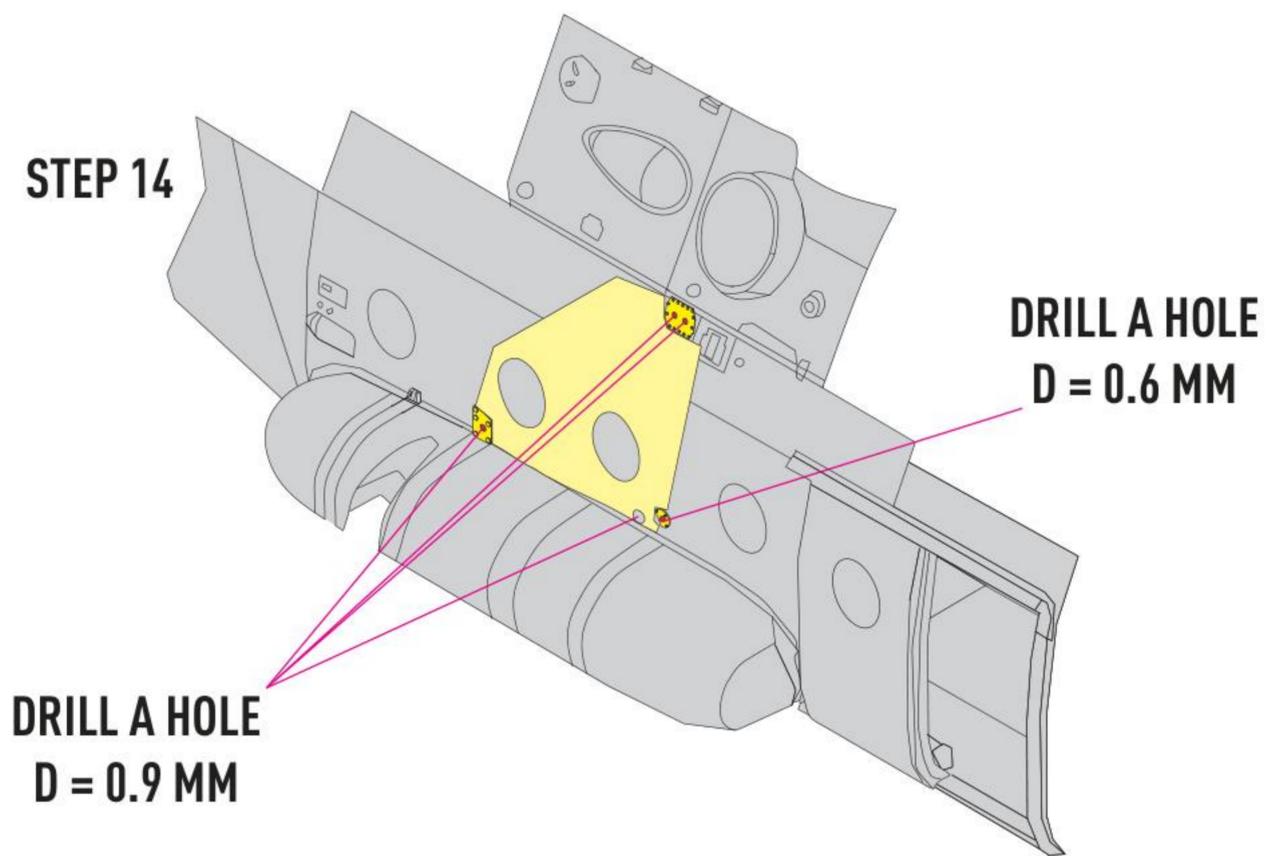


16 REMOVE MASK


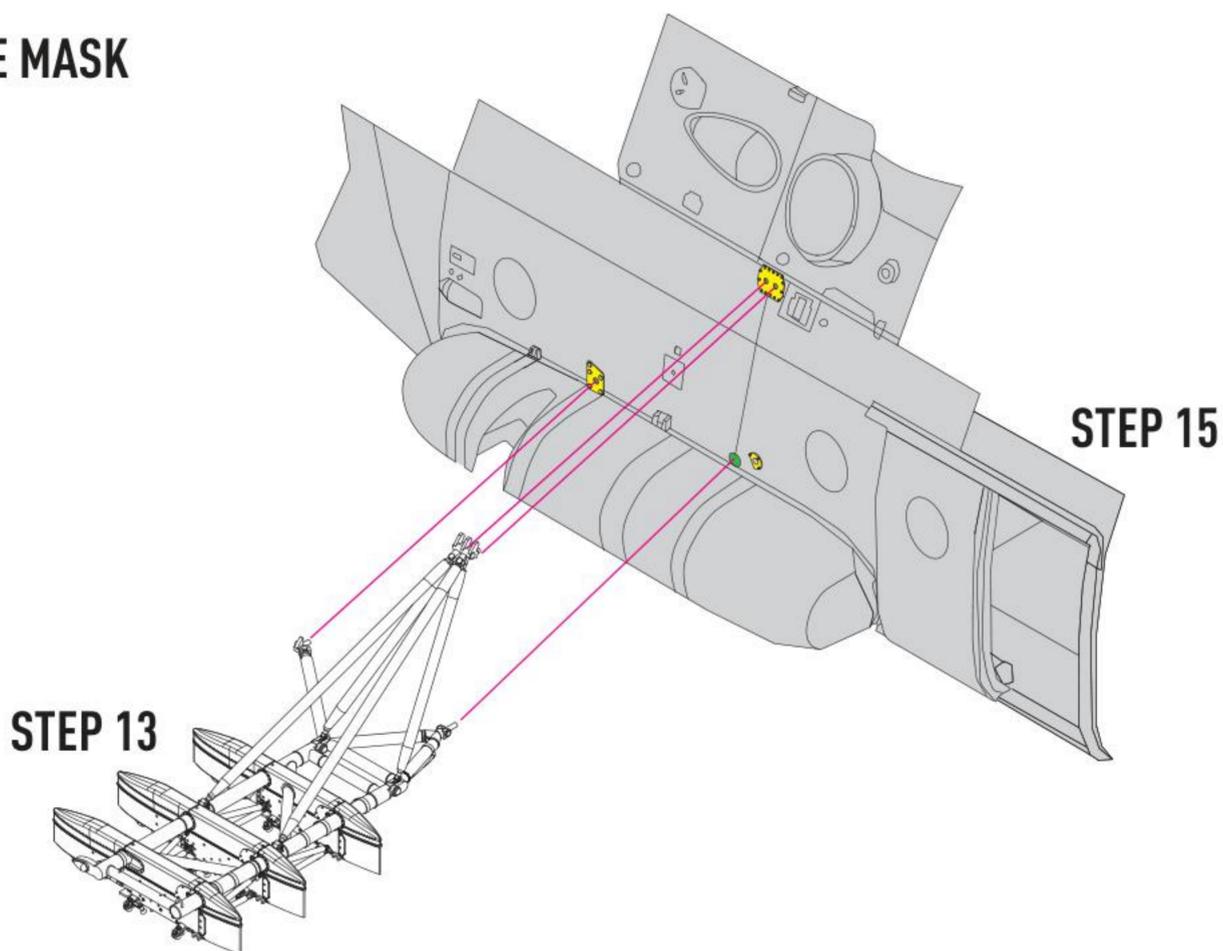


17

STEP 16

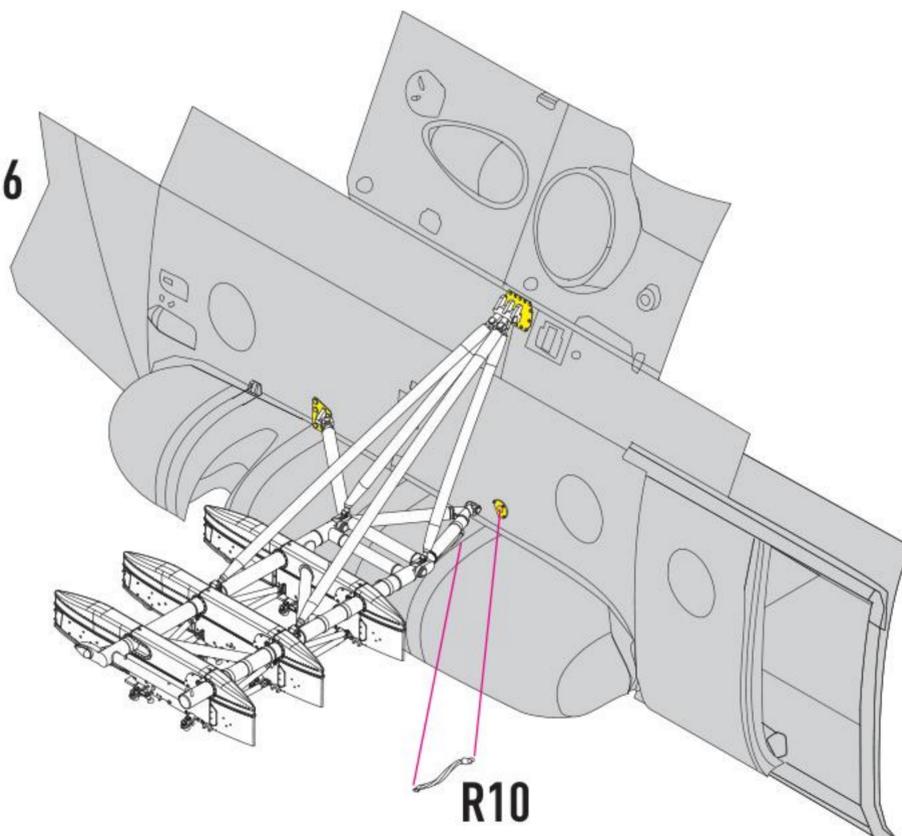

DECAL INSTRUCTION

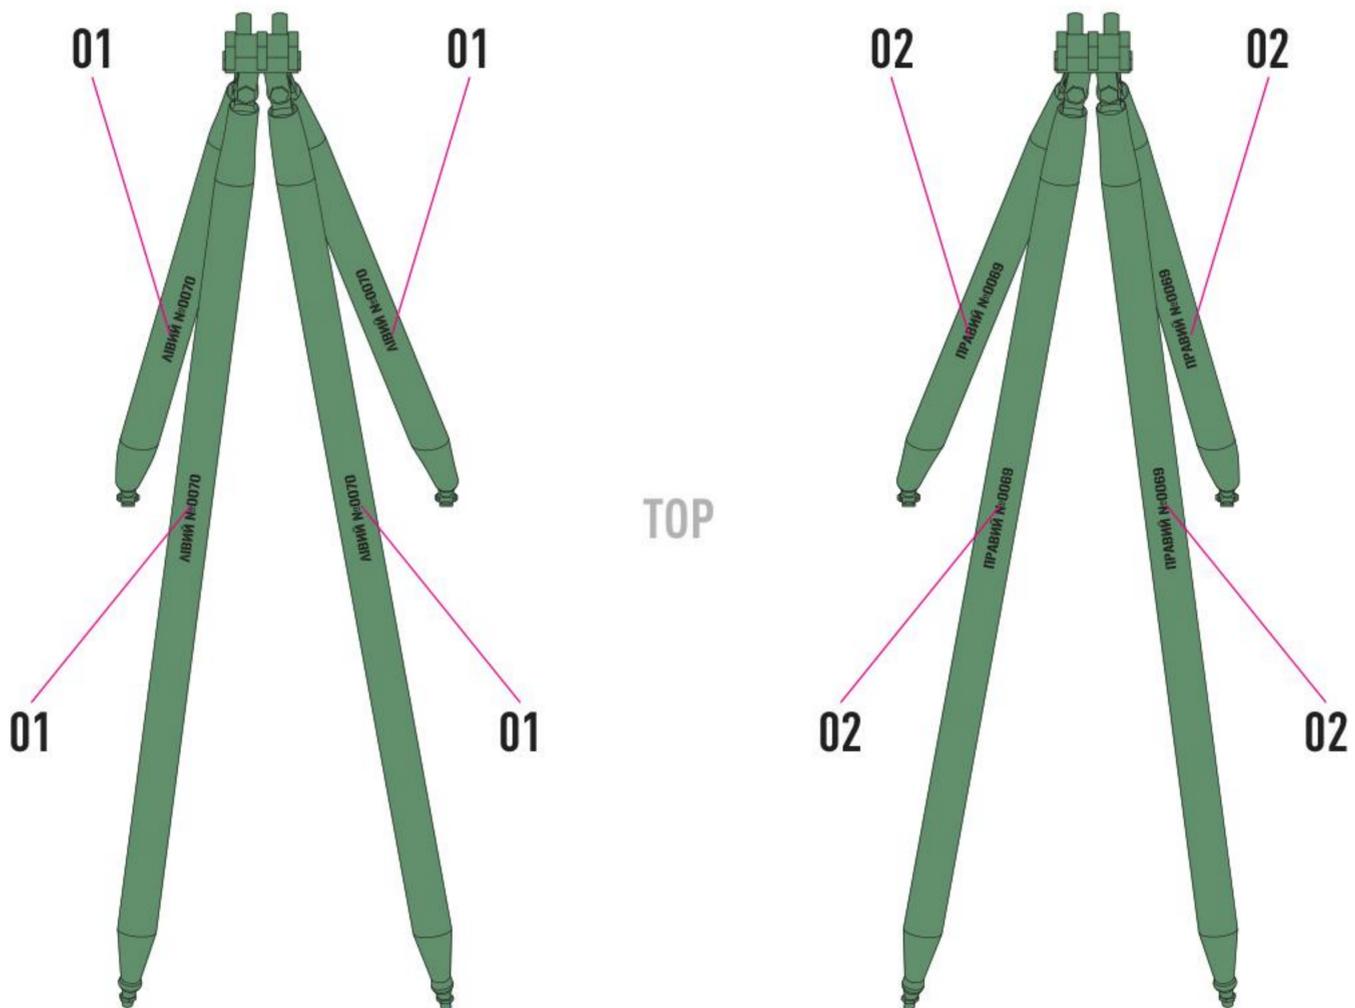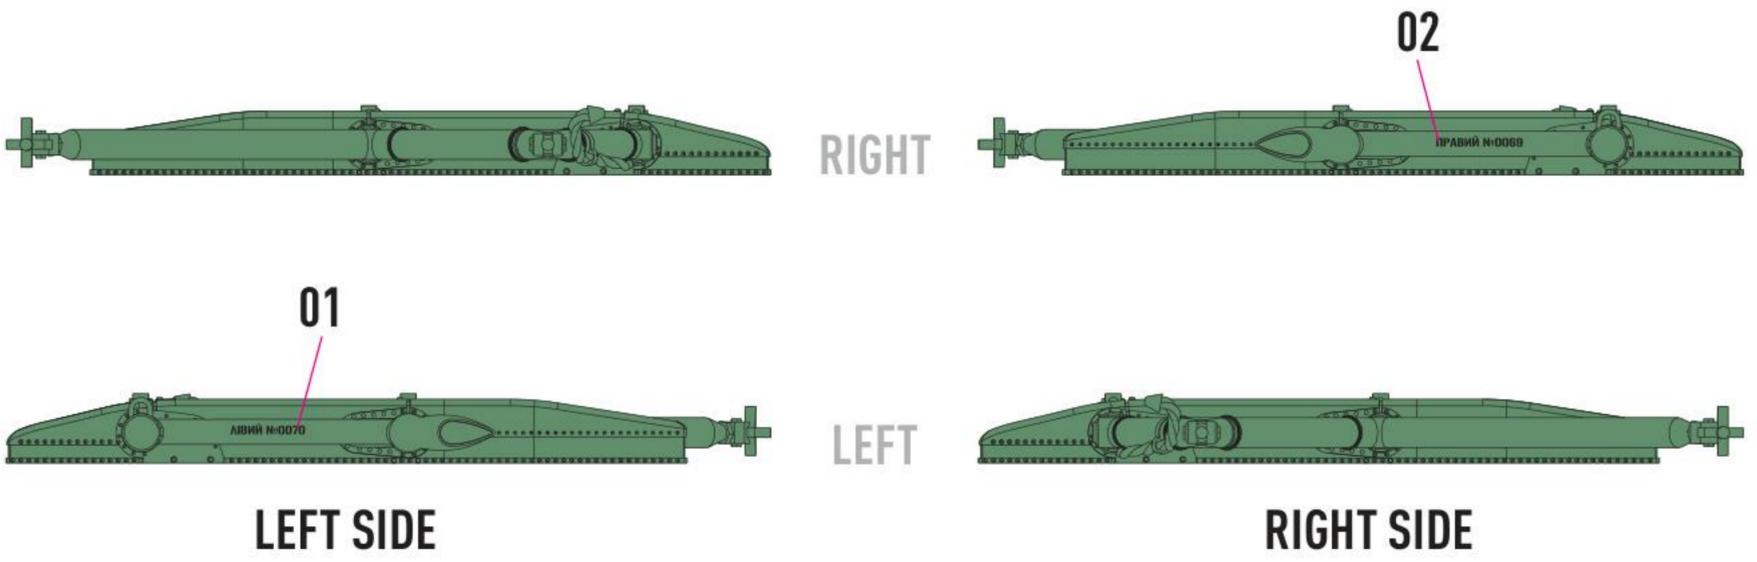

BD3-57KRV

