




1

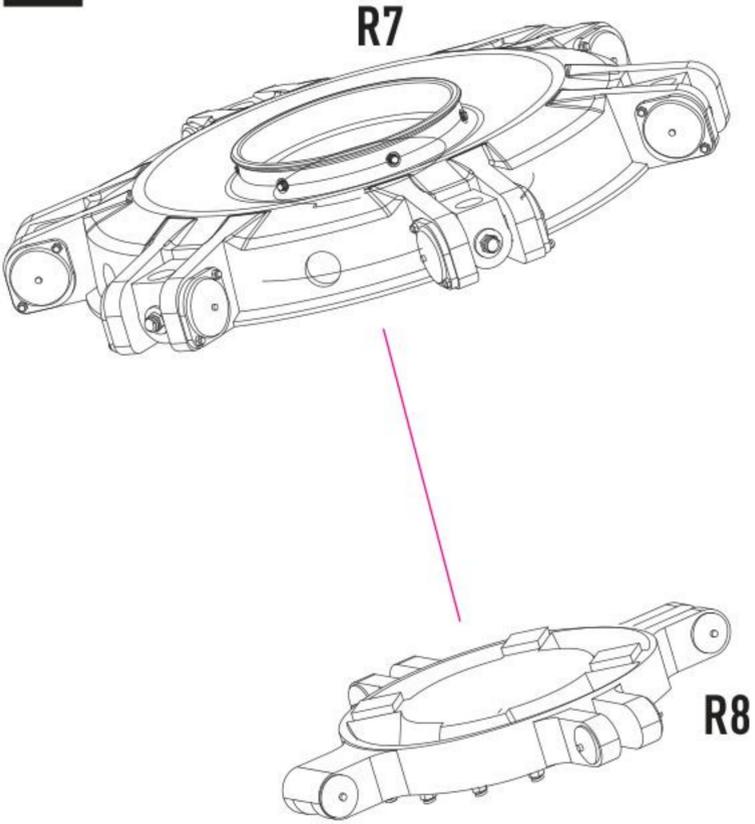




2

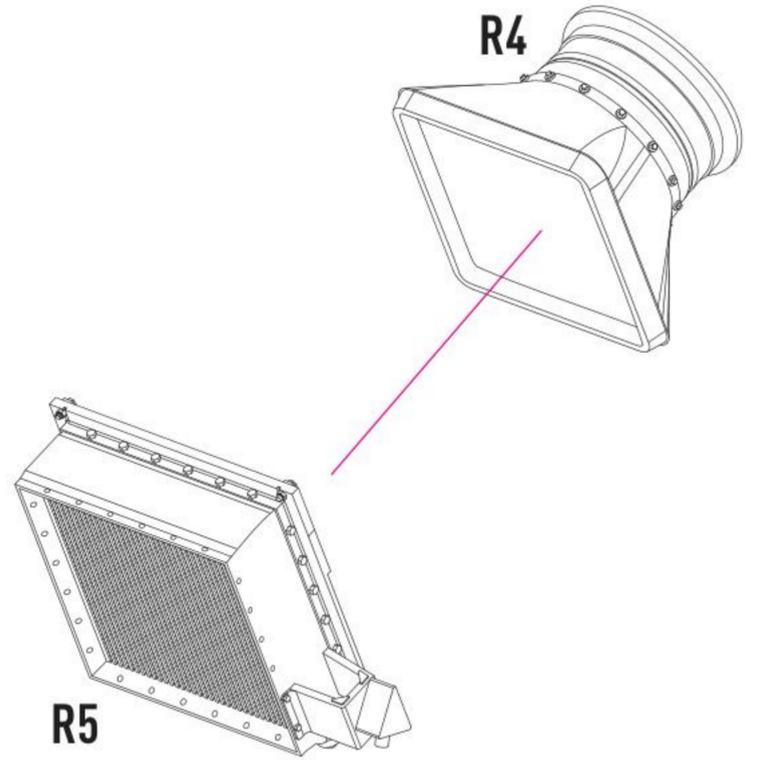



3

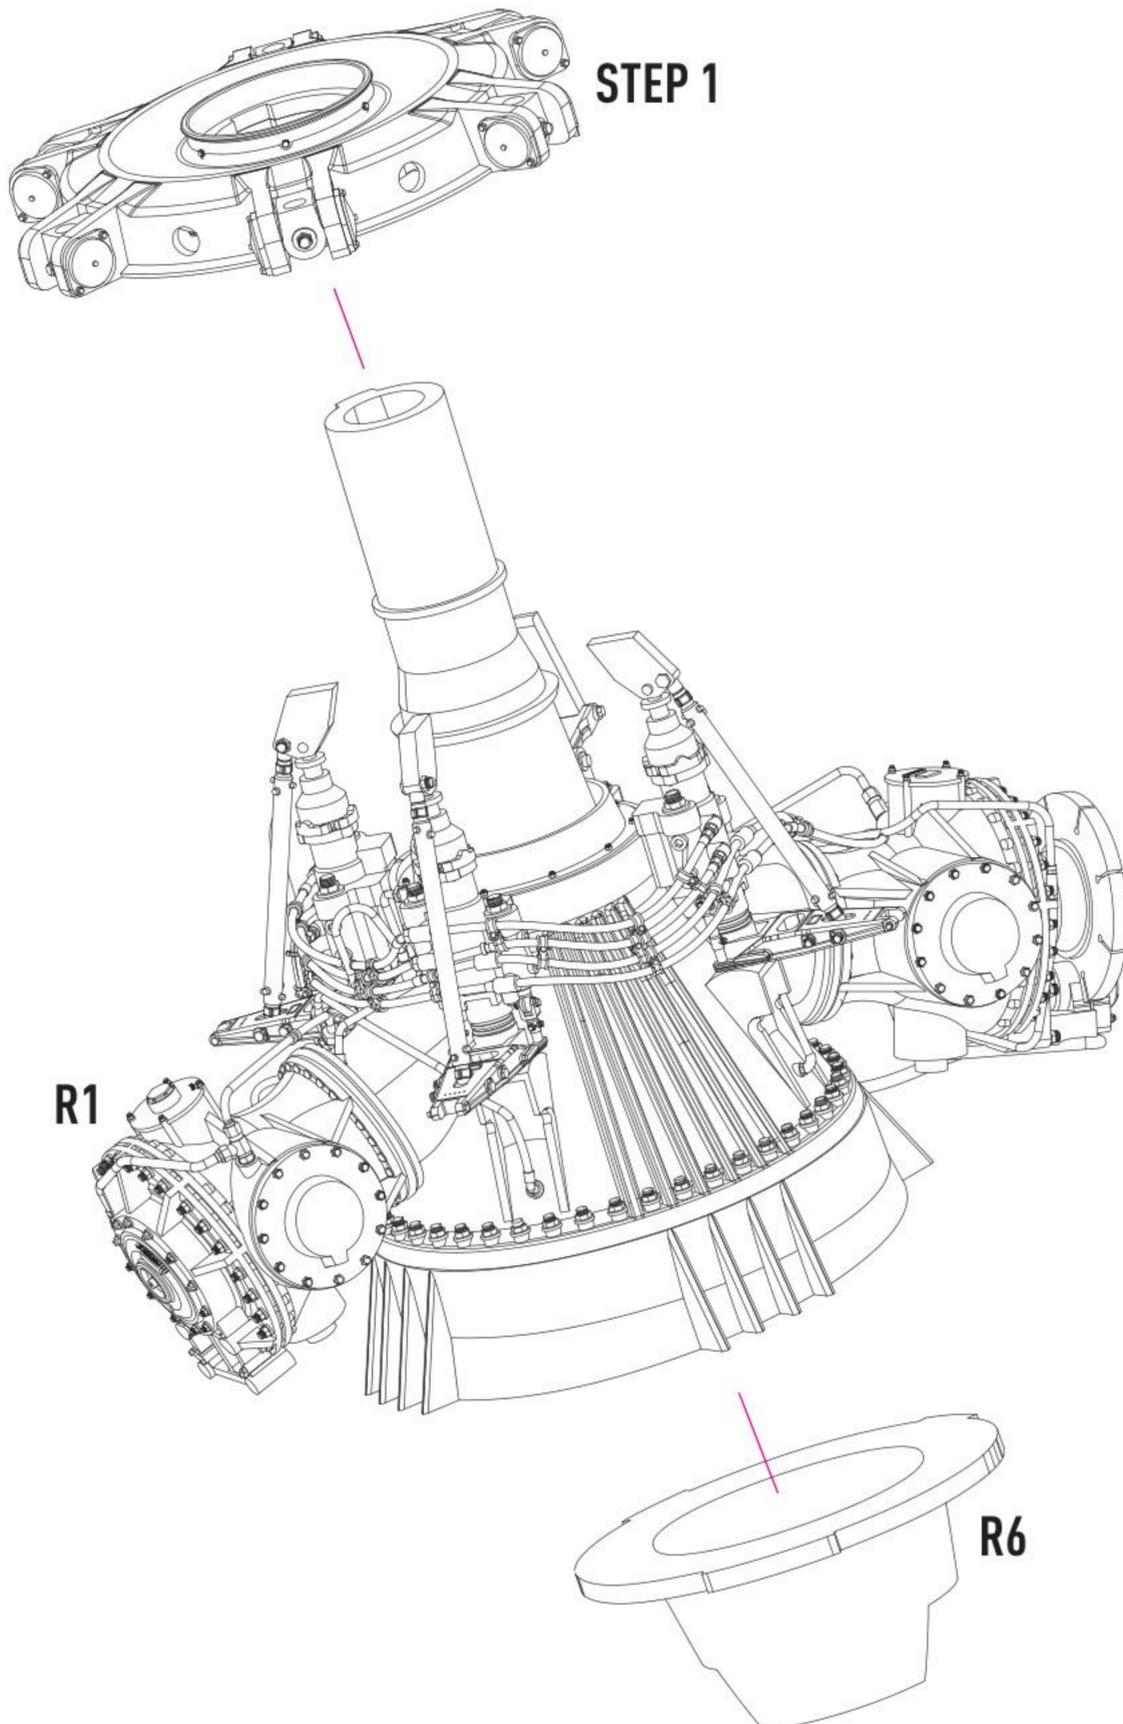


4

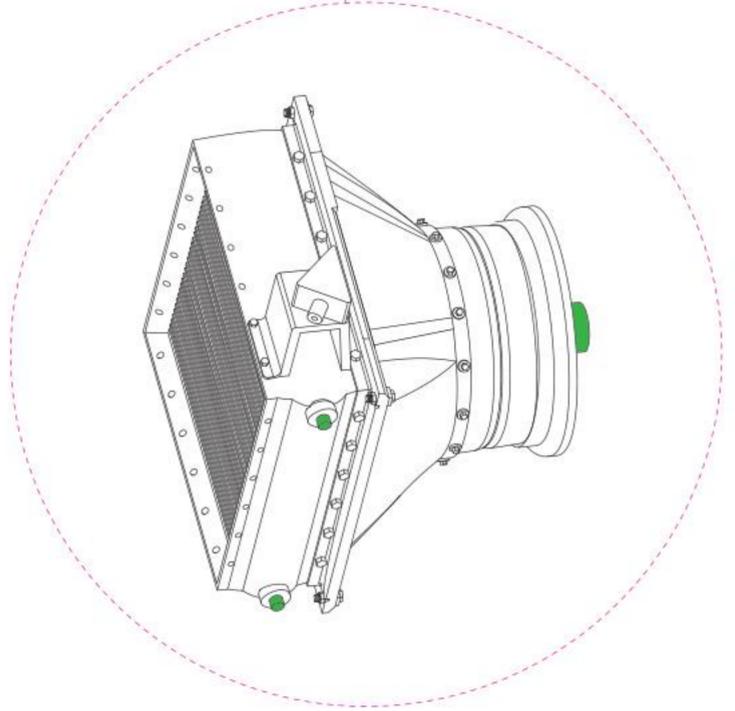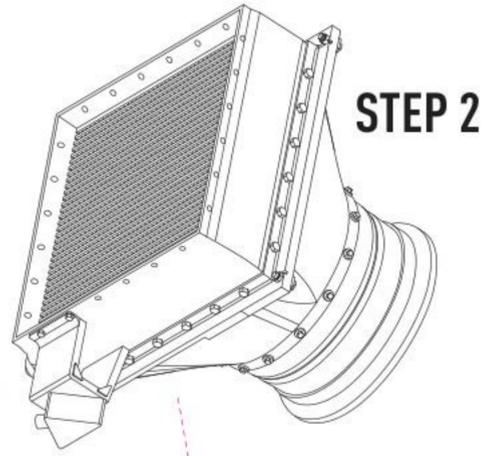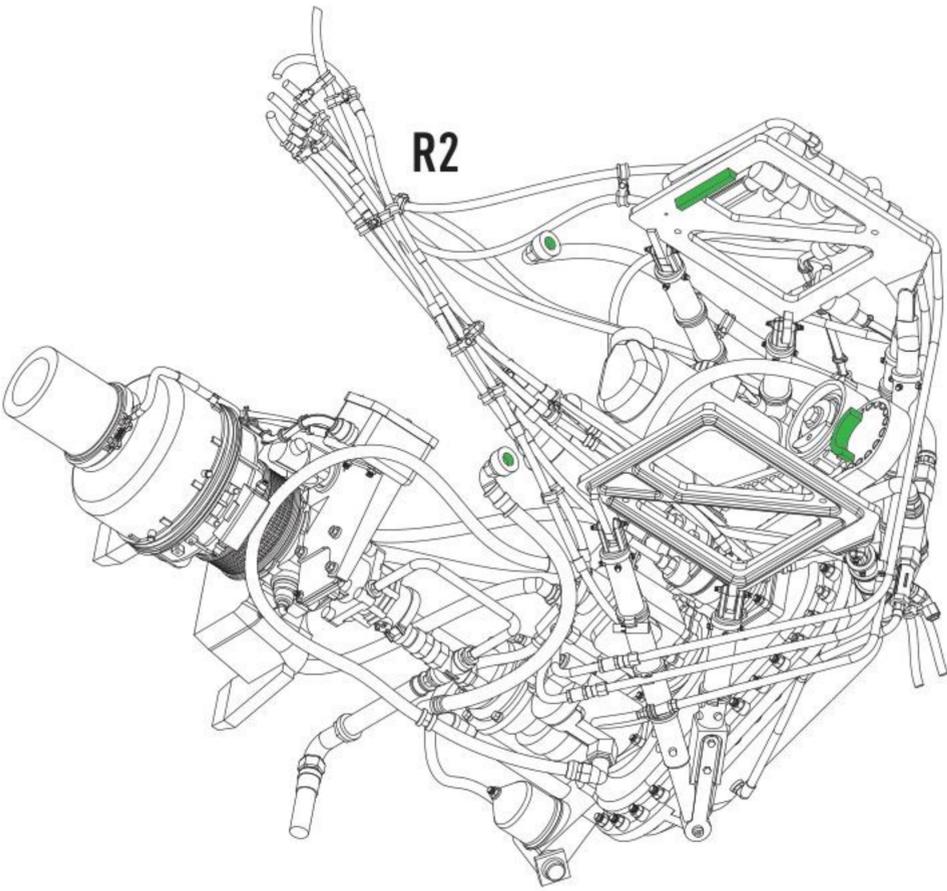


5

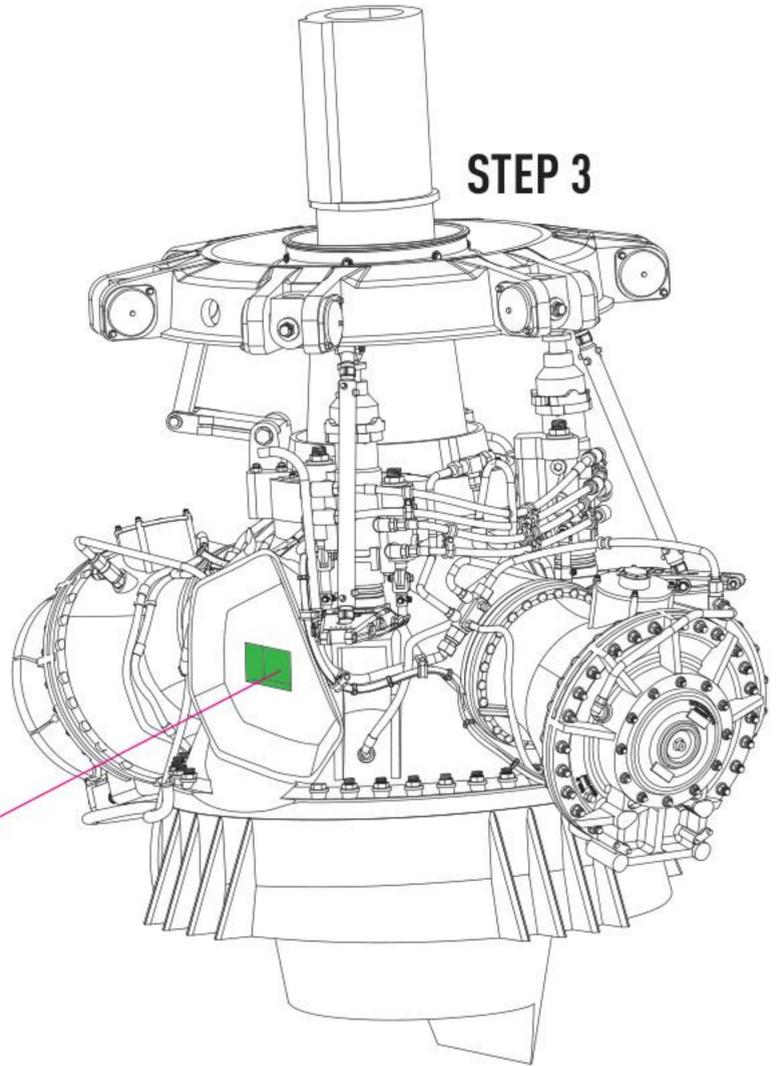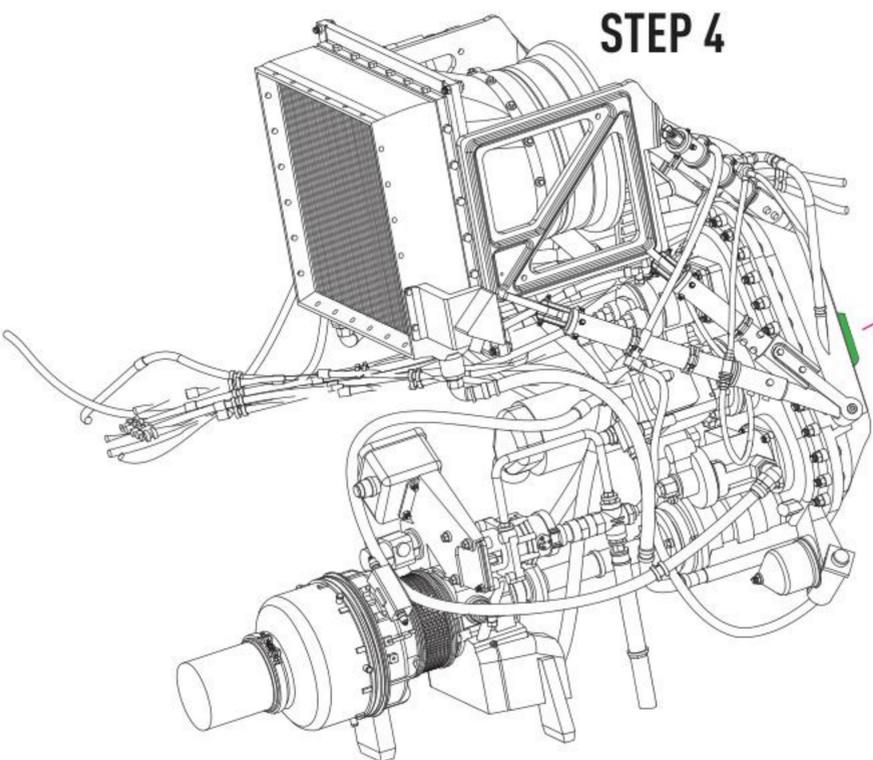

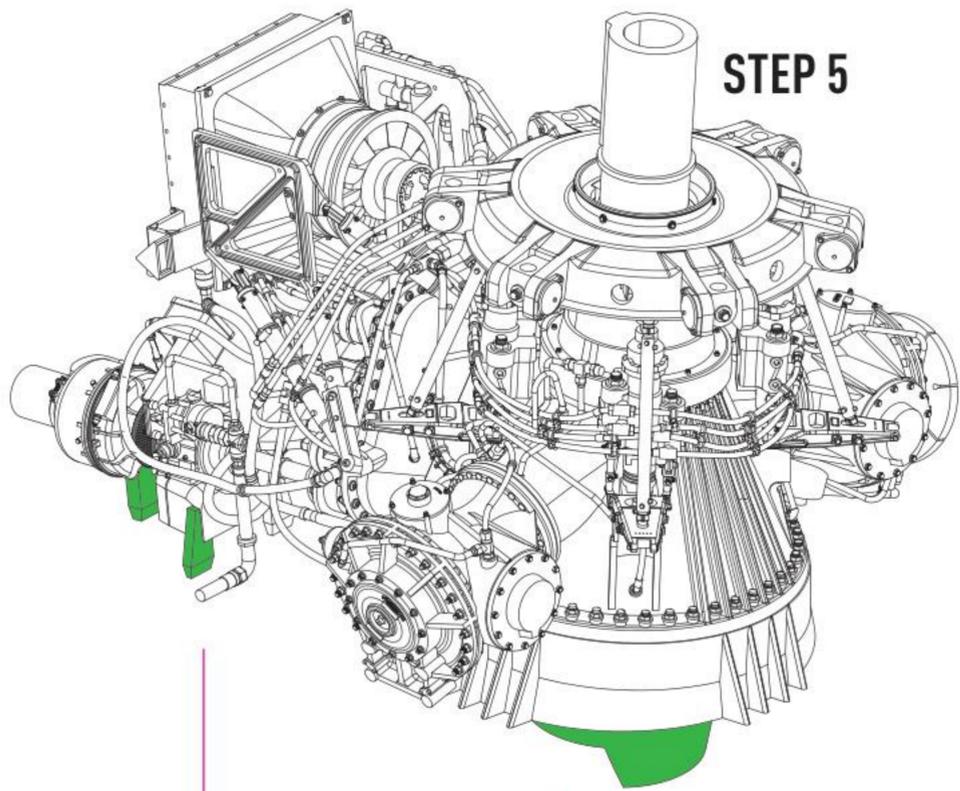


STEP 5

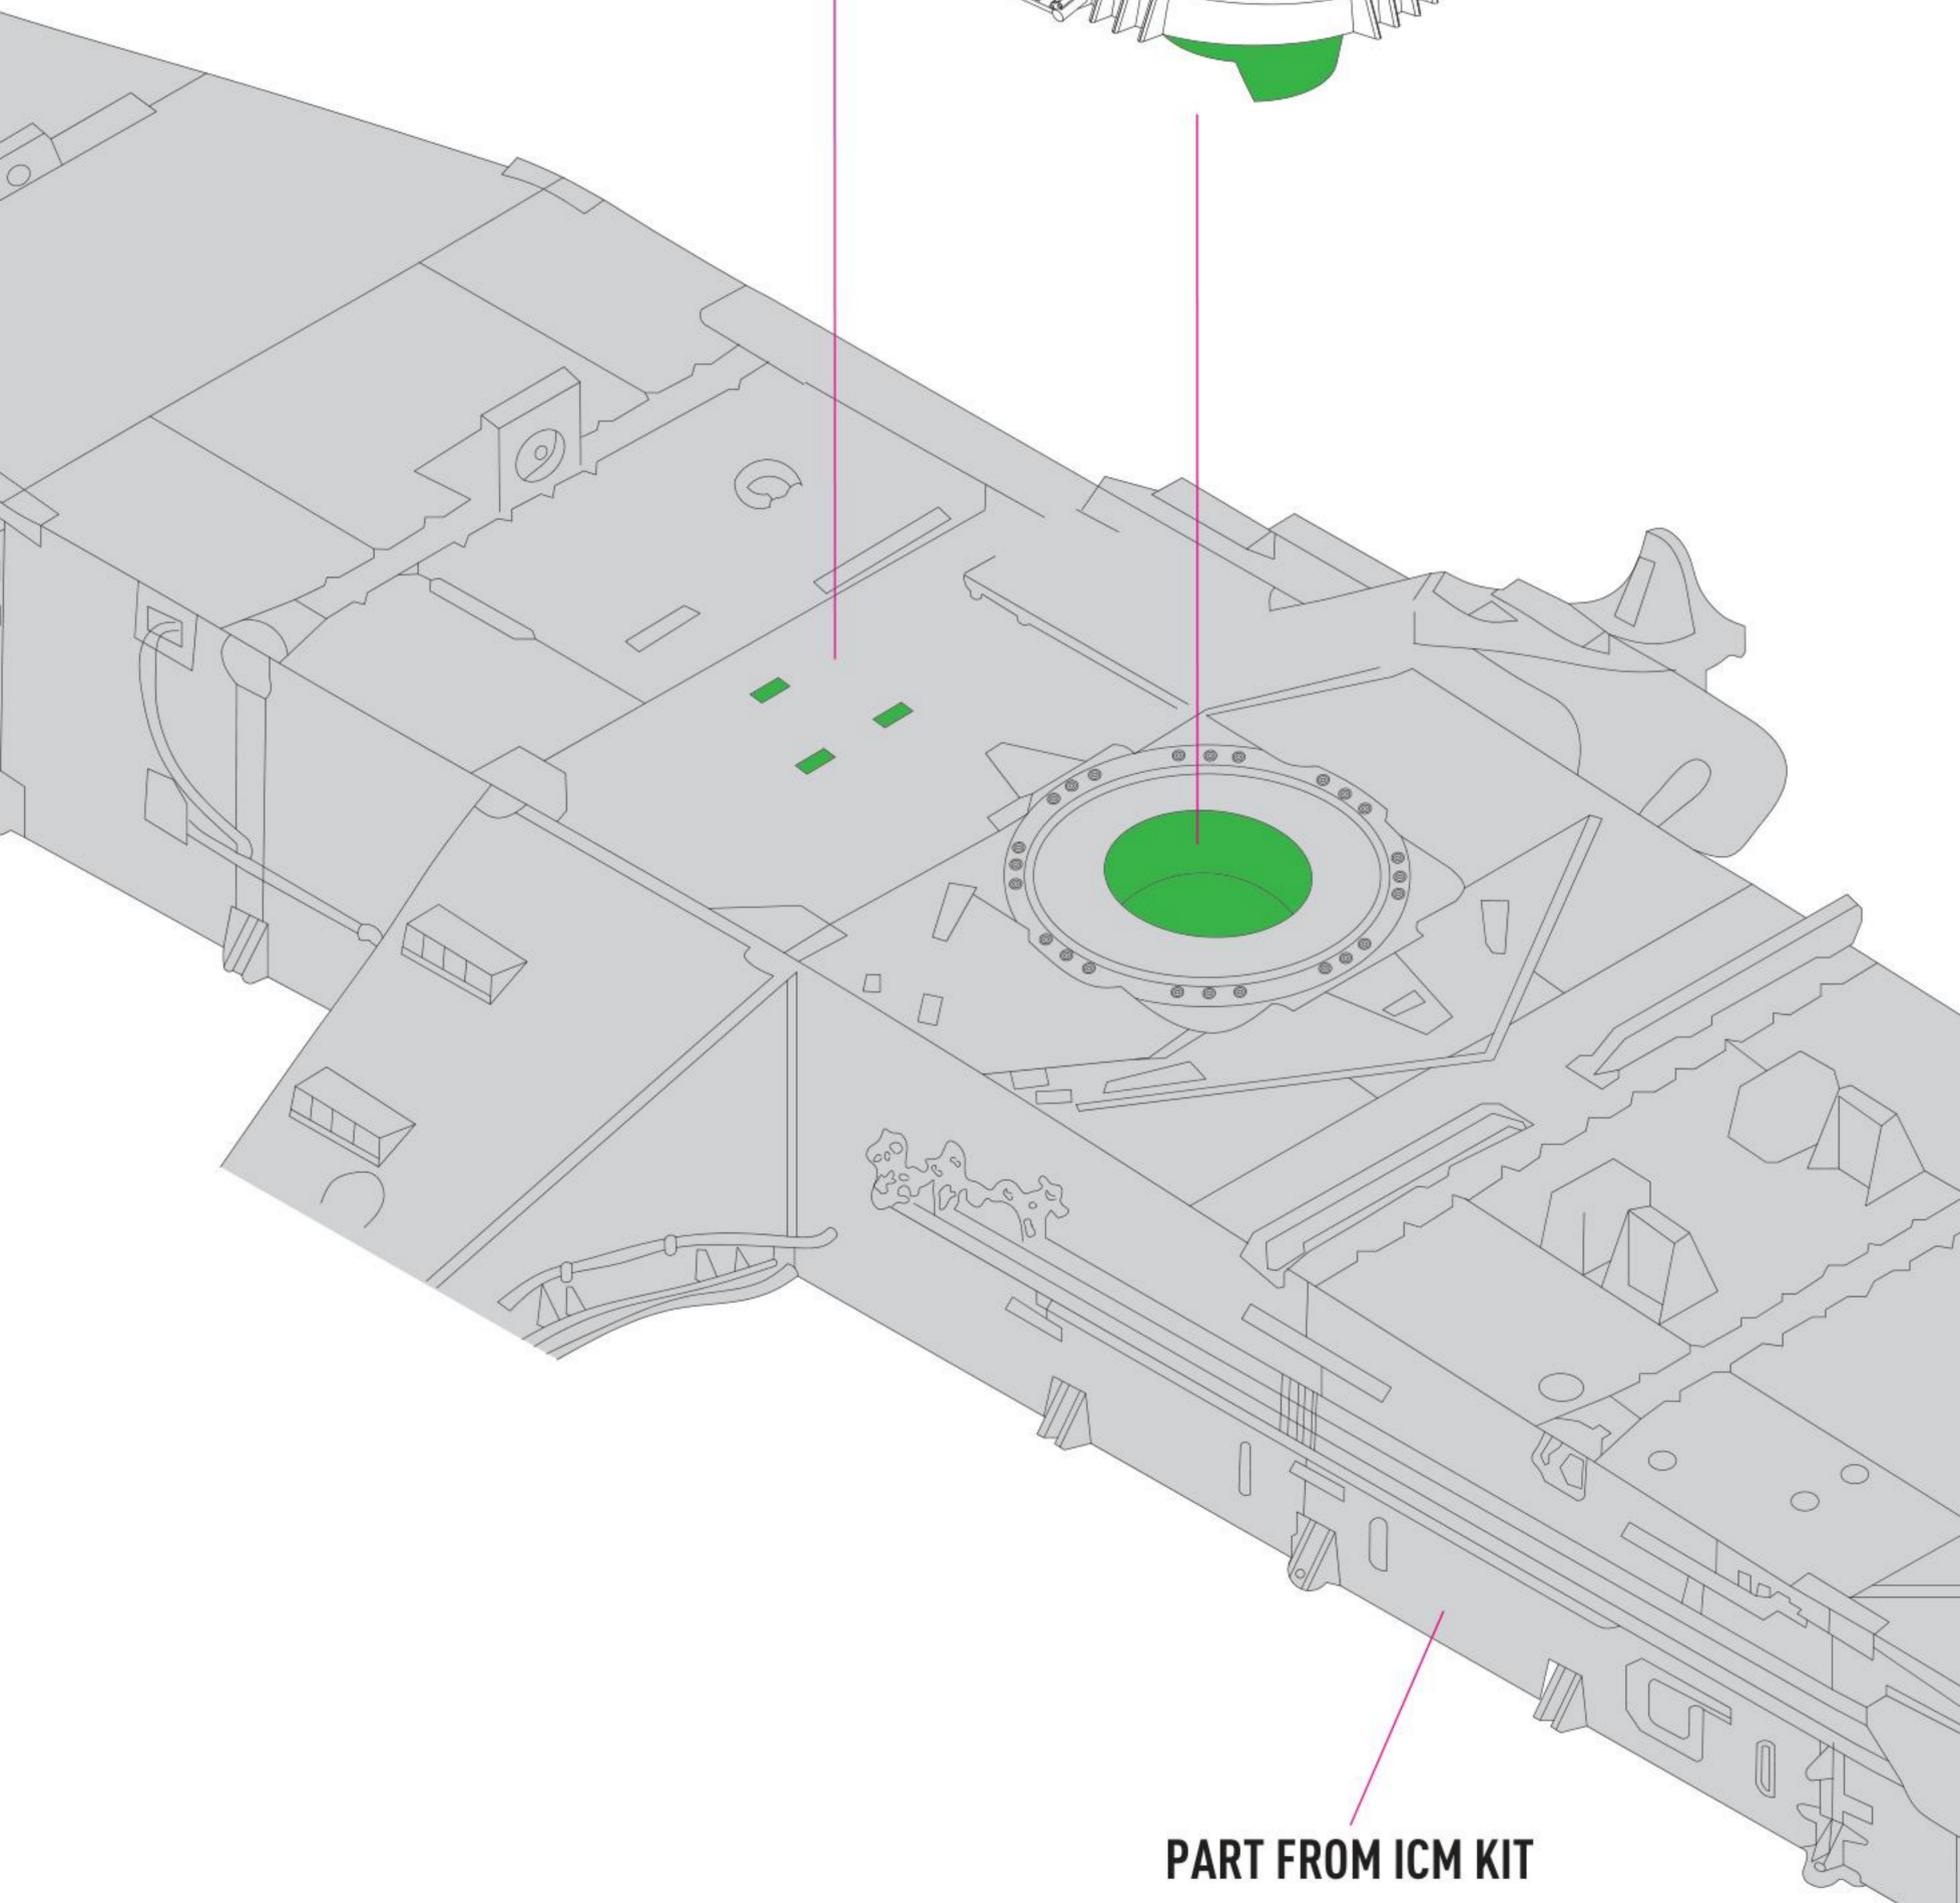

PART FROM ICM KIT

7 GLUE THE PARTS FROM ICM KIT

STEP 6

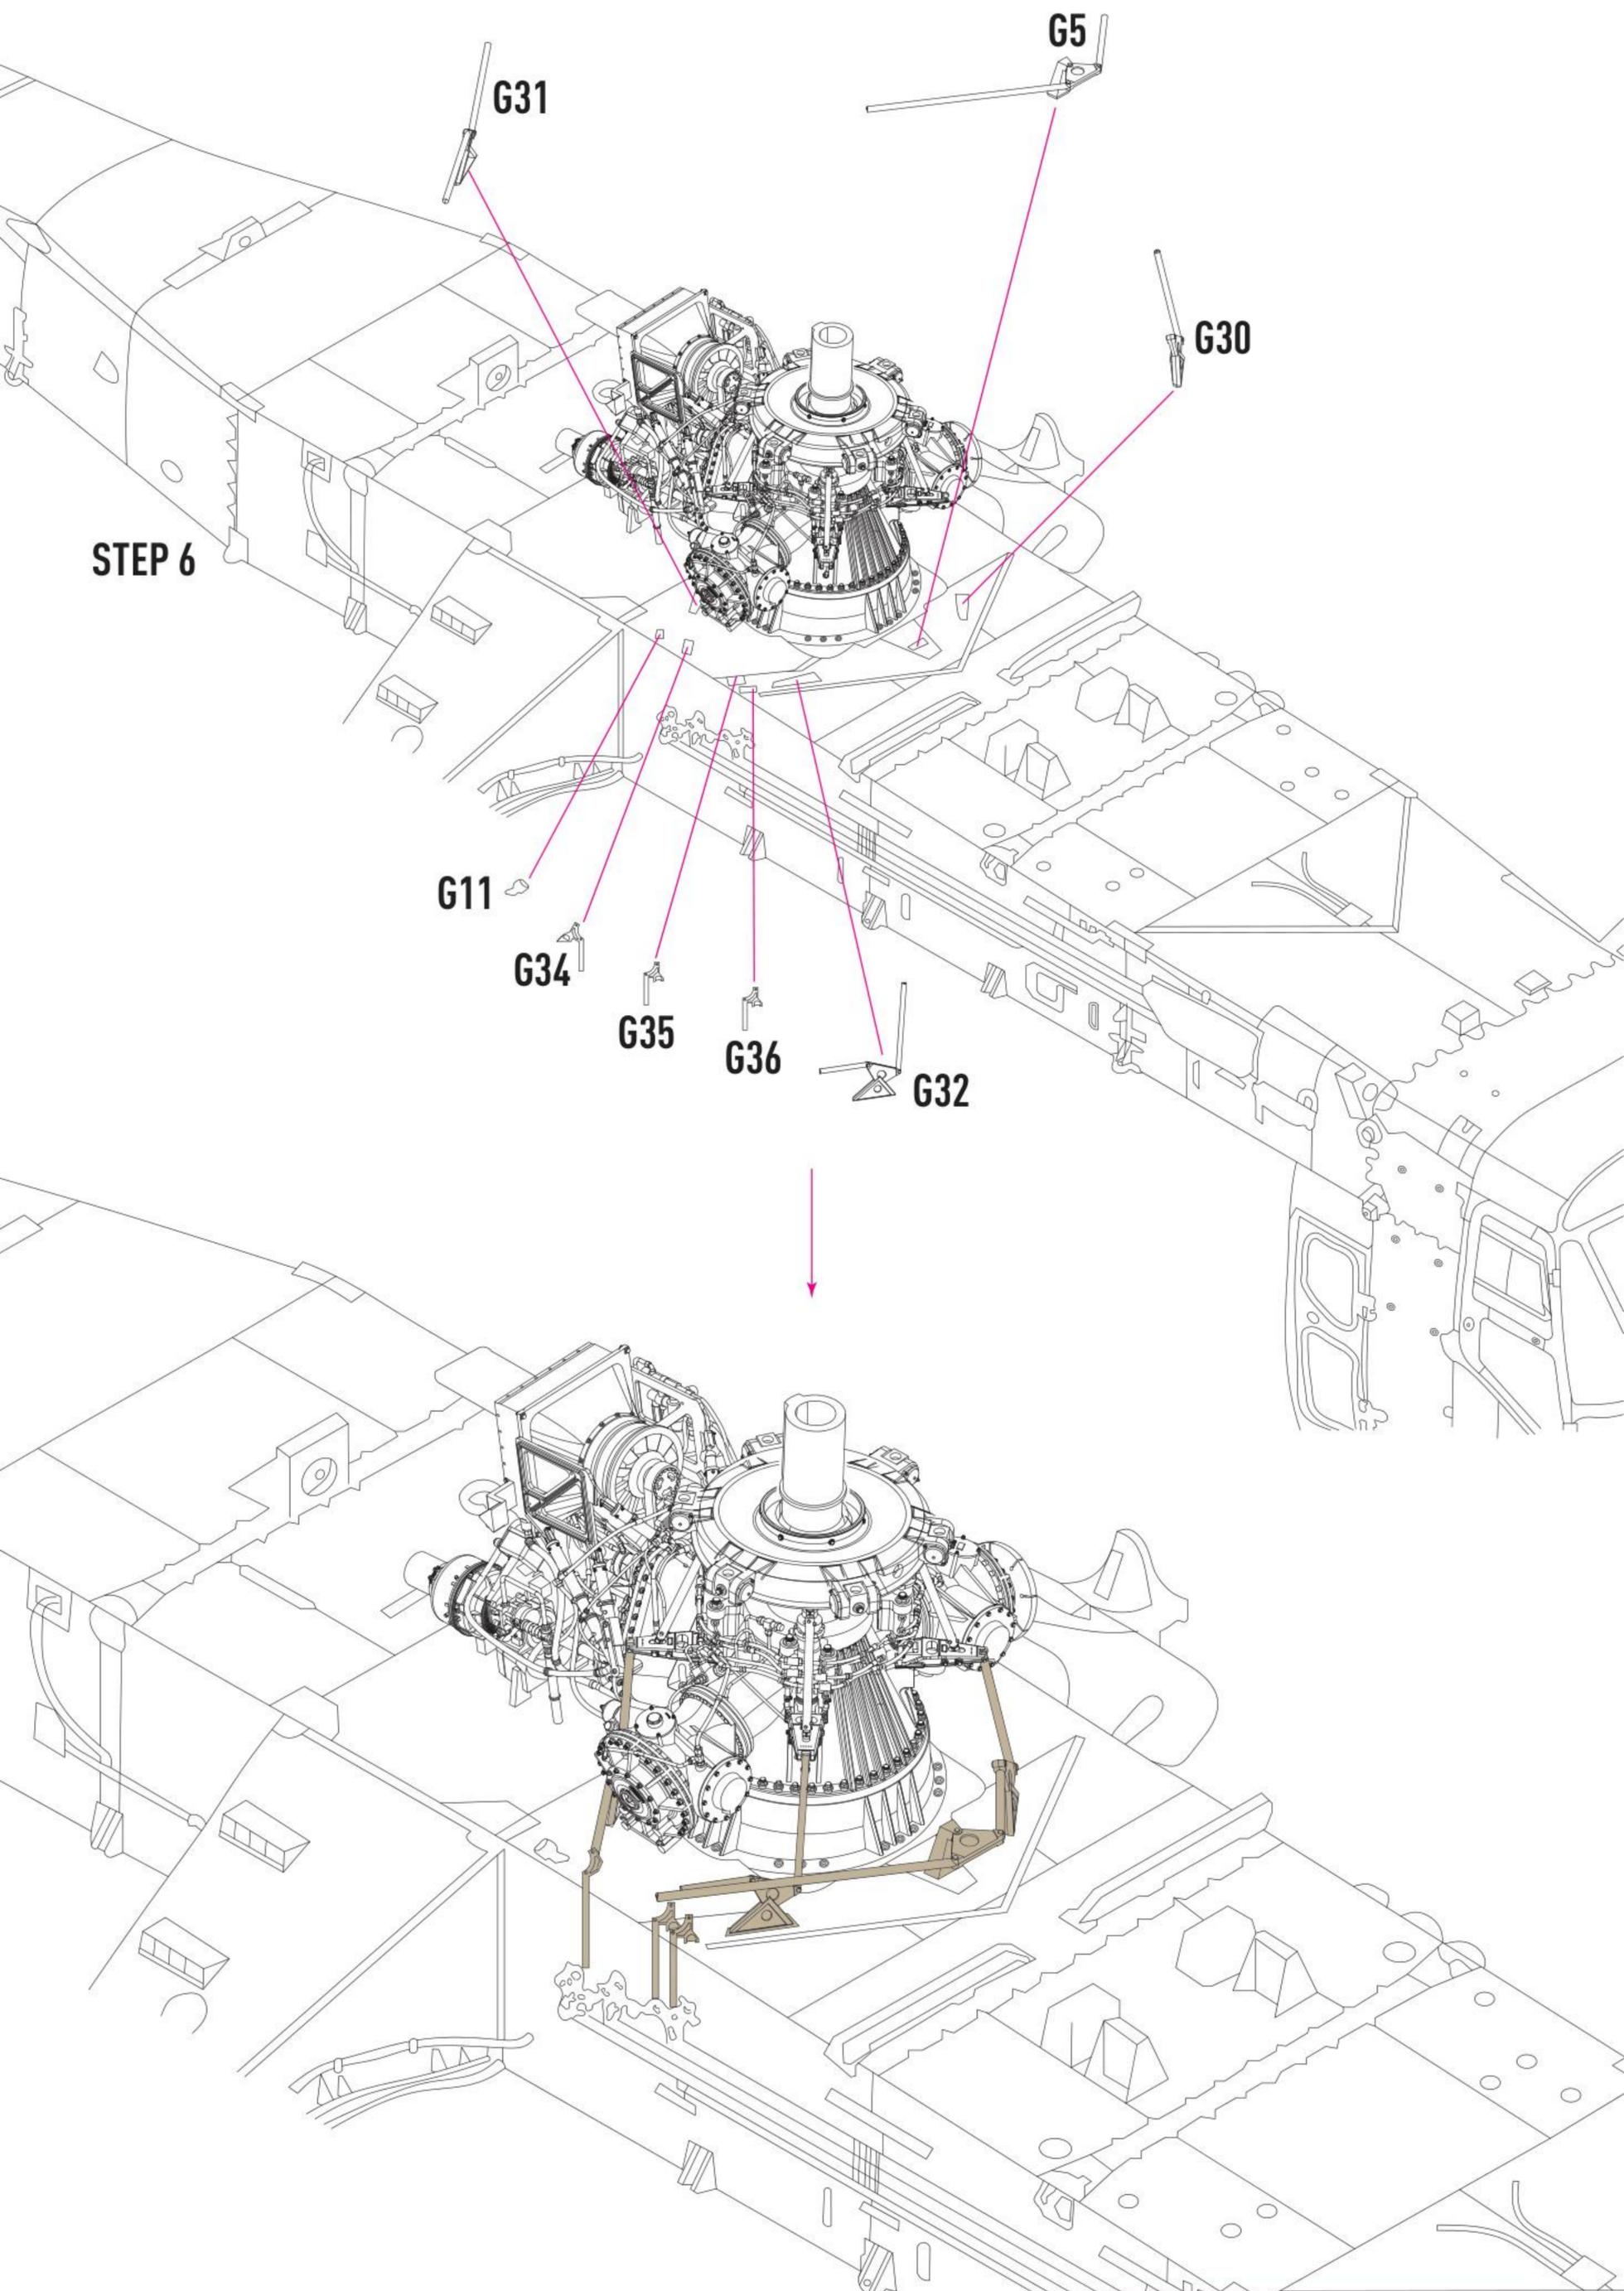

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

 fb.com/reskit.official


 instagram.com/reskit_official

 pinterest.com/reskit_official

8

R3

STEP 7

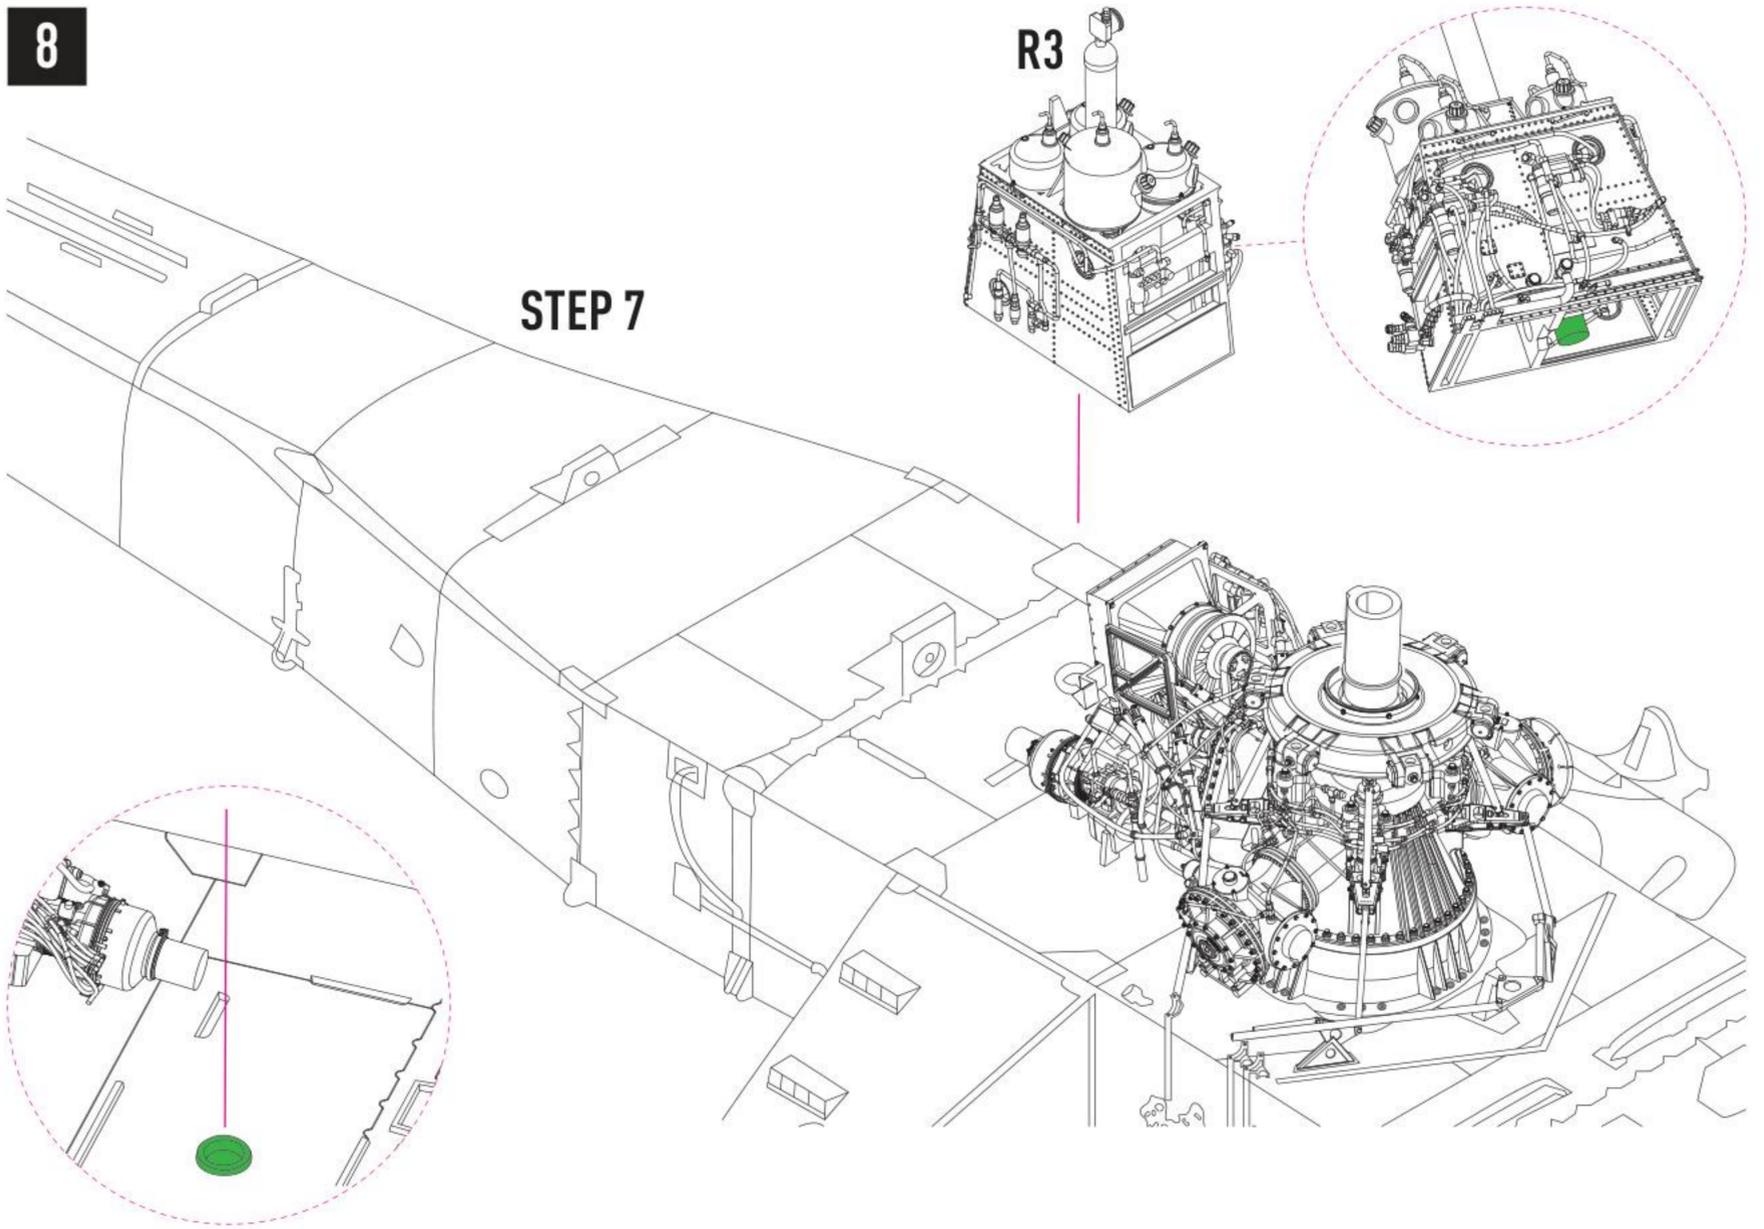


9 PLACE PART R11 FIRST



STEP 8

R10


R11

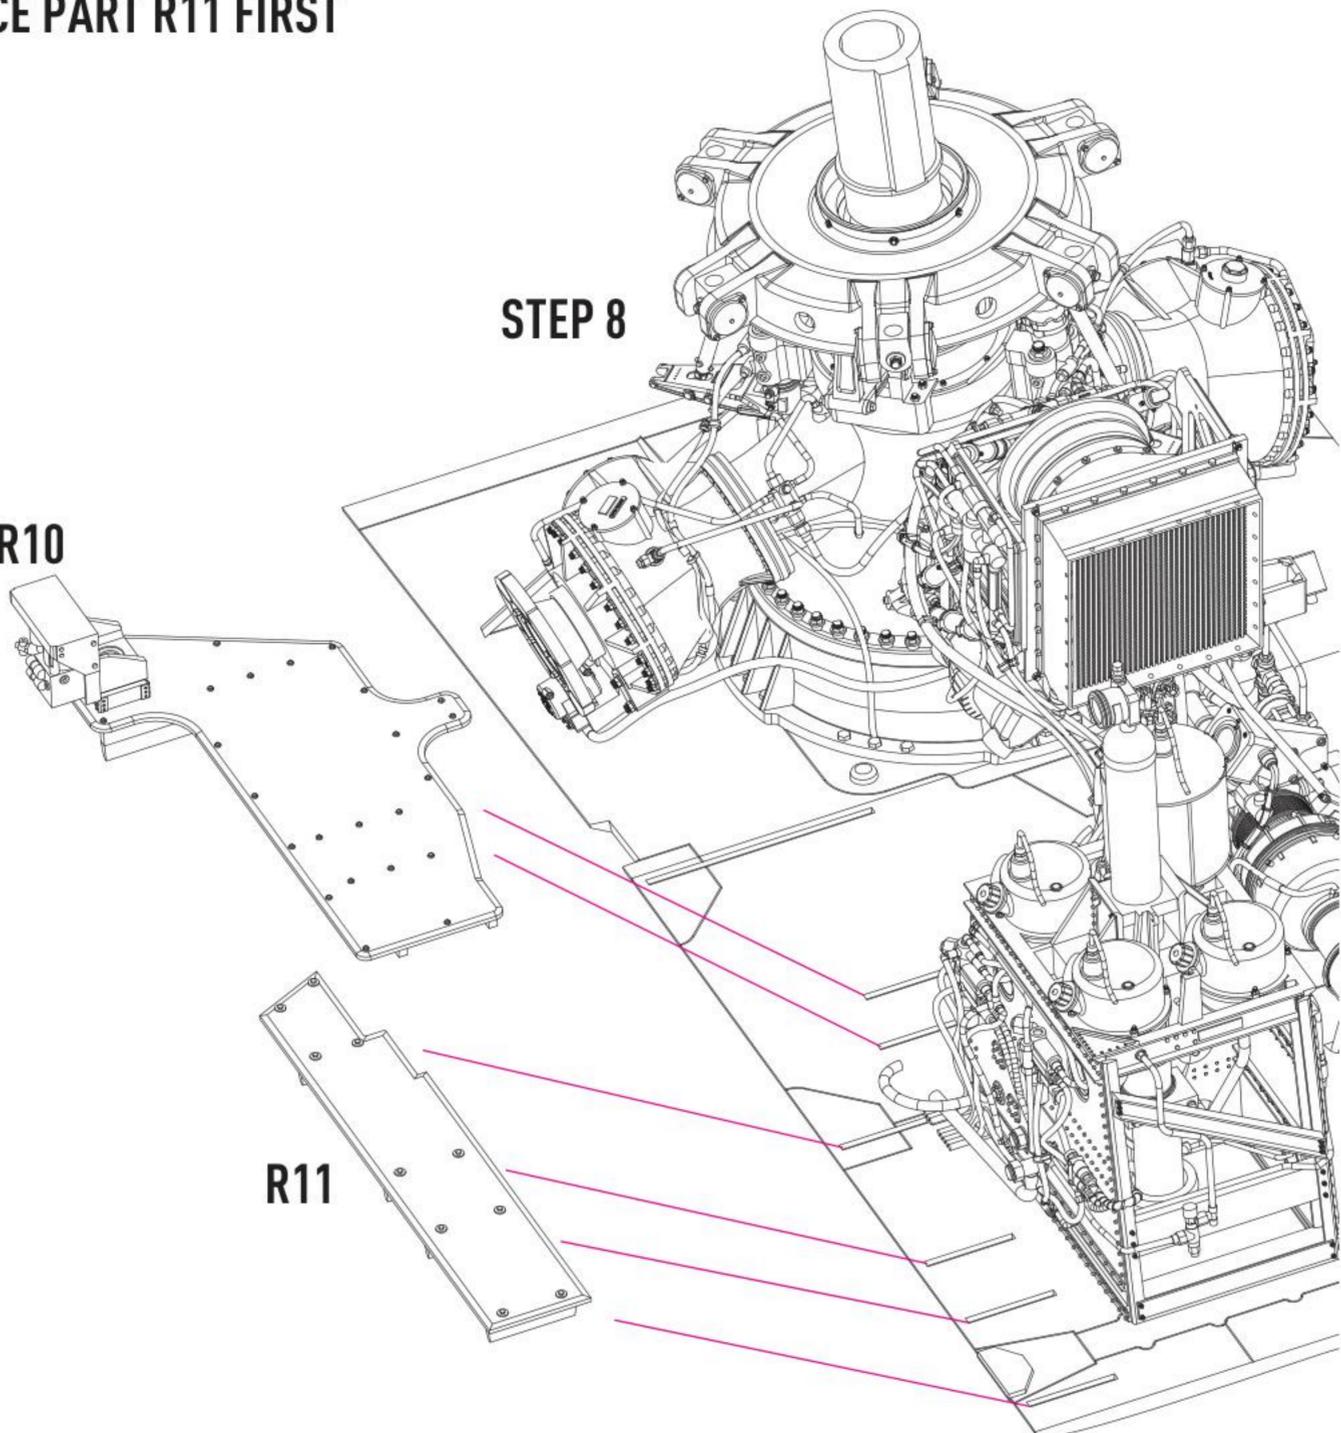


10

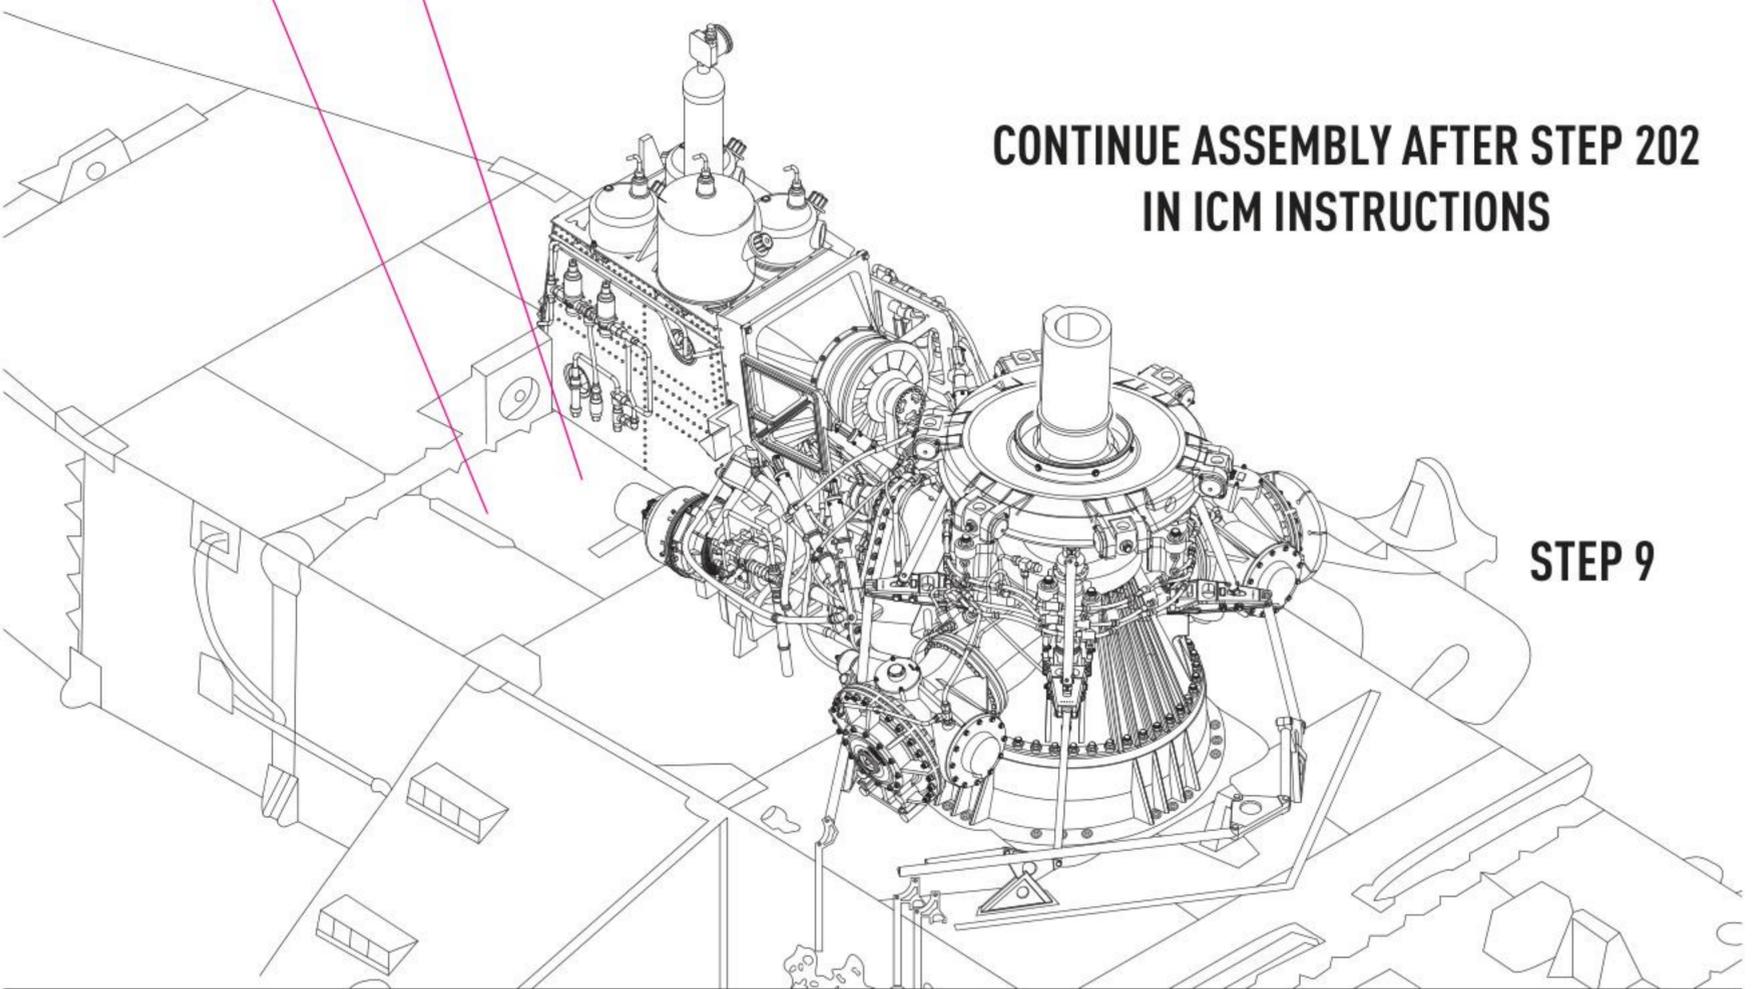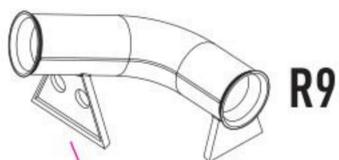


11

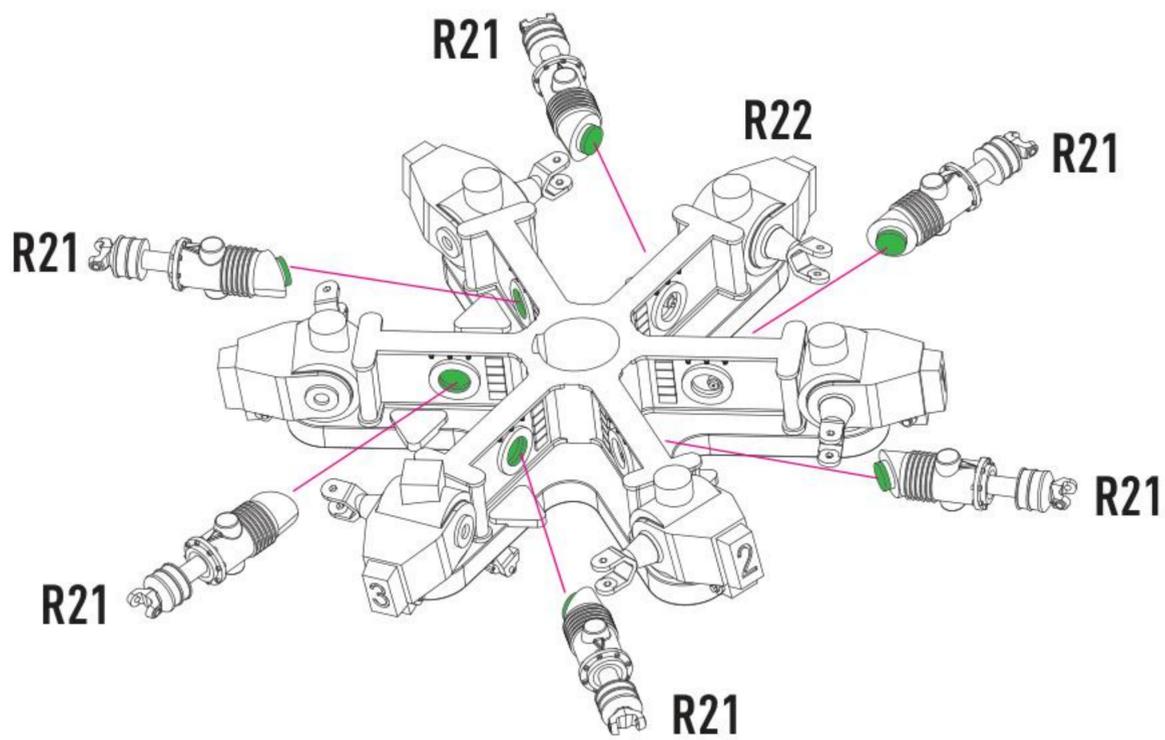


12

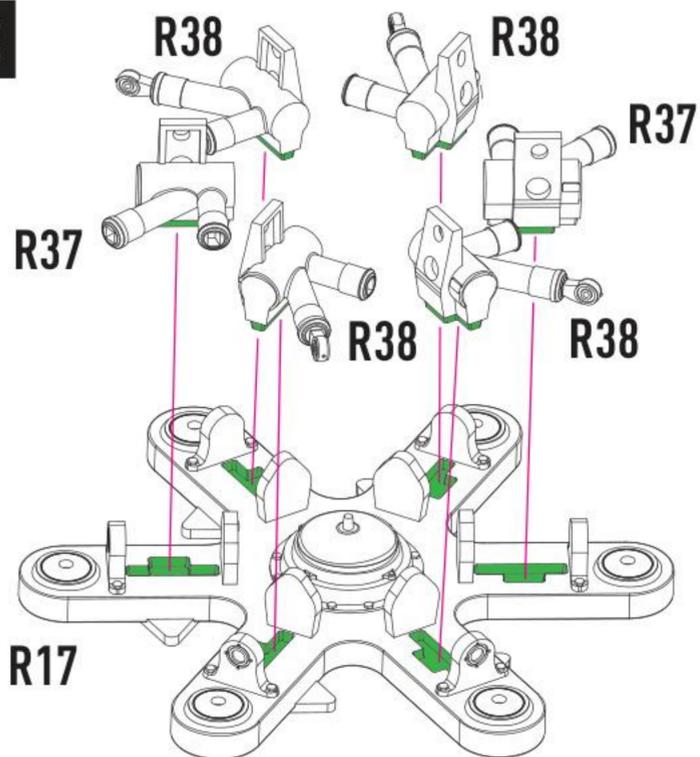


13



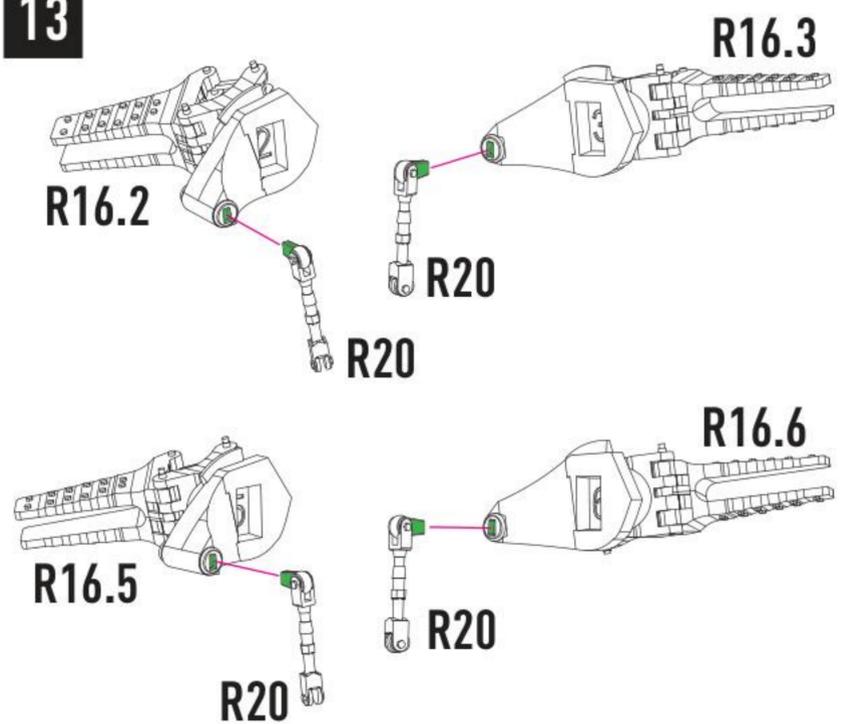


14 IT IS IMPORTANT THAT THE PART NUMBERING R16.1, R16.2, R16.3, R16.4, R16.5, R16.6, IS NUMBERING OF THE PART SECTORS R22

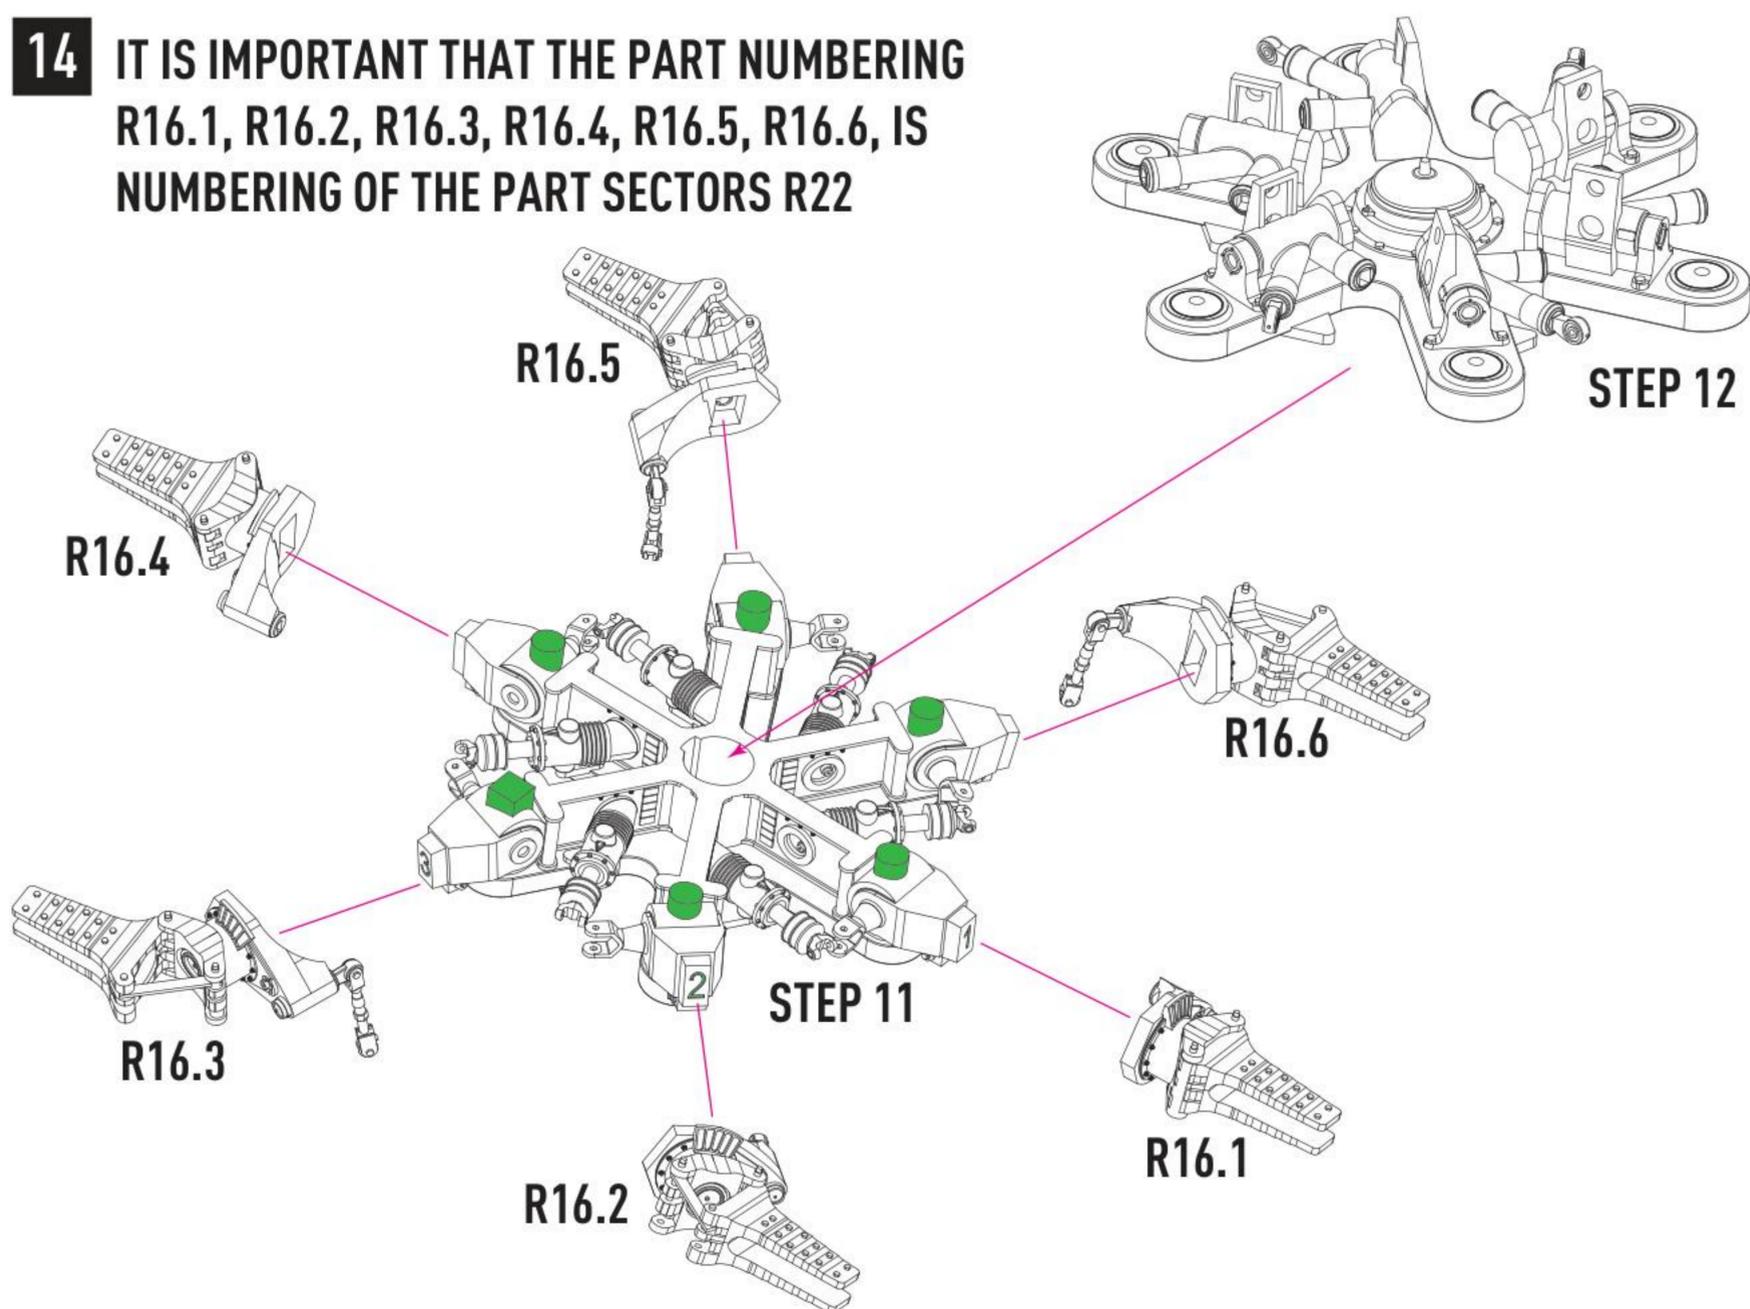


15

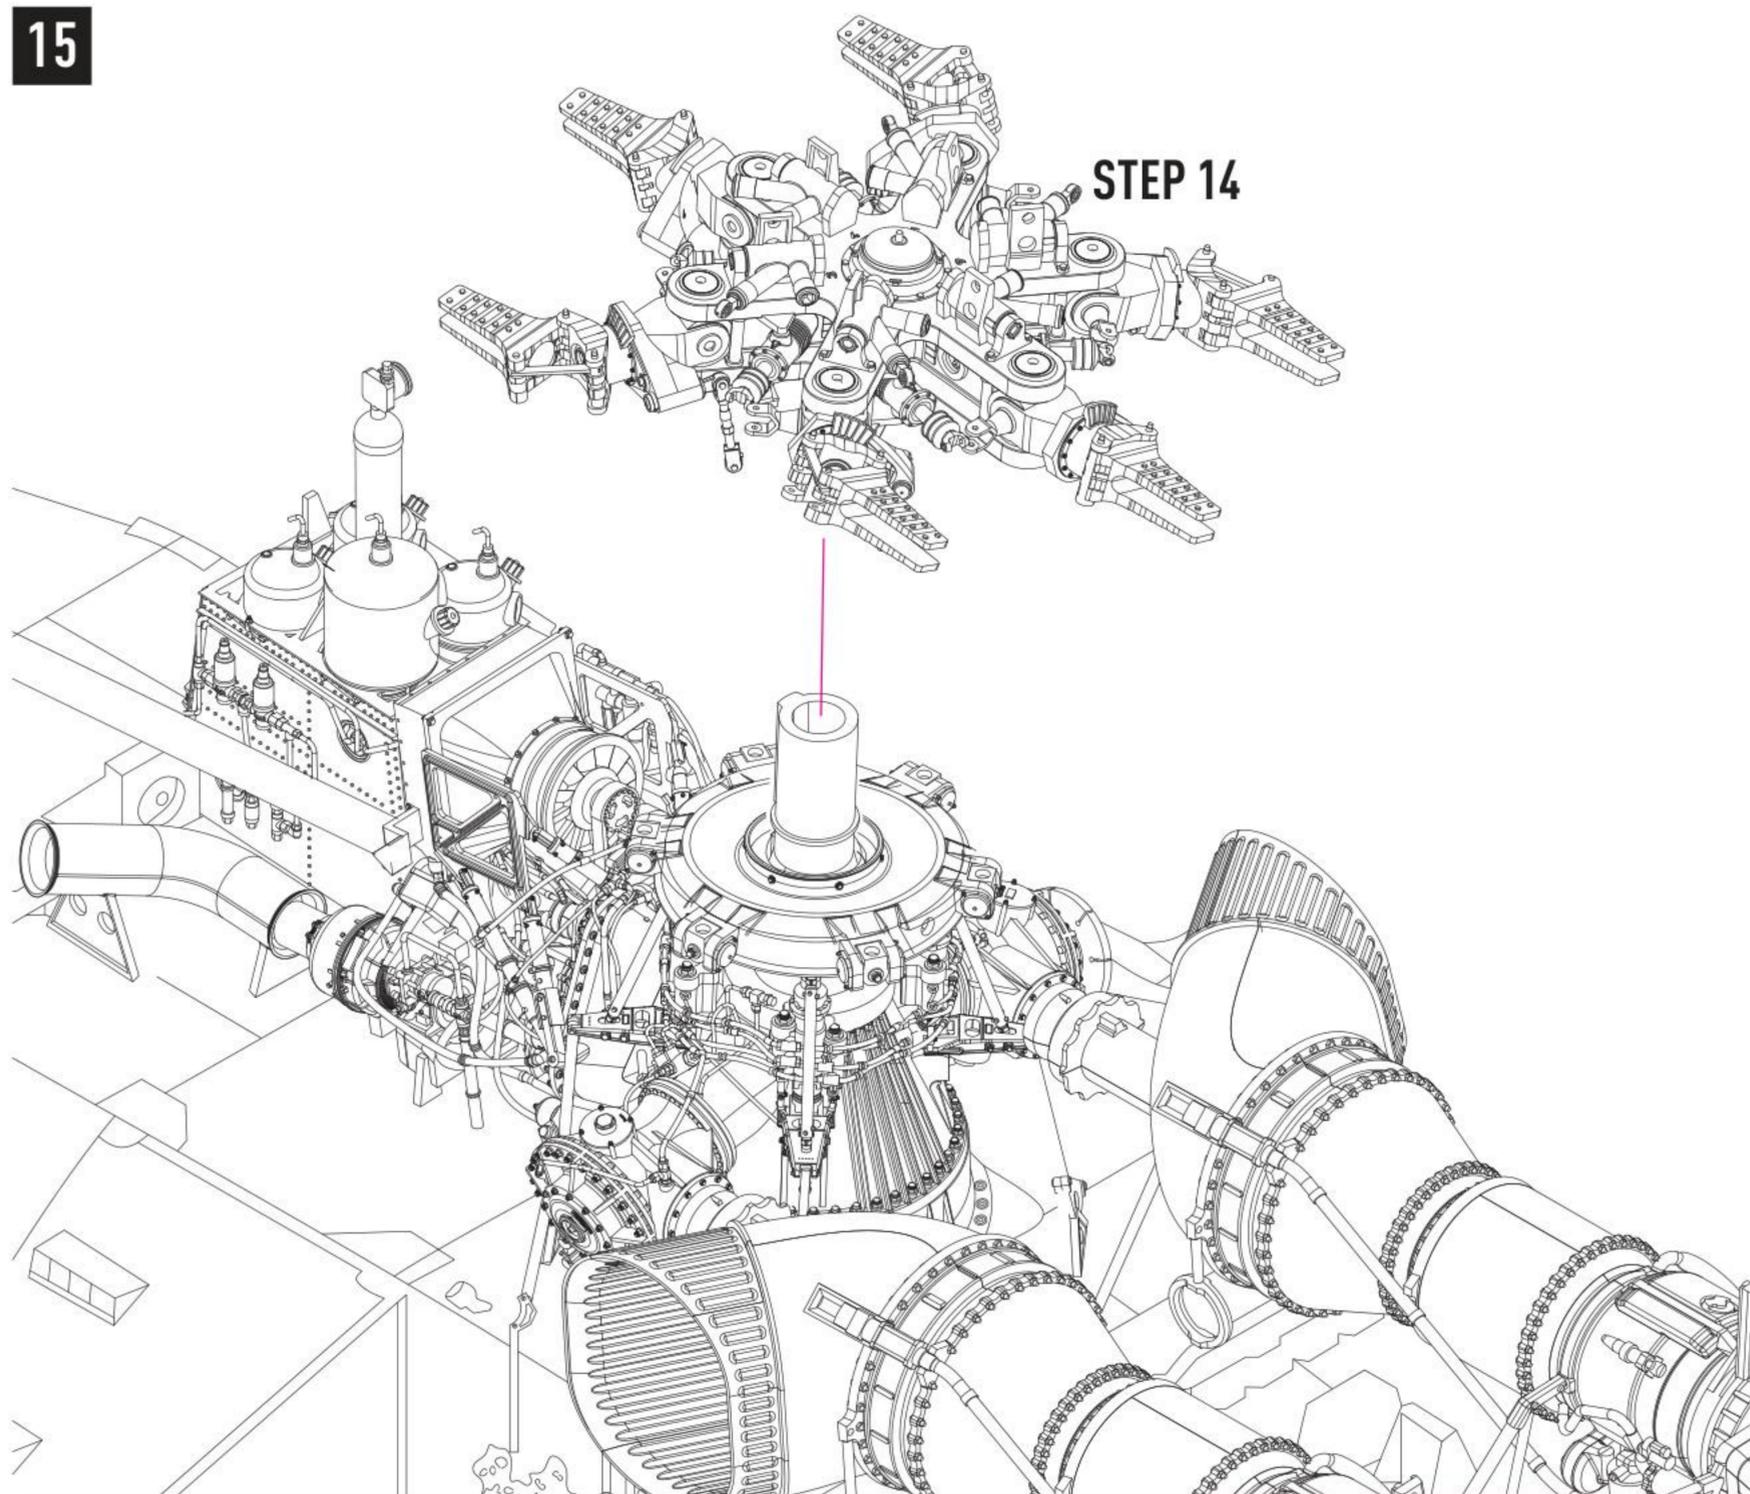


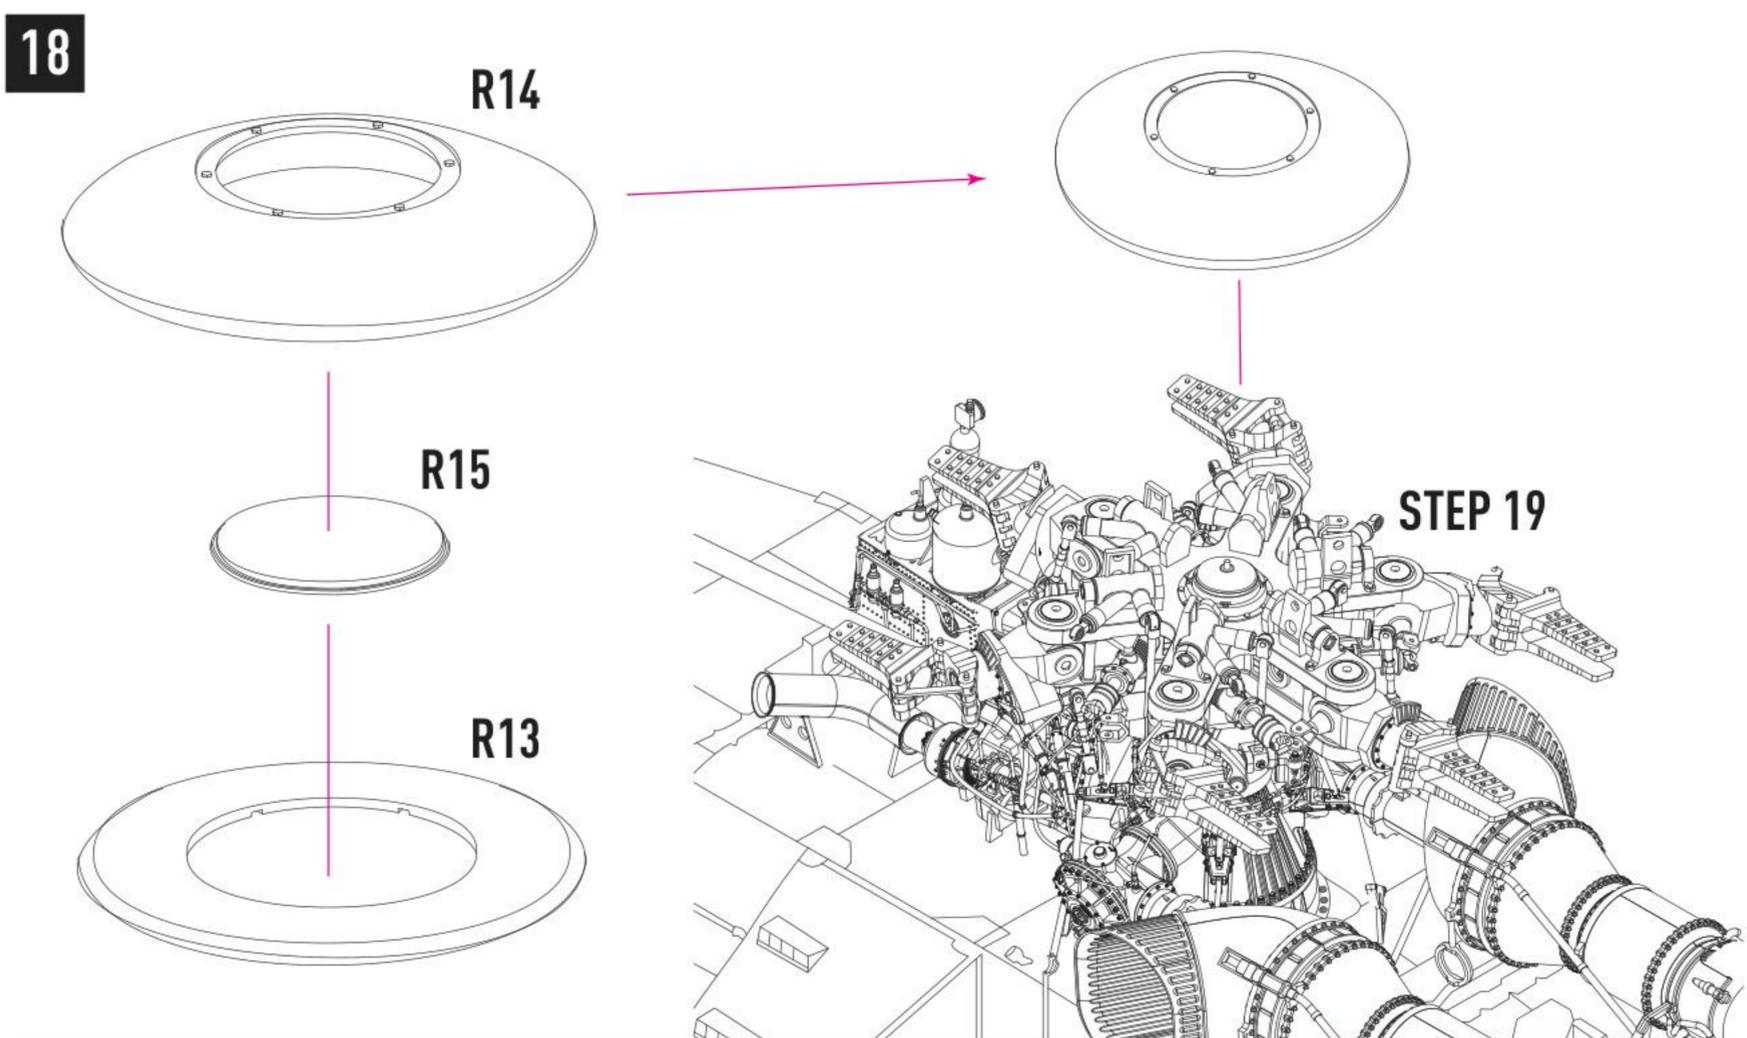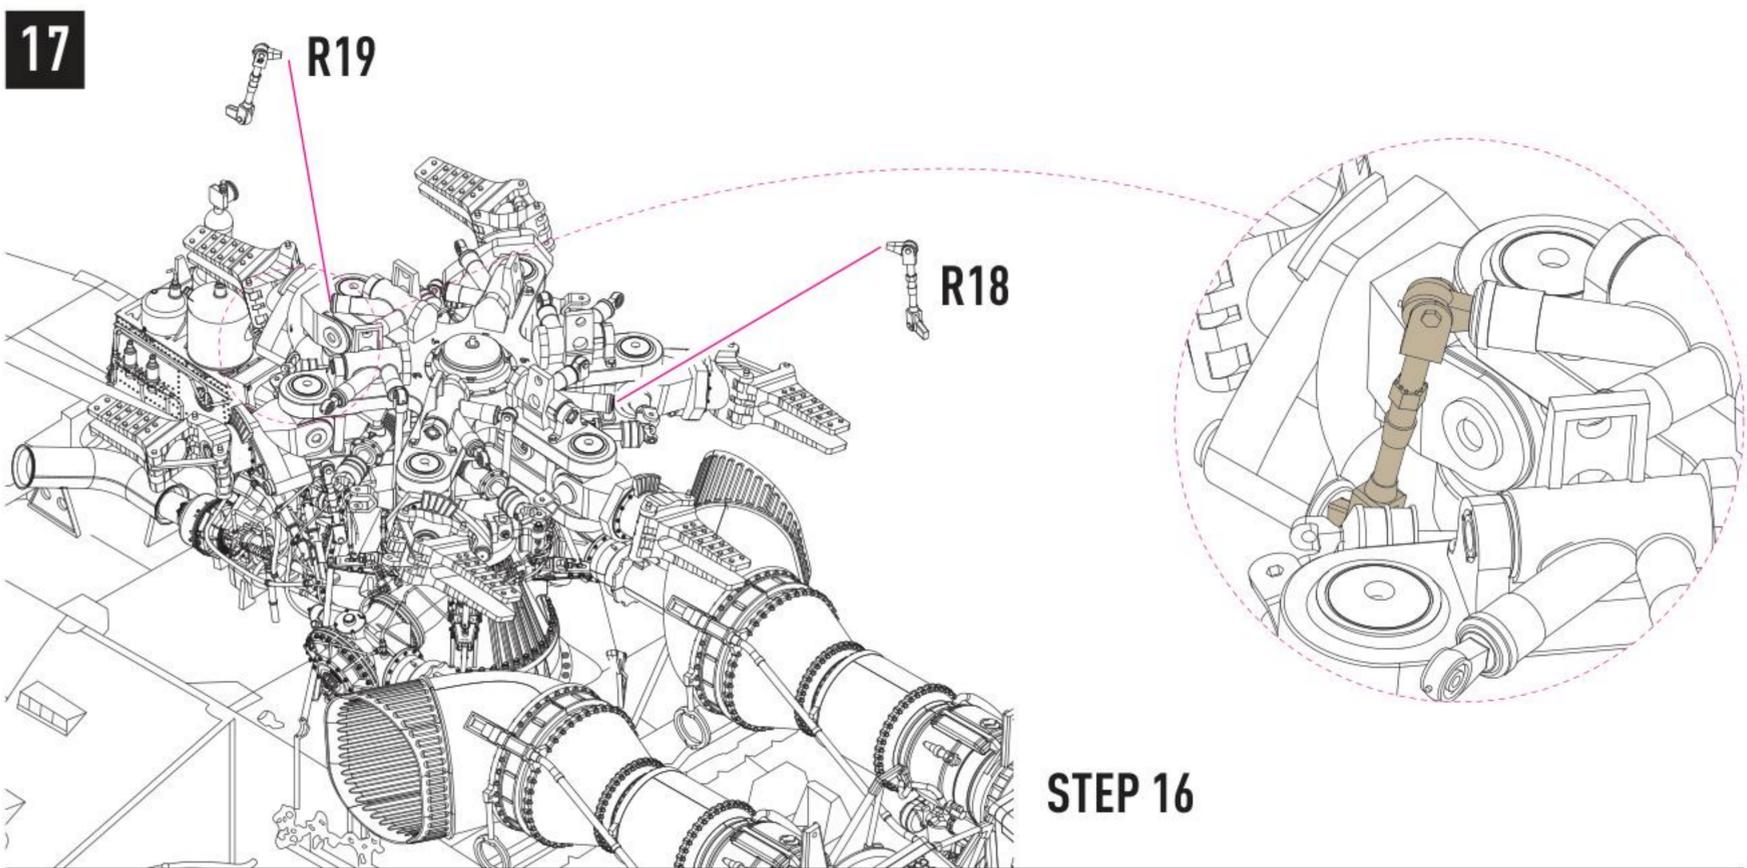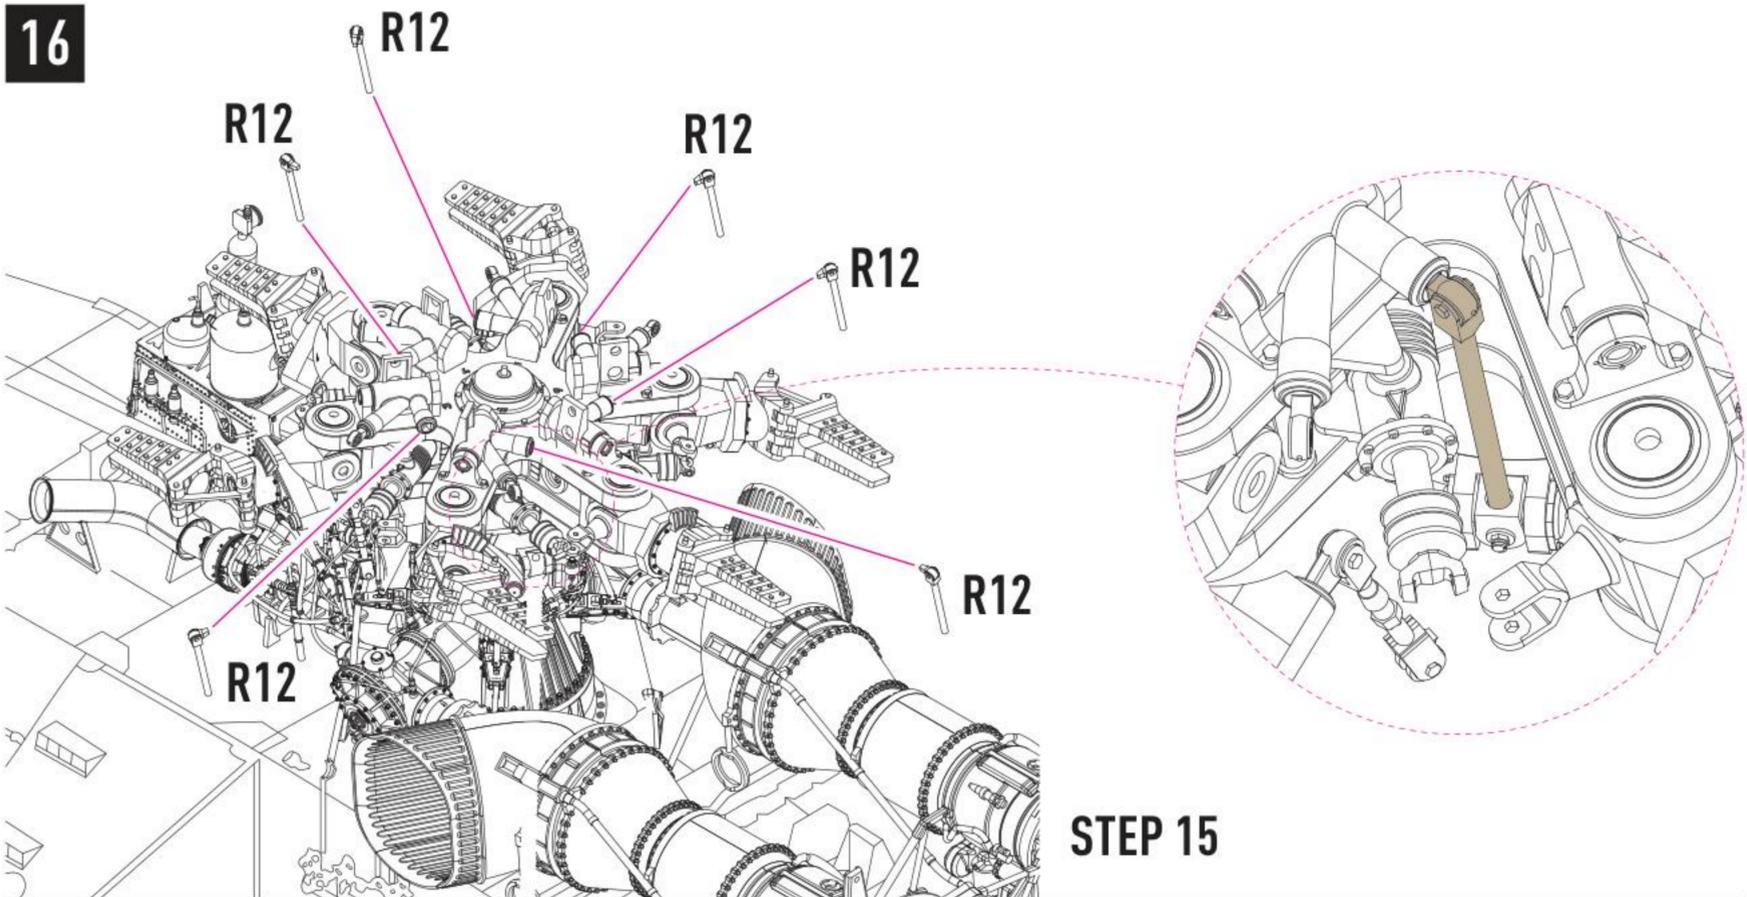


19

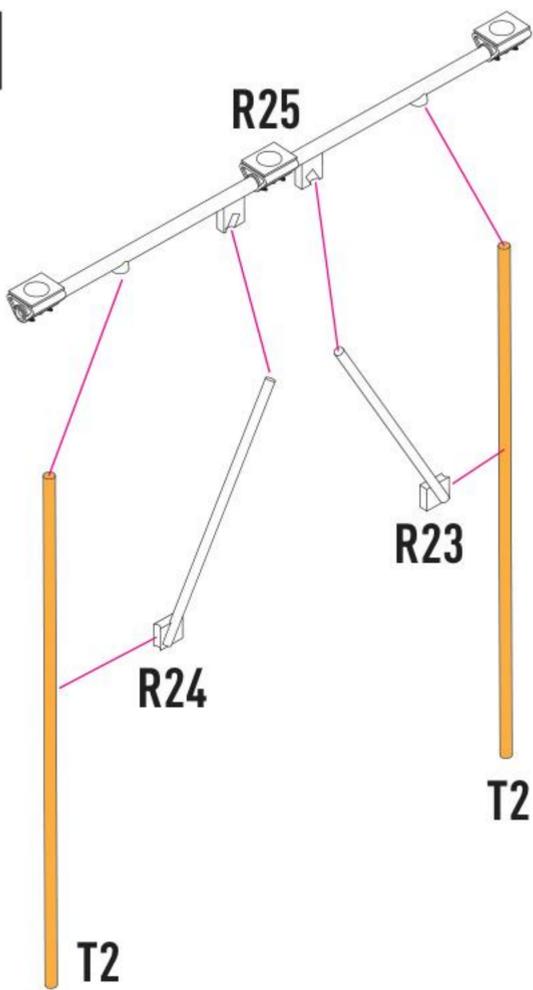


20

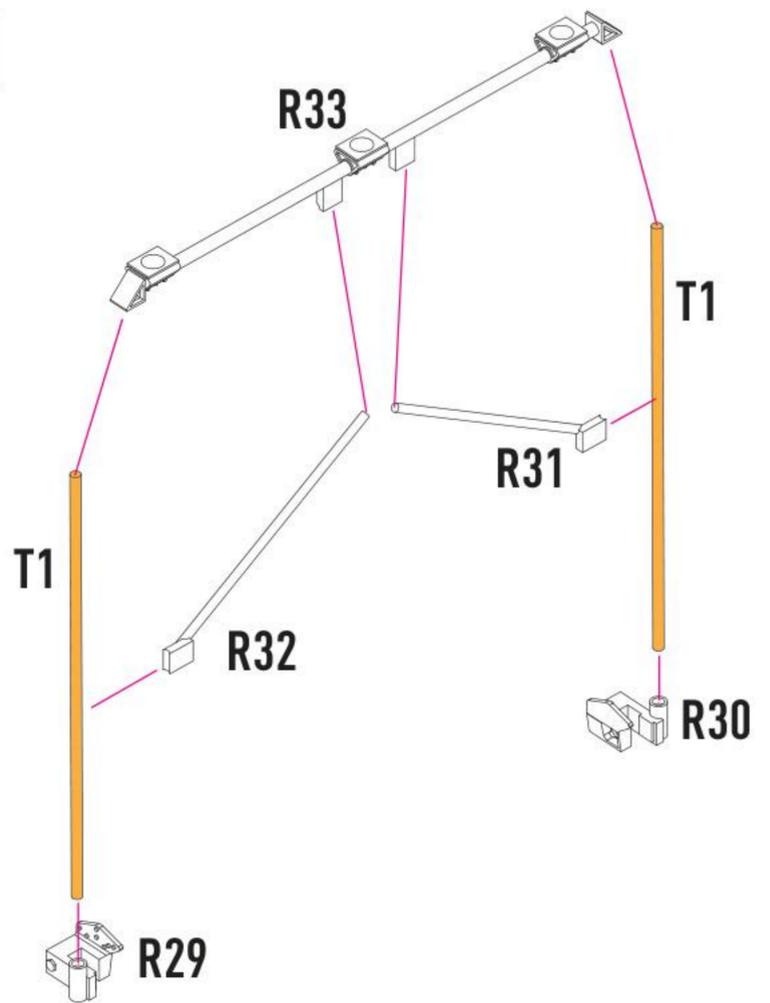

21

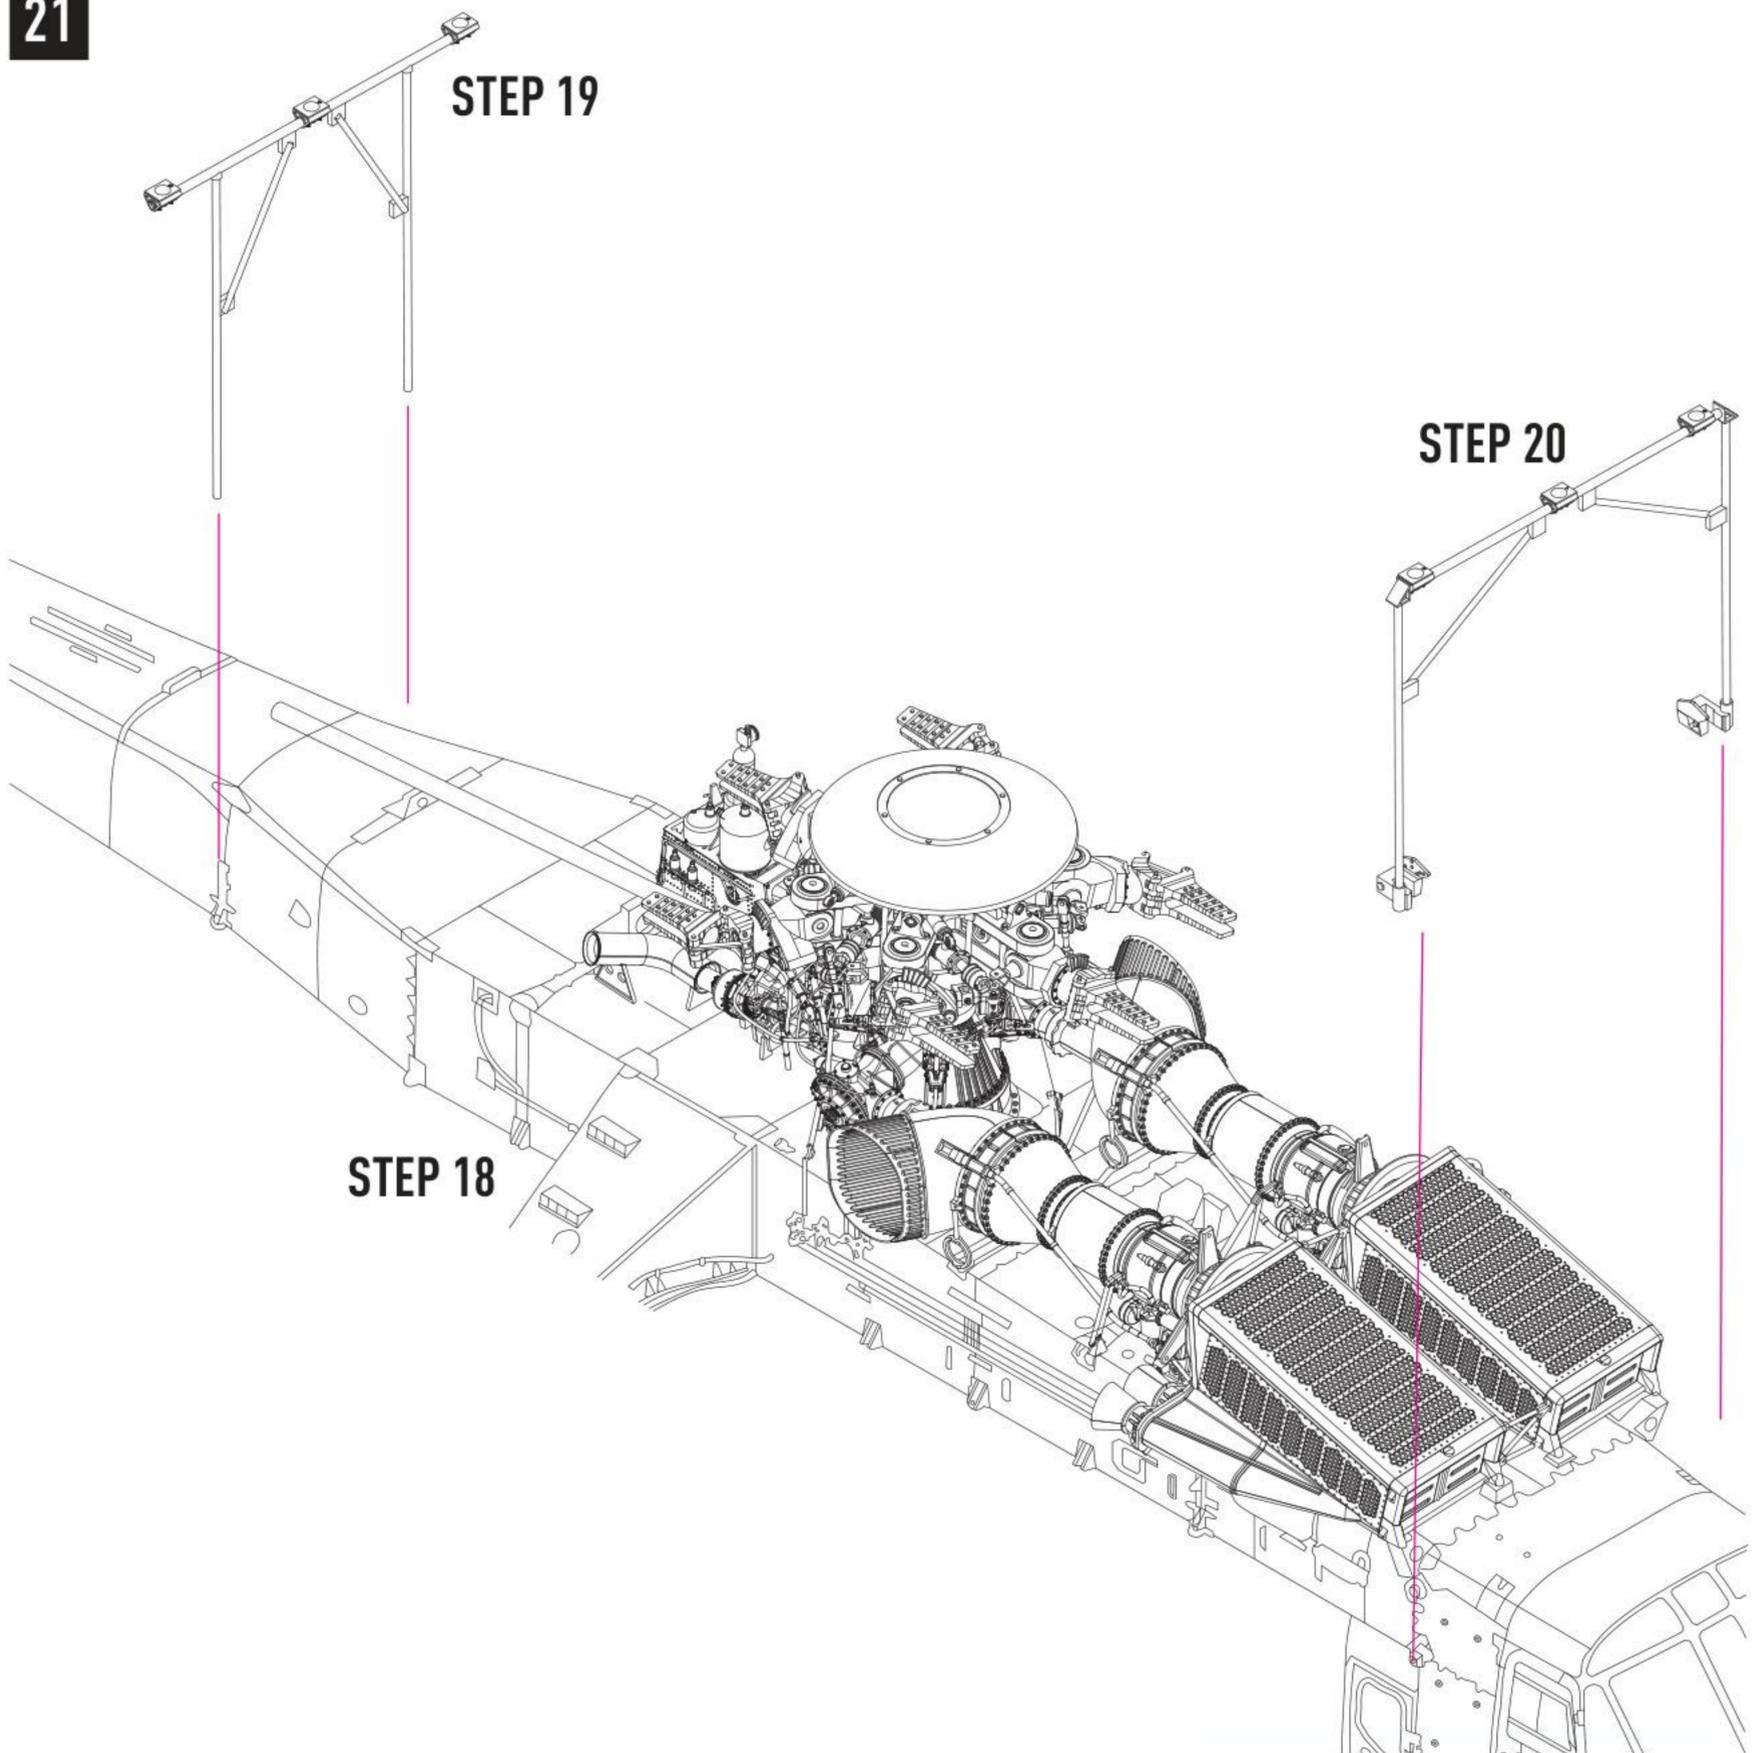


22 THREAD THE PARTS THROUGH

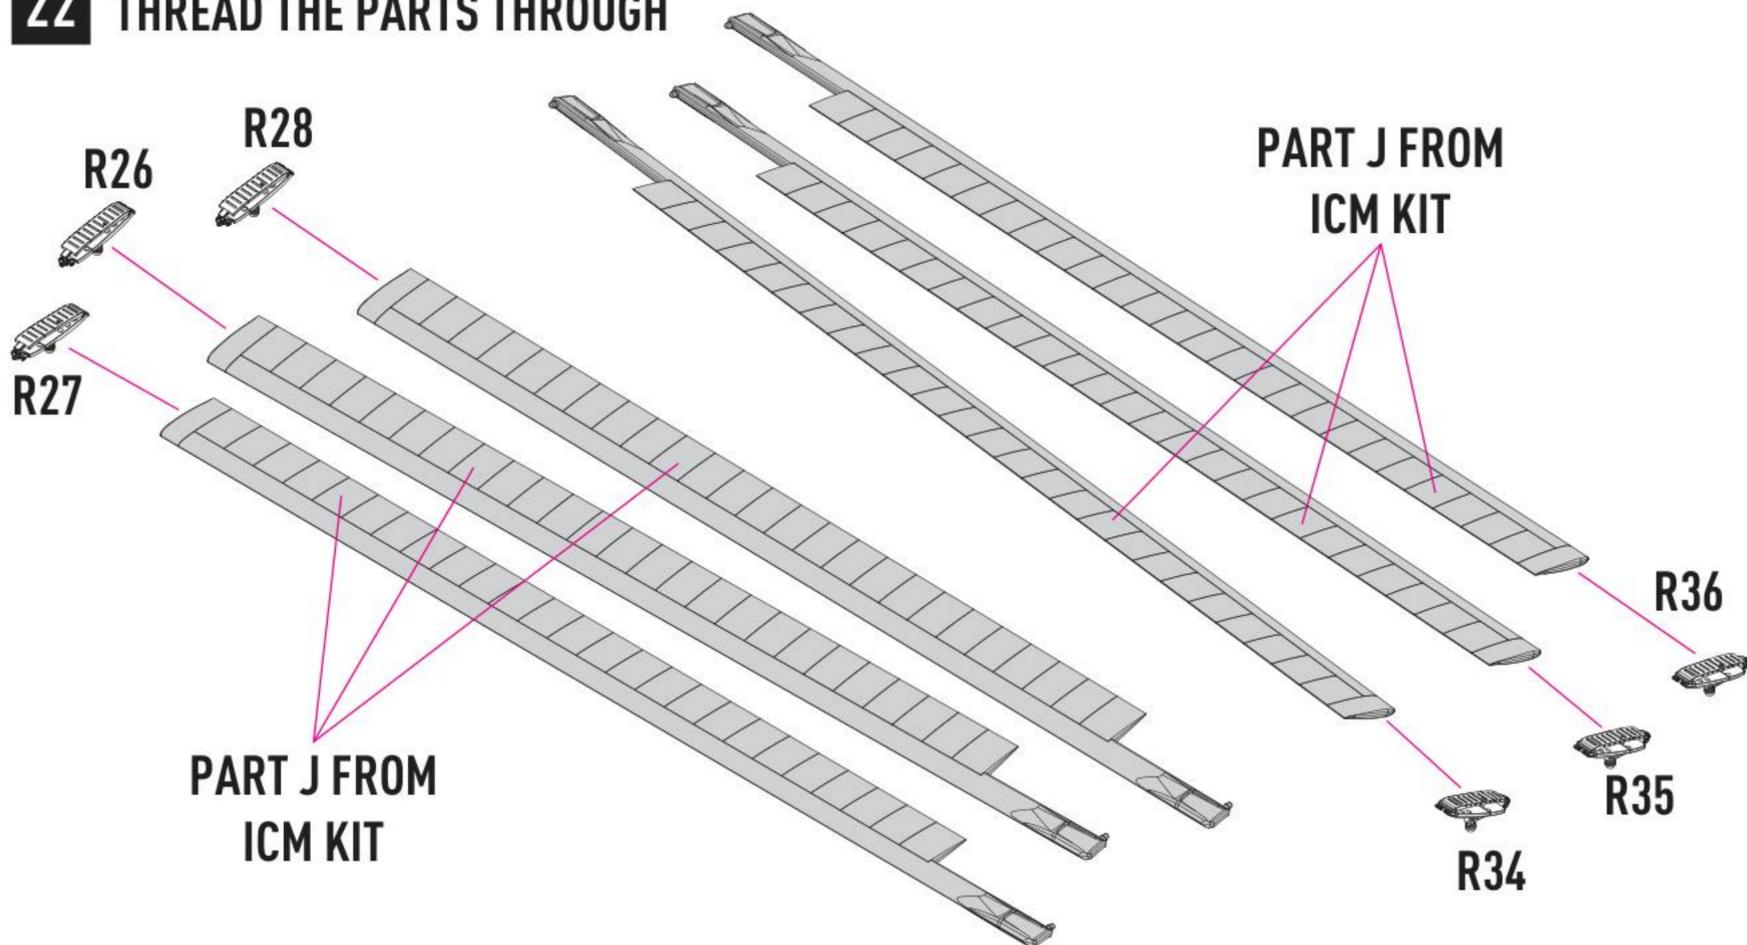

23

INSTALL PARTS J FROM THE ICM KIT WITH PARTS R26, R27, R28, R34, R35, R36 ON THE BLADE FIXATION SYSTEM

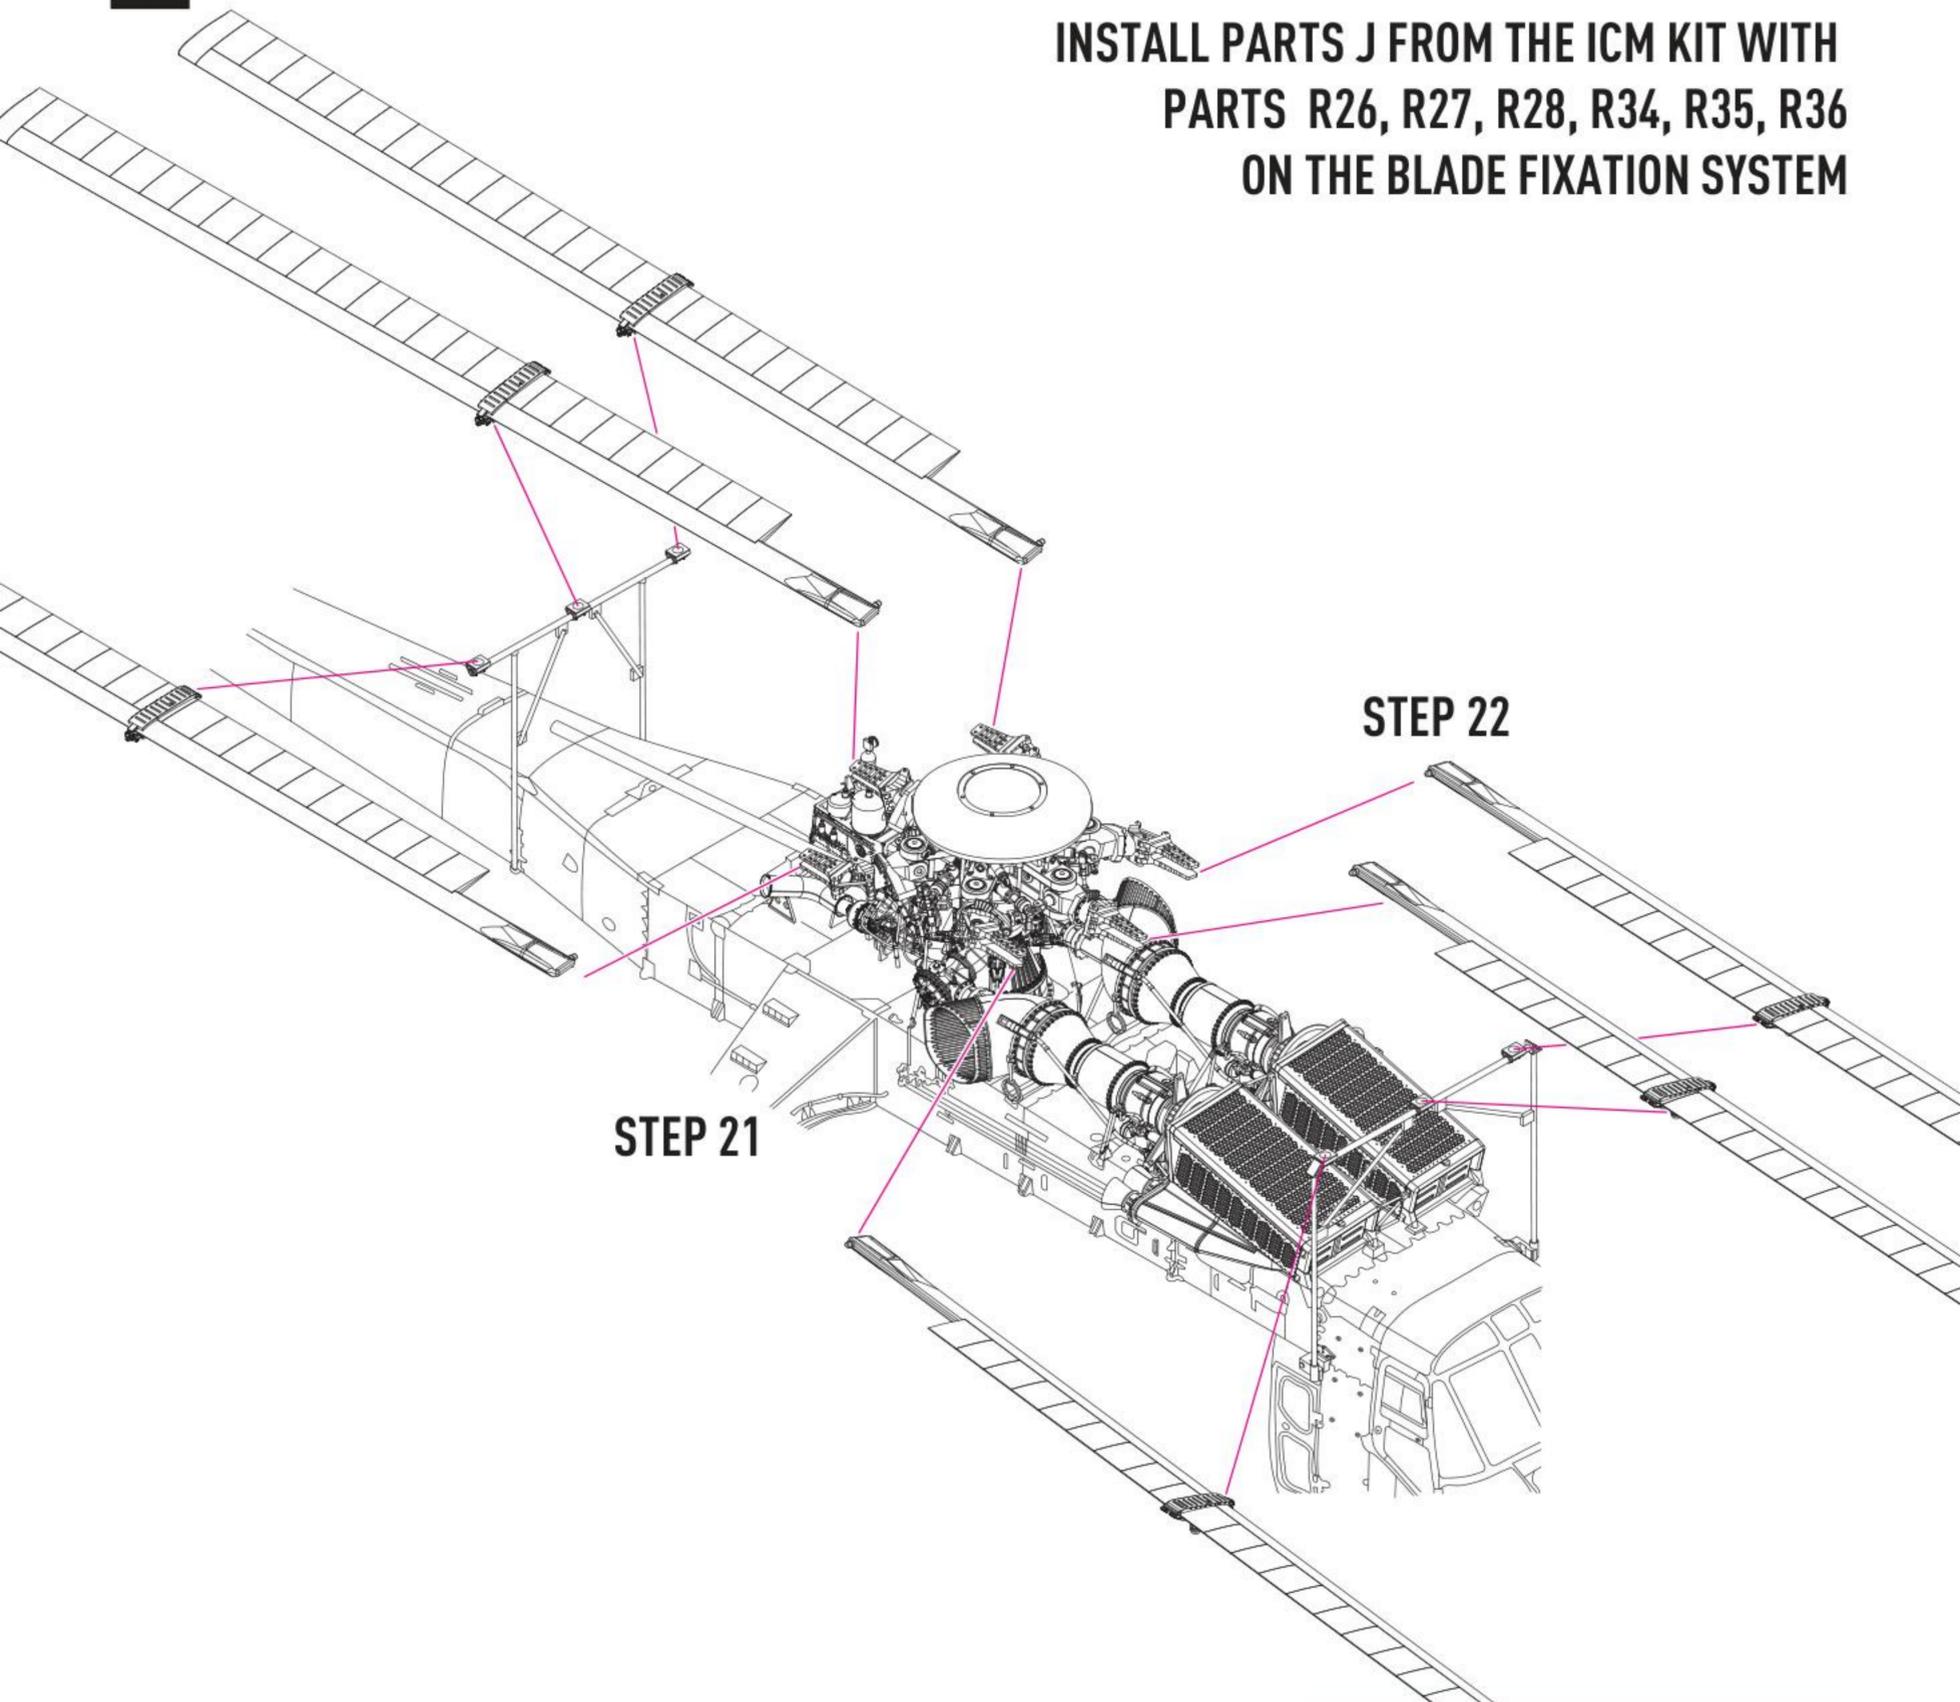

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua