


3

USE PART R32 FOR S-64E MODIFICATION

R8 or R32

R9


R10

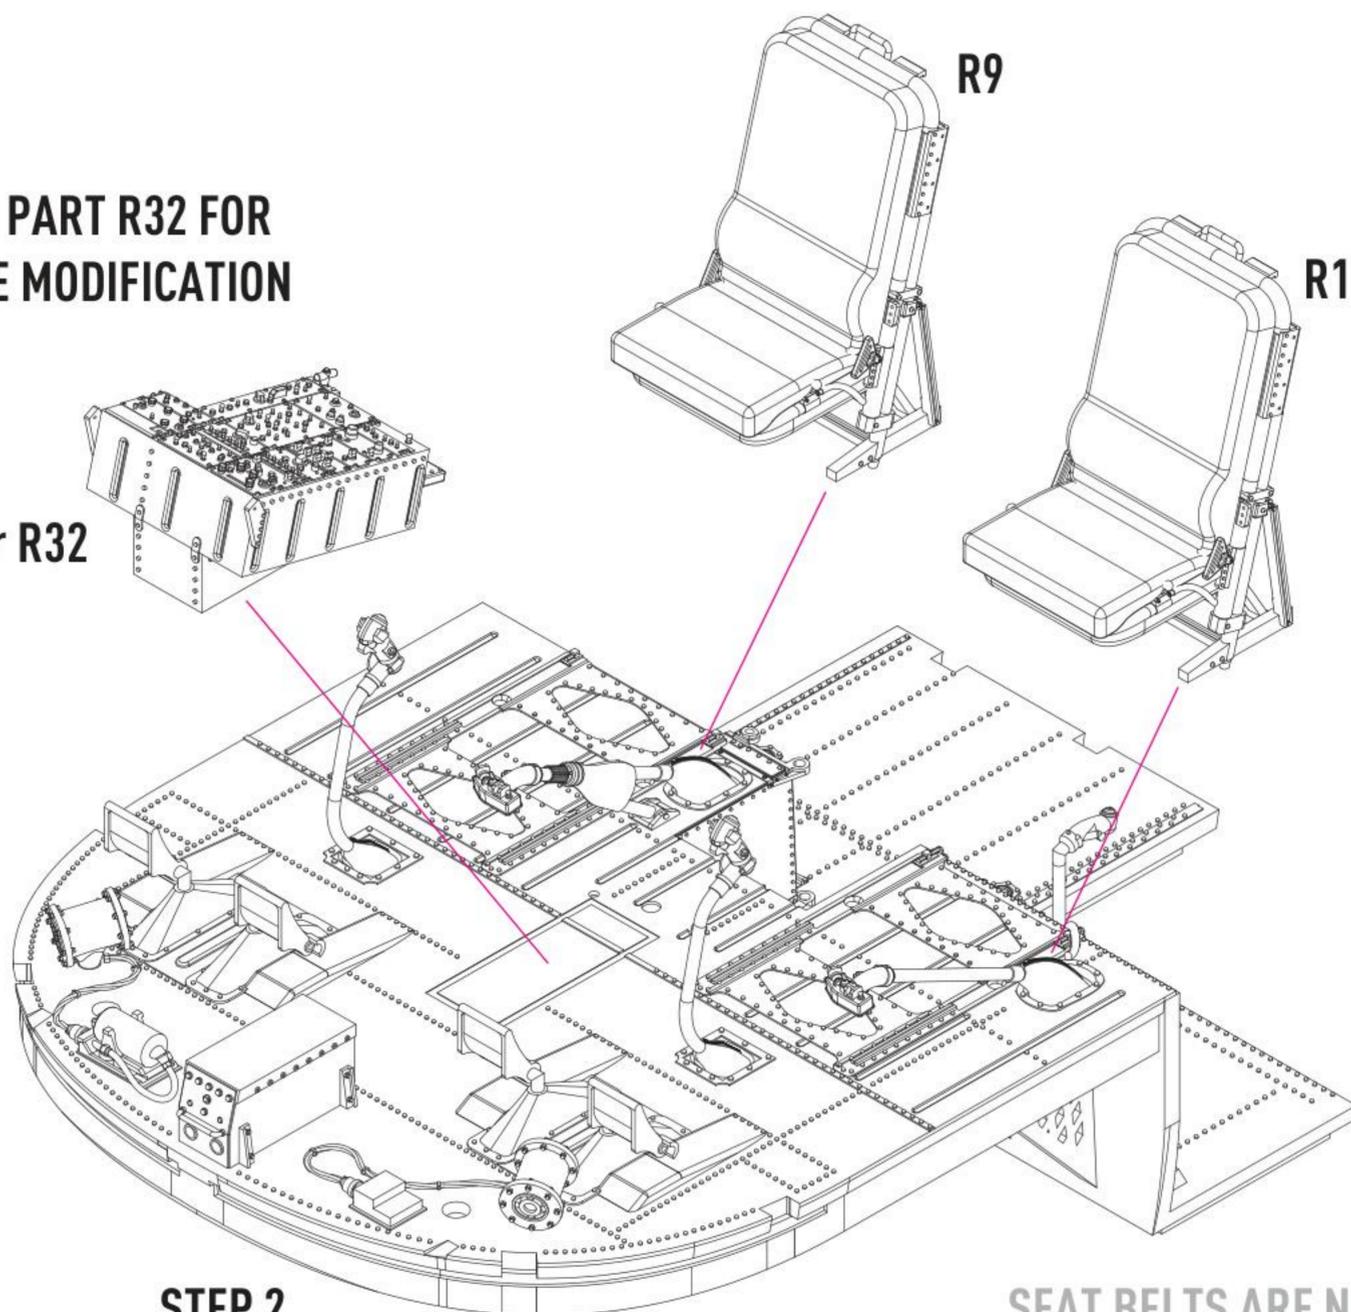

STEP 2


SEAT BELTS ARE NOT SHOWN

4

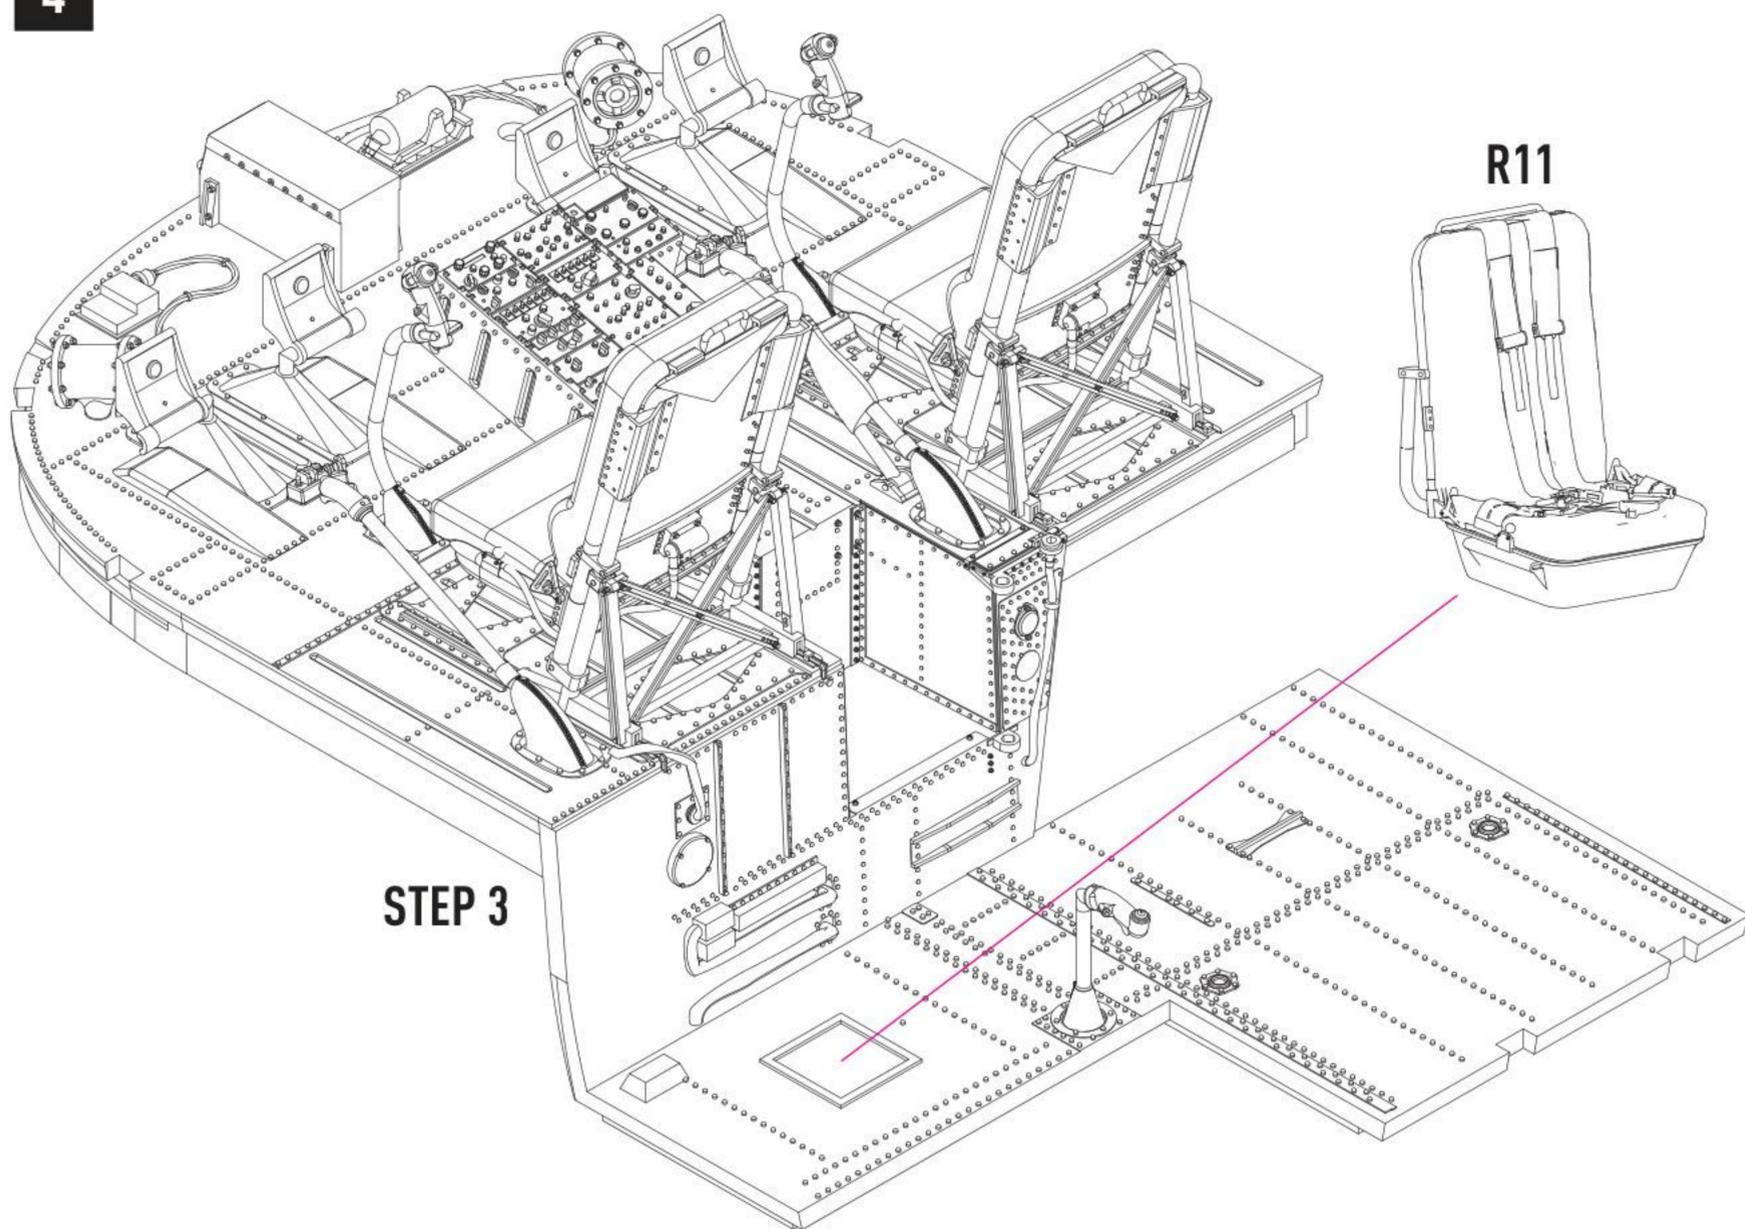

STEP 3


5

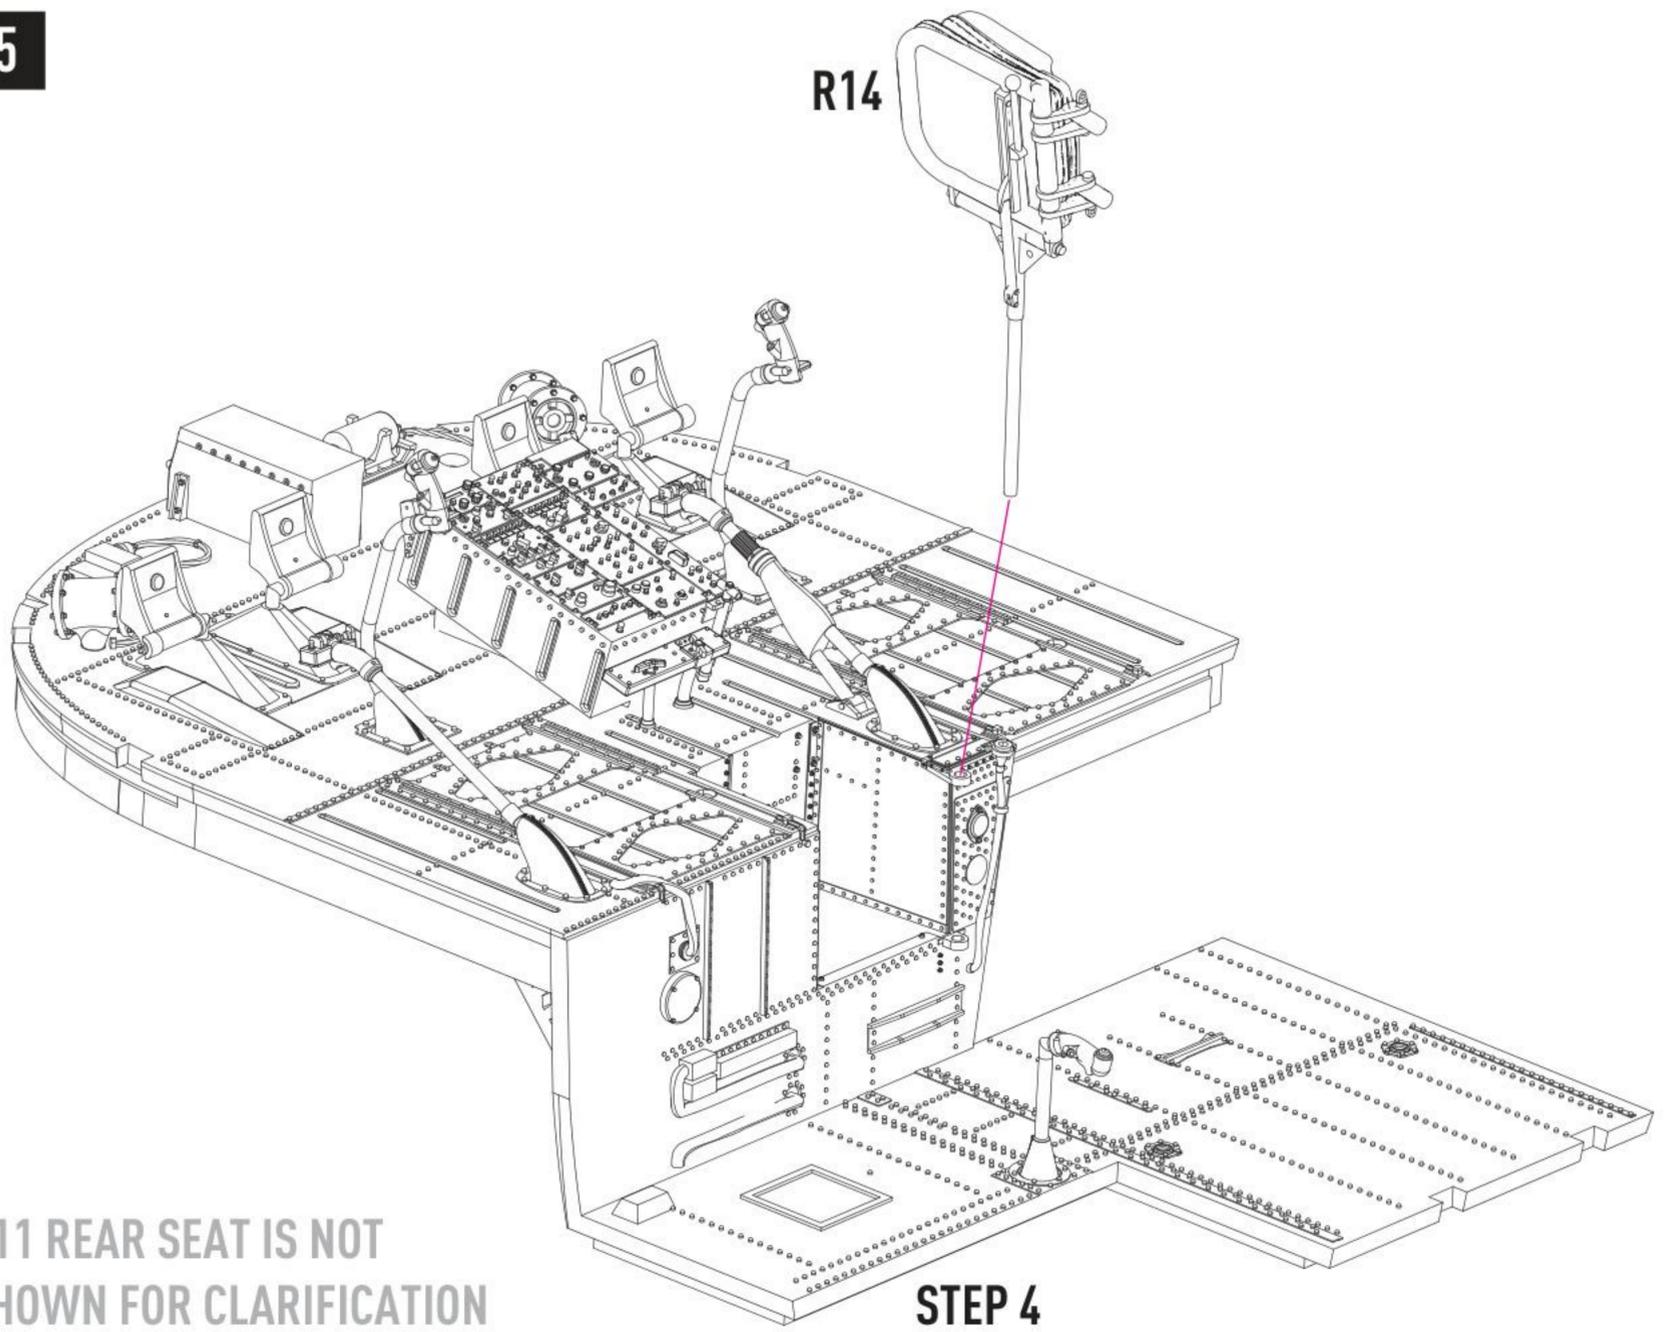

R11 REAR SEAT IS NOT SHOWN FOR CLARIFICATION

STEP 4

6

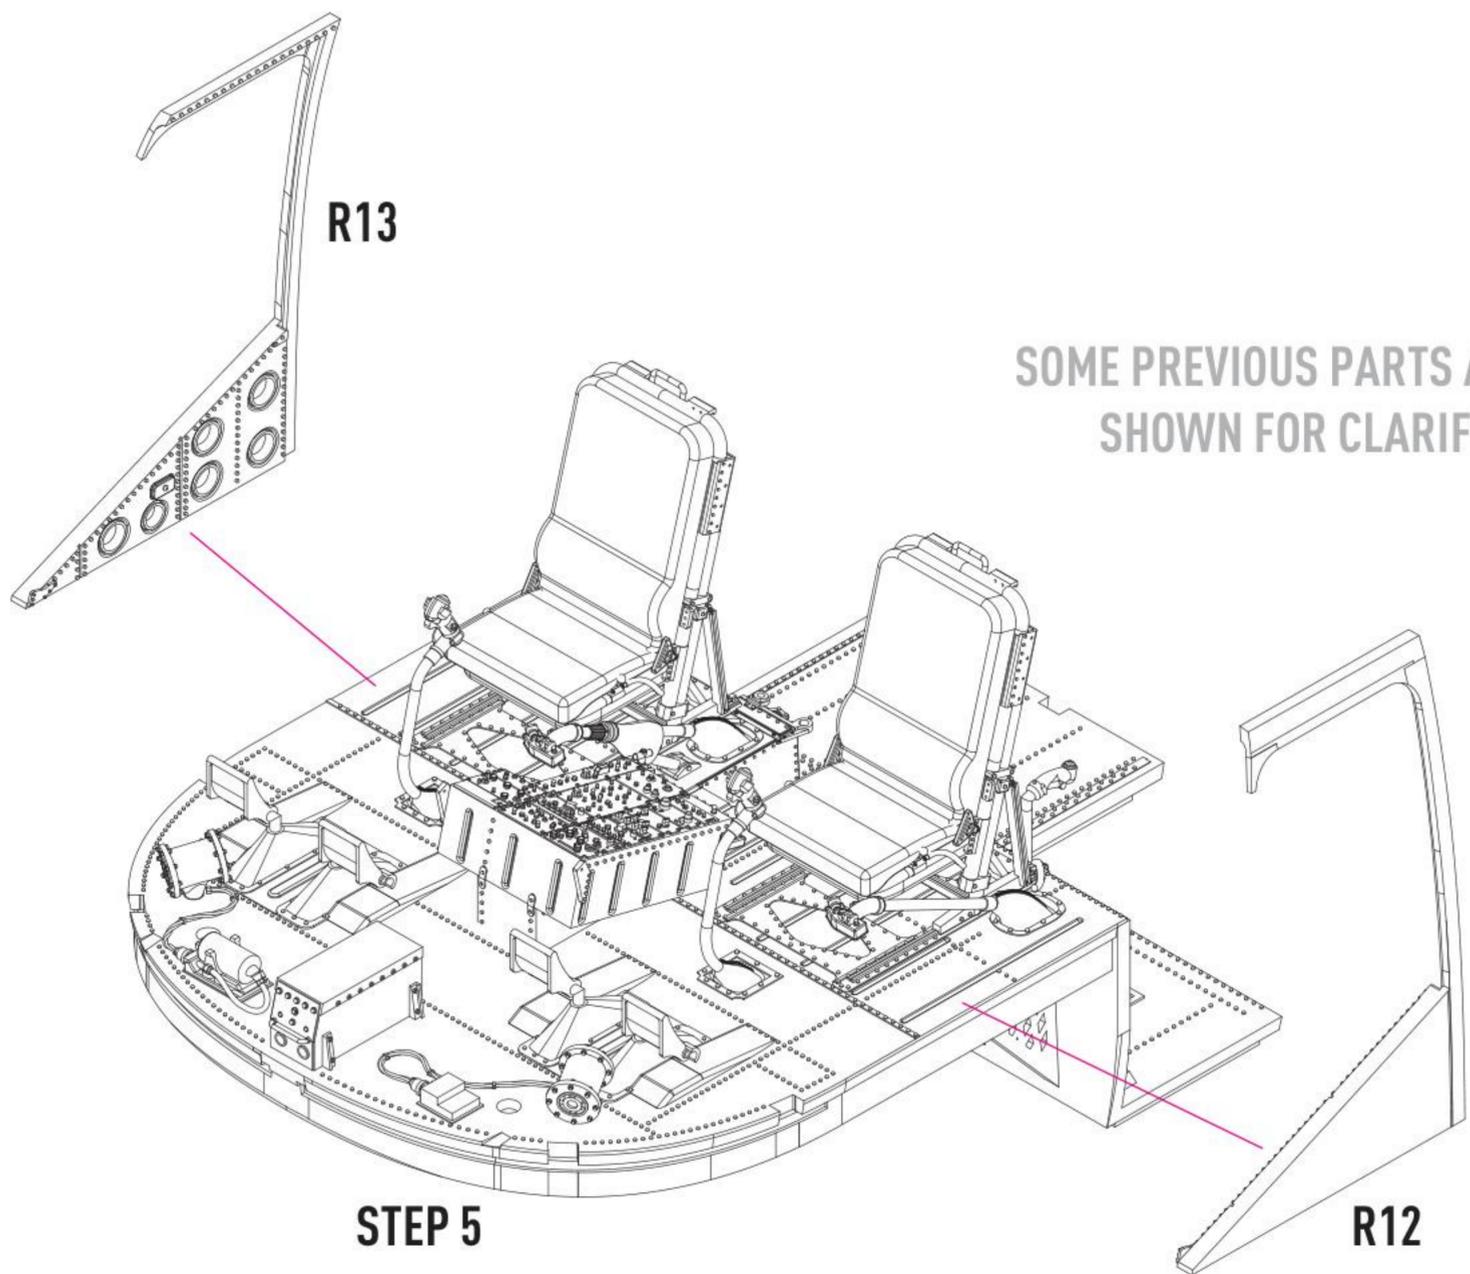


SOME PREVIOUS PARTS ARE NOT SHOWN FOR CLARIFICATION

STEP 5


R12




7

SOME PREVIOUS PARTS ARE NOT SHOWN FOR CLARIFICATION

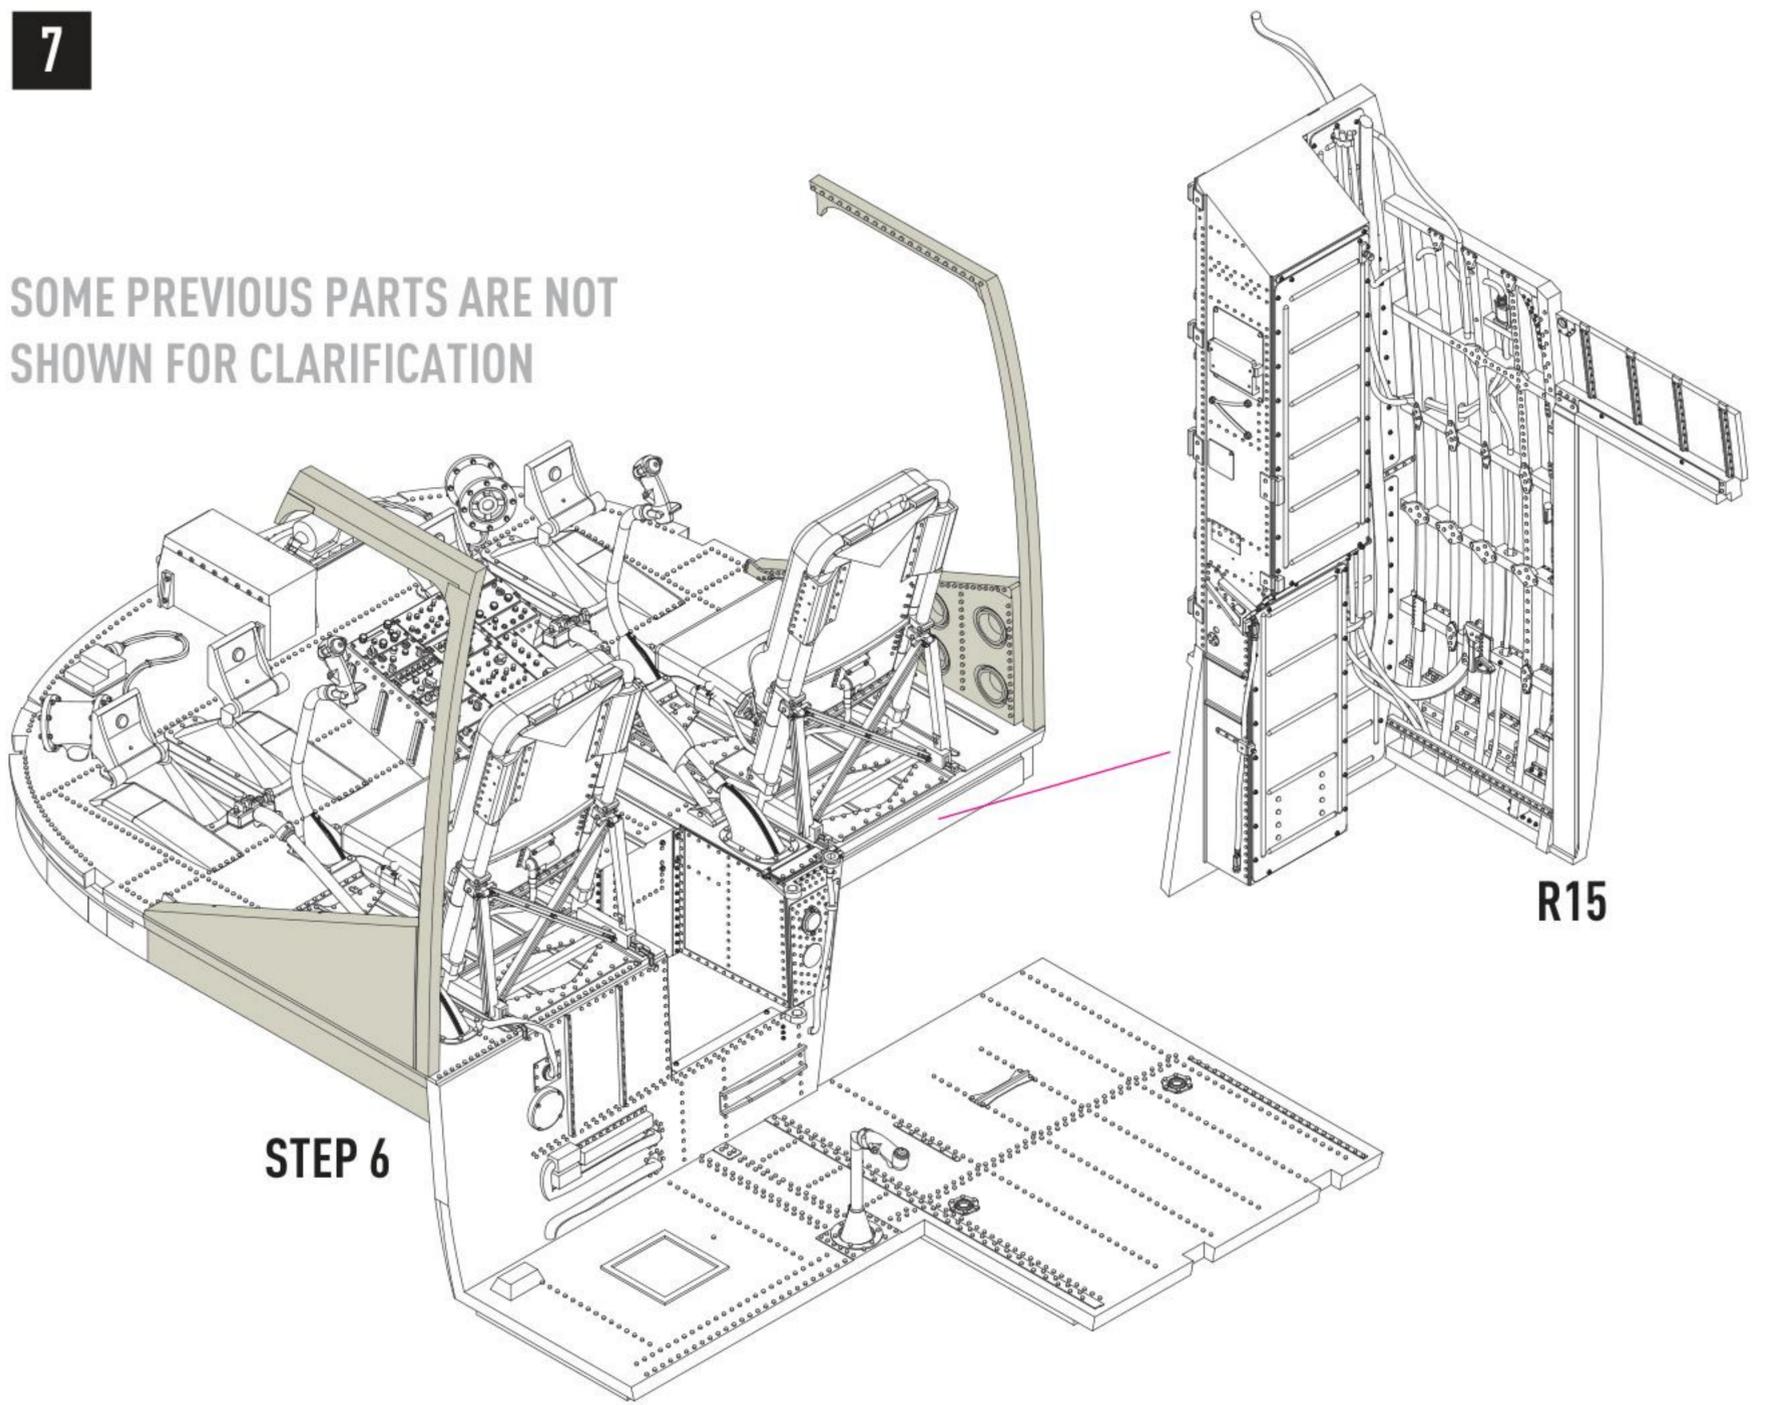


8

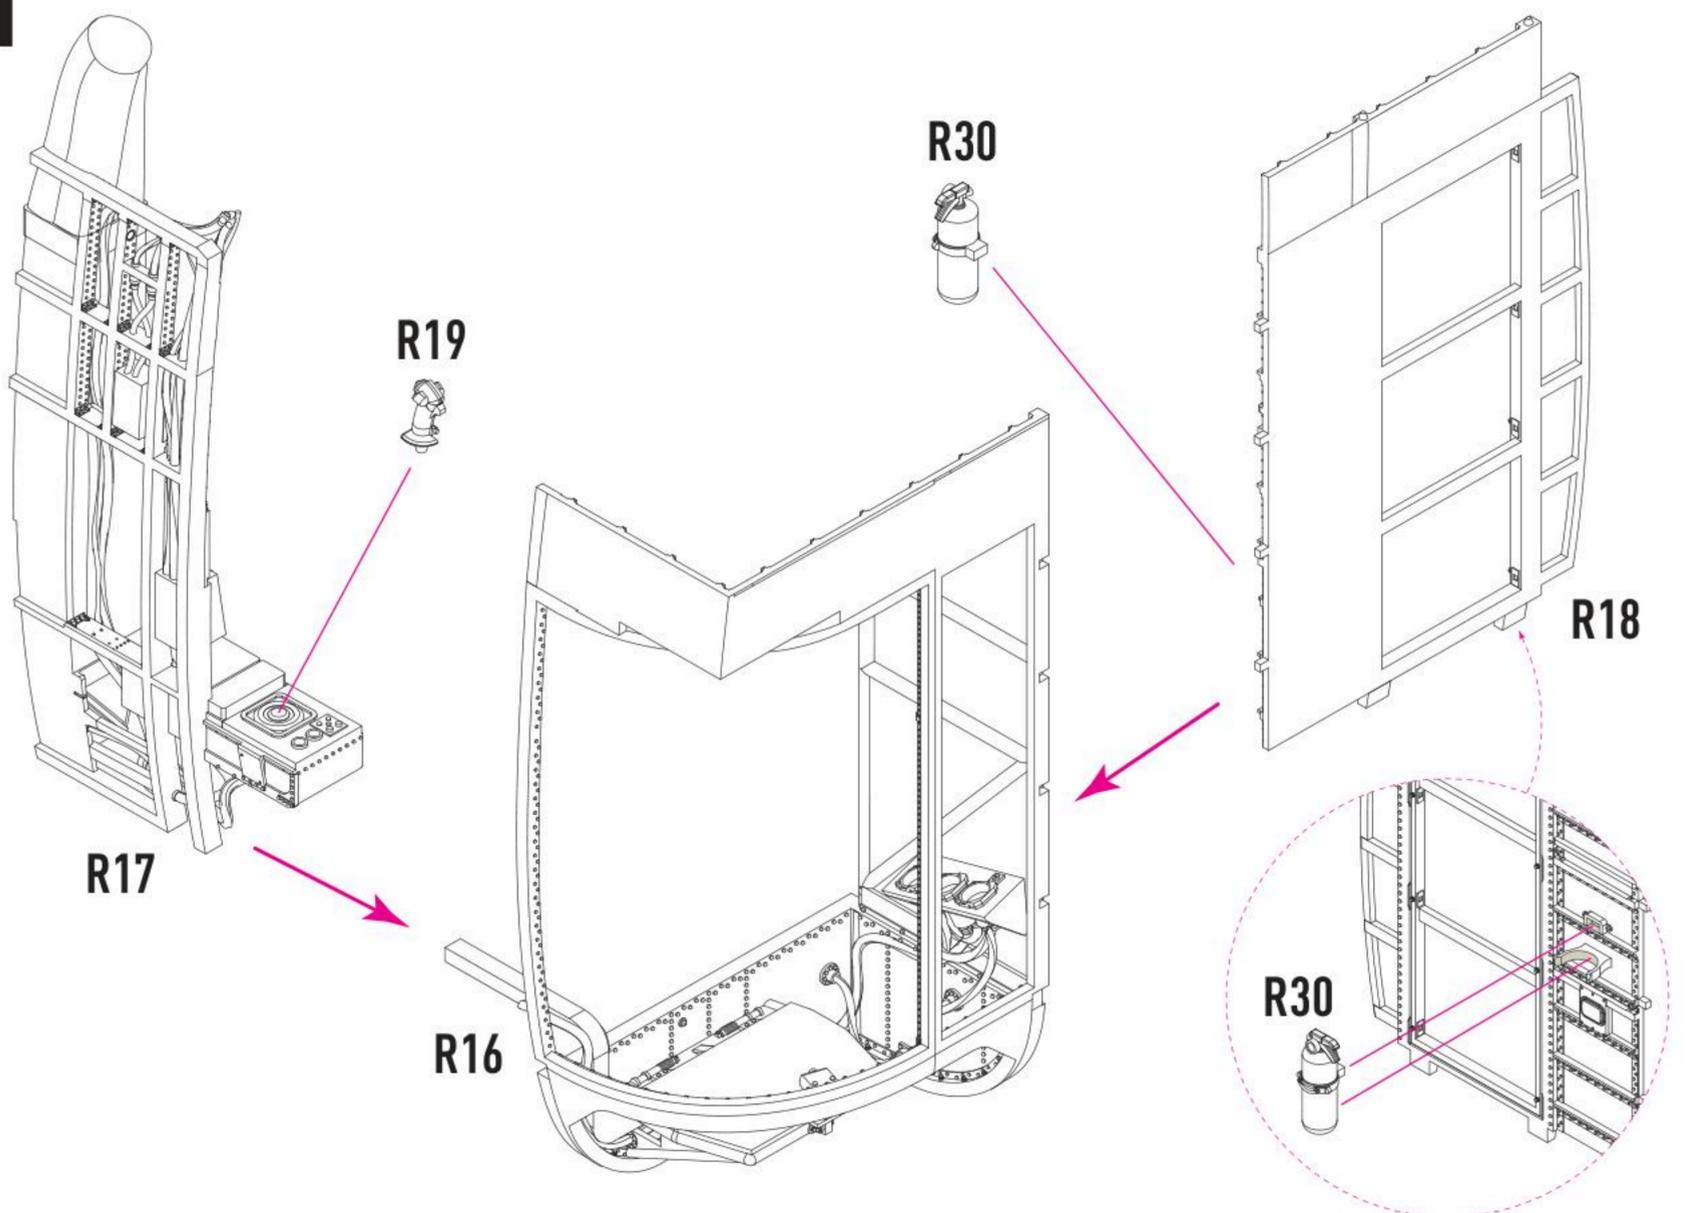

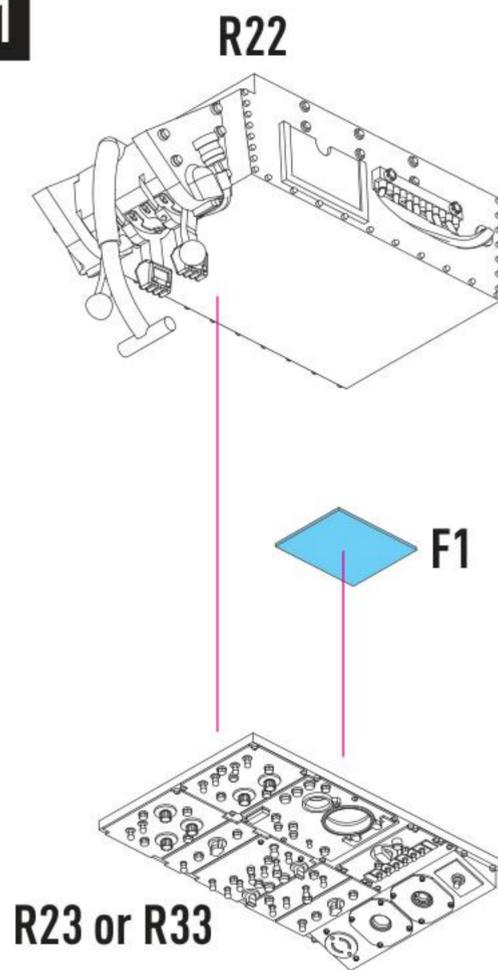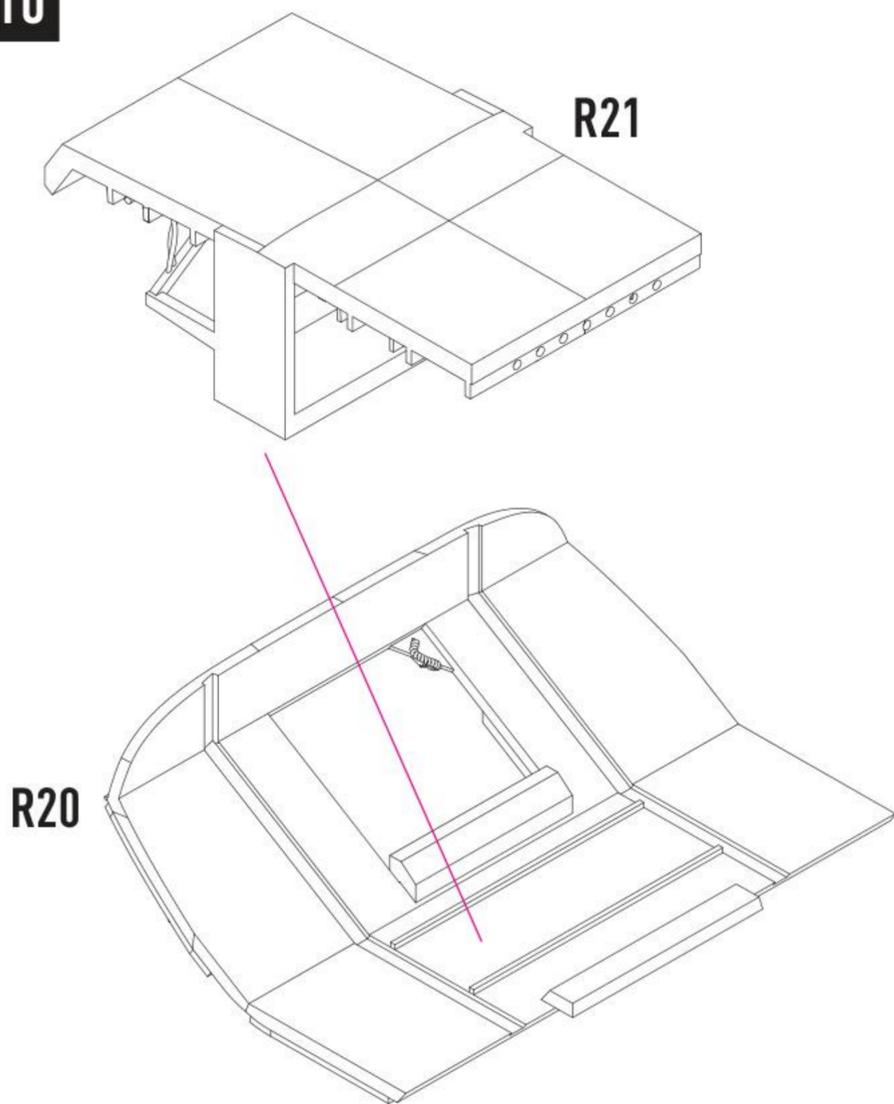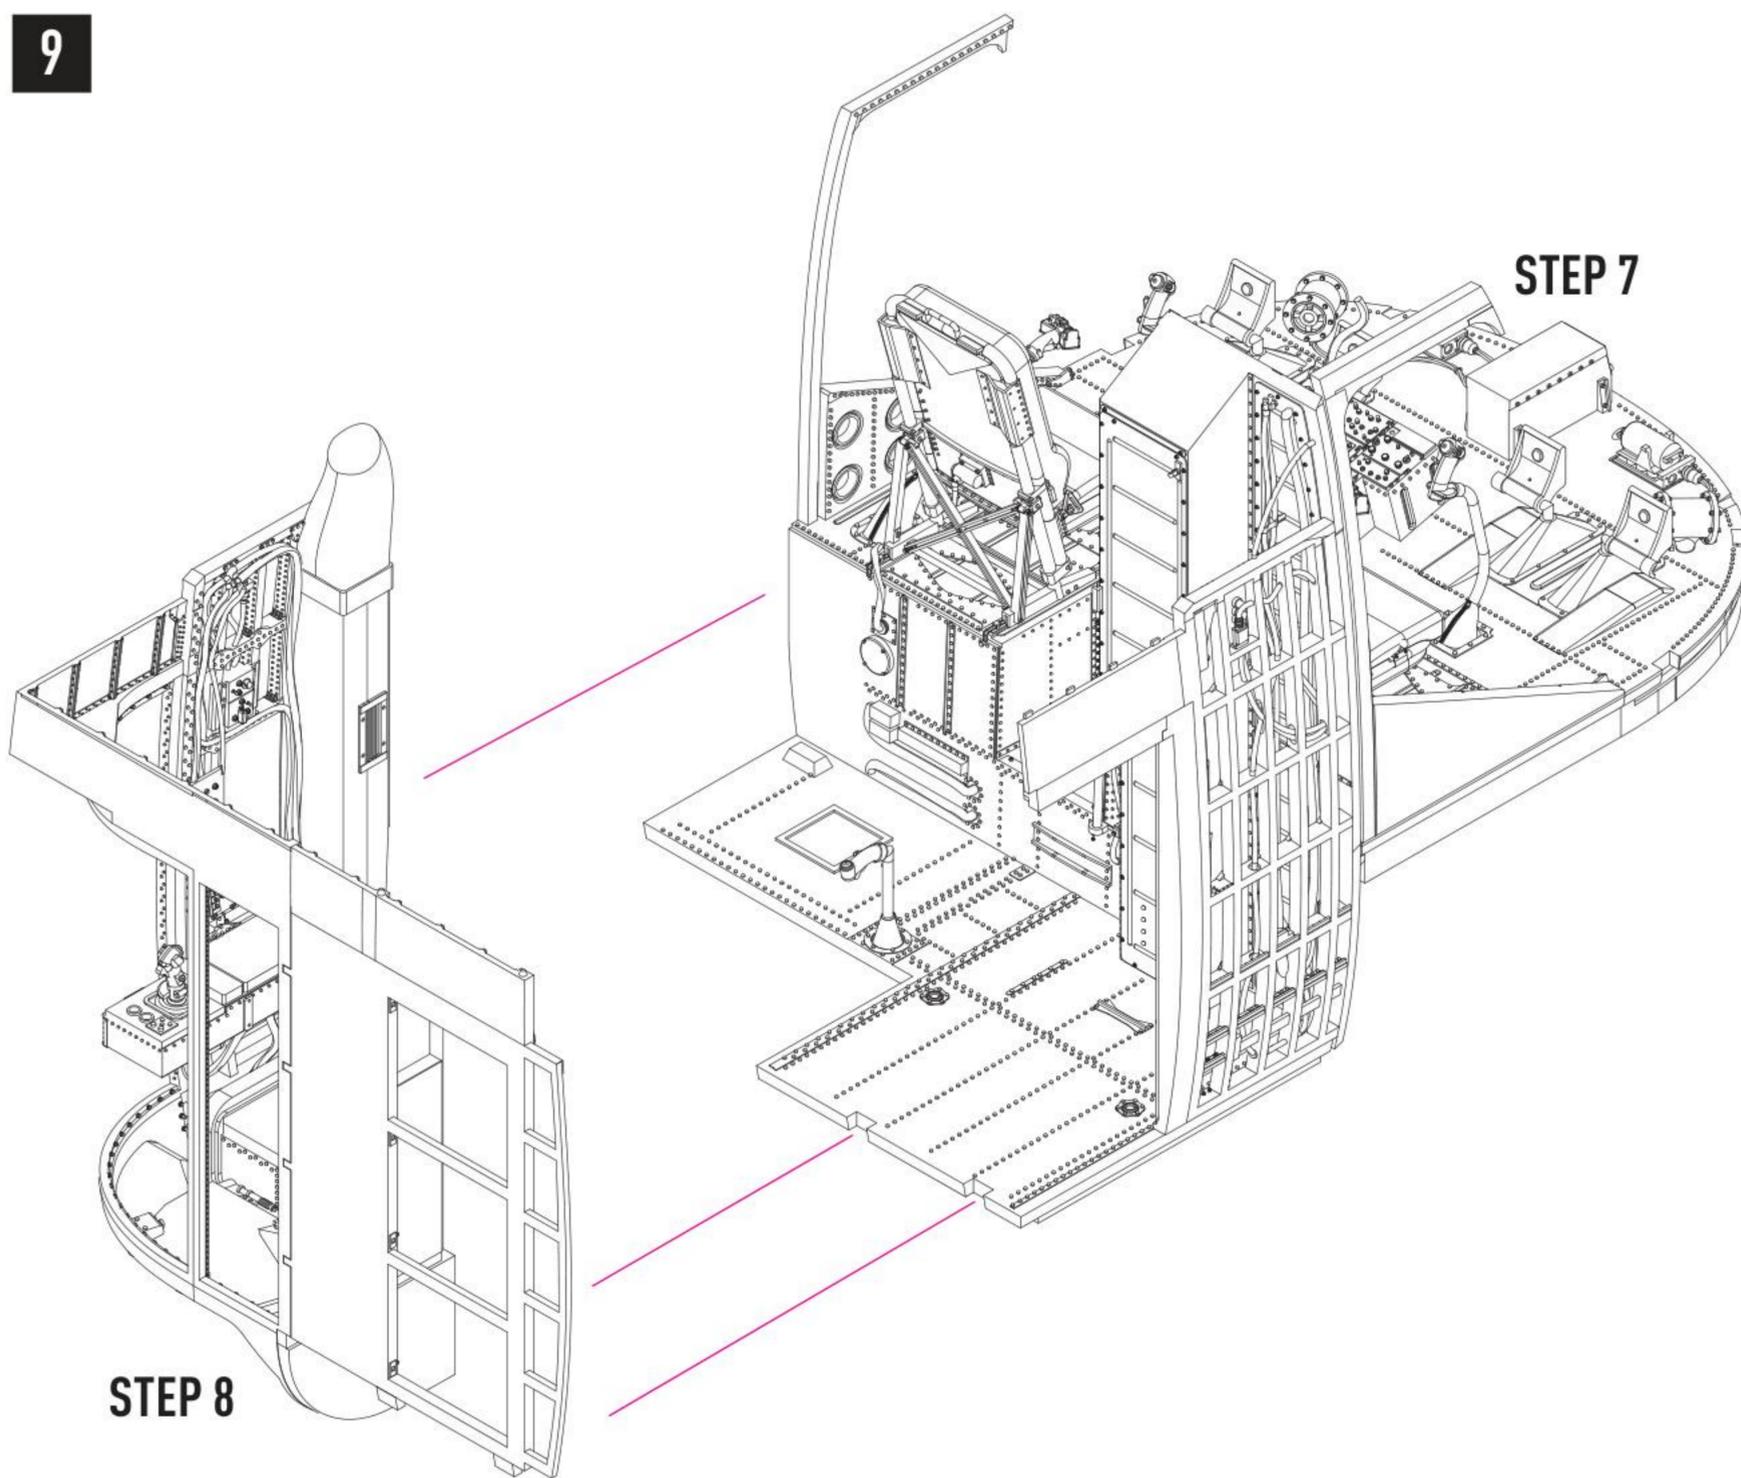


USE PART R33 FOR S-64E MODIFICATION


12

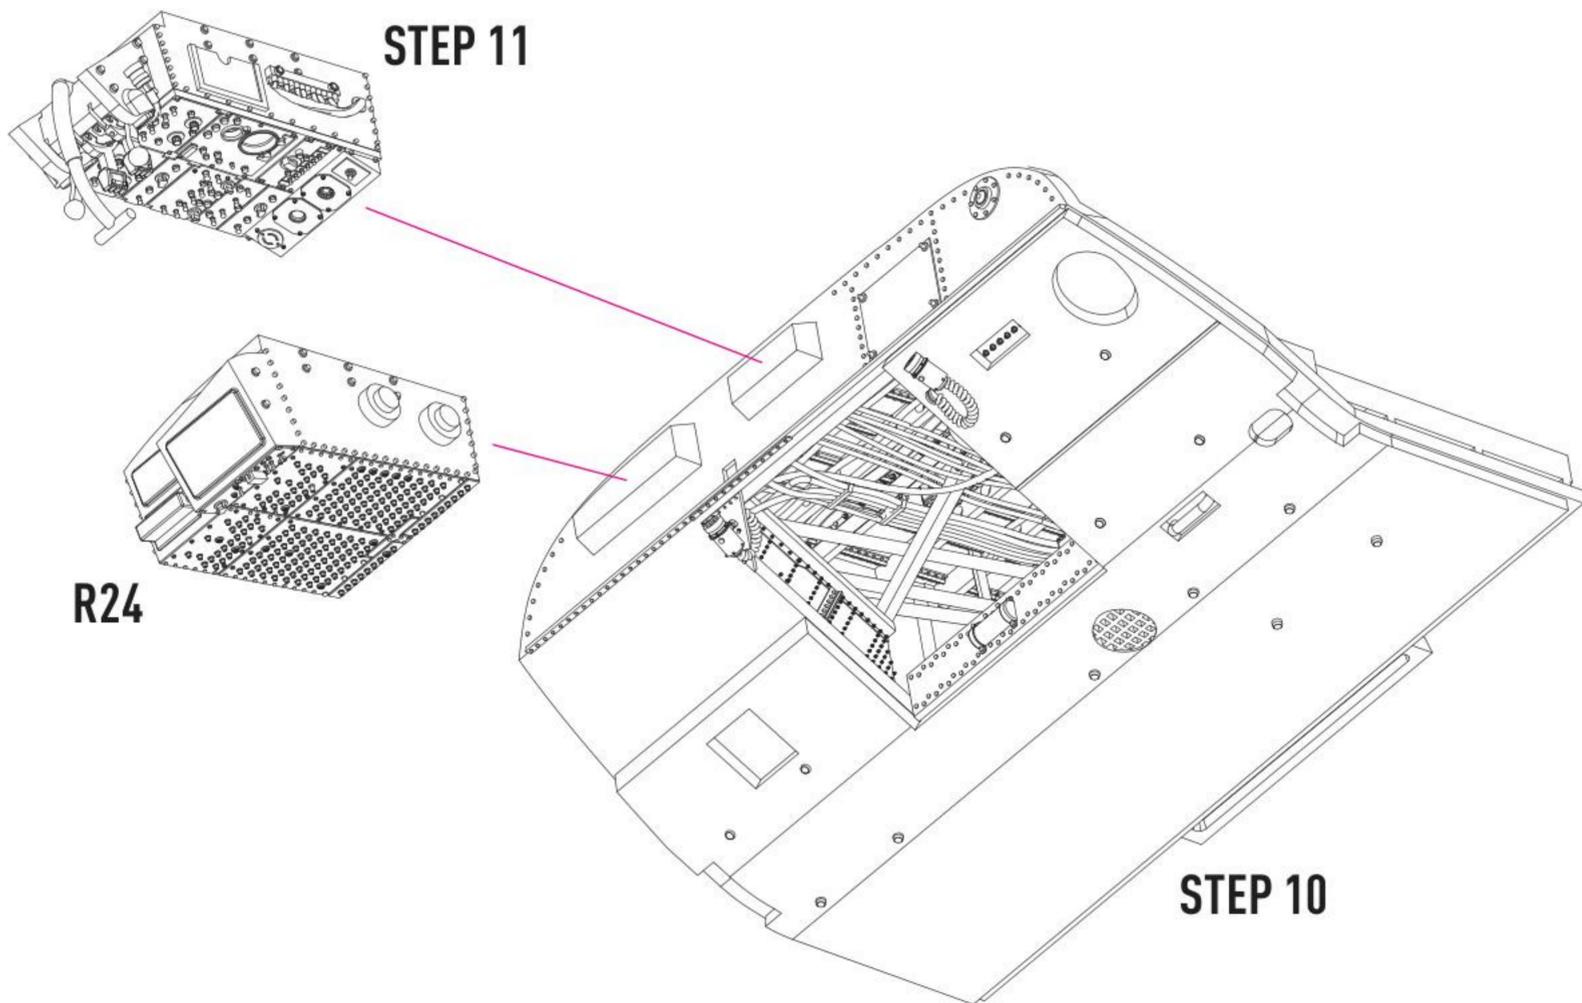


13

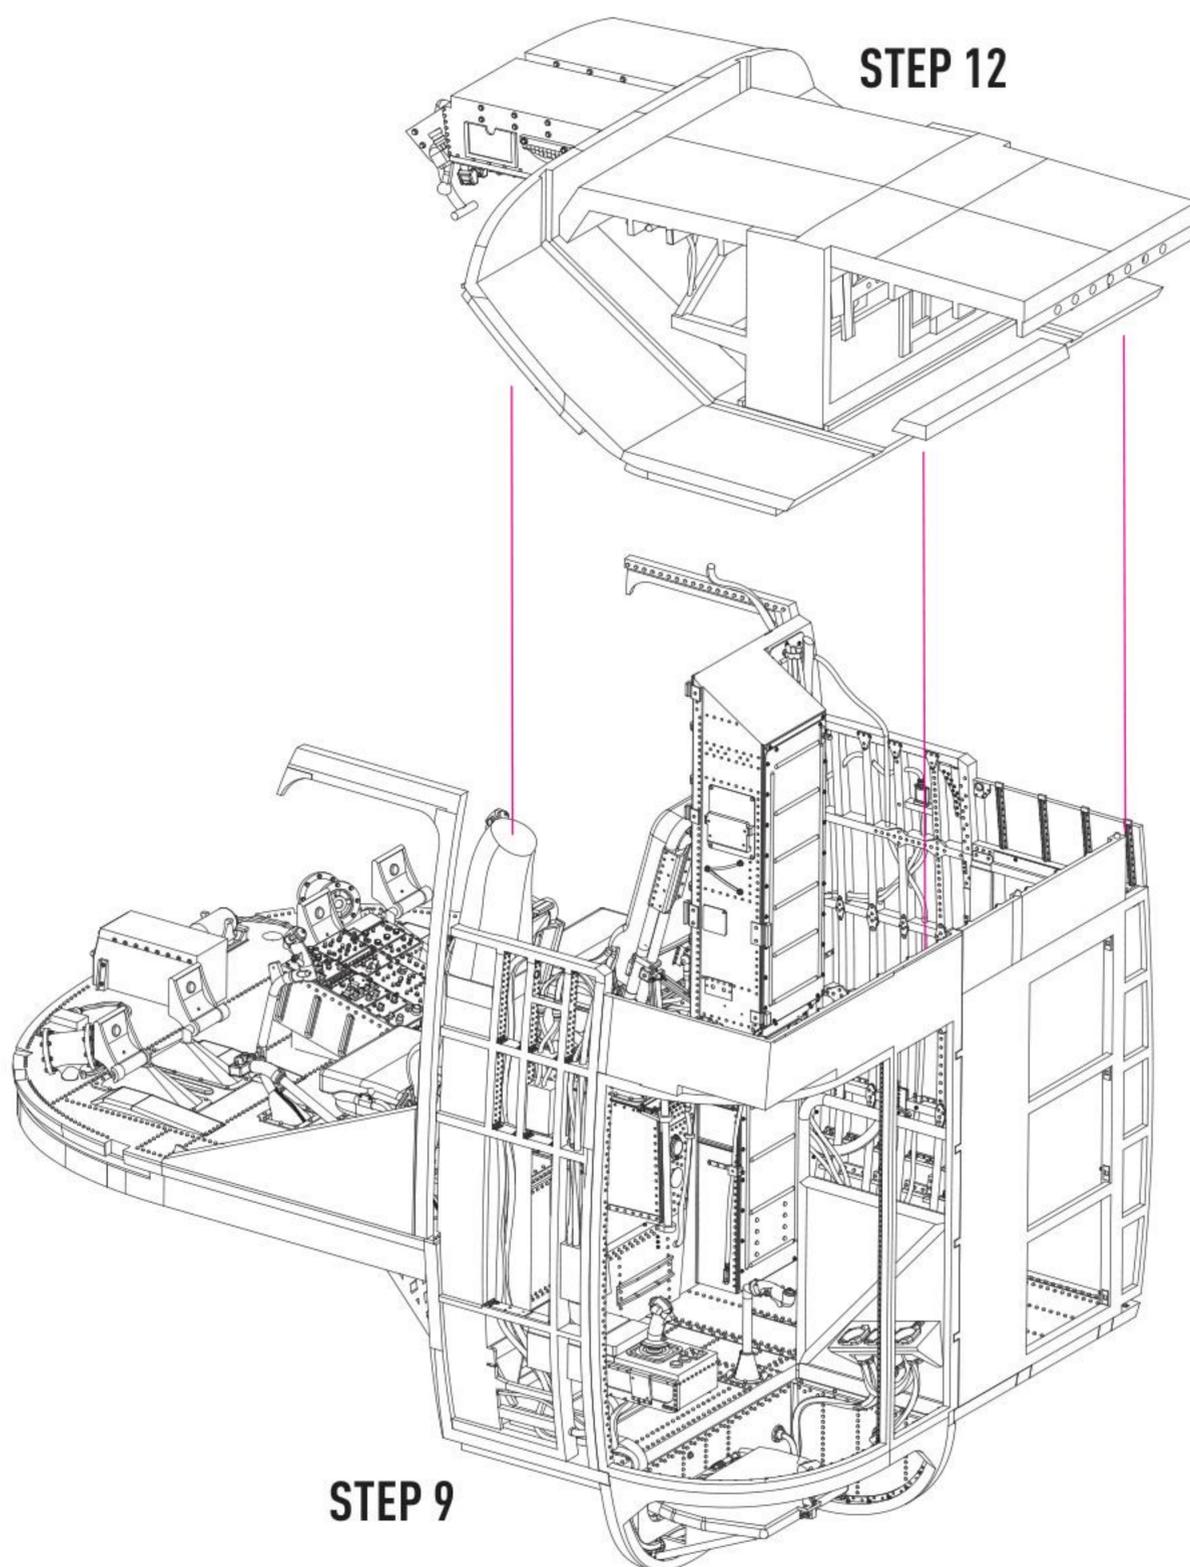


14

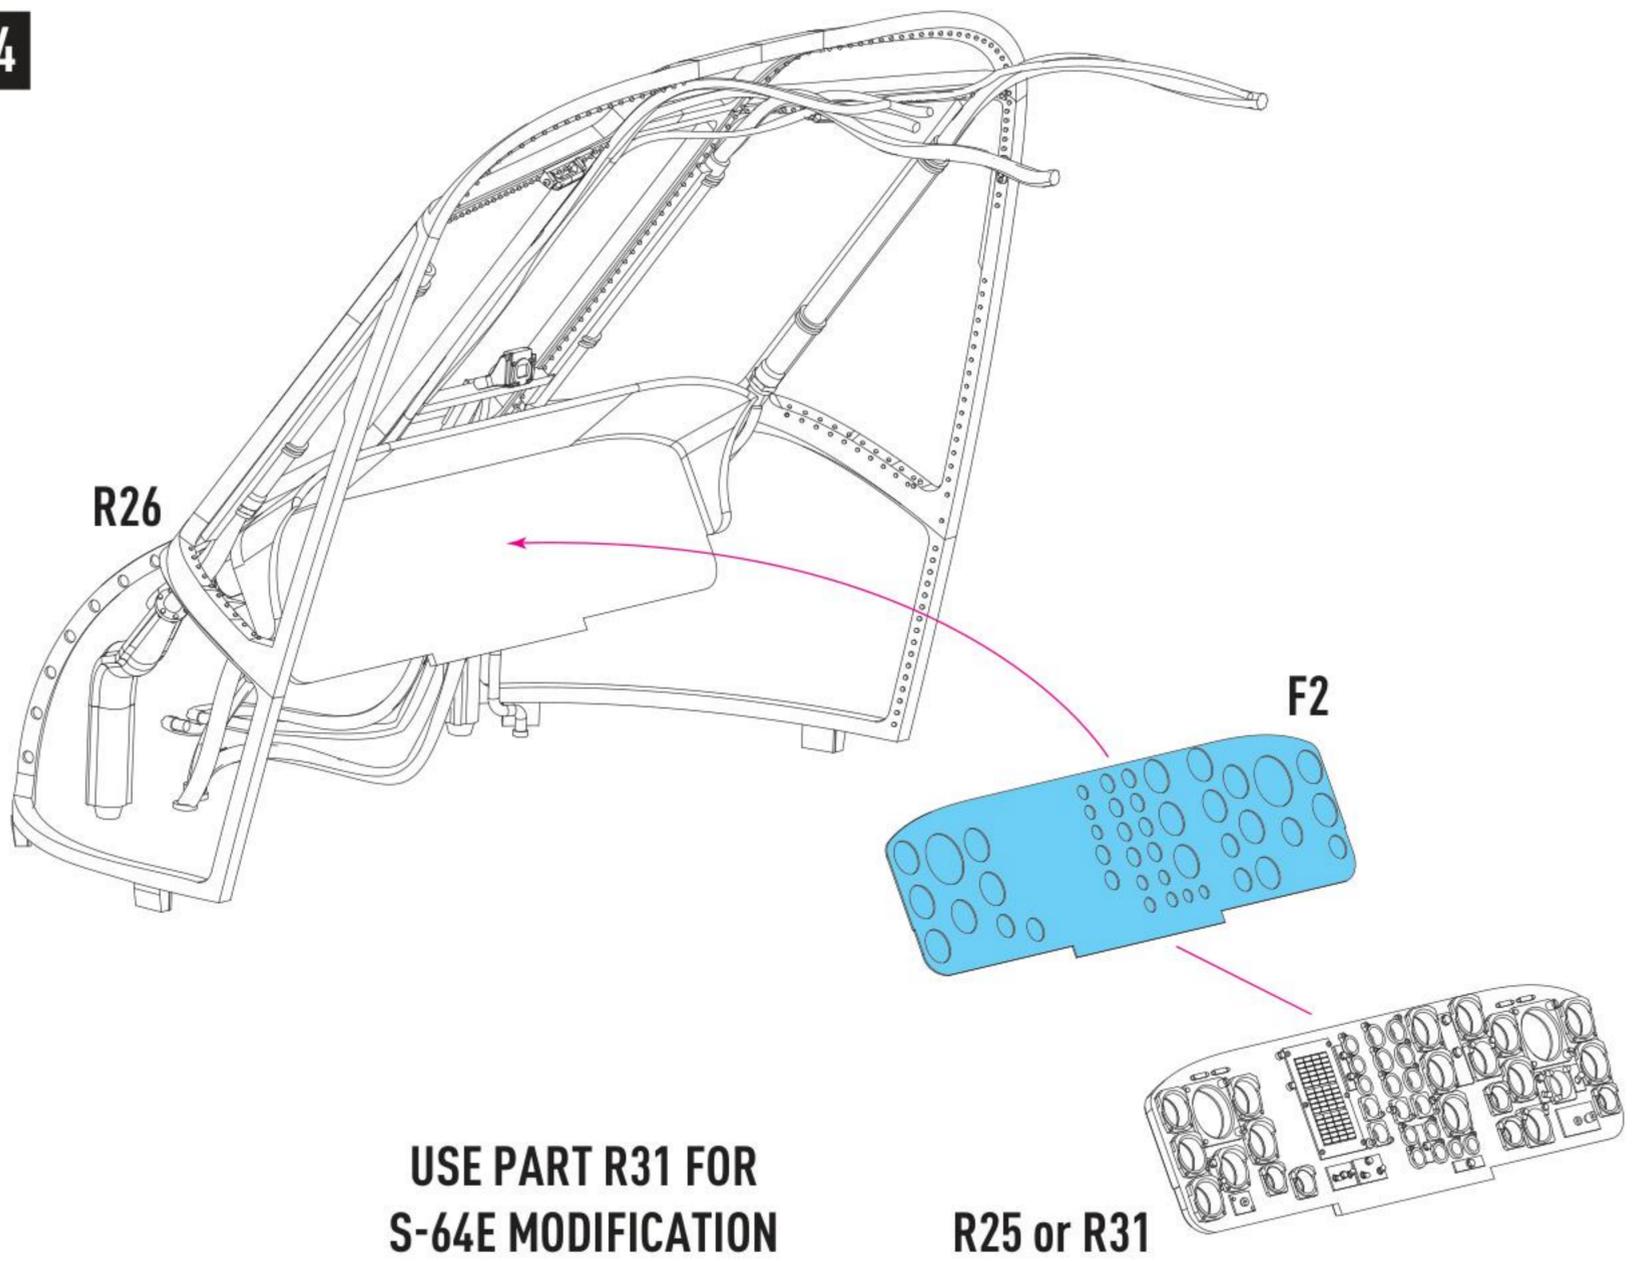


15

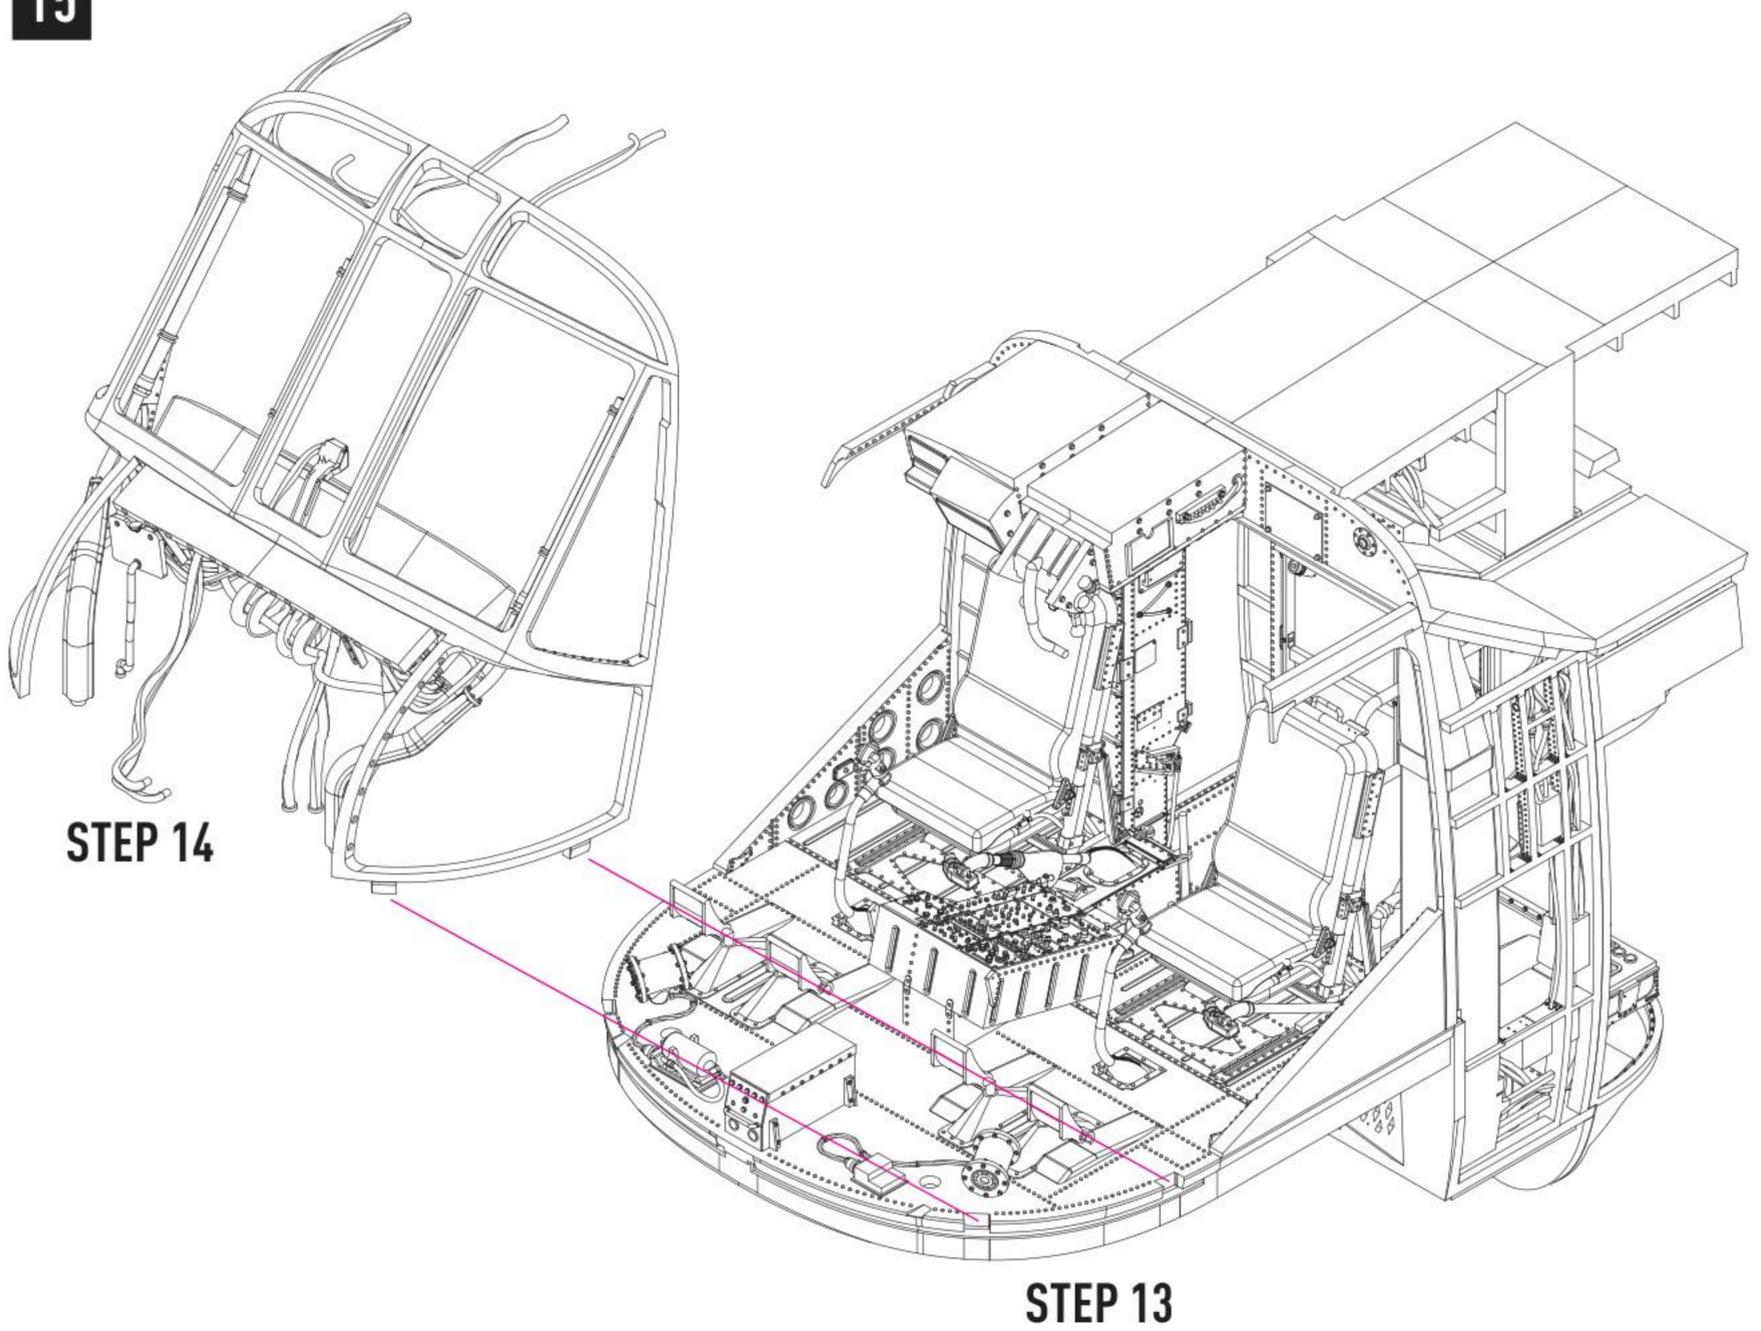


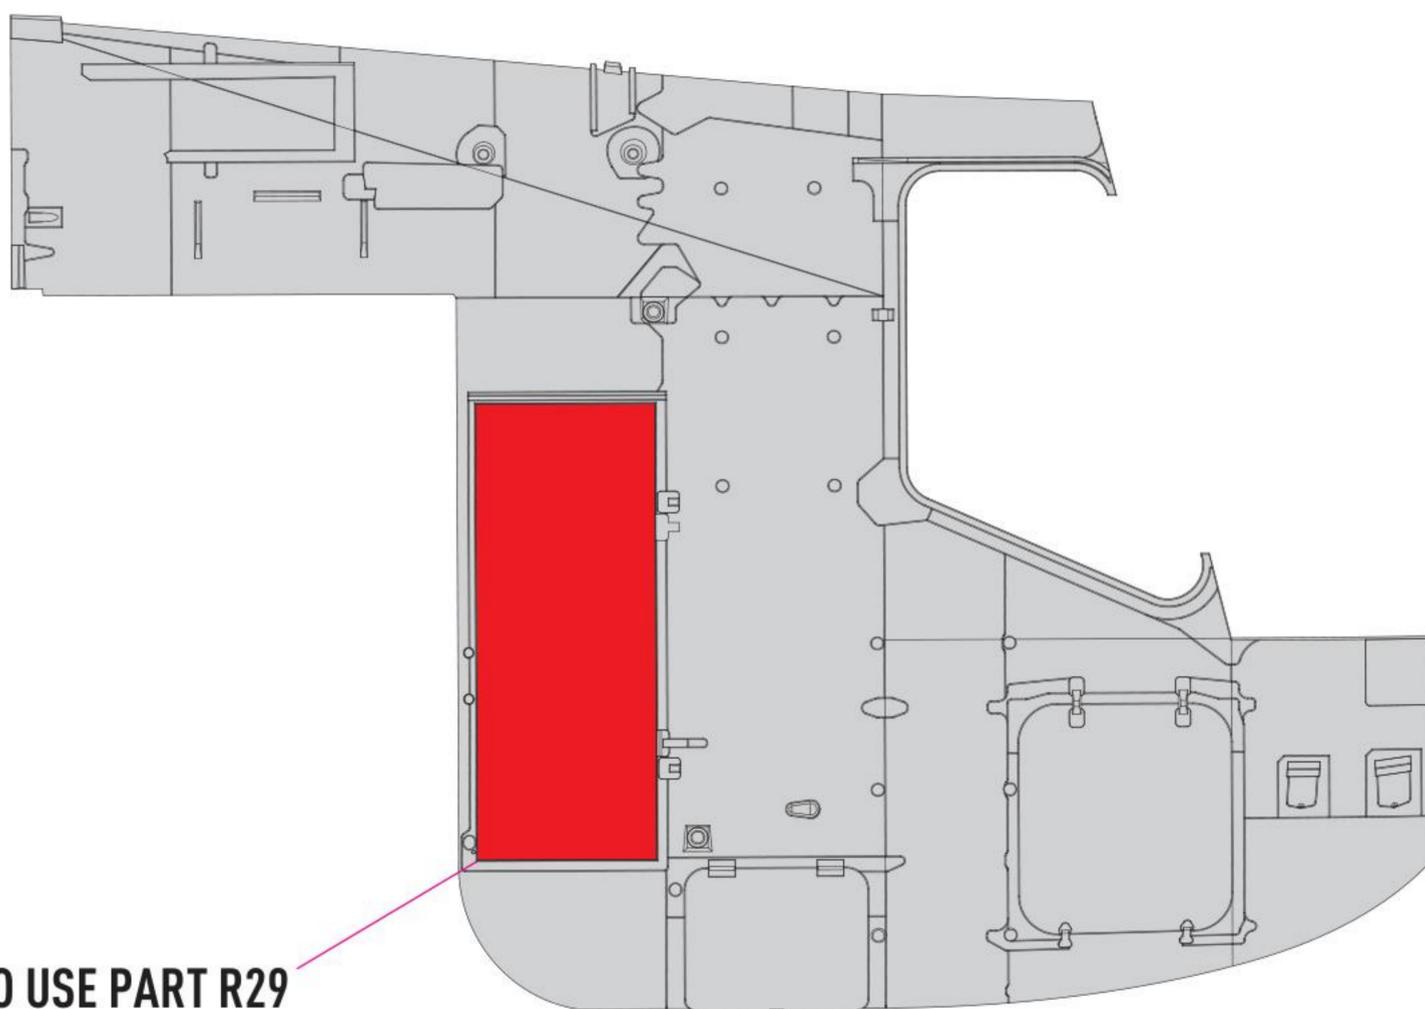


**TO USE PART R29
(OPENED CABIN DOOR)
CUT OFF MARKED AREA FROM
ICM PLASTIC PART E4**

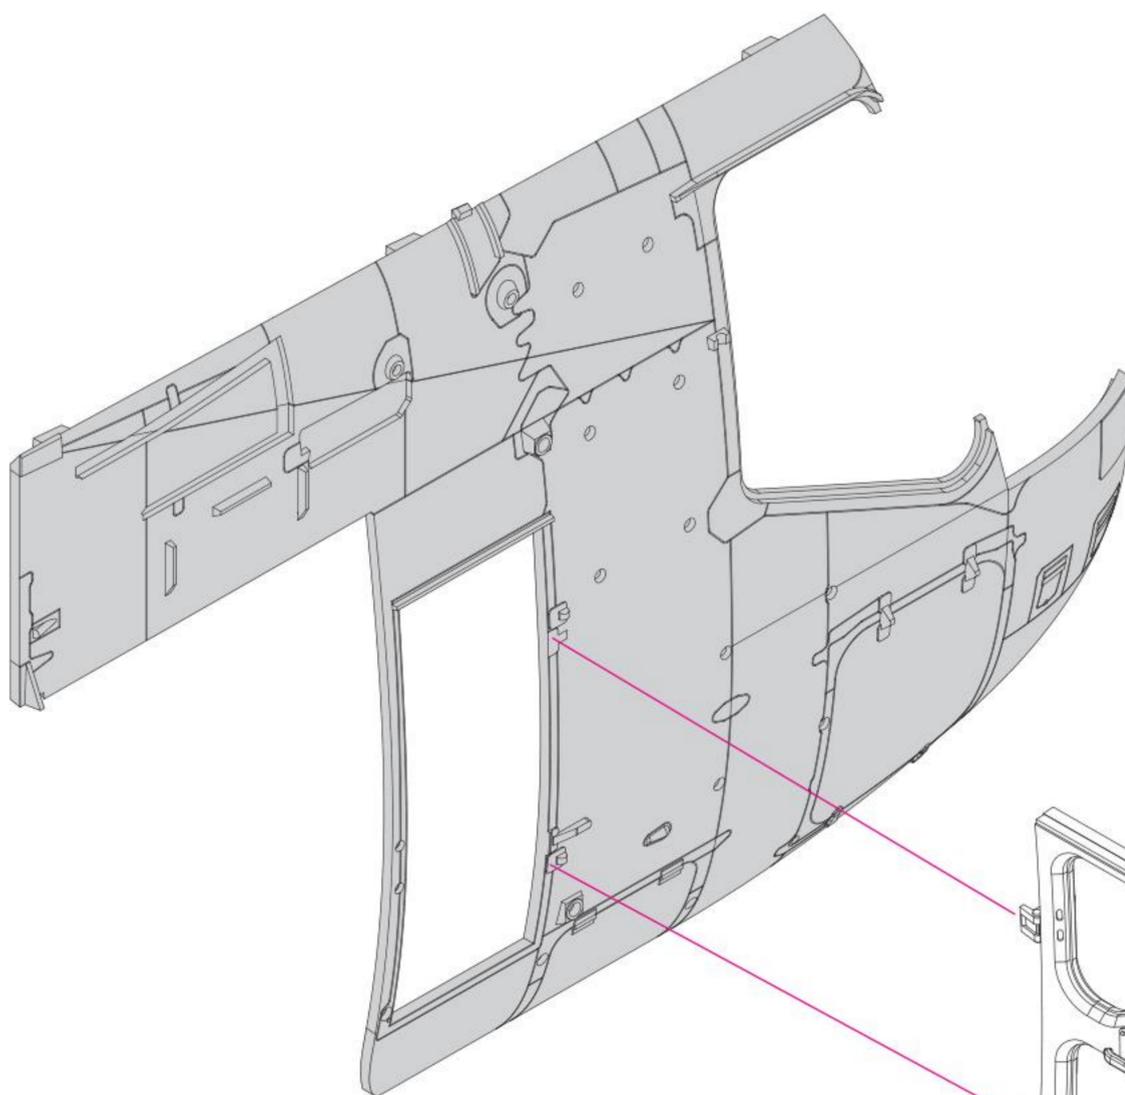


**PART K6
FROM ICM KIT**

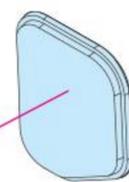

**PART K7
FROM ICM KIT**

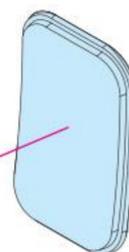

R29

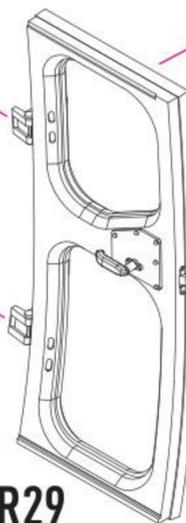

17


PART E4
FROM ICM KIT
OR STEP 15

PART E23
FROM ICM KIT

PART E1
FROM ICM KIT

PART E5
FROM ICM KIT


PART E2
FROM ICM KIT

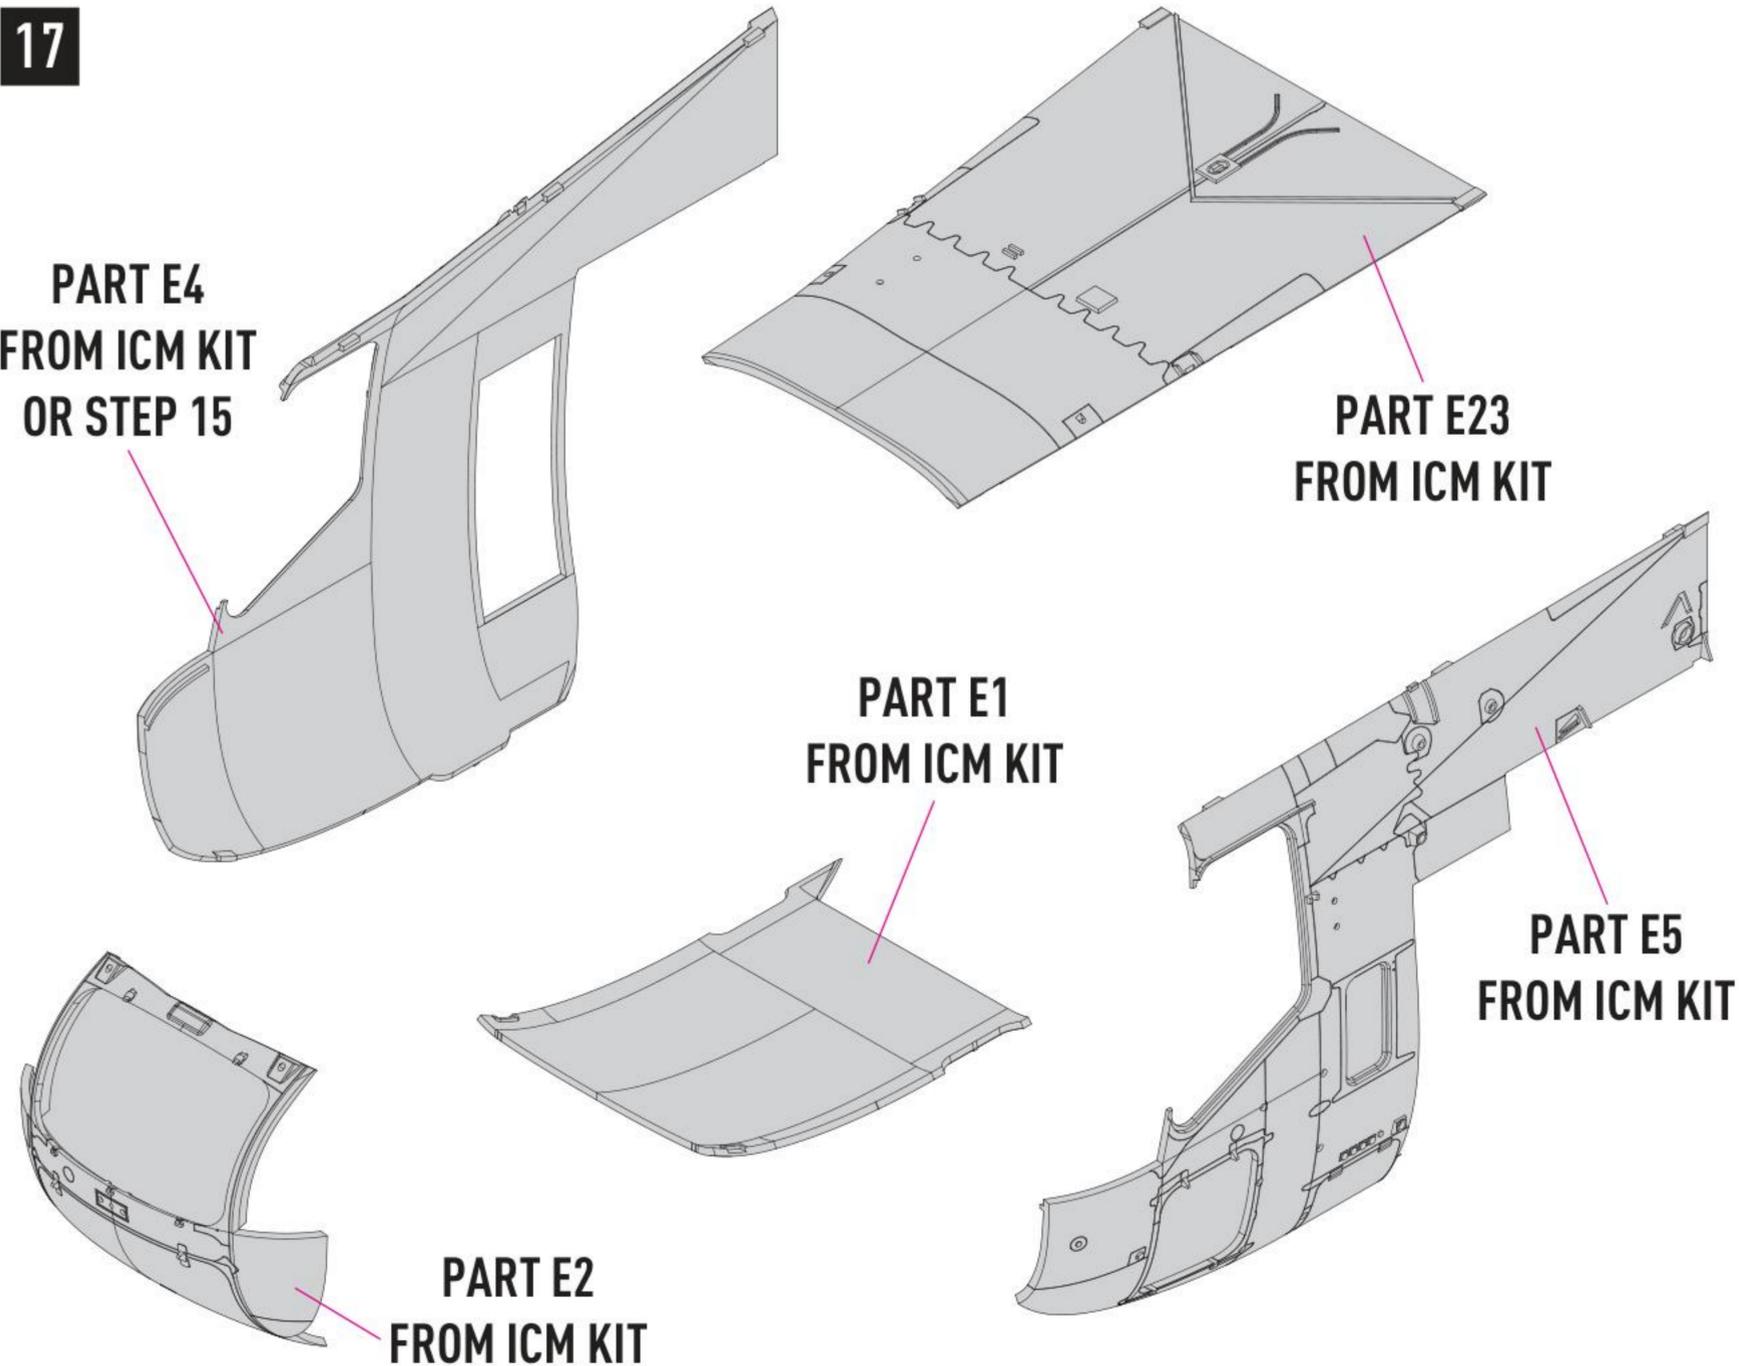

18


STEP 15

STEP 17


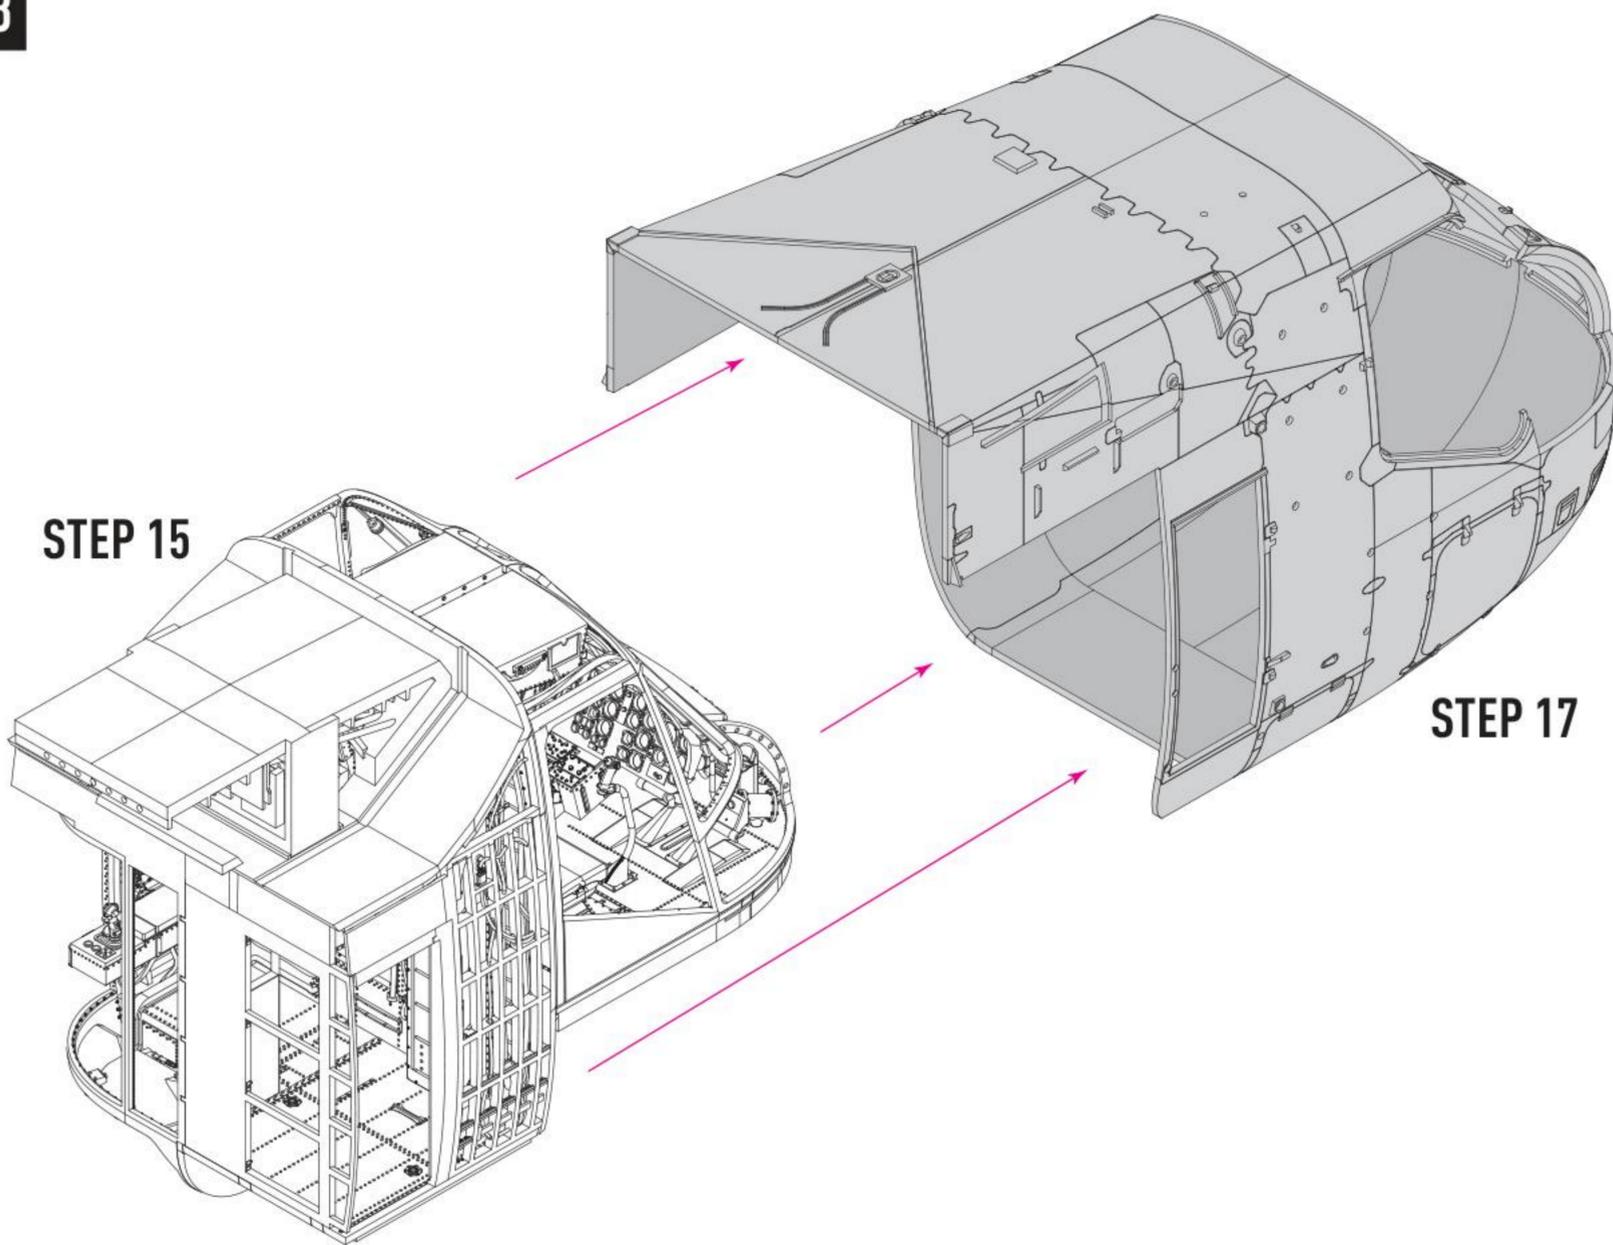


PART K3
FROM ICM KIT


PART A1
FROM ICM KIT

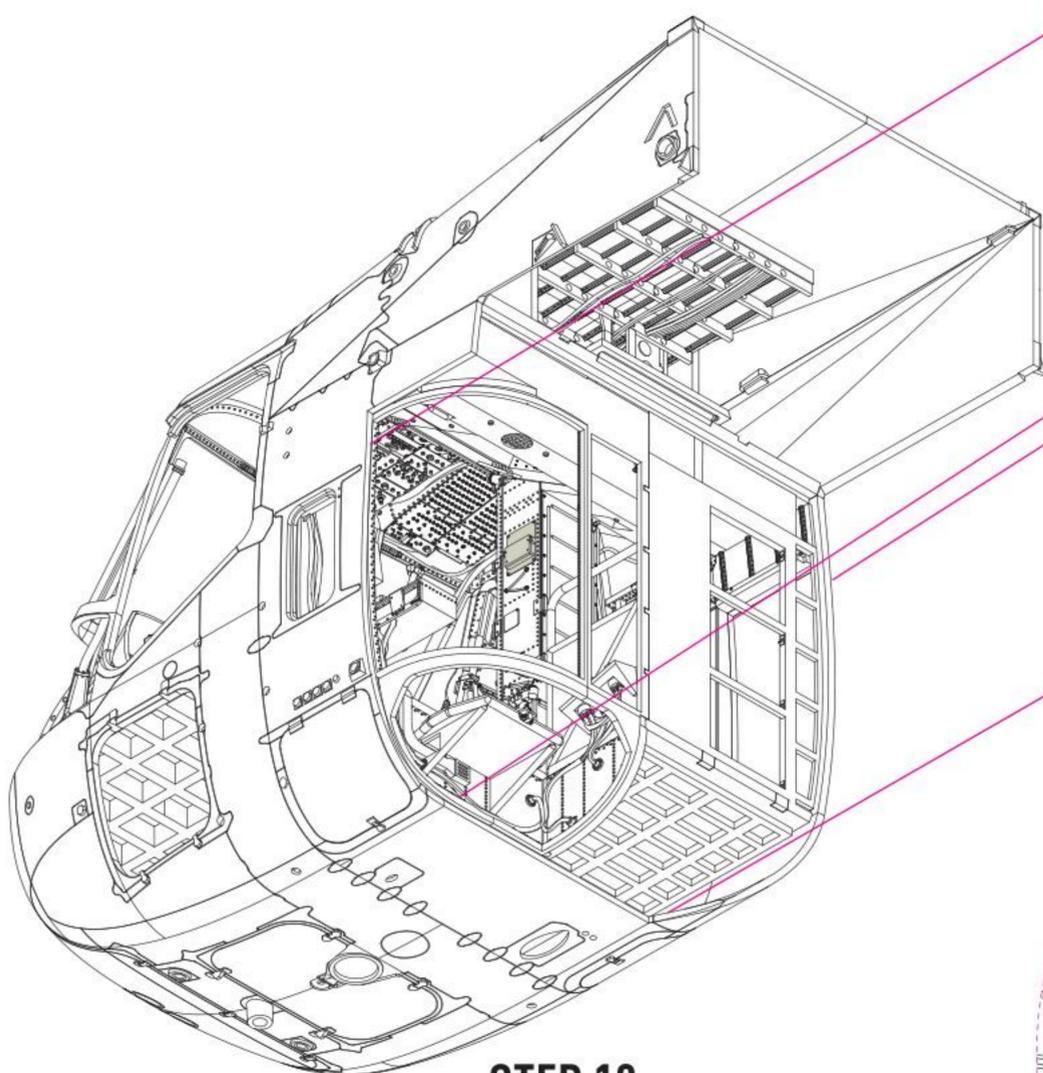


STEP 18

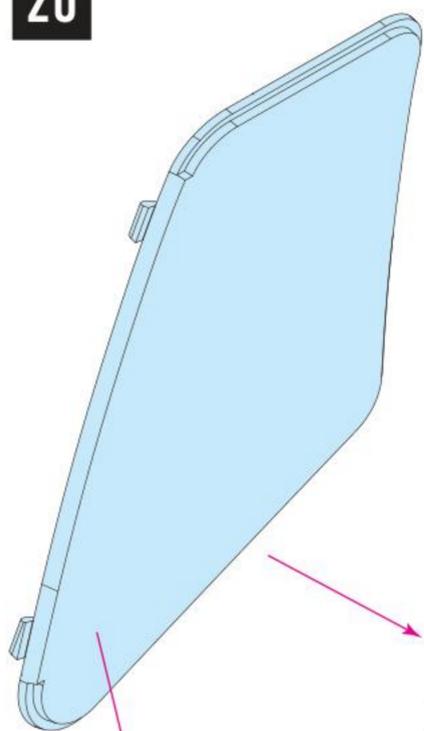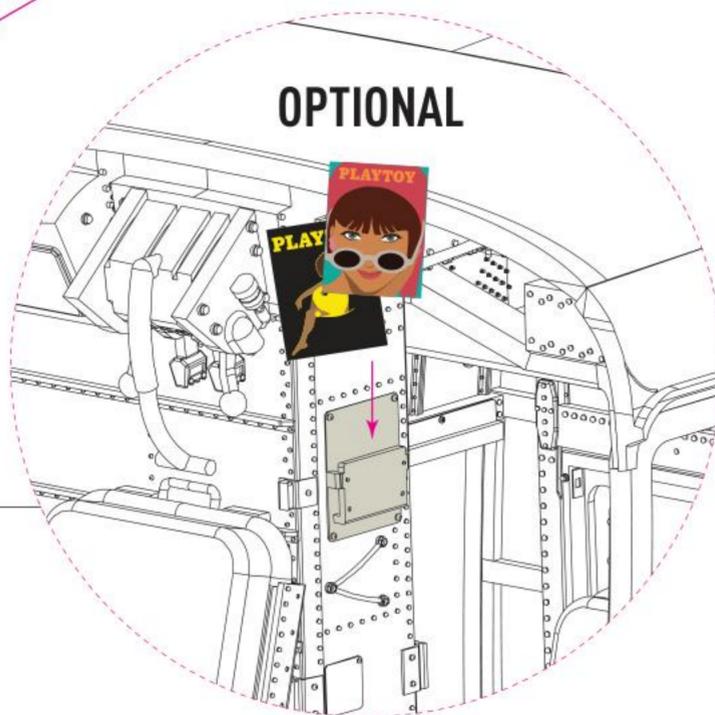

PART K10
FROM ICM KIT

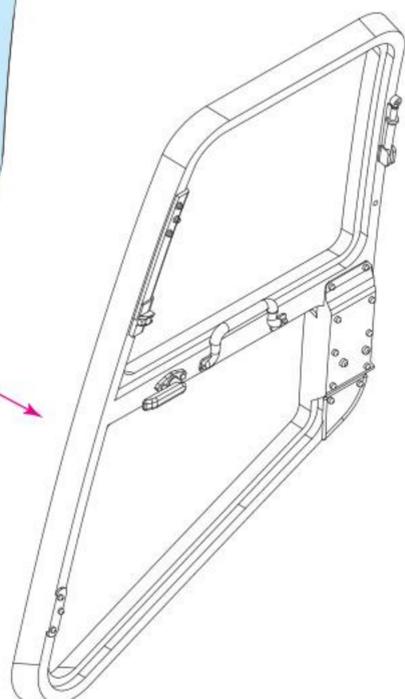



R28

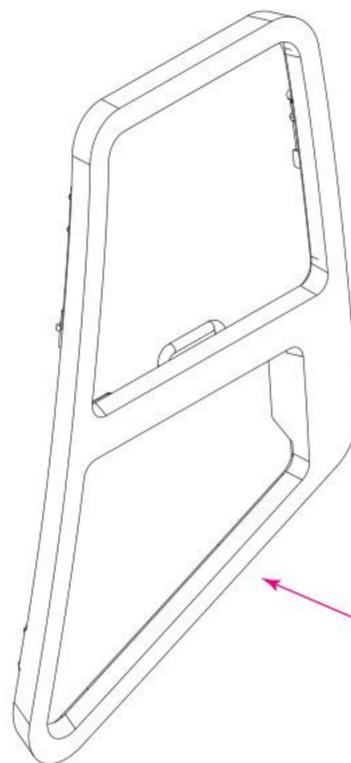

R27


PART K11
FROM ICM KIT

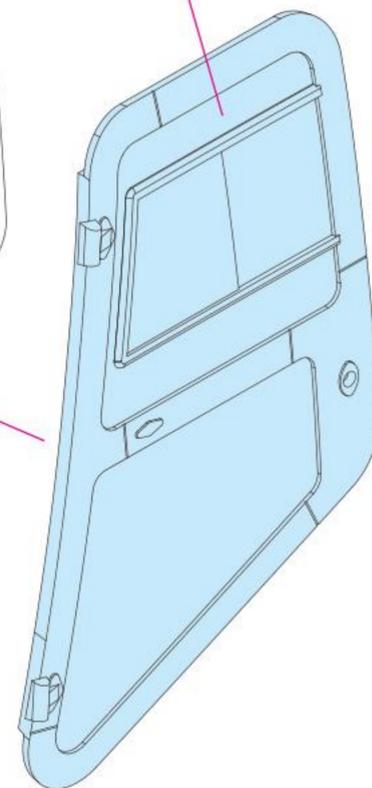

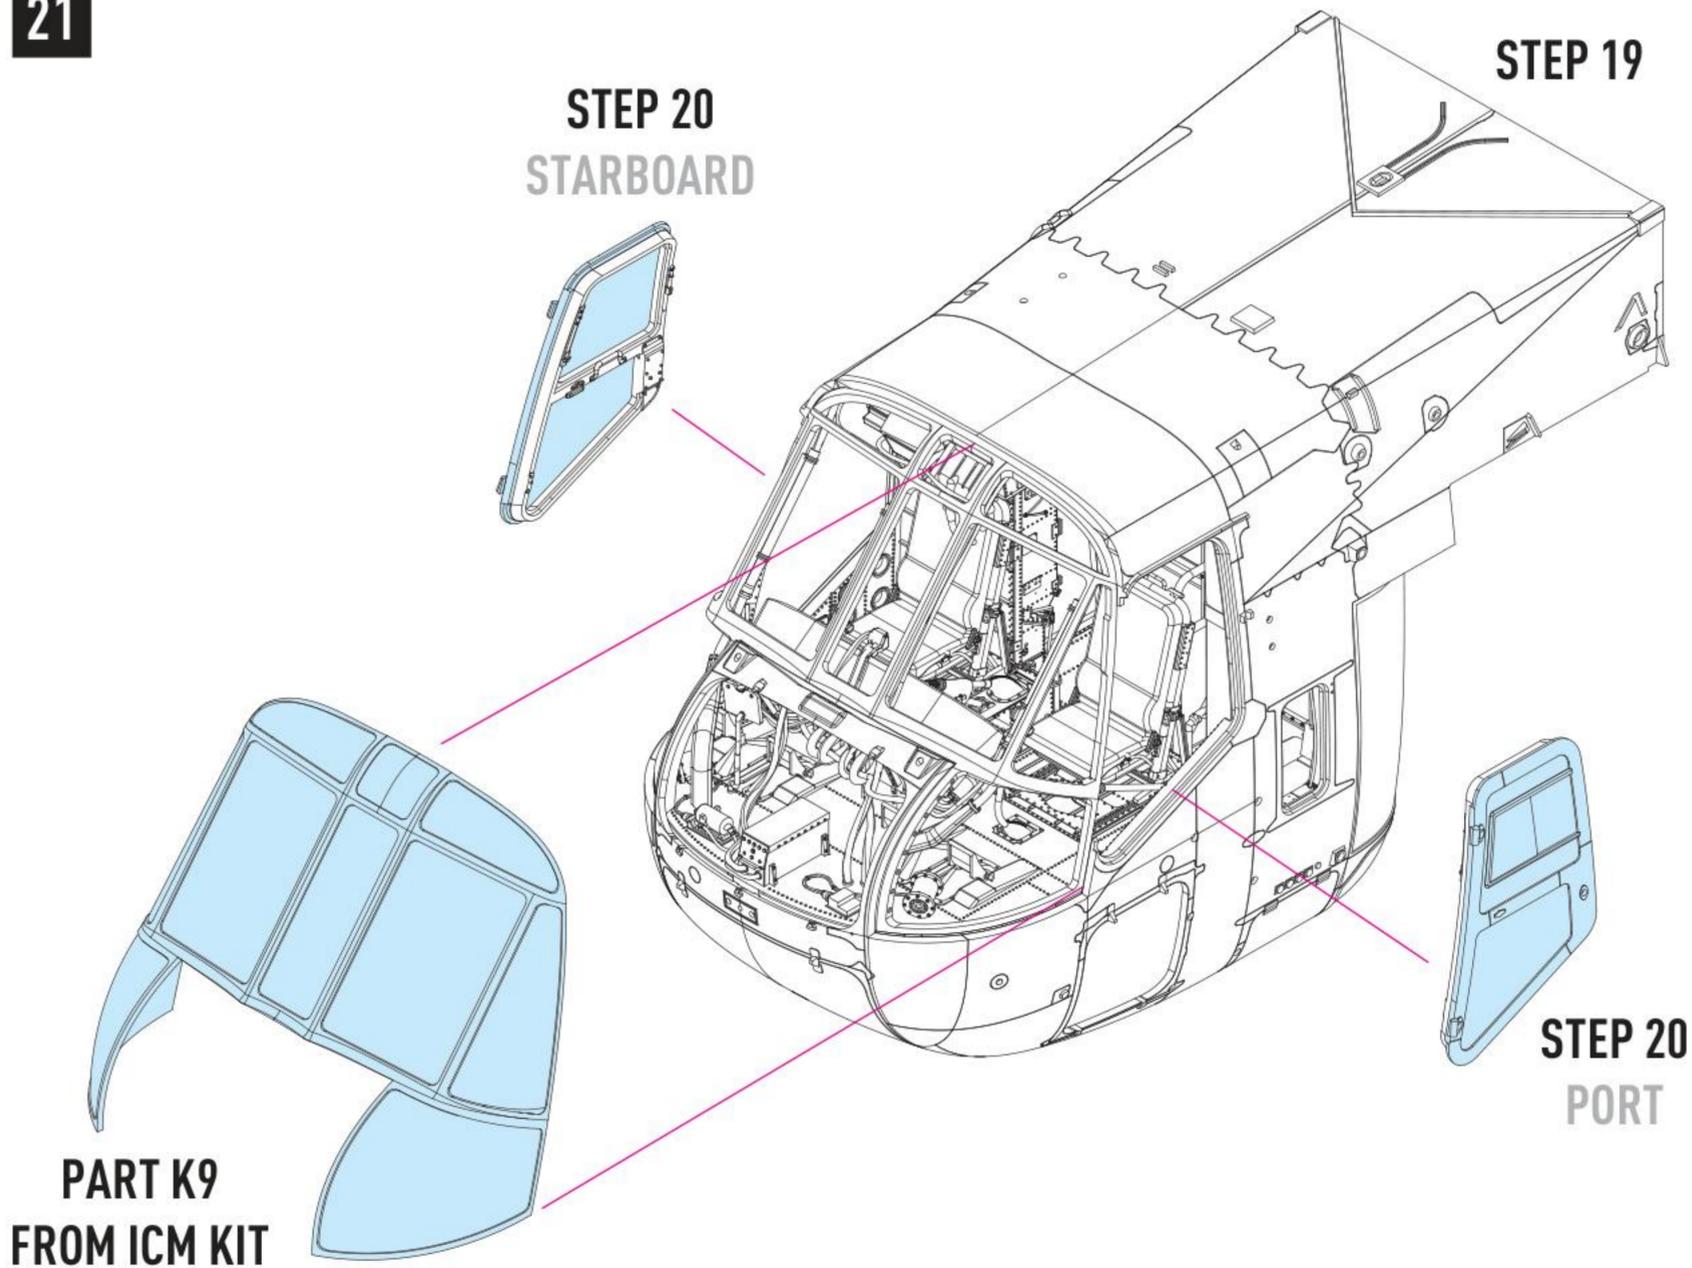


DECALS INSTRUCTION


RIGHT DOOR
INSIDE

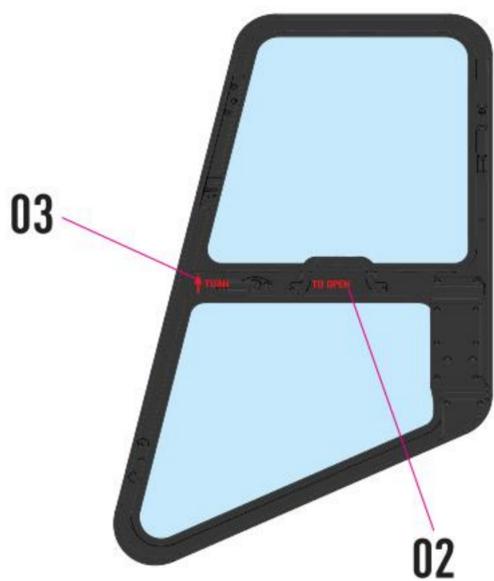

REAR OPEN
DOOR INSIDE

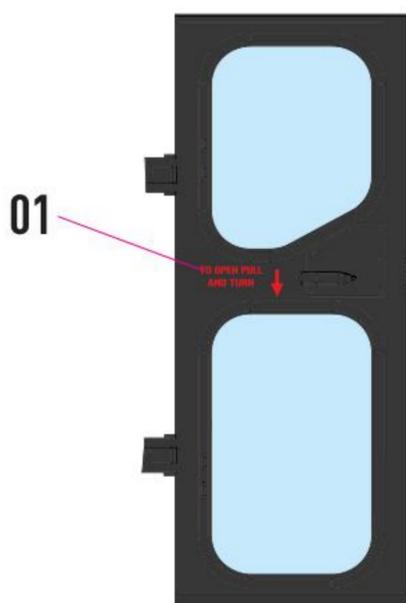

LEFT DOOR
INSIDE

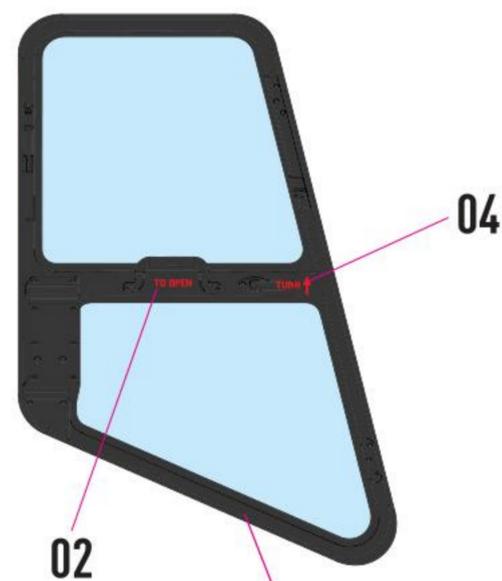

SEMI GLOSS BLACK [C92]

