


**DETAIL AFTER REMOVAL FROM SPRUES**

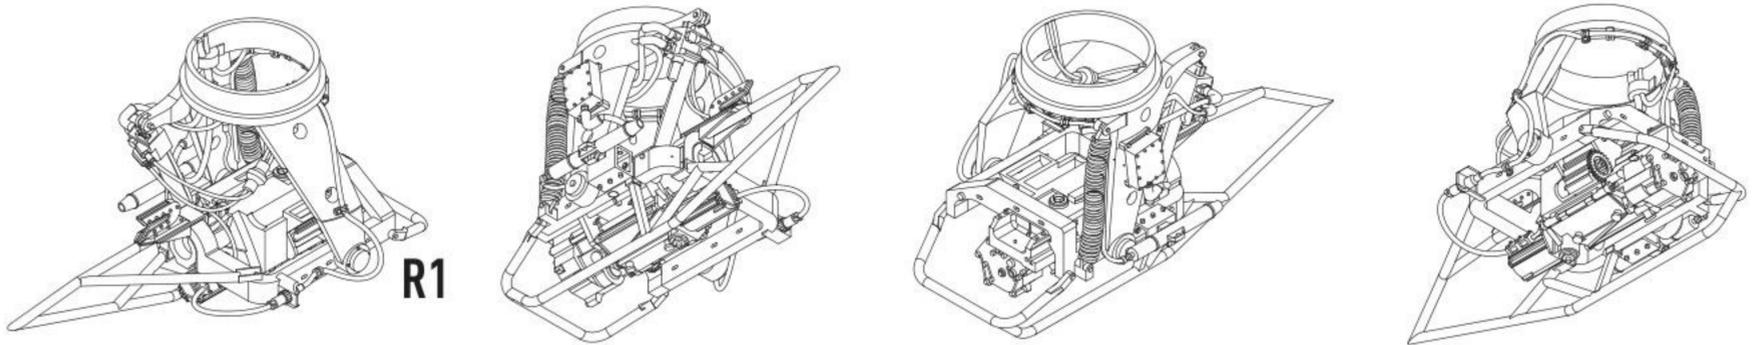

**USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS**

