




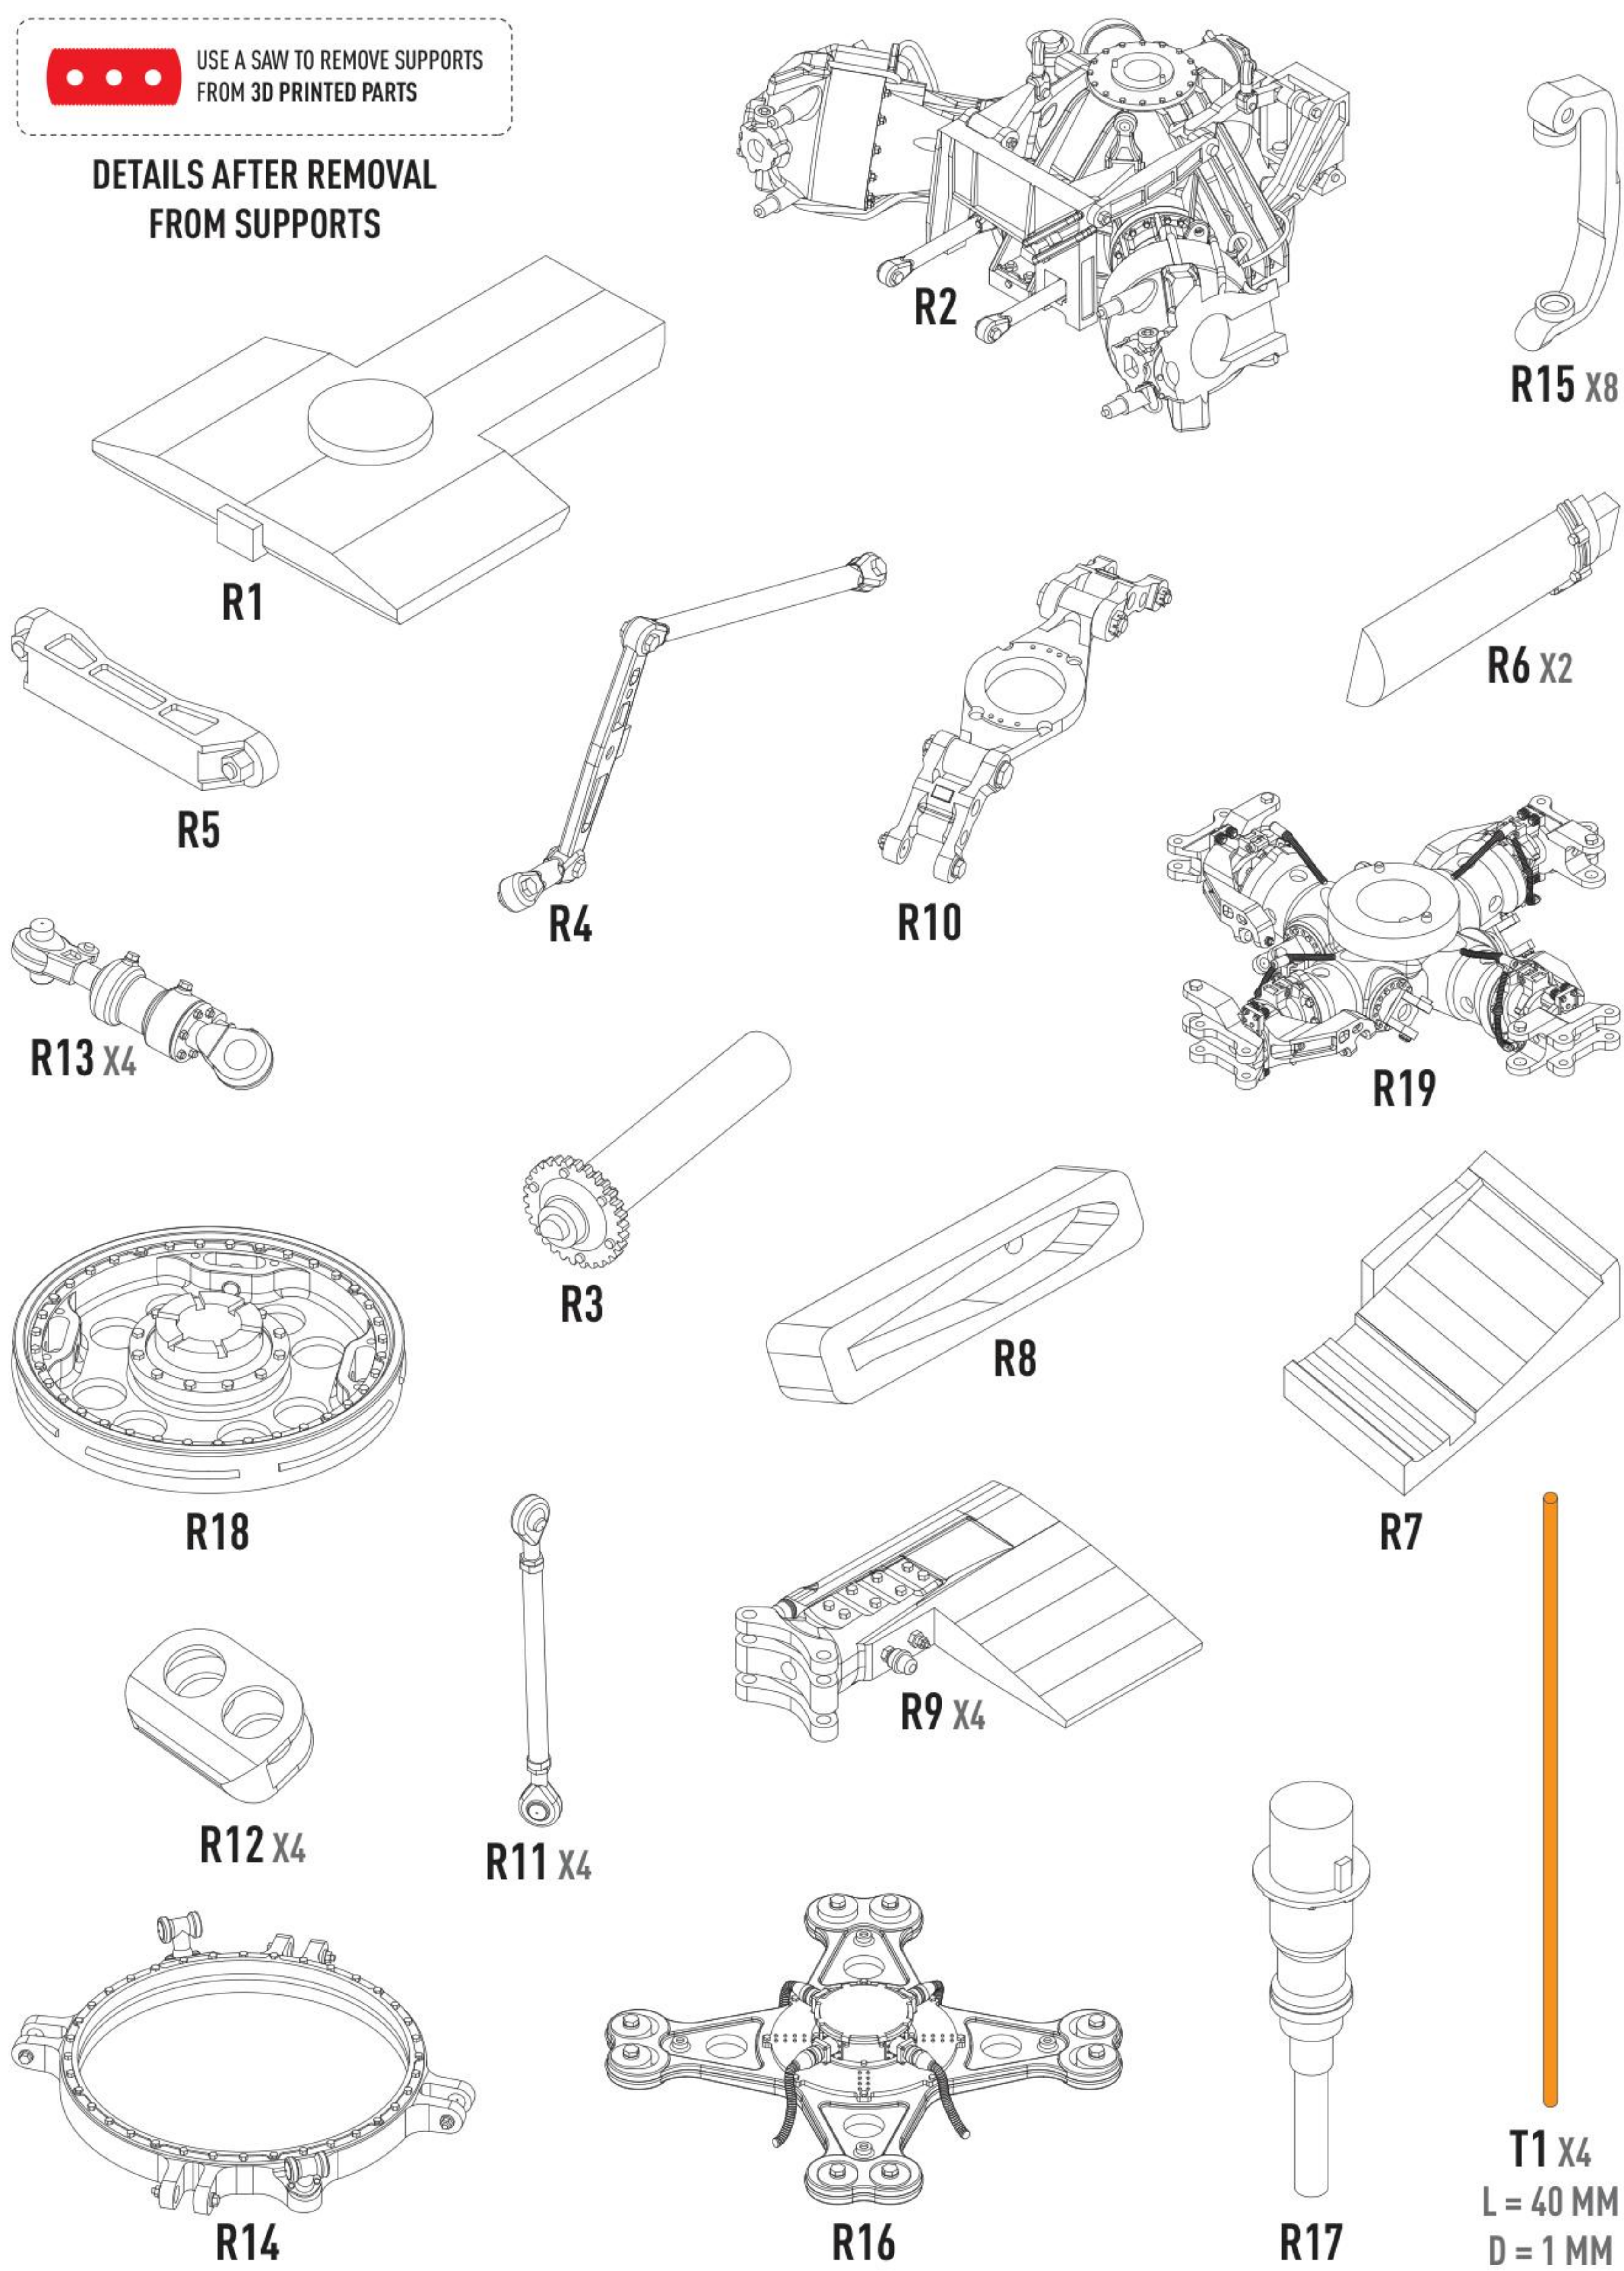


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL
FROM SUPPORTS

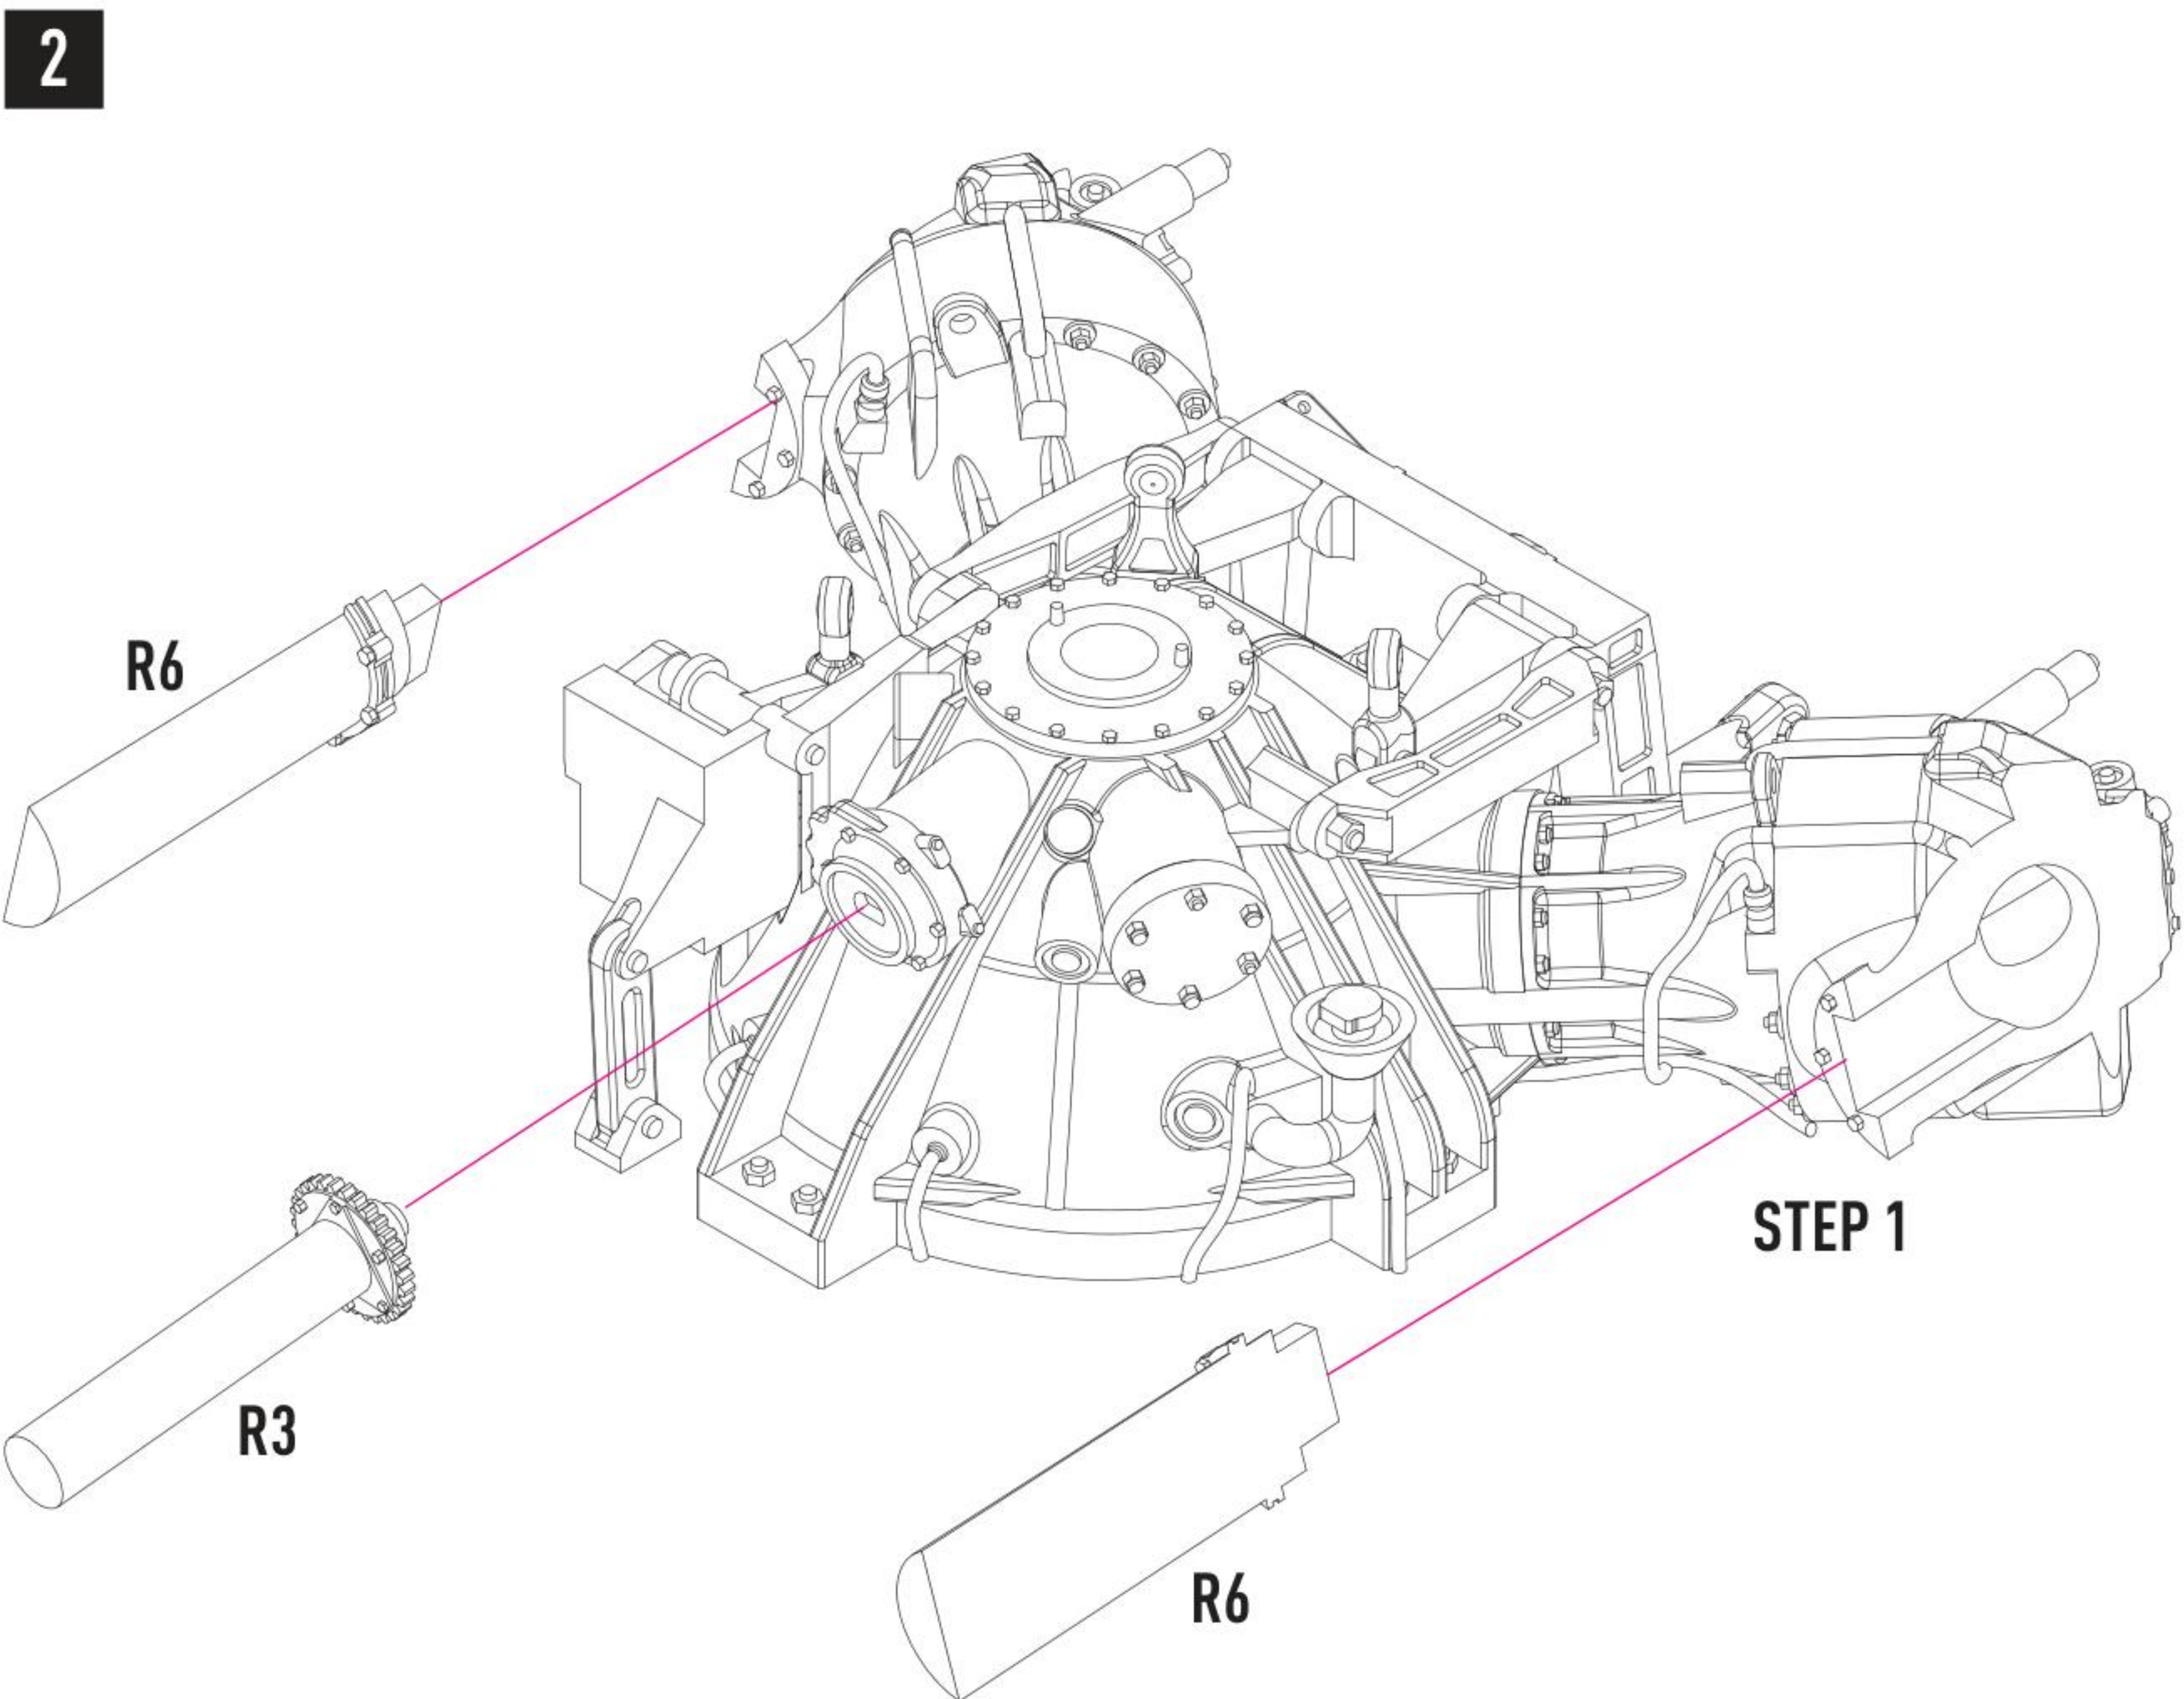


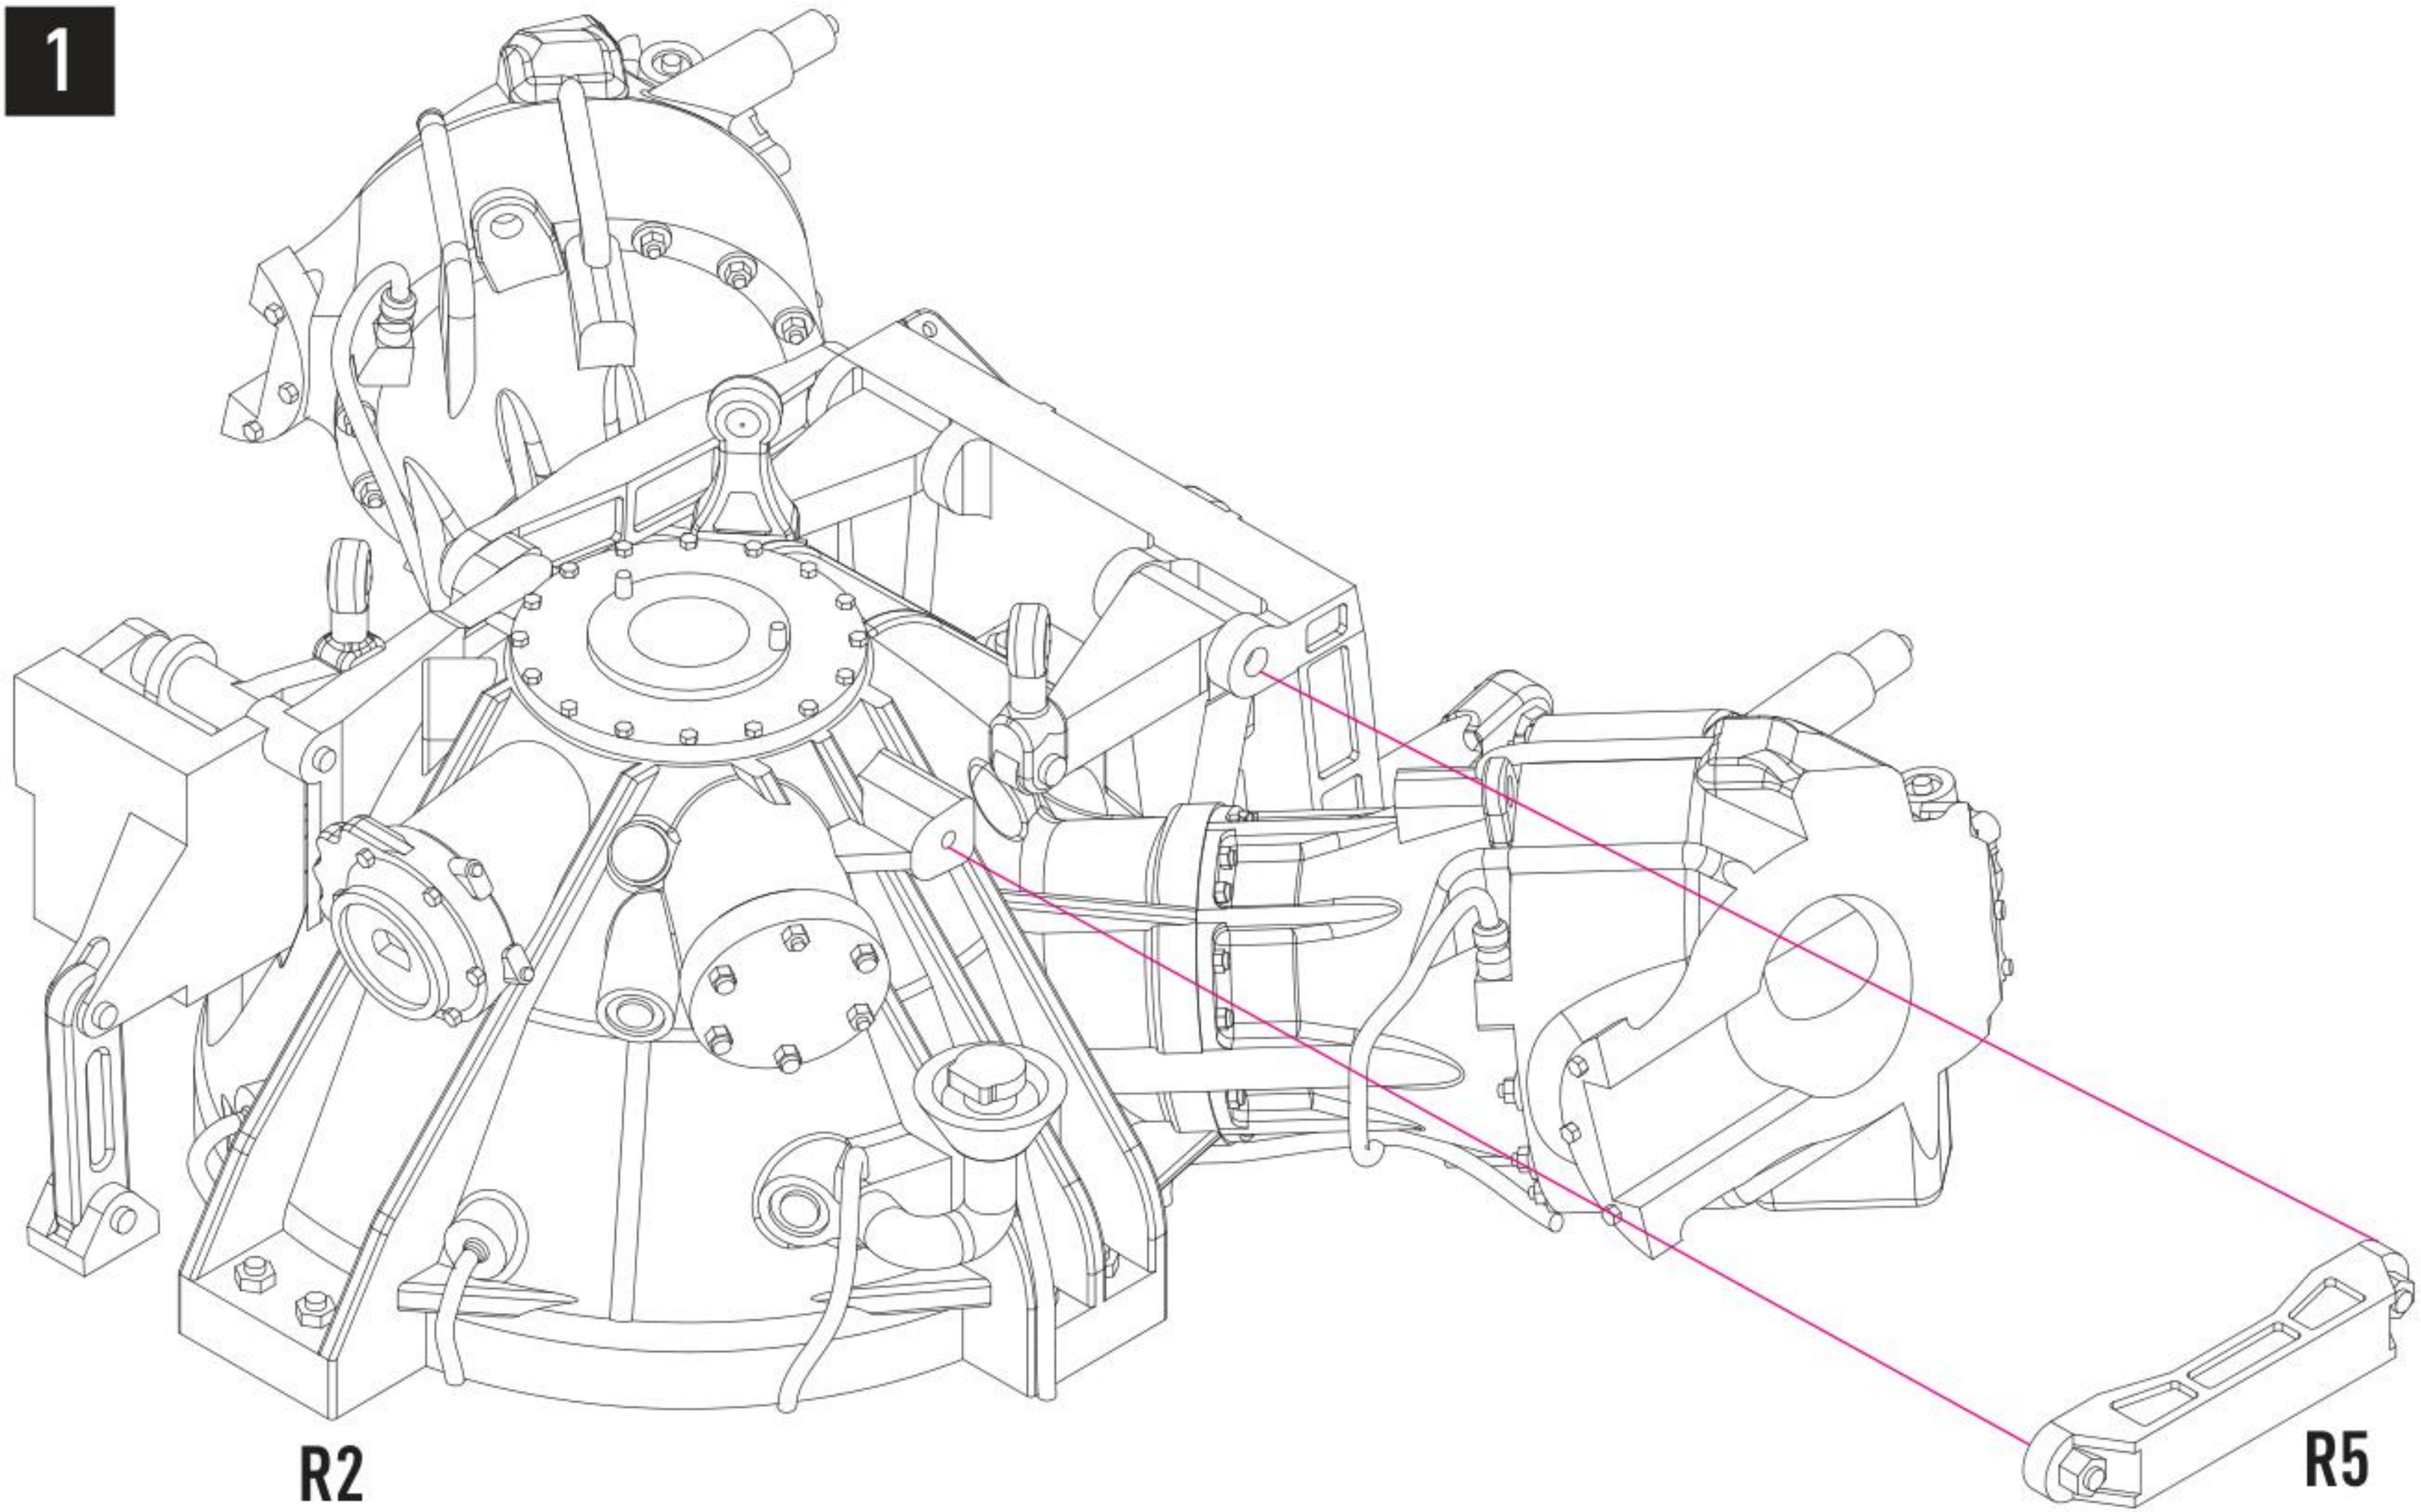


3

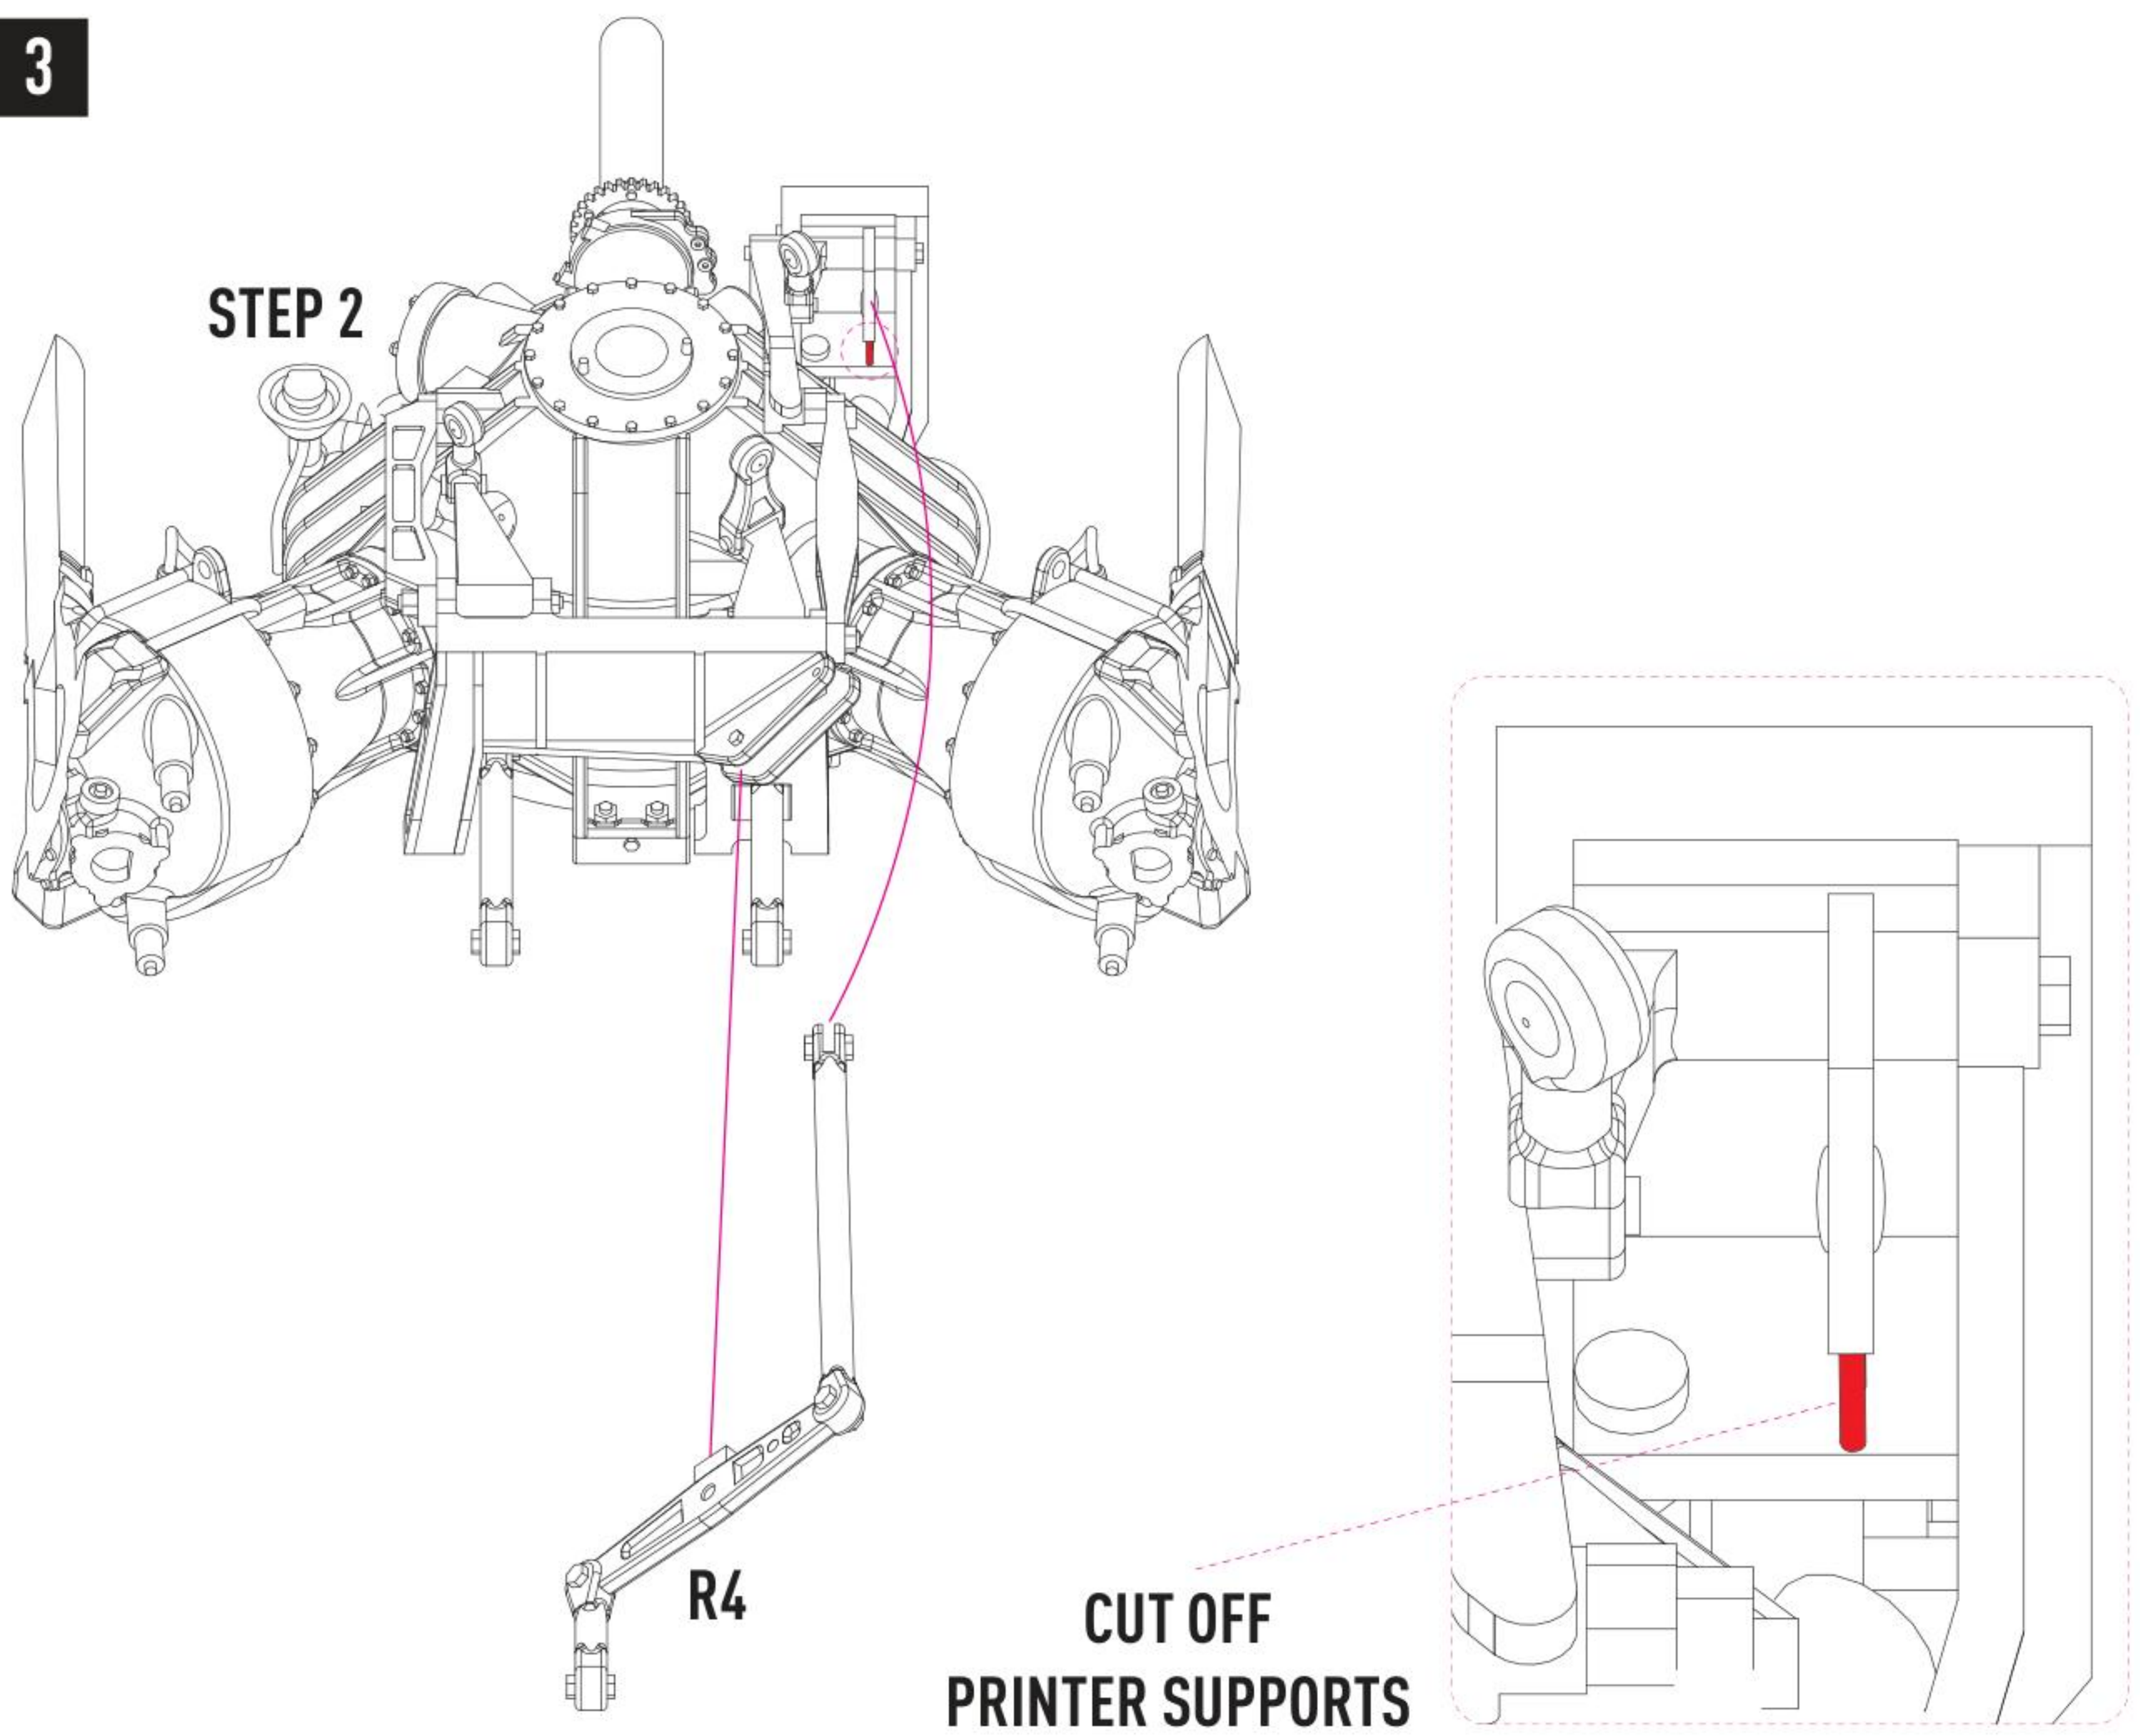

4

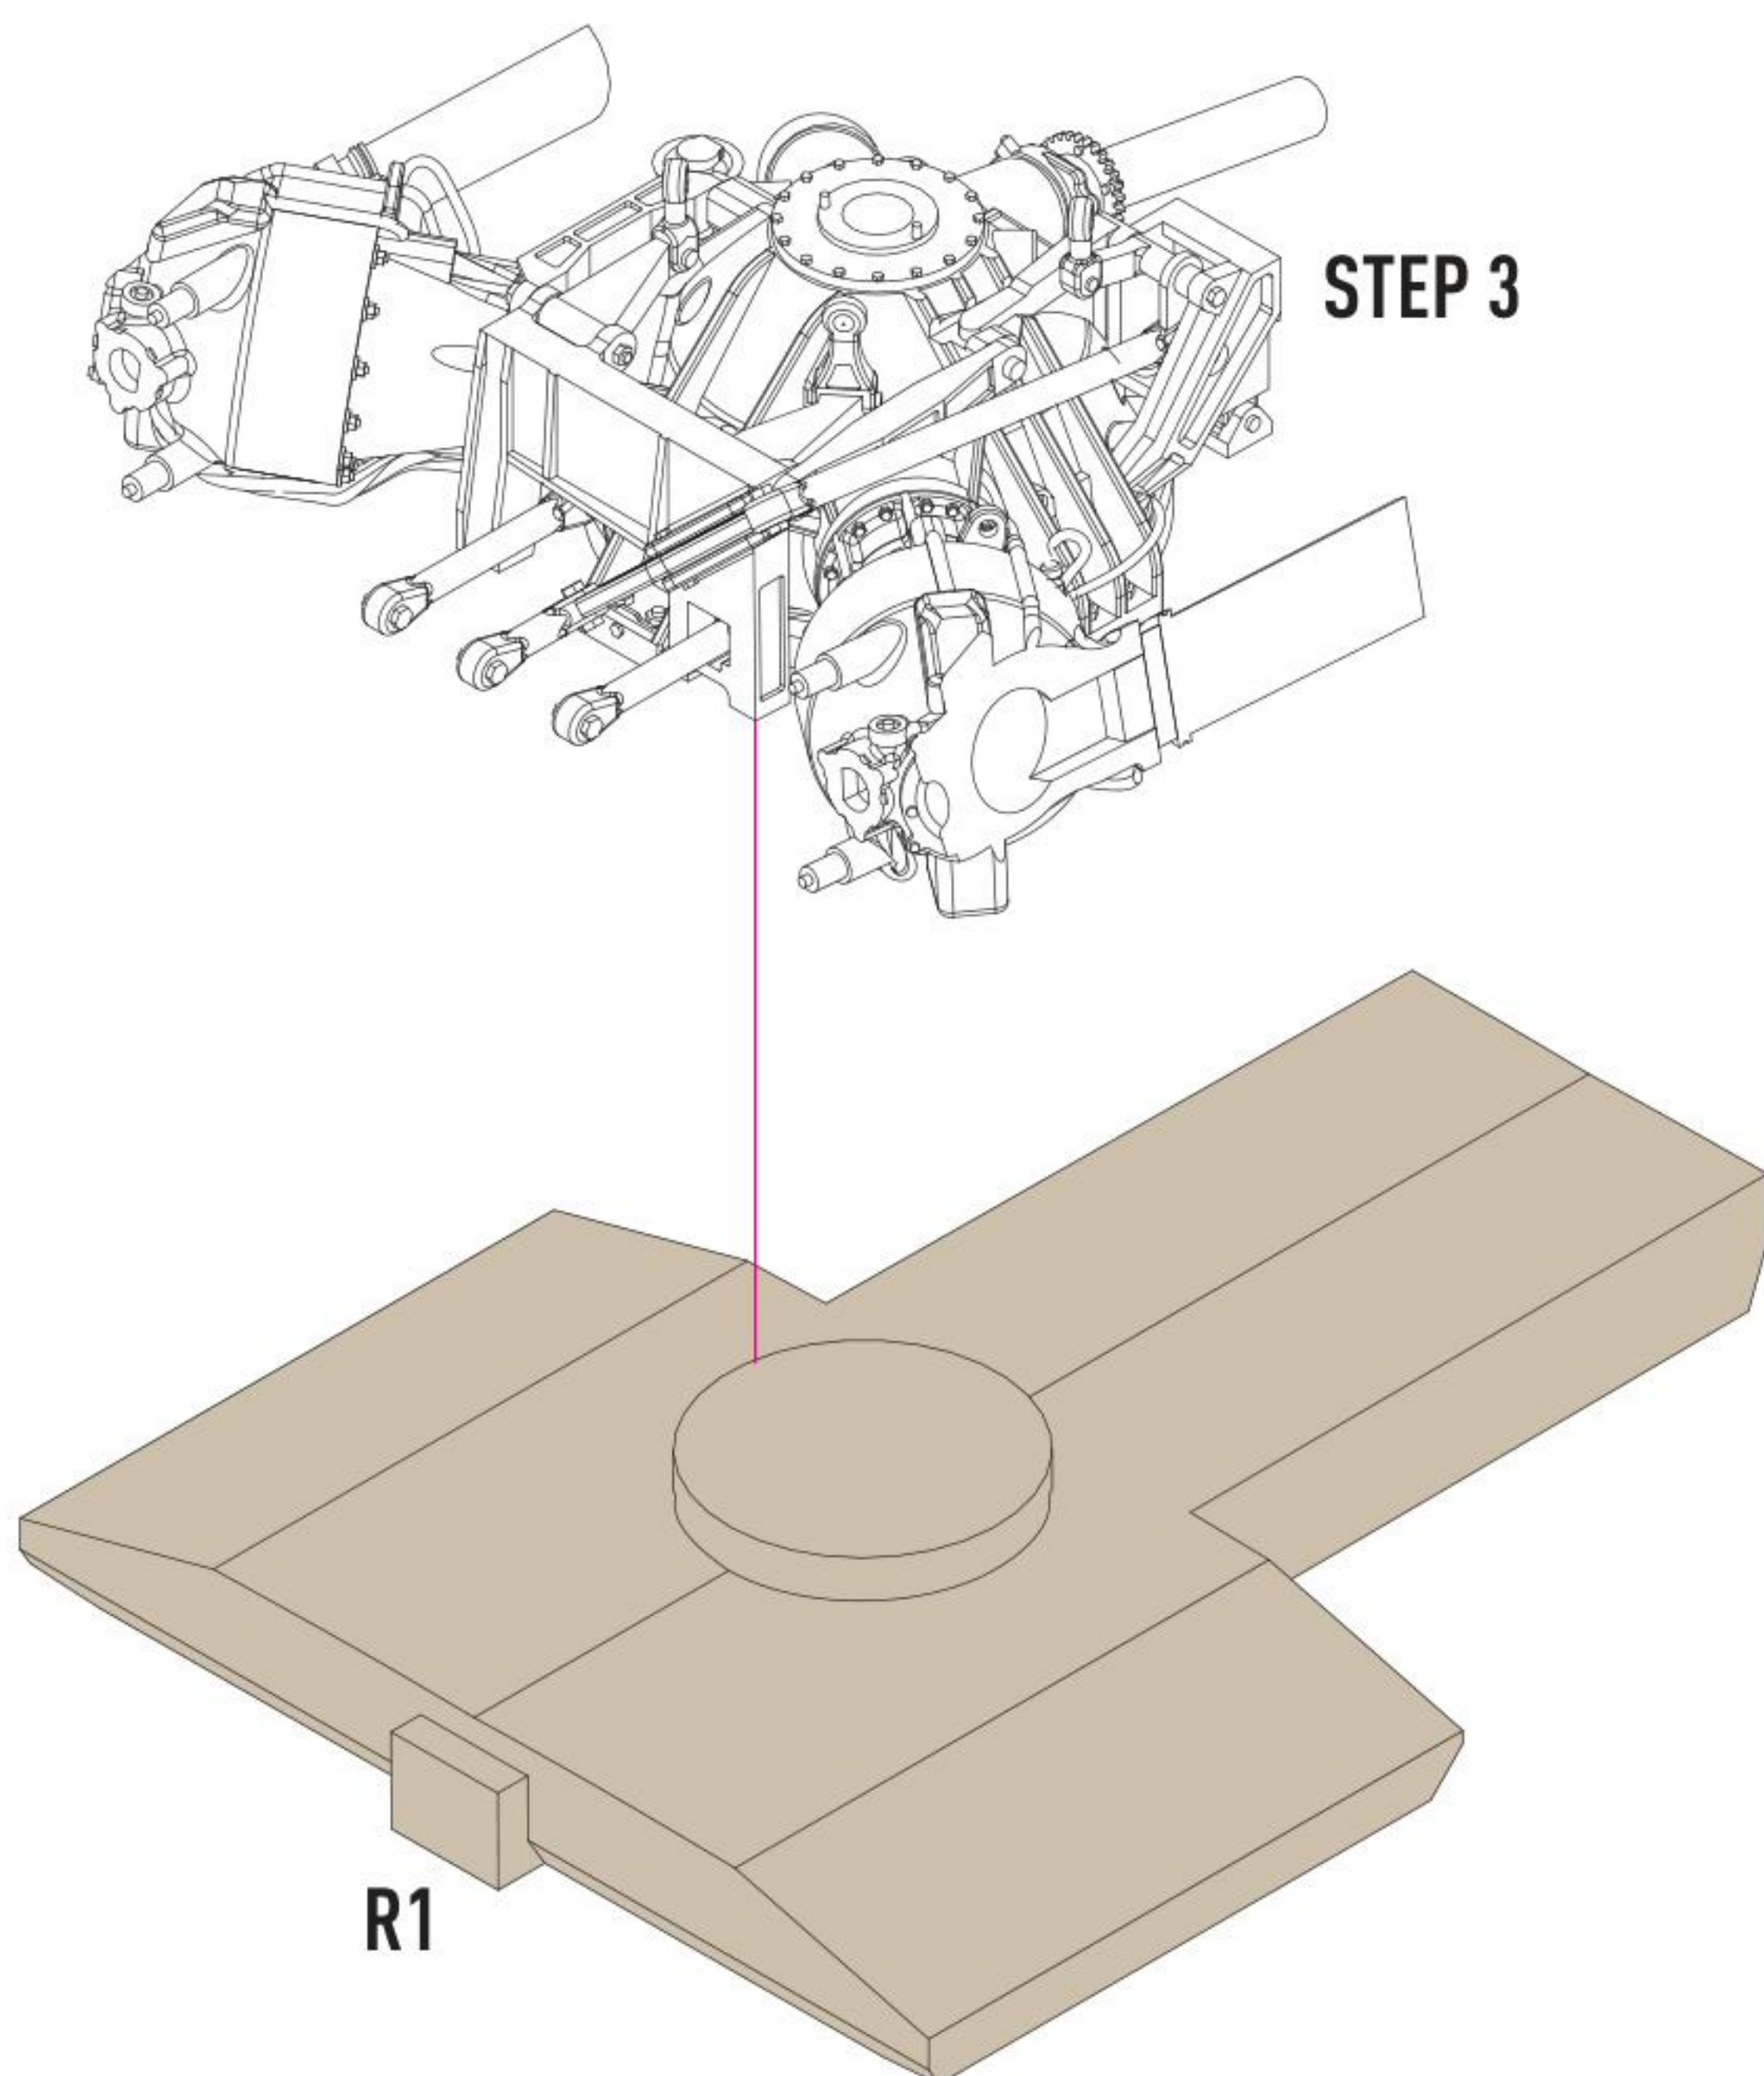


5

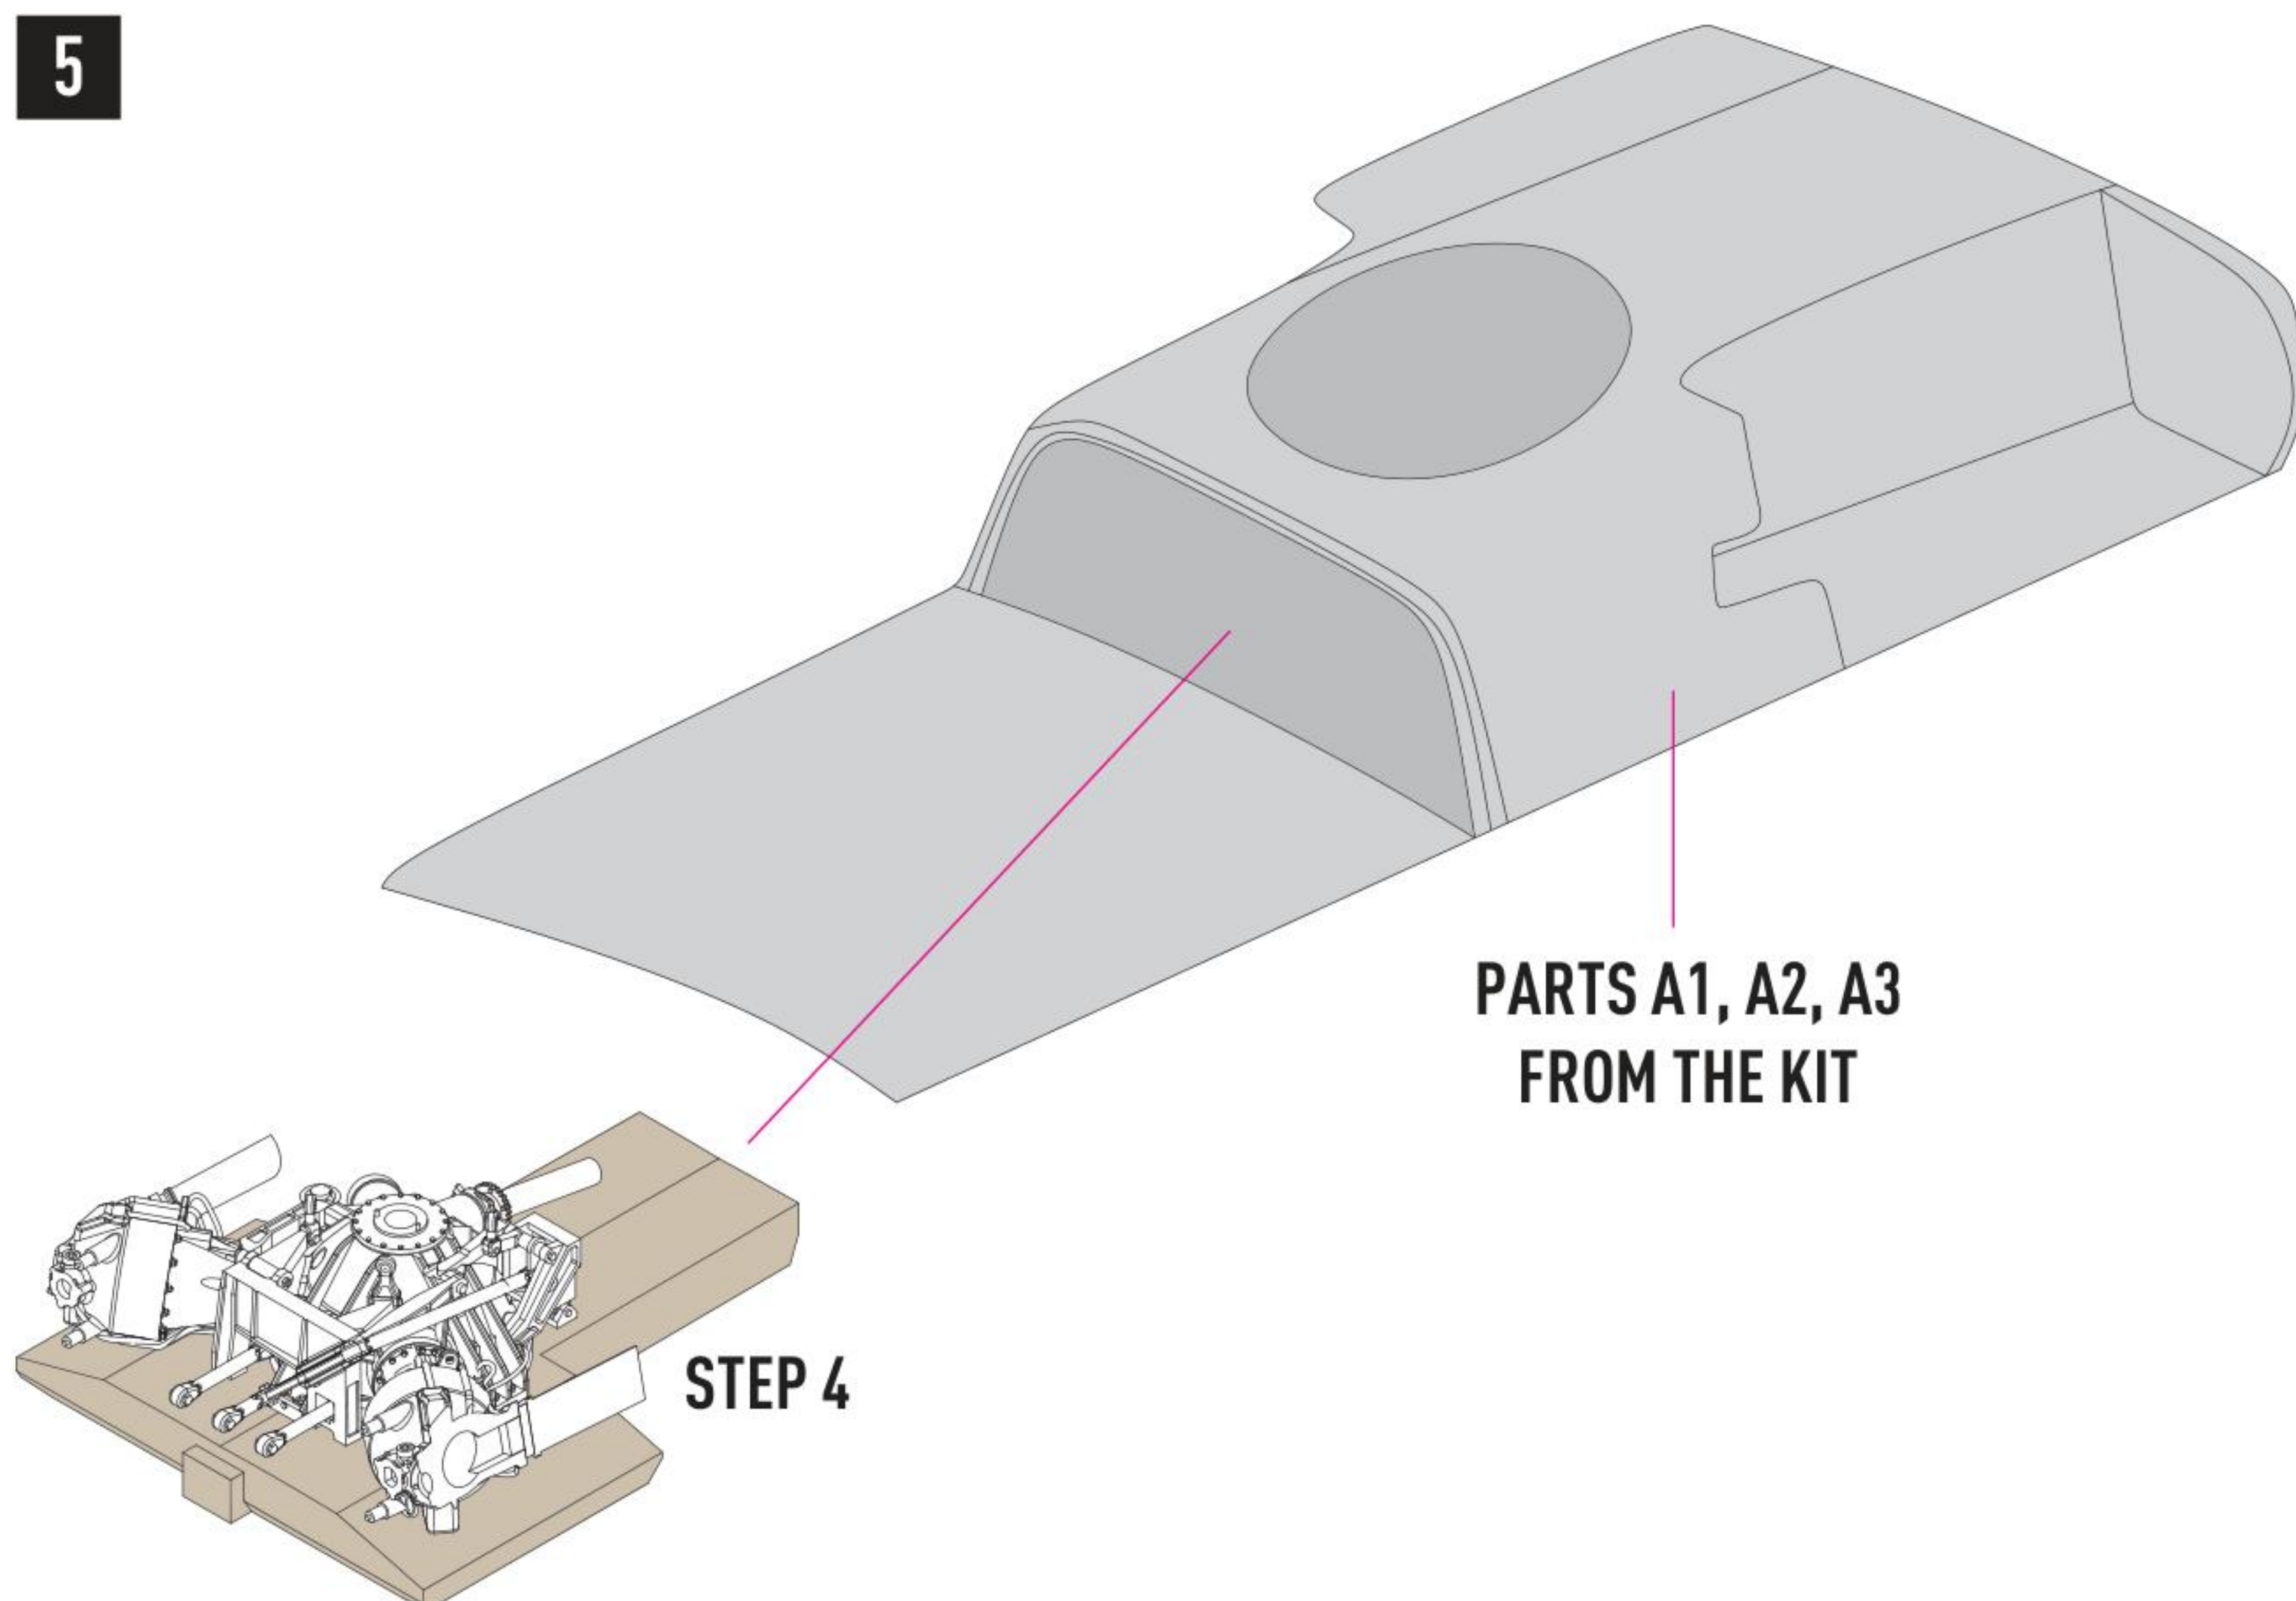

PARTS A1, A2, A3
FROM THE KIT

STEP 4


6 DO NOT GLUE

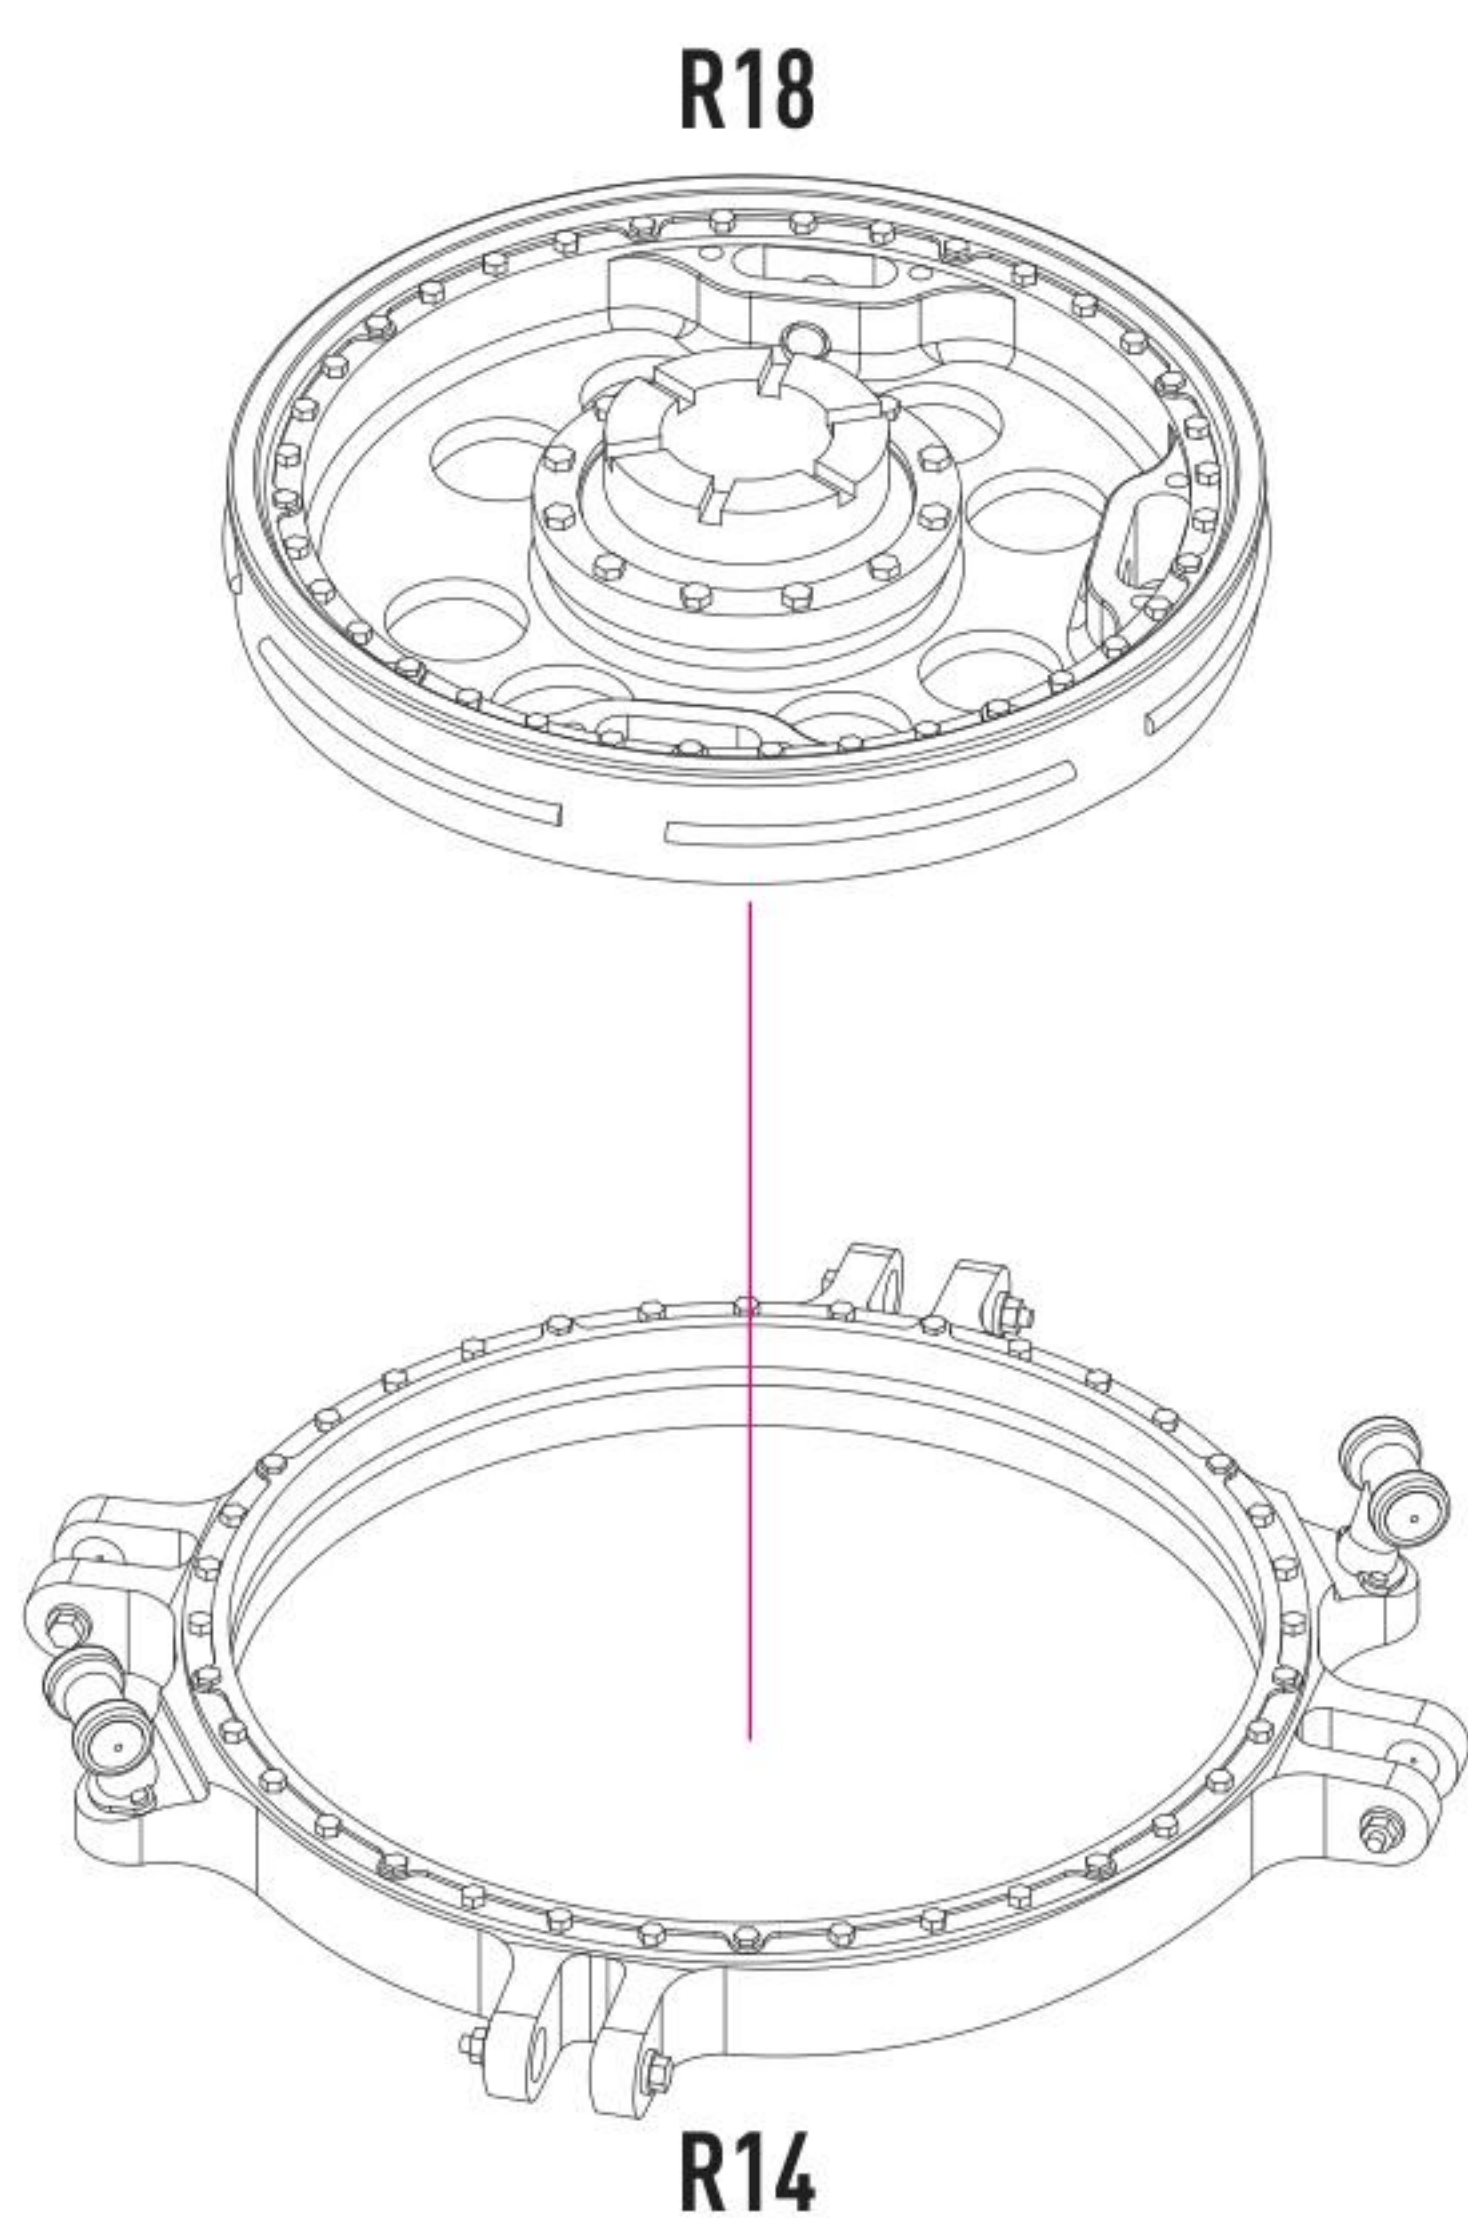

R18

R14

7

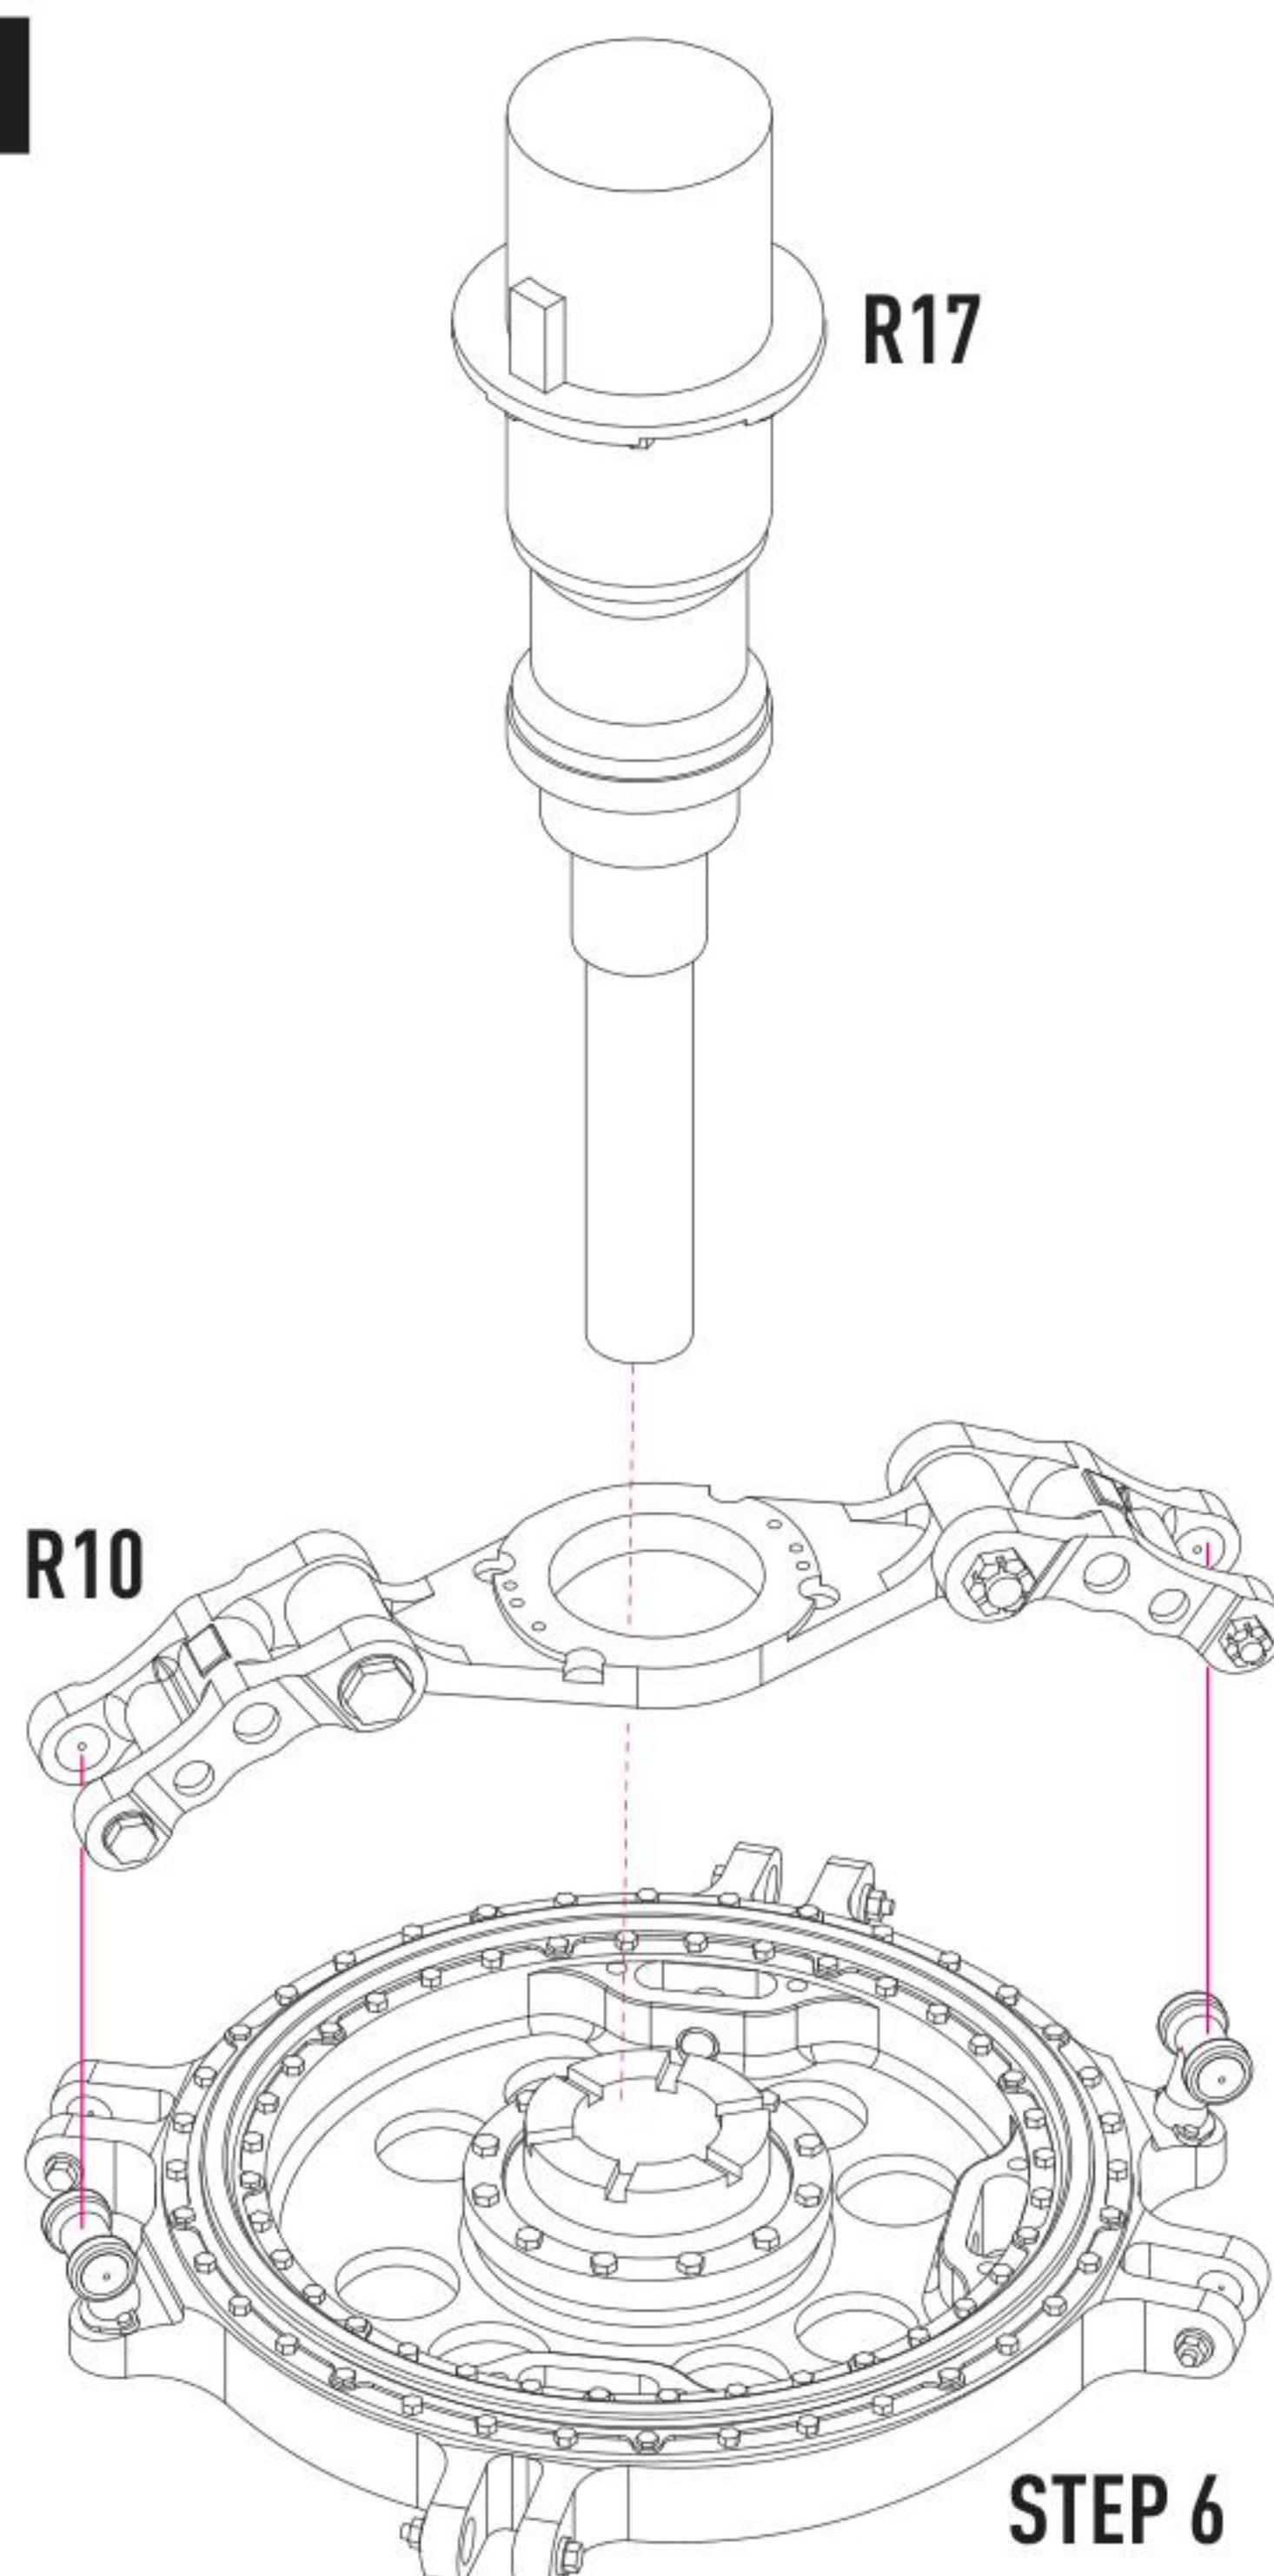

R17

R10

STEP 6

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua


RESKIT-MODELS.COM

fb.com/reskit.official


instagram.com/reskit_official



youtube.com/@reskit-usmd



8 X4 AFTER DRILLING THE HOLE, REMOVE R7


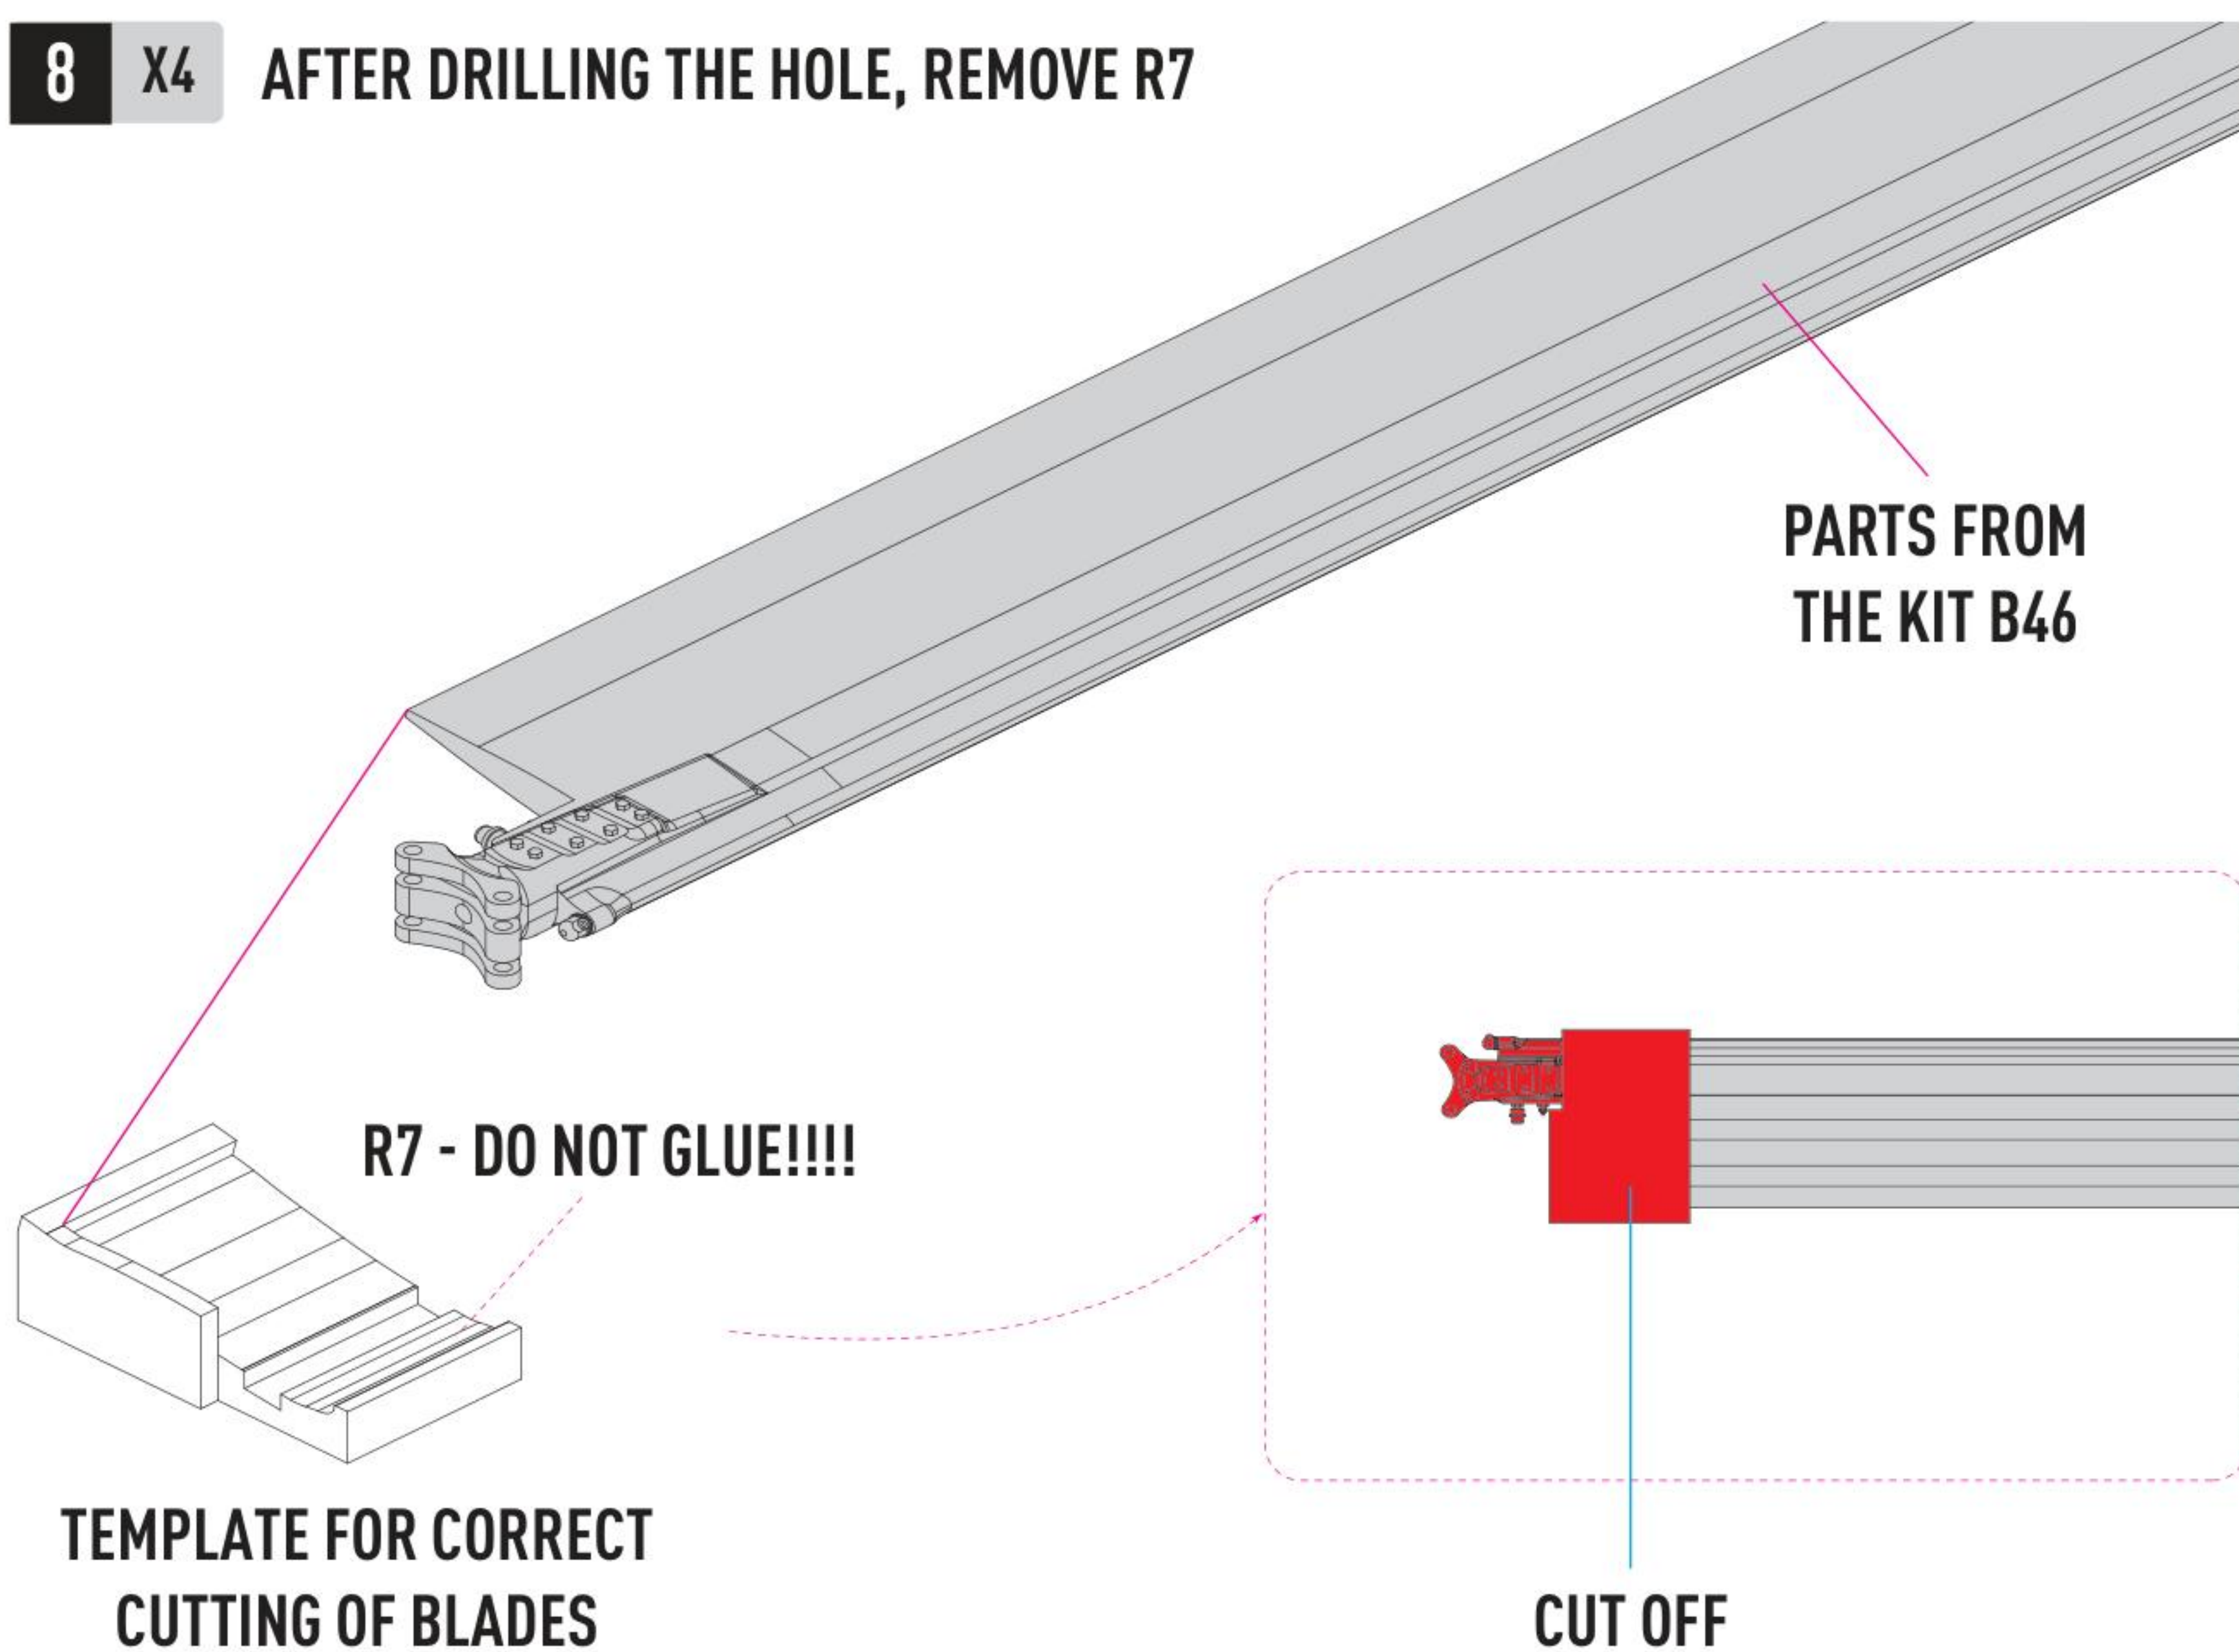


9 X4 AFTER DRILLING THE HOLE, REMOVE R8

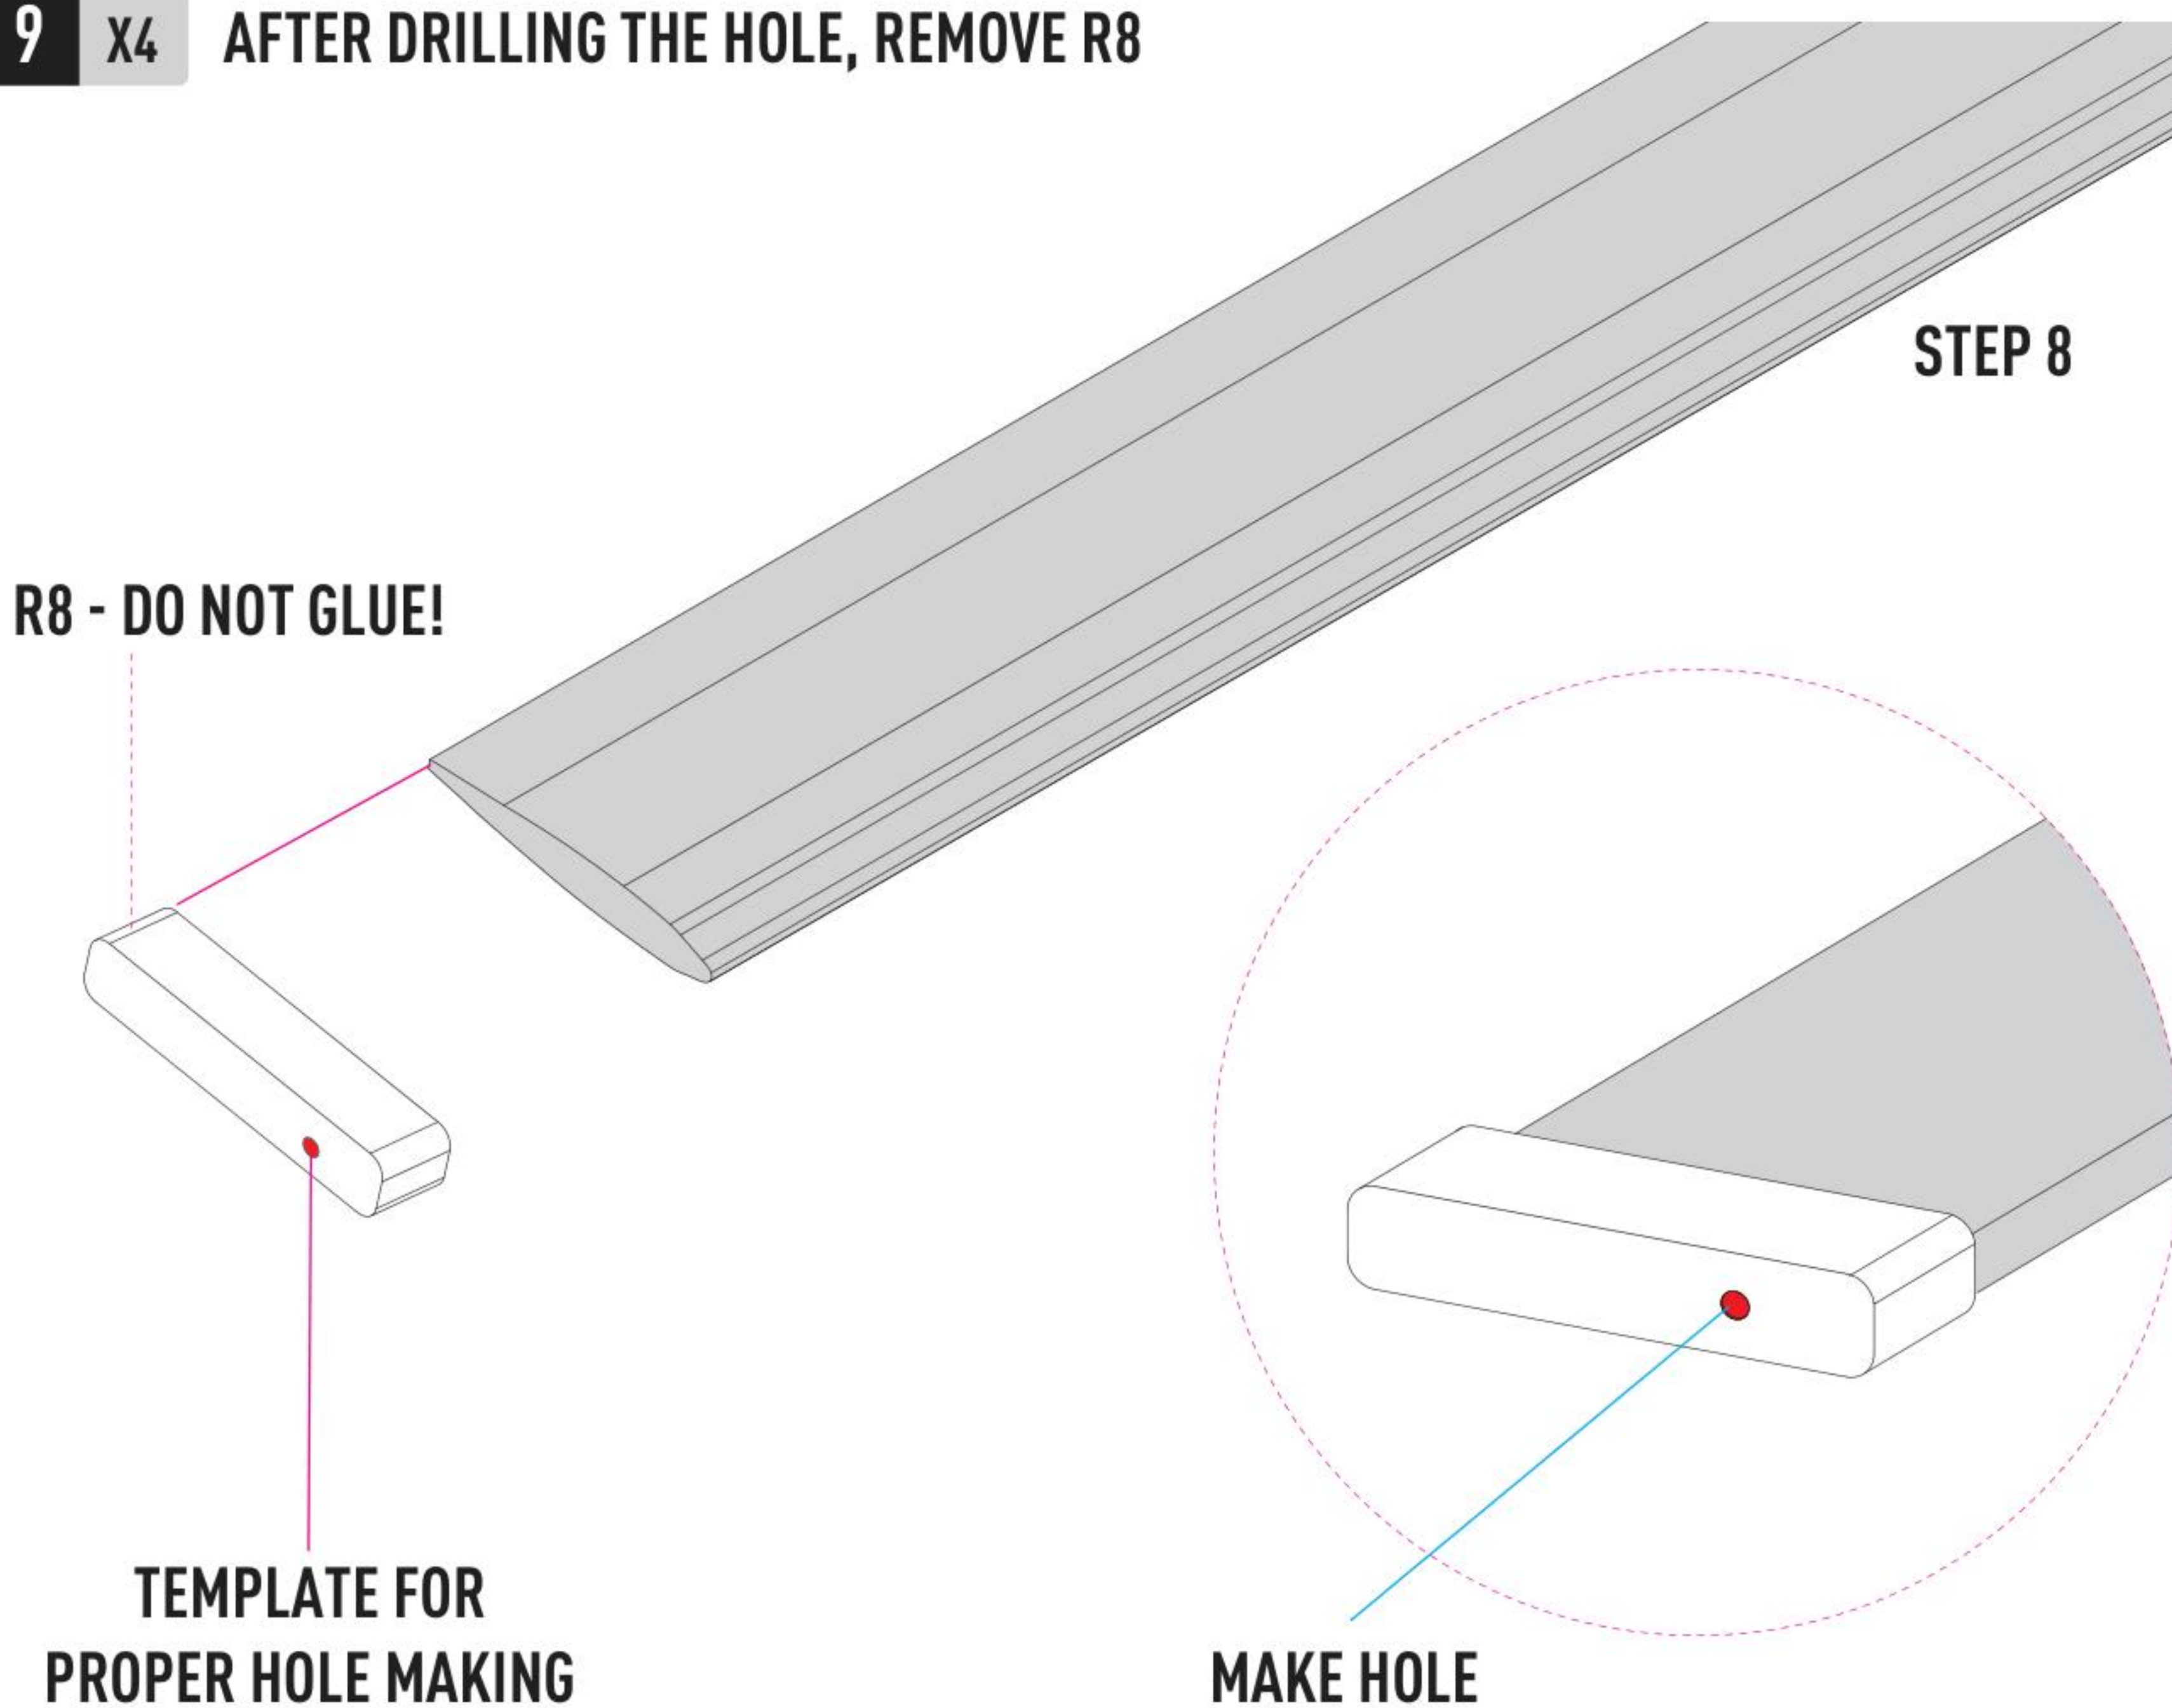

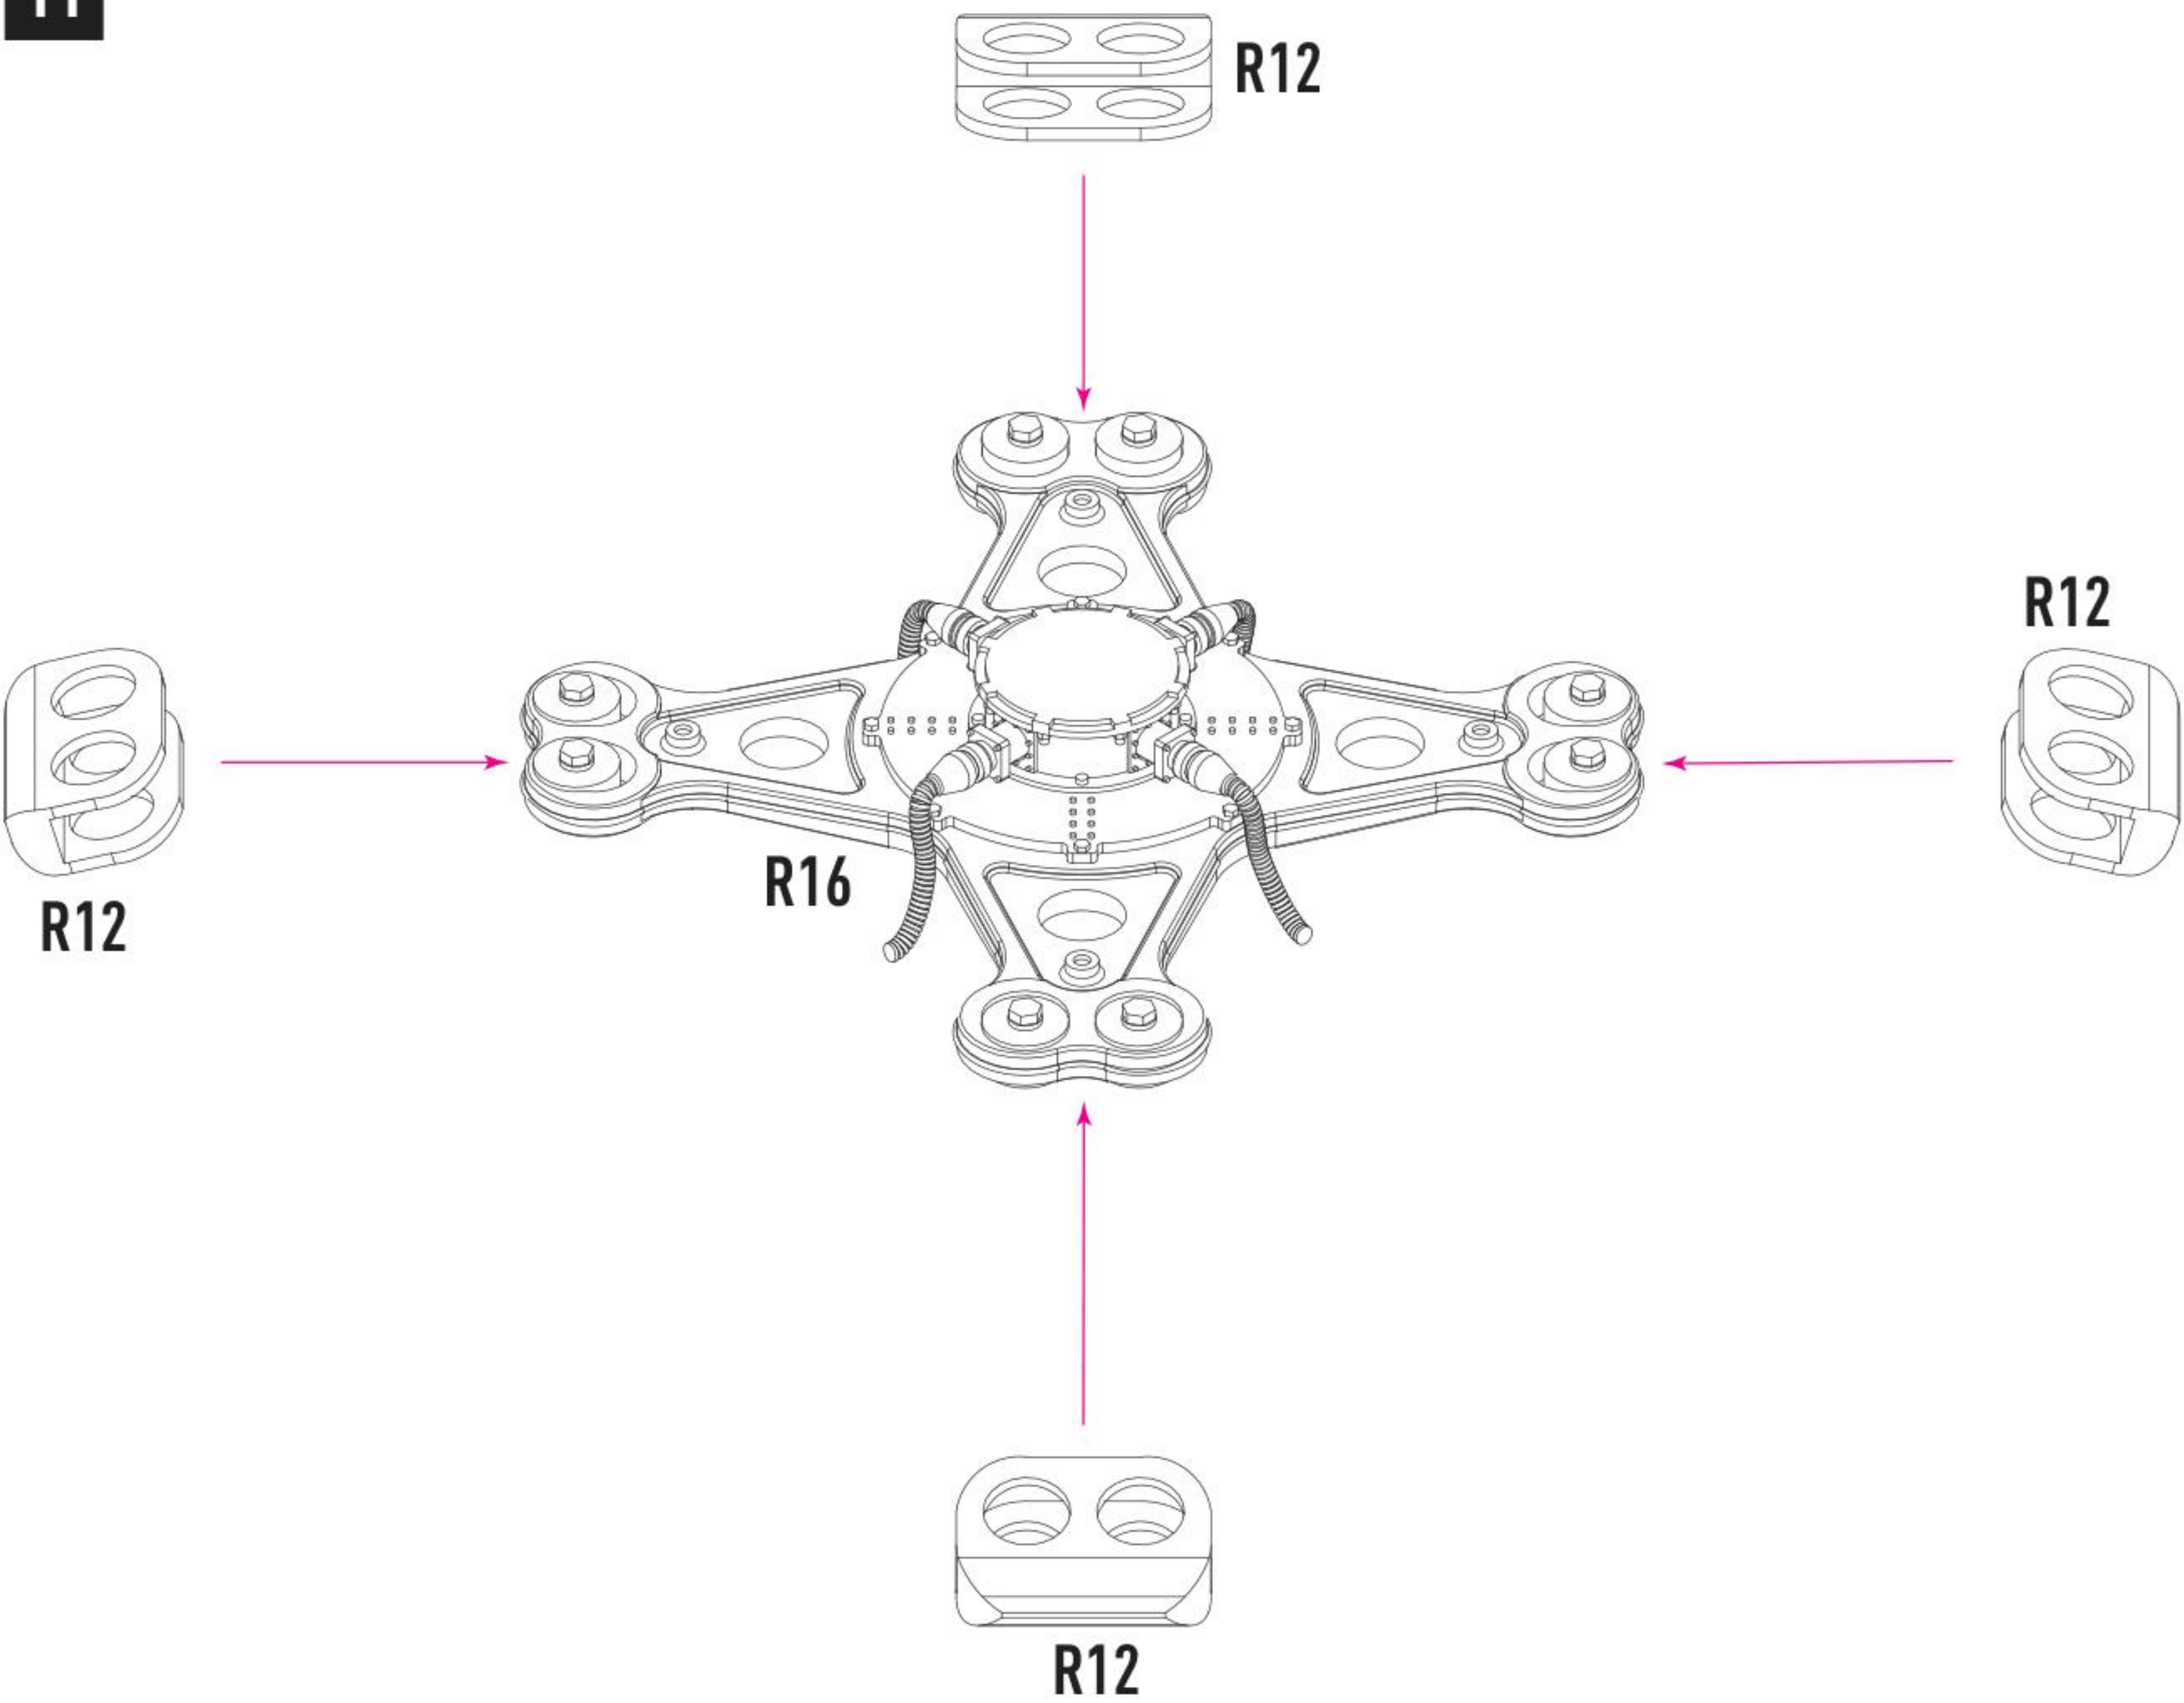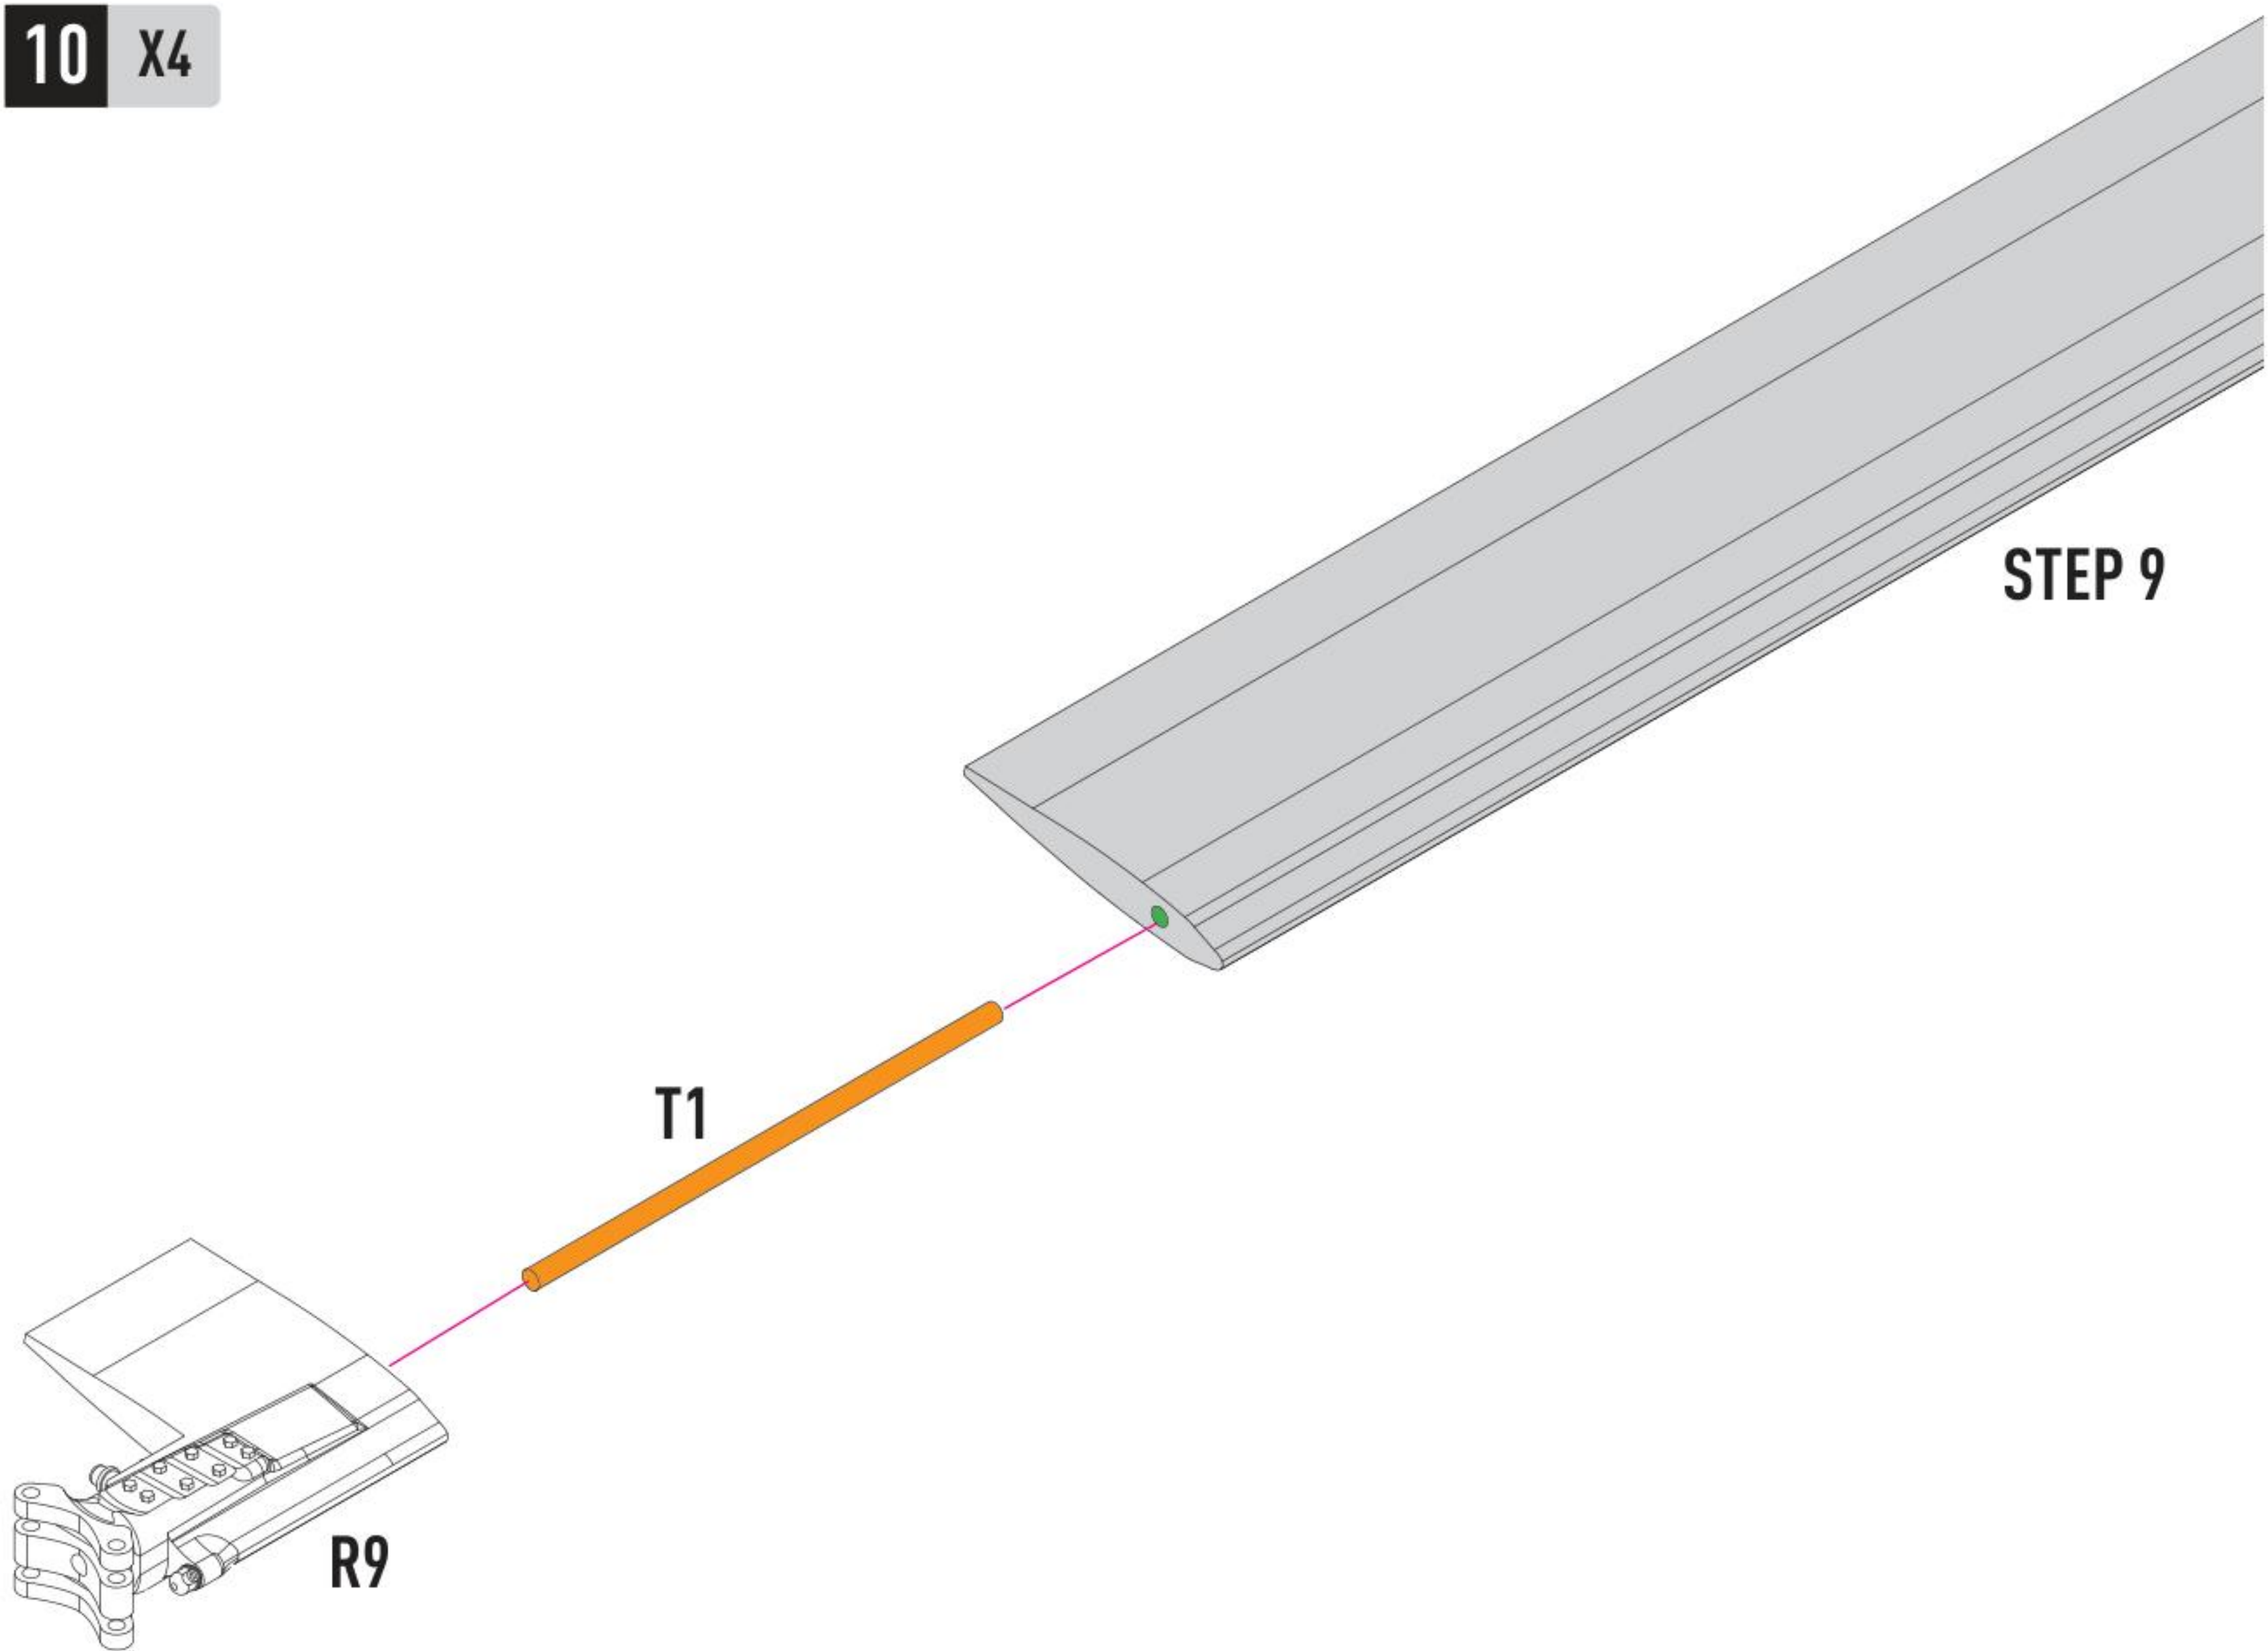


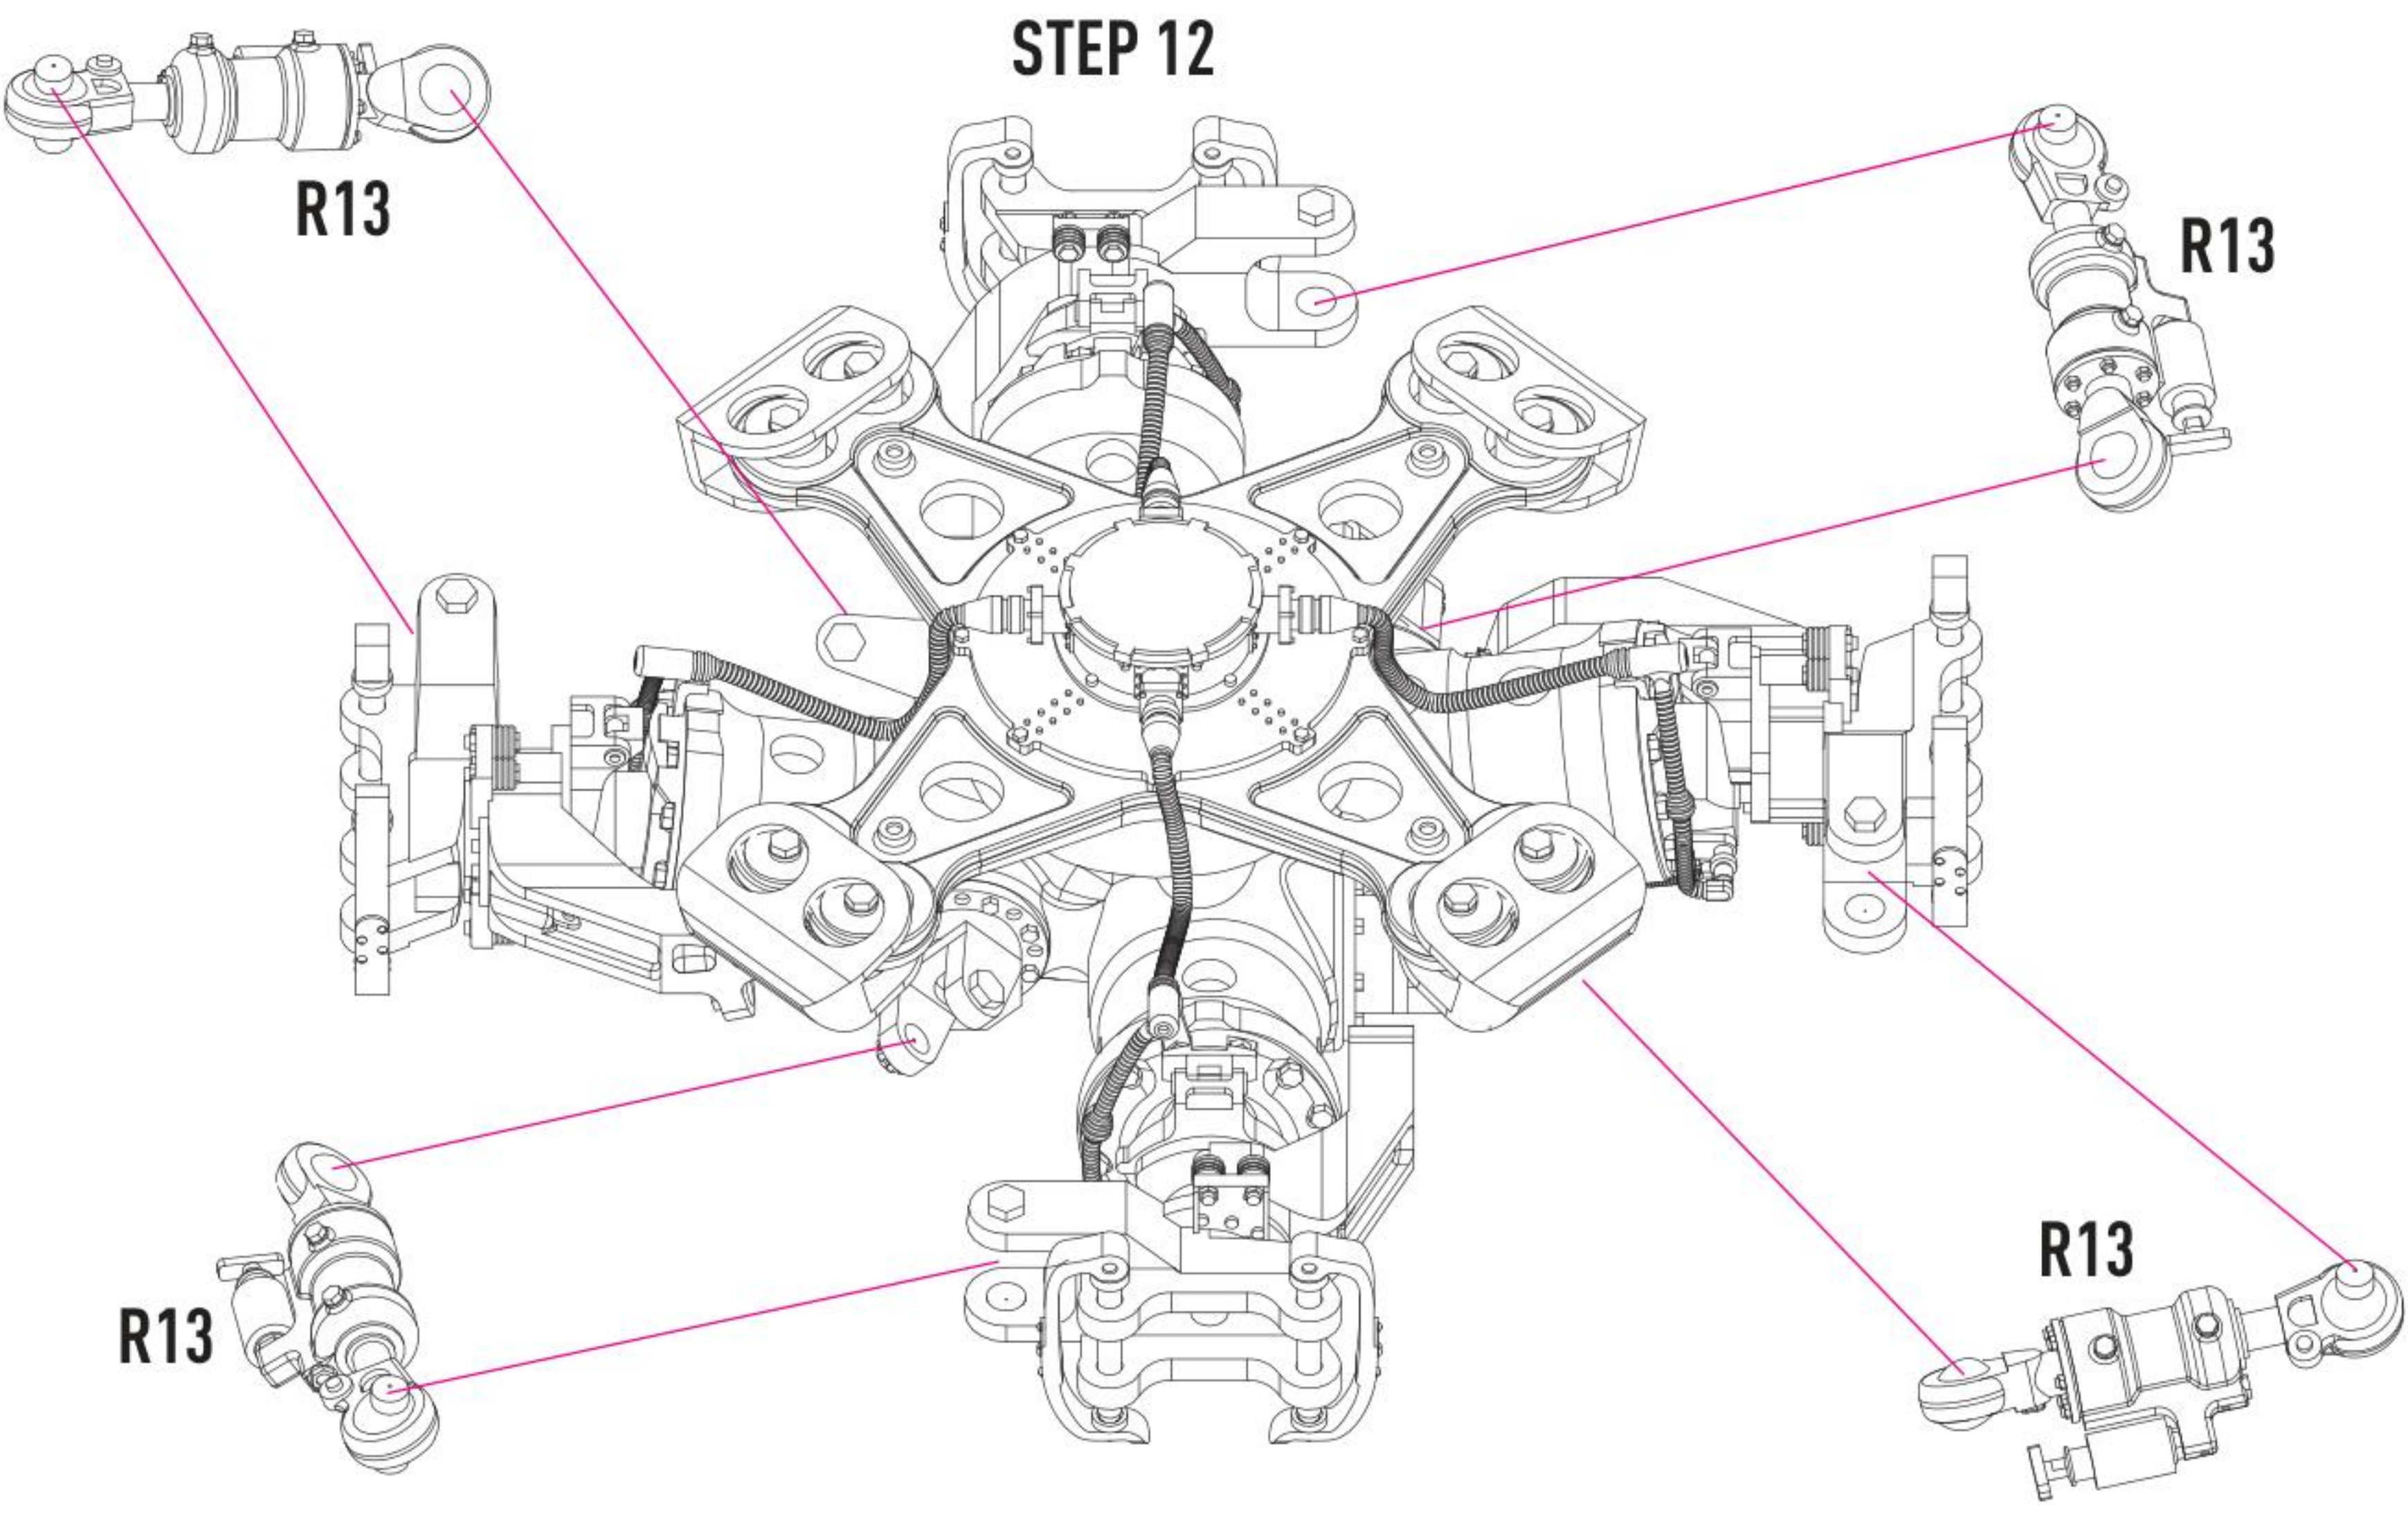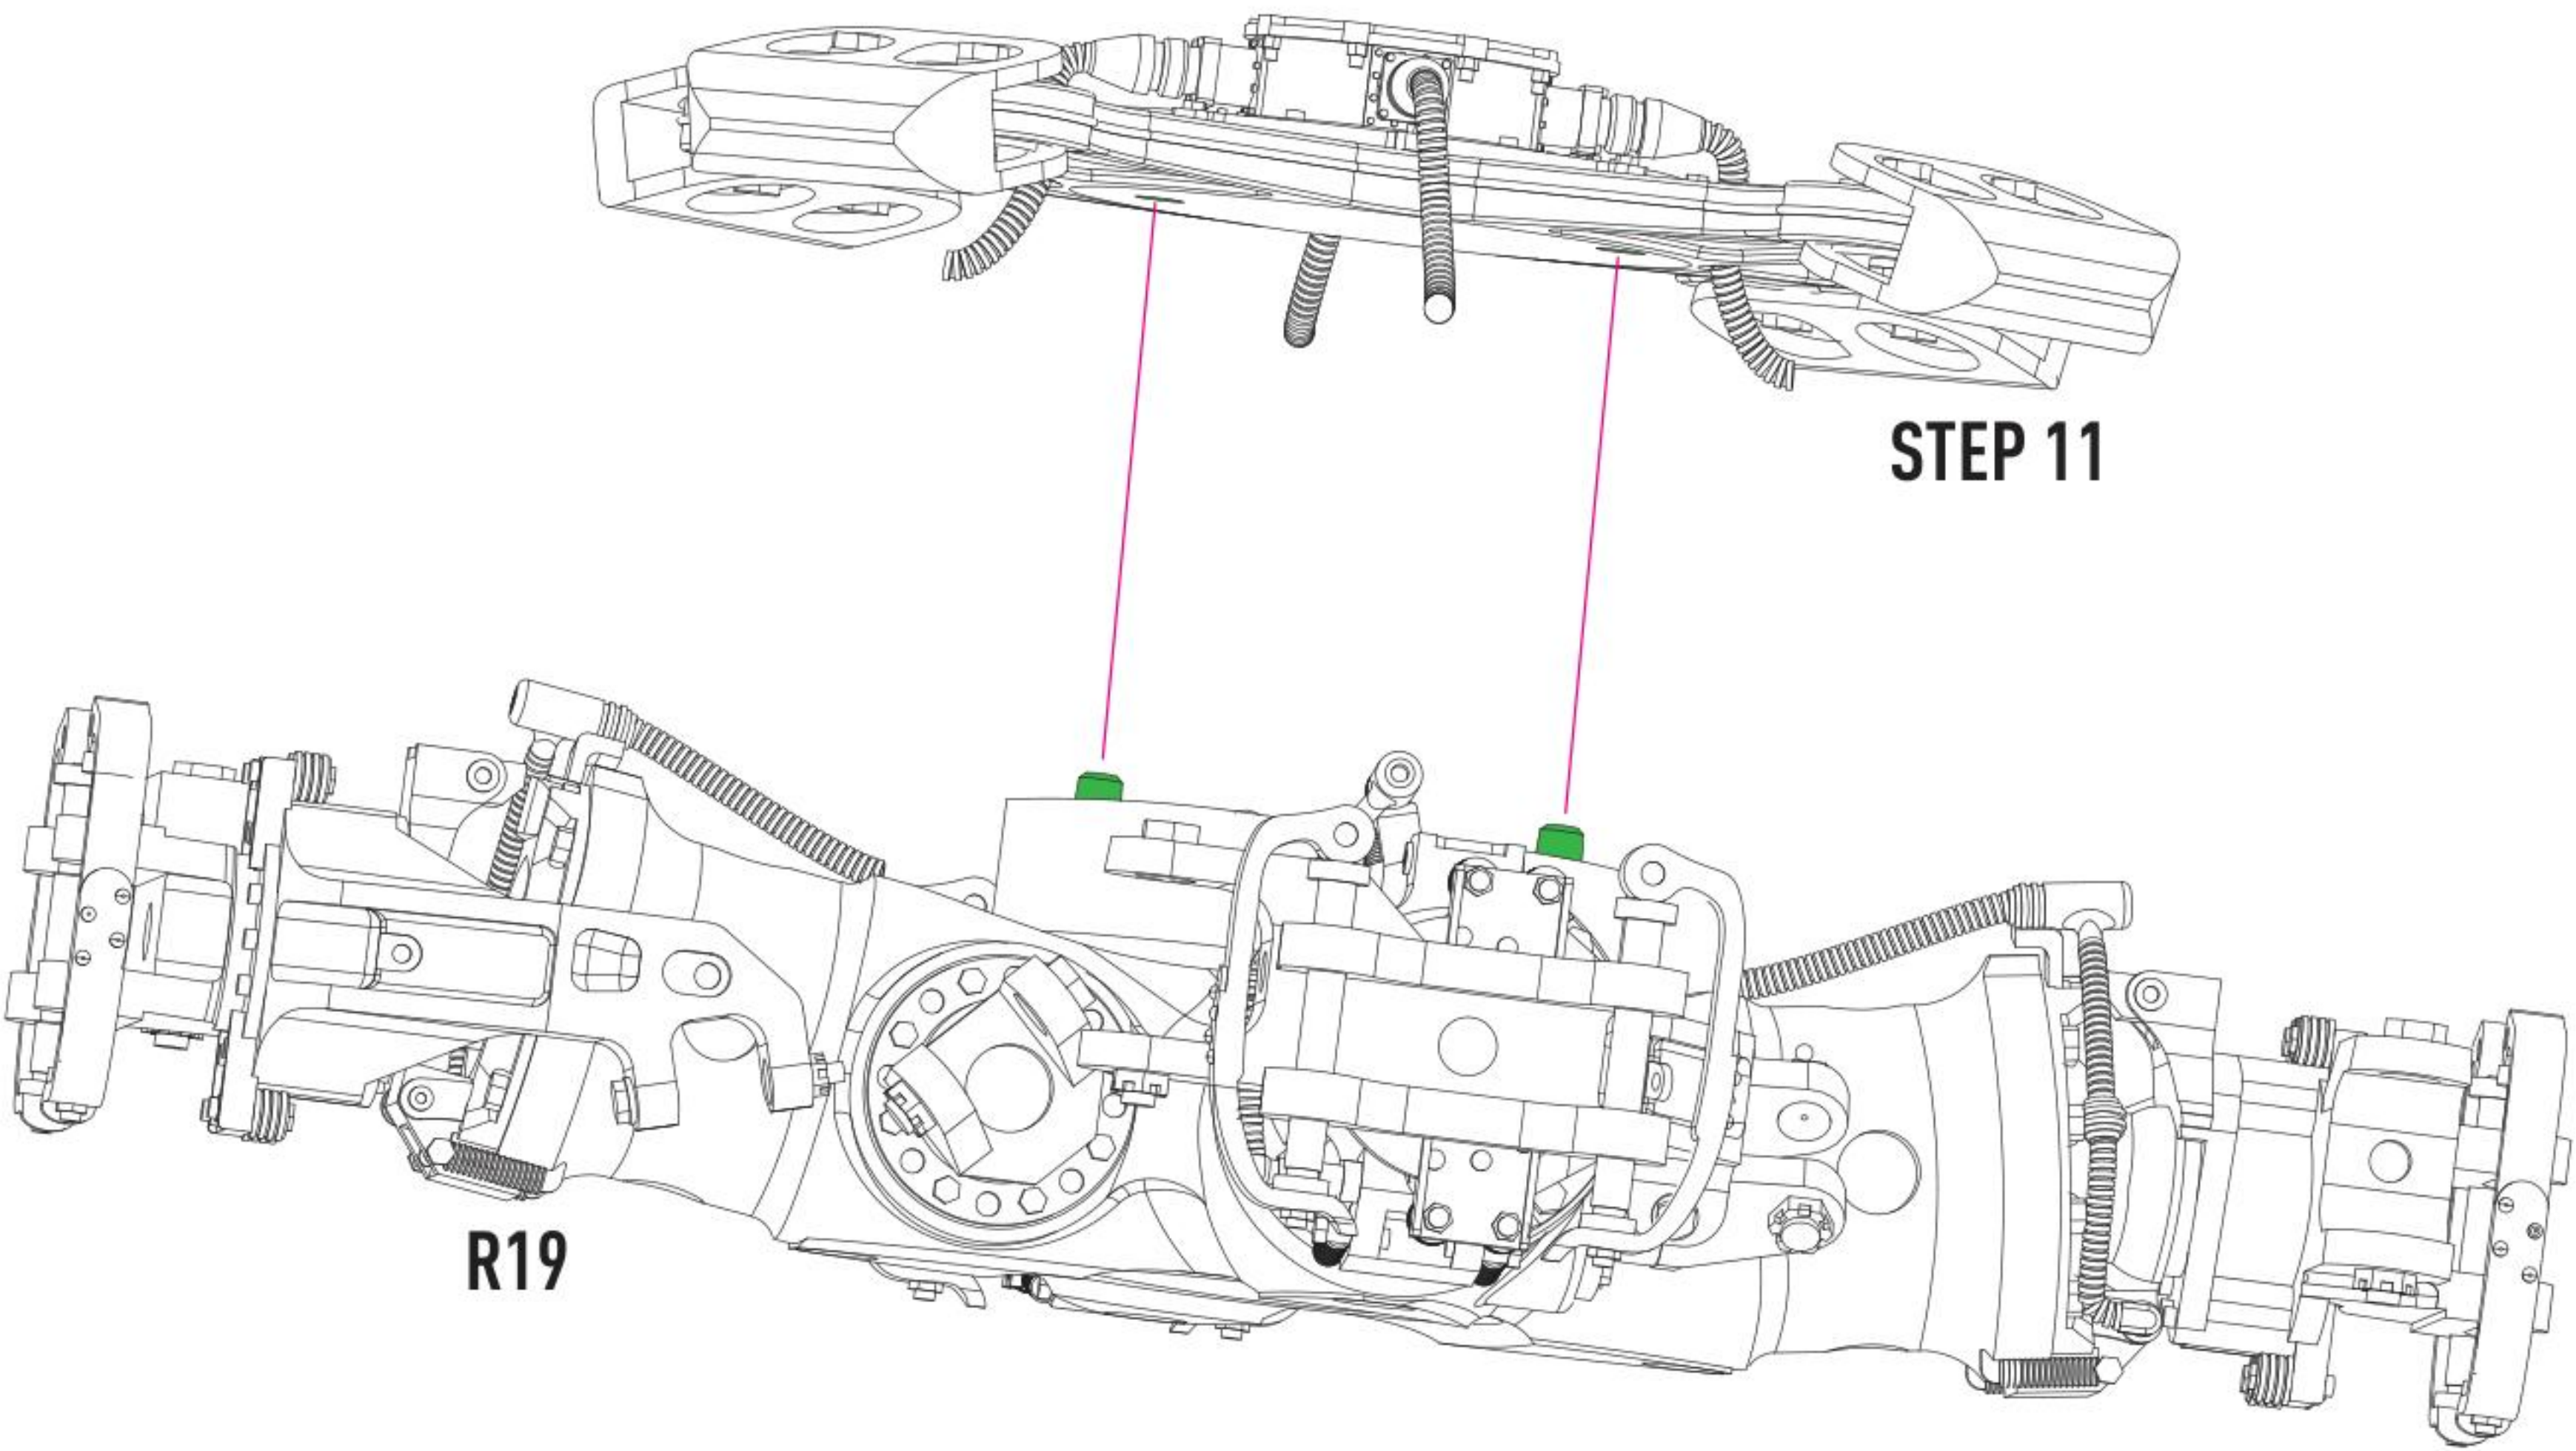

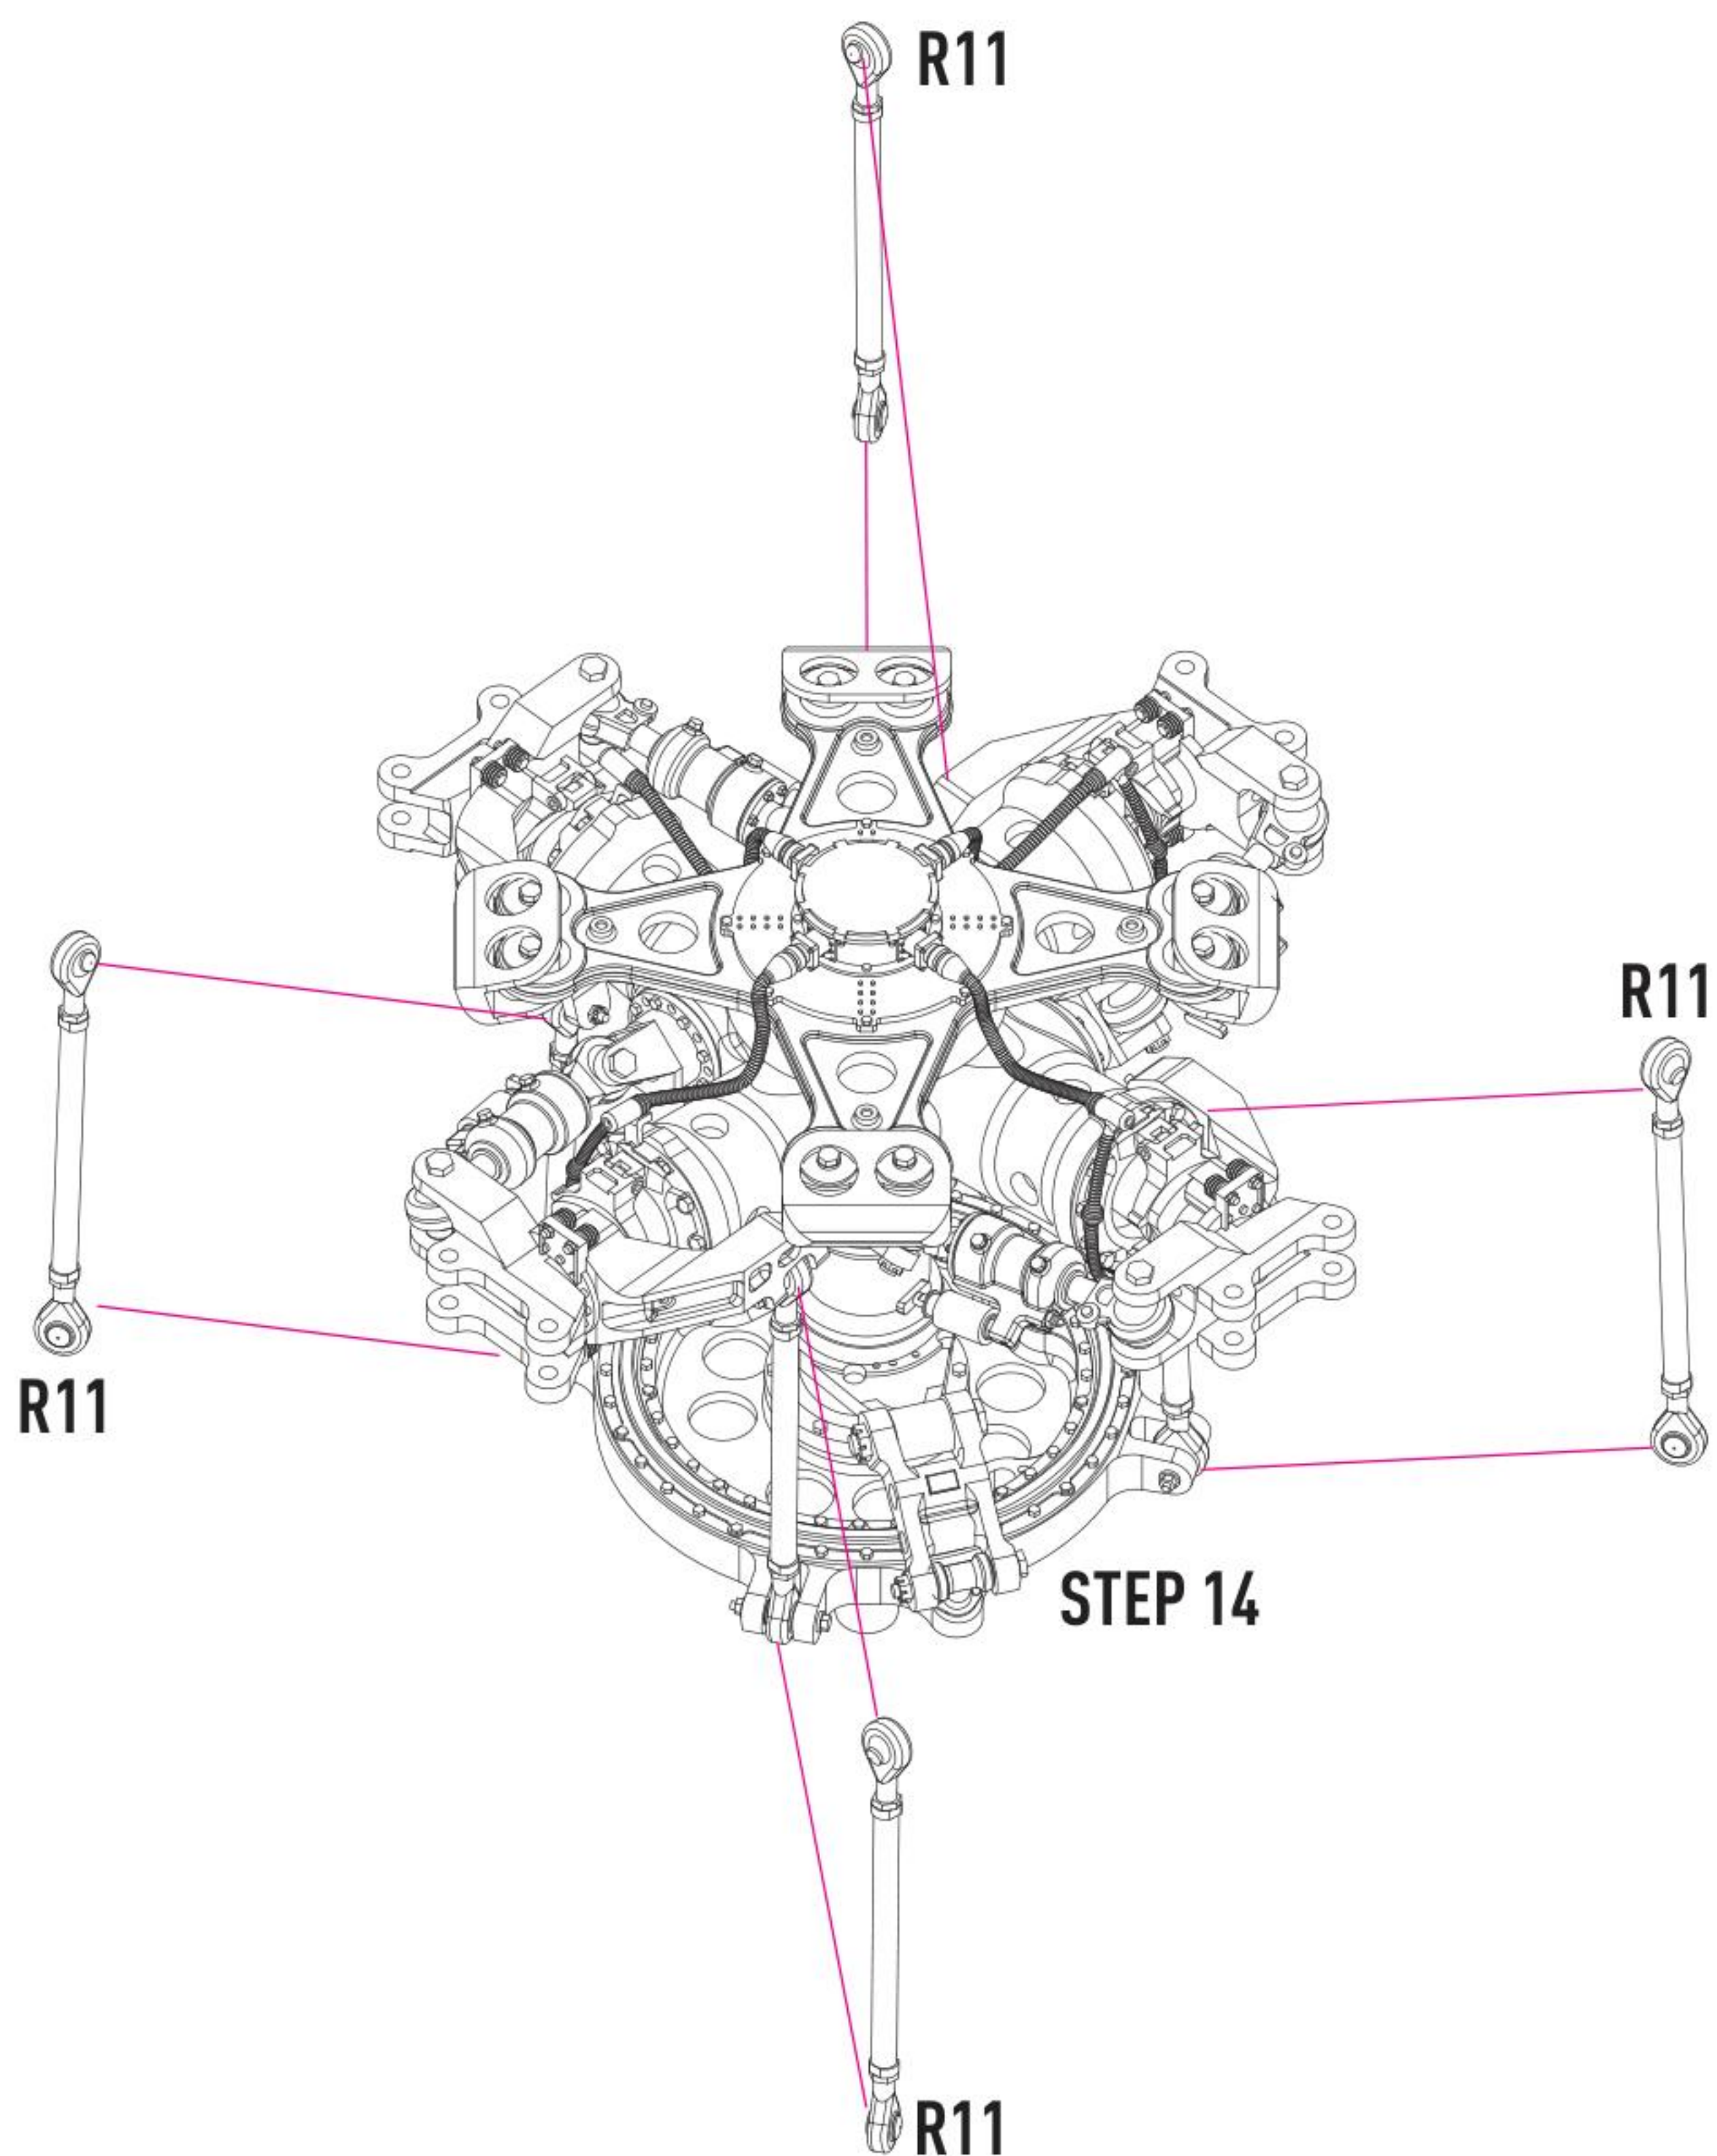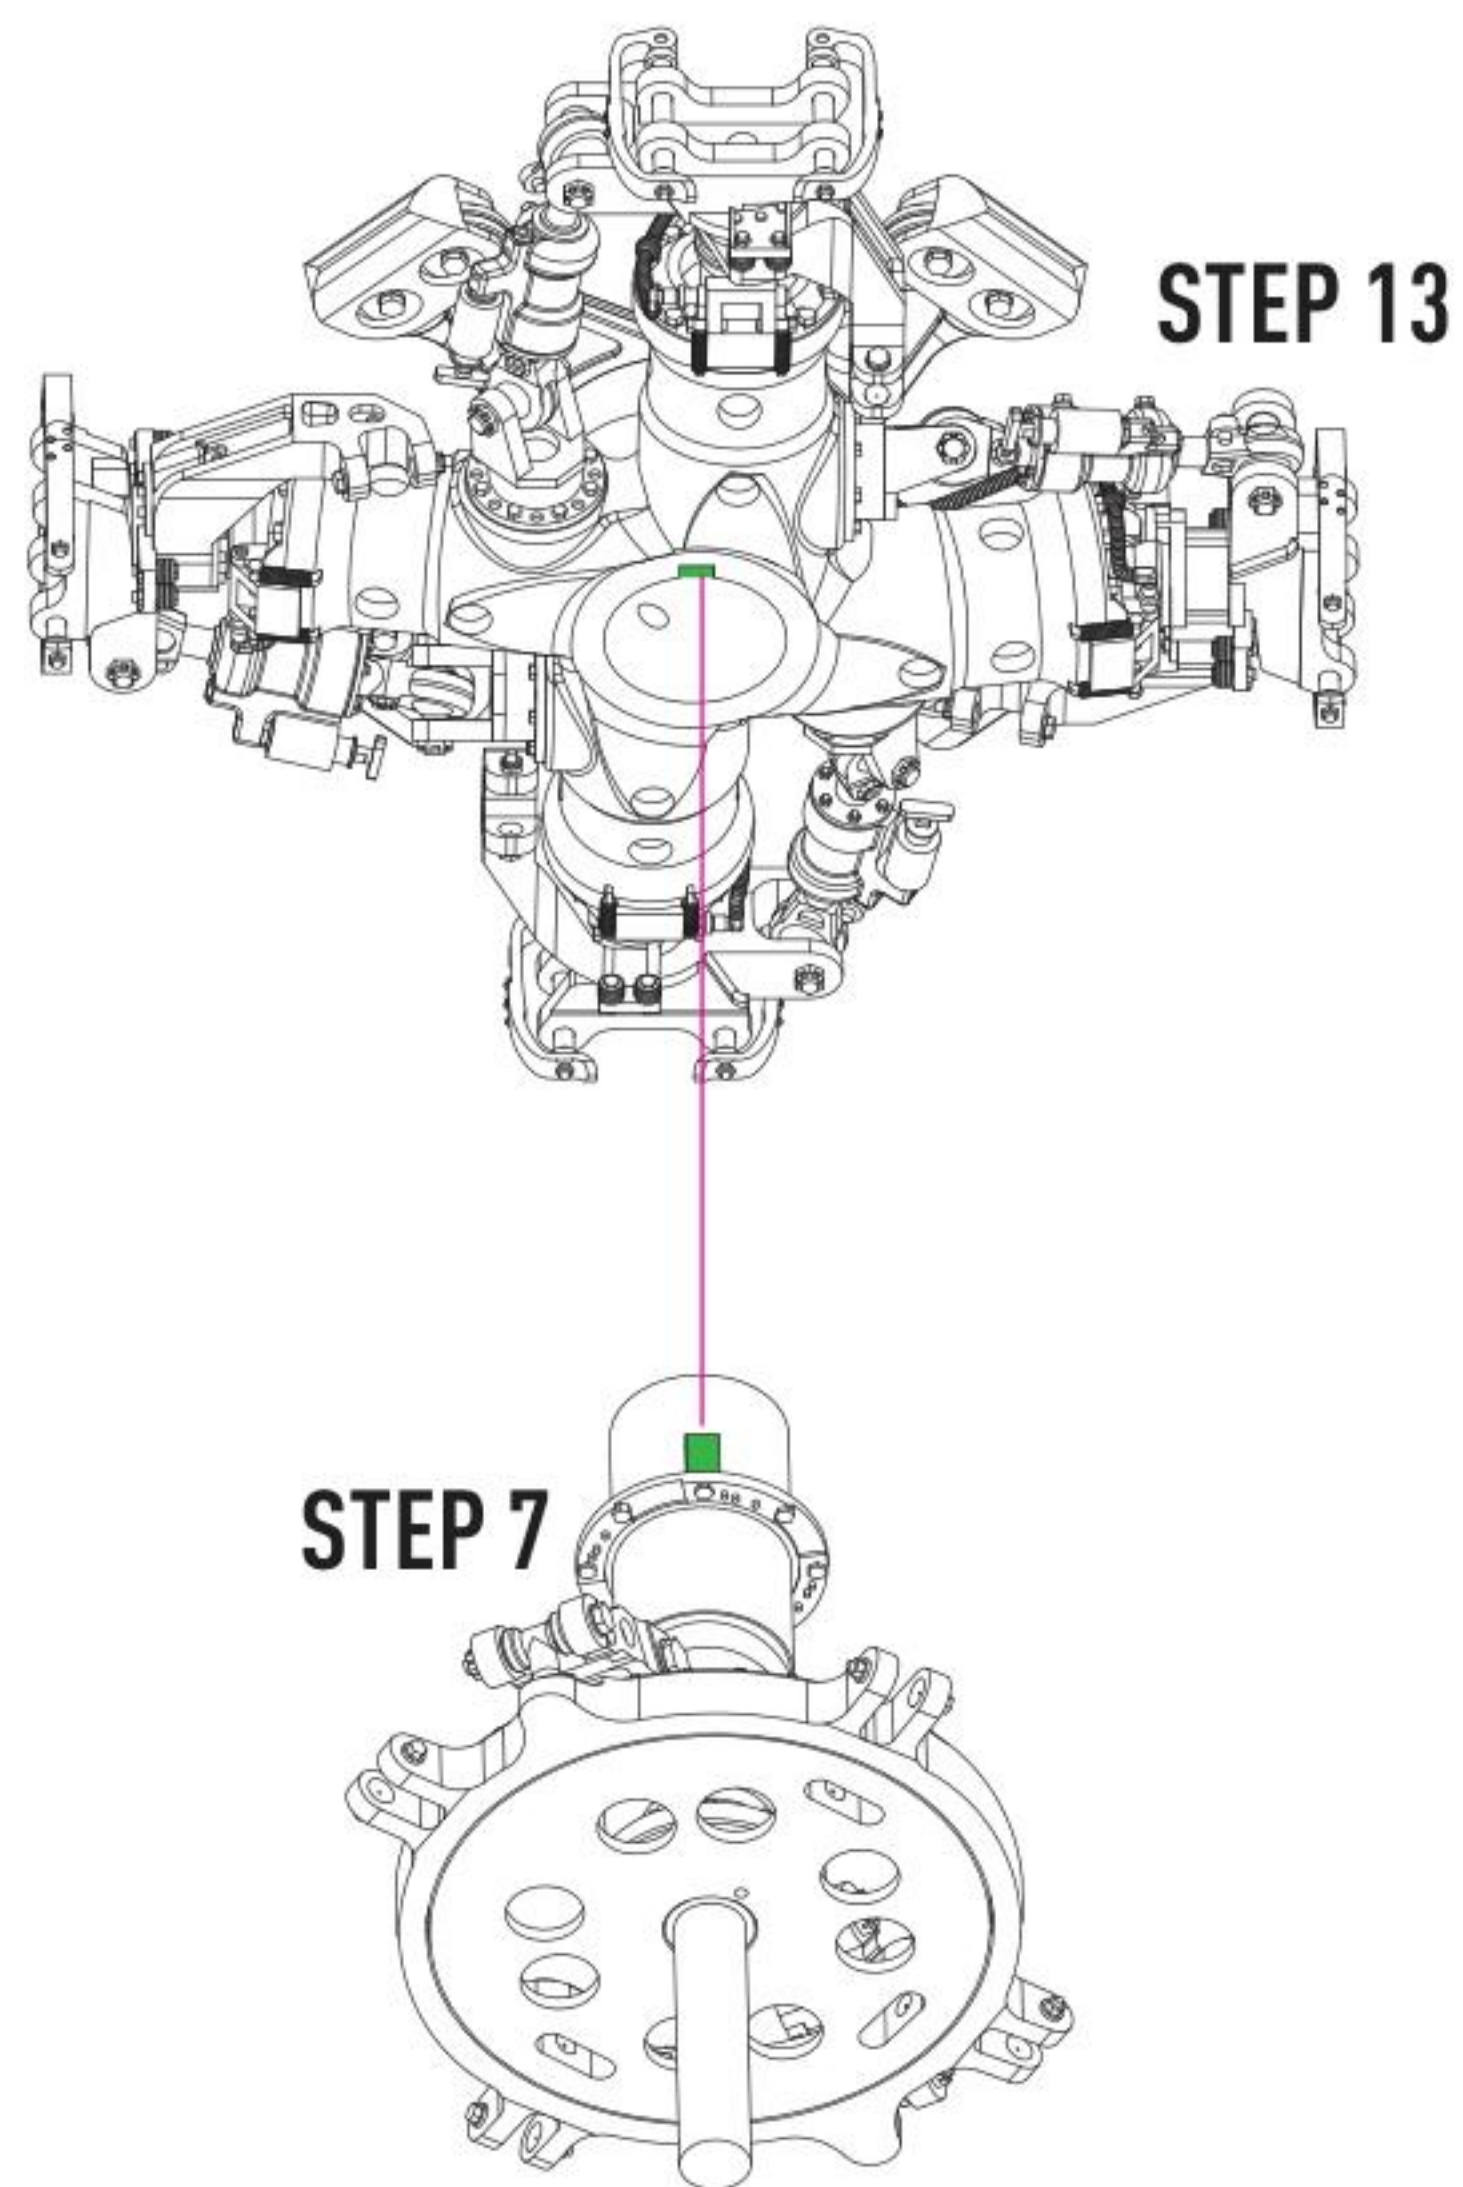


16

FIX THE DETAILS R19 AND STEP 10
WITH A WIRE D = 0,6 MM, L = 5 MM

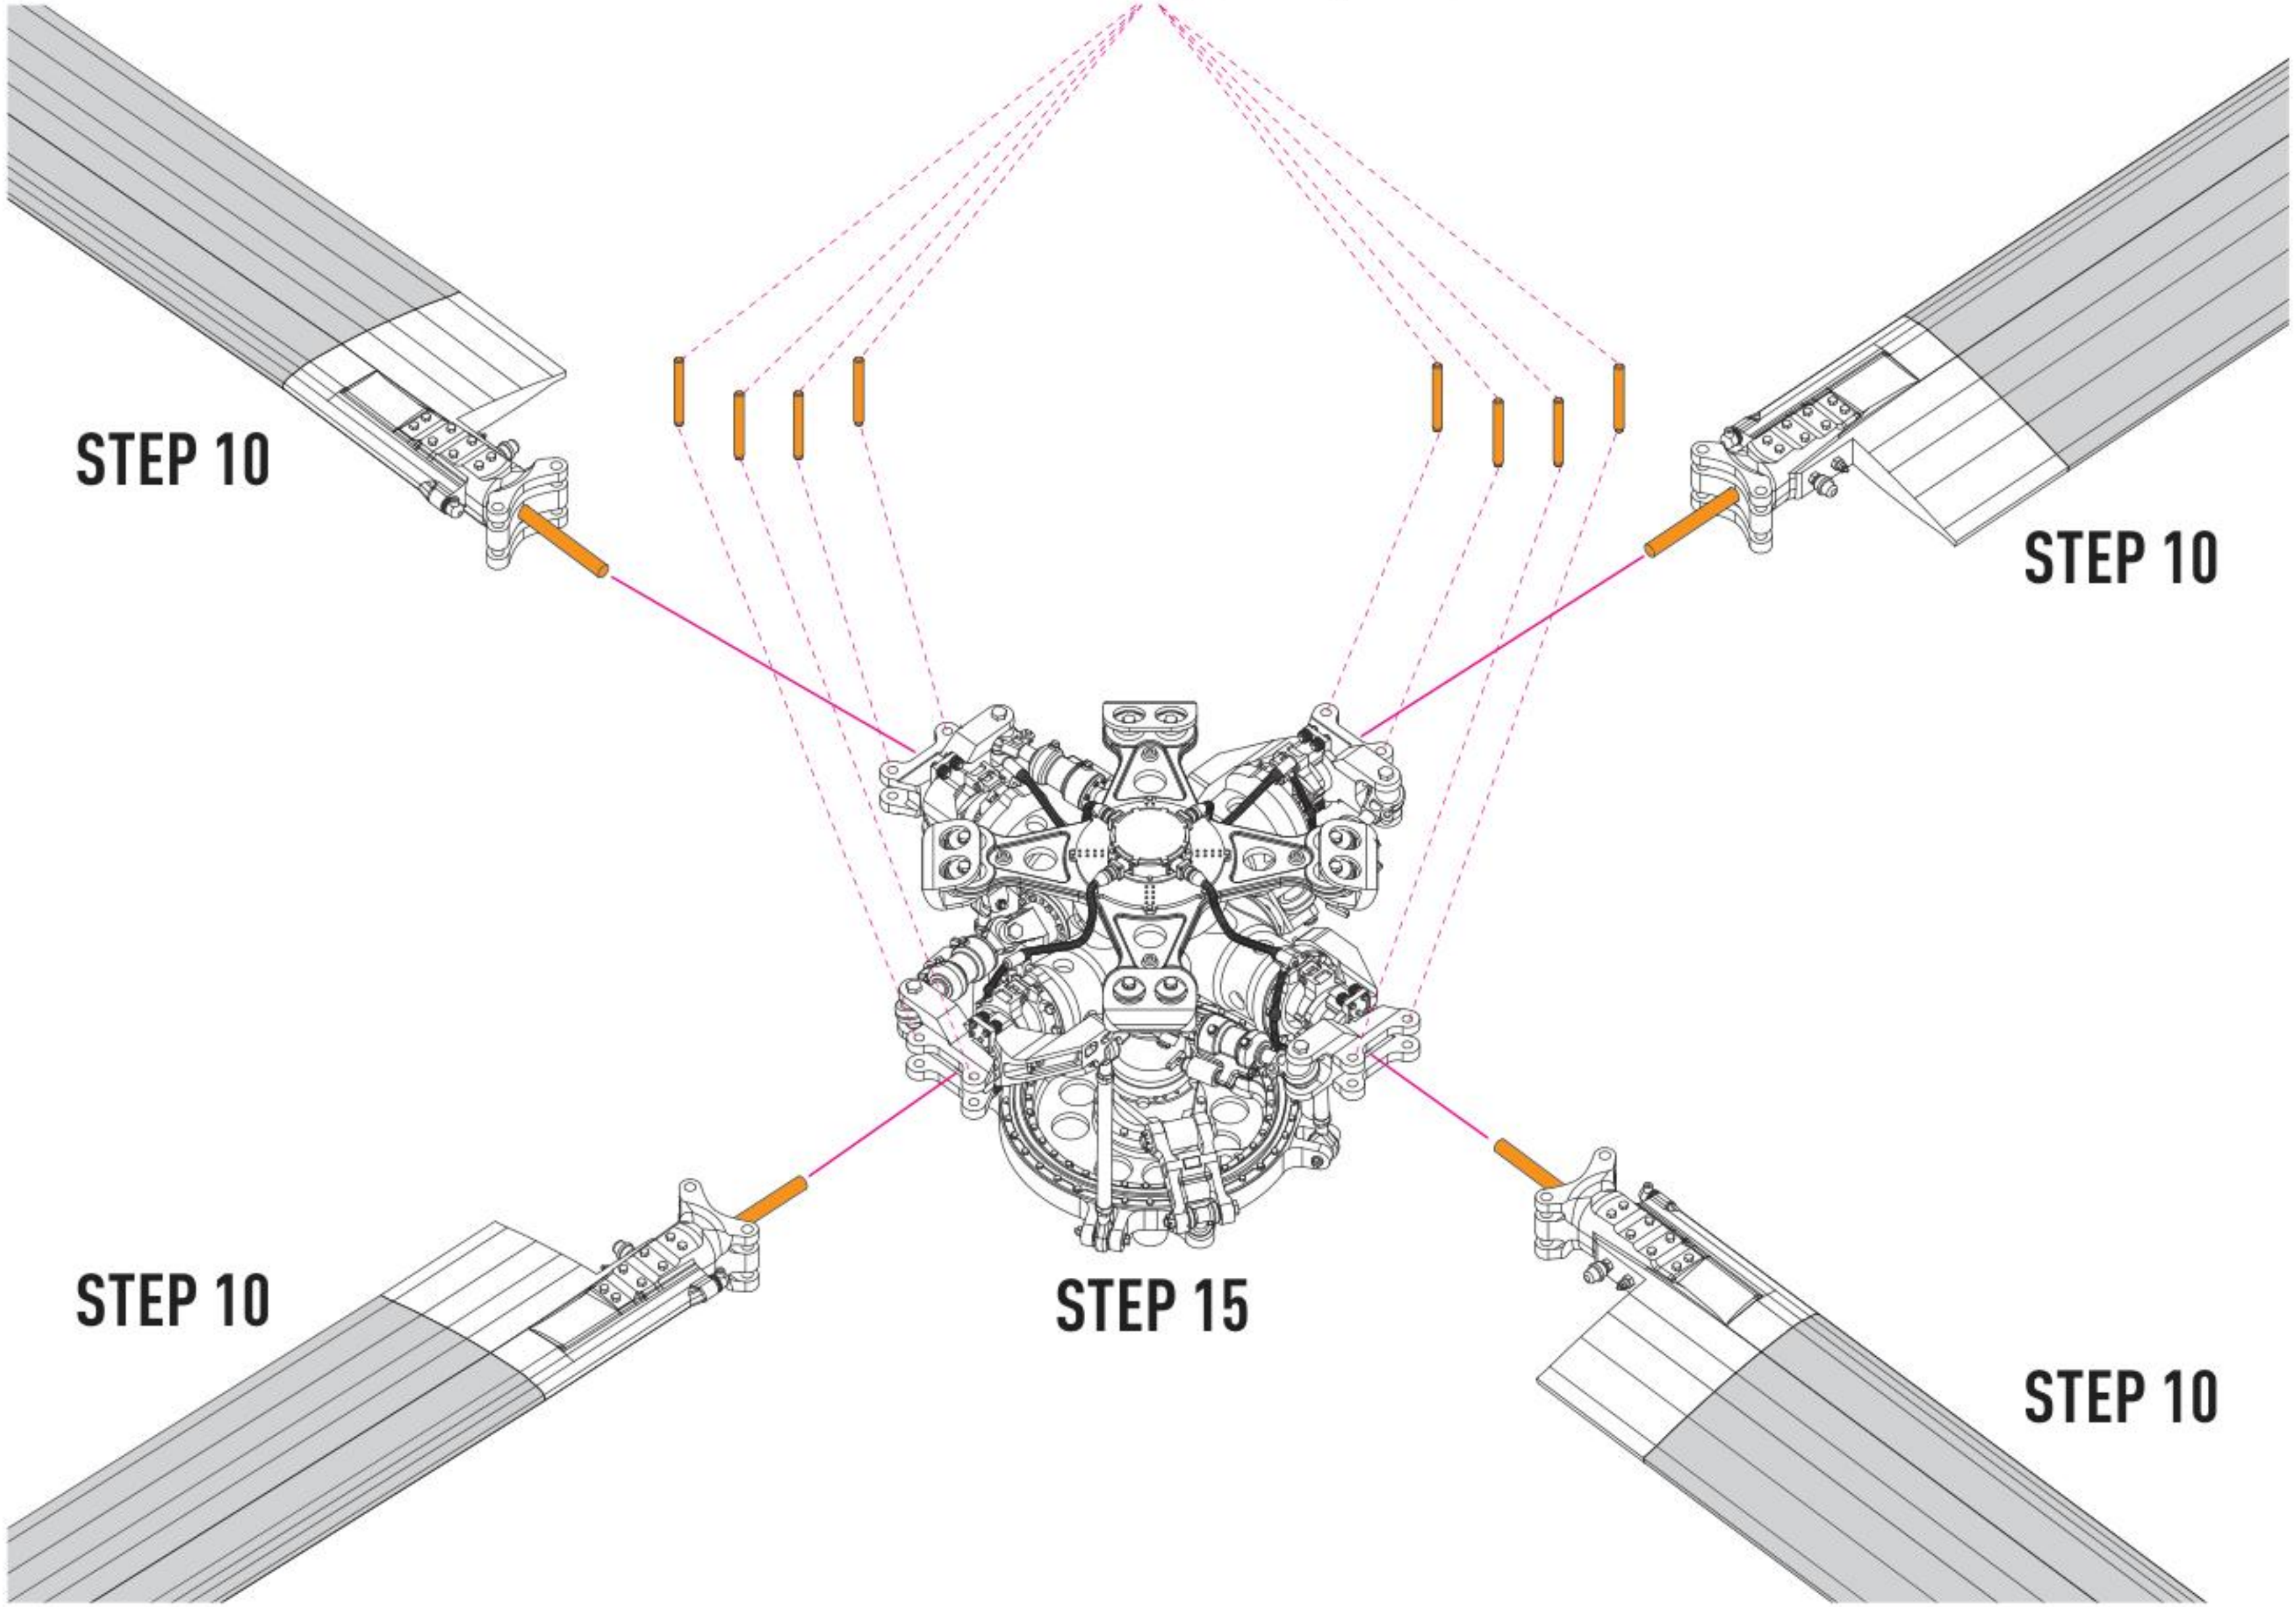


17


BLADES ARE NOT SHOWN IN THIS STEP

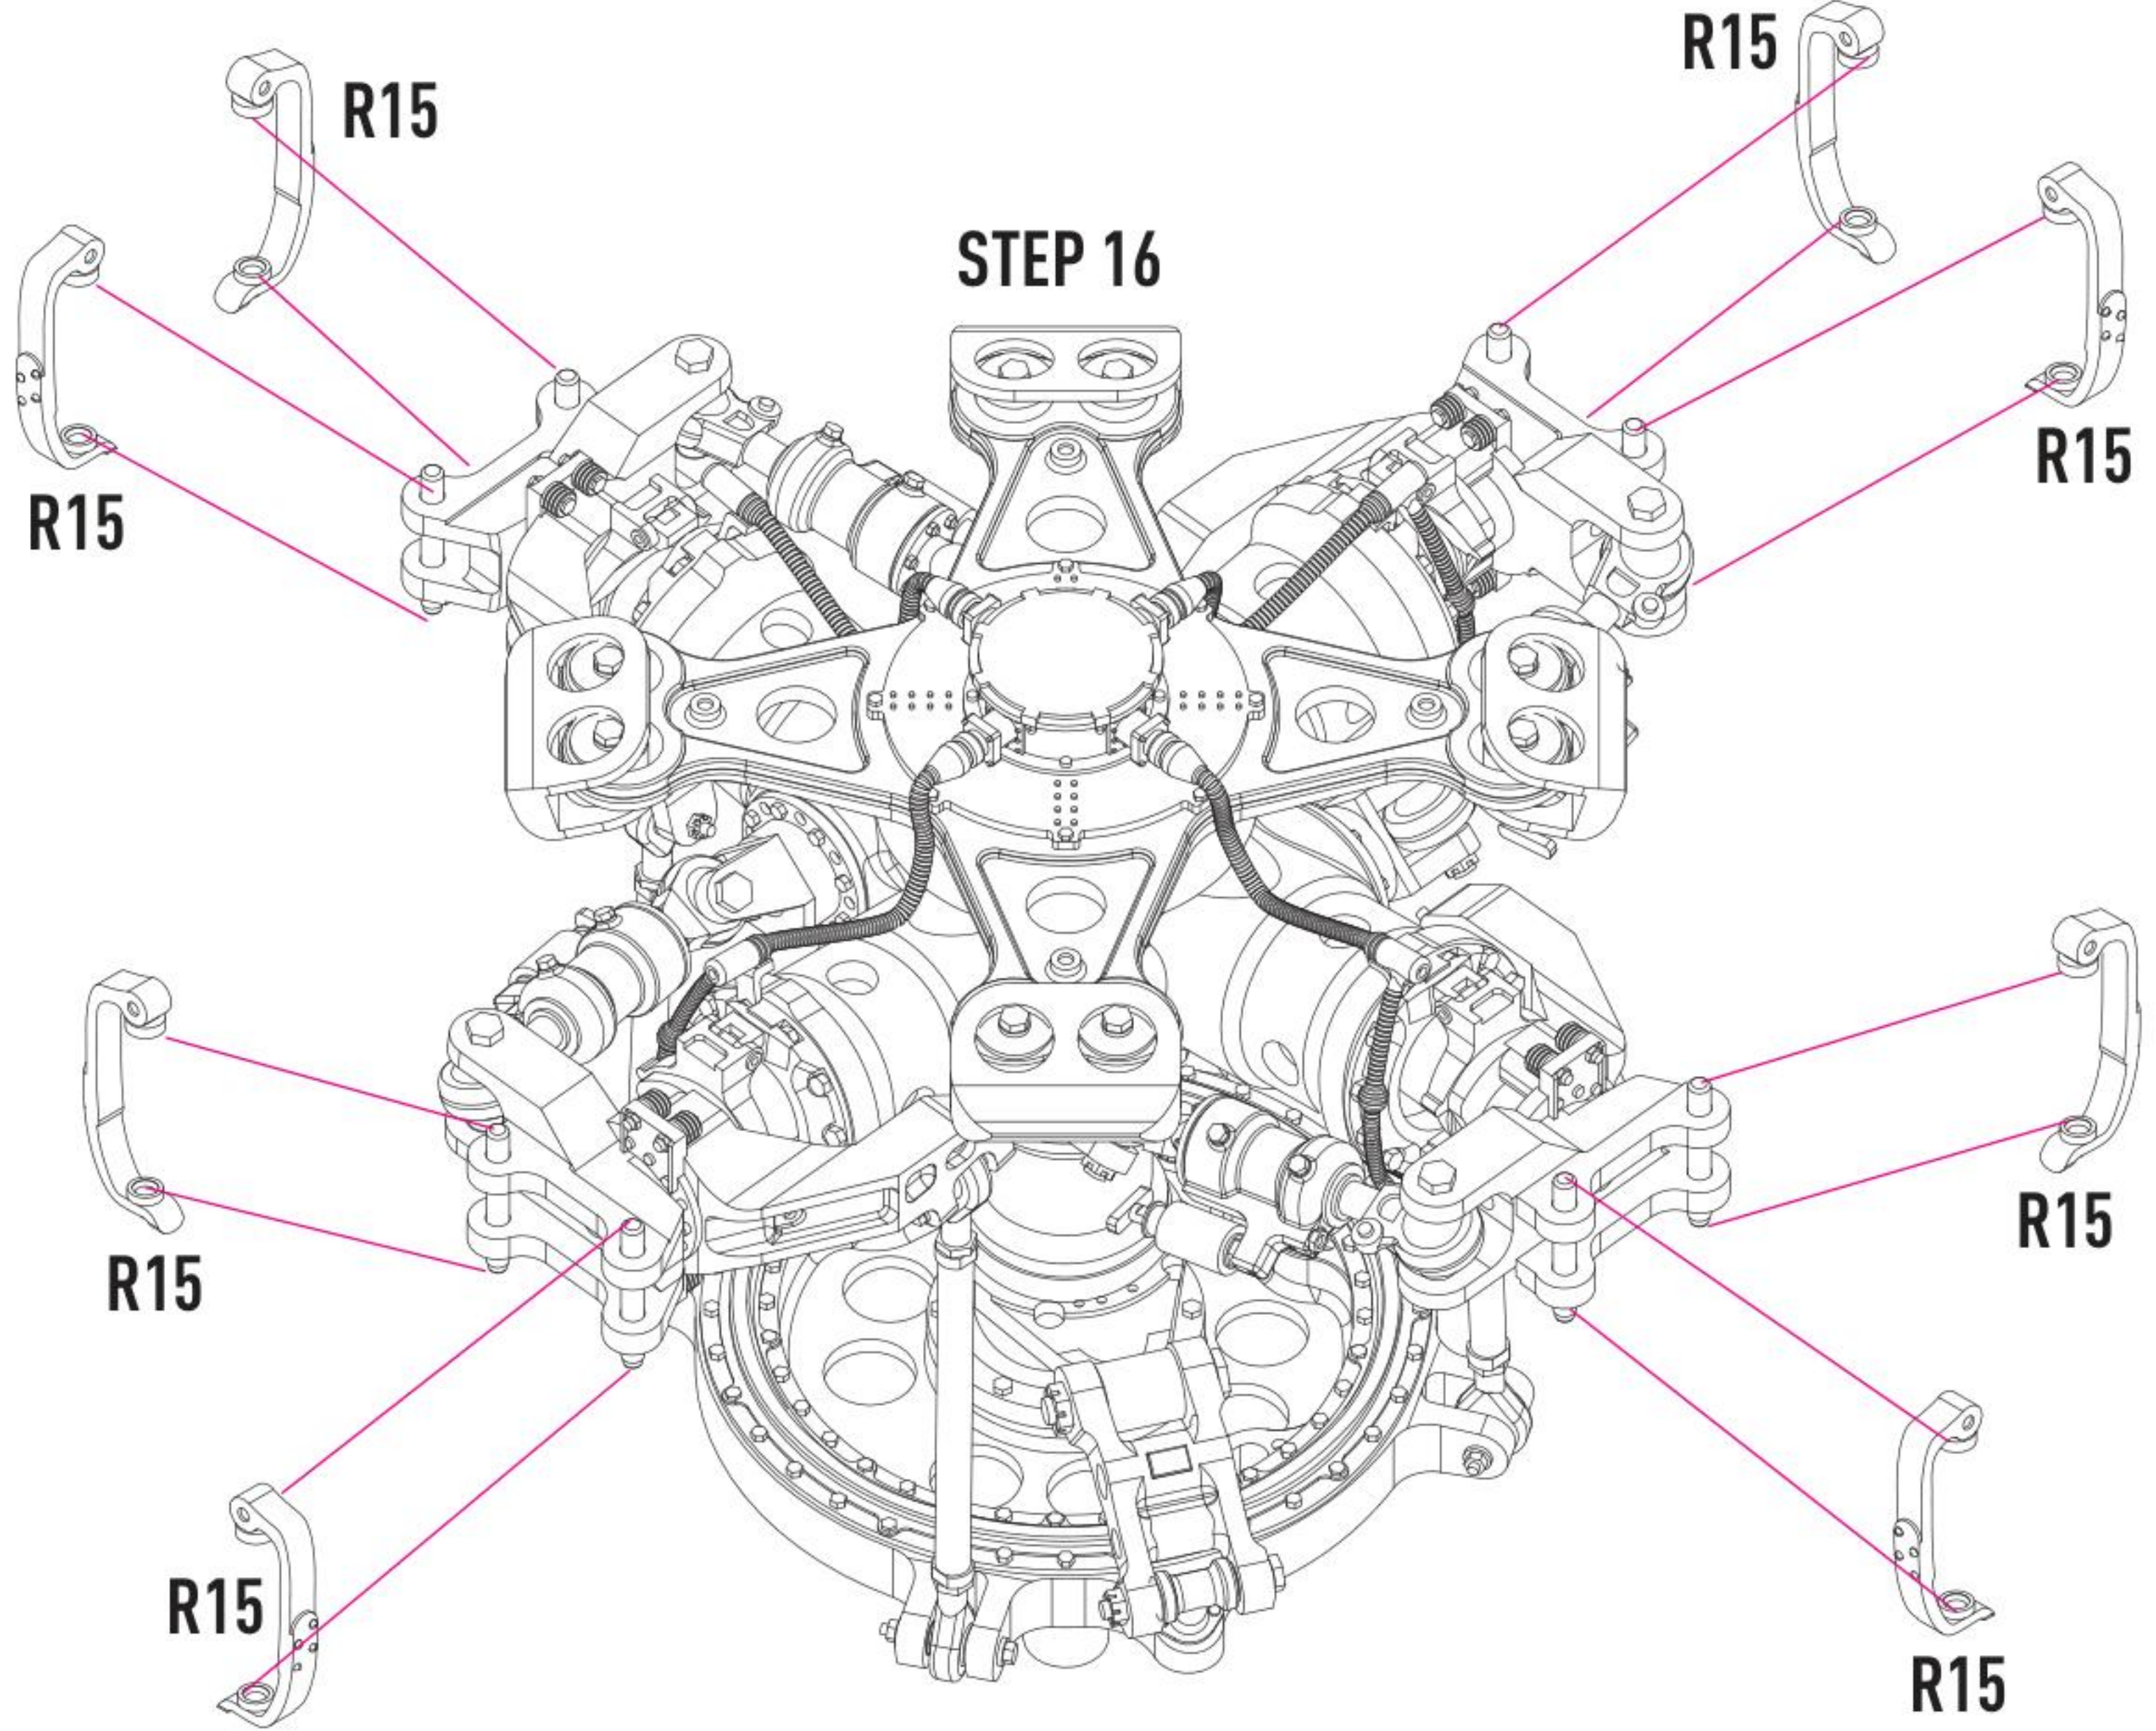

18 REPEAT THIS STEP FOR ALL BLADES

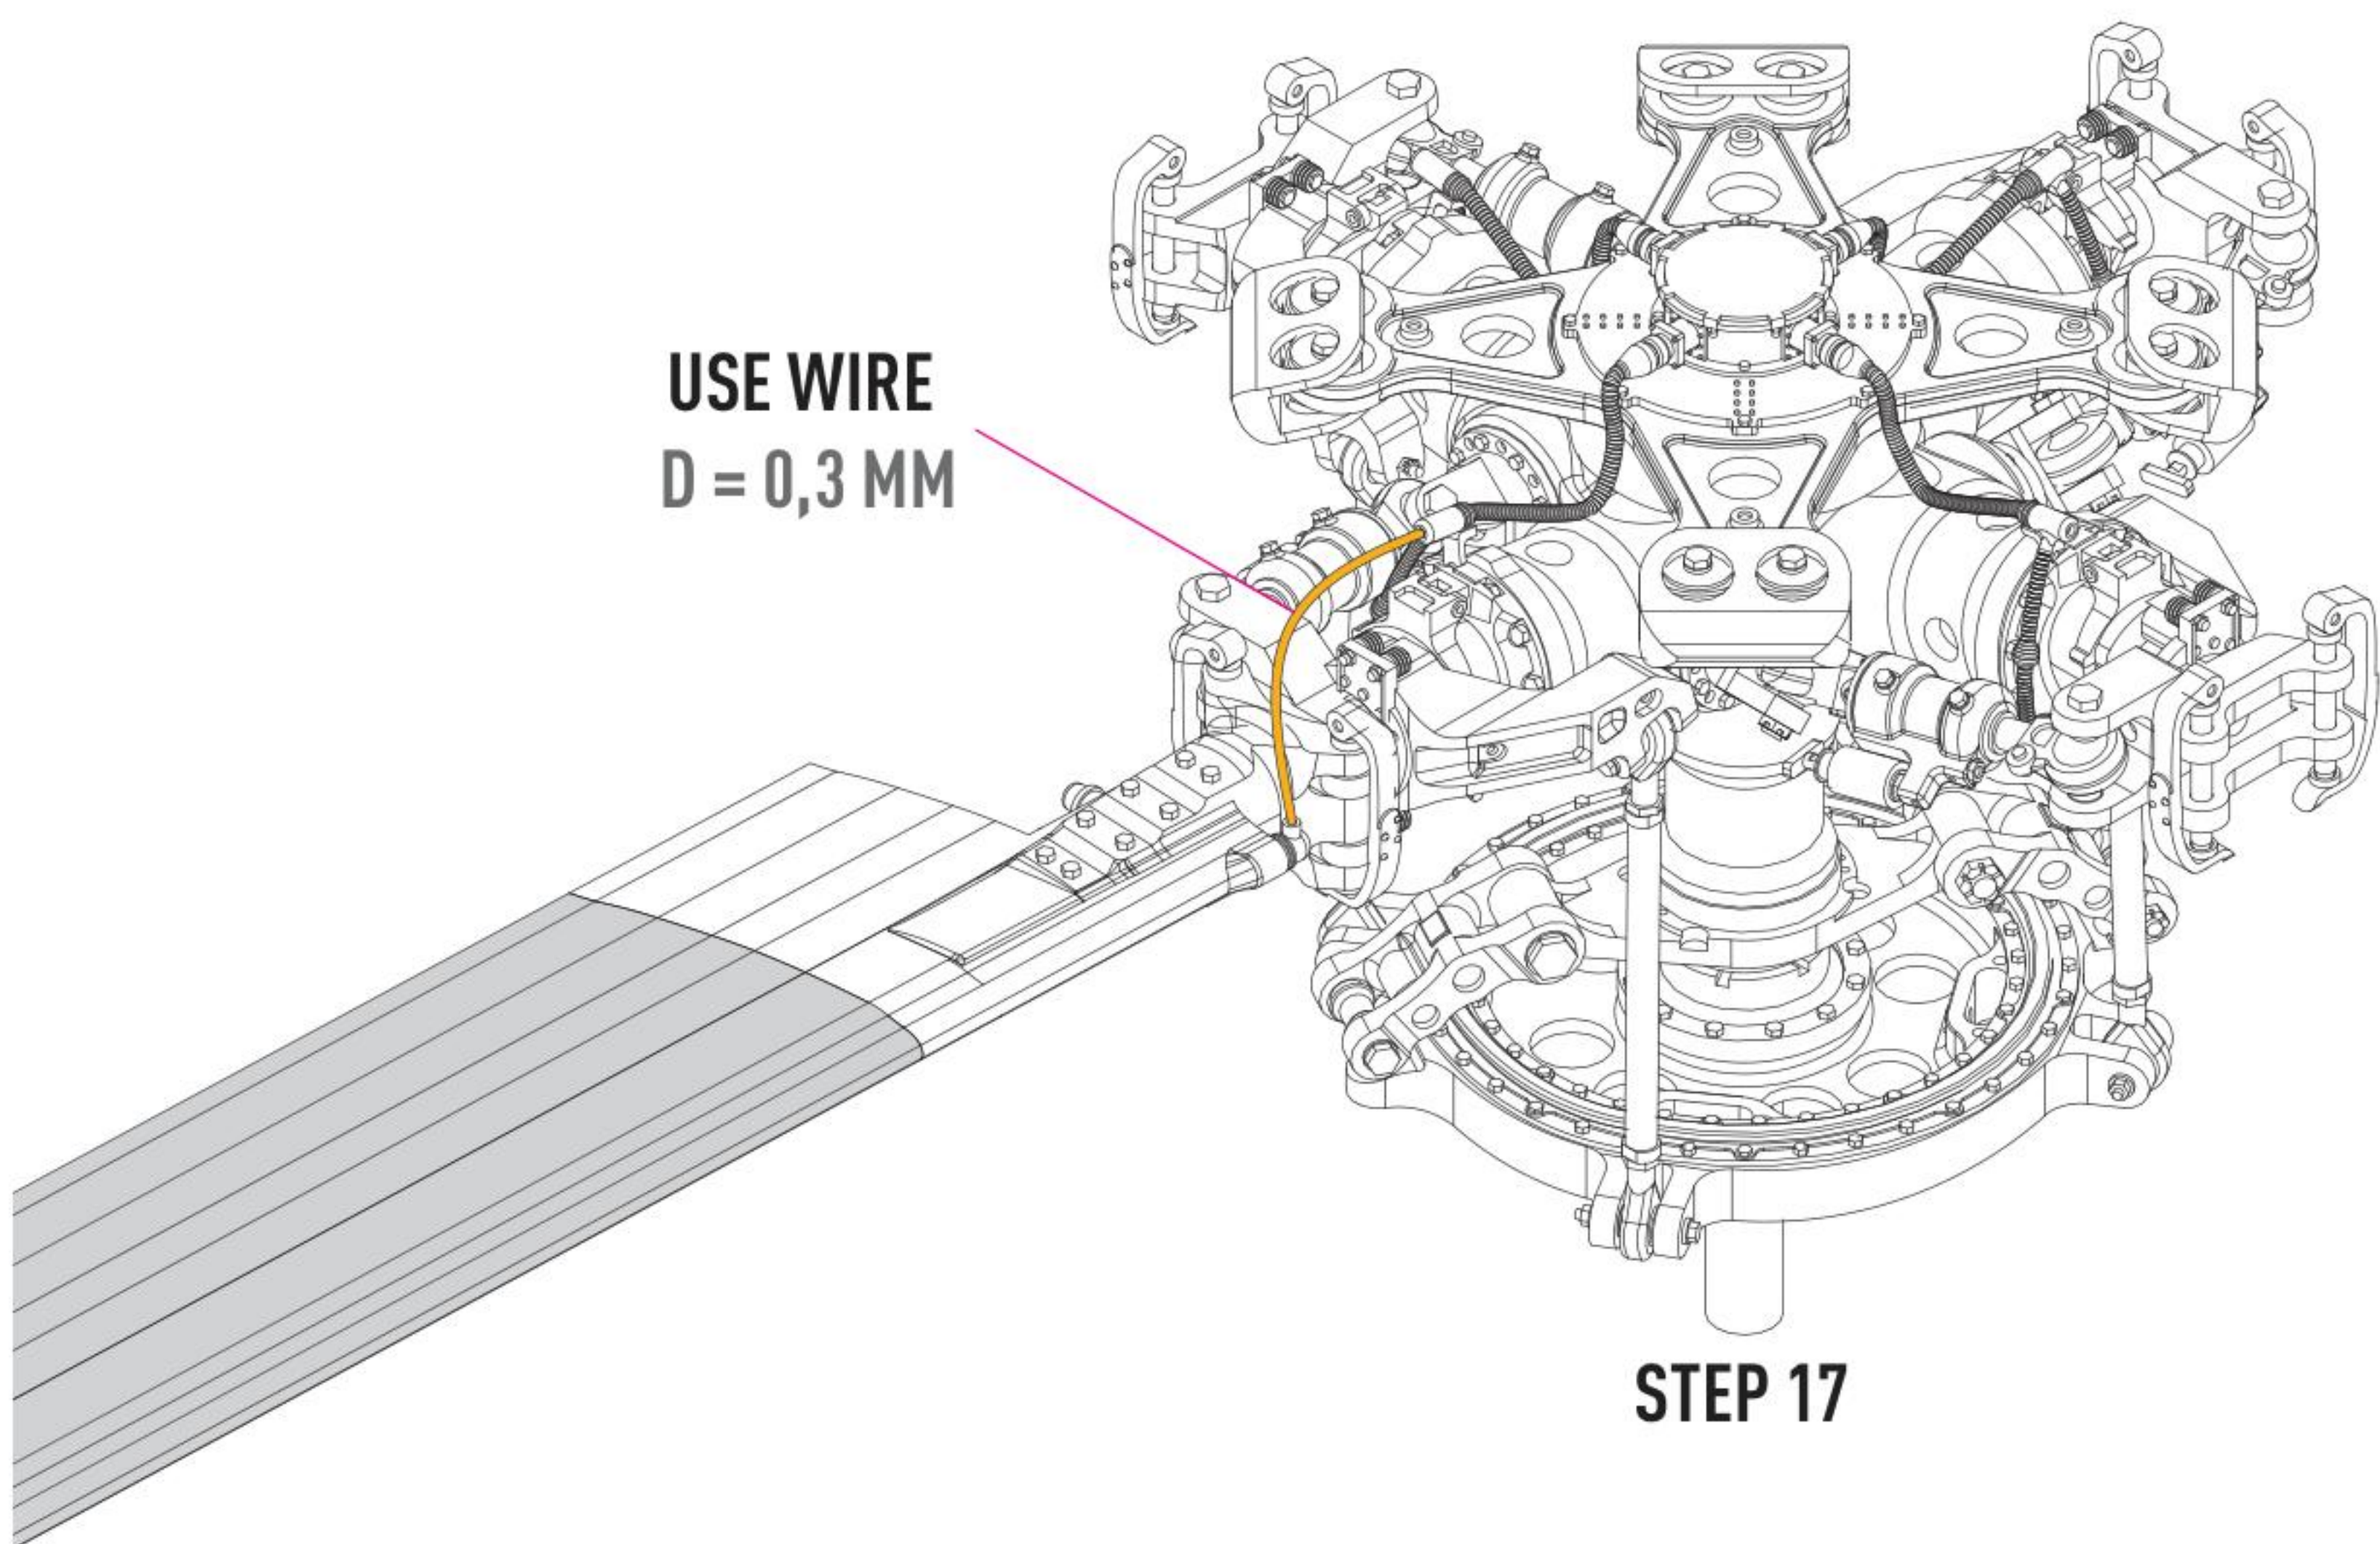


19

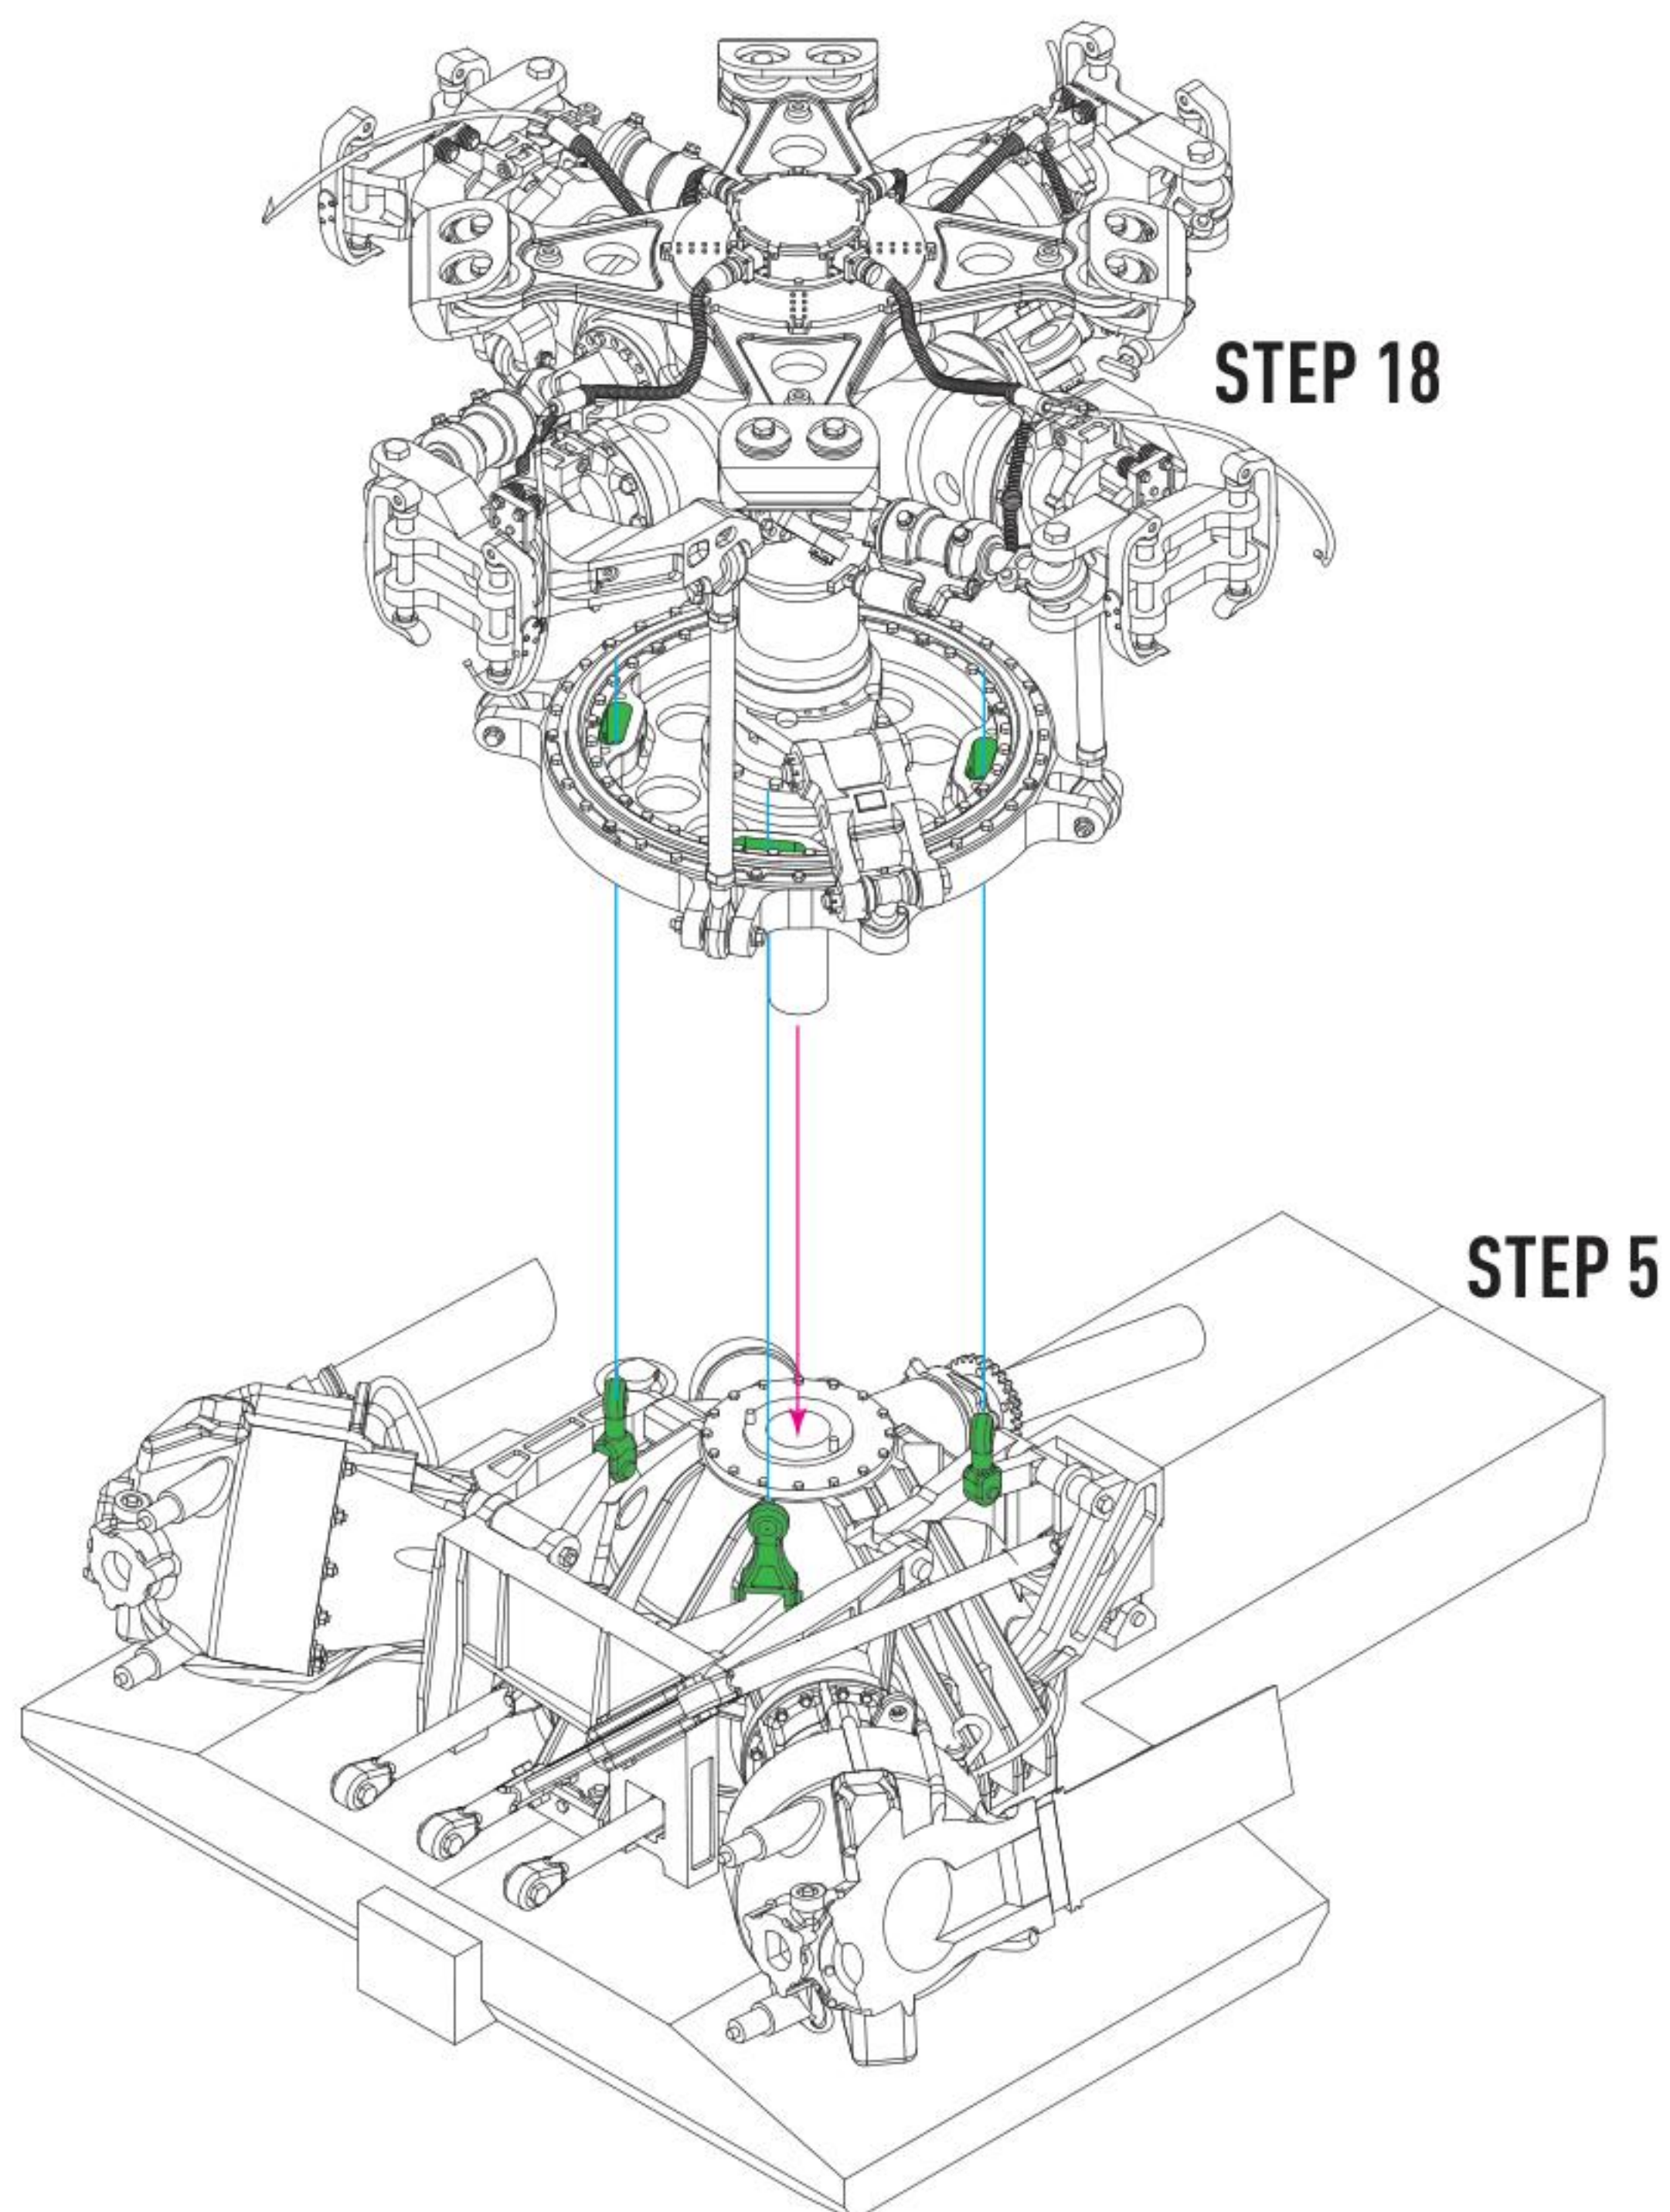


DECAL INSTRUCTION


PART R1
FRONT VIEW

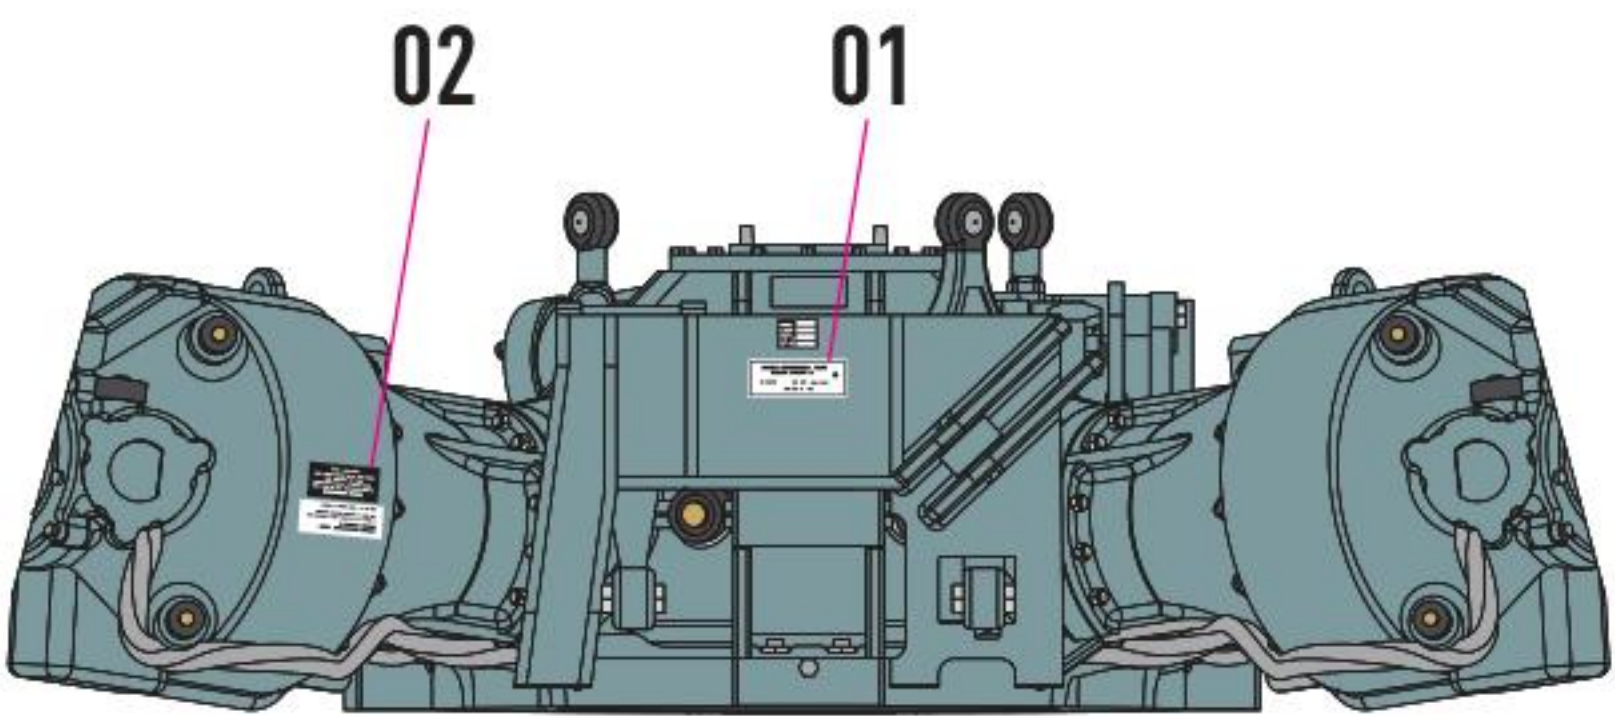


PART R1
TOP VIEW

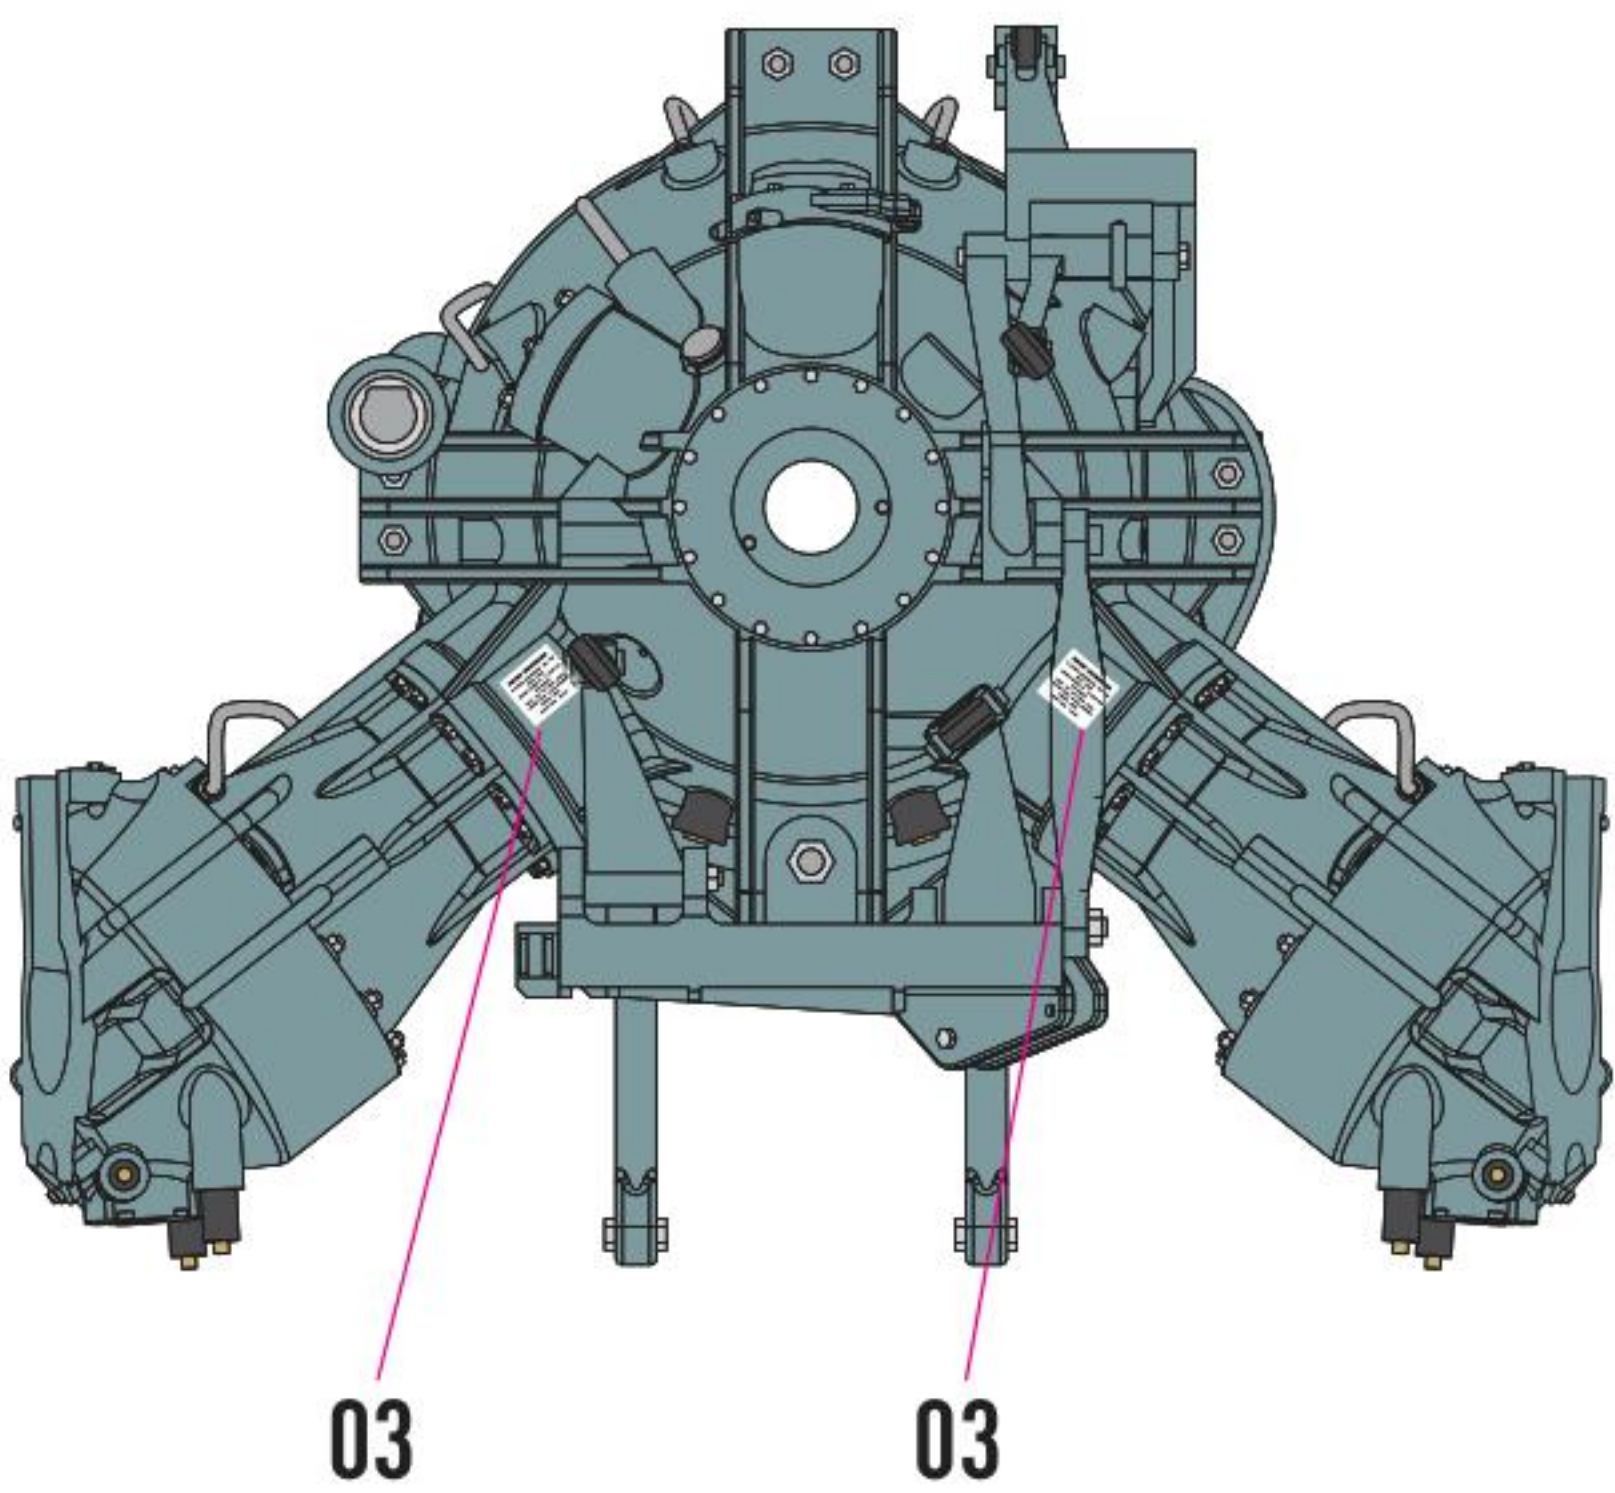


R18+R14
BOTTOM VIEW

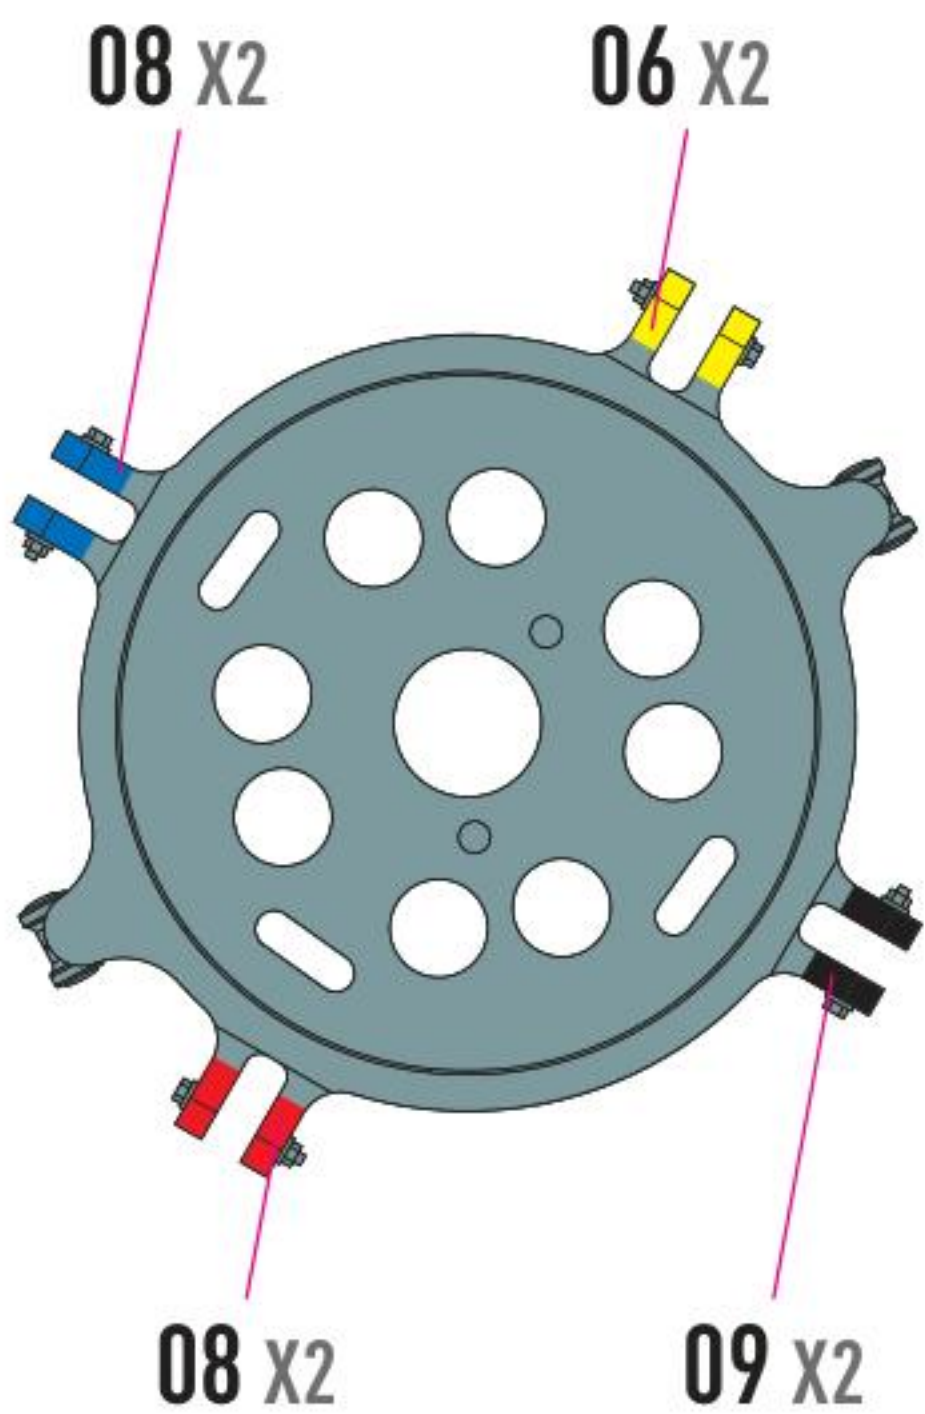


R18+R14
TOP VIEW

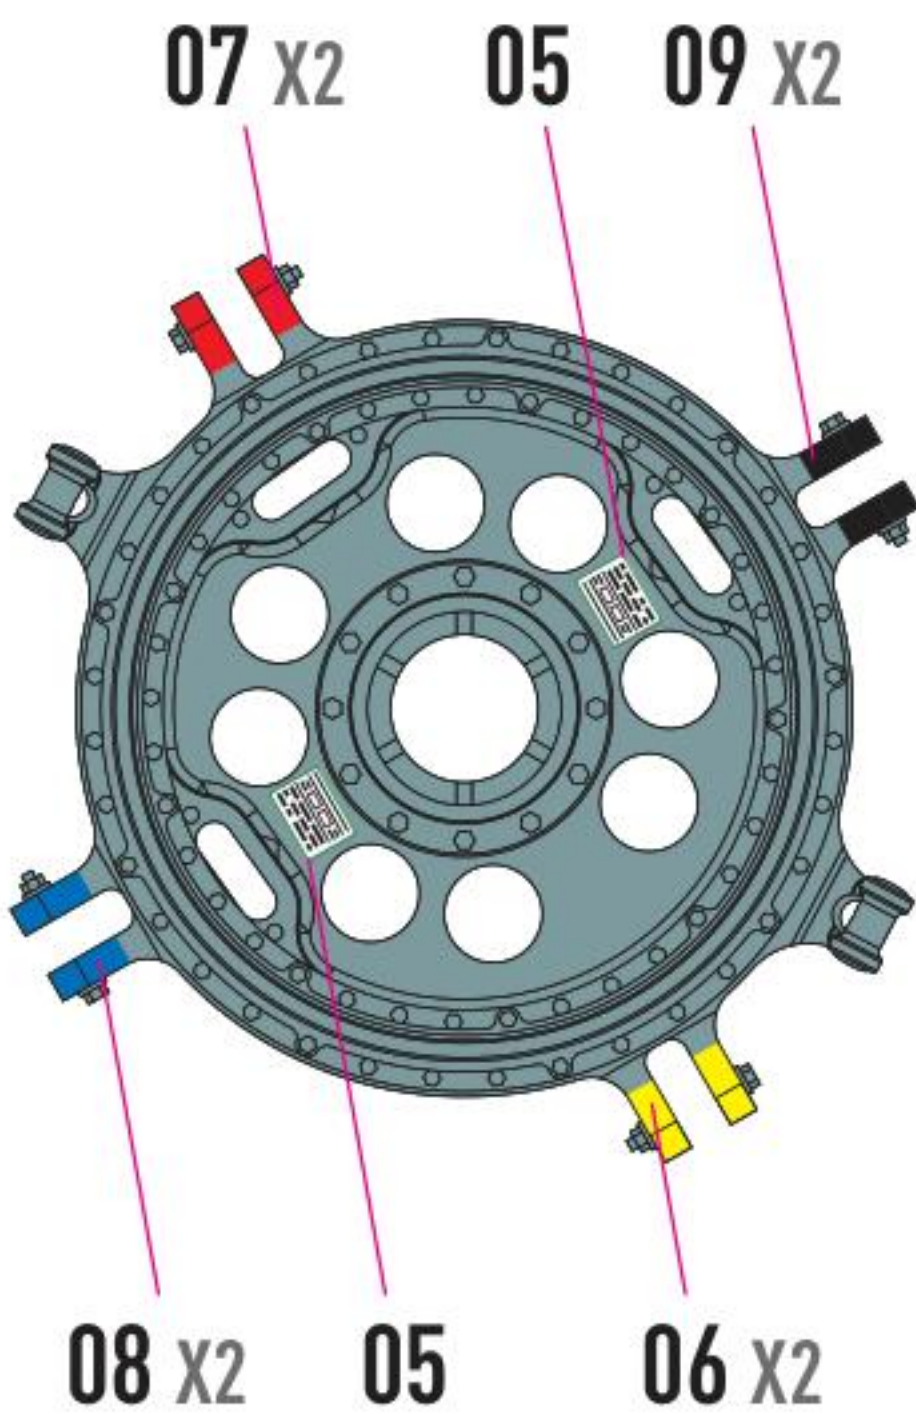


R18+R14
BACK VIEW

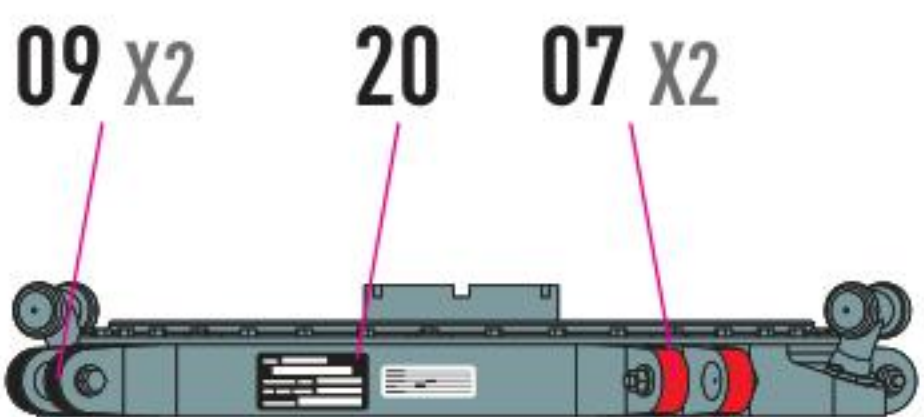


R18+R14
RIGHT VIEW


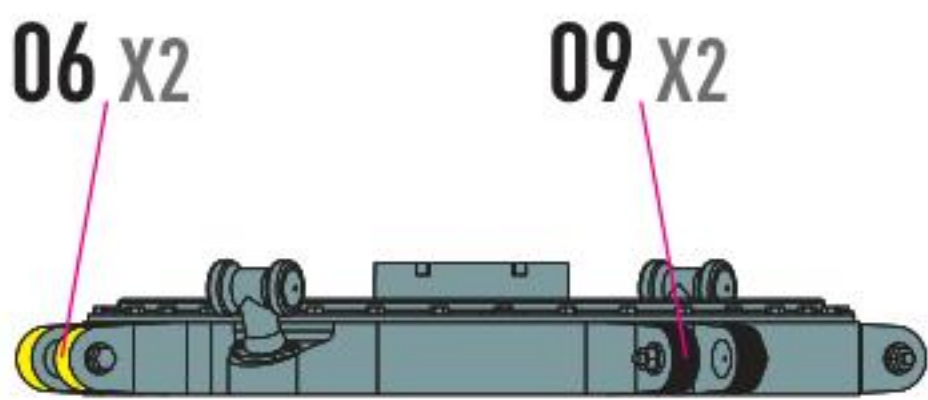


R18+R14
LEFT VIEW

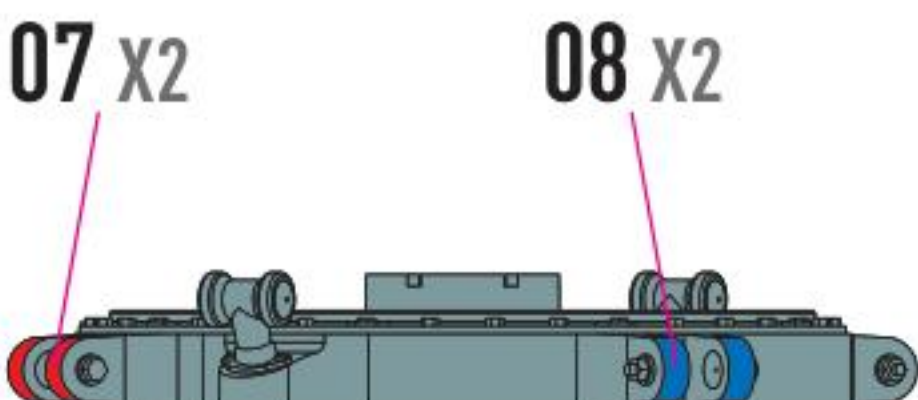

R18+R14
FRONT VIEW

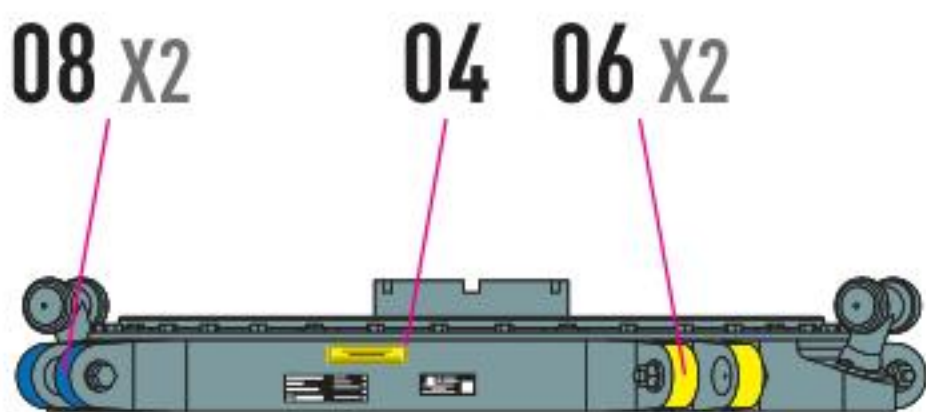

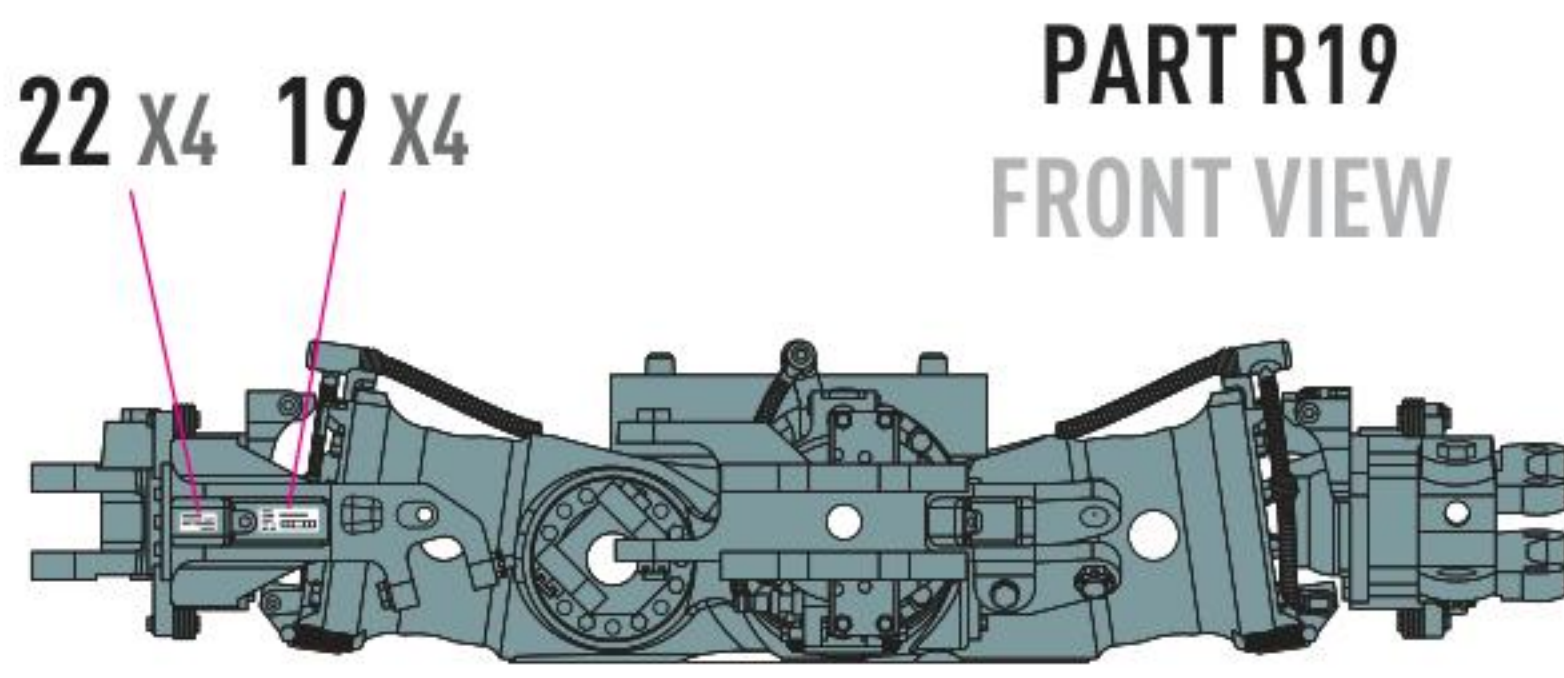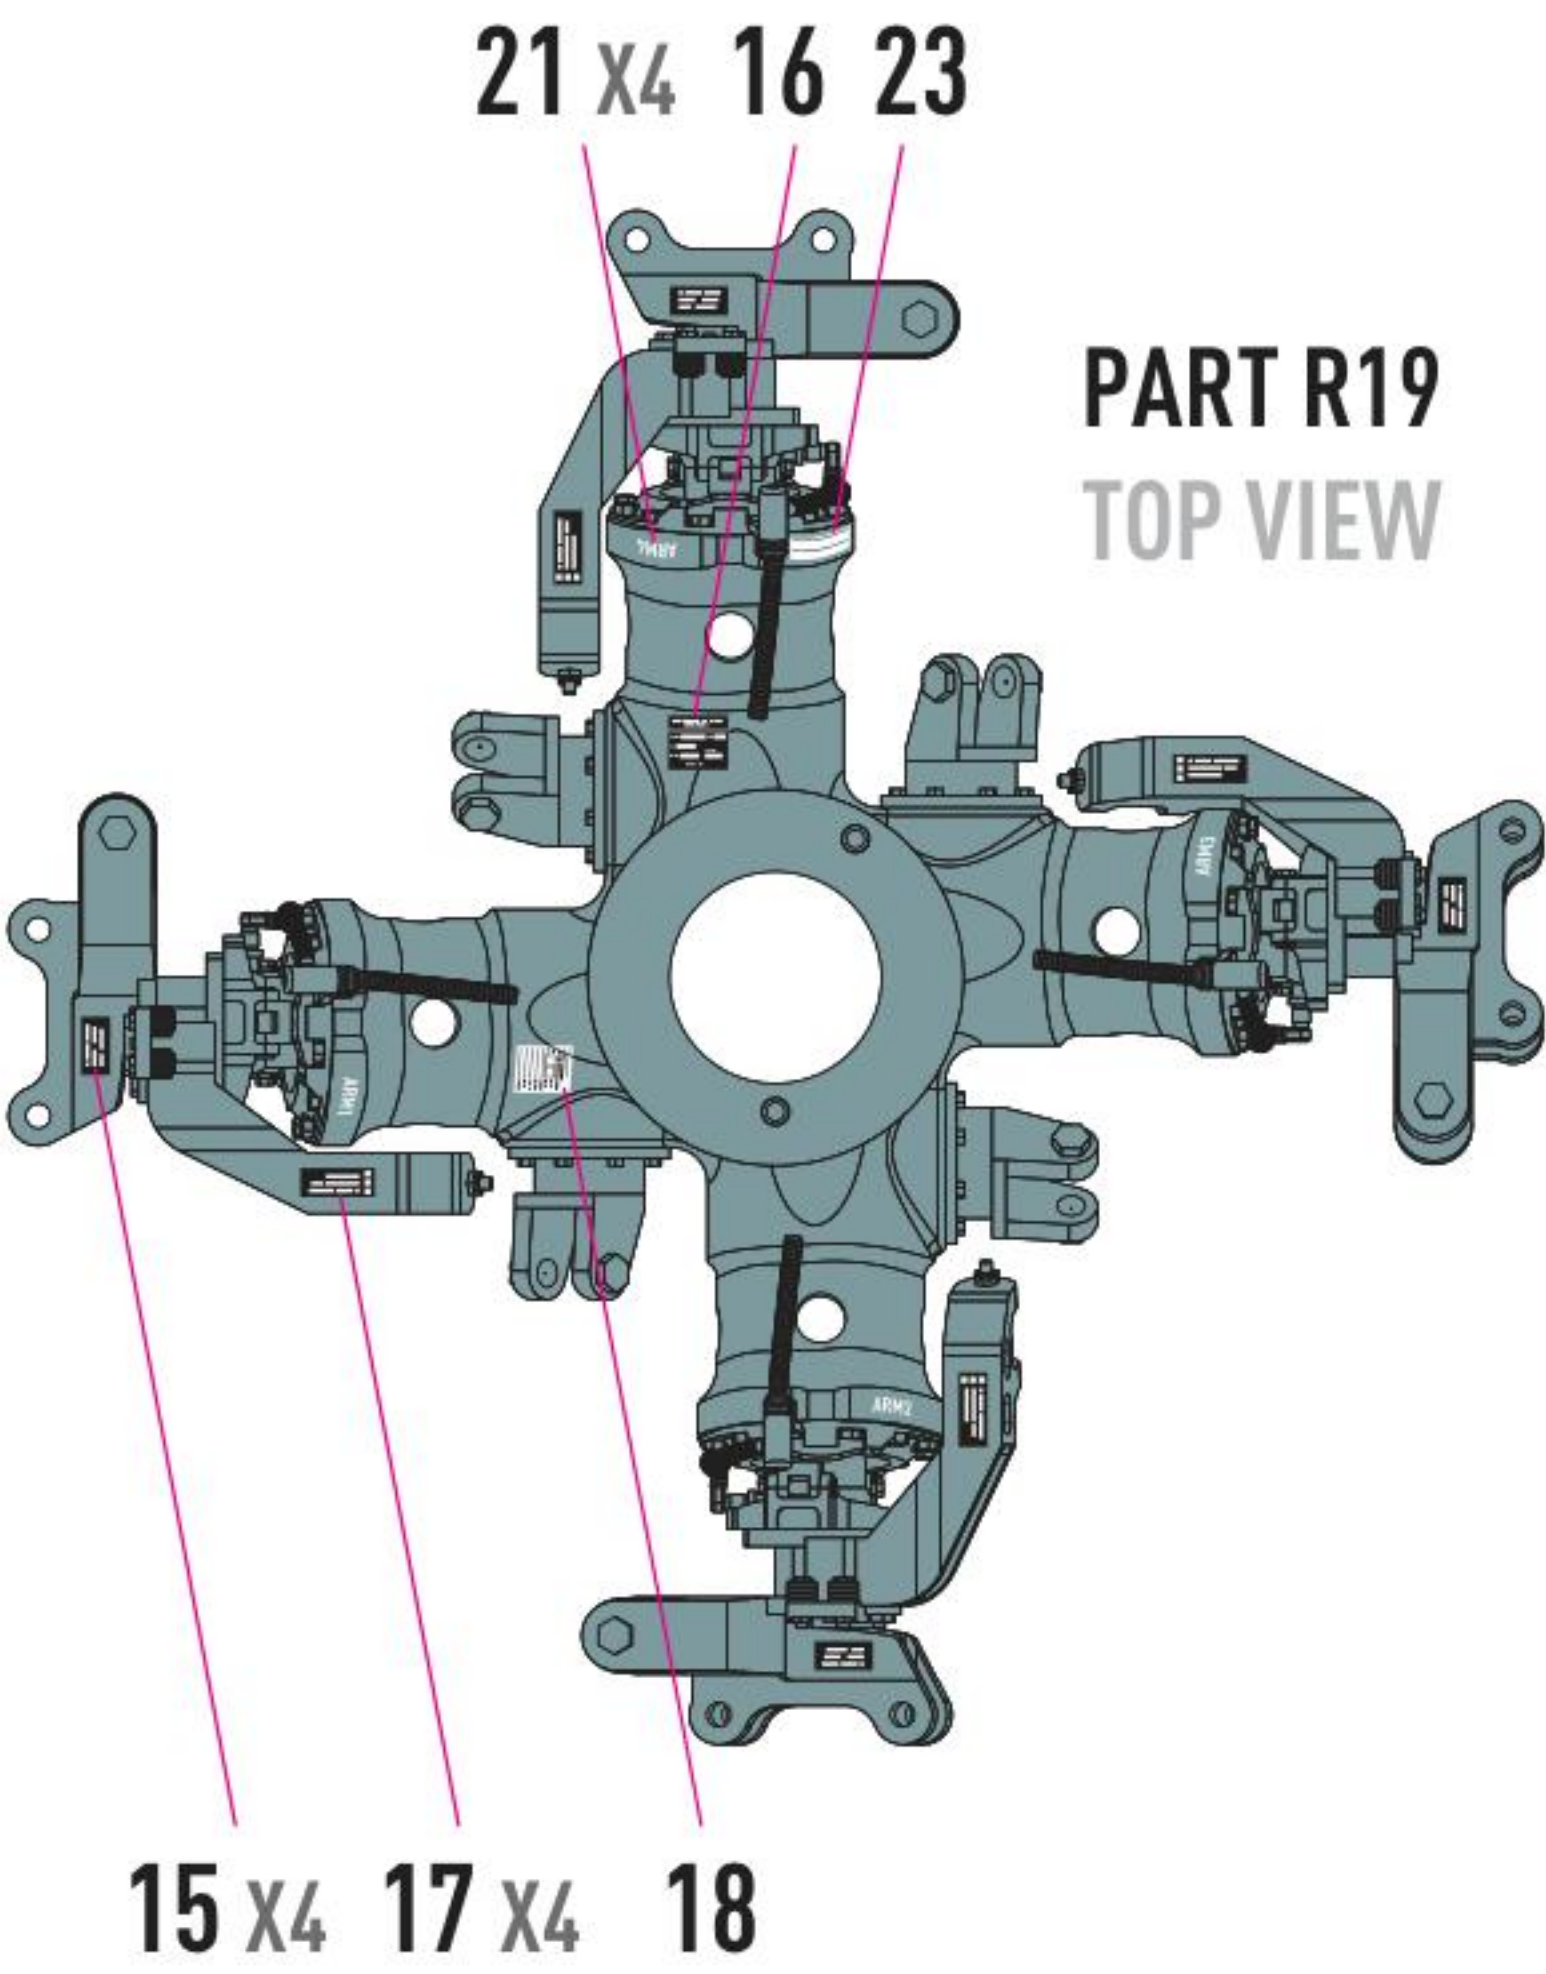

	COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
	LIGHT GHOST GRAY	H308	C308
	DARK GHOST GRAY	H307	C307

