




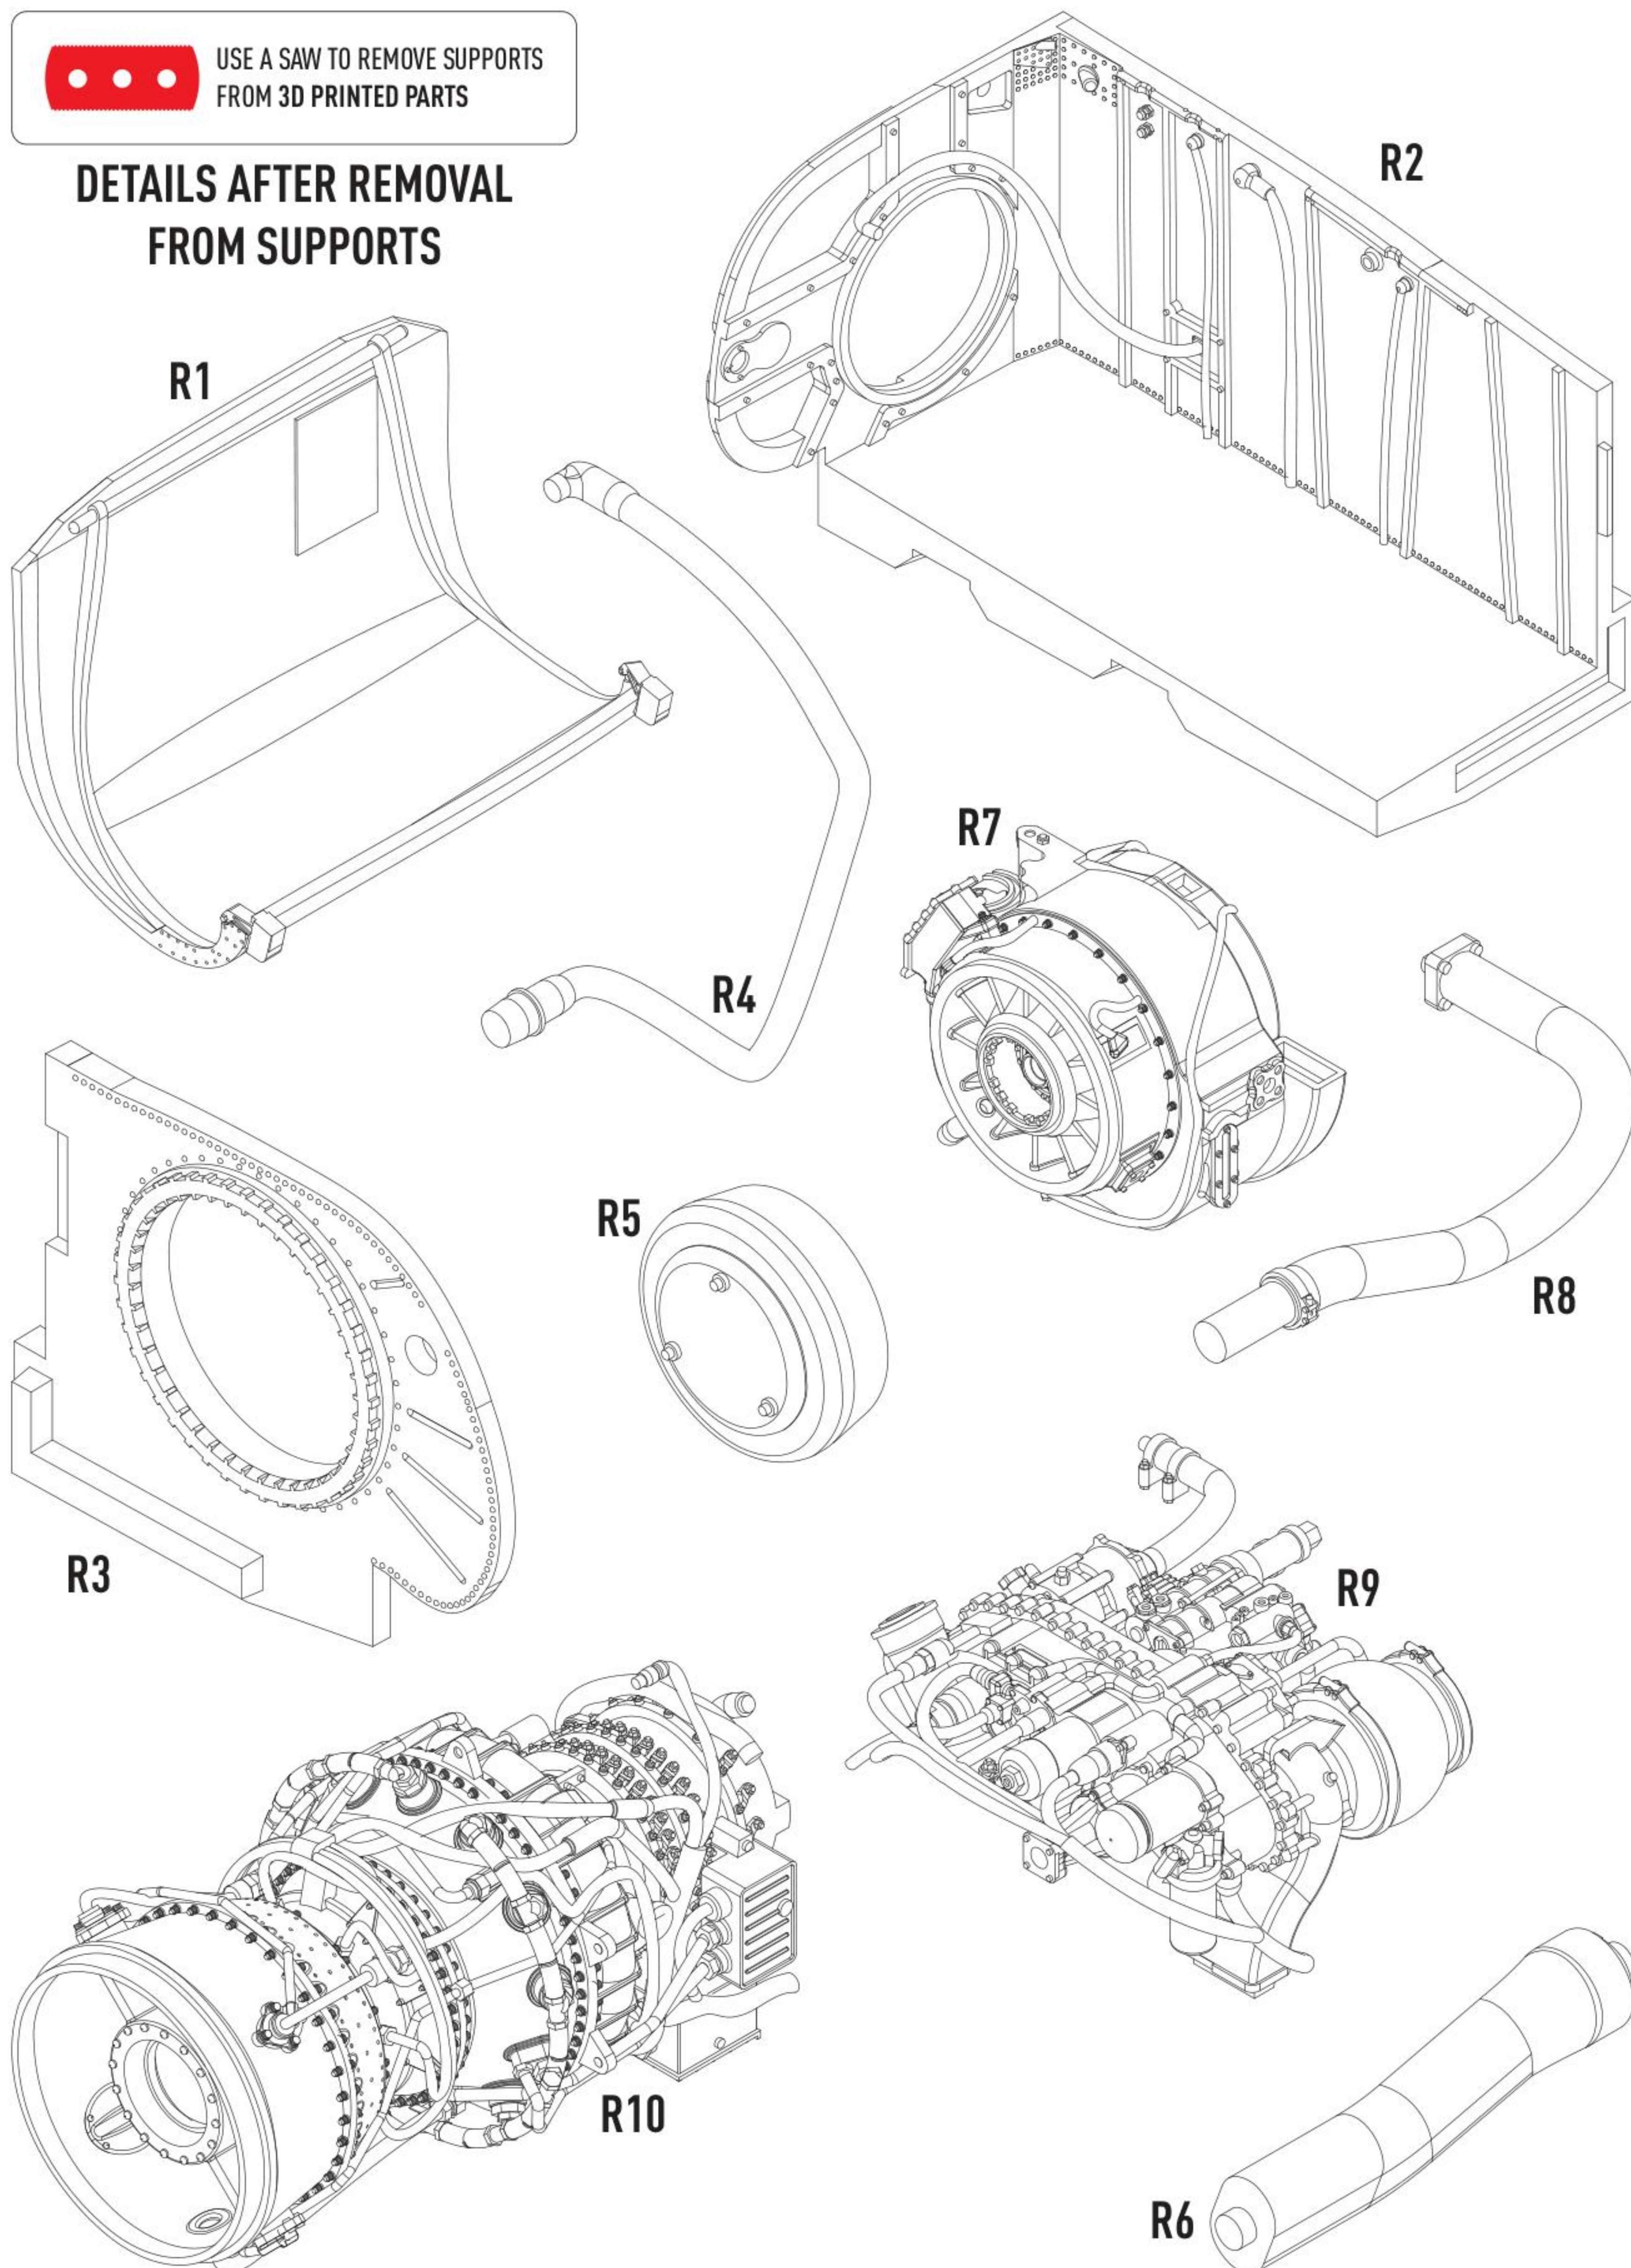


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS

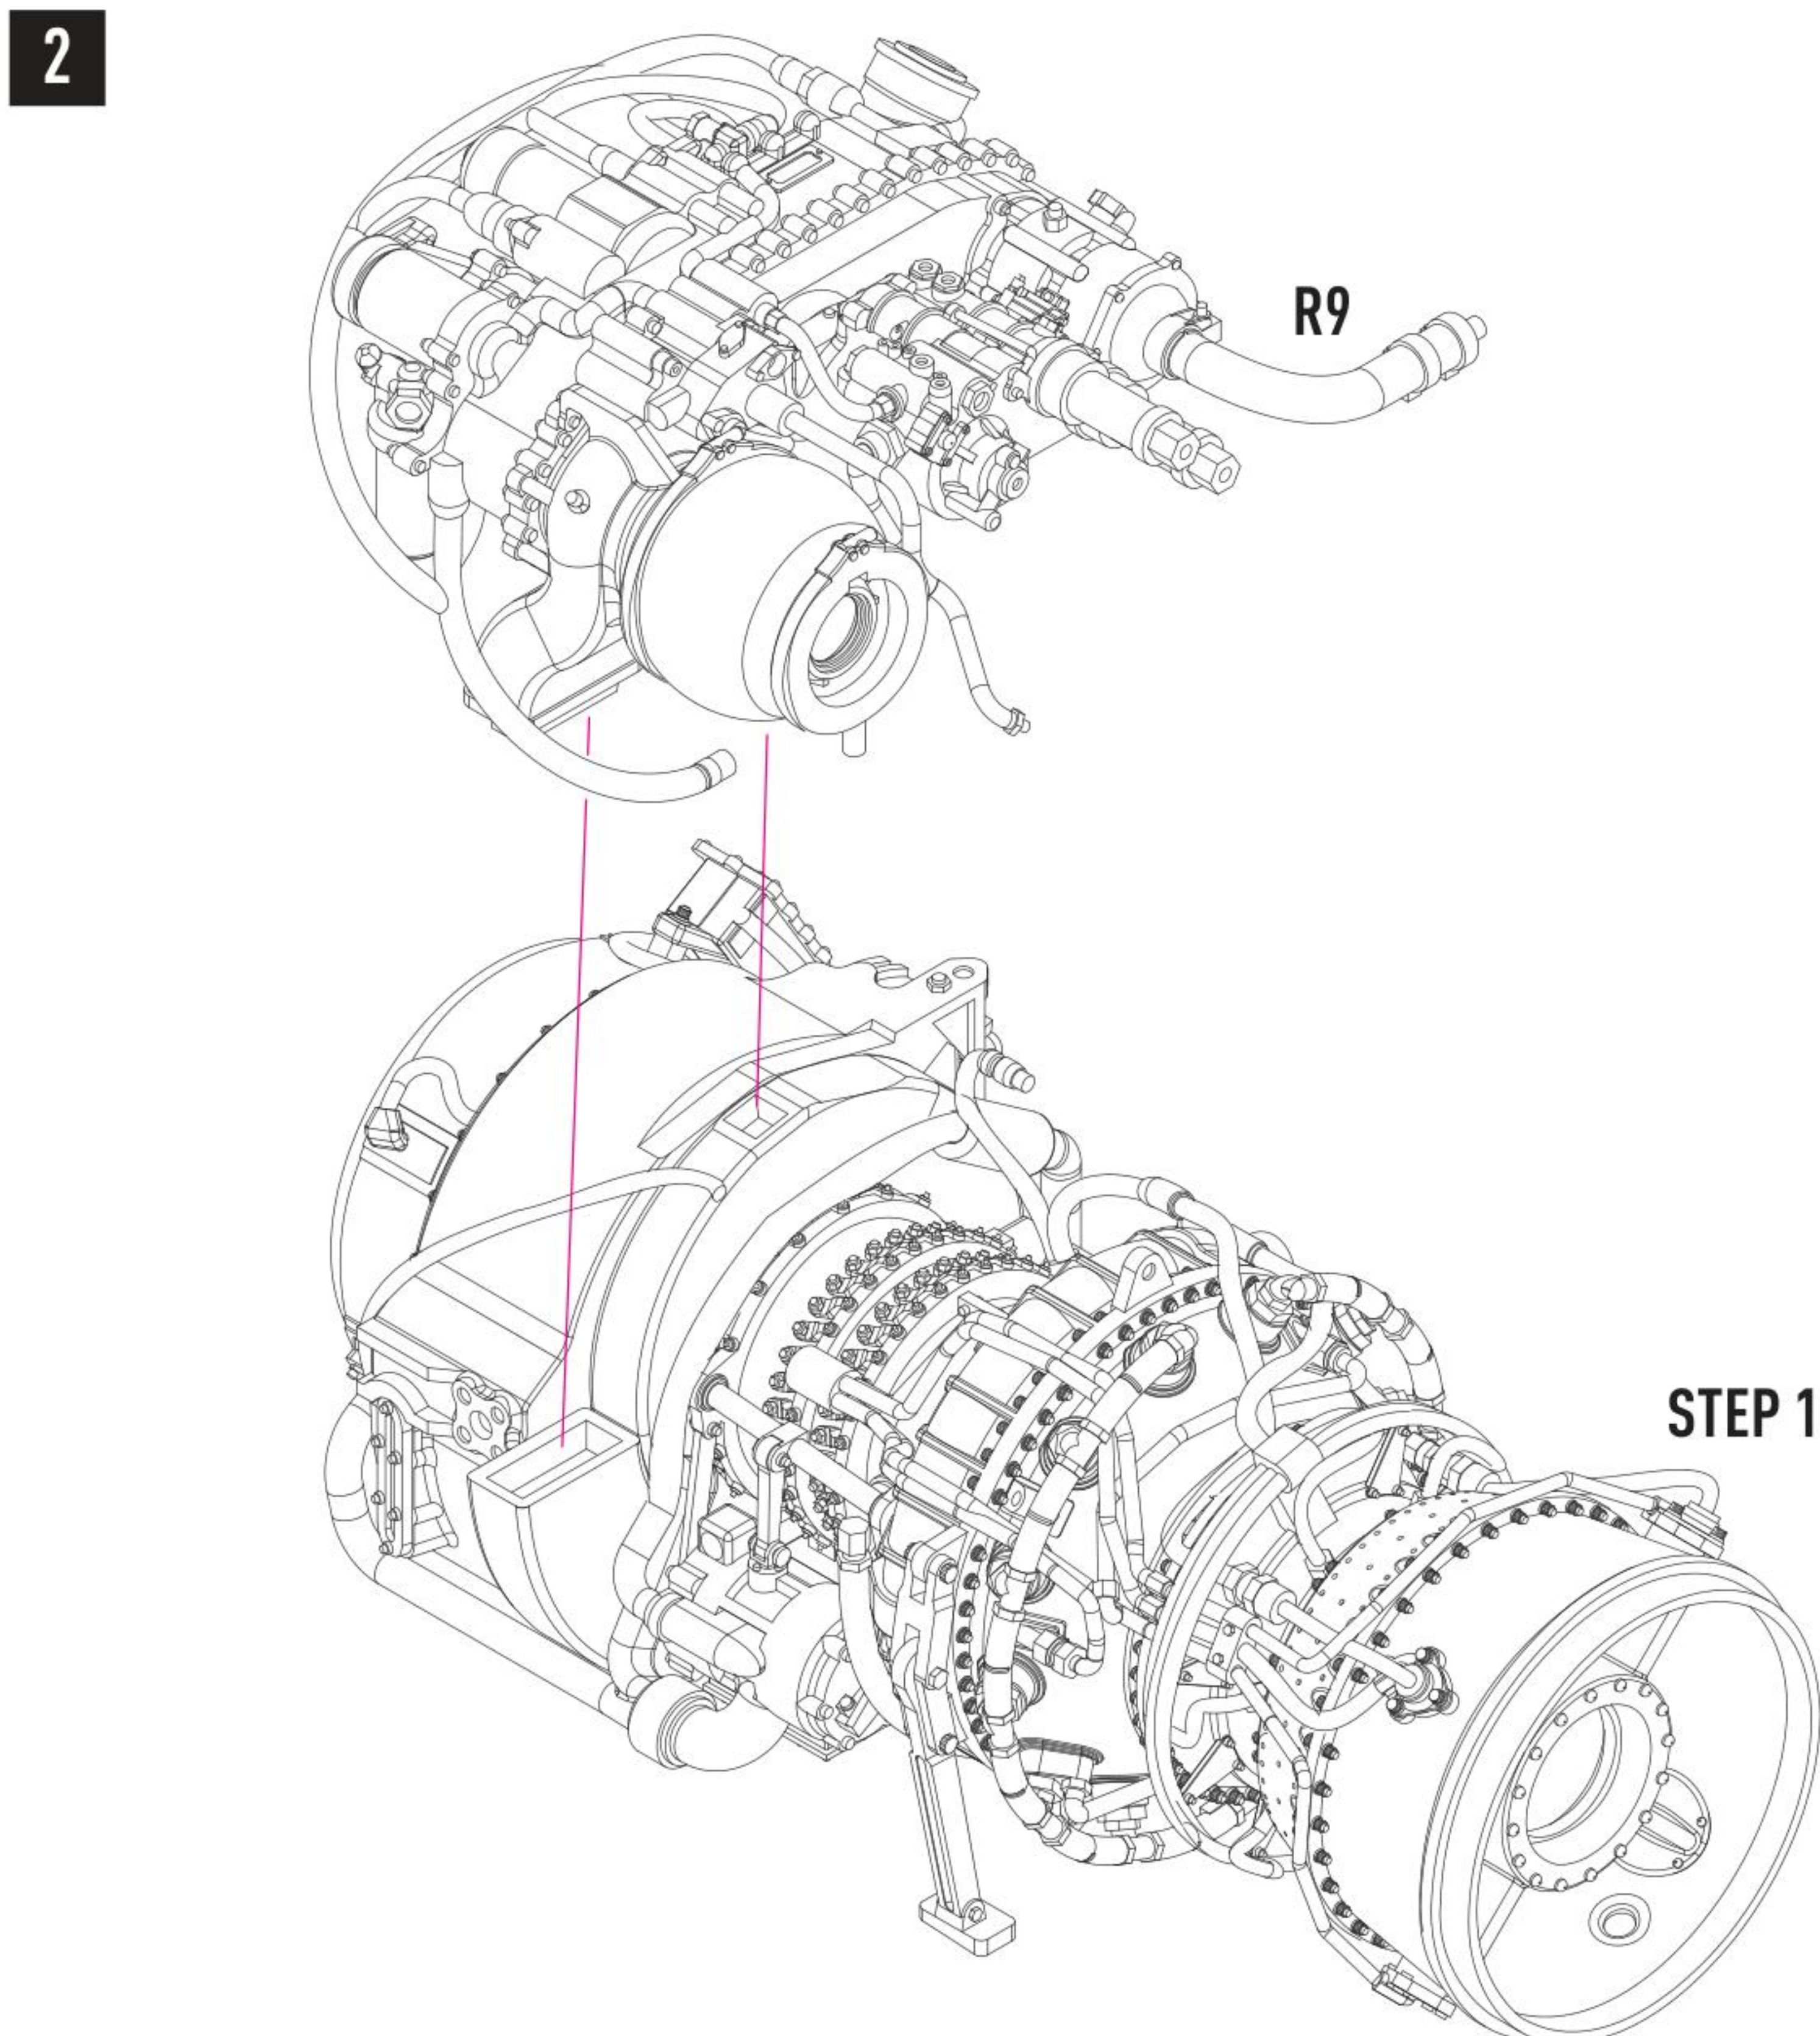


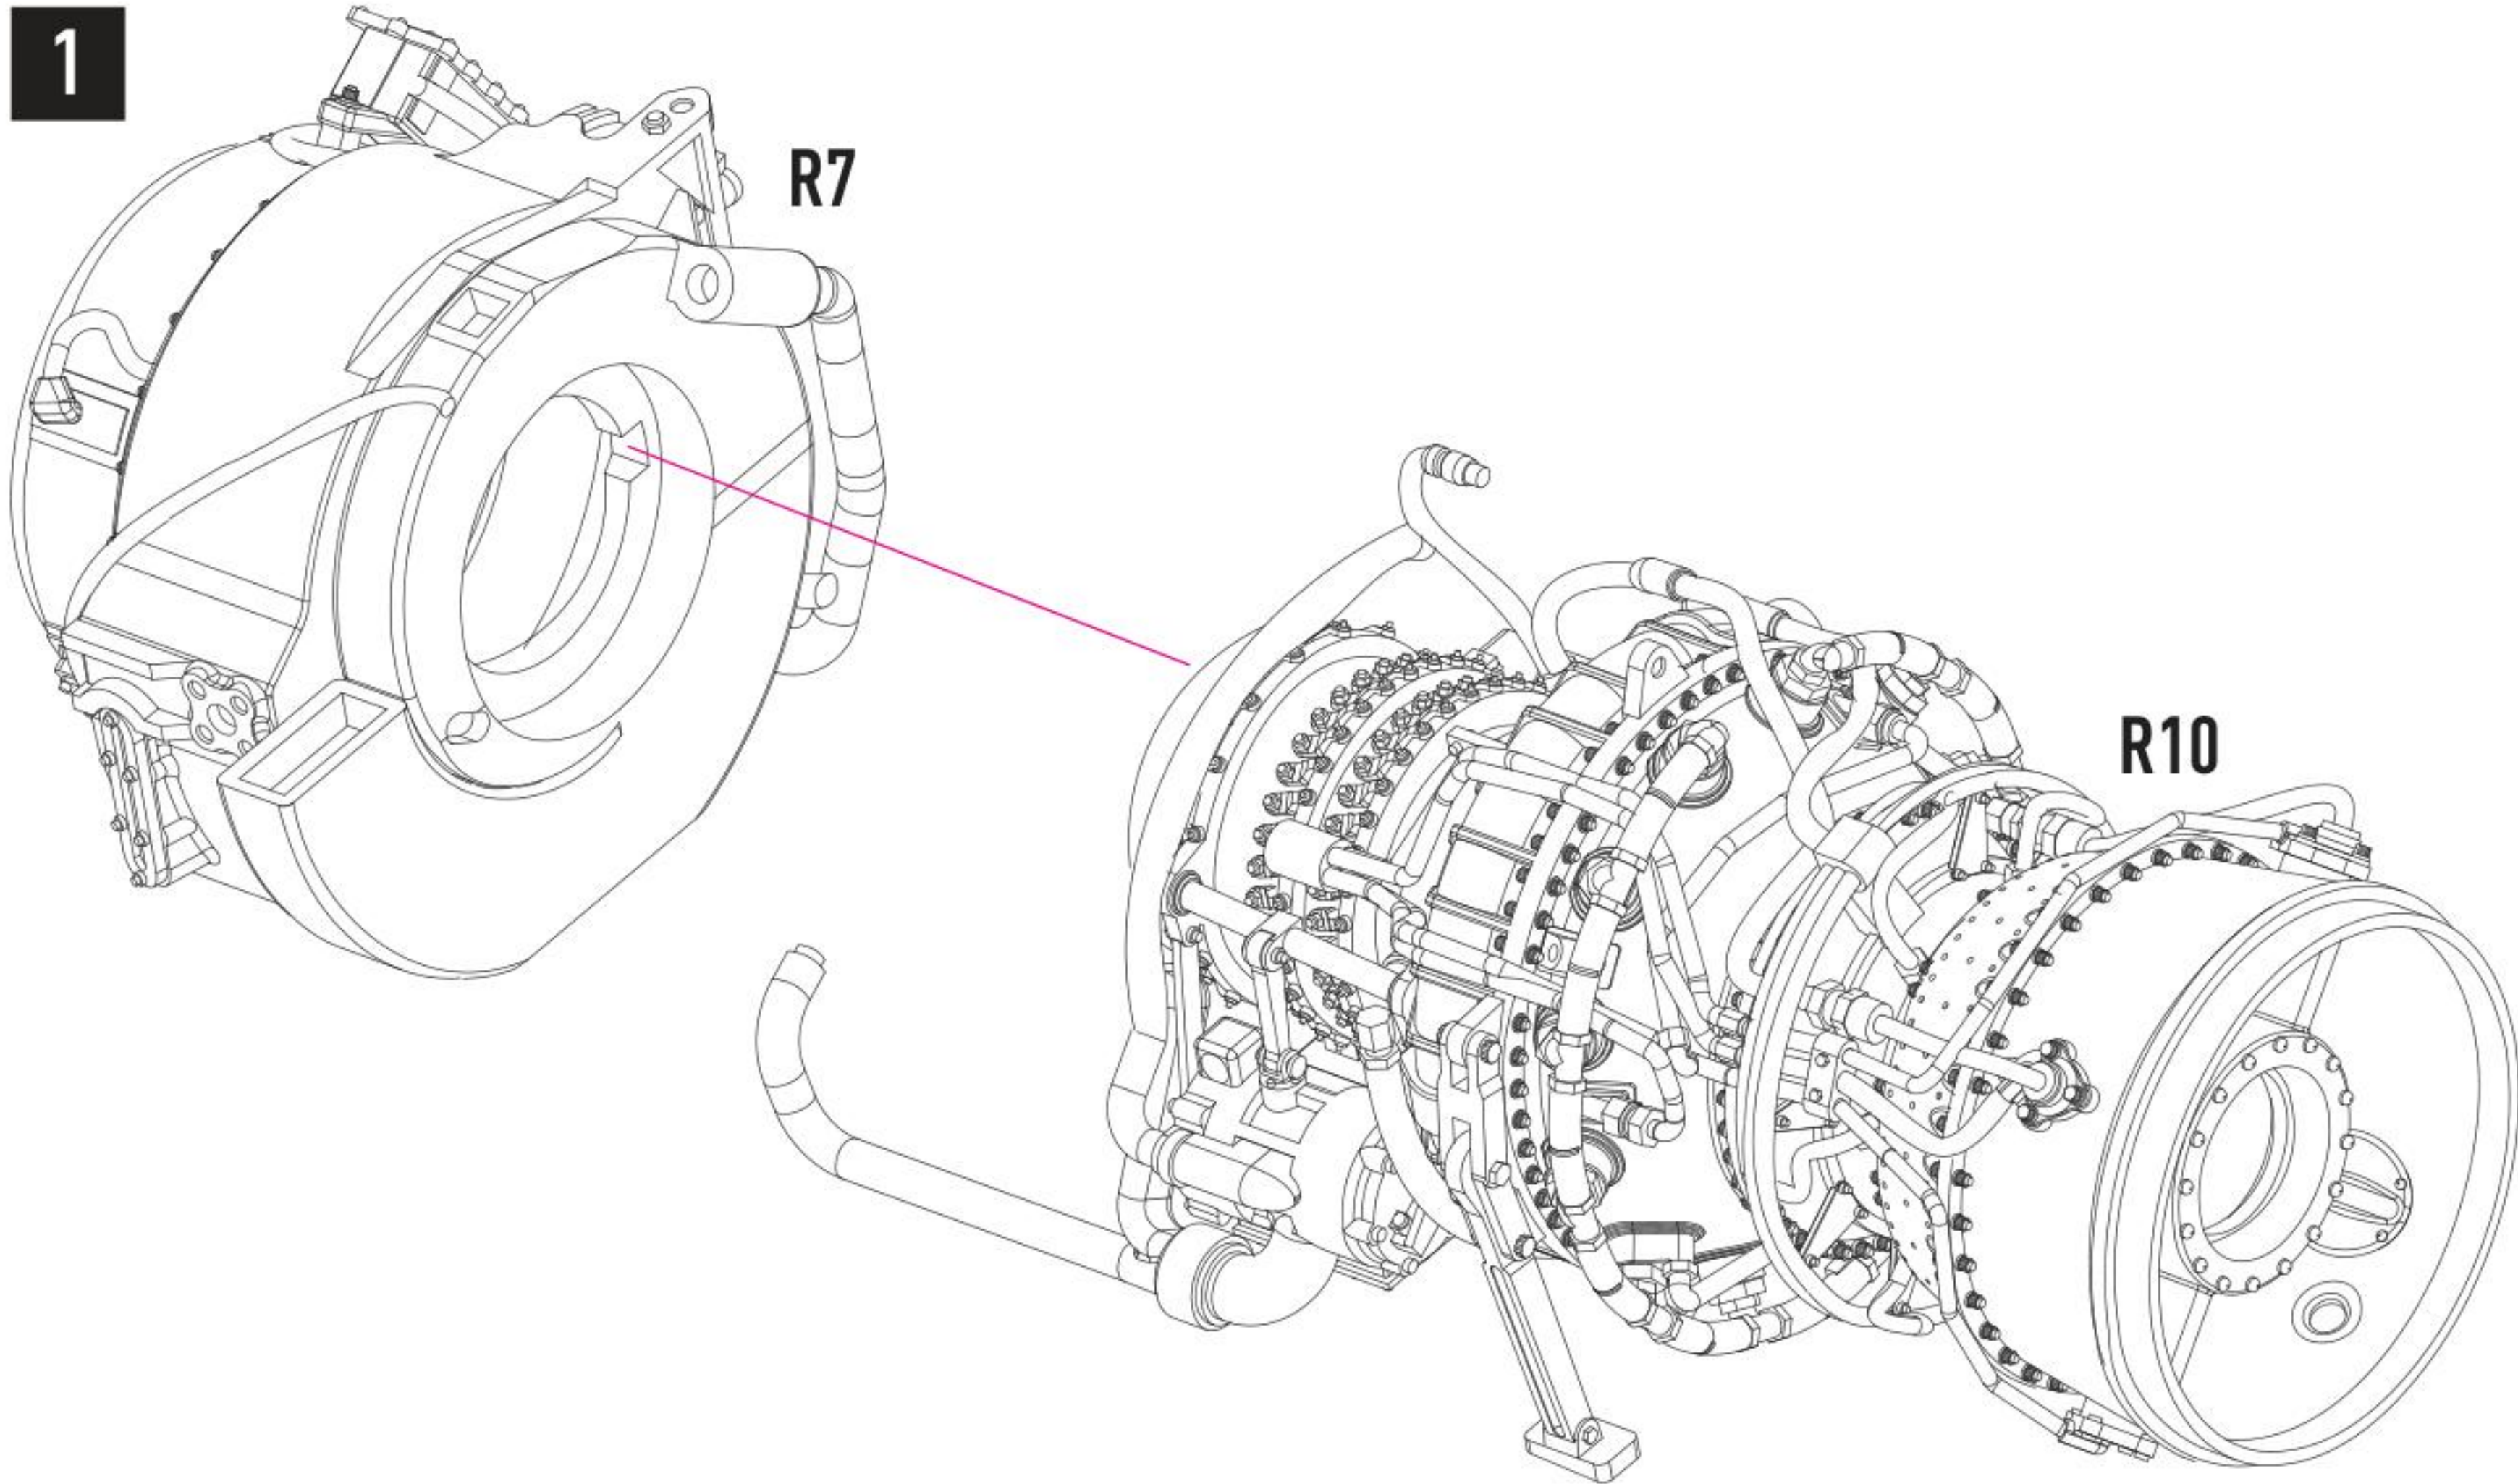

3

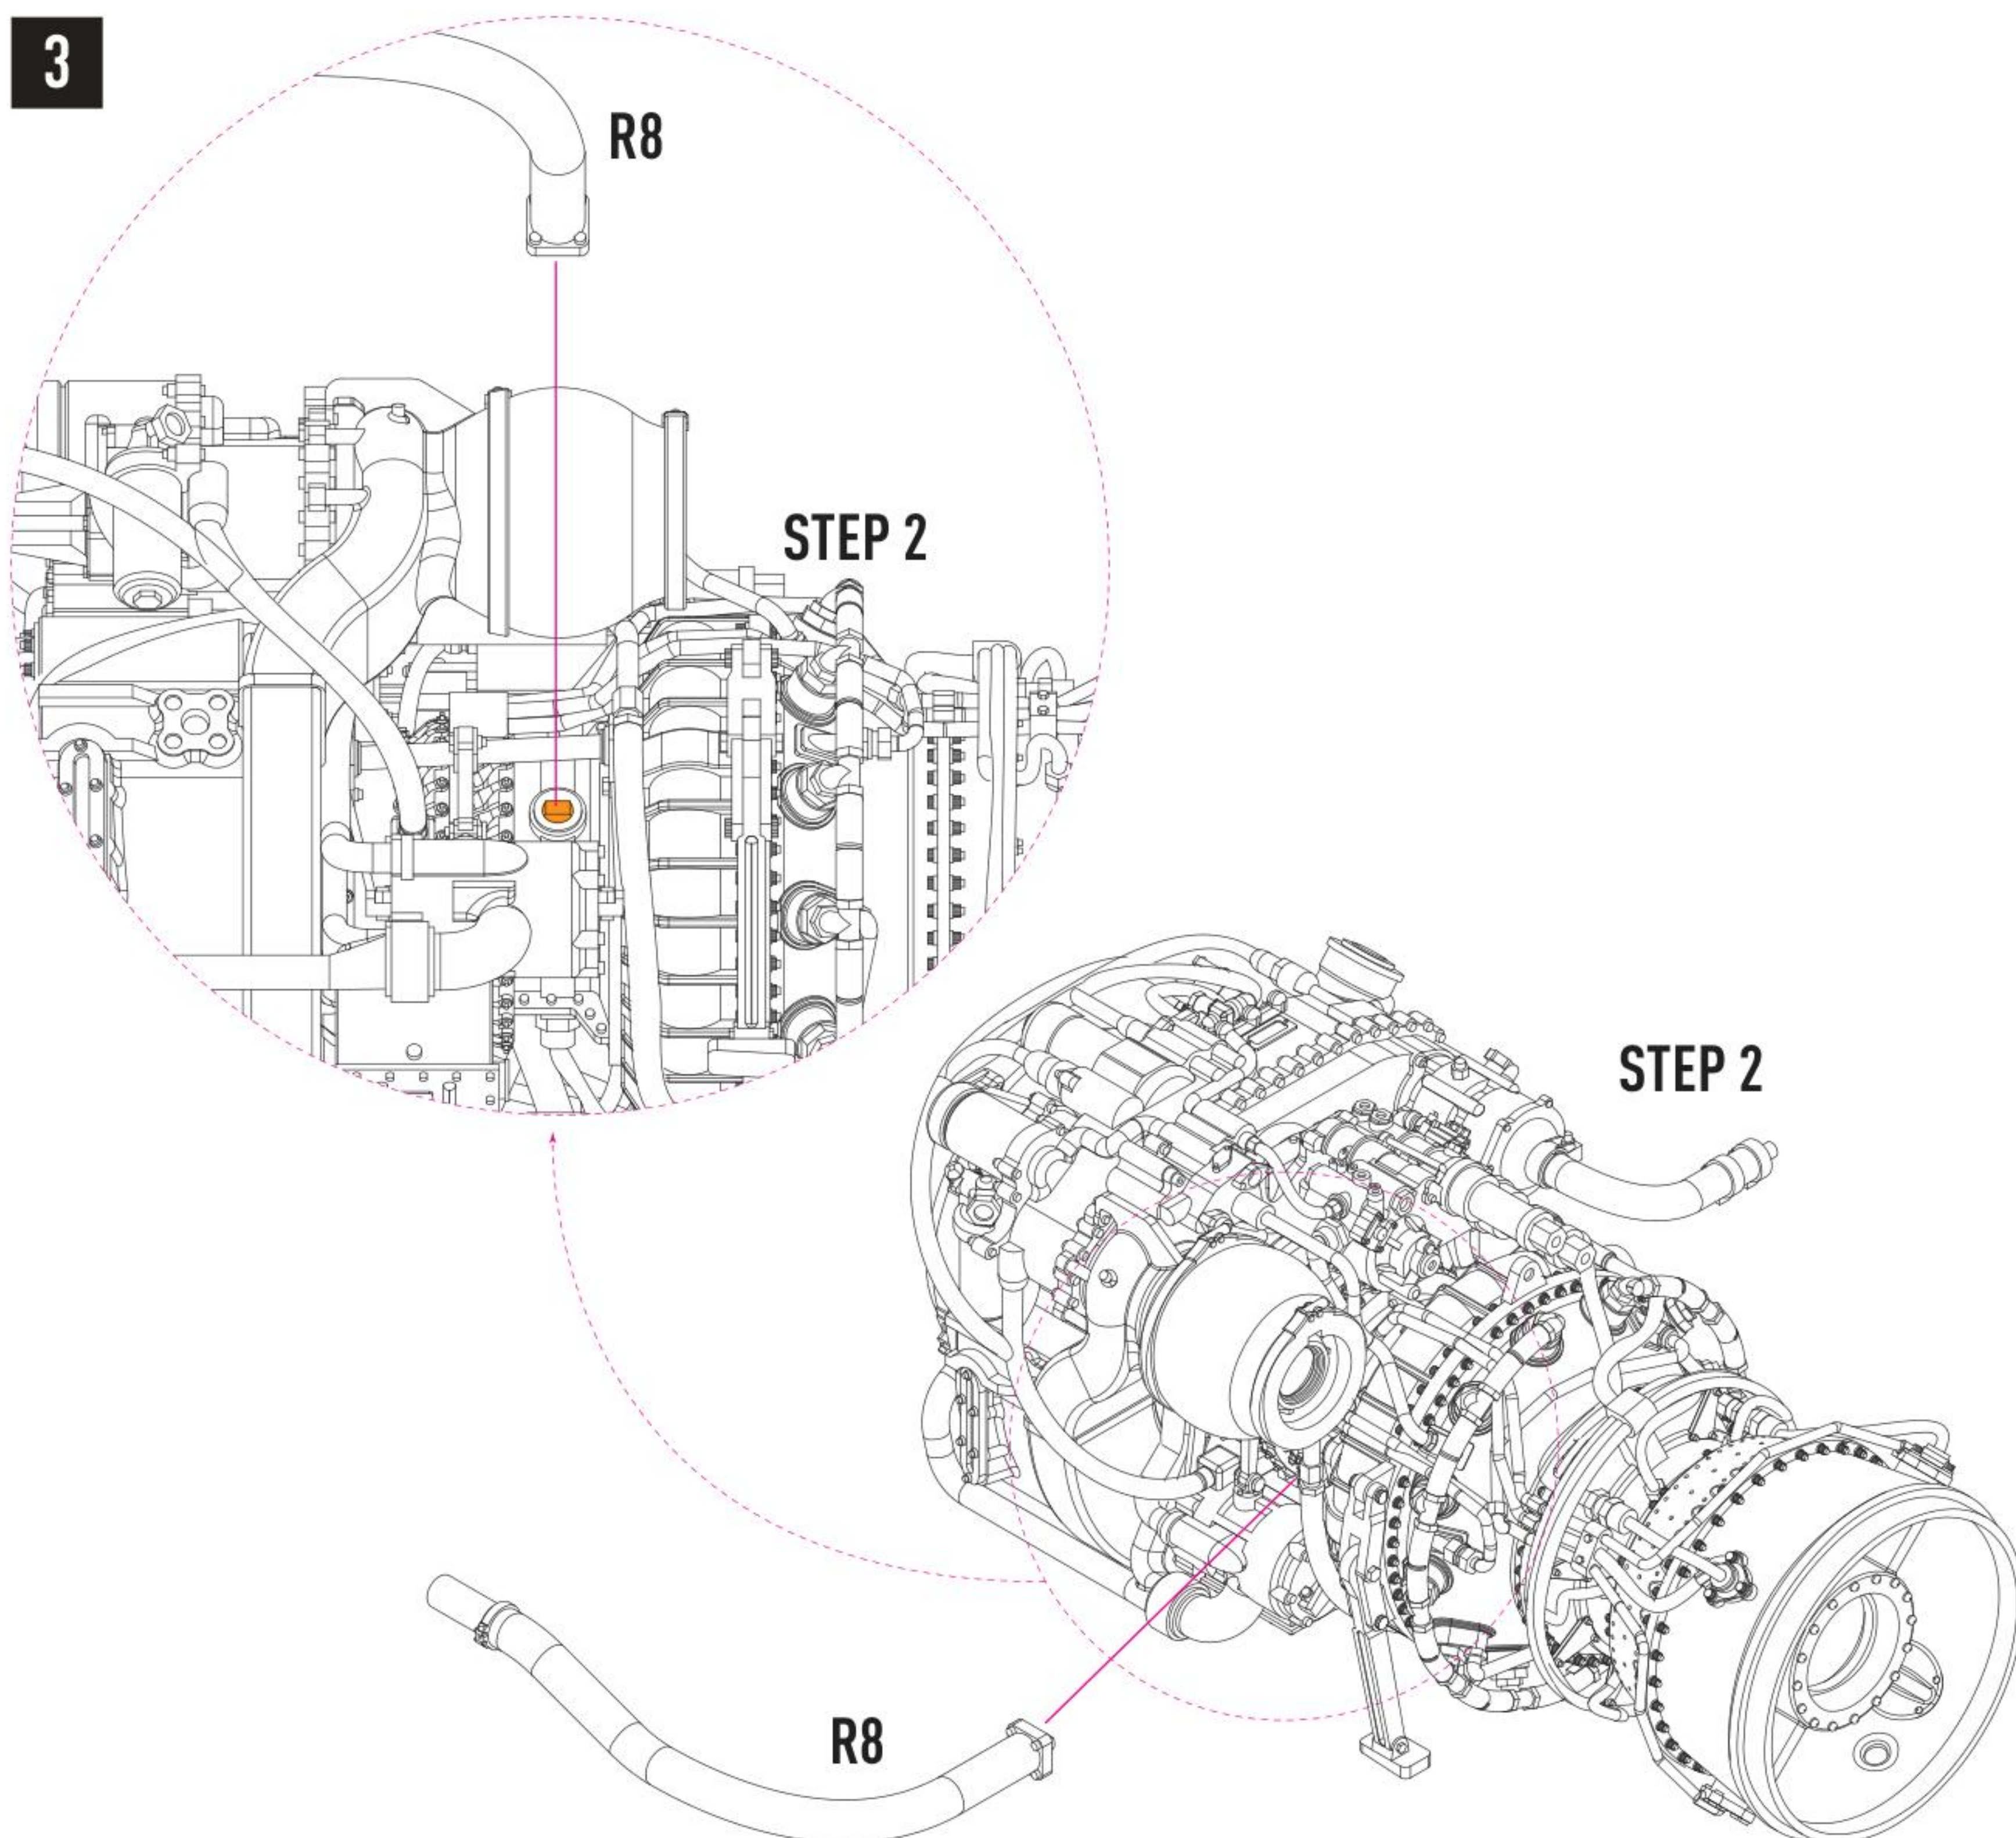


4

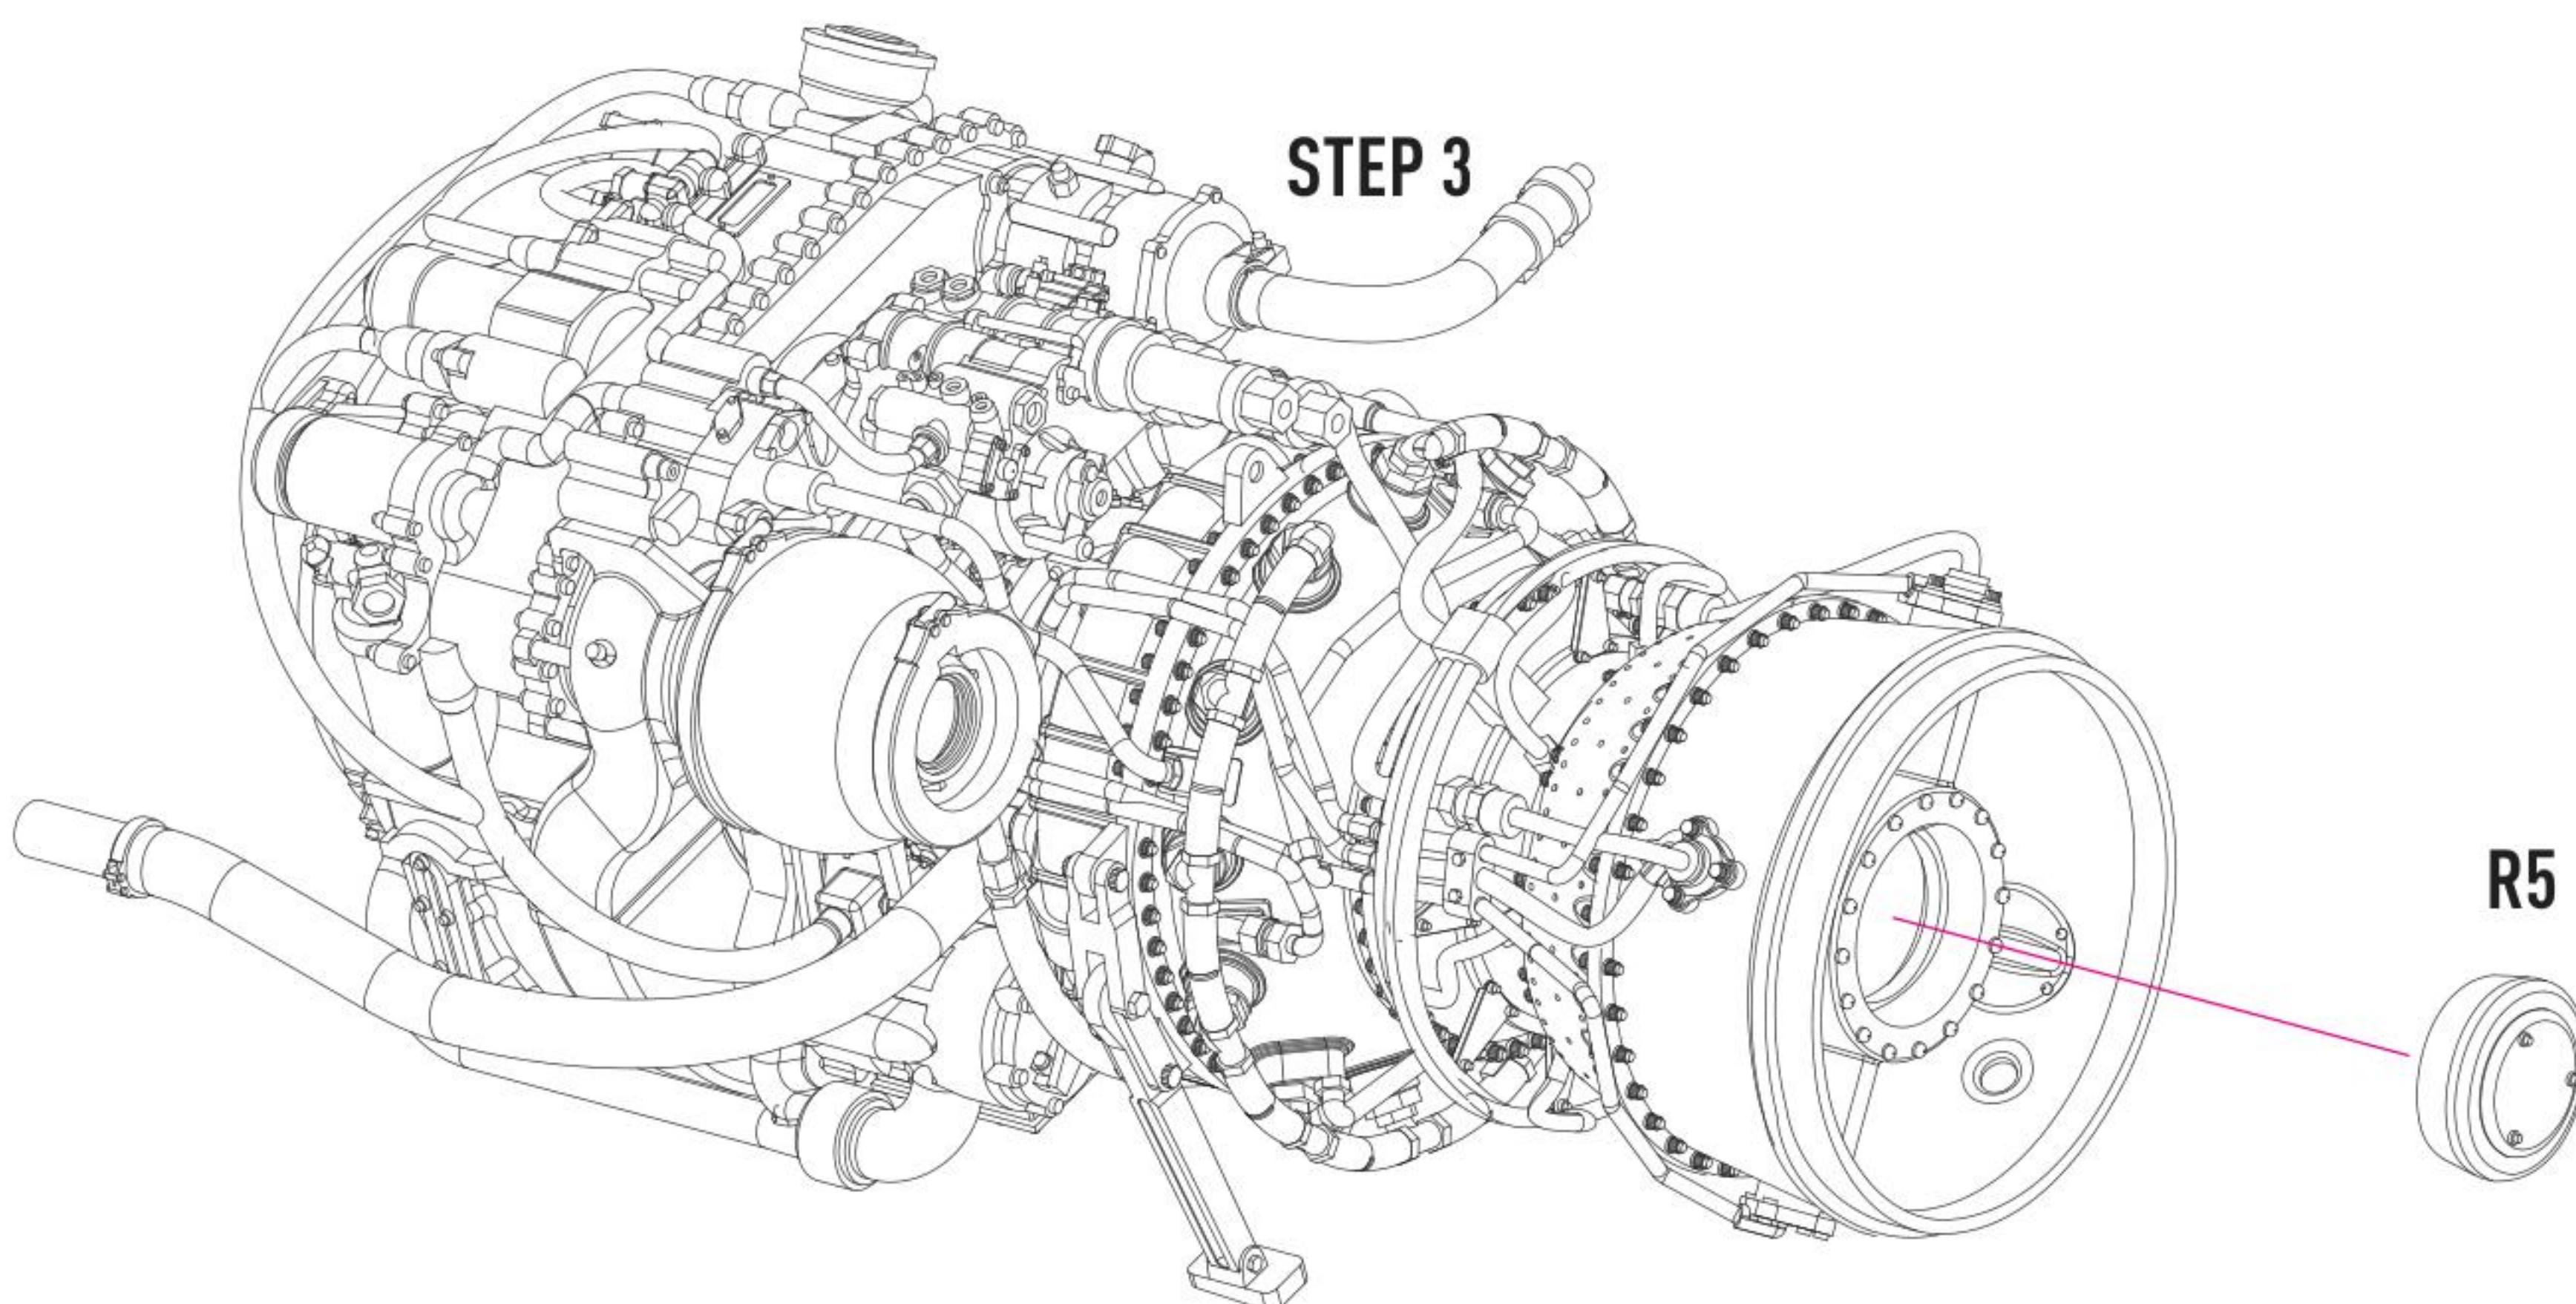


5




STEP 4

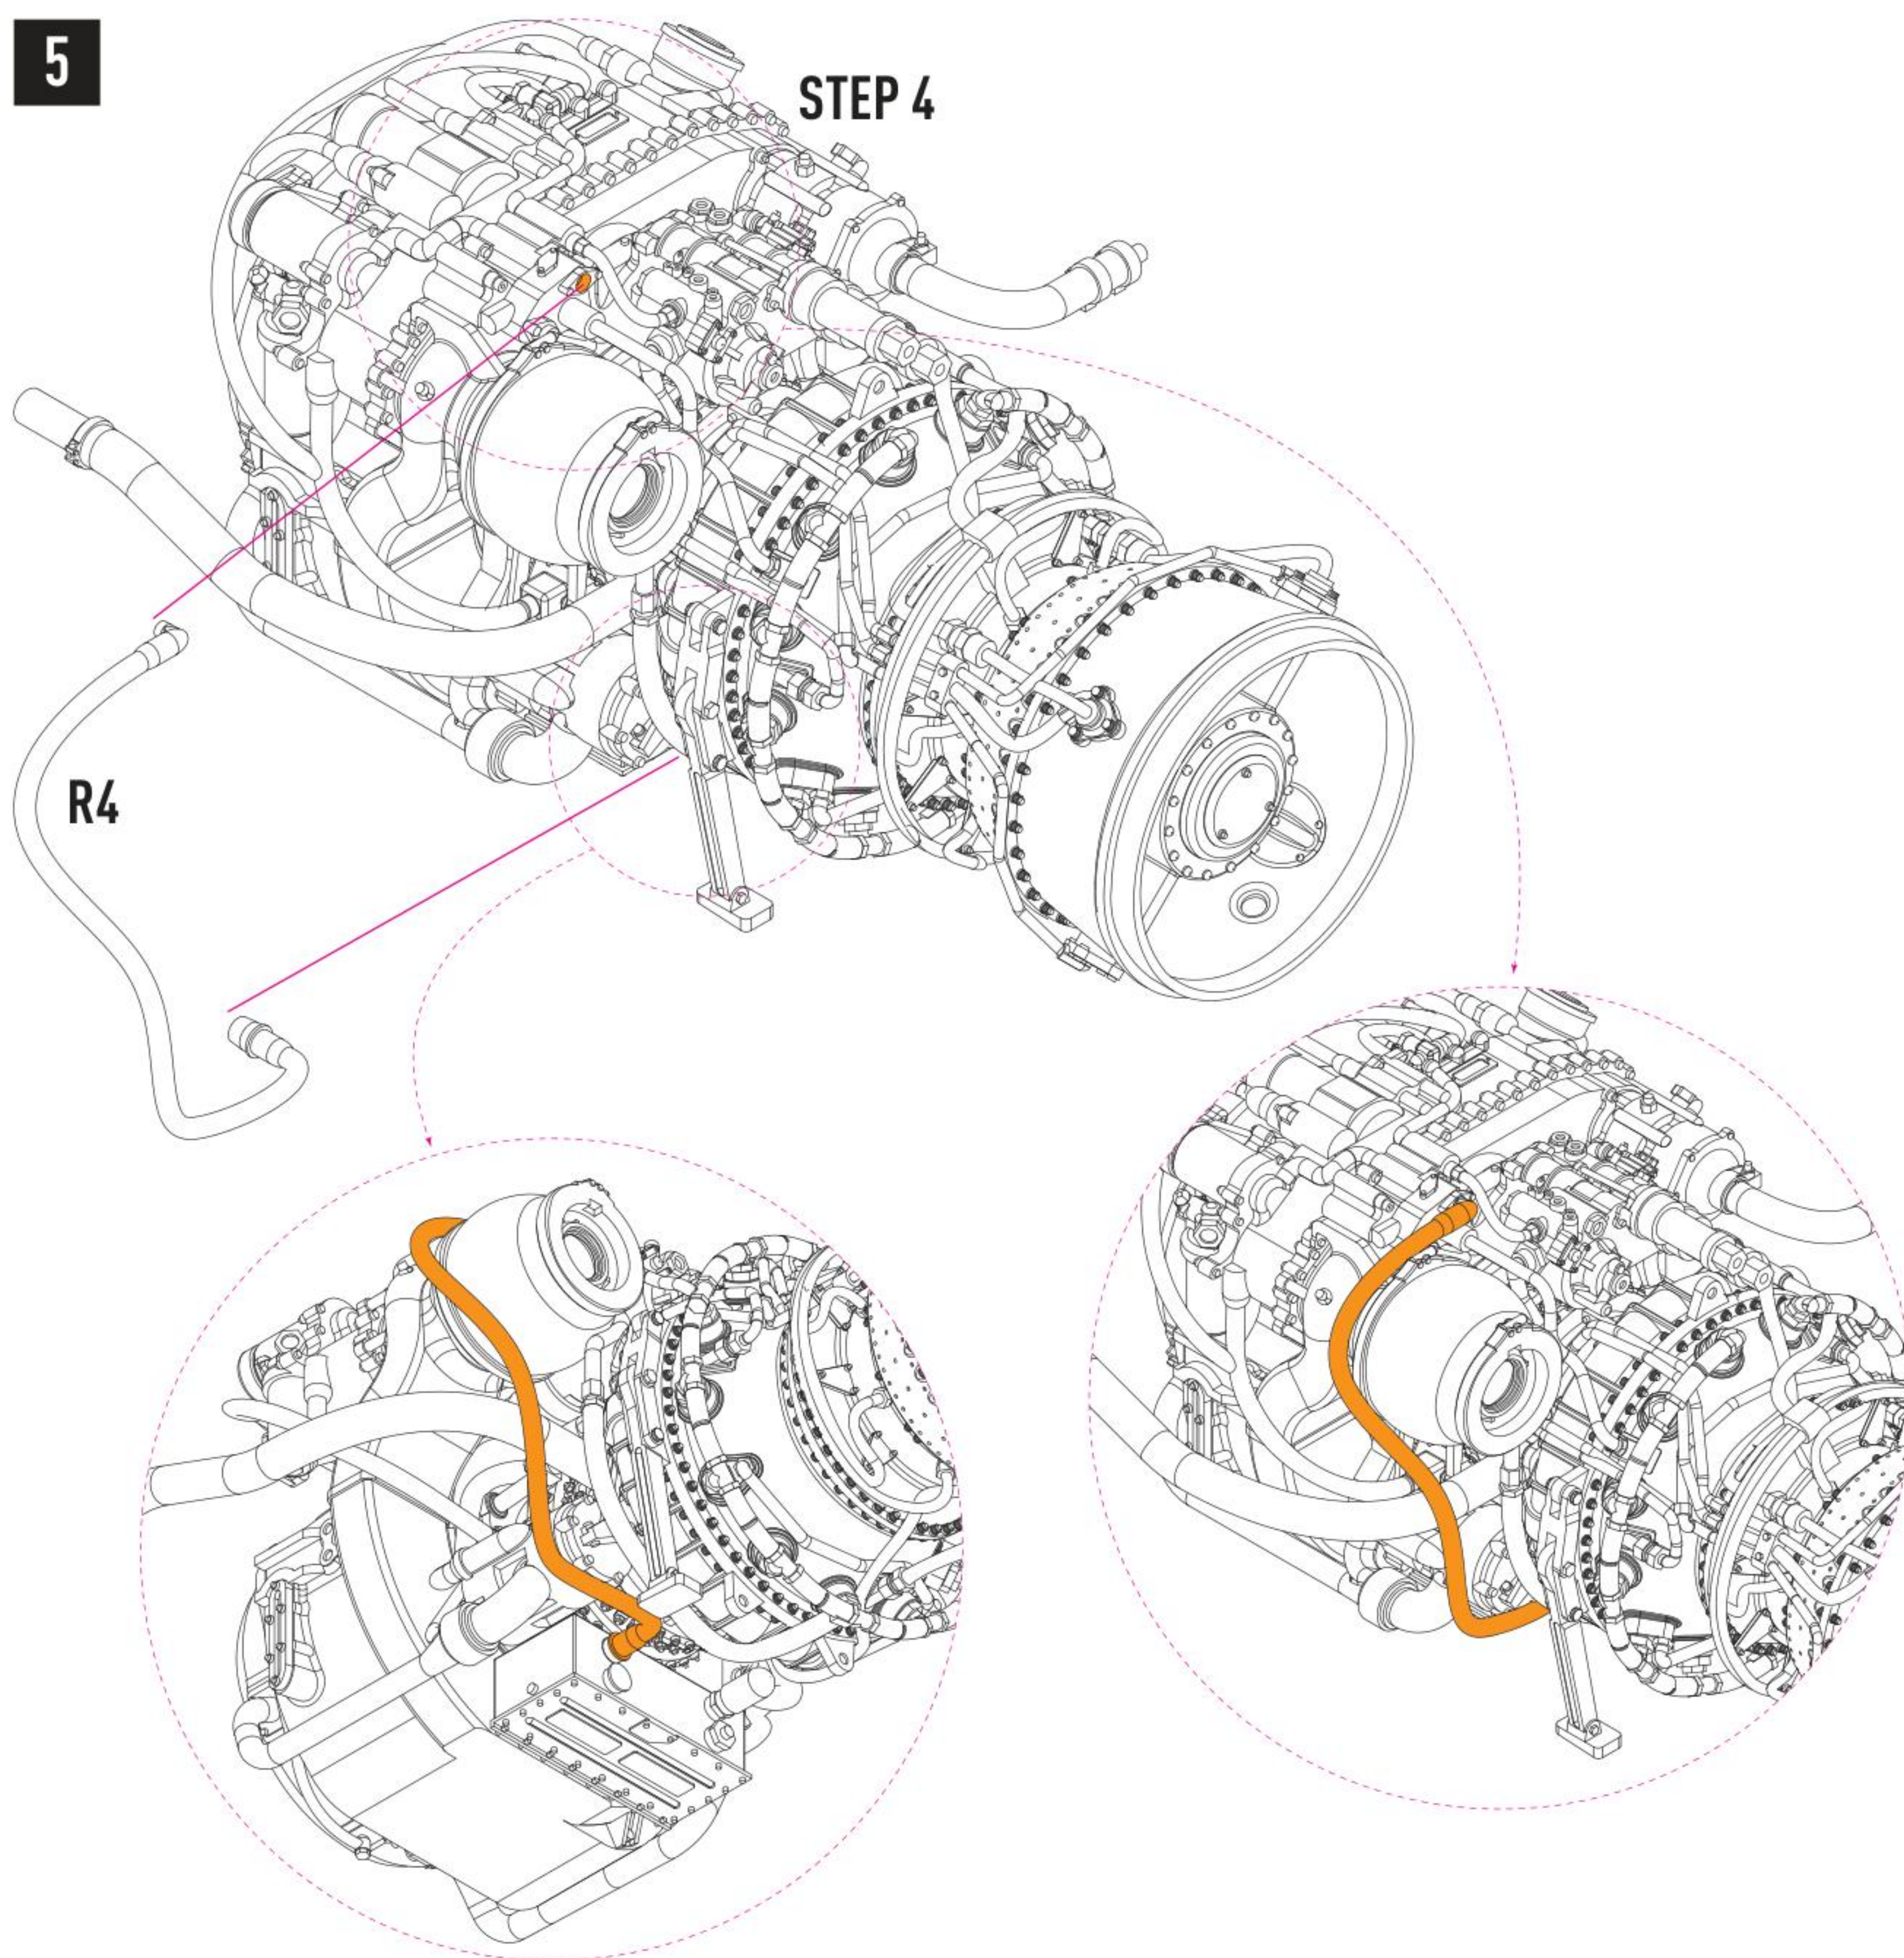

6


STEP 5

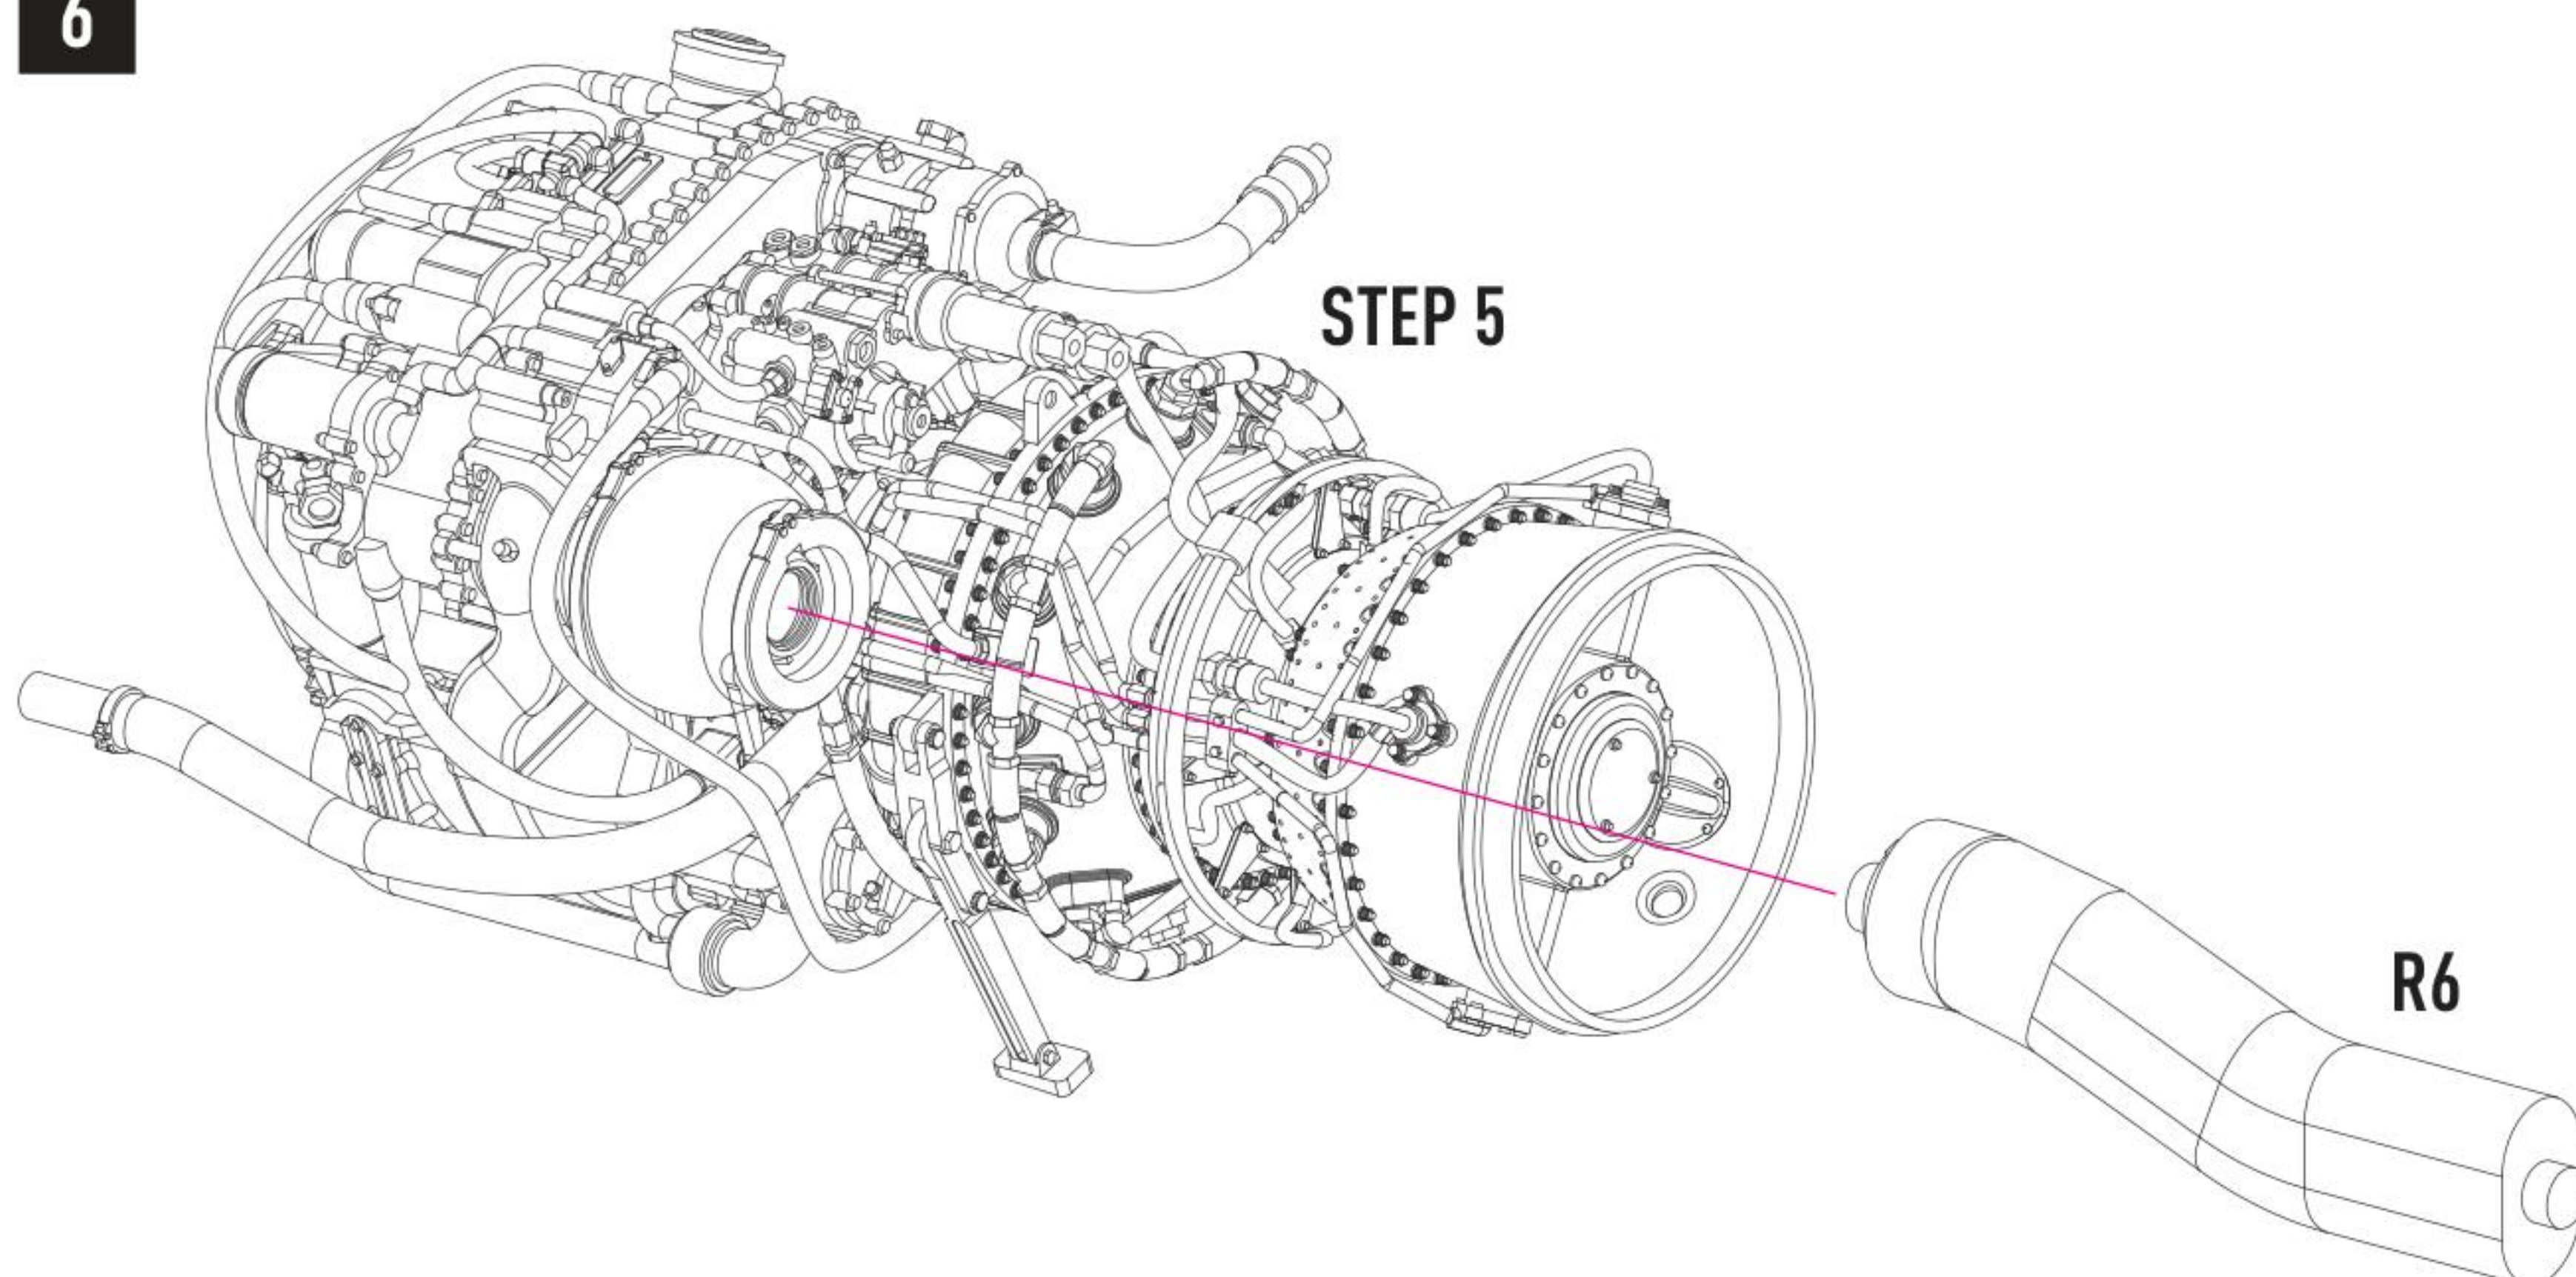

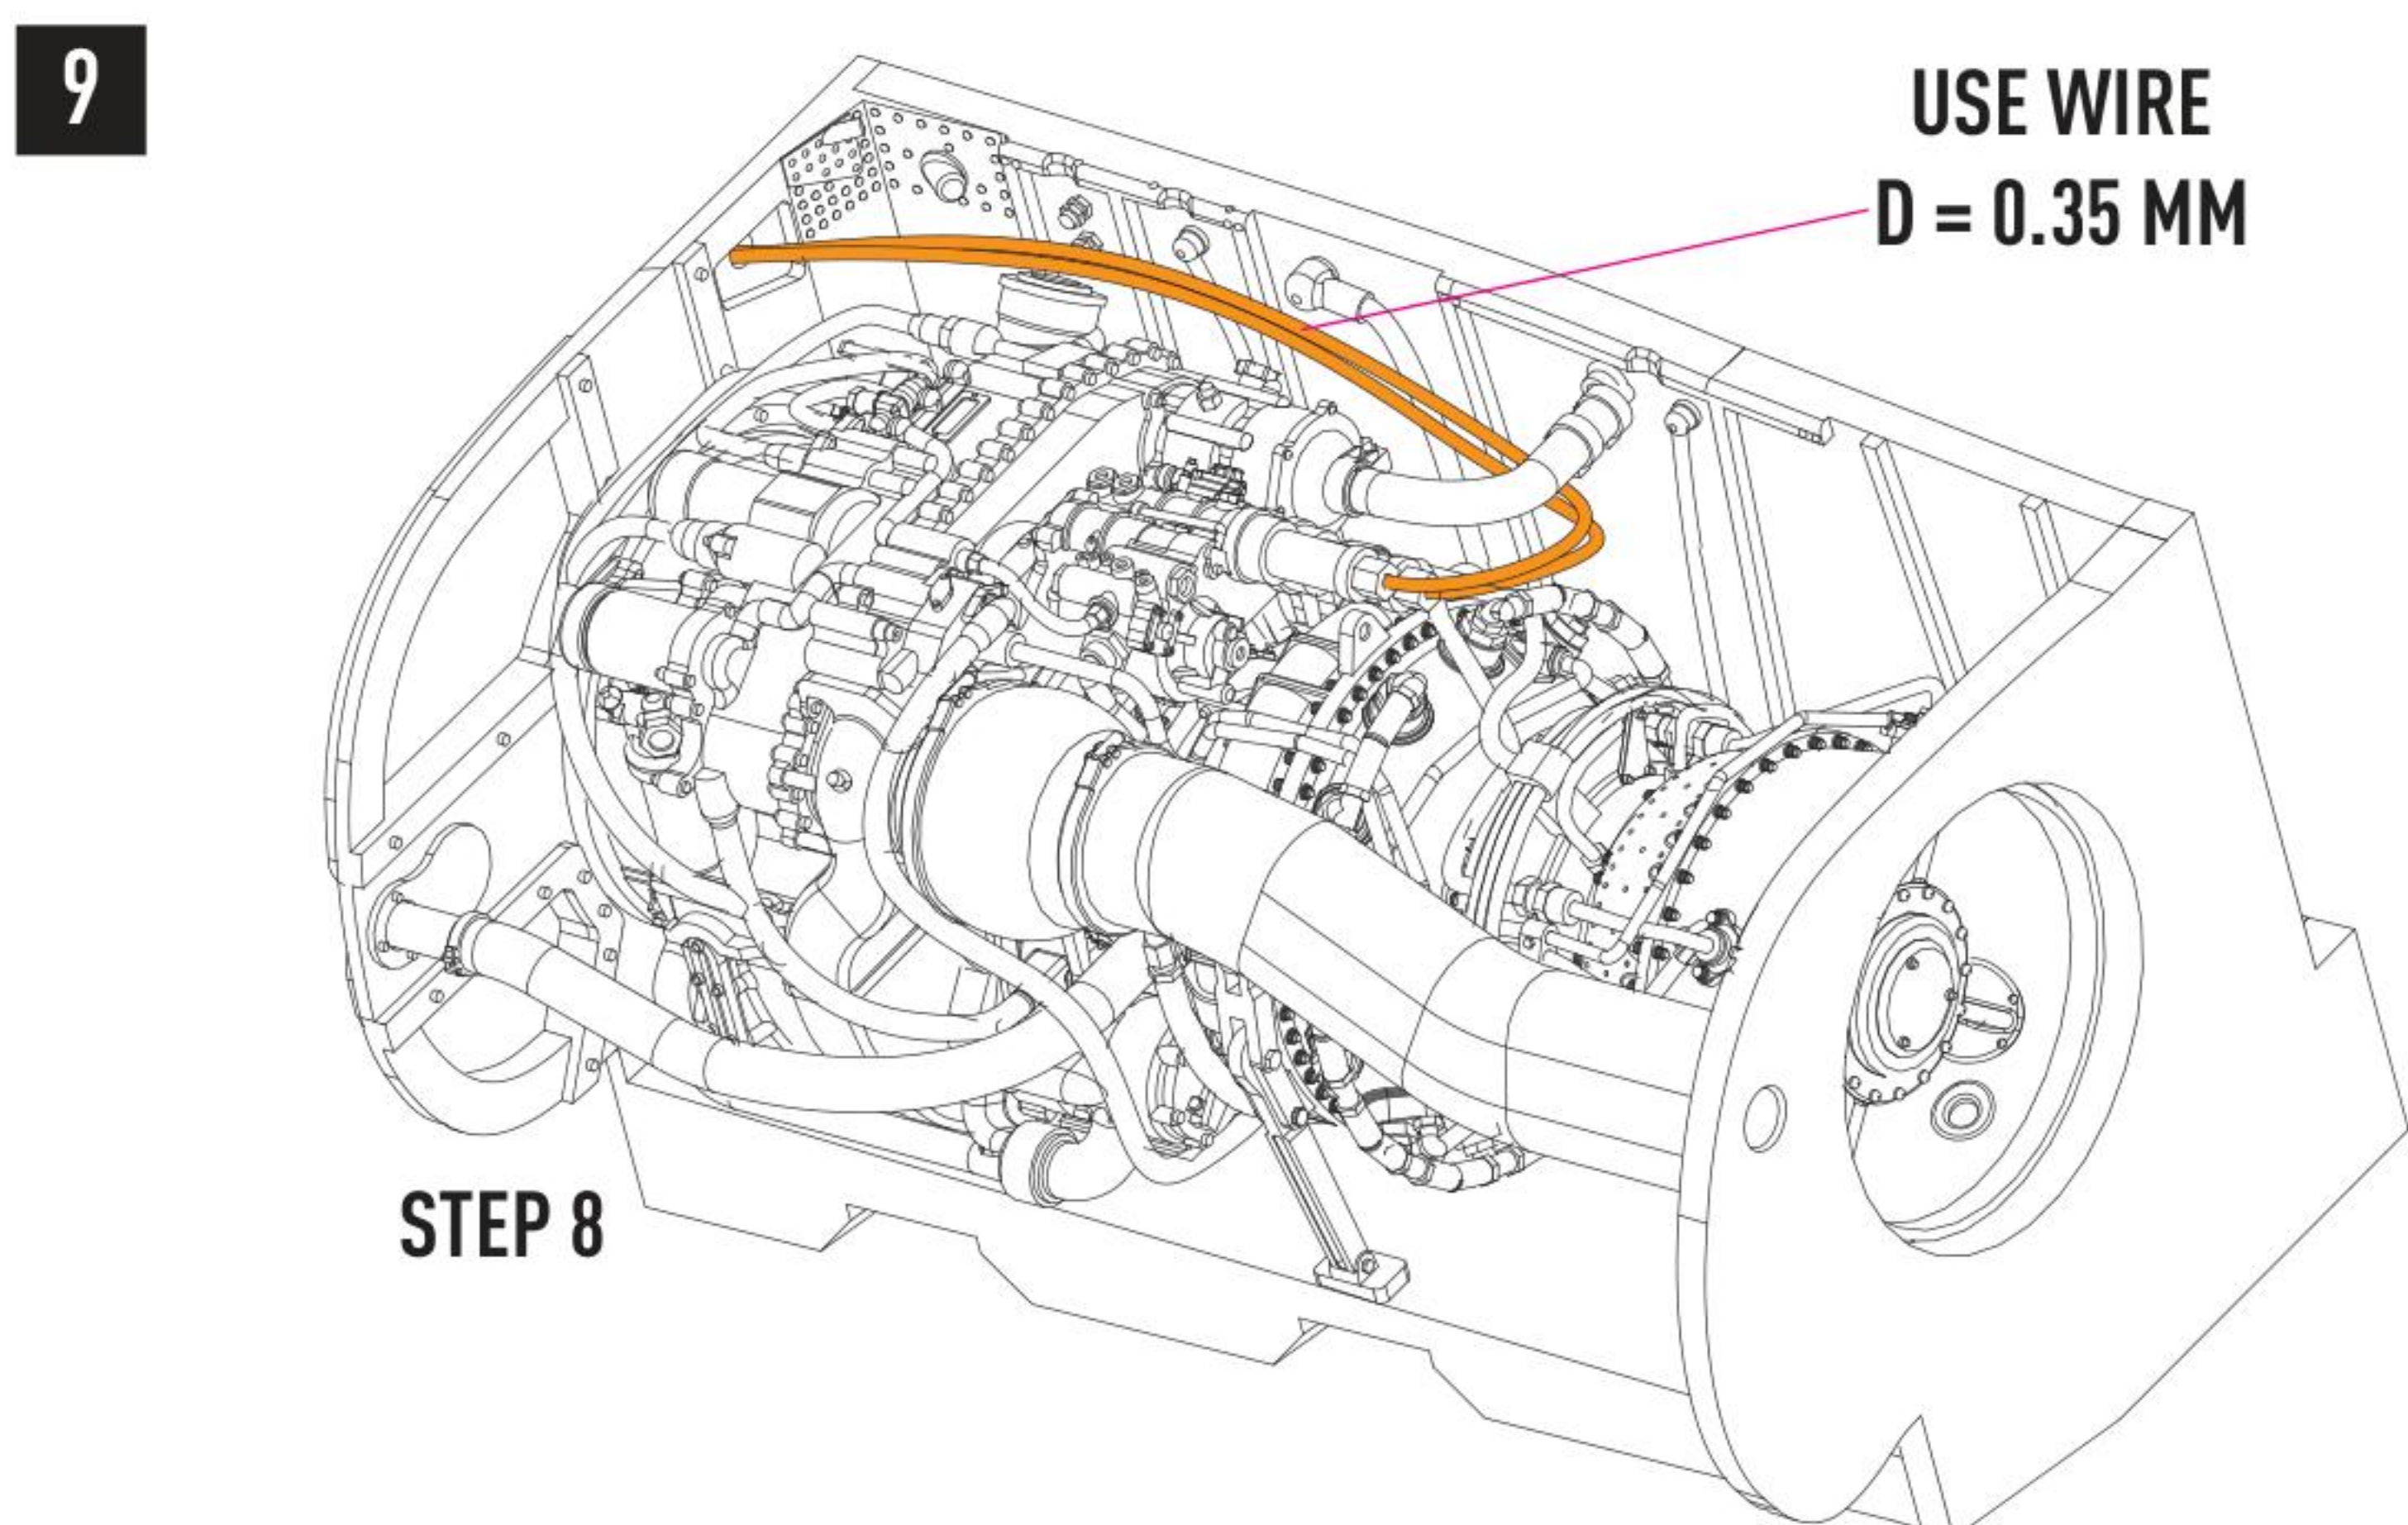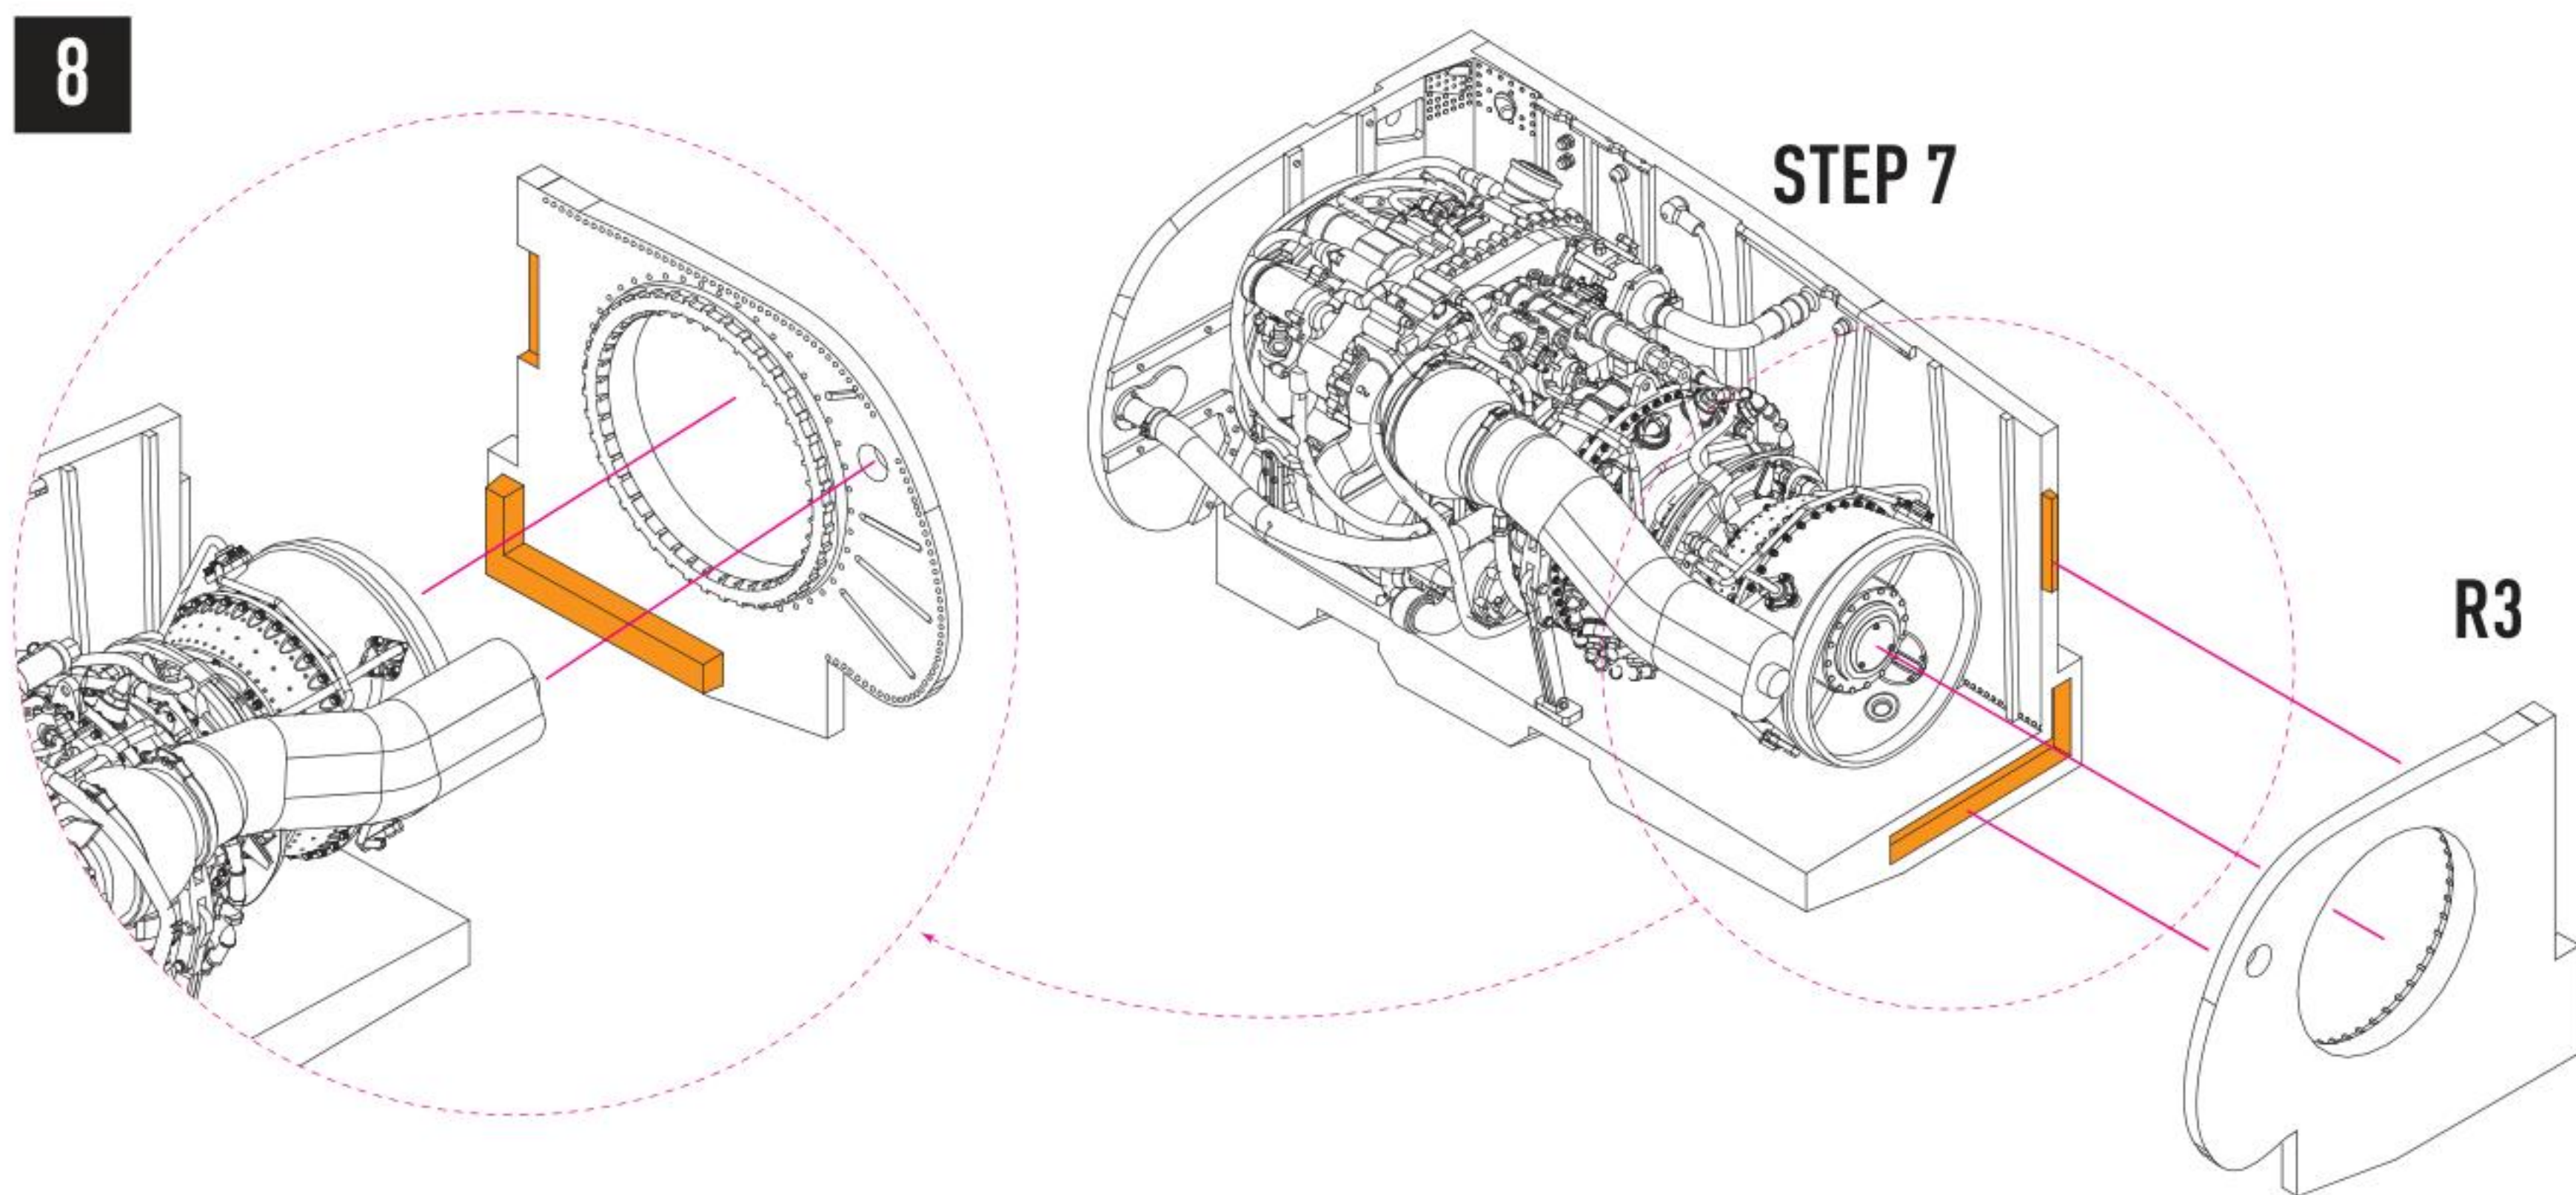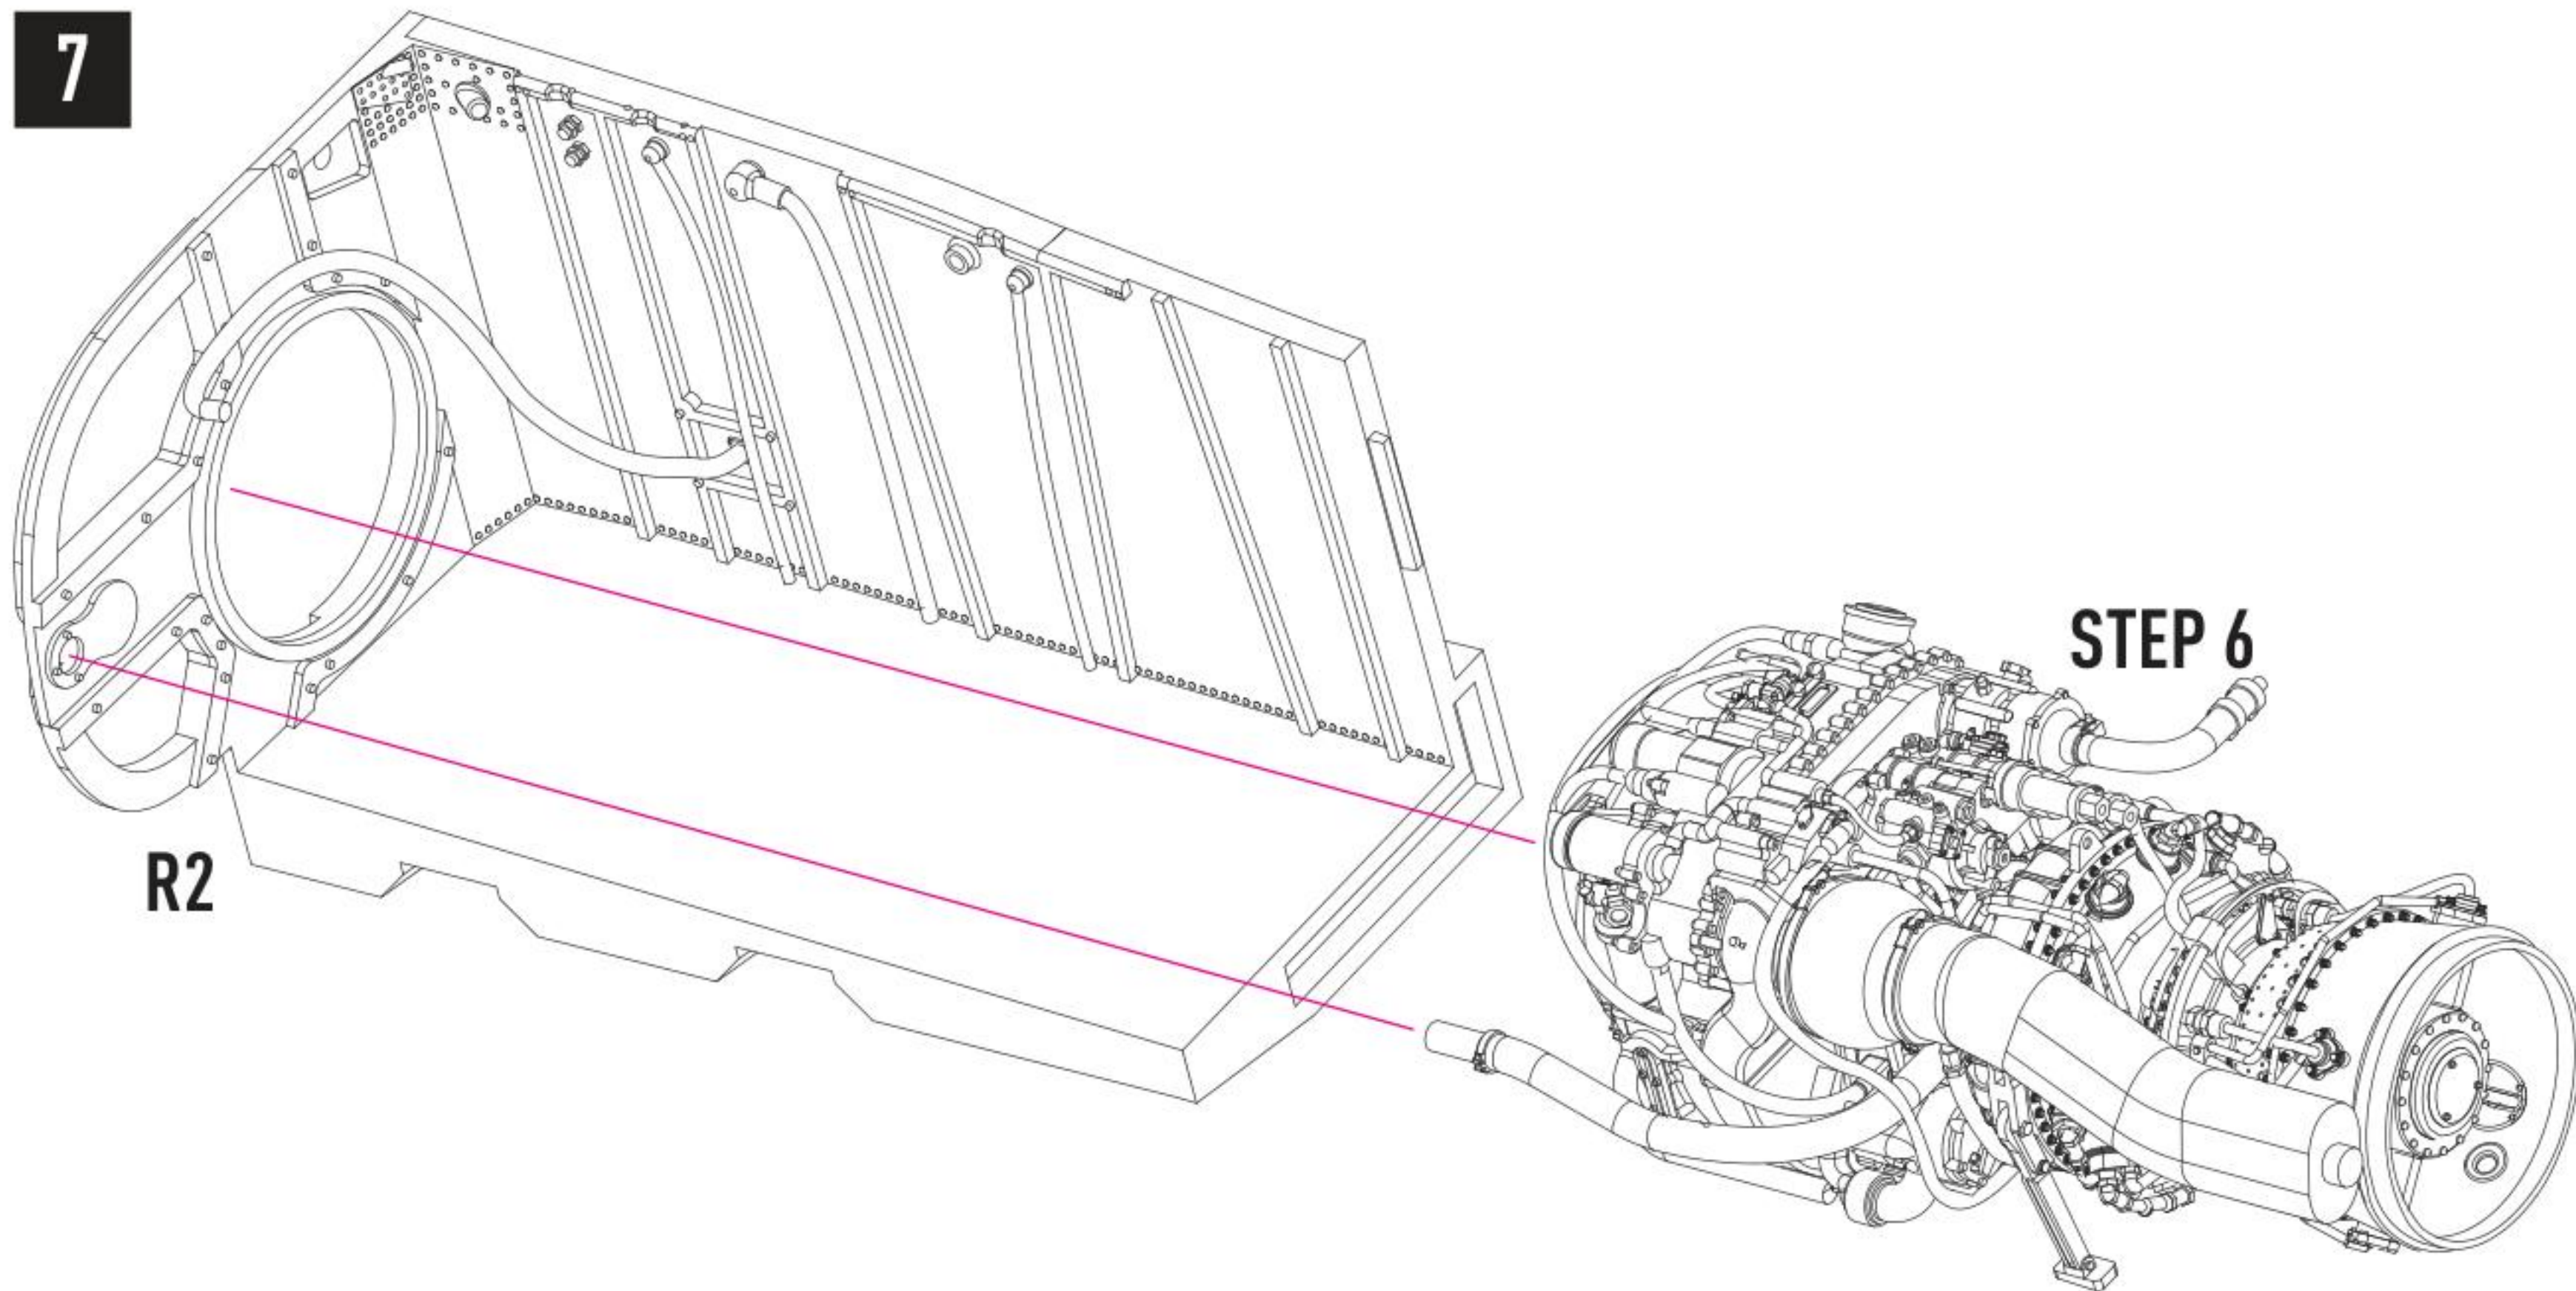


10

PART A3
FROM THE KIT

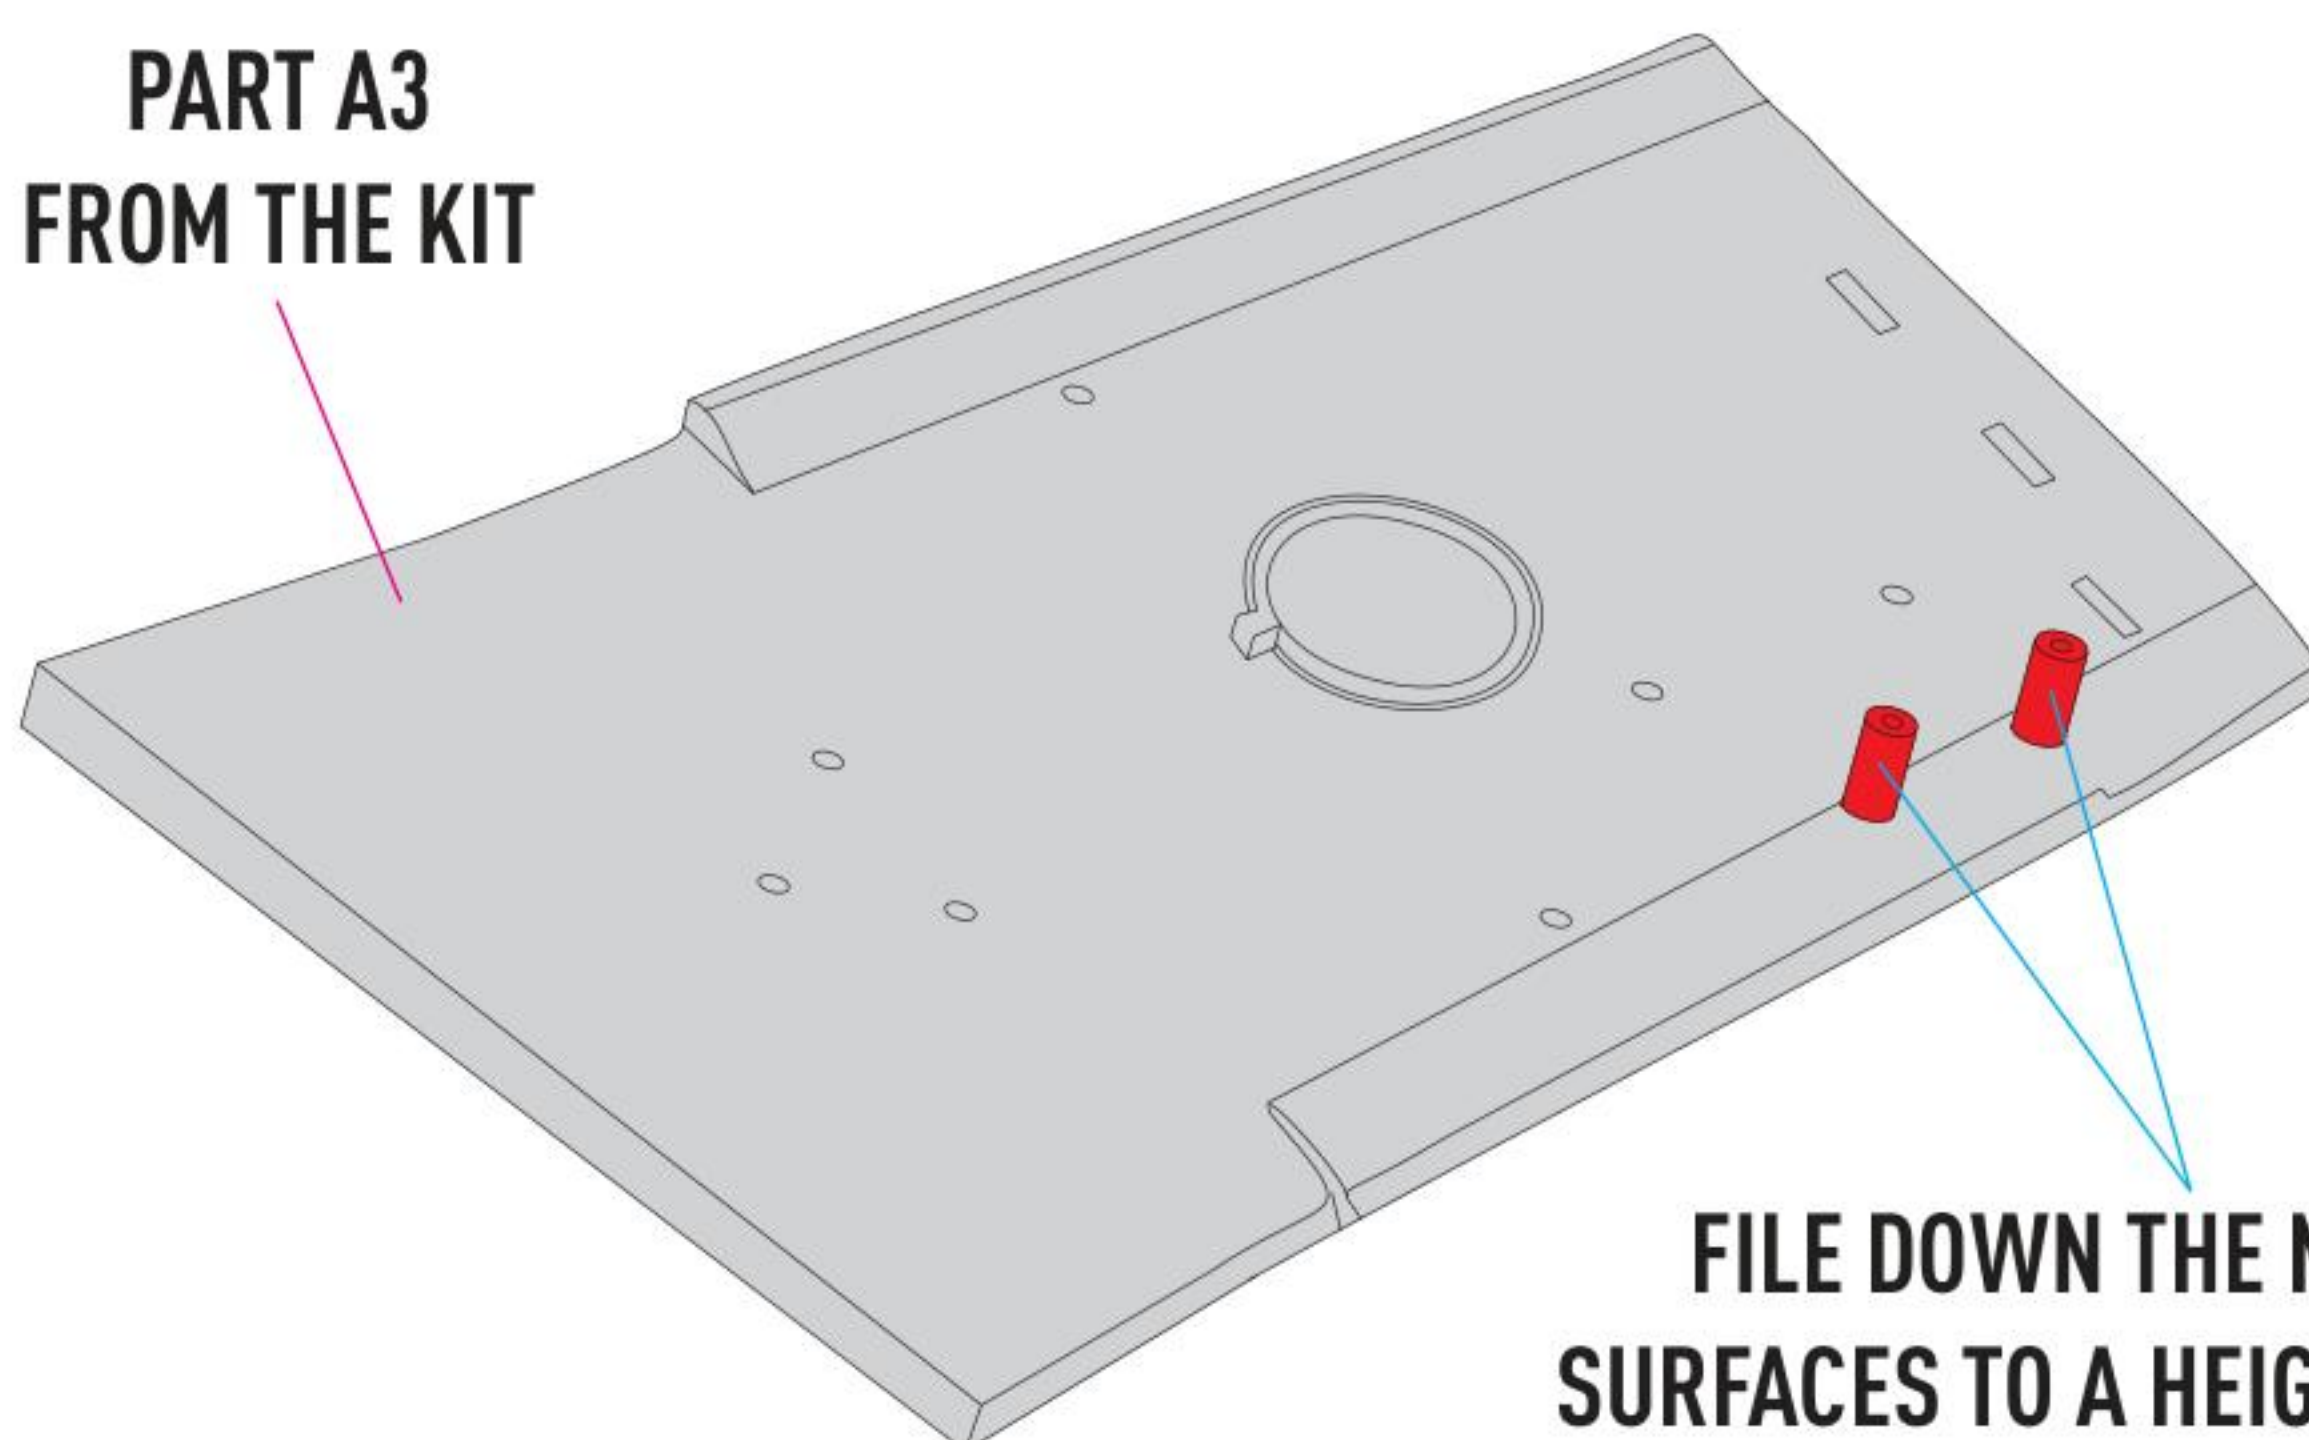


FILE DOWN THE MOUNTING
SURFACES TO A HEIGHT OF 1.5 MM

11

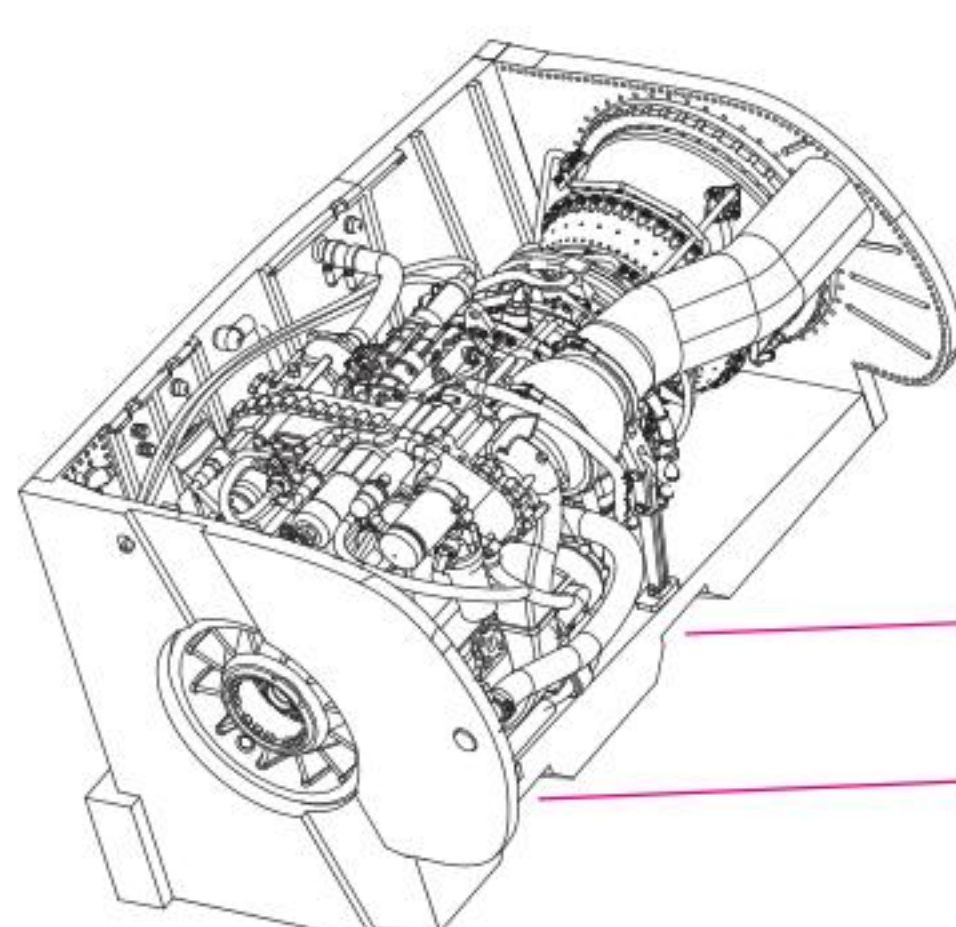


STEP 9

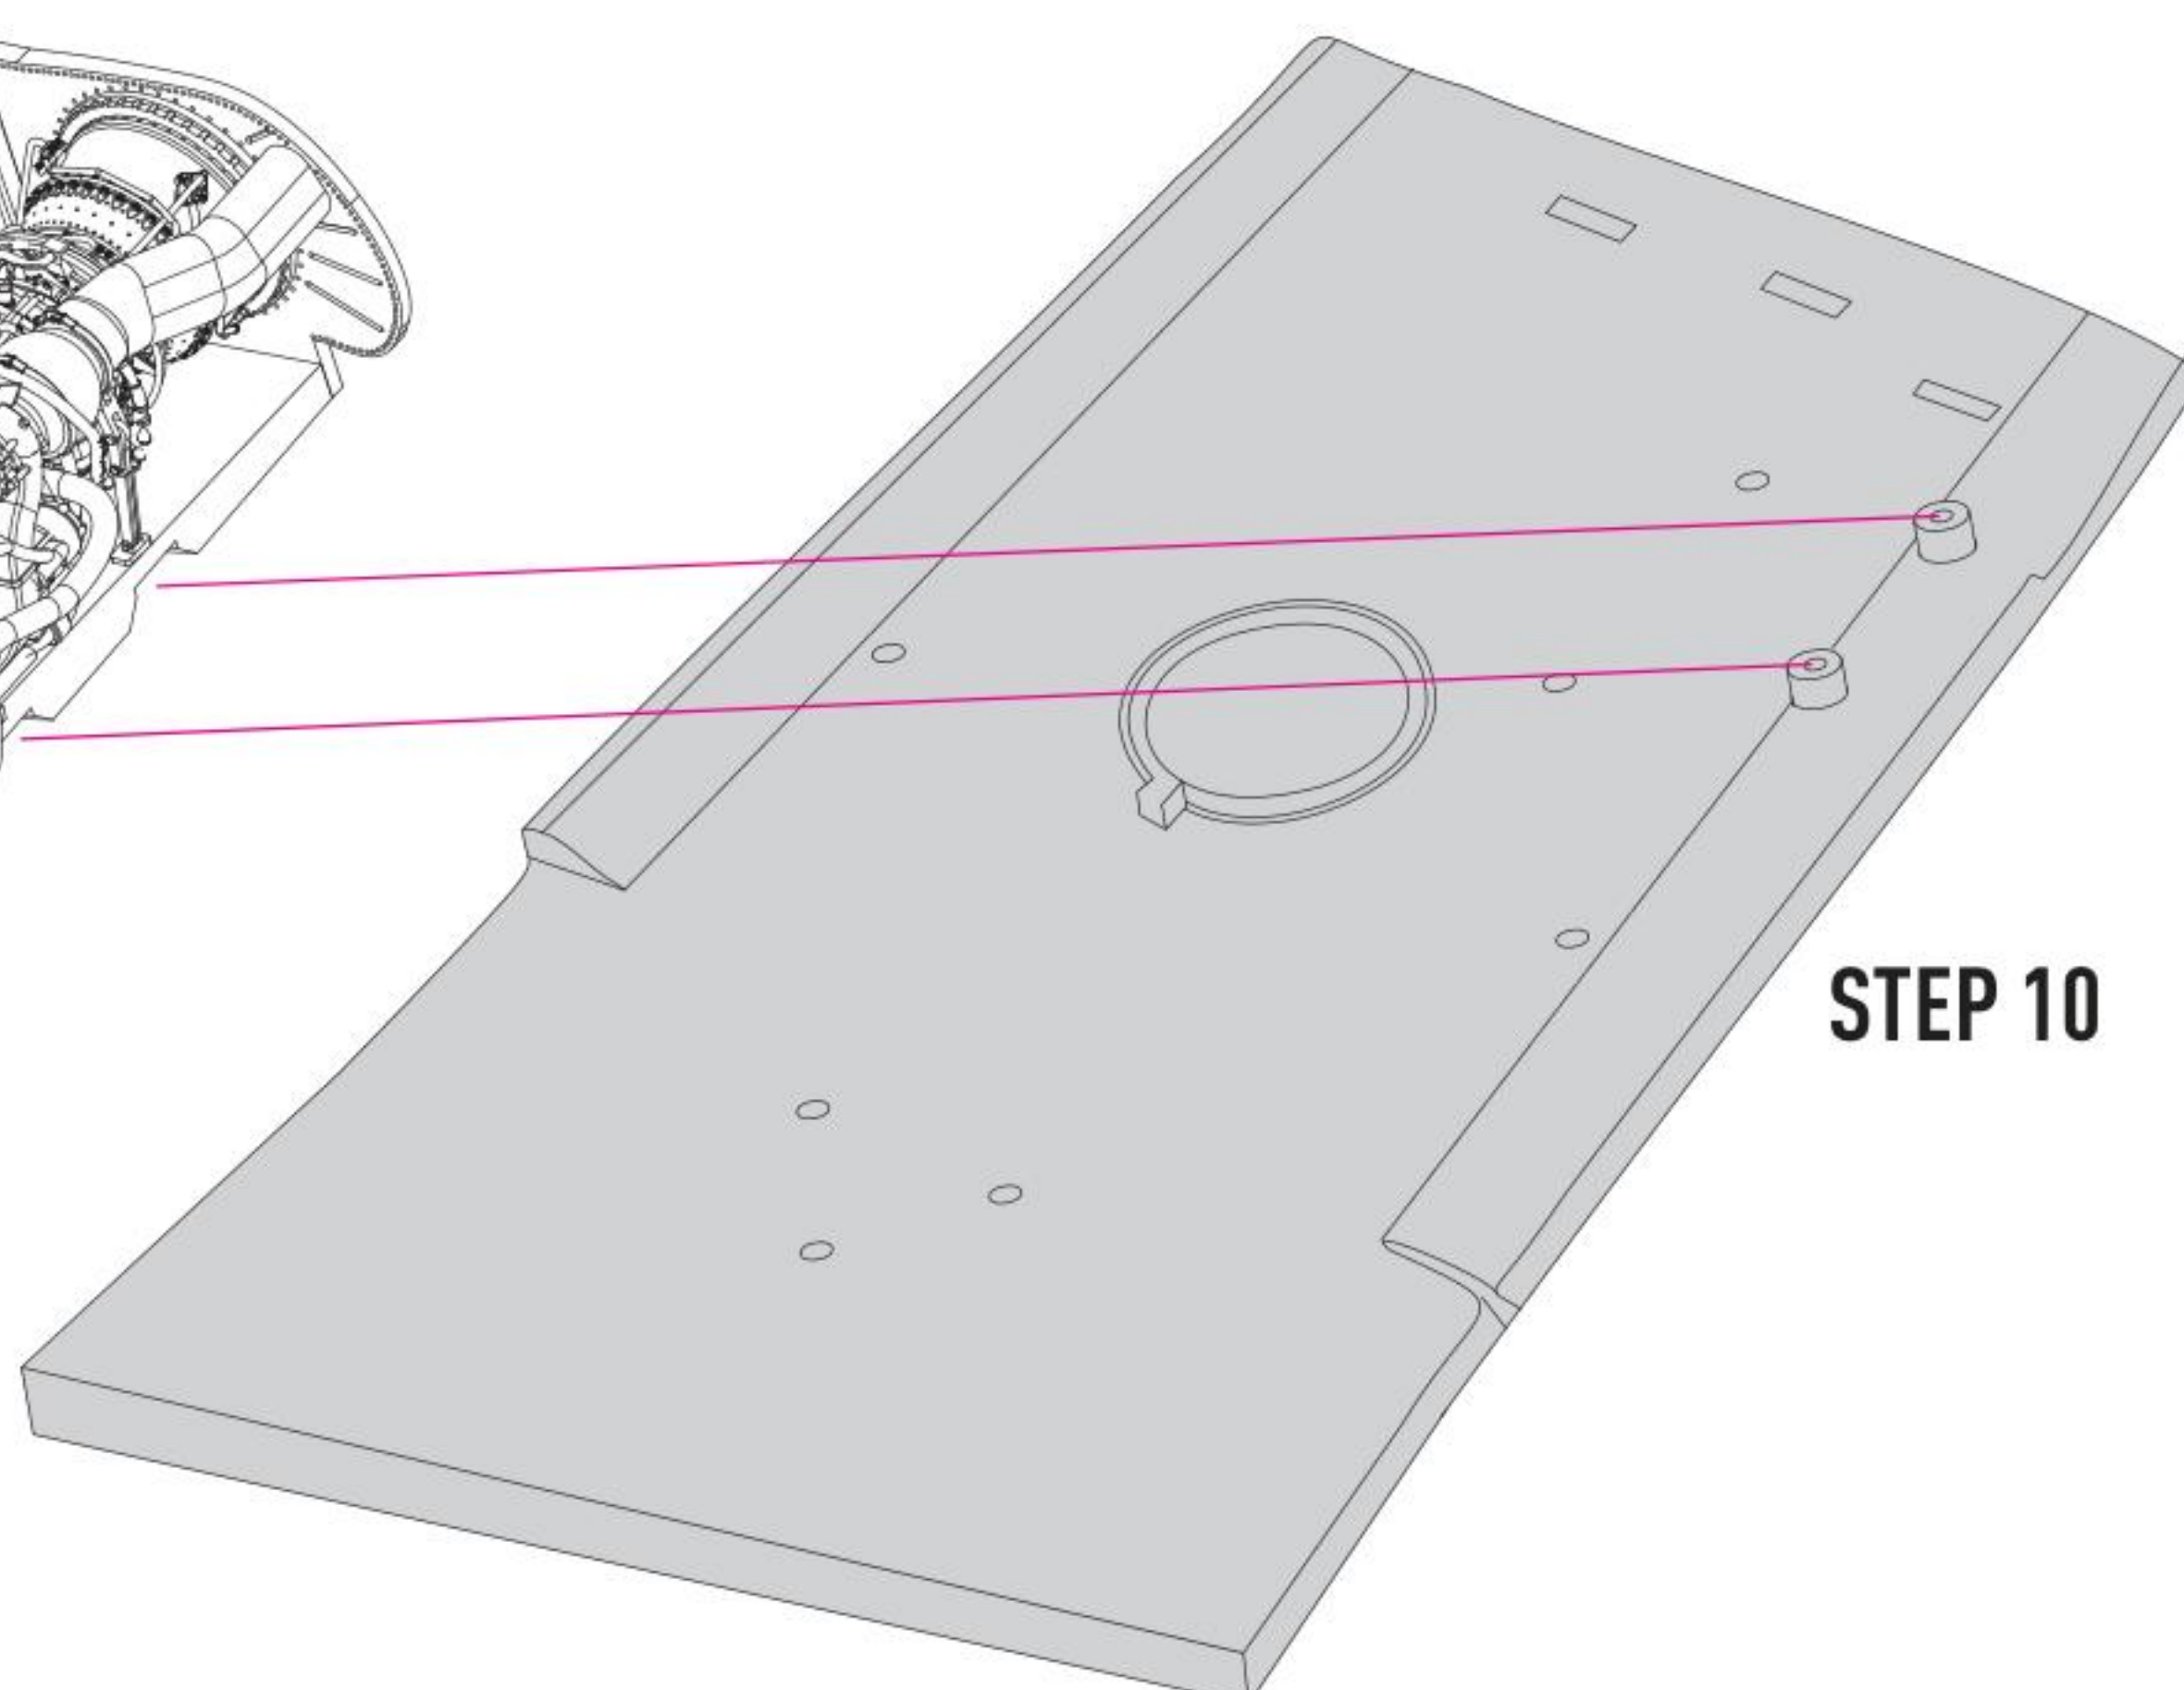

STEP 10

12


AFTER STEP 11,
WE ASSEMBLE THE HELICOPTER FUSELAGE
(PARTS A1 AND A2 FROM THE KIT)
AND PROCEED TO STEP 12

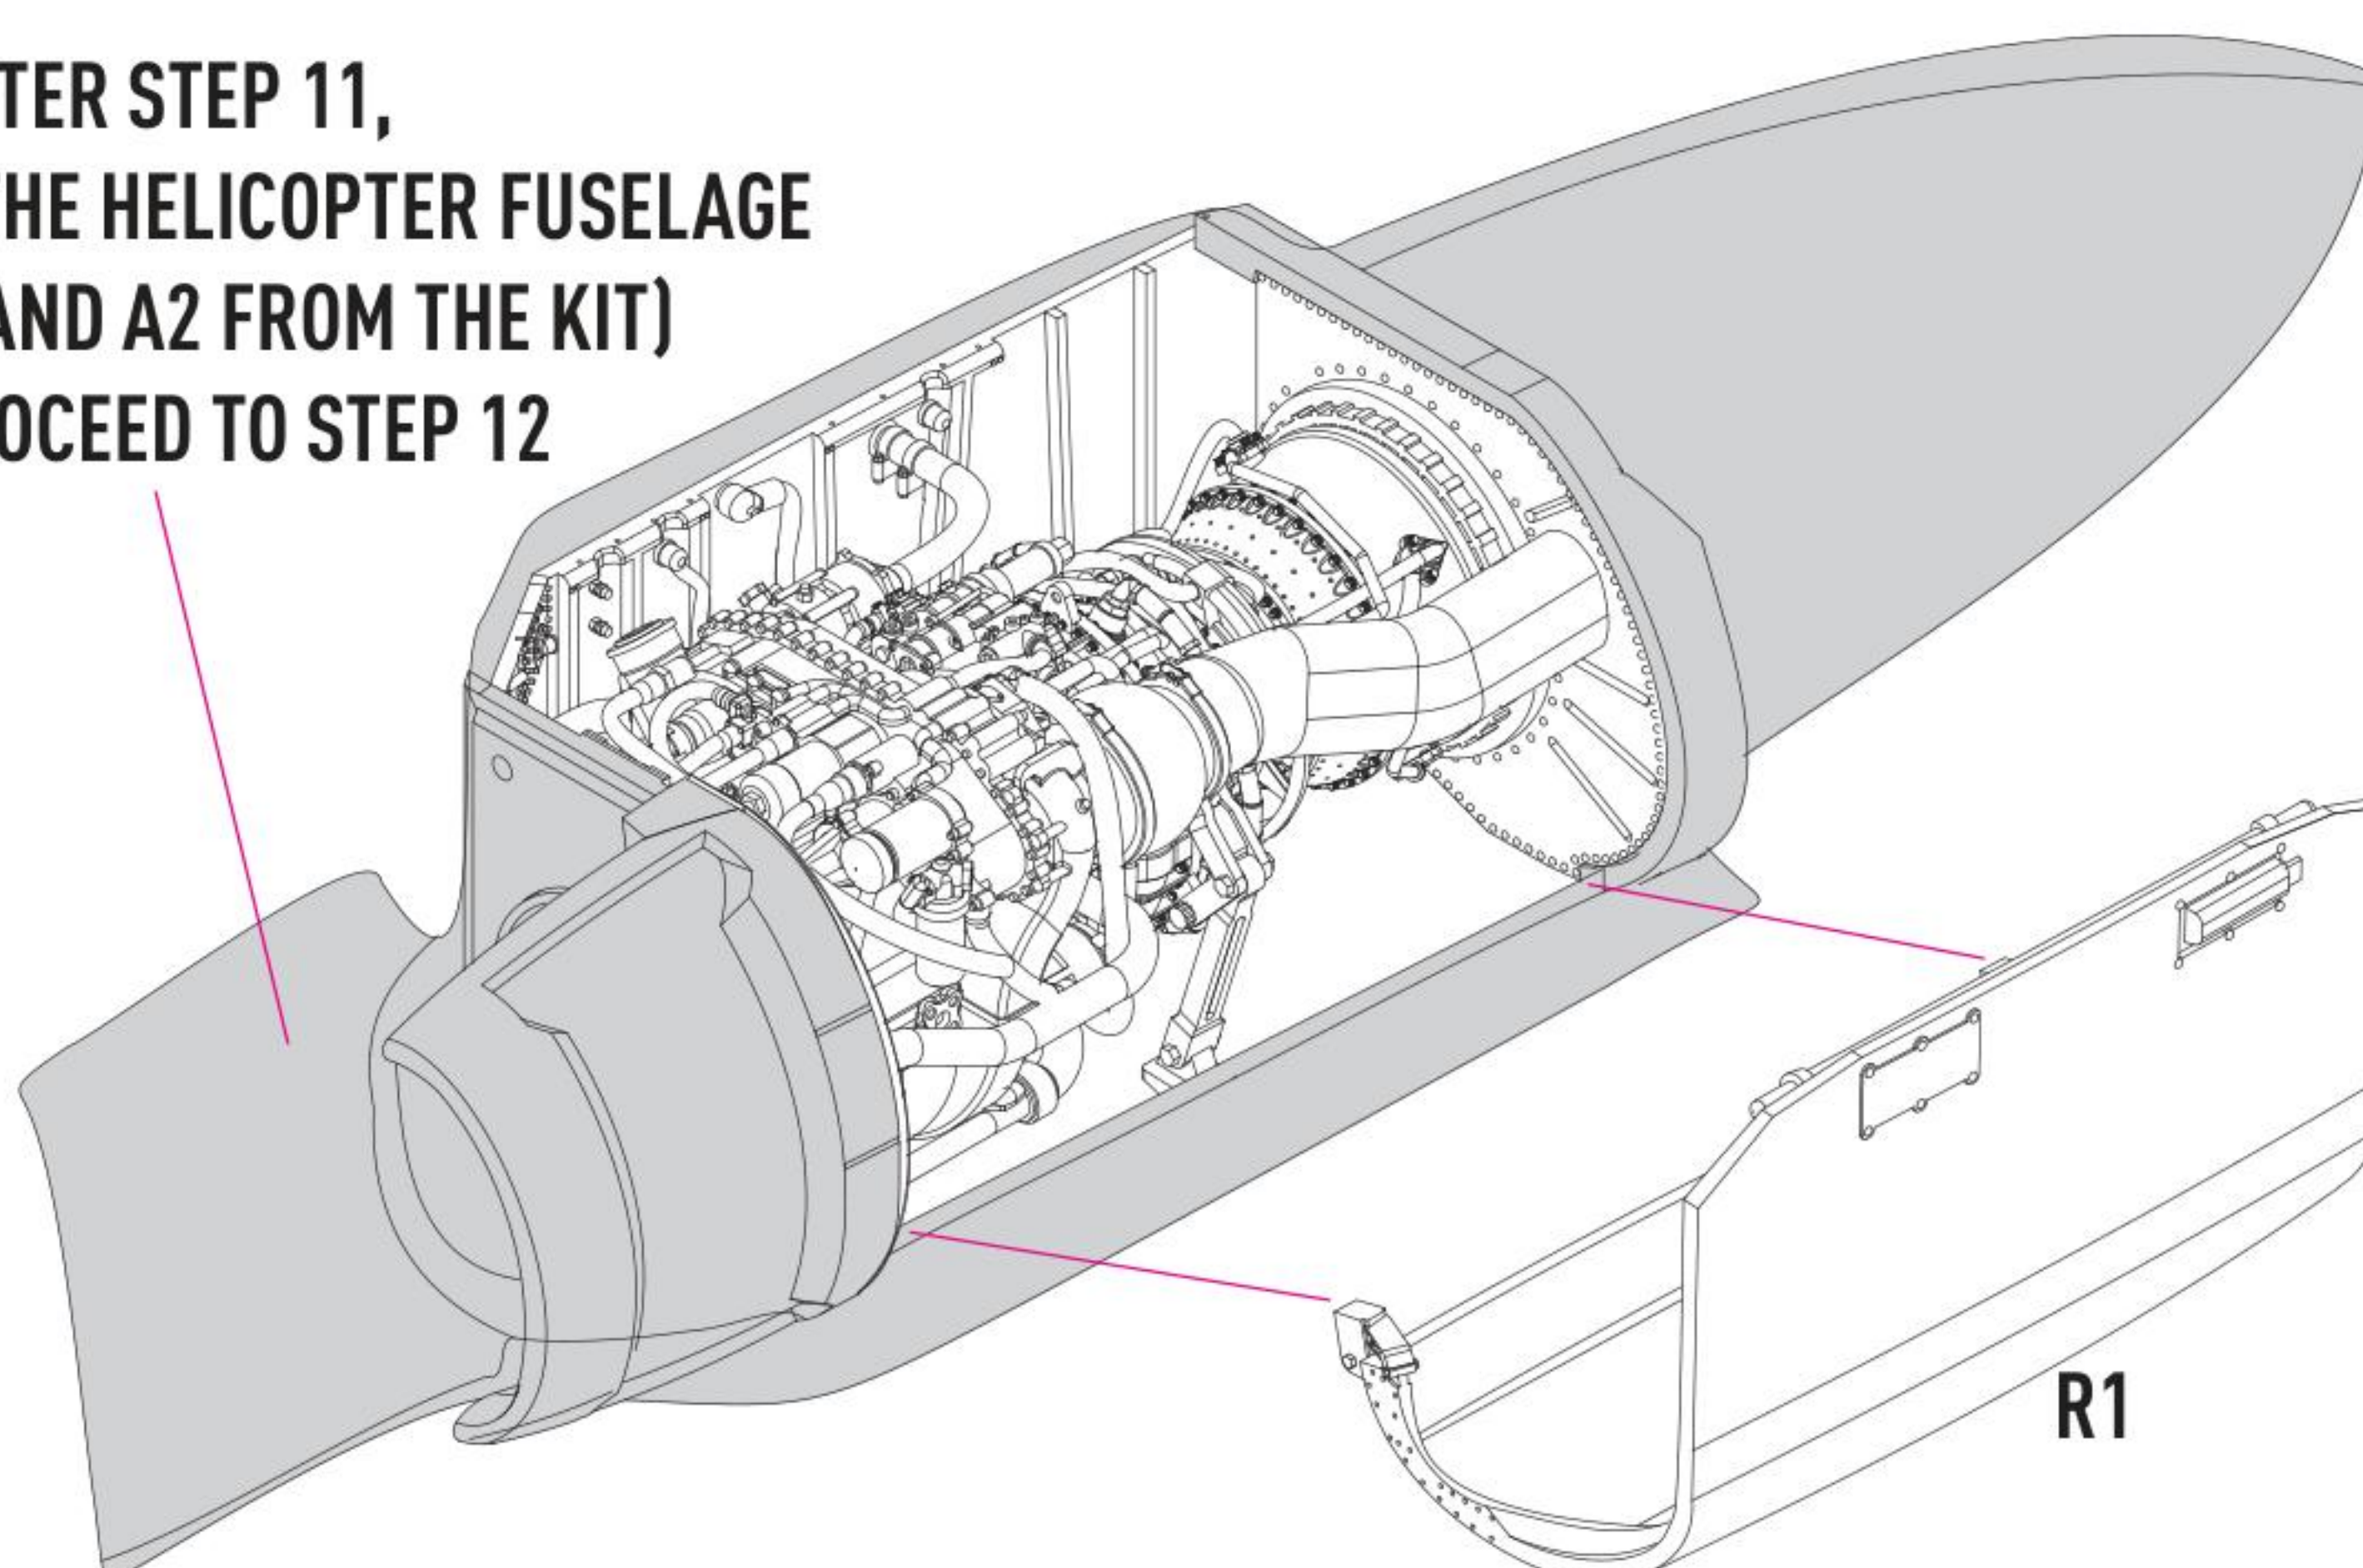

R1

DECAL INSTRUCTION


NEUTRAL GRAY H53
C13

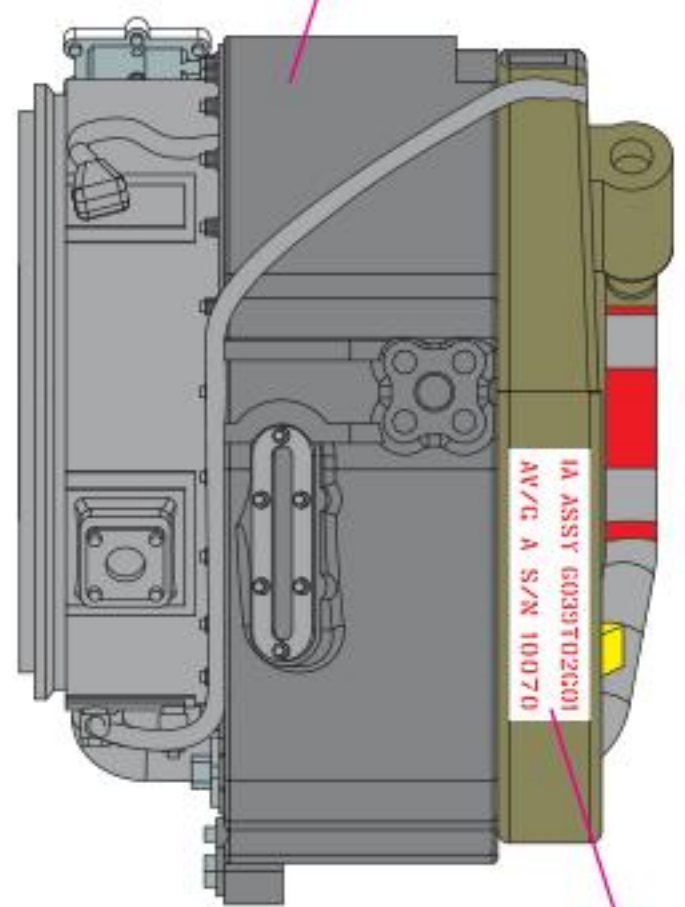

21

LEFT ENGINE VIEW

DARK IRON MC214

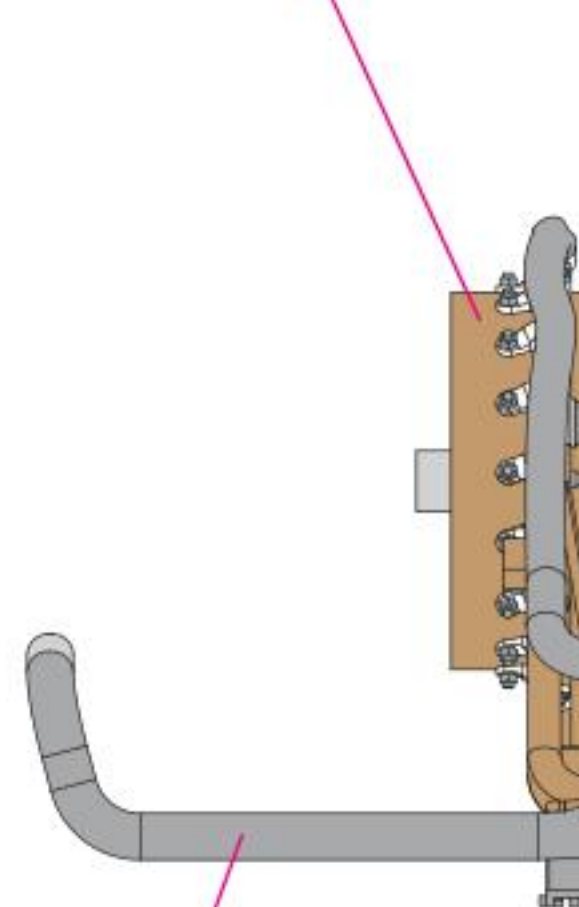


GRAY H308
C308


18

17



BURNT IRON H76
C61

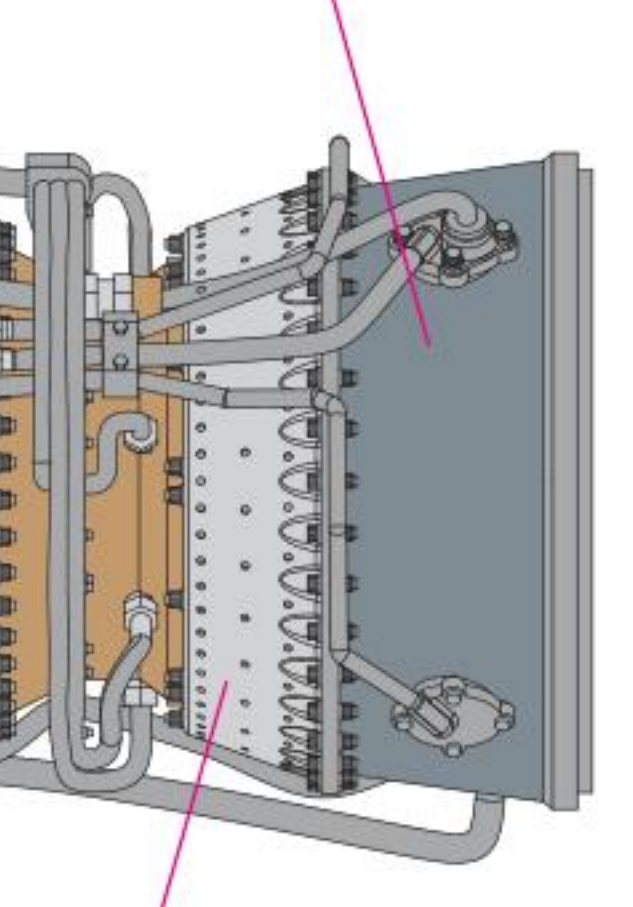


SILVER H8
C8

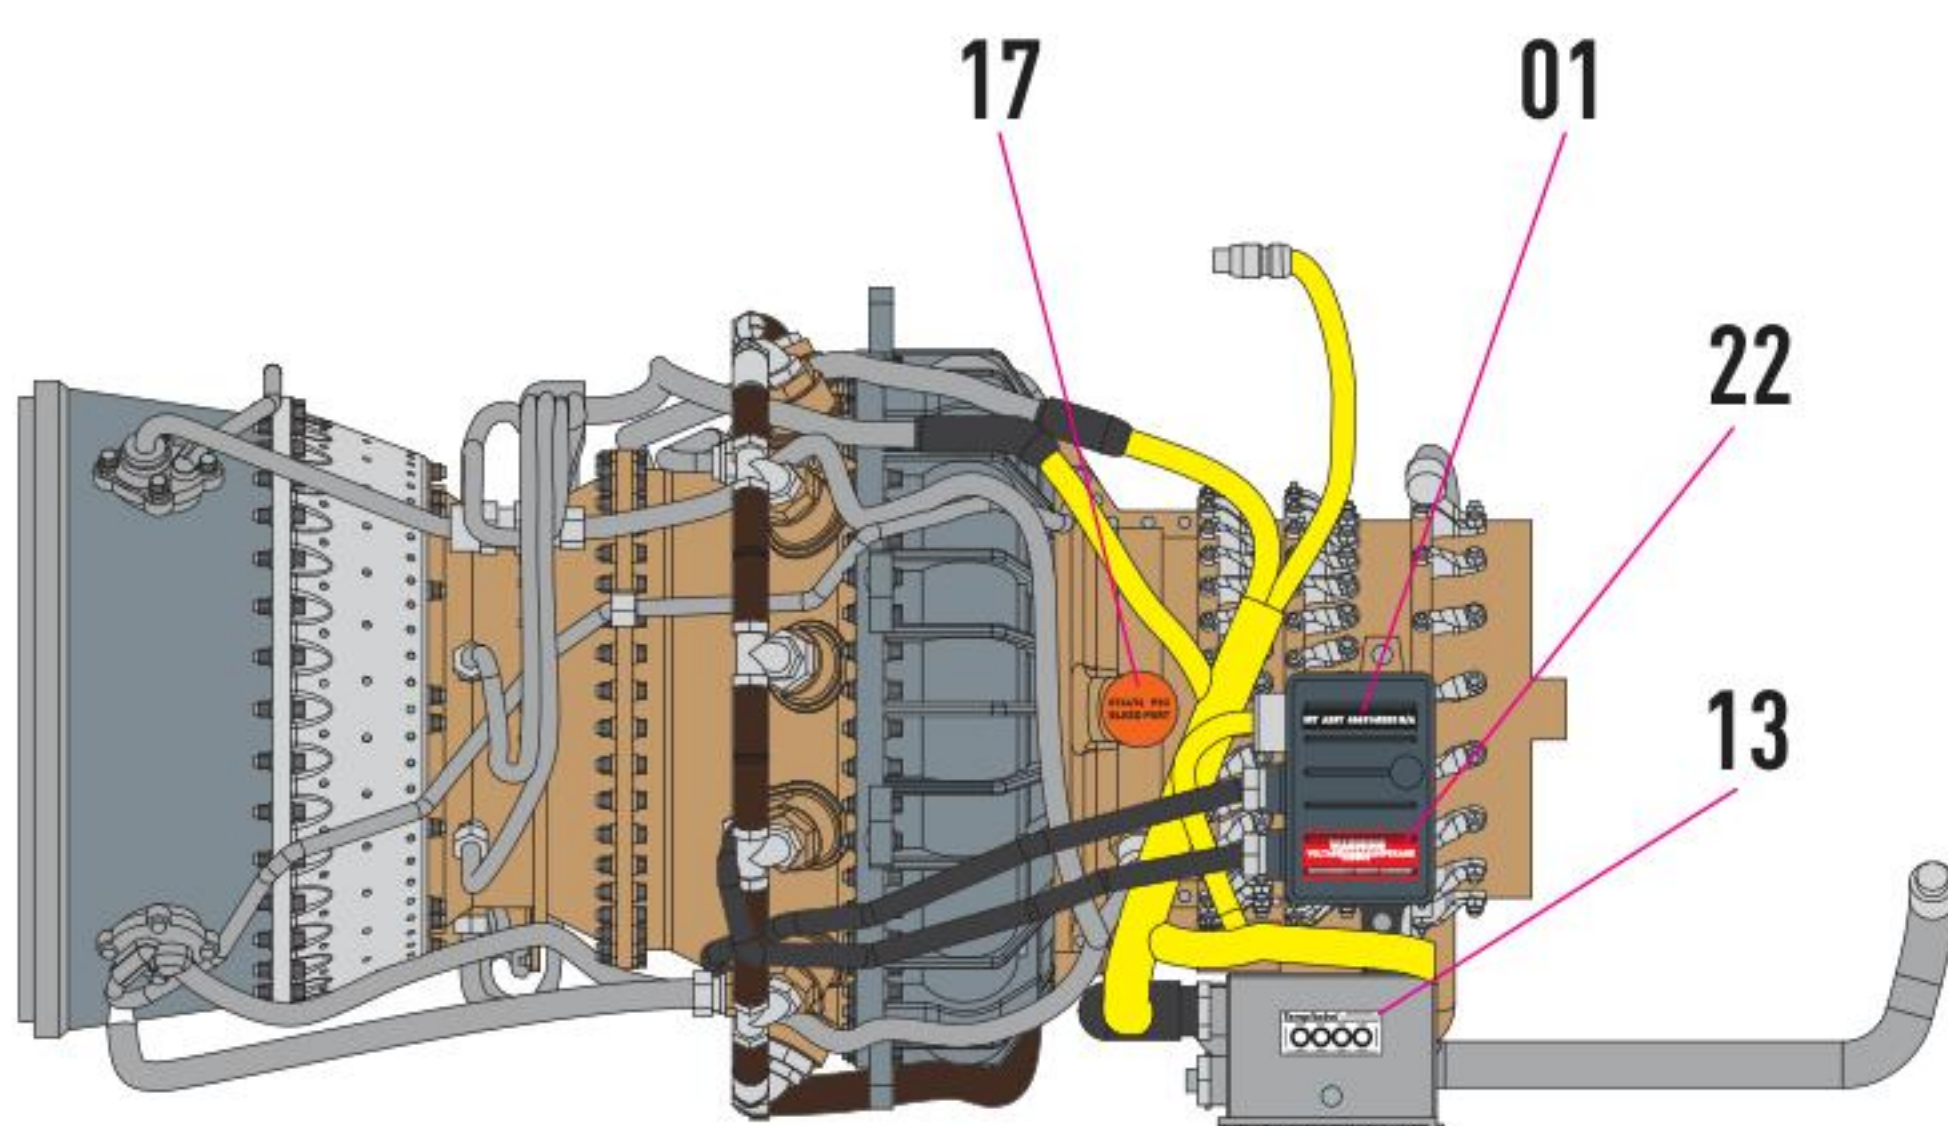


RIGHT ENGINE VIEW

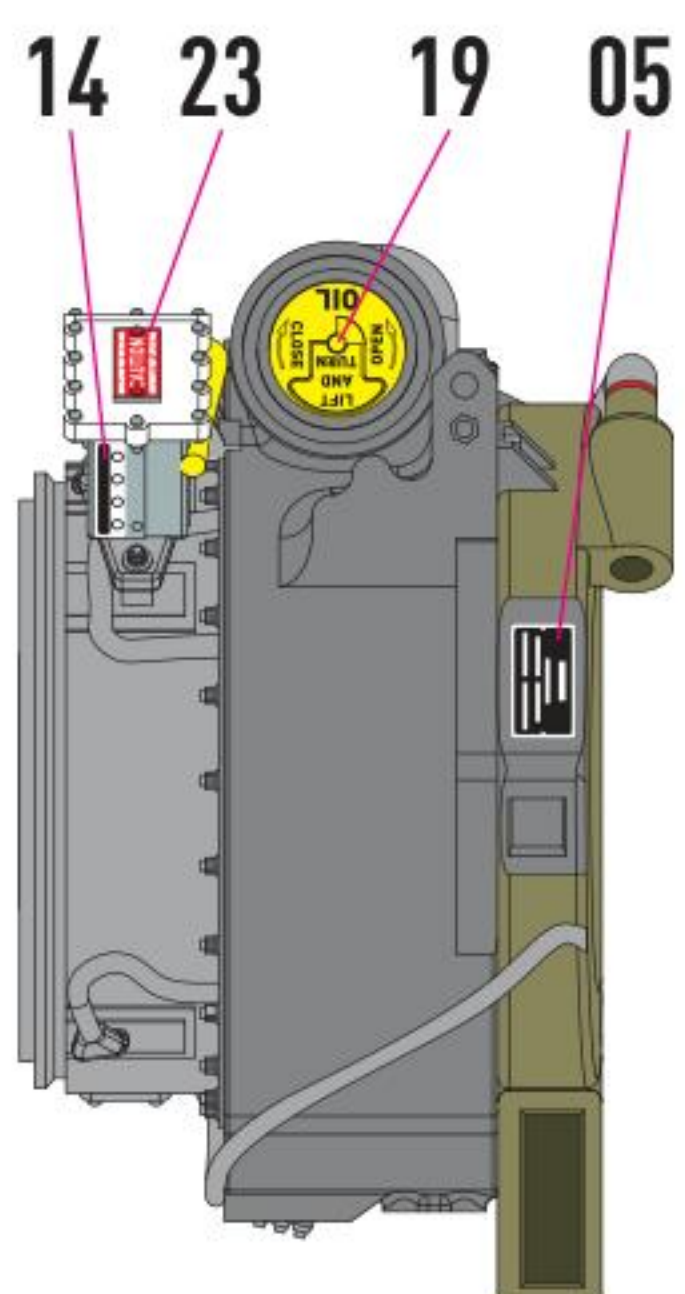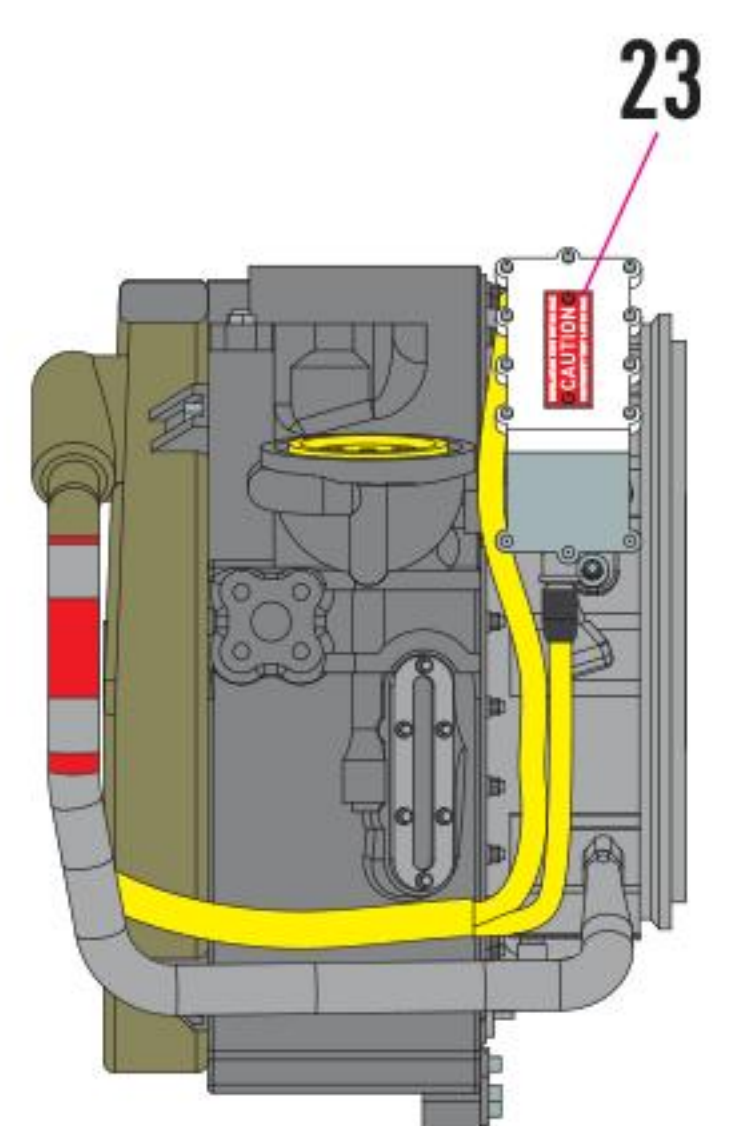

TOP ENGINE VIEW

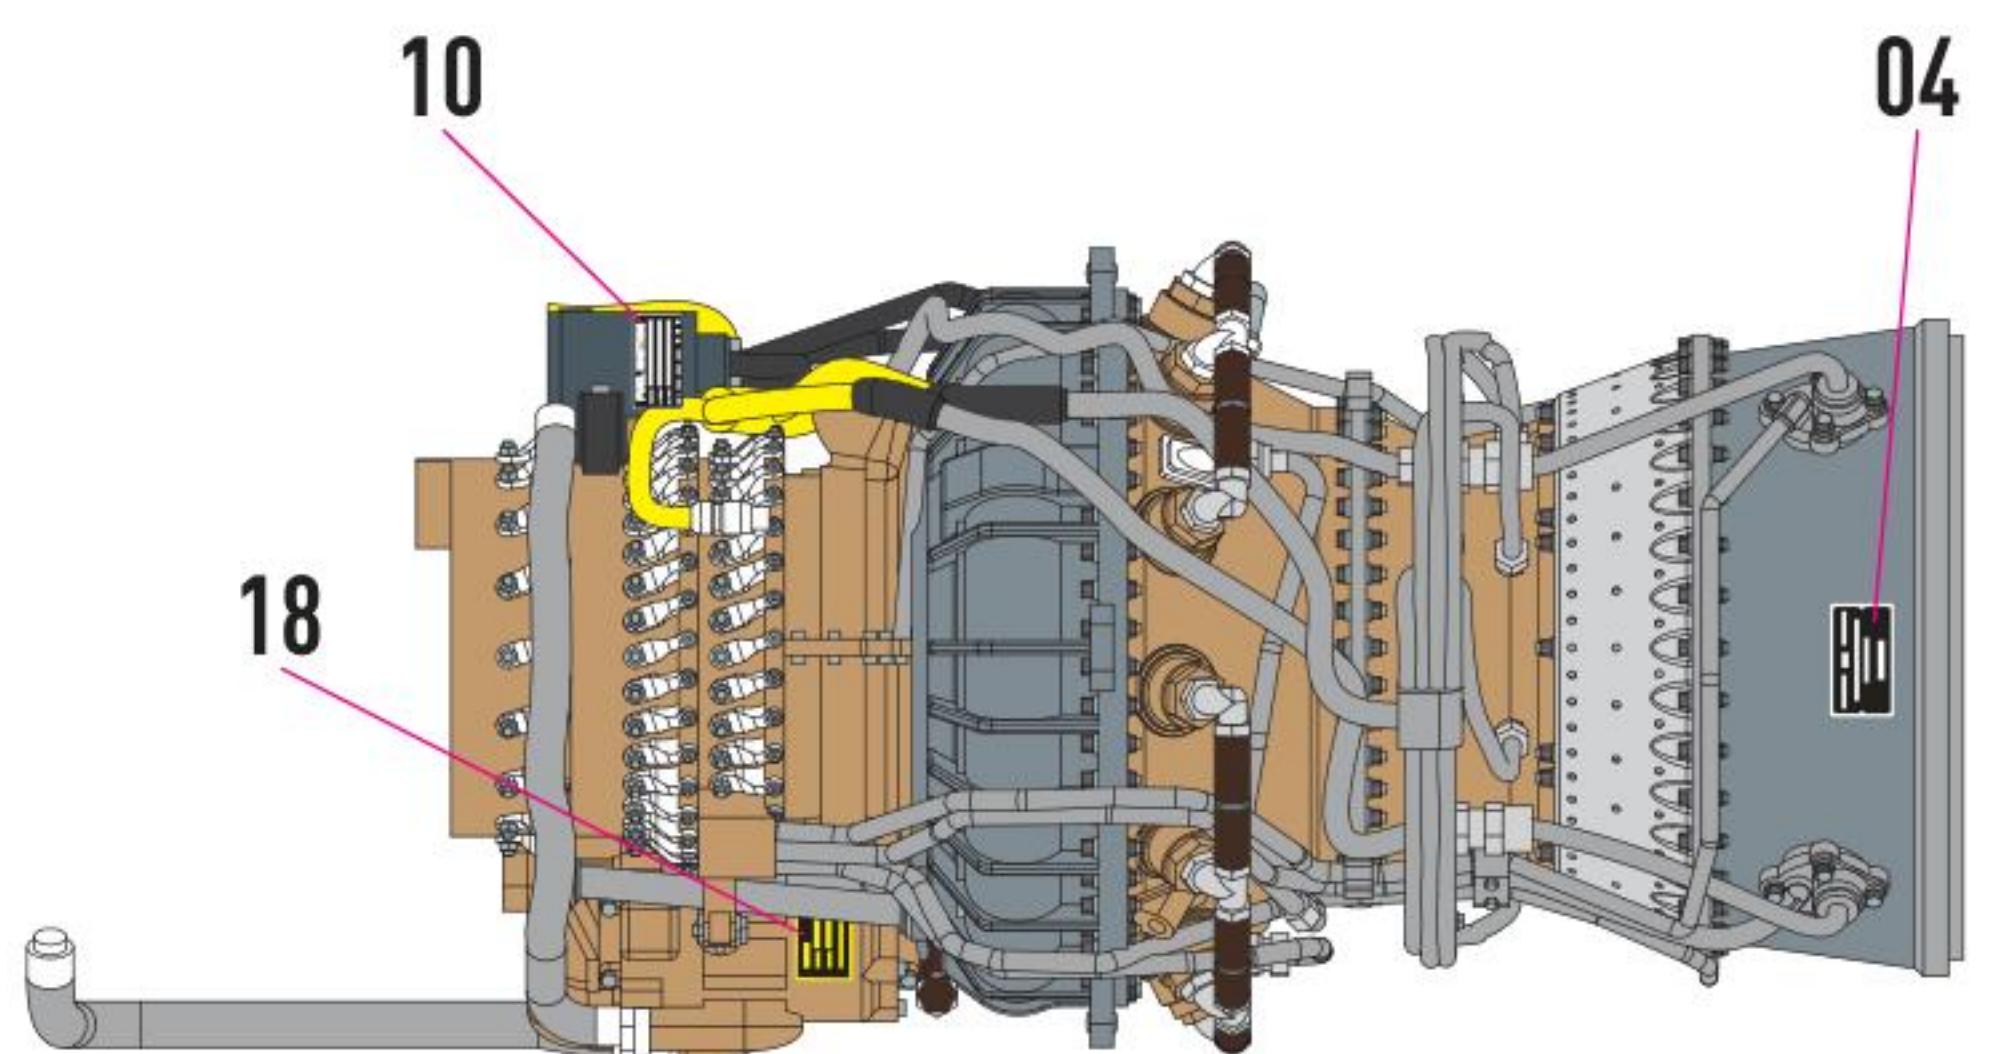

BACK VIEW

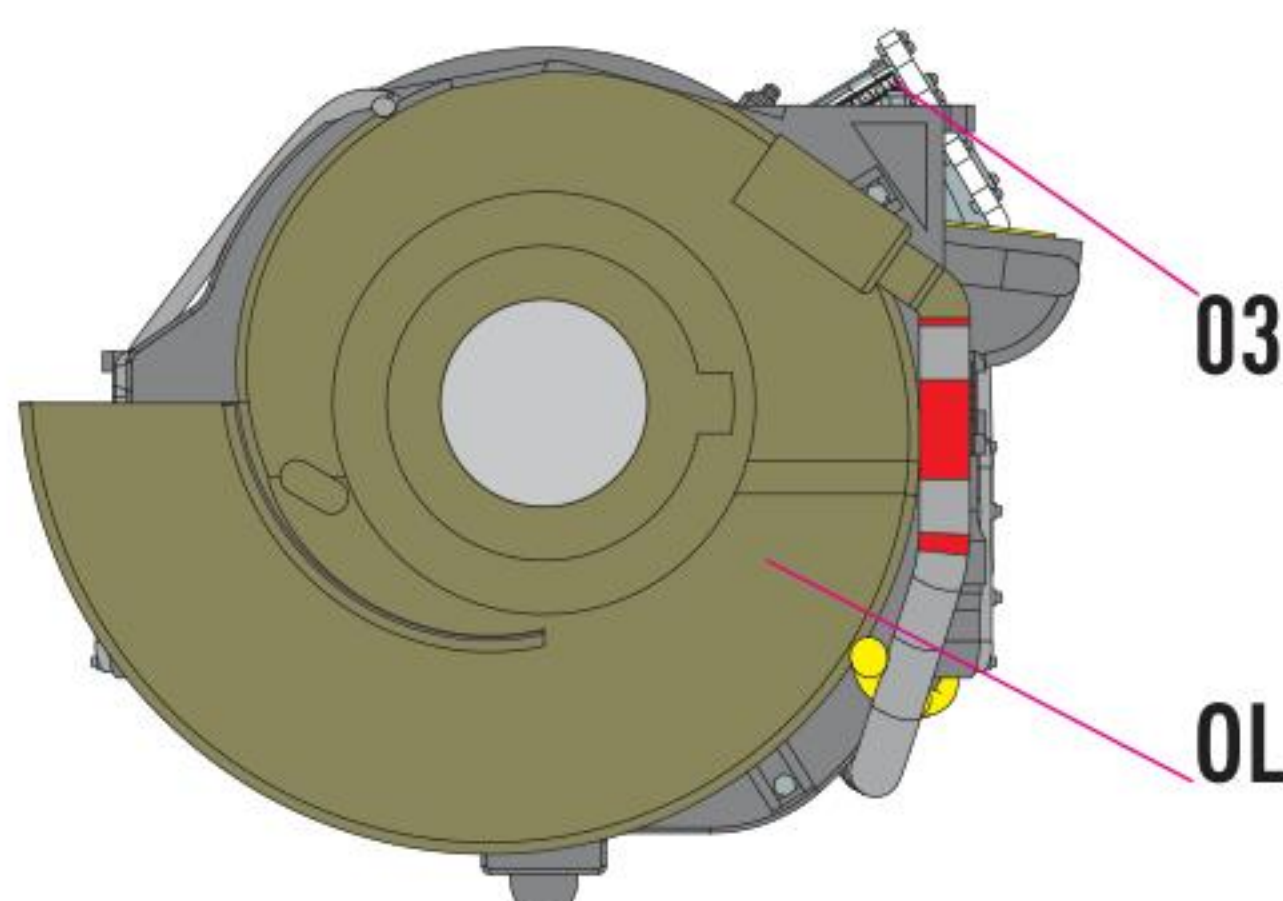

OLIVE DRAB H52
C12

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM


[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit_official](https://www.instagram.com/reskit_official)


[youtube.com/@reskit-usmd](https://www.youtube.com/@reskit-usmd)

DECAL INSTRUCTION


FRONT VIEW

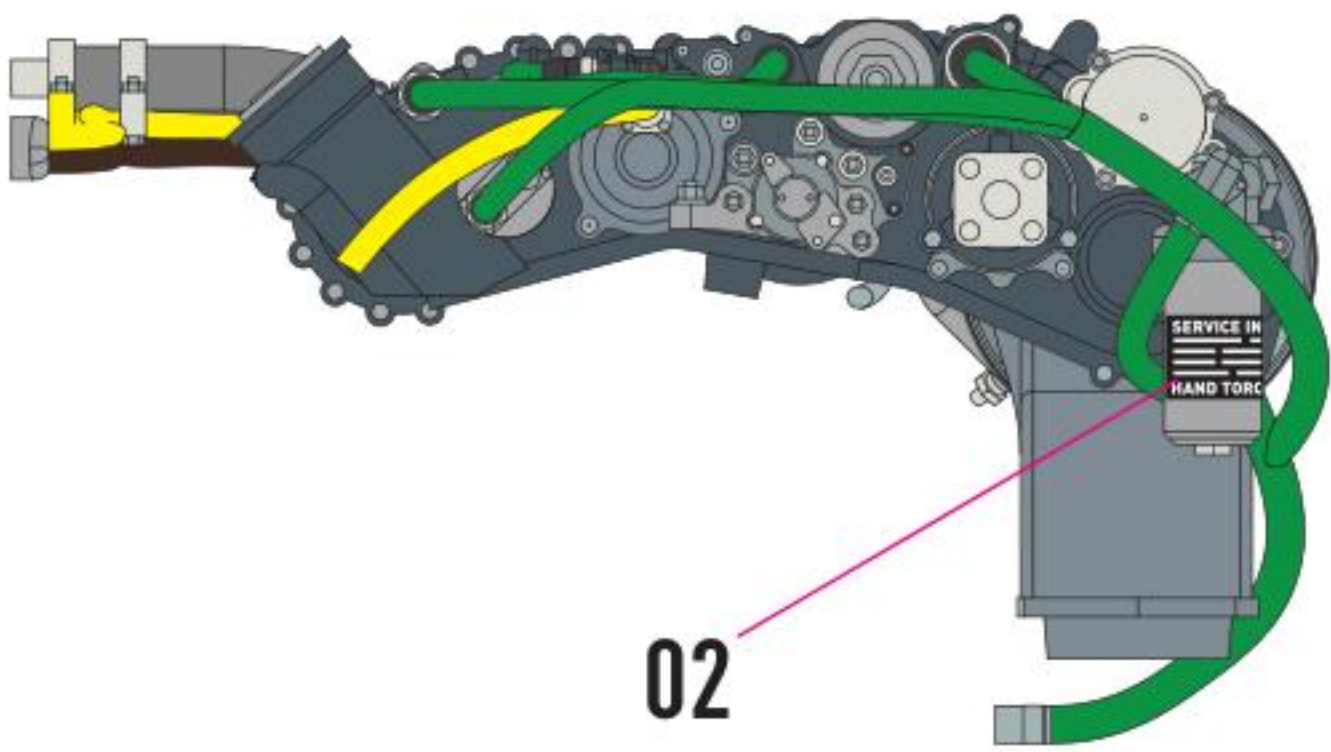


LEFT VIEW

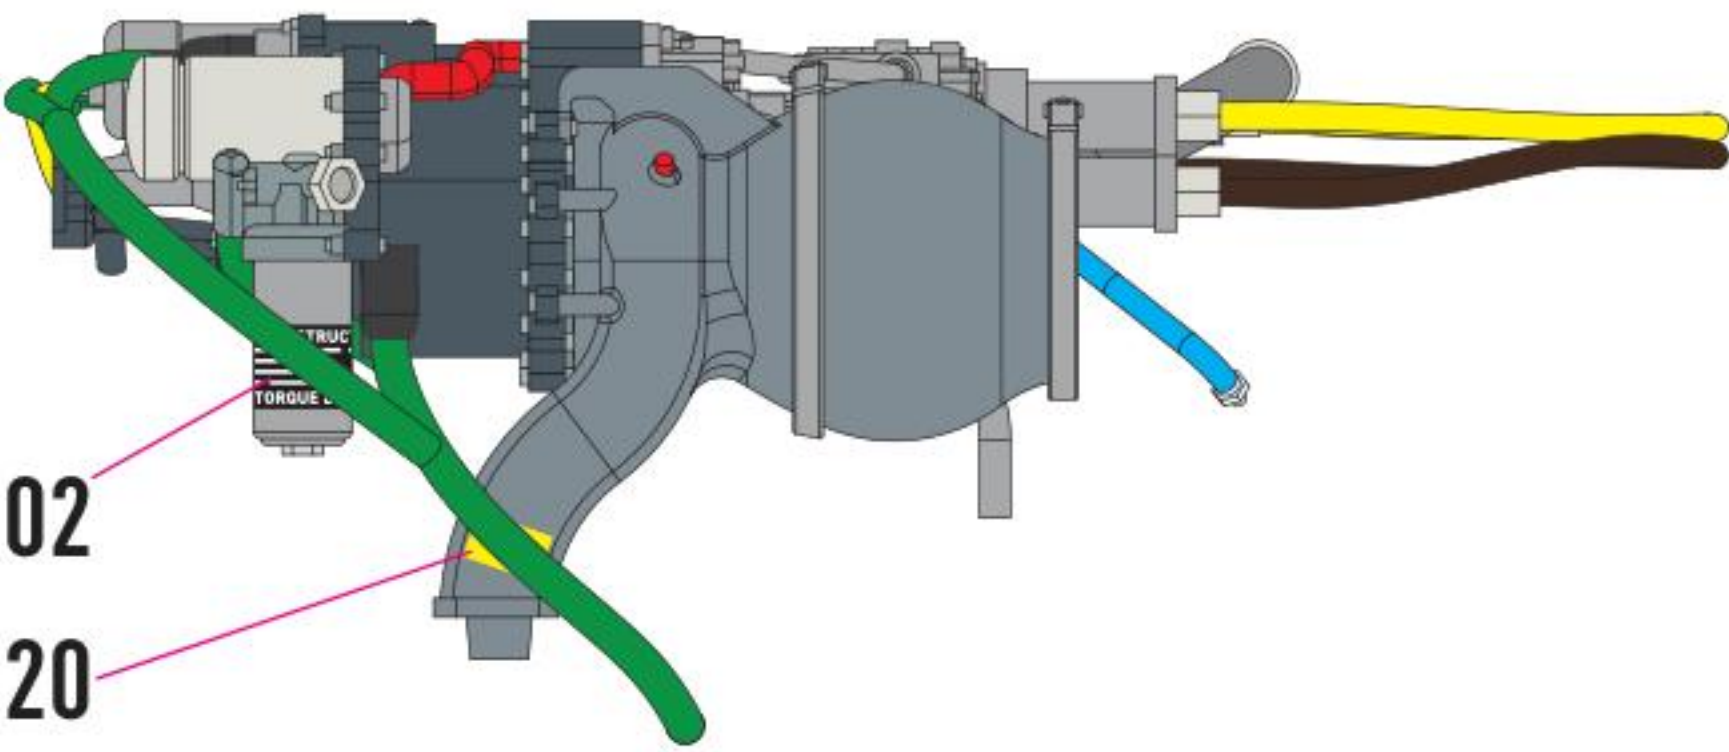

RIGHT VIEW

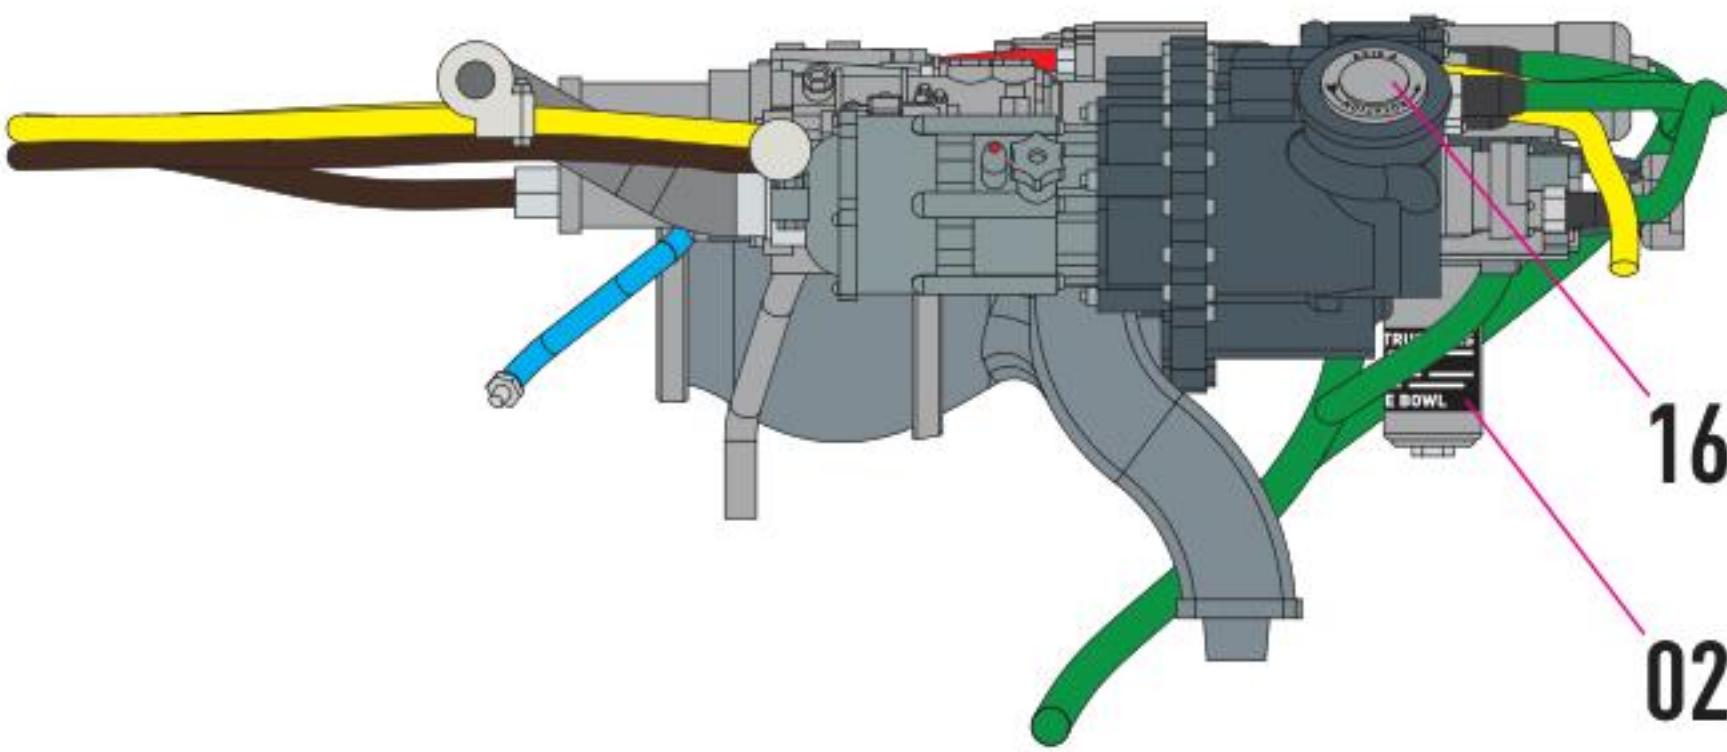

TOP VIEW

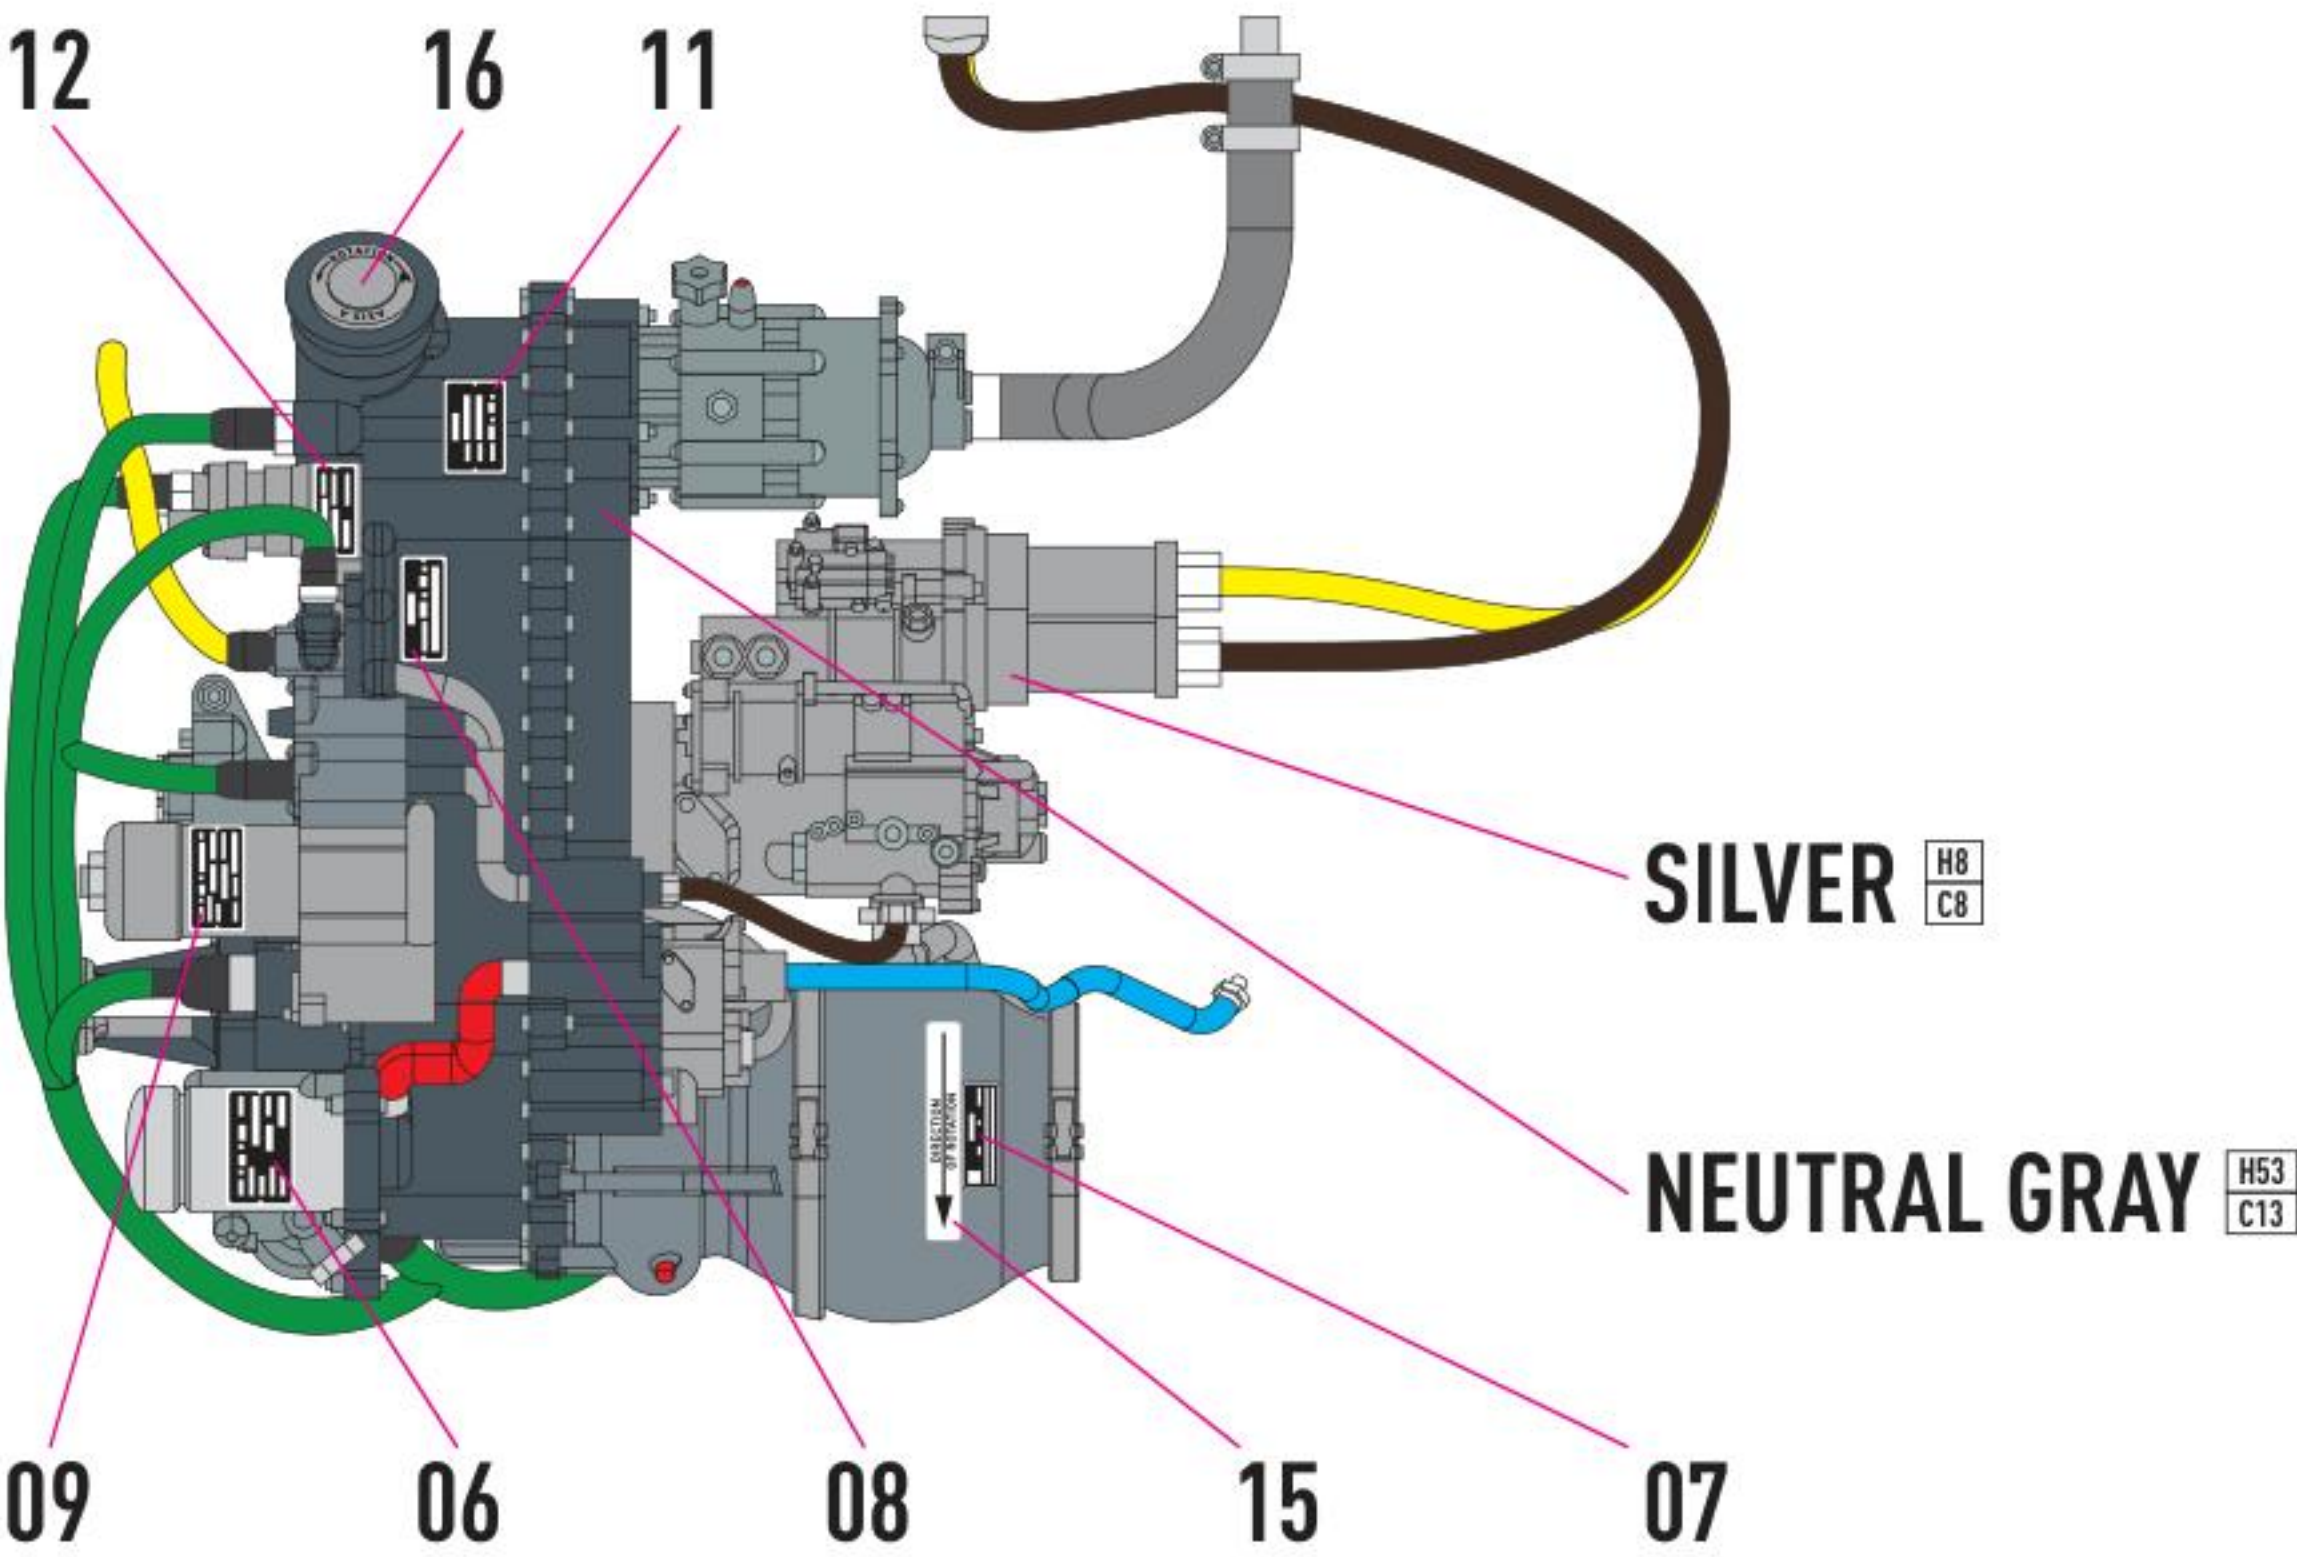

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
SILVER	H8	C8
OLIVE DRAB	H52	C12
NEUTRAL GRAY	H53	C13

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
GRAY	H308	C308
DARK IRON		MC214
BURNT IRON	H76	C61

general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

[fb.com/reskit.official](https://www.facebook.com/reskit.official)

[instagram.com/reskit_official](https://www.instagram.com/reskit_official)

[youtube.com/@reskit-usmd](https://www.youtube.com/@reskit-usmd)