


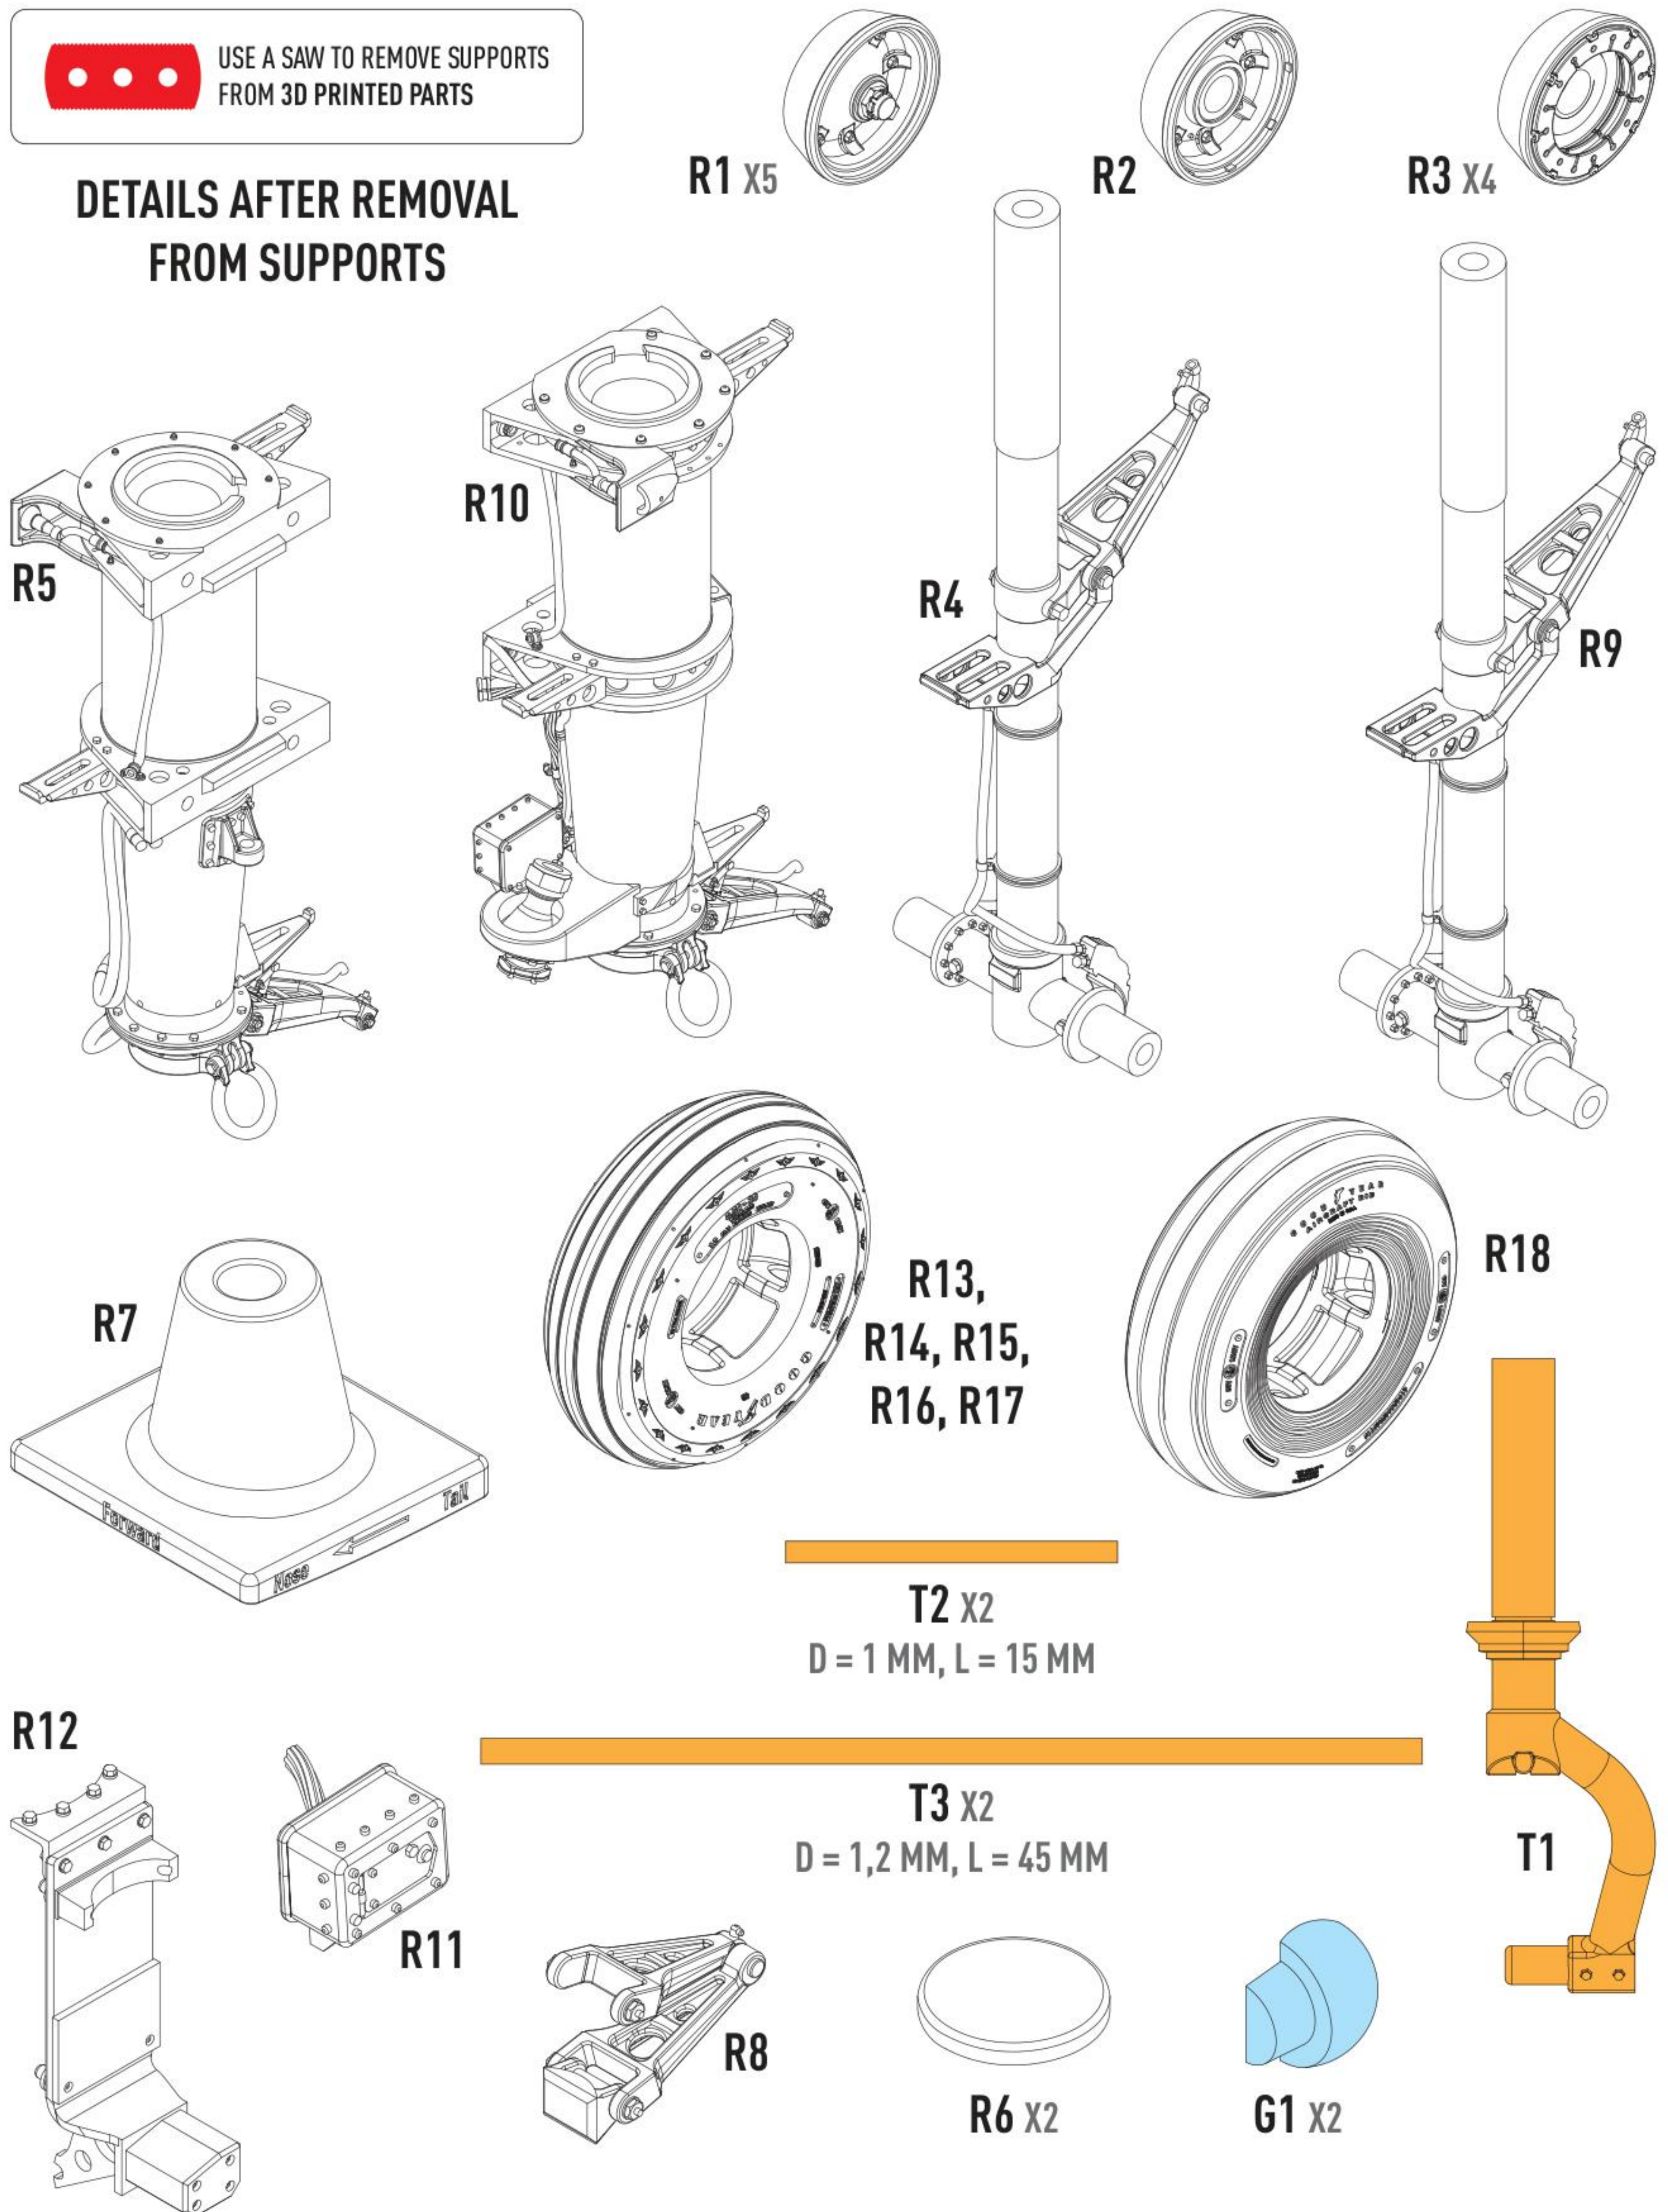


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS




BEFORE INSTALLATION - APPLY GLOSS VARNISH TO G1 PARTS


1

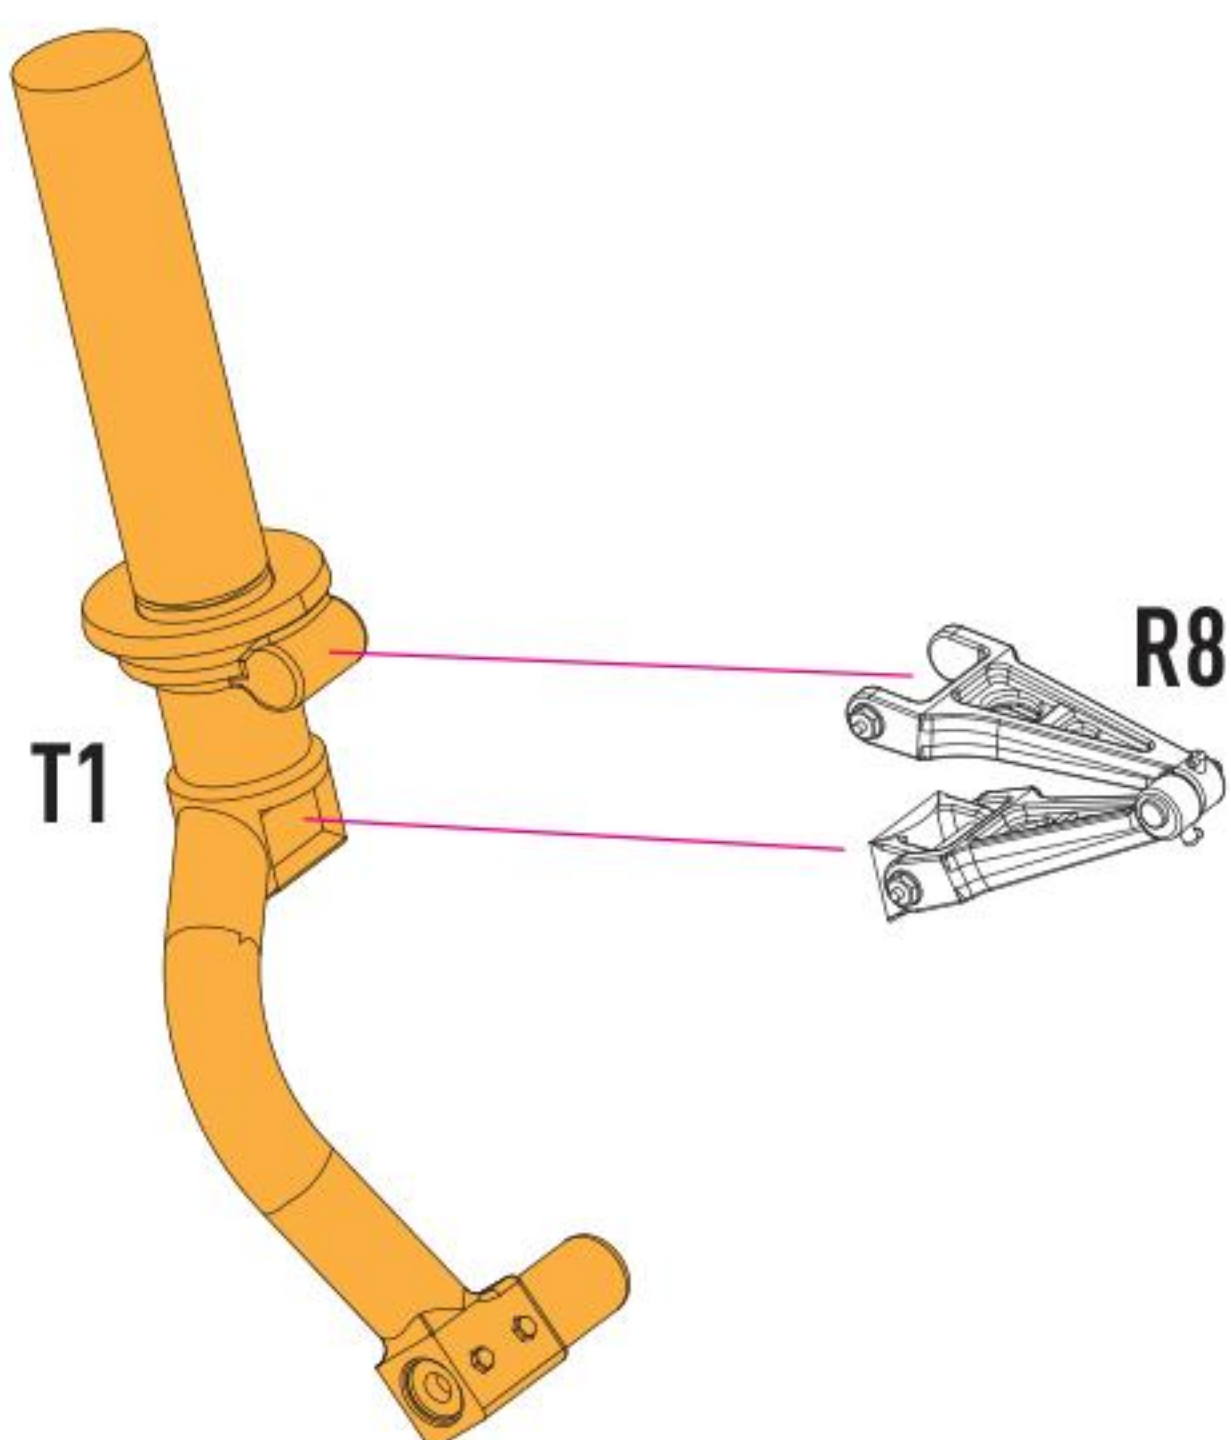


2

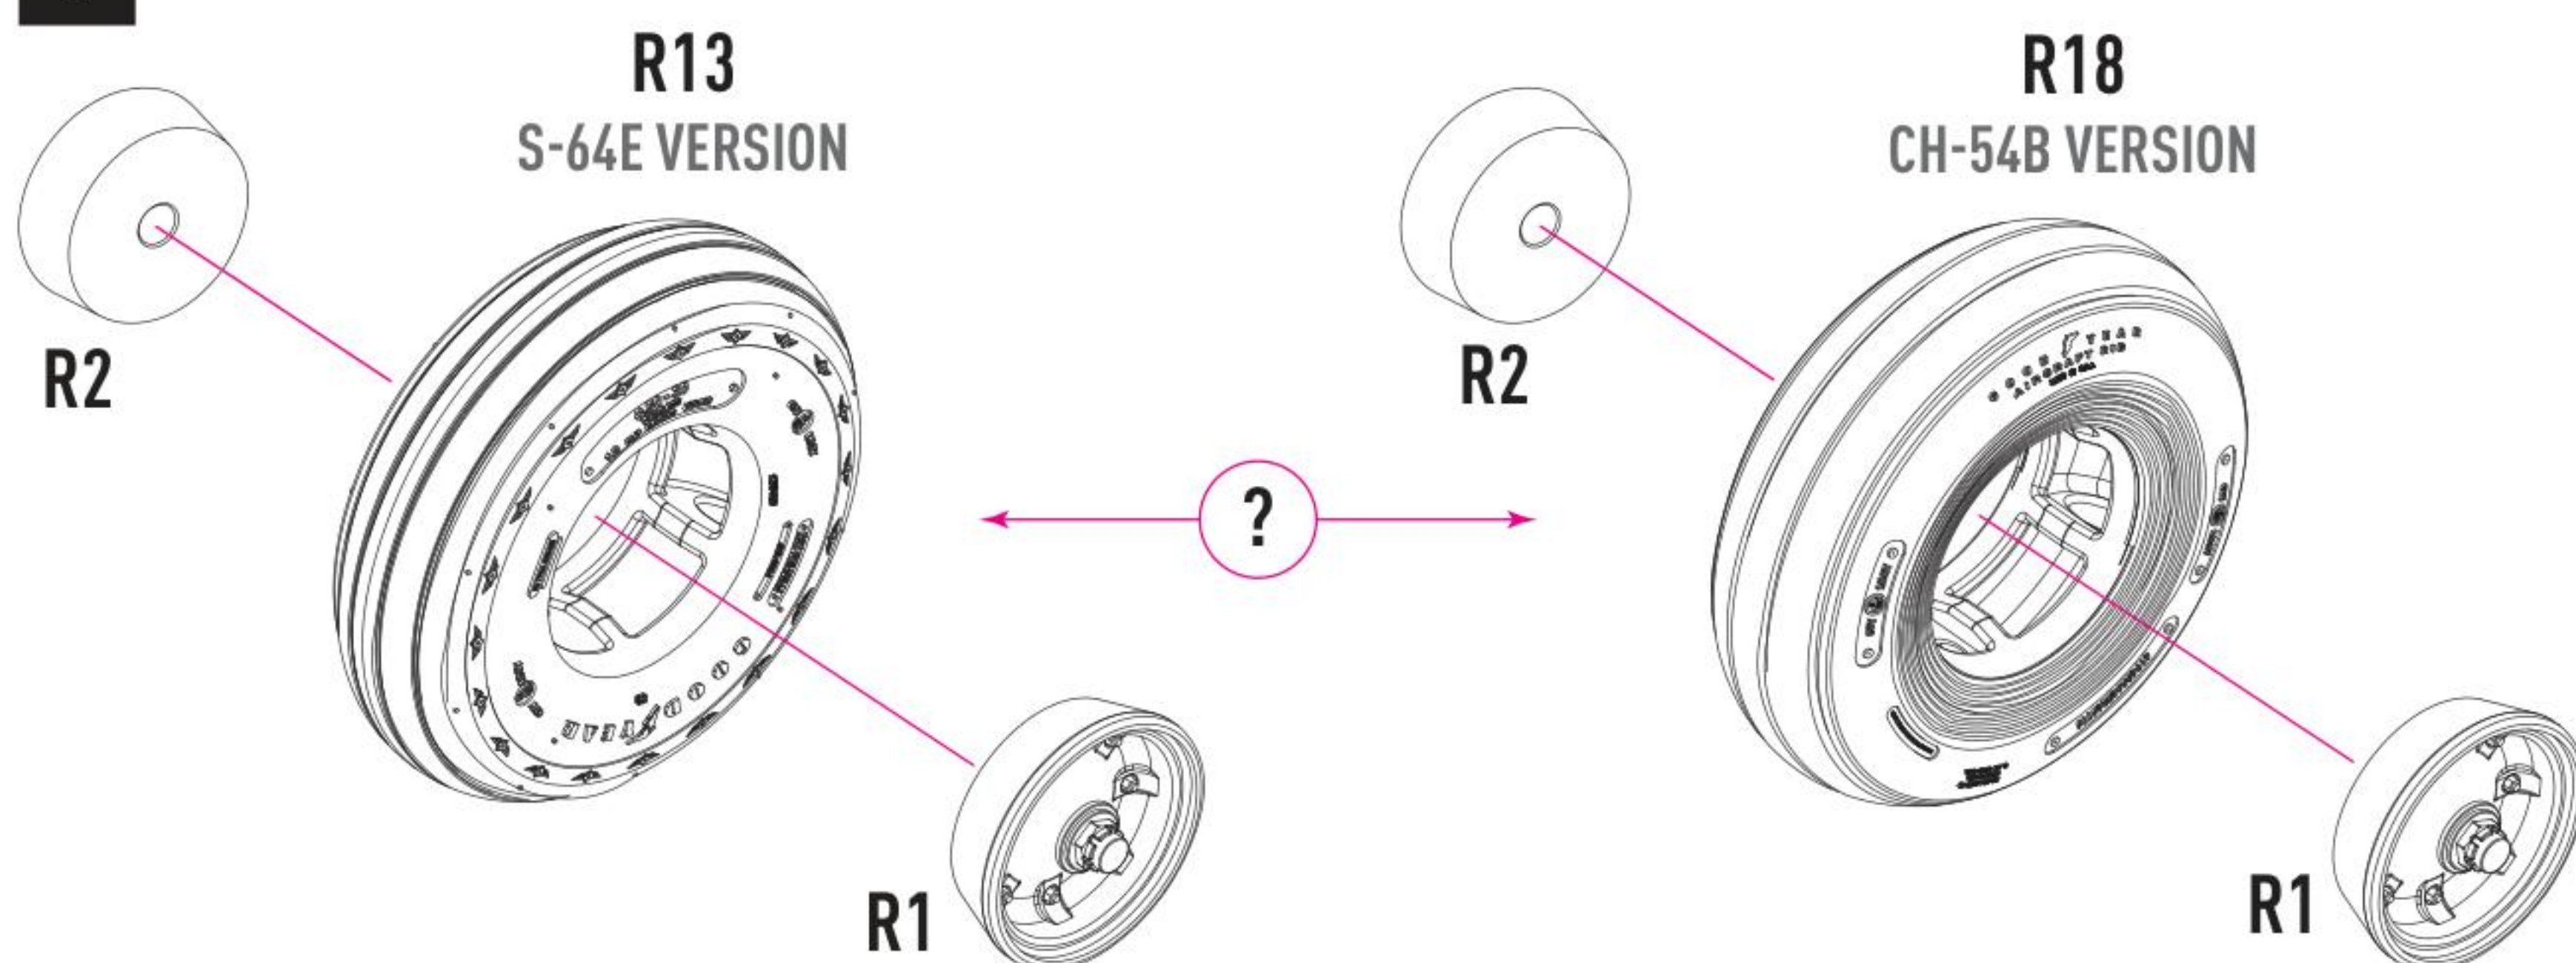


3

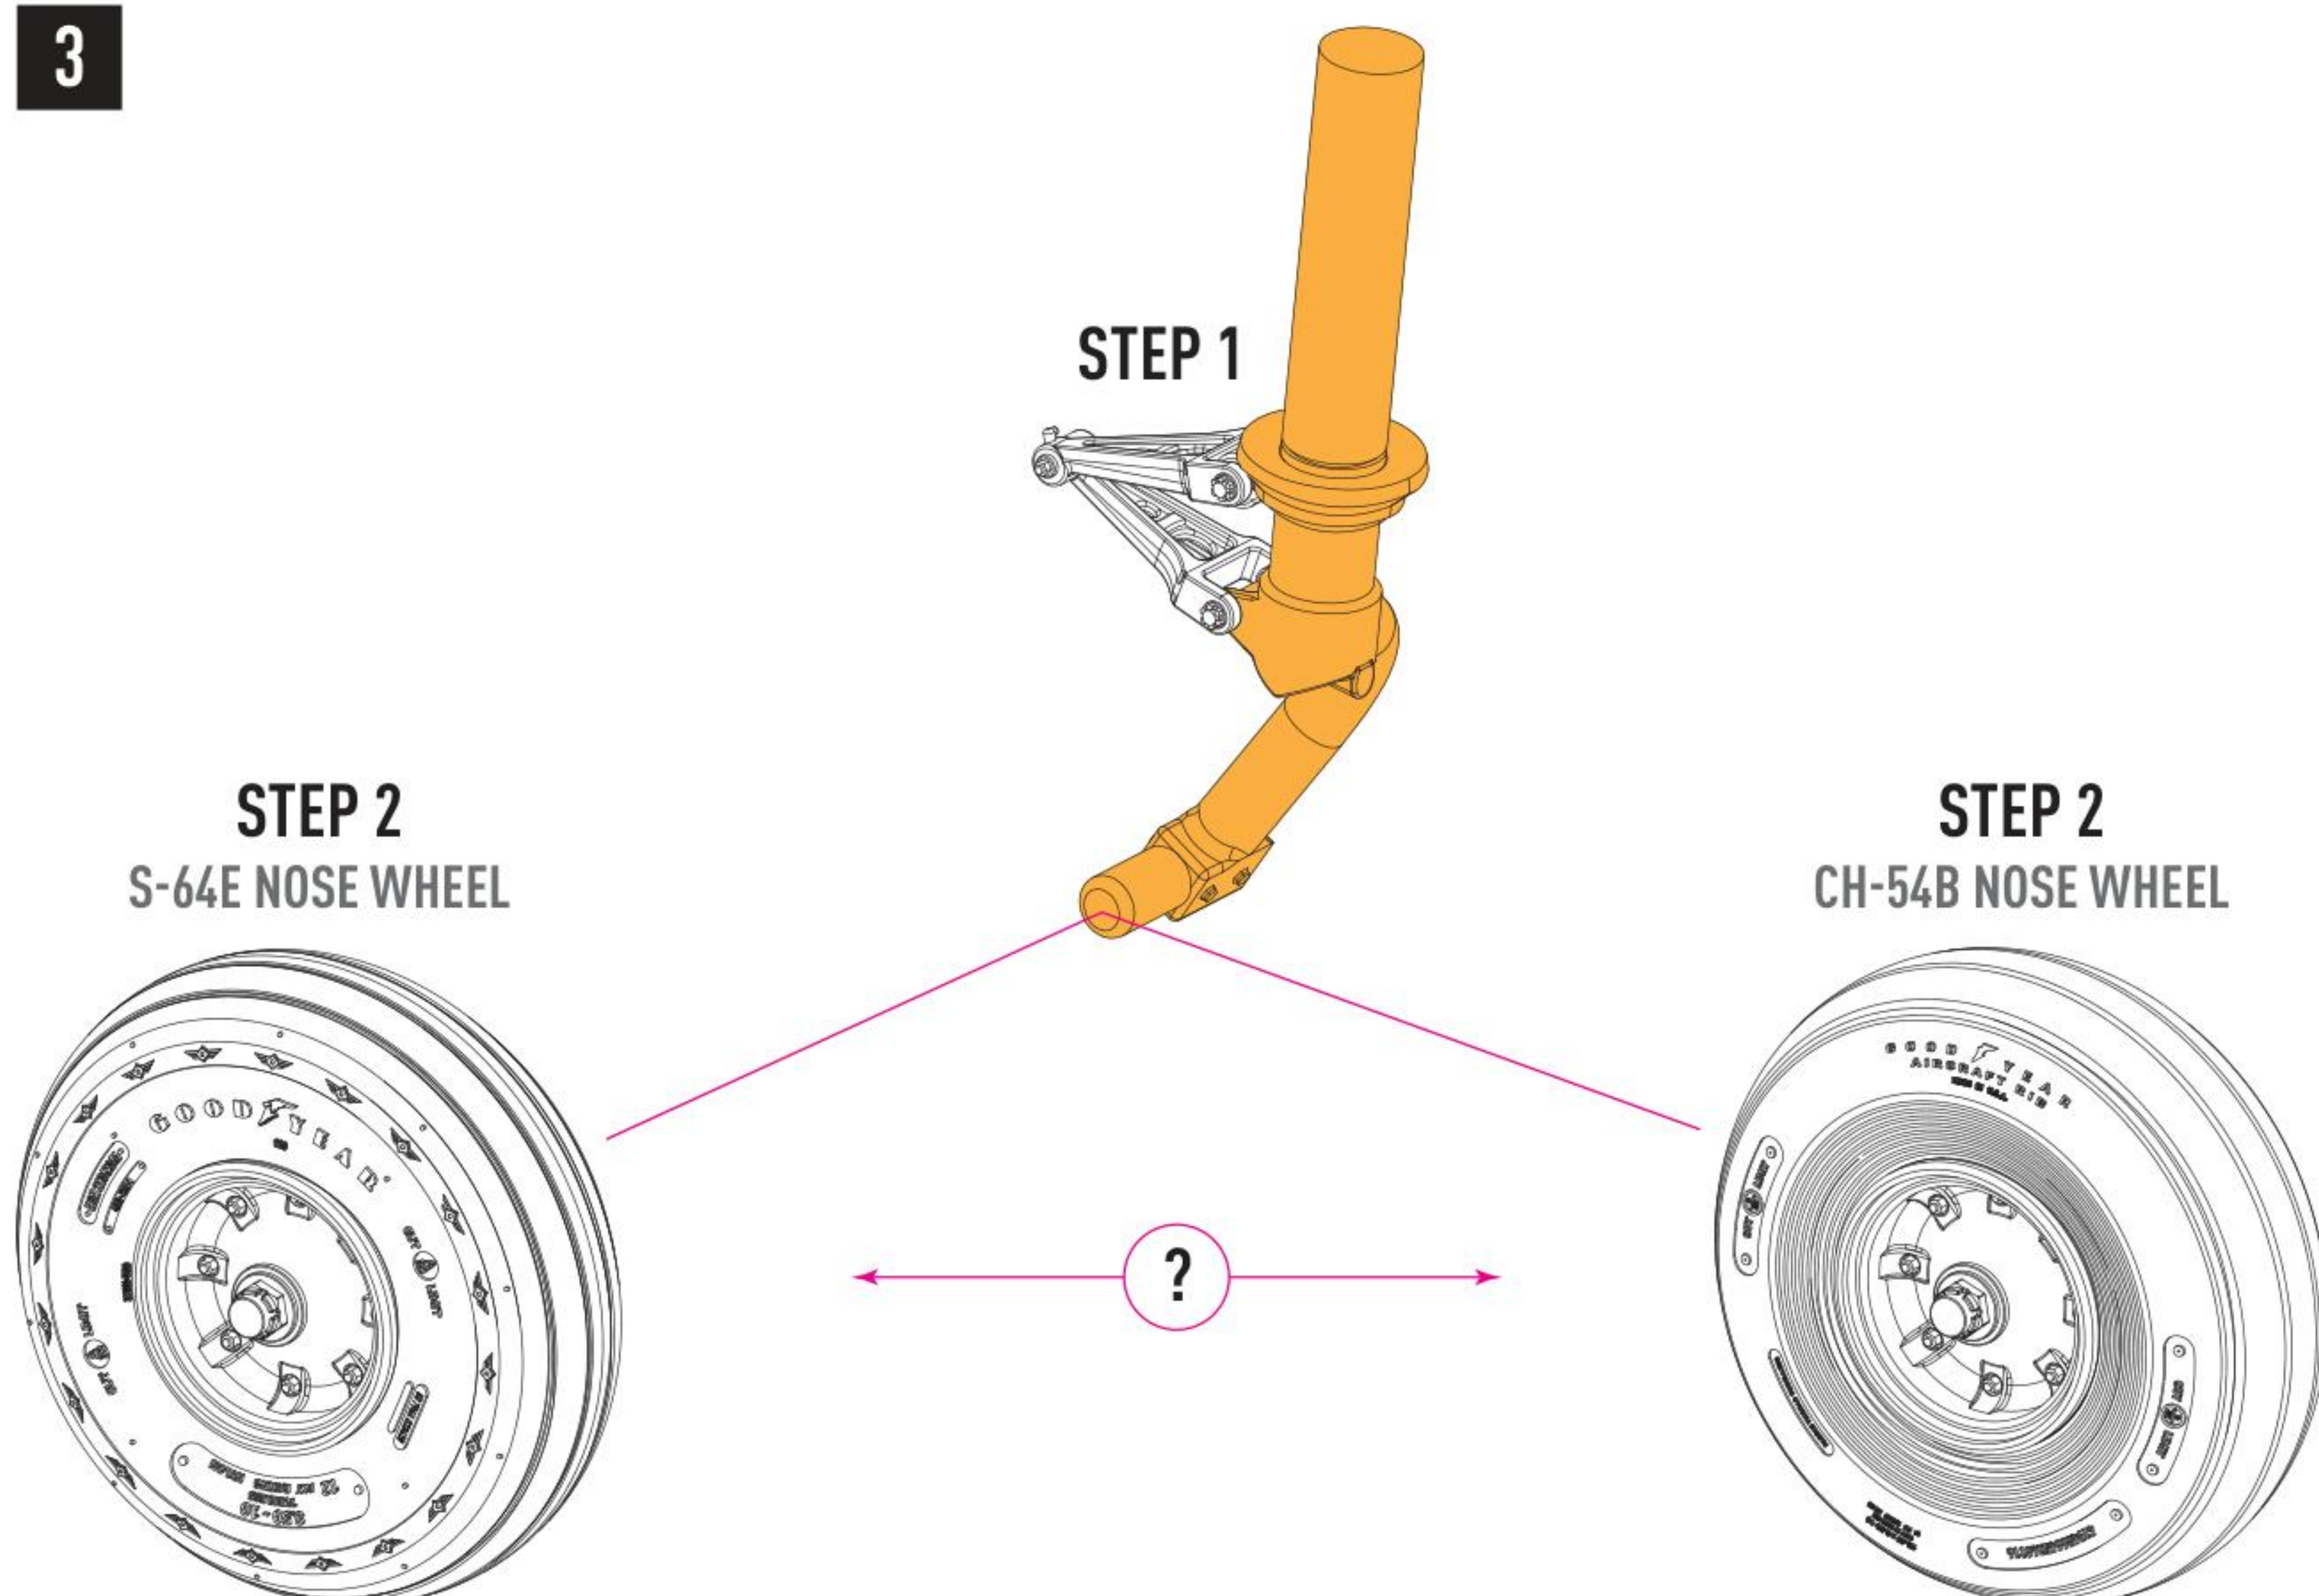

4

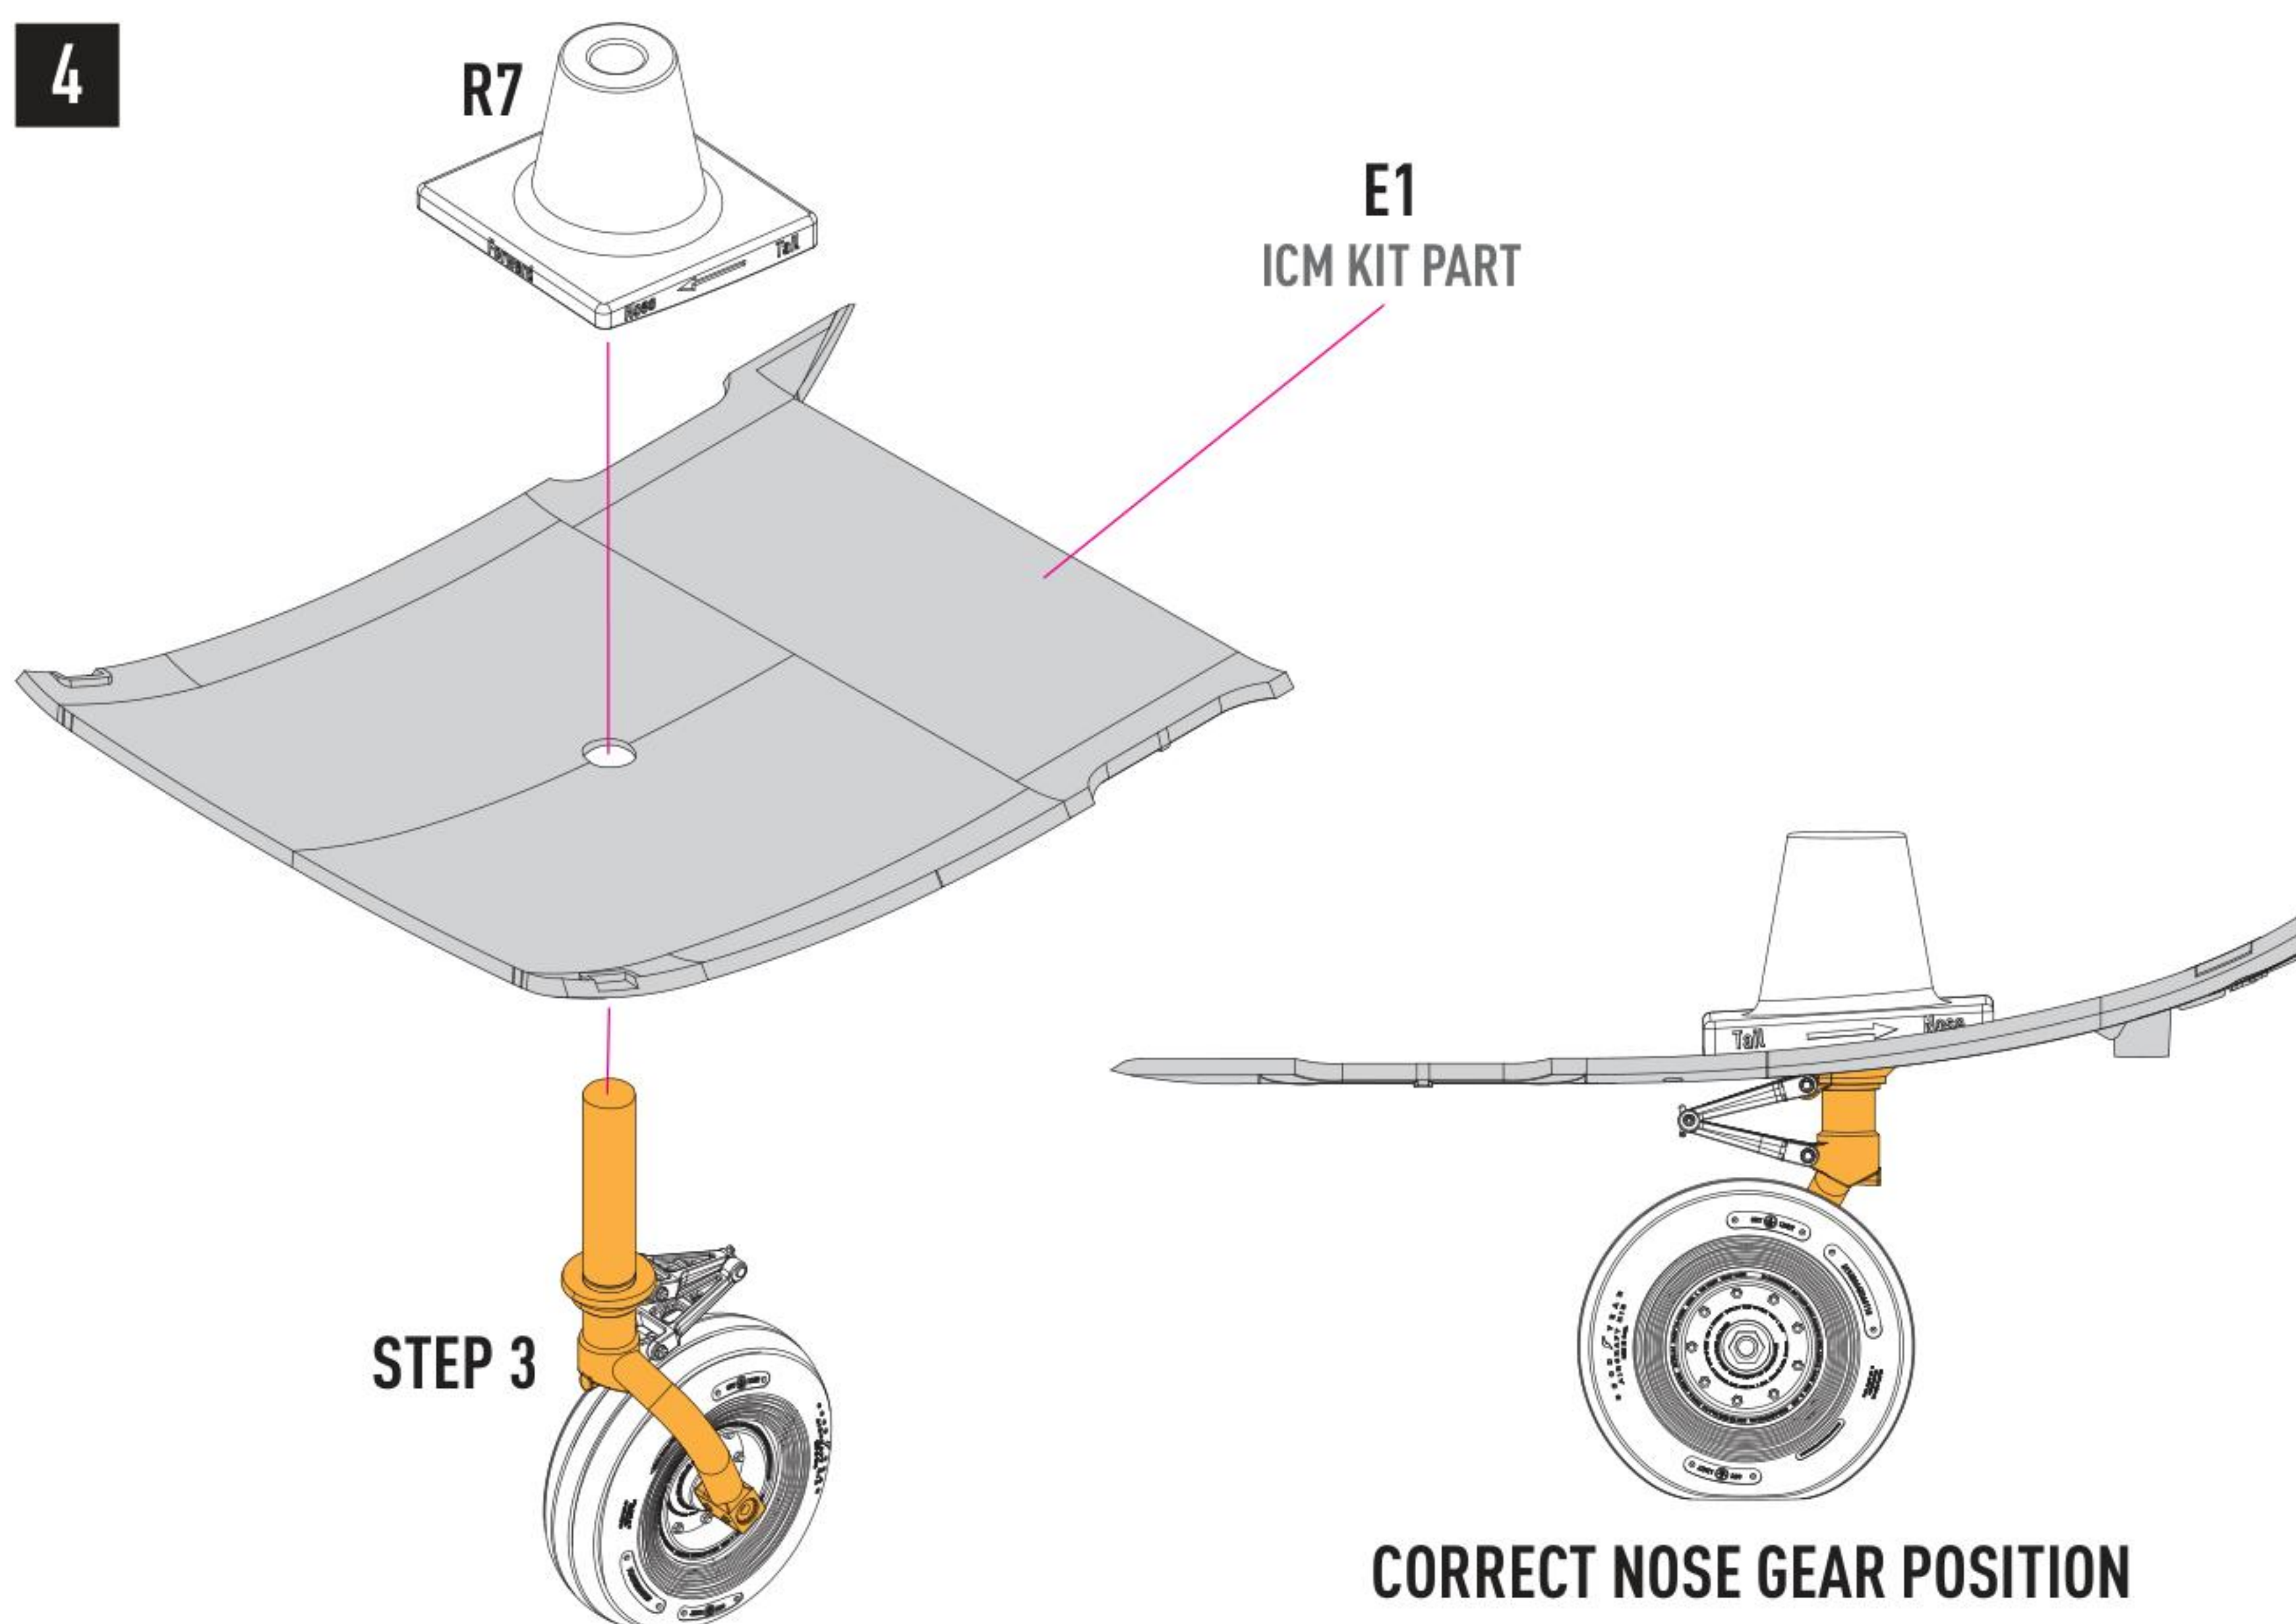

5 RIGHT GEAR ASSEMBLY

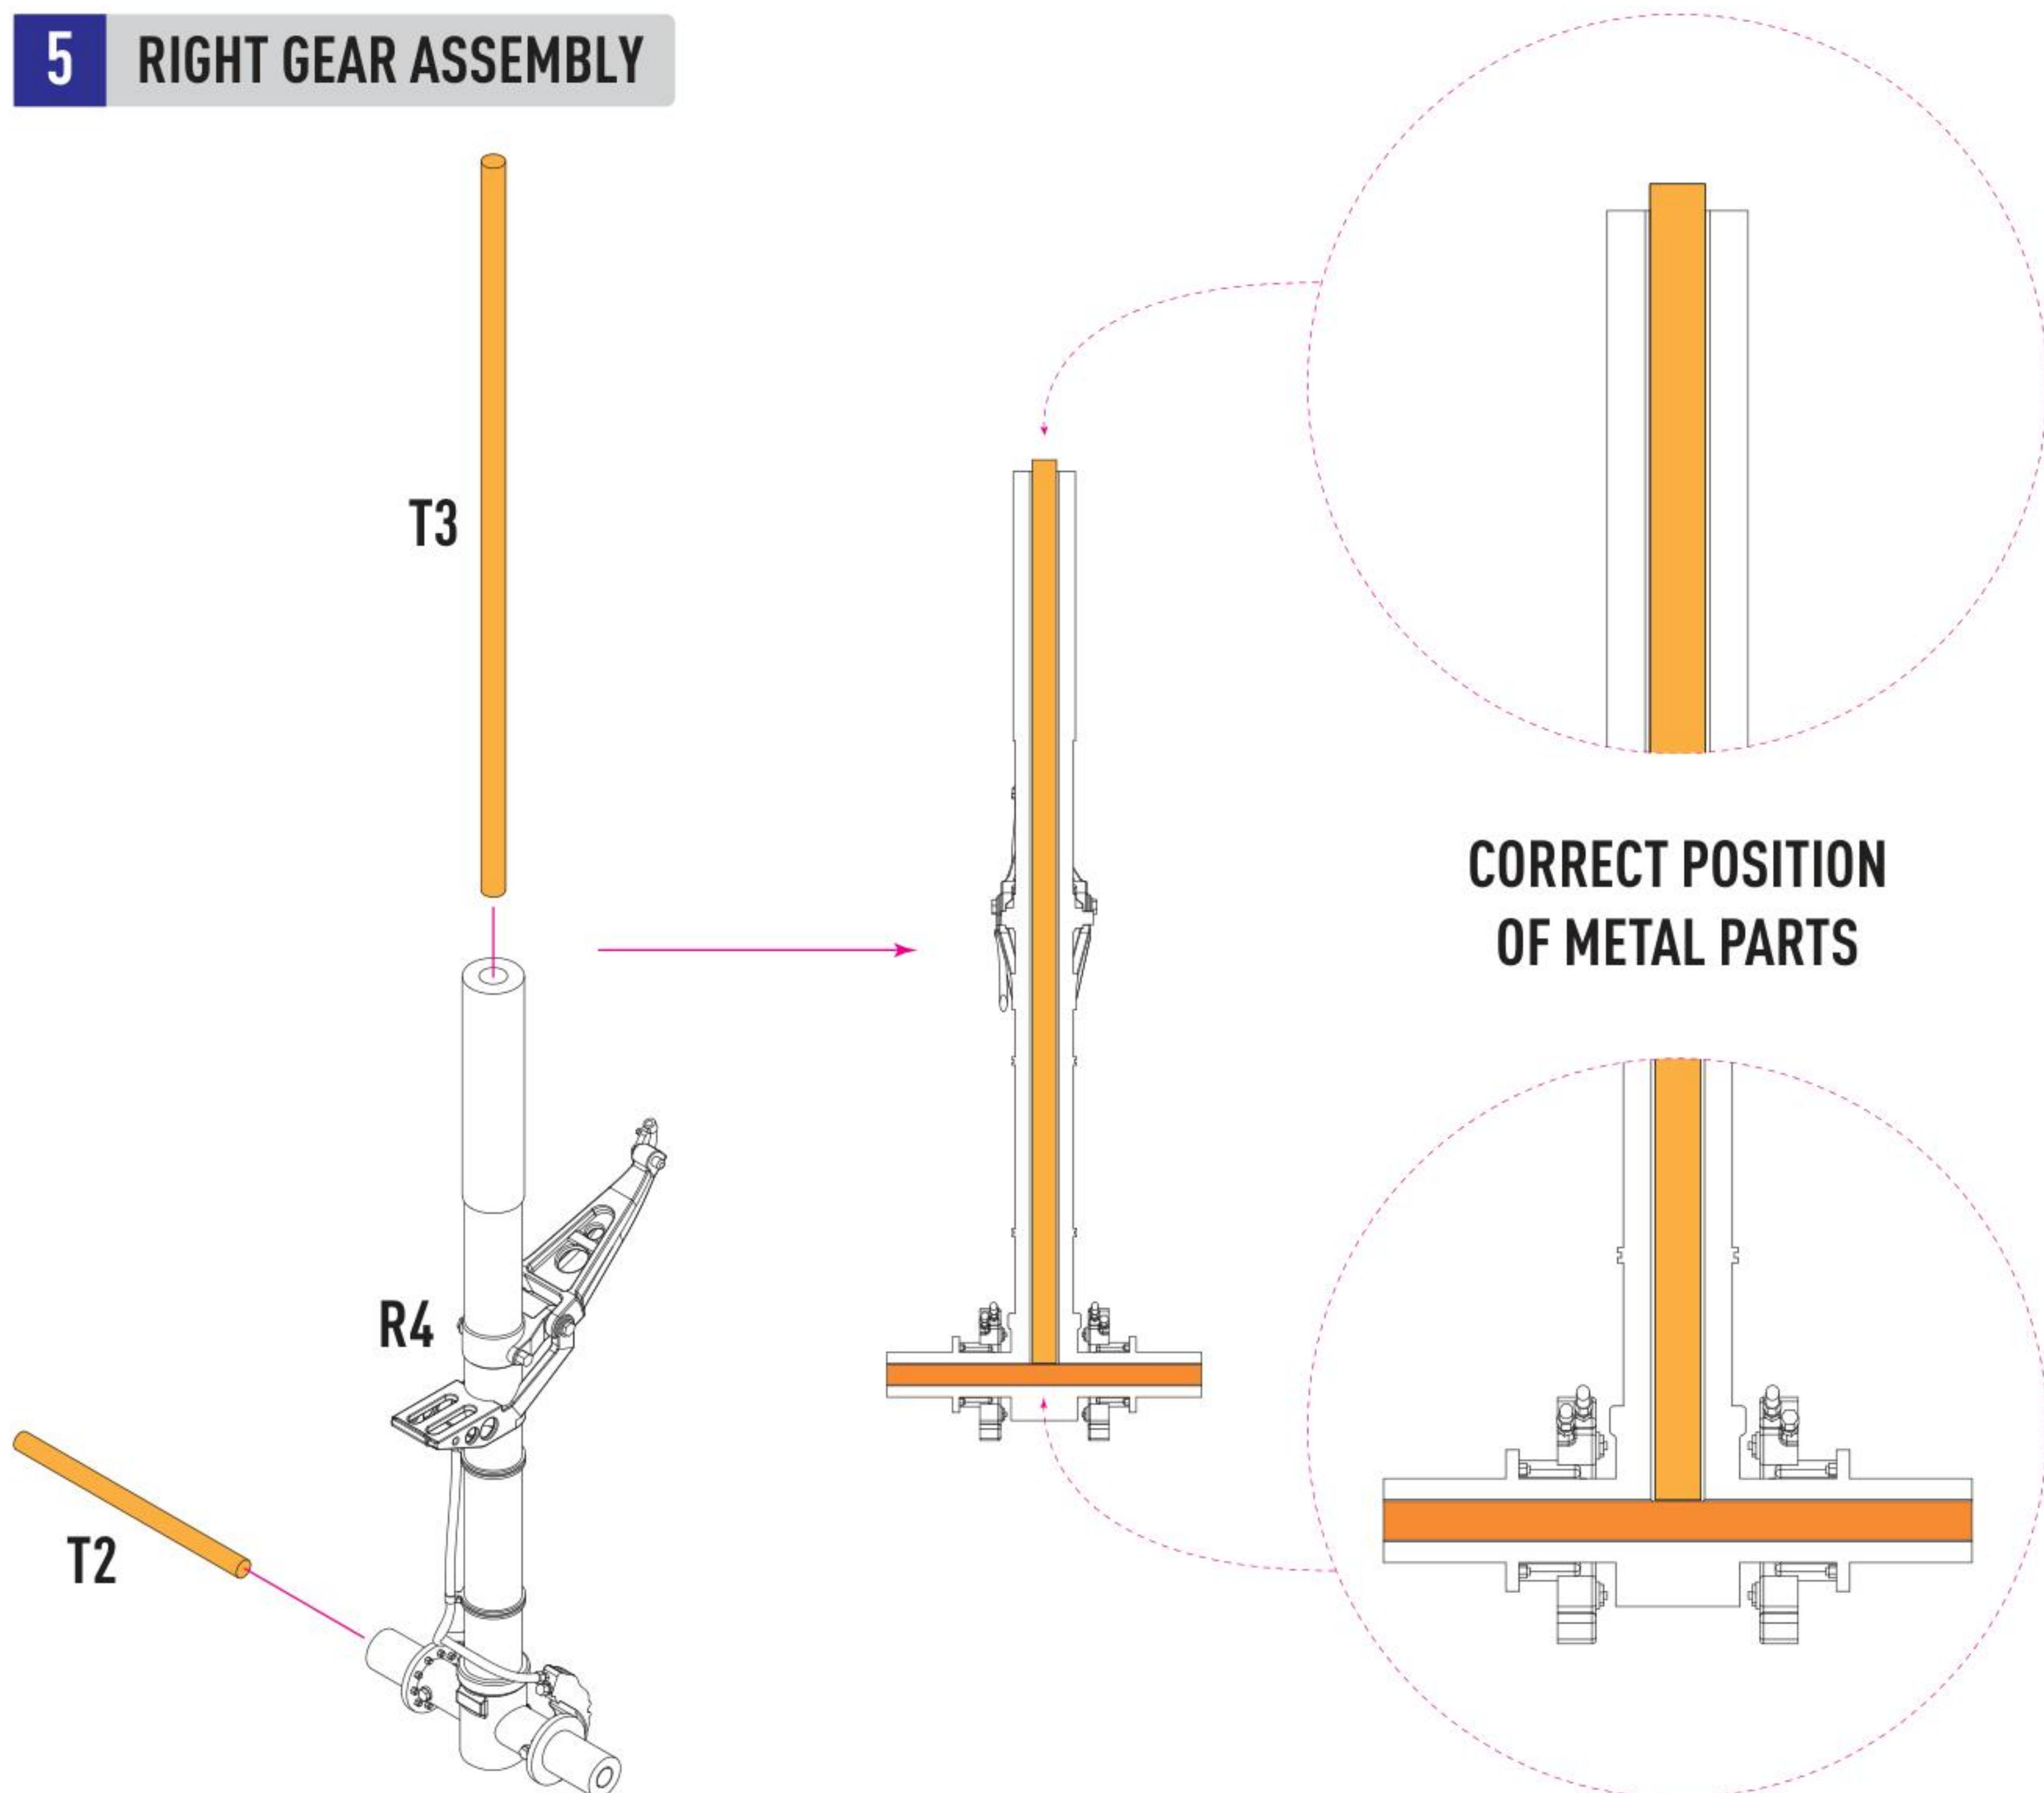

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua


RESKIT-MODELS.COM

fb.com/reskit.official


instagram.com/reskit_official

youtube.com/@reskit-usmd


6

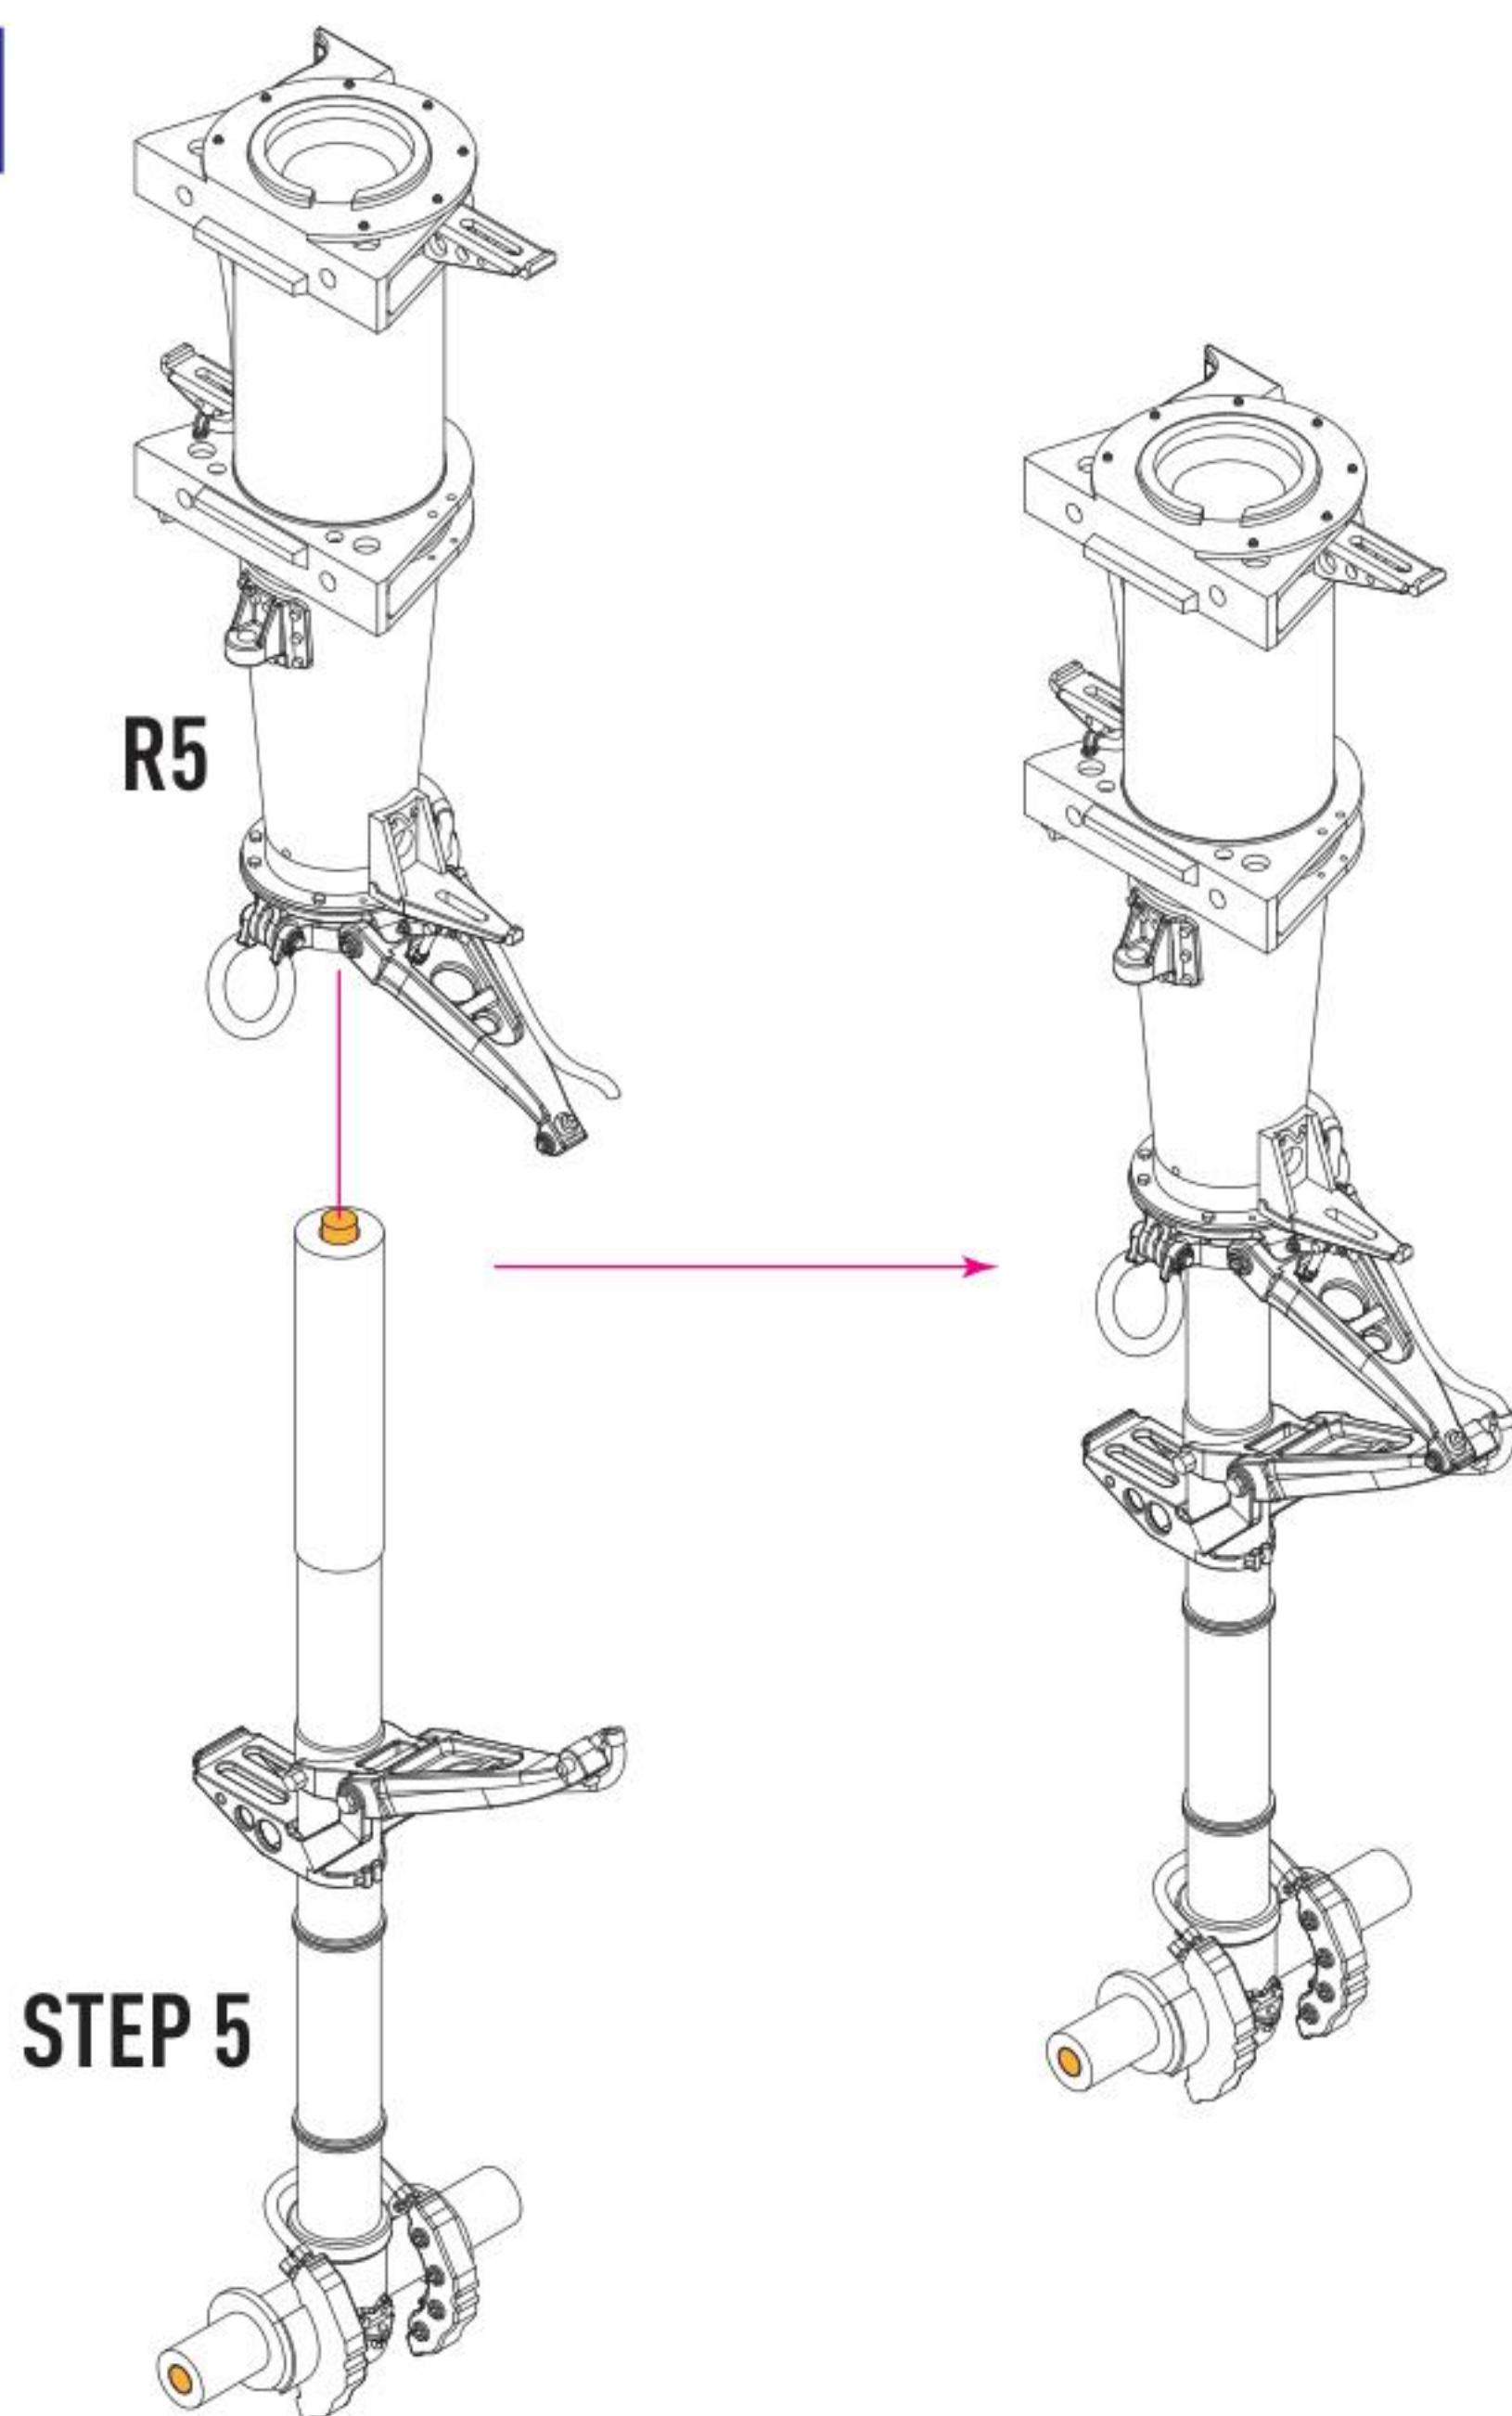

7

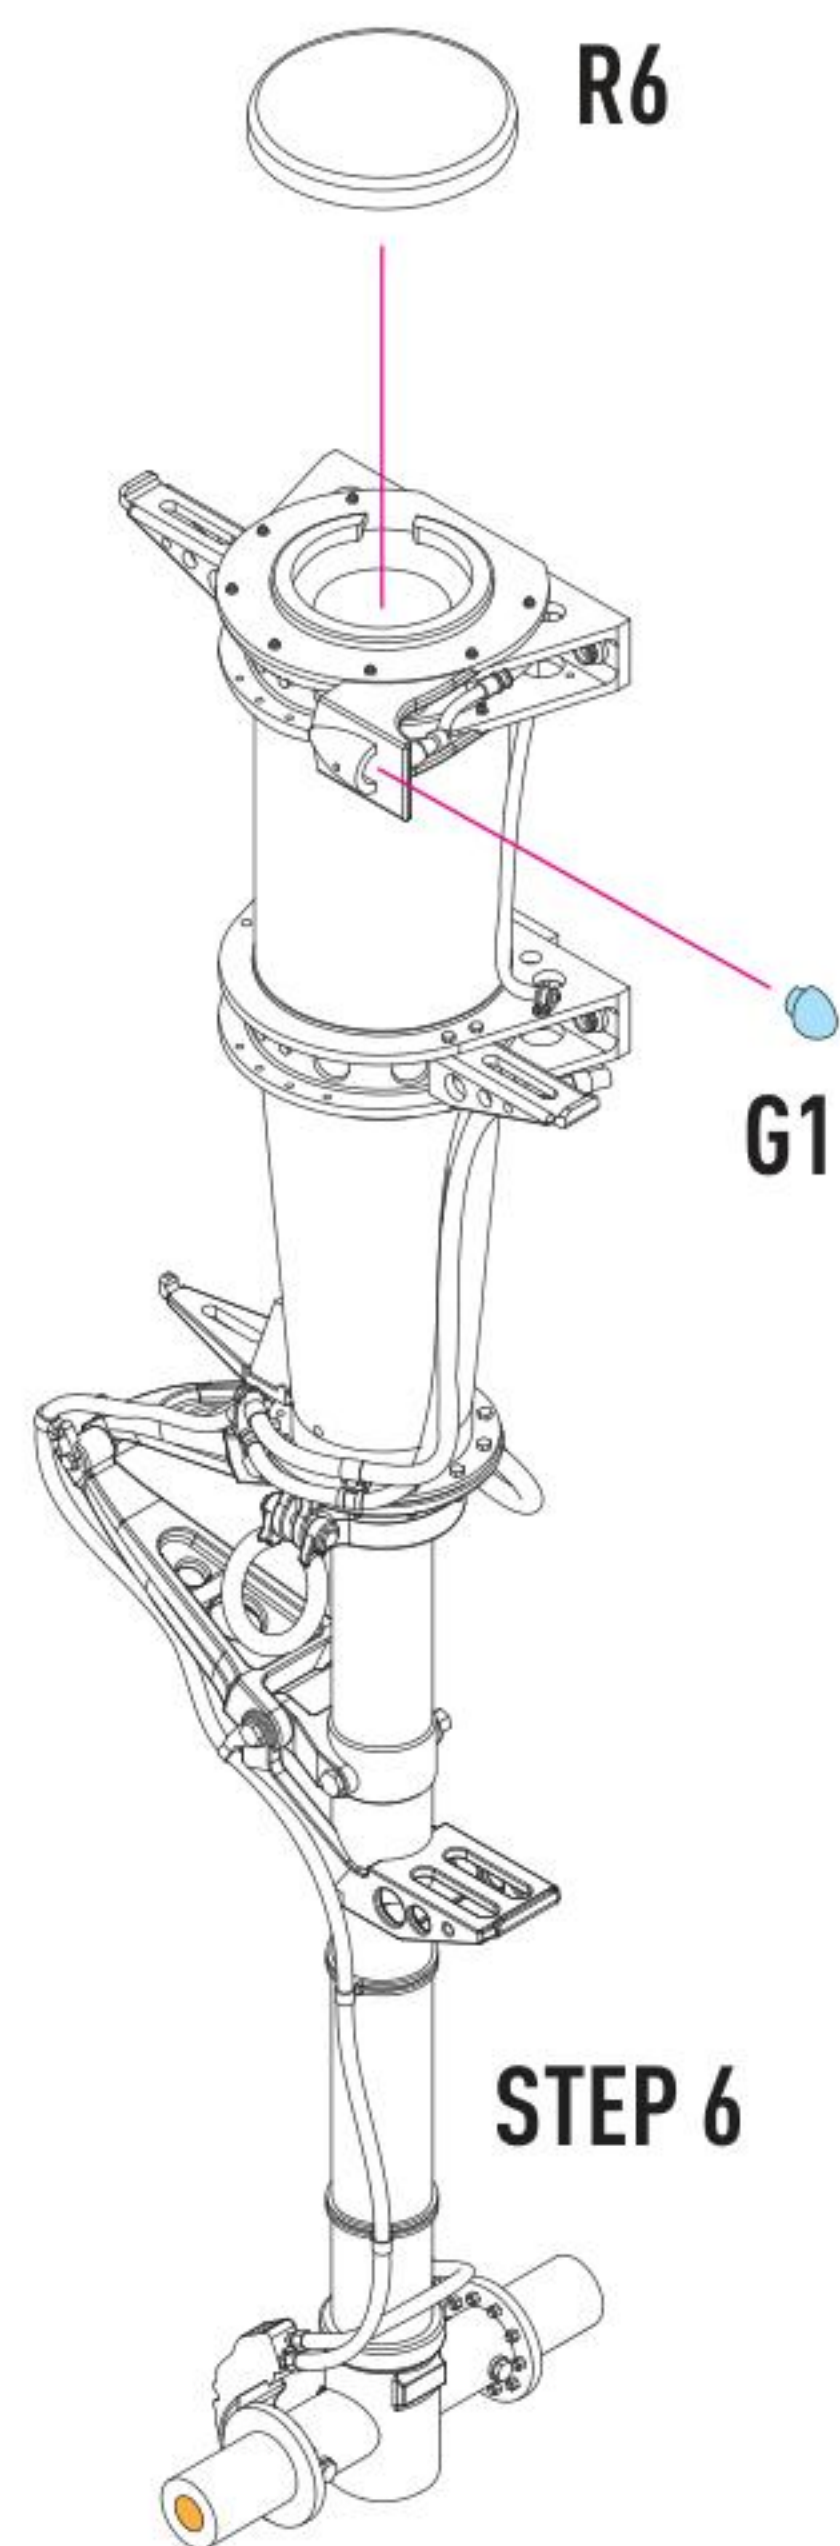

8 LEFT GEAR ASSEMBLY

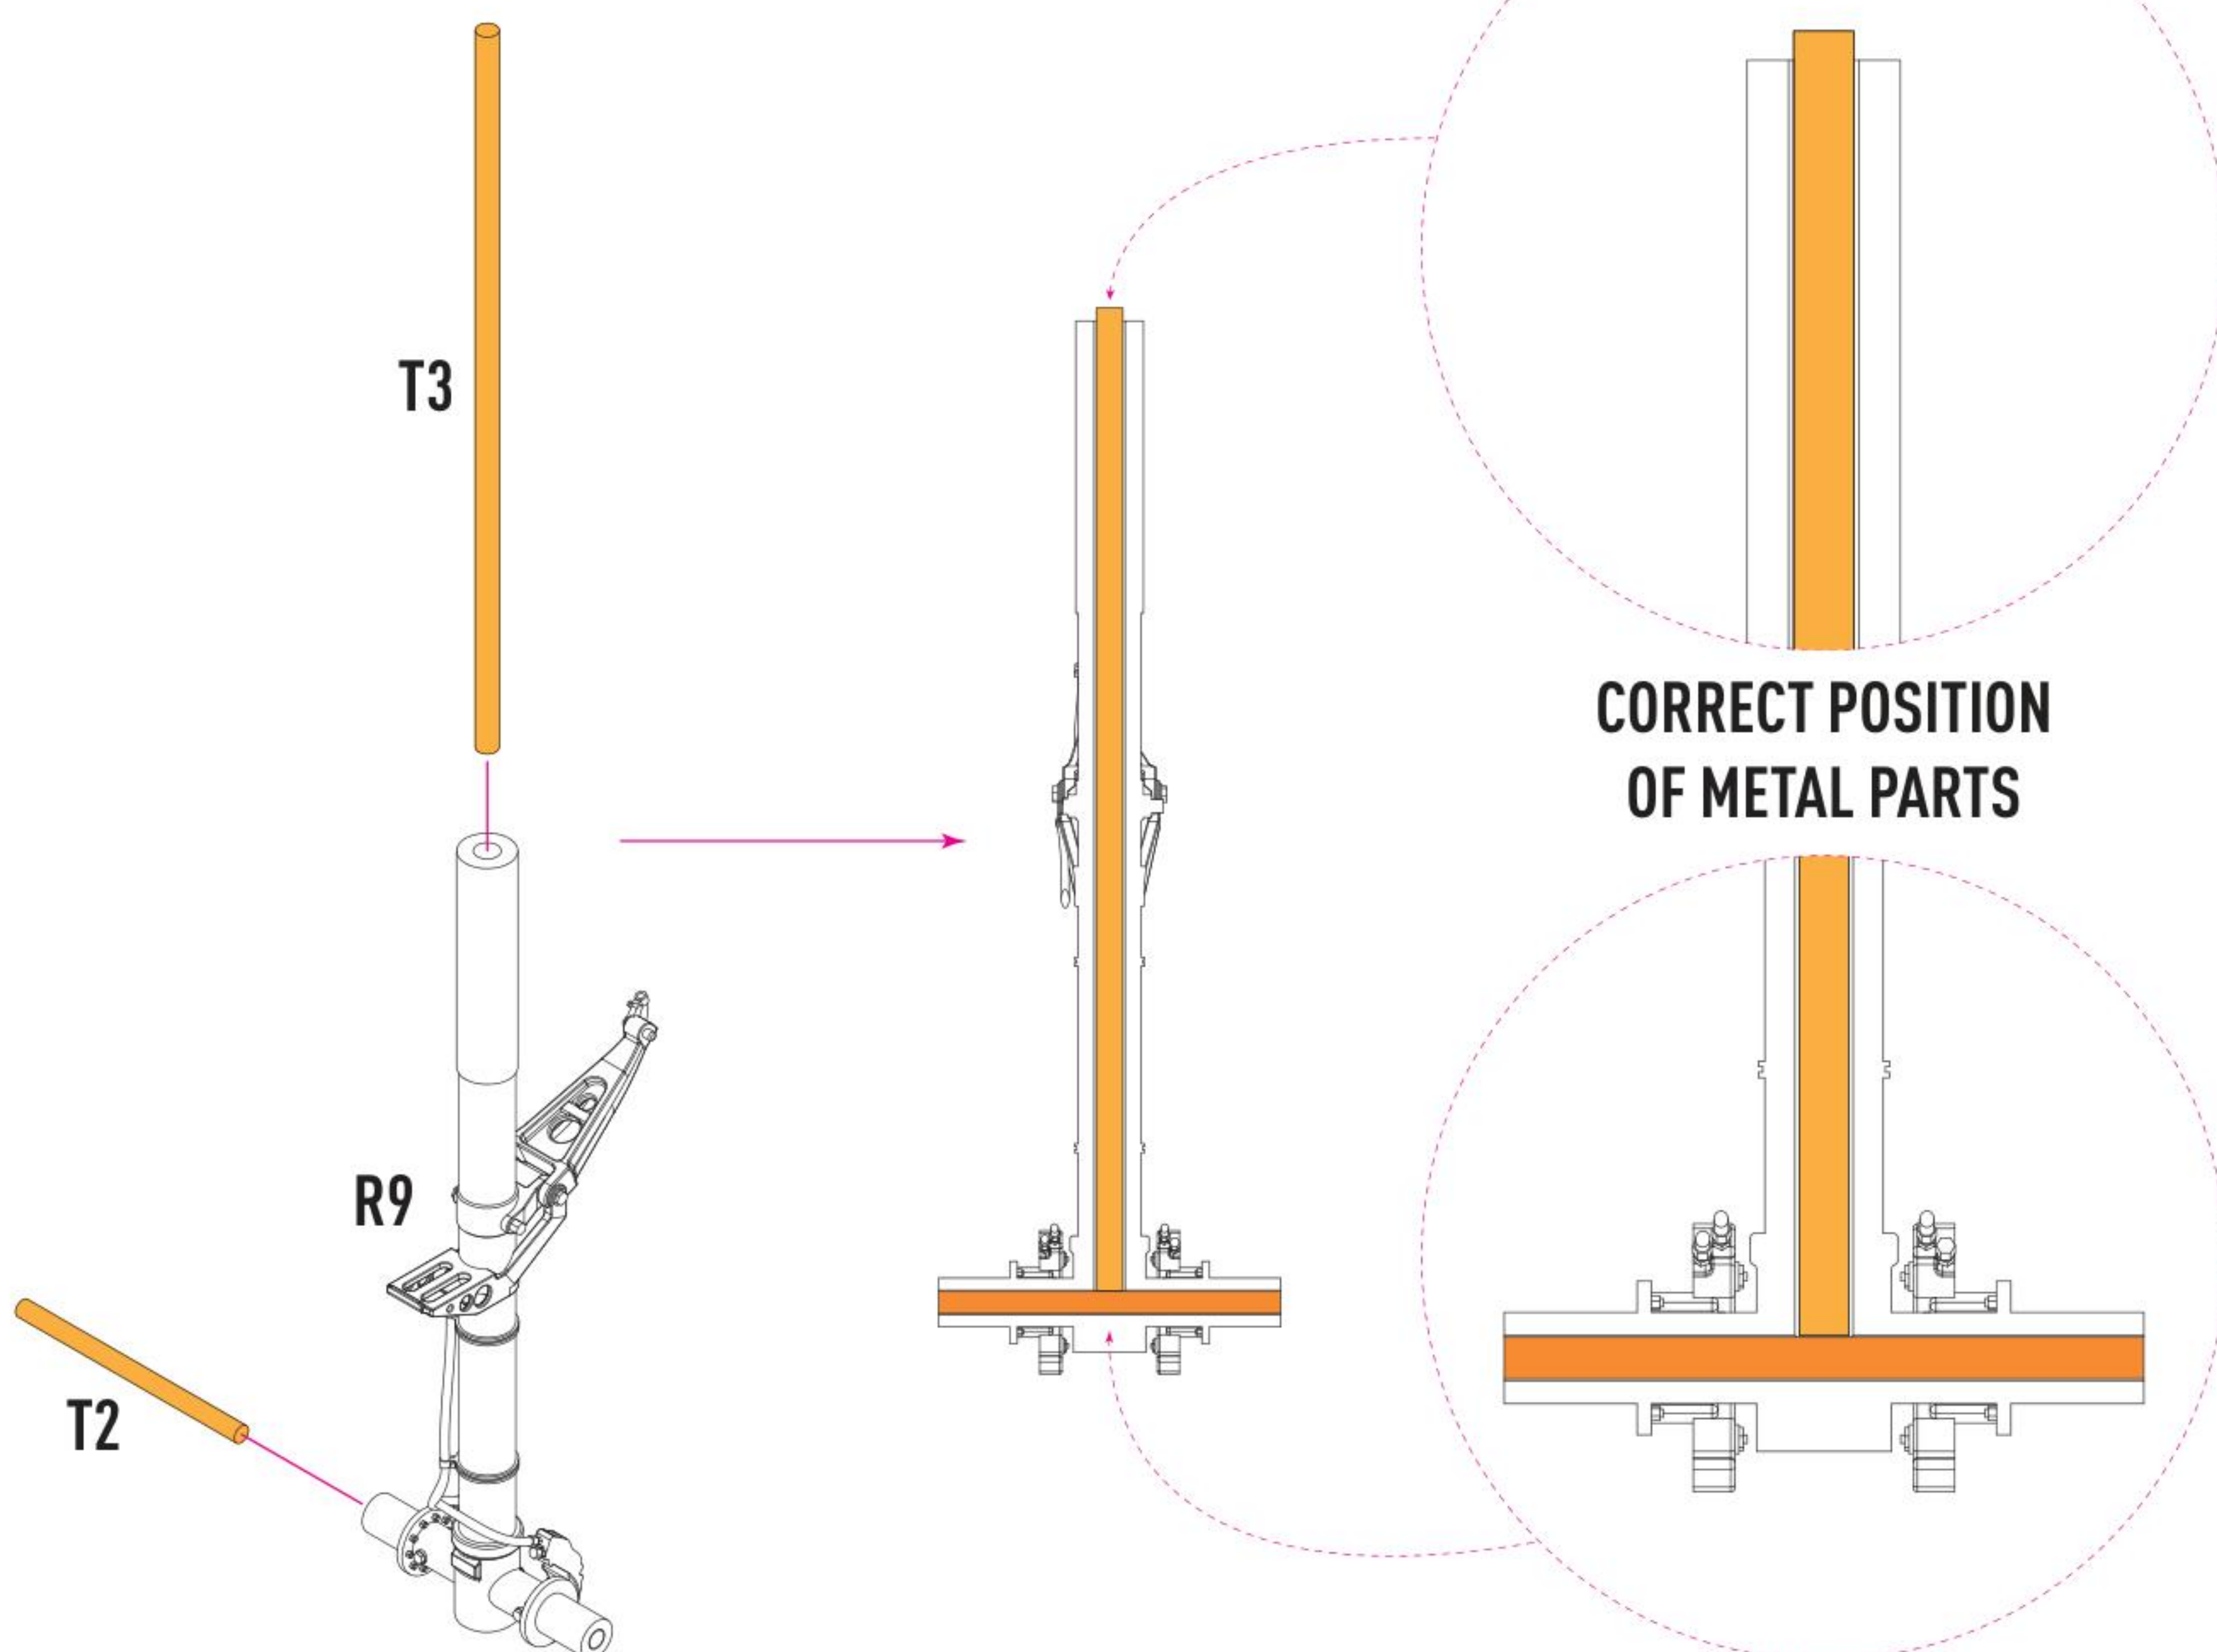



general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM


fb.com/reskit.official

instagram.com/reskit_official


youtube.com/@reskit-usmd

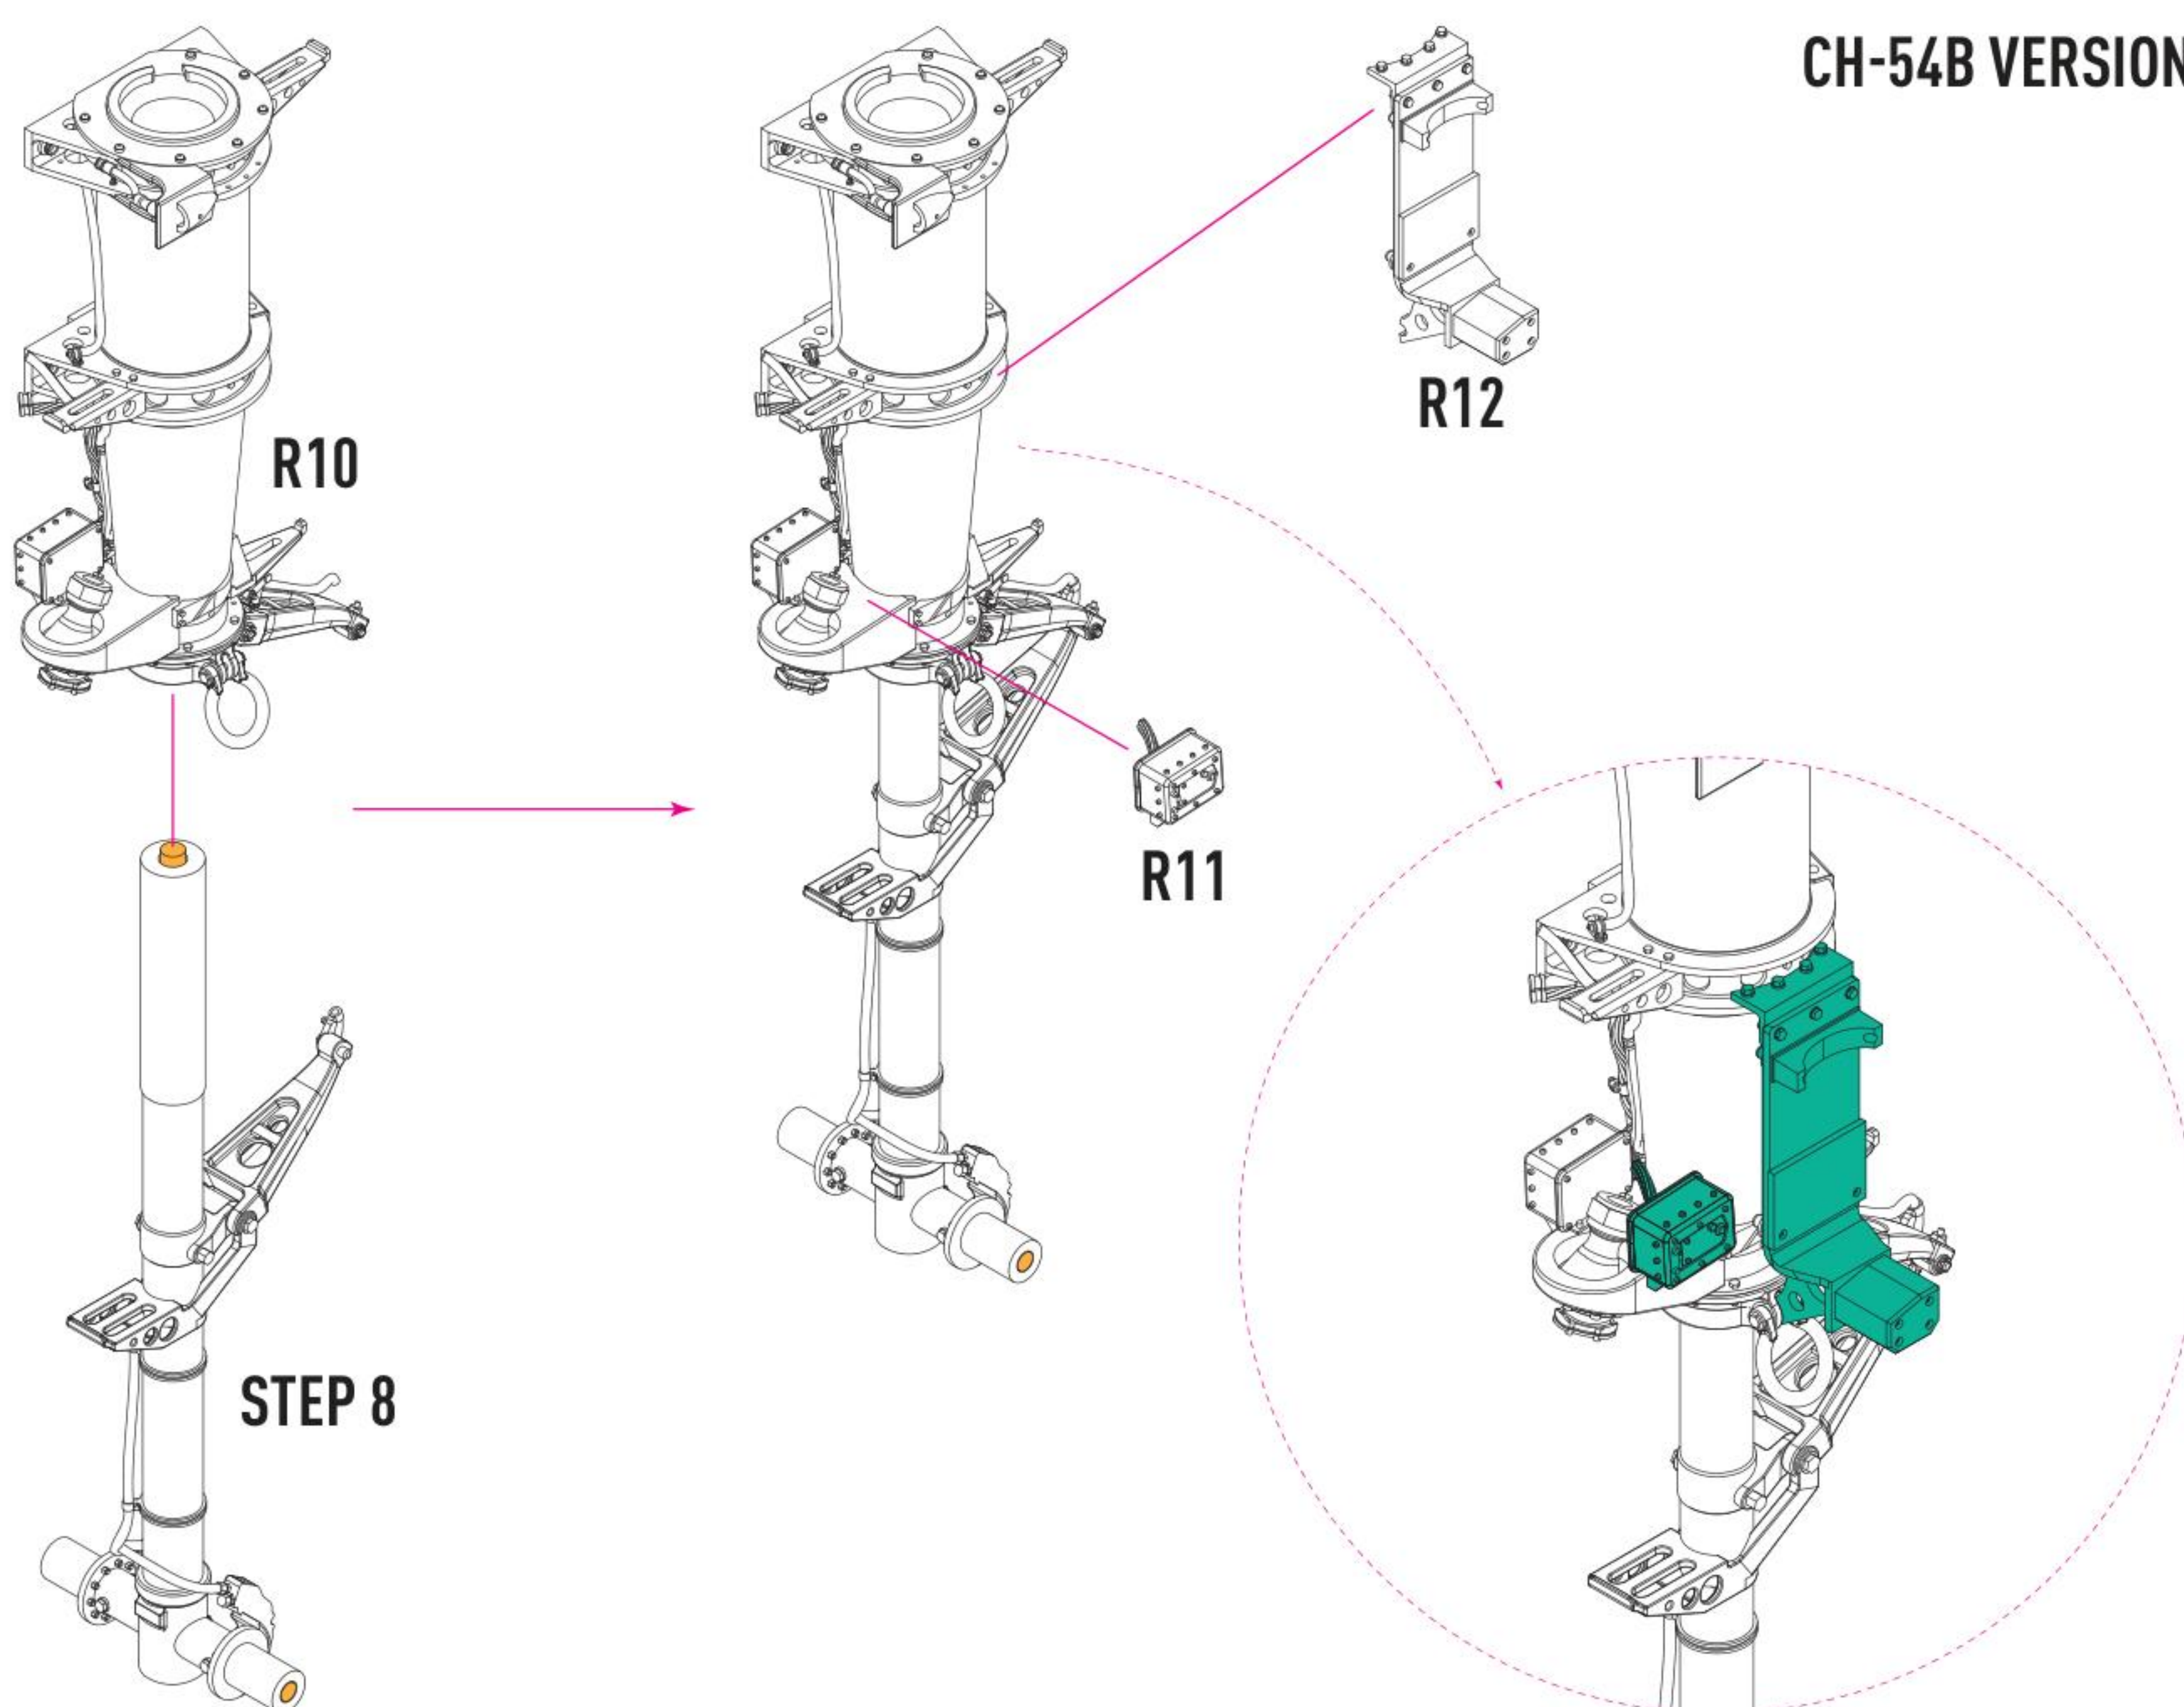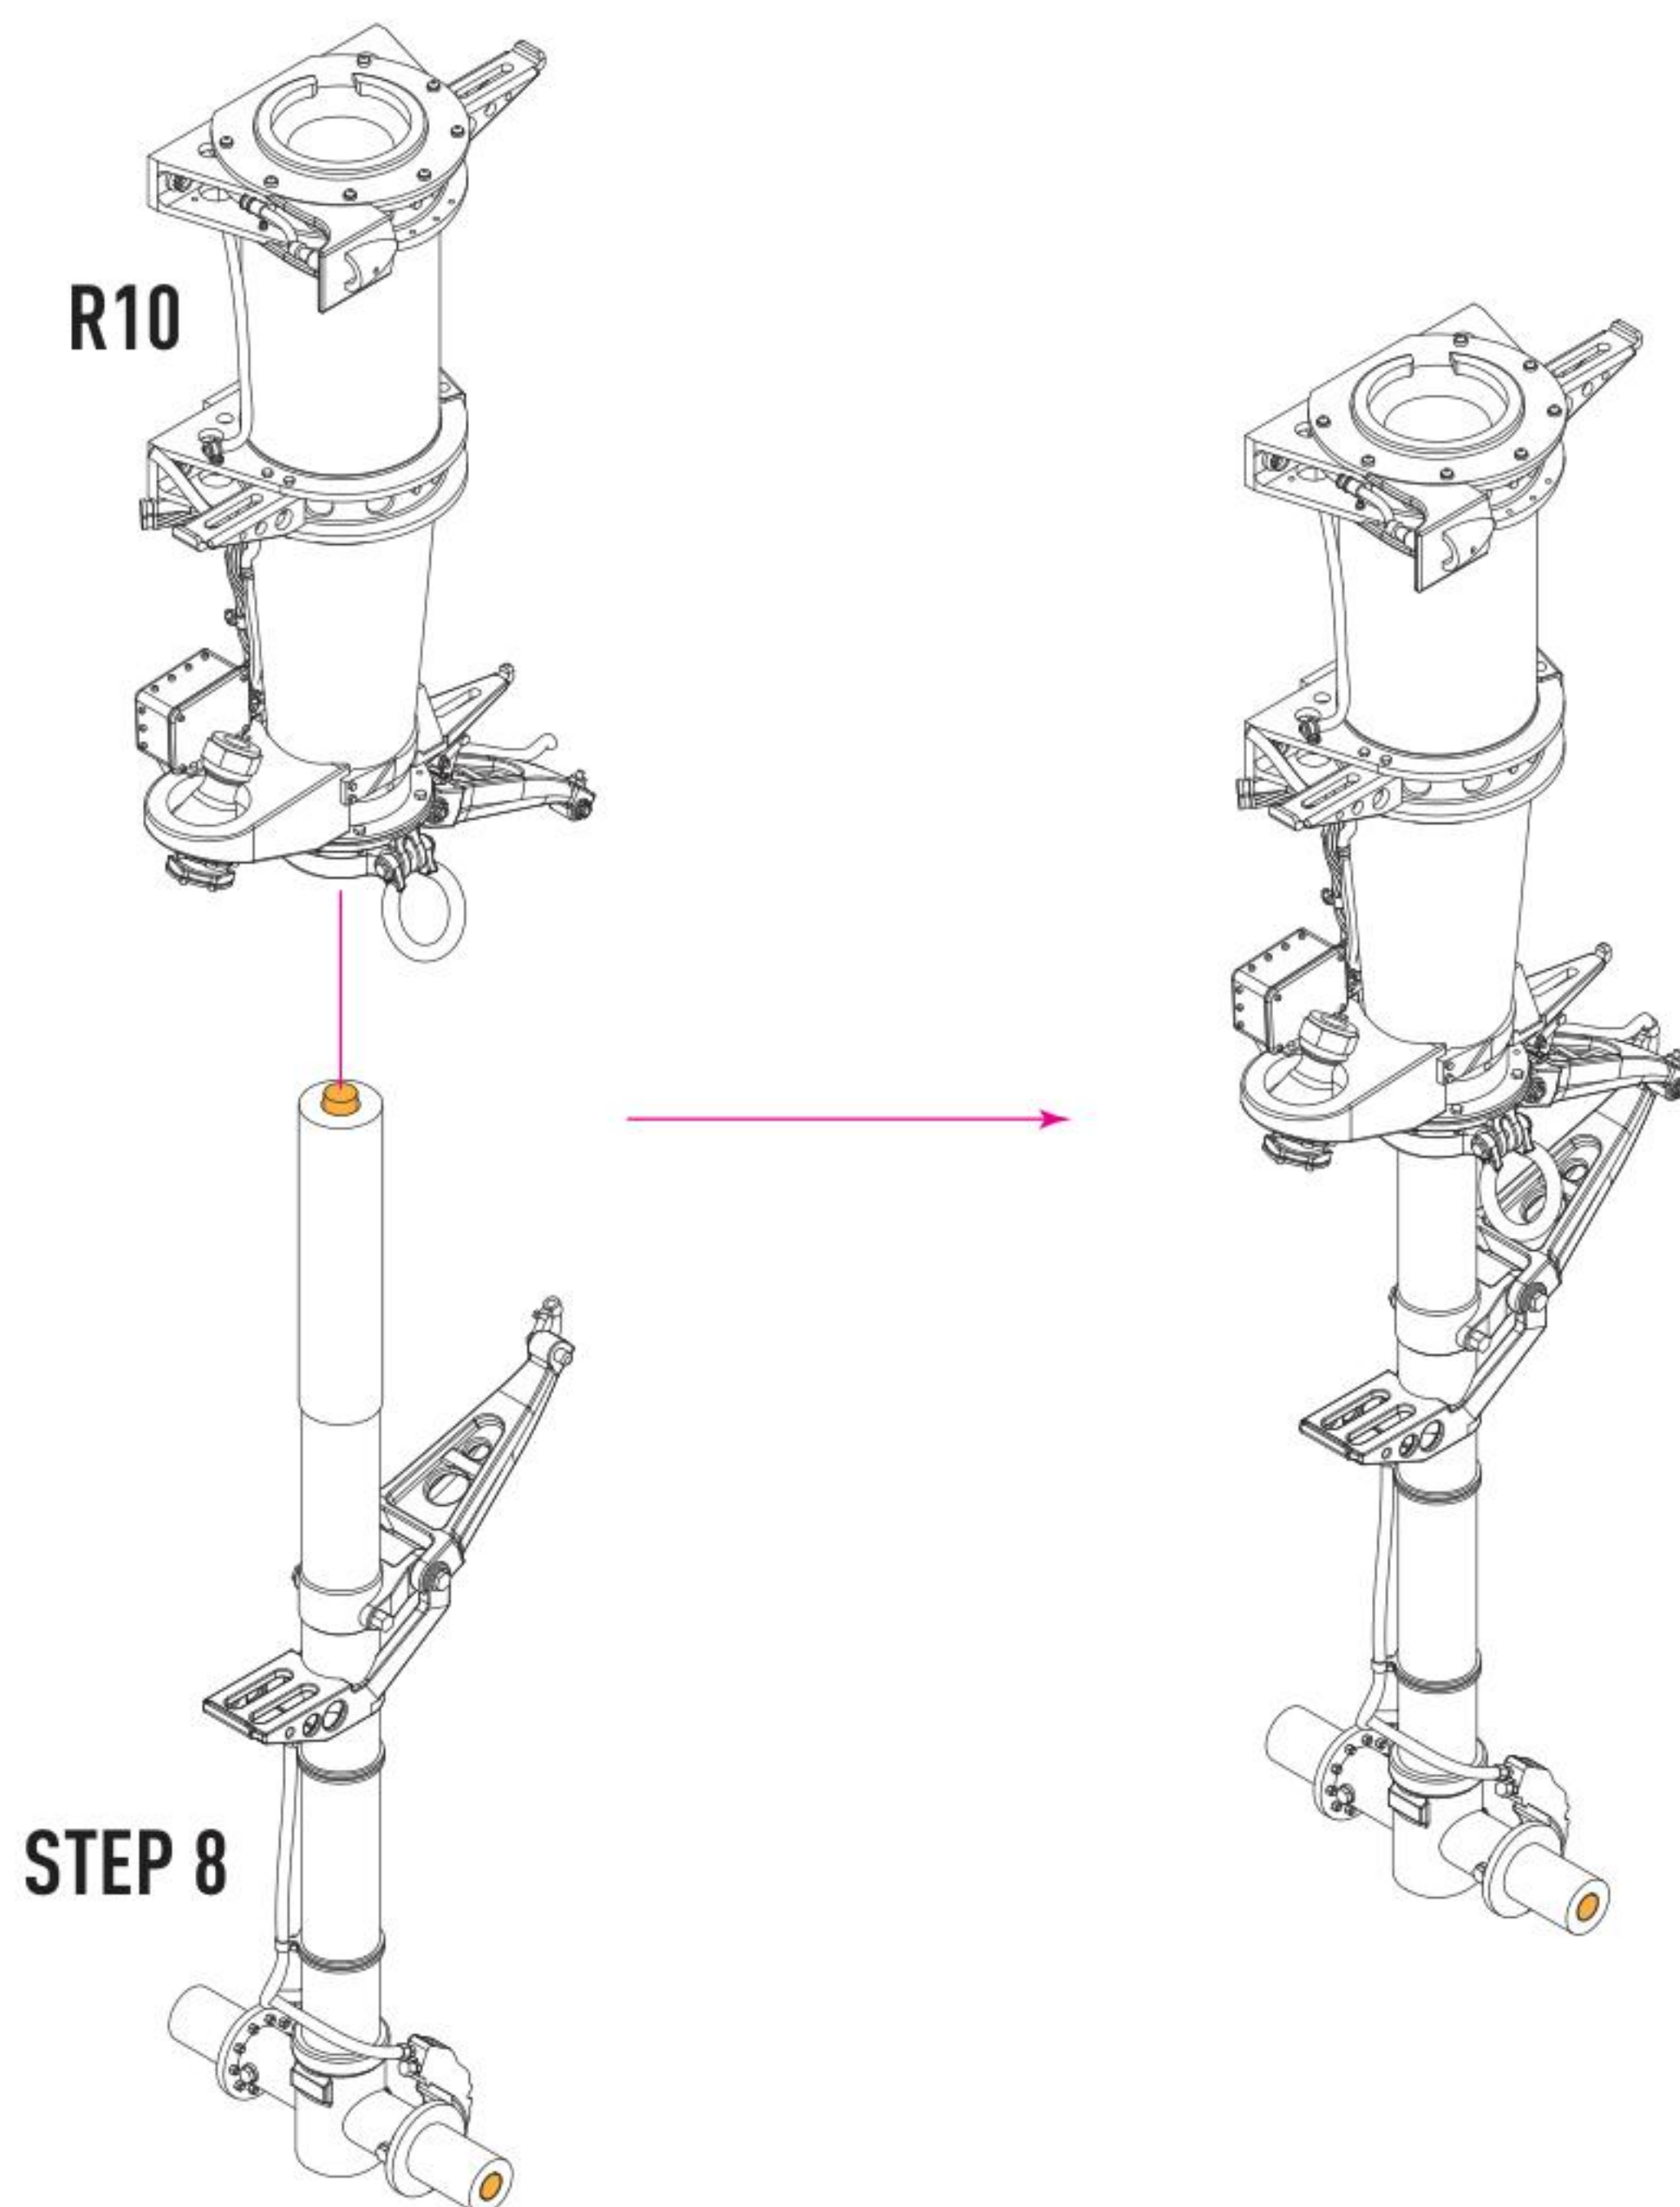


10

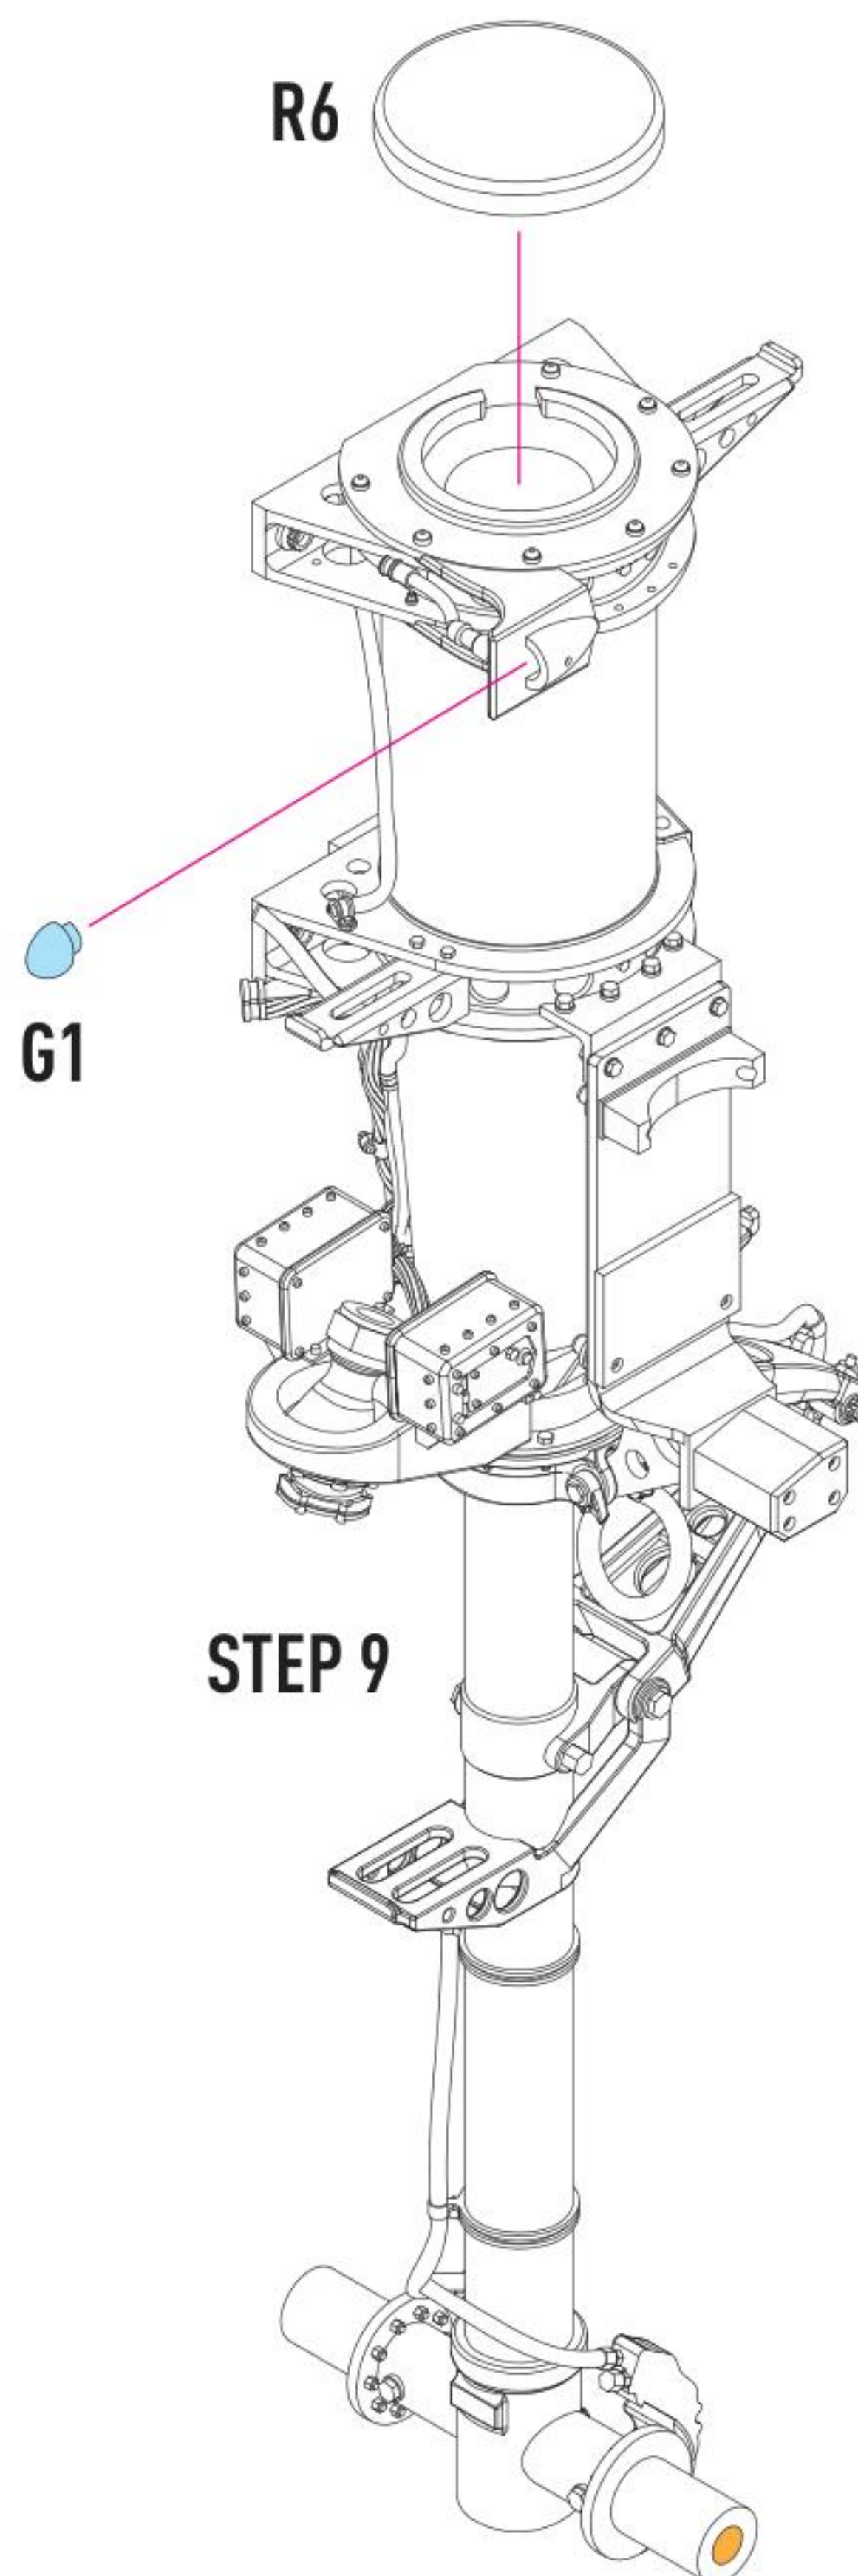


11 X4

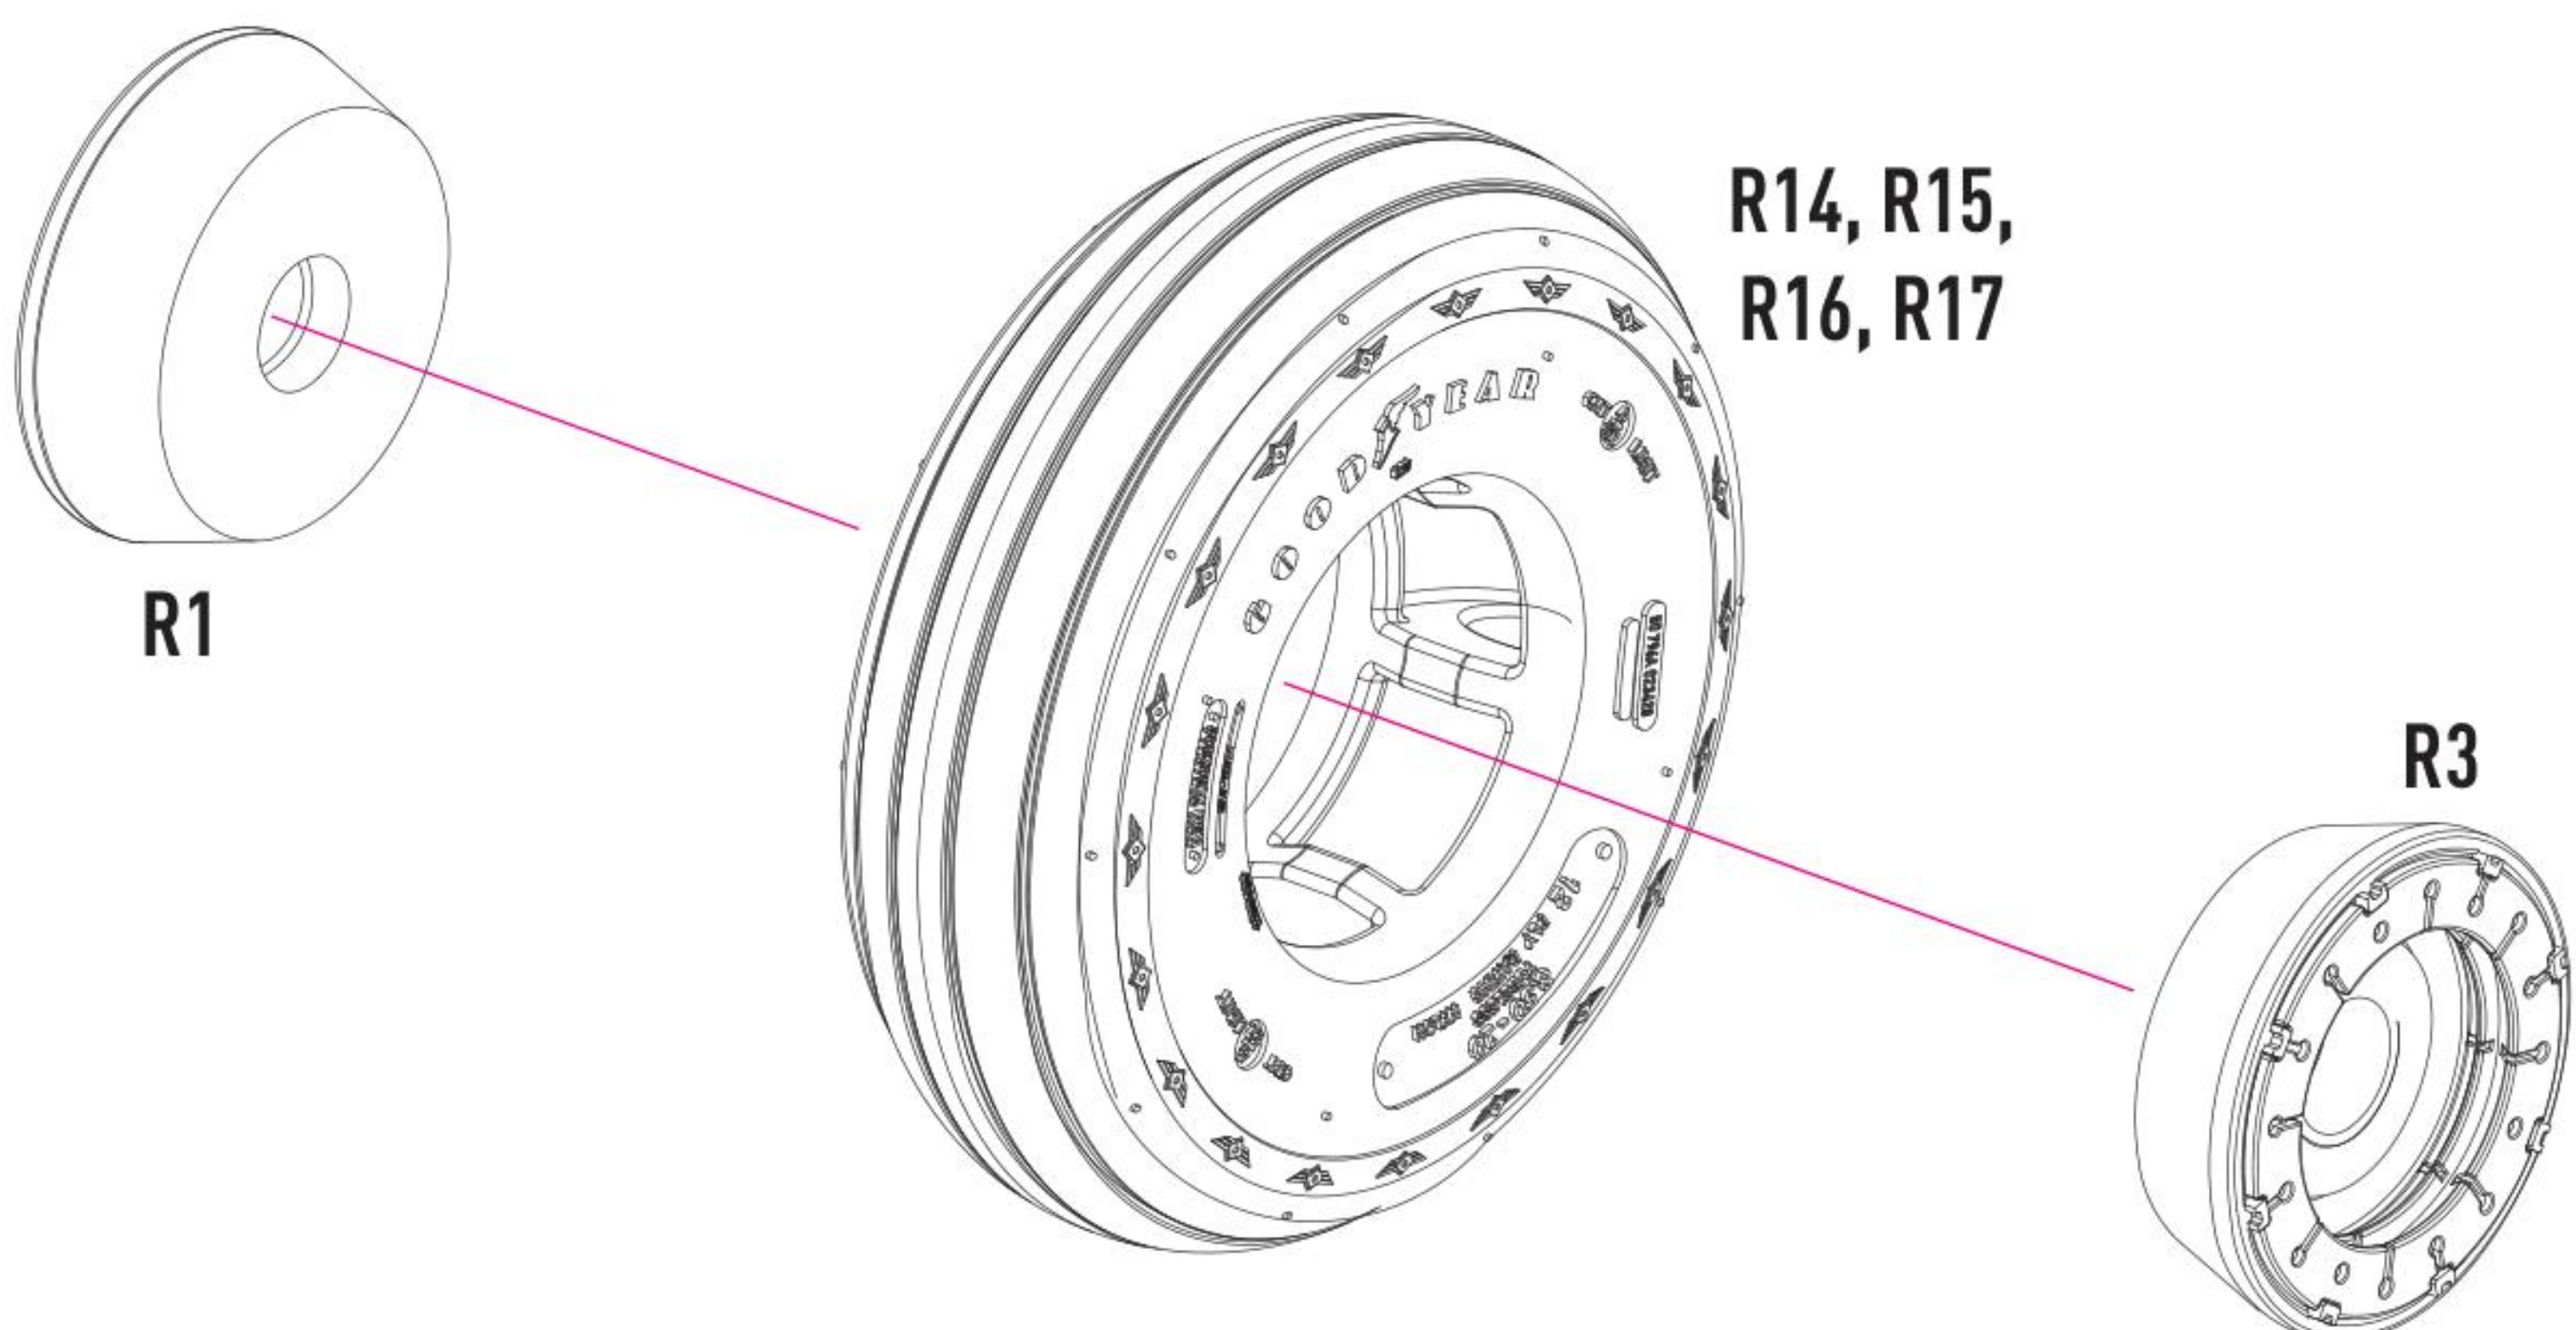


STEP 7
RIGHT GEAR ASSEMBLED

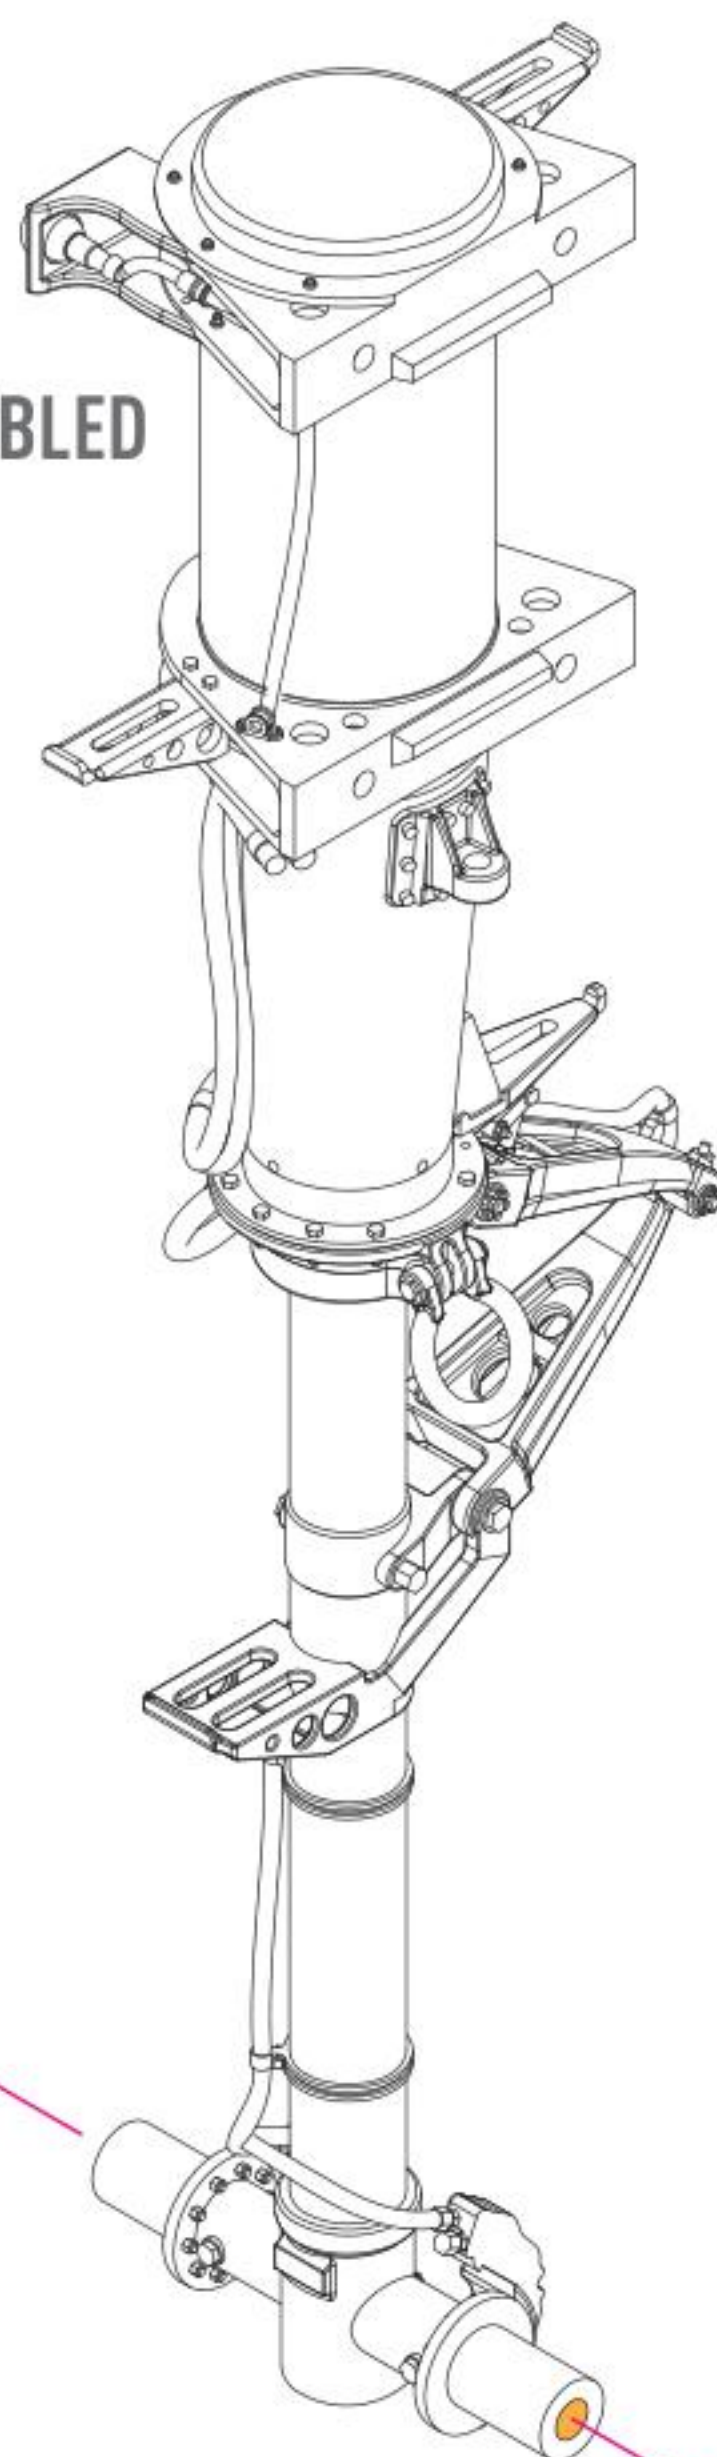


STEP 11

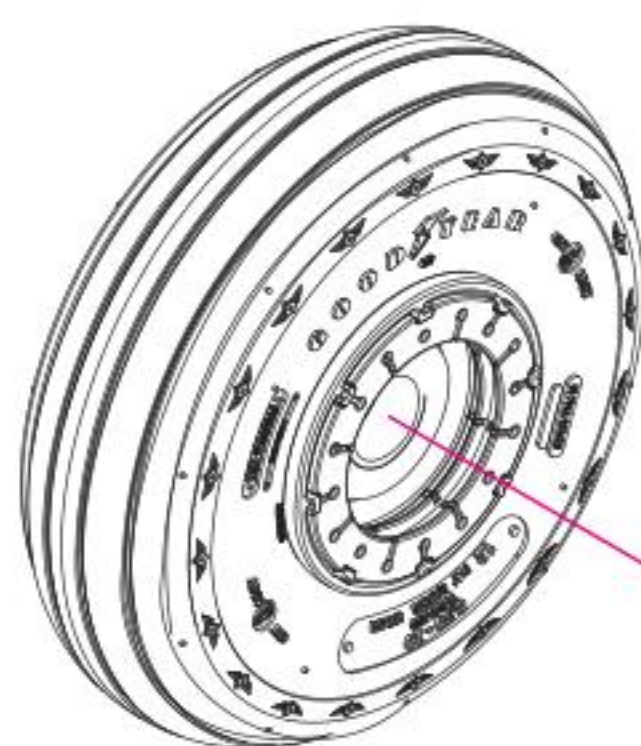


STEP 10
LEFT GEAR ASSEMBLED.
CH-54B VERSION

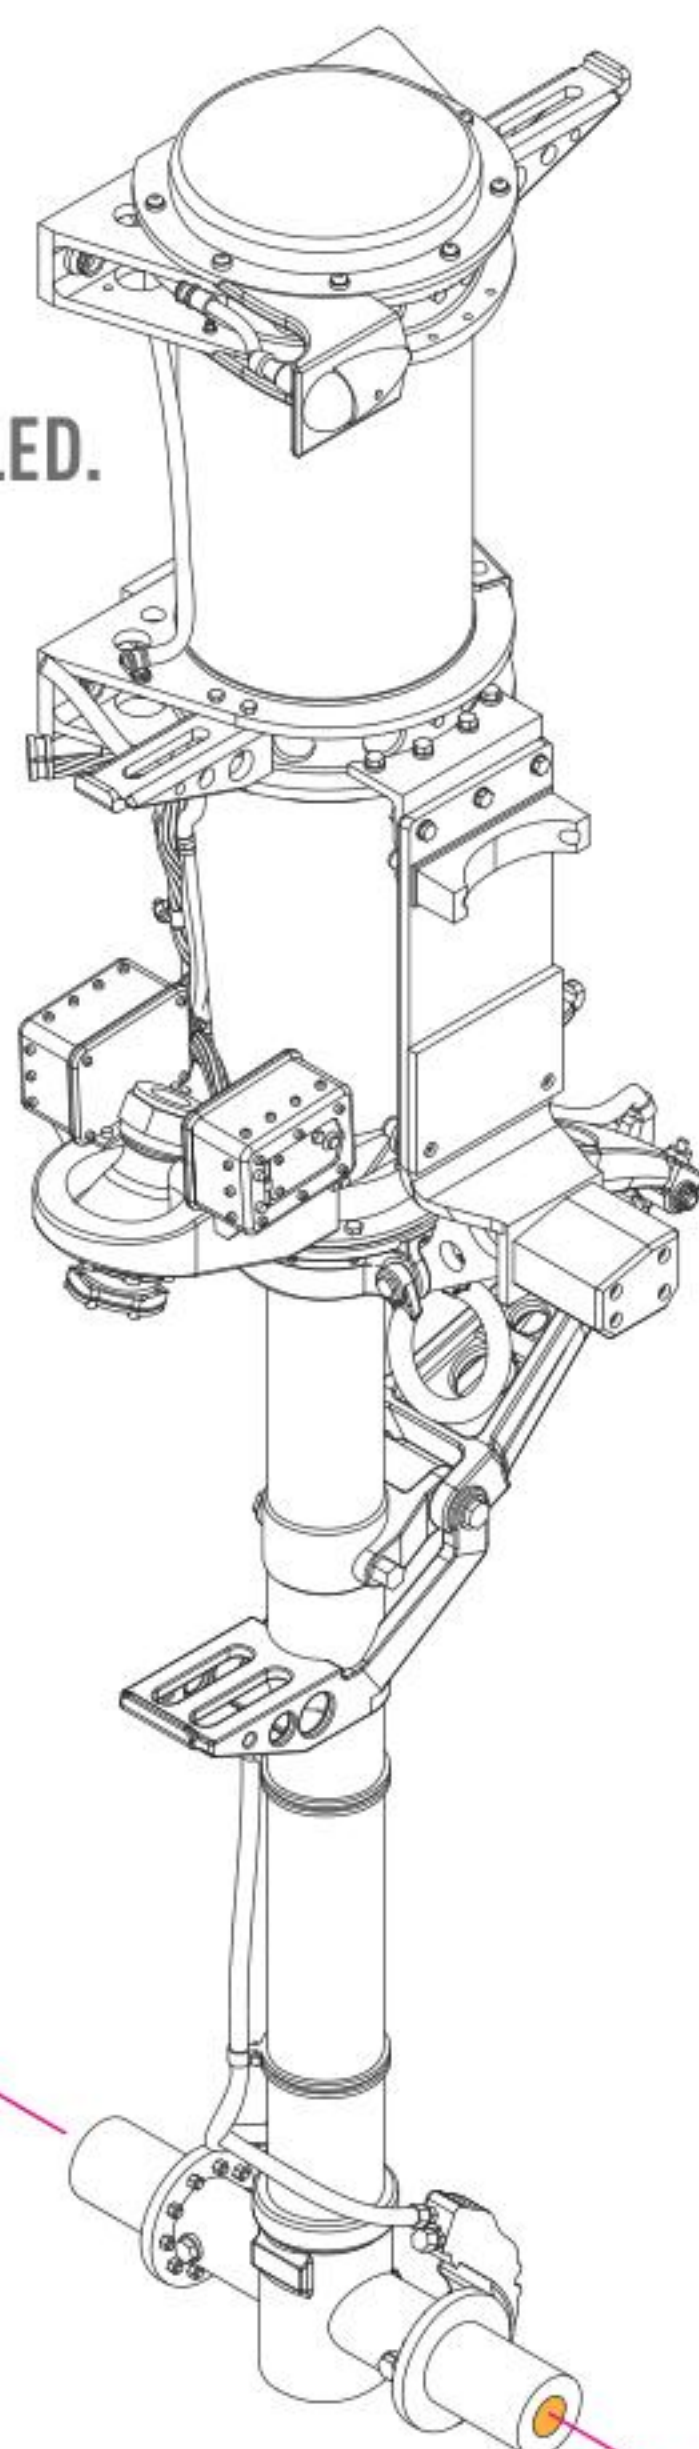


STEP 11

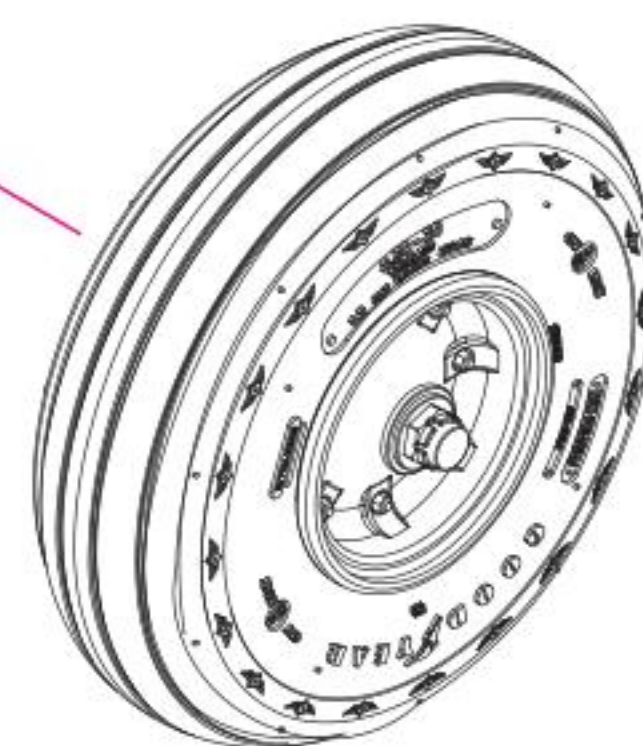

STEP 11

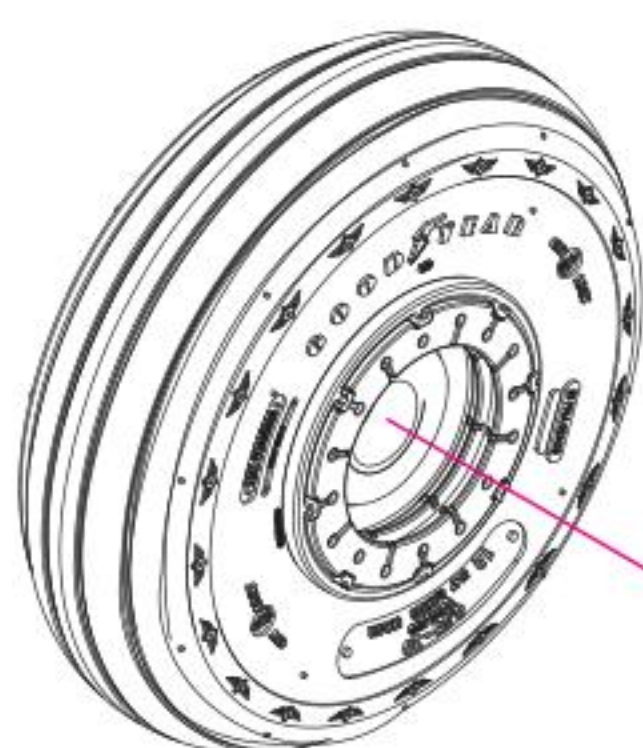

STEP 11

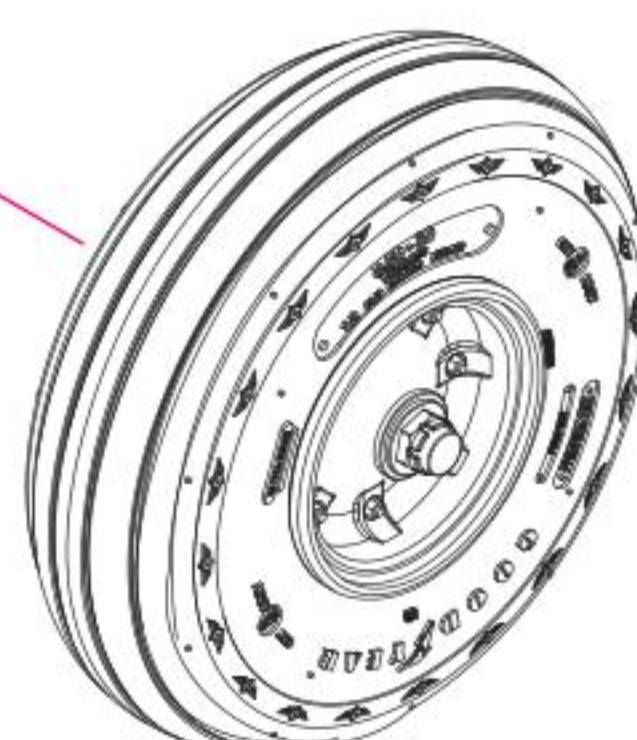

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua